

Service Manual

Digital Camera

LUMIX



Model No. **DMC-FP1P**
DMC-FP1PC
DMC-FP1PR
DMC-FP1PU
DMC-FP1EB
DMC-FP1EE
DMC-FP1EF
DMC-FP1EG
DMC-FP1EP
DMC-FP1GC
DMC-FP1GD
DMC-FP1GF
DMC-FP1GH
DMC-FP1GK
DMC-FP1GN
DMC-FP1GT
DMC-FP2P
DMC-FP2PC
DMC-FP2PR
DMC-FP2PU
DMC-FP2EB
DMC-FP2EE

Panasonic®

© Panasonic Corporation 2010 Unauthorized copying and distribution is a violation of law.

DMC-FP2EF

DMC-FP2EG

DMC-FP2EP

Vol. 1

Colour

[DMC-FP1]
(S).....Silver Type (except PC/EB/EF/GD)
(K).....Black Type
(R).....Red Type (only P/PC/GC)
(P).....Pink Type (except PC/EE/GD)
(A).....Blue Type (except PC/PR/GC/GD)
(D).....Orange Type (only P/EB/EE/EF/EG/EP/GK)
(G).....Green Type (only P/PU/GD/GK/GN)
(H).....Gray Type (only P/PC)

[DMC-FP2]

(S).....Silver Type (only PU/EE/EG/EP)
(K).....Black Type (except P/PC)
(R).....Red Type (except PR)
(A).....Blue Type (only P/PU/EB/EG)
(D).....Orange Type (only P)
(G).....Green Type (only P)
(H).....Gray Type (only P/PC)
(PA).....Light Pink Type (except P/PC/EE/EP)

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

TABLE OF CONTENTS

	PAGE
1 Safety Precautions	4
1.1. General Guidelines	4
1.2. Leakage Current Cold Check	4
1.3. Leakage Current Hot Check (See Figure 1.)	4
1.4. How to Discharge the Capacitor on E.Capacitor P.C.B.	5
2 Warning	6
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices	6
2.2. How to Recycle the Lithium Ion Battery (U.S. Only)	6
2.3. Caution for AC Cord(For EB/GC/GH)	7
2.4. How to Replace the Lithium Battery	8
3 Service Navigation	9
3.1. Introduction	9
3.2. General Description About Lead Free Solder (PbF)	9
3.3. Important Notice 1:(Other than U.S.A. and Canadian Market)	9
3.4. How to Define the Model Suffix (NTSC or PAL model)	10
4 Specifications	14
5 Location of Controls and Components	15
6 Service Mode	17
6.1. Error Code Memory Function	17
6.2. ICS (Indication of additional Camera Settings when picture was taken) function	19
7 Service Fixture & Tools	21
7.1. Service Fixture and Tools	21
7.2. When Replacing the Main P.C.B.	22
7.3. Service Position	22
8 Disassembly and Assembly Instructions	23
8.1. Disassembly Flow Chart	23
8.2. PCB Location	23
8.3. Disassembly Procedure	24
9 Measurements and Adjustments	31
9.1. Introduction	31
9.2. Before Disassembling the unit	31
9.3. Details of Electrical Adjustment	33
9.4. After Adjustment	36
10 Maintenance	37
10.1. Cleaning Lens and LCD Panel	37

1 Safety Precautions

1.1. General Guidelines

1. IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by

⚠ in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent X-RADIATION, shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

2. An Isolation Transformer should always be used during the servicing of AC Adaptor whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect AC Adaptor from being damaged by accidental shorting that may occur during servicing.
3. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
5. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1\text{ M}\Omega$ and $5.2\text{ M}\Omega$. When the exposed metal does not have a return path to the chassis, the reading must be infinity.

1.3. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5\text{ k}\Omega$, 10 W resistor, in parallel with a $0.15\text{ }\mu\text{F}$ capacitor, between each exposed metallic part on the set and a good earth ground, as shown in Figure 1.
3. Use an AC voltmeter, with $1\text{ k}\Omega/\text{V}$ or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 V RMS . A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed $1/2\text{ mA}$. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Hot-Check Circuit

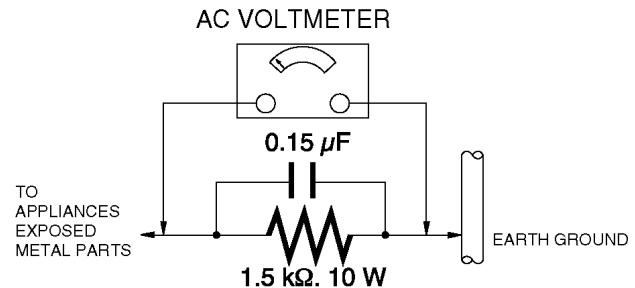


Figure. 1

1.4. How to Discharge the Capacitor on E.Capacitor P.C.B.

CAUTION:

1. Be sure to discharge the capacitor on E.Capacitor P.C.B..
2. Be careful of the high voltage circuit on E.Capacitor P.C.B. when servicing.

[Discharging Procedure]

1. Refer to the disassemble procedure and remove the necessary parts/unit.
2. Install the insulation tube onto the lead part of resistor (ERG5SJ102:1kΩ /5W).
(an equivalent type of resistor may be used.)
3. Place a resistor between both terminals of capacitor on the E.Capacitor P.C.B. for approx. 5 seconds.
4. After discharging, confirm that the capacitor voltage is lower than 10V using a voltmeter.

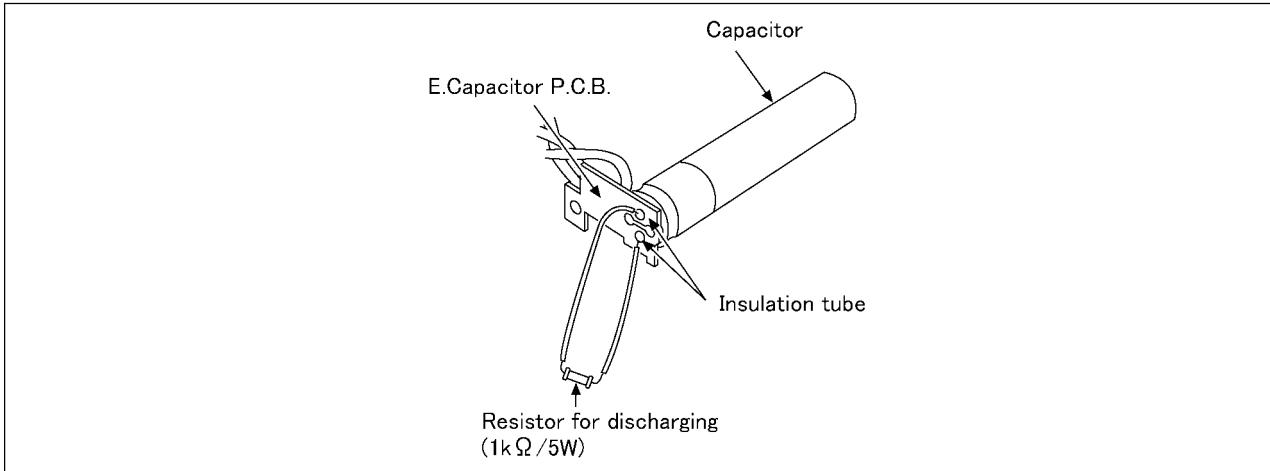


Fig. F1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices.

Examples of typical ES devices are IC (integrated circuits) and some field-effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an antistatic solder removal device. Some solder removal devices not classified as "antistatic (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION :

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. How to Recycle the Lithium Ion Battery (U.S. Only)

ENGLISH



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

FRANÇAIS



L'appareil que vous vous êtes procuré est alimenté par une batterie au lithium-ion recyclable. Pour des renseignements sur le recyclage de la batterie, veuillez composer le 1-800-8-BATTERY.

2.3. Caution for AC Cord (For EB/GC/GH)

2.3.1. Information for Your Safety

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

WARNING

To reduce the risk of fire or shock hazard, do not expose this equipment to rain or moisture.

CAUTION

To reduce the risk of fire or shock hazard and annoying interference, use the recommended accessories only.

FOR YOUR SAFETY

DO NOT REMOVE THE OUTER COVER

To prevent electric shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

2.3.2. Caution for AC Mains Lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three-pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amperes and it is approved by ASTA or BSI to BS1362

Check for the ASTA mark or the BSI mark on the body of the fuse.



If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

If the fitted moulded plug is unsuitable for the socket outlet in your home then the fuse should be removed and the plug cut off and disposed of safely.

There is a danger of severe electrical shock if the cut off plug is inserted into any 13-ampere socket.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

2.3.2.1. Important

The wires in this mains lead are coloured in accordance with the following code:

Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.


The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol.




2.3.2.2. Before Use

Remove the Connector Cover as follows.

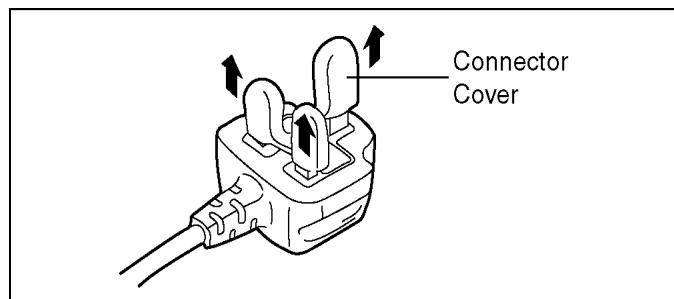


2.3.2.3. How to Replace the Fuse

1. Remove the Fuse Cover with a screwdriver.

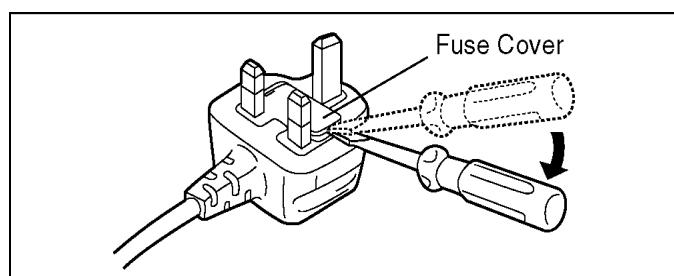

2. Replace the fuse and attach the Fuse cover.

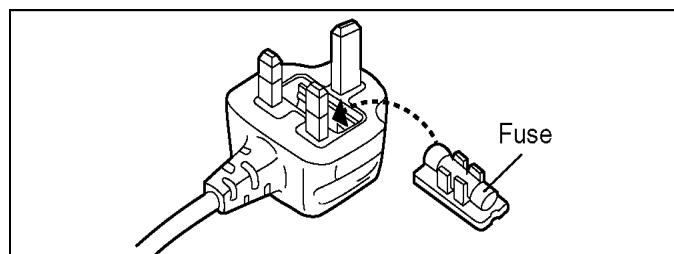


2.4. How to Replace the Lithium Battery

2.4.1. Replacement Procedure

1. Remove the MAIN P.C.B.. (Refer to Disassembly Procedures.)
2. Unsolder the each soldering point of electric lead terminal for Lithium battery (Ref. No. "B9101" at component side of MAIN P.C.B.) and remove the Lithium battery together with electric lead terminal. Then replace it into new one.

NOTE:

The Type No. ML421 includes electric lead terminals.

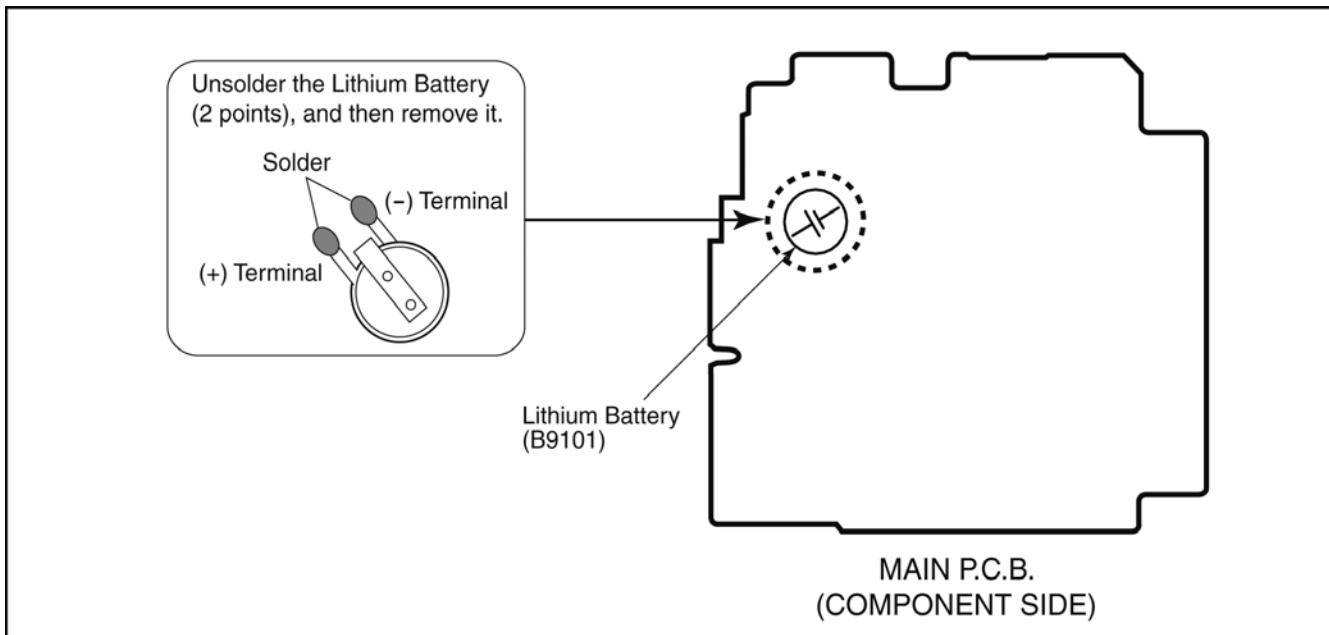

NOTE:

This Lithium battery is a critical component.

(Type No.: ML421 **Manufactured by Energy Company, Panasonic Corporation.**)

It must never be subjected to excessive heat or discharge.

It must therefore only be fitted in requirement designed specifically for its use.

Replacement batteries must be of same type and manufacture.

They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.

Do not attempt to re-charge the old battery or re-use it for any other purpose.

It should be disposed of in waste products destined for burial rather than incineration.

(For English)

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

(For German)

ACHTUNG

Explosionsgefahr bei falschem Anbringen der Batterie. Ersetzen Sie nur mit einem äquivalentem vom Hersteller empfohlenem Typ.

Behandeln Sie gebrauchte Batterien nach den Anweisungen des Herstellers.

(For French)

MISE EN GARDE

Une batterie de remplacement inappropriée peut exploser. Ne remplacez qu'avec une batterie identique ou d'un type recommandé par le fabricant. L'élimination des batteries usées doit être faite conformément aux instructions du manufacturier.

NOTE:

Above caution is applicable for a battery pack which is for DMC-FP1,FP2 series, as well.

3 Service Navigation

3.1. Introduction

This service manual contains technical information, which allow service personnel's to understand and service this model.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, the information will be followed by service manual to be controlled with original service manual.

3.2. General Description About Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.

The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30°C (86°F) more than that of the normal solder.

Distinction of P.C.B. Lead Free Solder being used

The letter of "PbF" is printed either foil side or components side on the P.C.B. using the lead free solder.(See right figure)

PbF

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.
(Definition: The letter of "PbF" is printed on the P.C.B. using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the P.C.B. cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30°C (662±86°F).

Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.

RFKZ03D01KS-----(0.3mm 100g Reel)

RFKZ06D01KS-----(0.6mm 100g Reel)

RFKZ10D01KS-----(1.0mm 100g Reel)

Note

* Ingredient: tin (Sn) 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

3.3. Important Notice 1:(Other than U.S.A. and Canadian Market)

1. The service manual does not contain the following information because of issues servicing to component level without necessary equipment/facilities.

- a. Schematic diagram, Block Diagram and P.C.B. layout of MAIN P.C.B. and SUB OPERATION P.C.B..
- b. Parts list for individual parts for MAIN P.C.B. and SUB OPERATION P.C.B..

When a part replacement is required for repairing MAIN P.C.B. and/or SUB OPERATION P.C.B., replace as an assembled parts. (MAIN P.C.B. / SUB OPERATION P.C.B.)

2. The following category is/are recycle module part. please send it/them to Central Repair Center.

- MAIN P.C.B. (DMC-FP1: VEP56095B, DMC-FP2: VEP56095C)
- SUB OPERATION P.C.B. (VEP59074A)

3.4. How to Define the Model Suffix (NTSC or PAL model)

There are nine kinds of DMC-FP1/FP2, regardless of the colours.

- a) DMC-FP1 (Japan domestic model)
- b) DMC-FP1P/PC, FP2P/PC
- c) DMC-FP1EB/EF/EG/EP, FP2EB/EF/EG/EP
- d) DMC-FP1EE, FP2EE
- e) DMC-FP1GT
- f) DMC-FP1GK
- g) DMC-FP1GD
- h) DMC-FP1GN
- i) DMC-FP1PU/PR/GC/GF/GH, FP2PU/PR

What is the difference is that the "INITIAL SETTINGS" data which is stored in Flash-ROM mounted on MAIN P.C.B..

3.4.1. Defining methods:

To define the model suffix to be serviced, refer to the nameplate which is putted on the bottom side of the Unit.

a) DMC-FP1 (Japan domestic model)

The nameplate for this model show the following Safety registration mark.



b) DMC-FP1P/PC, FP2P/PC

The nameplate for these models show the following Safety registration mark.



c) DMC-FP1EB/EF/EG/EP, FP2EB/EF/EG/EP

The nameplate for these models show the following Safety registration mark.



d) DMC-FP1EE, FP2EE

The nameplate for these models show the following Safety registration mark.



e) DMC-FP1GT

The nameplate for this model show the following Safety registration mark.



f) DMC-FP1GK

The nameplate for this model show the following Safety registration mark.



g) DMC-FP1GD

The nameplate for this model show the following Safety registration mark.



h) DMC-FP1GN

The nameplate for this model show the following Safety registration mark.



i) DMC-FP1PU/PR/GC/GF/GH, FP2PU/PR

The nameplate for these models do not show any above Safety registration mark.

NOTE:

After replacing the MAIN P.C.B., be sure to achieve adjustment.

The adjustment instruction is available at "software download" on the "Support Information from NWBG/VDBG-AVC" web-site in "TSN system", together with Maintenance software.

3.4.2. INITIAL SETTINGS:

After replacing the MAIN P.C.B., be sure to perform the initial settings after achieving the adjustment by ordering the following procedure in accordance with model suffix of the unit.

1. IMPORTANT NOTICE:

Before proceeding Initial settings, be sure to read the following CAUTIONS.

CAUTION 1:(INITIAL SETTINGS)

---AFTER REPLACING THE MAIN P.C.B. ---

*.The model suffix can be chosen JUST ONE TIME.

(Model suffix : "P/EG/EP/PU/GD/GC/GT/GK/EF/EB/EE/GN/PC/PR/GH/EP/GF and NONE(JAPAN)")

*.Once one of the model suffix has been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

[NOTE:Only for "EG, EP, EF, EB, EE and EP" models]

*.When one of the "EG, EP, EF, EB, EE and EP" has been chosen, only "EG, EP, EF, EB, EE and EP" are displayed from second times.

CAUTION 2:(Stored picture image data in the unit)

This unit employs "Built-in Memory" for picture image data recording.(Approx.40MB)

After proceeding "INITIAL SETTINGS", the picture image data stored in the unit is erased.

2. PROCEDURES:

• Precautions: Read the above "CAUTION 1" and "CAUTION 2", carefully.

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

(Since this unit has built-in memory, it can be performed without inserting SD memory card.)

2. Set the recording mode to the [NORMAL PICTURE] mode.

(Press the [MODE] button and select the [NORMAL PICTURE] by pressing the "[UP] and [DOWN] of Cursor buttons", then press the [MENU/SET] button.)

NOTE:

If the unit is other than [NORMAL PICTURE] mode, it does not display the initial settings menu.

• **Step 1. The temporary cancellation of "INITIAL SETTINGS":**

While keep pressing "[UP] of Cursor button" and [iA] button simultaneously, turn the Power on.

• **Step 2. The cancellation of "INITIAL SETTINGS":**

Press the [PLAYBACK] button to "Playback Mode".

Press "[UP] of Cursor button" and [iA] button simultaneously, then turn the Power off.

• **Step 3. Turn the Power on:**

Turn the Power on.

• **Step 4. Display the INITIAL SETTING:**


While keep pressing [MENU/SET] and "[RIGHT] of Cursor buttons" simultaneously, turn the Power off.

The "INITIAL SETTINGS" menu is displayed.

There are two kinds of "INITIAL SETTINGS" menu form as follows:

[CASE 1. After replacing MAIN P.C.B.]

When MAIN P.C.B. has just been replaced, all of the model suffix is displayed as follows. (Five pages in total)

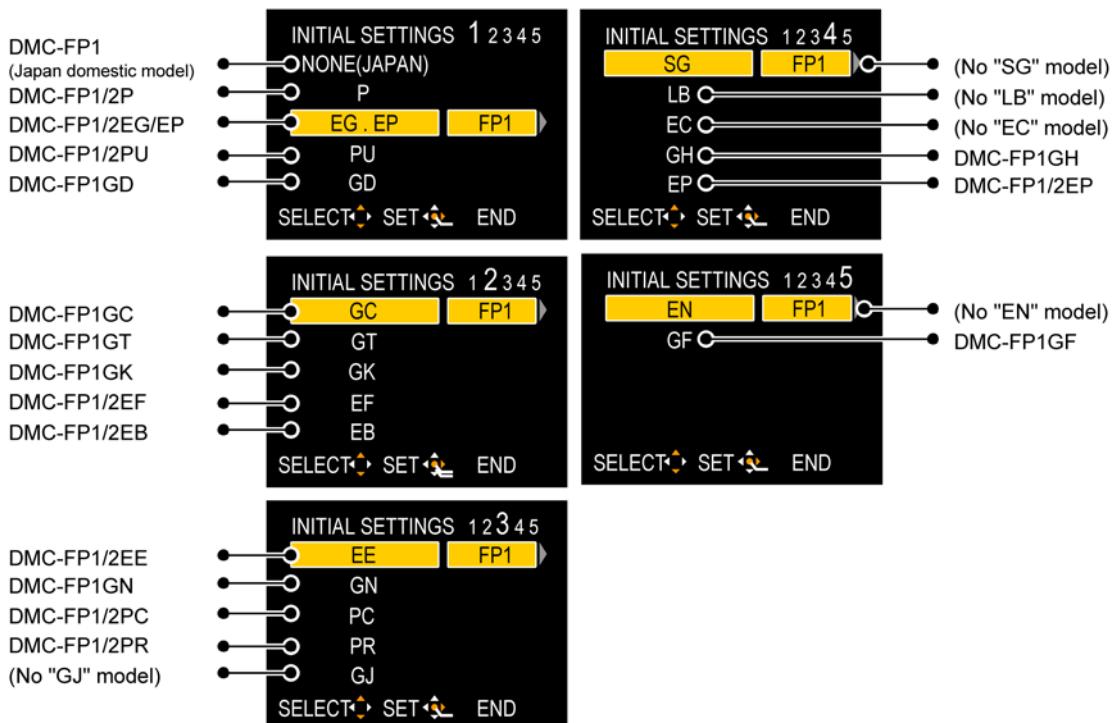

[CASE 2. Other than "After replacing MAIN P.C.B."]



• **Step 5. Choose the model suffix in "INITIAL SETTINGS": (Refer to "CAUTION 1")**

[Caution: After replacing MAIN P.C.B.]

The model suffix can be chosen, **JUST ONE TIME**.


Once one of the model suffixes have been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

Therefore, select the area carefully.

Select the area with pressing "[UP] / [DOWN] of Cursor buttons".

• **Step 6. Set the model suffix in "INITIAL SETTINGS":**

- Press the "[RIGHT] of Cursor buttons".
- The only set area is displayed, and then press the "[RIGHT] of Cursor buttons" after confirmation.
(The unit is powered off automatically.)

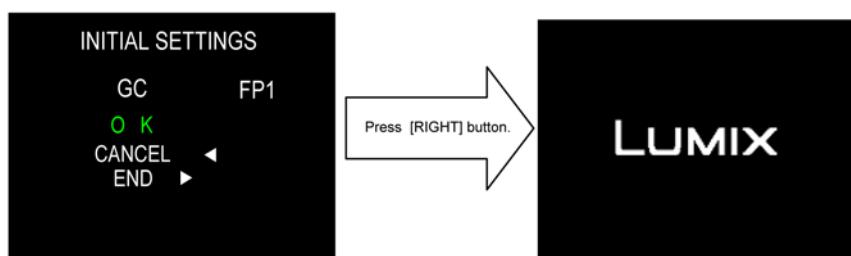

• **Step 7. CONFIRMATION:**

Confirm the display of “PLEASE SET THE CLOCK” in concerned language when the unit is turned on again.

When the unit is connected to PC with USB cable, it is detected as removable media.

1) As for your reference, major default setting condition is as shown in the following table.

• **Default setting (After “INITIAL SETTINGS”)**

	MODEL	VIDEO OUTPUT	LANGUAGE	DATE	REMARKS
a)	DMC-FP1 (Japan domestic model)	NTSC	Japanese	Year/Month/Date	
b)	DMC-FP1/FP2P	NTSC	English	Month/Date/Year	
c)	DMC-FP1/FP2EG	PAL	English	Date/Month/Year	
d)	DMC-FP1/FP2EP	PAL	English	Date/Month/Year	
e)	DMC-FP1/FP2PU	NTSC	English	Month/Date/Year	
f)	DMC-FP1GD	NTSC	Korean	Year/Month/Date	
g)	DMC-FP1GC	PAL	English	Date/Month/Year	
h)	DMC-FP1GT	NTSC	Chinese (traditional)	Year/Month/Date	
i)	DMC-FP1GK	PAL	Chinese (simplified)	Year/Month/Date	
j)	DMC-FP1/FP2EF	PAL	French	Date/Month/Year	
k)	DMC-FP1/FP2EB	PAL	English	Date/Month/Year	
l)	DMC-FP1/FP2EE	PAL	Russian	Date/Month/Year	
m)	DMC-FP1GN	PAL	English	Date/Month/Year	
n)	DMC-FP1/FP2PC	NTSC	English	Month/Date/Year	
o)	DMC-FP1/FP2PR	PAL	English	Date/Month/Year	
p)	DMC-FP1GH	PAL	English	Date/Month/Year	
q)	DMC-FP1GF	PAL	English	Date/Month/Year	

4 Specifications

Digital Camera: Information for your safety

Power Source	DC 5.1 V
Power Consumption	When recording: 1.0 W When playing back: 0.6 W
Camera effective pixels	14,100,000 pixels (DMC-FP2) / 12,100,000 pixels (DMC-FP1)
Image sensor	1/2.3" CCD, total pixel number 14,500,000 pixels (DMC-FP2) / 12,700,000 pixels (DMC-FP1) Primary color filter
Lens	Optical 4 x zoom f=6.3 mm to 25.2 mm (35 mm film camera equivalent: 35 mm to 140 mm) / F3.5 to F5.9
Digital zoom	Max. 4 x
Extended optical zoom	Max. 8.4 x (DMC-FP2) / Max. 7.8 x (DMC-FP1)
Focus range	
Normal	50 cm (1.64 feet) to ∞
Macro / Intelligent Auto	10 cm (0.33 feet) (Wide) / 50 cm (1.64 feet) (Tele) to ∞
Scene mode	There may be difference in above settings.
Shutter system	Electronic shutter + Mechanical shutter
Burst recording	
Burst speed	1.5 pictures/second (DMC-FP2) 1.8 pictures/second (DMC-FP1)
Number of recordable pictures	Until card/built-in memory is full
Hi-speed burst	
Burst speed	Approx. 4.6 pictures/second (DMC-FP2) Approx. 5.5 pictures/second (DMC-FP1)
Number of recordable pictures	Approx. 15 pictures (When using the built-in memory, immediately after formatting) Max. 100 pictures (When using a card, it may differ depending on the type of card and the recording conditions)
Shutter speed	8 to 1/1600 th [STARRY SKY] mode: 15 seconds, 30 seconds, 60 seconds
Exposure (AE)	AUTO (Program AE) Exposure compensation (1/3 EV Step, -2 EV to +2 EV)
Metering mode	Multiple
LCD monitor	2.7" TFT LCD (Approx. 230,400 dots) (field of view ratio about 100 %)

Flash	Flash range: (ISO 1 ISO) Approx. 30 cm (0.99 feet) to 4.9 m (16.08 feet) (Wide)
Microphone	Monaural
Speaker	Monaural
Recording media	Built-in Memory (Approx. 40 MB) / SD Memory Card / SDHC Memory Card / SDXC Memory Card
Recording file format	
Still picture	JPEG (based on Design rule for Camera File system, based on Exif 2.21 standard) / DPOF corresponding
Motion pictures	QuickTime Motion JPEG (motion pictures with audio)
Interface	Digital: USB 2.0 (Full Speed) Analog video / audio: NTSC Composit, Audio line output (Monaural)
Terminal	AV OUT / DIGITAL: Dedicated jack (8 pin) DC IN: Dedicated jack (2 pin)
Dimensions	Approx. 98.6 mm (W) x 58.9 mm (H) x 18.6 mm (D) [3.88" (W) x 2.32" (H) x 0.73" (D)] (excluding the projection part)
Mass	With card and battery: Approx. 141 g (0.31 lb) Excluding card and battery: Approx. 121 g (0.27 lb)
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity	10 % to 80 %

Battery charger	Information for your safety
Input	110 V to 240 V 50/60Hz, 0.2 A
Output	4.2 V == 0.65 A (Battery charging)


Equipment mobility: Movable	
Battery Pack (lithium-ion)	Information for your safety
Voltage/capacity	3.7 V / 695 mAh

NOTE:(Only for "EB/EF/EG/EP/PR" models)

- Data from the PC can not be written to the camera using the USB connection cable.
- Motion pictures can be recorded continuously for up to 15 minutes.
The maximum continuous recording time (up to 15 minutes) is displayed on the screen.



5 Location of Controls and Components

Names of parts

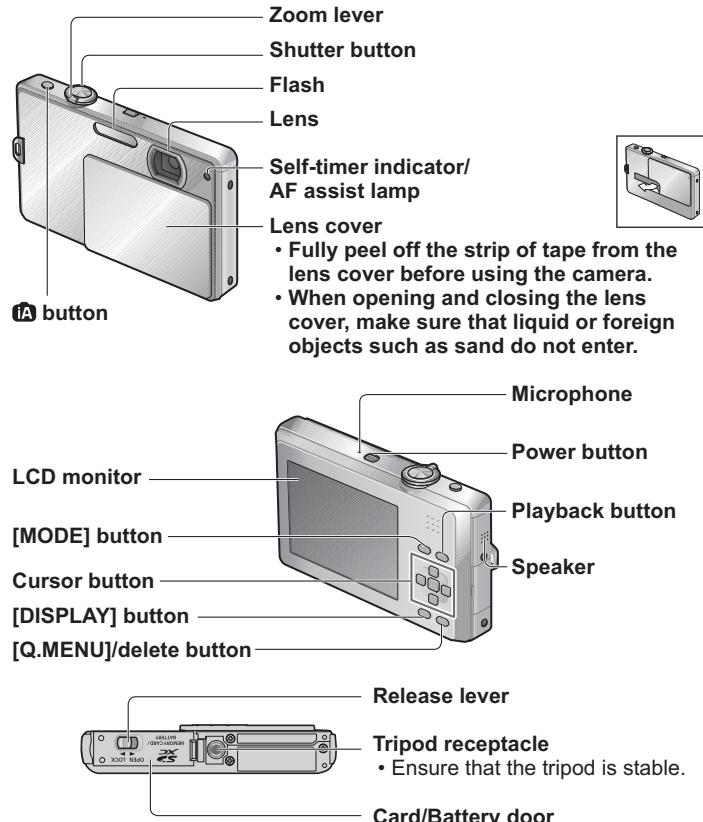

- We recommend you use a battery with sufficient battery power or the AC adaptor when recording motion pictures.

Cursor button

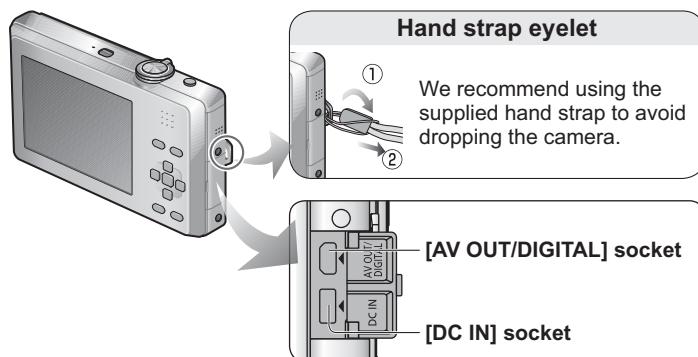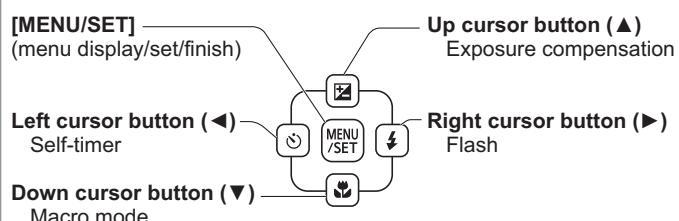

- Always use a genuine Panasonic AC adaptor (DMW-AC5PP: optional).
- If while recording motion pictures using the AC adaptor the power supply is cut off due to a power cut or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.

Selecting the [REC] mode

1 Open the lens cover

The power is turned on.

2 Press the [MODE] button (A)

3 Press ▲ or ▼ to select the recording mode

4 Press [MENU/SET] (B)



 [NORMAL PICTURE] Mode
Take pictures with your own settings.
 [MY SCENE MODE]
MS Take pictures in commonly used scene modes.
 [SCENE MODE]
SCN Take pictures according to scene.
 [MOTION PICTURE] Mode
Take motion pictures.

About the Battery

• The camera has a function for distinguishing batteries which can be used safely. The dedicated battery supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. (Batteries which do not support this function cannot be used). Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.

6 Service Mode

6.1. Error Code Memory Function

1. General description

This unit is equipped with history of error code memory function, and can be memorized 16 error codes in sequence from the latest. When the error is occurred more than 16, the oldest error is overwritten in sequence.

The error code is not memorized when the power supply is shut down forcibly. (i.e., when the unit is powered on by the battery, the battery is pulled out) The error code is memorized to FLASH-ROM when the unit has just before powered off.

2. How to display

The error code can be displayed by ordering the following procedure:

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

NOTE:

*Since this unit has built-in memory, it can be performed without inserting SD memory card.

*It is not a matter or the setting condition of Recording mode (such as "normal picture/scene/motion picture" mode) to display the error code.

• Step 1. The temporary cancellation of "INITIAL SETTINGS":


While keep pressing "[UP] of Cursor button" and [iA] button simultaneously, turn the Power on.

• Step 2. Execute the error code display mode:

Press the "[LEFT] of Cursor button", [MENU/SET] button and [iA] button simultaneously.

The display is changed as shown below when the above buttons are pressed simultaneously.

Normal display → Error code display → Operation history display → Normal display →

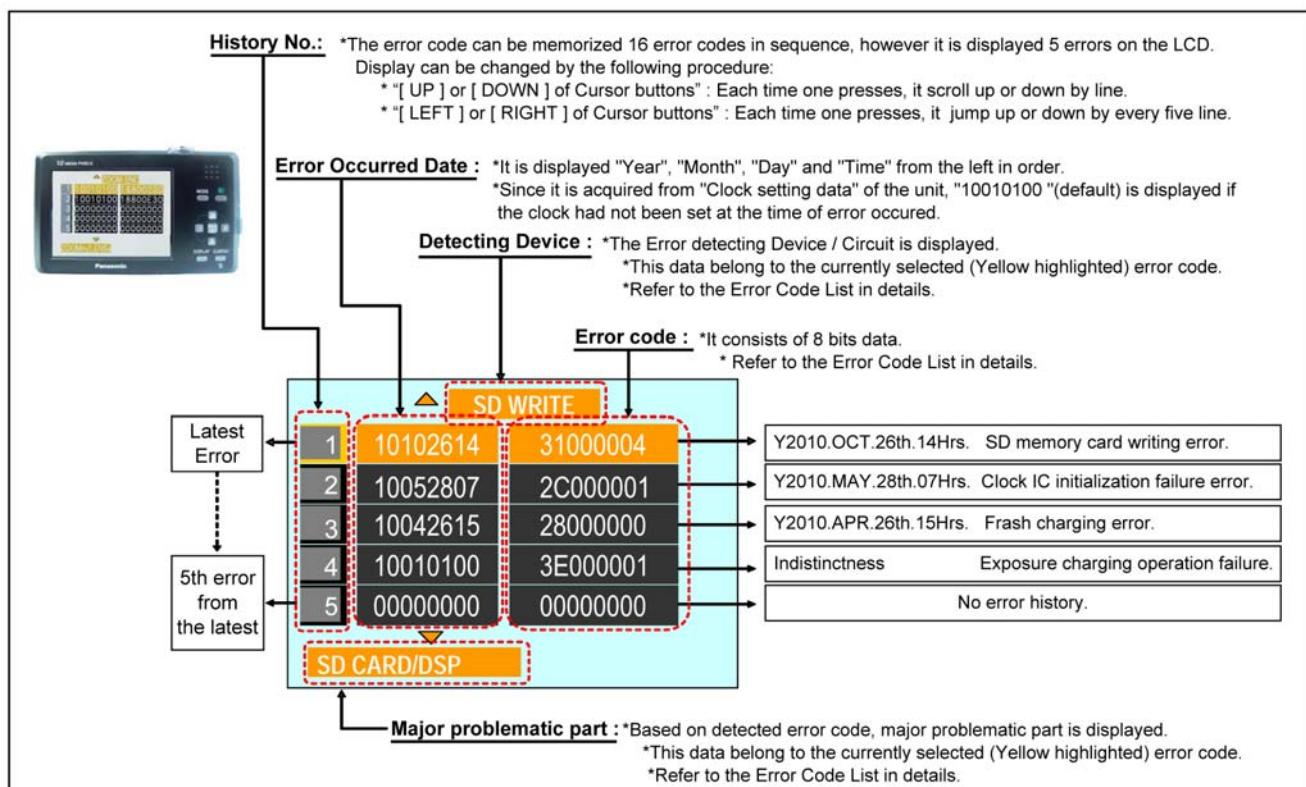

Example of Error Code Display

• 3. Error Code List

The error code consists of 8 bits data and it shows the following information.

Attribute	Main item	Sub item	Error code		Contents (Upper line) Problematic Part & Check point (Lower line)	Error Indication				
			High 4 bits	Low 4 bits		Detector device	Problematic Part/Circuit			
LENS	Lens drive	OIS	18*0	1000	PSD (X) error. Hall element (X axis) position detect error in OIS unit. OIS Unit	OIS X	LENSu NG			
				2000	PSD (Y) error. Hall element (Y axis) position detect error in OIS unit. OIS Unit	OIS Y				
				3000	GYRO (X) error. Gyro (IC9701: X axis) detect error on Sub Operation P.C.B. IC9701 (Gyro element) or IC6001 (VENUS 4)	GYRO X	GYRO NG			
				4000	GYRO (Y) error. Gyro (IC9701: Y axis) detect error on Sub Operation P.C.B. IC9701 (Gyro element) or IC6001 (VENUS 4)	GYRO Y				
				5000	MREF error (Reference voltage error) IC9101 (SYSTEM) or IC6001 (VENUS 4)	OIS REF	LENSSd/DSP NG			
		Zoom		6000	Drive voltage (X) error. LENS Unit, LENS flex breaks, IC6001 (VENUS 4) AD value error, etc.	OISX REF	LENSu/LENS FPC			
				7000	Drive voltage (Y) error. LENS Unit, LENS flex breaks, IC6001 (VENUS 4) AD value error, etc.	OISY REF				
				0710	Collapsible barrel Low detect error (Collapsible barrel encoder always detects Low.) Mechanical lock, FP9002-(9) signal line or IC6001 (VENUS 4)	ZOOM L	ZOOMm/LENSu			
				0720	Collapsible barrel High detect error (Collapsible barrel encoder always detects High.) Mechanical lock, FP9002-(9) signal line or IC6001 (VENUS 4)	ZOOM H				
				0730	Zoom motor sensor error. Mechanical lock, FP9002-(21) signal line or IC6001 (VENUS 4)	ZOOM ENC				
	Focus			0740	Zoom motor sensor error. (During monitor mode.) Mechanical lock, FP9002-(21) signal line or IC6001 (VENUS 4)					
				0750	Zoom motor sensor error. (During monitor mode with slow speed.) Mechanical lock, FP9002-(21) signal line or IC6001 (VENUS 4)					
	Lens			0760	Detection of zoom misregistration by impact such as falls. Lens Unit	(No indication)	(No indication)			
				0701	HP High detect error (Focus encoder always detects High, and not becomes Low) Mechanical lock, FP9002-(9) signal line or IC6001 (VENUS 4)	FOCUS L	LENS FPC/DSP			
				0702	HP Low detect error (Focus encoder always detects Low, and not becomes High) Mechanical lock, FP9002-(9) signal line or IC6001 (VENUS 4)	FOCUS H				
				18*1	Power ON time out error. Lens drive system	LENS DRV	LENSu			
Adj. History	OIS	OIS		18*2	Power OFF time out error. Lens drive system					
				2000	OIS adj. Yaw direction amplitude error (small)	OIS ADJ	OIS ADJ			
				3000	OIS adj. Pitch direction amplitude error (small)					
				4000	OIS adj. Yaw direction amplitude error (large)					
				5000	OIS adj. Pitch direction amplitude error (large)					
				6000	OIS adj. MREF error					
				7000	OIS adj. time out error					
				8000	OIS adj. Yaw direction off set error					
				9000	OIS adj. Pitch direction off set error					
				A000	OIS adj. Yaw direction gain error					
				B000	OIS adj. Pitch direction gain error					
				C000	OIS adj. Yaw direction position sensor error					
				D000	OIS adj. Pitch direction position sensor error					
				E000	OIS adj. other error					
HARD	VENUS A/D	Flash	28*0	0000	Flash charging error. IC6001-(AC17) signal line or Flash charging circuit	STRB CHG	STRB PCB/FPC			
FLASH ROM (EEPROM Area)	FLASH ROM (EEPROM Area)	2B*0	0001	EEPROM read error IC6002 (FLASH ROM)	FROM RE	FROM				
			0002	EEPROM write error IC6002 (FLASH ROM)	FROM WR	FROM				
			0005	Firmware version up error Replace the firmware file in the SD memory card.	(No indication)	(No indication)				
			0008	SDRAM error						
			0009	SDRAM Mounting defective						
	SYSTEM	RTC	2C*0	0001	SYSTEM IC initialize failure error Communication between IC6001 (VENUS 4) and IC9101 (SYSTEM)	SYS INIT	MAIN PCB			
SOFT	CPU	Reset	30*0	0001	NMI reset Non Mask-able Interrupt (30000001-30000007 are caused by factors)	NMI RST	MAIN PCB			
	Card	Card	31*0	0001	Card logic error SD memory card data line or IC6001 (VENUS 4)	SD CARD	SD CARD/DSP			
				0002	Card physical error SD memory card data line or IC6001 (VENUS 4)					
				0004	Write error SD memory card data line or IC6001 (VENUS 4)					
				0005	Format error	INMEMORY	FROM			
	CPU, ASIC hard	Stop	38*0	0001	Camera task finish process time out. Communication between Lens system and IC6001 (VENUS 4)	LENS COM	LENSu/DSP			
				0002	Camera task invalid code error. IC6001 (VENUS 4)	DSP	DSP			
				0100	File time out error in recording motion image IC6001 (VENUS 4)					
				0200	File data cue send error in recording motion image IC6001 (VENUS 4)					
				0300	Single or burst recording brake time out.					
	Memory area			0008	USB work area partitioning failure USB dynamic memory securing failure when connecting	(No indication)	(No indication)			
				0000	FLASHROM processing early period of camera during movement.					
	Operation	Power on	3B*0	0000	Imperfect zoom lens processing	INIT	(No indication)			
	Zoom	Zoom	3C*0	0000	Zoom lens	ZOOM	ZOOMm/LENSu			
				0000	Software error (0-7bit : command, 8-15bit : status)	DSP	DSP			
			35*0	0000	Though record preprocessing is necessary, it is not called.					
				0000	Though record preprocessing is necessary, it is not completed.					

Important notice about "Error Code List"

1) About "*" indication:

The third digit from the left is different as follows.

- In case of 0 (example: 18001000)

When the third digit from the left shows "0", this error occurred under the condition of INITIAL SETTINGS has been completed.

It means that this error is occurred basically at user side.

- In case of 8 (example: 18801000)

When the third digit from the left shows "8", this error occurred under the condition of INITIAL SETTINGS has been released.

(Example; Factory assembling-line before unit shipment, Service mode etc.)

It means that this error is occurred at service side.

2) About "?" indication: ("18*0 0?01" to "18*0 0?50"):

The third digit from the right shows one of the hexadecimal ("0" to "F") character.

• 4. How to exit from Error Code display mode:

Simply, turn the power off. (Since Error code display mode is executed under the condition of temporary cancellation of "INITIAL SETTINGS", it wake up with normal condition when turn off the power.)

NOTE:

The error code can not be initialized.

6.2. ICS (Indication of additional Camera Settings when picture was taken) function

1. General description

This unit is equipped with ICS (ICS: Indication of additional Camera Settings when picture was taken) function by playing back the concerned picture on the LCD display.

(This function is achieved by utilizing "maker note" data stored in Exif data area of recorded picture file.)

To proceed failure diagnosis, use this ICS function together with "displaying the recorded picture with picture information" function.

NOTE:

- The ICS function operates with a picture which is only taken with the same model. (It may not be displayed when the picture was taken with other model.)
- Since Exif data is not available after the picture is edited by PC, the ICS function may not be activated.

2. How to display

The ICS data is displayed by ordering the following procedure:

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

NOTE:

It is not a matter or the setting condition of Recording mode (such as "normal picture/scene/motion picture" mode) to display the ICS data.

• Step 1. The temporary cancellation of "INITIAL SETTINGS":

While keep pressing "[UP] of Cursor button" and [iA] button simultaneously, turn the Power on.

• Step 2. Execute the ICS display mode:

Press the [PLAYBACK] button to "Playback Mode".


Select the concerned picture by pressing the "[LEFT] and [RIGHT] of Cursor button".

Press the "[LEFT] of Cursor button", [MENU/SET] button and [iA] button simultaneously.

Press the [DISPLAY] button, 3 times.

The display condition is changed as shown below when the [DISPLAY] button is pressed.

Code display → Code + Picture display (1) → Code + Picture display (2) → ICS display → Code display

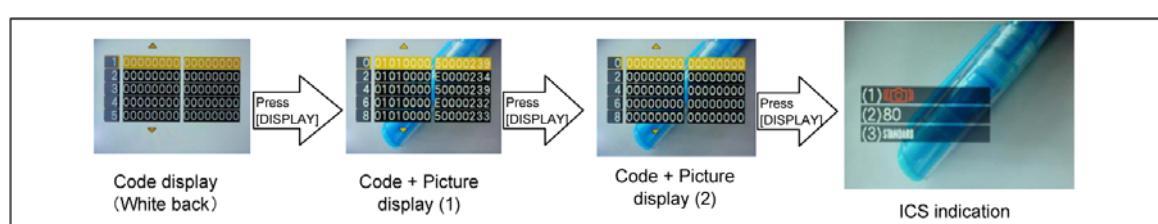

3. How to read

(1). Jitter alert was displayed or not:

This part shows that the "Jitter alert" mark was displayed or not when the picture has just before been taken.

- +With "Jitter alert" mark : The "Jitter alert" mark was displayed.
- +Without "Jitter alert" mark: The "Jitter alert" mark was not displayed.

[About "Jitter alert" mark]

Due to lacking the enough light amount etc, shooting condition prone to make a "hand jitter", the "Jitter alert" mark is displayed.

[Reference Guide]

(Applicable settings : Normal picture mode, ISO100, WIDE edge, Flash OFF)

- +The "Jitter alert" mark is displayed when the shutter speed is 1/15th and below.

(2). ISO Sensitivity Setting condition:

This part shows that the "ISO Sensitivity" setting condition when the picture had been taken.

(Note: The [i ISO] is displayed when the "Intelligent ISO" was selected.)

For instance, when the recorded picture information shows [ISO80], it can be confirmed the ISO setting condition ; [AUTO], [INTELLIGENT ISO] or [ISO 80](Fixed: set by user).

[Point for Confirmation]

- *The symptom is "Picture with "hand jitter". Subject is not clearly stopped." in darker scene, does the picture was taken with lower ISO setting mode?
- *The symptom is "Noisy picture. Rough picture image" in brighter scene, does the picture was taken with higher ISO setting mode?

(3). Color mode Setting condition:

This part shows that the "Color mode" setting condition when the picture had been taken.

[Point for Confirmation]

- *The symptom is "Color is strange. The picture is bluish (Yellowish)", does the picture was taken with [SEPIA] / [COOL] / [WARM] settings?

NOTE: As for the symptom related with the color, confirm the picture information which is displayed in normal playback screen as well.

(In normal playback screen, the setting condition of "White balance" and "WB Adjustment" can be confirmed.)

— [Reference Guide : Settings "When taking picture"] —

<ISO SENSITIVITY>

- *This allows the sensitivity to light (ISO sensitivity) to be set. Setting to a higher figure enables pictures to be taken even in dark places without the resulting pictures coming out dark.
- *In this unit, it can be set one of the [i ISO], [80], [100], [200], [400], [800] and [1600] in "Normal shooting" mode.
- *When setting to [i ISO], the ISO sensitivity is automatically adjusted to a maximum of [ISO1600] according to the brightness.
- *To avoid picture noise, we recommend that you either reduce the ISO sensitivity level or set [COLOR MODE] to [NATURAL], and then take pictures.

ISO sensitivity	80	1600
Recording location (recommended)	When it is light (outdoors)	When it is dark
Shutter speed	Slow	Fast
Noise	Less	Increased

<COLOR MODE>

- *Using these modes, the pictures can be made sharper or softer, the colors of the pictures can be turned into sepia colors or other color effects can be achieved.
- *In this unit, it can be set one of the following effects in "Normal shooting" mode.

[STANDARD] : This is the standard setting.	[B/W] : The picture becomes black and white.
[NATURAL] : The picture becomes softer.	[SEPIA] : The picture becomes sepia.
[VIVID] : The picture becomes sharper.	[COOL] : The picture becomes bluish.
	[WARM] : The picture becomes reddish.

NOTE: You cannot set [NATURAL], [VIVID], [COOL] or [WARM] in Intelligent auto mode.

*When you take pictures in dark places, noise may become visible. To avoid noise, we recommend setting to [NATURAL].

Normal playback screen
(Recorded picture with information)

*In playback mode, the picture information is displayed when pressing the [DISPLAY] button.
(It can be confirmed at user as well.)
*Use this indication together with ICS function

4. How to exit:





Simply, turn the power off. (Since ICS function is executed under the condition of temporary cancellation of "INITIAL SETTINGS", it wake up with normal condition when turn off the power.)

20

7 Service Fixture & Tools

7.1. Service Fixture and Tools

The following Service Fixture and tools are used for checking and servicing this unit.

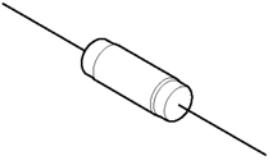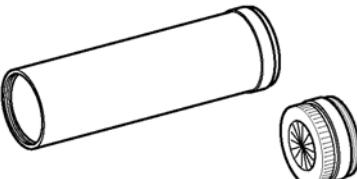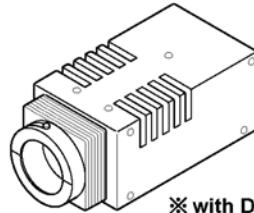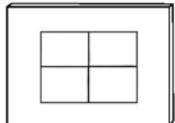Resistor for Discharging ERG5SJ102	Infinity Lens (with Focus Chart) VFK1164TCM02	LIGHT BOX VFK1164TDVLB
 An equivalent type of Resistor may be used.	 * VFK1164TCM03 can be used. * RFKZ0422 can be used.	 ※ with DC Cable * RFKZ0523 can be used.
TR Chart RFKZ0443	Lens Cleaning Kit (BK) VFK1900BK	
	 * Only supplied as 10 set/box.	

7.2. When Replacing the Main P.C.B.

After replacing the MAIN P.C.B., be sure to achieve adjustment.


The adjustment instruction is available at "software download" on the "Support Information from NWBG/VDBG-AVC" web-site in "TSN system", together with Maintenance software.

7.3. Service Position

This Service Position is used for checking and replacing parts. Use the following Extension cables for servicing.

Table S1 Extension Cable List

No.	Parts No.	Connection	Form
1	RFKZ0416	FP9003 (MAIN) - LCD UNIT	41PIN 0.3 FFC
2	RFKZ0418	PP9001 (MAIN) - PS8001 (FLASH TOP)	30PIN B to B
3	RFKZ0548	PS9001 (MAIN) - PP9501 (SUB OPERATION)	20PIN B to B

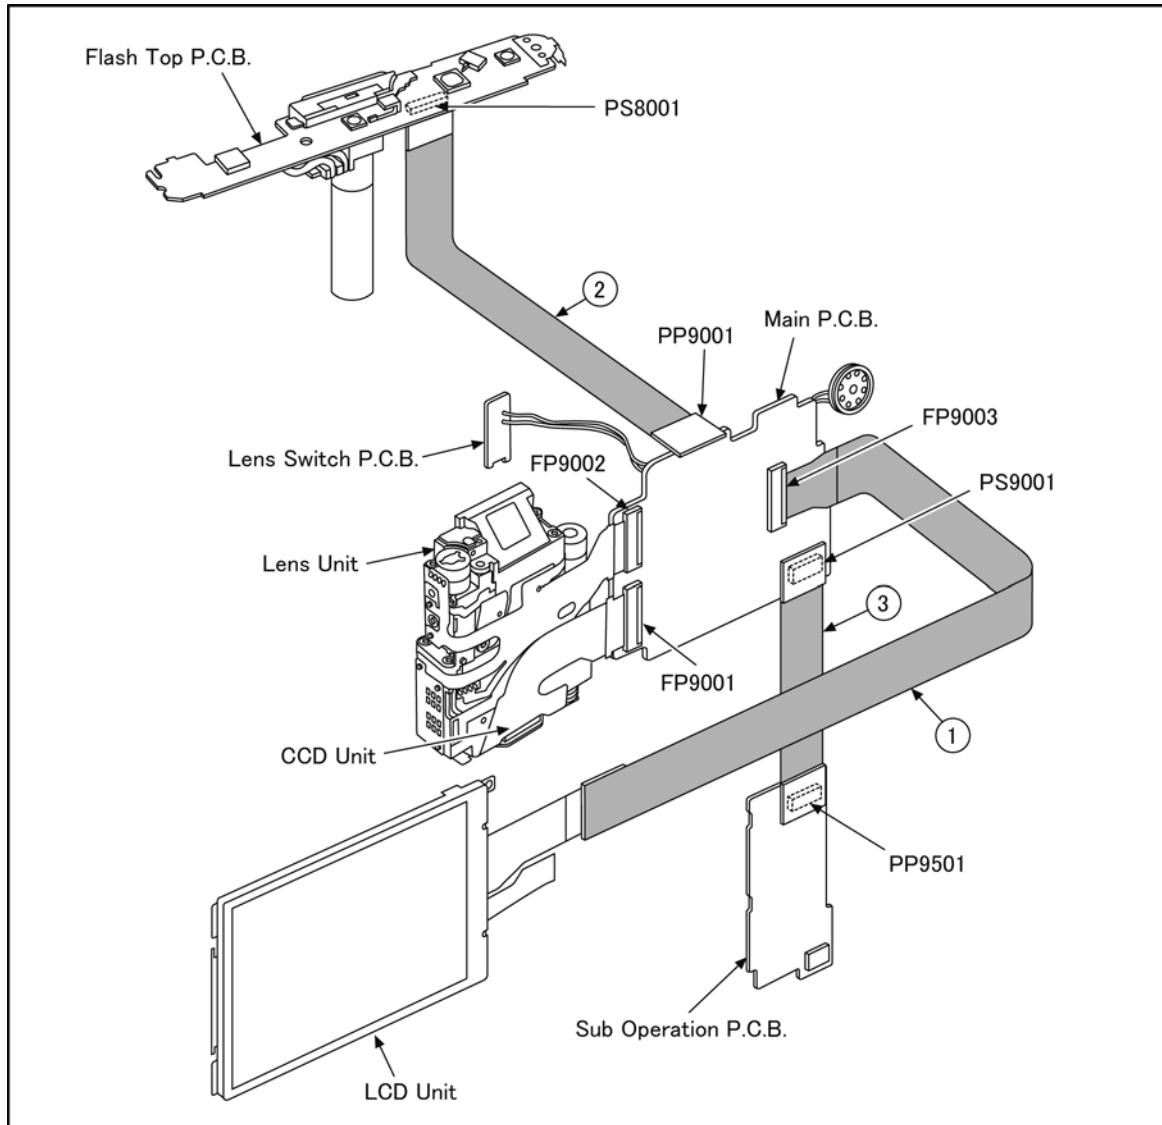

CAUTION-1. (When servicing E.Capacitor P.C.B.)

1. Be sure to discharge the capacitor on E.Capacitor P.C.B..

Refer to "HOW TO DISCHARGE THE CAPACITOR ON E.Capacitor P.C.B.".

The capacitor voltage is not lowered soon even if the AC Cord is unplugged or the battery is removed.


2. Be careful of the high voltage circuit on E.Capacitor P.C.B..
3. DO NOT allow other parts to touch the high voltage circuit on E.Capacitor P.C.B..

8 Disassembly and Assembly Instructions


8.1. Disassembly Flow Chart

This is a disassembling chart.

When assembling, perform this chart conversely.

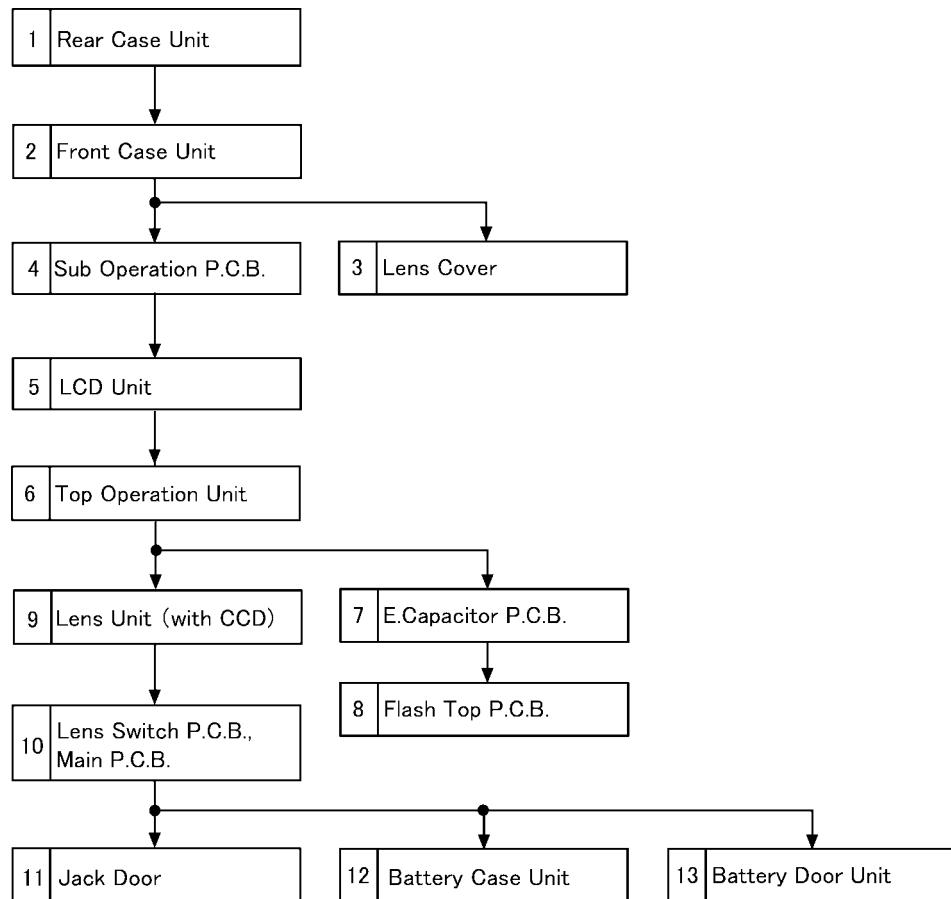

8.2. PCB Location

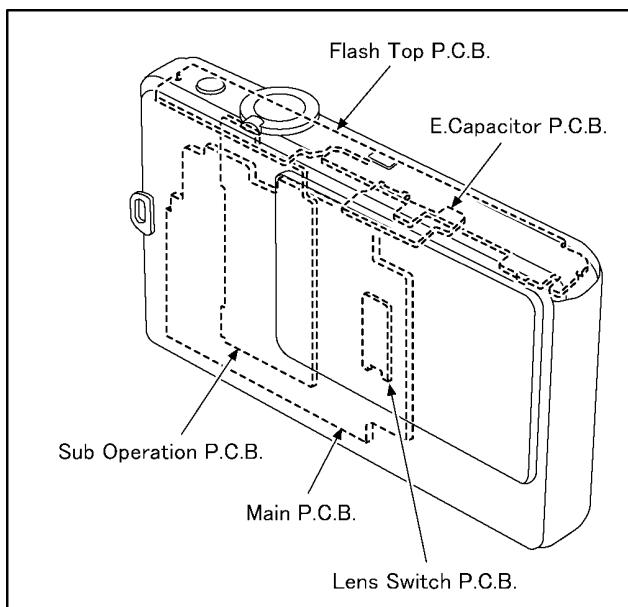

8.3. Disassembly Procedure


No.	Item	Fig	Removal
1	Rear Case Unit	(Fig. D1)	Card
			Battery
			1 Screw (A)
			4 Screws (B)
			2 Screws (C)
			Side Ornament L1
		(Fig. D2)	Side Ornament L2
			Side Ornament (R)
			1 Screw (D)
			2 Locking tabs
			Rear Case Unit
2	Front Case Unit	(Fig. D3)	1 Screw (E)
			Strap Holder
			Front Case Unit
3	Lens Cover	(Fig. D4)	3 Screws (F)
			2 Hanging parts
		(Fig. D5)	1 Screw (G)
			Lens Cover Spring
			Lens Cover Angle
			Lens Cover Slide Angle
			Lens Cover
			PP9501(Connector)
			Sub Operation P.C.B.
			FP9003(Flex)
5	LCD Unit	(Fig. D7)	2 Locking tabs
			PCB Spacer
			1 Screw (H)
		(Fig. D8)	FP9003(Flex)
		LCD Unit	
6	Top Operation Unit	(Fig. D9)	2 Screws (I)
			Frame Plate
			PS8001(Connector)
			Top Operation Unit
7	E.Capacitor P.C.B.	(Fig. D10)	1 Screw (J)
			1 Hanging part
			1 Locking tab
			Capacitor Holder
			E.Capacitor P.C.B.
		(Fig. D11)	Discharge the Capacitor
8	Flash Top P.C.B.	(Fig. D12)	1 Screw (K)
			1 Locking tab
		(Fig. D13)	Mic Damper
			POWER Knob
			IA Knob
			Flash Top P.C.B.
9	Lens Unit (with CCD)	(Fig. D14)	FP9001(Flex)
			FP9002(Flex)
			Lens Unit
10	Lens Switch P.C.B. Main P.C.B.	(Fig. D15)	1 Locking tab
			Speaker
			1 Screw (L)
			Lens Switch P.C.B.
			Main P.C.B.
11	Jack Door	(Fig. D16)	Jack Door Shaft
			Jack Door
12	Battery Case Unit	(Fig. D17)	Battery Out Spring
			2 Locking tabs
		(Fig. D18)	Battery Case Unit
13	Battery Door Unit	(Fig. D19)	Battery Door Shaft
			Battery Door Spring
			Battery Door Unit

8.3.1. Removal of the Rear Case Unit

NOTE:


When servicing and reassembling, remove the card and battery from the unit.

- Card
- Screw(B) × 4
- Battery
- Screw(C) × 2
- Screw(A) × 1
- Side Ornament L1
- Side Ornament L2

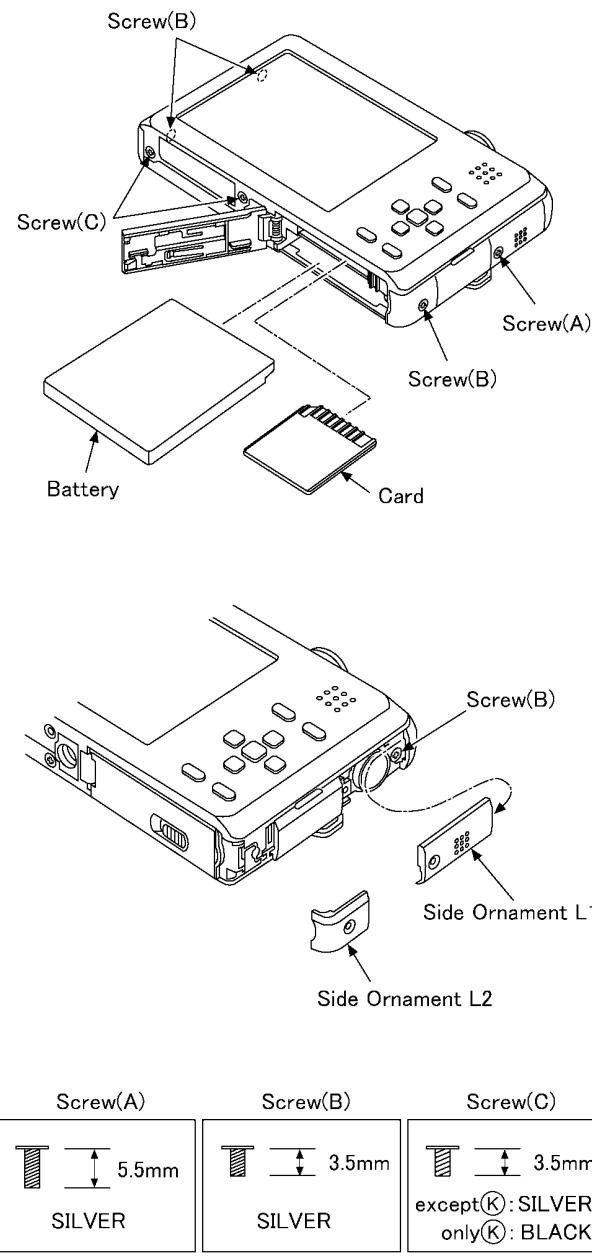


(Fig. D1)

8.3.2. Removal of the Front Case Unit

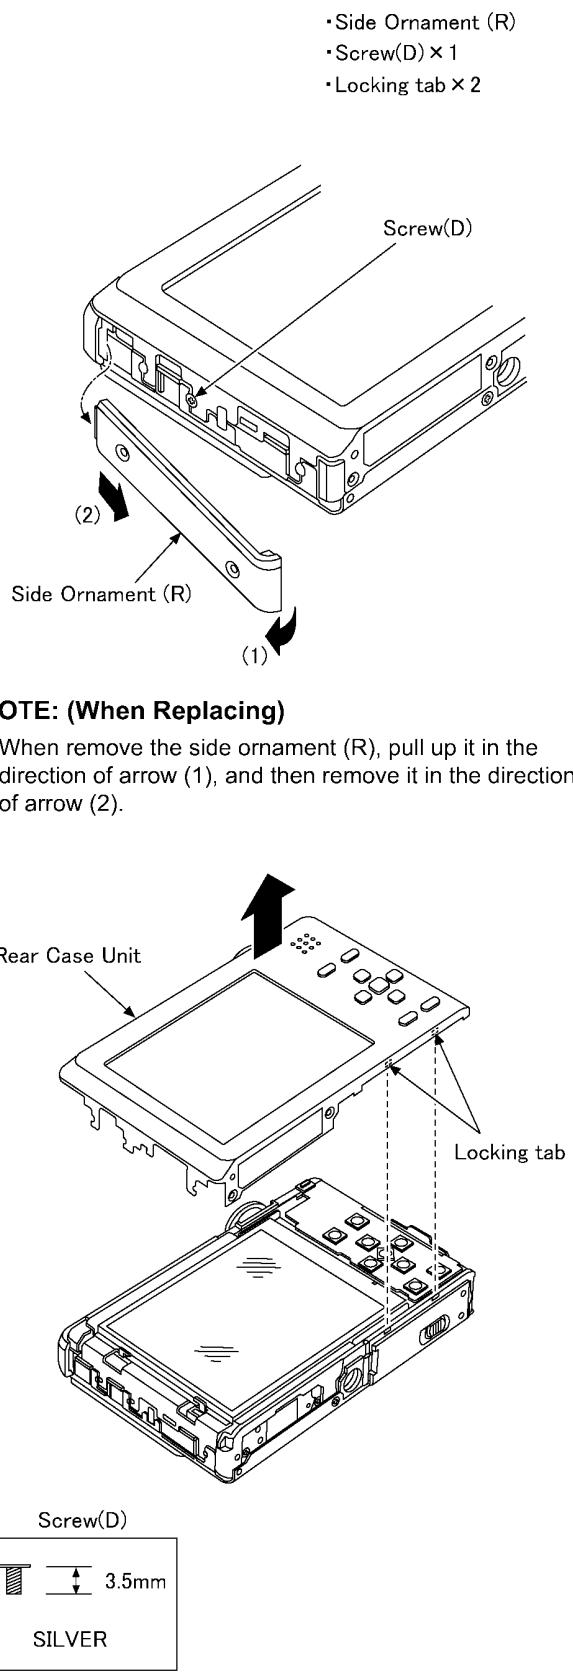

(Fig. D2)

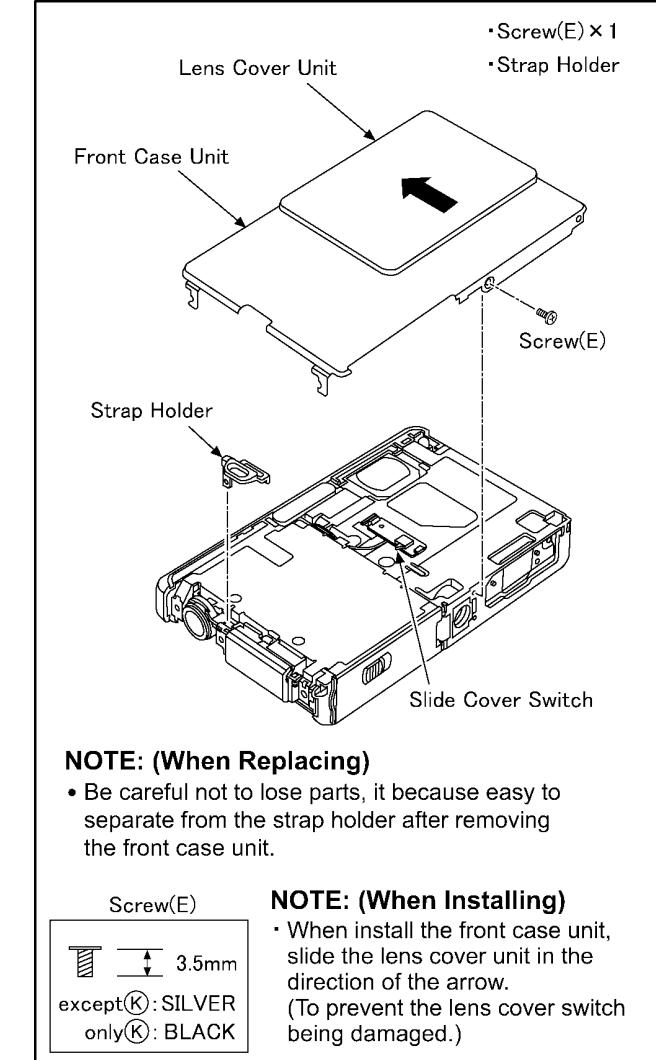

NOTE: (When Replacing)

- When remove the side ornament (R), pull up it in the direction of arrow (1), and then remove it in the direction of arrow (2).


- Be careful not to lose parts, it because easy to separate from the strap holder after removing the front case unit.

NOTE: (When Installing)


- When install the front case unit, slide the lens cover unit in the direction of the arrow. (To prevent the lens cover switch being damaged.)

(Fig. D3)

8.3.3. Removal of the Lens Cover

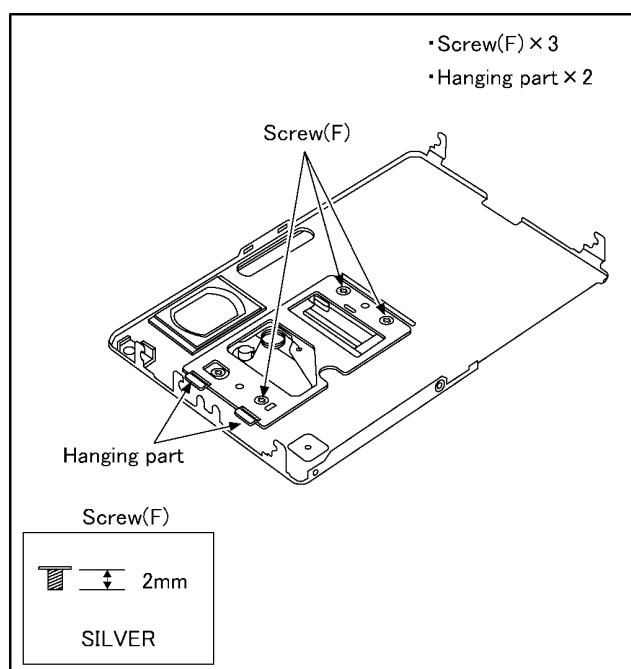


(Fig. D4)

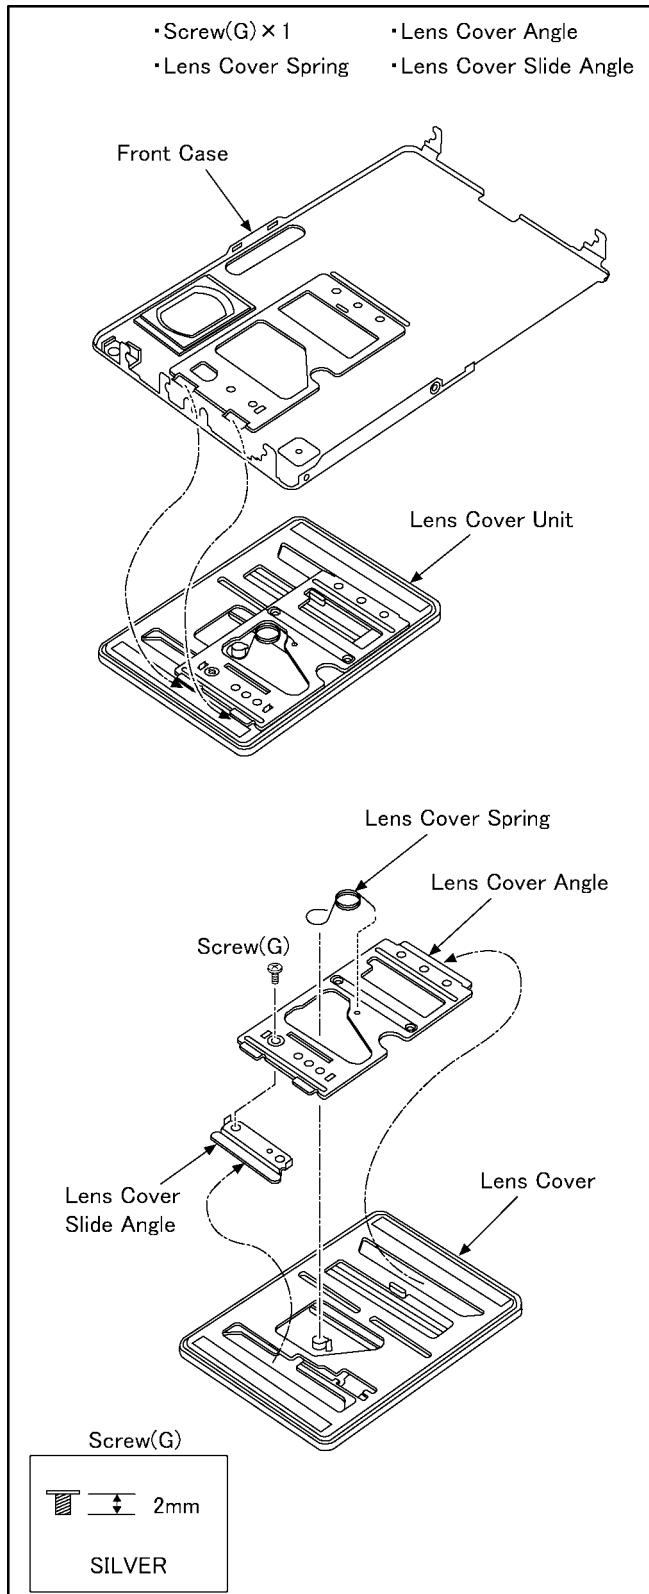


(Fig. D5)

8.3.4. Removal of the Sub Operation P.C.B.

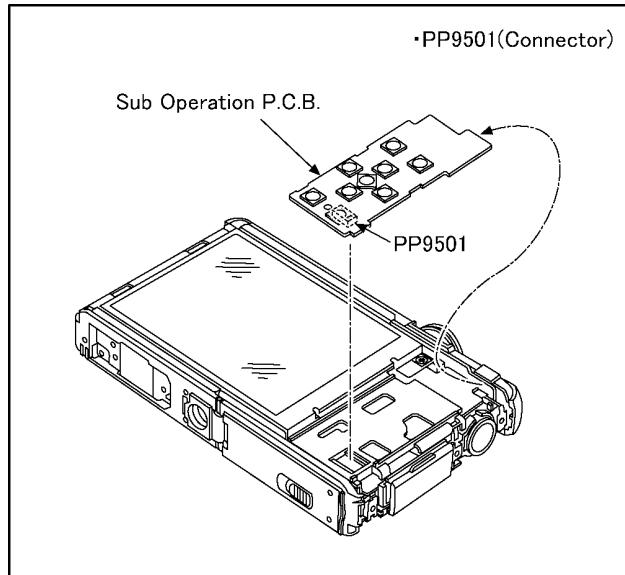


(Fig. D6)

8.3.5. Removal of the LCD Unit

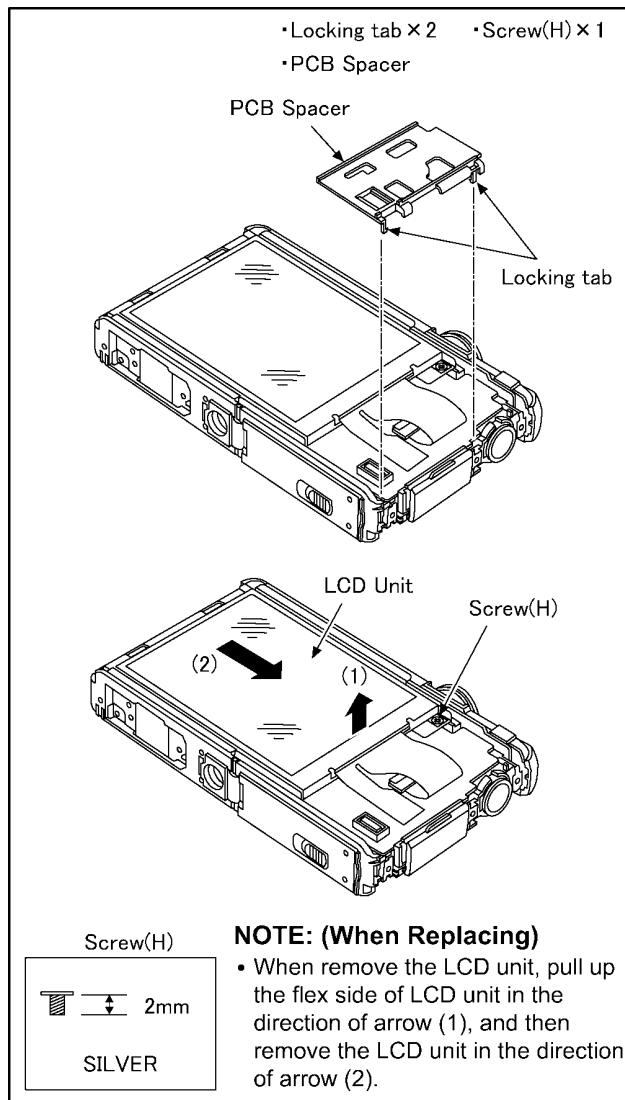


(Fig. D7)

8.3.6. Removal of the Top Operation Unit

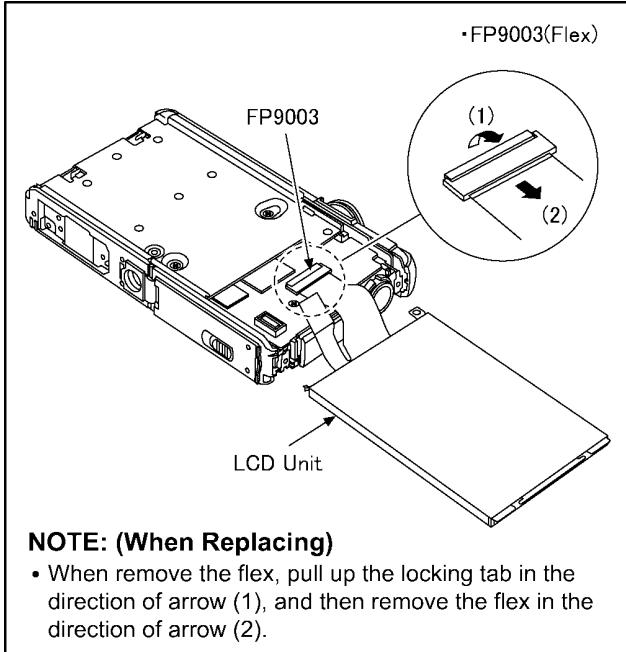

(Fig. D8)

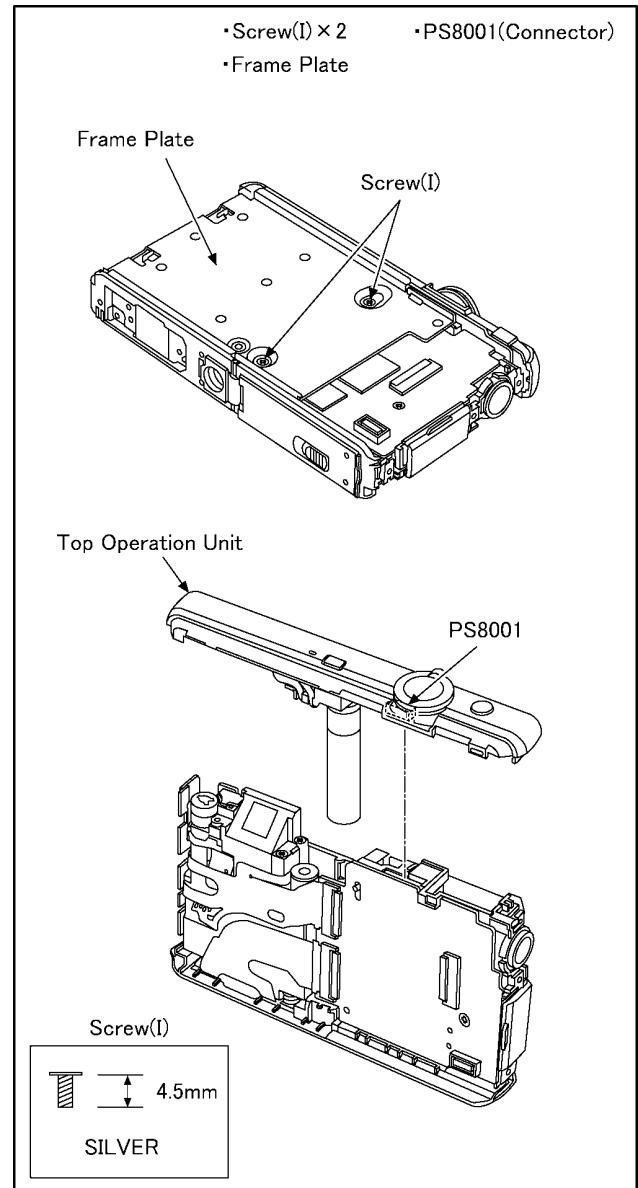




(Fig. D9)

8.3.7. Removal of the E.Capacitor P.C.B.


IMPORTANT NOTICE:

Take care not apply any bending load to the charging capacitor. It brings about the possibility of P.C.B. and/or component damage on the E.Capacitor P.C.B..

- Screw(J) × 1
- Locking tab × 1
- Hanging part × 1
- Capacitor Holder

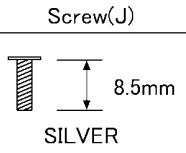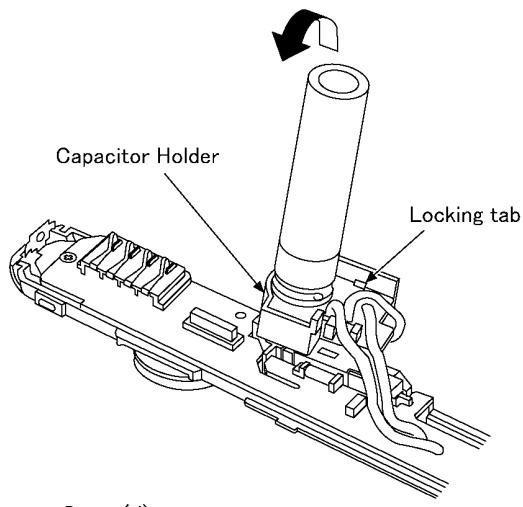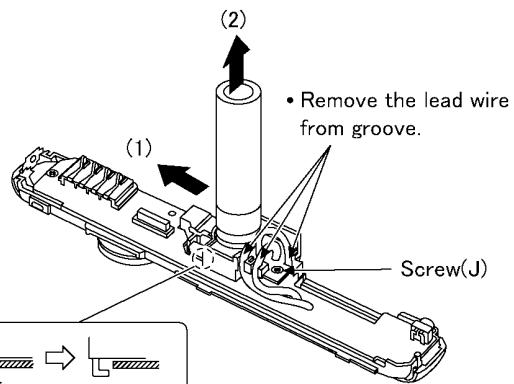

(Fig. D10)

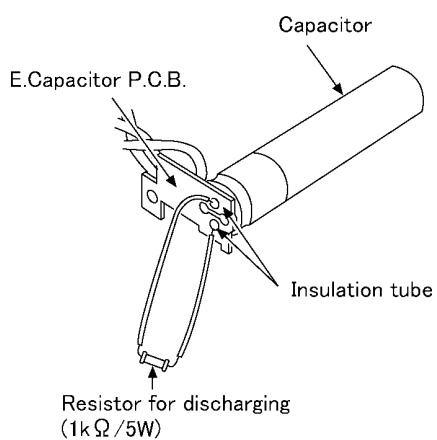

CAUTION



Be sure to discharge the capacitor on E.Capacitor P.C.B. before disassembling.

1. Remove the E.Capacitor P.C.B..
2. Put the insulation tube on the lead part of resistor (ERG5SJ102: 1kΩ/5W).
3. Put the resistor between both terminals of capacitor unit for approx. 5 seconds.


(Fig. D11)

8.3.8. Removal of the Flash Top P.C.B.

- Screw(K) × 1
- Locking tab × 1

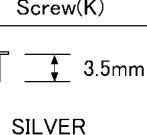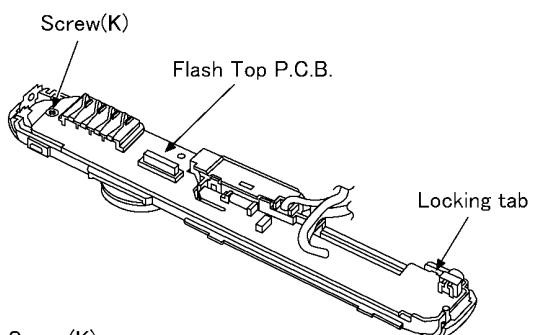

(Fig. D12)

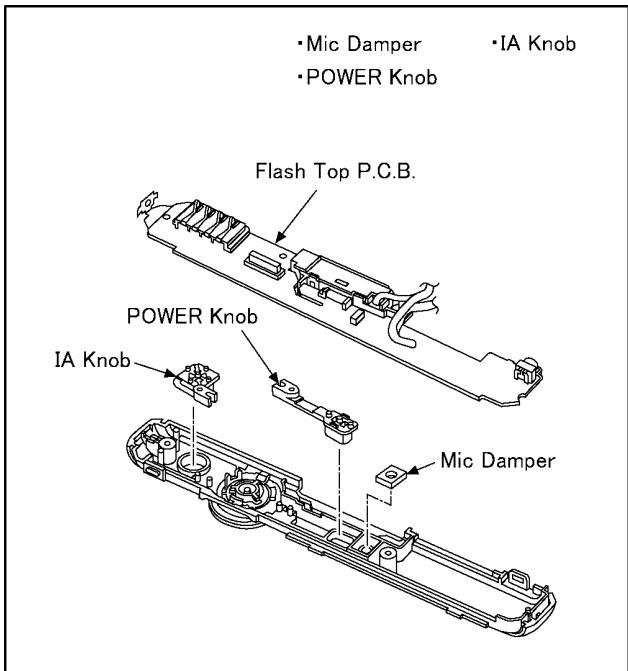


(Fig. D13)

8.3.9. Removal of the Lens Unit (with CCD)

NOTE:

When Disassembling and Assembling for the Lens Unit

1. Take care that the dust and dirt are not entered into the lens. In case of the dust is putted on the lens, blow off them by airbrush.
2. Do not touch the surface of lens.
3. Use lens cleaning KIT(BK) (VFK1900BK).

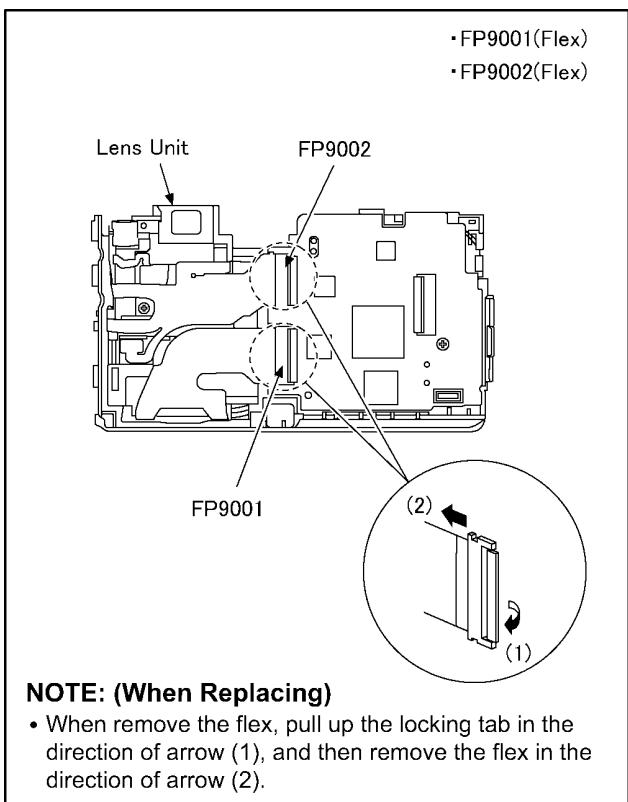


NOTE: (When Replacing)

- When remove the flex, pull up the locking tab in the direction of arrow (1), and then remove the flex in the direction of arrow (2).


(Fig. D14)

8.3.10. Removal of the Lens Switch P.C.B. and Main P.C.B.

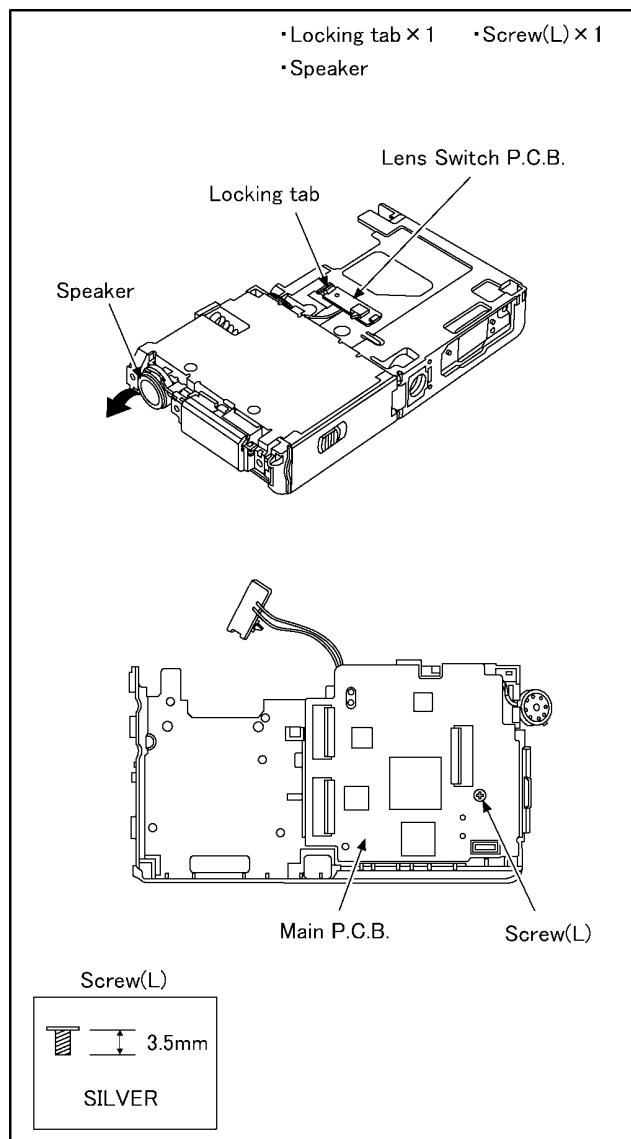


(Fig. D15)

8.3.11. Removal of the Jack Door

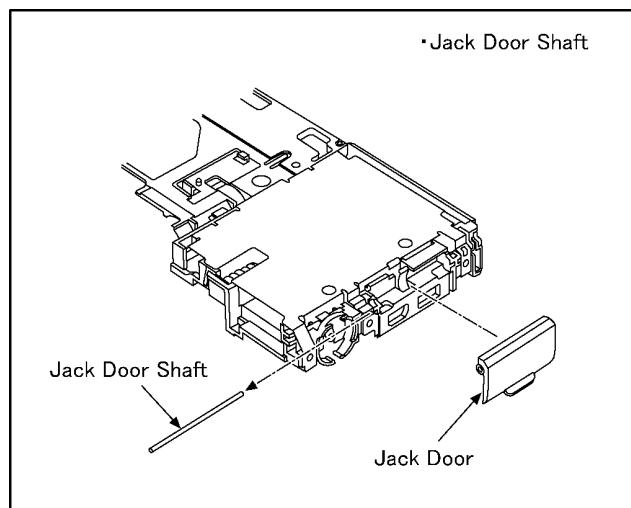


(Fig. D16)

8.3.12. Removal of the Battery Case Unit

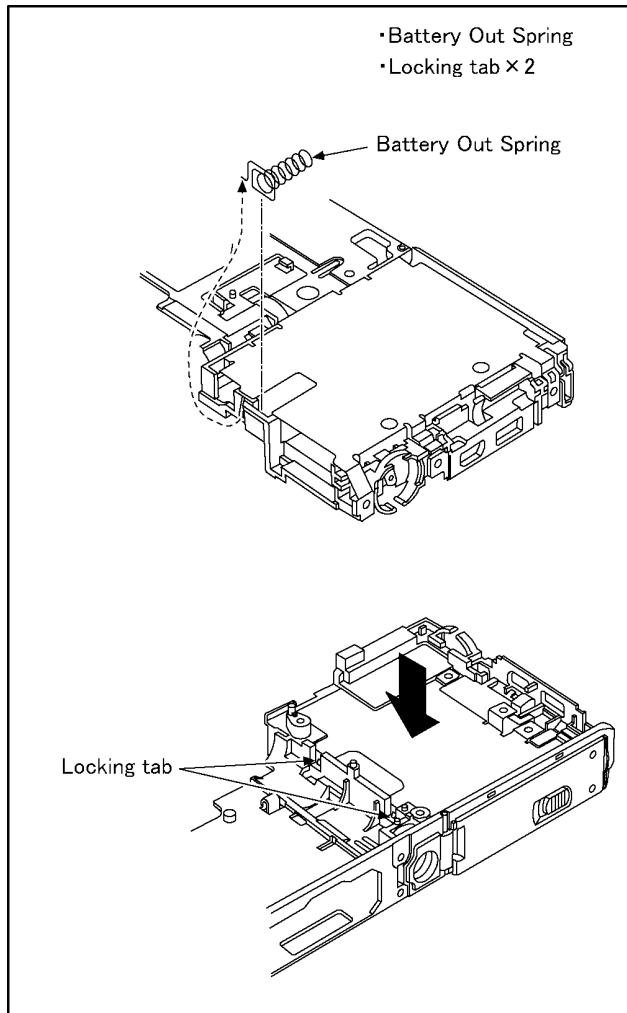


(Fig. D17)

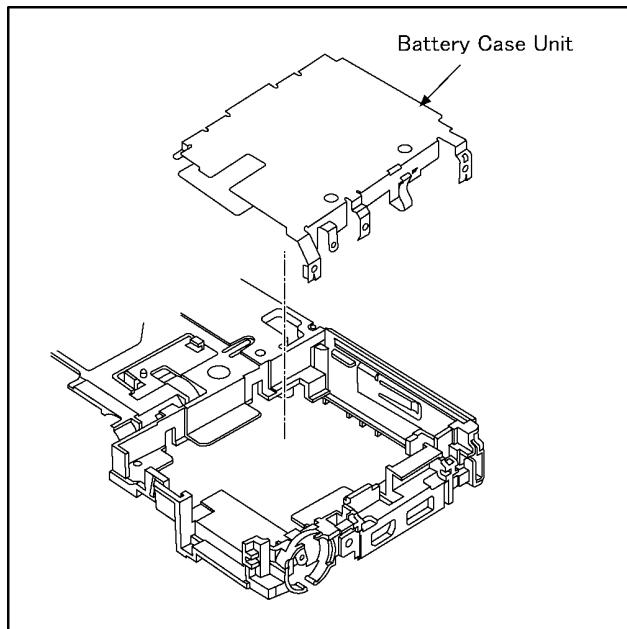

(Fig. D18)

8.3.13. Removal of the Battery Door Unit

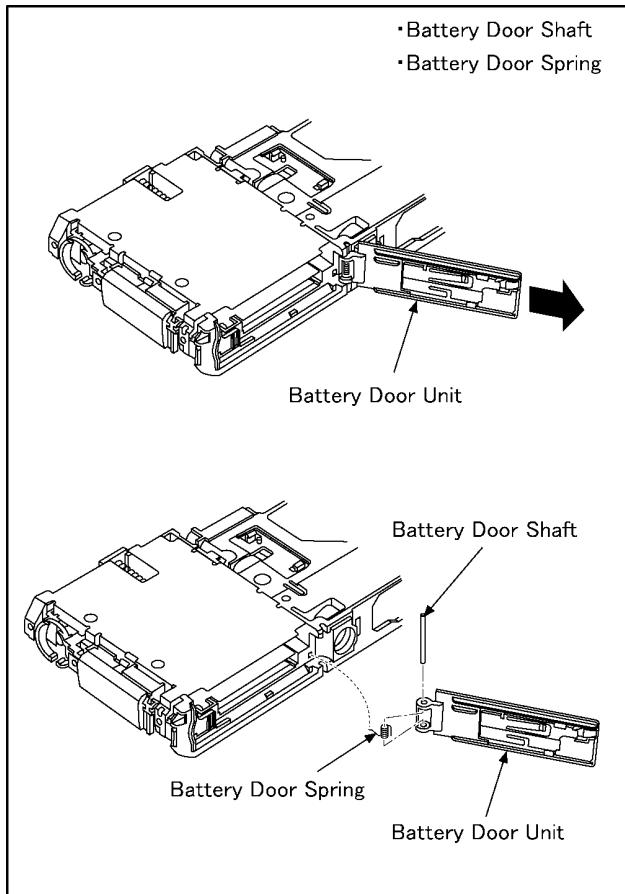

(Fig. D19)

NOTE: (When Assembling)

Make sure to confirm the following points when assembling:

- The Screw is tightened enough.
- Assembling conditions are fine. (No distortion, no abnormal-space.)
- No dust and/or dirt on Lens surfaces.
- LCD image is fine. (No dust and dirt on it, and no gradient images.)

9 Measurements and Adjustments

9.1. Introduction

When servicing this unit, make sure to perform the adjustments necessary based on the part(s) replaced.

Before disassembling the unit, it is recommended to back up the camera data stored in flash-rom as a data file.

IMPORTANT NOTICE (After replacing the MAIN P.C.B.)

After replacing the MAIN P.C.B., it is necessary to use the “DIAS” software to allow the release of adjustment flag(s).

The Adjustment software “DIAS” is available at “TSN Website”. To download, click on “Support Information from NWBG/VDBG-
AVC”.

*DIAS (DSC Integrated Assist Software)

9.2. Before Disassembling the unit

9.2.1. Initial Setting Release

The cameras specification are initially set in accordance with model suffix (such as EB, EG, GK, GC, and so on.).

Unless the initial setting is not released, an automatic alignment software in the camera is not able to be executed when the alignment is carried out.

Note:

The initial setting should be again done after completing the alignment. Otherwise, the camera may not work properly.

Therefore as a warning, the camera display a warning symbol “! ” on the LCD monitor every time the camera is turned off.

Refer to the procedure described in “3.4.2 INITIAL SETTINGS” for details.

[How to Release the camera initial setting]

Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

(Since this unit has built-in memory, it can be performed without inserting SD memory card.)

2. Set the recording mode to the [NORMAL PICTURE] mode.

(Press the [MODE] button and select the [NORMAL PICTURE] by pressing the “[UP] and [DOWN] of Cursor buttons”, then press the [MENU/SET] button.)

Step 1. Temporary cancellation of “INITIAL SETTINGS”:

While keep pressing “[UP] of Cursor button” and [iA] button simultaneously, turn the Power on.

Step 2. Cancellation of “INITIAL SETTINGS”:

Press the [PLAYBACK] button to “Playback Mode”.

Press “[UP] of Cursor button” and [iA] button simultaneously. (The camera will beep after this.)

Turn the Power off. (The warning symbol “! ” is displayed on the LCD monitor.)

9.2.2. Flash-Rom Data Backup

When trouble occurs, it is recommended to backup the Flash-rom data before disassembling the unit.

There are two kinds of Flash-rom data backup methods:


[ROM_BACKUP (Method of Non-PC backup)]

1. Insert the SD-card into the camera.
2. Set the camera to "Temporary cancellation of the initial settings".
3. Select the "SETUP" menu.
From the "SETUP" menu, select "ROM BACKUP".

NOTE:

This item is not listed on the customer's "SETUP" menu.

4. When this "ROM_BACKUP" item is selected, the following submenus are displayed.

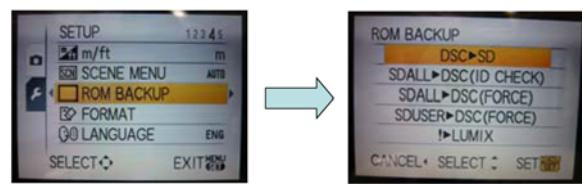


Item	Function	Details
DSC → SD	Save all the DSC's Flash-rom data to SD-CARD	<p>*DSC's Flash-rom data is saved to the SD-CARD as a data file by the same format as the TATSUJIN software for the previous models. (DATA BACKUP)</p> <p>-File location: ROOT DIRECTORY in SD-CARD</p> <p>-File Name:</p> <p>1) User Setup Information data: <Model Number>U.txt [Example: DMC-FX66 : "FX66U.txt"]</p> <p>2) Optical Adjustment data: <Model Number>F.txt [Example: DMC-FX66 : "FX66F.txt"]</p> <p>*If the concerned file already exists, "OVERWRITE?" message is displayed.</p>
SDALL→ DSC (ID CHECK)	Write the all data to DSC's Flash-rom from SD-CARD	<p>*The backup data being stored in the SD card is transferred to DSC unit.</p> <p>*ID CHECK: When the model ID is different, data is not transferred.</p>
SDALL→ DSC (FORCE)	Write the all data to DSC's Flash-rom from SD-CARD	<p>*FORCE: Even if the model ID is different, data is transferred.</p> <p>※If the main PCB is replaced, select "SDALL → DSC (FORCE)".</p>
SDUSER→DSC (FORCE)	Only "User setup information" is written from the saved file in the SD-CARD to DSC's Flash-rom.	<p>*Only the user's "setup" setting condition is transferred to DSC unit.</p> <p>*FORCE: Even if the model ID is different, the data is transferred.</p>
!→LUMIX	Shipping set without initializing "User setup information"	<p>*Initial setting is executed without initializing the user's set up setting condition.</p> <p>※ The initial setting must be perform while the Self-timer LED is blinking.</p> <p>※ The picture data stored in the built-in memory of the DSC is not erased, with this operation.</p>

[DSC Integrated Assist Software (Method of Using PC)]

Same as TATSUJIN software for previous models.

9.2.3. Light Box

If using VFK1164TDVLB Light Box, remove the lens connection ring by loosing three hexagon screws.

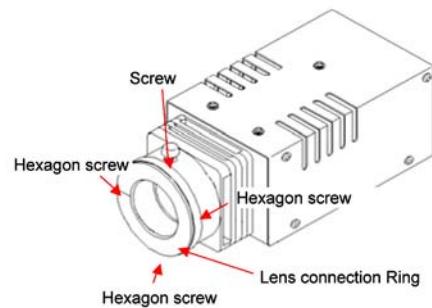

9.3. Details of Electrical Adjustment

9.3.1. How to execute the Electrical Adjustment

It is not necessary to connect the camera to a PC to perform adjustments.

“Flag reset operation” and “Initial setting operation” are required when carrying out the alignment, follow the procedure below.

9.3.1.1. Startup Electrical Adjustment mode

1. Release the initial settings.
2. Insert a recordable SD card.
(Without a SD card, the automatic adjustment can not executed.)
3. Procedure to set the camera into adjustment mode:
 - a. Set the mode into [NORMAL PICTURE] mode.
 - b. Turn the Power off.
 - c. Turn the Power on pressing [DISPLAY] and [MENU/SET] simultaneously.
LCD monitor displays “SERVICE MODE”.(Refer to Fig. 3-1)



Fig. 3-1

9.3.1.2. Status Adjustment Flag Setting

Reset (Not yet adjusted) the status flag condition.

1. After pressing the [DISPLAY] button, the LCD monitor displays the Flag status screen (Refer to Fig.3-2)

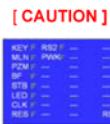


Fig. 3-2 (A)

If this menu (Fig.3-2(A)) appears on the LCD monitor, execute the “DIAS” on PC after connecting the DSC to the PC using an USB cable. Then, follow the instructions provided within “DIAS” software.

KEY F	WBLF	RES F	---
PZM F	STB F	ZOM F	---
OIS F	LED F	RS2 F	---
BF F	CLK F	PWK F	---
MLN F	WKI F	---	---
SHT F	COLF	---	---
ISO F	BKI F	---	---
LIN F	DUT F	---	RESET

Fig. 3-2

2. Select item by pressing the Cursor buttons. (Gray cursor is moved accordingly.)
3. Press the [Delete] button.

NOTE:

The selected item's flag has been changed from “F (green)” to “0 (yellow)”.

*(Refer to Fig. 3-3)

*Flag conditions:

F (green)

means that the alignment has been completed and the status flag condition is set. In this case, the flag condition should be reset, if you try to carry out the automatic alignment.

0 (yellow)

means that the alignment has been not “completed” and the status flag condition is “reset”. In this case, automatic alignment is available.

- In case of setting the status flag into set condition again without completion of the alignment, the status flag should be SET by using PC, or UNDO by using ROM BACKUP function.

KEY F	WBLF	RES F	---
PZM F	STB F	ZOM F	---
OIS 0	LED F	RS2 F	---
BF F	CLK F	PWK F	---
MLN F	WKI F	---	---
SHT F	COLF	---	---
ISO F	BKI F	---	---
LIN F	DUT F	---	RESET

Fig. 3-3

<Example: OIS flag is reset. >

9.3.1.3. Execute Adjustment

(In case of “OIS Adjustment”)

1. Perform step “9.3.1.1.” to “9.3.1.2.”, to reset the OIS flag status “F” (Set) to “0” (Reset)
2. Press [DISPLAY] button after Flag reset.
OIS Adjustment screen is displayed on the LCD panel.
(Refer to Fig.3-4)
3. Press the [Shutter] button. The adjustment will start automatically.
4. When the adjustment is completed successfully, adjustment report menu appears with Green OK on the LCD monitor. (Refer to Fig.3-5)



Fig. 3-4

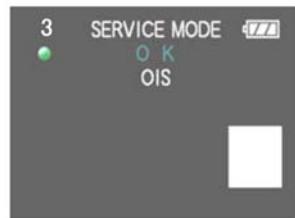


Fig. 3-5

9.3.1.4. Attention point during Adjustment

1. Step “9.3.1.3.” procedure shows OIS adjustment as an example. To perform the adjustment, refer to the “9.3.2. Adjustment Specifications” table which shows key point for each adjustment.
2. Do not move the light box, the camera or the chart while adjusting. If one of these is moved accidentally, start the adjustment again.
3. Do not press any buttons/keys until the default menu (Fig.3-6) is displayed on the LCD monitor. Otherwise, adjustment data may not be stored properly.
4. If the adjustment is interrupted accidentally, the alignment data may not be properly saved in the Flash-rom.



Fig. 3-6

9.3.1.5. Finalizing the Adjustment

1. Several adjustment flags can be reset (“F” into “0”) at the same time. In this case, when the adjustment has been completed, the screen will change showing the adjustment for the next item until all reset items are completed.
Also, when the shutter button is pressed, the screen jump to the next adjustment item.
2. To cancel the adjustment mode while in the process of performing the adjustment, follow this procedures.
 - (1) Press [Delete] button.
 - (2) Press [RIGHT] of Cursor button.

NOTE:

- If adjustment is cancelled with above procedure, adjustment is not completed. Make sure to adjust it later.
- Adjustment software “DIAS” is able to control the status of the adjustment flags.




9.3.2. Adjustment Specifications

The following matrix table shows the relation between the replaced part and the Necessary Adjustment.

When a part is replaced, make sure to perform the necessary adjustment(s) in the order indicated.

The table below shows all the information necessary to perform each adjustment.

Adjustment order	Adjustment Item	FLAG	Purpose	Replacing Parts						JIG/TOOLS	SET UP	How to Operate	
				MAIN PCB	VENUS (IC6001)	MCPI (IC6002)	Lens Parts (except for CCD)	CCD Unit	GYRO (IC9701)				
1	Venus Zoom	PZM	Venus Zoom Inspection	○	○	○	—	—	—	NONE	NONE	1)Press Shutter Button 2)After displaying "PZM", press Shutter Button again. 3)After completed, the "OK" menu appears.	
2	OIS sensor	OIS	OIS sensor output level adjustment	○	○	○	○	—	—	NONE	NONE	1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" menu appears.	
3	Backfocus / GYRO	BF	To have the focus tracking curve be appropriate shape and GYRO sensor adjustment	○	○	○	○	○	※1	○	•COLLIMATOR (VFK1164TCM02 or VFK1164TCM03 or RFKZ0422)	1)Set the camera in front of collimator so that the distance from collimator to camera becomes about 1 cm as shown in Fig.A. [NOTE] Please notice ! "NG" might happen while auto adjusting. - Do not put the black colored stuff at the back side of collimator near hunching chart to get some certain brightness. - Make sure the hunching chart has no dust and dirty condition. - Not connect the USB cable at this stage.	1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" menu appears.
4	IRIS	IRS	IRIS adjustment	○	○	○	○	○	—	•LIGHT BOX (VFK1164TDVBLB or RFKZ0523)	1)Set the camera in front of LIGHTBOX so that the distance from collimator to camera becomes about 5 cm as shown in Fig.B.	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
5	Monitor Linearity	MLN	Monitor Linearity adjustment	○	○	○	○	○	—	•LIGHT BOX (VFK1164TDVBLB or RFKZ0523)	1)Set the camera in front of LIGHTBOX so that the distance from collimator to camera becomes about 8 cm as shown in Fig.B.	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
6	Shutter	SHT	Shutter speed adjustment	○	○	○	○	○	—	•LIGHT BOX (VFK1164TDVBLB or RFKZ0523)	1)Insert the TR chart into the slot of LIGHTBOX. 2)Set the camera in front of LIGHTBOX so that the distance from LIGHTBOX to camera becomes about 17 cm as shown in Fig.B. 3)Set the camera angle so that the color chart is displayed on the LCD monitor fully. [NOTE] - Since the lens position is automatically set into certain position after executing auto adjustment, confirm the angle after stopping the lens zoom position. - It is no problem even though the chart on to the LCD monitor slightly cut at the corner. - It is no problem even though the focusing slightly becomes out of focusing condition. - Not connect the USB cable at this stage.	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
7	ISO	ISO	ISO sensitivity adjustment	○	○	○	○	○	—	•LIGHT BOX (VFK1164TDVBLB or RFKZ0523)	1)Press Shutter Button 2)After completed, the "OK" menu appears.	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
8	White Balance	WBL	White balance adjustment under various color temperature	○	○	○	○	○	—	•TR CHART (RFKZ0443)	1)Press Shutter Button 2)After completed, the "OK" menu appears.	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
9	High brightness coloration	LIN	High brightness coloration adjustment	○	○	○	○	○	—	•TR CHART (RFKZ0443)	1)Press Shutter Button 2)After completed, the "OK" menu appears.	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
10	CCD Missing Pixels (White)	WKI	Compensation of CCD Missing Pixels (White)	○	○	○	—	○	※1	—	NONE	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
11	Color reproduction inspection and Microphone check	COL	Color reproduction inspection and Microphone check	○	○	○	○	○	—	—	NONE	1)Press Shutter Button 2)After completed, the "OK" menu appears.	
12	CCD Missing Pixels (Black)	BKI	Compensation of CCD Missing Pixels (Black)	○	○	○	—	○	※1	—	•LIGHT BOX (VFK1164TDVBLB or RFKZ0523)	1)Set the camera in front of LIGHTBOX so that the distance from collimator to camera becomes about 8 cm as shown in Fig.B.	1)Press Shutter Button 2)After completed, the "OK" menu appears.

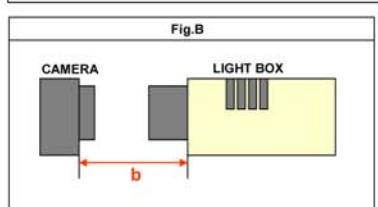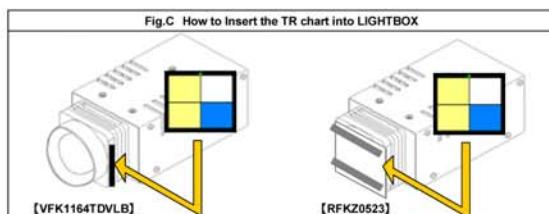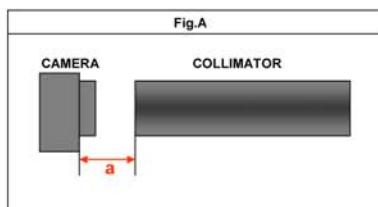

IMPORTANT NOTICE (After replacing the MAIN P.C.B.)

After replacing the MAIN P.C.B., make sure to perform the "INITIAL SETTINGS" first, then release the "INITIAL SETTINGS" in order to proceed the electrical adjustment.

NOTE:

- 1) If electrical adjustment or data re-writing is executed before "INITIAL SETTINGS", suffix code list is never displayed, and it cannot be chosen suitable suffix code.
- 2) Never remove the battery during initial setting in process.

9.4. After Adjustment

9.4.1. Initial Setting

Since the initial setting has been released to execute the built-in adjustment software, it should be set up again before shipping the camera to the customer.

Refer to the procedure described in "3.4.2. INITIAL SETTINGS" for details.

[IMPORTANT]

1. The initial setting should be done again after completing the alignment. Otherwise, the camera will not work properly.
Therefore as a warning, the camera display a warning symbol "!" on the LCD monitor every time the camera is turned off.
2. Confirm that status of all adjustment flag show "F". Even if one of the adjustment flag shows "0", initial setting programmed is never executed.
3. Adjustment software "DIAS" is able to control the status of the adjustment flags.
The Adjustment software "DIAS" is available at "TSN Website", therefore, access to "TSN Website" at "Support Information from NWBG/VDBG-AVC".

10 Maintenance

10.1. Cleaning Lens and LCD Panel

Do not touch the surface of lens and LCD Panel with your hand.

When cleaning the lens, use air-Blower to blow off the dust.

When cleaning the LCD Panel, dampen the lens cleaning paper with lens cleaner, and the gently wipe the its surface.

Note:

The Lens Cleaning KIT ; VFK1900BK (Only supplied as 10 set/Box) is available as Service Aid.

Service Manual

Diagrams and Replacement Parts List

Digital Camera

Model No.

DMC-FP1P	DMC-FP1EG	DMC-FP1GN	DMC-FP2EE
DMC-FP1PC	DMC-FP1EP	DMC-FP1GT	DMC-FP2EF
DMC-FP1PR	DMC-FP1GC	DMC-FP2P	DMC-FP2EG
DMC-FP1PU	DMC-FP1GD	DMC-FP2PC	DMC-FP2EP
DMC-FP1EB	DMC-FP1GF	DMC-FP2PR	
DMC-FP1EE	DMC-FP1GH	DMC-FP2PU	
DMC-FP1EF	DMC-FP1GK	DMC-FP2EB	

Vol. 1

Colour

[DMC-FP1]	[DMC-FP2]
(S).....Silver Type (except PC/EB/EF/GD)	(S).....Silver Type (only PU/EE/EG/EP)
(K).....Black Type	(K).....Black Type (except P/PC)
(R).....Red Type (only P/PC/GC)	(R).....Red Type (except PR)
(P).....Pink Type (except PC/EE/GD)	(A).....Blue Type (only P/PU/EB/EG)
(A).....Blue Type (except PC/PR/GC/GD)	(D).....Orange Type (only P)
(D).....Orange Type (only P/EB/EE/EF/EG/EP/GK)	(G).....Green Type (only P)
(G).....Green Type (only P/PU/GD/GK/GN)	(H).....Gray Type (only P/PC)
(H).....Gray Type (only P/PC)	(PA).....Light Pink Type (except P/PC/EE/EP)

Table of contents

S1. About Indication of The Schematic Diagram	S-1	S6. Replacement Parts List	S-7
S1.1. Important Safety Notice.....	S-1		
S2. Voltage Chart	S-2	S7. Exploded View	S-12
S2.1. Flash Top P.C.B.....	S-2	S7.1. Frame and Casing Section.....	S-12
S3. Block Diagram.....	S-3	S7.2. Packing Parts and Accessories Section (1)	S-13
S3.1. Overall Block Diagram	S-3	S7.3. Packing Parts and Accessories Section (2)	S-14
S4. Schematic Diagram.....	S-4		
S4.1. Interconnection Diagram.....	S-4		
S4.2. Flash Top Schematic Diagram	S-5		
S4.3. Lens Switch Schematic Diagram	S-5		
S5. Print Circuit Board	S-6		
S5.1. Flash Top P.C.B.....	S-6		
S5.2. Lens Switch P.C.B.....	S-6		


S1. About Indication of The Schematic Diagram

S1.1. Important Safety Notice

COMPONENTS IDENTIFIED WITH THE MARK  HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS USE ONLY THE SAME TYPE.

- 1.Although reference number of the parts is indicated on the P.C.B. drawing and/or schematic diagrams, it is NOT mounted on the P.C.B. when it is displayed with "\$" mark.
- 2.It is only the "Test Round" and no terminal (Pin) is available on the P.C.B. when the TP (Test Point) indicated as "●" mark.
- 3.The voltage being indicated on the schematic diagram is measured in "Standard-Playback" mode when there is no specify mode is mentioned.
- 4.Although the voltage and waveform available on here is measured with standard frame, it may be differ from actual measurement due to modification of circuit and so on.
- 5.The voltage being indicated here may be include observational-error (deviation) due to internal-resistance and/or reactance of equipment. Therefore, handle the value indicated on here as reference.
- 6.Use the parts number indicated on the Replacement Parts List .

7. Indication on Schematic diagrams:

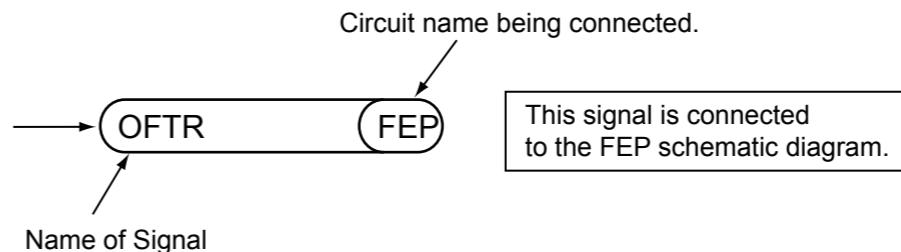

S2. Voltage Chart


Note) Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

S2.1. Flash Top P.C.B.

REF No.	PIN No.	POWER ON
IC8100	1	0
IC8100	2	0
IC8100	3	0
IC8100	4	0
IC8100	5	3.4
IC8100	6	0
IC8100	7	0
IC8100	8	0
IC8100	9	3.1
IC8100	10	3.8

S3. Block Diagram


S3.1. Overall Block Diagram

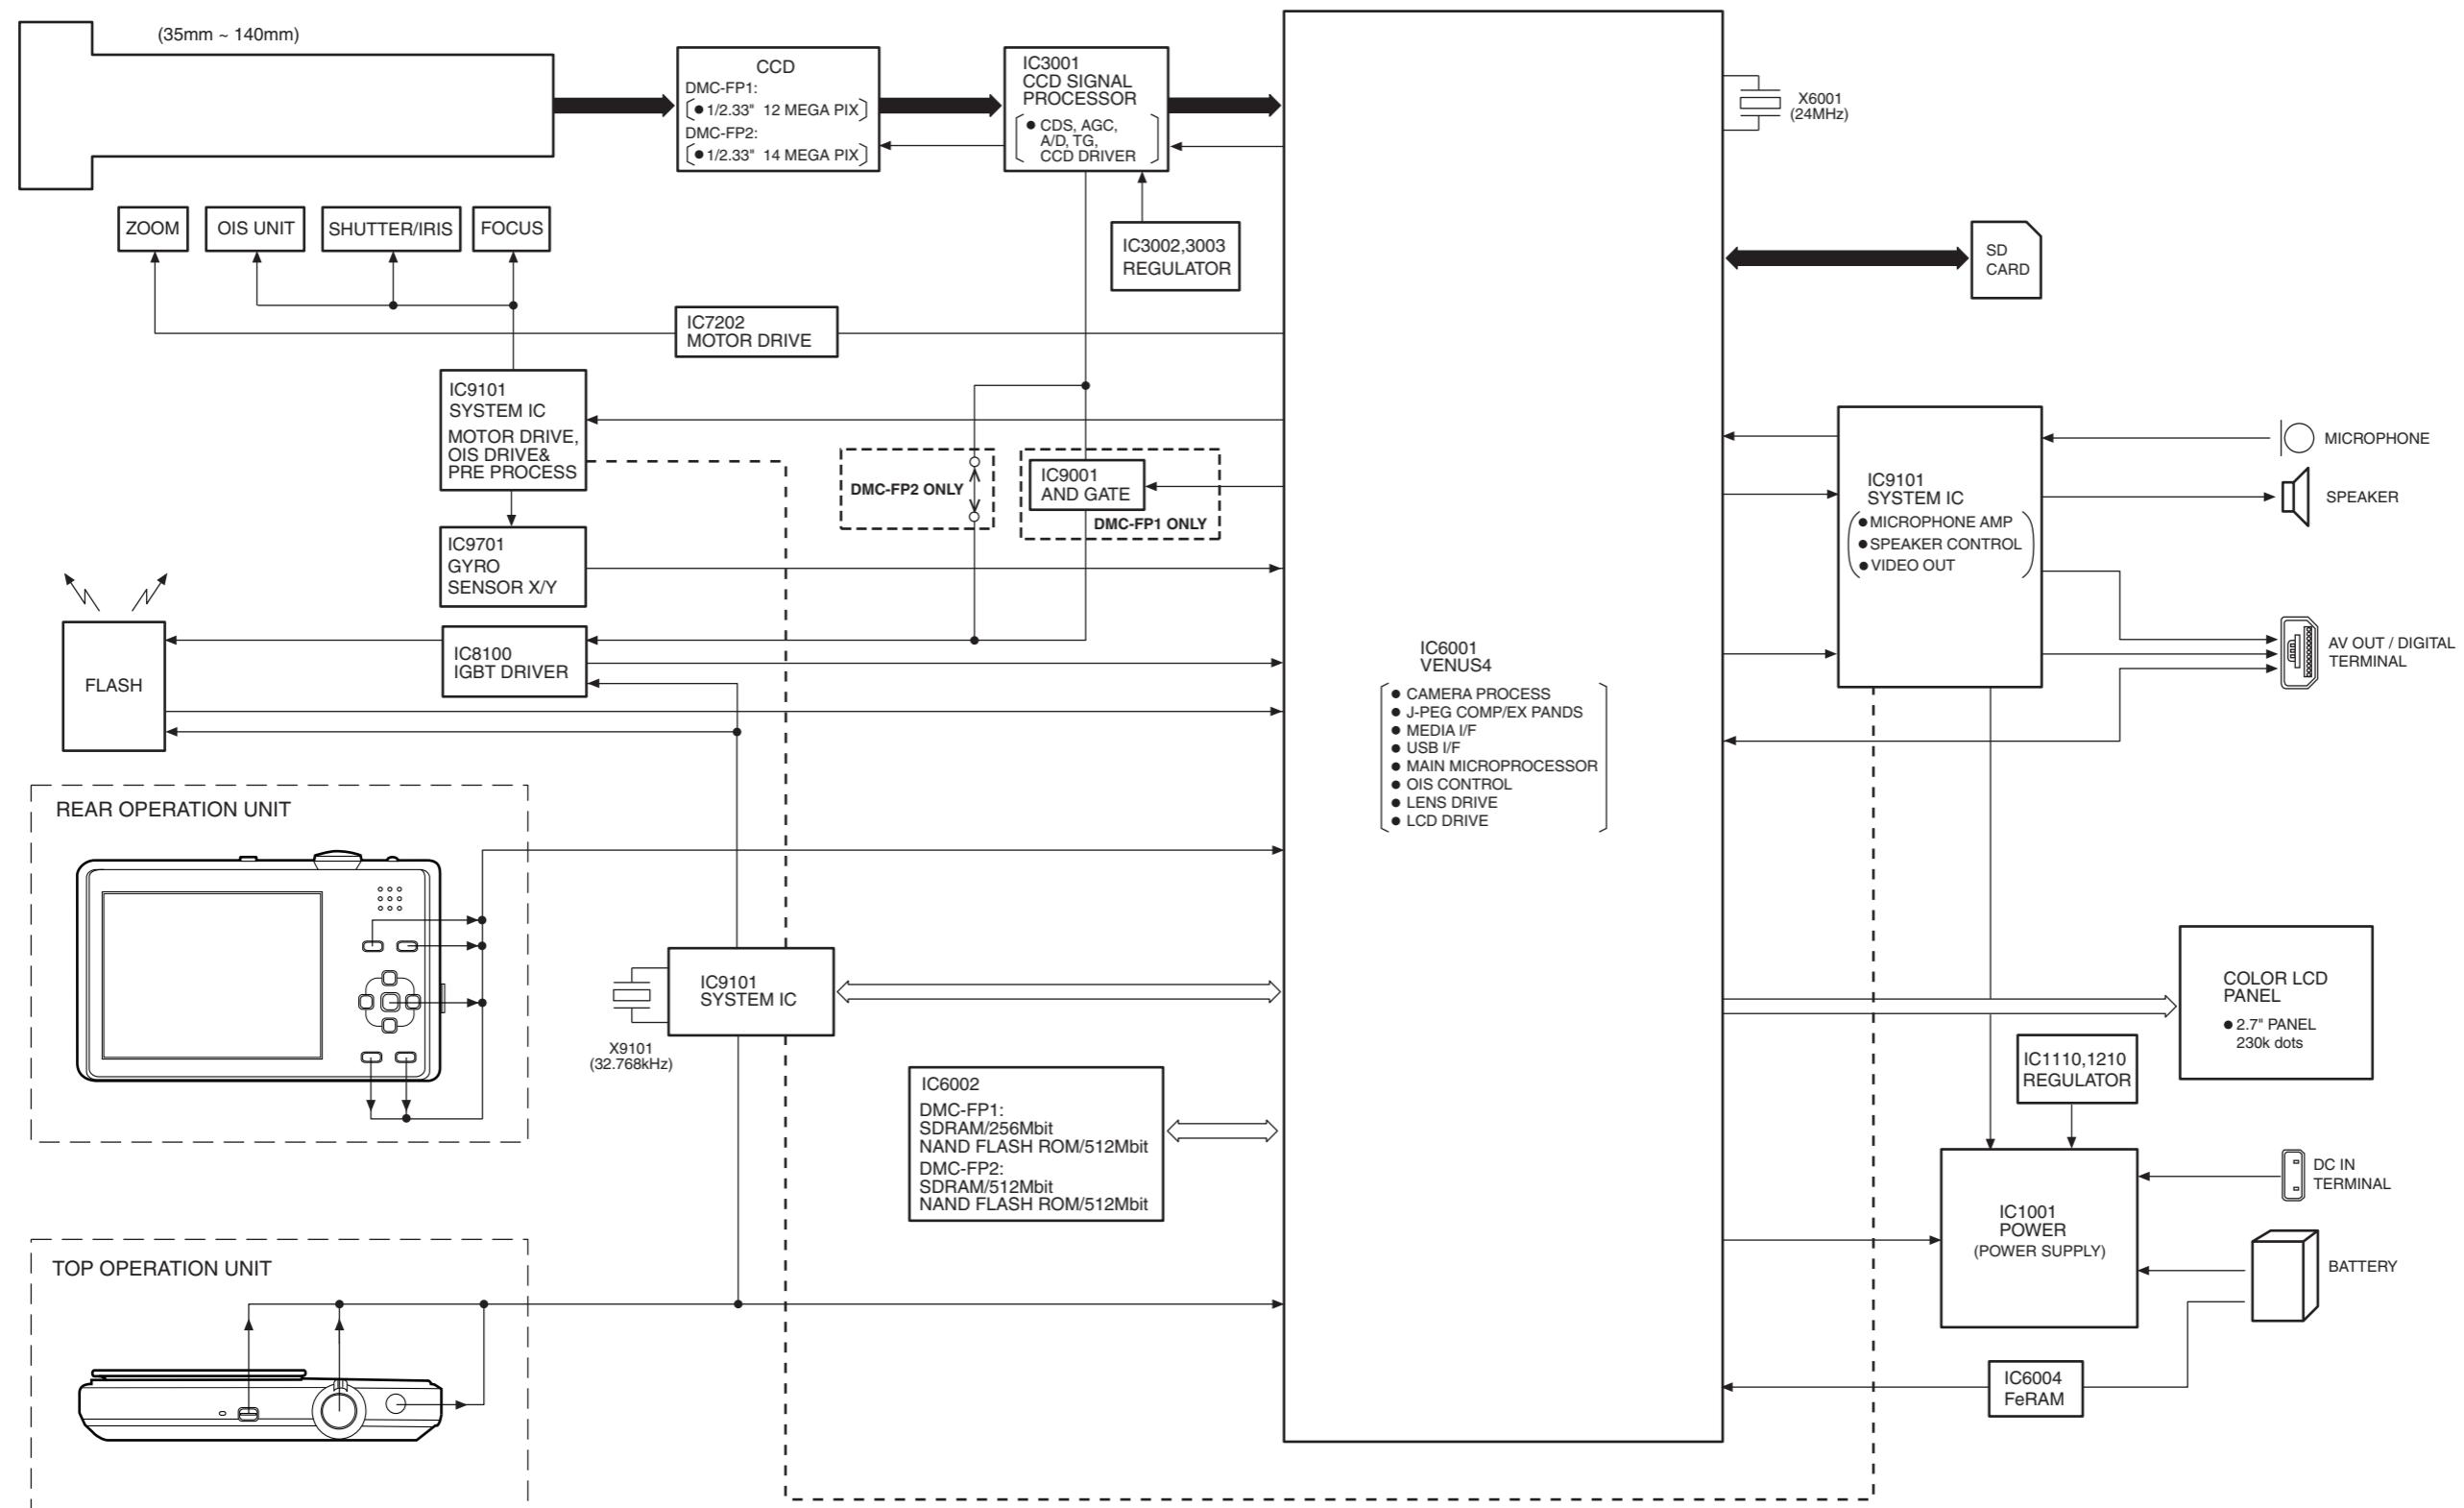


DMC-FP1/FP2 OVERALL BLOCK DIAGRAM

S4. Schematic Diagram

S4.1. Interconnection Diagram

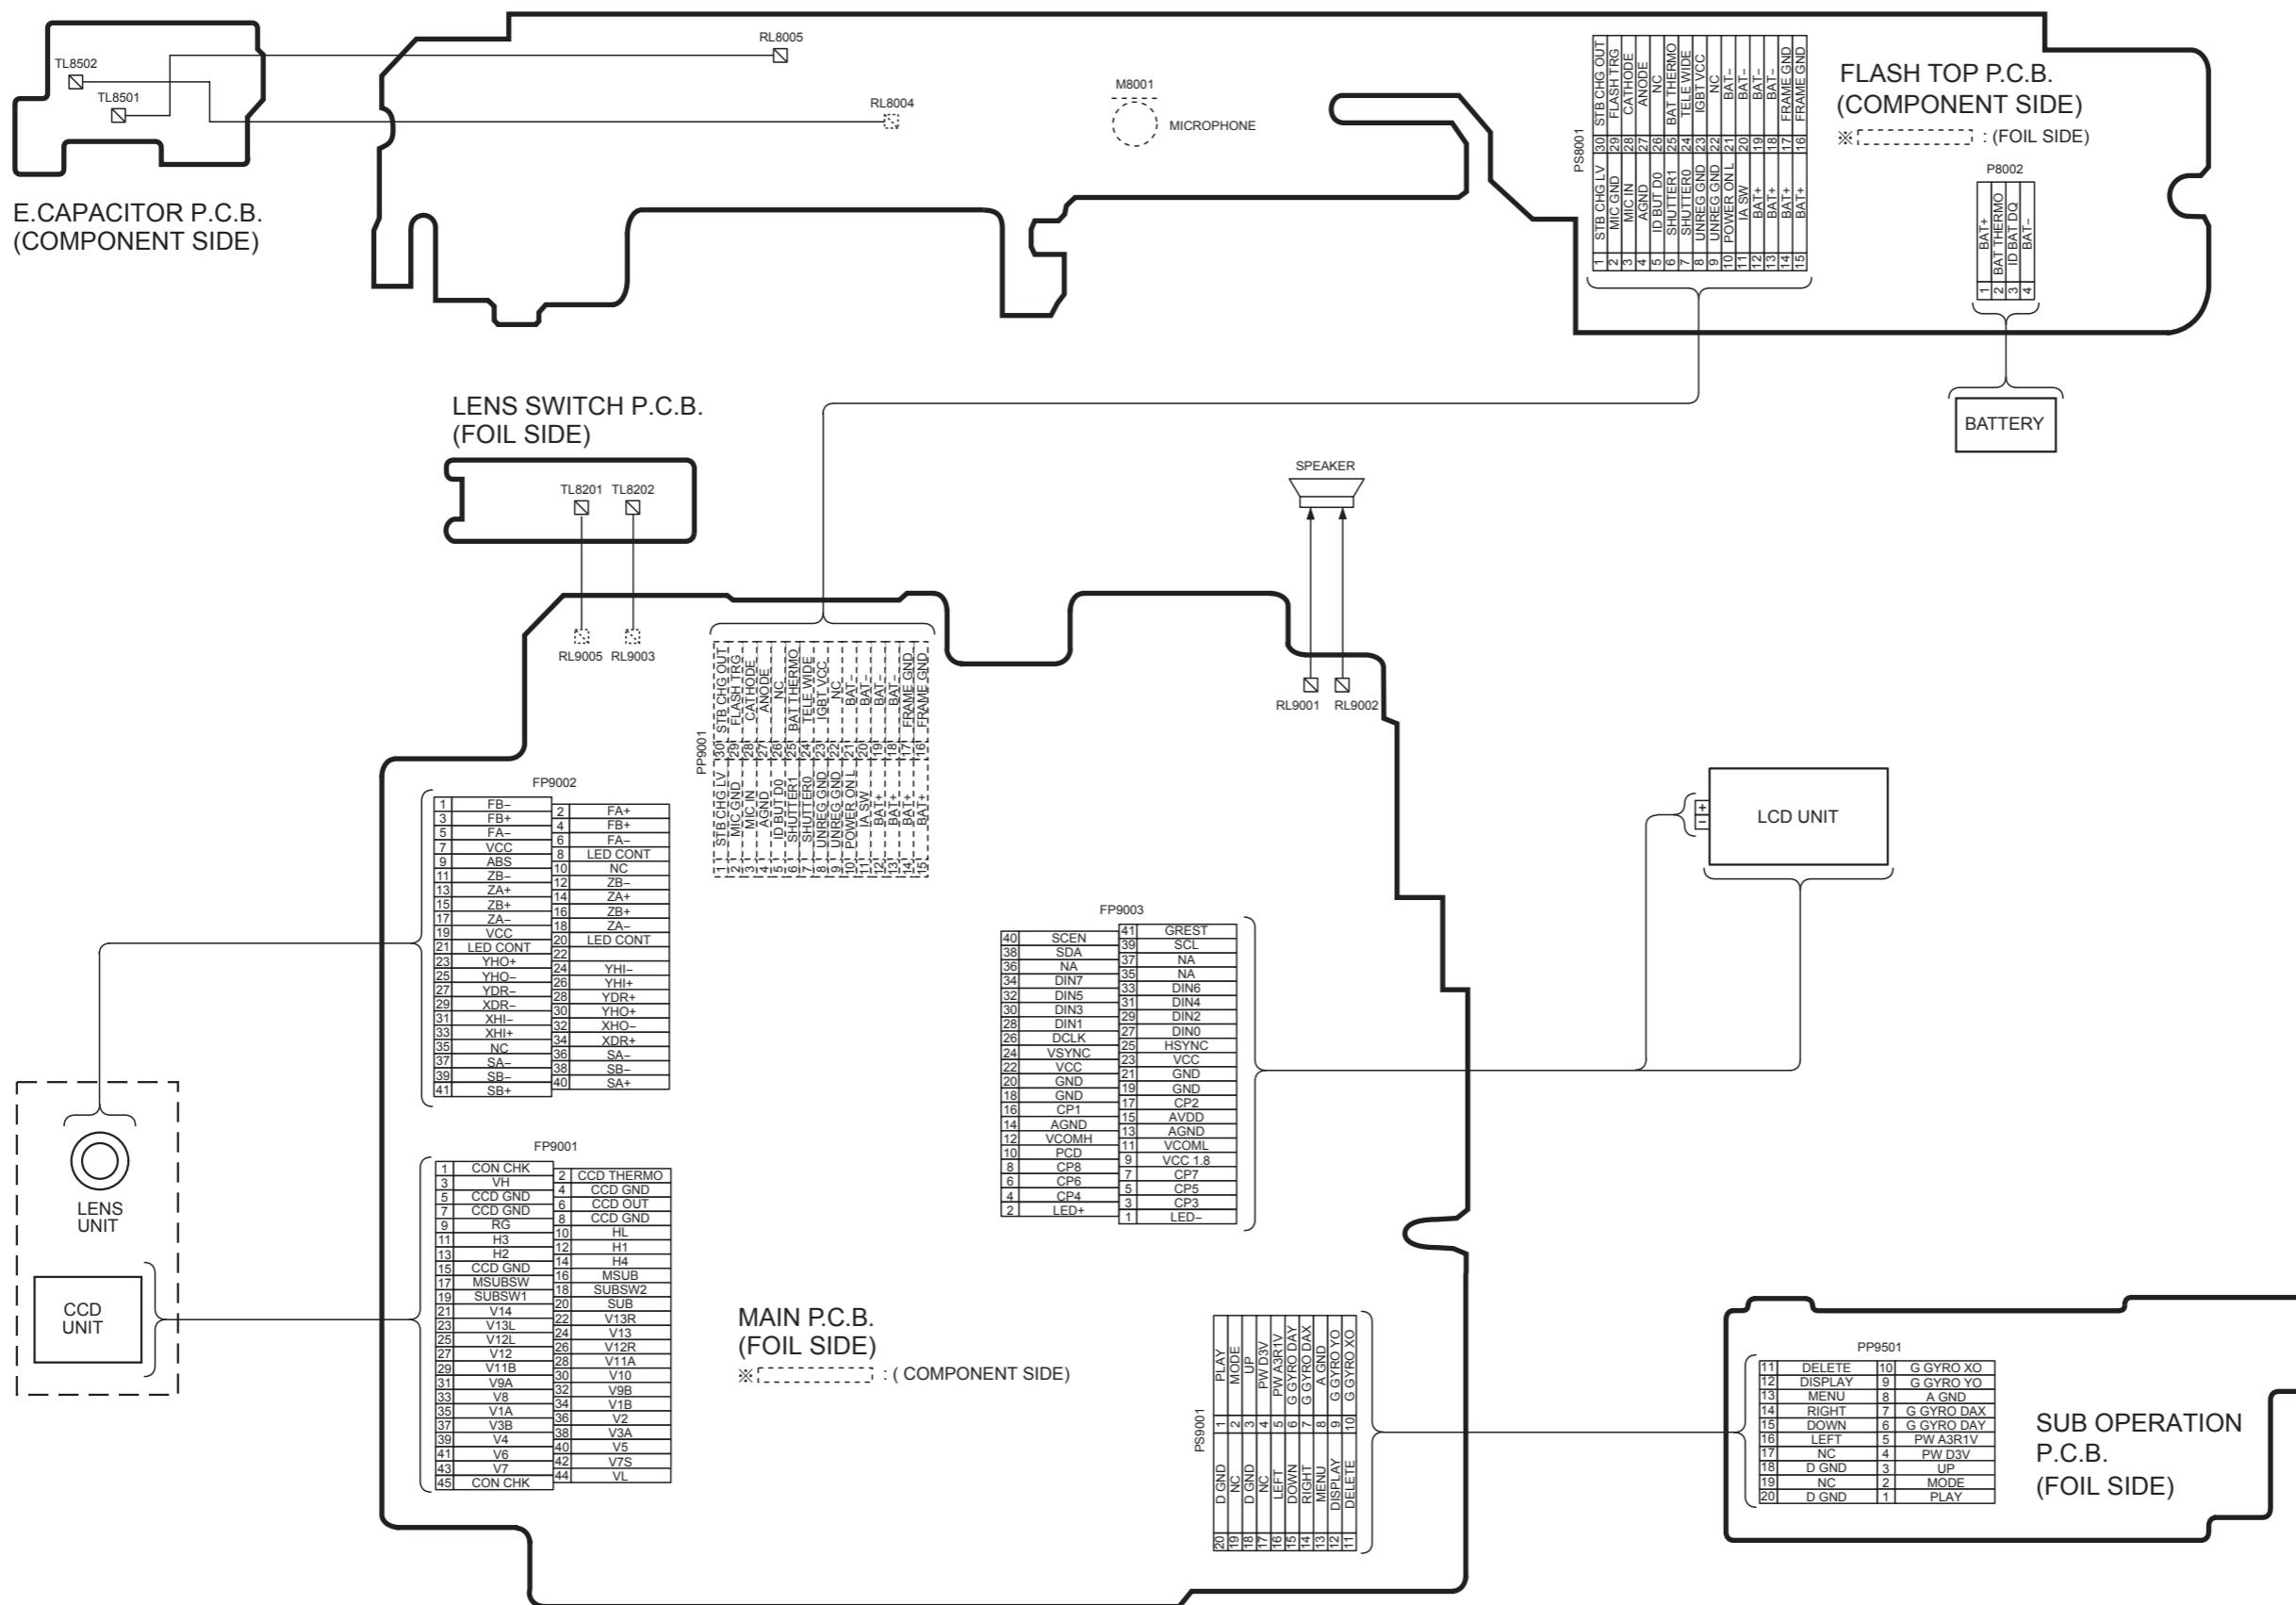


S4.2. Flash Top Schematic Diagram / S4.3. Lens Switch Schematic Diagram

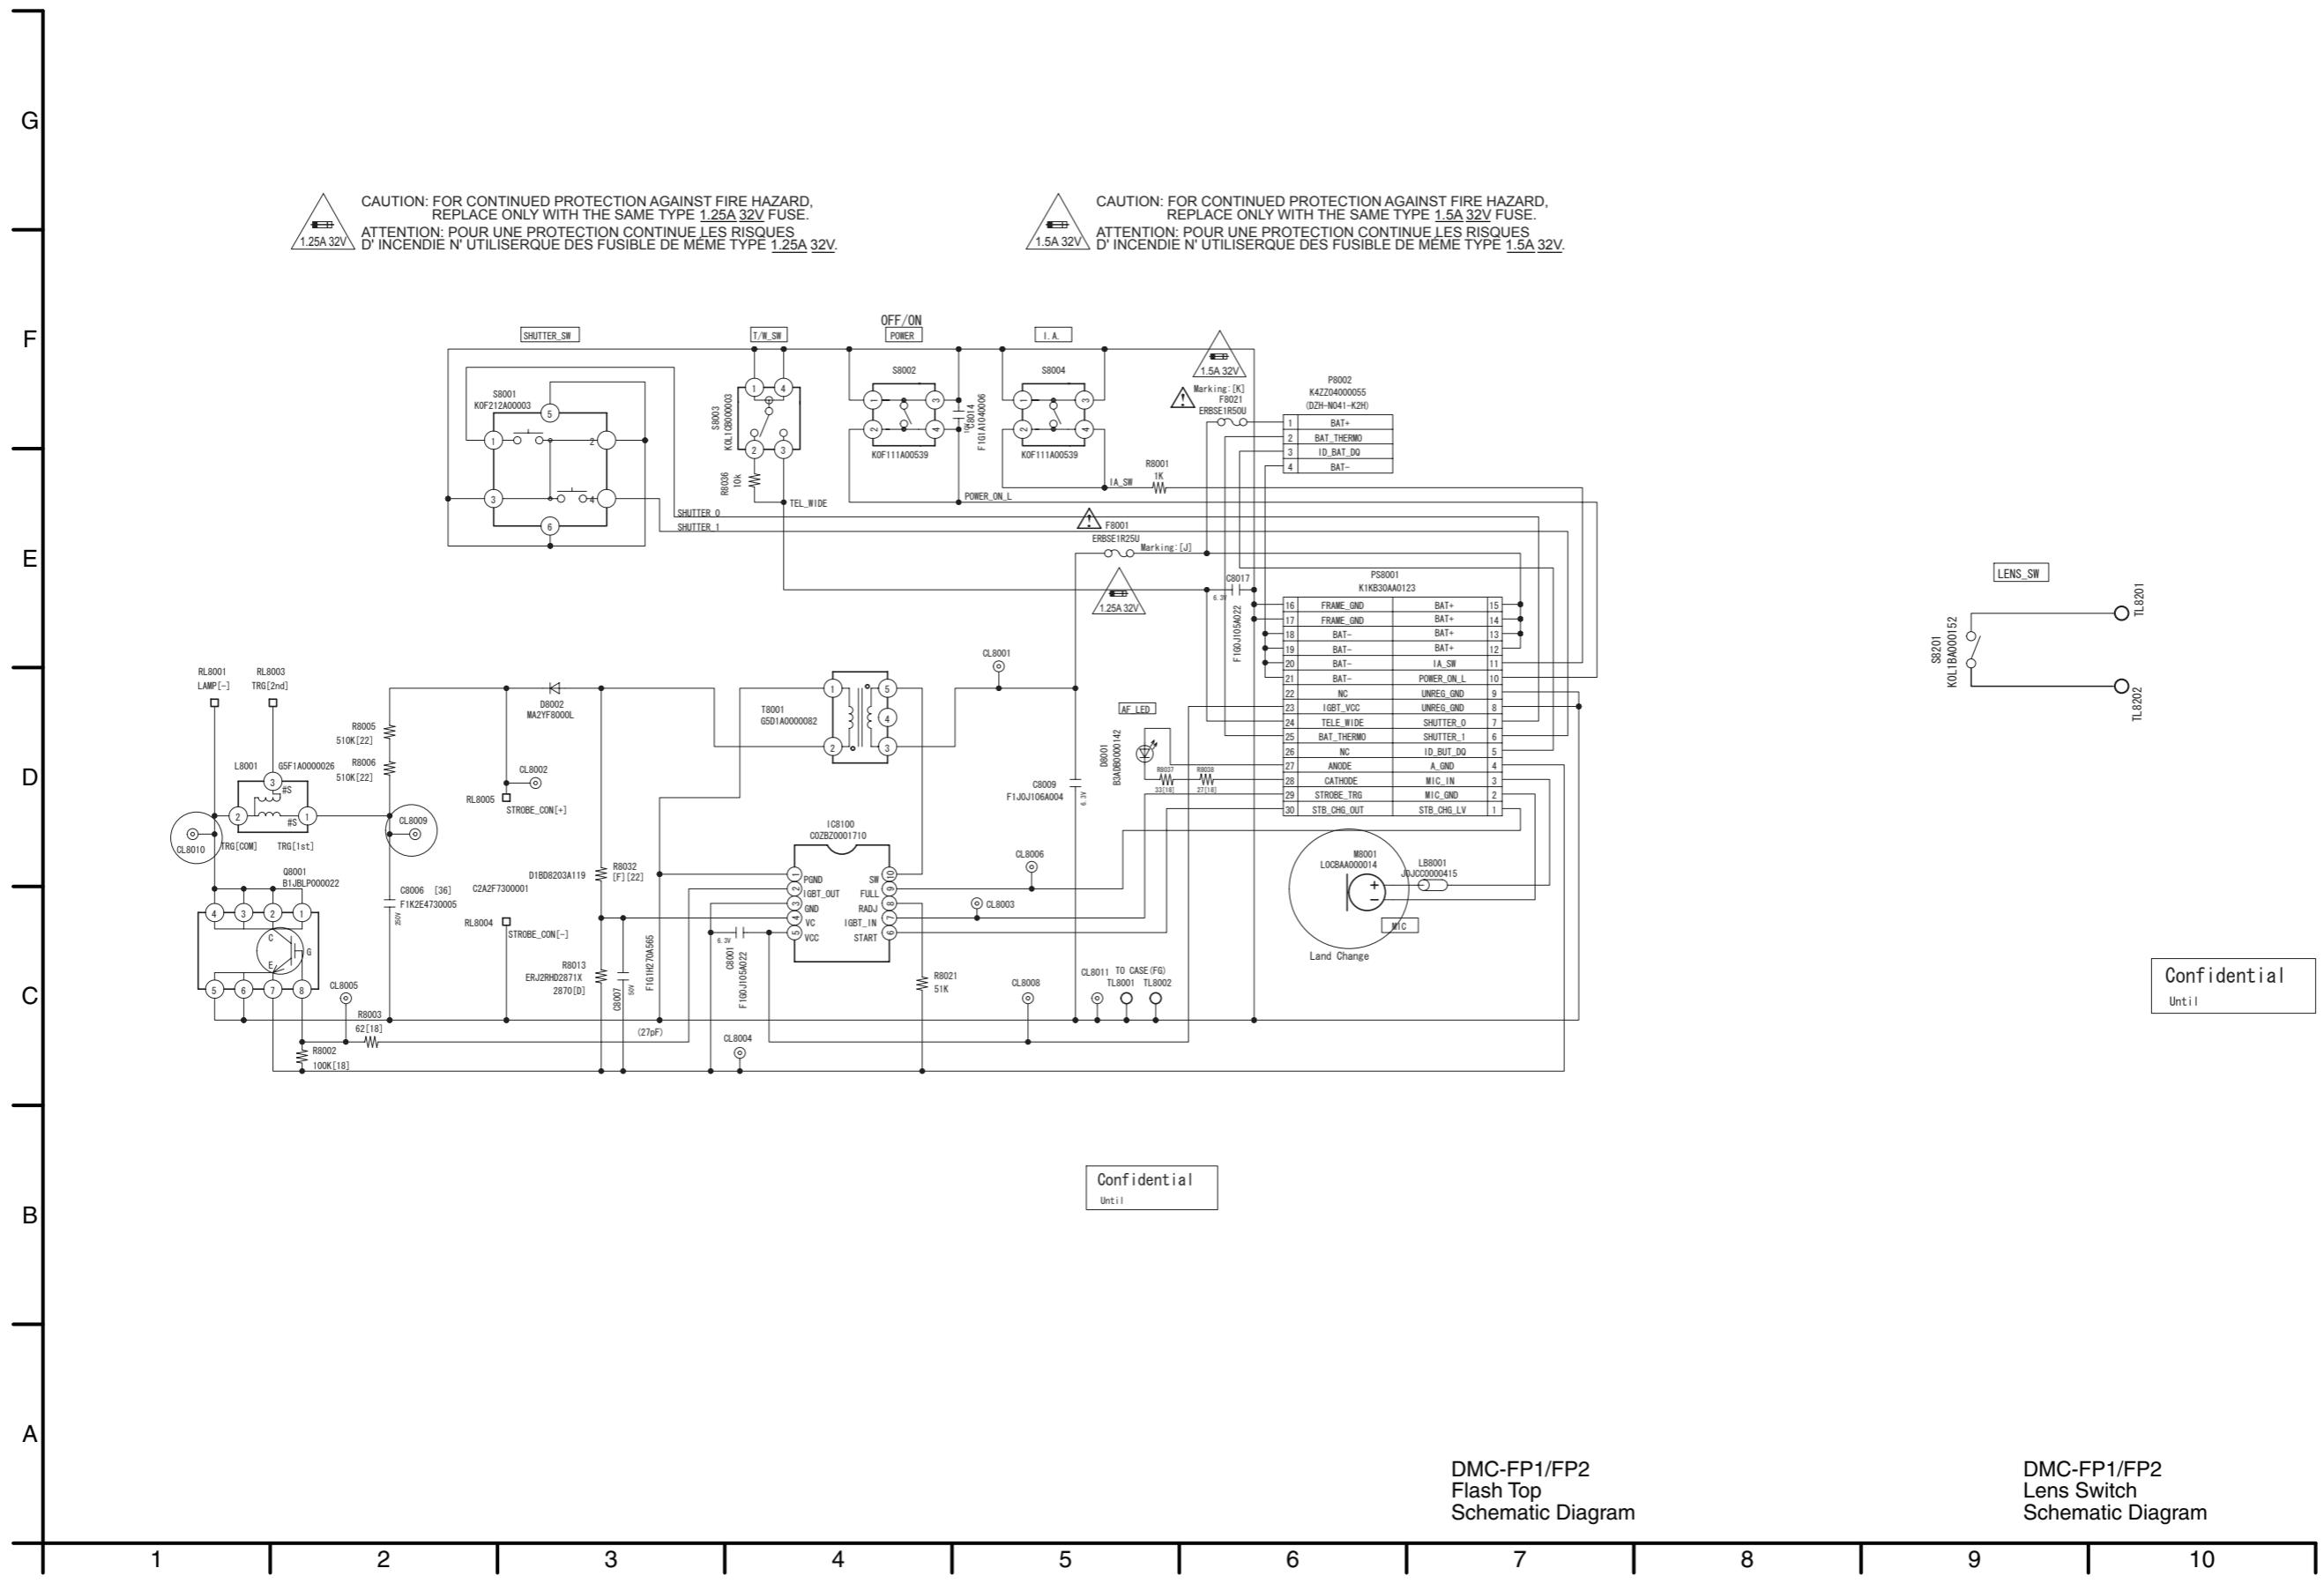

S5. Print Circuit Board

S5.1. Flash Top P.C.B. / S5.2. Lens Switch P.C.B.

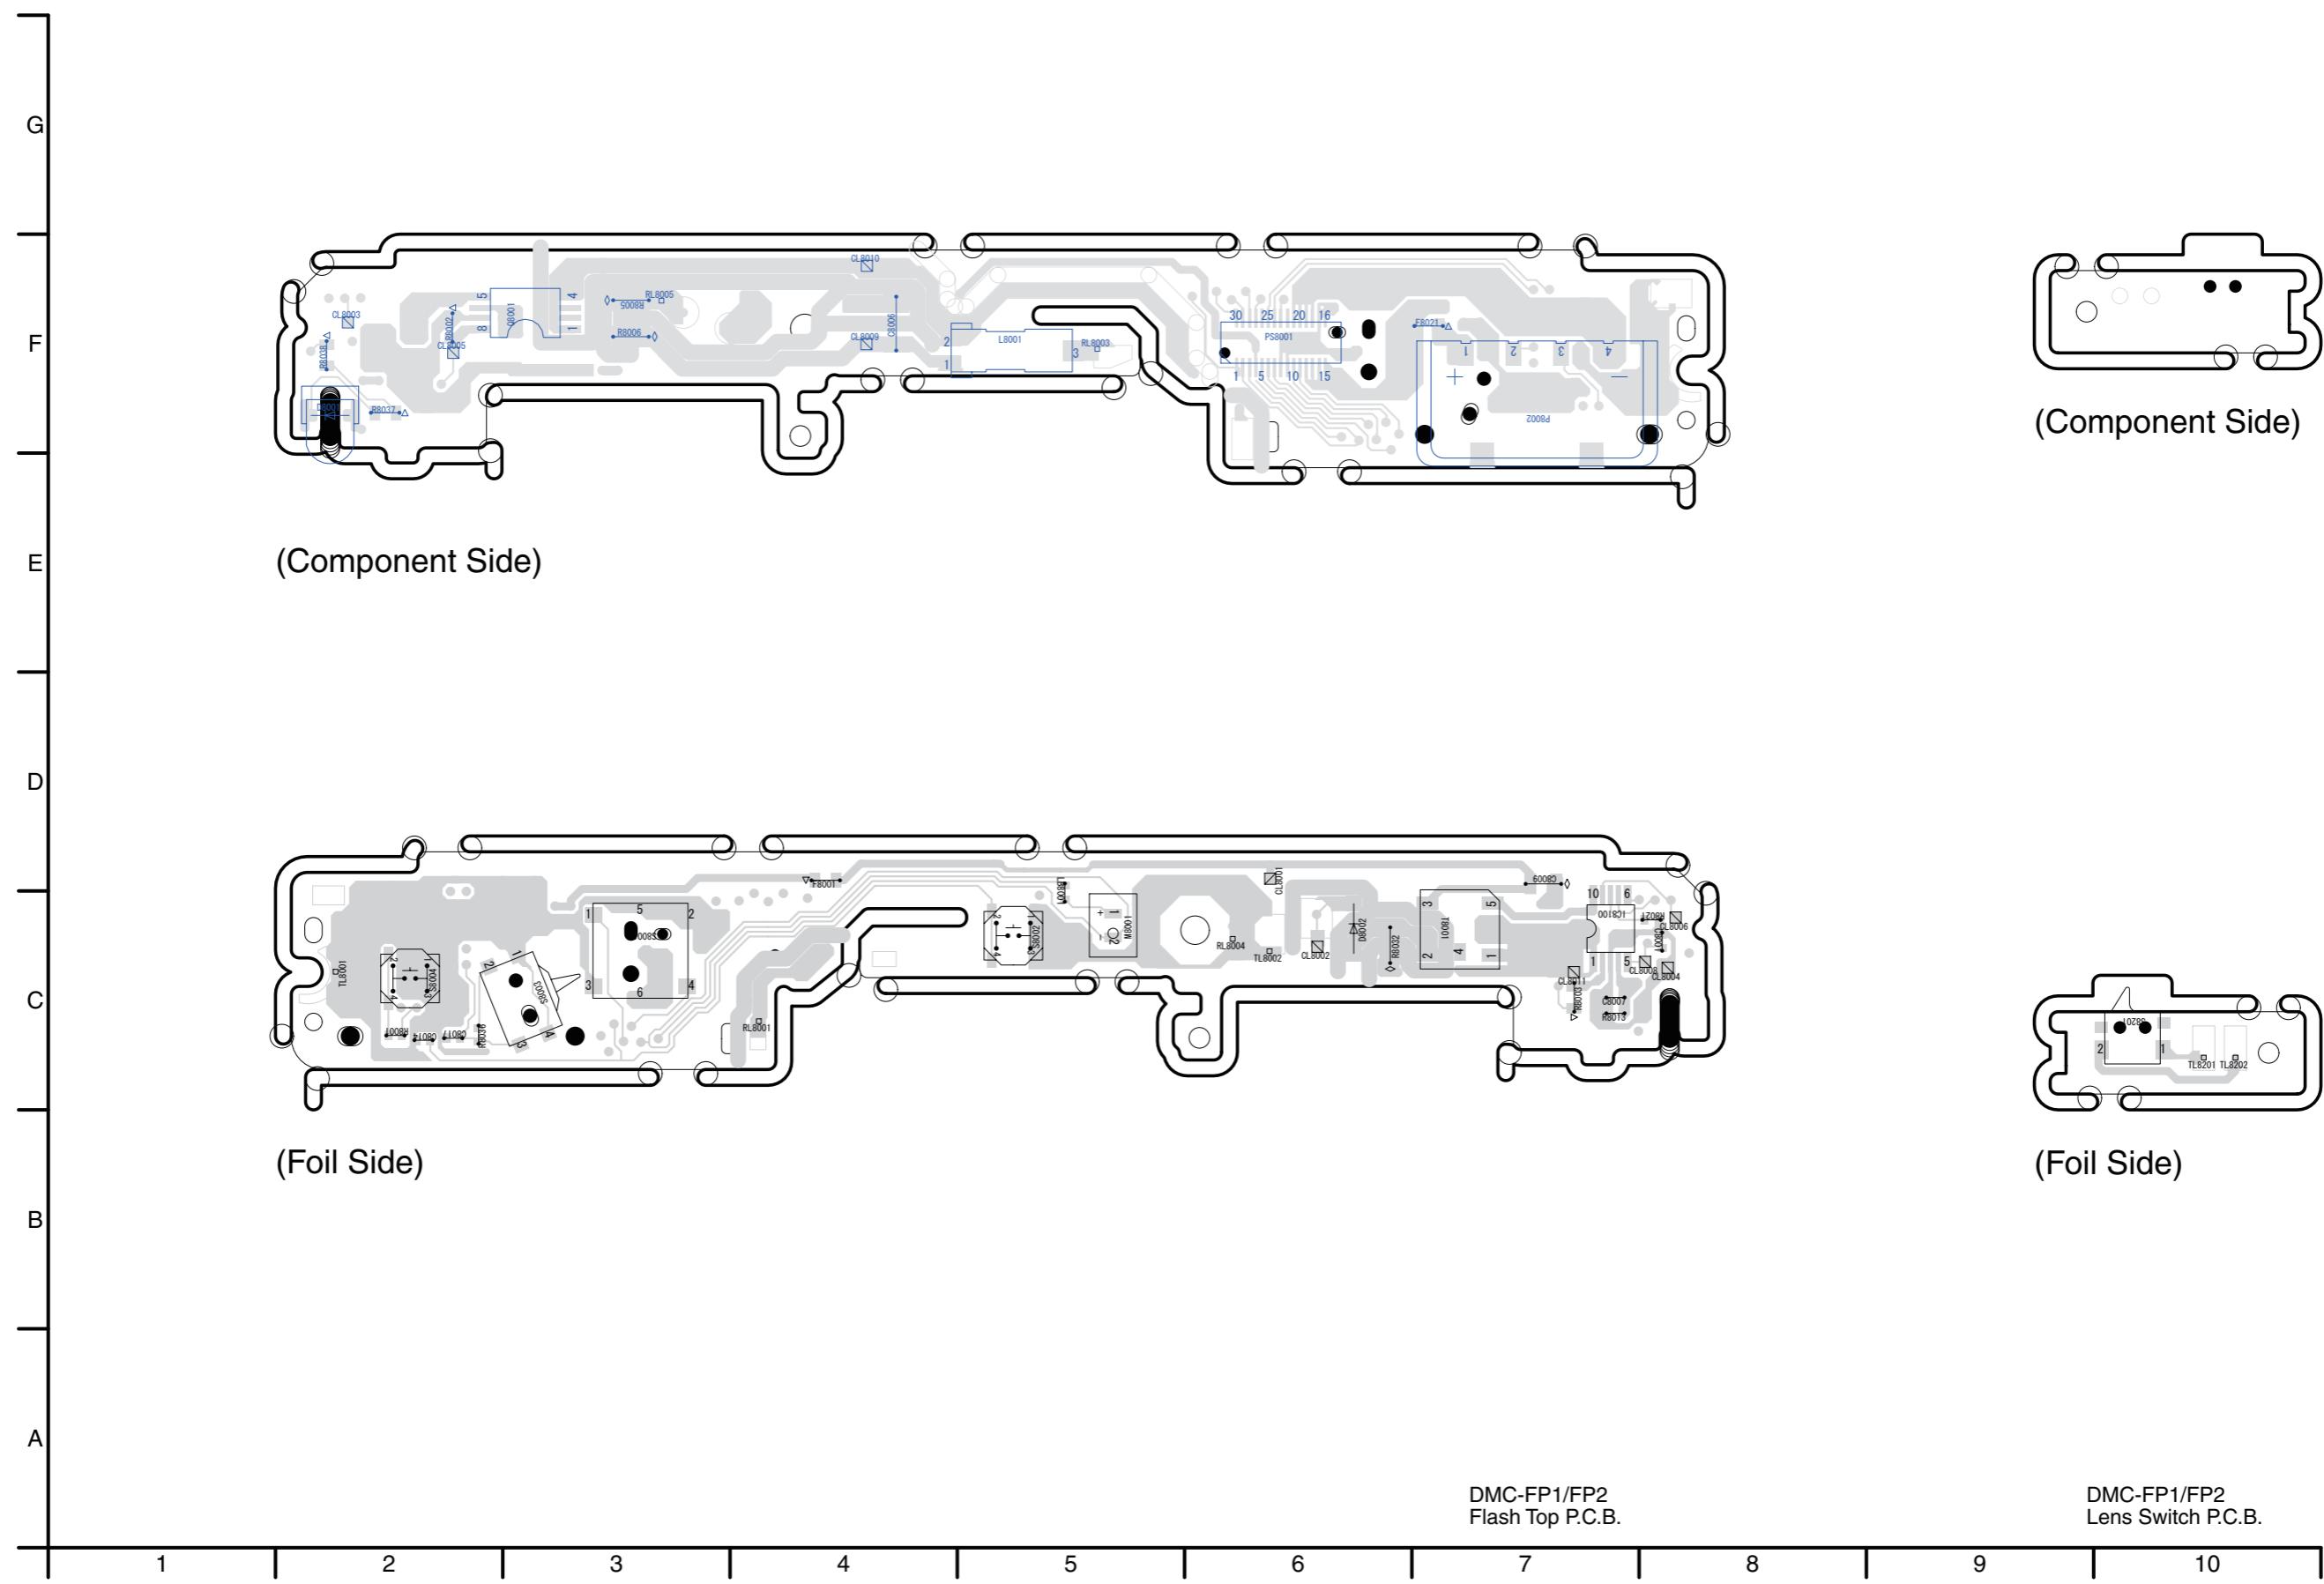

S6. Replacement Parts List

Note:

1. * Be sure to make your orders of replacement parts according to this list.
2. **IMPORTANT SAFETY NOTICE**
Components identified with the mark  have the special characteristics for safety.
When replacing any of these components, use only the same type.
3. Unless otherwise specified,
All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICRO-FARADS (uf), P=uuF.
4. The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.
5. Supply of CD-ROM, in accordance with license protection, is allowable as replacement parts only for customers who accidentally damaged or lost their own.

E.S.D. standards for Electrostatically Sensitive Devices, refer to PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES section.

Definition of Parts supplier:

1. Parts marked with [ENERGY] in the remarks column are supplied from Panasonic Corporation Energy Company.
2. Parts marked with [SPC] in the remarks column are supplied from AVC-CSC-SPC. Others are supplied from PAVCSG.

DMC-FP1EG-S

DMC-FP1EG-S

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1	VEP50054A	LENS SWITCH P.C.B.	1	(RTL)	49	VYK3S09	FRONT CASE UNIT	1	1PU-G,1GK-G,1GN-G, 1GD-G
2	VEP56095B	MAIN P.C.B.	1	(DMC-FP1) (RTL) E.S.D.	49	VYK3S04	FRONT CASE UNIT	1	1GC-R,1PC-R,2EG-R,2EP-R, 2EF-R,2EB-R,2EE-R,2PC-R, 2PU-R
2	VEP56095C	MAIN P.C.B.	1	(DMC-FP2) (RTL) E.S.D.	49	VYK3S05	FRONT CASE UNIT	1	1PC-H,2PC-H
3	VEK0Q26	FLASH TOP P.C.B.	1	(RTL) E.S.D.	49	VYK3S10	FRONT CASE UNIT	1	(-PA)
4	VEP58104A	E. CAPACITOR P.C.B.	1	(RTL)	49-1	VGL1328	AF PANEL LIGHT	1	
5	VEP59074A	SUB OPERATION P.C.B.	1	(RTL) E.S.D.	50	VYK3S11	REAR CASE UNIT	1	(DMC-FP1)
6	F2A2F730001	E.CAPACITOR	1	(C8503)	50	VYK3S12	REAR CASE UNIT	1	(DMC-FP2)
7	LOAA01A00048	SPEAKER	1		50-1	VGU0F81	CURSOR BUTTON	1	
8	ML-421S/DN	BUTTON BATTERY	1	[ENERGY] (B9101)	52	VVF3289	LENS COVER UNIT	1	(-S)
11	VEK0P98	FLASH	1		52	VVF3290	LENS COVER UNIT	1	(-K)
12	VGK3621	SIDE ORNAMENT L-1	1		52	VVF3291	LENS COVER UNIT	1	(-R)
13	VGK3622	SIDE ORNAMENT R	1		52	VVF3292	LENS COVER UNIT	1	(-H)
14	VGK3625	SIDE ORNAMENT L-2	1		52	VVF3293	LENS COVER UNIT	1	(-D)
15	VGQ0L53	DPR SHEET	1		52	VVF3294	LENS COVER UNIT	1	(-A)
16	VKF4658	JACK DOOR	1		52	VVF3295	LENS COVER UNIT	1	(-P)
17	VKH0452	STRAP HOLDER	1		52	VVF3297	LENS COVER UNIT	1	(-PA)
18	VMS7864	JACK DOOR SHAFT	1		52	VVF3296	LENS COVER UNIT	1	(-G)
19	VWJ2146	SW WIRE P	1		52-1	VMA0X10	LENS COVER SLIDE ANGLE	1	
20	VWJ2147	SW WIRE N	1		52-2	VMP9605	LENS COVER ANGLE	1	
21	L5E2ZDXM00001	LCD UNIT	1		52-3	VMB4355	LENS COVER SPRING	1	
22	VGQ0M53	LCD SHEET D	1		100	VXW1123	LENS UNIT (W/CCD)	1	(DMC-FP1)
23	VMP9600	FRAME PLATE	1		100	VXW1113	LENS UNIT (W/CCD)	1	(DMC-FP2)
24	VMX3810	PCB SPACER	1		B1	VHD1803	SCREW	1	(-S/R/H/D/A/P/G/PA)
25	VGQ9717	BATTERY LOCK KNOB	1		B1	VHD1896	SCREW	1	(-K)
26	VMB4152	BATTERY LOCK SPRING	1		B2	VHD1803	SCREW	1	(-S/R/H/D/A/P/G/PA)
27	VMB4362	BATTERY OUT SPRING	1		B2	VHD1896	SCREW	1	(-K)
28	VMP9598-2	FRAME	1		B3	VHD1803	SCREW	1	(-S/R/H/D/A/P/G/PA)
29	VMP9602	BATTERY CASE	1		B3	VHD1896	SCREW	1	(-K)
30	VMP9659	EARTH PLATE	1		B4	VHD2081	SCREW	1	
31	VYF3299	BATTERY DOOR UNIT	1	(-S)	B5	VHD2081	SCREW	1	
31	VYF3300	BATTERY DOOR UNIT	1	(-K)	B6	VHD2081	SCREW	1	
31	VYF3303	BATTERY DOOR UNIT	1	(-D)	B7	VHD2081	SCREW	1	
31	VYF3304	BATTERY DOOR UNIT	1	(-A)	B8	VHD2081	SCREW	1	
31	VYF3305	BATTERY DOOR UNIT	1	(-P)	B9	VHD2201	SCREW	1	
31	VYF3301	BATTERY DOOR UNIT	1	(-R)	B10	VHD2210	SCREW	1	
31	VYF3302	BATTERY DOOR UNIT	1	(-H)	B11	VHD2081	SCREW	1	
31	VYF3306	BATTERY DOOR UNIT	1	(-G)	B12	XQN16+BJ45FN	SCREW	1	
31	VYF3307	BATTERY DOOR UNIT	1	(-PA)	B13	XQN16+BJ45FN	SCREW	1	
31-1	VMB4143	BATTERY DOOR SPRING	1		B14	VHD1998	SCREW	1	
31-2	VMS7863	BATTERY DOOR SHAFT	1		B15	XQN14+BJ85FN	SCREW	1	
32	VMB4297	EARTH SPRING	1	(ET8503)	B16	VHD2198	SCREW	1	
33	VMP9599	CONDENSER HOLDER	1		B17	VHD2198	SCREW	1	
34	VMP9604	TOP PLATE L	1		B18	VHD2198	SCREW	1	
35	VMT1968	MIC DAMPER	1		B19	VHD2198	SCREW	1	
36	VYK3R88	TOP CASE UNIT	1	(DMC-FP1)					
36	VYK3R90	TOP CASE UNIT	1	(DMC-FP2)					
36-1	VGU0F78	POWER BUTTON	1						
36-2	VGU0F79	IA BUTTON	1						
49	VYK3S02	FRONT CASE UNIT	1	1EG-S,1EP-S,1EE-S, 1PU-S,1PR-S,1GC-S,1GH-S, 1GF-S,1GT-S,1GK-S,1GN-S, 2EG-S,2EP-S,2EE-S,2PU-S					
49	VYK3S03	FRONT CASE UNIT	1	1EG-K,1EP-K,1EF-K,1EB-K, 1EE-K,1PC-K,1PU-K,1PR-K, 1GC-K,1GH-K,1GF-K,1GT-K, 1GK-K,1GN-K,1GD-K, 2EG-K,2EP-K,2EF-K,2EB-K, 2EE-K,2PU-K,2PR-K					
49	VYK3S06	FRONT CASE UNIT	1	1EG-D,1EP-D,1EF-D,1EB-D, 1EE-D,1GK-D					
49	VYK3S07	FRONT CASE UNIT	1	1EG-A,1EP-A,1EF-A,1EB-A, 1EE-A,1PU-A,1GH-A, 1GF-A,1GT-A,1GK-A,1GN-A, 2EG-A,2EB-A,2PU-A					
49	VYK3S08	FRONT CASE UNIT	1	1EG-P,1EP-P,1EF-P,1EB-P, 1PU-P,1PR-P,1GC-P, 1GH-P,1GF-P,1GT-P,1GK-P, 1GN-P					
49	VYK3Z69	FRONT CASE UNIT	1	1P-S					
49	VYK3Z70	FRONT CASE UNIT	1	1P-K					
49	VYK3Z71	FRONT CASE UNIT	1	1P-R,2P-R					
49	VYK3Z72	FRONT CASE UNIT	1	1P-H,2P-H					
49	VYK3Z73	FRONT CASE UNIT	1	1P-D,2P-D					
49	VYK3Z74	FRONT CASE UNIT	1	1P-A,2P-A					
49	VYK3Z75	FRONT CASE UNIT	1	1P-P					
49	VYK3Z76	FRONT CASE UNIT	1	1P-G,2P-G					


DMC-FP1EG-S

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
300	VPF1317	CAMERA BAG	1	GC [SPC]
300	VPF1372	CAMERA BAG	1	EXCEPT P,PC,PU,GC
▲ 301	DE-A76DA	BATTERY CHARGER	1	GC [SPC]
▲ 301	DE-A76AA/SX	BATTERY CHARGER	1	EG,EP,EF,EB,EE,GH,GF,GK, GN,GD
▲ 301	DE-A76CA/SX	BATTERY CHARGER	1	PR
▲ 301	DE-A76BA/SX	BATTERY CHARGER	1	GT
▲ 302	----	BATTERY	1	EXCEPT P,PC,PU
304	K1HA08AD0002	USB CABLE W/PLUG	1	EXCEPT P,PC,PU
305	K1HA08CD0028	AV CABLE W/PLUG	1	EXCEPT P,PC,PU
306	VFC4297-B	HAND STRAP	1	EXCEPT P,PC,PU
308	VGQ0J54	BATTERY PROTECTION CASE	1	EXCEPT P,PC,PU
310	VPF1230	BAG, POLYETHYLENE	1	GC [SPC]
310	VPF1378	BAG, POLYETHYLENE	1	EXCEPT P,PC,PU,GC
▲ 311	VFF0588-S	CD-ROM	1	PR [SPC] See "Notes" (SOFTWARE/INSTRUCTION BOOK)
▲ 311	VFF0619-S	CD-ROM	1	GC [SPC] See "Notes" (SOFTWARE/INSTRUCTION BOOK)
▲ 311	VFF0589-S	CD-ROM	1	EG,EP,EF,EB (SOFTWARE/INSTRUCTION BOOK) [SPC] See "Notes"
▲ 311	VFF0590-S	CD-ROM	1	EE [SPC] See "Notes" (SOFTWARE/INSTRUCTION BOOK)
▲ 311	VFF0591-S	CD-ROM	1	GH,GF,GT,GN,GD (SOFTWARE/INSTRUCTION BOOK) [SPC] See "Notes"
▲ 311	VFF0592-S	CD-ROM	1	GK [SPC] See "Notes" (SOFTWARE/INSTRUCTION BOOK)
▲ 312	VQT2K19	SIMPLIFIED O/I	1	EG (GERMAN/FRENCH)
▲ 312	VQT2K20	SIMPLIFIED O/I	1	EG (ITALIAN/DUTCH)
▲ 312	VQT2K21	SIMPLIFIED O/I	1	EG (SPANISH/PORTUGUESE)
▲ 312	VQT2K22	SIMPLIFIED O/I	1	EG (TURKISH)
▲ 312	VQT2K23	SIMPLIFIED O/I	1	EP (SWEDISH/DANISH)
▲ 312	VQT2K24	SIMPLIFIED O/I	1	EP (POLISH/CZECH)
▲ 312	VQT2K25	SIMPLIFIED O/I	1	EP (HUNGARIAN/FINNISH)
▲ 312	VQT2K26	SIMPLIFIED O/I	1	EF (FRENCH)
▲ 312	VQT2K27	SIMPLIFIED O/I	1	EB (ENGLISH)
▲ 312	VQT2K28	SIMPLIFIED O/I	1	EE (RUSSIAN/UKRAINIAN)
▲ 312	VQT2K18	SIMPLIFIED O/I	1	PR (SPANISH)
▲ 312	VQT2K29	SIMPLIFIED O/I	1	GC,GH,GF (ENGLISH) CHINESE(TRADITIONAL))
▲ 312	VQT2K30	SIMPLIFIED O/I	1	GC,GF (ARABIC/PERSIAN)
▲ 312	VQT2K31	SIMPLIFIED O/I	1	GT (CHINESE(TRADITIONAL))
▲ 312	VQT2K32	SIMPLIFIED O/I	1	GK (CHINESE(SIMPLIFIED))
▲ 312	VQT2K33	SIMPLIFIED O/I	1	GN (ENGLISH)
▲ 312	VQT2K34	SIMPLIFIED O/I	1	GD (KOREAN)
313	VQT2K39	O/I SOFTWARE	1	EG (GERMAN/FRENCH/ITALIAN/ DUTCH/SPANISH/PORTUGUESE/ TURKISH)
313	VQT2K40	O/I SOFTWARE	1	EP (FINNISH/SWEDISH/DANISH/ POLISH/CZECH/HUNGARIAN)
313	VQT2K41	O/I SOFTWARE	1	EF (FRENCH)
313	VQT2K42	O/I SOFTWARE	1	EB,GN (ENGLISH)
313	VQT2K43	O/I SOFTWARE	1	EE (RUSSIAN/UKRAINIAN)
313	VQT2K38	O/I SOFTWARE	1	PR (SPANISH/PORTUGUESE)


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
313	VQT2K44	O/I SOFTWARE (ENGLISH/ CHINESE(TRADITIONAL)/ ARABIC/PERSIAN)	1	GC,GH,GF
313	VQT2K45	O/I SOFTWARE (CHINESE(TRADITIONAL))	1	GT
313	VQT2K46	O/I SOFTWARE (CHINESE(SIMPLIFIED))	1	GK
313	VQT2K47	O/I SOFTWARE(KOREAN)	1	GD
314	VPK4072	PACKING CASE	1	1EG-S,1EP-S,1EE-S,1PR-S, 1GH-S,1GT-S,1GN-S
314	VPK4078	PACKING CASE	1	1EG-K,1EP-K,1EF-K,1EB-K, 1EE-K,1PR-K,1GH-K,1GT-K, 1GN-K,1GD-K
314	VPK4084	PACKING CASE	1	1EG-D,1EP-D,1EF-D,1EB-D, 1EE-D
314	VPK4089	PACKING CASE	1	1EG-A,1EP-A,1EF-A,1EB-A, 1EE-A,1GH-A,1GT-A,1GN-A
314	VPK4095	PACKING CASE	1	1EG-P,1EP-P,1EF-P,1EB-P, 1PR-P,1GH-P,1GT-P,1GN-P
314	VPK4073	PACKING CASE	1	1GF-S
314	VPK4079	PACKING CASE	1	1GF-K
314	VPK4090	PACKING CASE	1	1GF-A
314	VPK4096	PACKING CASE	1	1GF-P
314	VPK4074	PACKING CASE	1	1GK-S
314	VPK4080	PACKING CASE	1	1GK-K
314	VPK4085	PACKING CASE	1	1GK-D
314	VPK4091	PACKING CASE	1	1GK-A
314	VPK4097	PACKING CASE	1	1GK-P
314	VPK4102	PACKING CASE	1	1GK-G
314	VPK4101	PACKING CASE	1	1GN-G,1GD-G
314	VPK4104	PACKING CASE	1	2EG-S,2EP-S,2EE-S
314	VPK4106	PACKING CASE	1	2EG-K,2EP-K,2EF-K,2EB-K, 2EE-K,2PR-K
314	VPK4109	PACKING CASE	1	2EG-R,2EP-R,2EF-R,2EB-R, 2EE-R
314	VPK4114	PACKING CASE	1	2EG-A,2EB-A
314	VPK4116	PACKING CASE	1	2EG-PA,2EF-PA,2EB-PA, 2PR-PA
314	VPK4394	PACKING CASE	1	1GC-S [SPC]
314	VPK4395	PACKING CASE	1	1GC-K [SPC]
314	VPK4477	PACKING CASE	1	1GC-P [SPC]
314	VPK4476	PACKING CASE	1	1GC-R [SPC]
315	VPN7015	CUSHION	1	GC [SPC]
315	VPN6982	CUSHION	1	EXCEPT P,PC,PU,GC
318	VQL2C68-A	OPERATING LABEL	1	GT
▲ 319	K2CT39A00002	AC CORD W/PLUG	1	EB,GC,GH
▲ 320	K2CQ29A00002	AC CORD W/PLUG	1	EG,EP,EF,EE,GF
▲ 320	K2CR29A00001	AC CORD W/PLUG	1	GD
▲ 321	K2CJ29A00002	AC CORD W/PLUG	1	GN
▲ 322	K2CA29A00021	AC CORD W/PLUG	1	GT
▲ 322	K2CA2YY00070	AC CORD W/PLUG	1	GK
▲ 324	K2CJ29A00003	AC CORD W/PLUG	1	PR

S7. Exploded View

S7.1. Frame and Casing Section

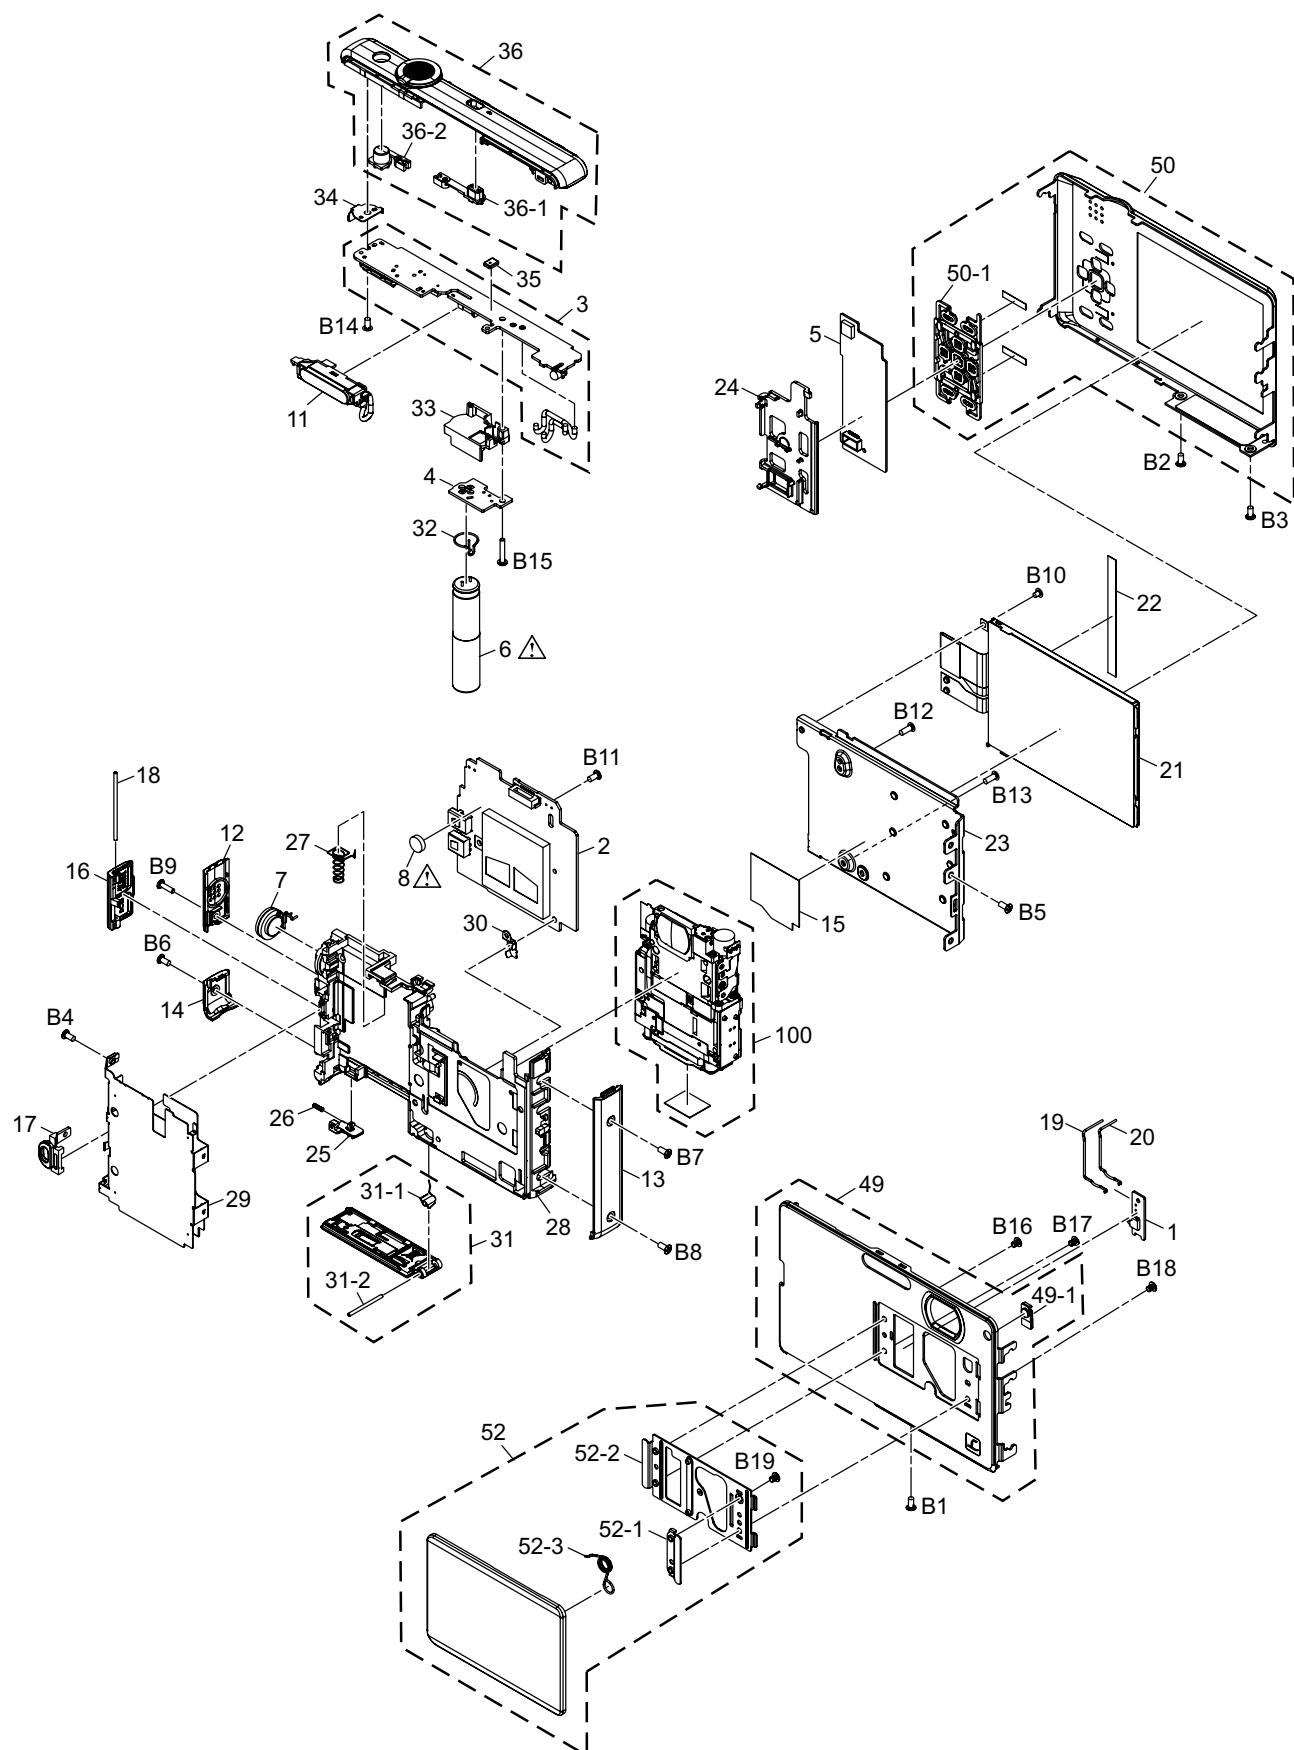

S7.2. Packing Parts and Accessories Section (1)

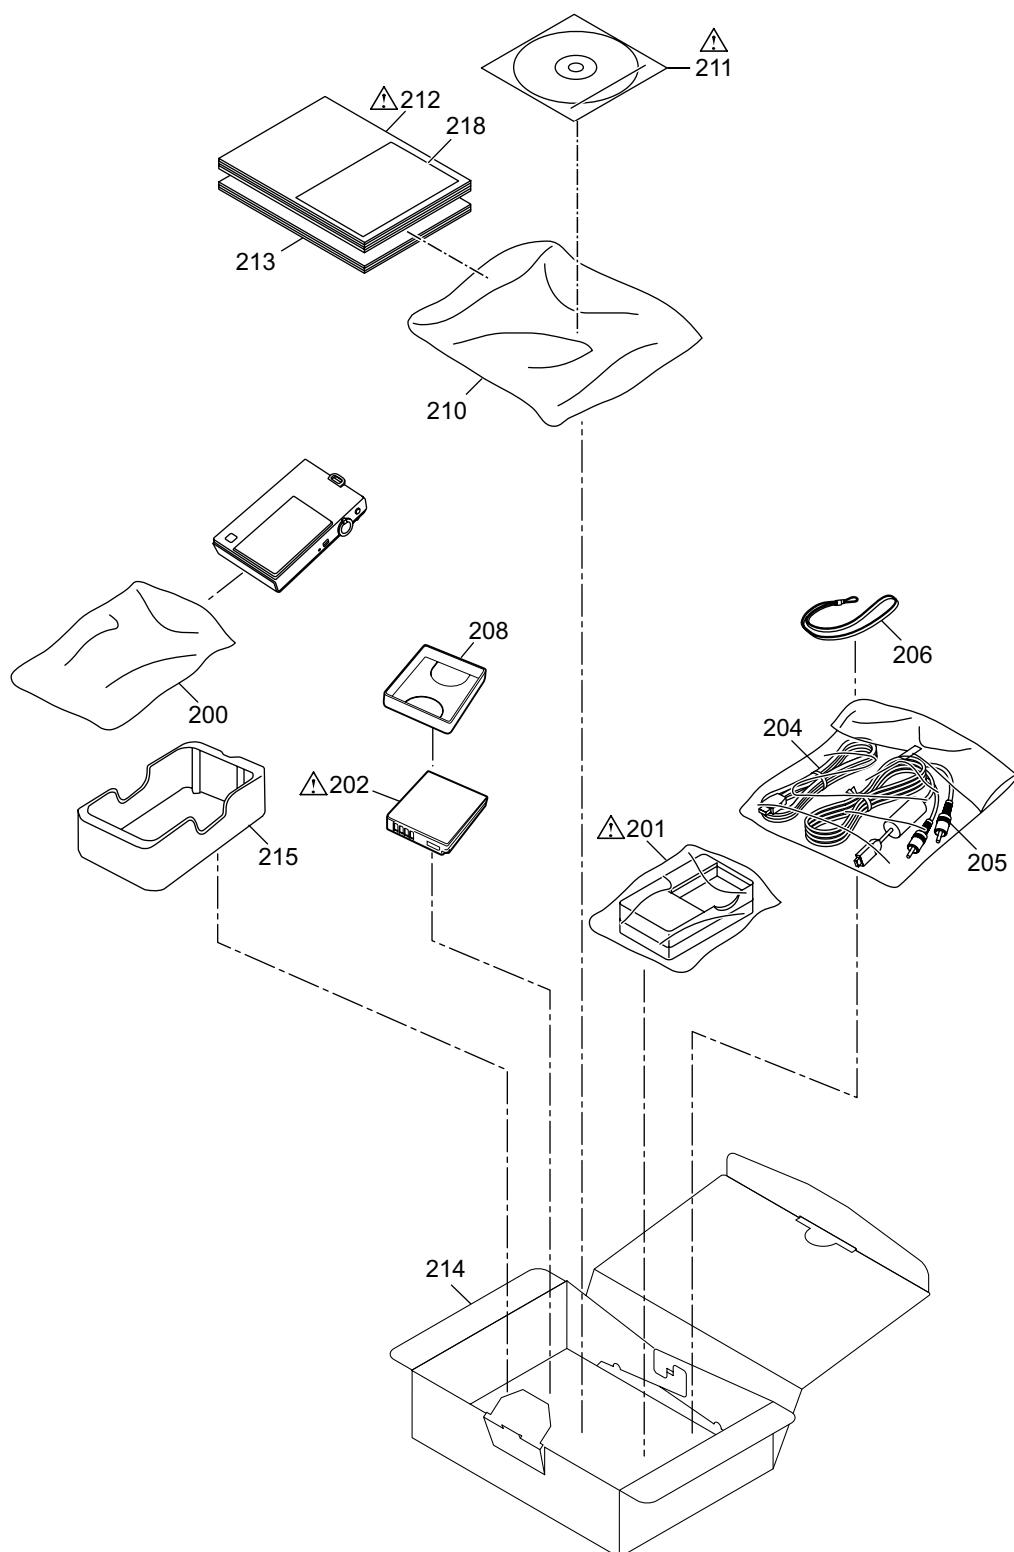

S7.3. Packing Parts and Accessories Section (2)

