

Service Manual

Speaker System

Model No. **SB-MAX8000GS**
SB-MAX8000PU

Product Color : (K)... Black Type

Simplified

**Note: Please use this manual together with service manual
Model No.[SB-MAX8000GN, Order No. PSG1502012CE]**

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

TABLE OF CONTENTS

	PAGE		PAGE
1 Replacement Parts List-----	1	1.2. SB-MAX8000PU -----	2
1.1. SB-MAX8000GS-----	2	1.2.1. Front Speakers-----	2
1.1.1. Front Speakers-----	2	1.2.2. Accessories and Packing Materials -----	2
1.1.2. Accessories and Packing Materials -----	2		

1 Replacement Parts List

Important Safety Notice

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Note:

- When replacing any of these components, be sure to use only manufacturer's specified parts shown in the replacement part list.
- The parenthesized indications on the Remarks column specify the destination & product color (Refer to the cover page for the information).

Panasonic®

© Panasonic Corporation 2015. All rights reserved.
Unauthorized copying and distribution is a violation of law.

1.1. SB-MAX8000GS

1.1.1. Front Speakers

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
			CABINET & CHASSIS		
1	REE1926	LIGHTING WIRE ASS'Y		1	
2	RGL0818-Q	PCB COVER		1	
3	RGN3507-K	SPEC LABEL		1	
4	RMQ2070	EVA PACKING		1	
5	RMQ2123	EVA PACKING		4	
6	RMQ2427	EVA WOOFER 16 CM		4	
7	RYP2071-S1	FRONT PANEL ASSY		1	
7-1	RMR2168-K	WOOFER EDGE COVER		2	
7-2	XTB4+12GFJ	SCREW		6	
8	RYQ1493B-K	WOODEN BOX ASSY		1	
9	XTB3+10GFJ	SCREW		2	
10	XTB4+12GFJ	SCREW		8	
11	XTB4+20AFJK	SCREW		22	
		SPEAKERS			
SP1	LOAA06A00113	TWEETER SPEAKER (6CM)		1	
SP2	LOAA16A00066	WOOFER SPEAKER (16CM)		1	
SP3	LOAA16A00066	WOOFER SPEAKER (16CM)		1	
SP4	LOAA38A00012	SUPER WOOFER SPEAKER (38CM)		1	

1.1.2. Accessories and Packing Materials

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
			PACKAGING & ACCESSORIES		
P1	RPG0P41-1	SPEAKER PACKING CASE		1	
P2	RPN2726	SPEAKER POLYFOAM		2	
P3	RPF0643	SPEAKER MIRAMAT BAG		2	

1.2. SB-MAX8000PU

1.2.1. Front Speakers

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
			CABINET & CHASSIS		
1	REE1926	LIGHTING WIRE ASS'Y		1	
2	RGL0818-QJ	PCB COVER		1	
3	RGN3541-K	SPEC LABEL		1	
4	RMQ2070-J	EVA PACKING		1	
5	RMQ2123-J	EVA PACKING		4	
6	RMQ2427-J	EVA WOOFER 16 CM		4	
7	RYP2071-S1J	FRONT PANEL ASSY		1	
7-1	RMR2168-KJ	WOOFER EDGE COVER		2	
7-2	XTB4+12GFJ	SCREW		6	
8	RYQ1493-KJ	WOODEN BOX ASSY		1	
9	XTB3+10GFJ	SCREW		2	
10	XTB4+12GFJ	SCREW		8	
11	XTB4+20AFJK	SCREW		22	
		SPEAKERS			
SP1	LOAA06A00113	TWEETER SPEAKER (6CM)		1	
SP2	LOAA16A00066	WOOFER SPEAKER (16CM)		1	
SP3	LOAA16A00066	WOOFER SPEAKER (16CM)		1	
SP4	LOAA38A00012	SUPER WOOFER SPEAKER (38CM)		1	

1.2.2. Accessories and Packing Materials

Safety	Ref. No.	Part No.	Part Name & Description	Qty	Remarks
			PACKAGING & ACCESSORIES		
P1	RPG0P40-1	SPEAKER PACKING CASE		1	
P2	RPN2726-J	SPEAKER POLYFOAM		2	
P3	RPF0643-J	SPEAKER MIRAMAT BAG		2	

PSG1503