


Service Manual

Colour Television

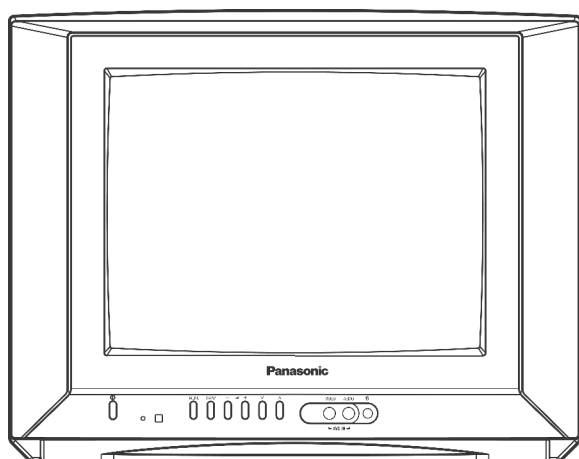

TC-14Z99M

GP31 Chassis

Specifications

Power Source :	AC AUTO 110-240V, 50/60 Hz
Power Consumption :	56W
Aerial Impedance :	75Ω unbalanced Coaxial type
Receiving System :	17 Systems
Receiving Channels :	
VHF	1-11 PAL B (Australia & N.Zealand) 1-12 PAL/SECAM D 1-12 NTSC M JAPAN 2-12 PAL/SECAM B, G 2-13 NTSC M U.S.A.
UHF	21-69 PAL G I/SECAM B, G, K1 28-69 PAL G (Australia) 13-56 PAL D 13-52 NTSC M JAPAN 14-69 NTSC NTSC M U.S.A.
CATV	S1-S41 (Hyper)
Intermediate Frequency :	
Video	38.0 MHz
Sound	31.5 MHz (D, K, K1) 32 MHz (I) 32.5 MHz (B, G) 33.5 MHz (M)

Colour	33.57 MHz (PAL) 33.6 MHz (SECAM) 33.75 MHz (SECAM) 34.42 MHz (NTSC)
--------	--

Video / Terminals :	AV1, 2
RAV In	Video In 1 Vp-p 75Ω Audio In Approx. 400mVrms
Monitor Out	Video Out 1 Vp-p 75Ω Audio Out Approx. 400mVrms

High Voltage :	23.5kV±1.5 at zero beam current
Picture Tube :	37GDC86XTC02 37cm (14 inches) Measured diagonally, 90° deflection

Audio Output :	5W
Dimensions :	Height : 353 mm Width : 447 mm Depth : 370 mm
Mass :	10 kg (Net Wt.)

Specifications are subject to change without notice.
Mass and dimensions shown are approximate.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

	Page		Page
1 Safety Precautions	3	2.7. PAL Colour Output Level Adjustment	7
1.1. General Guide Lines	3	2.8. CRT VRS Adjustment	8
1.2. Leakage Current Cold Check	3	2.9. CRT Cut Off Adjustment	10
1.3. Leakage Current Hot Check (Fig. 1)	3	2.10. Purity and Convergen Adjustment	10
1.4. X-Radiation	3	2.11. White Balance Adjustment	11
1.5. GP31 Chassis Block Diagram	4	3 Conductor Views	12
2 Service Hints	5	4 Schematic Diagram	13
2.1. Service Position for E-Board	5	4.1. A Board	15
2.2. Factory Mode Adjustment	5	4.2. L Board	20
2.3. +B Voltage Adjustment	6	5 Parts Locations	23
2.4. Heater Voltage Confirmation	6	6 Replacement Parts List	24
2.5. RF AGC Adjustment	6	6.1. Replacement Parts List	25
2.6. NTSC Tint Colour Adjustment	6		

1 Safety Precautions

1.1. General Guide Lines

1. It is advisable to insert an isolation transformer in the AC supply before servicing this hot chassis.
2. When servicing, observe the original lead dress, especially the lead dress in the high voltage circuits. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
3. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers, shields and isolation R-C combinations, are properly installed.
4. When the receiver is not to be used for a long period of time, unplug the power cord from the AC cord outlet.
5. Potential, as high as **22~25kV** is present when this receiver is in operation. Operation of the receiver without the rear cover involves the danger of a shock hazard from the receiver power supply. Servicing should not be attempted by anyone who is not thoroughly familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the picture tube to the receiver chassis before handling the tube. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Turn on the receiver's power switch.
Measure the resistance value, with an ohmmeter, between the jumper AC plug and each exposed metallic cabinet part on the receiver, such as screw heads, aerials, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 4 MΩ and 20 MΩ. When the exposed metal does not have a return path to the chassis, the reading must be infinite.

1.3. Leakage Current Hot Check (Fig. 1)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Check a 2 kΩ non-inductive resistor and an AC/DC current meter, in series with each exposed metallic part on the receiver in turn and an earth such as a water pipe.

The current from any point should not exceed 0.7 mA peak AC or 2 mA DC. In the case of a measurement being outside of these limits specified, there is a possibility of a shock hazard and the receiver should be repaired and rechecked before it is returned to the customer.

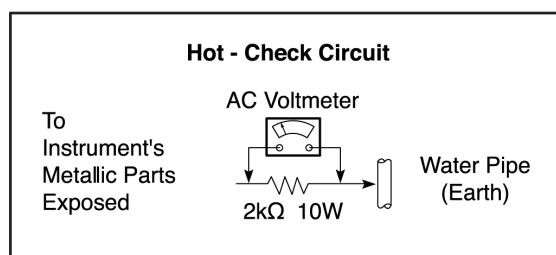


Fig. 1

1.4. X-Radiation


Warning:

The potential sources of X-Radiation in TV set are the EHT section and the picture tube. When using a picture tube test jig for service, ensure that jig is capable of handling **29.0kV** without causing X-Radiation.

Note: It is important to use an accurate periodically calibrated high voltage meter.

1. Set the brightness to minimum.
2. Use the remocon to get into Service Mode.
3. Measure the EHT. The meter reading should indicate **23.5±1.5kV**. If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
4. To prevent the possibility X-Radiation, it is essential to use the specified picture tube, if service replacement becomes necessary.

1.5. GP31 Chassis Block Diagram

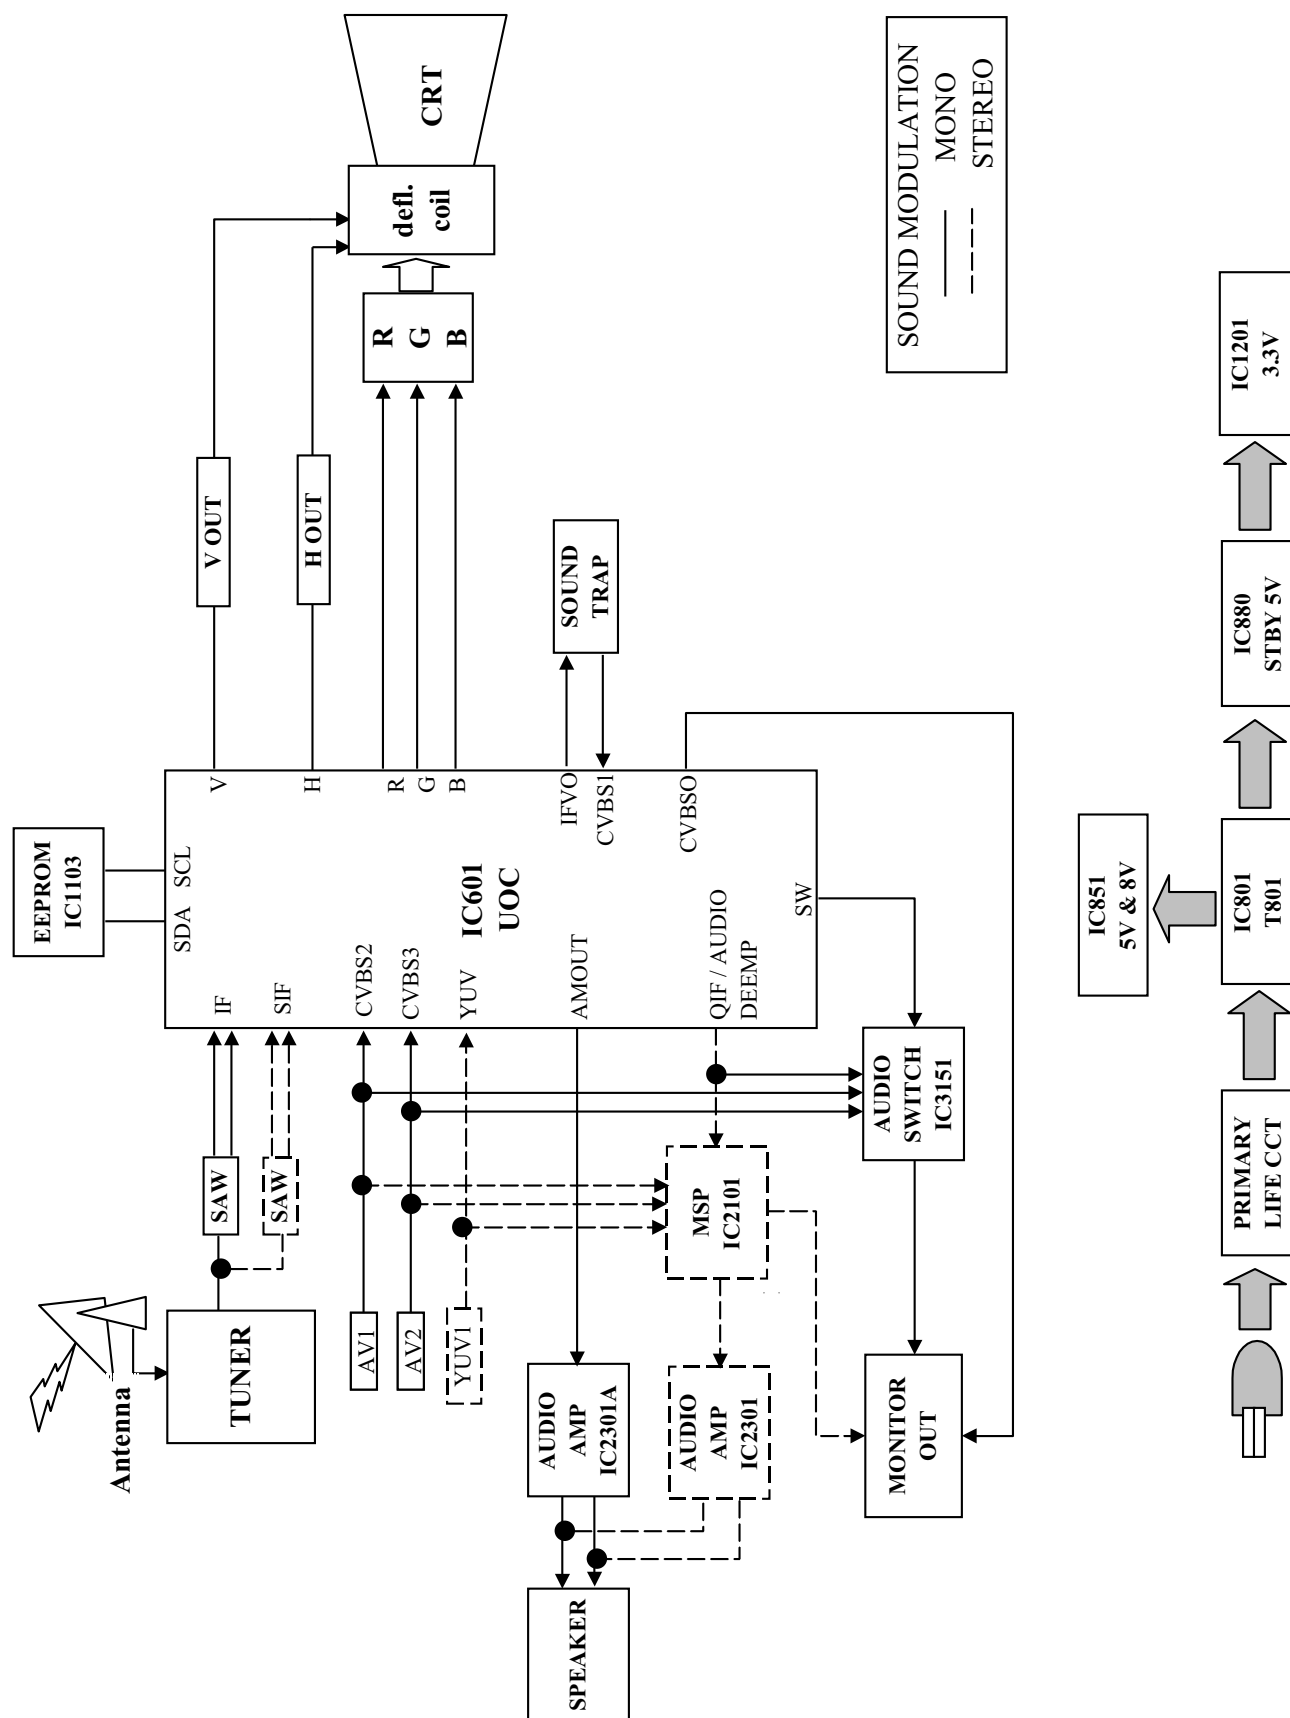

2 Service Hints

2.1. Service Position for E-Board

1. Remove the back cover.
2. Stand the TV set as shown in Fig. 2.
3. Remove the A-Board from the TV set by pulling the main board out as shown in Figure 2.

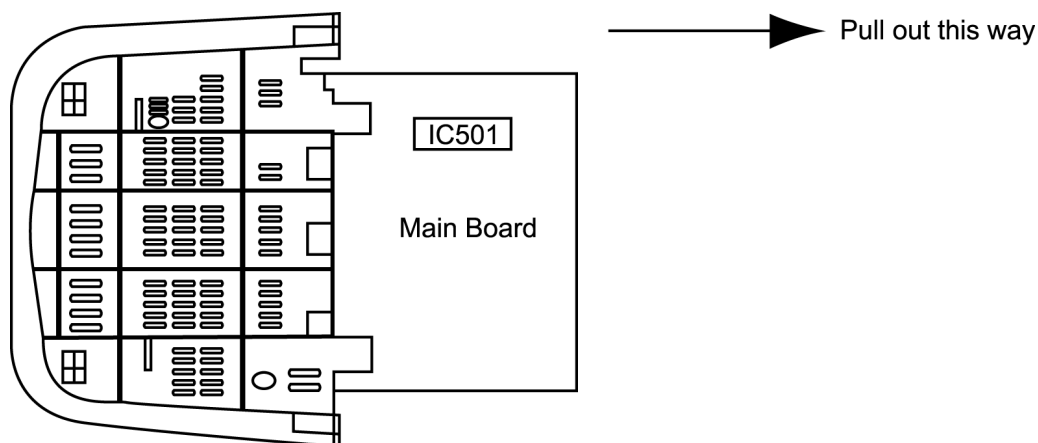


Fig. 2

2.2. Factory Mode Adjustment

How to set :


To set the Factory mode, press Volume 0 dac on the TV and Timer Setting 30 min. on the remote control and press Volume (-) Down button on the TV together press recall on the remote control.

CHK should appear on right of TV screen.

To move from CHK1 to CHK2 mode, etc. please follow below rotation :

To Set Self-Check :

Press the Volume Down button on TV then press the Off Timer button on remote control.

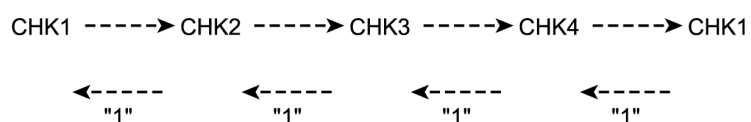

2.3. +B Voltage Adjustment

Item / preparation

1. Operate the TV set.
2. Set control as follows :
 Brightness minimum
 Contrast minimum

Adjustment procedure

1. Confirm the DC voltage at the indicated test points, as follows :
 TPA 10 : $141.0 \pm 1.5V$
 TPA 8 : $8 \pm 1V$
 TPA 9 : $5 \pm 1V$
 TPA 21 : $175 \pm 15V$

2.4. Heater Voltage Confirmation

Item / preparation

1. Receive the crosshatch pattern.
2. Set to 0 Beam.
 Screen VR minimum
 Contrast minimum

Adjustment procedure

1. Connect a DC voltage meter to TPA 12 and confirm the +B voltage is $141.0 \pm 1.5V$.
2. Connect a high frequency voltmeter to heater and confirm that voltage reads 6.3 ± 0.24 (VRMS).
3. Normalize the brightness and contrast.

2.5. RF AGC Adjustment

Item / preparation

1. Receive a colour bar signal at an RF level of $69 \pm 1-2$ dBU with 75Ω loaded.
2. Connect digital multimeter to RF AGC at Tuner.

Adjustment procedure

1. Select "RF AGC" indication in CHK2, on Screen by remote control at factory mode.
2. Set RF AGC by using remote control Volume (+) or Volume (-) button until voltage AGC at Tuner reaches $2.3 \pm 0.1V$ at TPA 15 (Tuner point).
3. Increase RF signal strength by 2dB, confirm AGC at Tuner voltage drop.

2.6. NTSC Tint Colour Adjustment

Item / preparation

1. Connect oscilloscope probe to TPL1 (R OUT) with $10k\Omega$ series resistor.
2. Press Main Menu and set system to use AV-NTSC (3.58 MHz).
 DYNAMIC Normal
 Channel CLR Set STD

Adjustment procedure

1. Adjust Sub-Tint so that No. 2, 3 and 4 becomes level waveform is similar to Fig. 3.
2. Confirm phase at Tint is changes more than ± 15 by Tint control.
3. Confirm that colour level is maximum when colour DAC is adjusted to maximum position.

Note: Use remote control only when adjusting user mode to Sub-Tint.

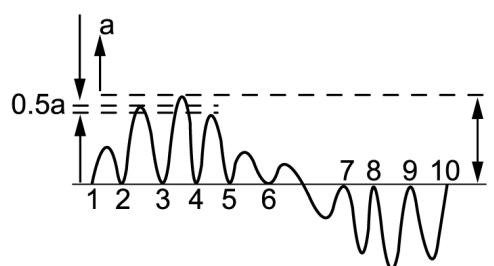


Fig. 3

2.7. PAL Colour Output Level Adjustment

1. Receive the PAL B/G studio colour bar pattern and adjust local frequency at the best tuned position.
2. Pic Menu: Dynamic Normal, Confirm Contrast - 100 DAC, Sub Contrast - 21 dac.
3. Channel colour set ----- STD
4. "CHK2" and press digit key "5" (AKB OFF) also confirm OSD become blue colour.
5. Connect TPA 10 to TPA 20.
6. Set (A) to $2.3 \pm 0.2V$ by BRT (CHK2) at measurement point TPL 2 Fig. 4.

1. Connect oscilloscope probe to TPL 2 (G OUT) with $10k\Omega$ series resistor and adjust Contrast so that (B) as in Fig. 4 is $2.25 \pm 0.05V$.
2. Adjust "Sub Colour" so that waveform as in Fig. 4 (1) $2.5 \pm 0.1V$.
3. Connect oscilloscope probe to TPL 1 (R OUT) with $10k\Omega$ series resistor and confirm waveform as in Fig. 5 is (2) $2.50 \pm 0.4V$.
4. Press digit key "5" (AKB ON) and confirm the OSD become white colour.

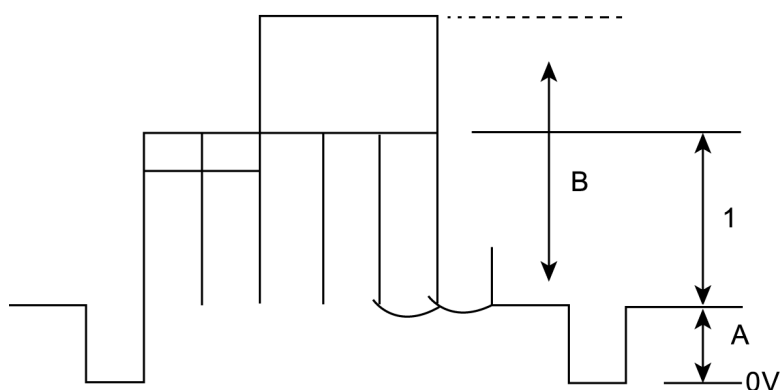


Fig. 4

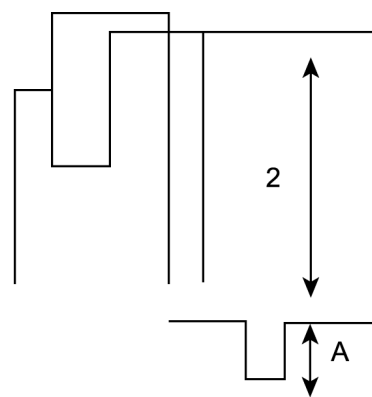


Fig. 5

2.8. CRT VRS Adjustment

Adjustment of CRT VRS

1. Preparation

- Set DY to CRT not to tilt up and down left and right deflection.
- Set CY to CRT and set CY magnet primarily (Fig. 1)
 Purity magnet : Set purity magnet that 2 magnets are (TOP POSITION)
 VRS magnet : Set purity magnet 2 magnets are (HORIZONTAL POSITION)

2. Adjustment

- Receive that Cross Hatch pattern.
- Adjust V-SHIFT -50Hz.
- Set 2 magnets of horizontal position to up and down equally so that it will be the center part of CRT. (Fig. 2)


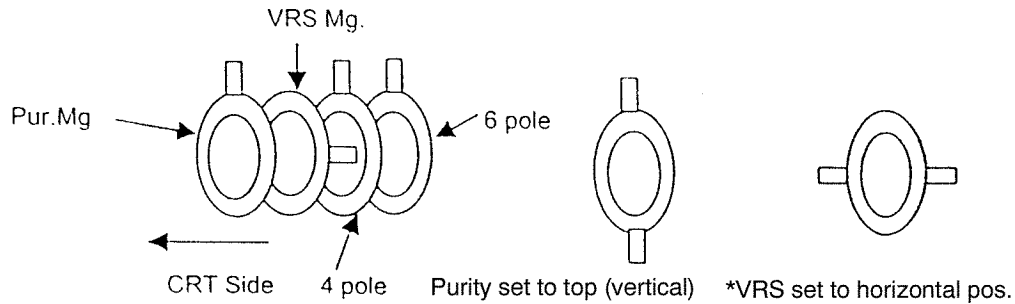


FIG 1.

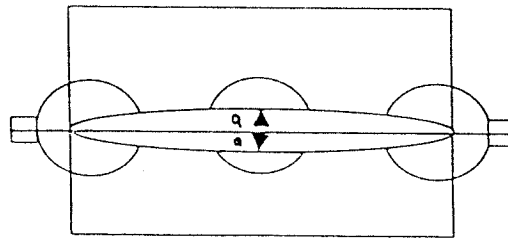

$$a \leq 0 \pm 1\text{mm}$$

FIG 2.

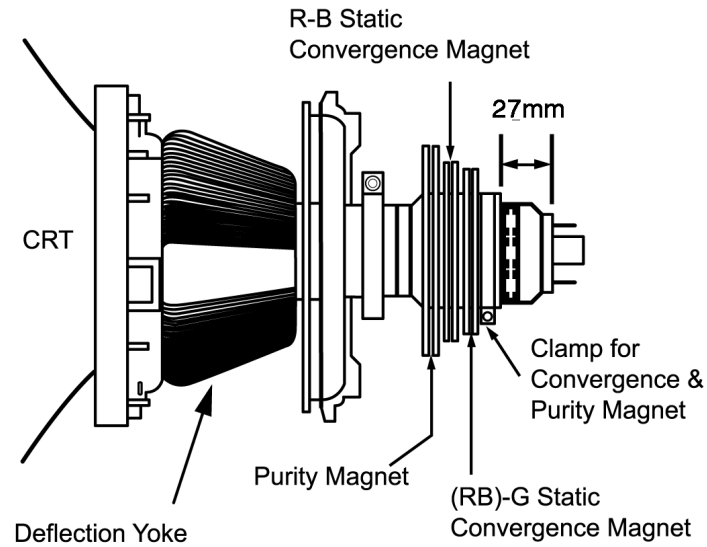


Fig. 10

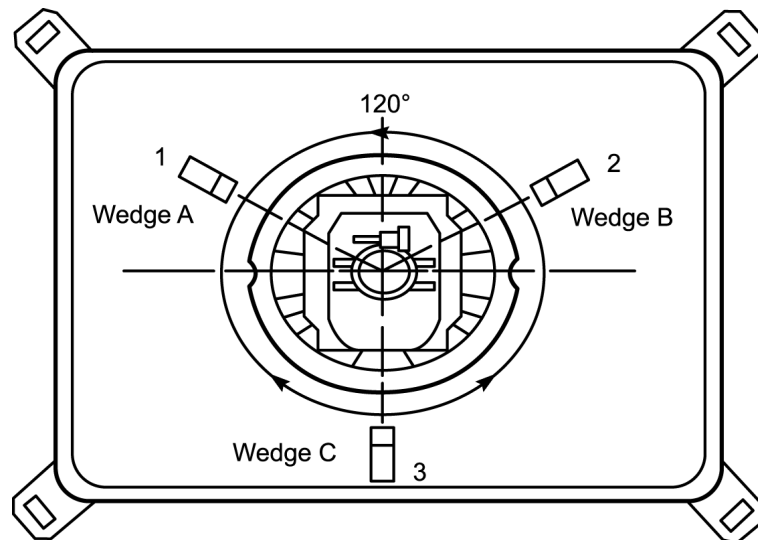


Fig. 11


Notes:

1. Wedge A, B and C should be inserted following the sequence of 1, 2 and 3 shown in Fig. 11.
2. The wedges should be set 120° apart from each other.
3. Be certain that three wedges are firmly fixed and the Deflection Yoke is tightly clamped in place. Otherwise the Deflection Yoke may shift its position and cause a loss of convergence and purity.

2.9. CRT Cut Off Adjustment

Preparation:

1. Connect the oscilloscope probe to TPL5.
2. Screen VR min.
3. Set the data Sub Bright, Bright.
4. In service Mode at "Bright" dac press [5] in factory mode to enter vertical line and adjust by volume down or up button.
5. Adjust "Screen VR" until 1-H Line appears.

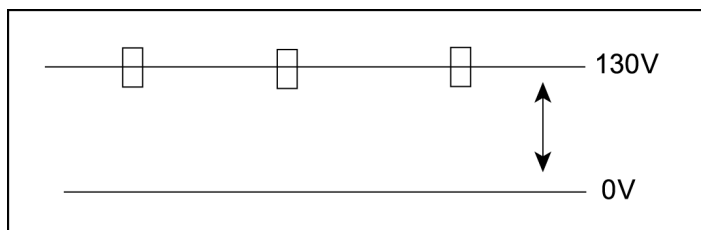

2.10. Purity and Convergen Adjustment

Before Colour Purity, Convergence and White Balance adjustment are attempted, V. Height, H. Centre and Focus adjustments must be completed.

Colour Purity

1. Set the Brightness and Contrast controls to their maximum positions.
2. Operate the TV set for 60 minutes.
3. Fully degauss the picture tube by using an external degaussing coil.
4. Apply a crosshatch pattern signal and adjust the static convergence magnets to the approximately correct position.
5. Receive a black and white signal.
6. Set the control as follows:
 Red.....minimum
 Green.....minimum
 Blue.....minimum
 Press the Shipping button on the remote control twice to select CRT Adjustment Mode to select low light.
7. Loosen the clamp screw for the Deflection Yoke A in Fig. 10 and move the Deflection Yoke as close to the purity magnet as possible.
8. Adjust the purity magnetic rings so that a vertical green field is obtained at the centre of the screen.

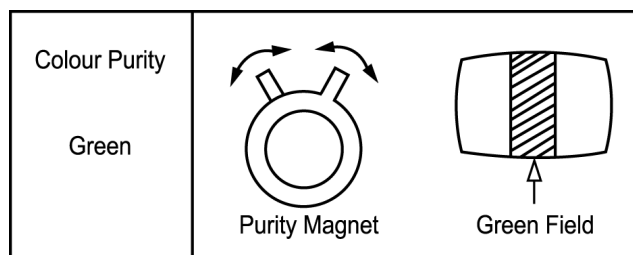


Fig. 6

9. Slowly push the Deflection Yoke and set it where a uniform green field is obtained.

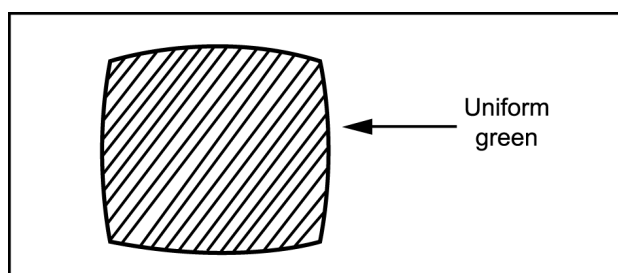


Fig. 21

10. Re-adjust the Low Light controls to their correct settings and make sure that a uniform white field is obtained.
11. Tighten the clamp screw A in Fig. 10.

Convergence

1. Apply a crosshatch pattern signal and Normalize Contrast control to the maximum positions.
2. Adjust Brightness until the grey position of the crosshatch pattern just becomes black.
3. Adjust the Red and Blue line at the centre of the screen by rotating the R-B static.
4. Adjust Red and Blue with Green line at centre of the screen by rotating (RB)-G static convergence magnetic rings.
5. Lock convergence magnets with silicone sealer.
6. Remove the DY wedges and slightly tilt the Deflection Yoke vertically and horizontally to obtain the good overall convergence.

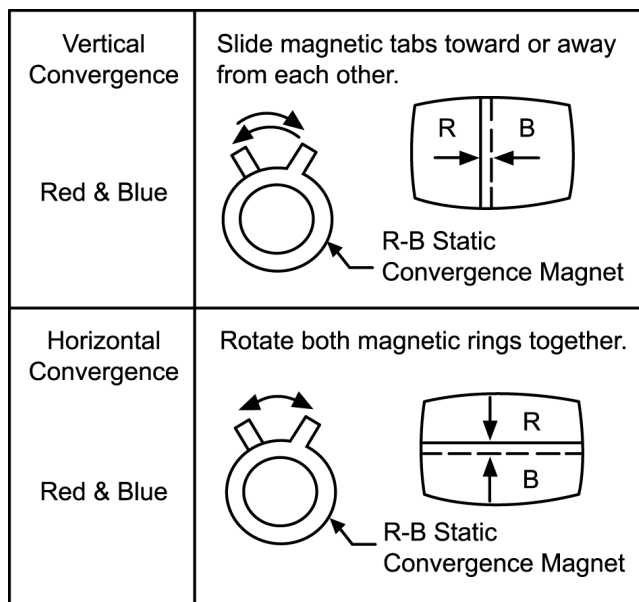


Fig. 8

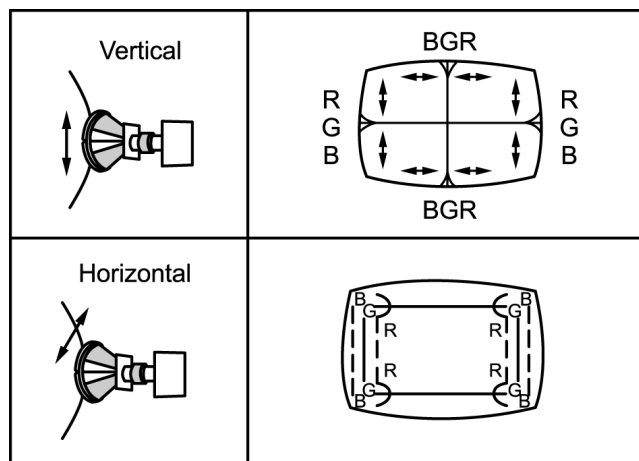


Fig. 9

7. Fix the Deflection Yoke by reinserting the DY wedges. Refer to Fig. 10.
8. If purity error is found, repeat "Colour Purity" adjustment.

2.11. White Balance Adjustment

Preparation:

1. Receive the white balance pattern and aging should have been performed over 30 minutes.
2. Set the picture menu to DYNAMIC NORMAL.
3. Degauss the CRT face.
4. Fix the CRT colour analyzer receiver unit to CRT face.

Adjustment of Low Light.

1. Adjustment Sub Bright, so that $Y = 7.0 \pm 1.0$ nit.
2. Adjustment R-CUT OFF, so that $X = 0.238 \pm 0.010$ nit.
3. Adjustment G-CUT OFF, so that $Y = 0.229 \pm 0.010$ nit.

Adjustment of High Light

1. Adjustment Sub Bright, so that $Y = 155$ nit.
2. Adjustment R-Drive, so that $X = 0.263 \pm 0.010$ nit.
3. Adjustment B-Drive, so that $Y = 0.273 \pm 0.010$ nit.



4 Schematic Diagram

Important Safety Notice

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Notes :

1. Resistor

All resistors are carbon 1/4W resistors unless marked as follows :

Unit of resistance is OHM (Ω) (K = 1 000 M = 1 000 000)

	Nonflammable		Metal Oxide
	Solid		Metal Film
	Wire Wound		Fuse

2. Capacitor

All capacitors are ceramic 50V capacitors unless marked as follows :

Unit of capacitance is μF unless otherwise noted.

	Temperature Compensation		Electrolytic
	Polyester		Bipolar
	Metalized Polyester		Dipped Tantalum
	Polypropylene		Z-Type

3. Coil

Unit of inductance is μH , unless otherwise noted.

4. Test Point

 : Test Point position

5. Earth Symbol

 : Chassis Earth (Cold)  : Line Earth (Hot)

6. Voltage Measurement

Voltage is measured using DC voltmeter.

Conditions of the measurement are the following :

Power Source..... AC AUTO 110-240V, 50/60Hz

Receiving Signal.....Colour Bar signal (RF)

All customer's controls.....Maximum positions

7. Number in red circle indicates waveform number.

(See waveform pattern table.)

8. When arrow mark (↗) is found, connection is easily found from the direction of arrow.

9. ➡ : Indicates the major signal flow.

10. This schematic diagram is the latest at the time of printing and subject to change without notice.

Remarks :

The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.

The circuit is defined by HOT and COLD indications in the schematic diagram.

Take the following precautions :


All circuits, except the Power Circuit are cold.

Precautions :


- a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
- b. Do not short-circuit the hot and cold circuits or a fuse may blow and parts may break.
- c. Do not connect an instrument such as an oscilloscope to the hot and cold circuits simultaneously or a fuse may be blown.
Connect the earth of instruments to the earth connection of the circuit being measured.
- d. Make sure to disconnect the power plug before removing the chassis.




4.1.2. A Board (2/5)

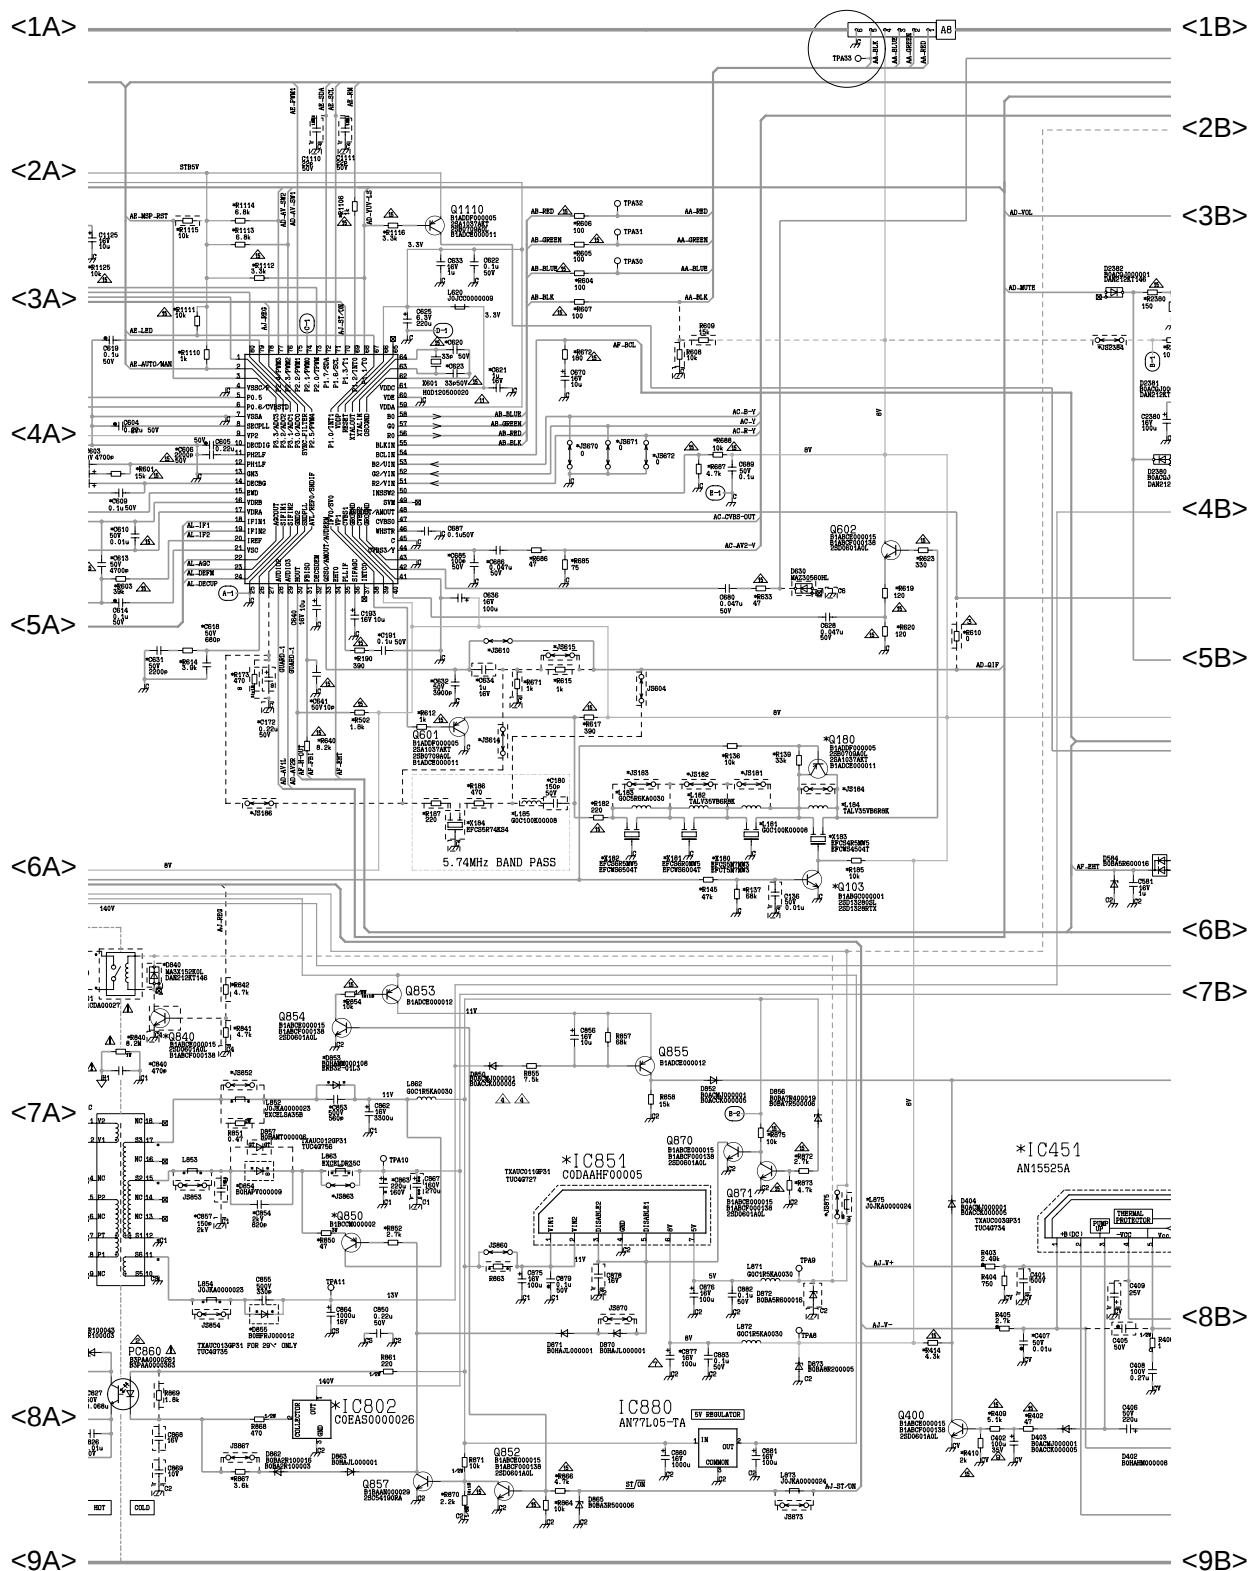

4.1.3. A Board (3/5)

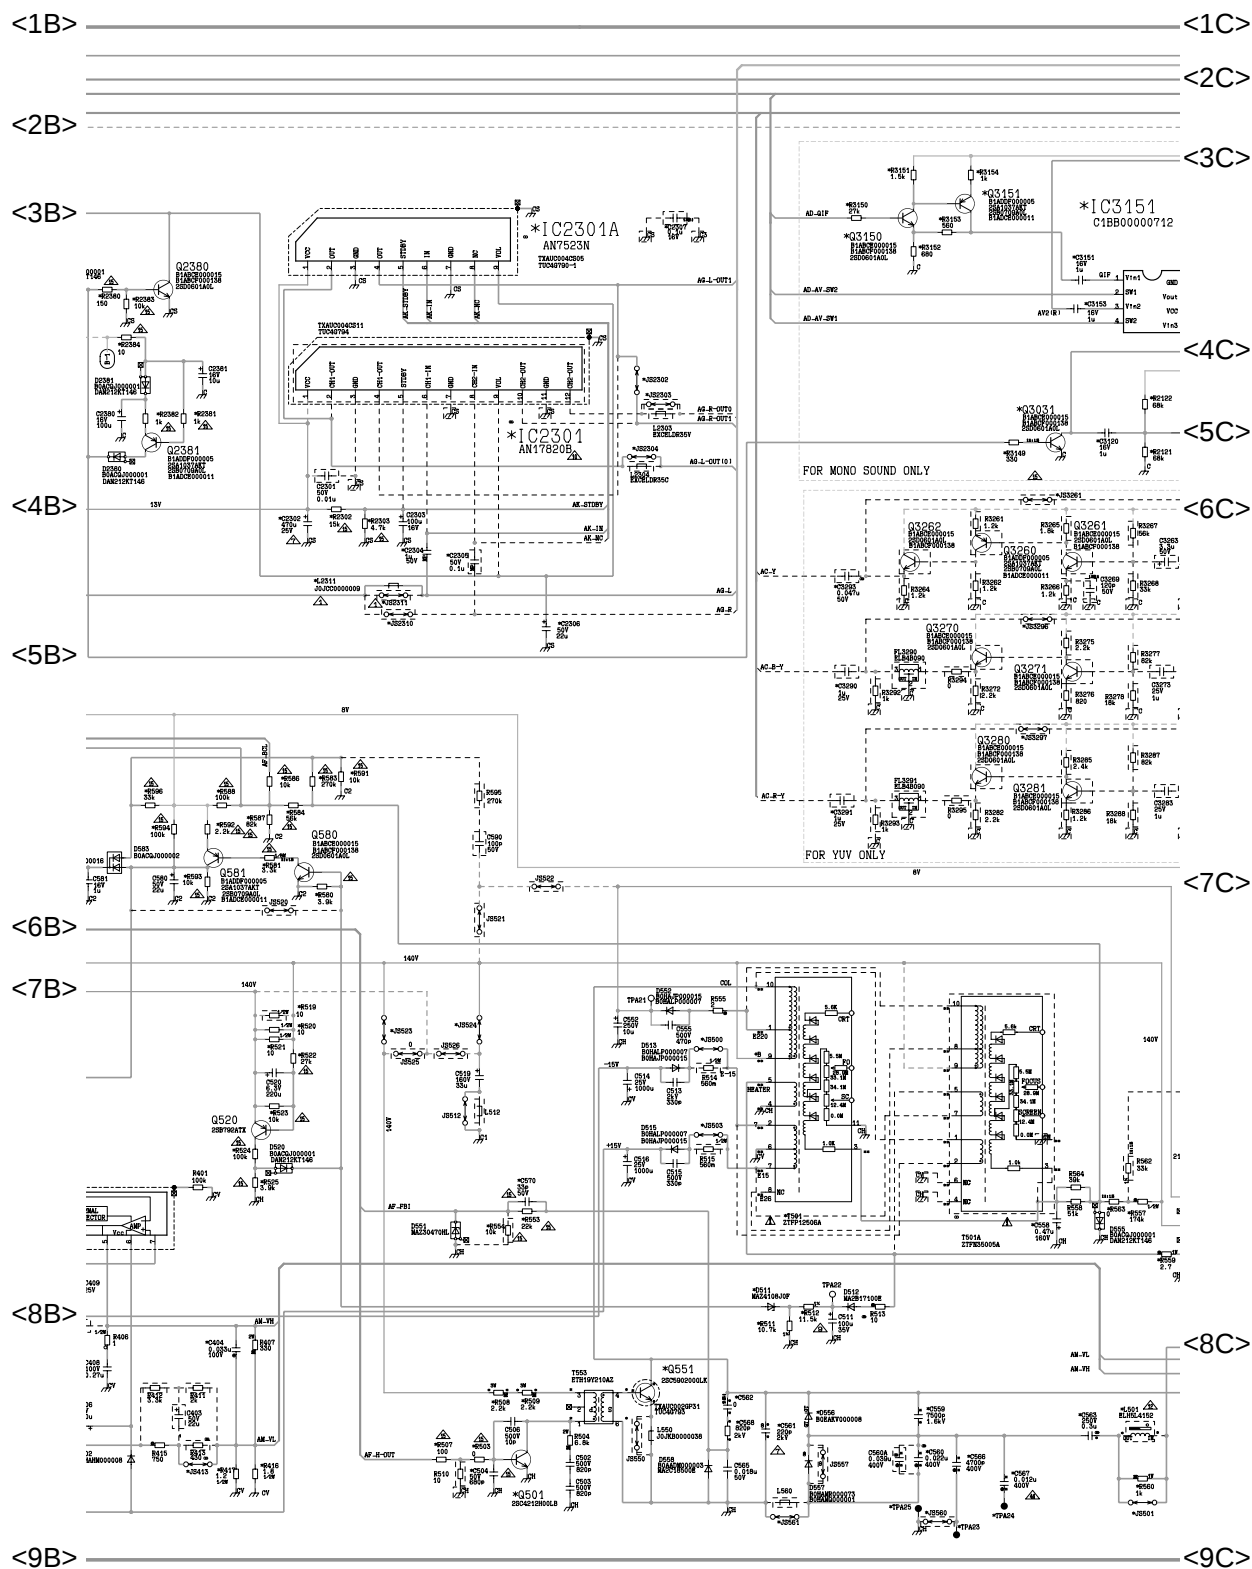


4.1.4. A Board (4/5)

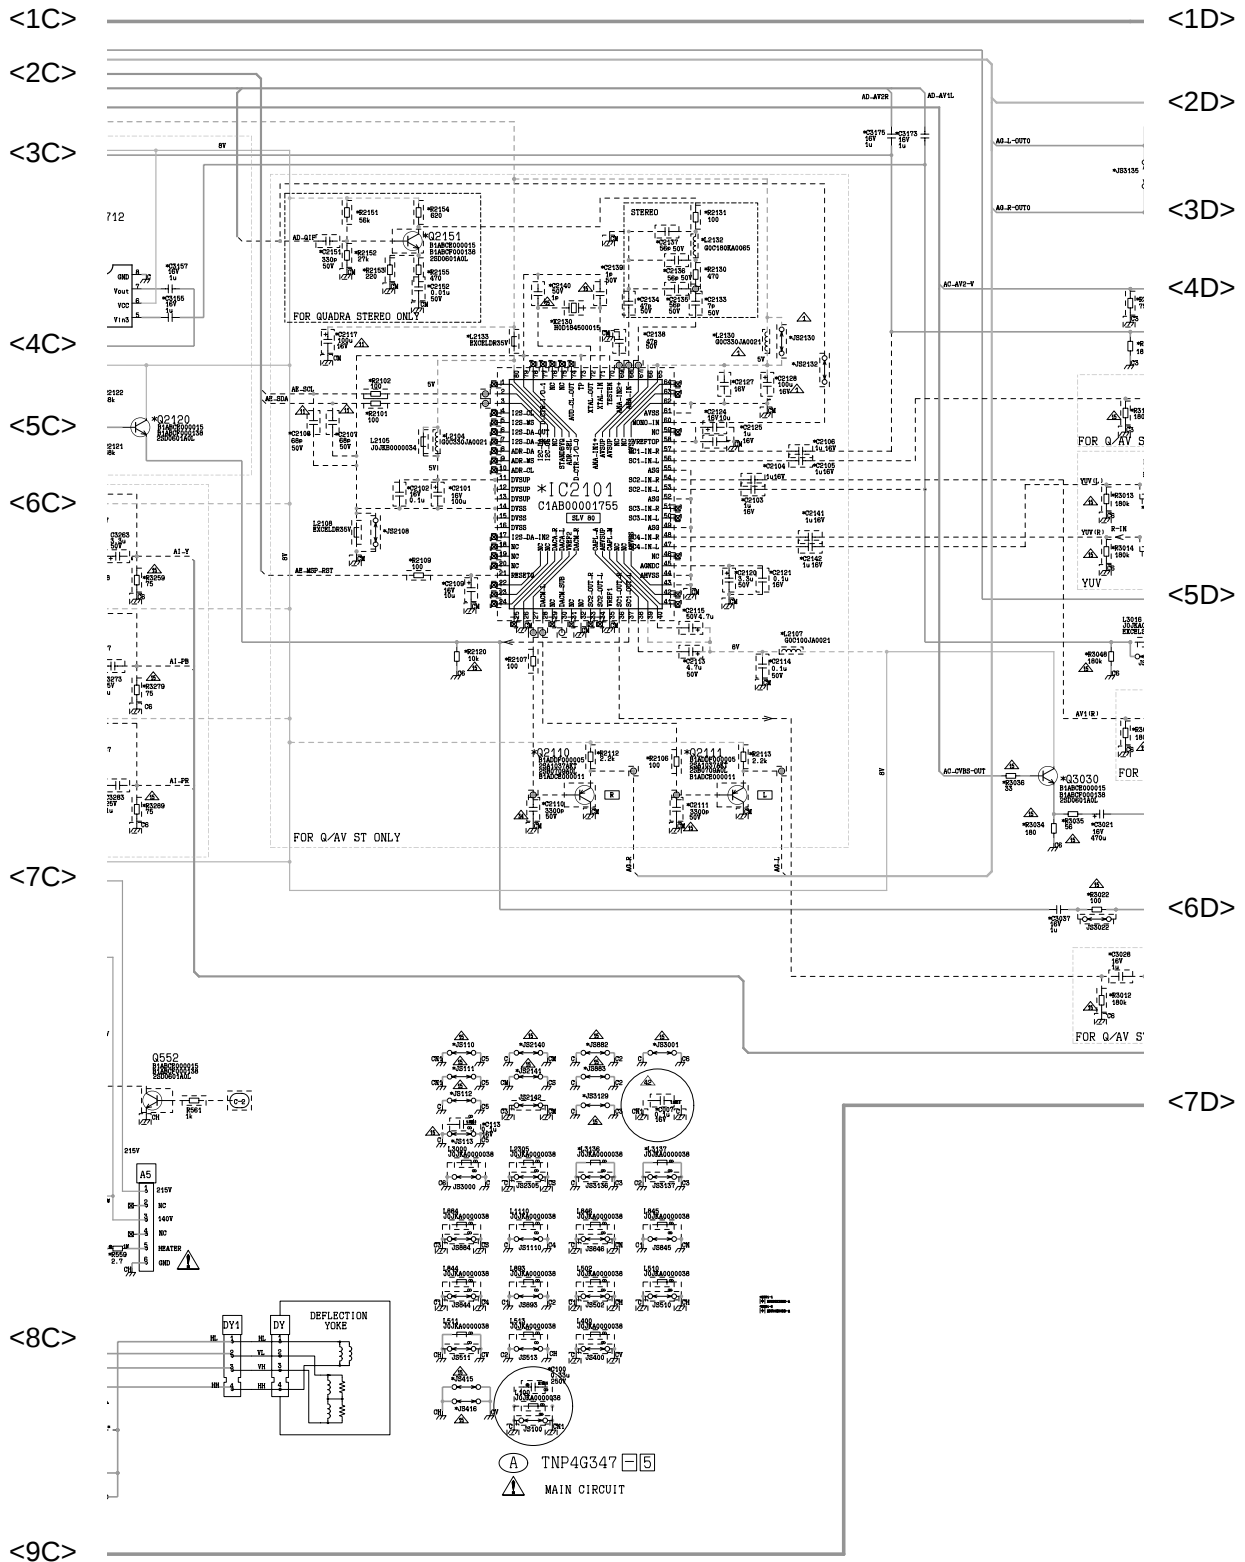




4.2. L Board


4.2.1. L Board (1/3)

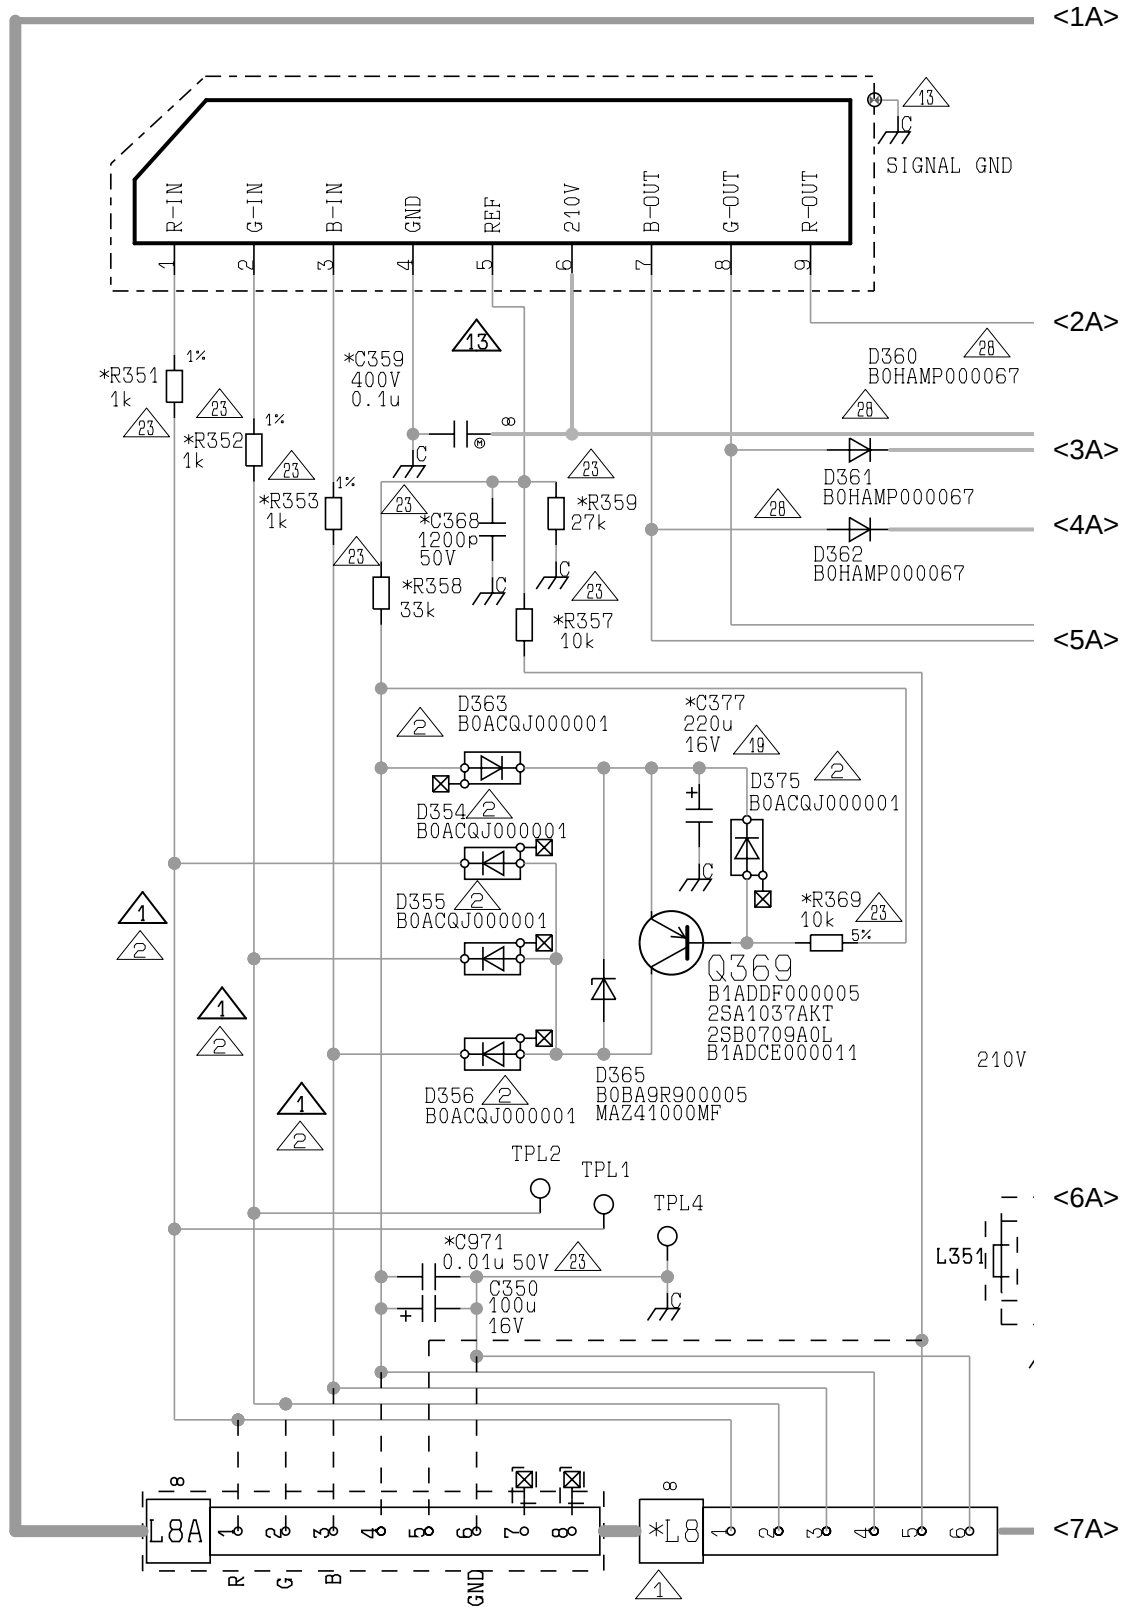

4.2.2. L Board (2/3)

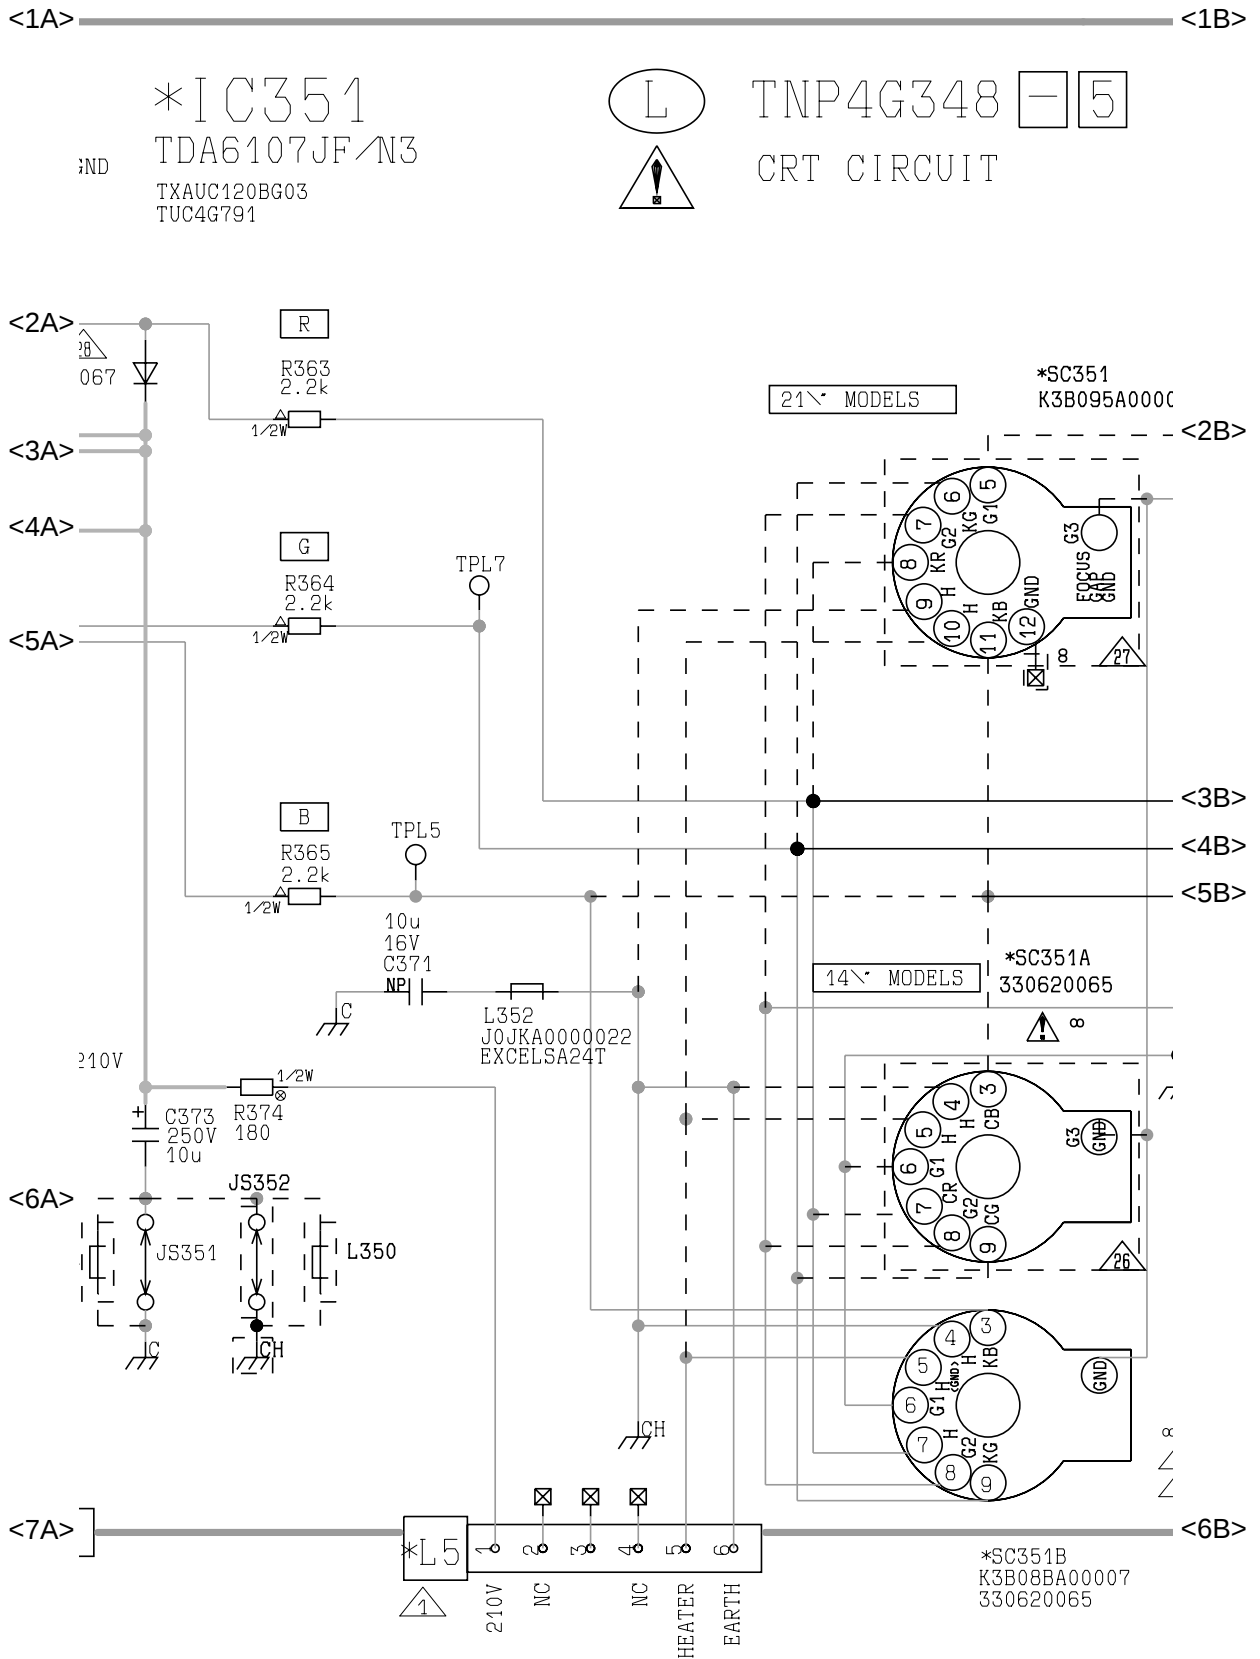


4.2.3. L Board (3/3)

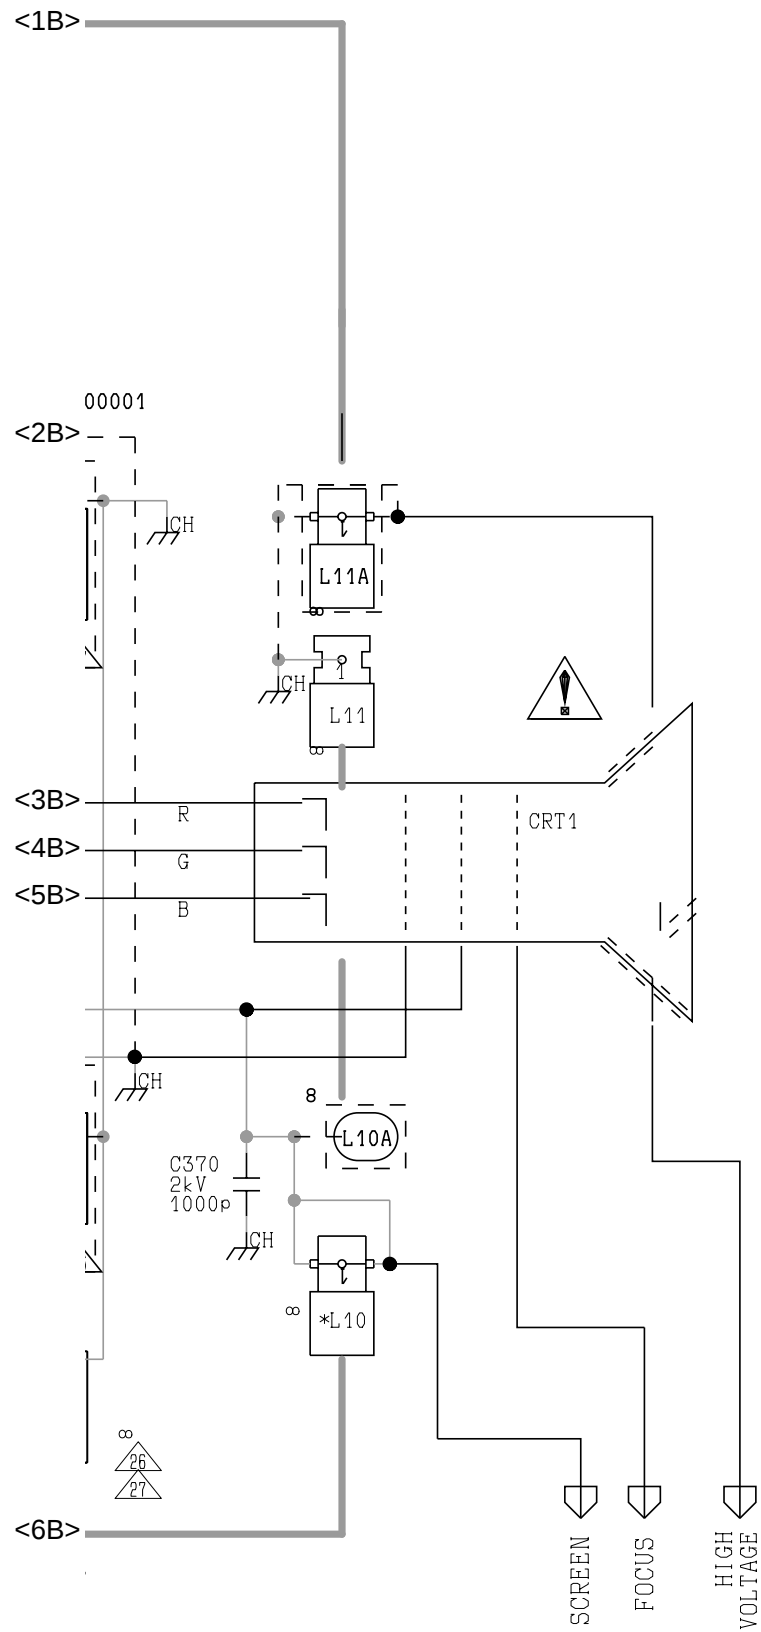

5 Parts Locations

PARTS LOCATION

Note: The number on mechanical parts indicates Ref. No. of Replacement Parts List.

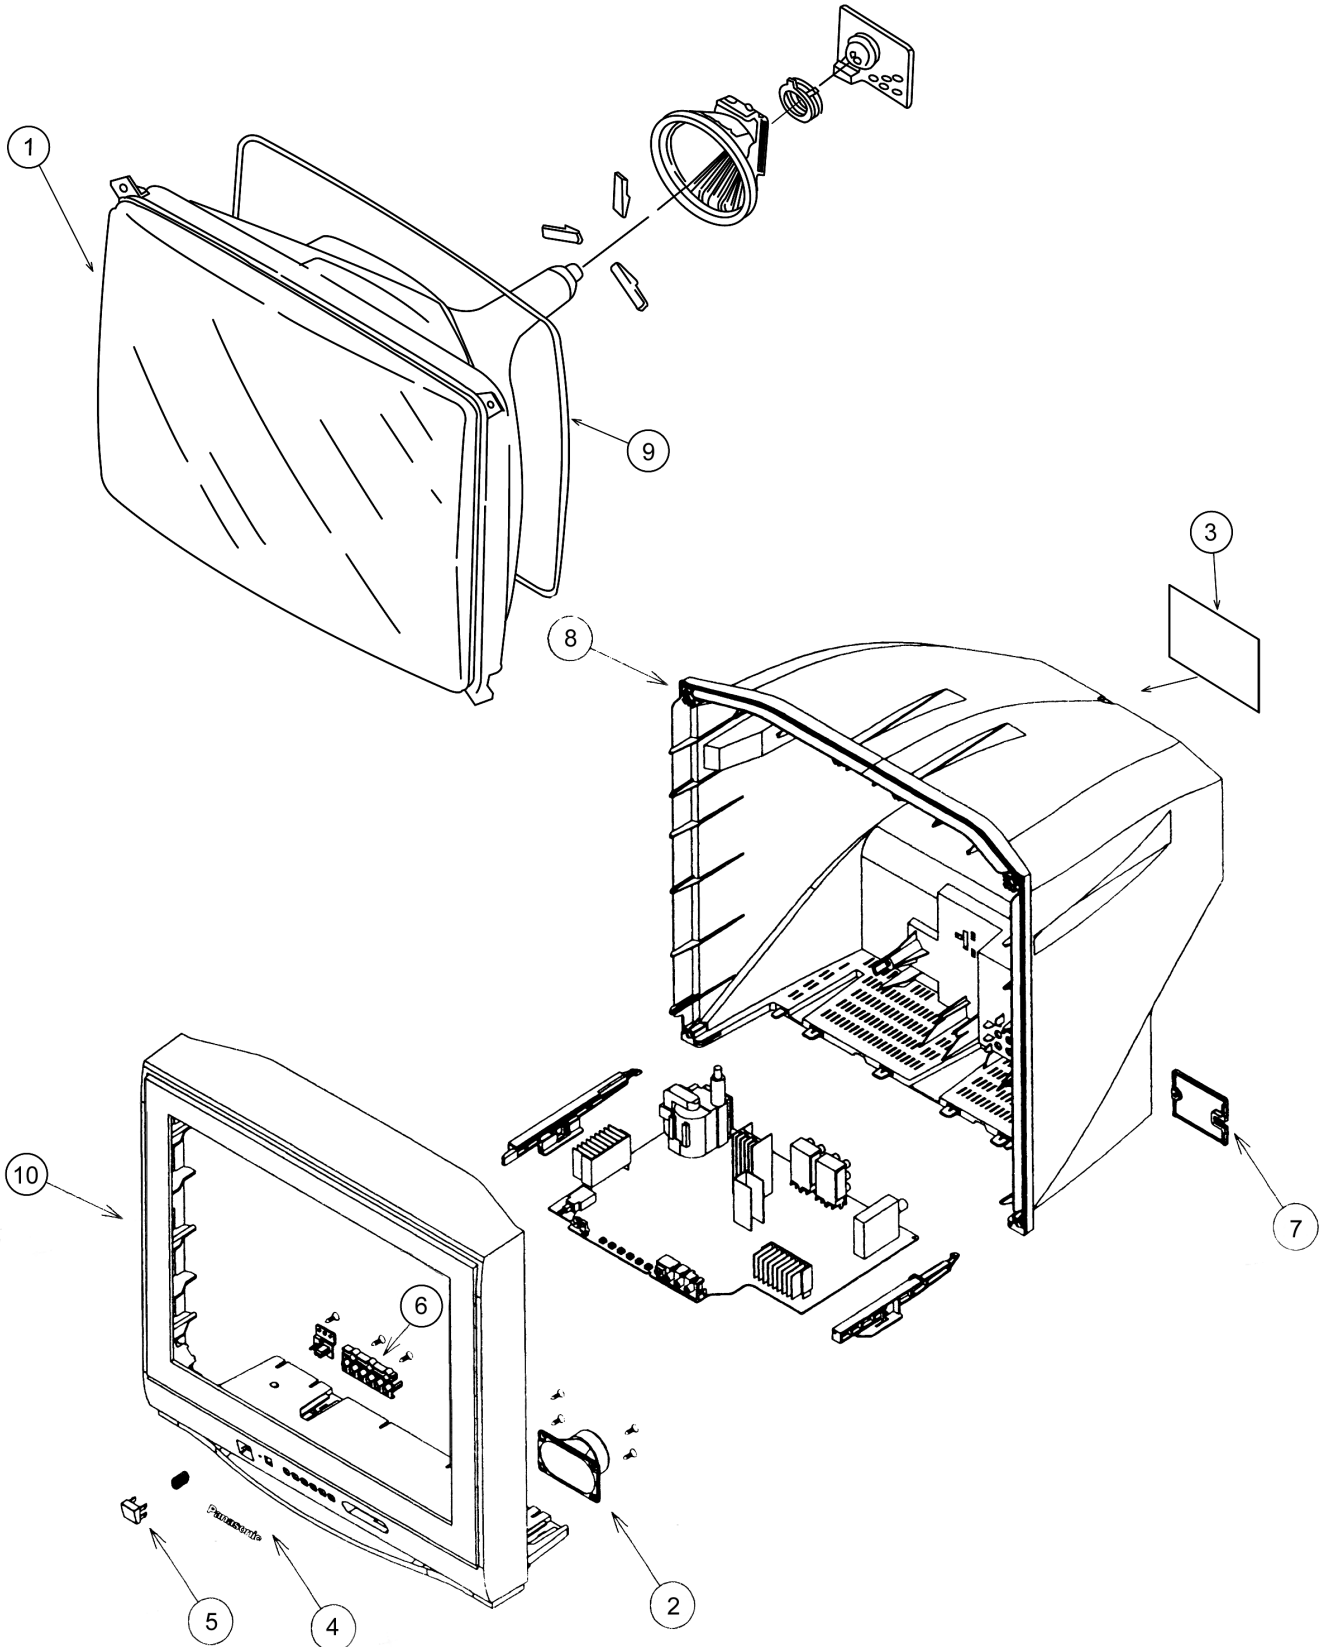

6 Replacement Parts List

Important Safety Notice

Components identified by  mark have special characteristics important for safety.
When replacing any of these components, use manufacturer's specified parts.

Note: Printed circuit board assembly with "NLA" is no longer available after production discontinuation of the complete set.

Abbreviation of part name and description

1. Resistor

Example :

ERD25TJ104 **C** 100K Ω , **J**, 1/4W
 Type Allowance

Type	Allowance
C : Carbon	F : $\pm 1\%$
F : Fuse	G : $\pm 2\%$
M : Metal Oxide Metal Film	J : $\pm 5\%$ K : $\pm 10\%$
S : Solid	M : $\pm 20\%$
W : Wire Wound	

2. Capacitor

Example :

ECKF1H103ZF **C** 0.01 μ F, **Z**, 50V
 Type Allowance

Type	Allowance
C : Carbon	C : $\pm 0.25\text{pF}$
E : Electrolytic	D : $\pm 0.5\text{pF}$
P : Polyester Polypropylene	F : $\pm 1\text{pF}$ G : $\pm 3\%$
T : Tantalum	J : $\pm 5\%$ K : $\pm 10\%$ L : $\pm 15\%$ M : $\pm 20\%$ P : $\pm 100\%$, -0% Z : $\pm 80\%$, -20%

6.1. Replacement Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
1	37GDC86XTC02	PICTURE TUBE (ITC)	△
	EUR7717010	REMOTE RECEIVER	
2	L0AA08B00002	SPEAKER	
	T4B20650J	TUBE (ERD75TAJ)	△
3	TBM4N04801	MODEL NAME PLATE	△
4	TBM4N05100	PANASONIC BADGE	
5	TBX4N04700	POWER BUTTON	
6	TBX4N04800	6 KEY BUTTON	
	TES4G206	SPRING EART WIRE	
	TES4G404	SPRING IC VERTICAL	
	TES4G410	SPRING IC POWER	
	TJB1725100	300 OHM CONVERTER	
	TKK4N04300	LED PANEL	
7	TKP4G11744	AC CORD BRACKET	
8	TKU4N04400	BACKCOVER	△
	TKY4N04501	CABINET	
9	TLK4G9078G	DEGAUSSING COIL	△
	TMK4G509	BARRIER AC CORD	
NLA	TNP4G347-5	A BOARD	△
NLA	TNP4G348-5	L BOARD	△
	TPC4N04800	PACKING CASE	
	TPD4N04700	TOP CHUSION	
	TPD4N04800	BOTTOM CHUSION	
	TPE4N02300	PLASTIC COVER	
	TPE4N04200	TOP COVER	
	TQB4N04700	OPERATING MANUAL	
	TSAA4G00002	ROD ANTENNA	
	TSX4G111L	AC POWER CORD	△
	TXAKU01A3P-1	BACKCOVER ASSY	
	TXF3A01VU2S	CRT EART WIRE	
10	TXFKY01A3P-1	CABINET ASSY	
	CAPACITOR		
C001	F2A1C220A147	E 22F, 16V	
C002	ECJ2VF1C104Z	C 0,1F, Z, 16V	
C003	ECJ2VF1C104Z	C 0,1F, Z, 16V	
C006	F2A0J221A181	E 220F, 6.3V	
C008	F2A1H1R0A145	E 1F, 50V	
C109	ECJ2VF1C104Z	C 0,1F, Z, 16V	
C1101	ECJ2VF1C104Z	C 0,1F, Z, 16V	
C1103	ECJ2VC1H331J	C 330PF, J, 50V	
C1104	F2A1C101A180	E 100F, 16V	
C1105	ECJ2VF1C104Z	C 0,1F, Z, 16V	
C1120	ECJ2VF1H103Z	C 0,01F, Z, 50V	
C1125	F2A1C100A147	E 10F, 16V	
C1130	ECJ2VC1H560J	C 56PF, J, 50V	
C1131	F2A0J221A181	E 220F, 6.3V	
C1132	ECJ2VC1H560J	C 56PF, J, 50V	
C1140	F2A1C101A180	E 100F, 16V	
C1141	ECJ2VF1C104Z	C 0,1F, Z, 16V	
C1142	ECJ2VF1C104Z	C 0,1F, Z, 16V	
C117	ECJ2VB1H103J	C 0,01F, J, 50V	
C121	ECJ2VF1H103Z	C 0,01F, Z, 50V	
C122	ECJ2VF1H103Z	C 0,01F, Z, 50V	
C123	ECJ2VB1H103J	C 0,01F, J, 50V	
C191	ECJ2VF1H104Z	C 0,1F, Z, 50V	
C193	F2A1C100A180	E 10F, 16V	
C2302	F2A1E471A151	E 470F, 25V	
C2303	F2A1C101A180	E 100F, 16V	
C2304	ECEA1HKN010B	E 0,1F, 50V	
C2306	F2A1H220A162	E 22F, 50V	
C2380	F2A1C101A180	E 100F, 16V	
C2381	F2A1C100A180	E 10F, 16V	
C3020	ECJ2VB1H392K	C 3900PF, K, 50V	
C3021	F2A1C4710045	E 470F, 16V	
C3037	ECJ2VF1C105Z	C 1F, Z, 16V	
C3120	ECJ2VF1C105Z	C 1F, Z, 16V	
C3136	ECJ2VF1H103Z	C 0,01F, Z, 50V	
C3137	ECJ2VF1H103Z	C 0,01F, Z, 50V	
C3138	F2A1C100A180	E 10F, 16V	
C3139	F2A1C100A180	E 10F, 16V	
C3144	ECJ2VB1H392K	C 3900PF, K, 50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C3151	ECJ2VF1C105Z	C 1F, Z, 16V	
C3153	ECJ2VF1C105Z	C 1F, Z, 16V	
C3155	ECJ2VF1C105Z	C 1F, Z, 16V	
C3157	ECJ2VF1C105Z	C 1F, Z, 16V	
C3173	ECJ2VF1C105Z	C 1F, Z, 16V	
C3175	ECJ2VF1C105Z	C 1F, Z, 16V	
C350	F2A1C101A180	E 100F, 16V	
C359	ECQM4104KZB	P 0.1F, K, 400V	
C368	ECJ2VC1H122J	C 1200PF, J, 50V	
C370	ECKW3D102KBP	C 1000PF, K, 2KV	
C371	ECEA1CN100UB	E 10F, 16V	
C373	F2A2E1000011	E 10F, 250V	
C377	F2A1C2210044	E 220F, 16V	
C402	ECA1VM101B	E 100F, 35V	
C404	ECQB1333JF3	P 0.033F, J, 100V	
C406	F2A1H221A247	E 220F, 50V	
C407	ECQB1H103JF3	P 0,01F, 50V	
C408	ECQB1274JF3	P 0.27F, J, 100V	
C502	F1B2H821A025	C 820PF, 500V	
C503	F1B2H821A025	C 820PF, 500V	
C504	ECJ2VB1H681K	C 680PF, K, 50V	
C506	F1A2H1000002	C 10PF, 500V	
C511	ECA1VM101B	E 100F, 35V	
C513	ECKW3D331JBP	C 330PF, J, 2KV	
C514	F2A1E102A151	E 1000F, 25V	
C515	F1B2H331A025	C 330PF, 500V	
C516	F2A1E102A151	E 1000F, 25V	
C519	F2A2C330A096	E 33F, 160V	
C520	F2A0J221A181	E 220F, 6.3V	
C552	F2A2E1000011	E 10F, 250V	
C555	F1B2H471A025	C 470PF, 500V	
C558	F2A2CR47A028	E 0.47F, 160V	
C559	ECWH16752JVB	P7500PF, J, 1.6KV	
C560	ECQM4223JZW	P 0.022F, J, 400V	
C561	ECKW3D221JBR	C 220PF, J, 2KV	
C562	ERD25T0V	0 OHM, 1/4W	
C563	F0C2E3040001	P 0.3F, J, 250V	
C565	ECQP1H183JZW	P 0.018F, J, 50V	
C566	ECQM4472JZW	P 0.0047F, J, 400V	
C567	ECQM4123JZW	P 0.012F, J, 400V	
C568	ECKW3D821JBR	C 820PF, J, 2KV	
C570	ECJ2VC1H330J	C 33PF, J, 50V	
C580	F2A1H220A162	E 22F, 50V	
C581	ECJ2VF1C105Z	C 1F, Z, 16V	
C601	F2A1C101A180	E 100F, 16V	
C602	ECJ2VF1H104Z	C 0,1F, Z, 50V	
C603	ECJ2VB1H472K	C 4700PF, K, 50V	
C604	ECQV1H224JL3	P 0.22F, J, 50V	
C605	ECQV1H224JL3	P 0.22F, J, 50V	
C606	ECJ2VC1H222J	C 2200PF, J, 50V	
C607	F2A1H1R0A145	E 1F, 50V	
C608	F2A1H100A145	E 10F, 50V	
C609	ECJ2VF1H104Z	C 0,1F, Z, 50V	
C610	ECJ2VB1H103J	C 0,01F, J, 50V	
C611	ECEA1HKAR22B	E 0.22F, 50V	
C612	ECJ2VB1H472K	C 4700PF, K, 50V	
C613	ECJ2VB1H472K	C 4700PF, K, 50V	
C614	ECQV1H104JL3	P 0.1F, J, 50V	
C615	ECQV1H224JL3	P 0.22F, J, 50V	
C618	F1B1H681A130	C 680PF, 50V	
C619	ECQV1H104JL3	P 0.1F, J, 50V	
C620	ECJ2VC1H330J	C 33PF, J, 50V	
C621	ECJ2VF1C105Z	C 1F, Z, 16V	
C622	ECJ2VF1H104Z	C 0,1F, Z, 50V	
C623	ECJ2VC1H330J	C 33PF, J, 50V	
C625	F2A0J221A181	E 220F, 6.3V	
C628	ECJ2VB1H473K	C 0.047F, K, 50V	
C631	ECJ2VB1H222K	C 2200PF, K, 50V	
C632	ECJ2VB1H392K	C 3900PF, K, 50V	
C633	ECJ2VF1C105Z	C 1F, Z, 16V	
C636	F2A1C101A180	E 100F, 16V	
C640	F2A1C100A180	E 10F, 16V	
C641	ECJ2VC1H100C	C 10PF, C, 50V	

Ref. No.	Part No.	Part Name & Description	Remarks
C670	F2A1C100A180	E 10F, 16V	
C680	ECJ2YB1H473K	C 0.047F, K, 50V	
C685	ECJ2VC1H101K	C 100PF, K, 50V	
C686	ECJ2YB1H473K	C 0.047F, K, 50V	
C687	ECJ2VF1H104Z	C 0,1F,Z, 50V	
C689	ECJ2VF1H104Z	C 0,1F,Z, 50V	
C801	ECQU2A224BN9	P 0.22F, 250V	△
C802	ECQU2A224BN9	P 0.22F, 250V	△
C806	ECKWAE472ZED	C 4700PF, Z, 500V	△
C807	ECKWAE472ZED	C 4700PF, Z, 500V	△
C808	ECKWAE472ZED	C 4700PF, Z, 500V	△
C809	ECKWAE472ZED	C 4700PF, Z, 500V	△
C810	F2B2G1810011	E 180F, 400V	
C811	ECQM4473JZW	P 0.047F, J, 400V	
C814	ECQE2A473JFB	P 0.047PF, J, 250V	
C816	F2A1H3300037	E 33F, 50V	
C819	F2A1H1R0A162	E 1F, 50V	
C821	ECKW3D471KBR	C 470PF, K, 2KV	
C822	ECKW3D331JBR	C 330PF, J, 2KV	
C825	ECQB1H471JF3	P 470PF, 50V	
C826	F0A1H103A039	C 0.01PF, 50V	
C827	ECQB1H683JF3	P 0.068PF, 50V	
C830	ECQB1H102JF3	P 1000PF, 50V	
C840	F1A2E471A002	C 470PF, 250V	
C841	ECKCNA102MB7	C 1000PF, M	
C842	F1A2E102A001	C 1000PF	
C844	ECKCNA222ME7	C 2200PF,M	
C846	F1A2E101A002	C 100PF	
C850	ECJ2VF1H224Z	C 0,22F,Z, 50V	
C853	F1B2H561A025	C 560PF, 500V	
C854	ECKW3D821KBP	C 820PF, K, 2KV	
C855	F1B2H331A025	C 330PF, 500V	
C856	F2A1C100A180	E 10F, 16V	
C862	F2A1C332A232	E 3300F, 16V	
C863	F2A2C2210013	E 220F, 160V	
C864	F2A1C102A252	E 1000F, 16V	
C875	F2A1C101A180	E 100F, 16V	
C876	F2A1C101A180	E 100F, 16V	
C877	F2A1C101A180	E 100F, 16V	
C879	ECQV1H104JL3	P 0.1F, J, 50V	
C880	F2A1C1020049	E 1000F, 16V	
C881	F2A1C101A180	E 100F, 16V	
C882	ECJ2VF1H104Z	C 0,1F,Z, 50V	
C883	ECJ2VF1H104Z	C 0,1F,Z, 50V	
C971	ECJ2VF1H103Z	C 0,01F,Z, 50V	
	DIODE		
D002	B0BA01700031	DIODE	
D003	B0BA01500036	DIODE	
D011	B0ACQJ000001	DIODE	
D1105	B0BA7R500006	DIODE	
D1120	B0ACQJ000001	DIODE	
D1130	B0BA5R700008	DIODE	
D1131	B0BA5R700008	DIODE	
D1132	B0BA5R400008	DIODE	
D1140	B0BA5R600016	DIODE	
D1151	B3AGA0000092	DIODE	
D120	MA2C85800E	DIODE	
D2380	B0ACQJ000001	DIODE	
D2381	B0ACQJ000001	DIODE	
D2382	B0ACQJ000001	DIODE	
D354	B0ACQJ000001	DIODE	
D355	B0ACQJ000001	DIODE	
D356	B0ACQJ000001	DIODE	
D360	B0HAMP000067	DIODE	
D361	B0HAMP000067	DIODE	
D362	B0HAMP000067	DIODE	
D363	B0ACQJ000001	DIODE	
D365	B0BA9R900005	DIODE	
D375	B0ACQJ000001	DIODE	
D402	B0AHM000008	DIODE	
D403	B0ACMJ000001	DIODE	
D404	B0ACMJ000001	DIODE	
D511	MAZ4108J0F	DIODE	

Ref. No.	Part No.	Part Name & Description	Remarks
D512	MA2B17100E	DIODE	
D513	B0HAJP000015	DIODE	
D515	B0HAJP000015	DIODE	
D520	B0ACQJ000001	DIODE	
D551	MAZ30470HL	DIODE	
D552	B0HAJP000015	DIODE	
D555	B0ACQJ000001	DIODE	
D556	B0EAKV000008	DIODE	
D557	B0HAMR000073	DIODE	
D558	B0AADM000003	DIODE	
D583	B0ACQJ000002	DIODE	
D584	B0BA5R600016	DIODE	
D801	ERZV10V621CS	VARISTOR	
D803	B0EBNT000007	DIODE	
D810	B0EAKT000018	DIODE	
D817	B0HAJL000001	DIODE	
D821	MAZ20750A0LS	DIODE	
D823	B0HAJL000001	DIODE	
D824	B0HAJL000001	DIODE	
D825	B0BA6R100043	DIODE	
D830	B0HAJL000001	DIODE	
D831	B0BA02400029	DIODE	
D850	B0ACMJ000001	DIODE	
D852	B0ACMJ000001	DIODE	
D853	B0HAMM000108	DIODE	
D854	B0HAPV000009	DIODE	
D855	B0HFRJ000012	DIODE	
D856	B0BA7R400019	DIODE	
D862	B0BA2R100016	DIODE	
D863	B0HAJL000001	DIODE	
D865	B0BA3R500006	DIODE	
D870	B0HAJL000001	DIODE	
D871	B0HAJL000001	DIODE	
D873	B0BA8R200005	DIODE	
	INTEGRATED CIRCUIT		
IC1103	C3EBFC000042	IC	
IC1201	C0CBABC00160	IC POWER SUPPLY	
IC2301	AN7523N	IC	
IC3151	C1BB00000712	IC	
IC351	TDA6107JF/N3	IC	
IC451	AN15525A	IC	
IC601	TDA9541N48DA	IC	
IC801	C5HABZZ00116	IC	
IC802	C0EAS0000026	IC	
IC851	C0DAAHF000005	IC	
IC880	AN77L05-TA	IC	
	COILS		
L001	G0C100K000008	COIL	
L002	EXC3BB221H	CHIP BEAD CORE	
L10	K1ZZ00001301	CONNECTOR	
L1101	TALV35VB331K	PEAKING COIL	
L120	G0CR56KA0030	PEAKING COIL	
L125	G0C8R2KA0030	PEAKING COIL	
L181	G0C100K000008	COIL	
L182	TALV35VB6R8K	PEAKING COIL	
L183	G0C5R6KA0030	PEAKING COIL	
L184	TALV35VB6R8K	PEAKING COIL	
L2311	J0JCC0000009	BEAD CORE	
L3136	J0JKA0000038	BEAD CORE	
L3137	J0JKA0000038	BEAD CORE	
L352	J0JKA0000022	BEAD CORE	
L511	J0JKA0000038	BEAD CORE	
L550	J0JKB0000038	BEAD CORE	
L620	J0JCC0000009	BEAD CORE	
L820	J0JKA0000025	BEAD CORE	
L821	J0JKA0000038	BEAD CORE	
L852	EXCELSA35B	BEAD CORE	
L853	J0JKA0000025	BEAD CORE	
L854	J0JKA0000023	BEAD CORE	
L862	G0C1R5KA0030	PEAKING COIL	
L871	G0C1R5KA0030	PEAKING COIL	
L872	G0C1R5KA0030	PEAKING COIL	

Ref. No.	Part No.	Part Name & Description	Remarks
L873	J0JKA0000024	BEAD CORE	
	TRANSISTOR		
Q001	B1ABCE000015	TRANSISTOR	
Q101	B1ABCE000015	TRANSISTOR	
Q102	2SC24800VL	TRANSISTOR	
Q103	B1ABGC000001	TRANSISTOR	
Q105	B1ABCE000015	TRANSISTOR	
Q1052	B1ABCE000015	TRANSISTOR	
Q1053	B1ABCE000015	TRANSISTOR	
Q1110	B1ADDF000005	TRANSISTOR	
Q1130	B1ABCE000015	TRANSISTOR	
Q180	B1ADDF000005	TRANSISTOR	
Q2120	B1ABCE000015	TRANSISTOR	
Q2380	B1ABCE000015	TRANSISTOR	
Q2381	B1ADDF000005	TRANSISTOR	
Q3030	B1ABCE000015	TRANSISTOR	
Q3031	B1ABCE000015	TRANSISTOR	
Q3150	B1ABCE000015	TRANSISTOR	
Q3151	B1ADDF000005	TRANSISTOR	
Q369	B1ADDF000005	TRANSISTOR	
Q400	B1ABCE000015	TRANSISTOR	
Q501	2SC4212H00LB	TRANSISTOR	
Q520	2SB792ATX	TRANSISTOR	
Q551	2SC5902000LK	TRANSISTOR	
Q580	B1ABCE000015	TRANSISTOR	
Q581	B1ADDF000005	TRANSISTOR	
Q601	B1ADDF000005	TRANSISTOR	
Q602	B1ABCE000015	TRANSISTOR	
Q850	B1BCCM000002	TRANSISTOR	
Q852	B1ABCE000015	TRANSISTOR	
Q853	B1ADCE000012	TRANSISTOR	
Q854	B1ABCE000015	TRANSISTOR	
Q855	B1ADCE000012	TRANSISTOR	
Q857	B1BAAN000029	TRANSISTOR	
Q870	B1ABCE000015	TRANSISTOR	
Q871	B1ABCE000015	TRANSISTOR	
	RESISTOR		
R003	D0GD100JA017	F 100HM, J, 1/10W	
R004	ERG3FJ183H	M 18KOHM, J, 3W	
R006	D0GD273JA017	F 27KOHM, J, 1/10W	
R007	D0GD302JA017	F 3KOHM, J, 1/10W	
R008	D0GD681JA017	F 680HM, J, 1/10W	
R011	D0GD103JA017	F 10KOHM, J, 1/10W	
R012	D0GD332JA017	F 3.3KOHM, J, 1/10W	
R021	D0GD273JA017	F 27KOHM, J, 1/10W	
R022	D0GD473JA017	F 47KOHM, J, 1/10W	
R1016	ERJ6ENF1800V	M 180HM, J, 1/10W	
R1017	ERJ6ENF2400V	M 240HM, J, 1/10W	
R1018	ERJ6ENF3300V	M 330HM, J, 1/10W	
R1019	ERJ6ENF4700V	M 470HM, J, 1/10W	
R1020	ERJ6ENF8200V	M 820HM, J, 1/10W	
R1021	ERJ6GEY0R00V	M 00HM, J, 1/10W	
R1057	D0GD271JA017	F 270HM, J, 1/10W	
R1058	D0GD333JA017	F 33KOHM, J, 1/10W	
R1059	D0GD222JA017	F 2.2KOHM, J, 1/10W	
R1060	D0GD683JA017	F 68KOHM, J, 1/10W	
R1103	D0GD680JA017	F 680HM, J, 1/10W	
R1104	D0GD562JA017	F 5.6KOHM, J, 1/10W	
R1105	D0GD562JA017	F 5.6KOHM, J, 1/10W	
R1106	D0GD102JA017	F 1KOHM, J, 1/10W	
R1108	D0GD101JA017	F 100HM, J, 1/10W	
R1109	D0GD101JA017	F 100HM, J, 1/10W	
R1110	D0GD102JA017	F 1KOHM, J, 1/10W	
R1111	D0GD103JA017	F 10KOHM, J, 1/10W	
R1112	D0GD332JA017	F 3.3KOHM, J, 1/10W	
R1113	D0GD682JA017	F 6.8KOHM, J, 1/10W	
R1114	D0GD682JA017	F 6.8KOHM, J, 1/10W	
R1116	D0GD332JA017	F 3.3KOHM, J, 1/10W	
R1120	D0GD102JA017	F 1KOHM, J, 1/10W	
R1122	D0GD332JA017	F 3.3KOHM, J, 1/10W	
R1123	D0GD112JA017	F 1.1KOHM, J, 1/10W	
R1124	ERJ6GEY0R00V	M 00HM, J, 1/10W	
R1125	D0GD103JA017	F 10KOHM, J, 1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R1130	D0GD101JA017	F 100HM, J, 1/10W	
R1131	D0GD101JA017	F 100HM, J, 1/10W	
R1132	D0GD101JA017	F 100HM, J, 1/10W	
R1133	D0GD562JA017	F 5.6KOHM, J, 1/10W	
R1134	D0GD103JA017	F 10KOHM, J, 1/10W	
R1135	D0GD333JA017	F 33KOHM, J, 1/10W	
R1136	D0GD332JA017	F 3.3KOHM, J, 1/10W	
R1140	ERJ6ENF1201V	M 1.2KOHM, J, 1/10W	
R1141	D0GD562JA017	F 5.6KOHM, J, 1/10W	
R1142	D0GD100JA017	F 100HM, J, 1/10W	
R116	D0GD222JA017	F 2.2KOHM, J, 1/10W	
R117	D0GD682JA017	F 6.8KOHM, J, 1/10W	
R118	D0GD103JA017	F 10KOHM, J, 1/10W	
R119	D0GD103JA017	F 10KOHM, J, 1/10W	
R120	D0GD680JA017	F 680HM, J, 1/10W	
R121	D0GD122JA017	F 1.2KOHM, J, 1/10W	
R122	D0GD470JA017	F 470HM, J, 1/10W	
R123	D0GD472JA017	F 4.7KOHM, J, 1/10W	
R124	D0GD122JA017	F 1.2KOHM, J, 1/10W	
R126	D0GD222JA017	F 2.2KOHM, J, 1/10W	
R136	D0GD103JA017	F 10KOHM, J, 1/10W	
R137	D0GD683JA017	F 68KOHM, J, 1/10W	
R138	D0GD102JA017	F 1KOHM, J, 1/10W	
R139	D0GD333JA017	F 33KOHM, J, 1/10W	
R145	D0GD473JA017	F 47KOHM, J, 1/10W	
R150	D0GD222JA017	F 2.2KOHM, J, 1/10W	
R151	D0GD333JA017	F 33KOHM, J, 1/10W	
R182	D0GD221JA017	F 220HM, J, 1/10W	
R185	D0GD103JA017	F 10KOHM, J, 1/10W	
R190	D0GD391JA017	F 390HM, J, 1/10W	
R2120	D0GD103JA017	F 10KOHM, J, 1/10W	
R2121	D0GD683JA017	F 68KOHM, J, 1/10W	
R2122	D0GD683JA017	F 68KOHM, J, 1/10W	
R2302	D0GD153JA017	F 15KOHM, J, 1/10W	
R2303	D0GD472JA017	F 4.7KOHM, J, 1/10W	
R2380	D0GD151JA017	F 150HM, J, 1/10W	
R2381	D0GD102JA017	F 1KOHM, J, 1/10W	
R2382	D0GD102JA017	F 1KOHM, J, 1/10W	
R2383	D0GD103JA017	F 10KOHM, J, 1/10W	
R2384	D0GD100JA017	F 100HM, J, 1/10W	
R3015	D0GD101JA017	F 100HM, J, 1/10W	
R3018	D0GD750JA017	F 750HM, J, 1/10W	
R3022	D0GD101JA017	F 100HM, J, 1/10W	
R3034	D0GD181JA017	F 180HM, J, 1/10W	
R3035	D0GD560JA017	F 560HM, J, 1/10W	
R3036	D0GD330JA017	F 330HM, J, 1/10W	
R3048	D0GD184JA017	F 180KOHM, J, 1/10W	
R3132	D0GD331JA017	F 330HM, J, 1/10W	
R3133	D0GD331JA017	F 330HM, J, 1/10W	
R3142	D0GD184JA017	F 180KOHM, J, 1/10W	
R3145	D0GD101JA017	F 100HM, J, 1/10W	
R3149	D0GD331JA017	F 330HM, J, 1/10W	
R3150	D0GD273JA017	F 27KOHM, J, 1/10W	
R3151	D0GD152JA017	F 1.5KOHM, J, 1/10W	
R3152	D0GD681JA017	F 680HM, J, 1/10W	
R3153	D0GD561JA017	F 560HM, J, 1/10W	
R3154	D0GD102JA017	F 1KOHM, J, 1/10W	
R351	ERJ6ENF1001V	M 1KOHM, J, 1/10W	
R352	ERJ6ENF1001V	M 1KOHM, J, 1/10W	
R353	ERJ6ENF1001V	M 1KOHM, J, 1/10W	
R357	D0GD103JA017	F 10KOHM, J, 1/10W	
R358	D0GD333JA017	F 33KOHM, J, 1/10W	
R359	D0GD273JA017	F 27KOHM, J, 1/10W	
R363	ERC126K222V	S 2.2KOHM, K, 1/2W	
R364	ERC126K222V	S 2.2KOHM, K, 1/2W	
R365	ERC126K222V	S 2.2KOHM, K, 1/2W	
R369	D0GD103JA017	F 10KOHM, J, 1/10W	
R374	ERQ12AJ181P	F 180HM, J, 1/2W	
R401	D0AE104JA046	C 10KOHM, J, 1/4W	
R402	D0GD470JA017	F 470HM, J, 1/10W	
R403	EROS2THF2491	M 2.49KOHM, J, 1/4W	
R404	D0AE751JA046	C 750HM, J, 1/4W	
R405	EROS2THF2701	M 2.7KOHM, J, 1/4W	

Ref. No.	Part No.	Part Name & Description	Remarks
R406	ERDS1FJ1R0T	C 10HM, J, 1/2W	
R407	ER62FJ331H	M 3300HM, J, 2W	
R409	D0GD512JA017	F 5.1KOHM, J, 1/10W	
R410	D0GD202JA017	F 2KOHM, J, 1/10W	
R414	D0GD432JA017	F 4.3KOHM, J, 1/10W	
R415	EROS2THF7500	M 7.5KOHM, J, 1/4W	
R416	ERDS1TJ1R8T	C 1.80HM, J, 1/2W	
R417	ERDS1TJ1R2T	C 1.20HM, J, 1/2W	
R502	D0GD182JA017	F 1.8KOHM, J, 1/10W	
R503	ERJ6GEY0R00V	M 00HM, J, 1/10W	
R504	ERG2SJ682E	M 6.80HM, J, 2W	
R507	D0GD101JA017	F 1000HM, J, 1/10W	
R508	ERG3FJ222H	M 2.2KOHM, J, 3W	
R509	ERG3FJ222H	M 2.2KOHM, J, 3W	
R511	ERJ6ENF1072V	M 10.7KOHM, J, 1/10W	
R512	ERJ6ENF1152V	M 11.5KOHM, J, 1/10W	
R513	ERQ14AJ100E	F 100HM, J, 1/4W	
R520	ERQ12AJ6R8E	F 6.80HM, J, 1/2W	
R521	ERQ12AJ6R8E	F 6.80HM, J, 1/2W	
R522	D0GD273JA017	F 27KOHM, J, 1/10W	
R523	D0GD103JA017	F 10KOHM, J, 1/10W	
R524	D0GD104JA017	F 100KOHM, J, 1/10W	
R525	D0GD392JA017	F 3.90HM, J, 1/10W	
R553	D0GD223JA017	F 22KOHM, J, 1/10W	
R555	ERQ14AJ2R0P	F 20HM, J, 1/4W	
R557	ER050PKF1743	M 174KOHM, F, 1/2W	
R558	D0AE513JA046	C 51KOHM, J, 1/4W	
R559	ERQ1CJP2R7S	F 2.70HM, J, 1W	
R560	ERG1SJ102E	M 1KOHM, 1/10W	
R563	ERJ6GEY0R00V	M 00HM, J, 1/10W	
R564	D0AE393JA046	C 39KOHM, J, 1/4W	
R580	D0GD392JA017	F 3.90HM, J, 1/10W	
R581	ERJ6GEYJ332V	M 3.3KOHM, J, 1/10W	
R583	D0GD274JA017	F 270KOHM, J, 1/10W	
R584	D0GD563JA017	F 56KOHM, J, 1/10W	
R586	D0GD103JA017	F 10KOHM, J, 1/10W	
R587	D0GD823JA017	F 8.2KOHM, J, 1/10W	
R588	D0GD104JA017	F 100KOHM, J, 1/10W	
R591	D0GD103JA017	F 10KOHM, J, 1/10W	
R592	D0GD222JA017	F 2.2KOHM, J, 1/10W	
R593	D0GD103JA017	F 10KOHM, J, 1/10W	
R594	D0GD104JA017	F 100KOHM, J, 1/10W	
R596	ERJ6GEYJ333V	M 33KOHM, J, 1/10W	
R601	D0GD153JA017	F 15KOHM, J, 1/10W	
R603	D0GD393JA017	F 39KOHM, J, 1/10W	
R604	ERJ6GEYJ101V	M 1000HM, J, 1/10W	
R605	ERJ6GEYJ101V	M 1000HM, J, 1/10W	
R606	ERJ6GEYJ101V	M 1000HM, J, 1/10W	
R607	D0GD101JA017	F 1000HM, J, 1/10W	
R612	D0GD102JA017	F 1KOHM, J, 1/10W	
R614	D0GD392JA017	F 3.90HM, J, 1/10W	
R617	D0GD391JA017	F 3900HM, J, 1/10W	
R619	D0GD121JA017	F 1200HM, J, 1/10W	
R620	D0GD121JA017	F 1200HM, J, 1/10W	
R623	D0GD331JA017	F 3300HM, J, 1/10W	
R633	D0GD470JA017	F 470HM, J, 1/10W	
R640	D0GD822JA017	F 8.2KOHM, J, 1/10W	
R672	D0GD181JA017	F 1800HM, J, 1/10W	
R685	D0GD750JA017	F 750HM, J, 1/10W	
R686	D0GD470JA017	F 470HM, J, 1/10W	
R687	D0GD472JA017	F 4.7KOHM, J, 1/10W	
R688	D0GD103JA017	F 10KOHM, J, 1/10W	
R801	D0D72R7KA002	W 2.20HM, 7W	△
R810	ER62FJ470H	M 470HM, J, 2W	
R811	ER62FJ104H	M 100KOHM, J, 2W	
R817	ERDS1TJ100T	C 100HM, J, 1/2W	
R818	ER62FJ683H	M 68KOHM, J, 2W	
R820	ERX12SJR39E	M 0.390HM, J, 1/2W	
R821	ERX12SJR47E	M 0.470HM, J, 1/2W	
R824	D0AE561JA046	C 5600HM, J, 1/4W	
R825	D0AE102JA046	C 1KOHM, J, 1/4W	
R830	D0AE121JA046	C 1200HM, J, 1/4W	
R831	D0AE272JA046	C 2.7KOHM, J, 1/4W	

Ref. No.	Part No.	Part Name & Description	Remarks
R832	D0AE473JA046	C 47KOHM, J, 1/4W	
R840	ERD75TAJ825	C 8.2MOHM, J, 3/4W	△
R850	ERG3SJS470H	M 470HM, J, 3W	
R852	D0AE272JA046	C 2.7KOHM, J, 1/4W	
R854	ERJ6GEYJ103V	M 10KOHM, J, 1/10W	
R855	ERDS2TJ752T	C 7.5KOHM, J, 1/4W	
R857	ERDS2TJ683T	C 68KOHM, J, 1/4W	
R858	ERDS2TJ153T	C 15KOHM, J, 1/4W	
R861	ERDS1TJ221T	C 2200HM, J, 1/2W	
R864	D0GD103JA017	F 10KOHM, J, 1/10W	
R866	D0GD472JA017	F 4.7KOHM, J, 1/10W	
R867	D0AE362JA046	C 3.6KOHM, J, 1/4W	
R868	ERDS1TJ471T	C 4700HM, J, 1/2W	
R870	ERJ6GEYJ222V	M 2.2KOHM, J, 1/10W	
R871	ERDS1TJ103T	C 10KOHM, J, 1/2W	
R872	D0GD272JA017	F 2.7KOHM, J, 1/10W	
R873	D0GD472JA017	F 4.7KOHM, J, 1/10W	
R875	D0GD103JA017	F 10KOHM, J, 1/10W	
	TRANSFOMER		
T501	ZTFP12506A	FLYBACK TRANSF	△
T553	ETH19Y210AZ	H. DRIVE TRANSF.	△
T801	ETS29AV156AC	SWITCHING TRANSF.	△
	OTHERS		
A12	K1KA04AA0093	CONNECTOR 3PIN	
A22	K1KA04AA0190	CONNECTOR 4PIN	
A5	K1KA13A00138	CONNECTOR TO A5	
A8	K1KA13A00138	CONNECTOR TO A8	
CF804	TAP4GA0005	POSISTOR	△
F801	K5D402BK0004	FUSE	△
F801-L	EYF52BCY	FUSE CLIP	
F801-R	EYF52BCY	FUSE CLIP	
JA1	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA10	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA11	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA12	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA3	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA4	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA5	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA6	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA7	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA8	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JA9	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JK3002	K4BK06B00019	REAR AV TERMINAL	
JK3102	K4BC08B00012	FRONT AV TERMINAL	
JS110	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS111	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS112	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS113	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS2140	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS2141	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS2302	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS3001	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS3129	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS3130	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS3132	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS3133	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS3135	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS3141	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS415	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS416	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS610	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS670	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS671	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS672	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS882	ERJ6GEY0R00V	M 00HM, J, 1/10W	
JS883	ERJ6GEY0R00V	M 00HM, J, 1/10W	
L5	K1KA13A00138	CONNECTOR TO L5	
L8	K1KA13A00138	CONNECTOR TO L8	
LF801	ELF21V012S	LINE FILTER	△
PC860	B3PAA0000261	OPTOCOUPLER	△
RM1104	B3RAC0000014	REMOCON RECEIVER	
SC351	330620065	CRT SOCKET	△
SW1001	EVQ11G05R	TOUCH SWITCH	

Ref. No.	Part No.	Part Name & Description	Remarks
SW1002	EVQ11G05R	TOUCH SWITCH	
SW1003	EVQ11G05R	TOUCH SWITCH	
SW1004	EVQ11G05R	TOUCH SWITCH	
SW1005	EVQ11G05R	TOUCH SWITCH	
SW1006	EVQ11G05R	TOUCH SWITCH	
SW801	ESB92DA1B	POWER SWITCH	⚠
TU001	ENV59K01G3YF	TUNER	
X180	EFCS5M7MW3	CERAMIC FILTER	
X181	EFCS6R0MW5	CERAMIC FILTER	
X182	EFCS6R5MW5	CERAMIC FILTER	
X183	EFCS4R5MW5	CERAMIC FILTER	
X601	H0D120500020	CRYSTAL OSC	
XF101	K7256M	SAW FILTER	