

Service Manual

LCD TV



Model No. TH-L32X10R

Chassis: KM02

Destination: IRAN

Specifications

Power Source	AC SINGLE 220 - 240V, 50/60 Hz
Power Consumption	
Average use	113 W
Standby condition	0.6 W
Display panel	
Aspect Ratio	16:9
Visible screen size	80 cm (diagonal) 698 mm (W) × 392 mm (H)
(No. of pixels)	1,049,088 (1,366 (W) × 768 (H))
Sound	
Speaker	Full range × 2 pcs, 8 Ω
Audio Output	20 W (10 W + 10 W), 10% THD
Headphones	M3 (3.5 mm) stereo mini Jack × 1
PC Signals	VGA, SVGA, XGA SXGA (compressed) Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz

Receiving Systems / Band name

17 SYSTEMS	FUNCTIONS
1 PAL B, G, H	Reception of broadcast transmission and playback from video cassette tape recorders.
2 PAL I	
3 PAL D, K	
4 SECAM B, G	
5 SECAM D, K	
6 SECAM K1	
7 NTSC M (NTSC 3.58 / 4.5MHZ)	

8	NTSC 4.43 / 5.5 MHz	
9	NTSC 4.43 / 6.0 MHz	
10	NTSC 4.43 / 6.5 MHz	
11	NTSC 3.58 / 5.5 MHz	Playback from special VCR's or DVD.
12	NTSC 3.58 / 6.0 MHz	
13	NTSC 3.58 / 6.5 MHz	
14	SECAM I	
15	PAL 60 Hz / 5.5 MHz	Playback from Special Disc Players and Special VCR's or DVD.
16	PAL 60 Hz / 6.0 MHz	
17	PAL 60 Hz / 6.5 MHz	

Receiving Channels (Regular TV)**VHF BAND**

2 - 12 (PAL / SECAM B, K1)
 0 - 12 (PAL B AUST.)
 1 - 9 (PAL B N.Z.)
 1 - 12 (PAL / SECAM D)
 1 - 12 (NTSC M JAPAN)
 2 - 13 (NTSC M U.S.A.)

UHF BAND

21 - 69 (PAL G, H, I / SECAM G, K, K1)
 28 - 69 (PAL B AUST.)
 13 - 57 (PAL D, K)
 13 - 62 (NTSC M JAPAN)
 14 - 69 (NTSC M U.S.A.)

CATV

S1 - S20 (OSCAR)
 1 - 125 (U.S.A. CATV)
 C13 - C49 (JAPAN)
 S21 - S41 (HYPER)
 Z1 - Z37 (CHINA)
 5A, 9A (AUST.)

Aerial - Rear

VHF / UHF

Operating Conditions

Temperature : 0°C - 40°C

Humidity : 20 % - 80 % RH (non-condensing)

Connection Terminals

AV1 Input	AUDIO L-R	RCA PIN Type × 2	0.5 V [rms]
	VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)
	COMPONENT	Y	1.0 V [p-p] (including synchronization)
		P _B /C _B , P _R /C _R	± 0.35 V [p-p]
AV2 Input	AUDIO L-R	RCA PIN Type × 2	0.5 V [rms]
	VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)
	COMPONENT	Y	1.0 V [p-p] (including synchronization)
		P _B /C _B , P _R /C _R	± 0.35 V [p-p]
AV3 Input	AUDIO L-R	RCA PIN Type × 2	0.5 V [rms]
	VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)
	S-VIDEO	Mini DIN 4-pin	Y: 1.0 V [p-p] (75 Ω) C: 0.286 V [p-p] (75 Ω)
Others	HDMI 1 / 2 Input	TYPE A Connectors	• This TV supports "HDAVI Control 4" function.
	PC Input	HIGH-DENSITY D-SUB 15 PIN	R, G, B / 0.7 V [p-p] (75 Ω) HD, VD / TTL LEVEL 2.0-5.0 V [rms] (high impedance)
Monitor Input	Card Slot	SD Card slot × 1	
	AUDIO L-R	RCA PIN Type × 2	0.5 V [rms] (High impedance)
	VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)

Dimension (W x H x D)

798 mm × 551 mm × 217 mm (With Pedestal)

798 mm × 511 mm × 93 mm (TV only)

Mass

13.5 kg Net (With Pedestal)

11.5 kg Net (TV only)

Design and specifications are subject to change without notice. Mass and dimensions shown are approximate.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions -----	5	11.2.9. A Board - Sheet : 002 (8 / 8) -----	42
1.1. General Guidelines-----	5	11.2.10. A Board - Sheet : 003 (1 / 6) -----	43
1.2. Touch-Current Check-----	5	11.2.11. A Board - Sheet : 003 (2 / 6) -----	44
1.3. KM02 Chasis Block Diagram -----	6	11.2.12. A Board - Sheet : 003 (3 / 6) -----	45
2 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices -----	7	11.2.13. A Board - Sheet : 003 (4 / 6) -----	46
3 About Lead Free Solder (PbF) -----	8	11.2.14. A Board - Sheet : 003 (5 / 6) -----	47
4 Power LED Blinking Timing -----	9	11.2.15. A Board - Sheet : 003 (6 / 6) -----	48
5 Chassis Board -----	10	11.2.16. A Board - Sheet : 004 (1 / 2) -----	49
5.1. Chassis Installation -----	10	11.2.17. A Board - Sheet : 004 (2 / 2) -----	50
6 Location of Controls and Components -----	11	11.2.18. A Board - Sheet : 005 (1 / 5) -----	51
6.1. Wire Dressing -----	11	11.2.19. A Board - Sheet : 005 (2 / 5) -----	52
7 Disassembly and Assembly Instructions -----	12	11.2.20. A Board - Sheet : 005 (3 / 5) -----	53
7.1. AC Cord Dressing -----	12	11.2.21. A Board - Sheet : 005 (4 / 5) -----	54
7.2. AC Cord Installation-----	13	11.2.22. A Board - Sheet : 005 (5 / 5) -----	55
7.3. VESA Metal Assembly -----	14	11.2.23. A Board - Sheet : 006 (1 / 4) -----	56
7.4. VESA (BC) Installation -----	15	11.2.24. A Board - Sheet : 006 (2 / 4) -----	57
7.5. Pedestal Assembly-----	16	11.2.25. A Board - Sheet : 006 (3 / 4) -----	58
7.6. LED Panel Installation & Fitting-----	18	11.2.26. A Board - Sheet : 006 (4 / 4) -----	59
7.7. Control Panel Assembly -----	19	11.2.27. A Board - Sheet : 007 (1 / 9) -----	60
7.8. A-PB-MTG & Control Button Fixing-----	20	11.2.28. A Board - Sheet : 007 (2 / 9) -----	61
7.9. Side AV Bracket Assembly-----	21	11.2.29. A Board - Sheet : 007 (3 / 9) -----	62
7.10. Speaker Installation -----	22	11.2.30. A Board - Sheet : 007 (4 / 9) -----	63
7.11. LCD Panel-----	23	11.2.31. A Board - Sheet : 007 (5 / 9) -----	64
7.12. LCD Mounting Fixing-----	24	11.2.32. A Board - Sheet : 007 (6 / 9) -----	65
7.13. LCD Panel Assembly Installation-----	25	11.2.33. A Board - Sheet : 007 (7 / 9) -----	66
7.14. EMI Spec (LVDS)-----	26	11.2.34. A Board - Sheet : 007 (8 / 9) -----	67
7.15. Back Cover Screw-----	27	11.2.35. A Board - Sheet : 007 (9 / 9) -----	68
7.16. Indication Sheet Sticking Position -----	28	11.2.36. A Board - Sheet : 008 (1 / 4) -----	69
8 Service Mode Adjustment -----	29	11.2.37. A Board - Sheet : 008 (2 / 4) -----	70
8.1. Self Check Mode -----	29	11.2.38. A Board - Sheet : 008 (3 / 4) -----	71
8.2. Hotel Mode Adjustment -----	29	11.2.39. A Board - Sheet : 008 (4 / 4) -----	72
8.3. Hotel Mode -----	29	11.2.40. A Board - Sheet : 009 (1 / 2) -----	73
9 Measurements and Adjustments -----	30	11.2.41. A Board - Sheet : 009 (2 / 2) -----	74
9.1. Voltage Chart of A Board -----	30	11.2.42. A Board - Sheet : 010 (1 / 5) -----	75
9.2. Voltage Chart of P Board -----	30	11.2.43. A Board - Sheet : 010 (2 / 5) -----	76
9.3. Target of White Balance adjustment value -----	30	11.2.44. A Board - Sheet : 010 (3 / 5) -----	77
10 Printed Circuit Board -----	31	11.2.45. A Board - Sheet : 010 (4 / 5) -----	78
10.1. A-Board -----	31	11.2.46. A Board - Sheet : 010 (5 / 5) -----	79
10.2. A-Board -----	32	11.2.47. A Board - Sheet : 011 (1 / 2) -----	80
11 Schematic Diagram -----	33	11.2.48. A Board - Sheet : 011 (2 / 2) -----	81
11.1. Schematic Diagram Notes -----	33	11.2.49. A Board - Sheet : 012 (1 / 3) -----	82
11.2. A Board -----	34	11.2.50. A Board - Sheet : 012 (2 / 3) -----	83
11.2.1. A Board - Sheet : 001 (1 / 1) -----	34	11.2.51. A Board - Sheet : 012 (3 / 3) -----	84
11.2.2. A Board - Sheet : 002 (1 / 8) -----	35	11.2.52. A Board - Sheet : 013 (1 / 5) -----	85
11.2.3. A Board - Sheet : 002 (2 / 8) -----	36	11.2.53. A Board - Sheet : 013 (2 / 5) -----	86
11.2.4. A Board - Sheet : 002 (3 / 8) -----	37	11.2.54. A Board - Sheet : 013 (3 / 5) -----	87
11.2.5. A Board - Sheet : 002 (4 / 8) -----	38	11.2.55. A Board - Sheet : 013 (4 / 5) -----	88
11.2.6. A Board - Sheet : 002 (5 / 8) -----	39	11.2.56. A Board - Sheet : 013 (5 / 5) -----	89
11.2.7. A Board - Sheet : 002 (6 / 8) -----	40	11.2.57. A Board - Sheet : 014 (1 / 4) -----	90
11.2.8. A Board - Sheet : 002 (7 / 8) -----	41	11.2.58. A Board - Sheet : 014 (2 / 4) -----	91
		11.2.59. A Board - Sheet : 014 (3 / 4) -----	92

11.2.60. A Board - Sheet : 014 (4 / 4)-----	93
11.2.61. A Board - Sheet : 015 (1 / 7)-----	94
11.2.62. A Board - Sheet : 015 (2 / 7)-----	95
11.2.63. A Board - Sheet : 015 (3 / 7)-----	96
11.2.64. A Board - Sheet : 015 (4 / 7)-----	97
11.2.65. A Board - Sheet : 015 (5 / 7)-----	98
11.2.66. A Board - Sheet : 015 (6 / 7)-----	99
11.2.67. A Board - Sheet : 015 (7 / 7)-----	100
11.2.68. A Board - Sheet : 016 (1 / 1)-----	101
11.3. K Board -----	102
11.3.1. K Board (1 / 2)-----	102
11.3.2. K Board (2 / 2)-----	103
11.4. P Board -----	104
11.4.1. P Board (1 / 7)-----	104
11.4.2. P Board (2 / 7)-----	105
11.4.3. P Board (3 / 7)-----	106
11.4.4. P Board (4 / 7)-----	107
11.4.5. P Board (5 / 7)-----	108
11.4.6. P Board (6 / 7)-----	109
11.4.7. P Board (7 / 7)-----	110
11.5. V Board -----	111
11.5.1. V Board (1 / 4)-----	111
11.5.2. V Board (2 / 4)-----	112
11.5.3. V Board (3 / 4)-----	113
11.5.4. V Board (4 / 4)-----	114
12 Exploded View and Replacement Parts List -----	115
12.1. Exploded View and Mechanical Replacement Parts List -----	115
12.2. Electrical Replacement Parts List-----	115
12.2.1. Replacement Parts List Notes -----	115
12.2.2. Electrical Replacement Parts List -----	116

1 Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Touch-Current Check

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a measuring network for touch currents between each exposed metallic part on the set and a good earth ground such as a water pipe as shown in Figure 1.
3. Use the Leakage Current Tester (Simpson 228 or equivalent) to measure the potential across the measuring network.
4. Check each exposed metallic part and measure the voltage at each point.
5. The potential at any point (touch current) expressed as voltage U_1 and U_2 , do not exceed the following values:

For AC: $U_1 = 35 \text{ V}$ (peak) and $U_2 = 0.35 \text{ V}$ (peak);

For DC: $U_1 = 1.0 \text{ V}$,

NOTE :

The limit value of $U_2 = 0.35 \text{ V}$ (peak) for AC and $U_1 = 1.0 \text{ V}$ for DC correspond to the values 0.7 mA (peak) AC and 2.0 mA DC.

The limit value $U_1 = 35 \text{ V}$ (peak) for AC correspond to the value 70 mA (peak) AC for frequencies greater than 100 kHz .

6. Should a measurement be out of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

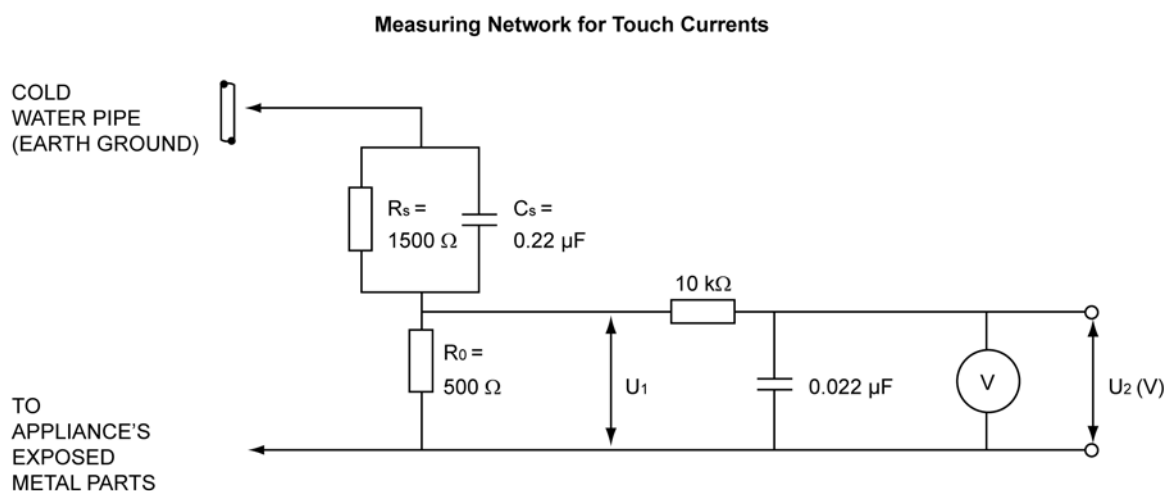


Figure 1


Resistance values in ohms (Ω)

V: Voltmeter or oscilloscope
(r.m.s. or peak reading)

Input resistance: $\geq 1 \text{ M}\Omega$
 Input capacitance: $\leq 200 \text{ pF}$
 Frequency range: 15 Hz to 1 MHz and DC respectively

NOTE - Appropriate measures should be taken to obtain the correct value in case of non-sinusoidal waveforms.

1.3. KM02 Chasis Block Diagram

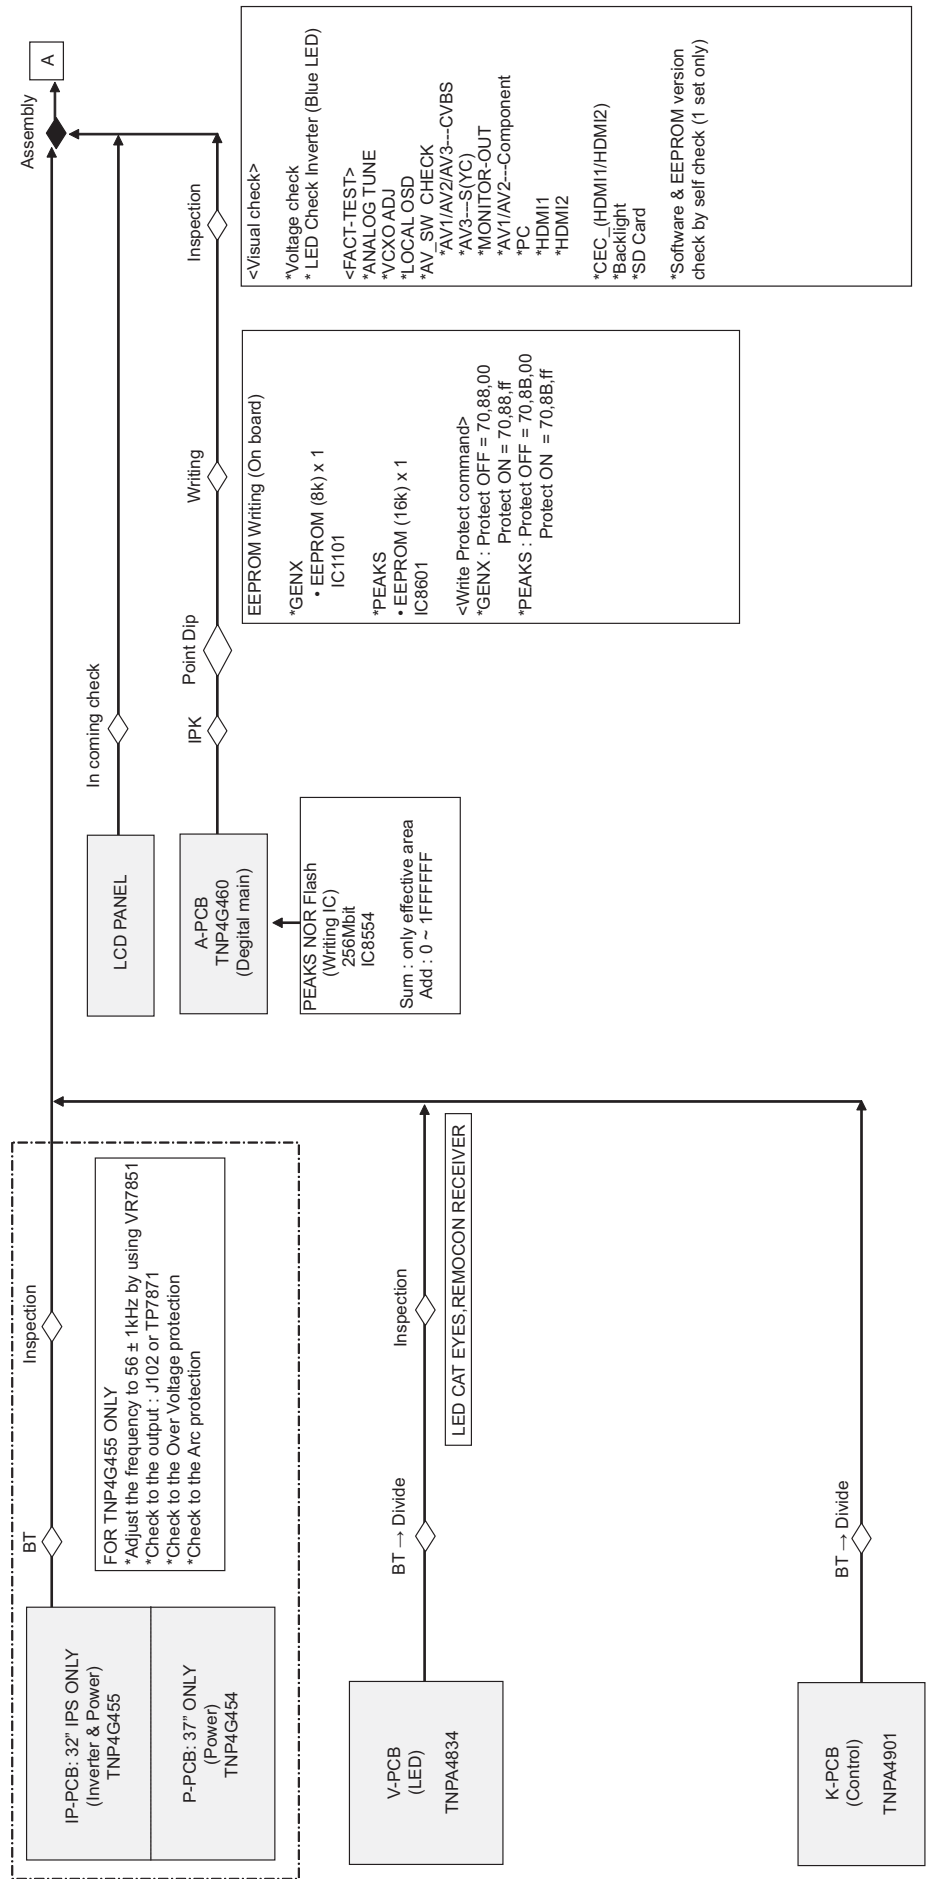

2 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminium foil to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it (most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminium foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution:

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices (otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by Δ in the Schematic Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission from the manufacturer.

3 About Lead Free Solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead Solder and PbF will refer to Lead Free Solder.

The Lead Free Solder (PbF) used in our manufacturing process and discussed below is (Sn+Ag+Cu).

Those are Tin (Sn), Silver (Ag) and Copper (Cu), although other types are available.

This model uses PbF in its manufacture due to environmental conservation issues. For service and repair work, we would suggest the use of PbF as well, although Pb may be used.

PCBs manufactured using lead-free will have the "PbF within a leaf Symbol" stamped on their back.

Caution

- PbF has a higher melting point than that of standard solder. Typically the melting point is 50 ~ 70°F (30~40°C) higher. Please use a high temperature soldering iron and set it to 700 ± 20°F (370 ± 10°C).

- PbF will tend to splash when heated too high (about 1100°F or 600°C).

If you must use Pb solder, please completely remove all of the PbF on the pins or solder area before applying Pb. If this is not practical, be sure to heat the PbF until it melts, before applying Pb.

- After applying PbF to double layered boards, please check the component side for excess solder which may flow onto the opposite side (see Figure 2).

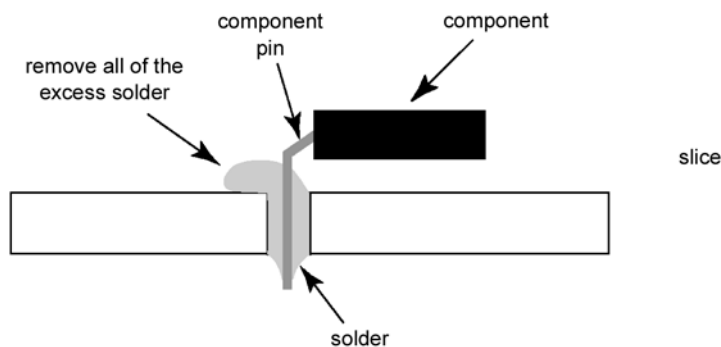


Figure 2

Suggested PbF

There are several kinds of PbF available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper) and Sn+Zn+Bi (tin, zinc, bismuth) solders can also be used.

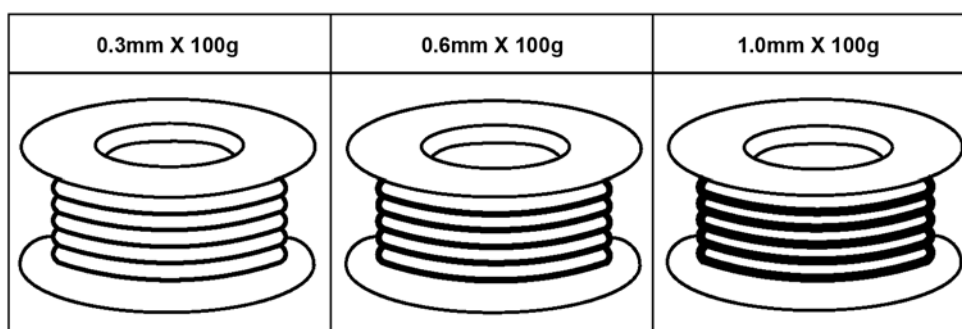


Figure 3

4 Power LED Blinking Timing


1. Subject

Information of LED Flashing timing.

2. Contents

When an abnormality has occurred in the unit, the protection circuit operates and resets to standby mode. At this time, the defective block can be identified by the number of blinking of the Power LED on the front panel of the unit as follow:


Blinking times	Contents
1	Lamp short circuit protection Lamp open protection Arc protection
2	Cooling fan SOS = incomplete connection - no function mode.
3	P board 30V / 18V / 9V decreased / short circuit detection.
4	DTV12V decreased / short circuit , main convertor stop detection.
5	Sub 5V decreased / short circuit detection.
6	Sub 5V decreased / short circuit detection. (same as 5 times LED blinking)
7	Sub 3.3V decreased / short circuit detection.
8	Sub 5V decreased / short circuit detection. (same as 5 times LED blinking)
9	Audio amp SOS.
10	HQ1 incomplete connection, no function mode.
13	When peaks communication error SOS.

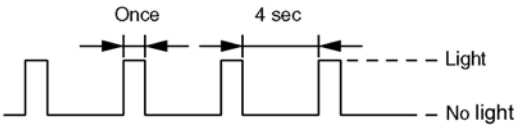No. of blinks	Blinking timing	Contents	Check point
1		Inverter SOS (24 V line Inverter in LCD panel)	POWER UNIT LCD PANEL
3		SOS BT 30 V/ SOUND 18 V/ PANEL 12 V/	AP-BOARD H-BOARD
4		Sub 9 V	AP-BOARD
5		Sub 5 V	AP-BOARD
6		Main 9 V	AP-BOARD
8		Main 3.3 V	AP-BOARD

5 Chassis Board

5.1. Chassis Installation


1. Stick FELT to SIDE AV BRACKET.
 - Stick the SIDE AV INDI. SHEET on the SIDE AV BRACKET.
 - Insert the SIDE AV BRACKET from the side position of the A-PCB.

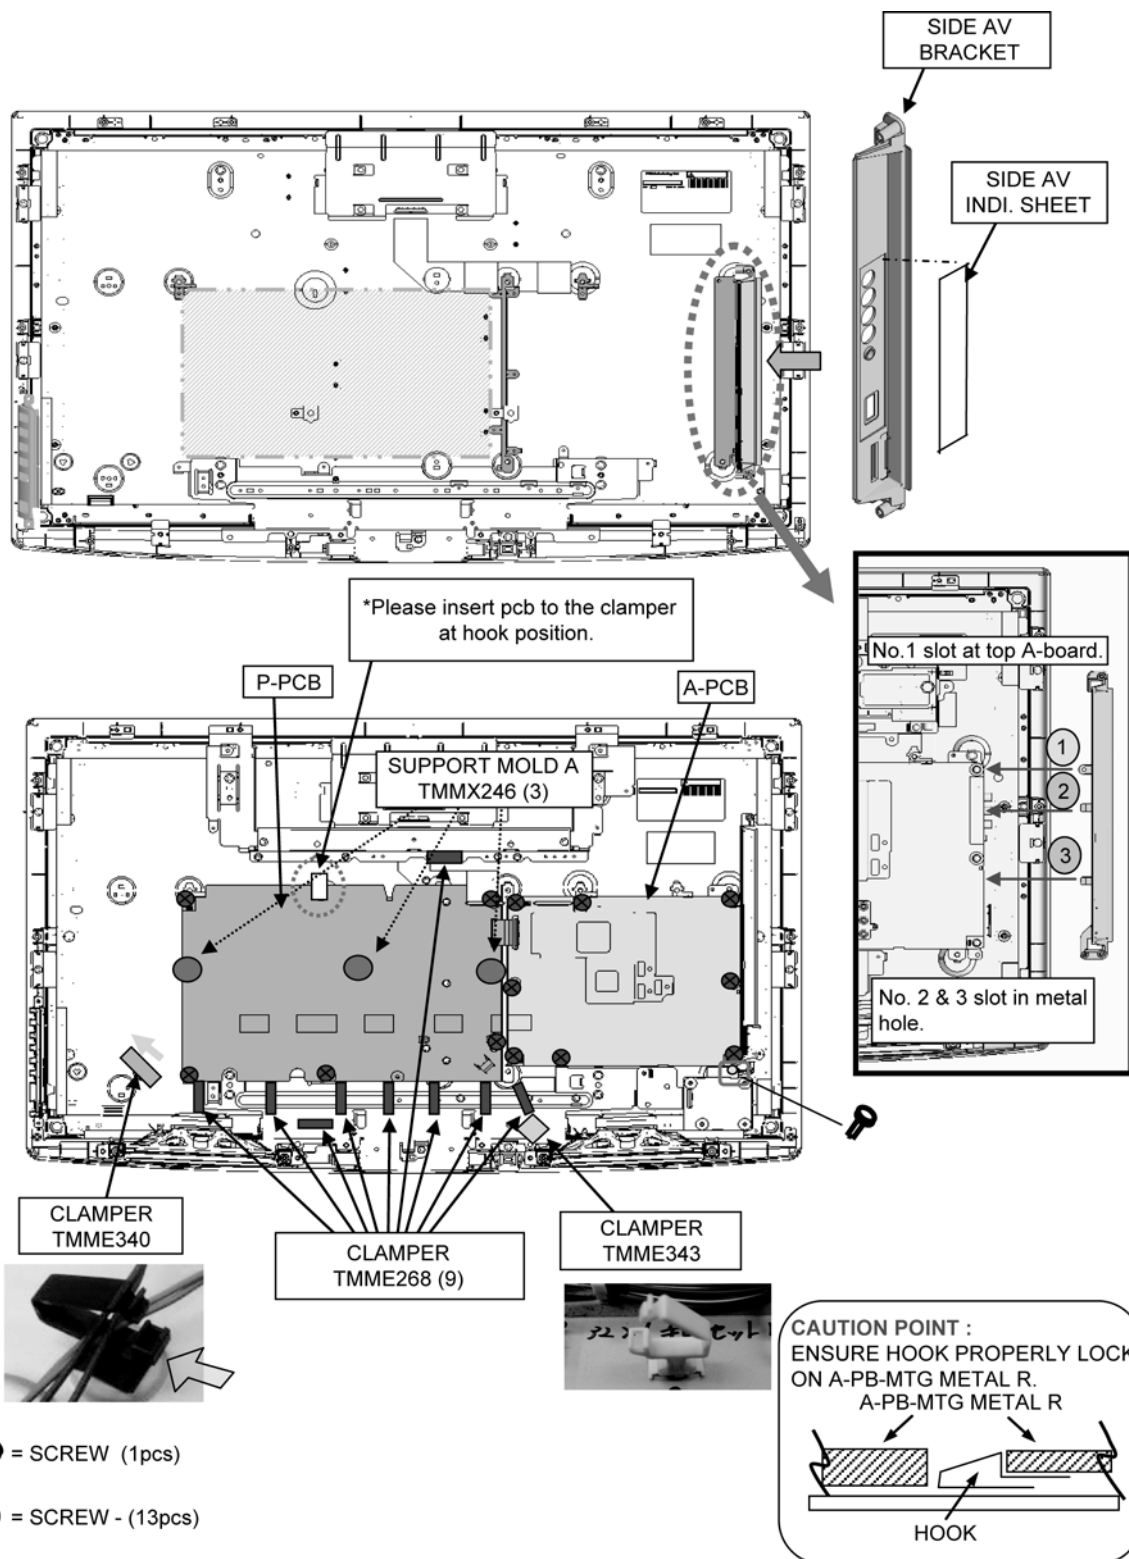

6 Location of Controls and Components

6.1. Wire Dressing

1. Wiring No. 1 ~ No.7
2. Remove dust of terminal of LVDS and PB connector. (by ion blow) Pos. A11
3. Insert LVDS into A11.

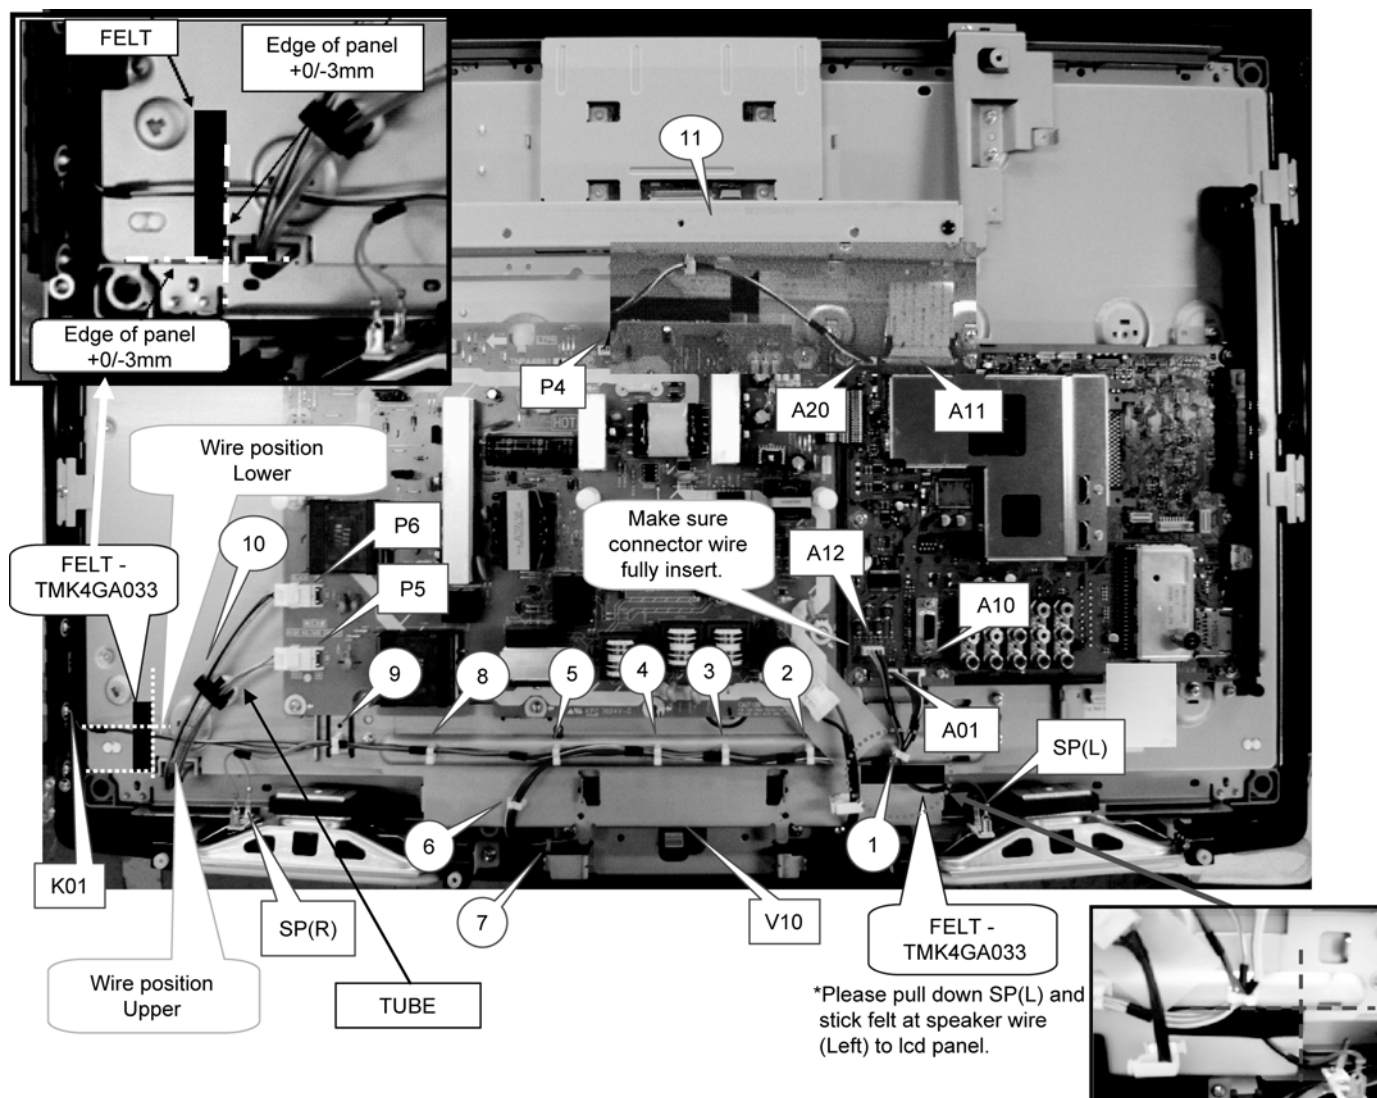


Wire		Clamper										
		1	2	3	4	5	6	7	8	9	10	11
No.1	A10 ~ V10	●	●	●	●	●	●	●				
No.2	A01 ~ K01	●	●	●	●	●			●	●		
No.3	A12 ~ SP(L)	●										
No.4	A12 ~ SP(R)	●	●	●	●	●			●	●		
No.5	~ P5										●	
No.6	~ P6										●	
No.7	A20 ~ P4											●

7 Disassembly and Assembly Instructions


7.1. AC Cord Dressing

1. Clamp plug with clumper.
2. Insert beads 3pcs. And slide down to lower hole.

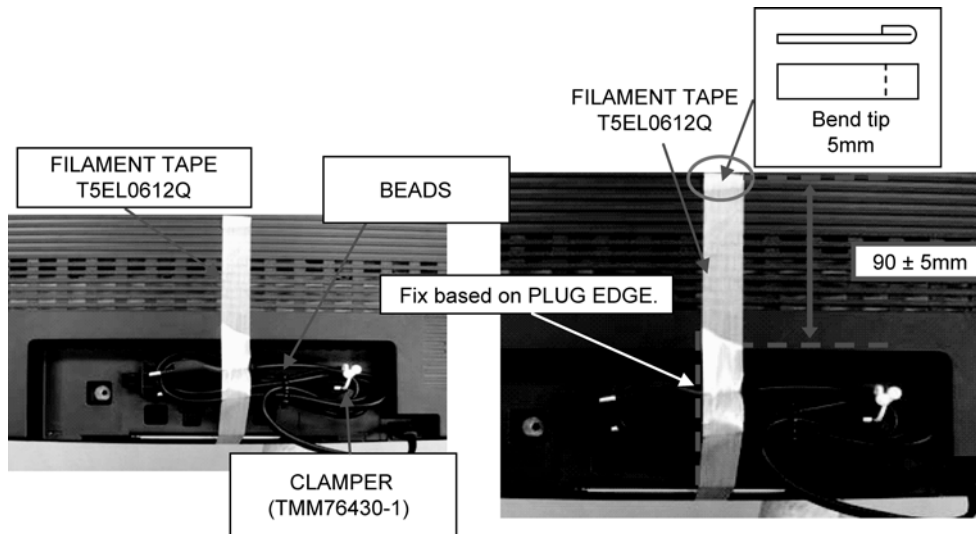


7.2. AC Cord Installation

1. Put on the AC CORD BRACKET on the CABINET.
2. Fix the AC CORD BRACKET with SCREW.
3. AC CORD BARRIER setting.
4. Insert AC CORD connector into P-PCB connector.
5. Clamp the AC CORD.
6. Insert AC CORD bushing into the AC CORD BRACKET.

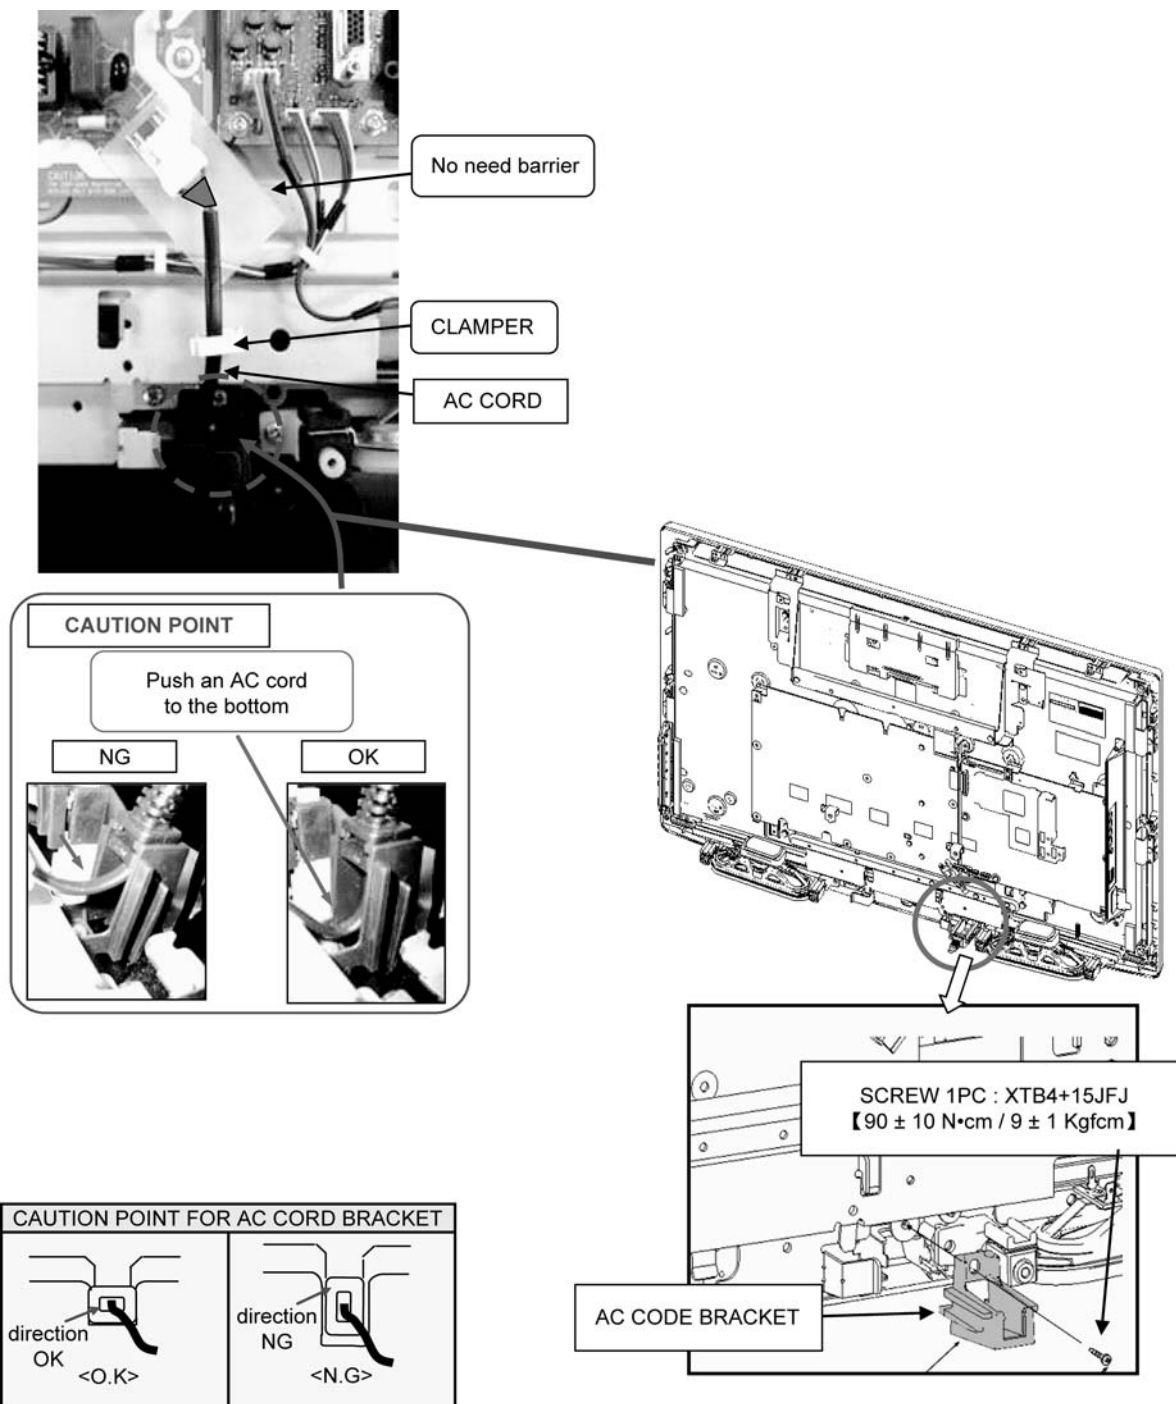

7.3. VESA Metal Assembly


1. Assemble LCD TOP MTG(L,R) , VESA METAL(upper) and fix them with screw. **Please use jig for vesa metal assembly preparation.**

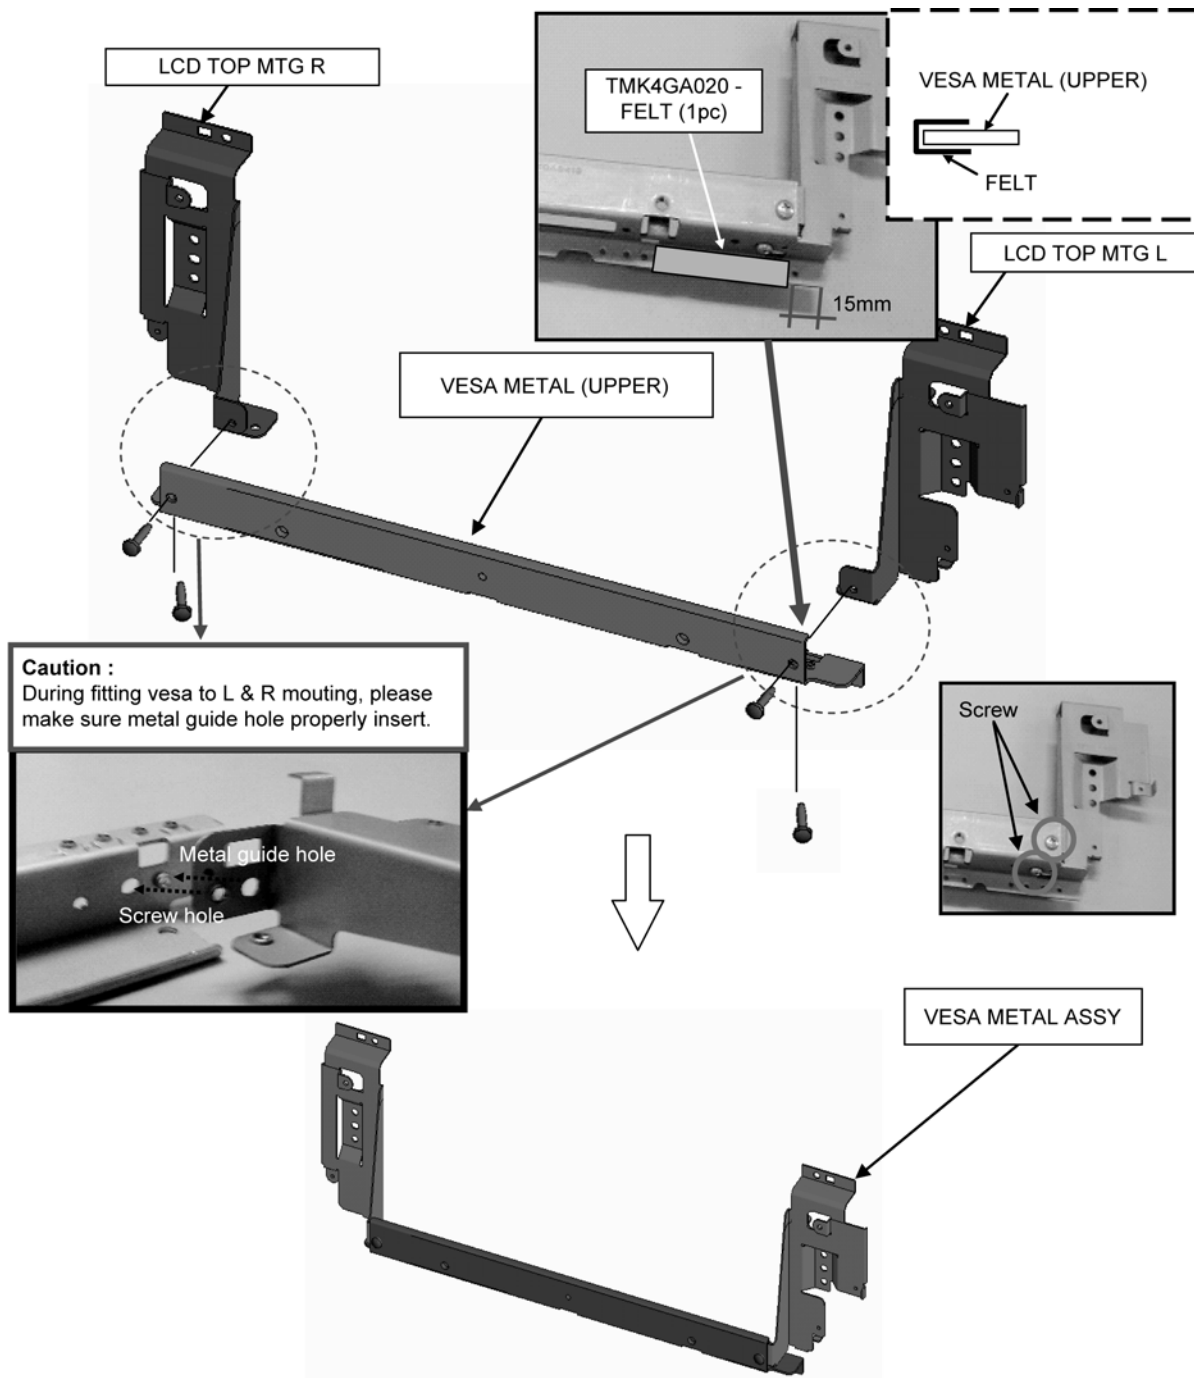

 = SCREW = 4 pcs

7.4. VESA (BC) Installation


1. Put VESA METAL(BC) on the BACK COVER.
2. Fix them with SCREWS.

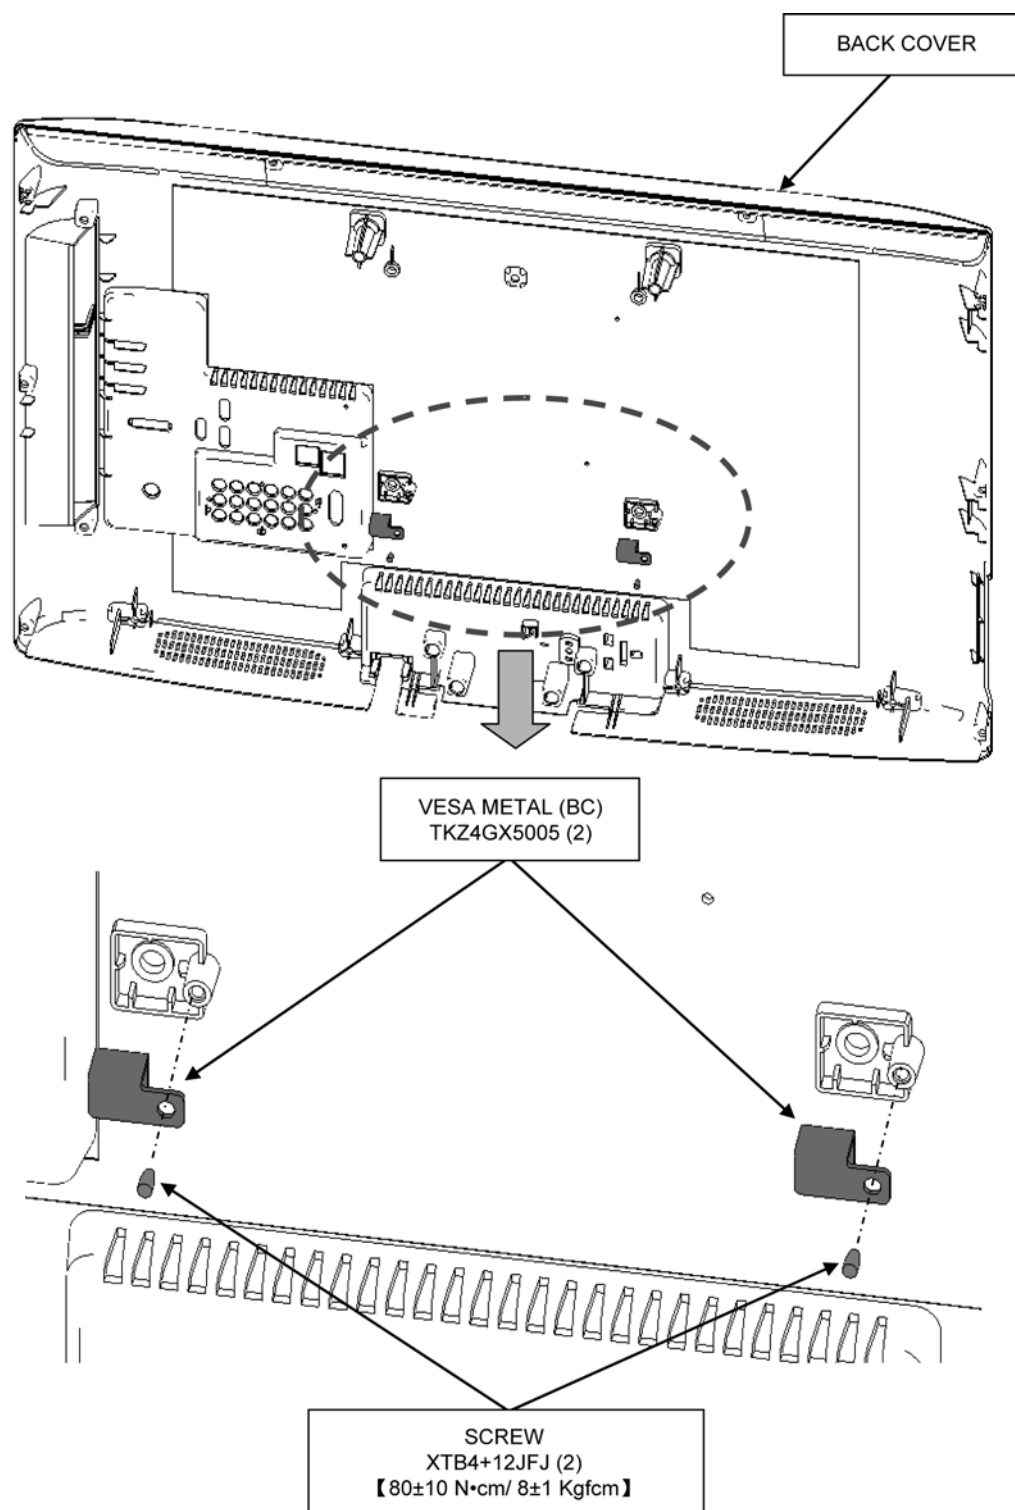

7.5. Pedestal Assembly


Step 1

Setting PEDESTAL COVER and STAND MTG SPACER and BASE PLATE with SCREWS.

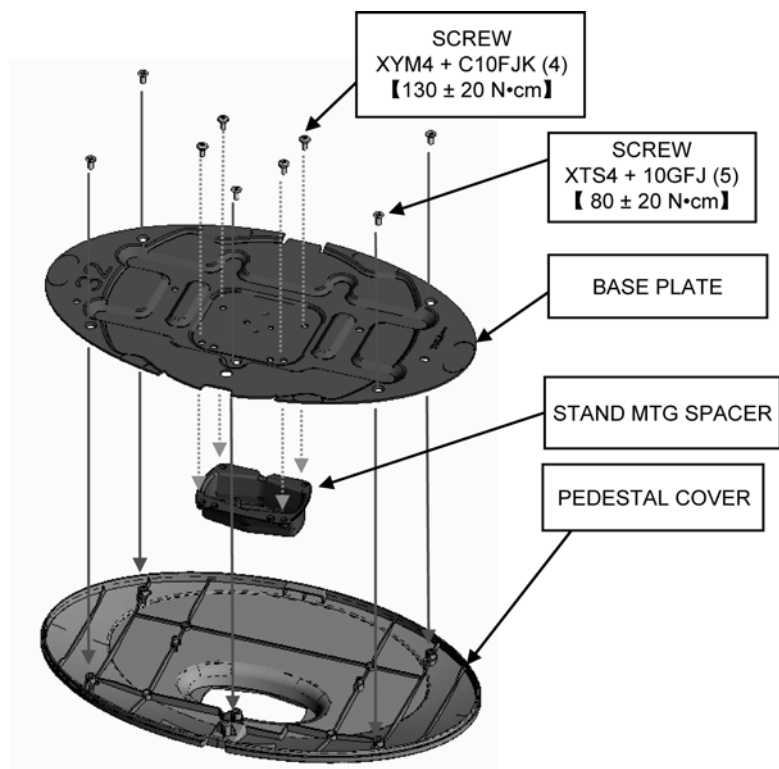


Step 2

1. Stick the RUBBER FOOT at bottom ROTATION PLATE.
2. Make sure ROTATION PLATE surfacefully cover by grease. Follow the picture

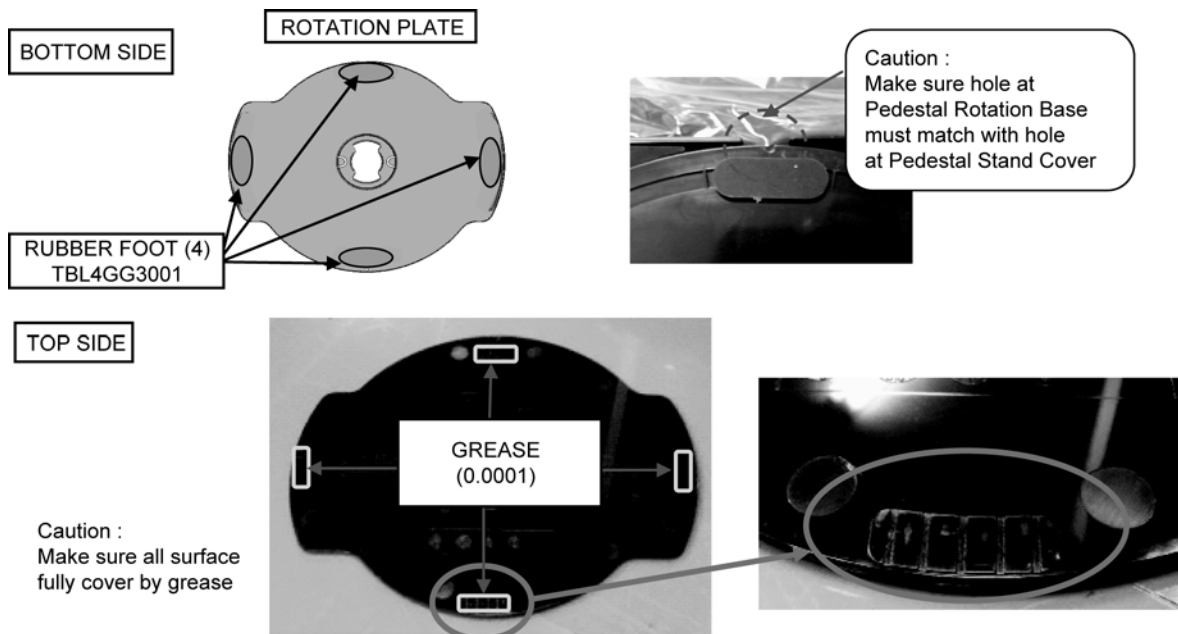


Step 3

Setting ROTATION PLATE and BUSH with SCREWS.

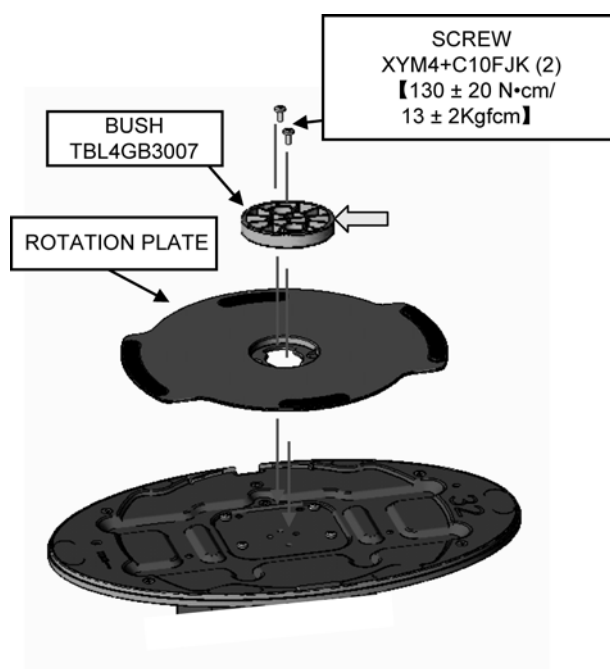
**Step 4**

Setting STAND MTG with SCREWS.

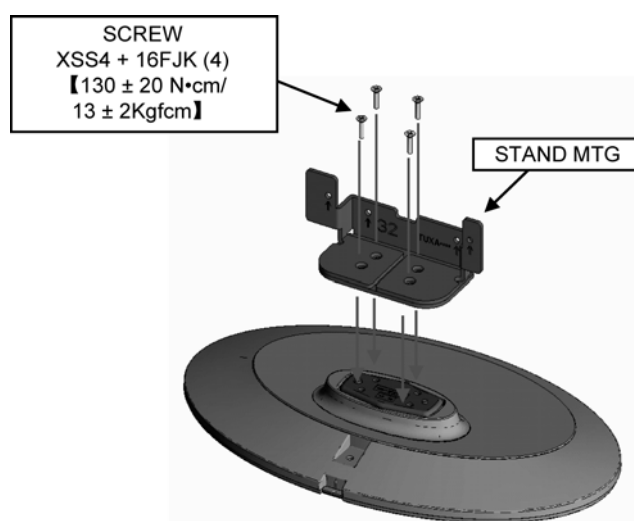


7.6. LED Panel Installation & Fitting

1. Put LED SHADE RIB on CABINET.
2. Fix LED PANEL on CABINET.
3. Wire connecting. (V10)
4. Put V-PCB on CABINET.
5. Fix them with SCREW.
6. Insert the CLAMPER.

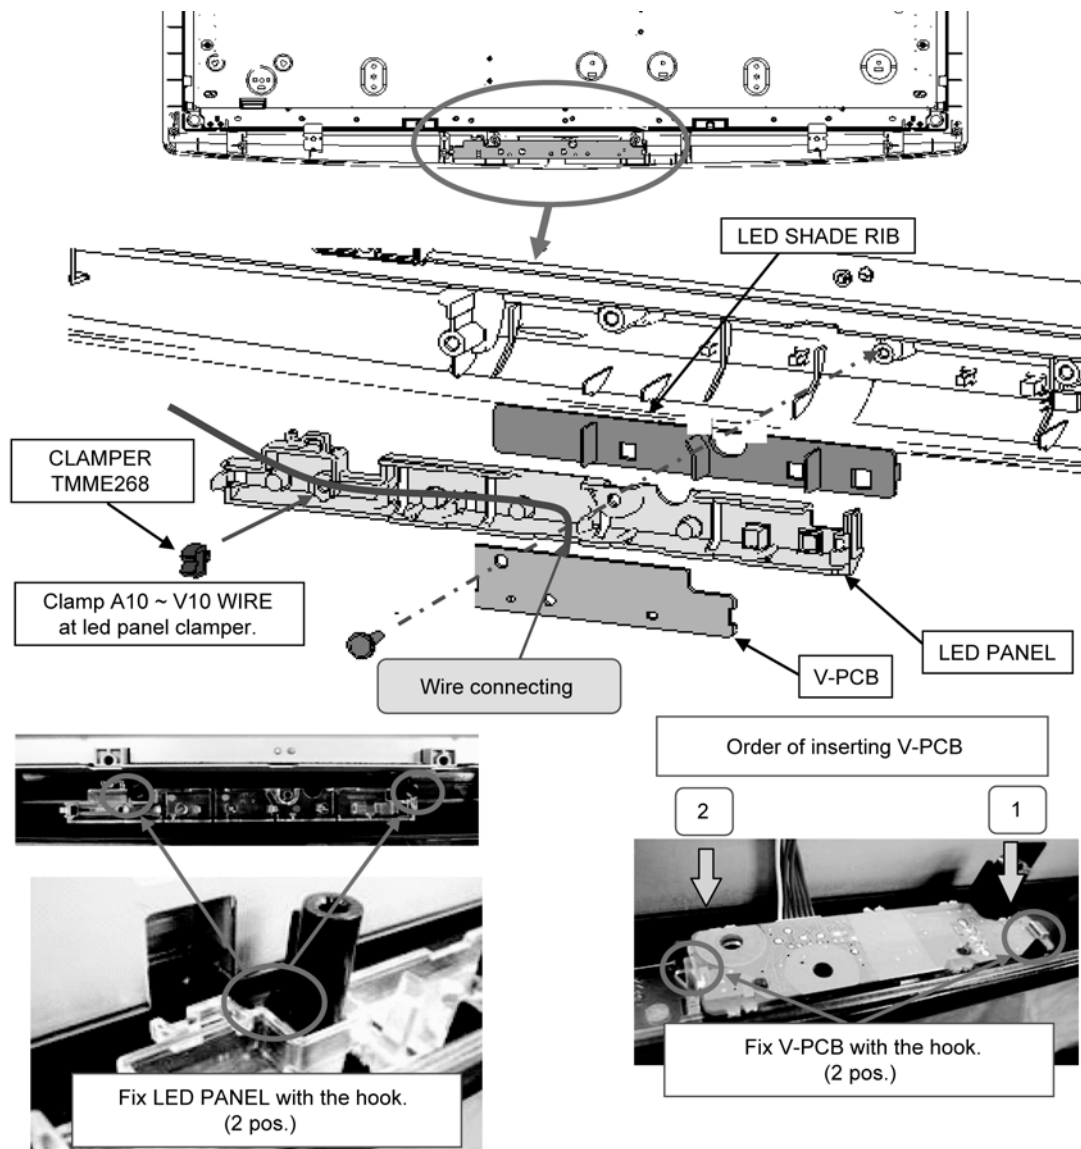


 = SCREW - (1 Pcs)

CAUTION POINT :
ENSURE HOOK PROPERLY
LOCK ON THE PCB

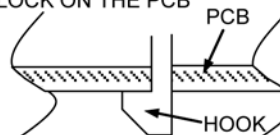


7.7. Control Panel Assembly

1. Wire connecting. (K1)
2. Assemble POWER BUTTON to the K-PRINT.
3. Assemble K-PRINT, CONTROL BUTTON, CONTROL PANEL BRACKET.
4. Fix them with SCREWS.
5. Stick the FELT.

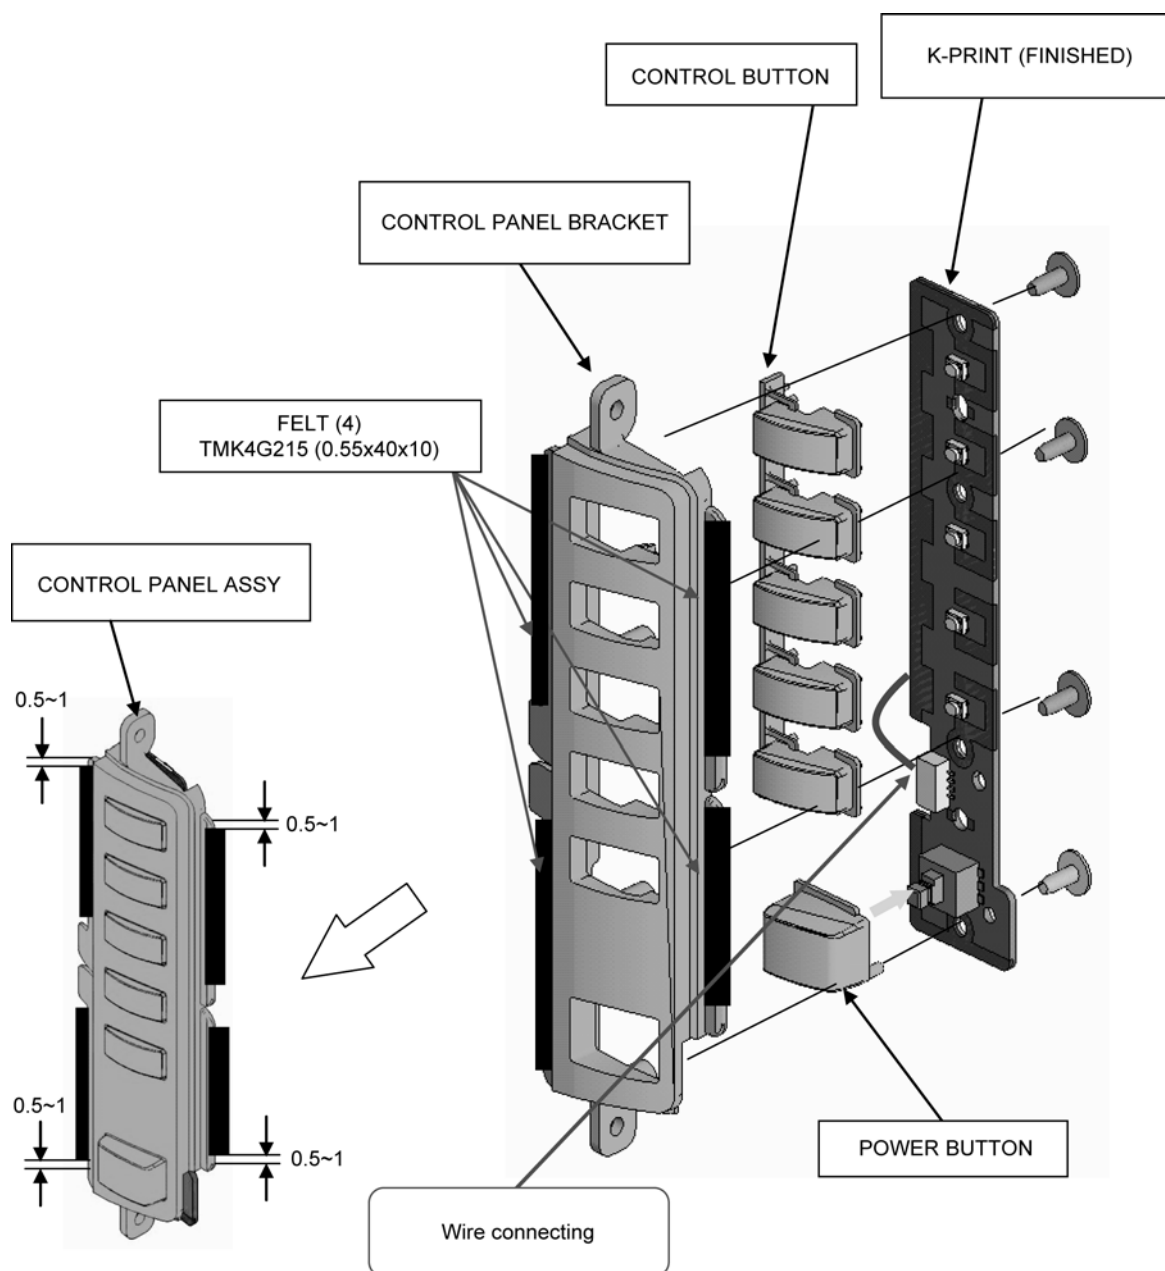


7.8. A-PB-MTG & Control Button Fixing

1. Stick P-PCB BARRIER and put all METAL part follow to the picture. Fix all metal part with screw.
2. Put CONTROL PANEL ASSY on the CABINET. Fix the CONTROL PANEL with SCREWS.

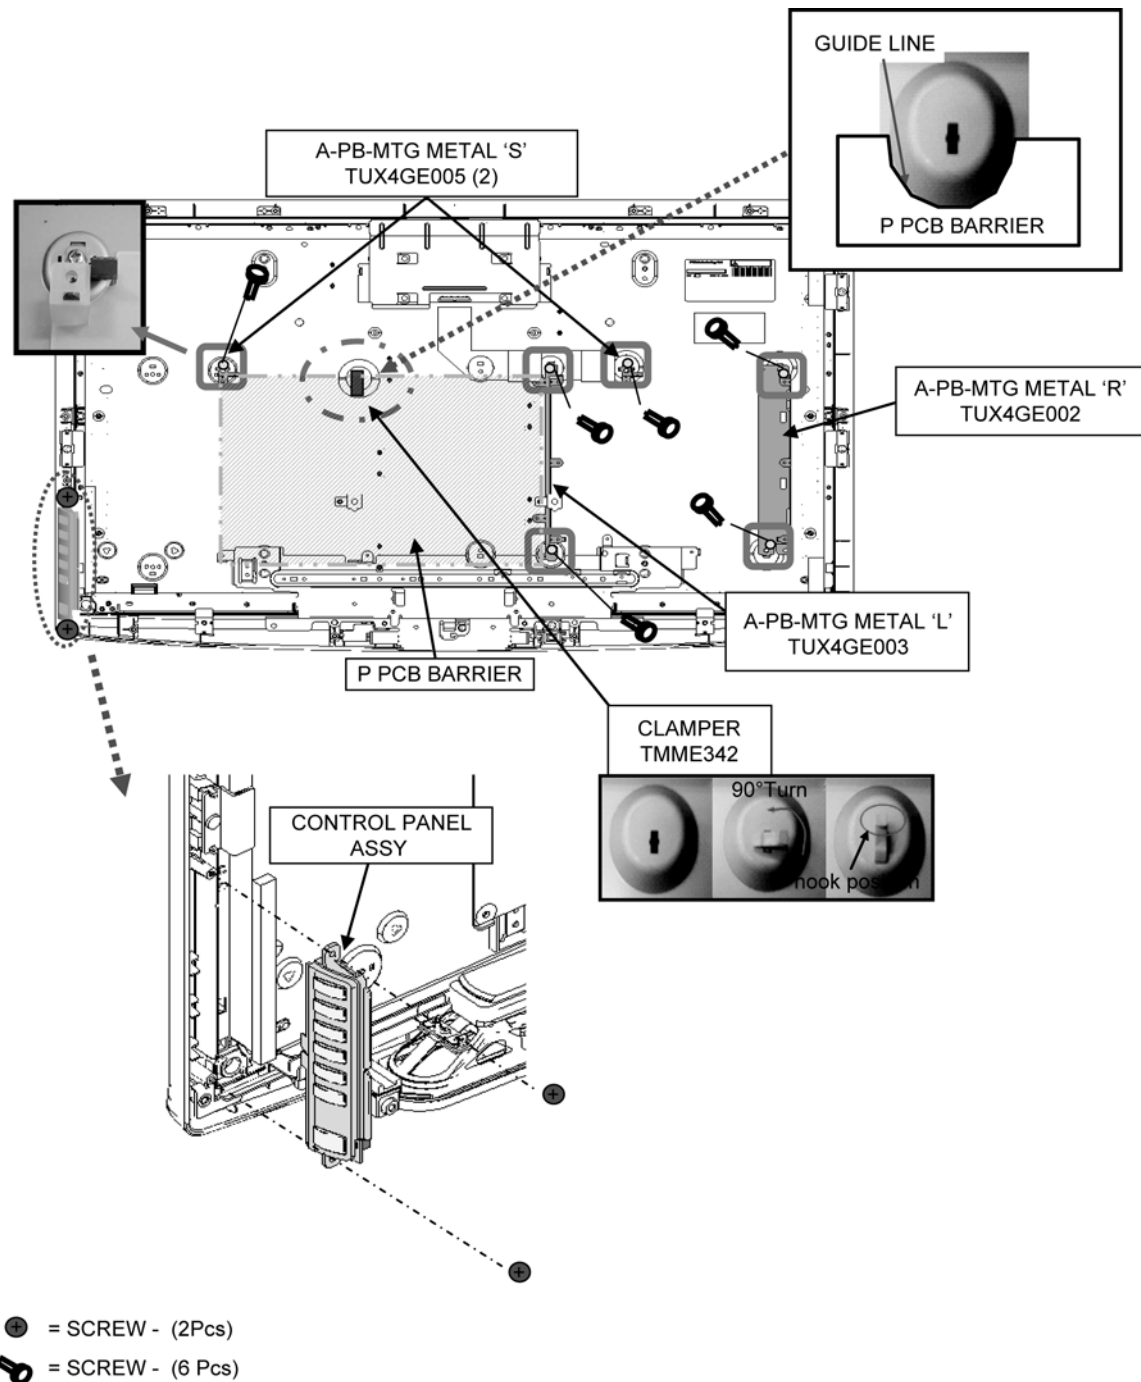


7.9. Side AV Bracket Assembly

- STICK FELT TMK4G028 (7 X 240 X 0.55t) - 2 PCS.

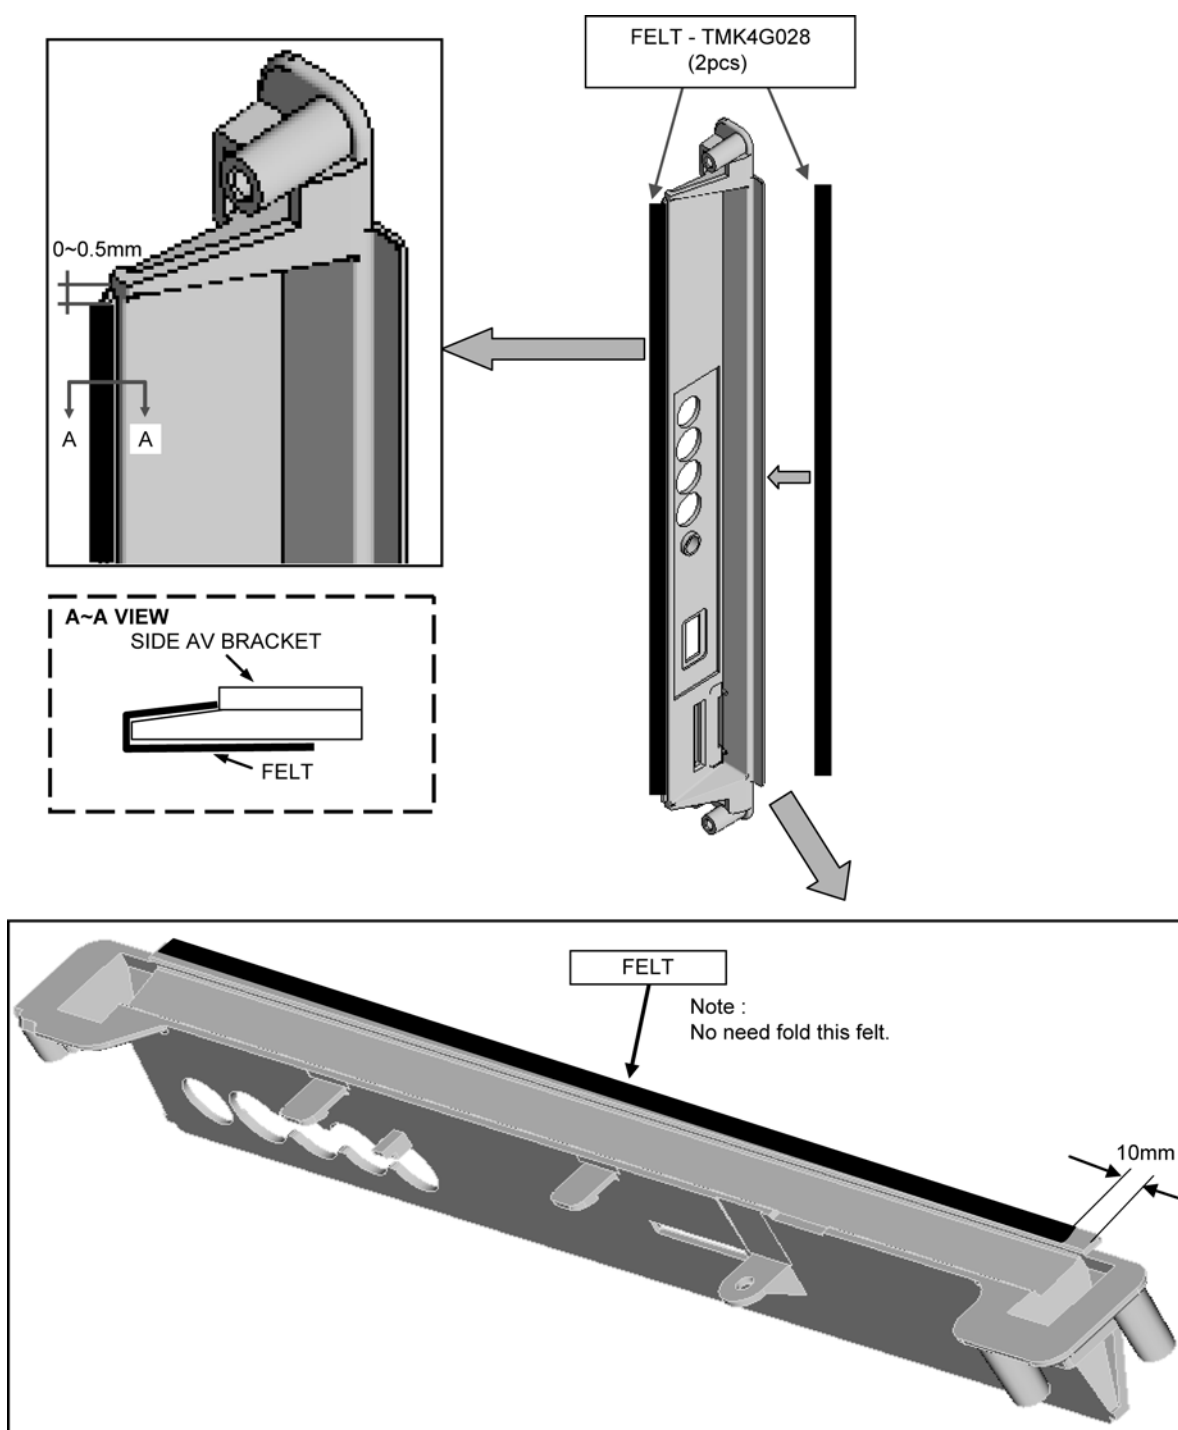


7.10. Speaker Installation

1. Stick the SPONGE. Follow the spec. below.
2. SP BRACKET slot at CABINET.
3. Insert the SP RUBBER BUSH into the SP UNIT.
4. Insert the SP UNIT to SP BRACKET.
5. Fix them with SCREWS.

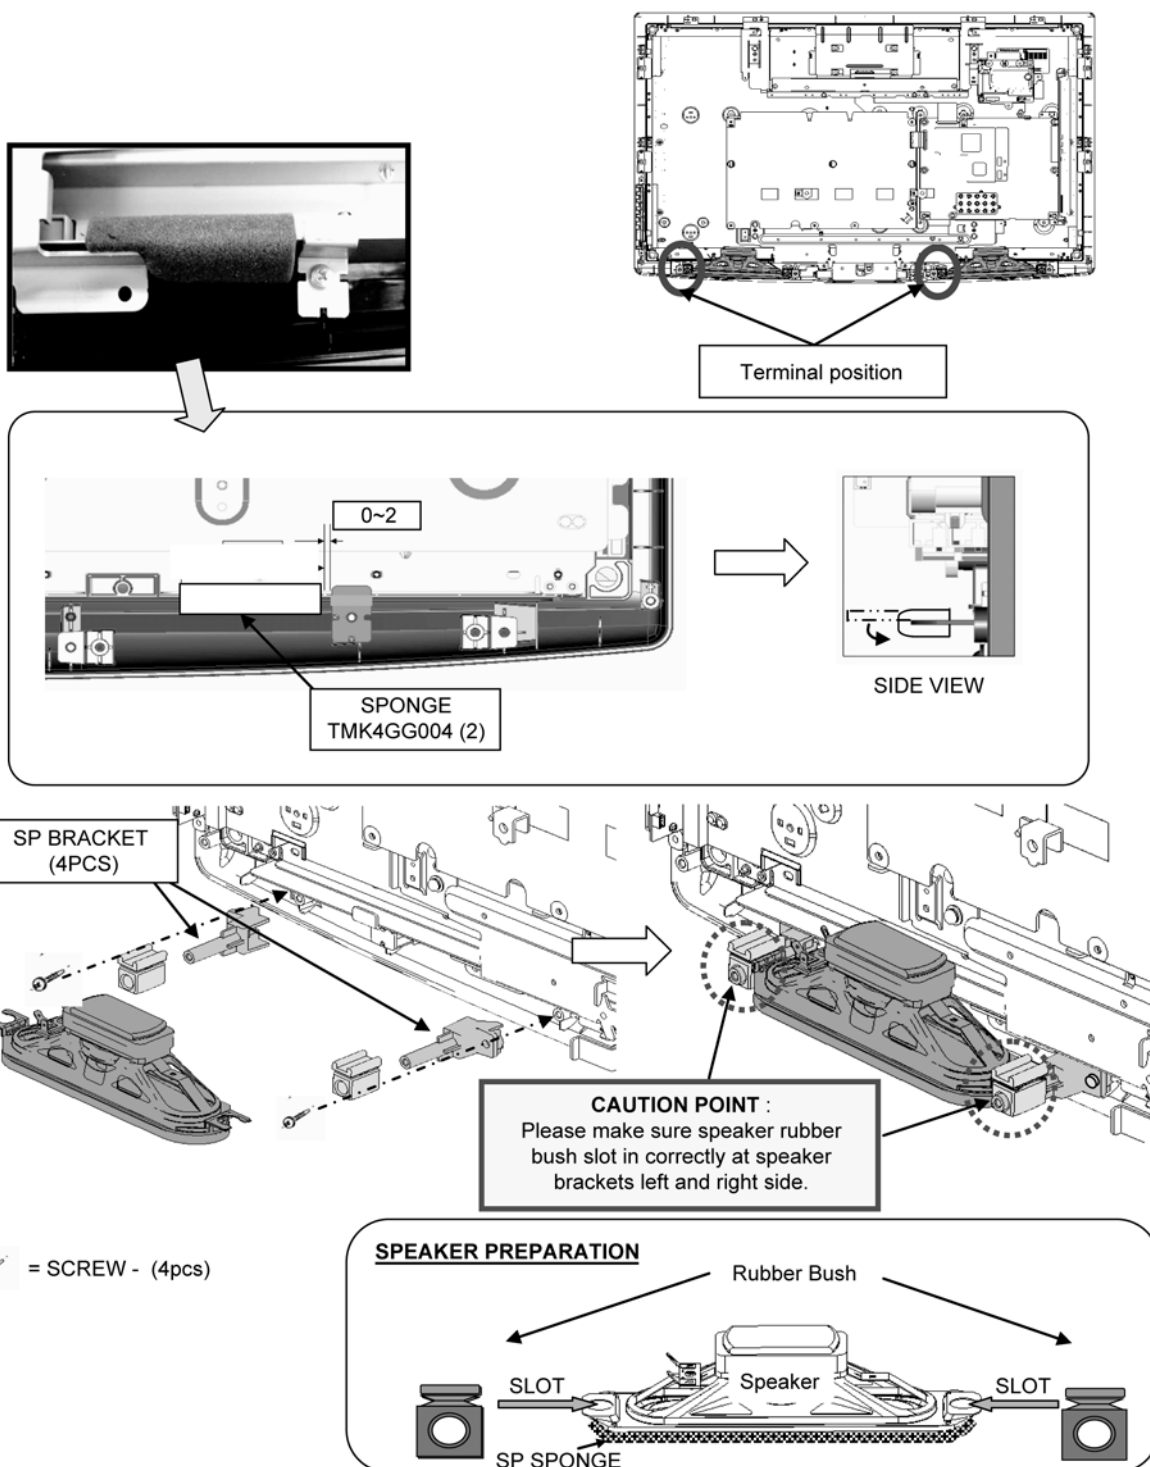

7.11. LCD Panel


1. Remove dust of terminal of LVDS. (by ion blow)
2. Remove dust of terminal of T-con connector. (by ion blow)
3. Insert LVDS into T-con connector.
4. Stick the tape to fix LVDS.
5. Stick the SPONGE at left and right lcd panel.
6. Stick 1pc SPONGE between lcd panel wire.

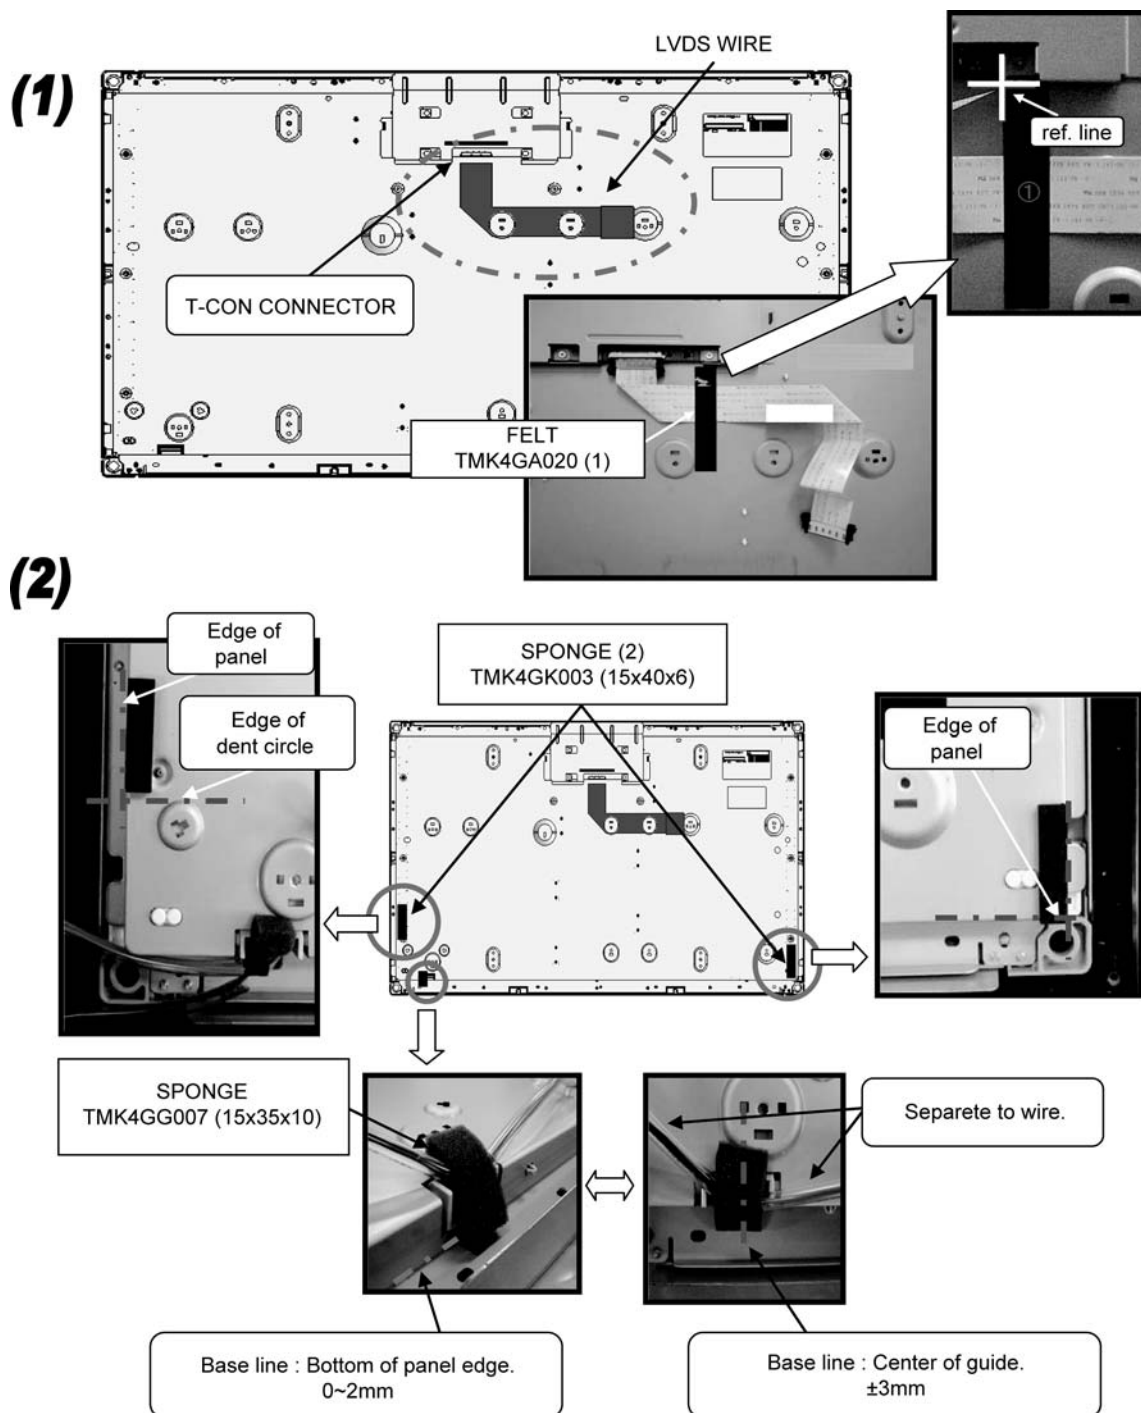

7.12. LCD Mounting Fixing


Step 1

1. LCD SIDE MTG on the CABINET.
2. LCD BTM MTG on the CABINET.
3. LCD BOTTOM CORNER MTG on the CABINET.
4. Fix them with SCREW.

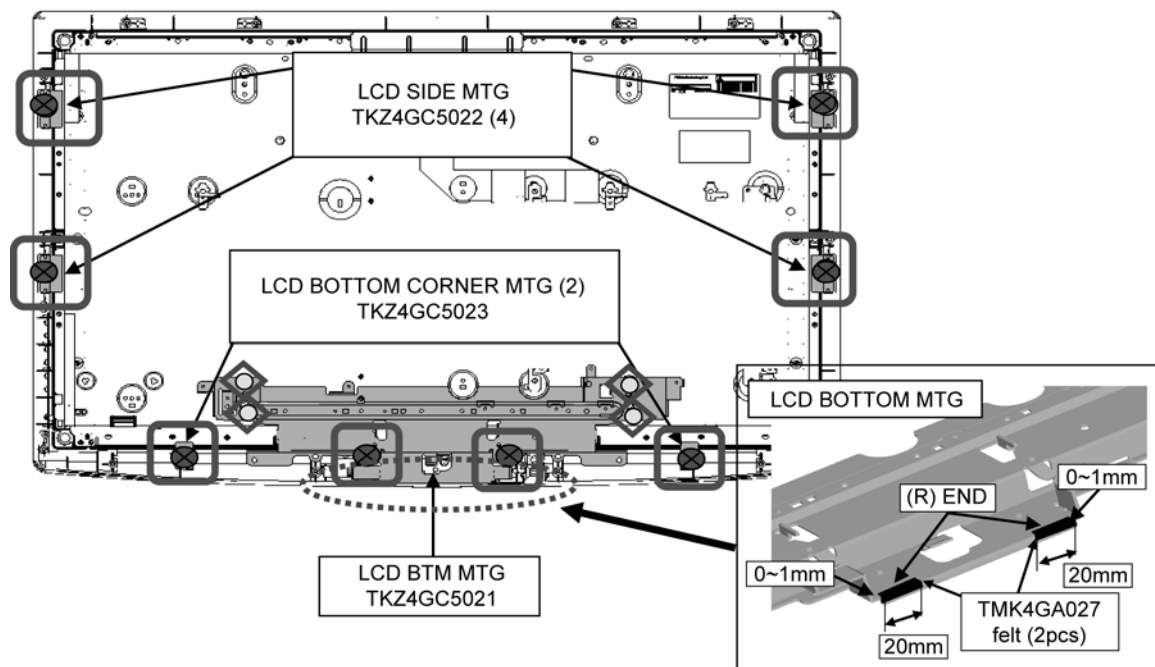

Step 2


1. Assemble LCD TOP MTG (L, R), VESA METAL (upper) and fix them with SCREWS.
2. Put on the VESA METAL ASSY on the LCD PANEL.
3. Fix the VESA METAL ASSY with SCREW.

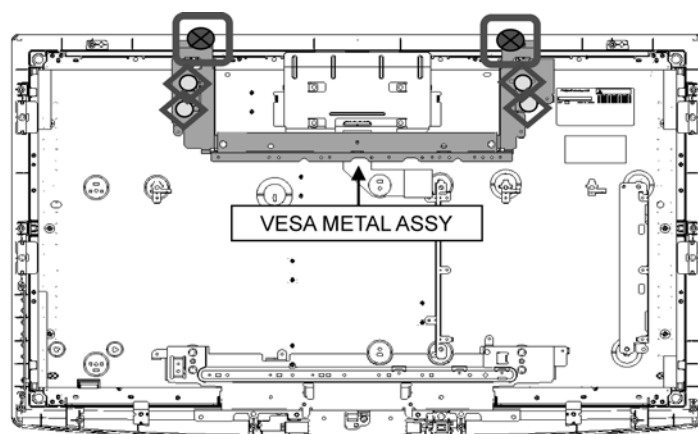

⊗ = 10 PCS SCREW ~ XTB4 + 15JFJ 【 90 ± 10 N·cm / 9 ± 1 KgfcM】



⬡ = 8 PCS SCREW ~ XYN4 + F6FJ 【 130 ± 10 N·cm / 13 ± 1 KgfcM】

PICTURE A-A.
CAUTION POINT :
ENSURE MTG RIB PROPERLY
LOCK IN THE PANEL HOLE.

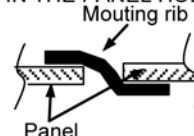


7.13. LCD Panel Assembly Installation

1. Put LCD panel to cabinet assembly.

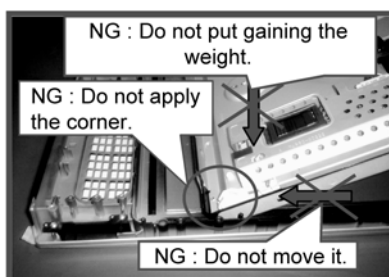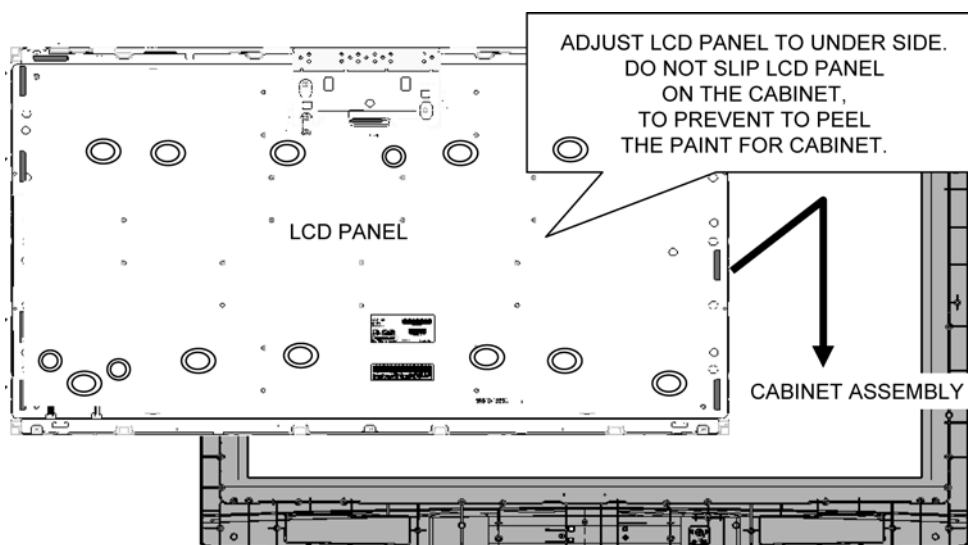

7.14. EMI Spec (LVDS)

1. When insert LVDS wire to T-con connector, make sure must center position follow bellow picture.
2. After fixing LVDS wire please bent again follow the picture.

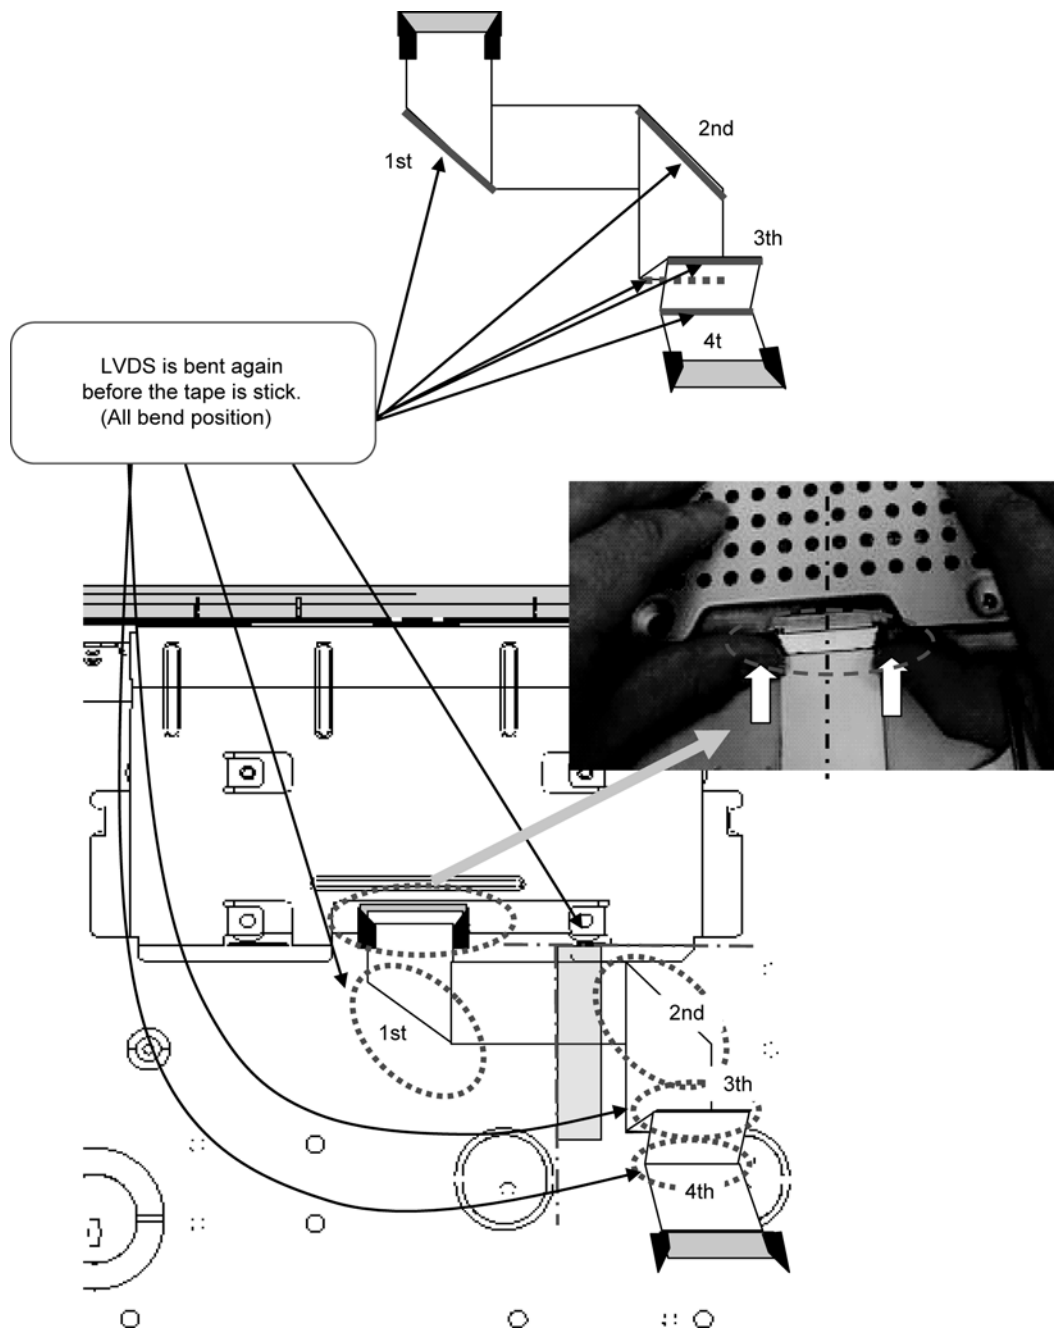


7.15. Back Cover Screw


1. Fix the BACK COVER with SCREWS.
2. Insert COVER (Adj.window).

CAUTION POINT :

Please make sure cabinet protection tape not fold in back cover.

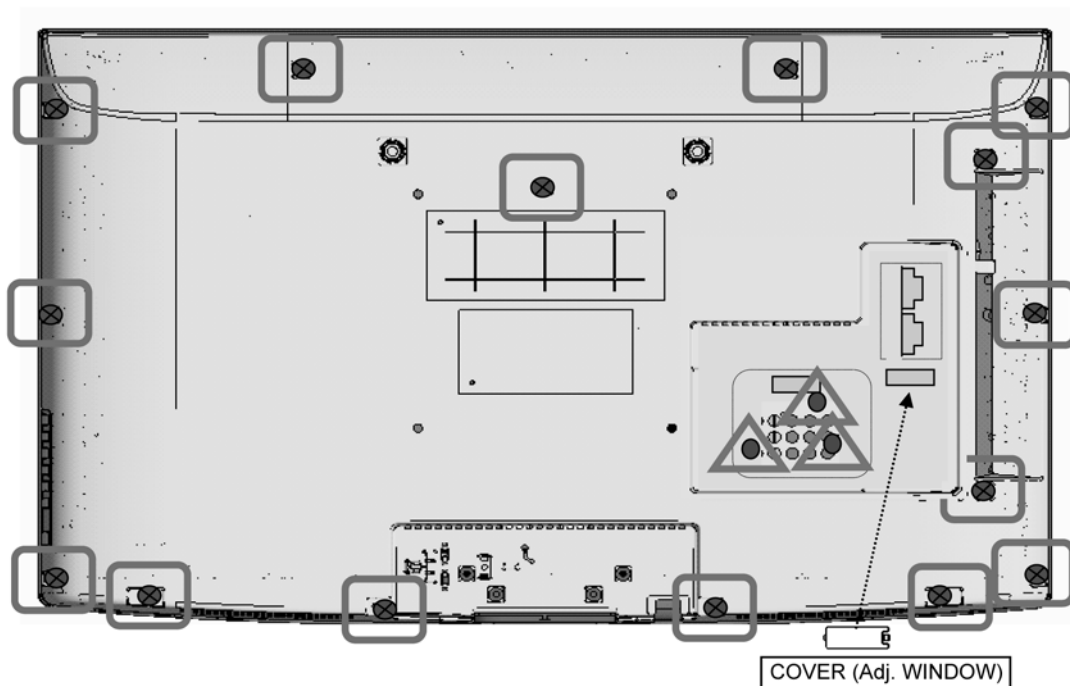

CONNECTOR COVER

 


 = SCREW - XTB4 + 18GFJK (15) $[100 \pm 10 \text{ N} \cdot \text{cm} / 10 \pm 1 \text{ Kgfc} \cdot \text{m}]$


 = SCREW - XTV3 + 8GFJK (3) $[60 \pm 10 \text{ N} \cdot \text{cm} / 6 \pm 1 \text{ Kgfc} \cdot \text{m}]$

7.16. Indication Sheet Sticking Position

Stick the HDMI/REAR AV/MODEL NAME SHEET.

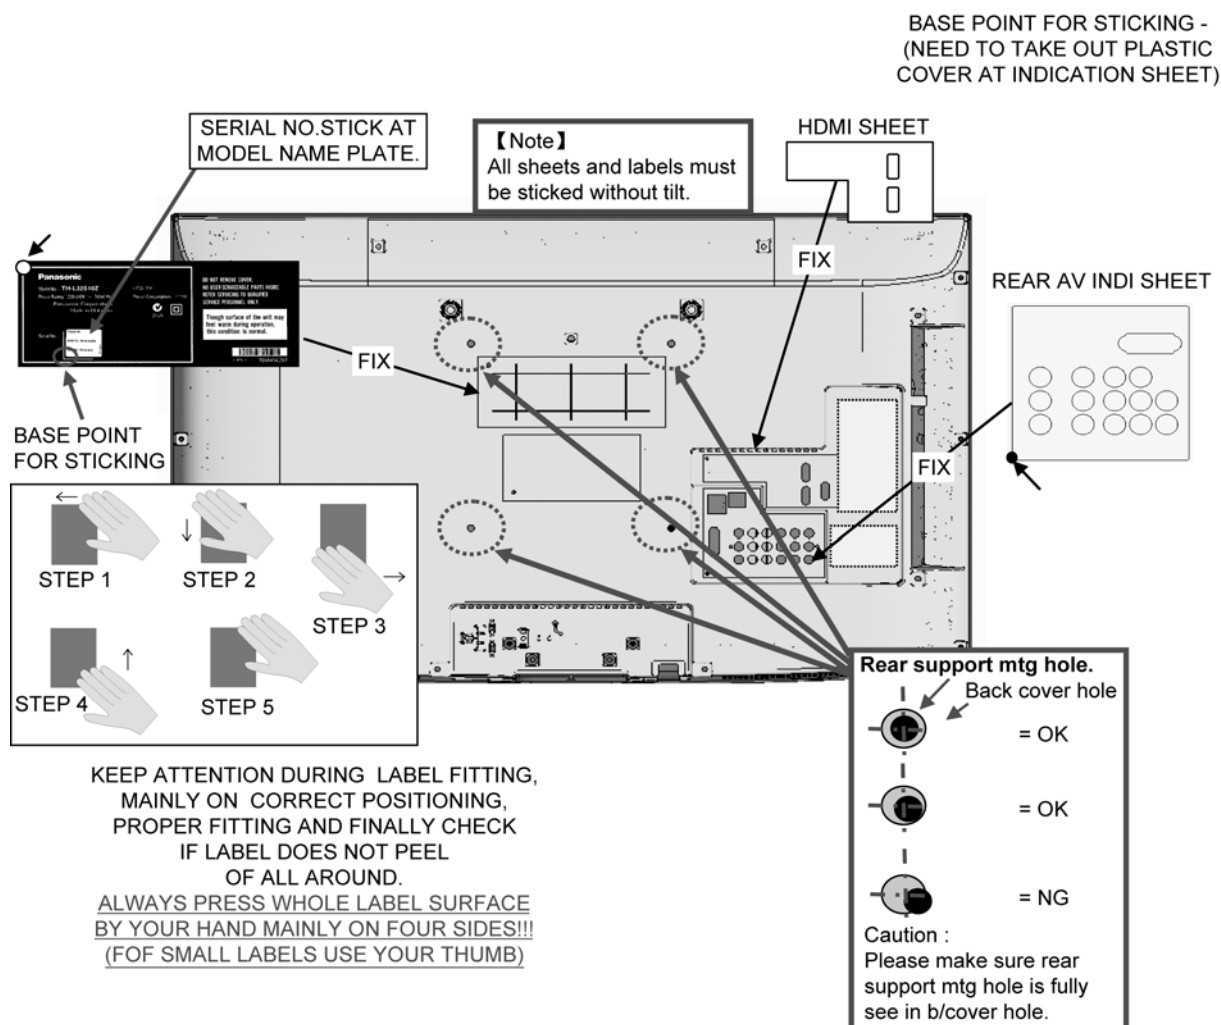

Stick model no. at bottom back cover (Stick area no etching).

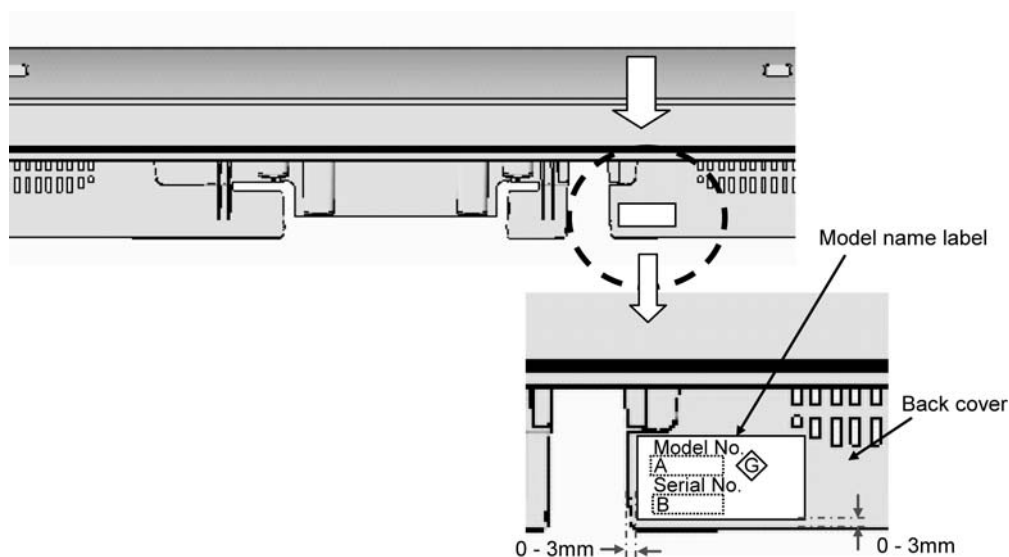

8 Service Mode Adjustment

Set timer to 30min, press the “RECALL” button on the remote control and press “-” vol button on the LCD panel.

- Press button R and G for adjustment.

8.1. Self Check Mode

1. Press the “MENU” button (on the remote control) and the “DOWN” button on the LCD panel.
2. Press ON/OFF button on the panel to Exit.

8.2. Hotel Mode Adjustment

1. Press the “VOLUME DOWN” button on the TV panel and simultaneously press the AV button on the remote control 3 times to enter Hotel Mode.
2. Set Hotel mode “on”, then press “EXIT” to come out.

8.3. Hotel Mode

1. Purpose

Restrict a function for hotels.

2. Access command to the Hotel mode setup menu.

In order to display the Hotel mode setup menu, please enter the following command **(within 2 second)**.

[TV] : Hold Vol [Down] + [Remote] : Press AV button 3 times.

Then, the Hotel mode setup menu is displayed.

Hotel Mode	
Hotel Mode	Off
Initial INPUT	Off
Initial POS	Off
Initial VOL Level	Off
Maximum Vol Level	100
Button Lock	Off
Remote Lock	Off

Select


 EXIT
 Change
 RETURN

Item	Function
Hotel Mode	Select hotel mode ON/OFF
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : OFF/Analogue TV/Digital TV/AV1/AV2/AV3//PC/HDMI1/HDMI2/HDMI3 • Off: give priority to a last memory. • Selectable input is depend on the model.
Initial POS	Select programme number. Selection : Off/0 to 100 • Off: give priority to a last memory.
Initial VOL level	Adjust the volume when each time power is switched on. Selection/Range : Off/0 to 100 • Off: give priority to a last memory.
Maximum VOL level	Adjust maximum volume. Range : 0 to 100
Button lock	Select local key conditions. Selection : Off/SETUP/MENU/All • Off: altogether valid. • SETUP: only F-key is invalid. (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid. (only Volume/Mute can be selected.) • ALL: altogether invalid.
Remote lock	Select remote control key conditions. Selection : Off/SETUP/MENU • Off: altogether valid. • SETUP: only Setup menu is invalid. • MENU: Picture/Sound/Setup menu are invalid.

9 Measurements and Adjustments

9.1. Voltage Chart of A Board

Set A-Board to a dummy set and check the satisfaction with the specified voltage as following table.

Power Supply Name	Measurement Point	Specification (V)
		TNP4G460 / TNP4G461
SUB1.2V	TP5602	1.22 - 1.32
SUB1.8V	TP5601	1.78 - 1.91
SUB3.3V	TP5600	3.21 - 3.45
SUB9V	TP5409	8.76 - 9.45
SUB5V	TP5405	4.82 - 5.18
BT30V	TP5482	29.3 - 31.5

9.2. Voltage Chart of P Board

Set P-Board to a dummy set and check the satisfaction with the specified voltage as following table.

Power Supply name	Measurement Point	Normal condition (V)	Standby condition (V)
AUDIO_VCC	TP866	17.0 ± 1.7	< 3.0
12V	TP865	12.0 ± 0.6	< 1.0
5VS	TP854	5.6 ± 0.3	5.6 ± 0.3
STBY_6V	TP853	5.6 ± 0.3	5.6 ± 0.3
PFC Vout	TP801	400 ± 10	NO CARE

After inspection, discharge the C7218 with 1kΩ resistor for 0.3 sec. or more.

9.3. Target of White Balance adjustment value

Ambient Temp.	Colour Balance	White			Gray		
		x	y	Y (cd/m2)	x	y	Y (cd/m2)
22.5 - 27.5 deg.	Cool	0.271	0.275	>300	0.271	0.275	Don't Care
	Normal	0.284	0.297		0.284	0.297	
	Warm	0.314	0.324		0.314	0.324	


Clearance

x, y : +/-0.005 in Cool Colour Balance, +/-0.010 in Warm/Normal Colour Balance

10 Printed Circuit Board

10.1. A-Board

A-Board (A Side)
TNP4G460

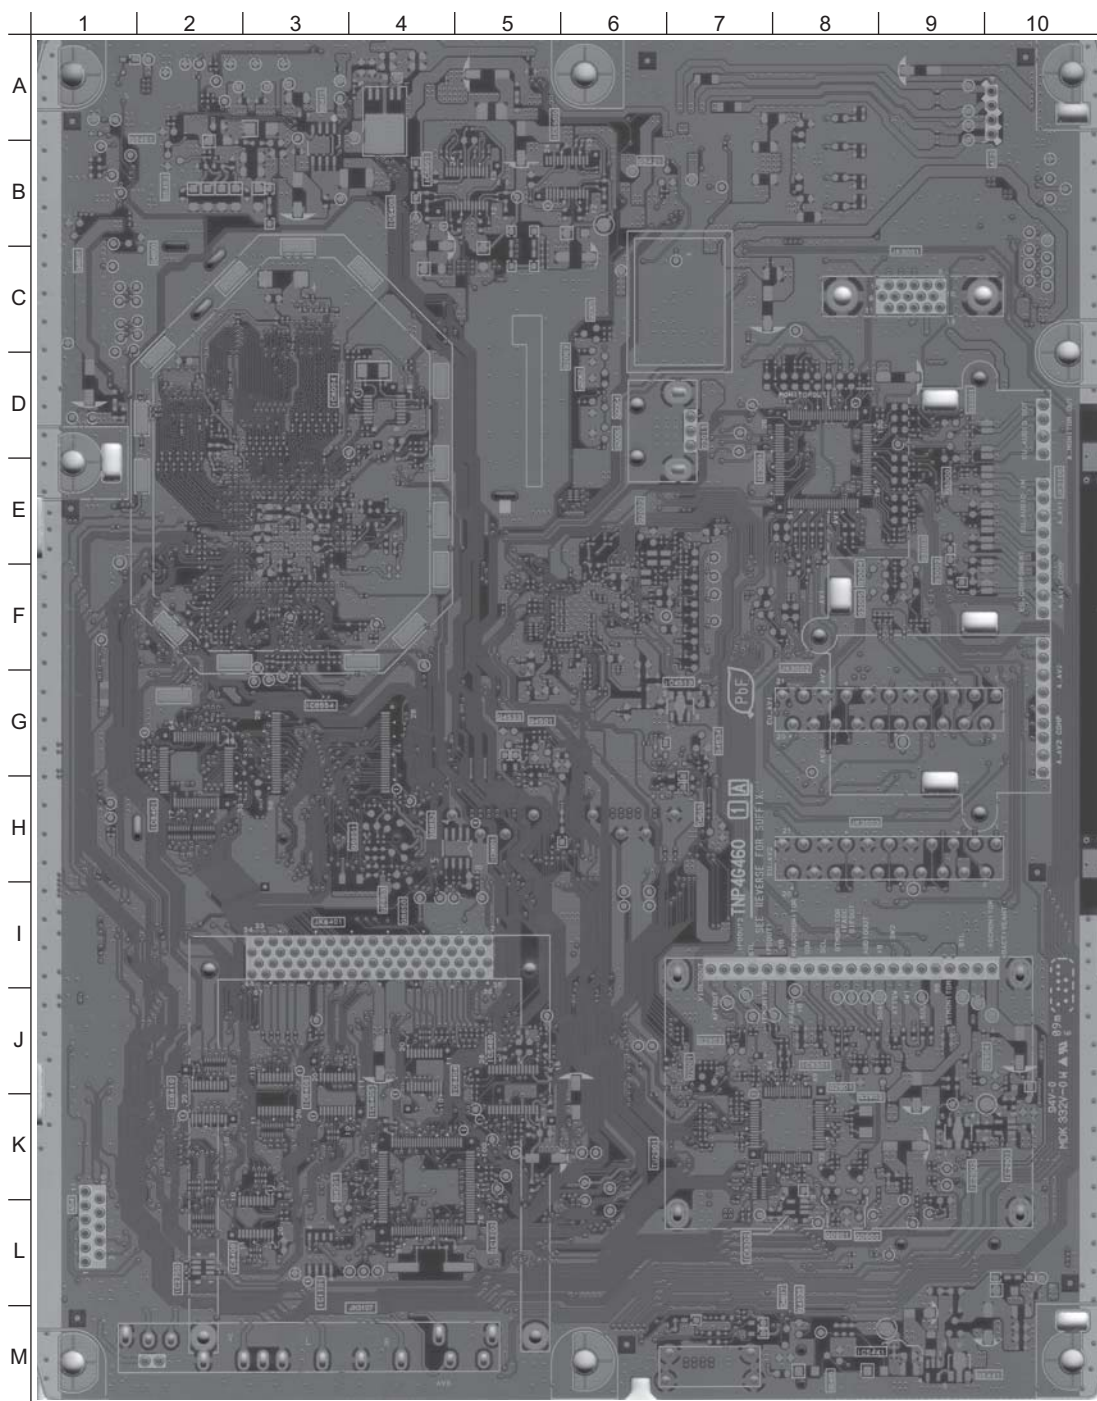


Parts Location

Ref. No	Location	Ref. No	Location	Ref. No	Location	Ref. No	Location
IC1100	K4	IC5441	M9	IC8404	J4	D3015	D7
IC1101	L3	IC5480	J5	IC8405	J3	D4513	H7
IC2750	L2	IC5600	B5	IC8408	J3	D4617	L8
IC2901	K10	IC5601	B5	IC8409	L2		
IC2902	K9	IC8004	D4	IC8410	J2		
IC3001	D8	IC8301	K8	IC8554	G3		
IC4513	G7	IC8302	L8	IC8601	H5		
IC5405	B4	IC8401	H2				

10.2. A-Board

A-Board (B Side)
TNP4G460

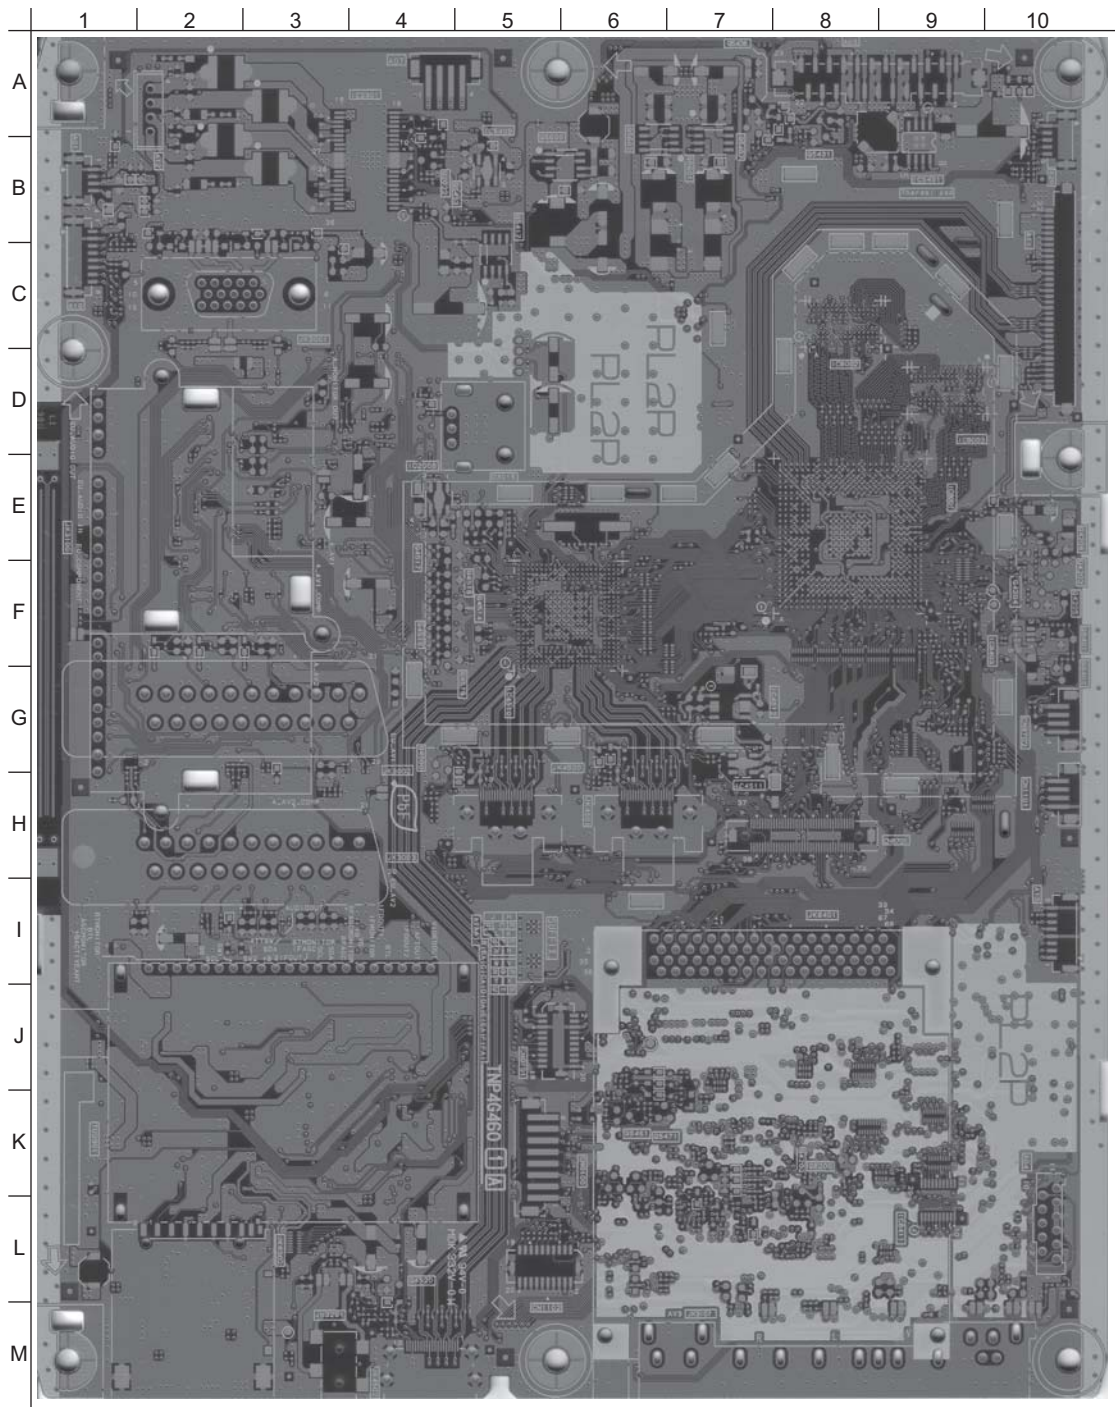

Parts Location

Ref. No	Location	Ref. No	Location	Ref. No	Location	Ref. No	Location
IC2008	E4	IC4512	G7	IC8002	C8	D3015	E5
IC2301	A4	IC5409	B5	IC8003	D9		
IC4510	F5	IC5451	B9	IC8403	F10		
IC4511	G7	IC8001	E9	IC8411	L9		

11 Schematic Diagram

11.1. Schematic Diagram Notes

Important Safety Notice

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Notes :

1. Resistor

Unit of resistance is OHM [Ω] (K = 1 000, M = 1 000 000).

2. Capacitor

Unit of capacitance is μ F unless otherwise noted.

3. Coil

Unit of inductance is μ H unless otherwise noted.

4. Test Point



: Test Point position

5. Earth Symbol



: Chassis Earth (Cold)



: Line Earth (Hot)

6. Voltage Measurement

Voltage is measured using DC voltmeter.

Conditions of the measurement are the following :

Power Source.....AC AUTO 110-240 V, 50/60 Hz

Receiving Signal.....Colour Bar signal (RF)

All customer's controls.....Maximum positions

7. Number in red circle indicates waveform number.

(See waveform pattern table)

8. When an arrow mark () is found, connection is easily found from the direction of the arrow.

9. Indicates the major signal flow: Video Audio

10. This schematic diagram is the latest at the time of printing and subject to change without notice.

Remarks :



1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection. The circuit is defined by HOT and COLD indications in the schematic diagram. Take the following precautions: All circuits, except the Power Circuit are cold.

Precautions:


- a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
- b. Do not short-circuit the hot and cold circuits or a fuse may blow and parts may break.
- c. Do not connect an instrument such as an oscilloscope to the hot and cold circuits simultaneously or a fuse may blow. Connect the earth of instruments to the earth connection of the circuit being measured.
- d. Make sure to disconnect the power plug before removing the chassis.

11.2. A Board


11.2.1. A Board - Sheet : 001 (1 / 1)

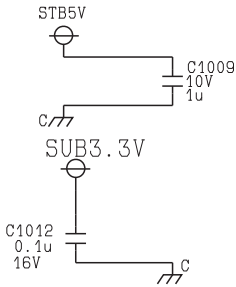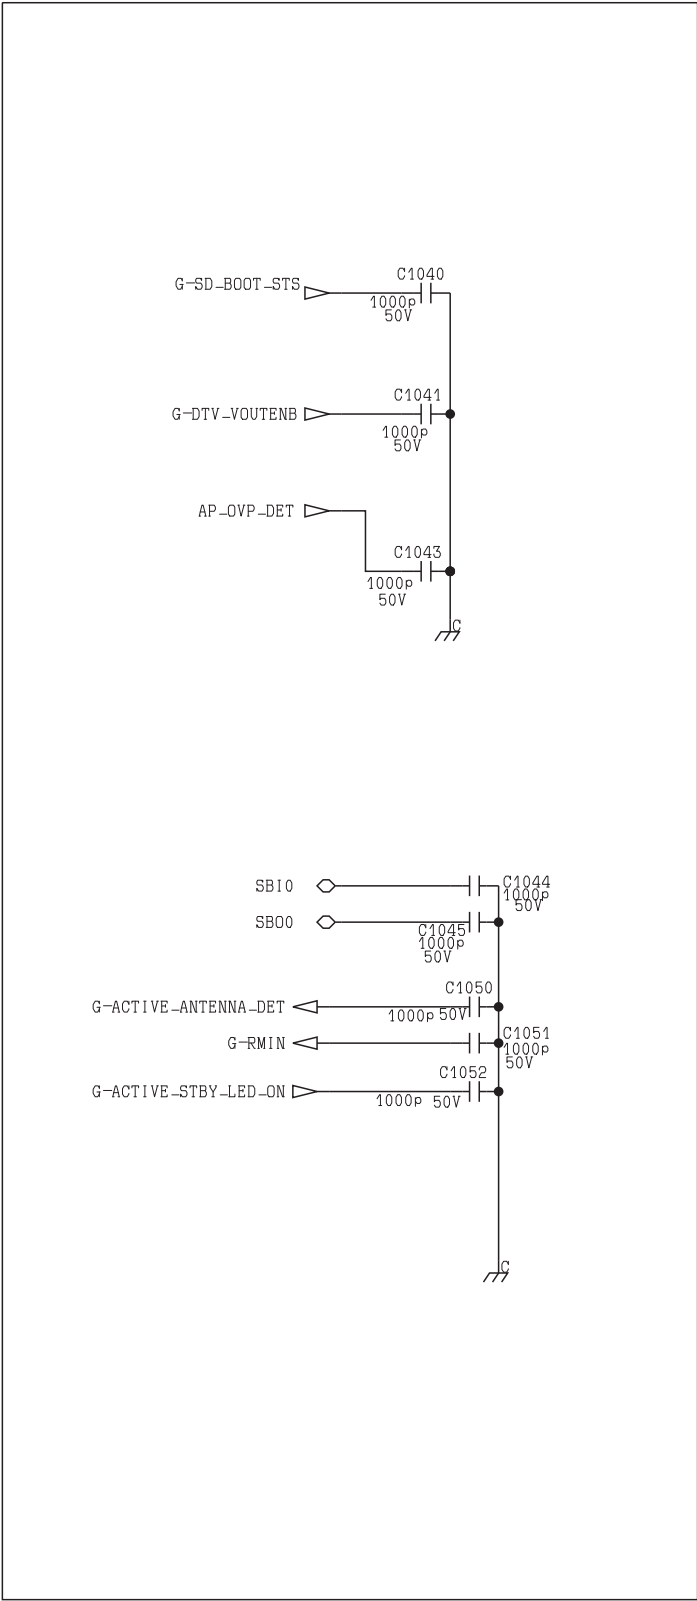


11.2.2. A Board - Sheet : 002 (1 / 8)

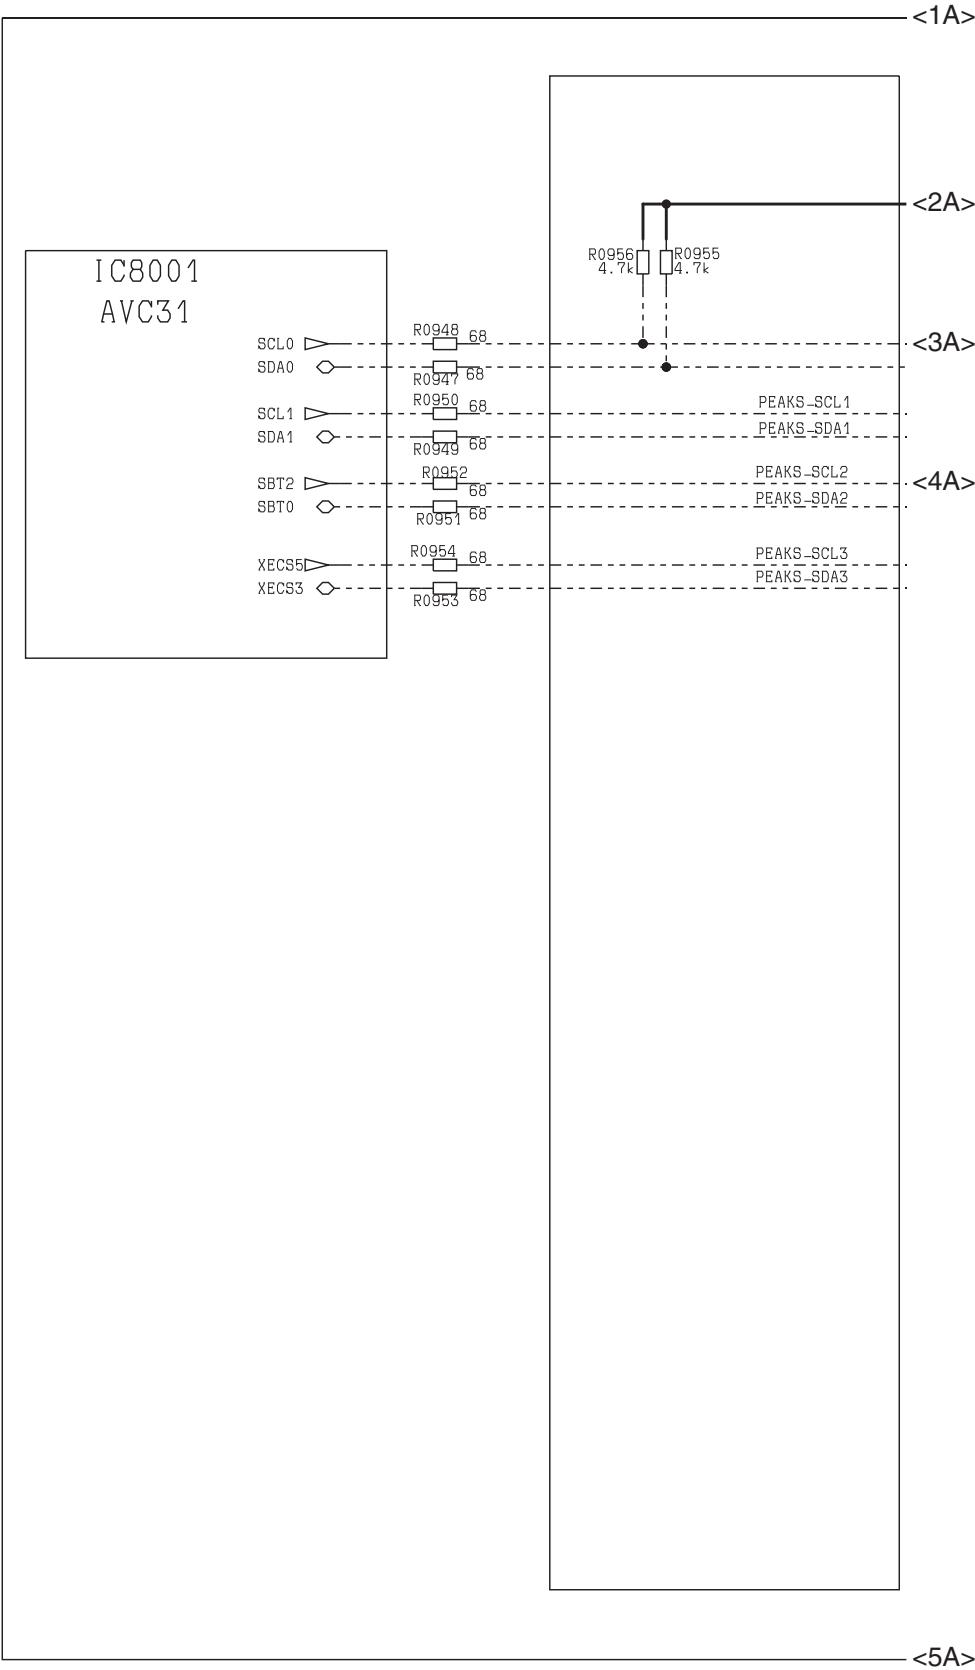

11.2.3. A Board - Sheet : 002 (2 / 8)

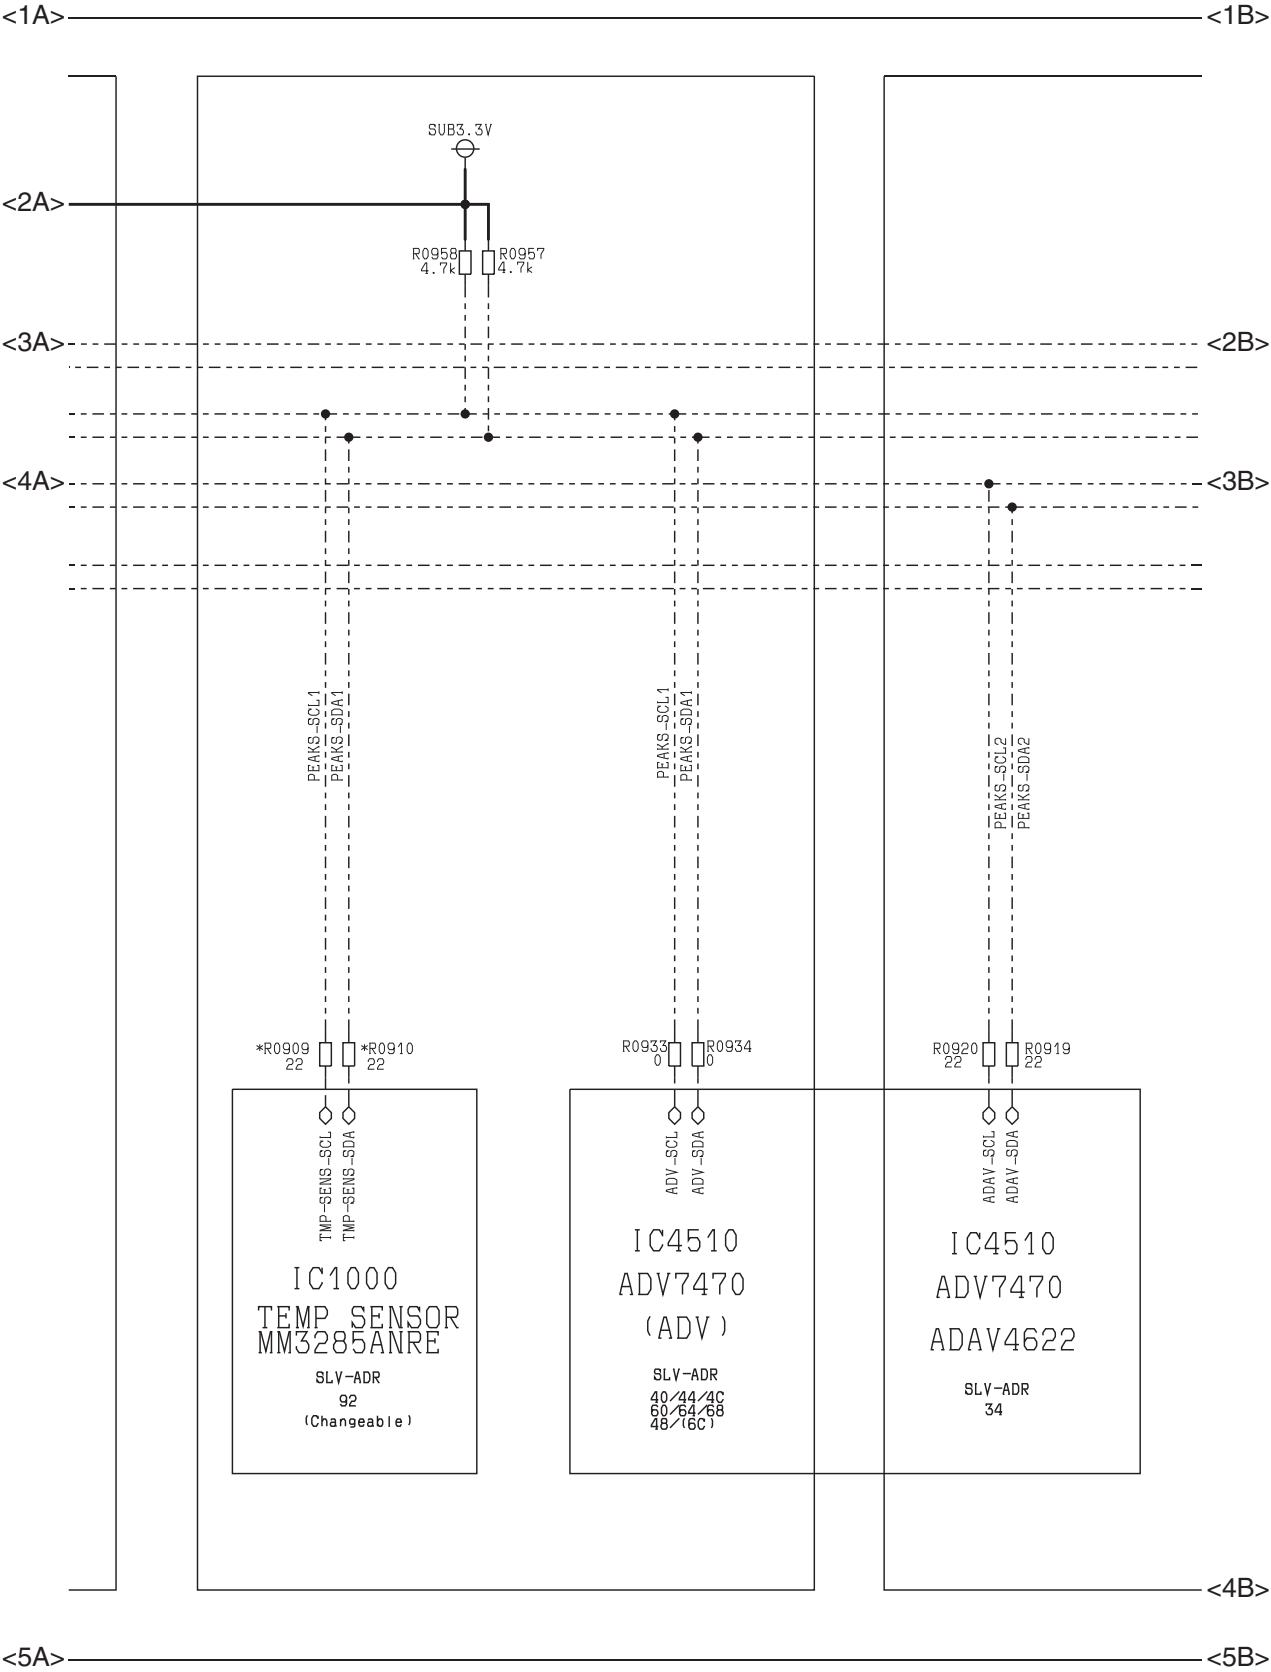

11.2.4. A Board - Sheet : 002 (3 / 8)

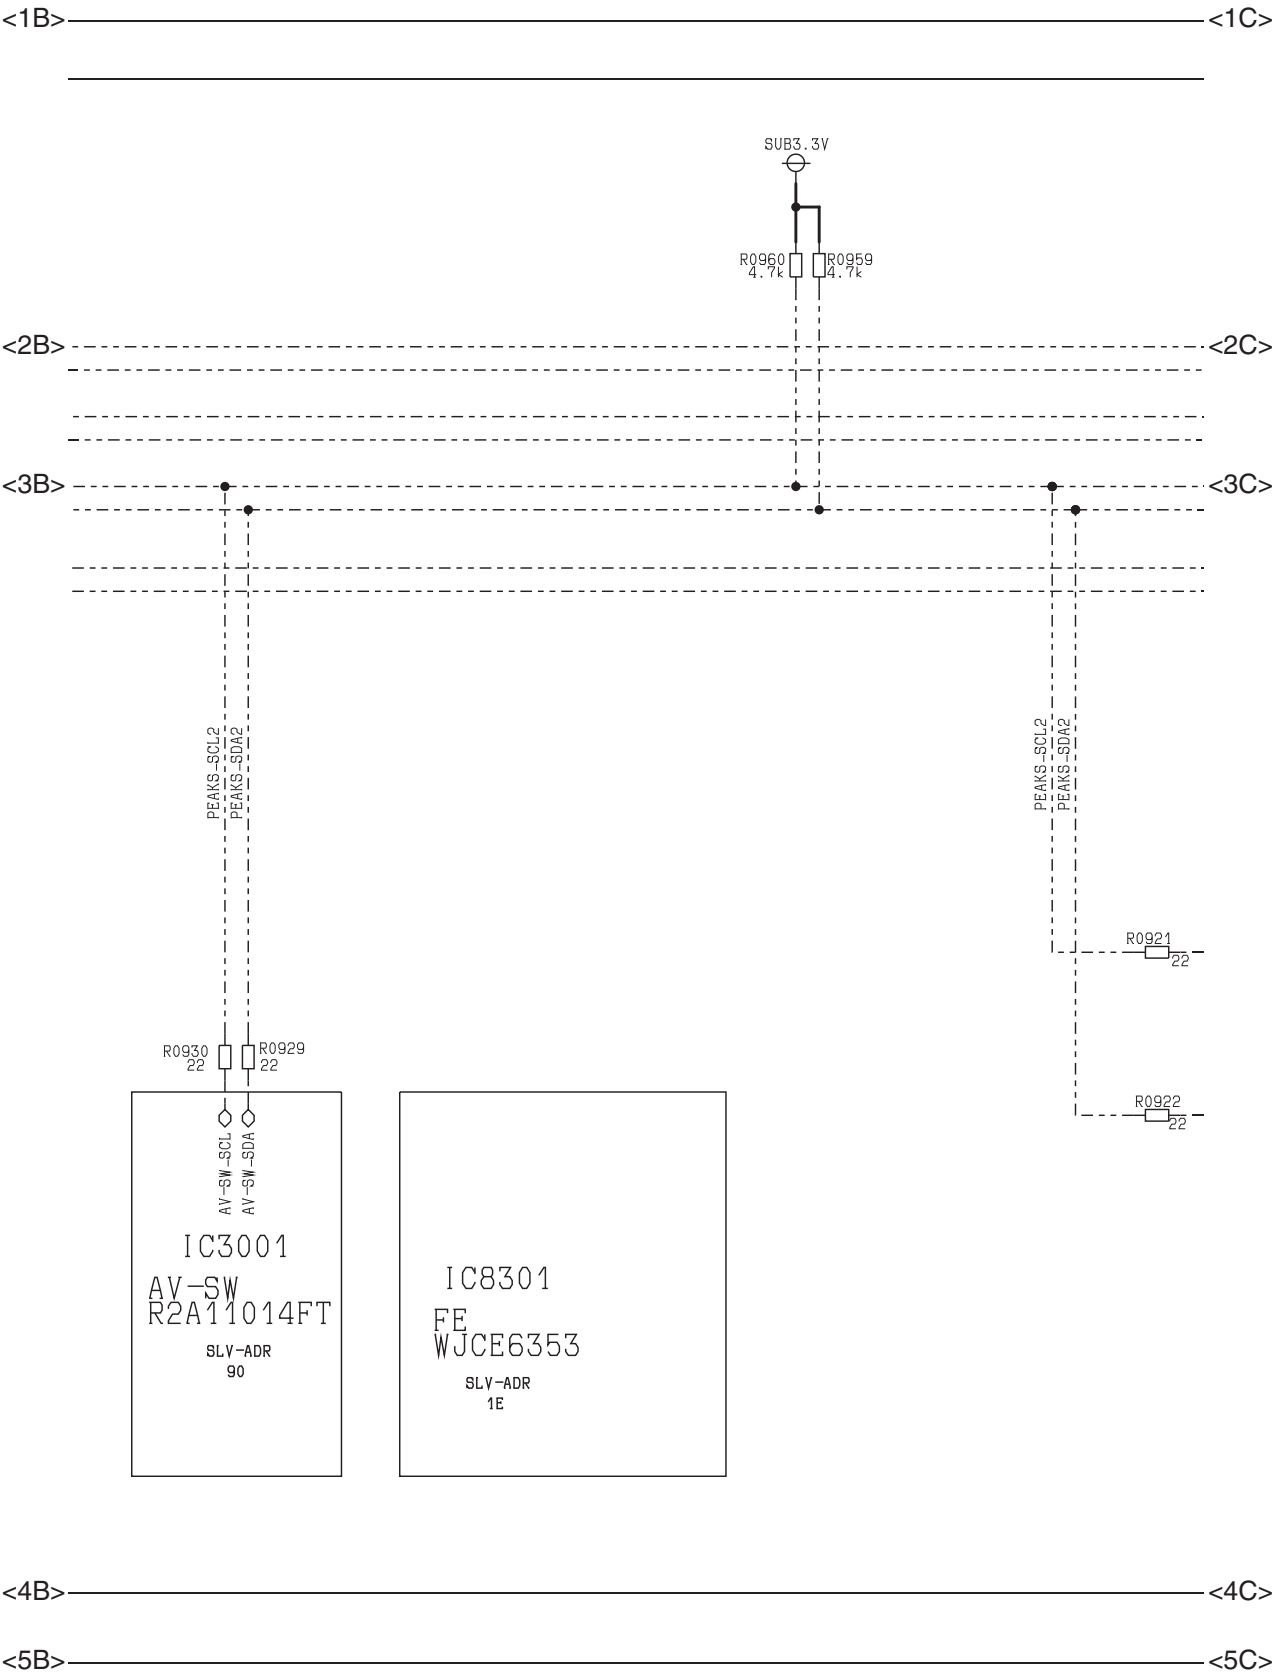


11.2.5. A Board - Sheet : 002 (4 / 8)

<1C> _____ <1D>

<2C> _____ <2D>


<3C> _____ <3D>

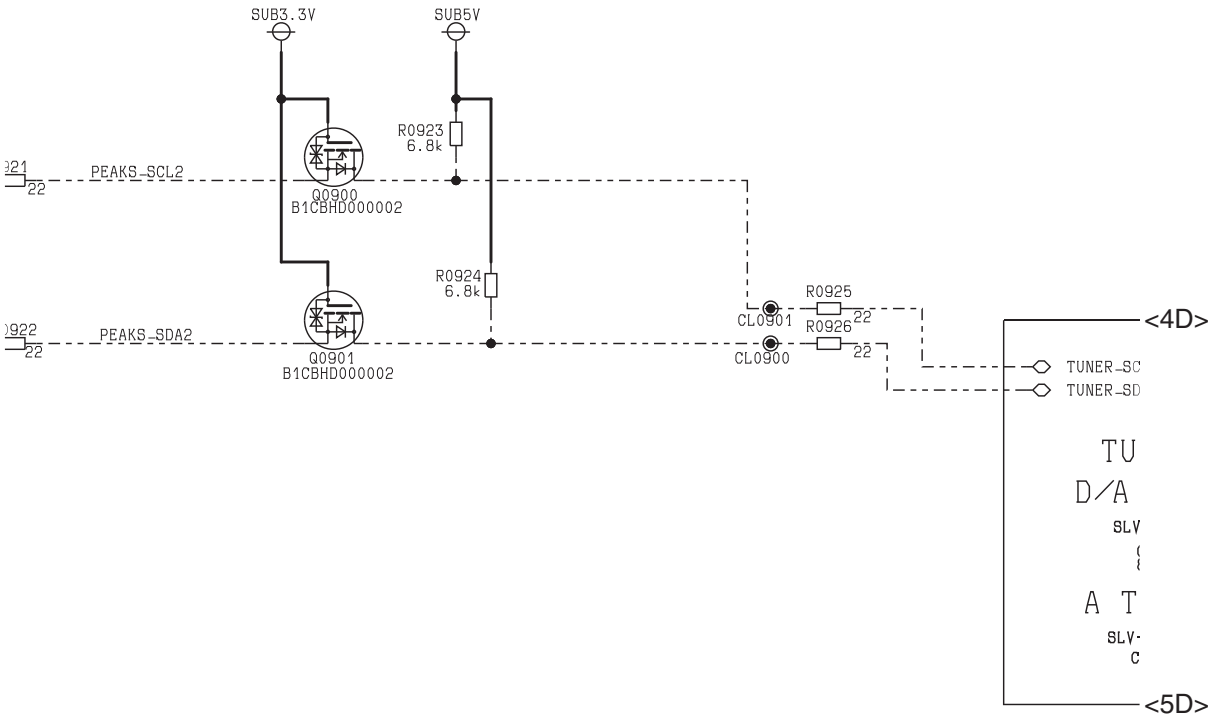


<4C> _____ <6D>

<5C> _____ <7D>


11.2.6. A Board - Sheet : 002 (5 / 8)

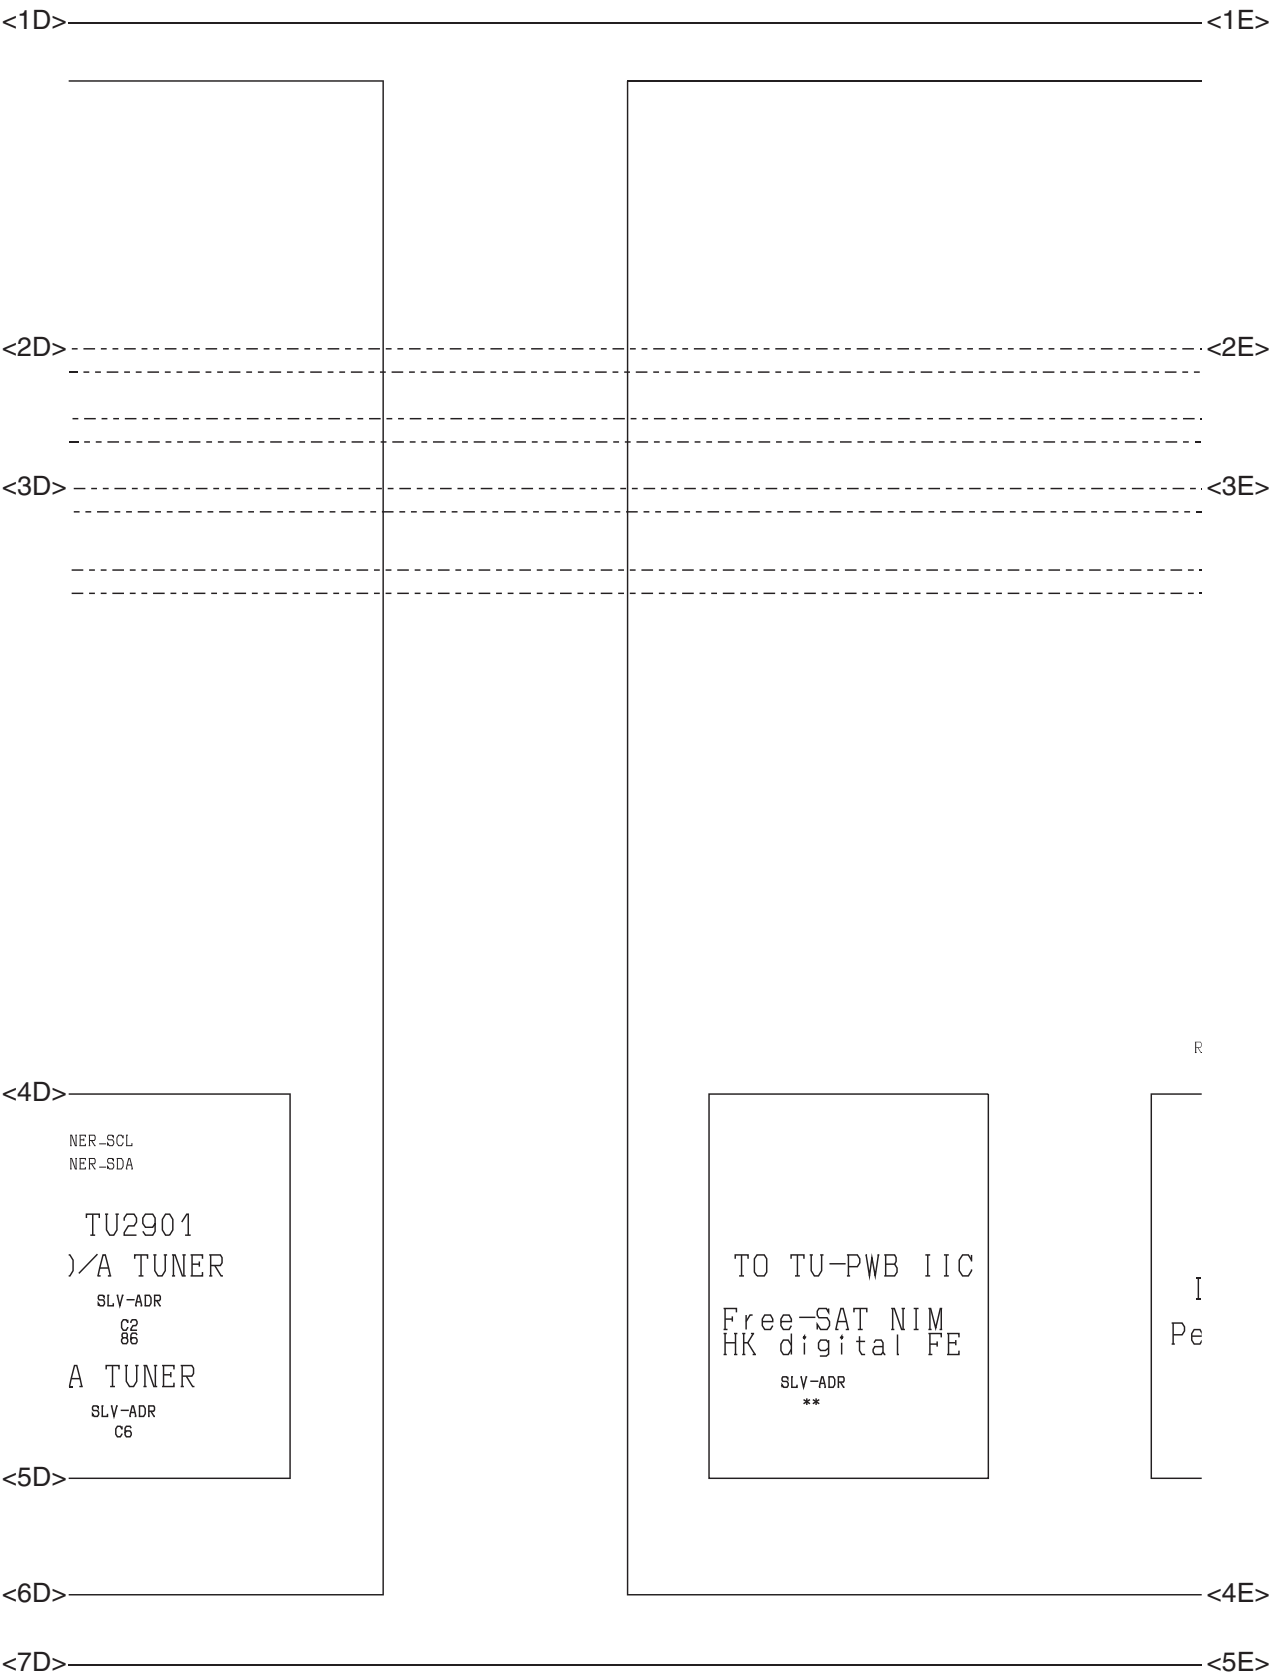


11.2.7. A Board - Sheet : 002 (6 / 8)

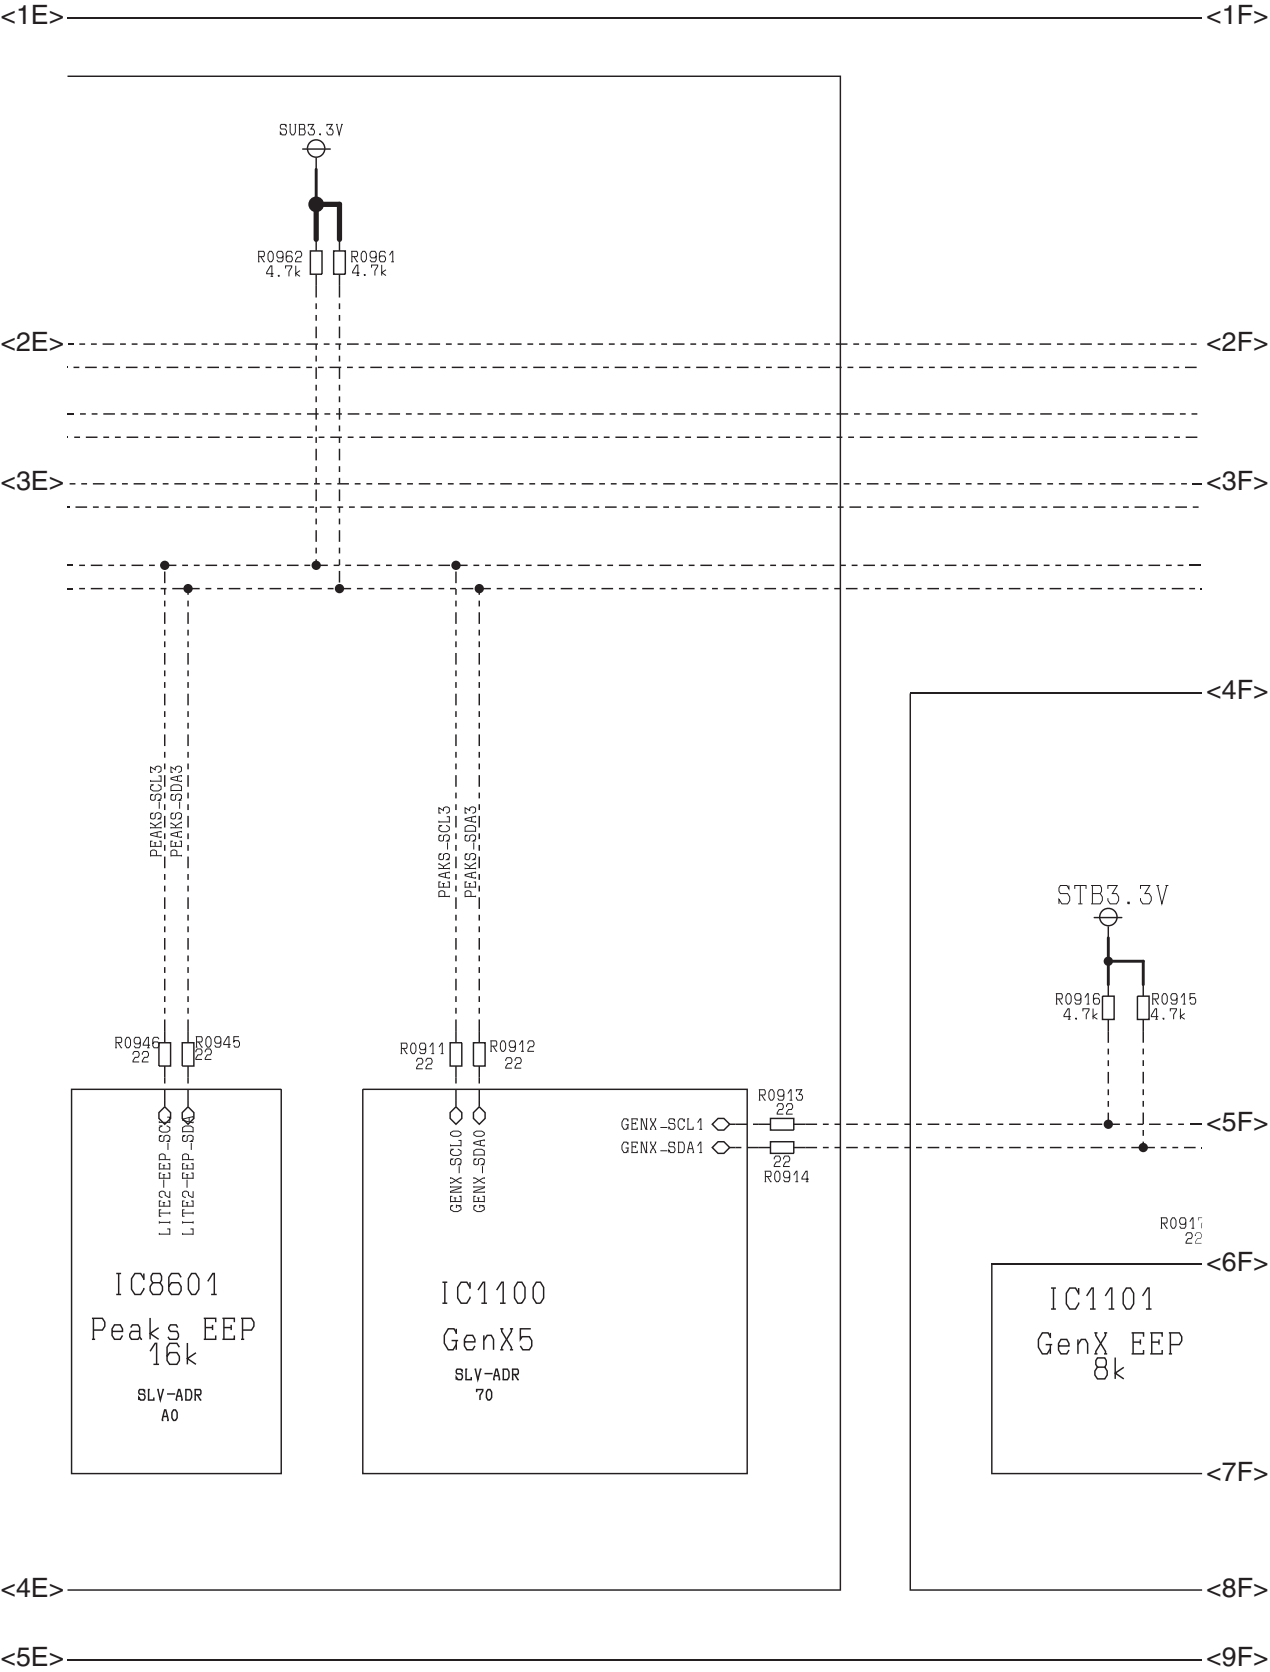


11.2.8. A Board - Sheet : 002 (7 / 8)

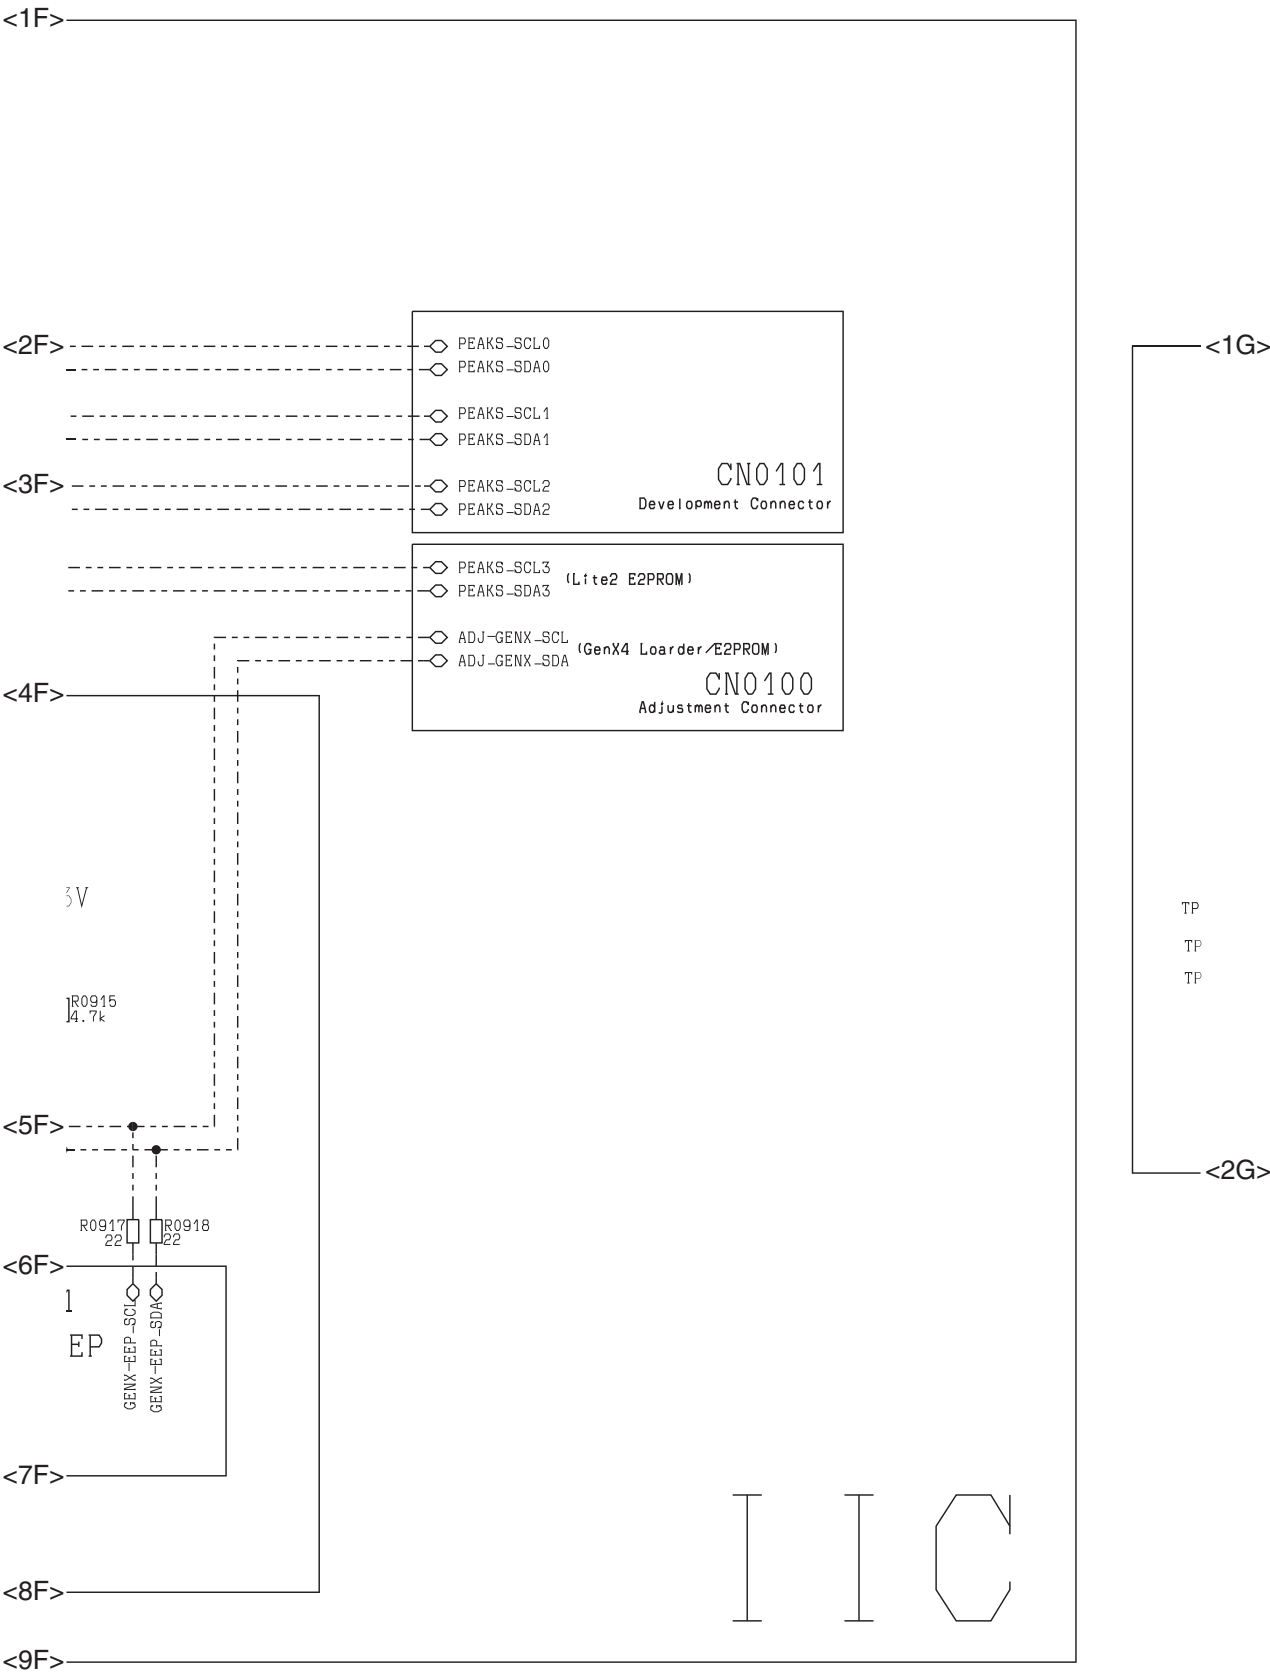

11.2.9. A Board - Sheet : 002 (8 / 8)

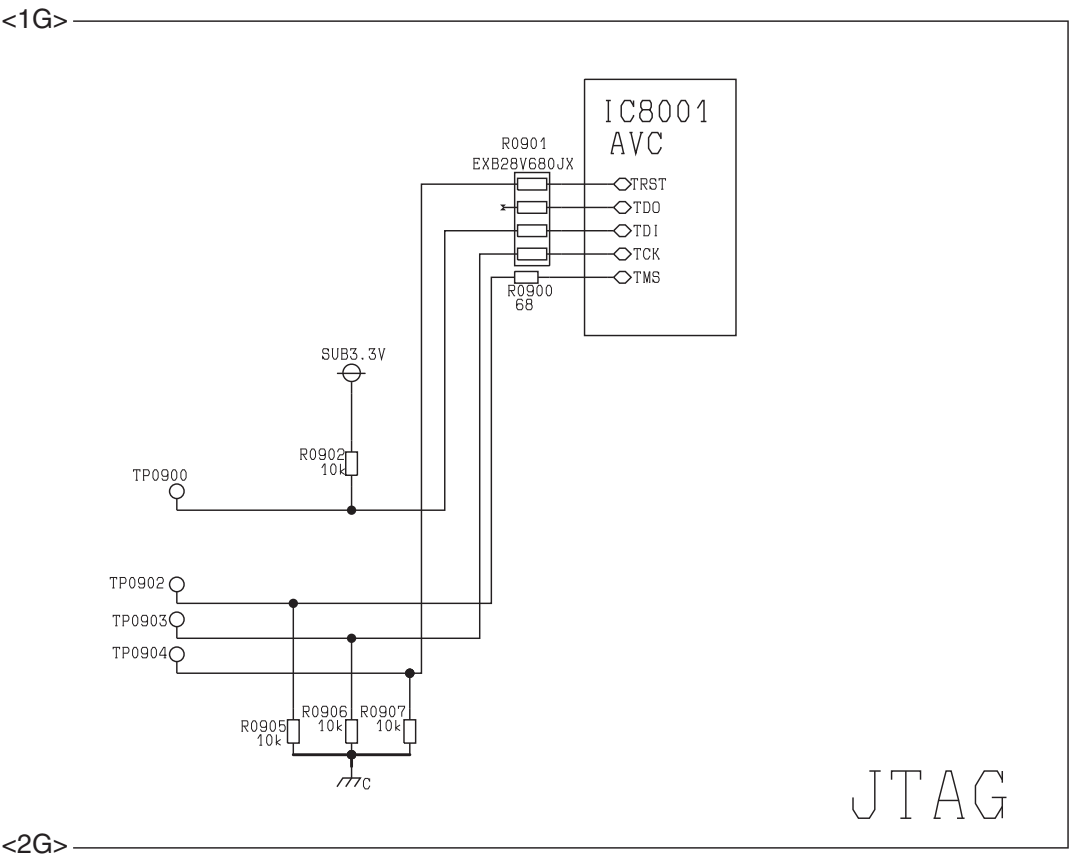


11.2.10. A Board - Sheet : 003 (1 / 6)

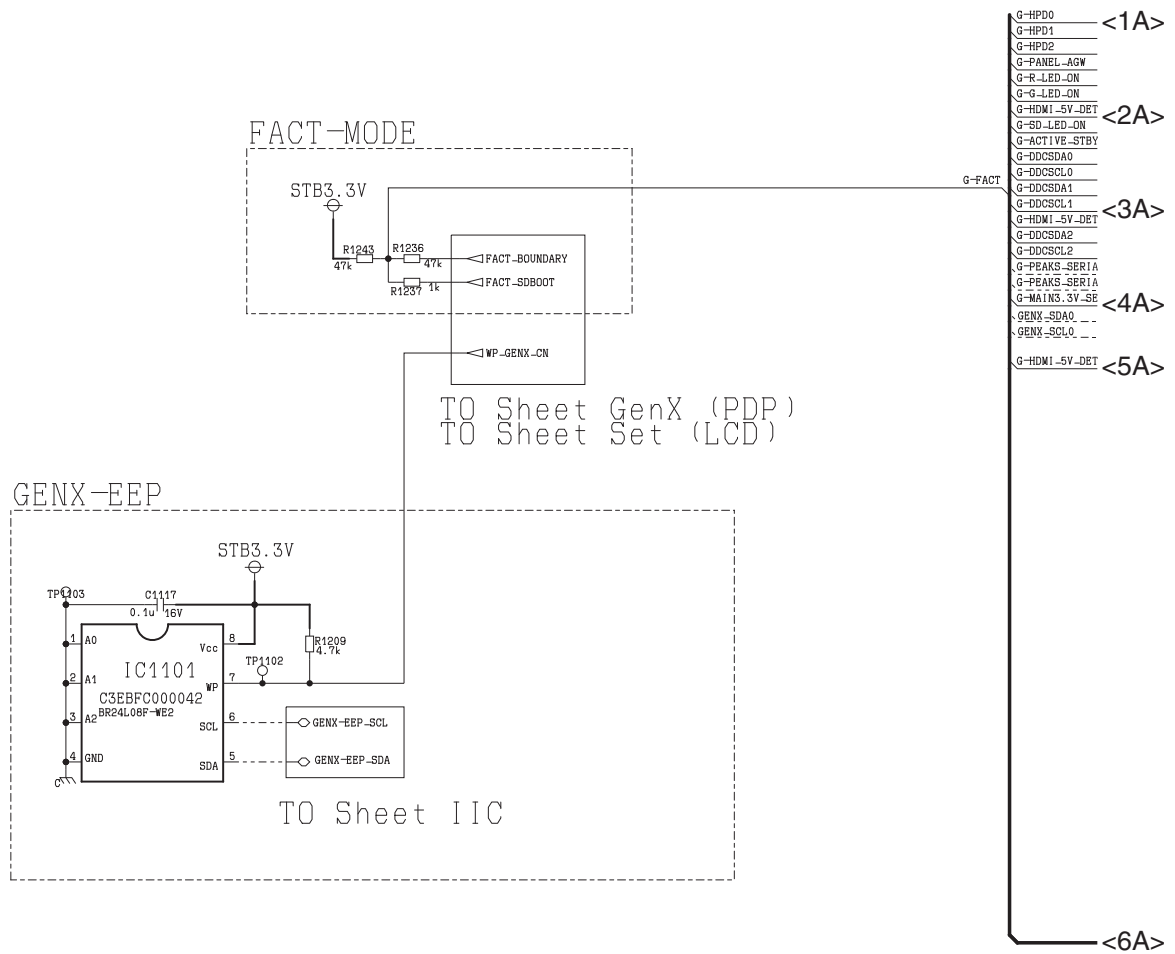




11.2.12. A Board - Sheet : 003 (3 / 6)

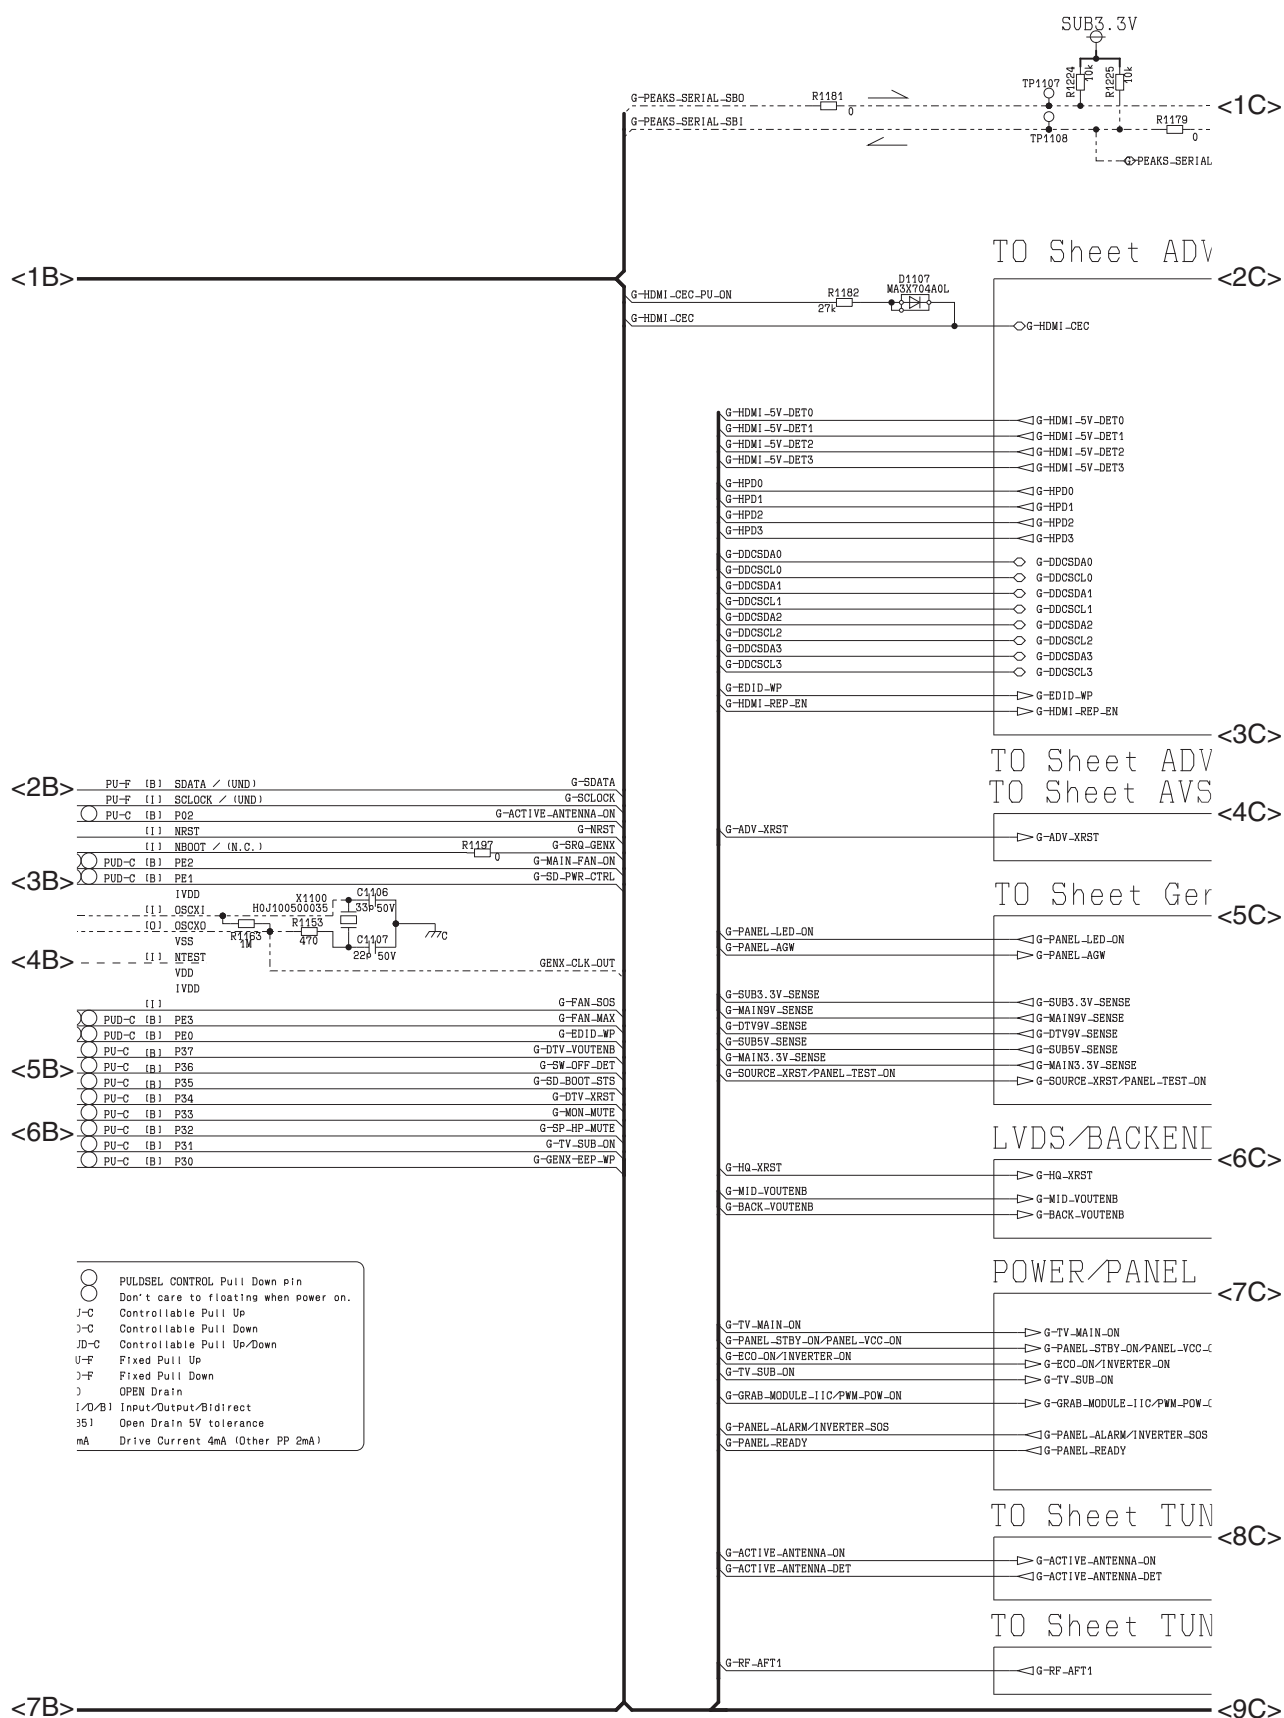

11.2.13. A Board - Sheet : 003 (4 / 6)

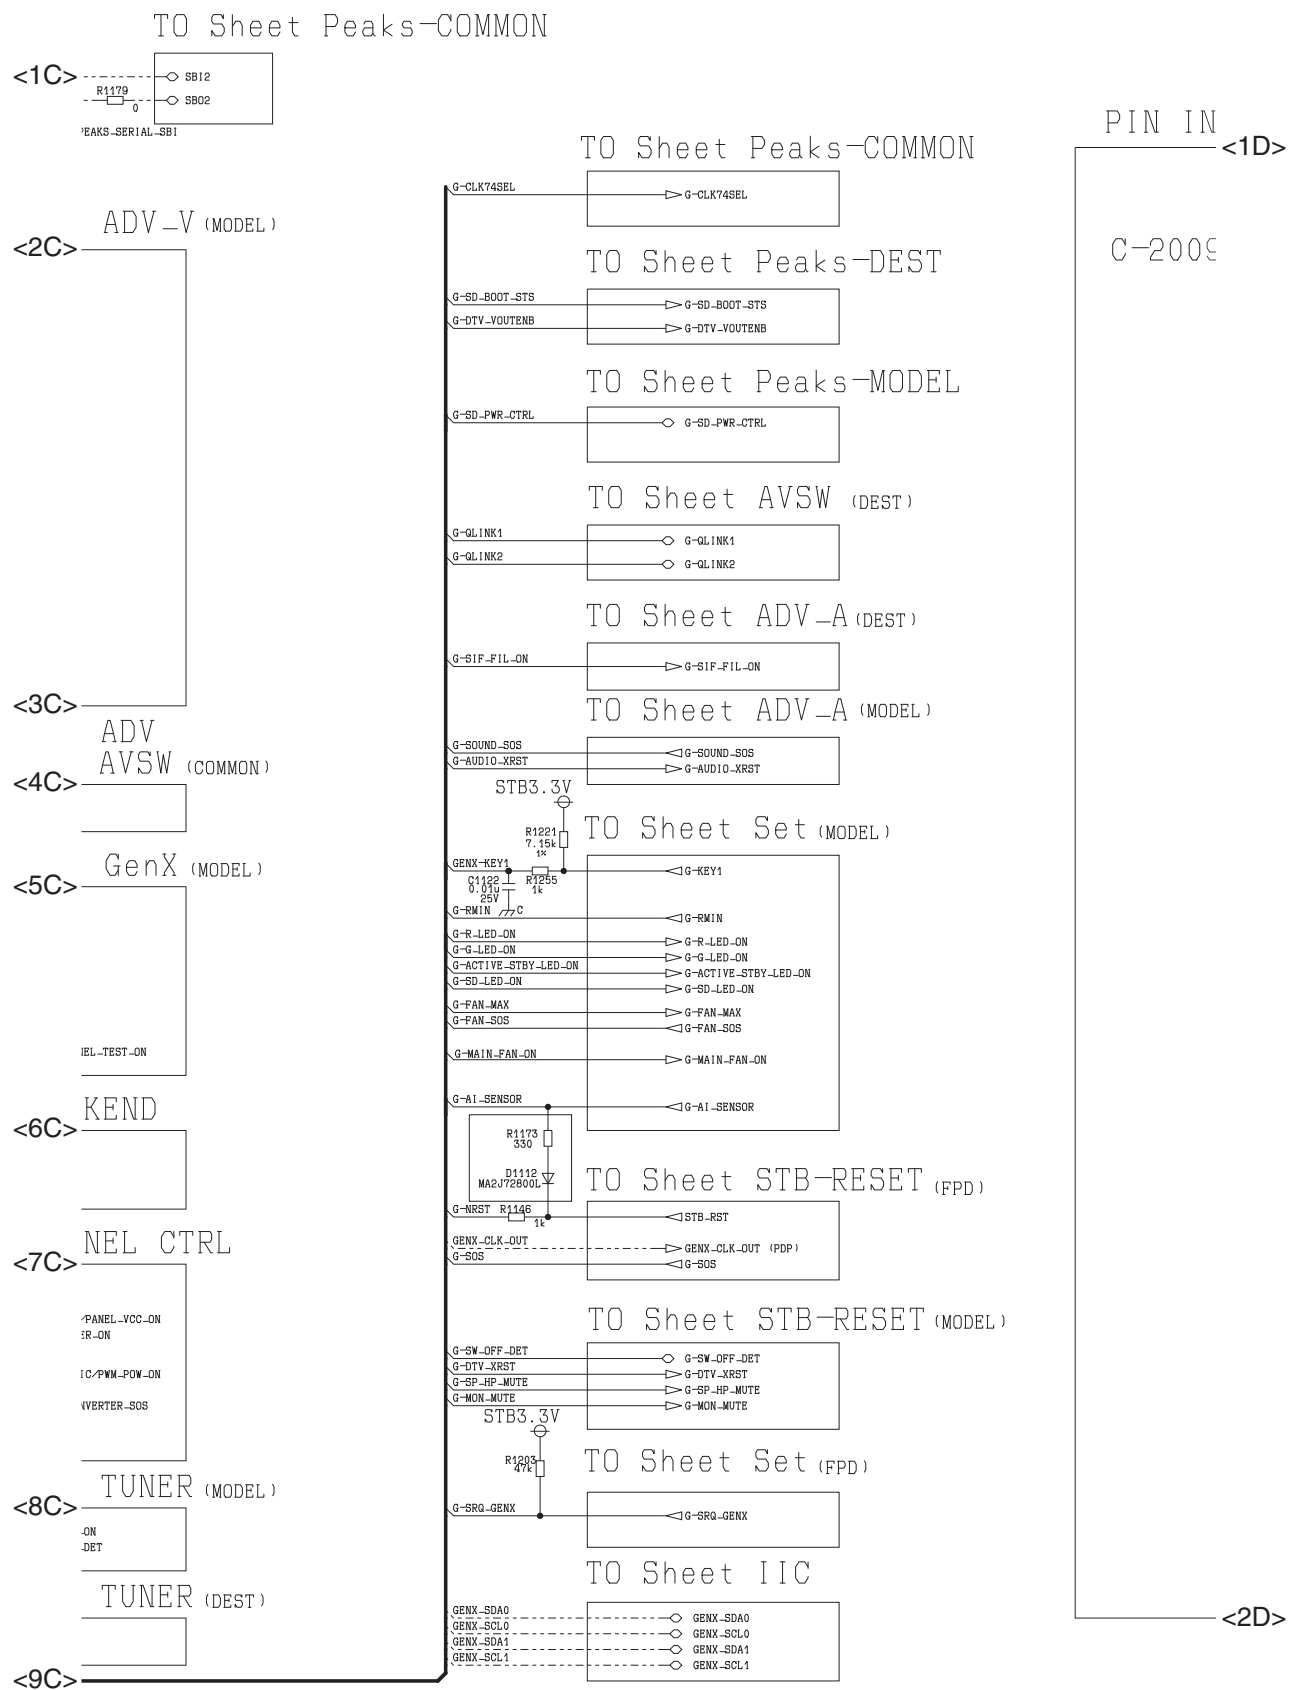

11.2.14. A Board - Sheet : 003 (5 / 6)

<1D> N INFORMATION

2009_shigen080703.xls

R-LED-ON - DIR: 0 L, OFF H, ON STB-STS, H
 G-LED-ON - DIR: 0 L, OFF H, ON STB-STS, L
 (Active-Antenna-ON) - DIR: 0 L, OFF H, ON STB-STS, L
 SD-LED-ON - DIR: 0 L, OFF H, ON STB-STS, L
 ACTIVE-STBY-LED-ON - DIR: 0 L, OFF H, ON STB-STS, L
 TV-MAIN-ON - DIR: 0 L, OFF H, ON STB-STS, L
 PANEL-STBY-ON/PANEL-VCC-ON - DIR: 0 L, OFF H, ON STB-STS, L
 ECO-ON/INVERTER-ON - DIR: 0 L, NORMAL/OFF H, ECO/ON STB-STS, H/L
 GRAB-MODULE-IIC/PWM-POW-ON - DIR: 0 L, Peaks-GenX6/OFF H, GenX5-GenX6/ON STB-STS, L
 HDMI-REP-EN - DIR: 0 L, DISABLE H, ENABLE STB-STS, L
 AUDIO-XRST - DIR: 0 L, RESET H, ACTIVE STB-STS, L
 ADV-XRST - DIR: 0 L, RESET H, ACTIVE STB-STS, L
 BACK-VOUTENB - DIR: 0 L, OFF H, OUTPUT STB-STS, L
 SOURCE-XRST - DIR: 0 L, RESET H, ACTIVE STB-STS, L
 HG-XRST - DIR: 0 L, RESET H, ACTIVE STB-STS, L
 MID-VOUTENB - DIR: 0 L, OFF H, OUTPUT STB-STS, L
 PANEL-READY - DIR: 1 L, comm-NG H, comm-OK STB-STS, -
 PANEL-ALARM/INVERTER-SOS - DIR: 1 L, SOS/NORMAL H, NORMAL/SOS STB-STS, -
 SUBS_3V-SENSE - DIR: 1 L, SHORT H, NORMAL STB-STS, -
 MAIN9V-SENSE - DIR: 1 L, SHORT H, NORMAL STB-STS, -
 DT9V9-SENSE - DIR: 1 L, SHORT H, NORMAL STB-STS, -
 SUB9V-SENSE - DIR: 1 L, SHORT H, NORMAL STB-STS, -
 MAIN3_3V-SENSE - DIR: 1 L, SHORT H, NORMAL STB-STS, -
 GenX-EEP-WP - DIR: 0 L, Write H, PROTECT STB-STS, H
 TV-SUB-ON - DIR: 0 L, OFF H, ON STB-STS, L
 SP-HP-MUTE - DIR: 0 L, OUTPUT H, MUTE STB-STS, L
 MON-MUTE - DIR: 0 L, OUTPUT H, MUTE STB-STS, L
 DTV-XRST - DIR: 0 L, RESET H, ACTIVE STB-STS, L
 SD-BOOT-STS - DIR: 0 L, NORMAL H, SDBOOT STB-STS, L
 SW-OFF-DET - DIR: 1/O L, EMERGENCY H, NORMAL STB-STS, L
 DTV-VOUTENB - DIR: 0 L, OFF H, OUTPUT STB-STS, L
 HPD3 - DIR: 0 L, ENABLE H, DISABLE STB-STS, L
 HPD0 - DIR: 0 L, ENABLE H, DISABLE STB-STS, L
 HPD1 - DIR: 0 L, ENABLE H, DISABLE STB-STS, L
 HPD2 - DIR: 0 L, ENABLE H, DISABLE STB-STS, L
 (INV-PSU-ON) - DIR: 0 L, DISABLE H, ENABLE STB-STS, L
 RMIN - DIR: RMIN L, - H, - STB-STS,
 SRQ-GenX - DIR: 1 L, IIC STOP H, NORMAL STB-STS, -
 SOUND-SOS - DIR: 1 L, NORMAL H, SOS STB-STS, -
 SOS - DIR: 1 L, NORMAL H, SOS STB-STS, -
 CLK74SEL - DIR: 0 L, 74.25 H, 74.1756 STB-STS, L
 SIF-FIL-ON - DIR: 0 L, OFF H, ON STB-STS, L
 Peaks-Serial-SBO - DIR: USB02 L, - H, - STB-STS, L
 Peaks-Serial-SBI - DIR: USB12 L, - H, - STB-STS, L
 SDA0 - DIR: IIC L, - H, - STB-STS, H
 SCL0 - DIR: IIC L, - H, - STB-STS, H
 SDA1 - DIR: IIC L, - H, - STB-STS, H
 SCL1 - DIR: IIC L, - H, - STB-STS, H
 QLINK2 - DIR: AVLINK Qlink for AV1 STB-STS,
 QLINK1 - DIR: AVLINK Qlink for AV2 STB-STS,
 HDMI-CEC - DIR: CEC L, HDMI CEC H, STB-STS,
 AI-SENSOR - DIR: ADC L, Dark H, Bright STB-STS, -
 KEY1 - DIR: ADC DAC STB-STS, -
 FACT - DIR: ADC L, SD-Boot M, Boundary H, Ordinary STB-STS, -
 RF-AFT1 - DIR: ADC L, Local Upside H, Local Downside STB-STS, -
 PANEL-LED-ON - DIR: 0 L, OFF H, ON STB-STS, L
 (Active-Antenna-Det) - DIR: 1 L, Normal H, SHORT STB-STS, -
 DDCSDA0 - DIR: DDCIIC0 L, H, STB-STS,
 DDCSCL0 - DIR: DDCIIC0 L, H, STB-STS,
 DDCSDA1 - DIR: DDCIIC1 L, H, STB-STS,
 DDCSCL1 - DIR: DDCIIC1 L, H, STB-STS,
 DDCSDA2 - DIR: DDCIIC2 L, H, STB-STS,
 DDCSCL2 - DIR: DDCIIC2 L, H, STB-STS,
 DDCSDA3 - DIR: DDCIIC3 L, H, STB-STS,
 DDCSCL3 - DIR: DDCIIC3 L, H, STB-STS,
 EDID-WP - DIR: 0 L, PROTECT H, Write STB-STS, L
 SD-PWR-CTRL - DIR: 1/O L, OFF H, ON STB-STS, L
 MAIN-FAN-ON - DIR: 0 PDP L, 12V H, 2.9V H, 7V / LCD L, 7V H, 9V STB-STS, L
 FAN-MAX - DIR: 0 PDP L, 12V H, 2.9V H, 7V / LCD L, 7V H, 9V STB-STS, L
 FAN-SOS - DIR: 1 L, NORMAL H, SOS STB-STS, -
 HDMI-CEC-PU-ON - DIR: 0 L, OPEN H, ON STB-STS, L
 HDMI-SV-DET1 - DIR: 1 L, Unplugged H, Plugged STB-STS, -
 HDMI-SV-DET2 - DIR: 1 L, Unplugged H, Plugged STB-STS, -
 HDMI-SV-DET0 - DIR: 1 L, Unplugged H, Plugged STB-STS, -
 HDMI-SV-DET3 - DIR: 1 L, Unplugged H, Plugged STB-STS, -

<2D>

SOS

<1E>

G-MAIN3_3V-SENSE

G-MAIN9V-SENSE

<2E>

G-SUB5V-SENSE

G-SUB3_3V-SENSE

<3E>


G-DTV9V-SENSE

<4E>

G

<5E>

11.2.15. A Board - Sheet : 003 (6 / 6)

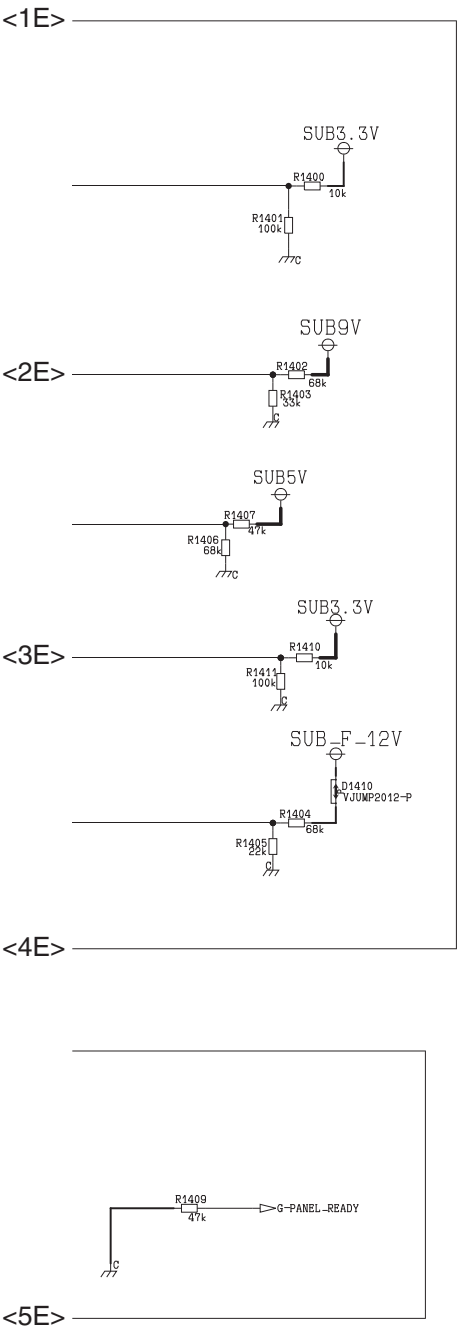


Power off reset time polarity setting


☒	☐	G-TV-SUB-ON	R1422 1.8k	LCD-TV-SUB-ON	TV-SUB-ON for LCD-MODEL
☒	☐	G-TV-MAIN-ON		PD on Sheet SET	
☒	☐	G-SOUND-SOS		PD on Sheet ADV-A	
☒	☐	G-PANEL-ALARM/INVERTER-SOS		PU on Sheet SET	
☒	☐	G-PANEL-STBY-ON/PANEL-VCC-ON		PD on Sheet SET	
☒	☐	G-ECO-ON/INVERTER-ON		PD on Sheet SET	
☒	☐	G-GRAB-MODULE-IIC/PWM-POW-ON		PD on Sheet LVDS	
☒	☐	G-BACK-VOUTENB		NON USE	
☒	☐	G-HQ-XRST		NON USE	
☒	☐	G-MID-VOUTENB		NON USE	
☒	☐	G-SOURCE-XRST/PANEL-TEST-ON		PD on Sheet LVDS	
☒	☐	G-DTV-VOUTENB		PD on Sheet Peaks-DEST	

11.2.16. A Board - Sheet : 004 (1 / 2)


PowerSupply

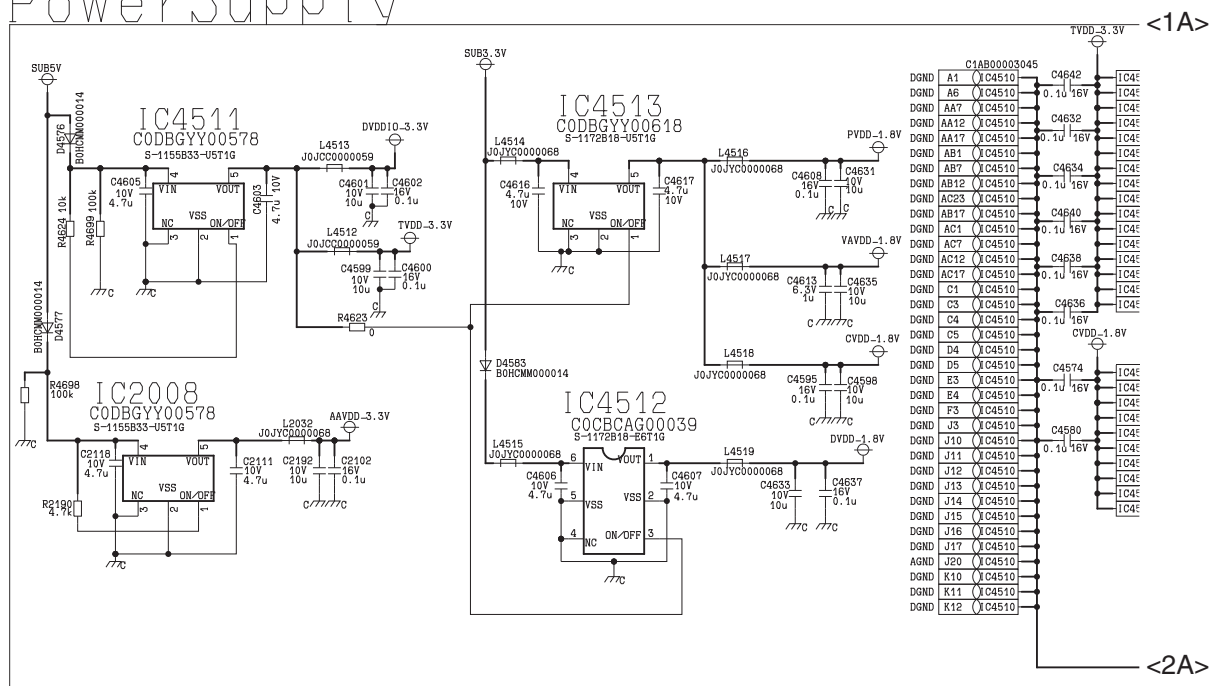


ADV7496

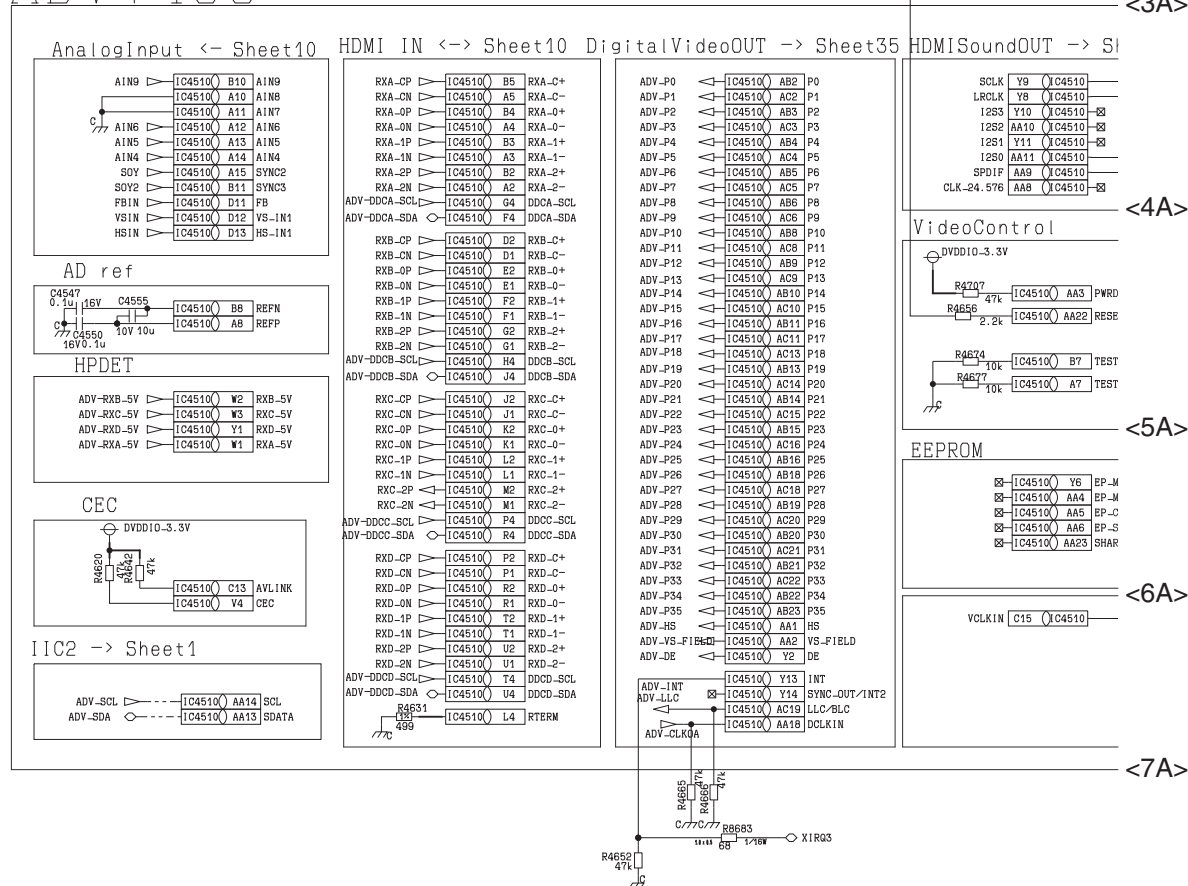


11.2.17. A Board - Sheet : 004 (2 / 2)

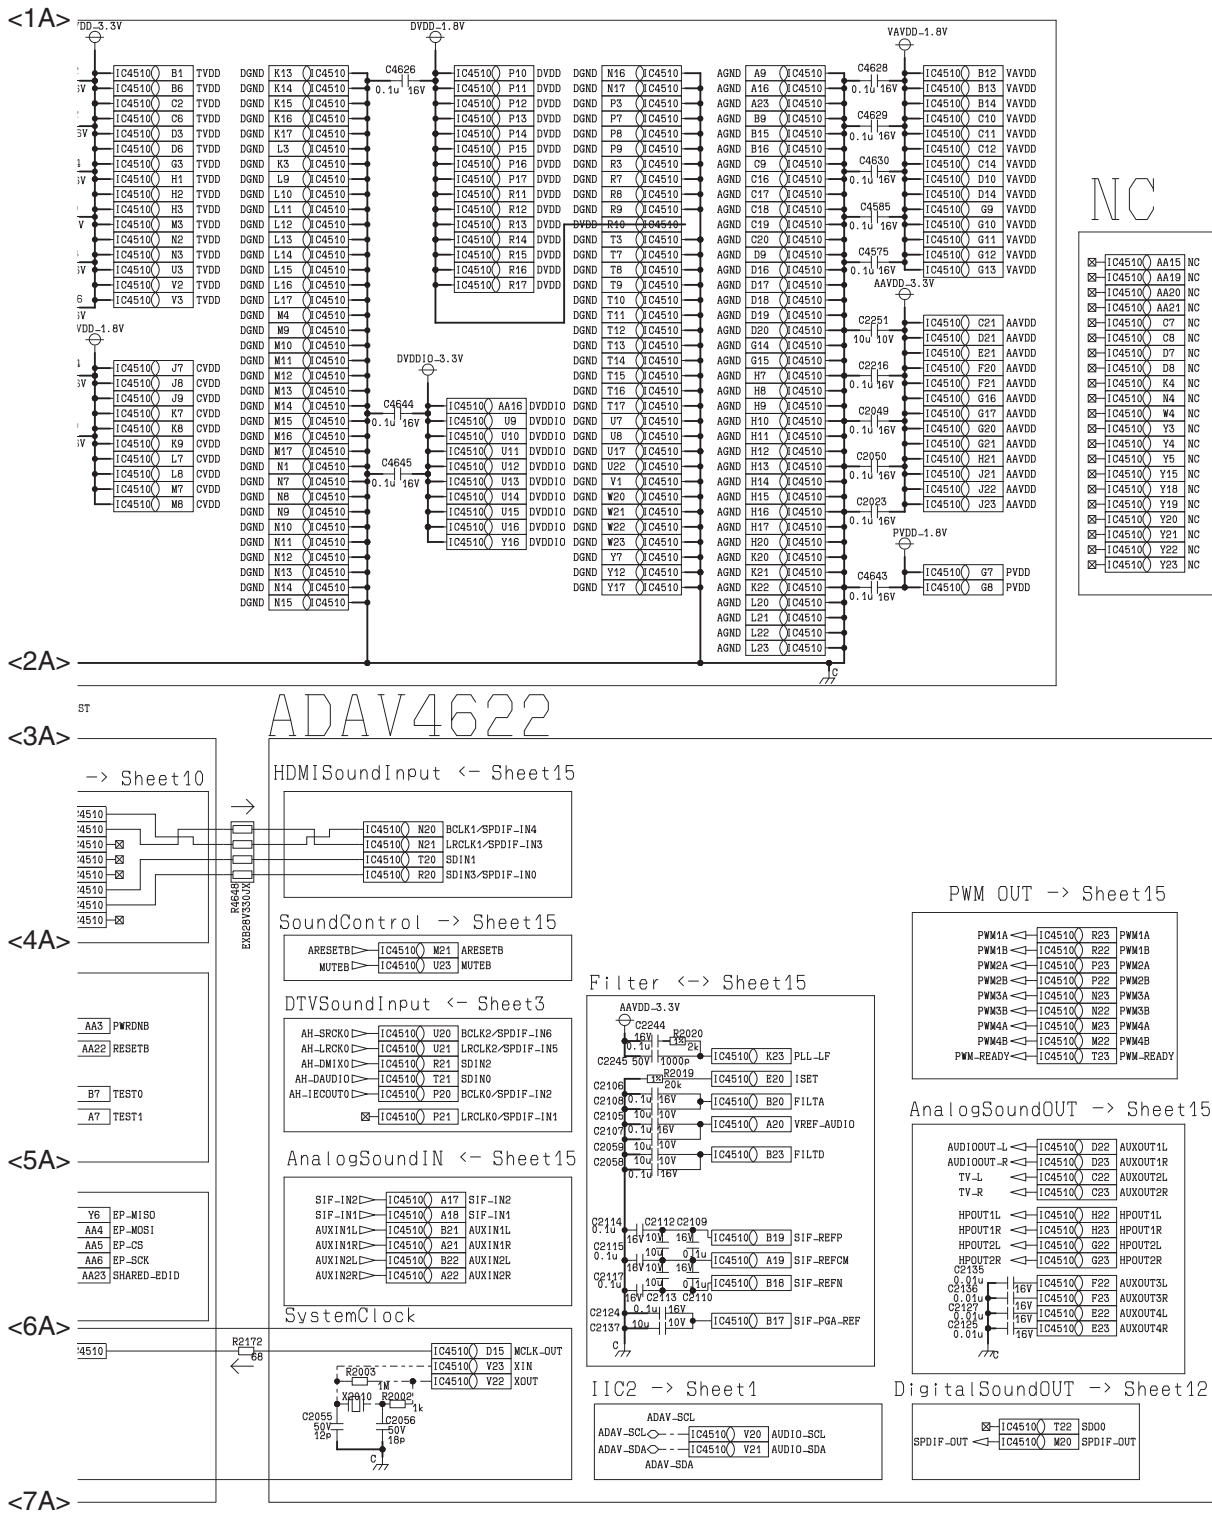


11.2.19. A Board - Sheet : 005 (2 / 5)

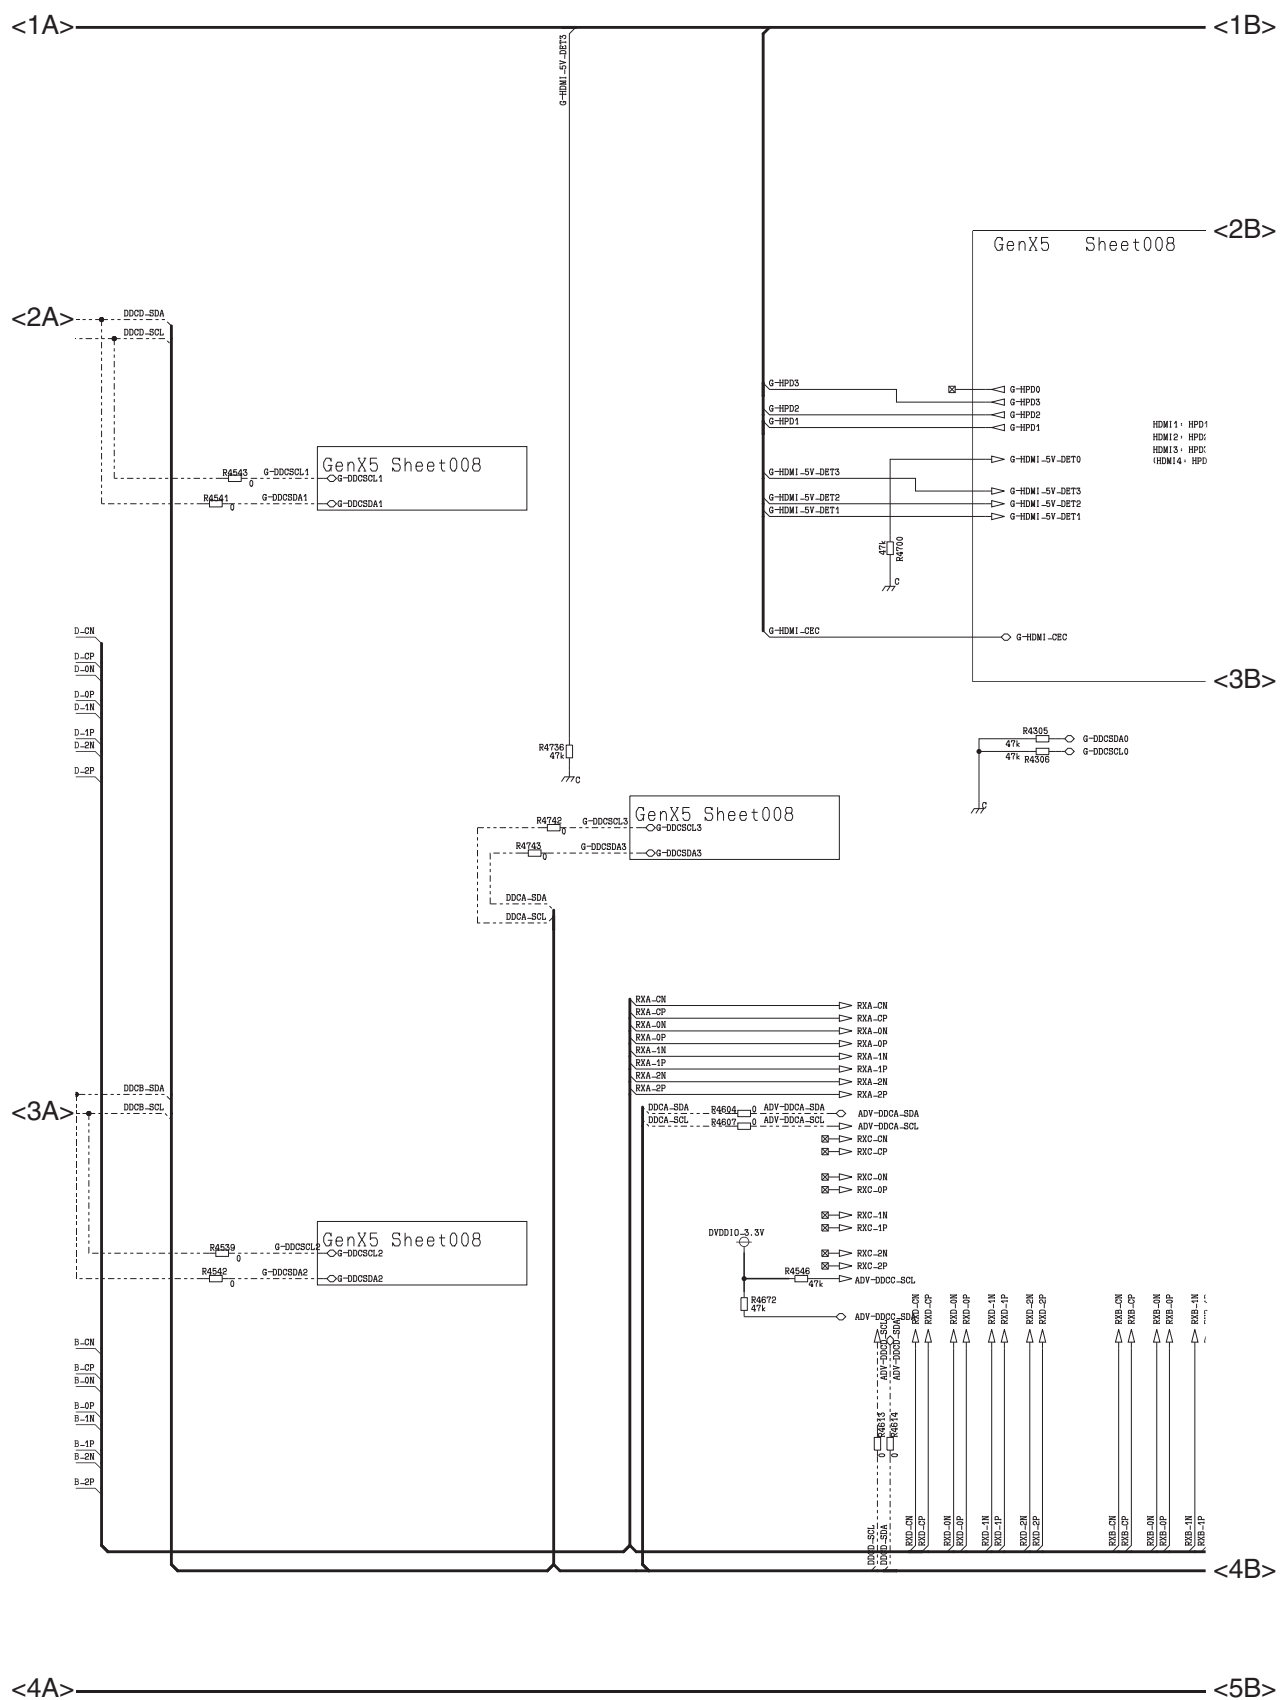


11.2.22. A Board - Sheet : 005 (5 / 5)

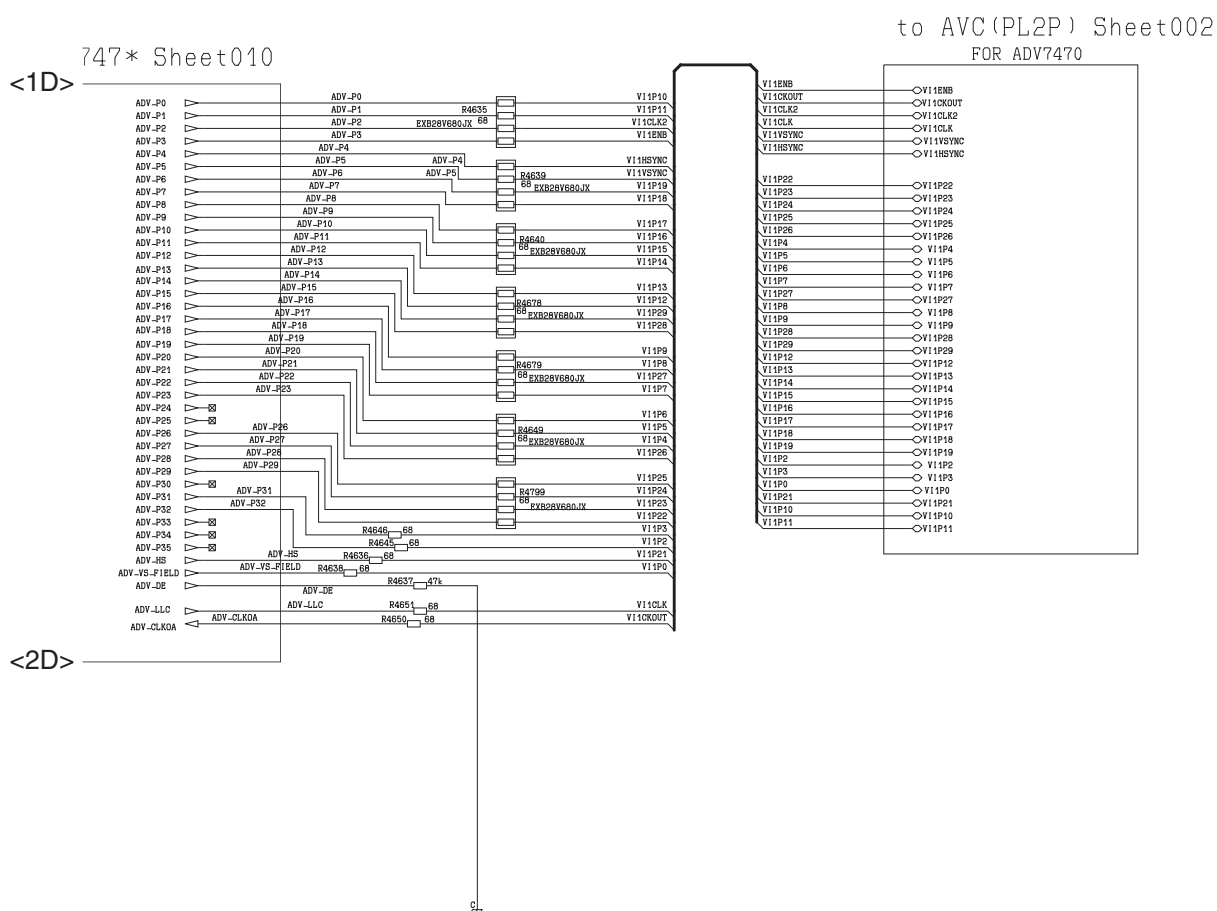

11.2.23. A Board - Sheet : 006 (1 / 4)

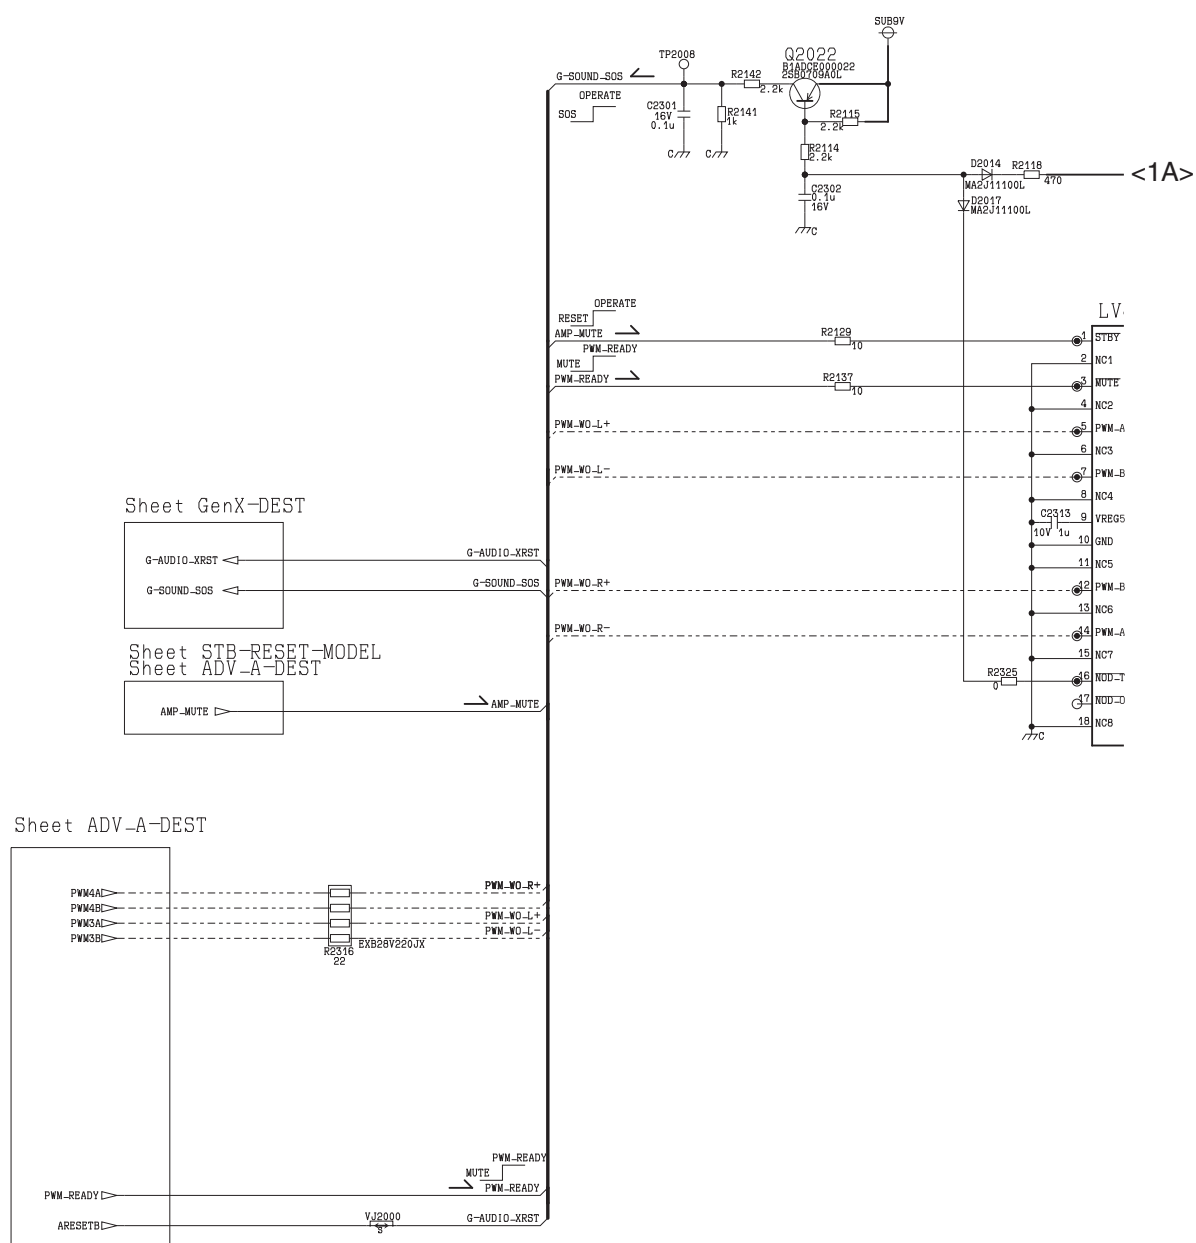


11.2.25. A Board - Sheet : 006 (3 / 4)

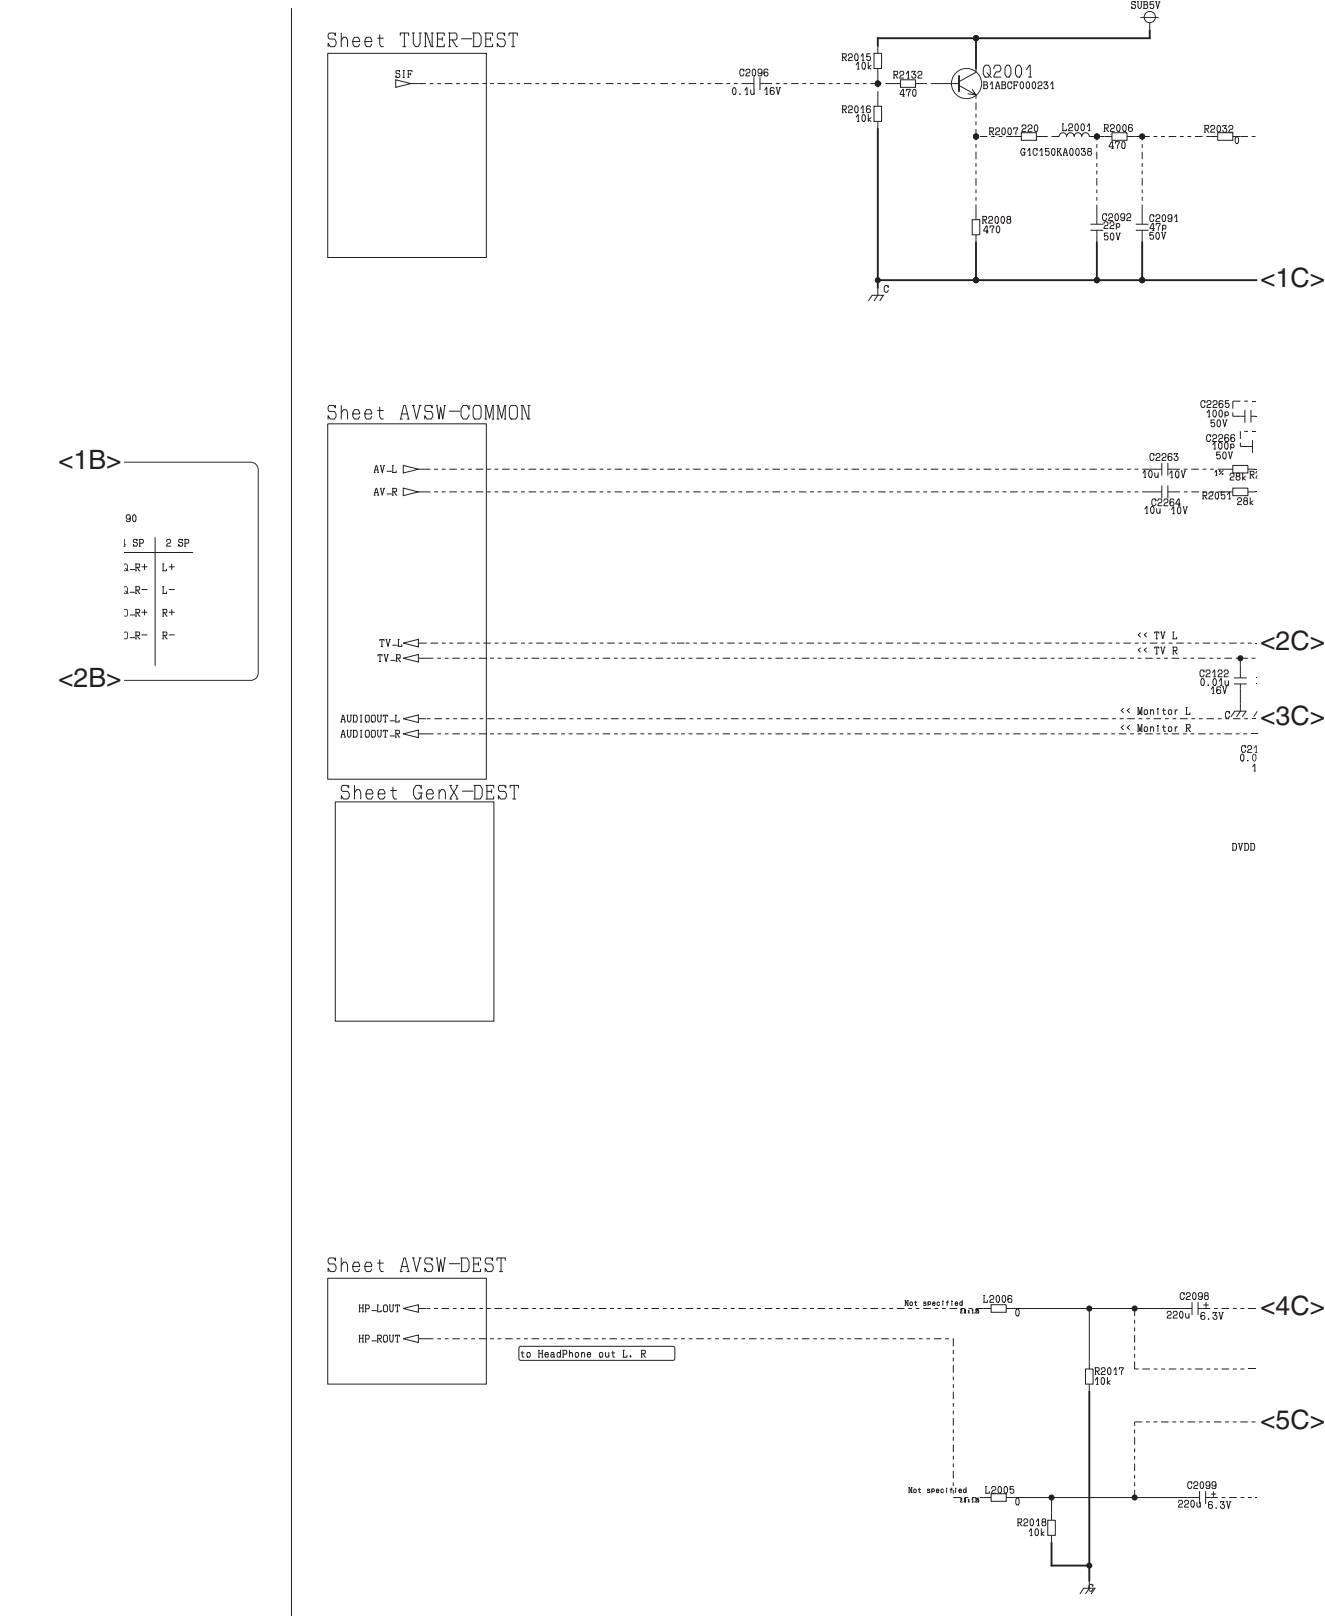







11.2.28. A Board - Sheet : 007 (2 / 9)

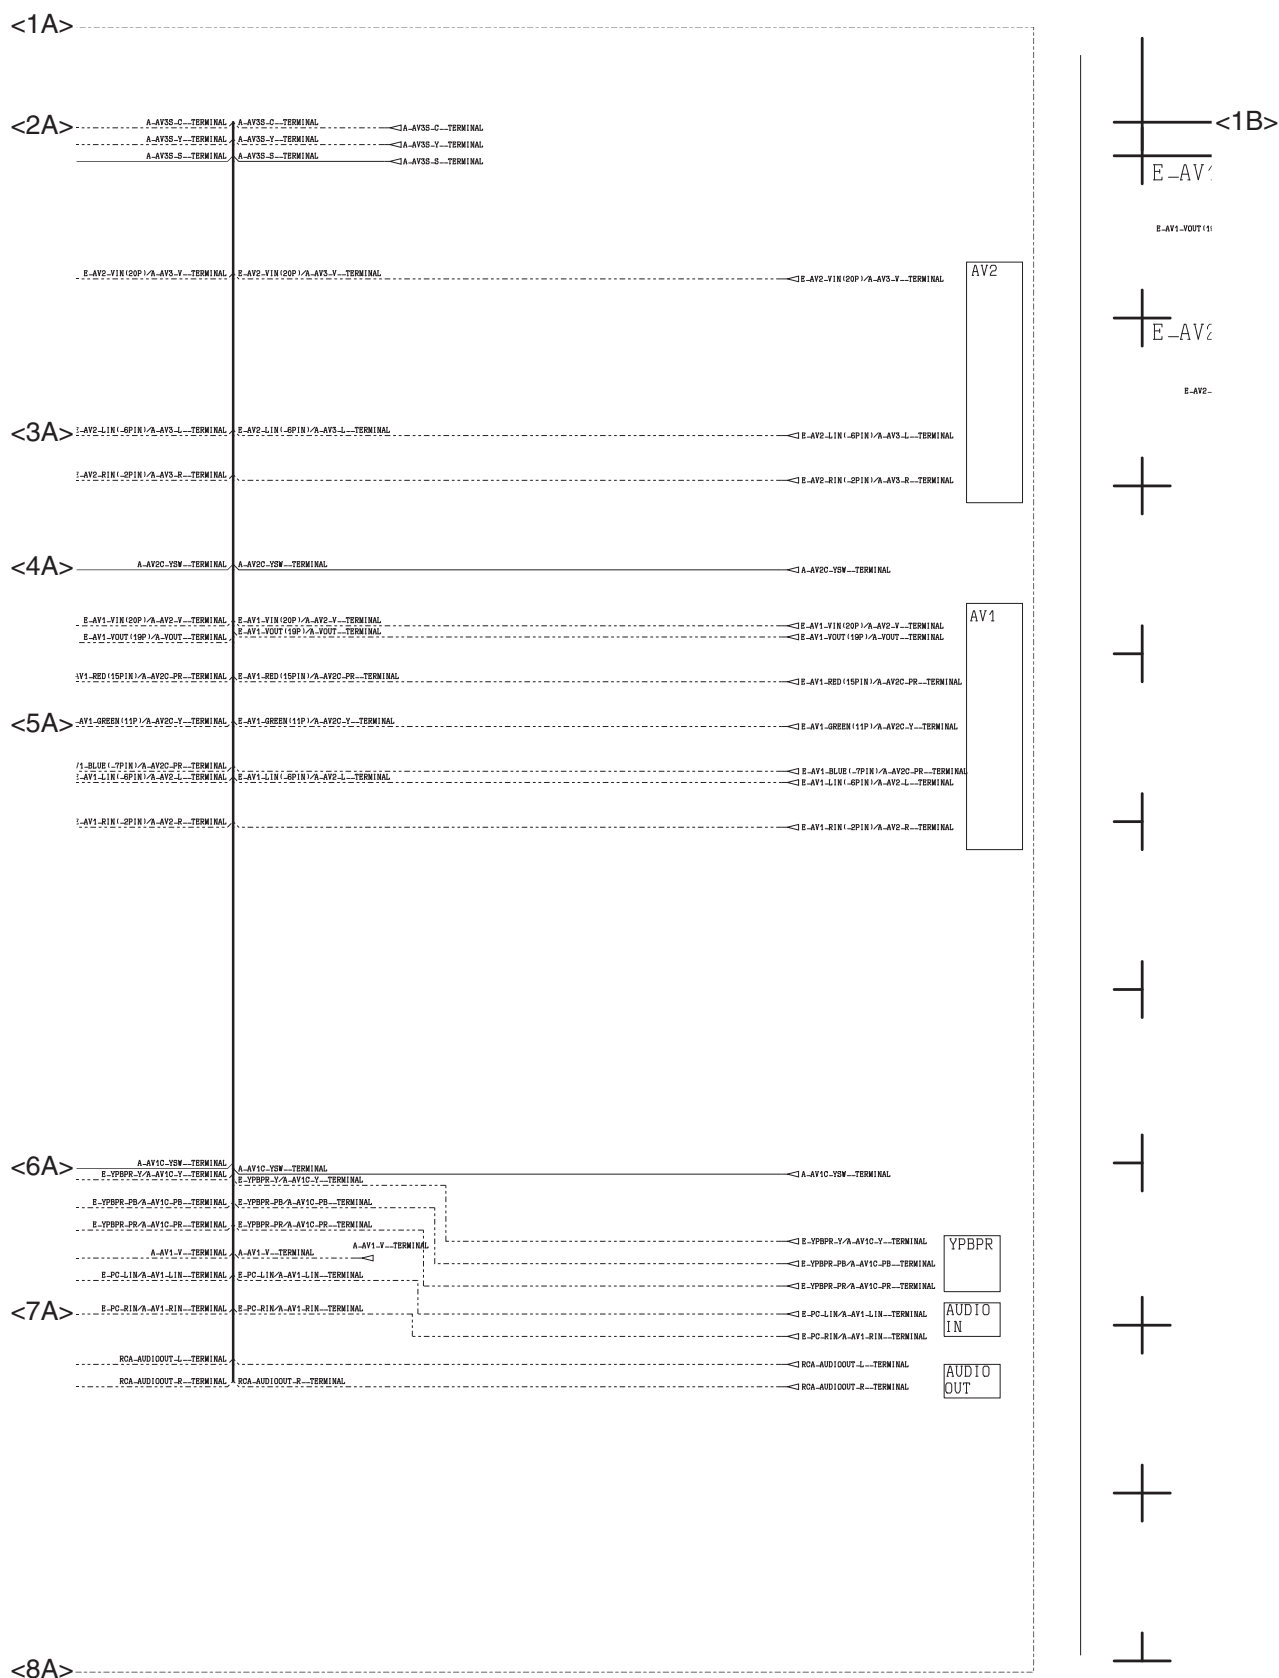

11.2.29. A Board - Sheet : 007 (3 / 9)

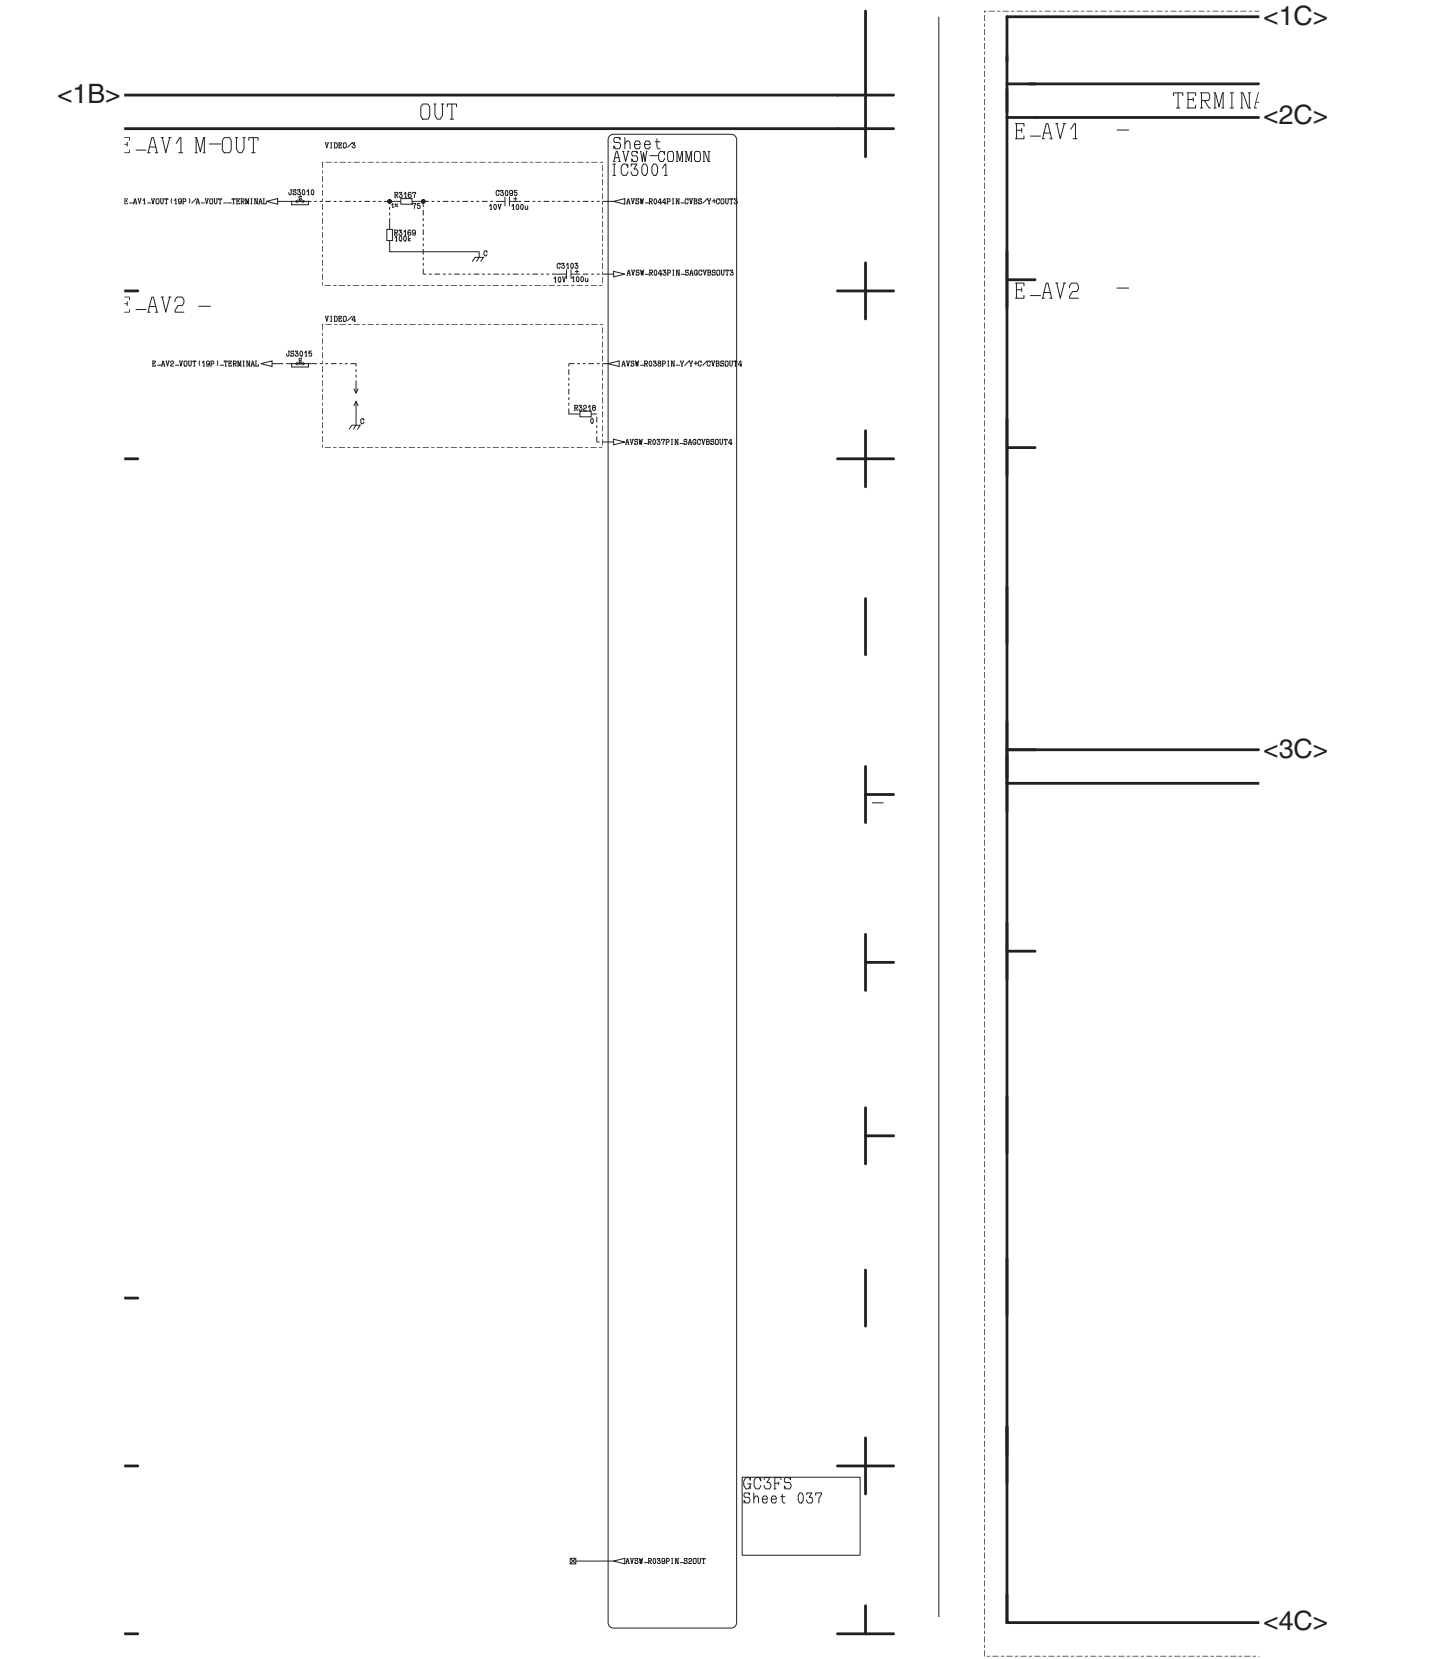


11.2.30. A Board - Sheet : 007 (4 / 9)

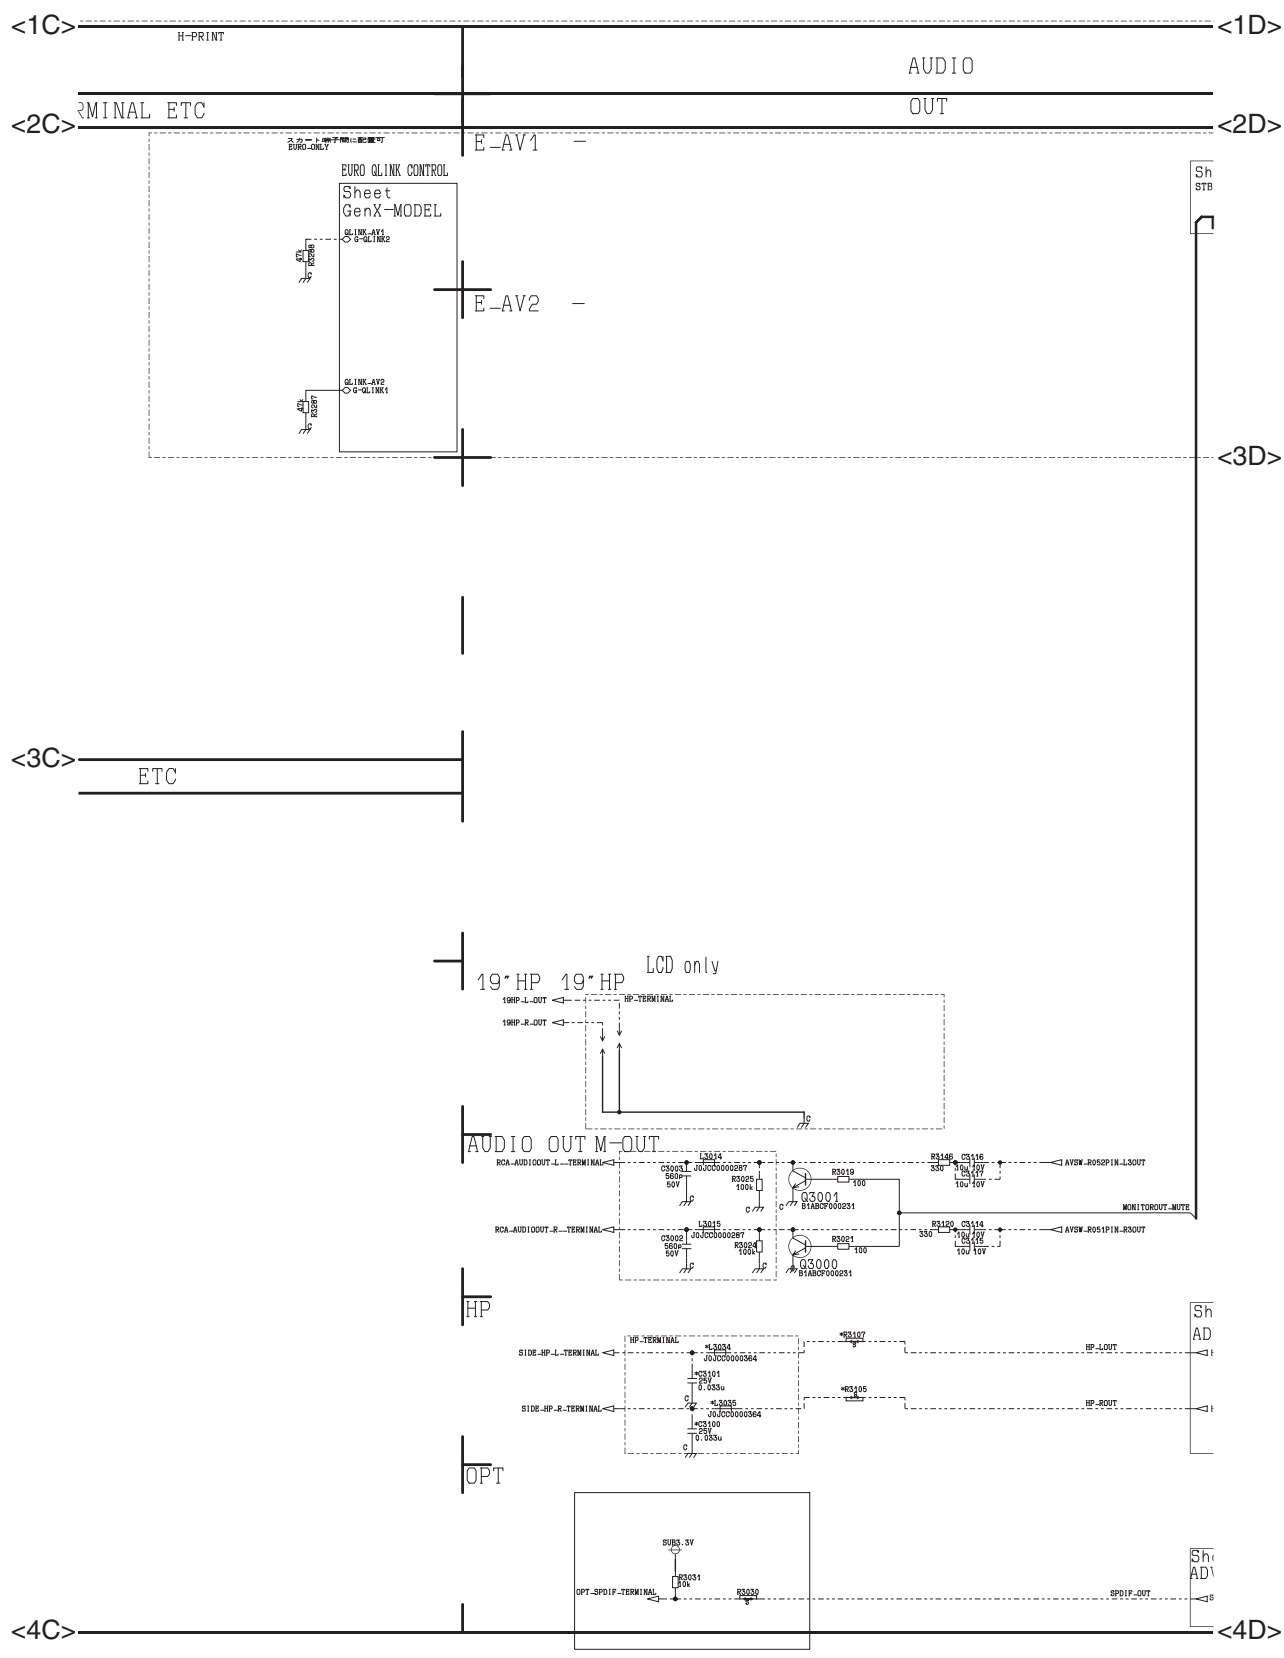





11.2.34. A Board - Sheet : 007 (8 / 9)

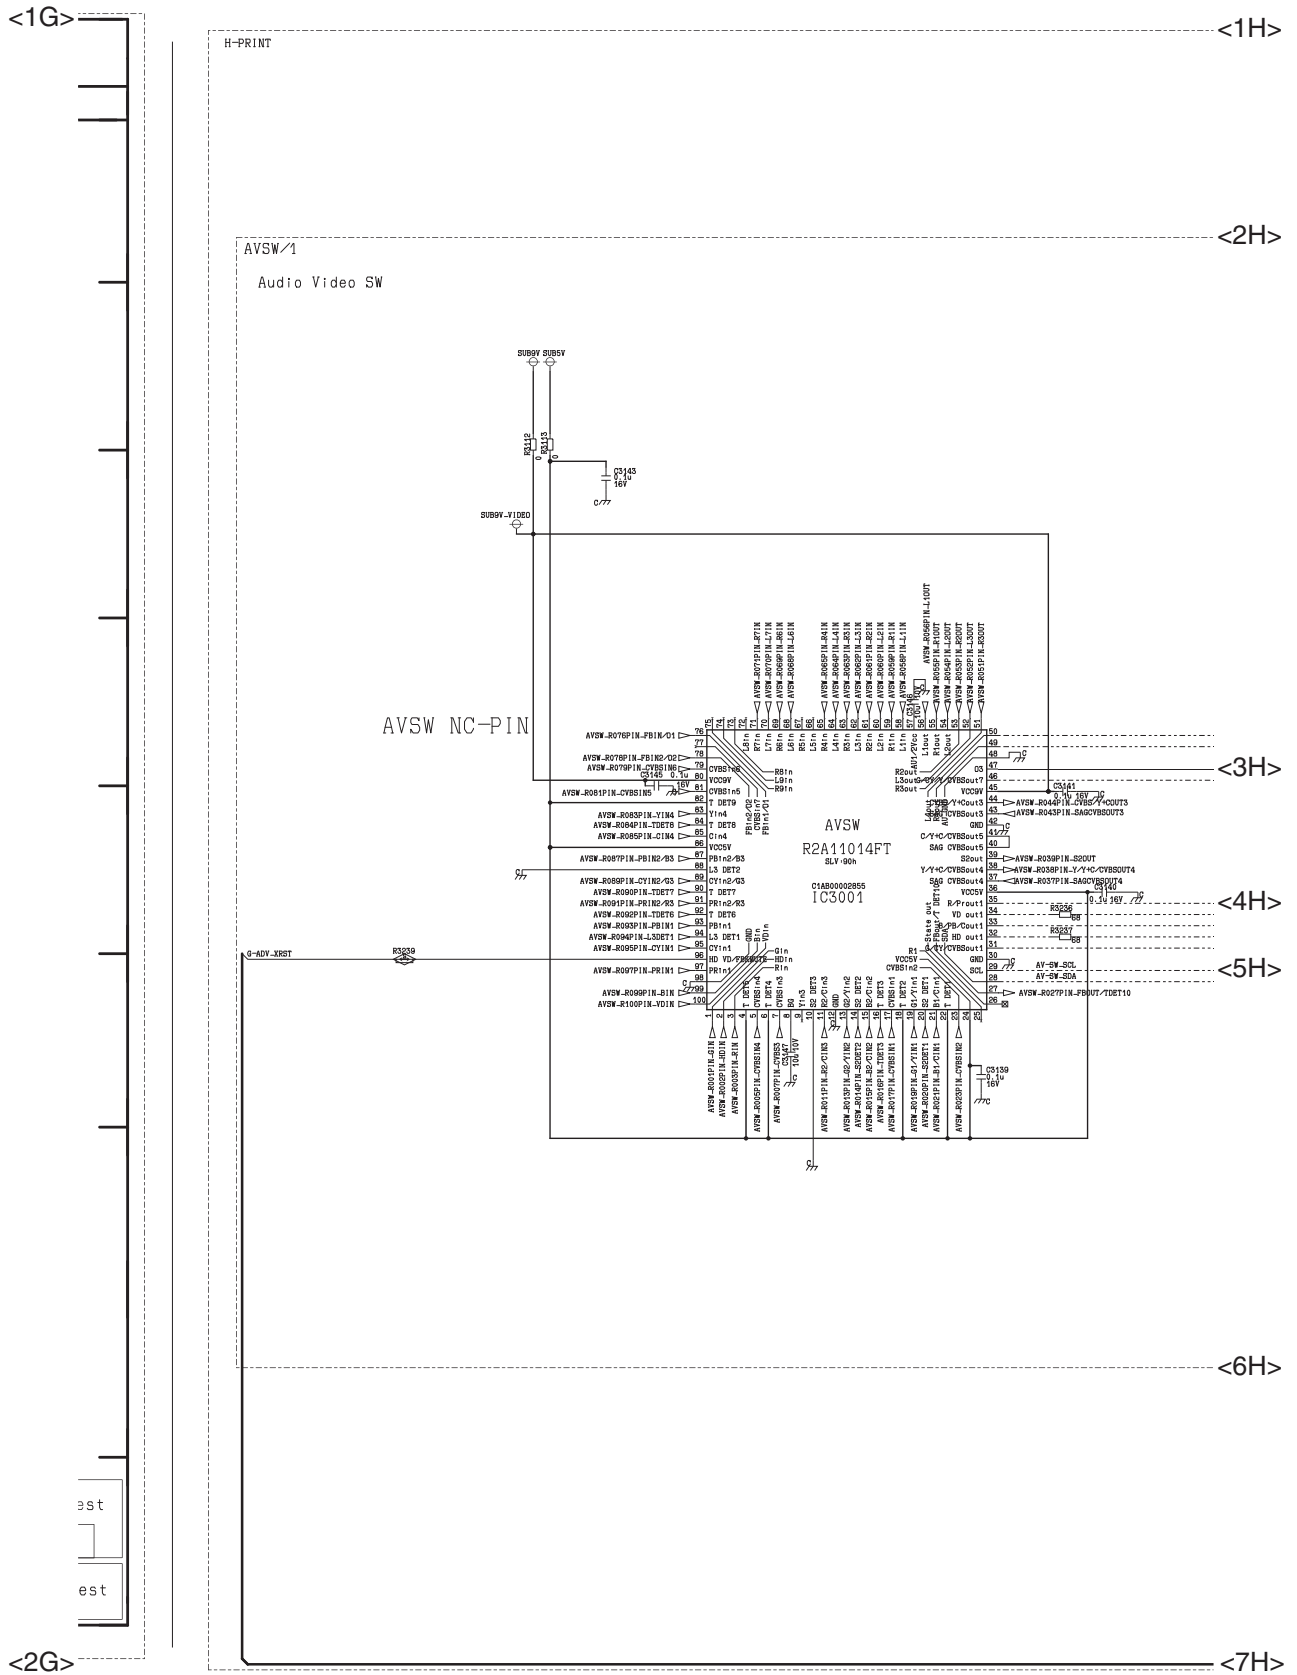


11.2.35. A Board - Sheet : 007 (9 / 9)

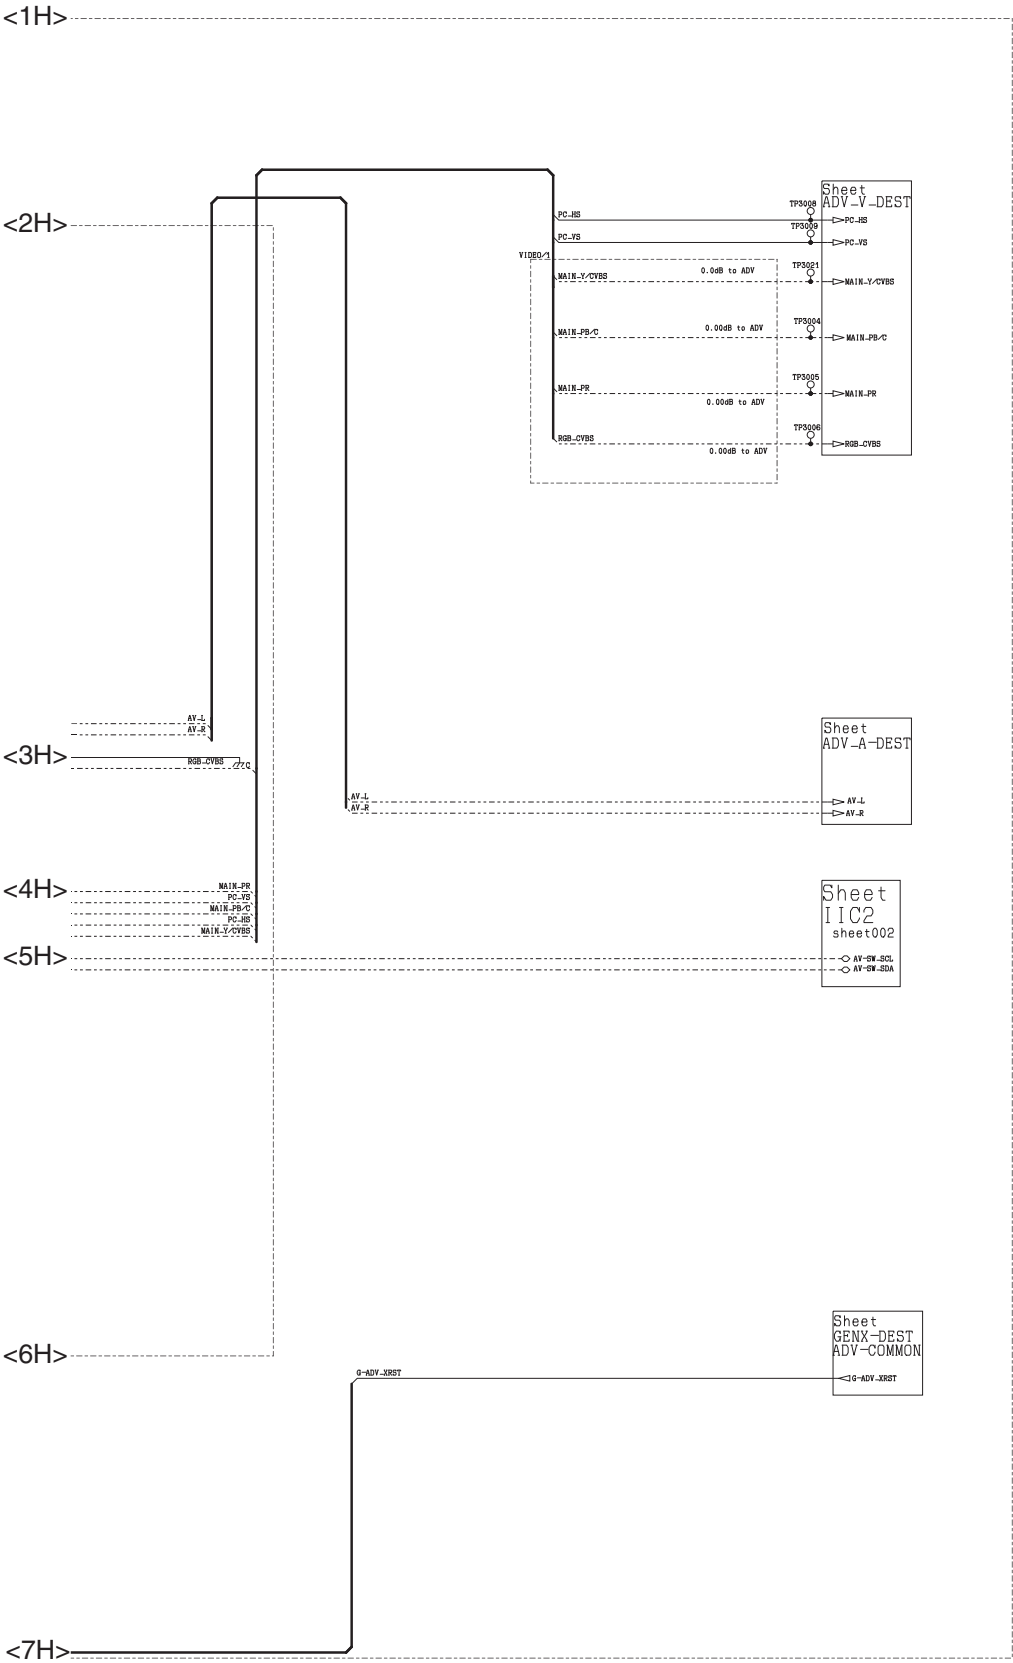

11.2.36. A Board - Sheet : 008 (1 / 4)

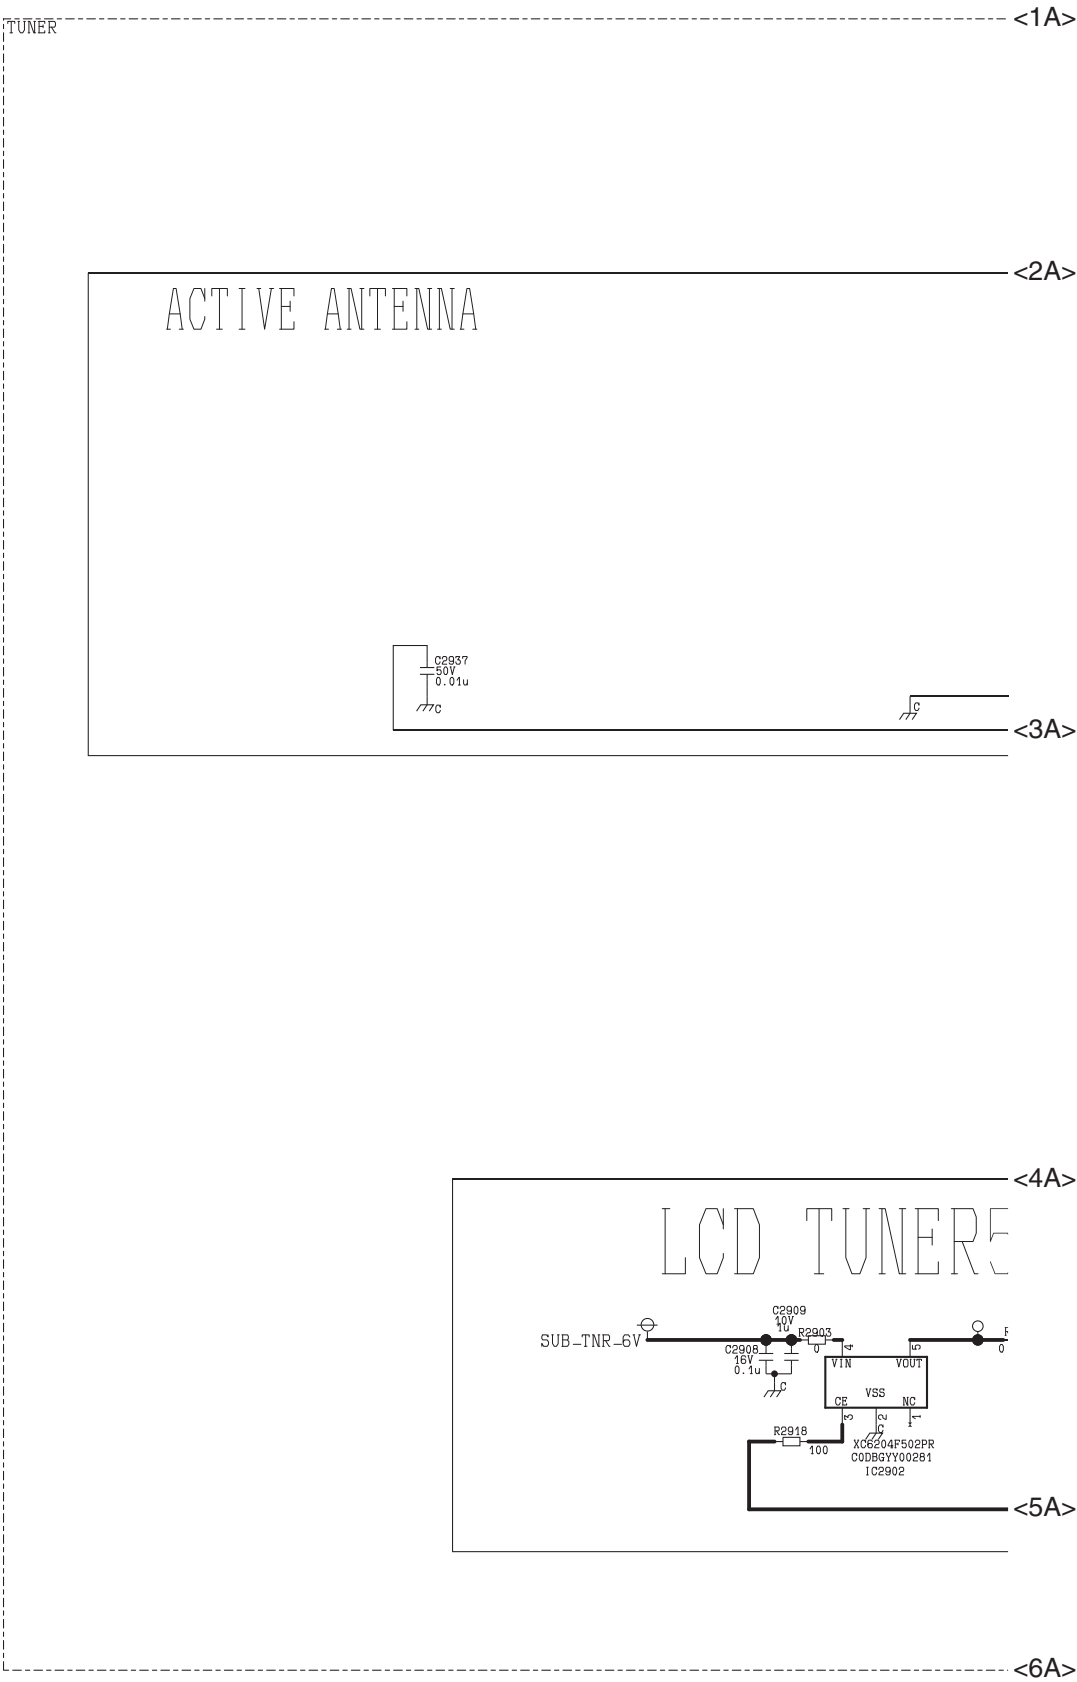


11.2.37. A Board - Sheet : 008 (2 / 4)

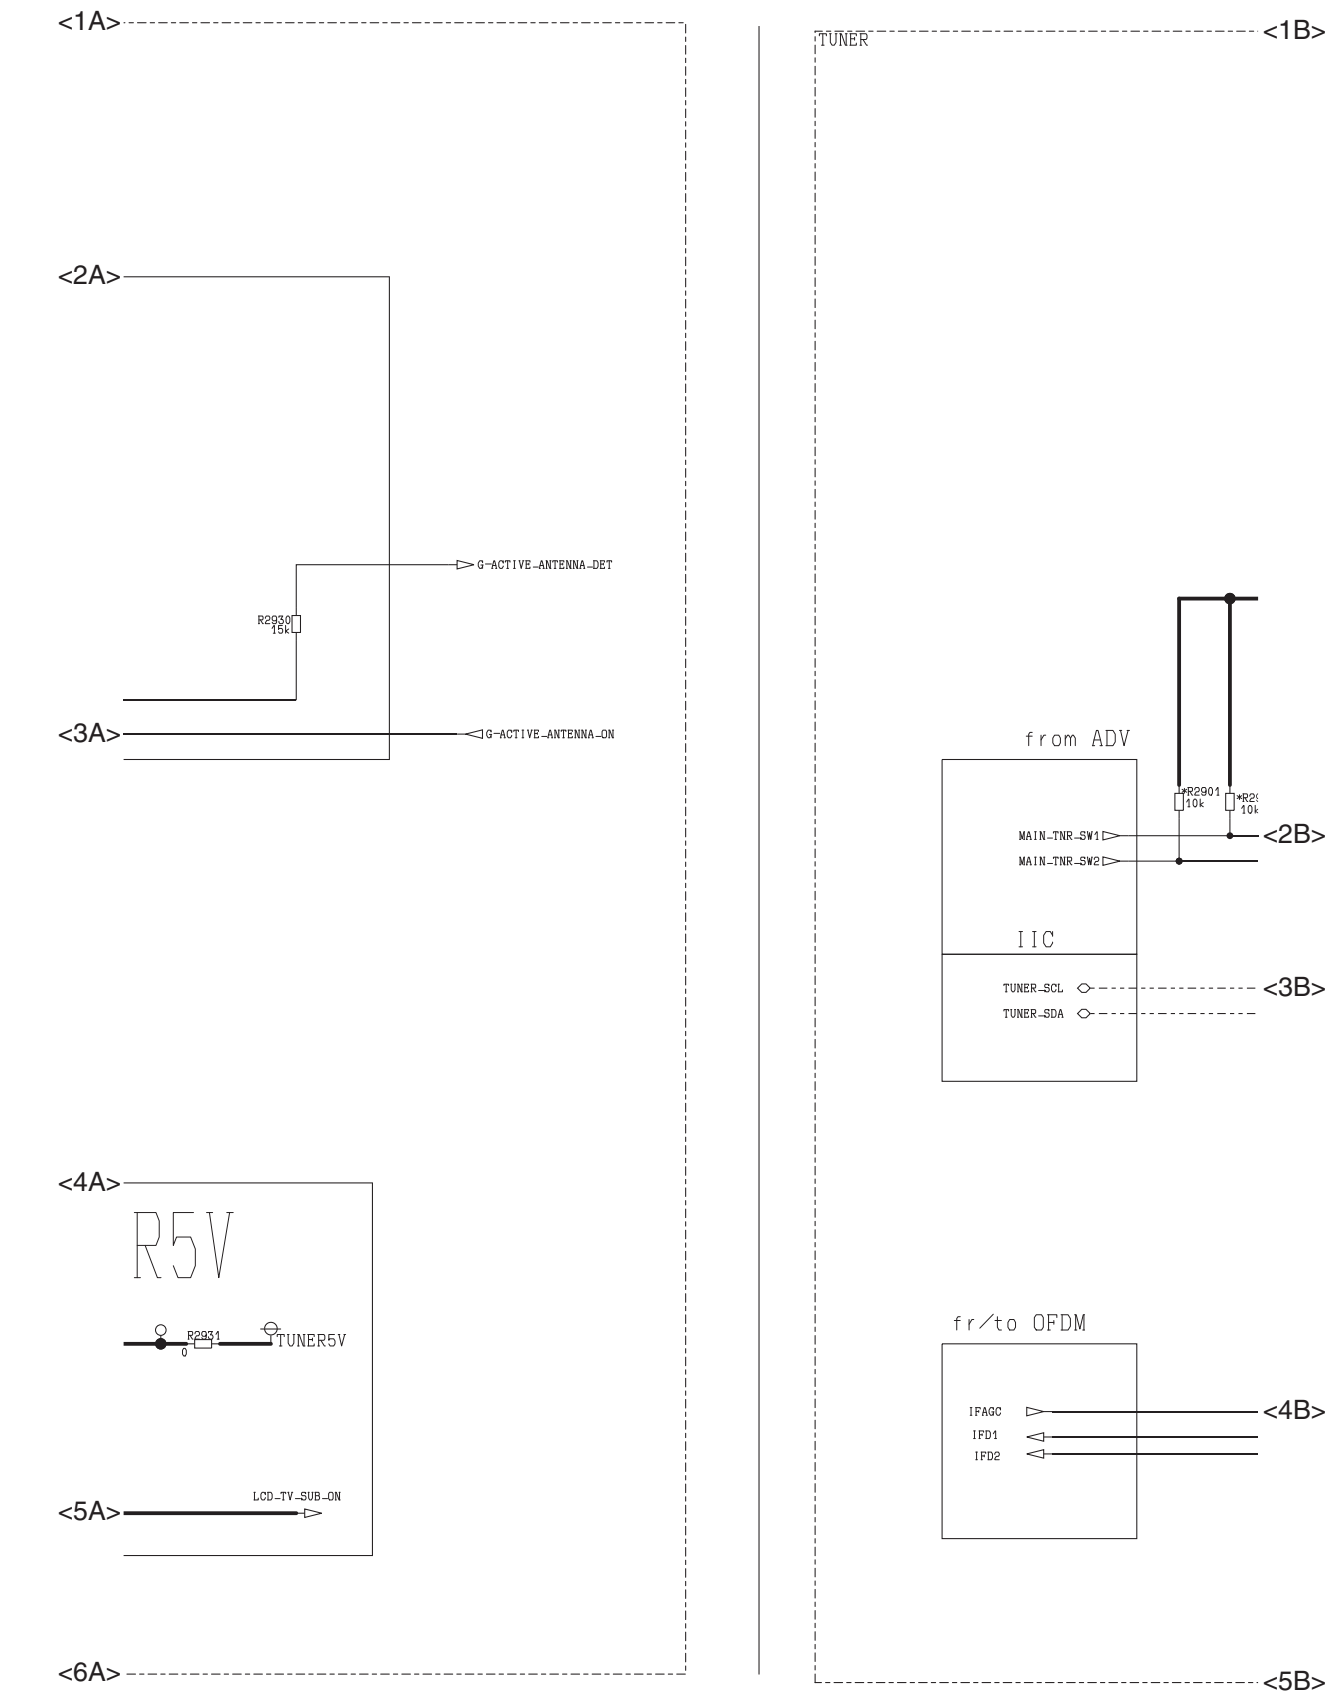

11.2.38. A Board - Sheet : 008 (3 / 4)


<1B>-----<1C>

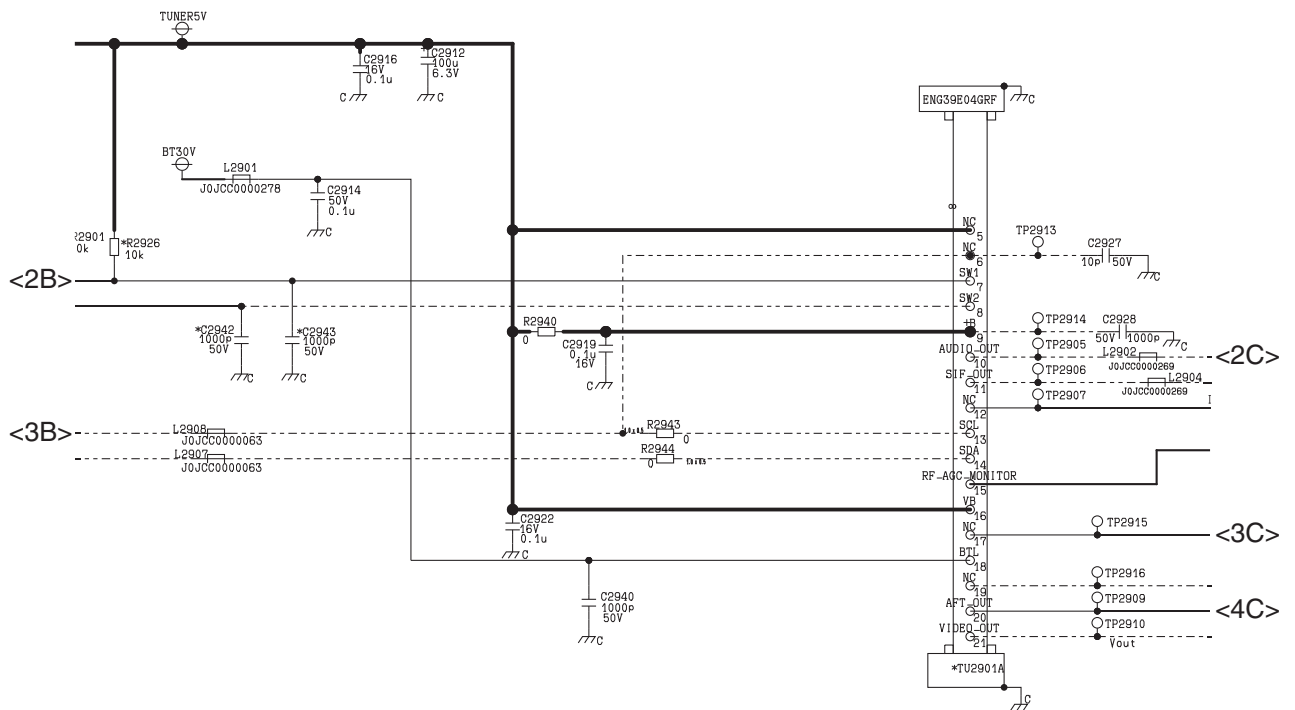


<4B>-----<5C>

<5B>-----<6C>


11.2.39. A Board - Sheet : 008 (4 / 4)

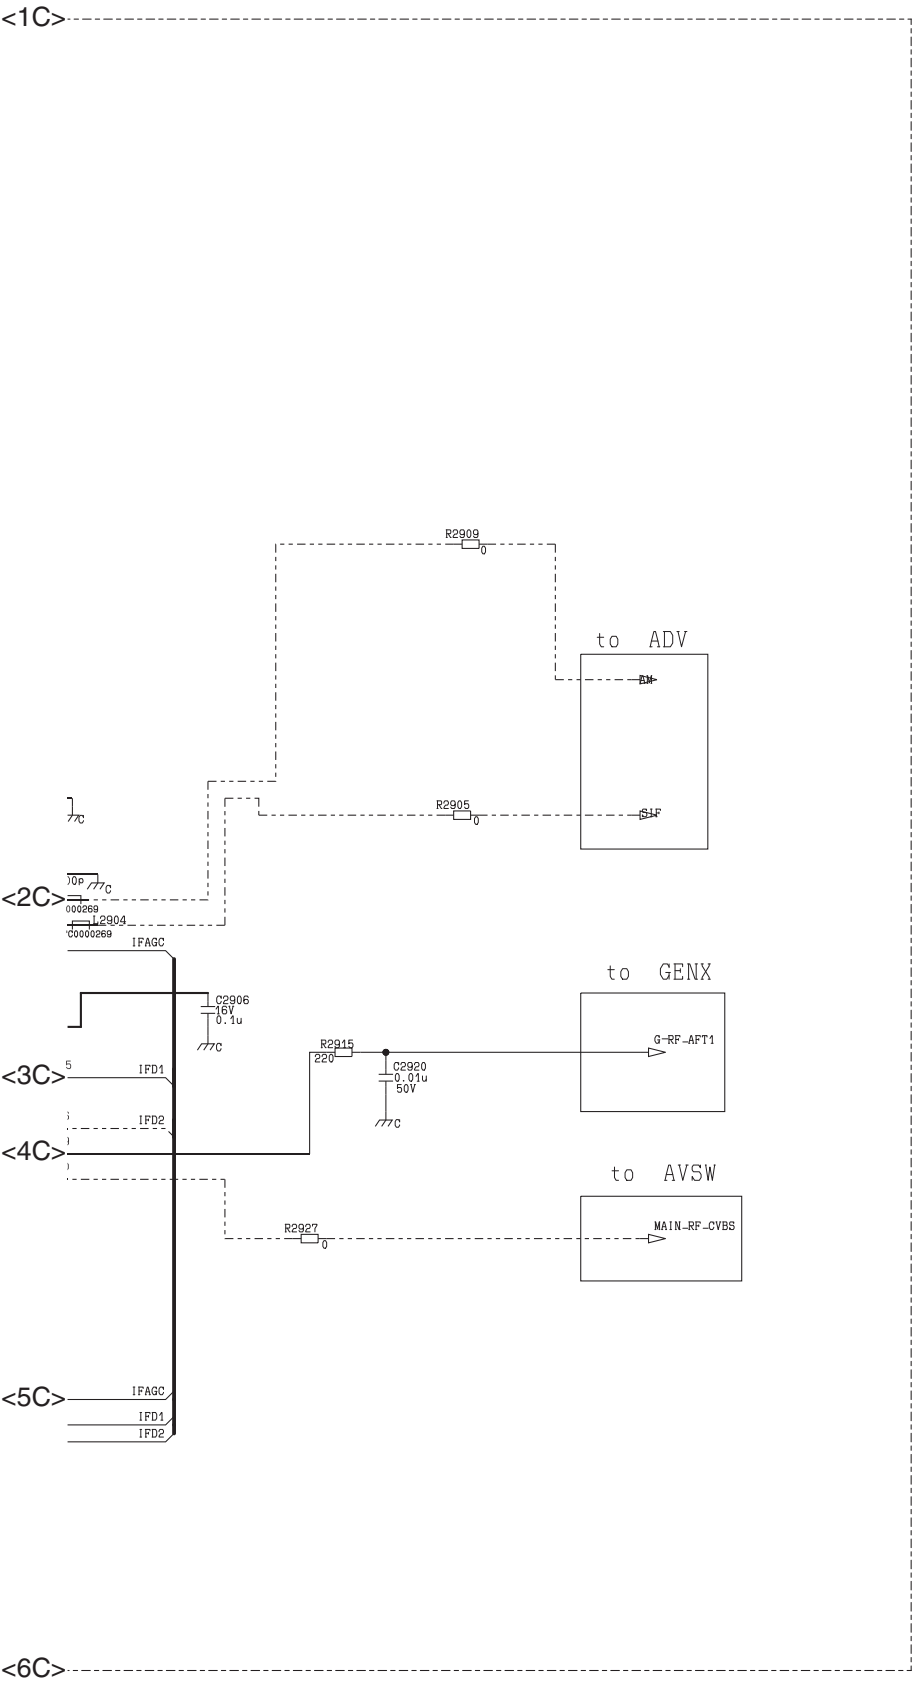



11.2.40. A Board - Sheet : 009 (1 / 2)

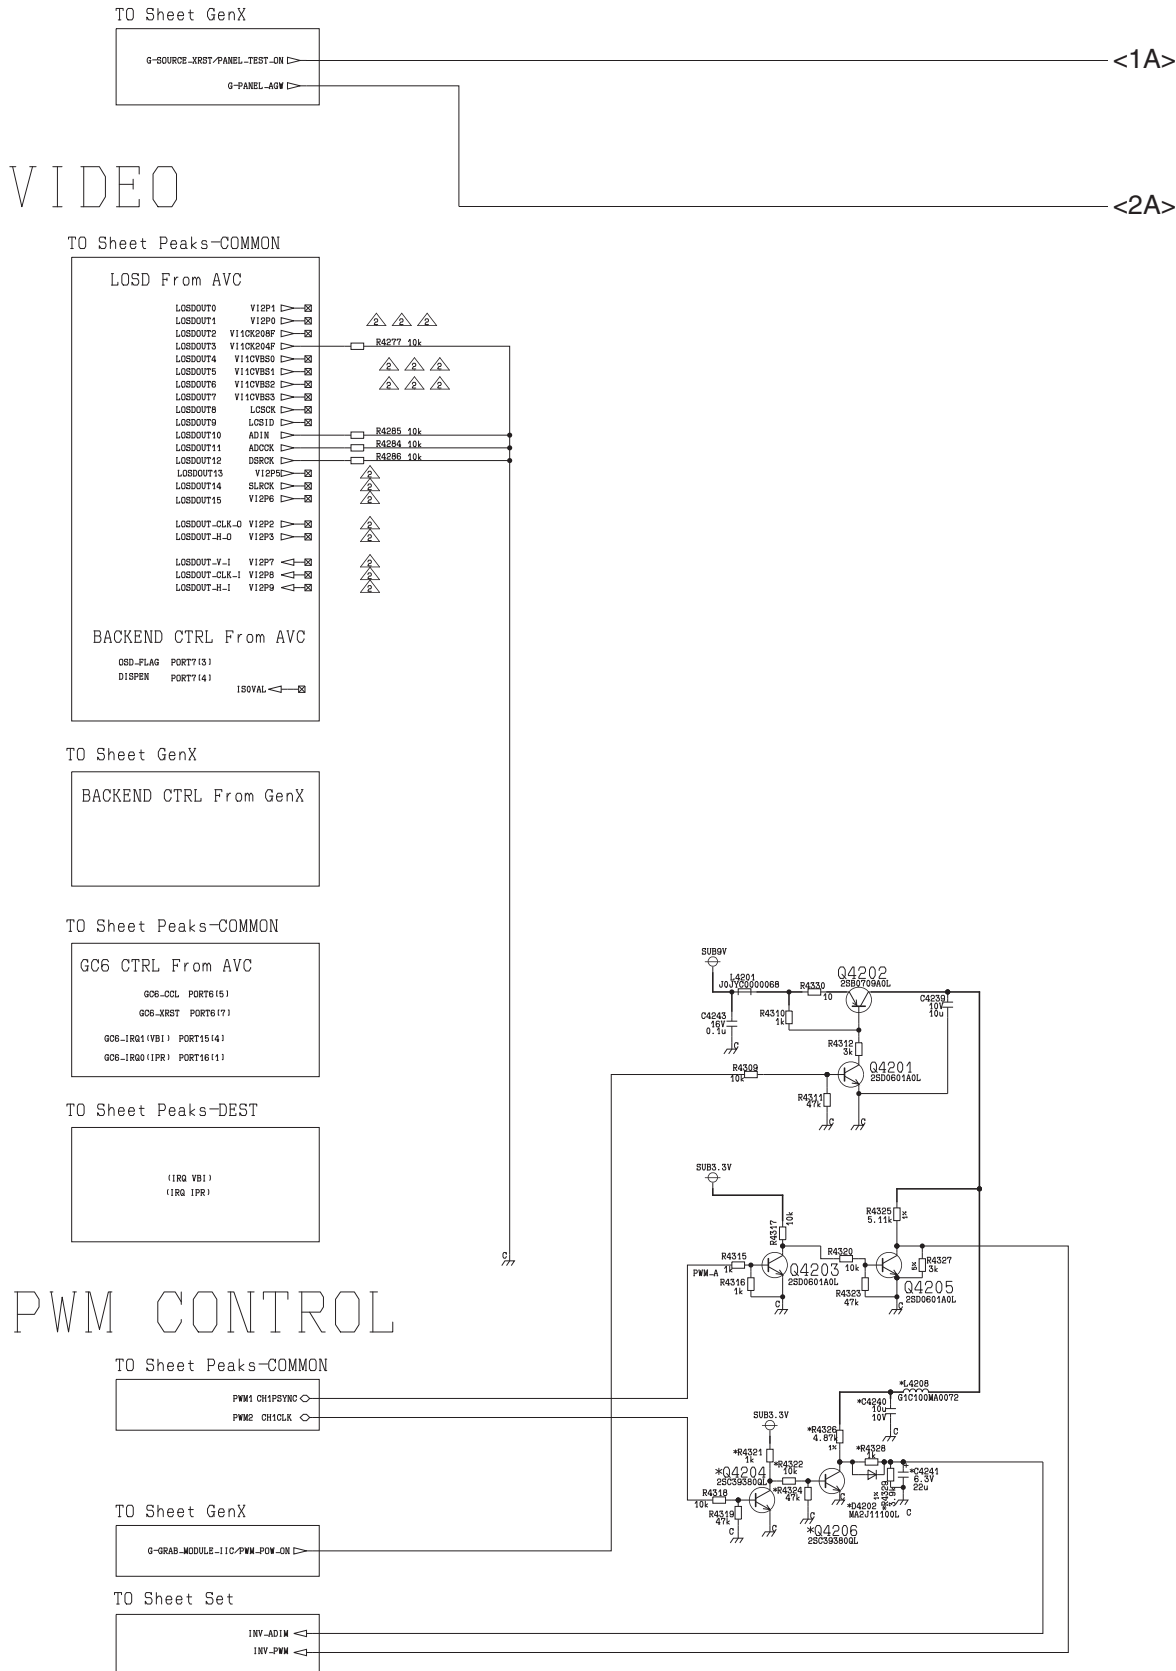


11.2.41. A Board - Sheet : 009 (2 / 2)

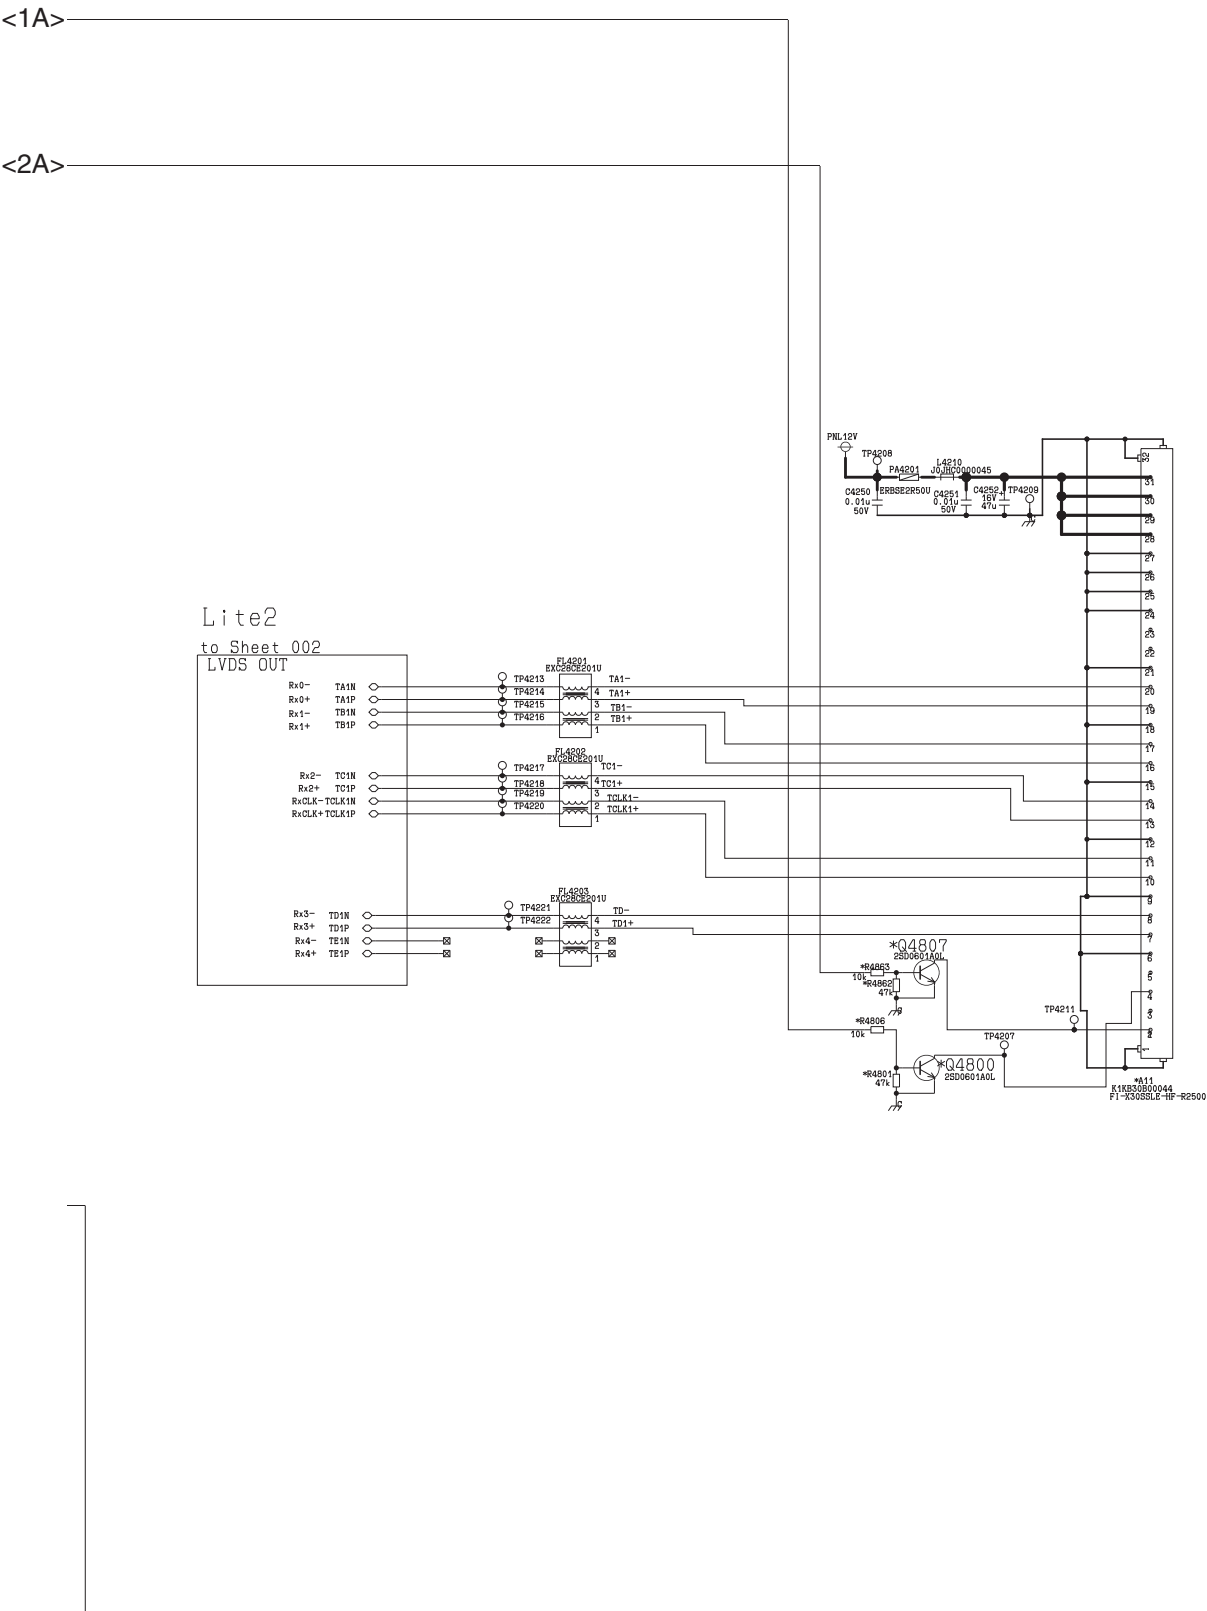

11.2.42. A Board - Sheet : 010 (1 / 5)

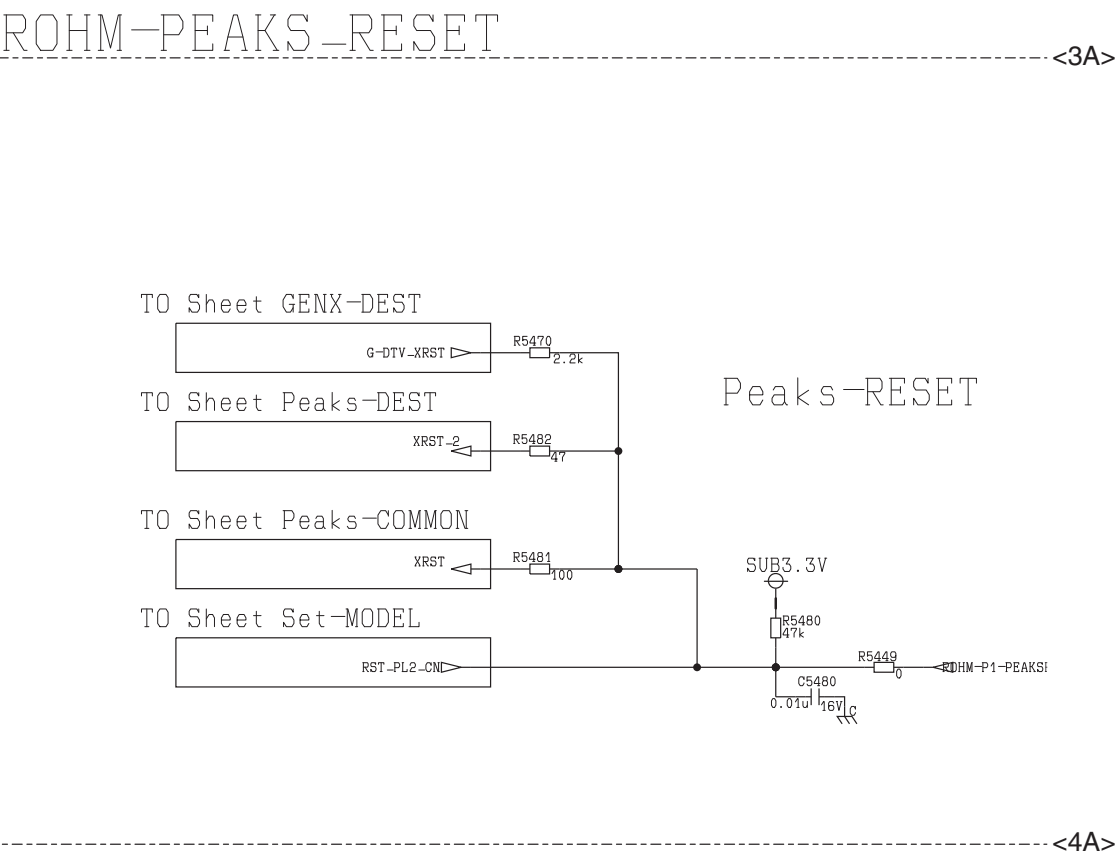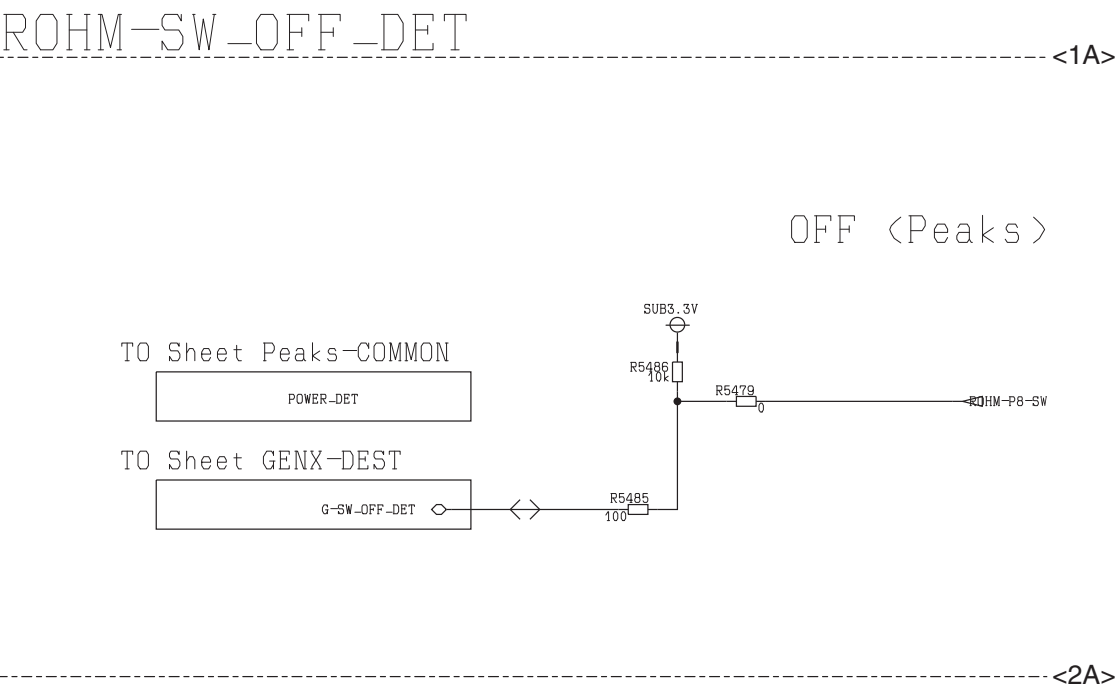

11.2.43. A Board - Sheet : 010 (2 / 5)

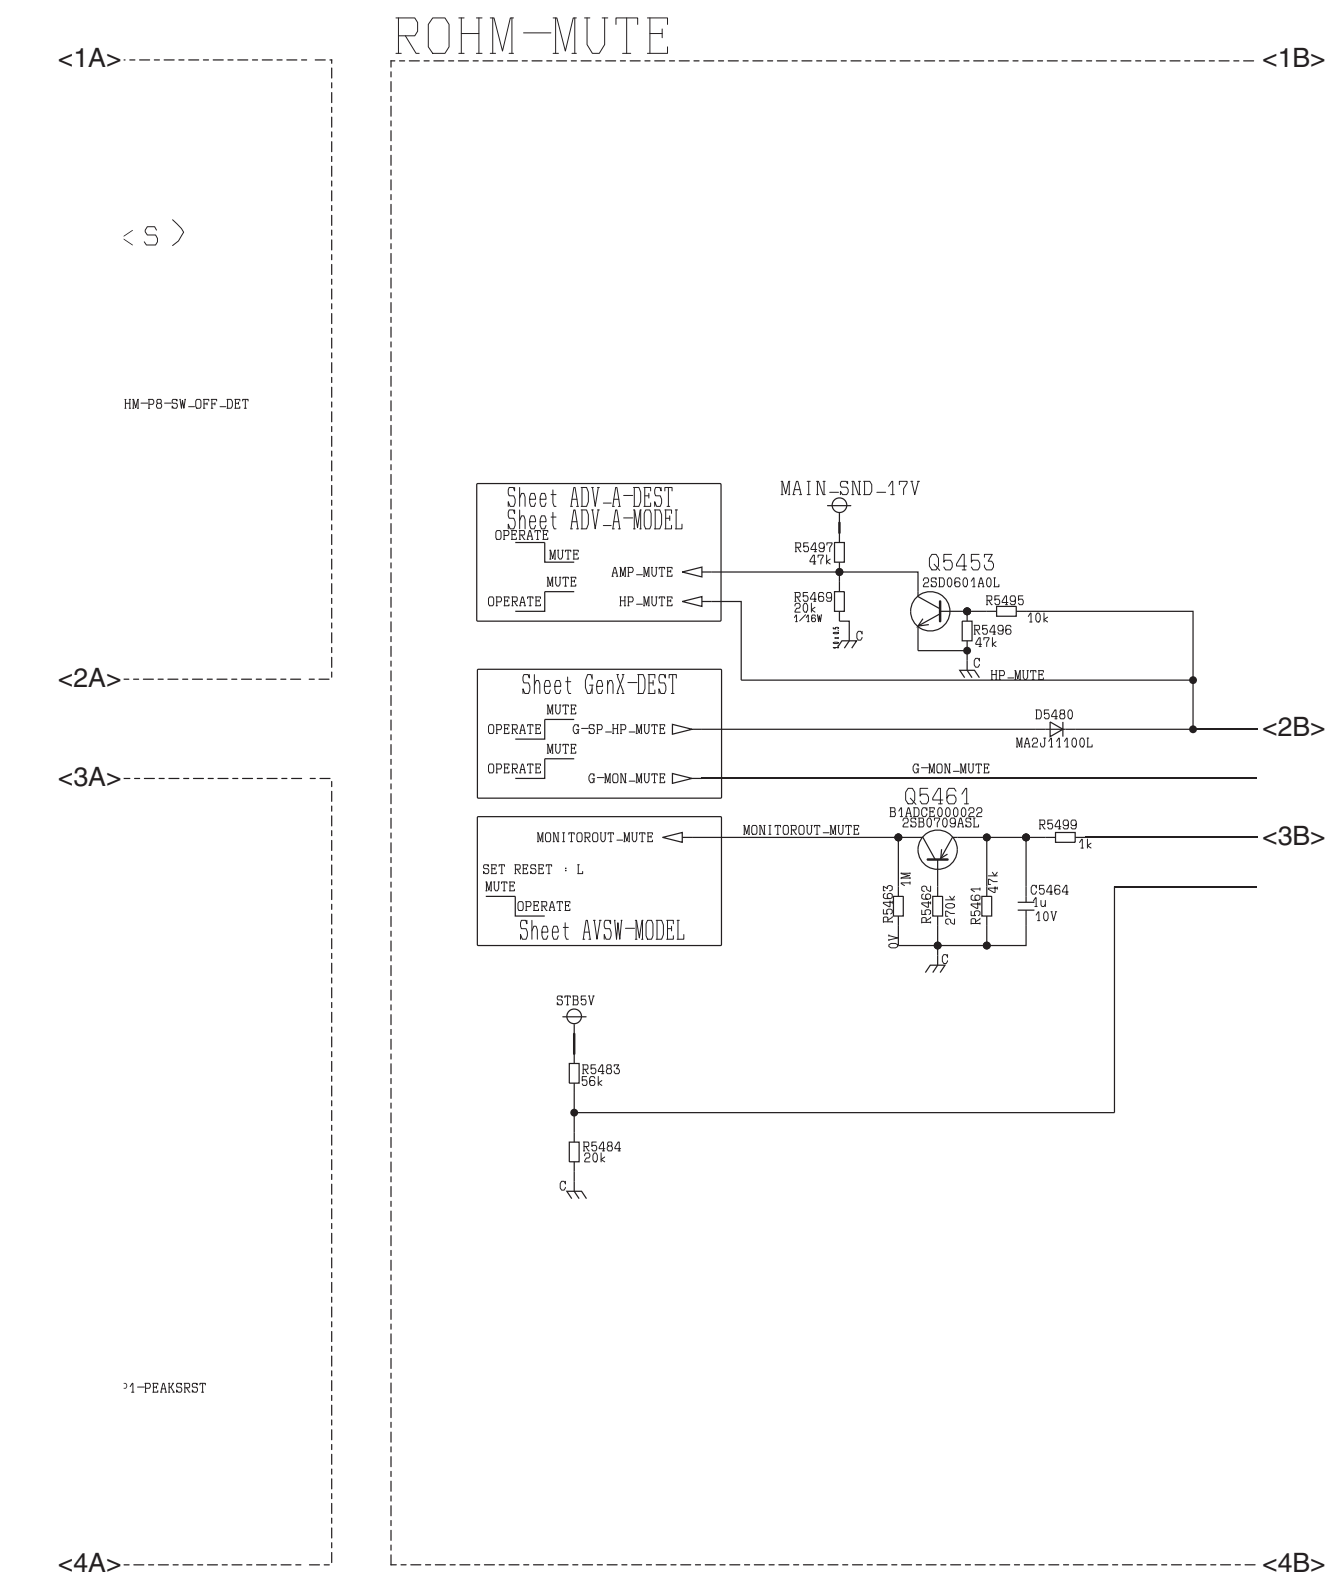


11.2.44. A Board - Sheet : 010 (3 / 5)

<1B>

<2B>

<3B>

<4B>

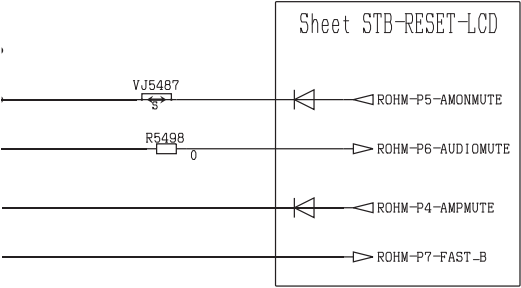

<1C>

TO Sheet Set-LCD




TO Sheet POWER-MODEL/0



<2C>


TO Sheet STB-RESET-MOI

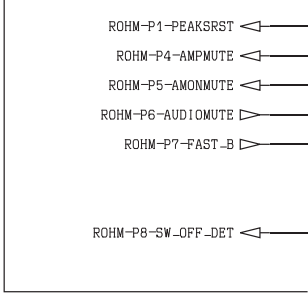

<3C>

<4C>

 
TO Sheet GENX-DEST




<5C>

<6C>

11.2.45. A Board - Sheet : 010 (4 / 5)

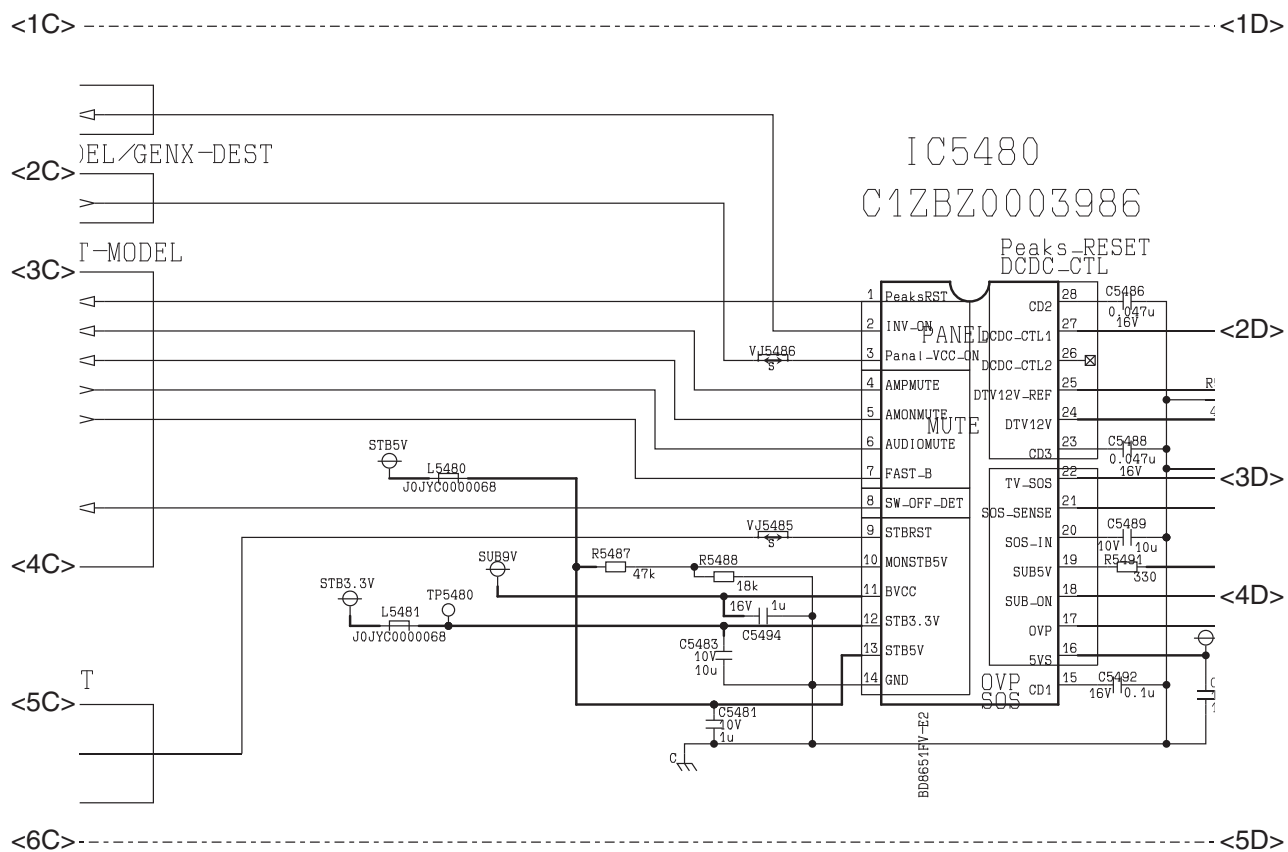


11.2.46. A Board - Sheet : 010 (5 / 5)

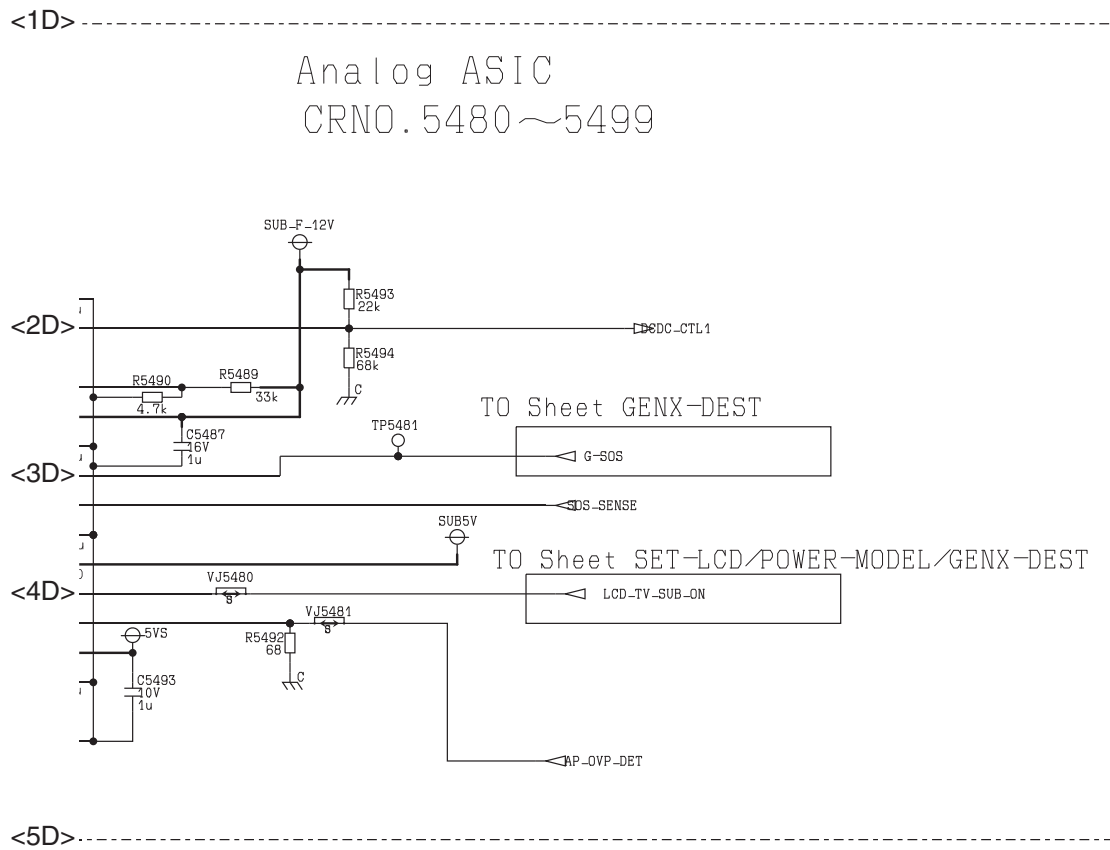




11.2.48. A Board - Sheet : 011 (2 / 2)

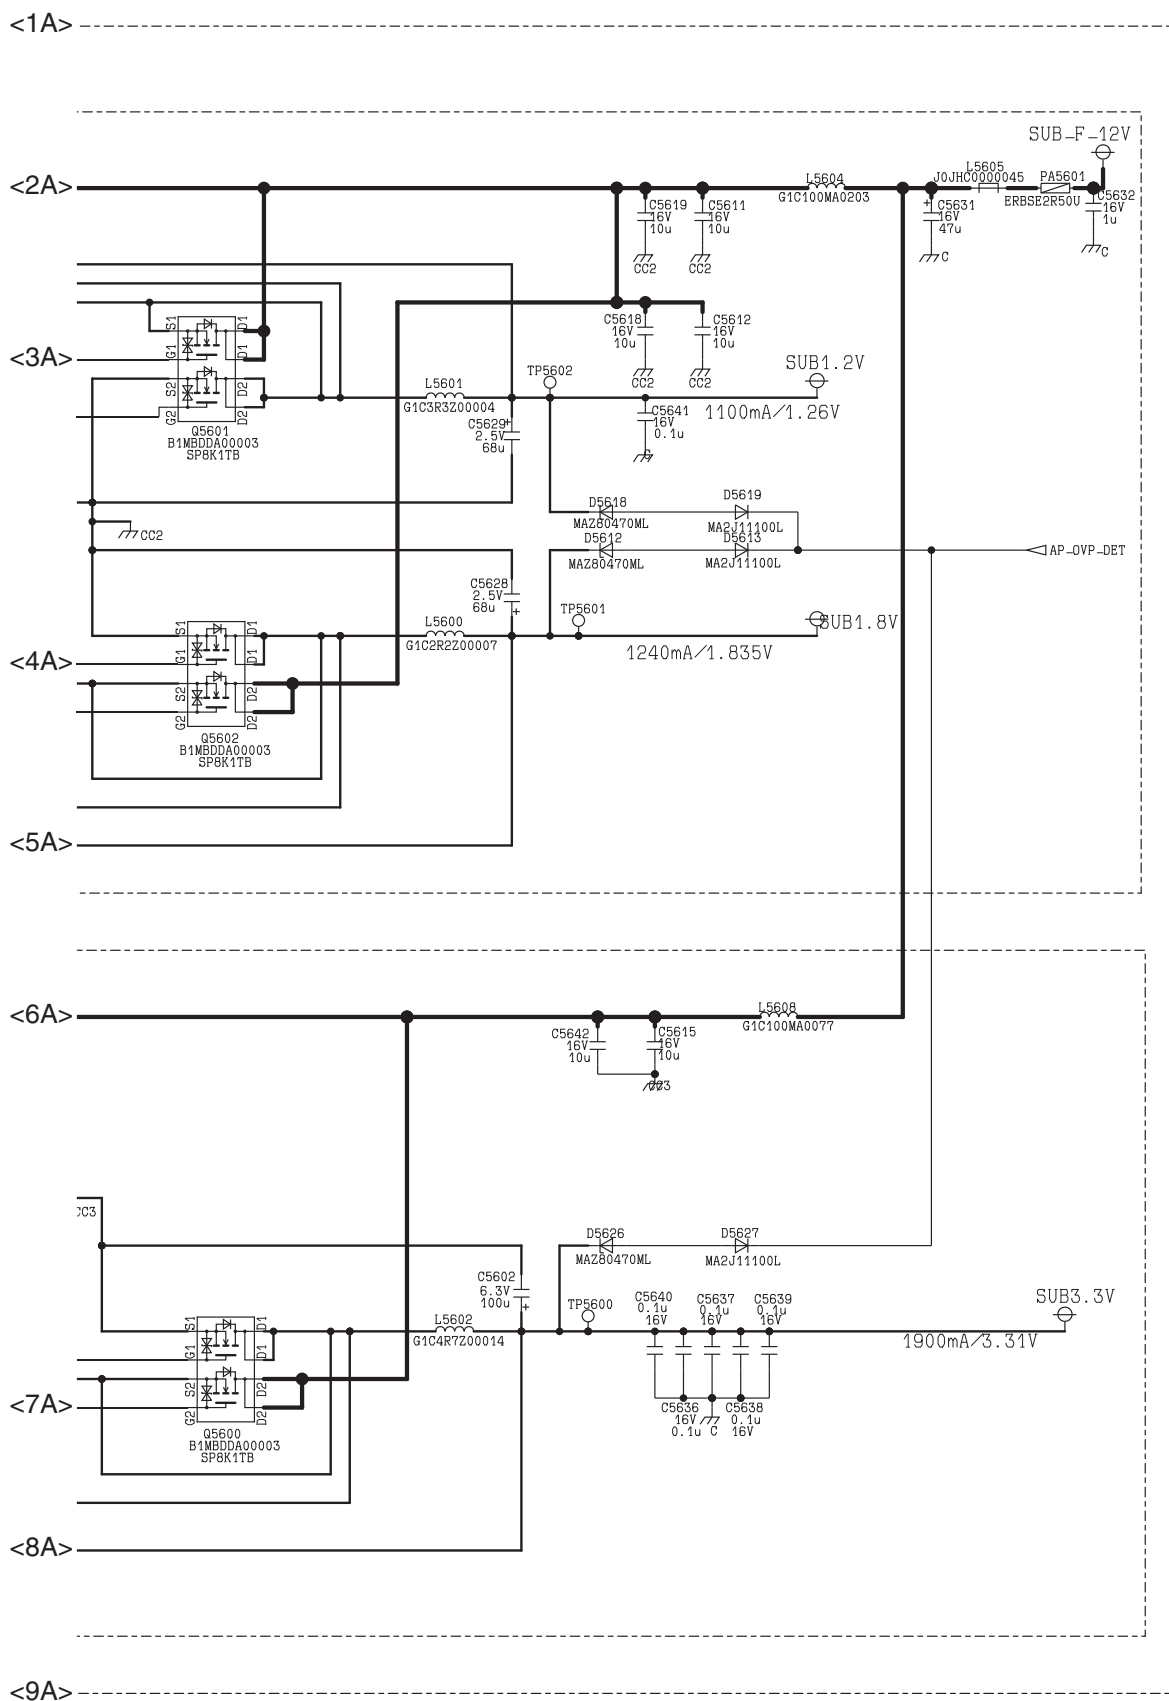


11.2.49. A Board - Sheet : 012 (1 / 3)

SOUND-VCC CRNo. 5420~5429

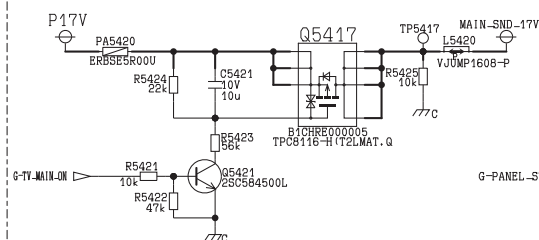

PANEL12V CR

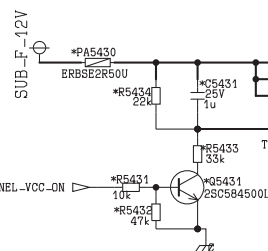

<1A>


<2A>

TUNER6V CRNo. 5401~5406

SHEET3

BT-30V

CRNo. 5440~5450

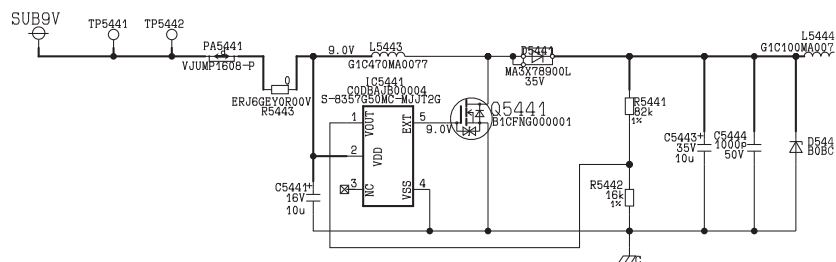


<3A>

<4A>


11.2.50. A Board - Sheet : 012 (2 / 3)

<1A> CRNo. 5430~5439

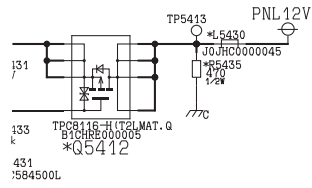


<2A>

SUB9V

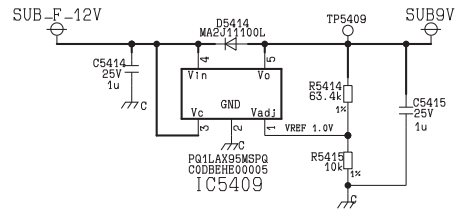


SUB5V

 

<1B>

<2B>

 
<3A>




<4A>

SOS-SENSE


CRNo. 5471~5480

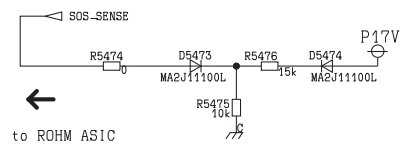



CRNo. 5481~5490

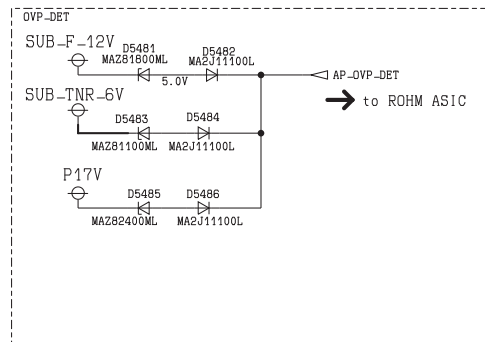


11.2.51. A Board - Sheet : 012 (3 / 3)

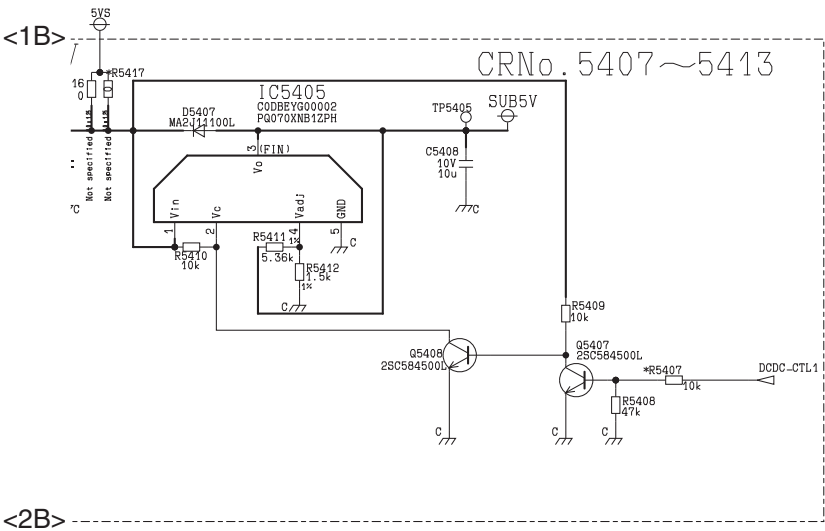

11.2.52. A Board - Sheet : 013 (1 / 5)

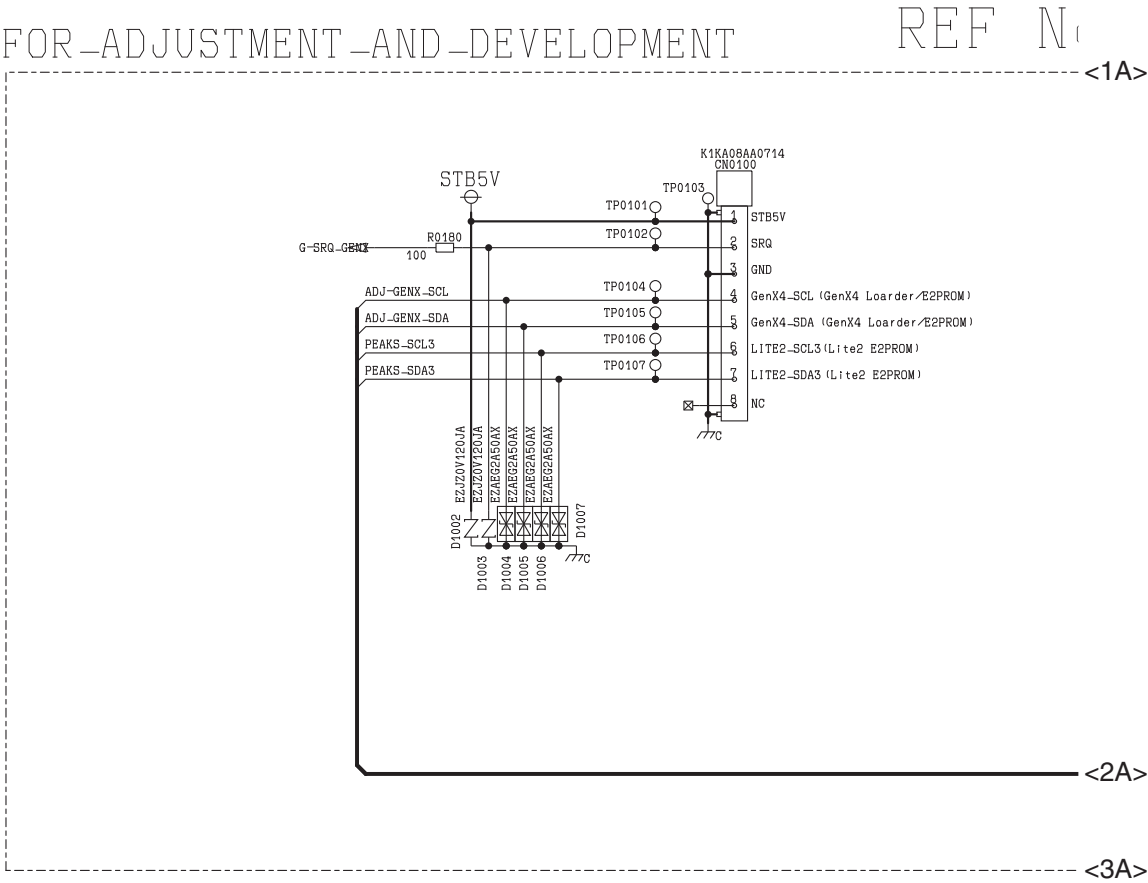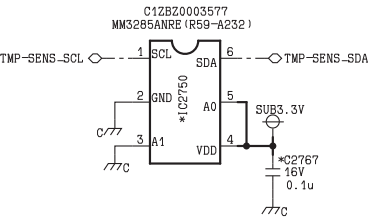


11.2.53. A Board - Sheet : 013 (2 / 5)

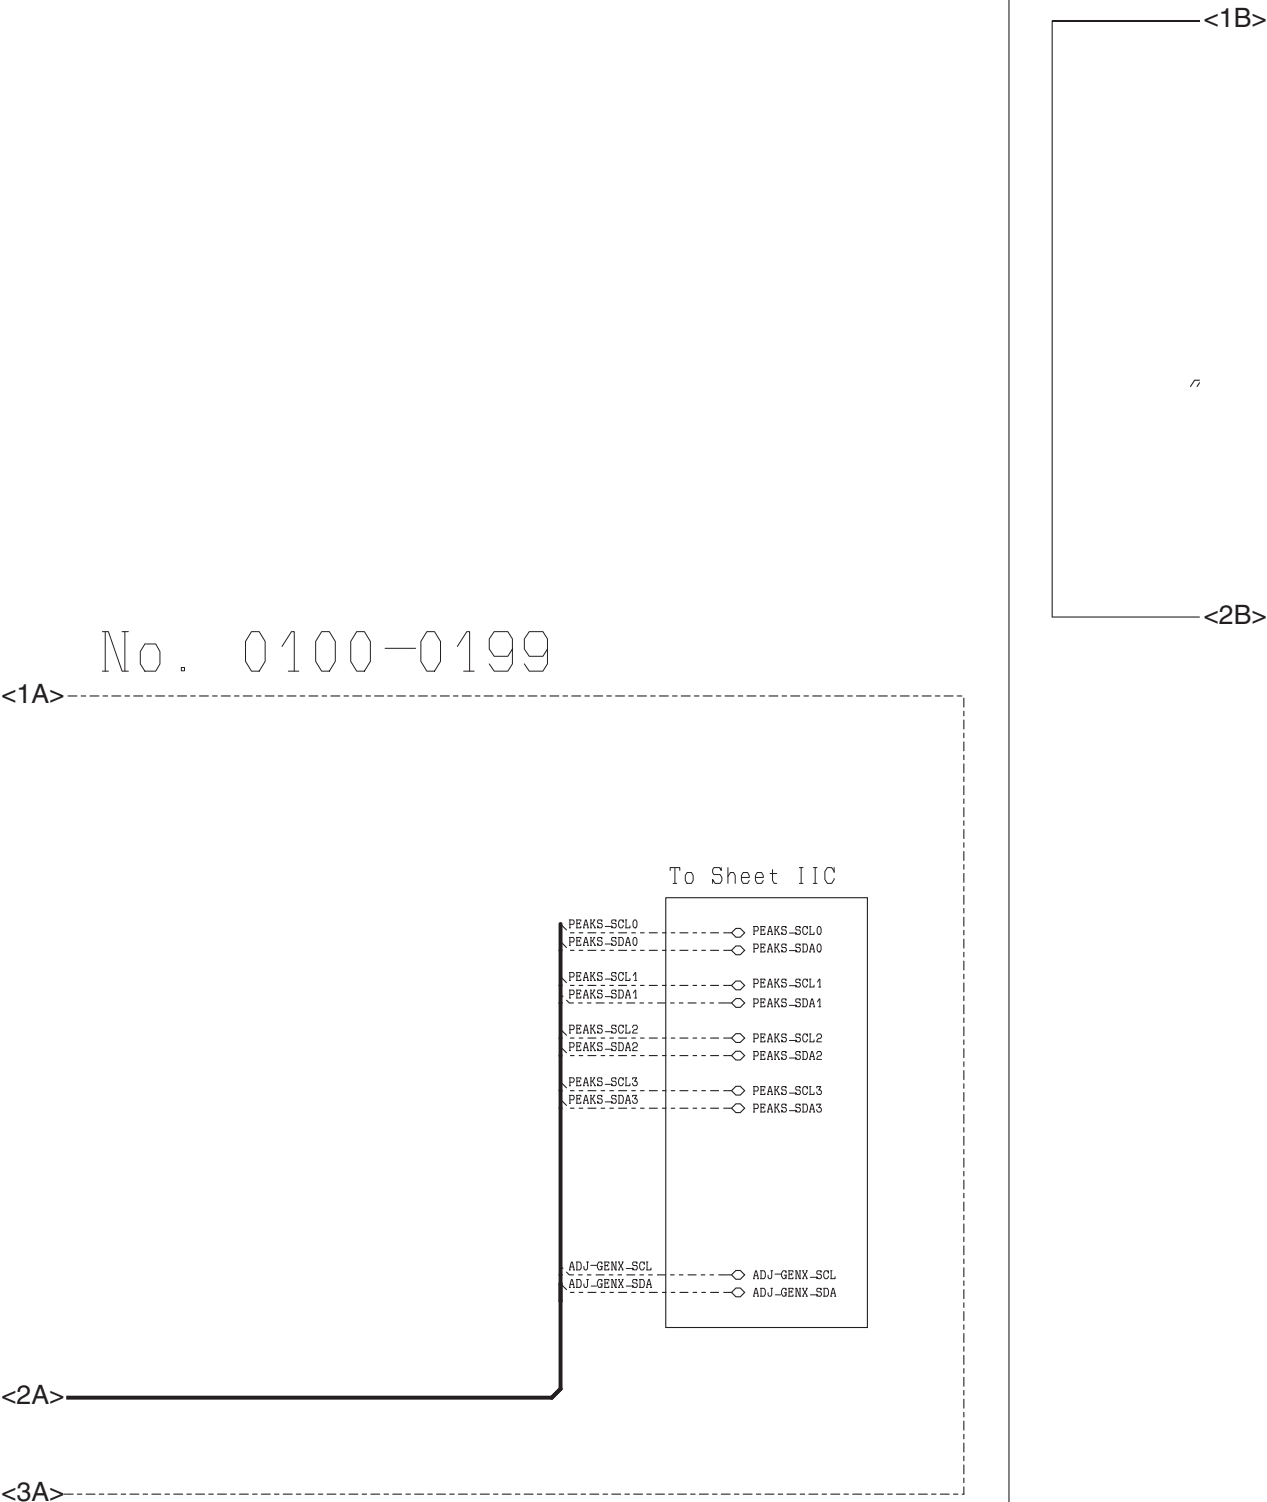


11.2.54. A Board - Sheet : 013 (3 / 5)

 
<1B>



<2B>

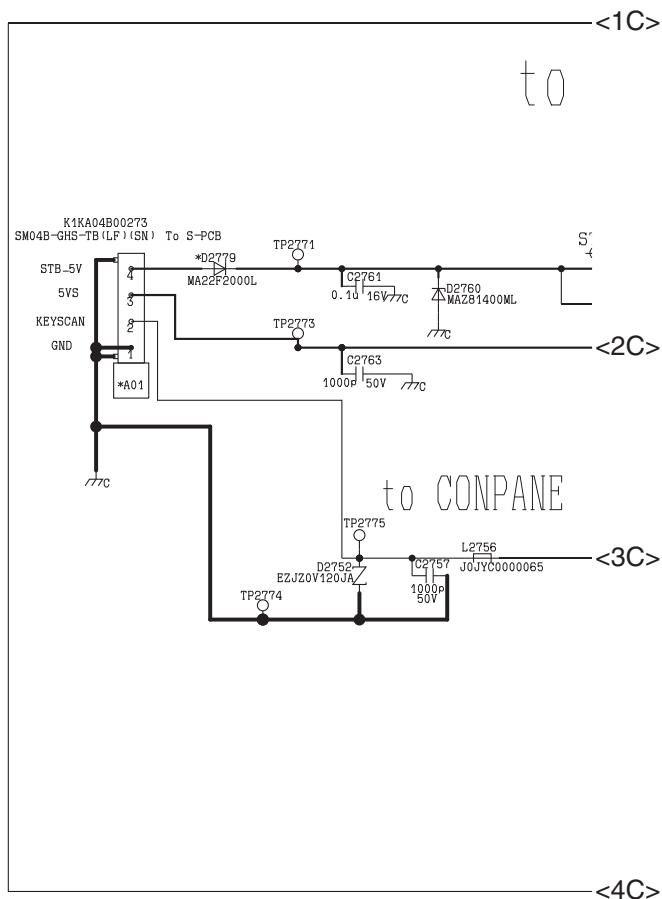


FAN

 



α LG	AU01VN	AU0CMO	
ADIM	SOS	SOS	
R2758	R2769	R2769	
ON-OFF	ON-OFF	ON-OFF	IN
R2762	R2762	R2762	
PWM	PWM	NC	
R2760	R2760	OPEN	
SOS	P01MSEL	PWM	IN
R2761	(GND	R2768	IN
	R2770		


— <5C>

11.2.55. A Board - Sheet : 013 (4 / 5)

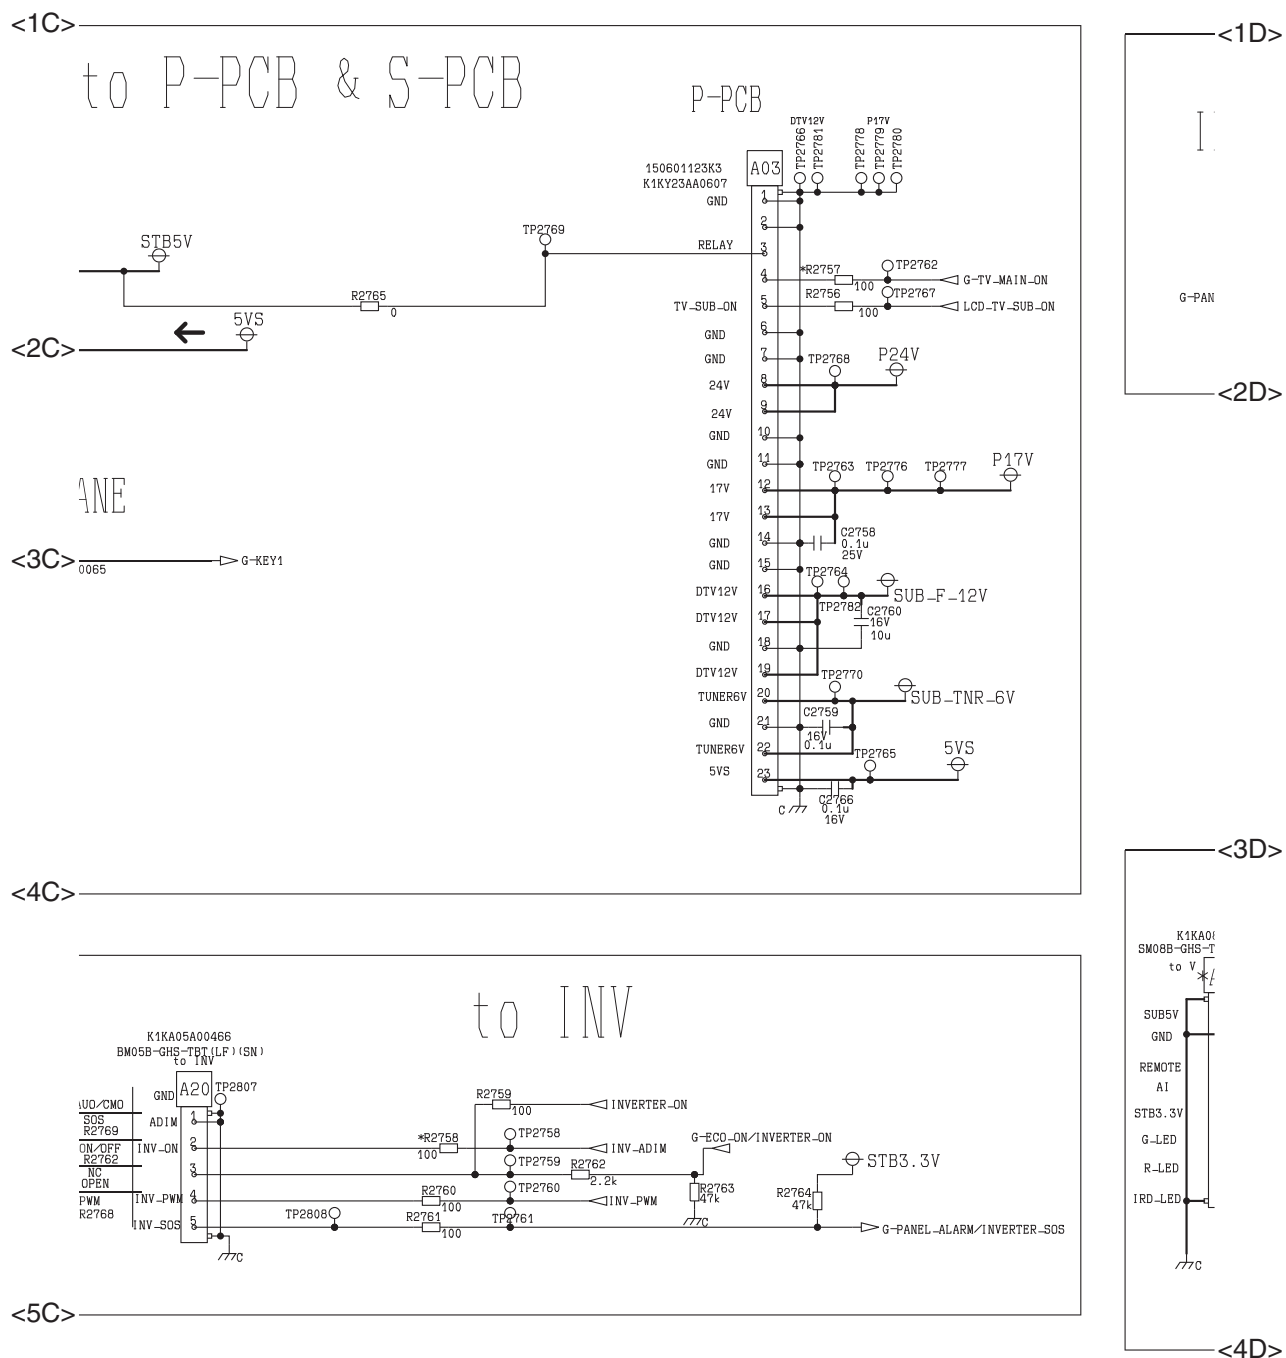


11.2.56. A Board - Sheet : 013 (5 / 5)

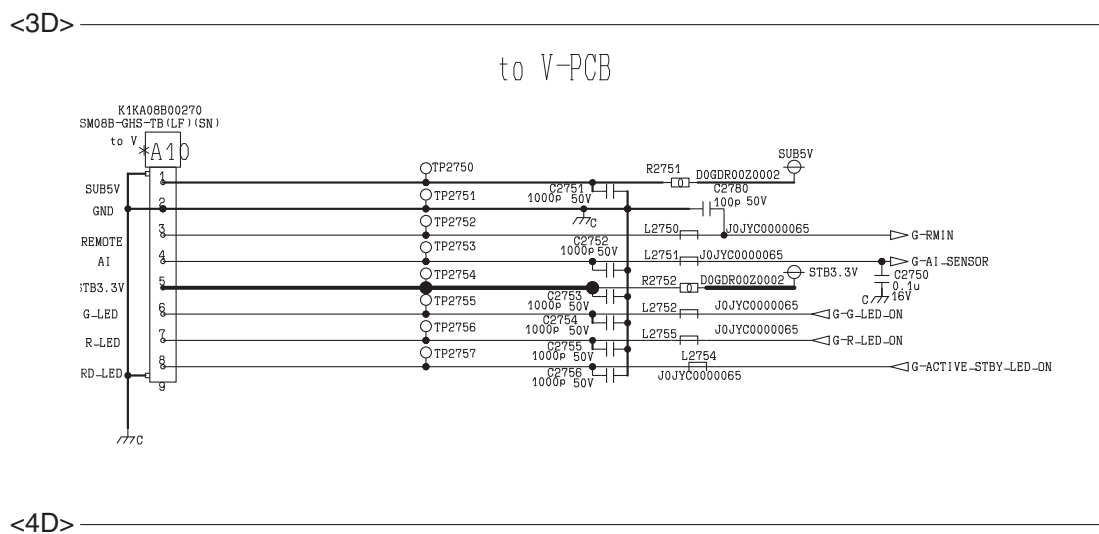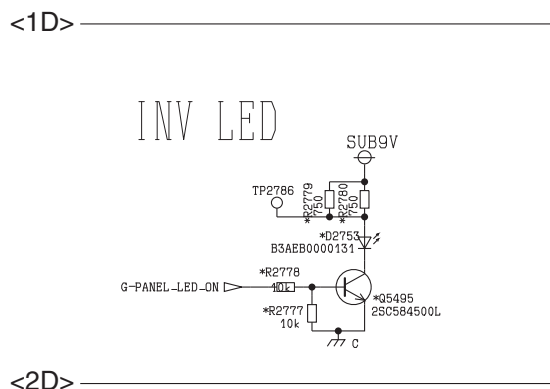

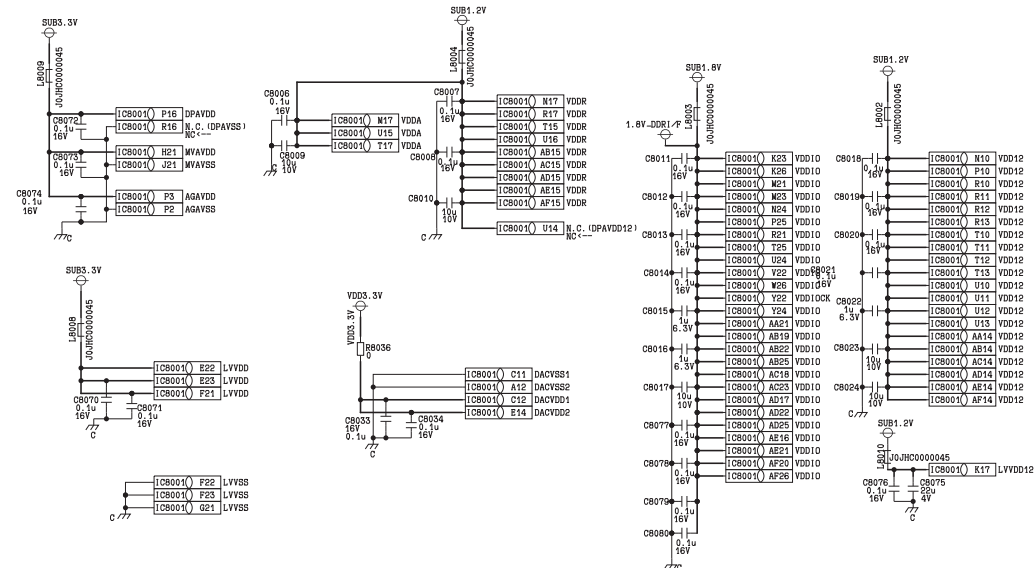

11.2.58. A Board - Sheet : 014 (2 / 4)

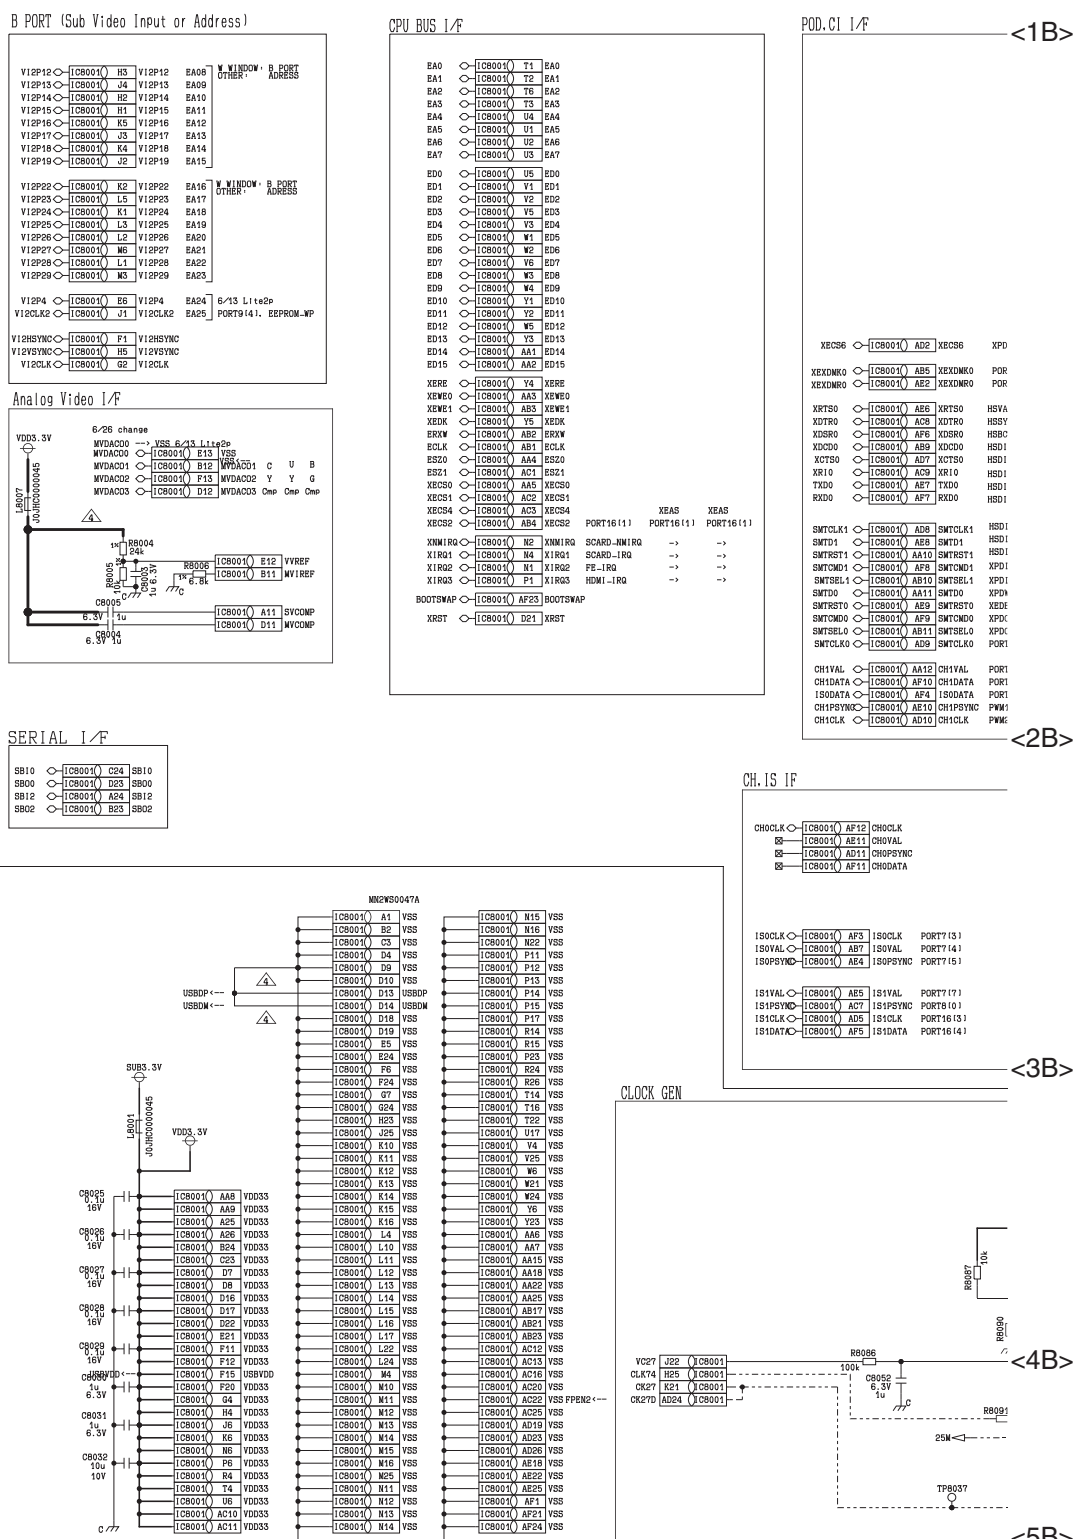

11.2.59. A Board - Sheet : 014 (3 / 4)

<1B>

```

3      XPDC2
4X0    PORT14(13), XPDC2
4R0    PORT14(14), XPDC2

3      HSYALIN
3      HSSYNIN
3      HSBCLKIN
3      HSDIN0
3      HSDIN1
3      HSDIN2
3      HSDIN3
3      HSDIN4

3      HSDIN5
3      HSDIN6
3      HSDIN7
4D1    XPD1ORD, (PORT10(16))
3L1    XPD1OWR, (PORT10(17))
3      XPDWT
3TO    XEDBA
4D0    XPDCC1
3L0    XPDCC2
3X0    PORT5(14), C1-POWER-ON

3L    PORT16(16), C1-IRBQ
3TA    PORT5(17), XEAB
3TA    PORT7(6), XETS
3YMC    PWM1/PORT5(16)
3X    PWM2/PORT5(15)

```

<2B>

COMMON PORT .etc

```

6/14 Lite2p
VI1P1 0 [CB001] G5 VI1P1 PORT15(15), GOG-IRBQ
XECST 0 [CB001] AE1 XECST

VI1P20 0 [CB001] H6 VI1P20 PORT15(14), ETHER-IRBQ

RMCO 0 [CB001] M5 RMCO PORT16(15)

VI2P10 0 [CB001] G1 VI2P10 PORT16(12)
VI2P11 0 [CB001] J5 VI2P11 PORT16(11), SDR00T
VI2P20 0 [CB001] K3 VI2P20 PORT15(17), DISPEN
VI2P21 0 [CB001] L6 VI2P21 PORT16(17), OSD_FLAG

VI2ENB 0 [CB001] G3 VI2ENB PORT15(16), POWER_DET


6/26 DDR-CLK-SEL Detail
[CB001] H24 AUDCLK PORT0(10)/PWMS

```

<3B>

<4B>

<5B>

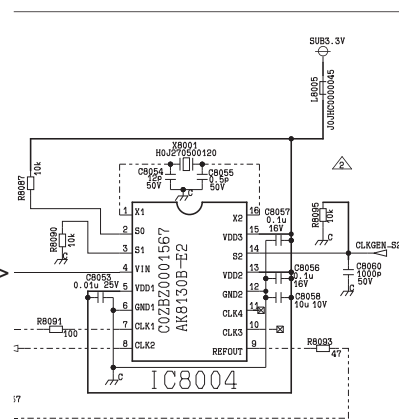

<1C>

 




<2C>

<3C>

<4C>

<5C>


<6C>

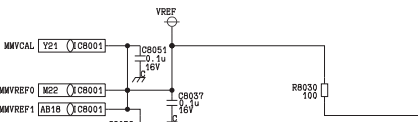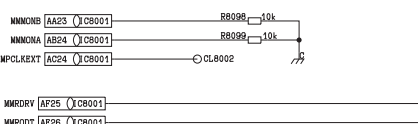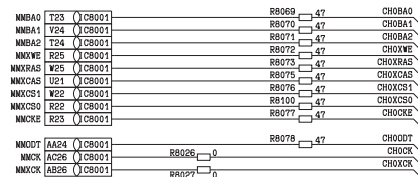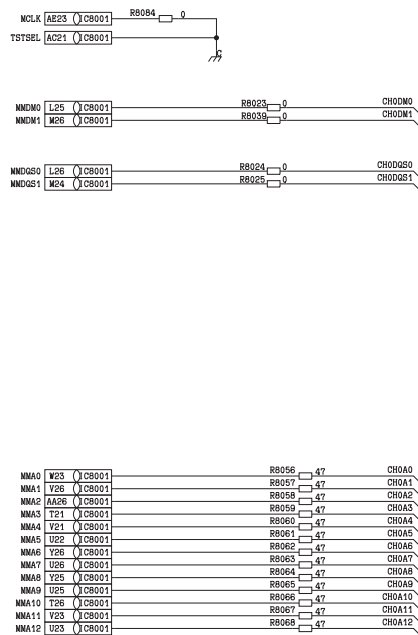






11.2.62. A Board - Sheet : 015 (2 / 7)

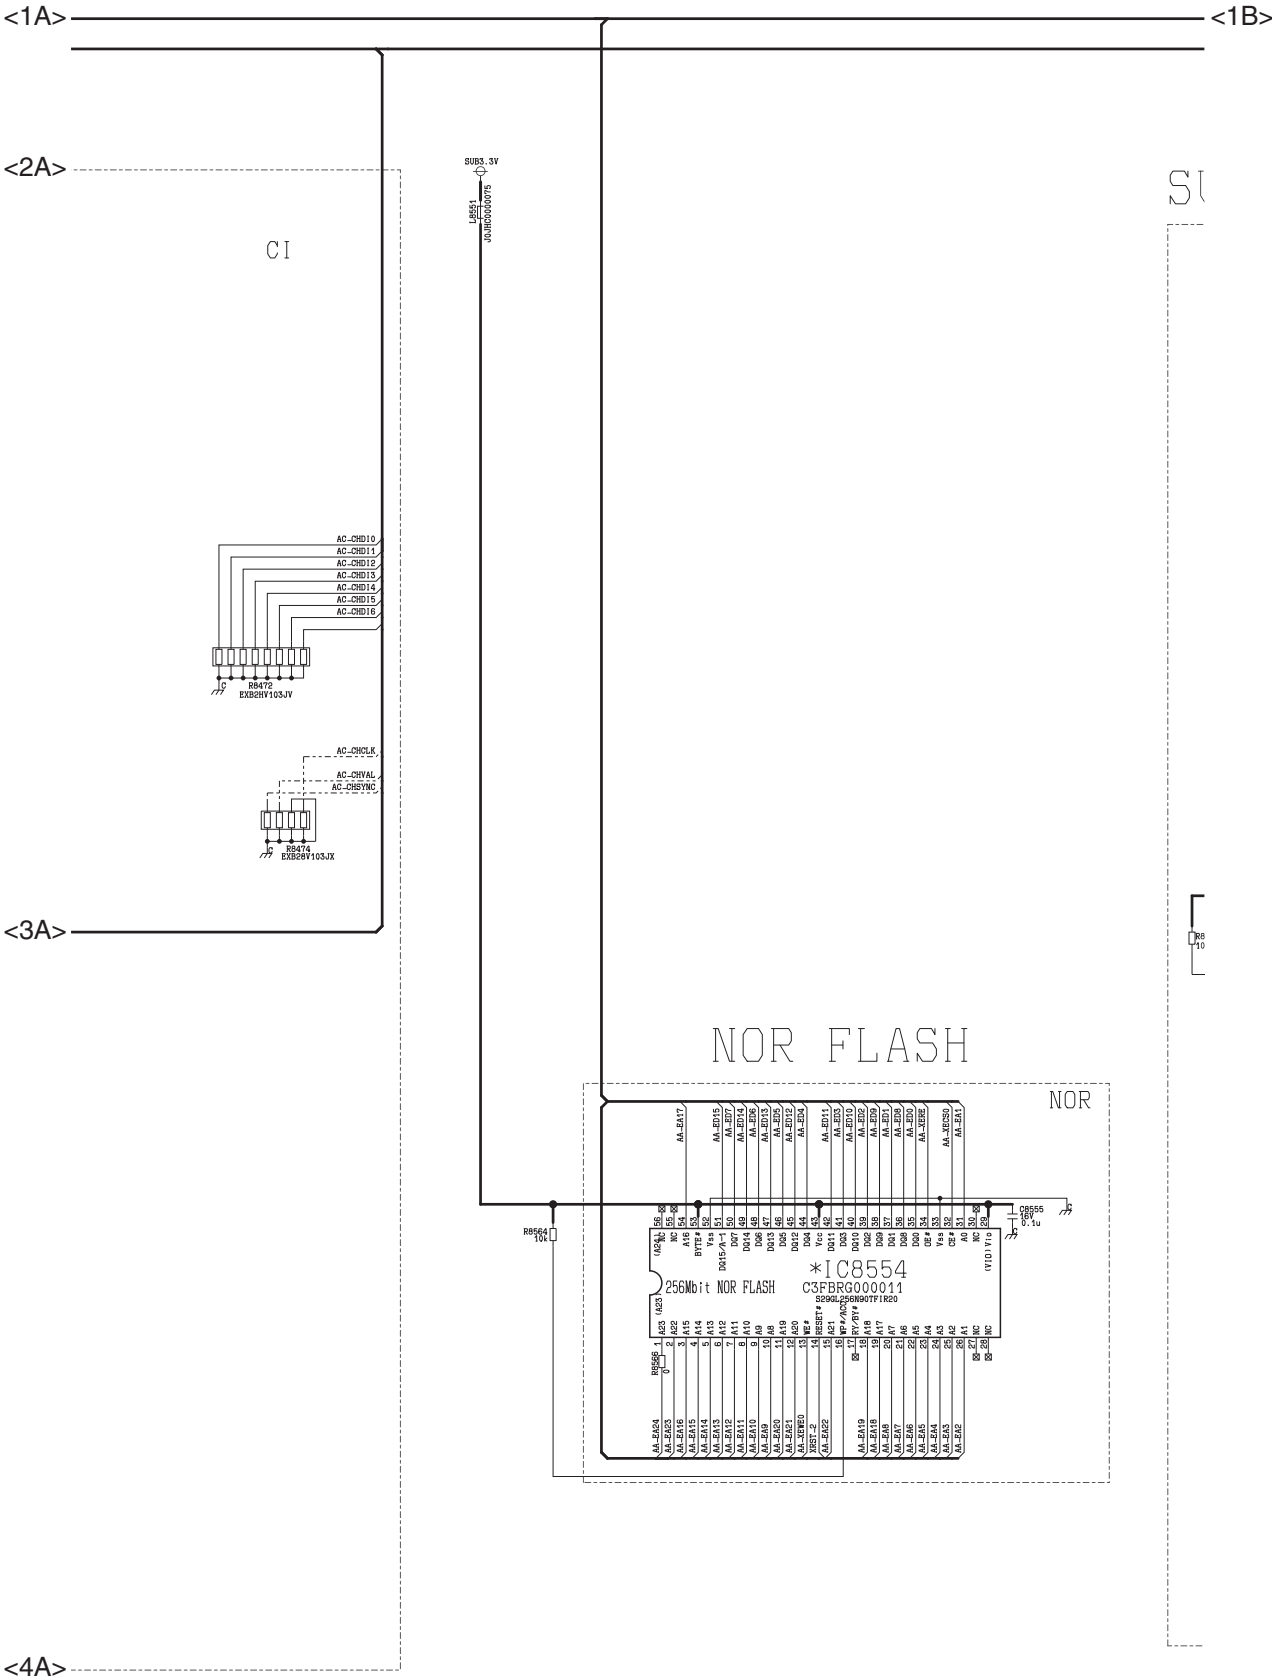


11.2.63. A Board - Sheet : 015 (3 / 7)

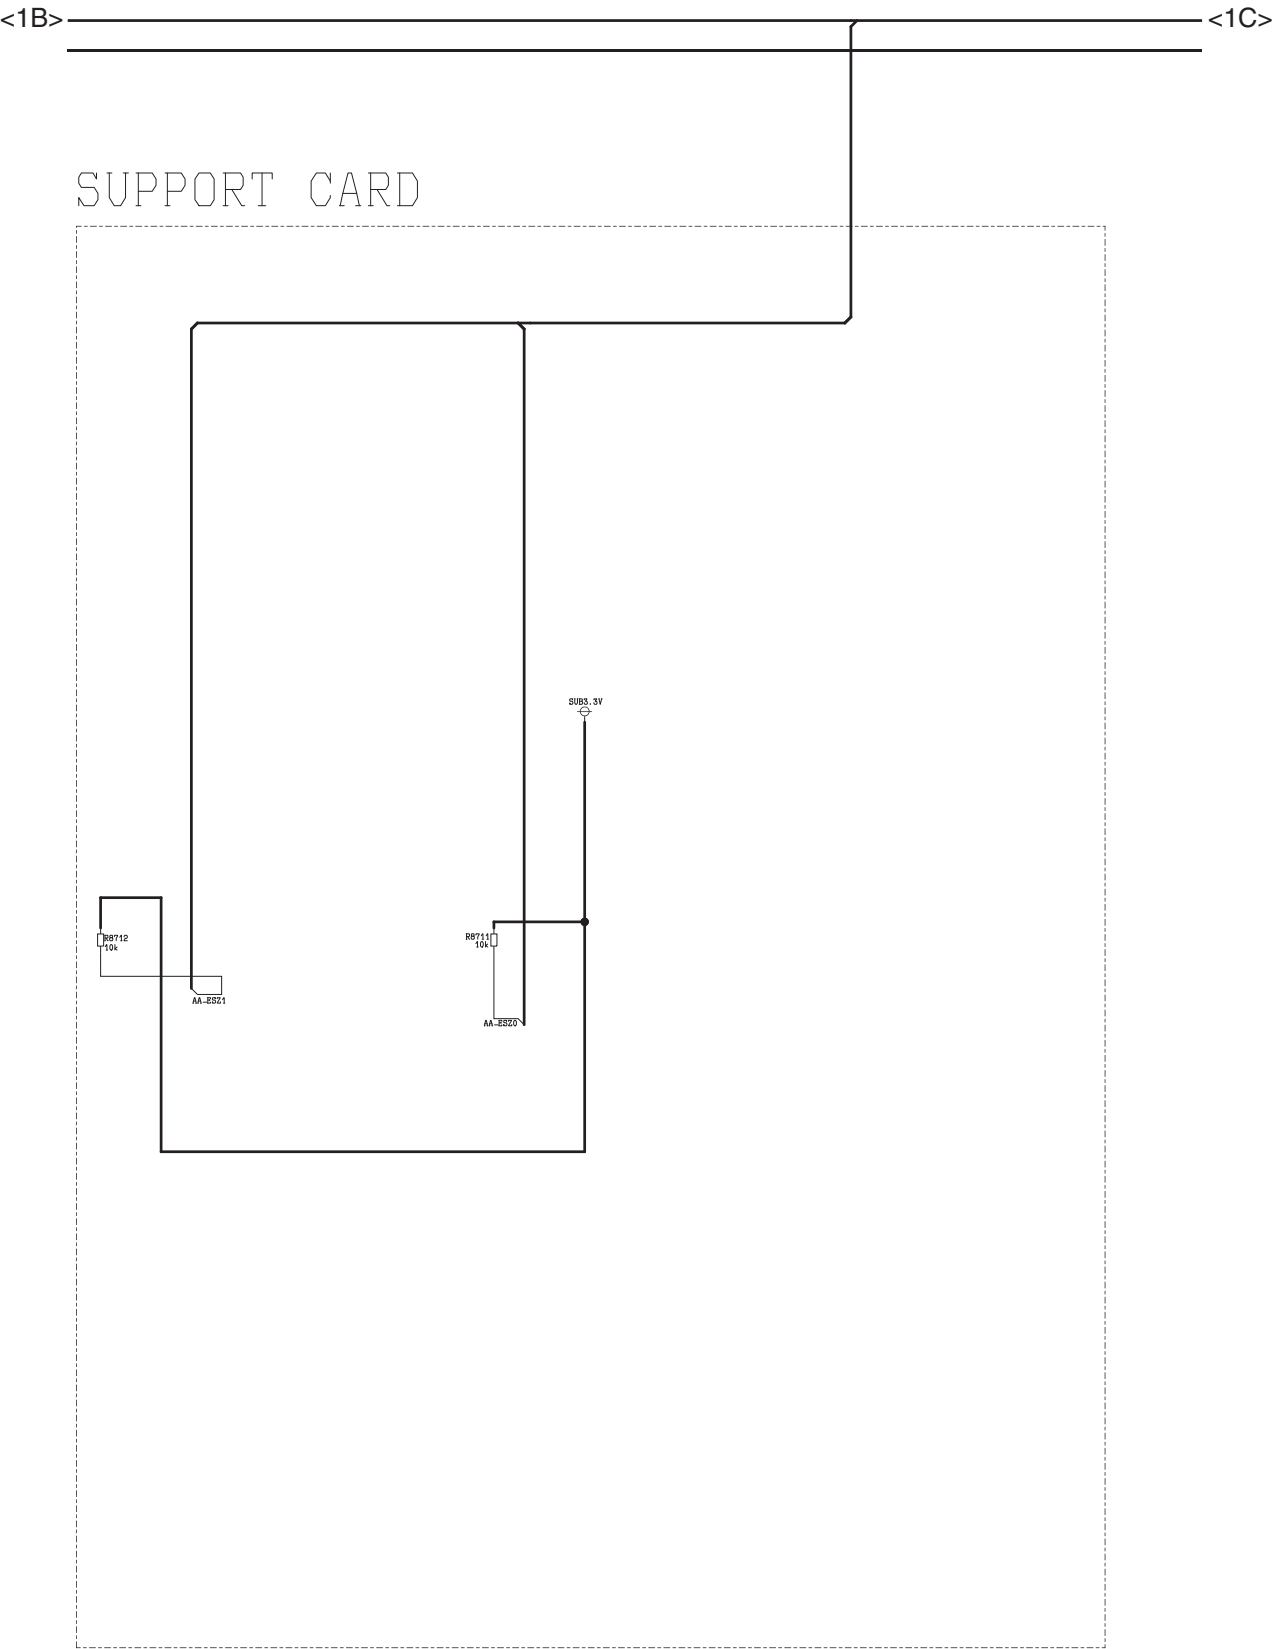







11.2.66. A Board - Sheet : 015 (6 / 7)

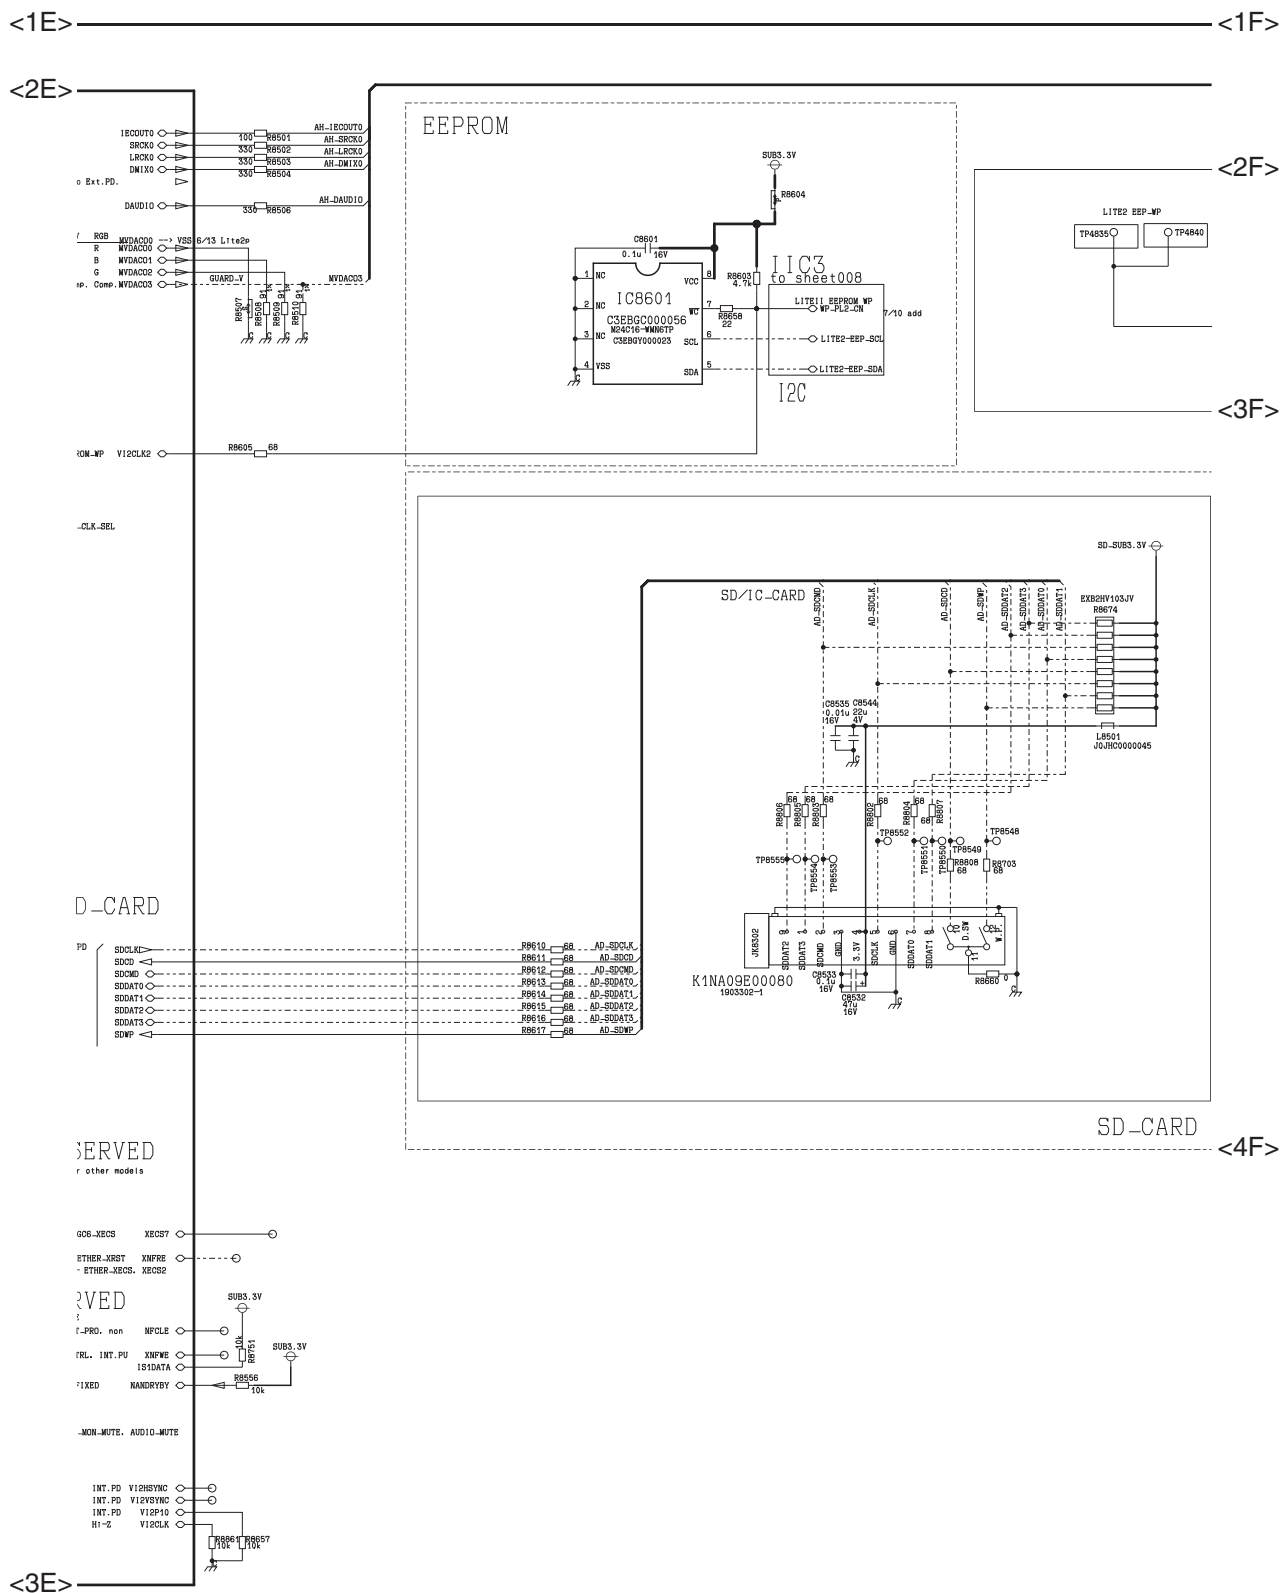


11.2.67. A Board - Sheet : 015 (7 / 7)

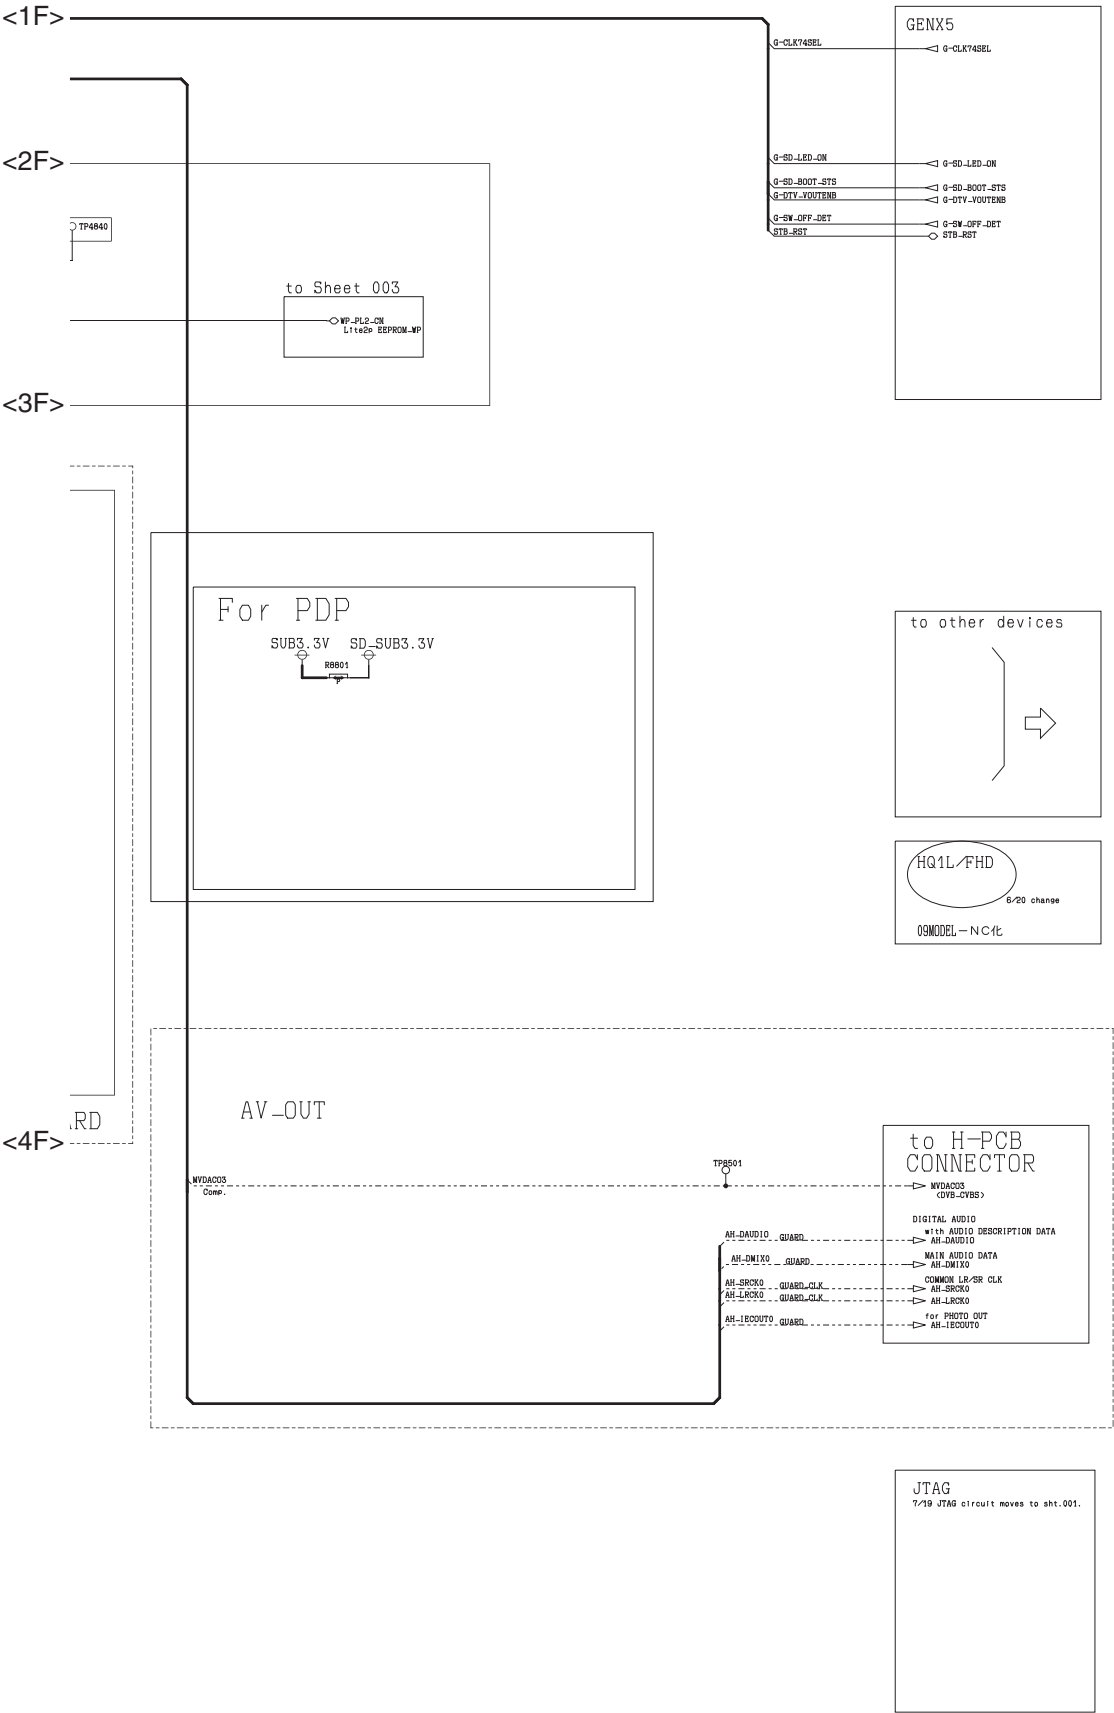



11.2.68. A Board - Sheet : 016 (1 / 1)

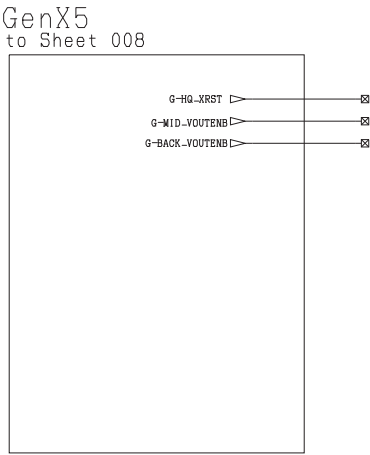

VIDEO OUT

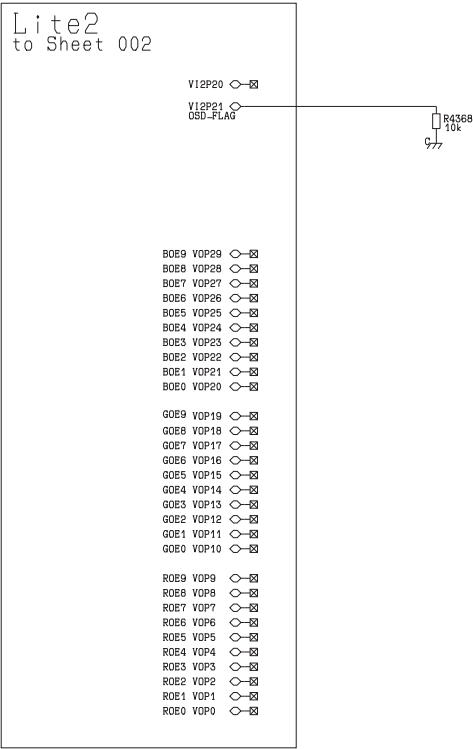


LOSD

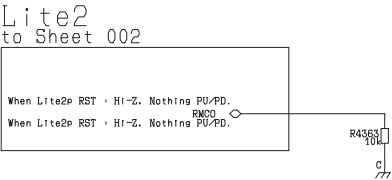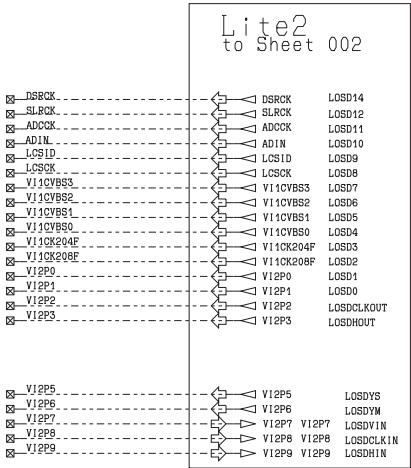


11.3. K Board




11.3.1. K Board (1 / 2)

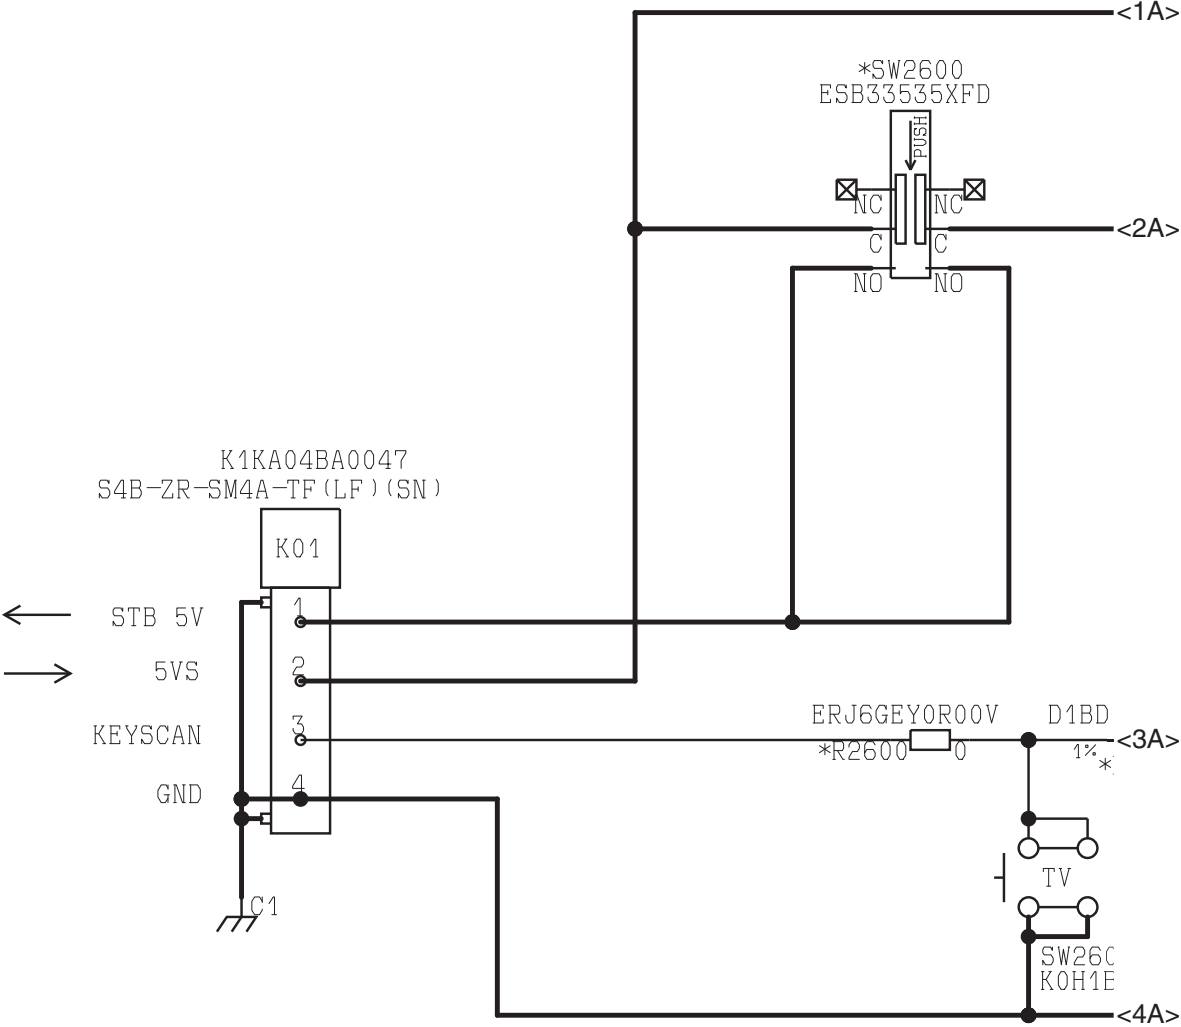

KEY_REFERENCE (PARTS PATTERN)

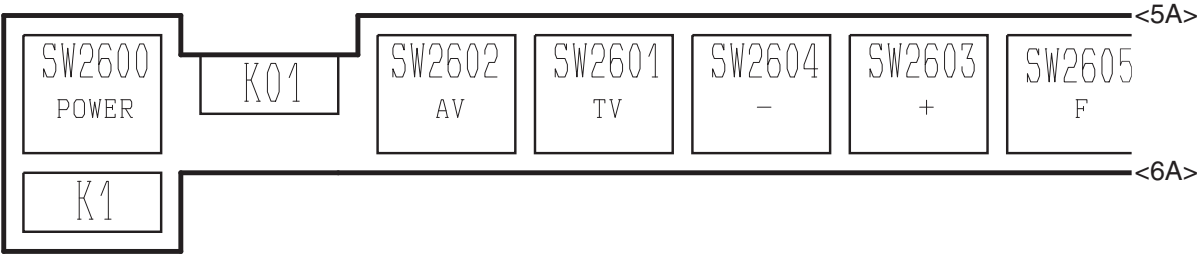


11.3.2. K Board (2 / 2)

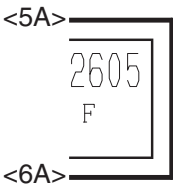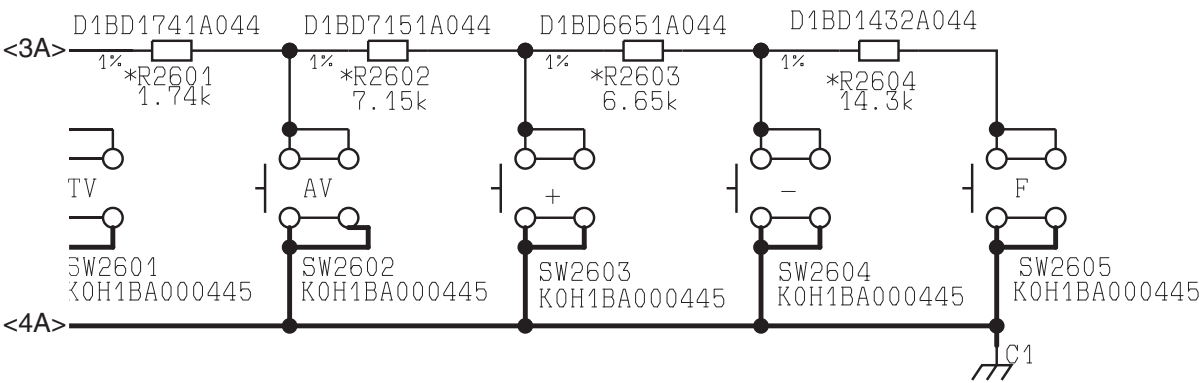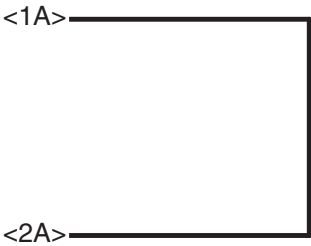

11.4. P Board


11.4.1. P Board (1 / 7)

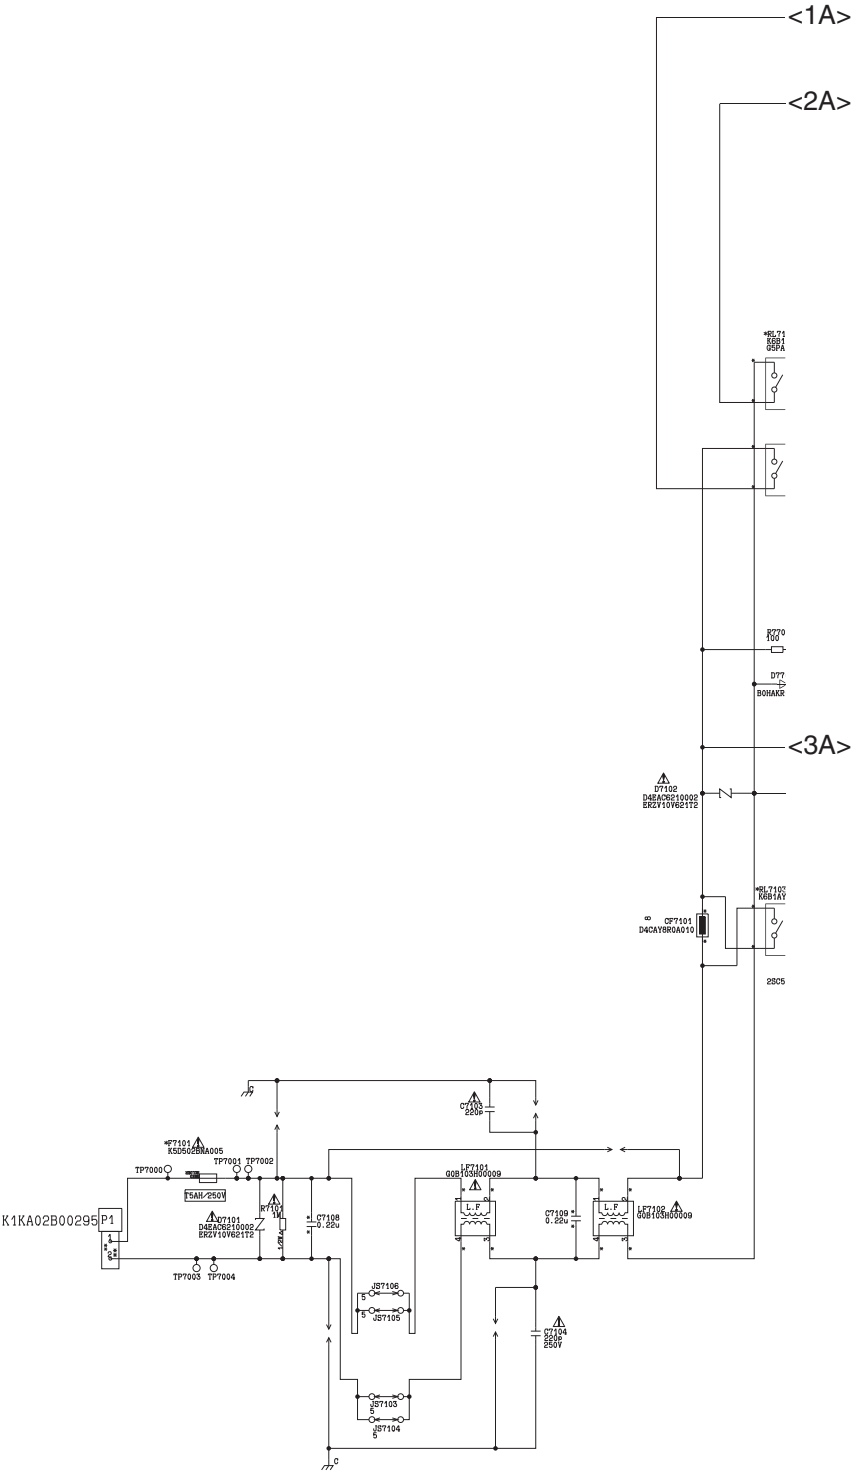






11.4.4. P Board (4 / 7)

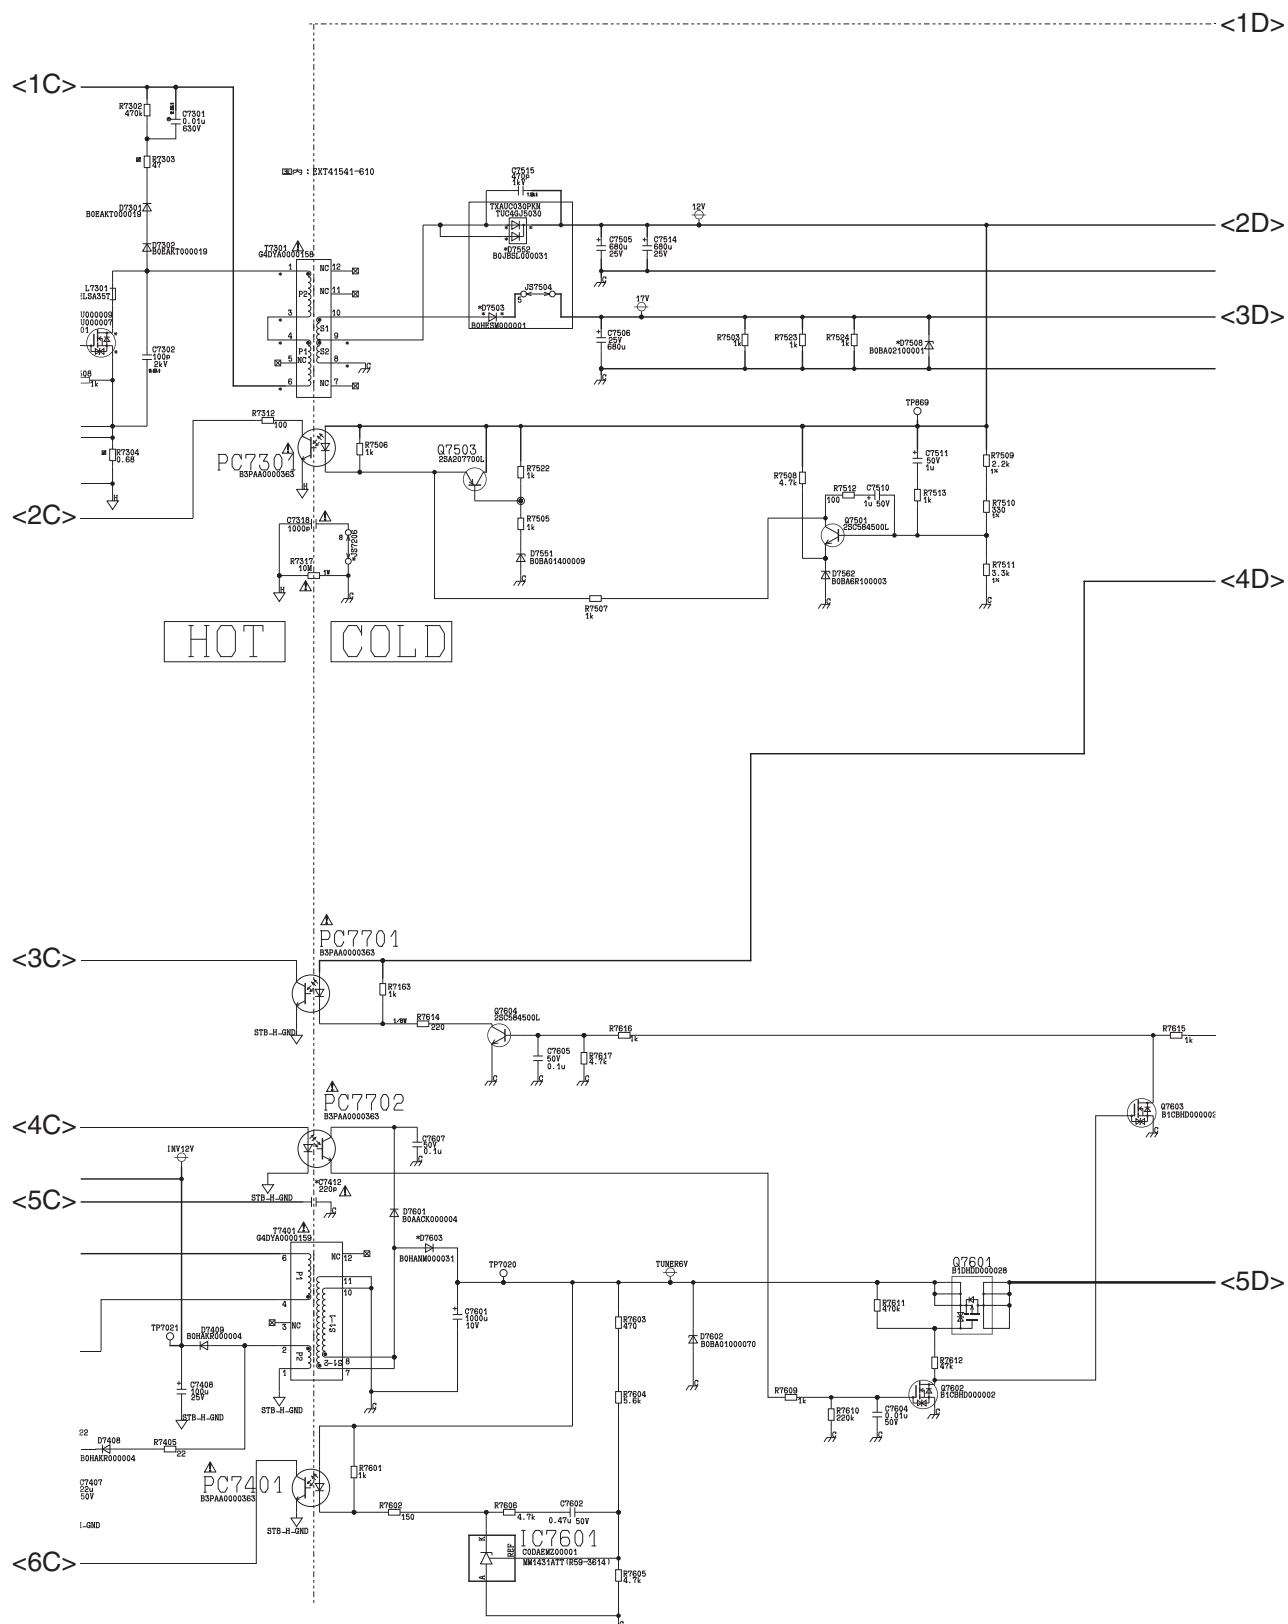




11.4.6. P Board (6 / 7)

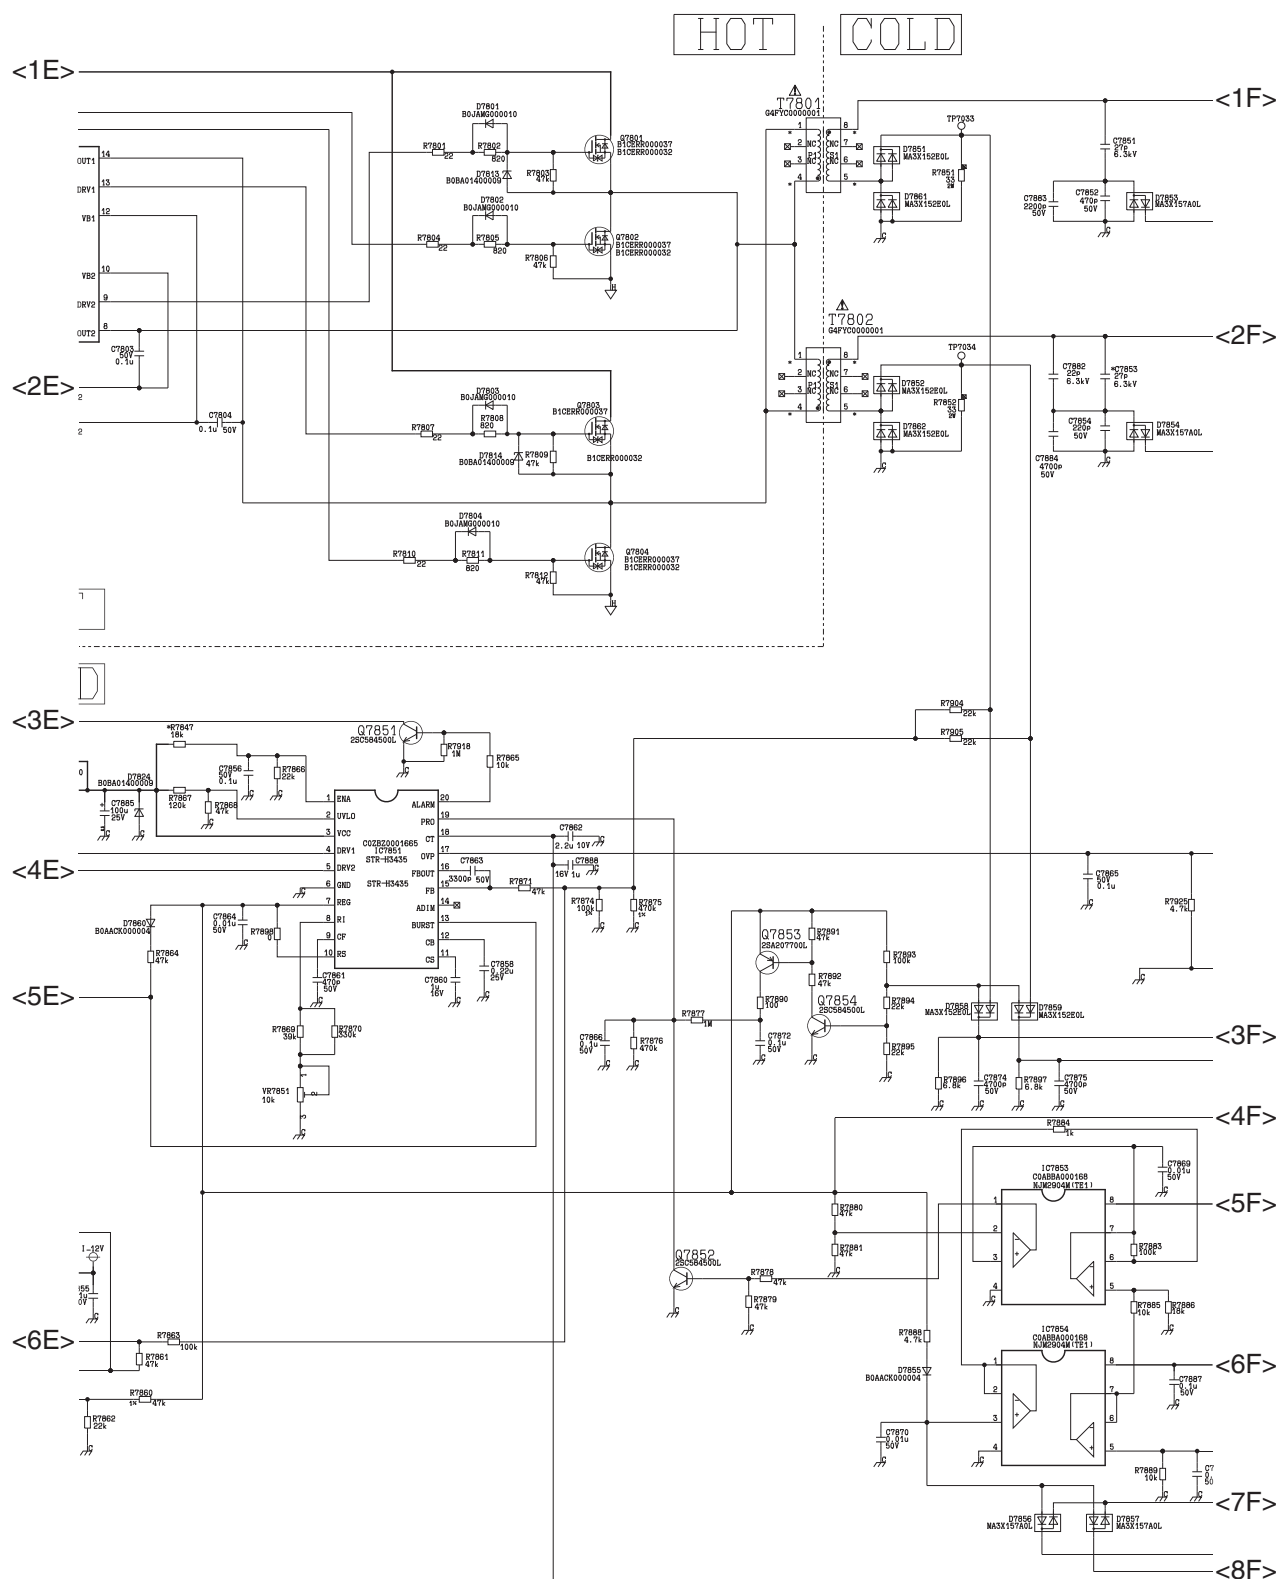




11.5. V Board


11.5.1. V Board (1 / 4)

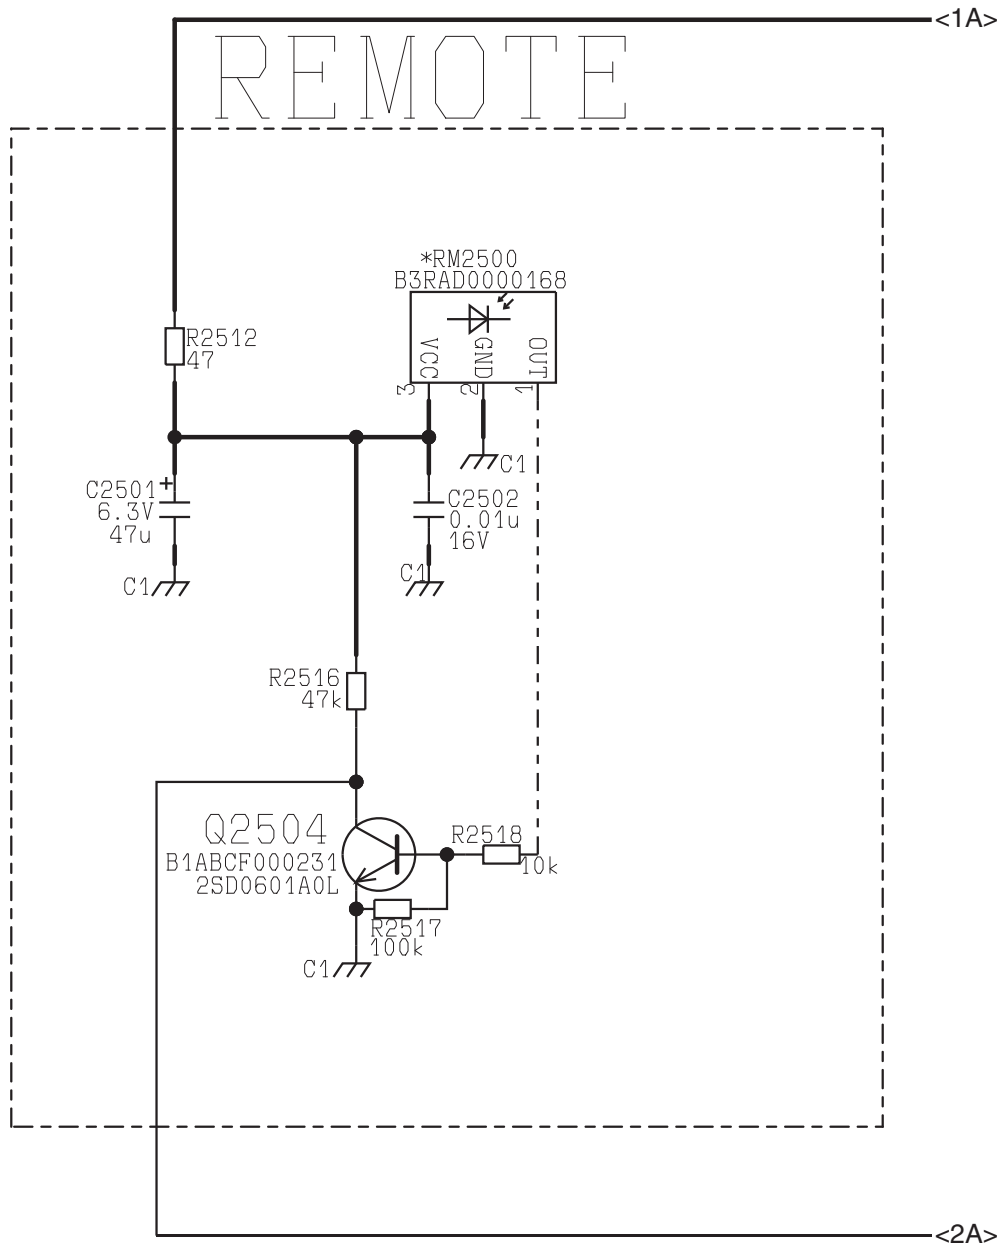


11.5.2. V Board (2 / 4)

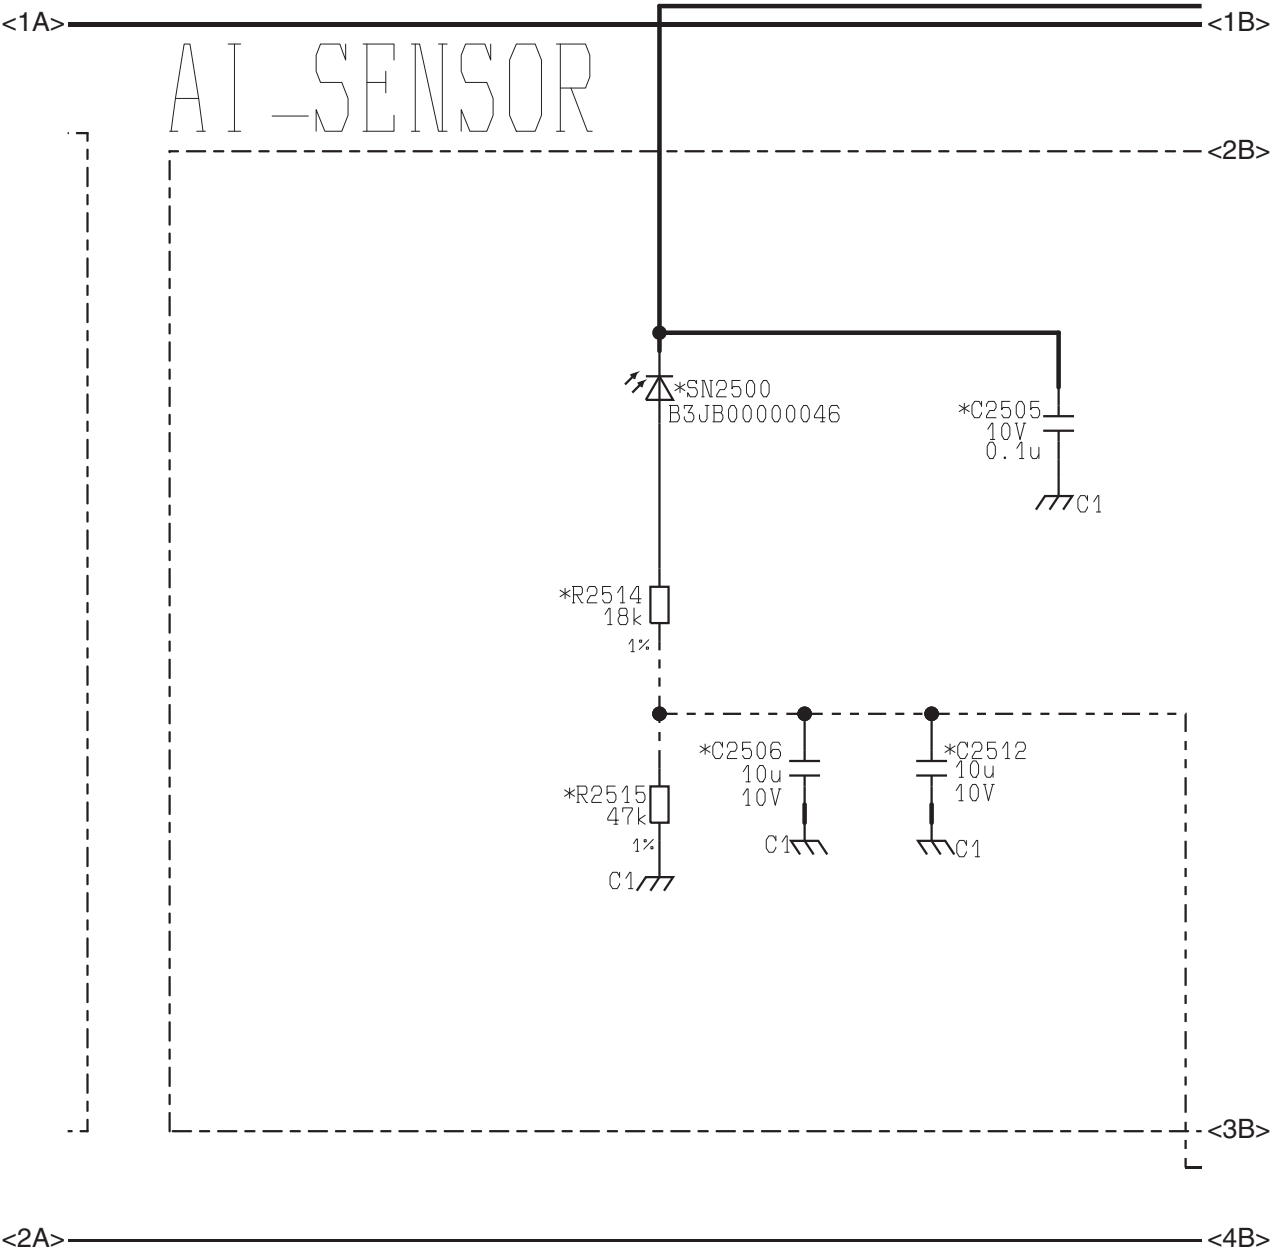

11.5.3. V Board (3 / 4)

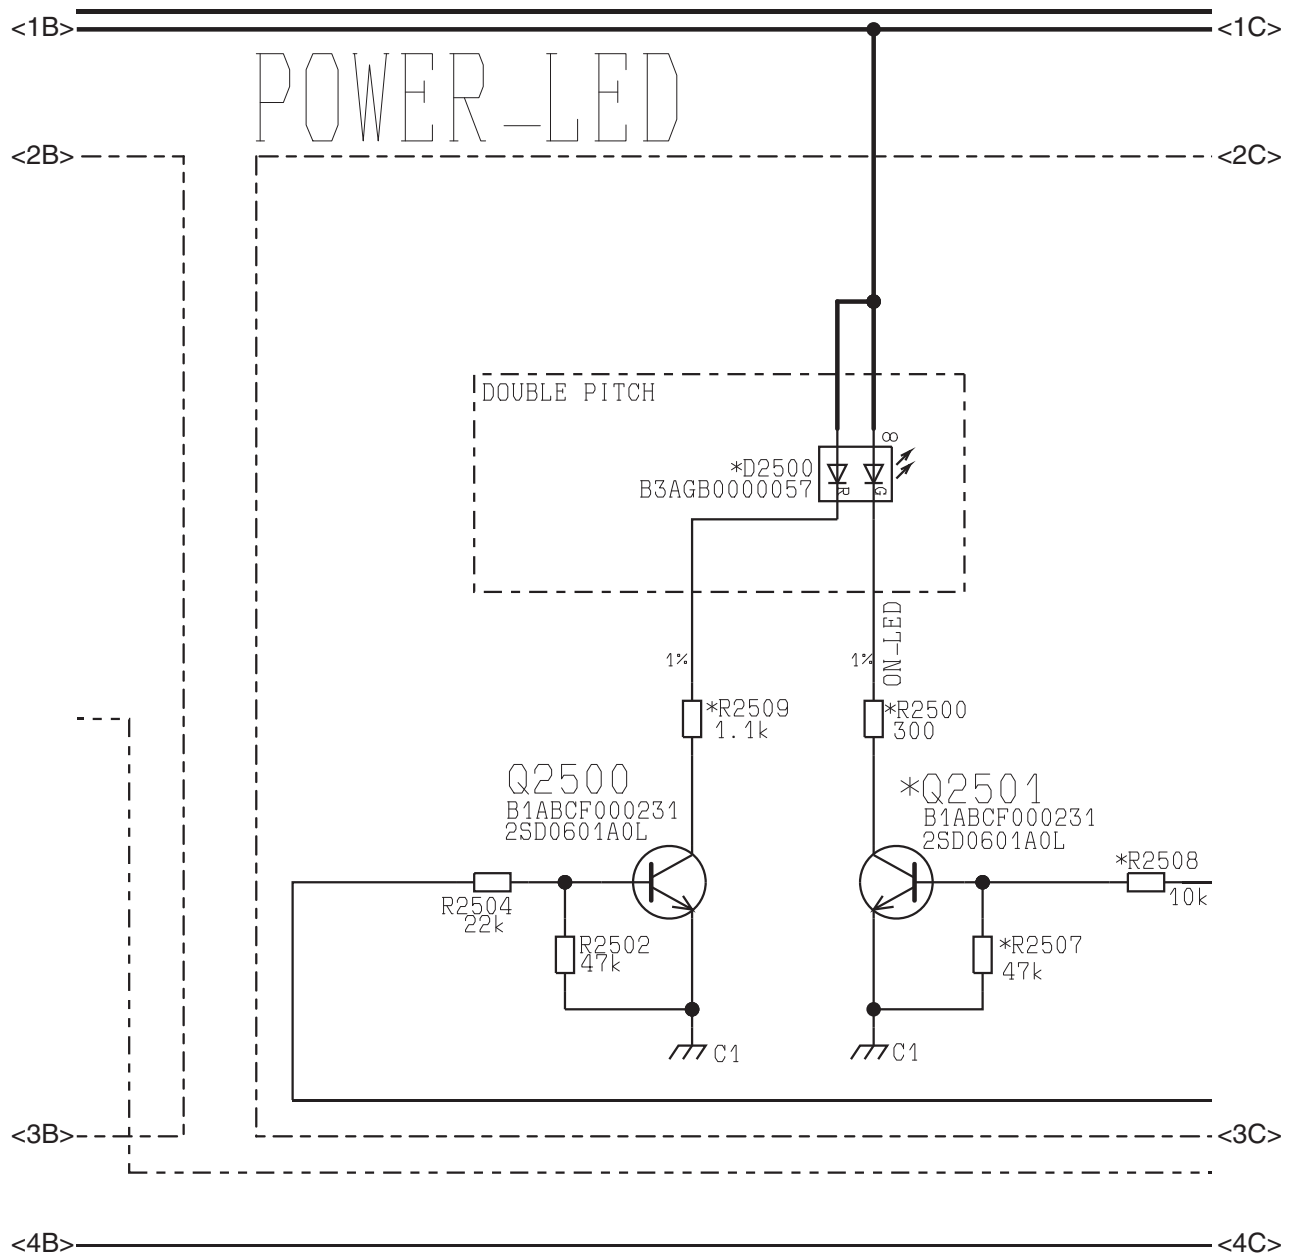

11.5.4. V Board (4 / 4)

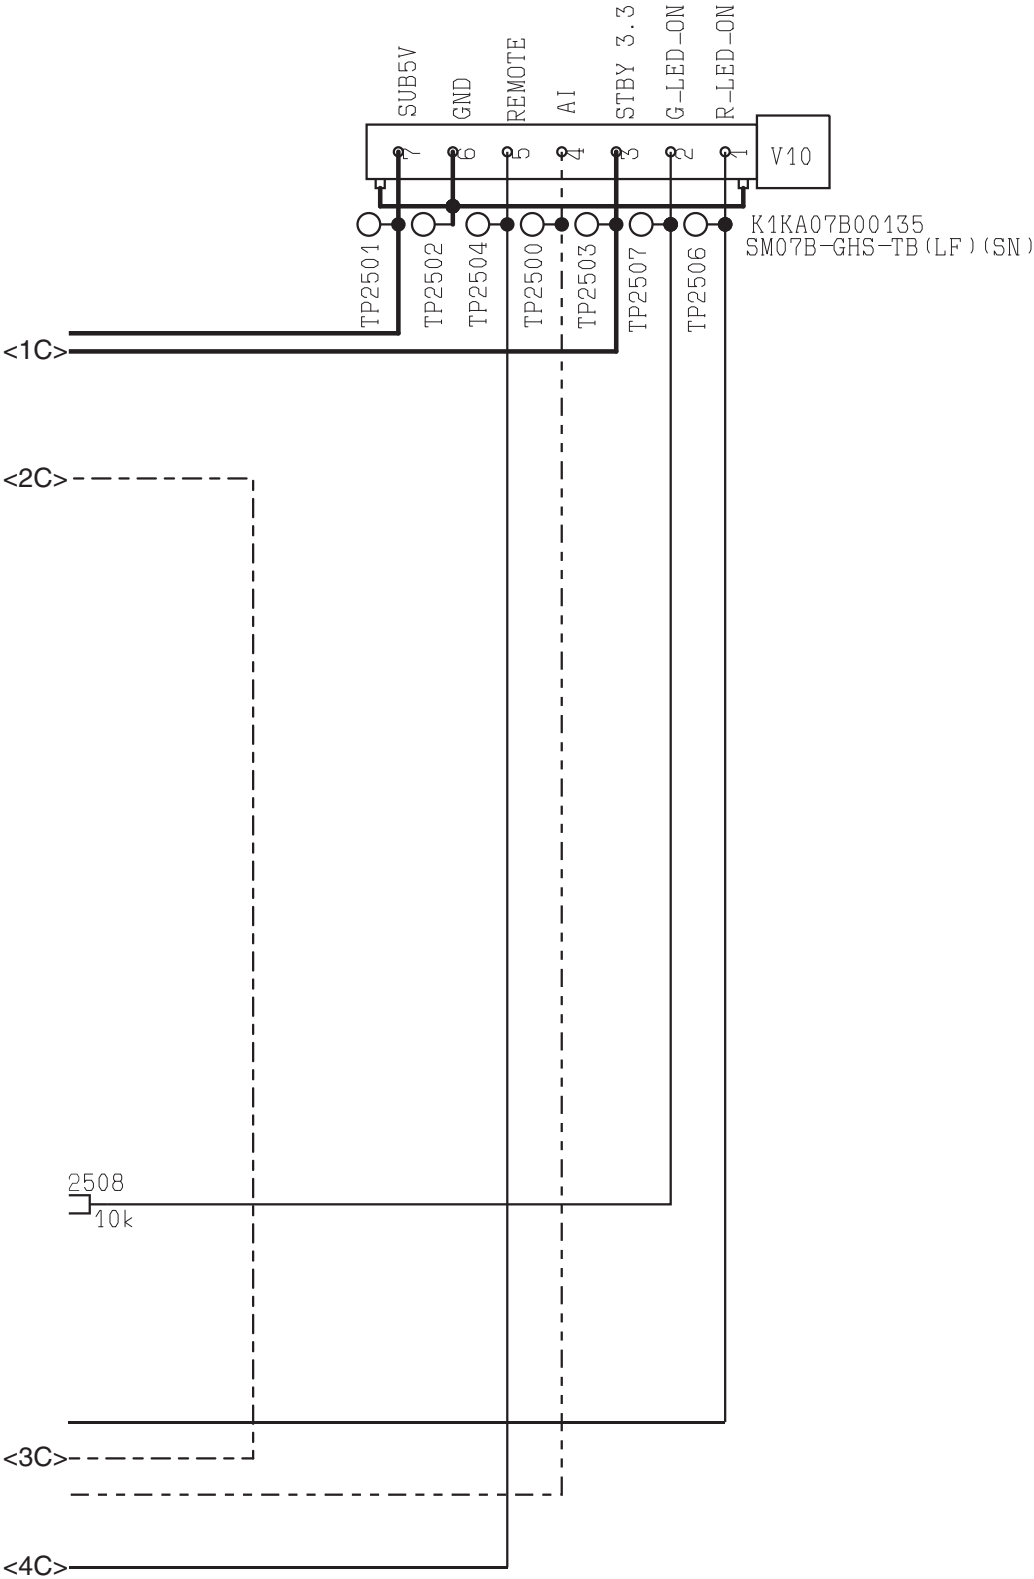

12 Exploded View and Replacement Parts List

12.1. Exploded View and Mechanical Replacement Parts List

Please click the radio button for “Diagrams II/Parts List” on the menu bar.

12.2. Electrical Replacement Parts List

12.2.1. Replacement Parts List Notes

Important Safety Notice

Components identified by  mark have special characteristics important for safety.
When replacing any of these components, use manufacturer's specified parts.

Note: Printed circuit board assembly with “NLA” is no longer available after production discontinuation of the complete set.

Abbreviation of part name and description

1. Resistor

Example :

ERD25TJ104 C 100 K Ω , J, 1/4 W

Type Allowance

Type	Allowance
C : Carbon	F : $\pm 1\%$
F : Fuse	G : $\pm 2\%$
M : Metal Oxide Metal Film	J : $\pm 5\%$ K : $\pm 10\%$
S : Solid	M : $\pm 20\%$
W : Wire Wound	

2. Capacitor

Example :

ECKF1H103ZF C 0.01 μ F, Z, 50 V

Type Allowance

Type	Allowance
C : Carbon	C : ± 0.25 pF
E : Electrolytic	D : ± 0.5 pF
P : Polyester Polypropylene	F : ± 1 pF G : $\pm 3\%$
T : Tantalum	J : $\pm 5\%$ K : $\pm 10\%$ L : $\pm 15\%$ M : $\pm 20\%$ P : $\pm 100\%$, -0% Z : $\pm 80\%$, -20%

12.2.2. Electrical Replacement Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
		CAPACITORS		
	C1009	F1G1A105A047	CAPACITOR	
	C1012	F1G1C104A116	CERAMIC CAPACITOR	
	C1040	F1G1H102A730	CERAMIC CAPACITOR	
	C1041	F1G1H102A730	CERAMIC CAPACITOR	
	C1043	F1G1H102A730	CERAMIC CAPACITOR	
	C1044	F1G1H102A730	CERAMIC CAPACITOR	
	C1045	F1G1H102A730	CERAMIC CAPACITOR	
	C1050	F1G1H102A730	CERAMIC CAPACITOR	
	C1051	F1G1H102A730	CERAMIC CAPACITOR	
	C1052	F1G1H102A730	CERAMIC CAPACITOR	
	C1102	F1J1A106A043	CERAMIC CAPACITOR	
	C1103	F1G1C104A116	CERAMIC CAPACITOR	
	C1104	F1G1C104A116	CERAMIC CAPACITOR	
	C1106	F1H1H330A971	CHIP CAPACITOR	
	C1107	F1G1H220A731	CERAMIC CAPACITOR	
	C1108	F1G1C104A116	CERAMIC CAPACITOR	
	C1109	F1H1A1050032	CERAMIC CAPACITOR	
	C1111	F1H1A1050032	CERAMIC CAPACITOR	
	C1112	F1G1C104A116	CERAMIC CAPACITOR	
	C1114	F1G1C104A116	CERAMIC CAPACITOR	
	C1117	F1G1C104A116	CERAMIC CAPACITOR	
	C1122	F1G1E103A123	CERAMIC CAPACITOR	
	C1123	F1H1A1050032	CERAMIC CAPACITOR	
	C2023	F1G1C104A116	CERAMIC CAPACITOR	
	C2049	F1G1C104A116	CERAMIC CAPACITOR	
	C2050	F1G1C104A116	CERAMIC CAPACITOR	
	C2055	F1G1H120A731	CERAMIC CAPACITOR	
	C2056	F1G1H180A731	CERAMIC CAPACITOR	
	C2058	F1G1C104A116	CERAMIC CAPACITOR	
	C2059	F1J1A106A043	CERAMIC CAPACITOR	
	C2091	F1G1H470A731	CHIP CAPACITOR	
	C2092	F1G1H220A731	CERAMIC CAPACITOR	
	C2096	F1G1C104A116	CERAMIC CAPACITOR	
	C2098	EEEB0J221UP	CERAMIC CAPACITOR	
	C2099	EEEB0J221UP	CERAMIC CAPACITOR	
	C2102	F1G1C104A116	CERAMIC CAPACITOR	
	C2105	F1G1C104A116	CERAMIC CAPACITOR	
	C2106	F1G1C104A116	CERAMIC CAPACITOR	
	C2107	F1J1A106A043	CERAMIC CAPACITOR	
	C2108	F1J1A106A043	CERAMIC CAPACITOR	
	C2109	F1G1C104A116	CERAMIC CAPACITOR	
	C2110	F1G1C104A116	CERAMIC CAPACITOR	
	C2111	F1J1A475A039	CERAMIC CAPACITOR	
	C2112	F1J1A106A043	CERAMIC CAPACITOR	
	C2113	F1J1A106A043	CERAMIC CAPACITOR	
	C2114	F1G1C104A116	CERAMIC CAPACITOR	
	C2115	F1G1C104A116	CERAMIC CAPACITOR	
	C2117	F1G1C104A116	CERAMIC CAPACITOR	
	C2118	F1J1A475A039	CERAMIC CAPACITOR	
	C2120	F1G1H560A731	CHIP CAPACITOR	
	C2121	F1G1H560A731	CHIP CAPACITOR	
	C2122	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2123	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2124	F1G1C104A116	CERAMIC CAPACITOR	
	C2125	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2127	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2128	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2129	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2135	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2136	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2137	F1J1A106A043	CERAMIC CAPACITOR	
	C2192	F1J1A106A043	CERAMIC CAPACITOR	
	C2216	F1G1C104A116	CERAMIC CAPACITOR	
	C2244	F1G1C104A116	CERAMIC CAPACITOR	
	C2245	F1G1H102A730	CERAMIC CAPACITOR	
	C2251	F1J1A106A043	CERAMIC CAPACITOR	
	C2263	F1J1A106A043	CERAMIC CAPACITOR	
	C2264	F1J1A106A043	CERAMIC CAPACITOR	
	C2265	F1G1H101A731	CHIP RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C2266	F1G1H101A731	CHIP RESISTOR	
	C2301	F1G1C104A116	CERAMIC CAPACITOR	
	C2302	F1G1C104A116	CERAMIC CAPACITOR	
	C2303	F1J1E105A171	CERAMIC CAPACITOR	
	C2305	F1J1E105A171	CERAMIC CAPACITOR	
	C2309	F1J1E105A171	CERAMIC CAPACITOR	
	C2313	F1H1A1050032	CERAMIC CAPACITOR	
	C2317	F1H1H104A970	CHIP CAPACITOR	
	C2319	F1H1H104A970	CHIP CAPACITOR	
	C2321	F1H1H104A970	CHIP CAPACITOR	
	C2323	F1H1H104A970	CHIP CAPACITOR	
	C2325	F1J1H474A757	CERAMIC CAPACITOR	
	C2331	F1J1H474A757	CERAMIC CAPACITOR	
	C2333	F1H1E104A129	CERAMIC CAPACITOR	
	C2335	F1H1E104A129	CERAMIC CAPACITOR	
	C2337	F1H1H223A970	CERAMIC CAPACITOR	
	C2339	F1H1H223A970	CERAMIC CAPACITOR	
	C2341	F1H1E104A129	CERAMIC CAPACITOR	
	C2343	F1H1E104A129	CERAMIC CAPACITOR	
	C2345	F1H1H223A970	CERAMIC CAPACITOR	
	C2347	F1H1H223A970	CERAMIC CAPACITOR	
	C2353	F1G1H102A730	CERAMIC CAPACITOR	
	C2359	F1G1H102A730	CERAMIC CAPACITOR	
	C2361	F2G1E4710007	ELECTROLYTIC CAPACITOR	
	C2362	F1K1E106A136	CERAMIC CAPACITOR	
	C2375	F1H1H223A970	CERAMIC CAPACITOR	
	C2377	F1H1H223A970	CERAMIC CAPACITOR	
	C2379	F1H1H223A970	CERAMIC CAPACITOR	
	C2381	F1H1H223A970	CERAMIC CAPACITOR	
	C2383	F1G1H102A730	CERAMIC CAPACITOR	
	C2385	F1G1H102A730	CERAMIC CAPACITOR	
	C2387	F1G1H102A730	CERAMIC CAPACITOR	
	C2389	F1G1H102A730	CERAMIC CAPACITOR	
	C2390	F1J1E105A171	CERAMIC CAPACITOR	
	C2501	F2G0J470A019	ELECTROLYTIC CAPACITOR	
	C2501	F2G0J470A019	ELECTROLYTIC CAPACITOR	
	C2502	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2502	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C2505	F1G1A104A053	CERAMIC CAPACITOR	
	C2505	F1G1A104A053	CERAMIC CAPACITOR	
	C2506	F1J1A106A043	CERAMIC CAPACITOR	
	C2506	F1J1A106A043	CERAMIC CAPACITOR	
	C2512	F1J1A106A043	CERAMIC CAPACITOR	
	C2512	F1J1A106A043	CERAMIC CAPACITOR	
	C2750	F1G1C104A116	CERAMIC CAPACITOR	
	C2751	F1G1H102A730	CERAMIC CAPACITOR	
	C2752	F1G1H102A730	CERAMIC CAPACITOR	
	C2753	F1G1H102A730	CERAMIC CAPACITOR	
	C2754	F1G1H102A730	CERAMIC CAPACITOR	
	C2755	F1G1H102A730	CERAMIC CAPACITOR	
	C2756	F1G1H102A730	CERAMIC CAPACITOR	
	C2757	F1G1H102A730	CERAMIC CAPACITOR	
	C2758	F1H1E104A129	CERAMIC CAPACITOR	
	C2759	F1G1C104A116	CERAMIC CAPACITOR	
	C2760	F1K1C1060004	CERAMIC CAPACITOR	
	C2761	F1G1C104A116	CERAMIC CAPACITOR	
	C2763	F1G1H102A730	CERAMIC CAPACITOR	
	C2766	F1G1C104A116	CERAMIC CAPACITOR	
	C2767	F1G1C104A116	CERAMIC CAPACITOR	
	C2780	F1G1H101A731	CHIP RESISTOR	
	C2906	F1H1C104A143	C 0.1UF,K, 16V	
	C2908	F1G1C104A116	CERAMIC CAPACITOR	
	C2909	F1H1A1050032	CERAMIC CAPACITOR	
	C2912	F2H0J1010009	CERAMIC CAPACITOR	
	C2914	F1H1H104A970	CHIP CAPACITOR	
	C2916	F1H1C104A143	C 0.1UF,K, 16V	
	C2919	F1H1C104A143	C 0.1UF,K, 16V	
	C2920	F1H1H103A970	CERAMIC CAPACITOR	
	C2922	F1H1C104A143	C 0.1UF,K, 16V	
	C2927	F1H1H100A971	CAPACITOR	
	C2928	F1G1H102A730	CERAMIC CAPACITOR	
	C2937	F1G1H103A735	CHIP RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C2940	FLH1H102A970	CHIP CAPACITOR	
	C2942	FLH1H102A970	CHIP CAPACITOR	
	C2943	FLH1H102A970	CHIP CAPACITOR	
	C3002	FLG1H561A730	CHIP CAPACITOR	
	C3003	FLG1H561A730	CHIP CAPACITOR	
	C3007	FLG1H561A730	CHIP CAPACITOR	
	C3008	FLG1H561A730	CHIP CAPACITOR	
	C3013	FLG1H561A730	CHIP CAPACITOR	
	C3014	FLG1H561A730	CHIP CAPACITOR	
	C3022	FLH1A1050032	CERAMIC CAPACITOR	
	C3024	FLH1A1050032	CERAMIC CAPACITOR	
	C3039	FLH1A1050032	CERAMIC CAPACITOR	
	C3041	FLH1A1050032	CERAMIC CAPACITOR	
	C3043	FLH1A1050032	CERAMIC CAPACITOR	
	C3044	FLH1A1050032	CERAMIC CAPACITOR	
	C3046	FLH1A1050032	CERAMIC CAPACITOR	
	C3047	FLH1A1050032	CERAMIC CAPACITOR	
	C3073	FLJ1A106A043	CERAMIC CAPACITOR	
	C3074	FLJ1A106A043	CERAMIC CAPACITOR	
	C3075	FLH1A1050032	CERAMIC CAPACITOR	
	C3077	FLG1C104A116	CERAMIC CAPACITOR	
	C3078	FLJ1A106A043	CERAMIC CAPACITOR	
	C3083	FLJ1A106A043	CERAMIC CAPACITOR	
	C3084	FLJ1A106A043	CERAMIC CAPACITOR	
	C3085	FLJ1A106A043	CERAMIC CAPACITOR	
	C3086	FLJ1A106A043	CERAMIC CAPACITOR	
	C3090	FLJ1A106A043	CERAMIC CAPACITOR	
	C3091	FLJ1A106A043	CERAMIC CAPACITOR	
	C3092	FLJ1A106A043	CERAMIC CAPACITOR	
	C3095	F2G1A101A019	ELECTROLYTIC CAPACITOR	
	C3099	FLG1H561A730	CHIP CAPACITOR	
	C3100	FLG1E333A091	CHIP CAPACITOR	
	C3101	FLG1E333A091	CHIP CAPACITOR	
	C3103	F2G1A101A019	ELECTROLYTIC CAPACITOR	
	C3107	FLJ1A106A043	CERAMIC CAPACITOR	
	C3108	FLJ1A106A043	CERAMIC CAPACITOR	
	C3109	FLJ1A106A043	CERAMIC CAPACITOR	
	C3114	FLJ1A106A043	CERAMIC CAPACITOR	
	C3115	FLJ1A106A043	CERAMIC CAPACITOR	
	C3116	FLJ1A106A043	CERAMIC CAPACITOR	
	C3117	FLJ1A106A043	CERAMIC CAPACITOR	
	C3139	FLG1C104A116	CERAMIC CAPACITOR	
	C3140	FLG1C104A116	CERAMIC CAPACITOR	
	C3141	FLG1C104A116	CERAMIC CAPACITOR	
	C3143	FLG1C104A116	CERAMIC CAPACITOR	
	C3144	FLJ1A106A043	CERAMIC CAPACITOR	
	C3145	FLG1C104A116	CERAMIC CAPACITOR	
	C3146	FLJ1A106A043	CERAMIC CAPACITOR	
	C3147	FLJ1A106A043	CERAMIC CAPACITOR	
	C3257	FLG1H561A730	CHIP CAPACITOR	
	C4239	FLJ1A106A043	CERAMIC CAPACITOR	
	C4240	FLJ1A106A043	CERAMIC CAPACITOR	
	C4241	F2G0J220A019	ELECTROLYTIC CAPACITOR	
	C4243	FLG1C104A116	CERAMIC CAPACITOR	
	C4250	FLH1H103A970	CERAMIC CAPACITOR	
	C4251	FLH1H103A970	CERAMIC CAPACITOR	
	C4252	EEH1B1C470P	ELECTROLYTIC CAPACITOR	
	C4500	FLG1C104A116	CERAMIC CAPACITOR	
	C4501	FLG1C104A116	CERAMIC CAPACITOR	
	C4502	FLG1C104A116	CERAMIC CAPACITOR	
	C4503	FLG1C104A116	CERAMIC CAPACITOR	
	C4533	FLG1H680A731	CERAMIC CAPACITOR	
	C4534	FLG1C104A116	CERAMIC CAPACITOR	
	C4535	FLG1C104A116	CERAMIC CAPACITOR	
	C4547	FLG1C104A116	CERAMIC CAPACITOR	
	C4548	FLG1C104A116	CERAMIC CAPACITOR	
	C4549	FLG1C104A116	CERAMIC CAPACITOR	
	C4550	FLG1C104A116	CERAMIC CAPACITOR	
	C4551	FLG1C104A116	CERAMIC CAPACITOR	
	C4552	FLG1C104A116	CERAMIC CAPACITOR	
	C4553	FLG1H102A730	CERAMIC CAPACITOR	
	C4554	EEH1B1C470P	ELECTROLYTIC CAPACITOR	
	C4555	FLJ1A106A043	CERAMIC CAPACITOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C4574	FLG1C104A116	CERAMIC CAPACITOR	
	C4575	FLG1C104A116	CERAMIC CAPACITOR	
	C4580	FLG1C104A116	CERAMIC CAPACITOR	
	C4585	FLG1C104A116	CERAMIC CAPACITOR	
	C4595	FLG1C104A116	CERAMIC CAPACITOR	
	C4598	FLJ1A106A043	CERAMIC CAPACITOR	
	C4599	FLJ1A106A043	CERAMIC CAPACITOR	
	C4600	FLG1C104A116	CERAMIC CAPACITOR	
	C4601	FLJ1A106A043	CERAMIC CAPACITOR	
	C4602	FLG1C104A116	CERAMIC CAPACITOR	
	C4603	FLJ1A475A039	CERAMIC CAPACITOR	
	C4605	FLJ1A475A039	CERAMIC CAPACITOR	
	C4606	FLJ1A475A039	CERAMIC CAPACITOR	
	C4607	FLJ1A475A039	CERAMIC CAPACITOR	
	C4608	FLG1C104A116	CERAMIC CAPACITOR	
	C4613	FLH0J1050012	CERAMIC CAPACITOR	
	C4616	FLJ1A475A039	CERAMIC CAPACITOR	
	C4617	FLJ1A475A039	CERAMIC CAPACITOR	
	C4624	FLG1C104A116	CERAMIC CAPACITOR	
	C4625	FLG1C104A116	CERAMIC CAPACITOR	
	C4626	FLG1C104A116	CERAMIC CAPACITOR	
	C4628	FLG1C104A116	CERAMIC CAPACITOR	
	C4629	FLG1C104A116	CERAMIC CAPACITOR	
	C4630	FLG1C104A116	CERAMIC CAPACITOR	
	C4631	FLJ1A106A043	CERAMIC CAPACITOR	
	C4632	FLG1C104A116	CERAMIC CAPACITOR	
	C4633	FLJ1A106A043	CERAMIC CAPACITOR	
	C4634	FLG1C104A116	CERAMIC CAPACITOR	
	C4635	FLJ1A106A043	CERAMIC CAPACITOR	
	C4636	FLG1C104A116	CERAMIC CAPACITOR	
	C4637	FLG1C104A116	CERAMIC CAPACITOR	
	C4638	FLG1C104A116	CERAMIC CAPACITOR	
	C4640	FLG1C104A116	CERAMIC CAPACITOR	
	C4642	FLG1C104A116	CERAMIC CAPACITOR	
	C4643	FLG1C104A116	CERAMIC CAPACITOR	
	C4644	FLG1C104A116	CERAMIC CAPACITOR	
	C4645	FLG1C104A116	CERAMIC CAPACITOR	
	C5408	FLJ1A106A043	CERAMIC CAPACITOR	
	C5410	FLJ1E105A171	CERAMIC CAPACITOR	
	C5414	FLJ1E105A171	CERAMIC CAPACITOR	
	C5415	FLJ1E105A171	CERAMIC CAPACITOR	
	C5421	FLJ1A106A043	CERAMIC CAPACITOR	
	C5431	FLJ1E105A171	CERAMIC CAPACITOR	
	C5441	F2G1C100A022	ELECTROLYTIC CAPACITOR	
	C5443	F2G1V100A020	ELECTROLYTIC CAPACITOR	
	C5444	FLH1H102A970	CHIP CAPACITOR	
	C5464	FLH1A1050032	CERAMIC CAPACITOR	
	C5480	FLG1C103A116	CERAMIC CHIP CAPACITOR	
	C5481	FLH1A1050032	CERAMIC CAPACITOR	
	C5483	FLJ1A106A043	CERAMIC CAPACITOR	
	C5486	FLG1C473A081	CHIP CAPACITOR	
	C5487	FLH1C105A008	CHIP CAPACITOR	
	C5488	FLG1C473A081	CHIP CAPACITOR	
	C5489	FLJ1A106A043	CERAMIC CAPACITOR	
	C5492	FLG1C104A116	CERAMIC CAPACITOR	
	C5493	FLH1A1050032	CERAMIC CAPACITOR	
	C5494	FLH1C105A145	CHIP CAPACITOR	
	C5602	F2H0J1010009	CERAMIC CAPACITOR	
	C5603	FLG1C104A116	CERAMIC CAPACITOR	
	C5604	ECJ0EB1E682K	CERAMIC CAPACITOR	
	C5605	FLJ1A475A039	CERAMIC CAPACITOR	
	C5606	FLH1C105A145	CHIP CAPACITOR	
	C5607	FLG1H221A459	CERAMIC CAPACITOR	
	C5611	FLK1C1060004	CERAMIC CAPACITOR	
	C5612	FLK1C1060004	CERAMIC CAPACITOR	
	C5615	FLK1C1060004	CERAMIC CAPACITOR	
	C5616	FLG1C273A081	CHIP CAPACITOR	
	C5618	FLK1C1060004	CERAMIC CAPACITOR	
	C5619	FLK1C1060004	CERAMIC CAPACITOR	
	C5620	FLH1C104A143	C 0.1UF,K, 16V	
	C5621	FLG1E103A123	CERAMIC CAPACITOR	
	C5622	FLJ1A475A039	CERAMIC CAPACITOR	
	C5623	FLG1H221A459	CERAMIC CAPACITOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C5624	F1G1H471A730	CHIP CAPACITOR	
	C5626	F1G1C104A116	CERAMIC CAPACITOR	
	C5627	F1G1C104A116	CERAMIC CAPACITOR	
	C5628	ECGRLOE680ER	CHIP CAPACITOR	
	C5629	ECGRLOE680ER	CHIP CAPACITOR	
	C5631	EEHB1C470P	ELECTROLYTIC CAPACITOR	
	C5632	F1H1C105A145	CHIP CAPACITOR	
	C5636	F1G1C104A116	CERAMIC CAPACITOR	
	C5637	F1G1C104A116	CERAMIC CAPACITOR	
	C5638	F1G1C104A116	CERAMIC CAPACITOR	
	C5639	F1G1C104A116	CERAMIC CAPACITOR	
	C5640	F1G1C104A116	CERAMIC CAPACITOR	
	C5641	F1G1C104A116	CERAMIC CAPACITOR	
	C5642	F1K1C1060004	CERAMIC CAPACITOR	
	C5643	F1H1C104A143	C 0.1UF, K, 16V	
	C5644	F1H1C105A145	CHIP CAPACITOR	
	C7103	F1A2E221A003	CERAMIC CAPACITOR	
	C7104	F1A2E221A003	CERAMIC CAPACITOR	
	C7107	ECKW3A103MEH	CAPACITOR	
	C7108	F0CAF224A066	PLASTIC FILM CAPACITOR	
	C7109	F0CAF224A066	PLASTIC FILM CAPACITOR	
	C7202	F0CZZ105A097	CAPACITOR	
	C7203	F0CZZ105A097	CAPACITOR	
	C7204	F1J1H474A757	CERAMIC CAPACITOR	
	C7205	F1J1H104A835	CERAMIC CAPACITOR	
	C7206	F1J1H221A836	CHIP CAPACITOR	
	C7209	F1J1C1050028	CERAMIC CAPACITOR	
	C7210	F1J1H474A757	CERAMIC CAPACITOR	
	C7211	F1J1H102A834	CERAMIC CAPACITOR	
	C7212	F1J1H221A836	CHIP CAPACITOR	
⚠	C7215	ECKW3D471KBP	C 470PF, K, 2KV	
⚠	C7216	ECKW3D471KBP	C 470PF, K, 2KV	
	C7217	ECKW3A103MEH	CAPACITOR	
	C7218	F2A2W1210001	CAPACITOR	
	C7219	ECKW3D221KBP	CERAMIC CAPACITOR	
	C7220	ECKW3A103MEH	CAPACITOR	
	C7301	ECQ6E103KF	PLASTIC FILM CAPACITOR	
⚠	C7302	ECKW3D101KBP	C 100PF, K, 2KV	
	C7303	F1J1H102A834	CERAMIC CAPACITOR	
	C7304	F1J1H223A834	CERAMIC CAPACITOR	
	C7305	F1J1H471A834	CHIP CAPACITOR	
	C7306	F1J1H221A836	CHIP CAPACITOR	
	C7307	F1J1H474A757	CERAMIC CAPACITOR	
	C7318	F1A2E102A004	CERAMIC CAPACITOR	
	C7401	F2A2W100A020	ELECTROLYTIC CAPACITOR	
⚠	C7402	ECKR3A222KBP	C 2200PF, K, 1KV	
	C7404	F1J1H474A757	CERAMIC CAPACITOR	
	C7405	F1J1H103A834	CERAMIC CAPACITOR	
	C7406	F1J1H472A834	CHIP CAPACITOR	
	C7407	F2A1H220A115	ELECTROLYTIC CAPACITOR	
	C7408	F2A1E101A089	ELECTROLYTIC CAPACITOR	
	C7410	F1J1H222A834	CHIP CAPACITOR	
	C7411	F1J1H472A834	CHIP CAPACITOR	
	C7412	F1A2E221A003	CERAMIC CAPACITOR	
⚠	C7413	ECKW3D222KBP	C 2200PF, K, 2KV	
	C7414	F1A2E102A004	CERAMIC CAPACITOR	
	C7505	F2A1E681A100	ELECTROLYTIC CAPACITOR	
	C7506	F2A1E681A100	ELECTROLYTIC CAPACITOR	
	C7510	ECA1HHG010	E 1UF, 50V	
	C7511	ECA1HHG010	E 1UF, 50V	
	C7514	F2A1E681A100	ELECTROLYTIC CAPACITOR	
⚠	C7515	ECKR3A471KBP	C 470PF, K, 1KV	
	C7601	F2A1A102A118	ELECTROLYTIC CAPACITOR	
	C7602	F1J1H474A757	CERAMIC CAPACITOR	
	C7604	F1J1H103A834	CERAMIC CAPACITOR	
	C7605	F1J1H104A835	CERAMIC CAPACITOR	
	C7607	F1J1H104A835	CERAMIC CAPACITOR	
	C7701	F1J1E3340003	CERAMIC CAPACITOR	
	C7702	F2A1H100A165	E 10UF, 50V	
	C7703	F1J1H103A834	CERAMIC CAPACITOR	
	C7704	F2A1H100A165	E 10UF, 50V	
	C7705	F2A1H47A165	CAPACITOR	
	C7706	F2A1H100A165	E 10UF, 50V	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C7801	F2A1E101A096	ELECTROLYTIC CAPACITOR	
	C7802	F1J1H104A835	CERAMIC CAPACITOR	
	C7803	F1J1H104A835	CERAMIC CAPACITOR	
	C7804	F1J1H104A835	CERAMIC CAPACITOR	
	C7805	F1J1H474A757	CERAMIC CAPACITOR	
	C7806	F1J1H474A757	CERAMIC CAPACITOR	
	C7851	F1B3J270A013	CERAMIC CAPACITOR	
	C7852	F1J1H471A836	CERAMIC CAPACITOR	
	C7853	F1B3J270A013	CERAMIC CAPACITOR	
	C7854	F1J1H221A836	CHIP CAPACITOR	
	C7855	F1J1H104A835	CERAMIC CAPACITOR	
	C7856	F1J1H104A835	CERAMIC CAPACITOR	
	C7857	F1J1H474A757	CERAMIC CAPACITOR	
	C7858	F1J1E224A227	CERAMIC CAPACITOR	
	C7860	F1J1C1050028	CERAMIC CAPACITOR	
	C7861	F1J1H471A836	CERAMIC CAPACITOR	
	C7862	F1J1A2250007	CERAMIC CHIP CAPACITOR	
	C7863	F1J1H332A834	CERAMIC CAPACITOR	
	C7864	F1J1H103A834	CERAMIC CAPACITOR	
	C7865	F1J1H104A838	CAPACITOR	
	C7866	F1J1H104A835	CERAMIC CAPACITOR	
	C7868	F1J1H104A835	CERAMIC CAPACITOR	
	C7869	F1J1H103A834	CERAMIC CAPACITOR	
	C7870	F1J1H103A834	CERAMIC CAPACITOR	
	C7871	F1J1H103A834	CERAMIC CAPACITOR	
	C7872	F1J1H104A835	CERAMIC CAPACITOR	
	C7874	F1J1H472A834	CHIP CAPACITOR	
	C7875	F1J1H472A834	CHIP CAPACITOR	
	C7877	F1J1H104A835	CERAMIC CAPACITOR	
	C7882	F1B3J220A013	CERAMIC CAPACITOR	
	C7883	F1J1H222A836	CAPACITOR	
	C7884	F1J1H472A590	CERAMIC CAPACITOR	
	C7885	F2A1E101A096	ELECTROLYTIC CAPACITOR	
	C7887	F1J1H104A835	CERAMIC CAPACITOR	
	C7888	F1J1C1050028	CERAMIC CAPACITOR	
	C8001	F1G1C104A116	CERAMIC CAPACITOR	
	C8002	F1H0J1050012	CERAMIC CAPACITOR	
	C8003	F1H0J1050012	CERAMIC CAPACITOR	
	C8004	F1H0J1050012	CERAMIC CAPACITOR	
	C8005	F1H0J1050012	CERAMIC CAPACITOR	
	C8006	F1G1C104A116	CERAMIC CAPACITOR	
	C8007	F1G1C104A116	CERAMIC CAPACITOR	
	C8008	F1G1C104A116	CERAMIC CAPACITOR	
	C8009	F1J1A106A043	CERAMIC CAPACITOR	
	C8010	F1J1A106A043	CERAMIC CAPACITOR	
	C8011	F1G1C104A116	CERAMIC CAPACITOR	
	C8012	F1G1C104A116	CERAMIC CAPACITOR	
	C8013	F1G1C104A116	CERAMIC CAPACITOR	
	C8014	F1G1C104A116	CERAMIC CAPACITOR	
	C8015	F1H0J1050012	CERAMIC CAPACITOR	
	C8016	F1H0J1050012	CERAMIC CAPACITOR	
	C8017	F1J1A106A043	CERAMIC CAPACITOR	
	C8018	F1G1C104A116	CERAMIC CAPACITOR	
	C8019	F1G1C104A116	CERAMIC CAPACITOR	
	C8020	F1G1C104A116	CERAMIC CAPACITOR	
	C8021	F1G1C104A116	CERAMIC CAPACITOR	
	C8022	F1H0J1050012	CERAMIC CAPACITOR	
	C8023	F1J1A106A043	CERAMIC CAPACITOR	
	C8024	F1J1A106A043	CERAMIC CAPACITOR	
	C8025	F1G1C104A116	CERAMIC CAPACITOR	
	C8026	F1G1C104A116	CERAMIC CAPACITOR	
	C8027	F1G1C104A116	CERAMIC CAPACITOR	
	C8028	F1G1C104A116	CERAMIC CAPACITOR	
	C8029	F1G1C104A116	CERAMIC CAPACITOR	
	C8030	F1H0J1050012	CERAMIC CAPACITOR	
	C8031	F1H0J1050012	CERAMIC CAPACITOR	
	C8032	F1J1A106A043	CERAMIC CAPACITOR	
	C8033	F1G1C104A116	CERAMIC CAPACITOR	
	C8034	F1G1C104A116	CERAMIC CAPACITOR	
	C8035	F1J1A106A043	CERAMIC CAPACITOR	
	C8036	F1J1A106A043	CERAMIC CAPACITOR	
	C8037	F1G1C104A116	CERAMIC CAPACITOR	
	C8038	F1G1C104A116	CERAMIC CAPACITOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C8039	F1G1C104A116	CERAMIC CAPACITOR	
	C8040	F1G1C104A116	CERAMIC CAPACITOR	
	C8041	F1G1C104A116	CERAMIC CAPACITOR	
	C8042	ECGRLO680ER	CAPACITOR	
	C8043	F1G1C104A116	CERAMIC CAPACITOR	
	C8044	F1G1C104A116	CERAMIC CAPACITOR	
	C8045	F1G1C104A116	CERAMIC CAPACITOR	
	C8046	F1G1C104A116	CERAMIC CAPACITOR	
	C8047	F1G1C104A116	CERAMIC CAPACITOR	
	C8048	F1G1C104A116	CERAMIC CAPACITOR	
	C8049	F1G1C104A116	CERAMIC CAPACITOR	
	C8050	F1G1C104A116	CERAMIC CAPACITOR	
	C8051	F1G1C104A116	CERAMIC CAPACITOR	
	C8052	F1H0J1050012	CERAMIC CAPACITOR	
	C8053	F1G1E103A123	CERAMIC CAPACITOR	
	C8054	F1G1H120A731	CERAMIC CAPACITOR	
	C8055	F1G1HR50A577	CERAMIC CAPACITOR	
	C8056	F1G1C104A116	CERAMIC CAPACITOR	
	C8057	F1G1C104A116	CERAMIC CAPACITOR	
	C8058	F1J1A106A043	CERAMIC CAPACITOR	
	C8060	F1G1H102A730	CERAMIC CAPACITOR	
	C8067	F1G1E103A123	CERAMIC CAPACITOR	
	C8068	F1G1C104A116	CERAMIC CAPACITOR	
	C8069	F1G1H820A731	CERAMIC CAPACITOR	
	C8070	F1G1C104A116	CERAMIC CAPACITOR	
	C8071	F1G1C104A116	CERAMIC CAPACITOR	
	C8072	F1G1C104A116	CERAMIC CAPACITOR	
	C8073	F1G1C104A116	CERAMIC CAPACITOR	
	C8074	F1G1C104A116	CERAMIC CAPACITOR	
	C8075	F1J0G2260001	CERAMIC CAPACITOR	
	C8076	F1G1C104A116	CERAMIC CAPACITOR	
	C8077	F1G1C104A116	CERAMIC CAPACITOR	
	C8078	F1G1C104A116	CERAMIC CAPACITOR	
	C8079	F1G1C104A116	CERAMIC CAPACITOR	
	C8080	F1G1C104A116	CERAMIC CAPACITOR	
	C8532	EEEB1C470P	ELECTROLYTIC CAPACITOR	
	C8533	F1G1C104A116	CERAMIC CAPACITOR	
	C8535	F1G1C103A116	CERAMIC CHIP CAPACITOR	
	C8544	F1J0G2260001	CERAMIC CAPACITOR	
	C8555	F1G1C104A116	CERAMIC CAPACITOR	
	C8601	F1G1C104A116	CERAMIC CAPACITOR	
	C8857	F1G1H102A730	CERAMIC CAPACITOR	
	C8859	F1G1H102A730	CERAMIC CAPACITOR	
		DIODES		
	D1002	EZJZ0V120JA	VARISTOR	
	D1003	EZJZ0V120JA	VARISTOR	
	D1004	EZAEG2A50AX	FILTER	
	D1005	EZAEG2A50AX	FILTER	
	D1006	EZAEG2A50AX	FILTER	
	D1007	EZAEG2A50AX	FILTER	
	D1107	MA704ATX	DIODE	
	D1112	MA2J72800L	DIODE	
	D2014	MA2J11100L	DIODE	
	D2017	MA2J11100L	DIODE	
	D2500	B3AGB0000057	DIODE	
	D2500	B3AGB0000057	DIODE	
	D2752	EZJZ0V120JA	VARISTOR	
	D2753	B3AEB0000131	LED DIODE	
	D2760	MAZ81400ML	DIODE	
	D2779	MA22F2000L	DIODE	
	D3050	EZJP0V080GA	CHIP VARISTOR	
	D3340	EZJP0V080GA	CHIP VARISTOR	
	D4202	MA2J11100L	DIODE	
	D4512	EZAEG2A50AX	FILTER	
	D4513	B0BC5R6A0275	DIODE	
	D4517	EZAEG2A50AX	FILTER	
	D4518	EZAEG2A50AX	FILTER	
	D4520	EZAEG2A50AX	FILTER	
	D4525	MA2J11100L	DIODE	
	D4526	MA2J11100L	DIODE	
	D4541	MA2J11100L	DIODE	
	D4542	MA2J11100L	DIODE	
	D4576	BOHCMM000014	DIODE	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	D4577	BOHCMM000014	DIODE	
	D4583	BOHCMM000014	DIODE	
	D4611	B0BC5R6A0275	DIODE	
	D5407	MA2J11100L	DIODE	
	D5414	MA2J11100L	DIODE	
	D5441	MA3X78900L	DIODE	
	D5442	B0BC03900015	DIODE	
	D5473	MA2J11100L	DIODE	
	D5474	MA2J11100L	DIODE	
	D5480	MA2J11100L	DIODE	
	D5481	MAZ81800ML	DIODE	
	D5482	MA2J11100L	DIODE	
	D5483	MAZ81100ML	DIODE	
	D5484	MA2J11100L	DIODE	
	D5485	MAZ82400ML	DIODE	
	D5486	MA2J11100L	DIODE	
	D5612	MAZ80470ML	DIODE	
	D5613	MA2J11100L	DIODE	
	D5618	MAZ80470ML	DIODE	
	D5619	MA2J11100L	DIODE	
	D5626	MAZ80470ML	DIODE	
	D5627	MA2J11100L	DIODE	
	D7101	D4EAC6210002	VARISTOR	
	D7102	D4EAC6210002	VARISTOR	
	D7151	B0FBAT000008	DIODE	
	D7201	B0EAKR000029	DIODE	
	D7202	B0JAME000091	DIODE	
	D7203	B0JAME000091	DIODE	
	D7204	AU02A	DIODE	
	D7205	AU02A	DIODE	
	D7206	AU02A	DIODE	
	D7207	AU02A	DIODE	
	D7213	MA2J72900L	DIODE	
	D7251	B0FABR000004	DIODE	
	D7301	B0EAKT000019	DIODE	
	D7302	B0EAKT000019	DIODE	
	D7303	B0JAME000091	DIODE	
	D7304	B0JAME000091	DIODE	
	D7305	B0JAME000091	DIODE	
	D7306	B0JAME000091	DIODE	
	D7401	B0EBKT000007	DIODE	
	D7405	B0EAKT000015	DIODE	
	D7406	AU02A	DIODE	
	D7407	B0HAGV000004	DIODE	
	D7408	AU02A	DIODE	
	D7409	AU02A	DIODE	
	D7410	AU02A	DIODE	
	D7411	B0JAME000091	DIODE	
	D7412	B0JAME000091	DIODE	
	D7503	B0HESM000001	DIODE	
	D7505	MTZJ15B	ZENER DIODE	
	D7508	B0BA02100001	ZENER DIODE	
	D7551	MTZJ15B	ZENER DIODE	
	D7552	B0JBSL000031	DIODE	
	D7562	B0BA6R100003	DIODE	
	D7601	B0AACK000004	DIODE	
	D7602	B0BA01000070	DIODE	
	D7603	B0HANM000031	DIODE	
	D7701	AU02A	DIODE	
	D7702	AU02A	DIODE	
	D7703	B0AACK000004	DIODE	
	D7704	MA3X152E0L	DIODE	
	D7705	B0AACK000004	DIODE	
	D7706	B0AACK000004	DIODE	
	D7707	B0AACK000004	DIODE	
	D7708	B0AACK000004	DIODE	
	D7709	MA3X152E0L	DIODE	
	D7711	B0AACK000004	DIODE	
	D7712	B0BA8R700009	ZENER DIODE	
	D7713	B0BA8R700009	ZENER DIODE	
	D7751	B0BA7R900004	ZENER DIODE	
	D7752	B0BA02500002	DIODE	
	D7755	B0BA9R600002	ZENER DIODE	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	D7756	B0BA9R600002	ZENER DIODE	
	D7757	MTZJ4.7B	ZENER DIODE	
	D7758	MTZJ6.8B	ZENER DIODE	
	D7759	MTZJ6.8B	ZENER DIODE	
	D7760	MTZJ6.8B	ZENER DIODE	
	D7801	B0JAMG000010	DIODE	
	D7802	B0JAMG000010	DIODE	
	D7803	B0JAMG000010	DIODE	
	D7804	B0JAMG000010	DIODE	
	D7805	B0AACK000004	DIODE	
	D7806	EU02AV0	DIODE	
	D7807	EU02AV0	DIODE	
	D7809	MAZ80470ML	DIODE	
	D7810	MAZ80470ML	DIODE	
	D7813	MTZJ15B	ZENER DIODE	
	D7814	MTZJ15B	ZENER DIODE	
	D7821	MTZJ15B	ZENER DIODE	
	D7822	MTZJ15B	ZENER DIODE	
	D7823	MTZJ15B	ZENER DIODE	
	D7824	MTZJ15B	ZENER DIODE	
	D7851	MA3X152E0L	DIODE	
	D7852	MA3X152E0L	DIODE	
	D7853	MA3X157A0L	DIODE	
	D7854	MA3X157A0L	DIODE	
	D7855	B0AACK000004	DIODE	
	D7856	MA3X157A0L	DIODE	
	D7857	MA3X157A0L	DIODE	
	D7858	MA3X152E0L	DIODE	
	D7859	MA3X152E0L	DIODE	
	D7860	B0AACK000004	DIODE	
	D7861	MA3X152E0L	DIODE	
	D7862	MA3X152E0L	DIODE	
	D7871	MAZ81200ML	DIODE	
		INTEGRATED CIRCUITS		
	IC1100	MN103SH9FPA1	IC	
	IC1101	TVR4GAS817	ROM IC (C3EBFC000042)	
	IC2008	C0DBGYY00578	IC	
	IC2301	C1AB00002875	IC	
	IC2750	C1ZBZ0003577	IC	
	IC2902	C0DBGYY00281	IC	
	IC3001	C1AB00002855	IC	
	IC4510	C1AB00003045	IC	
	IC4511	C0DBGYY00578	IC	
	IC4512	C0CBCAG00039	IC	
	IC4513	C0DBGYY00618	IC	
	IC5405	C0DBEYG00002	IC REGULATOR	
	IC5409	C0DBEHE00005	IC, POWER SUPPLY	
	IC5441	C0DBAJB00004	IC	
	IC5480	C1ZBZ0003986	IC	
	IC5600	C0DBAYY00480	IC	
	IC5601	C0DBAYY00480	IC	
	IC7201	C0DBBZG00004	IC	
	IC7301	C0DABYY00020	IC	
	IC7401	C0DBBY000011	IC	
	IC7601	C0DAEMZ00001	IC	
	IC7801	C0DBZYY00321	IC	
	IC7851	C0ZBZ0001665	IC	
	IC7852	C0ABBA000168	IC	
	IC7853	C0ABBA000168	IC	
	IC7854	C0ABBA000168	IC	
	IC7855	C0ABBA000168	IC	
	IC8001	MN2WS0047A	IC	
	IC8002	C3ABRY000038	IC	
	IC8003	C3ABRY000038	IC	
	IC8004	C0ZBZ0001567	IC	
	IC8554	TVR4G69-AD	ROM VERSION IC	
	IC8601	TVR4GAS812	ROM IC (C3EBGC000056)	
		COILS		
	L1100	J0JYC0000068	COIL	
	L2001	G1C150KA0038	COIL	
	L2005	ERJ6GEY0R00	M 00HM, J, 1/10W	
	L2006	ERJ6GEY0R00	M 00HM, J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	L2010	G1C220MA0291	COIL	
	L2012	G1C220MA0291	COIL	
	L2014	G1C220MA0291	COIL	
	L2016	G1C220MA0291	COIL	
	L2018	J0JHC0000042	COIL	
	L2032	J0JYC0000068	COIL	
	L2750	J0JYC0000065	COIL	
	L2751	J0JYC0000065	COIL	
	L2752	J0JYC0000065	COIL	
	L2754	J0JYC0000065	COIL	
	L2755	J0JYC0000065	COIL	
	L2756	J0JYC0000065	COIL	
	L2901	J0JCC0000278	COIL	
	L2902	J0JCC0000269	COIL	
	L2904	J0JCC0000269	COIL	
	L2907	J0JCC0000063	BEAD CORE	
	L2908	J0JCC0000063	BEAD CORE	
	L3002	J0JCC0000287	COIL	
	L3003	J0JCC0000287	COIL	
	L3010	J0JCC0000287	COIL	
	L3011	J0JCC0000287	COIL	
	L3014	J0JCC0000287	COIL	
	L3015	J0JCC0000287	COIL	
	L3017	J0JCC0000287	COIL	
	L3019	J0JCC0000287	COIL	
	L3026	J0JCC0000287	COIL	
	L3027	J0JCC0000287	COIL	
	L3028	J0JCC0000287	COIL	
	L3029	J0JCC0000287	COIL	
	L3030	J0JCC0000287	COIL	
	L3034	J0JCC0000364	BEAD COIL	
	L3035	J0JCC0000364	BEAD COIL	
	L4201	J0JYC0000068	COIL	
	L4208	G1C100MA0072	COIL	
	L4210	J0JHC0000045	COIL	
	L4502	J0JYC0000068	COIL	
	L4503	J0JYC0000068	COIL	
	L4504	J0JYC0000068	COIL	
	L4505	J0JYC0000068	COIL	
	L4506	J0JYC0000068	COIL	
	L4507	J0JYC0000068	COIL	
	L4511	J0JYC0000068	COIL	
	L4512	J0JCC0000059	COIL	
	L4513	J0JCC0000059	COIL	
	L4514	J0JYC0000068	COIL	
	L4515	J0JYC0000068	COIL	
	L4516	J0JYC0000068	COIL	
	L4517	J0JYC0000068	COIL	
	L4518	J0JYC0000068	COIL	
	L4519	J0JYC0000068	COIL	
	L5430	J0JHC0000045	COIL	
	L5443	G1C470MA0077	COIL	
	L5444	G1C100MA0072	COIL	
	L5480	J0JYC0000068	COIL	
	L5481	J0JYC0000068	COIL	
	L5600	G1C2R2Z00007	COIL	
	L5601	G1C3R3Z00004	COIL	
	L5602	G1C4R7Z00014	COIL	
	L5604	G1C100MA0203	COIL	
	L5605	J0JHC0000045	COIL	
	L5608	G1C100MA0077	COIL	
	L7151	J0JKB0000034	EMI FILTER	
	L7152	J0JKB0000034	EMI FILTER	
	L7202	EXCELDR35V	CORE	
	L7203	EXCELSA35T	BEAD CORE	
	L7204	J0JKB0000034	EMI FILTER	
	L7205	J0JKB0000034	EMI FILTER	
	L7301	EXCELSA35T	BEAD CORE	
	L7801	EXCELDR35V	CORE	
	L7802	EXCELDR35V	CORE	
	L8001	J0JHC0000045	COIL	
	L8002	J0JHC0000045	COIL	
	L8003	J0JHC0000045	COIL	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	L8004	J0JHC0000045	COIL	
	L8005	J0JHC0000045	COIL	
	L8007	J0JHC0000045	COIL	
	L8008	J0JHC0000045	COIL	
	L8009	J0JHC0000045	COIL	
	L8010	J0JHC0000045	COIL	
	L8501	J0JHC0000045	COIL	
	L8551	J0JHC0000075	BEAD COIL	
		TRANSISTORS		
	Q0900	B1CBHD000002	TRANSISTOR	
	Q0901	B1CBHD000002	TRANSISTOR	
	Q2001	B1ABCF000231	TRANSISTOR	
	Q2022	B1ADCE000022	TRANSISTOR	
	Q2063	2SD0601ASL	TRANSISTOR	
	Q2064	2SD0601ASL	TRANSISTOR	
	Q2065	2SB0709ASL	TRANSISTOR	
	Q2500	B1ABCF000231	TRANSISTOR	
	Q2500	B1ABCF000231	TRANSISTOR	
	Q2501	B1ABCF000231	TRANSISTOR	
	Q2501	B1ABCF000231	TRANSISTOR	
	Q2504	B1ABCF000231	TRANSISTOR	
	Q2504	B1ABCF000231	TRANSISTOR	
	Q3000	B1ABCF000231	TRANSISTOR	
	Q3001	B1ABCF000231	TRANSISTOR	
	Q4201	2SD0601A0L	TRANSISTOR	
	Q4202	2SB0709ATX	TRANSISTOR	
	Q4203	2SD0601A0L	TRANSISTOR	
	Q4204	2SC39380QL	TRANSISTOR	
	Q4205	2SD0601A0L	TRANSISTOR	
	Q4206	2SC39380QL	TRANSISTOR	
	Q4500	B1ABCF000231	TRANSISTOR	
	Q4501	B1ABCF000231	TRANSISTOR	
	Q4514	2SB0709ASL	TRANSISTOR	
	Q4515	2SB0709ASL	TRANSISTOR	
	Q4516	2SB0709ASL	TRANSISTOR	
	Q4517	2SB0709ASL	TRANSISTOR	
	Q4533	B1ABCF000231	TRANSISTOR	
	Q4534	B1ABCF000231	TRANSISTOR	
	Q4800	2SD0601A0L	TRANSISTOR	
	Q4807	2SD0601A0L	TRANSISTOR	
	Q5407	2SC584500L	TRANSISTOR	
	Q5408	2SC584500L	TRANSISTOR	
	Q5412	B1CHRE000005	TRANSISTOR	
	Q5417	B1CHRE000005	TRANSISTOR	
	Q5421	2SC584500L	TRANSISTOR	
	Q5431	2SC584500L	TRANSISTOR	
	Q5441	B1CFNG000001	TRANSISTOR	
	Q5453	2SD0601A0L	TRANSISTOR	
	Q5461	B1ADCE000022	TRANSISTOR	
	Q5495	2SC584500L	TRANSISTOR	
	Q5600	B1MBDDA00003	TRANSISTOR	
	Q5601	B1MBDDA00003	TRANSISTOR	
	Q5602	B1MBDDA00003	TRANSISTOR	
	Q7201	B1CERR000037	TRANSISTOR	
	Q7202	B1CERR000037	TRANSISTOR	
	Q7203	2SB14340SA	TRANSISTOR	
	Q7301	B1CERU000009	TRANSISTOR	
	Q7401	B1CERU000009	TRANSISTOR	
	Q7501	2SC584500L	TRANSISTOR	
	Q7503	2SA207700L	TRANSISTOR	
	Q7601	B1DHDD000028	TRANSISTOR	
	Q7602	B1CBHD000002	TRANSISTOR	
	Q7603	B1CBHD000002	TRANSISTOR	
	Q7604	2SC584500L	TRANSISTOR	
	Q7701	2SA207700L	TRANSISTOR	
	Q7702	2SC584500L	TRANSISTOR	
	Q7703	2SC584500L	TRANSISTOR	
	Q7704	B1CBHD000002	TRANSISTOR	
	Q7705	2SC584500L	TRANSISTOR	
	Q7706	2SC584500L	TRANSISTOR	
	Q7707	2SC584500L	TRANSISTOR	
	Q7708	2SA207700L	TRANSISTOR	
	Q7709	2SC584500L	TRANSISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	Q7710	2SA207700L	TRANSISTOR	
	Q7801	B1CERR000037	TRANSISTOR	
	Q7802	B1CERR000037	TRANSISTOR	
	Q7803	B1CERR000037	TRANSISTOR	
	Q7804	B1CERR000037	TRANSISTOR	
	Q7805	2SD0601AQL	TRANSISTOR	
	Q7841	2SB14340SA	TRANSISTOR	
	Q7842	2SC584500L	TRANSISTOR	
	Q7851	2SC584500L	TRANSISTOR	
	Q7852	2SC584500L	TRANSISTOR	
	Q7853	2SA207700L	TRANSISTOR	
	Q7854	2SC584500L	TRANSISTOR	
	Q7855	2SA207700L	TRANSISTOR	
	Q7856	2SC584500L	TRANSISTOR	
		RESISTORS		
	R0180	ERJ2GEJ101X	RESISTOR	
	R0900	ERJ2GEJ680X	RESISTOR	
	R0901	EXB28V680JX	RESISTOR	
	R0902	ERJ2GEJ103X	FIXED RESISTOR	
	R0905	ERJ2GEJ103X	FIXED RESISTOR	
	R0906	ERJ2GEJ103X	FIXED RESISTOR	
	R0907	ERJ2GEJ103X	FIXED RESISTOR	
	R0909	ERJ2GEJ220X	FIXED RESISTOR	
	R0910	ERJ2GEJ220X	FIXED RESISTOR	
	R0911	ERJ2GEJ220X	FIXED RESISTOR	
	R0912	ERJ2GEJ220X	FIXED RESISTOR	
	R0913	ERJ2GEJ220X	FIXED RESISTOR	
	R0914	ERJ2GEJ220X	FIXED RESISTOR	
	R0915	ERJ2GEJ472X	RESISTOR	
	R0916	ERJ2GEJ472X	RESISTOR	
	R0917	ERJ2GEJ220X	FIXED RESISTOR	
	R0918	ERJ2GEJ220X	FIXED RESISTOR	
	R0919	ERJ2GEJ220X	FIXED RESISTOR	
	R0920	ERJ2GEJ220X	FIXED RESISTOR	
	R0921	ERJ2GEJ220X	FIXED RESISTOR	
	R0922	ERJ2GEJ220X	FIXED RESISTOR	
	R0923	ERJ2GEJ682X	RESISTOR	
	R0924	ERJ2GEJ682X	RESISTOR	
	R0925	ERJ2GEJ220X	FIXED RESISTOR	
	R0926	ERJ2GEJ220X	FIXED RESISTOR	
	R0929	ERJ2GEJ220X	FIXED RESISTOR	
	R0930	ERJ2GEJ220X	FIXED RESISTOR	
	R0933	ERJ2GE0R00X	FIXED RESISTOR	
	R0934	ERJ2GE0R00X	FIXED RESISTOR	
	R0945	ERJ2GEJ220X	FIXED RESISTOR	
	R0946	ERJ2GEJ220X	FIXED RESISTOR	
	R0947	ERJ2GEJ680X	RESISTOR	
	R0948	ERJ2GEJ680X	RESISTOR	
	R0949	ERJ2GEJ680X	RESISTOR	
	R0950	ERJ2GEJ680X	RESISTOR	
	R0951	ERJ2GEJ680X	RESISTOR	
	R0952	ERJ2GEJ680X	RESISTOR	
	R0953	ERJ2GEJ680X	RESISTOR	
	R0954	ERJ2GEJ680X	RESISTOR	
	R0955	ERJ2GEJ472X	RESISTOR	
	R0956	ERJ2GEJ472X	RESISTOR	
	R0957	ERJ2GEJ472X	RESISTOR	
	R0958	ERJ2GEJ472X	RESISTOR	
	R0959	ERJ2GEJ472X	RESISTOR	
	R0960	ERJ2GEJ472X	RESISTOR	
	R0961	ERJ2GEJ472X	RESISTOR	
	R0962	ERJ2GEJ472X	RESISTOR	
	R1100	ERJ2GEJ101X	RESISTOR	
	R1101	ERJ2GEJ101X	RESISTOR	
	R1102	ERJ2GEJ101X	RESISTOR	
	R1103	ERJ2GEJ330X	RESISTOR	
	R1105	ERJ2GEJ101X	RESISTOR	
	R1106	ERJ2GEJ101X	RESISTOR	
	R1107	ERJ2GEJ101X	RESISTOR	
	R1108	ERJ2GEJ101X	RESISTOR	
	R1109	ERJ2GEJ101X	RESISTOR	
	R1146	ERJ2GEJ102X	FIXED RESISTOR	
	R1153	ERJ2GEJ471X	RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R1163	ERJ2GEJ105X	FIXED RESISTOR	
	R1173	ERJ2GEJ331X	RESISTOR	
	R1179	ERJ2GE0R00X	FIXED RESISTOR	
	R1181	ERJ2GE0R00X	FIXED RESISTOR	
	R1182	ERJ2GEJ273X	RESISTOR	
	R1197	ERJ2GE0R00X	FIXED RESISTOR	
	R1200	ERJ2GE0R00X	FIXED RESISTOR	
	R1203	ERJ2GEJ473X	FIXED RESISTOR	
	R1209	ERJ2GEJ472X	RESISTOR	
	R1221	D1BB7151A055	CHIP RESISTOR	
	R1224	ERJ2GEJ103X	FIXED RESISTOR	
	R1225	ERJ2GEJ103X	FIXED RESISTOR	
	R1236	ERJ2GEJ473X	FIXED RESISTOR	
	R1237	ERJ2GEJ102X	FIXED RESISTOR	
	R1243	ERJ2GEJ473X	FIXED RESISTOR	
	R1255	ERJ2GEJ102X	FIXED RESISTOR	
	R1400	ERJ2GEJ103X	FIXED RESISTOR	
	R1401	ERJ2GEJ104X	FIXED RESISTOR	
	R1402	ERJ2GEJ683X	RESISTOR	
	R1403	ERJ2GEJ333X	RESISTOR	
	R1404	ERJ2GEJ683X	RESISTOR	
	R1405	ERJ2GEJ223X	RESISTOR	
	R1406	ERJ2GEJ683X	RESISTOR	
	R1407	ERJ2GEJ473X	FIXED RESISTOR	
	R1409	ERJ2GEJ473X	FIXED RESISTOR	
	R1410	ERJ2GEJ103X	FIXED RESISTOR	
	R1411	ERJ2GEJ104X	FIXED RESISTOR	
	R1422	ERJ2GEJ182X	RESISTOR	
	R2002	ERJ2GEJ102X	FIXED RESISTOR	
	R2003	ERJ2GEJ105X	FIXED RESISTOR	
	R2006	ERJ2GEJ471X	RESISTOR	
	R2007	ERJ2GEJ221X	RESISTOR	
	R2008	ERJ2GEJ471X	RESISTOR	
	R2015	ERJ2GEJ103X	FIXED RESISTOR	
	R2016	ERJ2GEJ103X	FIXED RESISTOR	
	R2017	ERJ2GEJ103X	FIXED RESISTOR	
	R2018	ERJ2GEJ103X	FIXED RESISTOR	
	R2019	D1BB2002A055	CHIP RESISTOR	
	R2020	D1BB2001A055	CHIP RESISTOR	
	R2023	ERJ2GEJ103X	FIXED RESISTOR	
	R2032	ERJ2GE0R00X	FIXED RESISTOR	
	R2047	D1BB2802A055	CHIP RESISTOR	
	R2048	D1BB2802A055	CHIP RESISTOR	
	R2050	D1BB2802A055	CHIP RESISTOR	
	R2051	D1BB2802A055	CHIP RESISTOR	
	R2063	ERJ2GE0R00X	FIXED RESISTOR	
	R2064	ERJ2GE0R00X	FIXED RESISTOR	
	R2092	ERJ2GEJ103X	FIXED RESISTOR	
	R2093	ERJ2GEJ103X	FIXED RESISTOR	
	R2110	ERJ2GEJ101X	RESISTOR	
	R2111	ERJ2GEJ101X	RESISTOR	
	R2114	ERJ2GEJ222X	RESISTOR	
	R2115	ERJ2GEJ222X	RESISTOR	
	R2118	ERJ2GEJ471X	RESISTOR	
	R2119	ERJ2GEJ105X	FIXED RESISTOR	
	R2120	ERJ2GEJ473X	FIXED RESISTOR	
	R2121	ERJ8GEYJ3R3	RESISTOR	
	R2122	ERJ2GEJ102X	FIXED RESISTOR	
	R2123	ERJ8GEYJ3R3	RESISTOR	
	R2124	ERJ2GEJ103X	FIXED RESISTOR	
	R2125	ERJ8GEYJ3R3	RESISTOR	
	R2127	ERJ8GEYJ3R3	RESISTOR	
	R2129	ERJ2GEJ100X	RESISTOR	
	R2132	ERJ2GEJ471X	RESISTOR	
	R2137	ERJ2GEJ100X	RESISTOR	
	R2141	ERJ2GEJ102X	FIXED RESISTOR	
	R2142	ERJ2GEJ222X	RESISTOR	
	R2172	ERJ2GEJ680X	RESISTOR	
	R2190	ERJ2GEJ472X	RESISTOR	
	R2316	EXB28V220JX	RESISTOR	
	R2325	ERJ2GE0R00X	FIXED RESISTOR	
	R2500	ERJ2RKF3000X	RESISTOR	
	R2500	ERJ2RKF3000X	RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R2502	ERJ2GEJ473X	FIXED RESISTOR	
	R2502	ERJ2GEJ473X	FIXED RESISTOR	
	R2504	ERJ2GEJ223X	RESISTOR	
	R2504	ERJ2GEJ223X	RESISTOR	
	R2507	ERJ2GEJ473X	FIXED RESISTOR	
	R2507	ERJ2GEJ473X	FIXED RESISTOR	
	R2508	ERJ2GEJ103X	FIXED RESISTOR	
	R2508	ERJ2GEJ103X	FIXED RESISTOR	
	R2509	ERJ2RKF1101X	CHIP RESISTOR	
	R2509	ERJ2RKF1101X	CHIP RESISTOR	
	R2512	ERJ2GEJ470X	RESISTOR	
	R2512	ERJ2GEJ470X	RESISTOR	
	R2514	ERJ2RKF1802X	RESISTOR	
	R2514	ERJ2RKF1802X	RESISTOR	
	R2515	ERJ2RKF4702X	RESISTOR	
	R2515	ERJ2RKF4702X	RESISTOR	
	R2516	ERJ2GEJ473X	FIXED RESISTOR	
	R2516	ERJ2GEJ473X	FIXED RESISTOR	
	R2517	ERJ2GEJ104X	FIXED RESISTOR	
	R2517	ERJ2GEJ104X	FIXED RESISTOR	
	R2518	ERJ2GEJ103X	FIXED RESISTOR	
	R2518	ERJ2GEJ103X	FIXED RESISTOR	
	R2600	ERJ6GEY0R00	M 00HM,J,1/10W	
	R2601	D1BD1741A044	CHIP RESISTOR	
	R2602	D1BD7151A044	CHIP RESISTOR	
	R2603	D1BD6651A044	CHIP RESISTOR	
	R2604	D1BD1432A044	CHIP RESISTOR	
	R2751	D0GDR00Z0002	CHIP RESISTOR	
	R2752	D0GDR00Z0002	CHIP RESISTOR	
	R2755	ERJ2GEJ473X	FIXED RESISTOR	
	R2756	ERJ2GEJ101X	RESISTOR	
	R2757	ERJ2GEJ101X	RESISTOR	
	R2758	ERJ2GEJ101X	RESISTOR	
	R2759	ERJ2GEJ101X	RESISTOR	
	R2760	ERJ2GEJ101X	RESISTOR	
	R2761	ERJ2GEJ101X	RESISTOR	
	R2762	ERJ2GEJ222X	RESISTOR	
	R2763	ERJ2GEJ473X	FIXED RESISTOR	
	R2764	ERJ2GEJ473X	FIXED RESISTOR	
	R2765	D0GDR00Z0002	CHIP RESISTOR	
	R2774	ERJ2GEJ473X	FIXED RESISTOR	
	R2777	ERJ2GEJ103X	FIXED RESISTOR	
	R2778	ERJ2GEJ103X	FIXED RESISTOR	
	R2779	ERJ3GEYJ751	RESISTOR	
	R2780	ERJ3GEYJ751	RESISTOR	
	R2901	D0GB103JA041	CHIP RESISTOR	
	R2903	D0GBR00Z0002	CHIP RESISTOR	
	R2905	ERJ2GE0R00X	FIXED RESISTOR	
	R2909	ERJ2GE0R00X	FIXED RESISTOR	
	R2915	ERJ2GEJ221X	RESISTOR	
	R2918	ERJ2GEJ101X	RESISTOR	
	R2926	D0GB103JA041	CHIP RESISTOR	
	R2927	ERJ2GE0R00X	FIXED RESISTOR	
	R2930	ERJ2GEJ153X	RESISTOR	
	R2931	D0GBR00Z0002	CHIP RESISTOR	
	R2940	ERJ2GE0R00X	FIXED RESISTOR	
	R2943	ERJ2GE0R00X	FIXED RESISTOR	
	R2944	ERJ2GE0R00X	FIXED RESISTOR	
	R3000	ERJ2GEJ473X	FIXED RESISTOR	
	R3001	ERJ2GEJ473X	FIXED RESISTOR	
	R3004	ERJ2GEJ223X	RESISTOR	
	R3005	ERJ2GEJ223X	RESISTOR	
	R3019	ERJ2GEJ101X	RESISTOR	
	R3021	ERJ2GEJ101X	RESISTOR	
	R3024	ERJ2GEJ104X	FIXED RESISTOR	
	R3025	ERJ2GEJ104X	FIXED RESISTOR	
	R3031	ERJ2GEJ103X	FIXED RESISTOR	
	R3033	ERJ2GEJ221X	RESISTOR	
	R3034	ERJ2GEJ221X	RESISTOR	
	R3043	ERJ2GEJ221X	RESISTOR	
	R3045	ERJ2GEJ221X	RESISTOR	
	R3047	ERJ2GEJ221X	RESISTOR	
	R3048	ERJ2GEJ221X	RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R3049	ERJ2GEJ221X	RESISTOR	
	R3050	ERJ2GEJ221X	RESISTOR	
	R3075	D1BD75R0A044	RESISTOR	
	R3076	D1BD75R0A044	RESISTOR	
	R3078	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3084	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3085	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3086	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3094	ERJ2GE0R00X	FIXED RESISTOR	
	R3097	D1BD75R0A044	RESISTOR	
	R3101	ERJ2GEJ472X	RESISTOR	
	R3103	ERJ2GEJ472X	RESISTOR	
	R3112	ERJ2GE0R00X	FIXED RESISTOR	
	R3113	ERJ2GE0R00X	FIXED RESISTOR	
	R3118	ERJ2GEJ221X	RESISTOR	
	R3119	ERJ2GEJ221X	RESISTOR	
	R3120	ERJ2GEJ331X	RESISTOR	
	R3121	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3123	ERJ2GEJ221X	RESISTOR	
	R3124	ERJ2GEJ472X	RESISTOR	
	R3125	ERJ2GEJ221X	RESISTOR	
	R3128	ERJ2GEJ221X	RESISTOR	
	R3132	ERJ2GEJ820X	RESISTOR	
	R3133	ERJ2GEJ820X	RESISTOR	
	R3134	ERJ2GEJ820X	RESISTOR	
	R3138	ERJ2GEJ820X	RESISTOR	
	R3139	ERJ2GEJ820X	RESISTOR	
	R3140	ERJ2GEJ820X	RESISTOR	
	R3146	ERJ2GEJ331X	RESISTOR	
	R3151	ERJ2GEJ220X	FIXED RESISTOR	
	R3152	ERJ2GEJ220X	FIXED RESISTOR	
	R3167	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3169	ERJ2GEJ104X	FIXED RESISTOR	
	R3182	ERJ2GE0R00X	FIXED RESISTOR	
	R3186	D1BD75R0A044	RESISTOR	
	R3187	D1BD75R0A044	RESISTOR	
	R3188	D1BD75R0A044	RESISTOR	
	R3189	ERJ2GEJ680X	RESISTOR	
	R3190	ERJ2GEJ680X	RESISTOR	
	R3191	ERJ2GEJ680X	RESISTOR	
	R3218	ERJ2GE0R00X	FIXED RESISTOR	
	R3222	ERJ2GE0R00X	FIXED RESISTOR	
	R3223	ERJ2GEJ680X	RESISTOR	
	R3224	ERJ2GE0R00X	FIXED RESISTOR	
	R3225	ERJ2GEJ680X	RESISTOR	
	R3226	ERJ2GEJ472X	RESISTOR	
	R3227	ERJ2GEJ472X	RESISTOR	
	R3230	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3231	ERJ2GE0R00X	FIXED RESISTOR	
	R3232	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3233	ERJ2GE0R00X	FIXED RESISTOR	
	R3234	ERJ6ENF75R0	M 75OHM, 1/10W	
	R3235	ERJ2GE0R00X	FIXED RESISTOR	
	R3236	ERJ2GEJ680X	RESISTOR	
	R3237	ERJ2GEJ680X	RESISTOR	
	R3240	ERJ2GEJ221X	RESISTOR	
	R3287	ERJ2GEJ473X	FIXED RESISTOR	
	R3288	ERJ2GEJ473X	FIXED RESISTOR	
	R3289	ERJ2GEJ220X	FIXED RESISTOR	
	R3308	ERJ2GEJ223X	RESISTOR	
	R3309	ERJ2GEJ223X	RESISTOR	
	R4277	ERJ2GEJ103X	FIXED RESISTOR	
	R4284	ERJ2GEJ103X	FIXED RESISTOR	
	R4285	ERJ2GEJ103X	FIXED RESISTOR	
	R4286	ERJ2GEJ103X	FIXED RESISTOR	
	R4305	ERJ2GEJ473X	FIXED RESISTOR	
	R4306	ERJ2GEJ473X	FIXED RESISTOR	
	R4309	ERJ2GEJ103X	FIXED RESISTOR	
	R4310	ERJ2GEJ102X	FIXED RESISTOR	
	R4311	ERJ2GEJ473X	FIXED RESISTOR	
	R4312	ERJ2GEJ302X	RESISTOR	
	R4315	ERJ2GEJ102X	FIXED RESISTOR	
	R4316	ERJ2GEJ102X	FIXED RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R4317	ERJ2GEJ103X	FIXED RESISTOR	
	R4318	ERJ2GEJ103X	FIXED RESISTOR	
	R4319	ERJ2GEJ473X	FIXED RESISTOR	
	R4320	ERJ2GEJ103X	FIXED RESISTOR	
	R4321	ERJ2GEJ102X	FIXED RESISTOR	
	R4322	ERJ2GEJ103X	FIXED RESISTOR	
	R4323	ERJ2GEJ473X	FIXED RESISTOR	
	R4324	ERJ2GEJ473X	FIXED RESISTOR	
	R4325	ERJ3EKF5111	M5.11KOHM, F, 1/16W	
	R4326	D1BD4871A044	CHIP RESISTOR	
	R4327	ERJ2GEJ302X	RESISTOR	
	R4328	ERJ2GEJ102X	FIXED RESISTOR	
	R4329	ERJ2RKF3901X	RESISTOR	
	R4330	ERJ2GEJ100X	RESISTOR	
	R4363	ERJ2GEJ103X	FIXED RESISTOR	
	R4368	ERJ2GEJ103X	FIXED RESISTOR	
	R4500	ERJ2GEJ103X	FIXED RESISTOR	
	R4501	ERJ2GEJ103X	FIXED RESISTOR	
	R4502	ERJ2GEJ330X	RESISTOR	
	R4503	ERJ2GEJ330X	RESISTOR	
	R4504	ERJ2GEJ102X	FIXED RESISTOR	
	R4505	ERJ2GEJ102X	FIXED RESISTOR	
	R4506	ERJ2GEJ473X	FIXED RESISTOR	
	R4507	ERJ2GEJ473X	FIXED RESISTOR	
	R4524	ERJ2GEJ103X	FIXED RESISTOR	
	R4525	ERJ2GEJ103X	FIXED RESISTOR	
	R4528	ERJ2GEJ103X	FIXED RESISTOR	
	R4529	ERJ2GEJ103X	FIXED RESISTOR	
	R4530	ERJ2GEJ103X	FIXED RESISTOR	
	R4531	ERJ2GEJ103X	FIXED RESISTOR	
	R4532	ERJ2GEJ473X	FIXED RESISTOR	
	R4533	ERJ2GEJ473X	FIXED RESISTOR	
	R4534	ERJ2GEJ473X	FIXED RESISTOR	
	R4538	ERJ2GEJ473X	FIXED RESISTOR	
	R4539	ERJ2GE0R00X	FIXED RESISTOR	
	R4540	ERJ2GEJ473X	FIXED RESISTOR	
	R4541	ERJ2GE0R00X	FIXED RESISTOR	
	R4542	ERJ2GE0R00X	FIXED RESISTOR	
	R4543	ERJ2GE0R00X	FIXED RESISTOR	
	R4546	ERJ2GEJ473X	FIXED RESISTOR	
	R4552	ERJ2GEJ220X	FIXED RESISTOR	
	R4587	D1BB60400001	CHIP RESISTOR	
	R4588	D1BB8060A055	CHIP RESISTOR	
	R4589	D1BB8060A055	CHIP RESISTOR	
	R4592	D1BB8060A055	CHIP RESISTOR	
	R4593	D1BB2201A055	CHIP RESISTOR	
	R4596	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R4597	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R4598	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R4601	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R4604	ERJ2GE0R00X	FIXED RESISTOR	
	R4607	ERJ2GE0R00X	FIXED RESISTOR	
	R4609	ERJ2GEJ122X	RESISTOR	
	R4613	ERJ2GE0R00X	FIXED RESISTOR	
	R4614	ERJ2GE0R00X	FIXED RESISTOR	
	R4615	ERJ2GE0R00X	FIXED RESISTOR	
	R4616	ERJ2GE0R00X	FIXED RESISTOR	
	R4620	ERJ2GEJ473X	FIXED RESISTOR	
	R4623	ERJ2GE0R00X	FIXED RESISTOR	
	R4624	ERJ2GEJ103X	FIXED RESISTOR	
	R4626	D1BB2200A055	CHIP RESISTOR	
	R4627	D1BB2200A055	CHIP RESISTOR	
	R4631	D1BB4990A055	CHIP RESISTOR	
	R4634	D1BB2200A055	CHIP RESISTOR	
	R4635	EXB28V680JX	RESISTOR	
	R4636	ERJ2GEJ680X	RESISTOR	
	R4637	ERJ2GEJ473X	FIXED RESISTOR	
	R4638	ERJ2GEJ680X	RESISTOR	
	R4639	EXB28V680JX	RESISTOR	
	R4640	EXB28V680JX	RESISTOR	
	R4641	ERJ2GEJ473X	FIXED RESISTOR	
	R4642	ERJ2GEJ473X	FIXED RESISTOR	
	R4645	ERJ2GEJ680X	RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R4646	ERJ2GEJ680X	RESISTOR	
	R4648	EXB28V330JX	RESISTOR	
	R4649	EXB28V680JX	RESISTOR	
	R4650	ERJ2GEJ680X	RESISTOR	
	R4651	ERJ2GEJ680X	RESISTOR	
	R4652	ERJ2GEJ473X	FIXED RESISTOR	
	R4656	ERJ2GEJ222X	RESISTOR	
	R4665	ERJ2GEJ473X	FIXED RESISTOR	
	R4666	ERJ2GEJ473X	FIXED RESISTOR	
	R4672	ERJ2GEJ473X	FIXED RESISTOR	
	R4674	ERJ2GEJ103X	FIXED RESISTOR	
	R4677	ERJ2GEJ103X	FIXED RESISTOR	
	R4678	EXB28V680JX	RESISTOR	
	R4679	EXB28V680JX	RESISTOR	
	R4698	ERJ2GEJ104X	FIXED RESISTOR	
	R4699	ERJ2GEJ104X	FIXED RESISTOR	
	R4700	ERJ2GEJ473X	FIXED RESISTOR	
	R4707	ERJ2GEJ473X	FIXED RESISTOR	
	R4736	ERJ2GEJ473X	FIXED RESISTOR	
	R4742	ERJ2GEOR00X	FIXED RESISTOR	
	R4743	ERJ2GEOR00X	FIXED RESISTOR	
	R4799	EXB28V680JX	RESISTOR	
	R4801	ERJ2GEJ473X	FIXED RESISTOR	
	R4806	ERJ2GEJ103X	FIXED RESISTOR	
	R4862	ERJ2GEJ473X	FIXED RESISTOR	
	R4863	ERJ2GEJ103X	FIXED RESISTOR	
	R5407	ERJ2GEJ103X	FIXED RESISTOR	
	R5408	ERJ2GEJ473X	FIXED RESISTOR	
	R5409	ERJ2GEJ103X	FIXED RESISTOR	
	R5410	ERJ2GEJ103X	FIXED RESISTOR	
	R5411	ERJ2RKF5361X	RESISTOR	
	R5412	ERJ2RKF1501X	CHIP RESISTOR	
	R5414	ERJ2RKF6342X	RESISTOR	
	R5415	ERJ2RKF1002X	CHIP RESISTOR	
	R5416	ERJ6GEY0R00	M 00HM, J, 1/10W	
	R5417	ERJ6GEY0R00	M 00HM, J, 1/10W	
	R5421	ERJ2GEJ103X	FIXED RESISTOR	
	R5422	ERJ2GEJ473X	FIXED RESISTOR	
	R5423	ERJ2GEJ563X	RESISTOR	
	R5424	ERJ2GEJ223X	RESISTOR	
	R5425	ERJ2GEJ103X	FIXED RESISTOR	
	R5431	ERJ2GEJ103X	FIXED RESISTOR	
	R5432	ERJ2GEJ473X	FIXED RESISTOR	
	R5433	ERJ2GEJ333X	RESISTOR	
	R5434	ERJ2GEJ223X	RESISTOR	
	R5435	ERJ12YJ471U	M 470OHM, J, 1/2W	
	R5441	ERJ6ENF8202	M 82KOHM, 1/10W	
	R5442	D1BD1602A044	CHIP RESISTOR	
	R5443	ERJ6GEY0R00	M 00HM, J, 1/10W	
	R5449	ERJ2GEOR00X	FIXED RESISTOR	
	R5461	ERJ2GEJ473X	FIXED RESISTOR	
	R5462	ERJ2GEJ274X	RESISTOR	
	R5463	ERJ2GEJ105X	FIXED RESISTOR	
	R5469	ERJ2GEJ203X	CHIP RESISTOR	
	R5470	ERJ2GEJ222X	RESISTOR	
	R5474	ERJ2GEOR00X	FIXED RESISTOR	
	R5475	ERJ2GEJ103X	FIXED RESISTOR	
	R5476	ERJ2GEJ153X	RESISTOR	
	R5479	ERJ2GEOR00X	FIXED RESISTOR	
	R5480	ERJ2GEJ473X	FIXED RESISTOR	
	R5481	ERJ2GEJ101X	RESISTOR	
	R5482	ERJ2GEJ470X	RESISTOR	
	R5483	ERJ2GEJ563X	RESISTOR	
	R5484	ERJ2GEJ203X	CHIP RESISTOR	
	R5485	ERJ2GEJ101X	RESISTOR	
	R5486	ERJ2GEJ103X	FIXED RESISTOR	
	R5487	ERJ2GEJ473X	FIXED RESISTOR	
	R5488	ERJ2GEJ183X	FIXED RESISTOR	
	R5489	ERJ2GEJ333X	RESISTOR	
	R5490	ERJ2GEJ472X	RESISTOR	
	R5491	ERJ6GEYJ331	M 330OHM, J, 1/10W	
	R5492	ERJ2GEJ680X	RESISTOR	
	R5493	ERJ2GEJ223X	RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R5494	ERJ2GEJ683X	RESISTOR	
	R5495	ERJ2GEJ103X	FIXED RESISTOR	
	R5496	ERJ2GEJ473X	FIXED RESISTOR	
	R5497	ERJ2GEJ473X	FIXED RESISTOR	
	R5498	ERJ2GEOR00X	FIXED RESISTOR	
	R5499	ERJ2GEJ102X	FIXED RESISTOR	
	R5603	D1BB2402A055	CHIP RESISTOR	
	R5604	D1BB4752A055	CHIP RESISTOR	
	R5605	D1BB2702A055	CHIP RESISTOR	
	R5610	ERJ2GEJ5R6X	FIXED RESISTOR	
	R5620	ERJ2GEJ680X	RESISTOR	
	R5629	D1BB2702A055	CHIP RESISTOR	
	R5630	D1BB2402A055	CHIP RESISTOR	
	R5631	D1BB5102A055	CHIP RESISTOR	
	R5632	D1BB3002A055	CHIP RESISTOR	
	R5633	D1BB1602A055	CHIP RESISTOR	
	R5634	D1BB2002A055	CHIP RESISTOR	
	R5635	ERJ2GEJ5R6X	FIXED RESISTOR	
	R7101	ERC12ZGK105	S 1MOHM, K, 1/2W	
	R7163	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7201	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7202	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7203	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7204	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7205	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7206	ERJ6GEYJ393	M 39KOHM, J, 1/10W	
	R7208	ERJ8GEYJ100	M 100HM, J, 1/8W	
	R7209	ERJ6GEYJ223	M 22KOHM, J, 1/10W	
	R7210	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7211	ERJ6GEYJ332	M 3.3KOHM, J, 1/10W	
	R7212	ERG12SJ471	METAL OXIDE FILM RESISTOR	
	R7214	ERJ8GEYJ101	M 100OHM, J, 1/8W	
	R7215	ERG12SJ220	METAL OXIDE FILM RESISTOR	
	R7216	ERG12SJ220	METAL OXIDE FILM RESISTOR	
	R7217	ERJ6GEYJ104	M 100KOHM, J, 1/10W	
	R7218	ERX2SJR33P	RESISTOR	
	R7219	ERX2SJR22P	M 0.22OHM, J, 2W	
	R7220	ERX12SJR22P	METAL FILM RESISTOR	
	R7221	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7222	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7223	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7224	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7225	ERJ6ENF1431	FIXED RESISTOR	
	R7226	ERJ6ENF1431	FIXED RESISTOR	
	R7227	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7228	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7229	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7230	ERJ6ENF3903	M 390KOHM, 1/10W	
	R7231	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7232	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7233	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7234	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7235	ERD82TJ101	C 100OHM, J, 1/4W	
	R7301	ERX1SJR47P	METAL FILM RESISTOR	
	R7302	ERJ12YJ474U	RESISTOR	
	R7303	ERG3SJ470P	M 470HM, J, 3W	
	R7304	ERX1SJR68P	M 0.68OHM, J, 1W	
	R7306	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7308	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7309	ERG12SJ330	METAL OXIDE FILM RESISTOR	
	R7310	ERD81TJ100	C 100HM, J, 1/2W	
	R7312	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7317	D0XB106J0003	RESISTOR	
	R7318	ERJ6GEYJ683	M 68KOHM, J, 1/10W	
	R7401	ERF2AJ100P	RESISTOR	
	R7402	ERJ12YJ105U	FIXED RESISTOR	
	R7403	ERX12SJ6R8V	RESISTOR	
	R7404	ERX12SJ6R8V	RESISTOR	
	R7405	ERG12SJ220	METAL OXIDE FILM RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R7406	ERJ6GEYJ104	M 100KOHM, J, 1/10W	
	R7407	ERDS1TJ100	C 100OHM, J, 1/2W	
	R7409	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7410	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7503	ERG2SJ102H	M 1KOHM, J, 2W	
	R7505	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7506	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7507	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7508	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7509	ERJ6ENF2201	M 2.2KOHM, 1/10W	
	R7510	ERJ6ENF3300	M 330OHM, 1/10W	
	R7511	ERJ6ENF3301	M 3.3KOHM, 1/10W	
	R7512	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7513	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7522	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7523	ERG2SJ102H	M 1KOHM, J, 2W	
	R7524	ERG2SJ102H	M 1KOHM, J, 2W	
	R7601	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7602	ERJ6GEYJ151	M 150OHM, J, 1/10W	
	R7603	ERJ6ENF4700	M 470OHM, 1/10W	
	R7604	ERJ6ENF5601	M 5.6KOHM, 1/10W	
	R7605	ERJ6ENF4701	M 4.7KOHM, 1/10W	
	R7606	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7609	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7610	ERJ6GEYJ224	M 220KOHM, J, 1/10W	
	R7611	ERJ6GEYJ474	M 470KOHM, J, 1/10W	
	R7612	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7614	ERJ6GEYJ221	M 220OHM, J, 1/10W	
	R7615	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7616	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7617	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7701	ERDS2TJ101	C 100OHM, J, 1/4W	
	R7702	ERJ12YJ154U	M 150KOHM, J, 1/2W	
	R7703	ERJ12YJ154U	M 150KOHM, J, 1/2W	
	R7704	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7705	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7706	ERJ6GEYJ124	M 120KOHM, J, 1/10W	
	R7707	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7708	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7709	ERJ6GEYJ153	M 15KOHM, J, 1/10W	
	R7710	ERJ6GEYJ334	M 330KOHM, J, 1/10W	
	R7711	ERJ6GEYJ154	M 150KOHM, J, 1/10W	
	R7712	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7713	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7714	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7715	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7716	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7717	ERJ6GEYJ153	M 15KOHM, J, 1/10W	
	R7718	ERJ6GEYJ823	M 82KOHM, J, 1/10W	
	R7719	ERJ6GEYJ223	M 22KOHM, J, 1/10W	
	R7720	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7721	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7722	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7723	ERJ8GEYJ100	M 10OHM, J, 1/8W	
	R7724	ERJ6GEYJ823	M 82KOHM, J, 1/10W	
	R7725	ERJ6GEYJ223	M 22KOHM, J, 1/10W	
	R7726	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7727	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7728	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7729	ERJ6GEYJ100	M 10OHM, J, 1/10W	
	R7735	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7800	ERJ6GEY0R00	M 0OHM, J, 1/10W	
	R7801	ERJ6GEYJ220	M 22OHM, J, 1/10W	
	R7802	ERJ6GEYJ821	M 820OHM, J, 1/10W	
	R7803	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7804	ERJ6GEYJ220	M 22OHM, J, 1/10W	
	R7805	ERJ6GEYJ821	M 820OHM, J, 1/10W	
	R7806	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7807	ERJ6GEYJ220	M 22OHM, J, 1/10W	
	R7808	ERJ6GEYJ821	M 820OHM, J, 1/10W	
	R7809	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7810	ERJ6GEYJ220	M 22OHM, J, 1/10W	
	R7811	ERJ6GEYJ821	M 820OHM, J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R7812	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7813	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7814	ERJ6GEYJ1R0	M 1OHM, J, 1/10W	
	R7815	ERJ6GEYJ273	M 27KOHM, J, 1/10W	
	R7816	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	
	R7817	ERJ6GEYJ222	M 2.2KOHM, J, 1/10W	
	R7818	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7819	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7841	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7842	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7843	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7844	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7845	ERJ6GEYJ1R0	M 1OHM, J, 1/10W	
	R7847	ERJ6GEYJ183	M 18KOHM, J, 1/10W	
	R7851	ERG2SJ330H	M 33OHM, J, 2W	
	R7852	ERG2SJ330H	M 33OHM, J, 2W	
	R7855	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7857	ERJ6GEYJ104	M 100KOHM, J, 1/10W	
	R7858	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7860	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7861	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7862	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7863	ERJ6ENF1003	M 100KOHM, 1/10W	
	R7864	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7865	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7866	ERJ6GEYJ223	M 22KOHM, J, 1/10W	
	R7867	ERJ6GEYJ124	M 120KOHM, J, 1/10W	
	R7868	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7869	ERJ6GEYJ393	M 39KOHM, J, 1/10W	
	R7870	ERJ6GEYJ334	M 330KOHM, J, 1/10W	
	R7871	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7874	ERJ6ENF1003	M 100KOHM, 1/10W	
	R7875	ERJ6ENF4703	CHIP RESISTOR	
	R7876	ERJ6GEYJ474	M 470KOHM, J, 1/10W	
	R7877	DOGD105JA036	FIXED RESISTOR	
	R7878	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7879	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7880	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7881	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7883	ERJ6GEYJ104	M 100KOHM, J, 1/10W	
	R7884	ERJ6GEYJ102	M 1KOHM, J, 1/10W	
	R7885	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7886	ERJ6GEYJ183	M 18KOHM, J, 1/10W	
	R7888	ERJ6GEYJ472	M 4.7KOHM, J, 1/10W	
	R7889	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7890	ERJ6GEYJ101	M 100OHM, J, 1/10W	
	R7891	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7892	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7893	ERJ6GEYJ104	M 100KOHM, J, 1/10W	
	R7894	ERJ6GEYJ223	M 22KOHM, J, 1/10W	
	R7895	ERJ6GEYJ223	M 22KOHM, J, 1/10W	
	R7896	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	
	R7897	ERJ6GEYJ682	M 6.8KOHM, J, 1/10W	
	R7898	ERJ6GEY0R00	M 0OHM, J, 1/10W	
	R7903	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7904	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7905	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7906	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7907	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7908	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7909	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7910	ERJ6ENF1502	M 15KOHM, 1/10W	
	R7911	ERJ6ENF3902	M 39KOHM, 1/10W	
	R7912	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7913	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7914	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7915	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7916	ERJ6GEYJ473	M 47KOHM, J, 1/10W	
	R7917	ERJ6GEYJ103	M 10KOHM, J, 1/10W	
	R7918	ERJ6GEYJ105	M 1MOHM, J, 1/10W	
	R7925	ERJ6ENF4701	M 4.7KOHM, 1/10W	
	R7926	ERJ6ENF3902	M 39KOHM, 1/10W	
	R8001	ERJ2GEJ221X	RESISTOR	


Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R8002	ERJ2GEJ560X	RESISTOR	
	R8004	D1BB2402A055	CHIP RESISTOR	
	R8005	D1BB1002A055	CHIP RESISTOR	
	R8006	D1BB6801A055	CHIP RESISTOR	
	R8023	ERJ2GE0R00X	FIXED RESISTOR	
	R8024	ERJ2GE0R00X	FIXED RESISTOR	
	R8025	ERJ2GE0R00X	FIXED RESISTOR	
	R8026	ERJ2GE0R00X	FIXED RESISTOR	
	R8027	ERJ2GE0R00X	FIXED RESISTOR	
	R8028	ERJ2GE0R00X	FIXED RESISTOR	
	R8029	ERJ2GE0R00X	FIXED RESISTOR	
	R8030	ERJ2GEJ101X	RESISTOR	
	R8031	D1BB2700A055	CHIP RESISTOR	
	R8032	D1BB2700A055	CHIP RESISTOR	
	R8035	ERJ2GE0R00X	FIXED RESISTOR	
	R8036	D0GBR00Z0002	CHIP RESISTOR	
	R8039	ERJ2GE0R00X	FIXED RESISTOR	
	R8056	ERJ2GEJ470X	RESISTOR	
	R8057	ERJ2GEJ470X	RESISTOR	
	R8058	ERJ2GEJ470X	RESISTOR	
	R8059	ERJ2GEJ470X	RESISTOR	
	R8060	ERJ2GEJ470X	RESISTOR	
	R8061	ERJ2GEJ470X	RESISTOR	
	R8062	ERJ2GEJ470X	RESISTOR	
	R8063	ERJ2GEJ470X	RESISTOR	
	R8064	ERJ2GEJ470X	RESISTOR	
	R8065	ERJ2GEJ470X	RESISTOR	
	R8066	ERJ2GEJ470X	RESISTOR	
	R8067	ERJ2GEJ470X	RESISTOR	
	R8068	ERJ2GEJ470X	RESISTOR	
	R8069	ERJ2GEJ470X	RESISTOR	
	R8070	ERJ2GEJ470X	RESISTOR	
	R8071	ERJ2GEJ470X	RESISTOR	
	R8072	ERJ2GEJ470X	RESISTOR	
	R8073	ERJ2GEJ470X	RESISTOR	
	R8074	ERJ2GEJ221X	RESISTOR	
	R8075	ERJ2GEJ470X	RESISTOR	
	R8076	ERJ2GEJ470X	RESISTOR	
	R8077	ERJ2GEJ470X	RESISTOR	
	R8078	ERJ2GEJ470X	RESISTOR	
	R8079	ERJ2GE0R00X	FIXED RESISTOR	
	R8080	ERJ2GE0R00X	FIXED RESISTOR	
	R8081	ERJ2GEJ103X	FIXED RESISTOR	
	R8082	ERJ2RKF75R0X	RESISTOR	
	R8083	ERJ2GEJ301X	RESISTOR	
	R8084	ERJ2GE0R00X	FIXED RESISTOR	
	R8086	ERJ2GEJ104X	FIXED RESISTOR	
	R8087	ERJ2GEJ103X	FIXED RESISTOR	
	R8090	ERJ2GEJ103X	FIXED RESISTOR	
	R8091	ERJ2GEJ101X	RESISTOR	
	R8093	ERJ2GEJ470X	RESISTOR	
	R8095	ERJ2GEJ103X	FIXED RESISTOR	
	R8097	ERJ2GEJ221X	RESISTOR	
	R8098	ERJ2GEJ103X	FIXED RESISTOR	
	R8099	ERJ2GEJ103X	FIXED RESISTOR	
	R8100	ERJ2GEJ470X	RESISTOR	
	R8101	ERJ2GEJ103X	FIXED RESISTOR	
	R8106	ERJ2GEJ202X	RESISTOR	
	R8107	ERJ2GEJ101X	RESISTOR	
	R8108	ERJ2GEJ223X	RESISTOR	
	R8412	ERJ2GEJ103X	FIXED RESISTOR	
	R8471	ERJ2GEJ103X	FIXED RESISTOR	
	R8472	EXB2HV103JV	RESISTOR	
	R8474	EXB28V103JX	RESISTOR	
	R8475	EXB28V103JX	RESISTOR	
	R8501	ERJ2GEJ101X	RESISTOR	
	R8502	ERJ2GEJ331X	RESISTOR	
	R8503	ERJ2GEJ331X	RESISTOR	
	R8504	ERJ2GEJ331X	RESISTOR	
	R8506	ERJ2GEJ331X	RESISTOR	
	R8508	D1BB91R0A055	CHIP RESISTOR	
	R8509	D1BB91R0A055	CHIP RESISTOR	
	R8510	D1BB91R0A055	CHIP RESISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R8556	ERJ2GEJ103X	FIXED RESISTOR	
	R8564	ERJ2GEJ103X	FIXED RESISTOR	
	R8566	ERJ2GE0R00X	FIXED RESISTOR	
	R8603	ERJ2GEJ472X	RESISTOR	
	R8605	ERJ2GEJ680X	RESISTOR	
	R8610	ERJ2GEJ680X	RESISTOR	
	R8611	ERJ2GEJ680X	RESISTOR	
	R8612	ERJ2GEJ680X	RESISTOR	
	R8613	ERJ2GEJ680X	RESISTOR	
	R8614	ERJ2GEJ680X	RESISTOR	
	R8615	ERJ2GEJ680X	RESISTOR	
	R8616	ERJ2GEJ680X	RESISTOR	
	R8617	ERJ2GEJ680X	RESISTOR	
	R8657	ERJ2GEJ103X	FIXED RESISTOR	
	R8658	ERJ2GEJ220X	FIXED RESISTOR	
	R8660	ERJ2GE0R00X	FIXED RESISTOR	
	R8674	EXB2HV103JV	RESISTOR	
	R8683	ERJ2GEJ680X	RESISTOR	
	R8703	ERJ2GEJ680X	RESISTOR	
	R8710	ERJ2GEJ680X	RESISTOR	
	R8711	ERJ2GEJ103X	FIXED RESISTOR	
	R8712	ERJ2GEJ103X	FIXED RESISTOR	
	R8751	ERJ2GEJ103X	FIXED RESISTOR	
	R8802	ERJ2GEJ680X	RESISTOR	
	R8803	ERJ2GEJ680X	RESISTOR	
	R8804	ERJ2GEJ680X	RESISTOR	
	R8805	ERJ2GEJ680X	RESISTOR	
	R8806	ERJ2GEJ680X	RESISTOR	
	R8807	ERJ2GEJ680X	RESISTOR	
	R8808	ERJ2GEJ680X	RESISTOR	
	R8855	ERJ2GEJ680X	RESISTOR	
	R8856	ERJ2GEJ680X	RESISTOR	
	R8857	ERJ2GEJ680X	RESISTOR	
	R8858	ERJ2GEJ680X	RESISTOR	
	R8859	ERJ2GEJ680X	RESISTOR	
	R8860	ERJ2GEJ680X	RESISTOR	
	R8861	ERJ2GEJ103X	FIXED RESISTOR	
	R8862	ERJ2GEJ680X	RESISTOR	
	R8863	ERJ2GEJ680X	RESISTOR	
	R8864	ERJ2GEJ680X	RESISTOR	
	R8865	EXB2HV680JV	RESISTOR	
	R8866	EXB2HV680JV	RESISTOR	
	R8867	EXB2HV680JV	RESISTOR	
	R8868	ERJ2GEJ680X	RESISTOR	
	R8871	ERJ2GEJ103X	FIXED RESISTOR	
	R8873	ERJ2GEJ103X	FIXED RESISTOR	
	R8875	ERJ2GEJ103X	FIXED RESISTOR	
	R8877	ERJ2GEJ680X	RESISTOR	
	R8878	ERJ2GEJ680X	RESISTOR	
	R8879	ERJ2GEJ680X	RESISTOR	
	R8880	ERJ2GEJ680X	RESISTOR	
	R8882	ERJ2GEJ680X	RESISTOR	
	R8883	ERJ2GEJ680X	RESISTOR	
	R8884	ERJ2GEJ680X	RESISTOR	
	R8885	ERJ2GEJ680X	RESISTOR	
	R8886	ERJ2GEJ680X	RESISTOR	
	R8887	ERJ2GEJ680X	RESISTOR	
	R8888	ERJ2GEJ680X	RESISTOR	
	R8889	ERJ2GEJ680X	RESISTOR	
	R8891	ERJ2GEJ680X	RESISTOR	
	R8892	ERJ2GEJ680X	RESISTOR	
	R8894	ERJ2GEJ680X	RESISTOR	
	R8896	ERJ2GE0R00X	FIXED RESISTOR	
	R8898	ERJ2GEJ103X	FIXED RESISTOR	
	R8900	ERJ2GEJ680X	RESISTOR	
	R8901	ERJ2GEJ680X	RESISTOR	
	R8904	ERJ2GEJ103X	FIXED RESISTOR	
	R8905	ERJ2GEJ103X	FIXED RESISTOR	
	R8906	ERJ2GEJ103X	FIXED RESISTOR	
	R8907	ERJ2GEJ103X	FIXED RESISTOR	
	R8908	ERJ2GEJ103X	FIXED RESISTOR	
	R8909	ERJ2GEJ103X	FIXED RESISTOR	
	R8910	ERJ2GEJ103X	FIXED RESISTOR	


Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R8927	ERJ2GE0R00X	FIXED RESISTOR	
	R8935	ERJ2GEJ103X	FIXED RESISTOR	
	R8947	ERJ2GEJ680X	RESISTOR	
	R8952	EXB2HV680JV	RESISTOR	
	R8953	EXB2HV680JV	RESISTOR	
	R8954	ERJ2GEJ680X	RESISTOR	
	R8957	ERJ2GEJ103X	FIXED RESISTOR	
	R8958	ERJ2GEJ103X	FIXED RESISTOR	
	R8959	ERJ2GEJ680X	RESISTOR	
	R8960	ERJ2GEJ680X	RESISTOR	
	R8963	ERJ2GEJ103X	FIXED RESISTOR	
		TRANSFORMERS		
⚠	T7202	G4DYA0000157	SWITCHING TRANSFORMER	
⚠	T7301	G4DYA0000158	TRANSFORMER	
⚠	T7401	G4DYA0000159	TRANSFORMER	
⚠	T7801	G4FYC0000001	HIGH VOLTAGE TRANS-FORMER	
⚠	T7802	G4FYC0000001	HIGH VOLTAGE TRANS-FORMER	
⚠	T7803	G4BYA0000022	PULSE TRANSFORMER	
		OTHERS		
	A01	K1KA04B00273	CONNECTOR	
	A03	K1KY23AA0607	CONNECTOR	
	A10	K1KA08B00270	CONNECTOR	
	A11	K1KB30B00044	CONNECTOR	
	A12	K1KA04AA0190	CONNECTOR	
	A20	K1KA05A00466	CONNECTOR	
	CF7101	D4CAY8R0A010	COIL	
	CN0100	K1KA08AA0714	CONNECTOR	
⚠	F7101	K5D502BNA005	FUSE	
	FL4201	EXC28CE201U	CHOKE COIL	
	FL4202	EXC28CE201U	CHOKE COIL	
	FL4203	EXC28CE201U	CHOKE COIL	
	JK3001	K1FY315A0003	CONNECTOR	
	JK3100A	K2HA9YYA0002	AV TERMINAL	
	JK3107	K4AK16B00005	AV TERMINAL	
	JK4500	K1FY119D0006	CONNECTOR	
	JK4501	K1FY119D0006	CONNECTOR	
	JK8302	K1NA09E00080	CARD READER	
	JS1000	ERJ2GE0R00X	FIXED RESISTOR	
	K01	K1KA04BA0047	CONNECTOR	
	LF7101	G0B103H00009	CHOKE COIL	
	LF7102	G0B103H00009	CHOKE COIL	
	P1	K1KA02B00295	CONNECTOR	
	P2	K1KY23AA0606	CONNECTOR	
	P3	K1KA04AA0193	CONNECTOR	
	P4	K1KA05AA0193	CONNECTOR	
	P5	K1KY02B00011	CONNECTOR	
	P6	K1KY02B00011	CONNECTOR	
⚠	PA4201	ERBSE2R50U	FUSE	
⚠	PA5420	ERBSE5R00U	FUSE	
⚠	PA5430	ERBSE2R50U	FUSE	
⚠	PA5601	ERBSE2R50U	FUSE	
	PC7301	B3PAA0000363	PHOTO COUPLER	
	PC7401	B3PAA0000363	PHOTO COUPLER	
	PC7701	B3PAA0000363	PHOTO COUPLER	
	PC7702	B3PAA0000363	PHOTO COUPLER	
⚠	RL7101	K6B1AYY00048	AC RELAY	
⚠	RL7102	K6B1AYY00048	AC RELAY	
⚠	RL7103	K6B1AYY00048	AC RELAY	
	RM2500	B3RAD0000168	PHOTO DETECTOR	
	RM2500	B3RAD0000168	PHOTO DETECTOR	
	SN2500	B3JB00000046	PHOTO DETECTOR	
	SN2500	B3JB00000046	PHOTO DETECTOR	
⚠	SW2600	ESB33535XFD	POWER SWITCH	
	SW2601	K0H1BA000445	CONNECTOR	
	SW2602	K0H1BA000445	CONNECTOR	
	SW2603	K0H1BA000445	CONNECTOR	
	SW2604	K0H1BA000445	CONNECTOR	
	SW2605	K0H1BA000445	CONNECTOR	
⚠	TU2901A	ENG39E04GRF	TUNER	
	V10	K1KA07B00135	CONNECTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	V10	K1KA07B00135	CONNECTOR	
	VR7851	EVMEASA00B14	TRIMMER POTENTIOMETER	
	X1100	H0J100500035	CRYSTAL OSC	
	X2010	H0J245500089	CRYSTAL OSC	
	X8001	H0J270500120	CRYSTAL OSC	
	ZA7001	K4AD01A00002	CONNECTOR	
	ZA7002	K4AD01A00002	CONNECTOR	

Model No. : TH-L32X10R Parts Location

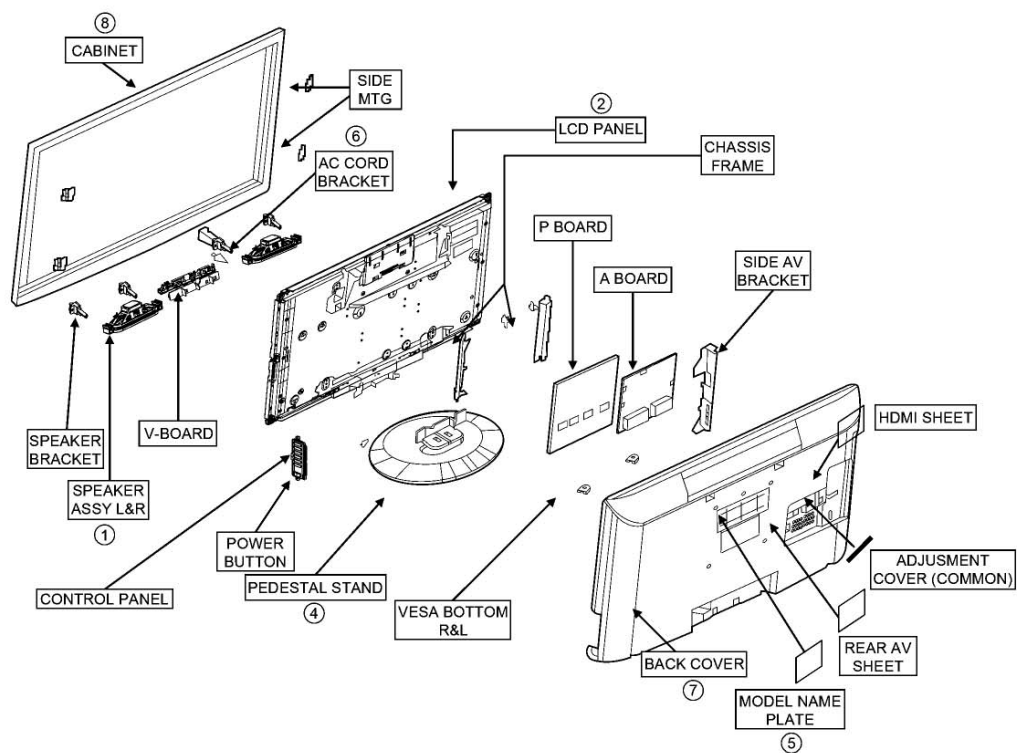

Model No. : TH-L32X10R Packing Exploded View

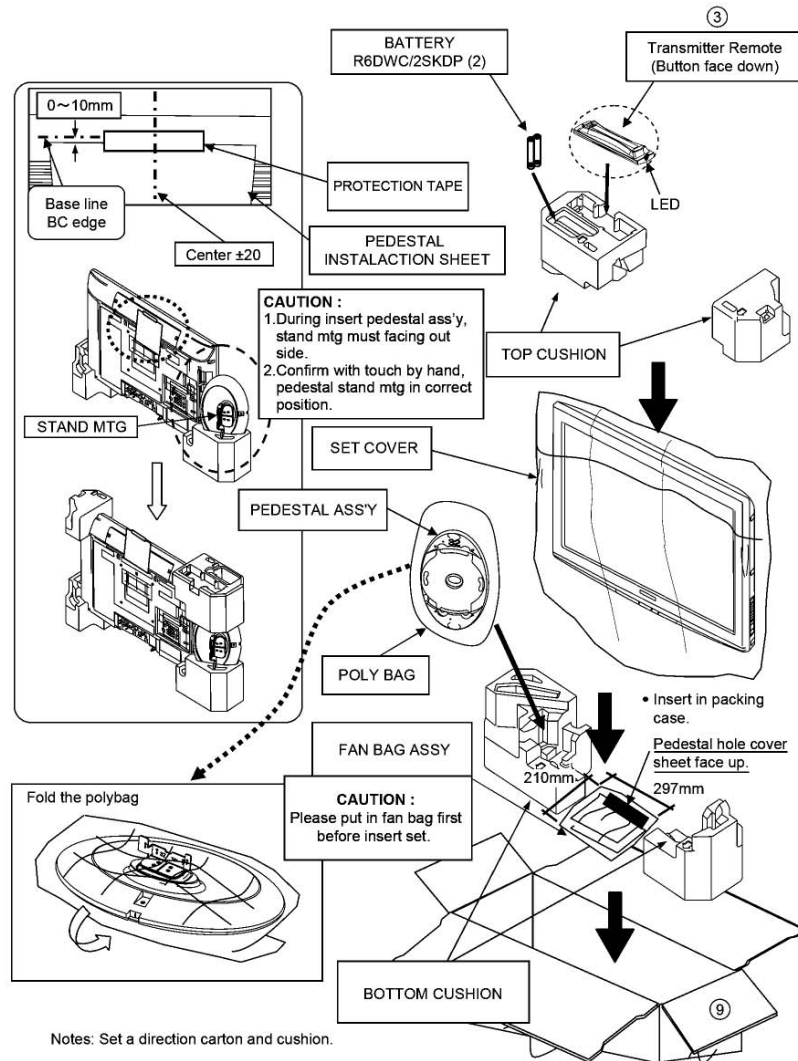

Model No. : TH-L32X10R Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		K1PY30YA0010	LVDS CABLE		
		K2CQ2YY00036	AC CORD		
	1	L0AA14B00002	SPEAKER		
	2	L5EDD8Q00058	LCD PANEL		
	3	N2QAYB000370	REMOTE CONTROL		
	4	TBL4GA0014	PEDESTAL ASSY		
		TBM4GA002	PANASONIC LOGO SHEET		
	5	TBM4GC234	MODEL NAME PLATE		
		TBM4GU029	REAV AV INDICATION SHEET		
		TBM4GU032	HDMI SHEET		
		TBM4GU041	SIDE AV IND. SHEET		
		TBX4GA01101A	CONTROL BUTTON		
		TBX4GA01201A	POWER BUTTON		
		TKK4G8611	COVER		
		TKK4GC5010	LED PANEL		
		TKP4GA02502A	SIDE AV BRACKET		
		TKP4GA02601	CONTROL PANEL BRACKET		
		TKX4GA01001	SPEAKER BRACKET		
		TKX4GA01301	LED SHADE - RIB		
	6	TMX4GX001	AC CORD BRACKET		
	NLA	TZT/A10PKN	A PRINT ASSEMBLY		
	NLA	TNP4G455AJ	P BOARD		
	NLA	TNPA4834BH	V BOARD		
	NLA	TNPA4901BH	K BOARD		
		TPD4GA0092-2	TOP CUSHION		
		TPD4GA0093-1	BOTTOM CUSHION		
		TPE4GH005	POLYBAG		
		TPE4GH014	SET COVER		
		TQZ4GB161	FAN BAG ASSY		
	7	TTU4GA0205	BACK COVER ASSY		
	8	TTY4GA0061	CABINET ASSEMBLY		
	9	TXFPC010NFW	PACKING CASE ASSY		
		TXFPE01RLTU	CLEANING CLOTH ASSY		
		XTB4+18JFJK	SCREW		