


Service Manual

LED TV

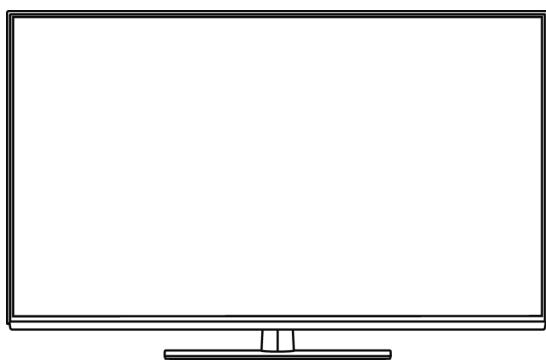

Model No. TH-L42E6S

Chassis: LA41

Destination: SINGAPORE

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions -----	3	5.2.2. Display of SOS History -----	10
1.1. General Guidelines-----	3	5.2.3. POWER ON TIME/COUNT-----	10
1.1.1. Leakage Current Cold Check-----	3	5.2.4. Exit-----	10
1.1.2. Leakage Current Hot Check (See Figure 1.)-----	3	5.3. Technical Descriptions -----	10
2 Warning -----	4	5.3.1. Specification of KEY for DTCP-IP, WMDRM and Widevine-----	10
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices-----	4	5.3.2. General information:-----	10
2.2. About lead free solder (PbF)-----	5	5.3.3. Replacement of ICs:-----	10
3 Service Navigation -----	6	5.3.4. DRV Check - USBHDD Check-----	11
3.1. Service Hint-----	6	5.3.5. Hotel Mode-----	11
4 Specifications -----	7	6 Troubleshooting Guide -----	12
5 Service Mode -----	9	6.1. Check of the IIC bus lines-----	12
5.1. How to enter into Service Mode -----	9	6.1.1. How to access -----	12
5.1.1. Purpose -----	9	6.1.2. Self-check indication only: -----	12
5.1.2. Key command -----	9	6.1.3. Self-check indication and forced to factory shipment setting: -----	12
5.1.3. How to exit-----	9	6.1.4. Exit-----	12
5.1.4. Contents of adjustment mode -----	9	6.1.5. Screen display -----	12
5.2. SRV-TOOL -----	10	6.1.6. Check Point-----	12
5.2.1. How to access-----	10	6.2. Power LED Blinking timing chart-----	13

6.3. LCD Panel test mode -----	13
6.4. No Power-----	13
7 Disassembly and Assembly Instructions-----	14
7.1. Panel Assembly -----	14
7.2. Rear Panel Assembly -----	16
7.3. LCD Panel Fixing & Handling Method -----	17
7.4. A_Print Assembly -----	18
7.5. P_Print Assembly -----	19
7.6. Screw Assembly-----	20
7.7. EMI-----	21
7.8. Stand Mounting Assembly -----	22
7.9. Back Cover Assembly 1 -----	23
7.10. Back Cover Assembly 2 -----	24
7.11. Handling SPEC -----	25
8 Measurements and Adjustments -----	26
8.1. Voltage chart of A-board-----	26
8.2. Voltage chart of P-board-----	26
9 Block Diagram -----	27
9.1. Main Block Diagram -----	27
9.2. Detailed Block Diagram (1/2)-----	28
9.3. Detailed Block Diagram (2/2)-----	29
10 Wiring Connection Diagram -----	30
10.1. Wire Dressing -----	30
11 Schematic Diagram-----	31
12 Printed Circuit Board -----	48
13 Exploded View and Replacement Parts List -----	54
13.1. Exploded View and Mechanical Replacement Parts List -----	54

1 Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.
4. When conducting repairs and servicing, do not attempt to modify the equipment, its parts or its materials.
5. When wiring units (with cables, flexible cables or lead wires) are supplied as repair parts and only one wire or some of the wires have been broken or disconnected, do not attempt to repair or re-wire the units. Replace the entire wiring unit instead.
6. When conducting repairs and servicing, do not twist the Faston connectors but plug them straight in or unplug them straight out.

1.1.1. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be 100 Mohm and over. When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

1.1.2. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5kohm, 10 watts resistor, in parallel with a 0.15 μ F capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

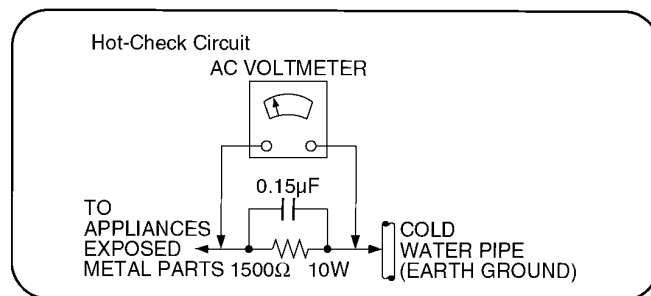


Figure 1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor [chip] components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as [anti-static (ESD protected)] can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise ham less motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol **PbF** stamped on the back of PCB.


Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

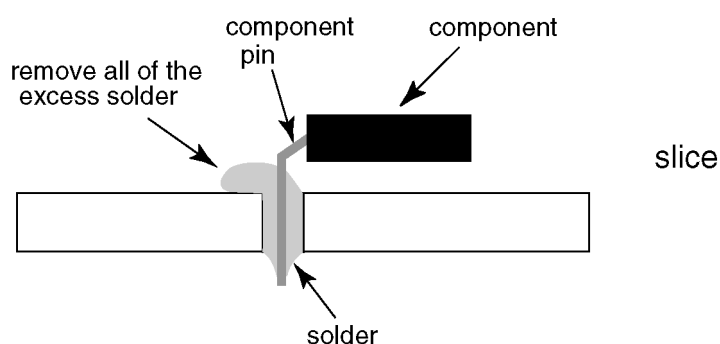

3 Service Navigation

3.1. Service Hint

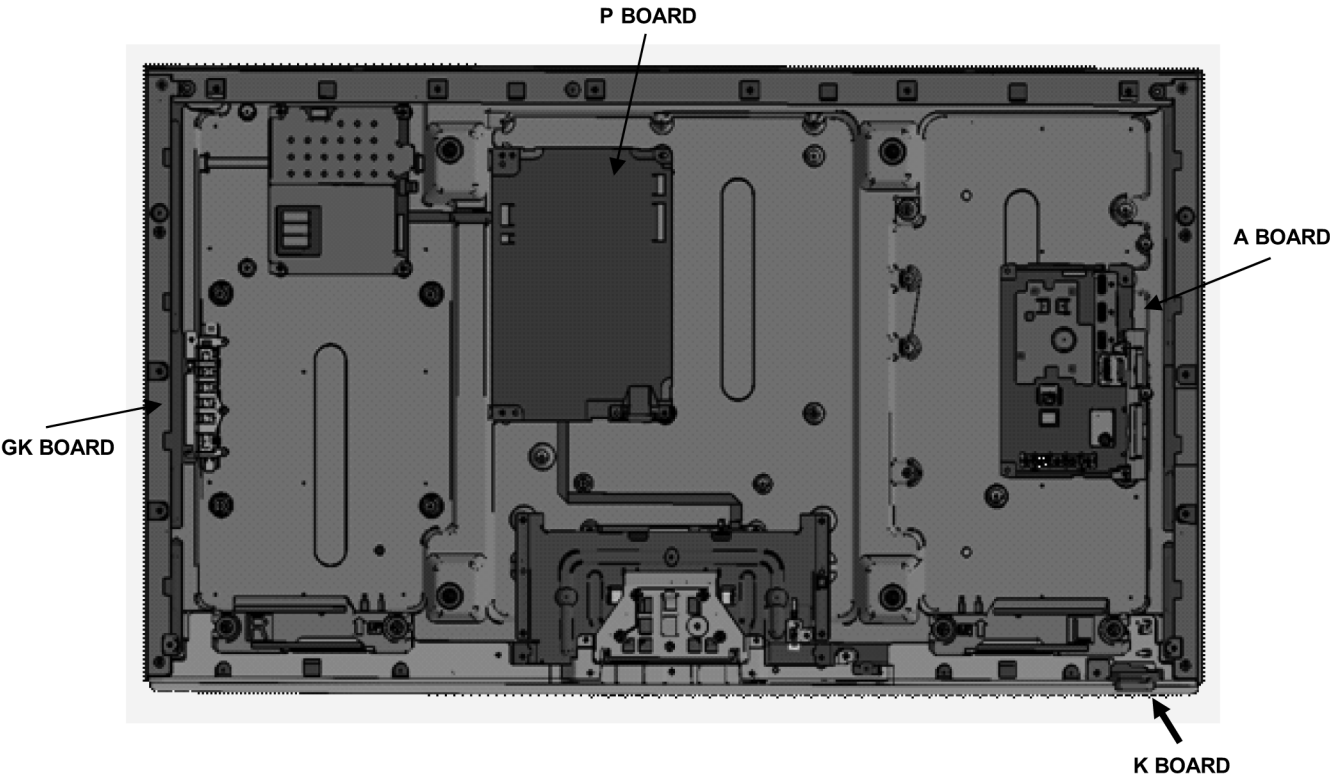

Board Name	Main Device	Remarks
A BOARD	TUN, OFDM, ADV, LD4, STBY EEP	Repairable
P BOARD	Power Supply	Repairable
GK BOARD	Function SW for LGD panel	Repairable
K BOARD	LED/RM/CATS	Repairable

4 Specifications

Power Source	AC 110 - 240 V, 50 / 60 Hz		
Power			
Rating	73 W		
Standby power consumption	0.2 W		
Visible screen size (diagonal)	107 W		
Display resolution	1,920 (W) × 1,080 (H)		
Panel	LED backlight Liquid Crystal Display		
Dimensions (W × H × D)	957 mm × 619 mm × 217 mm (With Pedestal)		
	957 mm × 564 mm × 49 mm (TV only)		
Mass	15.0 kg Net (With Pedestal)		
	13.5 kg Net (TV only)		
Connection Terminals			
AV1 IN	VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)
(COMPONENT / VIDEO)	AUDIO L-R	RCA PIN Type × 2	0.5 V [rms]
	Y	1.0 V [p-p] (including synchronization)	
	P _B /C _B , P _R /C _R	±0.35 V [p-p]	
HDMI 1 / 2 / 3 input	TYPE A Connectors		
	HDMI 1 / 3: Content Type, Deep Colour		
	HDMI 2: Content Type, Audio Return Channel, Deep Colour		
	• This TV supports 'HDAVI Control 5' function.		
ETHERNET	10BASE-T / 100BASE-TX		
USB 1 / 2	USB 2.0		DC 5 V, Max. 500 mA
DIGITAL AUDIO OUT	PCM / Dolby Digital / DTS, Fibre optic		
Sound			
Speaker	(90 mm × 22 mm) × 2, 8Ω		
Audio output	20 W (10 W + 10 W)		
Receiving Systems / Band name			
	17 SYSTEMS		FUNCTIONS
	1 PAL B, G, H		
	2 PAL I		
	3 PAL D, K		Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders
	4 SECAM B, G		
	5 SECAM D, K		
	6 SECAM K1		
	7 NTSC M (NTSC 3.58 / 4.5 MHz)		
	8 NTSC 4.43 / 5.5 MHz		Playback from Special VCR's or DVD
	9 NTSC 4.43 / 6.0 MHz		
	10 NTSC 4.43 / 6.5 MHz		
	11 NTSC 3.58 / 5.5 MHz		
	12 NTSC 3.58 / 6.0 MHz		
	13 NTSC 3.58 / 6.5 MHz		
	14 SECAM I		
	15 PAL 60 Hz / 5.5 MHz		Playback from Special Disc Players and Special VCR's or DVD
	16 PAL 60 Hz / 6.0 MHz		
	17 PAL 60 Hz / 6.5 MHz		
Receiving Channels (Analogue TV)			
VHF BAND	2 - 12 (PAL / SECAM B, K1)		
	0 - 12 (PAL B AUST.)		
	1 - 9 (PAL B N.Z.)		
	1 - 12 (PAL / SECAM D)		
	1 - 12 (NTSC M Japan)		
	2 - 13 (NTSC M USA)		
UHF BAND	21 - 69 (PAL G, H, I / SECAM G, K, K1)		
	28 - 69 (PAL B AUST.)		
	13 - 57 (PAL D, K)		
	13 - 62 (NTSC M Japan)		
	14 - 69 (NTSC M USA)		
CATV	S1 - S20 (OSCAR)		
	1 - 125 (USA CATV)		
	C13 - C49 (JAPAN)		
	S21 - S41 (HYPER)		
	Z1 - Z37 (CHINA)		
	5A, 9A (AUST.)		

Aerial input	VHF / UHF
Operating Conditions	Temperature : 0 °C - 40 °C Humidity : 20 % - 80 % RH (non-condensing)
Built-in wireless LAN	Standard compliance and Frequency range*: IEEE802.11a/n 5.15 GHz - 5.35 GHz, 5.47 GHz - 5.85 GHz IEEE802.11b/g/n 2.40 GHz - 2.4835 GHz Security: WPA2-PSK (TKIP/AES) WPA-PSK (TKIP/AES) WEP (64 bit/128 bit)

* The frequency and channel differ depending on the country.

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- For the information of the open source software, refer to [eHELP] (Support > Licence).


5 Service Mode

5.1. How to enter into Service Mode

5.1.1. Purpose

After exchange parts, check and adjust the contents of adjustment mode.

While pressing [VOLUME (-)] button of the main unit, press [INFO] button of the remote control three times within 2 seconds.

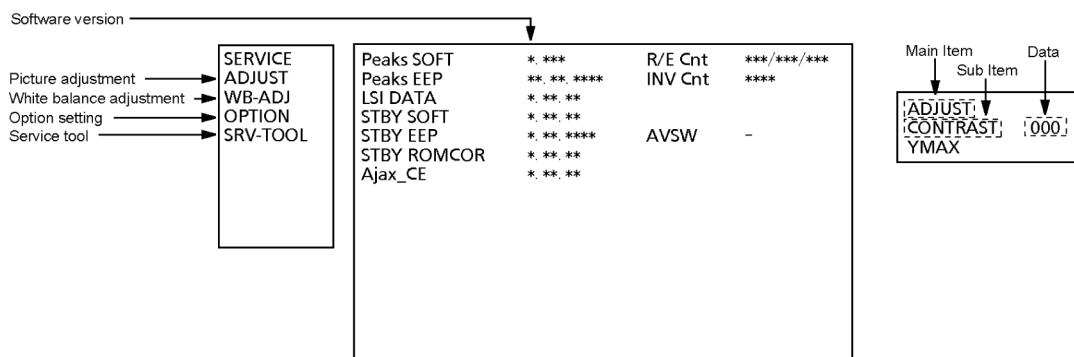

5.1.2. Key command

[1] button...Main items Selection in forward direction

[2] button...Main items Selection in reverse direction

[3] button...Sub items Selection in forward direction

[4] button...Sub items Selection in reverse direction

[VOL] button...Value of sub items change in forward direction (+), in reverse direction (-)

5.1.3. How to exit

Switch off the power with the [POWER] button on the main unit or the [POWER] button on the remote control.

5.1.4. Contents of adjustment mode

- Value is shown as a hexadecimal number.
- Preset value differs depending on models.
- After entering the adjustment mode, take note of the value in each item before starting adjustment.

Main item	Sub item	Sample Data	Remark
ADJUST	CONTRAST	default value	
	COLOR	default value	
	TINT	default value	
	SUB-BRT	default value	
	BACKLGT	default value	
	B-Y-G	default value	
	R-Y-A	default value	
	V COM	default value	
WB-ADJ	R-GAIN	default value	
	G-GAIN	default value	
	B-GAIN	default value	
	R-CENT	default value	
	G-CENT	default value	
	B-CENT	default value	
OPTION	Boot	default value	Factory Preset.
	STBY-SET	default value	
	EMERGENCY	default value	
	CLK MODE	default value	
	CLOCK	default value	
	EDID-CLK	default value	
SRV-TOOL		default value	See next.

5.2. SRV-TOOL

5.2.1. How to access

1. Select [SRV-TOOL] in Service Mode.
2. Press [OK] button on the remote control.

	SRV-TOOL	
Display of TD2Microcode version →	TD2Microcode:00000000	
Display of Flash ROM maker code →	Flash ROM : AD-DC	
Display of SOS History →	PTCT : 00 . 00 . 00 . 00 . 00	Time 00046. 0 Count 0000049

POWER ON TIME/COUNT
Press [MUTE] button (3sec)

5.2.2. Display of SOS History

SOS History (Number of LED blinking) indication.

From left side; Last SOS, before Last, three occurrence before, 2nd occurrence after shipment, 1st occurrence after shipment.

This indication except 2nd and 1st occurrence after shipment will be cleared by [Self-check indication and forced to factory shipment setting].

5.2.3. POWER ON TIME/COUNT

Note : To display TIME/COUNT menu, highlight position, then press MUTE for 3sec.

Time : Cumulative power on time, indicated hour : minute by decimal

Count : Number of ON times by decimal

Note : This indication will not be cleared by either of the self-checks or any other command.

5.2.4. Exit

1. Disconnect the AC cord from wall outlet.

5.3. Technical Descriptions

5.3.1. Specification of KEY for DTCP-IP, WMDRM and Widevine

5.3.2. General information:

1. NAND Flash (IC8900) for spare parts has the seed of KEY for each DTCP-IP for DLNA, WMDRM for Netflix and Widevine for CinemaNow.
2. The final KEY data will be generated by Main IC (IC8000) when SELF CHECK was done and are stored in both Main IC (IC8000) and NAND Flash (IC8900).

5.3.3. Replacement of ICs:

When Main IC is replaced, NAND Flash should be also replaced with new one the same time.

When NAND Flash is replaced, Main IC is not necessary to be replaced the same time.


After the replacement of IC, SELF CHECK should be done to generate the final KEY data.

How to SELF CHECK: While pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

TV will be forced to the factory shipment setting after this SELF CHECK.

5.3.4. DRV Check - USBHDD Check

1. Select [DRV Check - USBHDD Check] in Service Mode.
2. Press [OK] button on the remote control for more than 3 seconds.

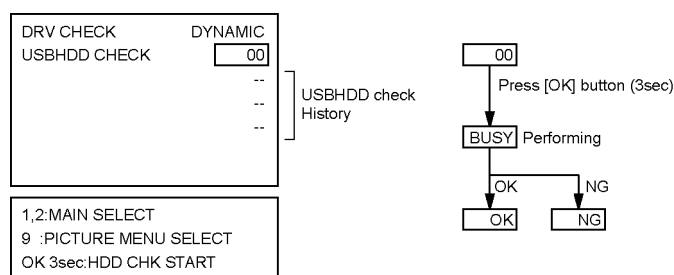

5.3.5. Hotel Mode

1. Purpose
Restrict a function for hotels.
2. Access command to the Hotel mode setup menu.
In order to display the Hotel mode setup menu:
While pressing [VOLUME (-)] button of the main unit,
press [AV] button of the remote control three times within
2 seconds.

Then, the Hotel mode setup menu is displayed.

Hotel Mode	
Hotel Mode	default value
Initial INPUT	default value
Initial POS	default value
Initial VOL Level	default value
Maximum Vol Level	default value
Button Lock	default value
Remote Lock	default value
Private Information	default value

Change — Select

RETURN

3. To exit the Hotel mode setup menu
Disconnect AC power cord from wall outlet.
4. Explain the Hotel mode setup menu

Item	Function
Hotel Mode	Select hotel mode On/Off
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : Off, Analogue, DVB-C, DVB-T, AV1, AV2, HDMI1, HDMI2 • Off: give priority to a last memory. However, Euro model is compulsorily set to TV.
Initial POS	Select programme number. Selection : Off/0 to 99 • Off: give priority to a last memory.
Initial VOL LEVEL	Adjust the volume when each time power is switched on. Selection Range : Off/0 to 100 • Off: give priority to a last memory.
Maximum Vol Level	Adjust maximum volume. Range : 0 to 100
Button Lock	Select local key conditions. Selection : Off/SETUP/MENU/ALL • OFF: altogether valid • SETUP: only F-key is invalid (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid (only Volume/Mute can be selected.) • ALL: altogether invalid.
Remote Lock	Select remote control key conditions. Selection : Off/SETUP/MENU • OFF: altogether valid. • SETUP: only Setup menu is invalid. • MENU: Picture/Sound/Setup menu are invalid.
Private Information	Select private information for VIERA Cast is Keep or Reset if Hotel mode is set to [On] when TV power on. Selection : Keep/Reset • Keep: private information for VIERA Cast is keep • Reset: private information for VIERA Cast is reset

6 Troubleshooting Guide

Use the self-check function to test the unit.

1. Checking the IIC bus lines
2. Power LED Blinking timing

6.1. Check of the IIC bus lines

6.1.1. How to access

6.1.2. Self-check indication only:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [OK] button on the remote control for more than 3 seconds.

6.1.3. Self-check indication and forced to factory shipment setting:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

6.1.4. Exit

Disconnect the AC cord from wall outlet.

6.1.5. Screen display

42 FHD			
SELF CHECK COMPLETE			
H14TUN	OK	PEAKS-SOFT	*, ***
H90STBY	OK	PEAKS-EEP	**., **., ****
H91MEM2	OK	LSI-PACKAGE	*, ***
H17LAN	OK	LSI-RELEASE	*, **
H96ID	OK	STBY-SOFT	*, **., **
H97ID2	OK	STBY-EEP	*, **., ****
H42WiFi	OK		
		MODEL ID	**

6.1.6. Check Point

Confirm the following parts if NG was displayed.

DISPLAY	Check Ref. No.	Description	Check Point
H14TUN	IC6750	TUNER	A-Board
H90STBY	IC8000	STM	A-Board
H91MEM2	IC8900	NAND FLASH	A-Board
H17LAN		LAN	LAN
H96ID		ID	
H97ID2		ID2	
H42WiFi		WiFi	WiFi Dongle

6.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abnormality occurs, the protection circuit will operate and reset the unit to stand by mode. During this time, the defective block can be identified by the number of blinking times of the Power LED on the front panel of the unit as follow:

Blinking Times	Contents	Check point
1	BACK LIGHT SOS	LCD PANEL P-Board
7	SUB 3.3V SENSE SOS	A-Board
9	SOUND SOS	A-Board Speaker
13	EMERGENCY	A-Board

6.3. LCD Panel test mode

Purpose:

To find the possible failure point where in LCD Panel or Printed Circuit Board when the abnormal picture is displayed.

How to Enter:

While pressing [VOLUME (-)] button of the main unit, press [OPTION] button of the remote control three times within 2 seconds.

How to Exit:

Disconnect AC plug from wall outlet.

How to confirm:

If the abnormal picture is displayed, go into LCD Panel test mode to display the several test patterns.

And then, judge by the following method.

Still abnormal picture is displayed: The cause must be in LCD Panel.

Normal picture is displayed: The cause must be in A board.

Remarks:

The test pattern is created by the circuit in LCD Panel.

In LCD Panel test mode, this test pattern is displayed unaffected by signal processing for RF or input signal.


If the normal picture is displayed, LCD Panel must be okay and the cause of failure must be in A board.

6.4. No Power

First check point

There are following 2 states of No Power indication by power LED.


1. No lit
2. Red is lit then turns red blinking a few seconds later. (See 6.2.)




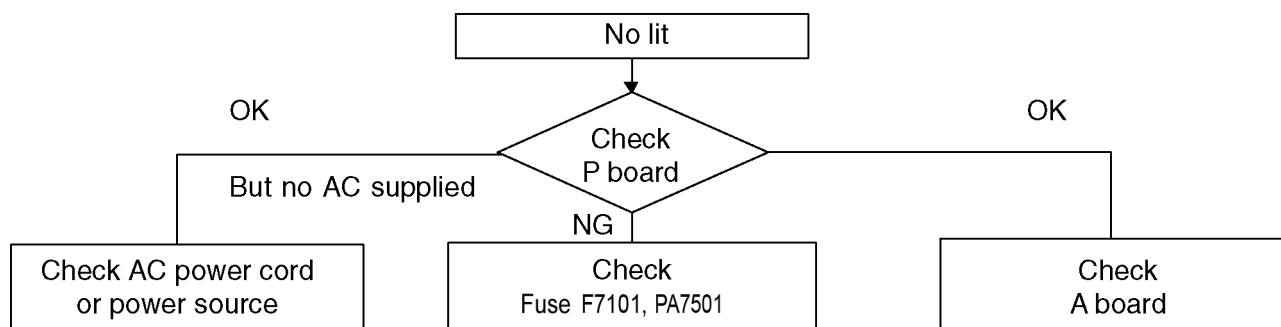


7 Disassembly and Assembly Instructions

7.1. Panel Assembly

1. Install KEY BUTTON.
2. Install Rear Panel Metal follow Step 1 → 2 → 3 → 4.
3. Install METAL_BRACKET_BOTTOM after all rear panel fixing.



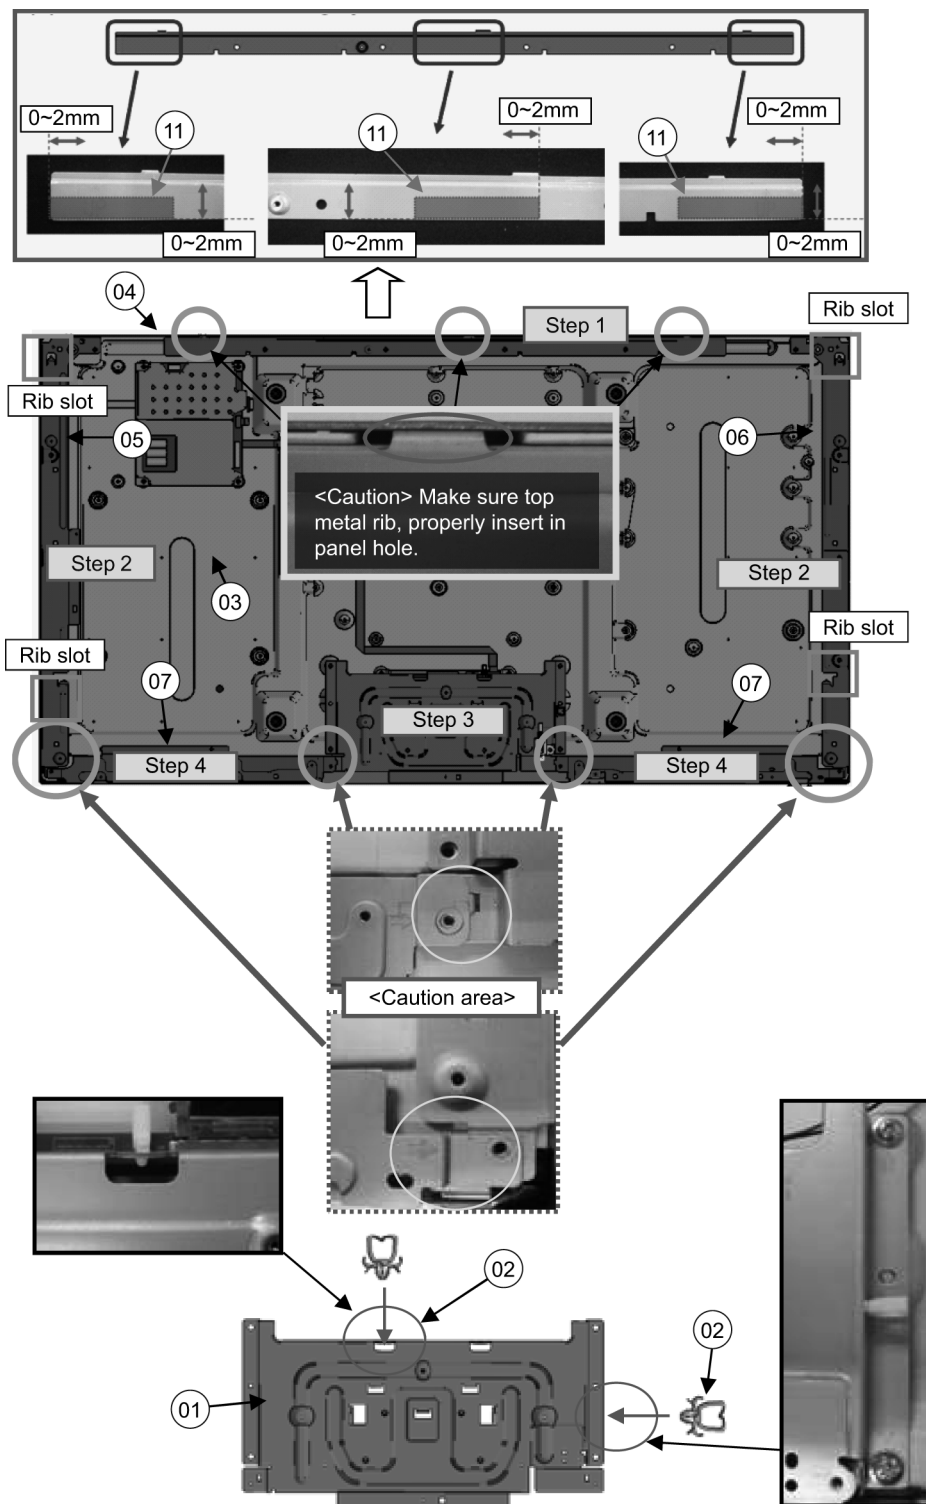


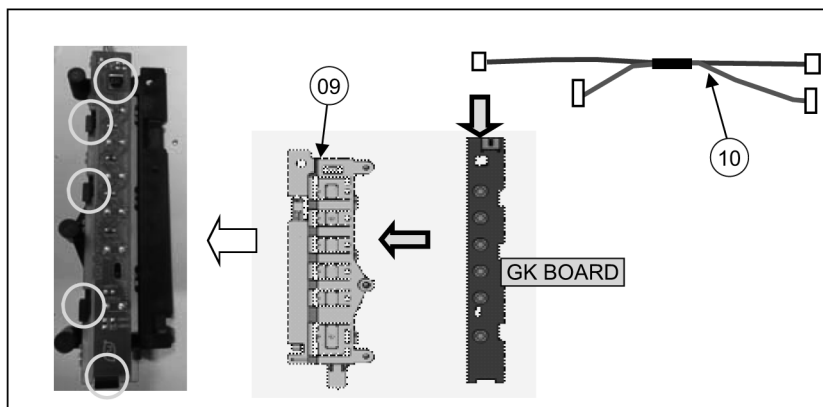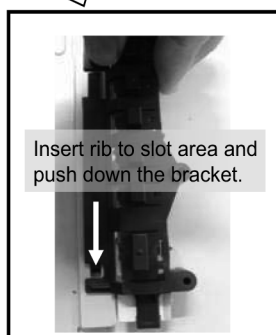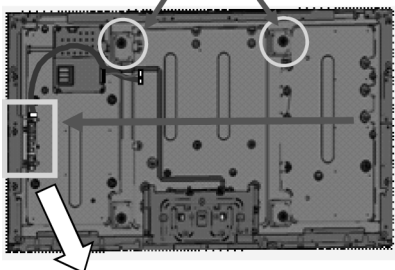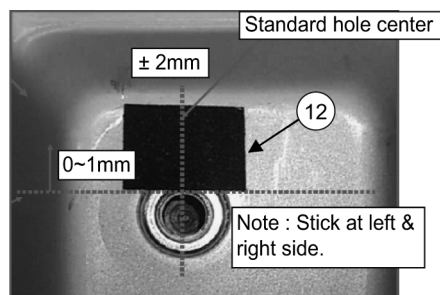

No.	Item	Description	QTY	UOM
01	TKZ5ZC50081	METAL BRACKET BOTTOM	1	PC
02	TMME268	CLAMPER (LCD2)	2	PC
03	L5EDDYY00481	LCD PANEL	1	PC
04	TKZ5ZA50321	REAR PANEL METAL TOP	1	PC
05	TKZ5ZA50331	REAR PANEL METAL L	1	PC
06	TKZ5ZA50341	REAR PANEL METAL R	1	PC
07	TKZ5ZA50211	REAR PANEL METAL BOT L	1	PC
08	TKZ5ZA50221	REAR PANEL METAL BOT R	1	PC
09	TBX5ZA02501B	KEY_BUTTON_BRACKET	1	PC
10	TXJ/P4YKUE	P4/P5-LD/GK4	1	PC
11	TMK4GA186	FELT(8*60*t0.9)	3	PC
12	TMK4GA064	FELT(10*20*t0.55)	2	PC

7.2. Rear Panel Assembly



1. Fix rear panel "L" [Rear & Bottom] and "R" [Rear] ass'y at LCD Panel.
2. After fix rear panel Top & Bottom assembly at LCD Panel.

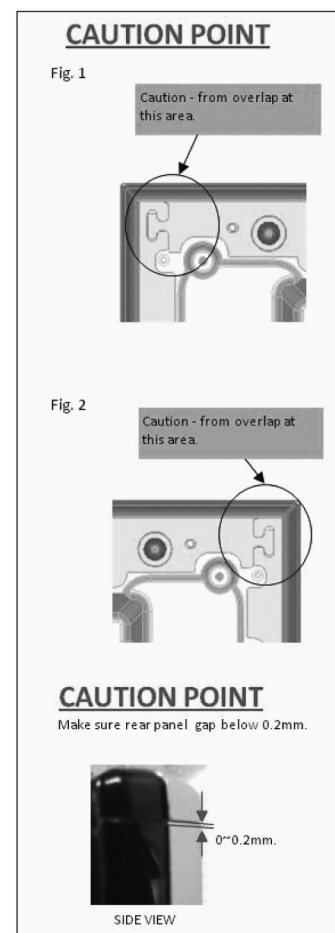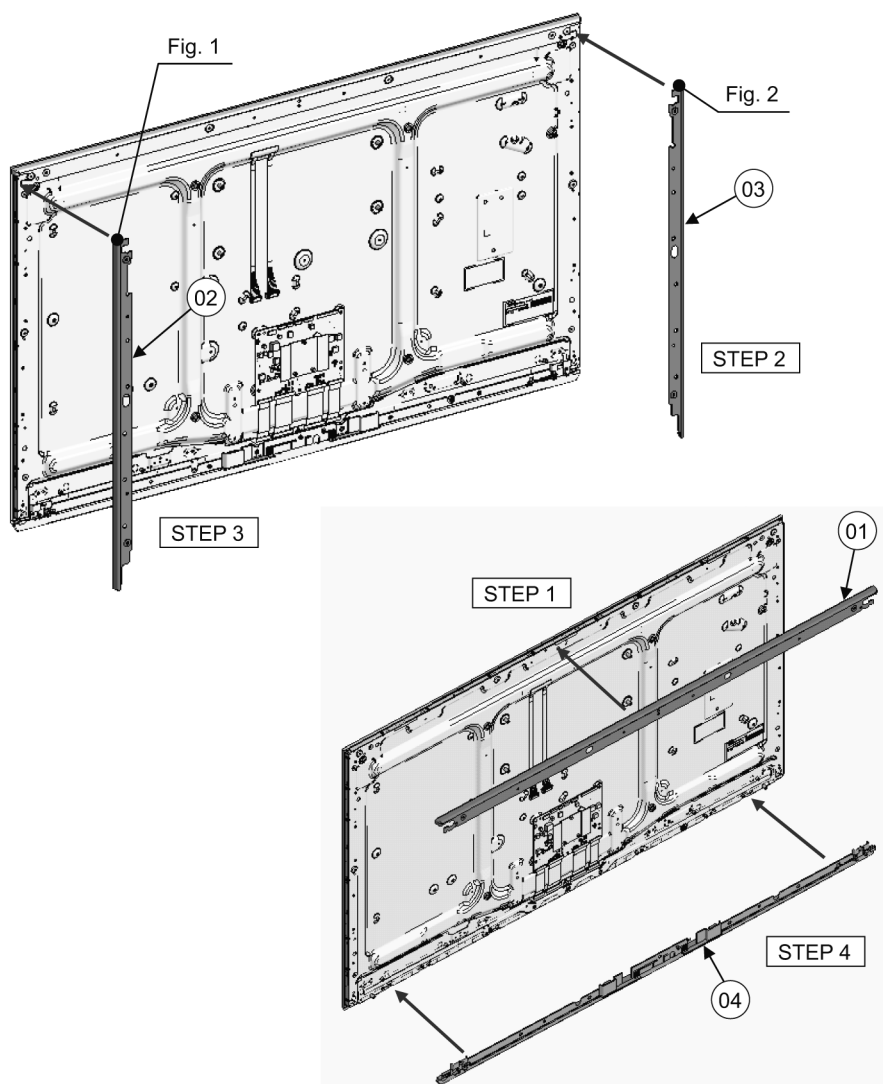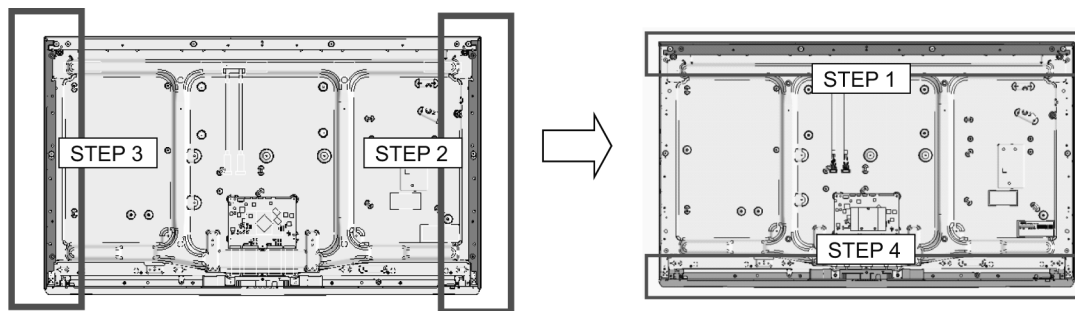

No.	Item	Description	QTY	UOM	Ref. Type
01	TXFKP5Z0102	REAR PANEL TOP ASSY	1	PC	Fig. 3
02	TXFKP5Z0115	REAR PANEL L ASSY	1	PC	Fig.1
03	TXFKP5Z0129	REAR PANEL R ASSY	1	PC	Fig. 2
04	TXFKP5Z0194	REAR PANEL BTM ASSY	1	PC	Fig. 4

7.3. LCD Panel Fixing & Handling Method

1. Place down the cabinet as shown below.
2. Fix LCD panel into the cabinet by taking below precautions.

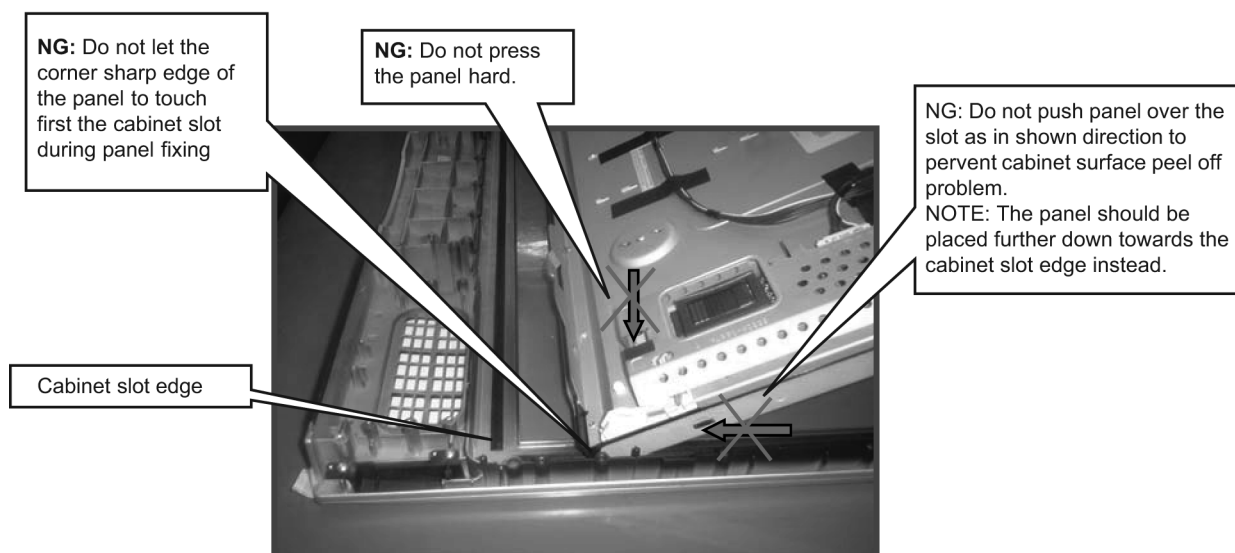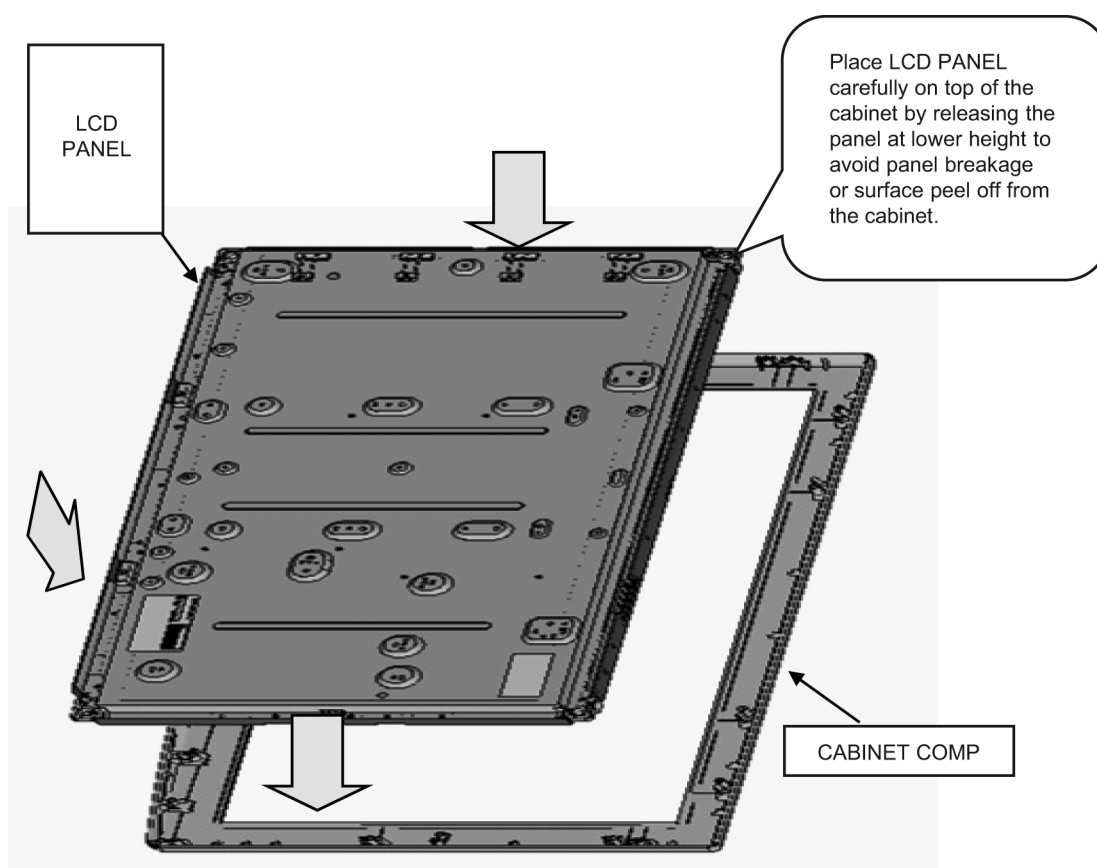


Other general precautions

1. Do not press panel surface to avoid blue spot on the panel display.
2. Do not use hard cloth or rub the surface too hard. This may cause scratches on the surface.
3. Take care not to subject the TV's surface to water or detergent. Any liquid (including pets urine) if enters the product could lead to TV failure.
4. Take care not to subject the surface to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
5. The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch with your fingernail or other hard objects.

7.4. A_Print Assembly


1. Install A_Print.
2. Install SIDE_AV_BRACKET.
3. Install BARRIER P-PCB. (Follow step 1 & 2).

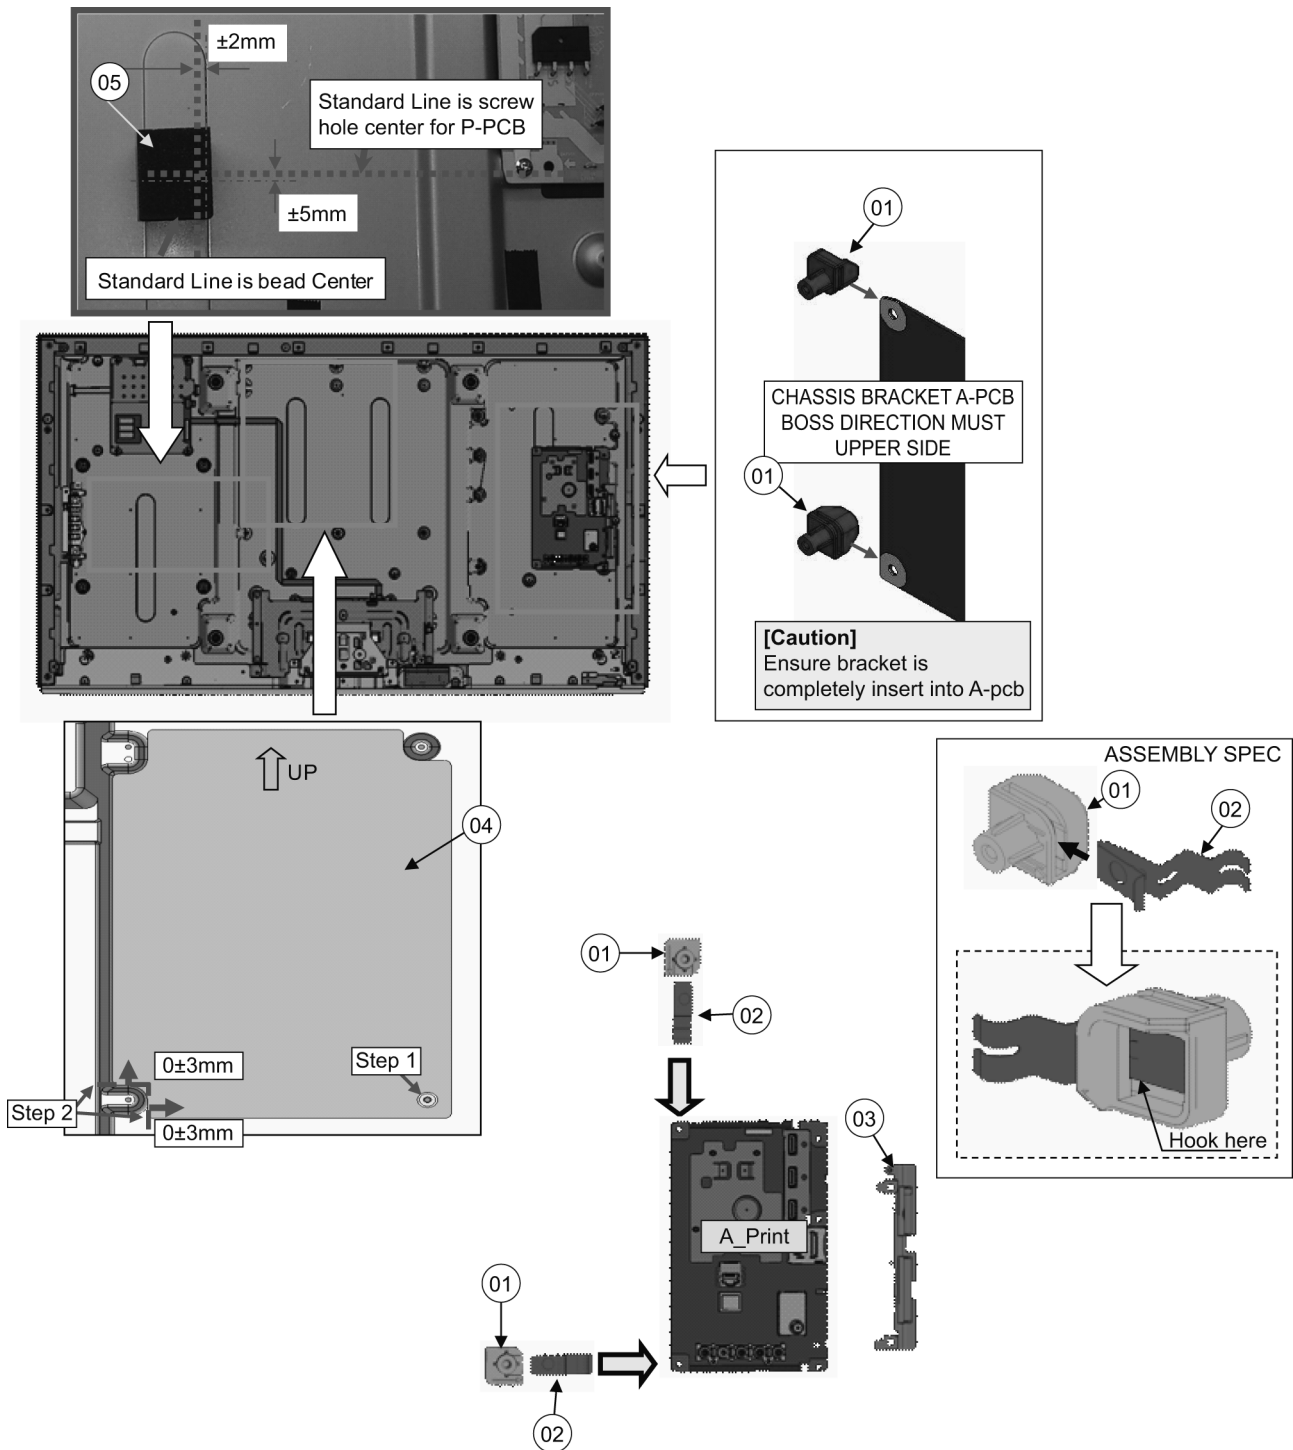

No.	Item	Description	QTY	UOM
01	TMX5ZE0041	CH_MOUNT_BOSS	2	PC
02	TES5ZA001	GROUND SPRING	2	PC
03	TKP5ZA29402	SIDE AV BRACKET	1	PC
04	TMK4GX156	BARRIER P-PCB	1	PC
05	TMK4GG088	SPONGE(30*30*t40)	1	PC

7.5. P_Print Assembly


1. Install P_Print.
2. Install SPEAKER UNIT.
3. Install K-PRINT and LED PANEL.
4. Install USB CABLE.

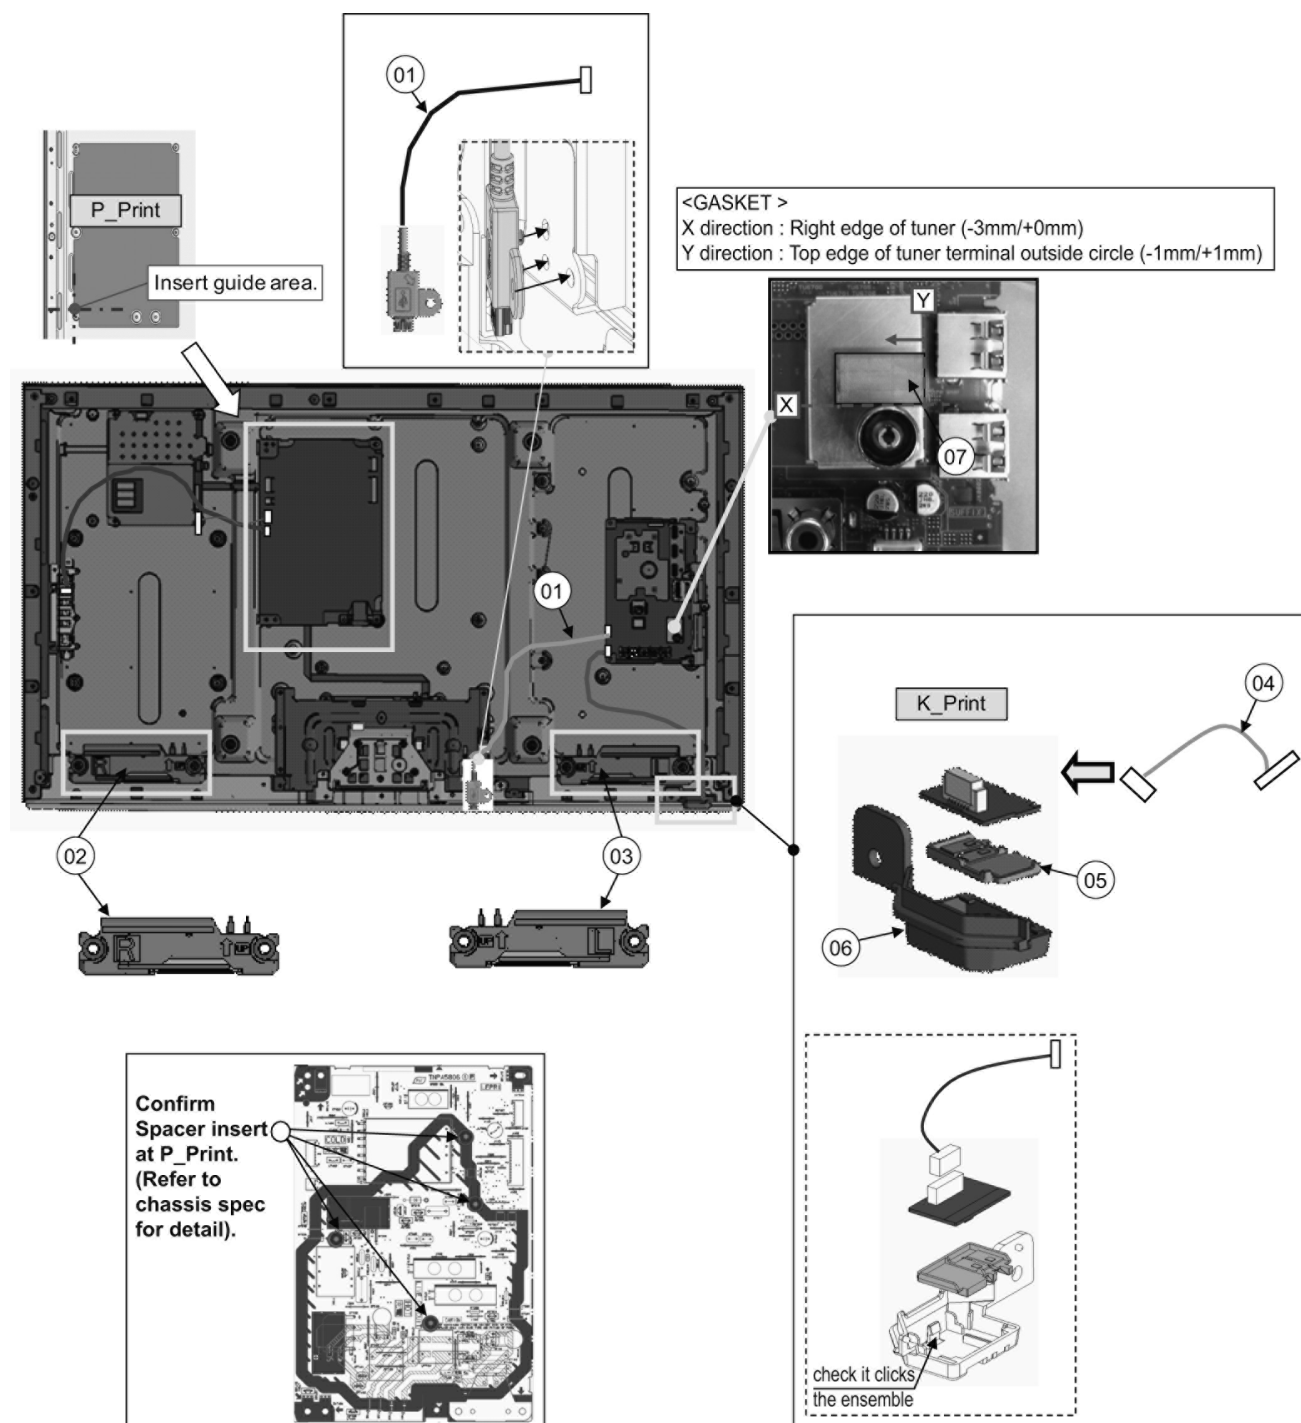

No.	Item	Description	QTY	UOM
01	K1HY05YY0051	WIFI USB CABLE	1	PC
02	L0EYAA000023	SPEAKER UNIT R	1	PC
03	L0EYAA000022	SPEAKER UNIT L	1	PC
04	TXJA10SHUA	A10-K10	1	PC
05	TKK5ZC50381	LED_PANEL	1	PC
06	TKP5ZA33301	LED_PANEL_CASE	1	PC
07	TWB770	GASKET	1	PC

7.6. Screw Assembly

Screwing.

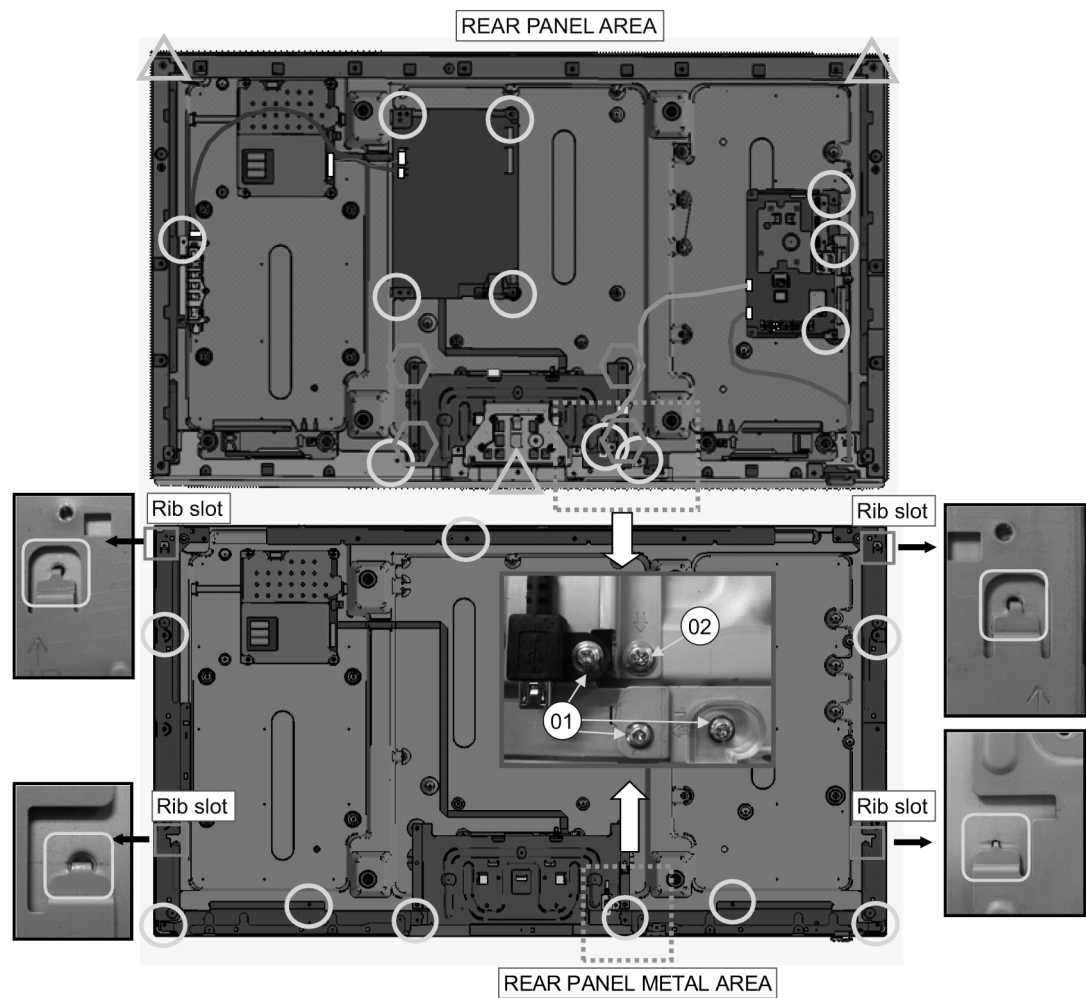

42/39E6 series REAR Panel ASSEMBLY

REAR PANEL TOP
It presses down in the direction of an arrow.
矢印の方向に押えつける

REAR PANEL R
It push up in the direction of an arrow.
矢印の方向に押し上げる

REAR PANEL L
It presses down in the direction of an arrow.
矢印の方向に押えつける

バックカバーを載せる前に、押さえながら共締めネジを先に締める。
Before carrying a back cover, a screw is tightened previously with pressing down a corner.

GAP Countermeasure

このあたりを押してもだめ
It is ineffective even if it presses down this portion.

このあたりを押してもだめ
It is ineffective even if it presses down this portion.

1


Part No.	Quantity	Shatter
01 → THEJ036J	20	A KEY P WIFI RPM RPM
02 → THE4GJ001J	4	BTM
03 → THEC1509	3	RP

No.	Item	Description	QTY	UOM	Remarks
01	THEJ036J	SCREW(RPM9/RP2/A3/P4/WIFI1/KEY1)	20	PC	6 ± 1 KgfcM
02	THE4GJ001J	SCREW(BTM4)	4	PC	6 ± 1 KgfcM
03	THEC1509	SCREW(RP3)	3	PC	6 ± 1 KgfcM

7.7. EMI

1. Reform LVDS cable.
2. Install PET TAPE.
3. Install AL+PET TAPE.


<Caution>
Need to reform follow below spec.

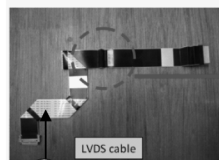

03




About 10mm
Please reform the LVDS cable.


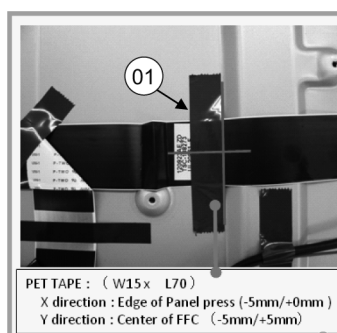


PET/AL TAPE : (W10 x L80)
X direction : Center of GND area (-3mm/+3mm)
Y direction : Center of FFC (-5mm/+5mm)


<Caution>
Make sure cable
not too tense this
to avoid AL Tape
easy peel off.

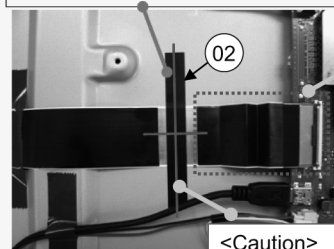

<Caution>
Sticking AL Tape this
area FIRST. Before stick
other tape.

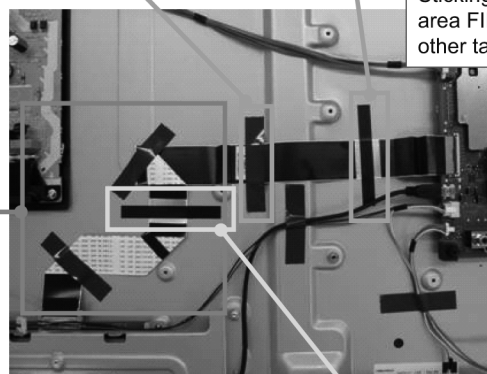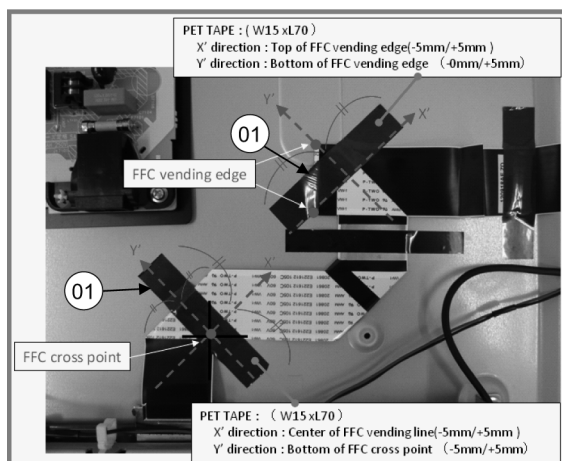


PET/AL TAPE : (W10 x L80)
X direction : Center of FFC (-5mm/+5mm)
Y direction : Center of GND area (-3mm/+3mm)

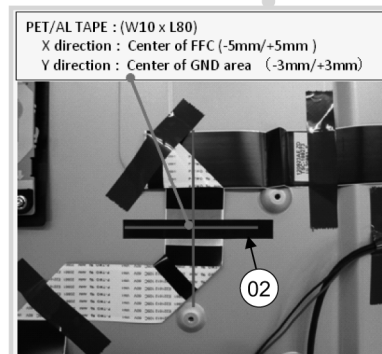

No.	Item	Description	QTY	UOM	Remarks
01	T4FP1505J	PET TAPE	0.21	PC	70mm × 3pcs
02	TEWF279	AL-TAPE(W10*L80)	2	PC	
03	TSCKF0170005	LVDS FFC (51PIN)	1	PC	

7.8. Stand Mounting Assembly


Assemble the Stand Mtg Ass'y according to spec.

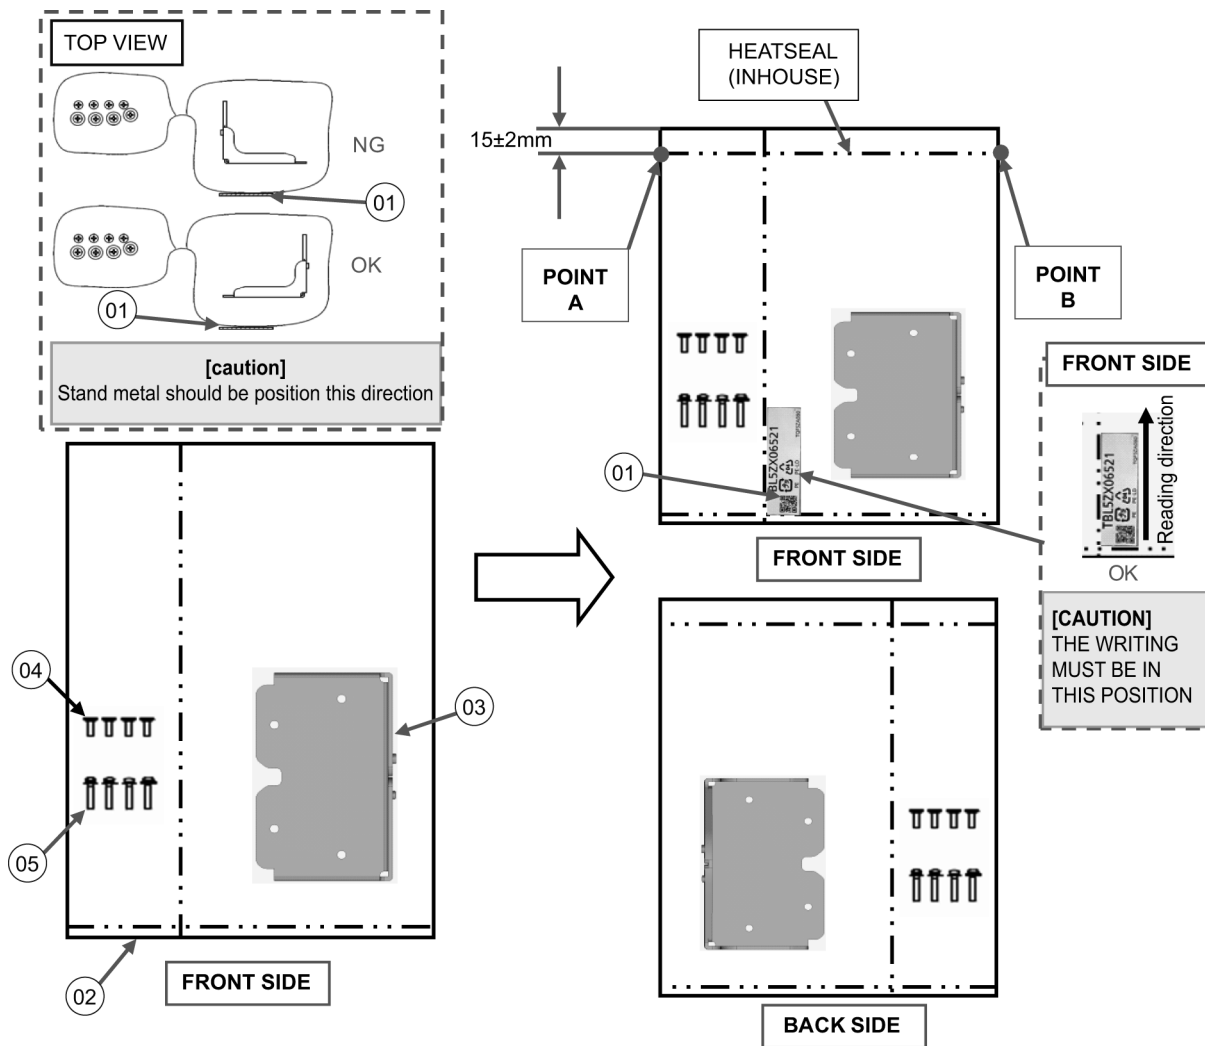



No.	Item	Description	QTY	UOM
01	TQF4GA263	QR_CODE_LABEL	1	PC
02	TPE4GH090	BAG	1	PC
03	TBL5ZA34571	STAND_METAL	1	PC
04	XYN4+F25FJK	SCREW	4	PC
05	XSS5+16FJK	SCREW	4	PC

7.9. Back Cover Assembly 1


1. Install Back cover.
2. Sticking BARRIER_P_PCB_BC.
3. Install M6 SPACER.

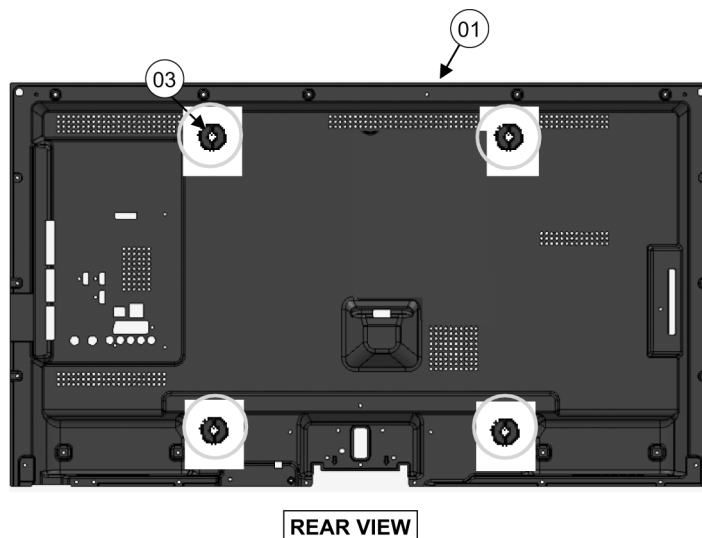


Barrier on BACK COVER INSIDE VIEW

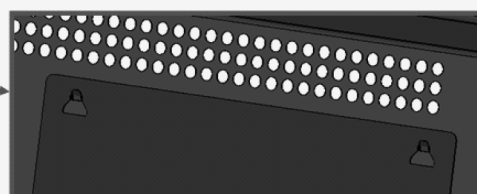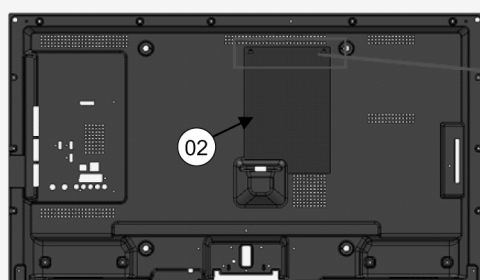

1.The barrier is surely hung on the hocks of Back cover.

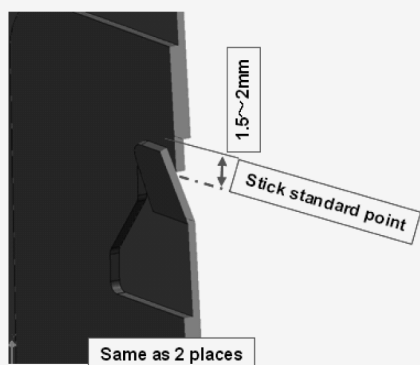




2. The barrier is not loosened.
(It stick to Back cover while pulling the barrier below.)

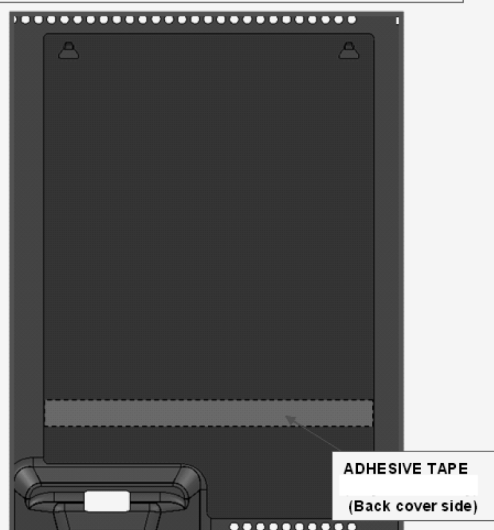

No.	Item	Description	QTY	UOM
01	TKU5ZX08501	BACK COVER	1	PC
02	TMK4GX155	BARRIER BACK COVER	1	PC
03	TKK5ZL50161	M6_SPACER-S	4	PC

7.10. Back Cover Assembly 2

Fixing Screw for Back cover.

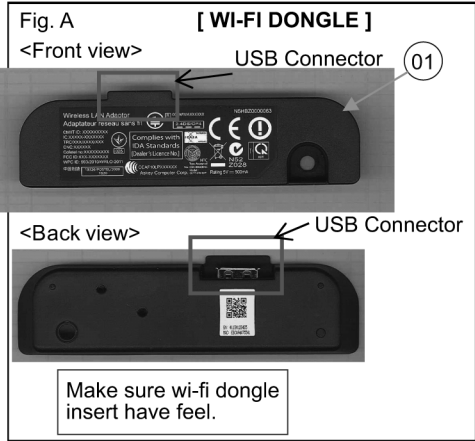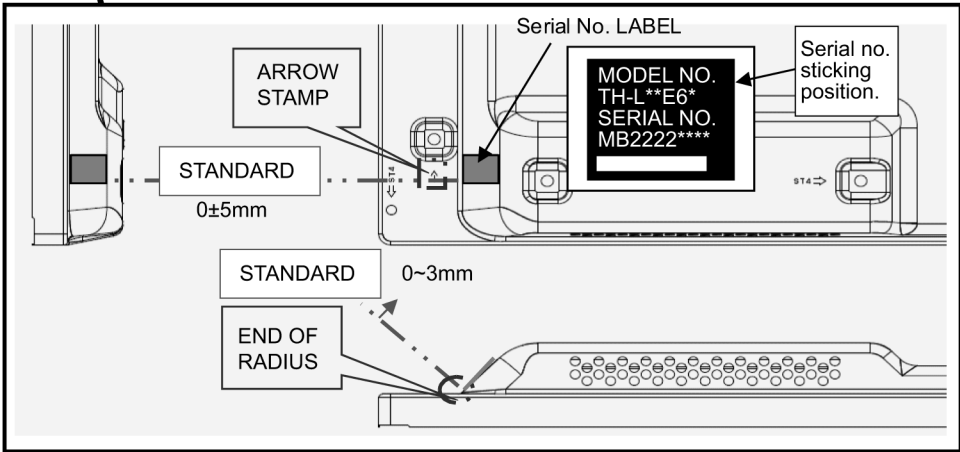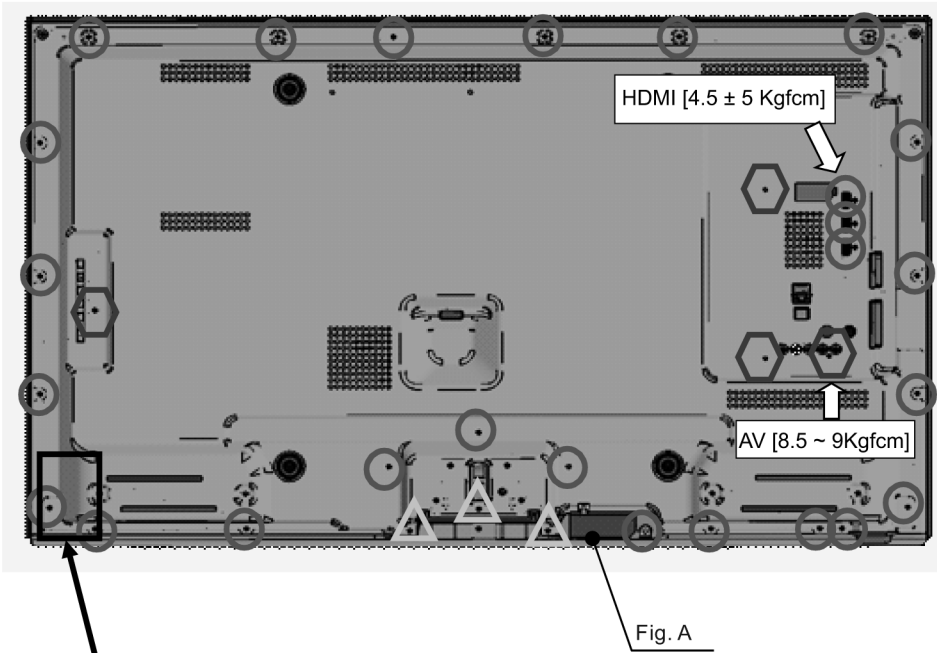

<Caution - Screw troque>

Part No.	Quantity	Breakdown	
THEC1509	26	BC	22 6 ± 1 Kgfc
		WIFI	1 6 ± 1 Kgfc
		HDMI	3 4.5 ~ 5 Kgfc
XTV3+8GFJK	4	BC	3 6 ± 1 Kgfc
		AV	1 8.5 ~ 9 Kgfc
THTD030J	3	BC	3 10 + 2 Kgfc

No.	Item	Description	QTY	UOM	Remarks
01	N5HBZ0000101	WIFI MODULE	1	PC	
02	THEC1509	SCREW(BC22/WIFI1/HDMI3)	26	PC	Refer to spec.
03	XTV3+8GFJK	SCREW(BC3/AV1)	4	PC	Refer to spec.
04	THTD030J	SCREW(BC3)	3	PC	10 ± 2 Kgfc

7.11. Handling SPEC

■ Moving the LCD module


The module should be handle by two people and hold on that top and bottom long side by both hands without module warping. Never handle the module with keeping horizontal position when moving the module in order to avoid internal damage and deformation. Never drop or hit the module.

■ About the work table

When tightening a screw, retention structures are required not to deform the LCD module.

■ Moving the TV (Case with a stand)

Hold the specified parts as shown to stand the TV up and move it with two people.

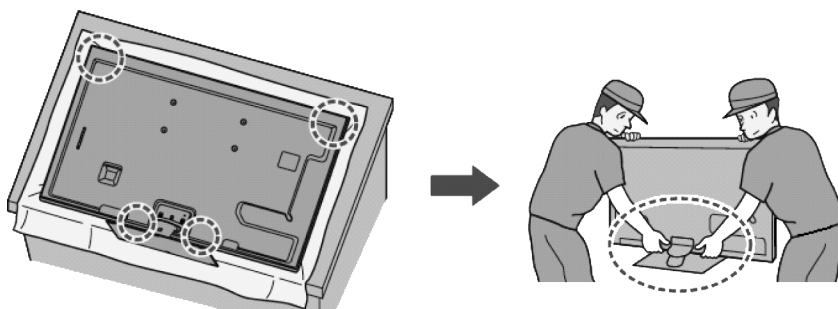

8 Measurements and Adjustments

8.1. Voltage chart of A-board

Set A-Board to a dummy set and check the satisfaction with the specified voltage as following table.

Power Supply Name	Measurement Point	Specification	
PANEL12V	TP4000 / 4001	11.50V - 12.50V	
SUB5V	TP5420	4.95V - 5.40V	
SUB3.3V	TP5400	3.17V - 3.43V	
SUB1.8V	TP8714	1.70V - 1.90V	Only TNPH1038
SUB1.5V	TP8100	1.435V - 1.585V	
SUB1.2V	TP8101	1.140V - 1.260V	
LNB_PWR	TP6702	15.30V - 17.10V	Only JPN_Model
JP_TU_2.5V	TP5705	2.38V - 2.62V	
DMD_1.2/1.1V	TP5702	1.14V - 1.26V	Only JPN_Model
DMD_1.2/1.1V	TP5703	1.14V - 1.26V	Only DTMB_Model


8.2. Voltage chart of P-board

Set P-Board to a dummy load and check the satisfaction with the specified voltage as following table.


Output	Test Point	Step 1	Step 2	
24V	TP7407	< 1V	24 ± 1.2V	
16V	TP7410	< 1V	15.7 ± 0.6V	
5VS	TP7501	5.3 ± 0.2V	5.3 ± 0.2 V	
PFC	TP7201 or TP7202	< 340V	390V ± 15V	*HOT

9 Block Diagram

9.1. Main Block Diagram

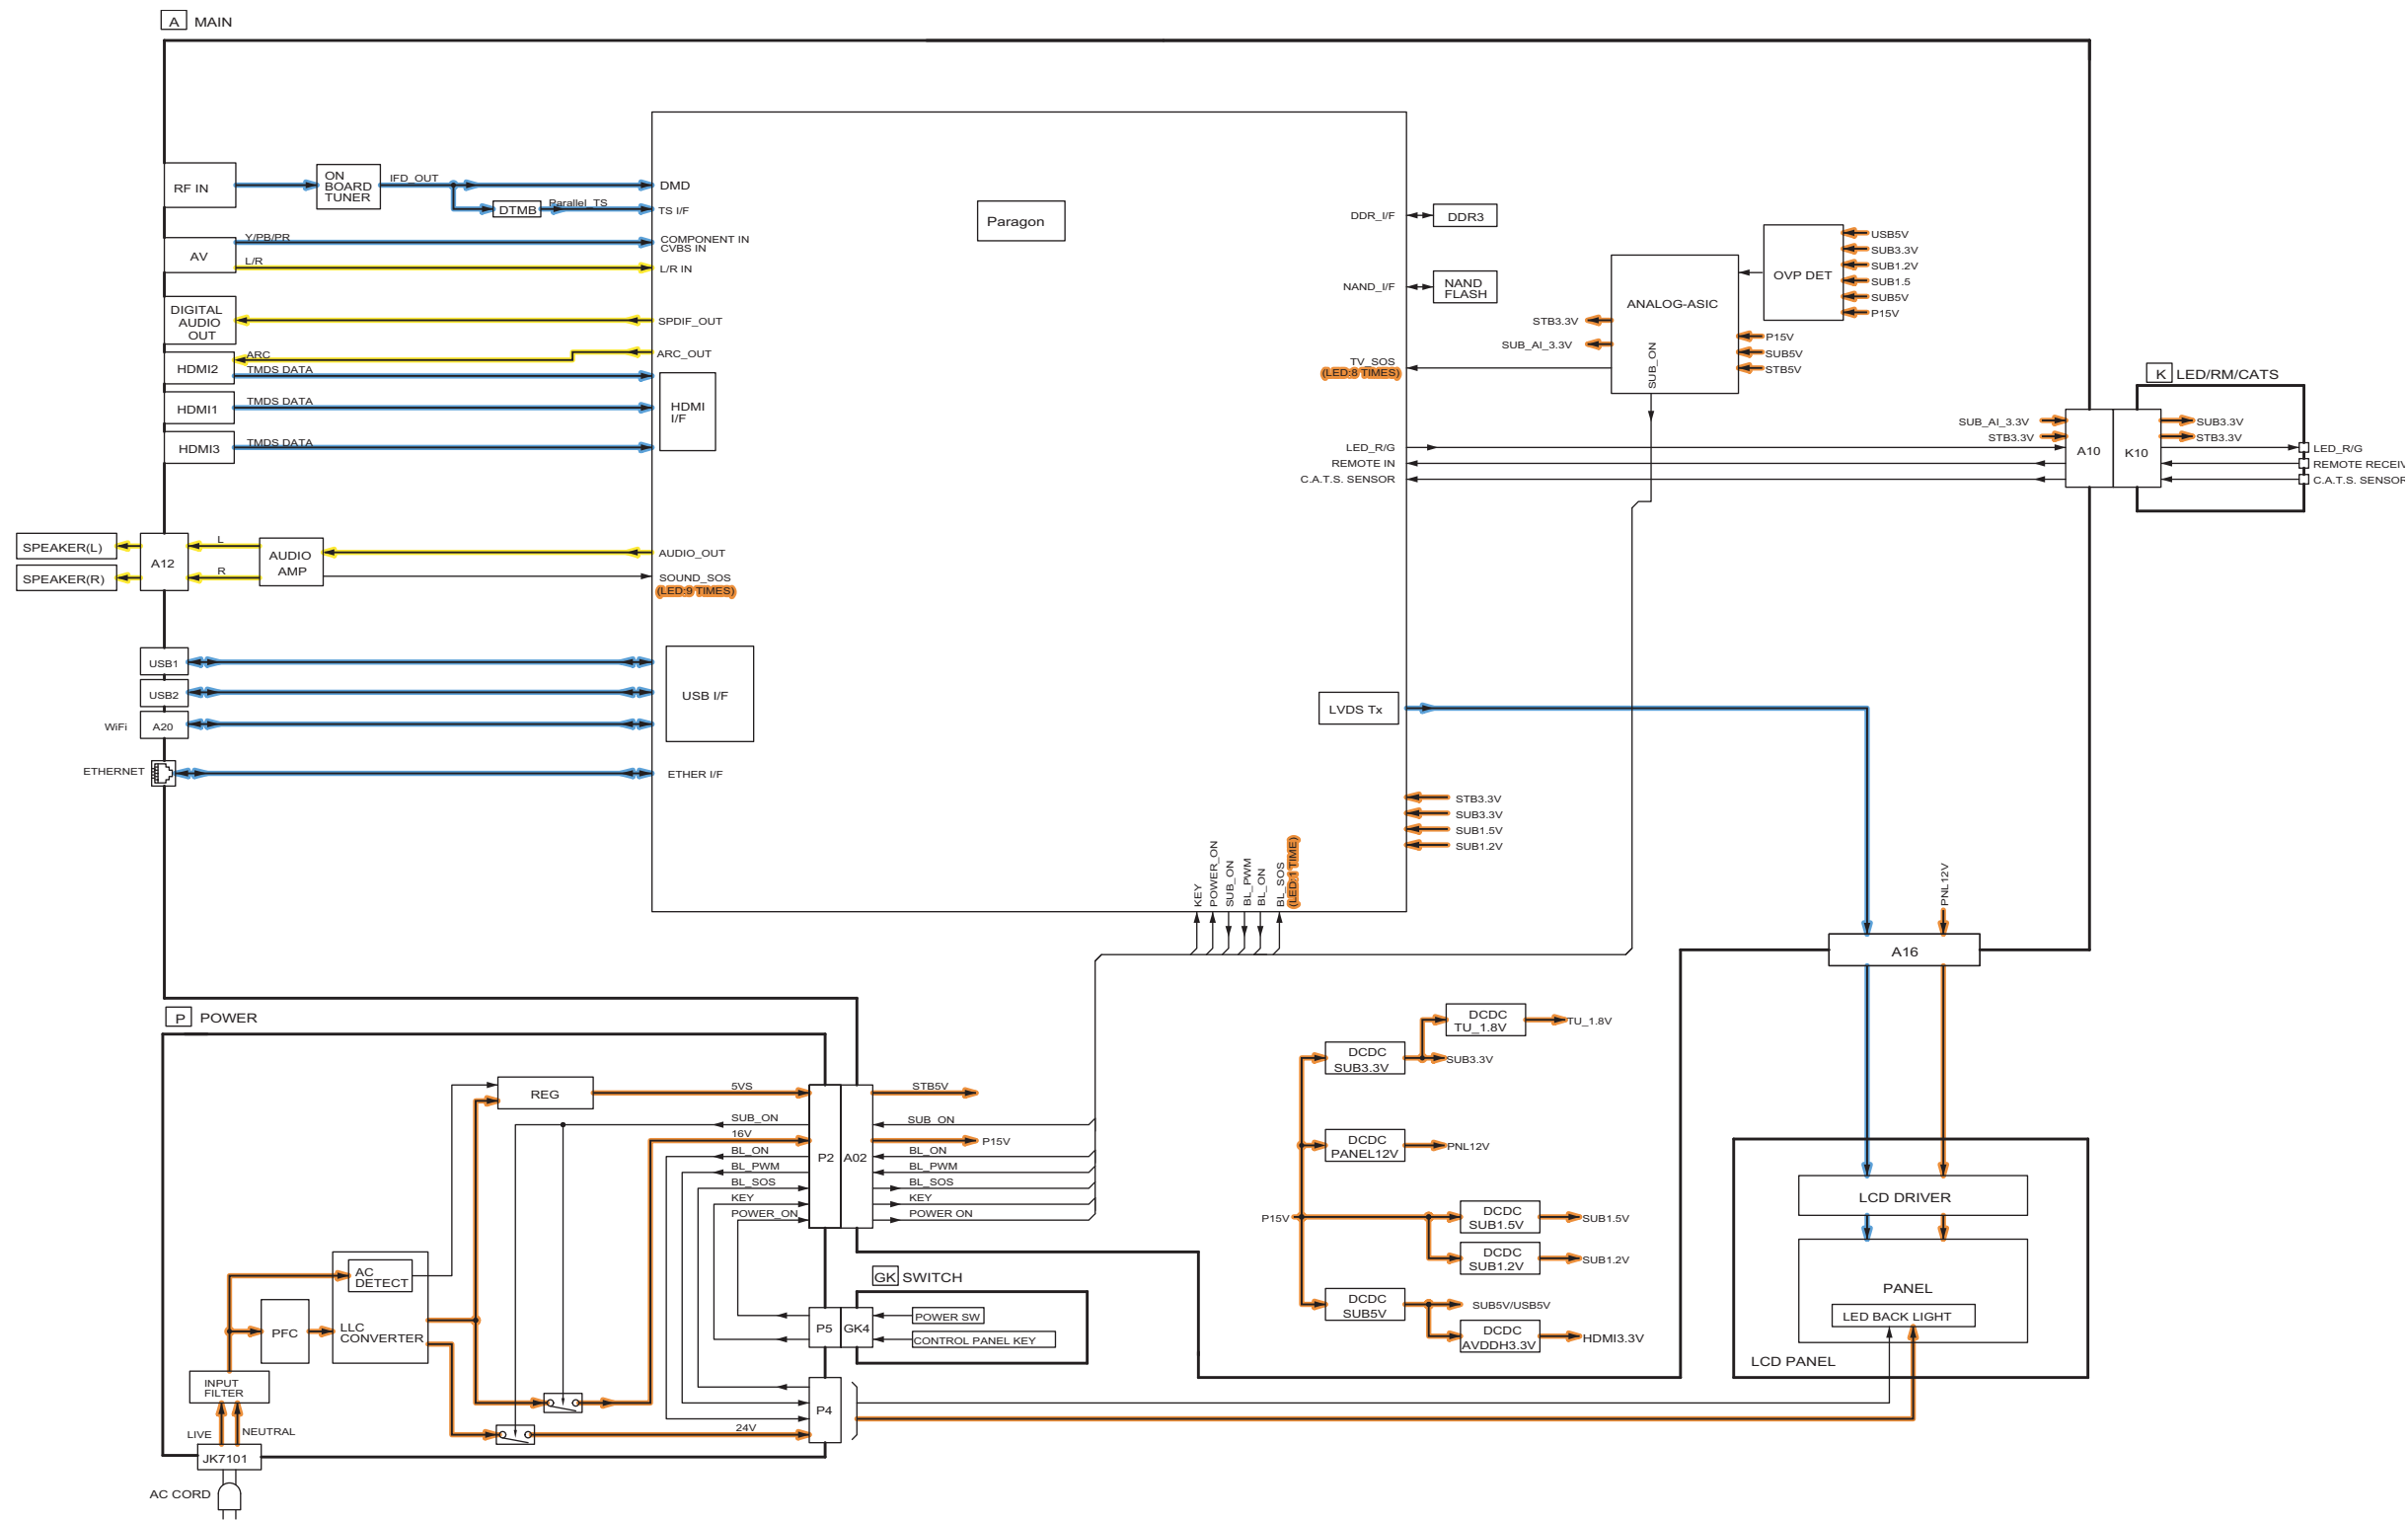

9.2. Detailed Block Diagram (1/2)




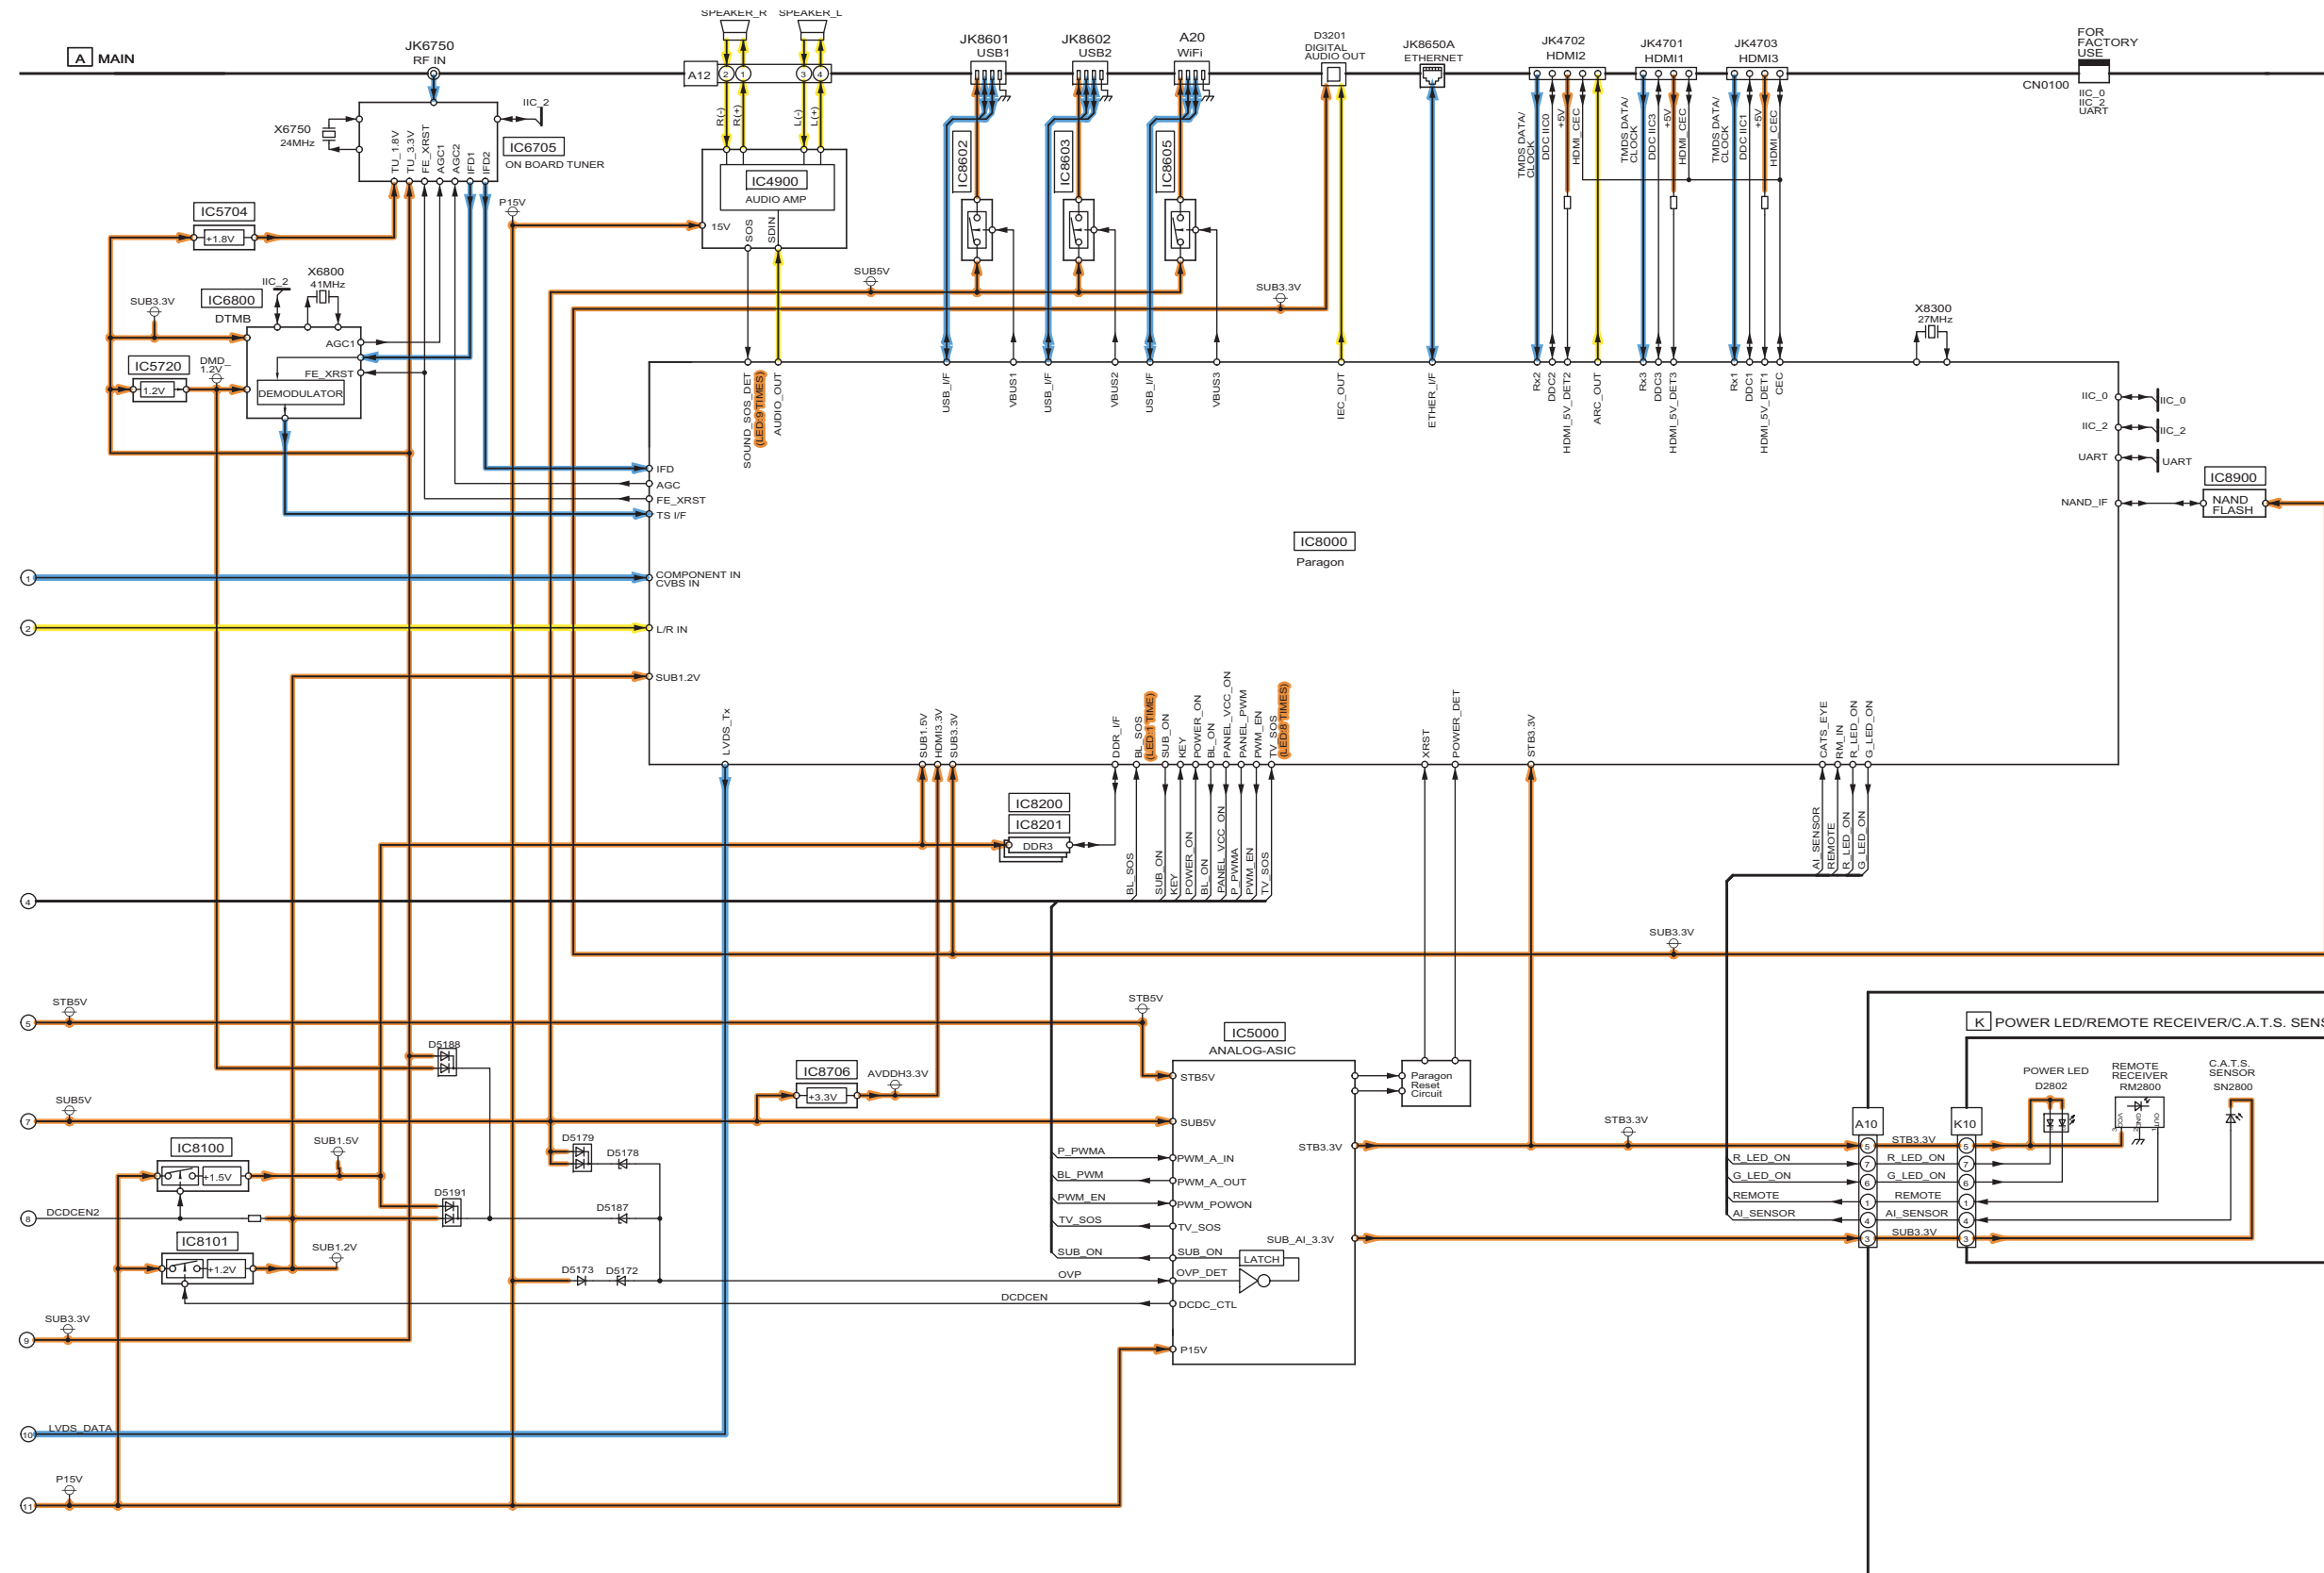




10 Wiring Connection Diagram

10.1. Wire Dressing


- 1. Install wire.
- 2. Install PET TAPE.
- 3. Install AL+PET TAPE.

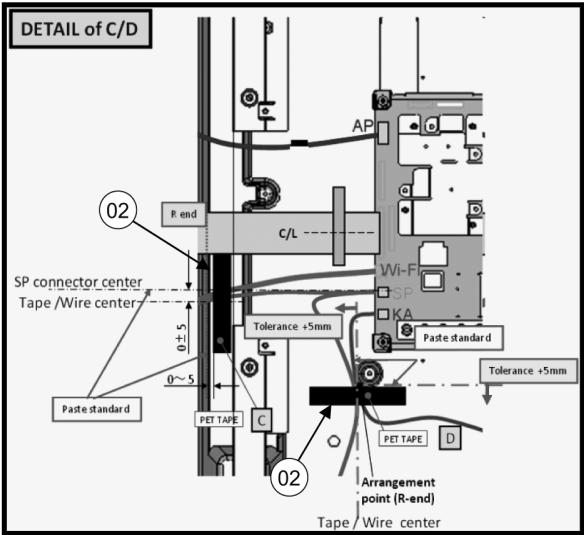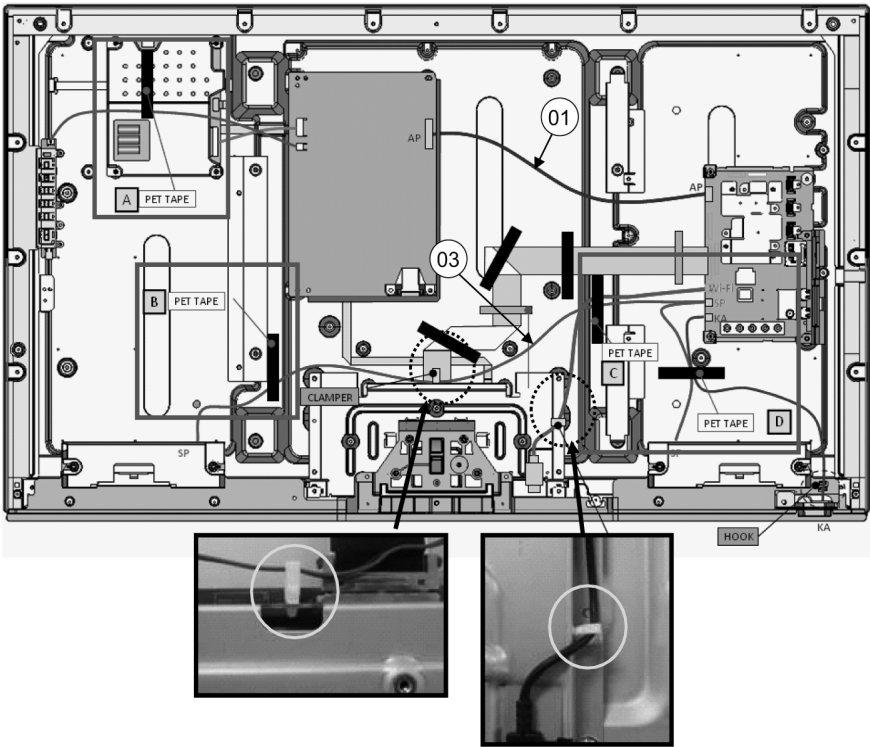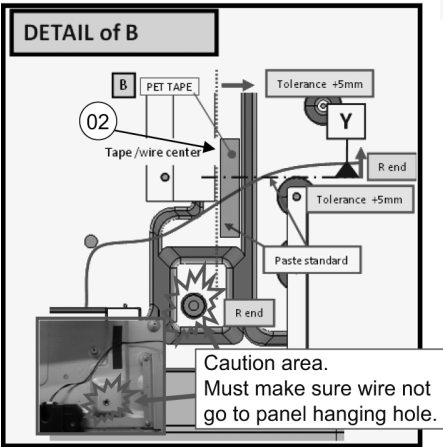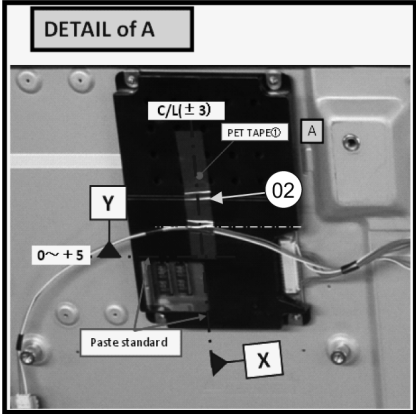

No.	Item	Description	QTY	UOM	Remarks
01	TXJA02SHUA	A02-P2	1	PC	
02	T4FP1505J	PET TAPE	0.28	PC	70mm × 4pcs
03	TXJA12SHUA	A12-SP WF	1	PC	

11 Schematic Diagram


Model No. : TH-L42E6S A-Board (1/13)

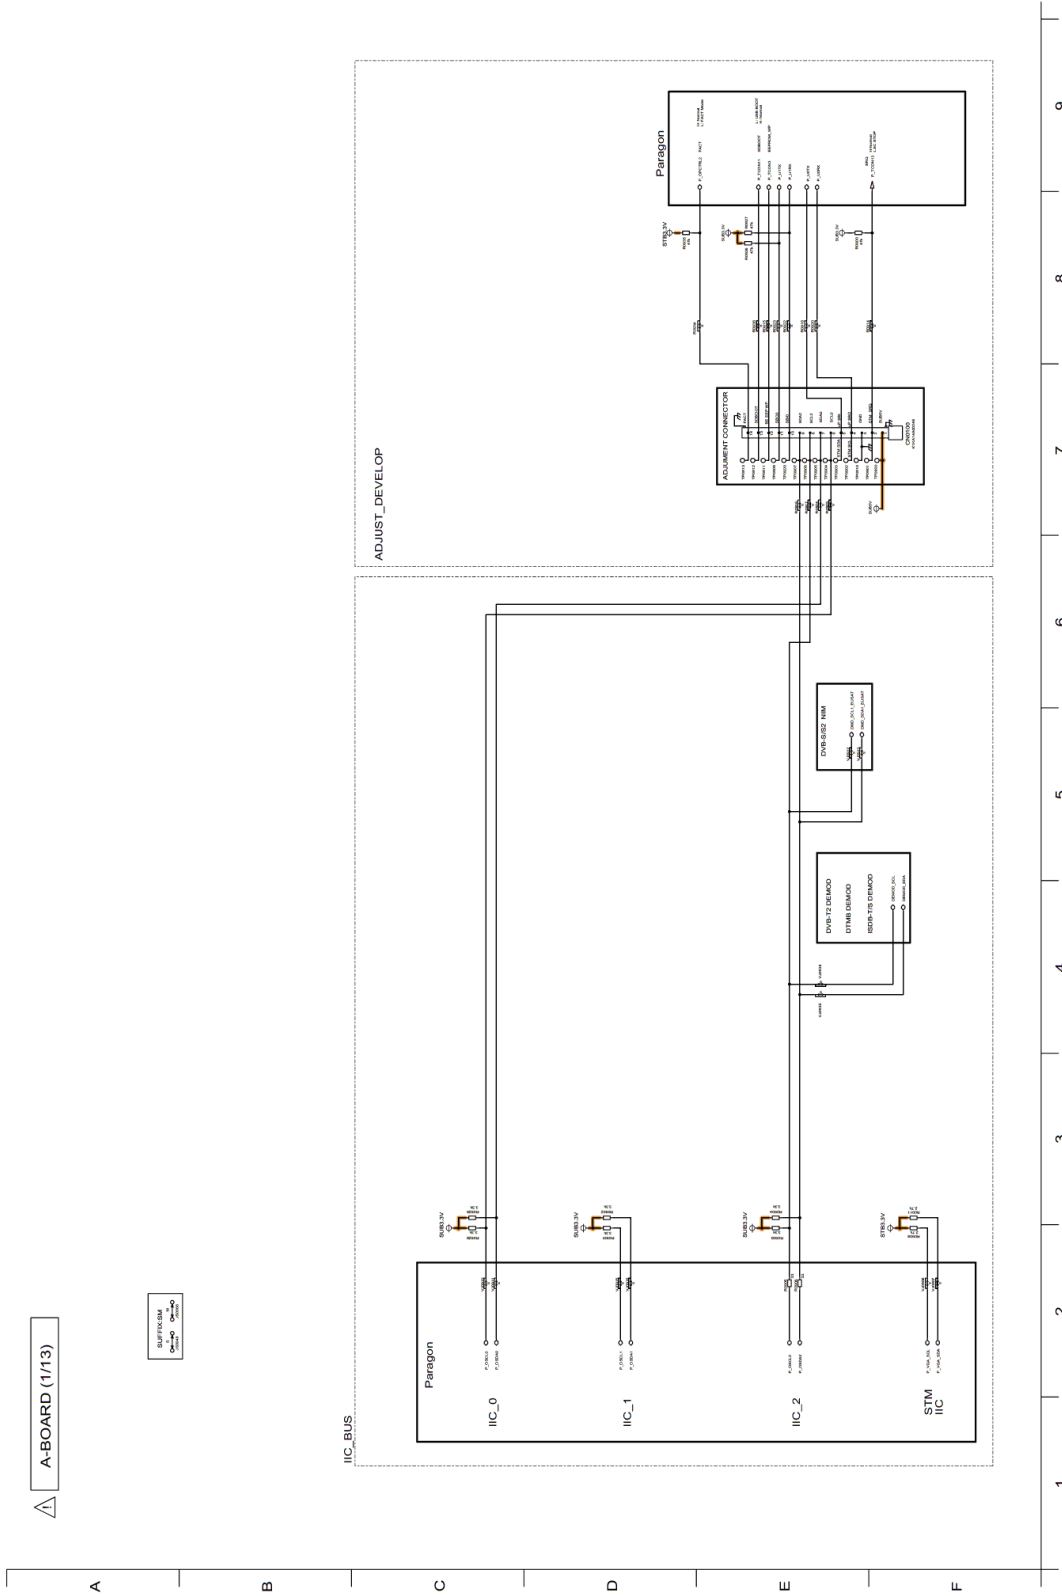

A-BOARD (2/13)



HDMI

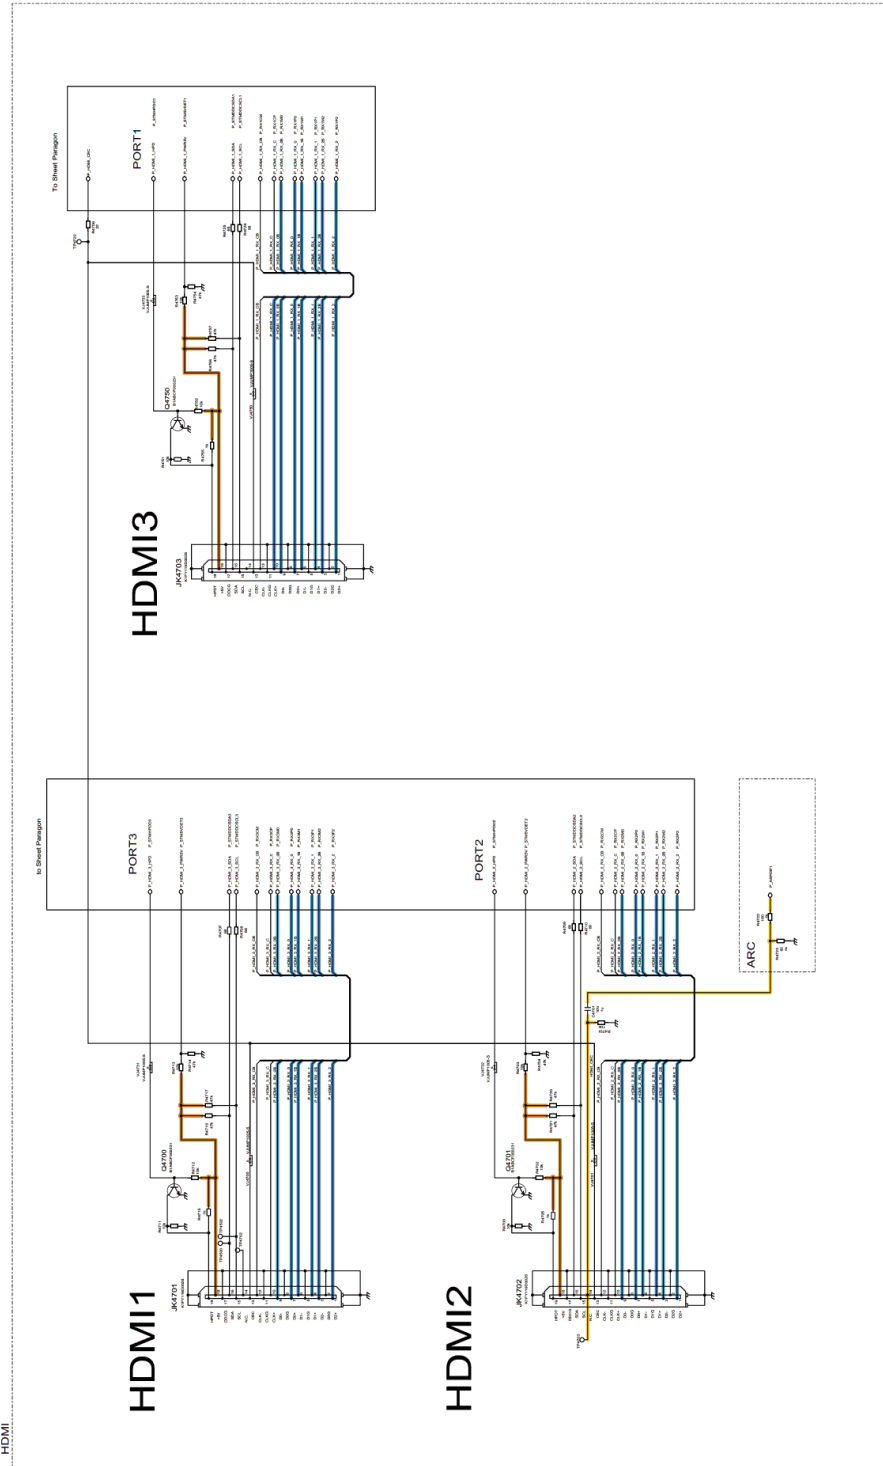

18

17

16

15


14

13

12

11

10

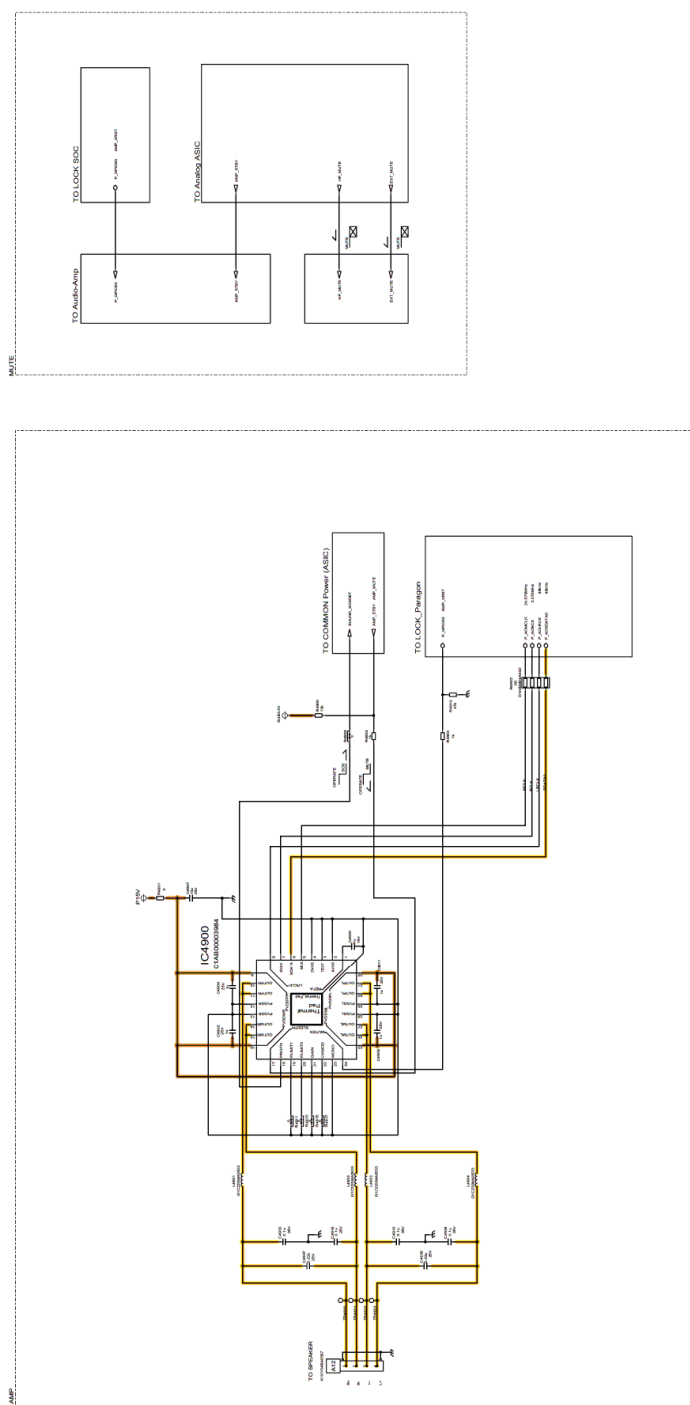

ROUTE

[illegible]

27

26

25

24

23


 


22


21

20










19


A-BOARD (4/13)

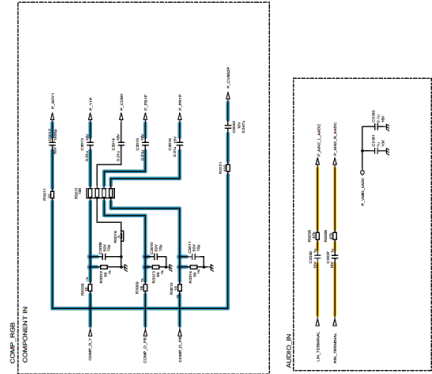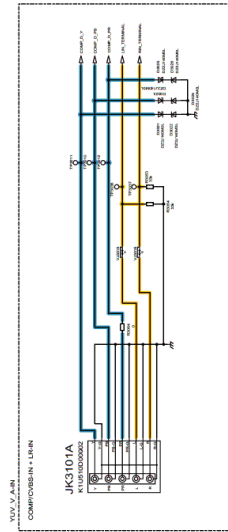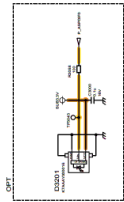

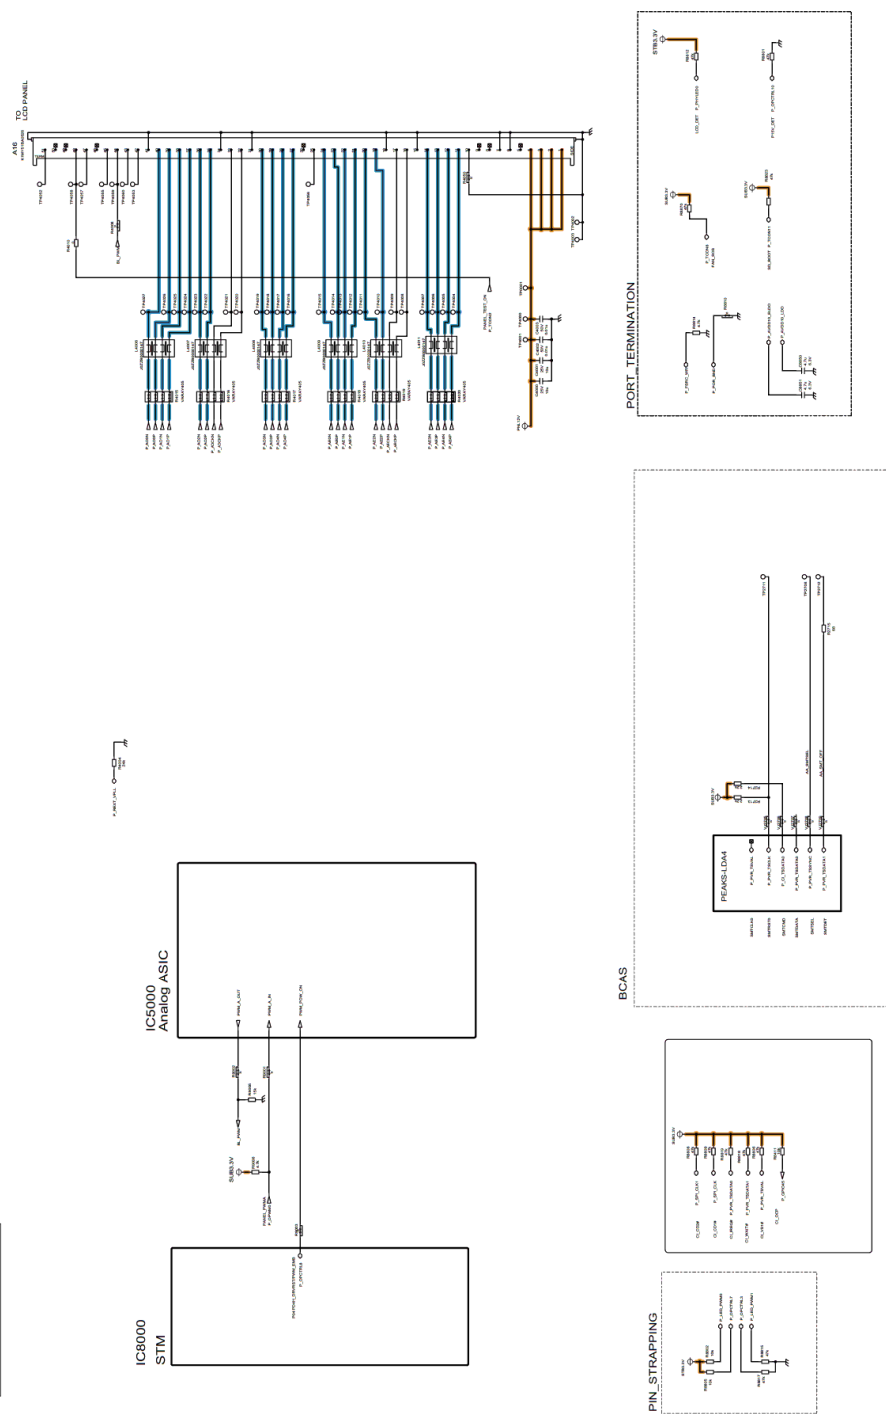

A-BOARD (6/13)

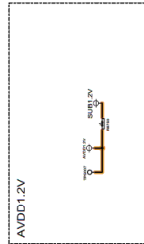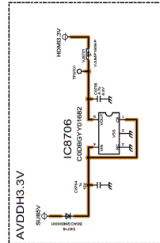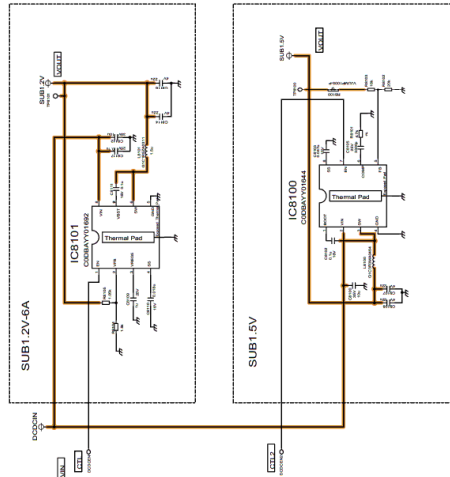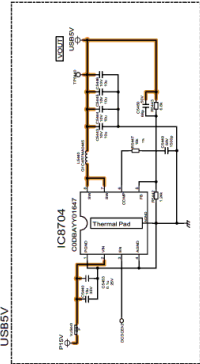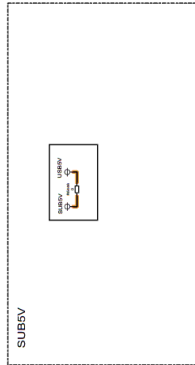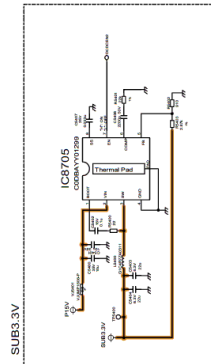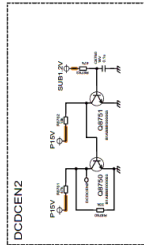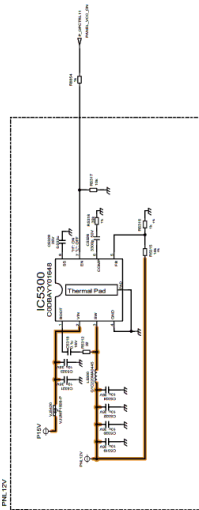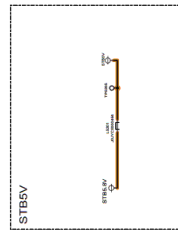


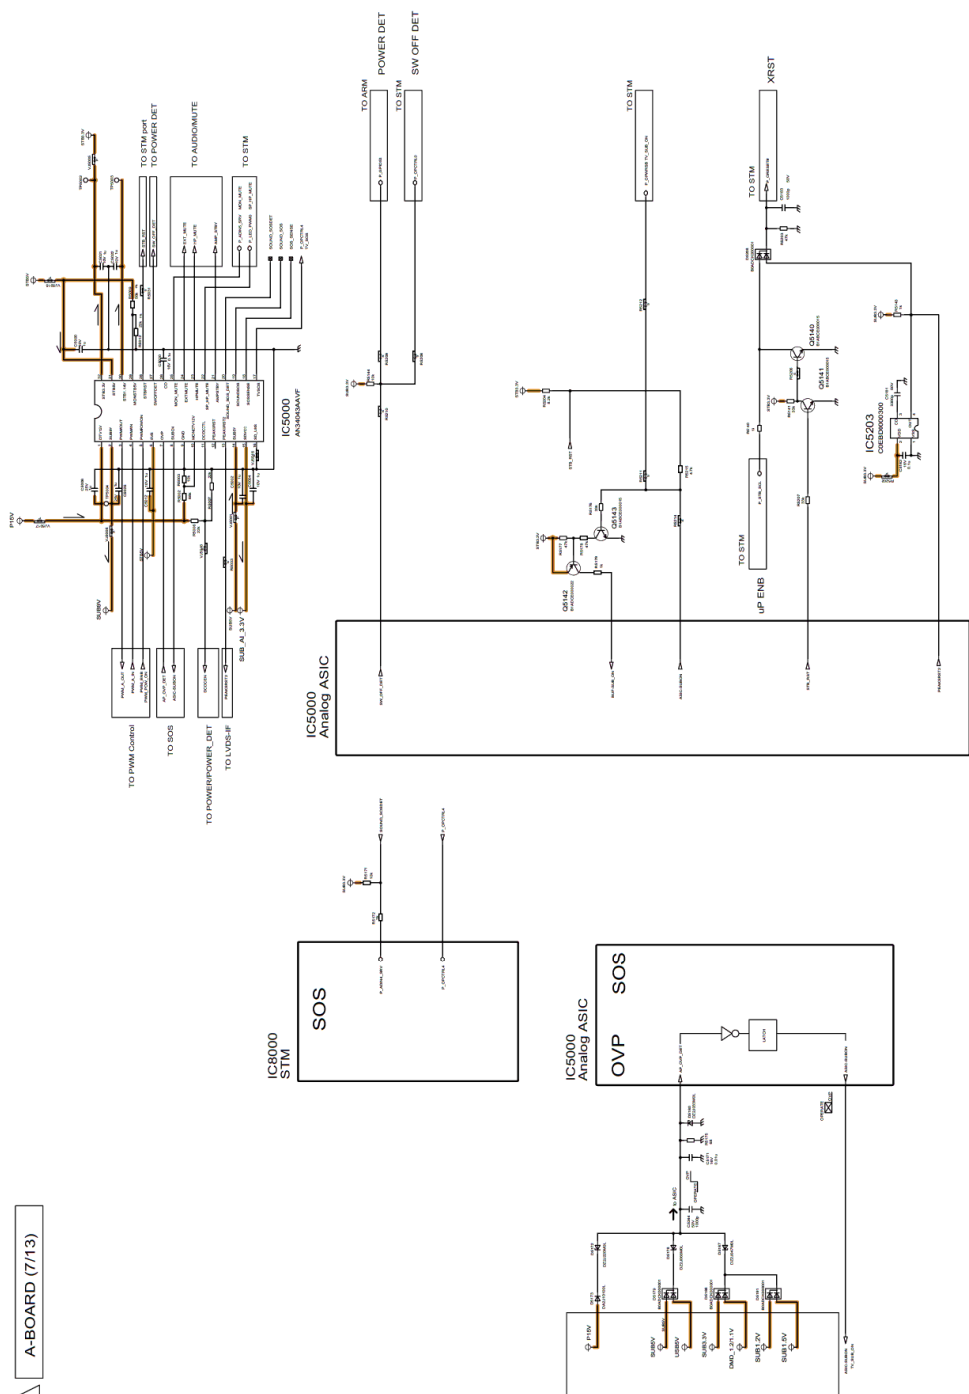


55

A-BOARD (9/13)


EX-BUS

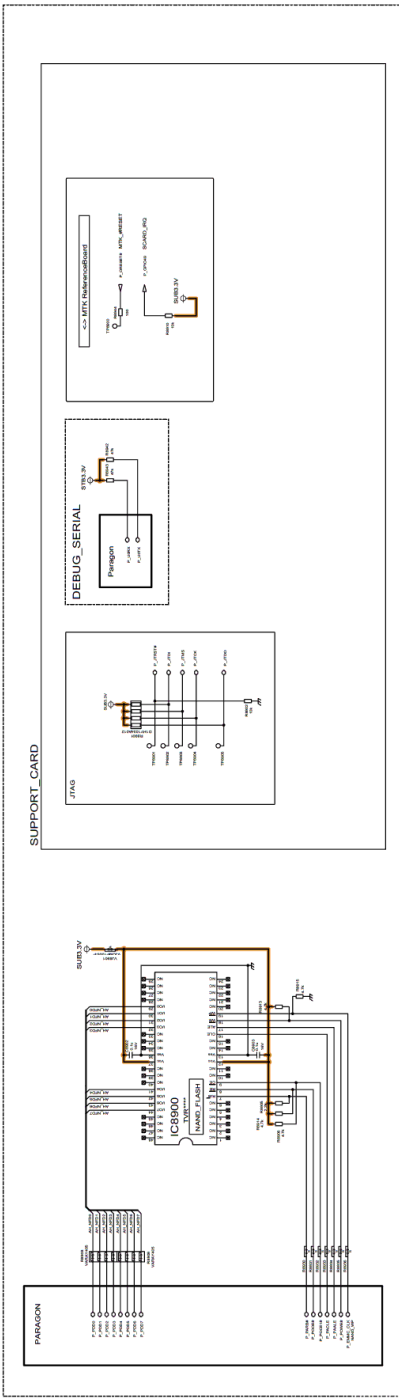


SUPPORT_CARD

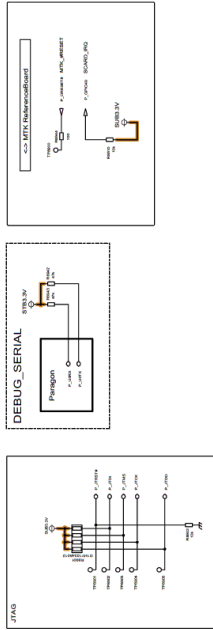


ETHER_PHY

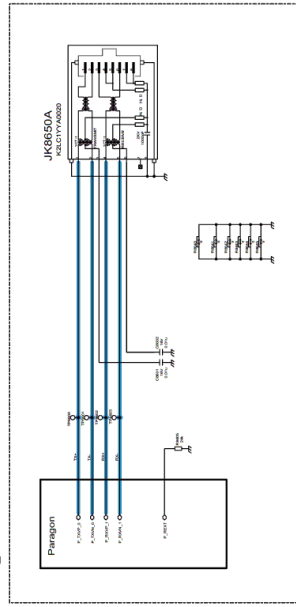


SD_CARD

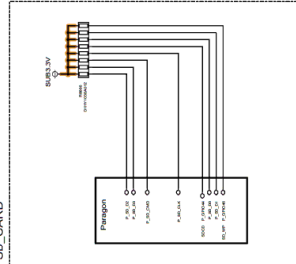


USB1

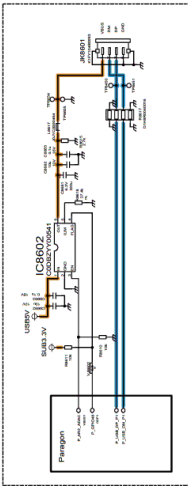

USB2

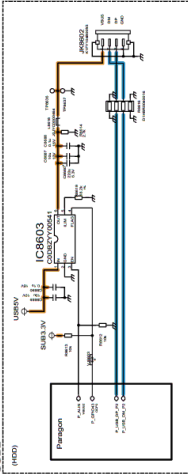

USB3

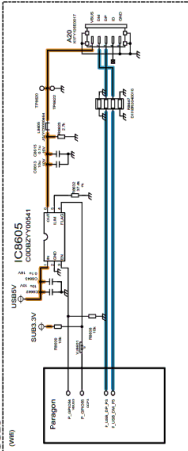

73

74

75

76

77


78



 

79




80

81


A-BOARD (10/13)

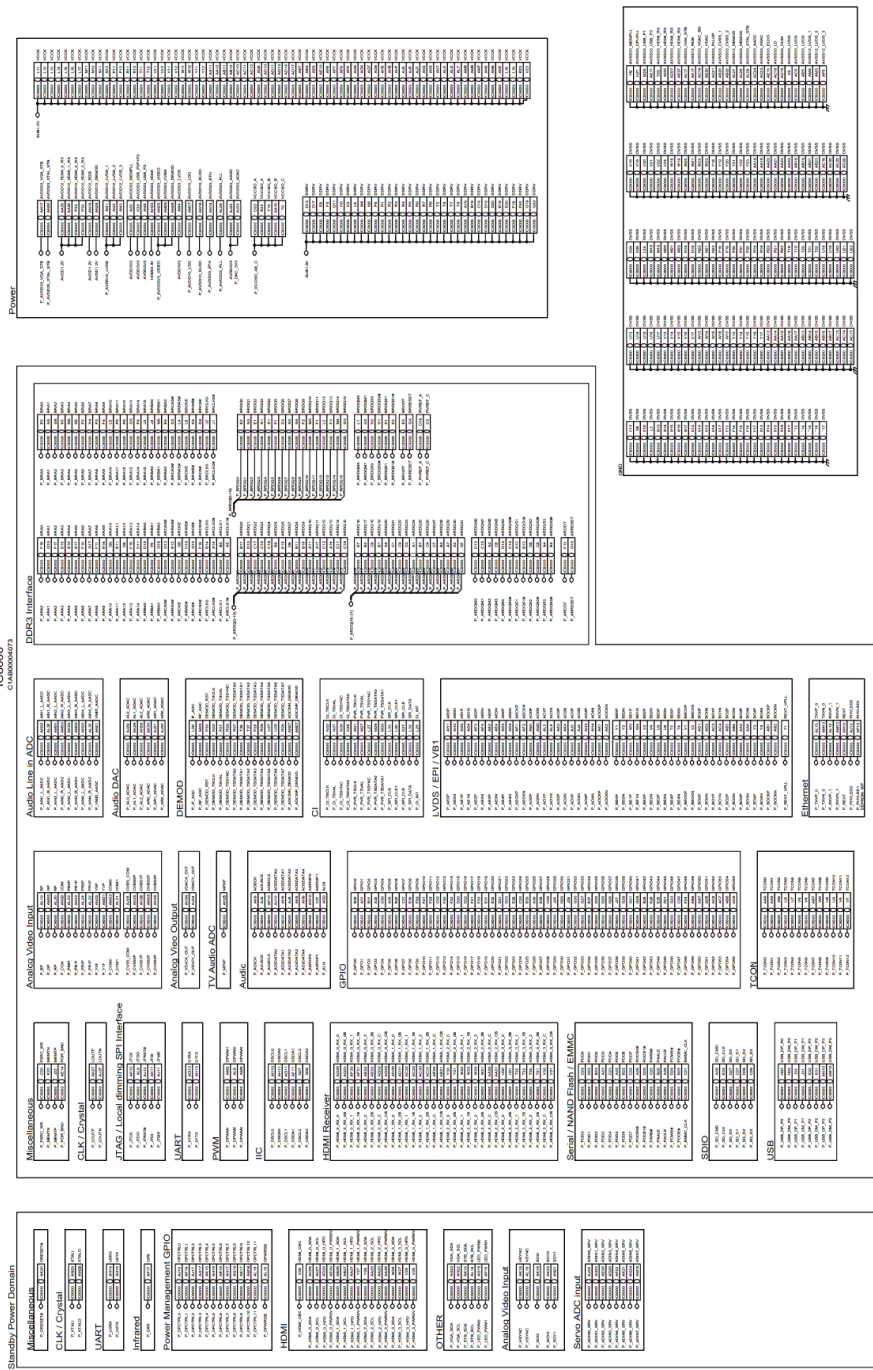

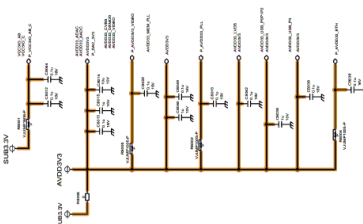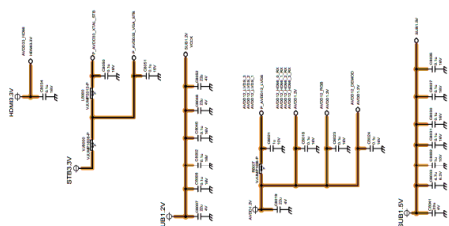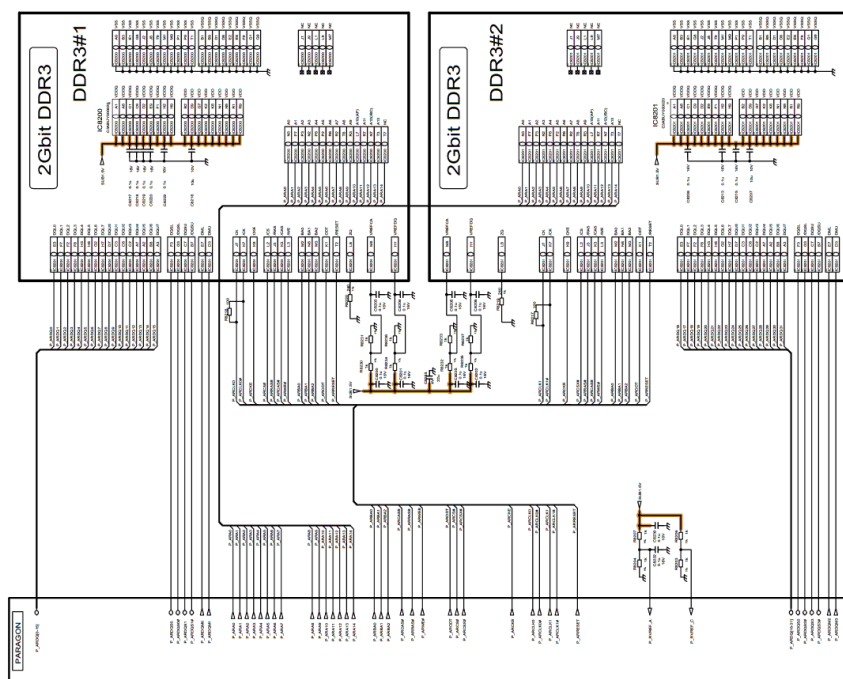

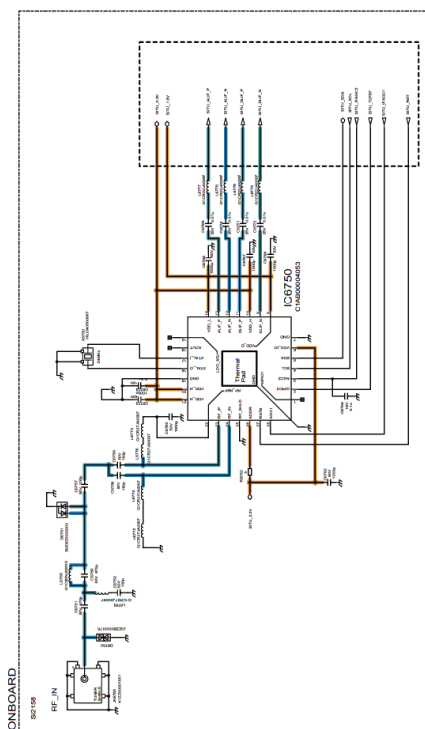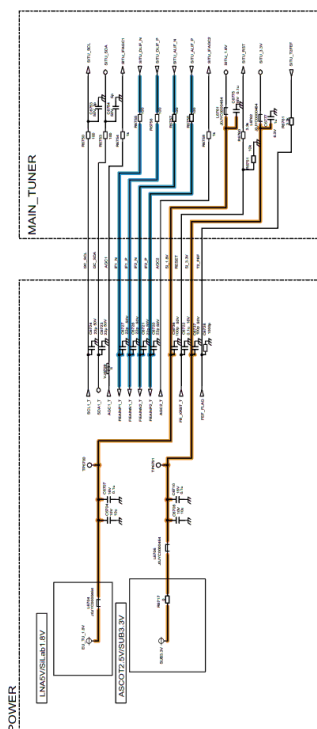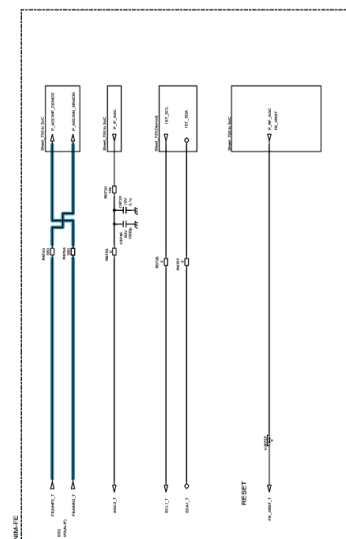


A-BOARD (13/13)

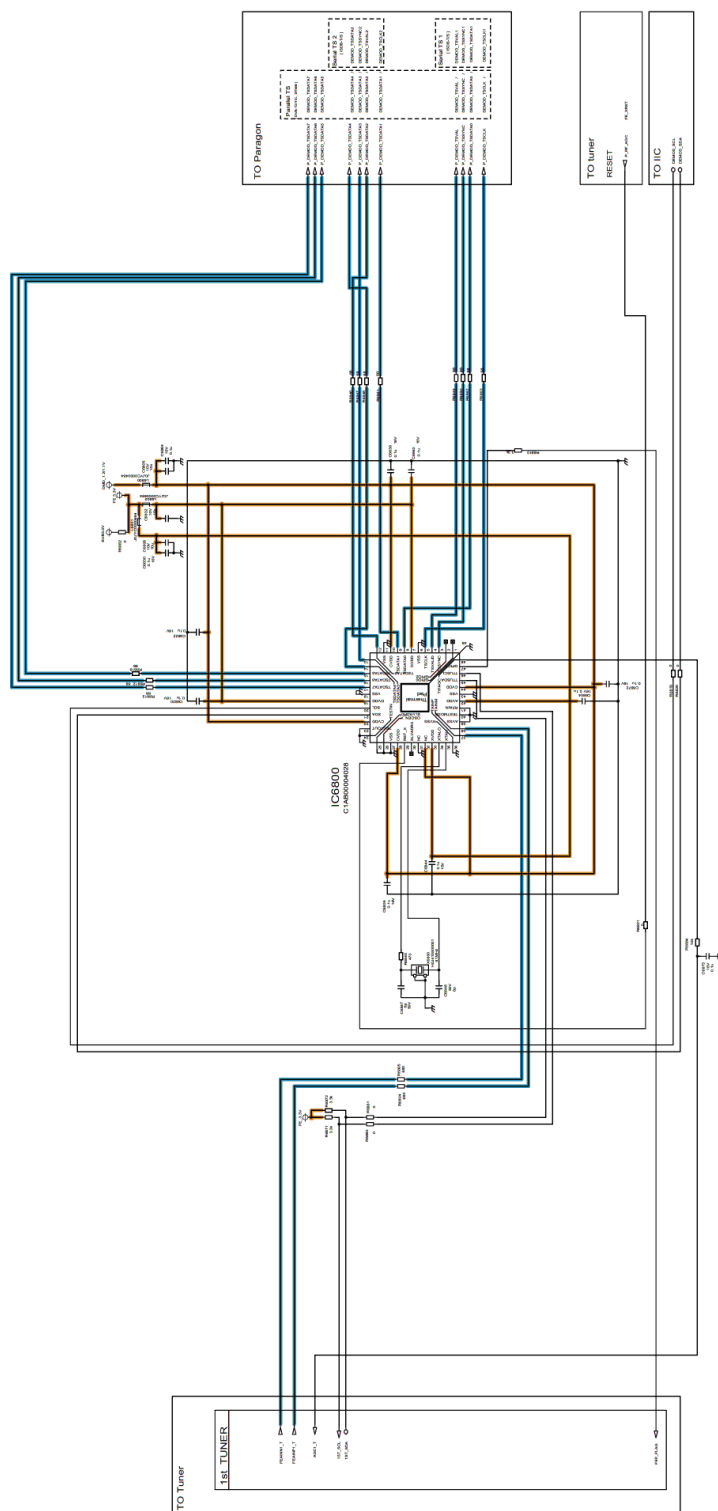

109 110 111 112 113 114 115 116 117

Model No. : TH-L42E6S GK-Board

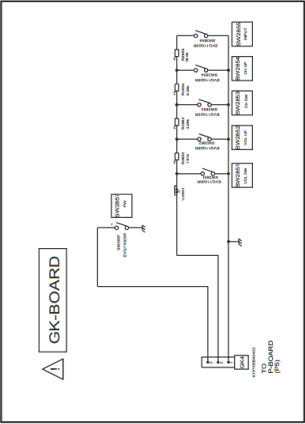

9

8

7

6

5

4

3

2

1

A

B

C


D


E

F

Model No. : TH-L42E6S K-Board


Model No. : TH-L42E6S P-Board (1/2)

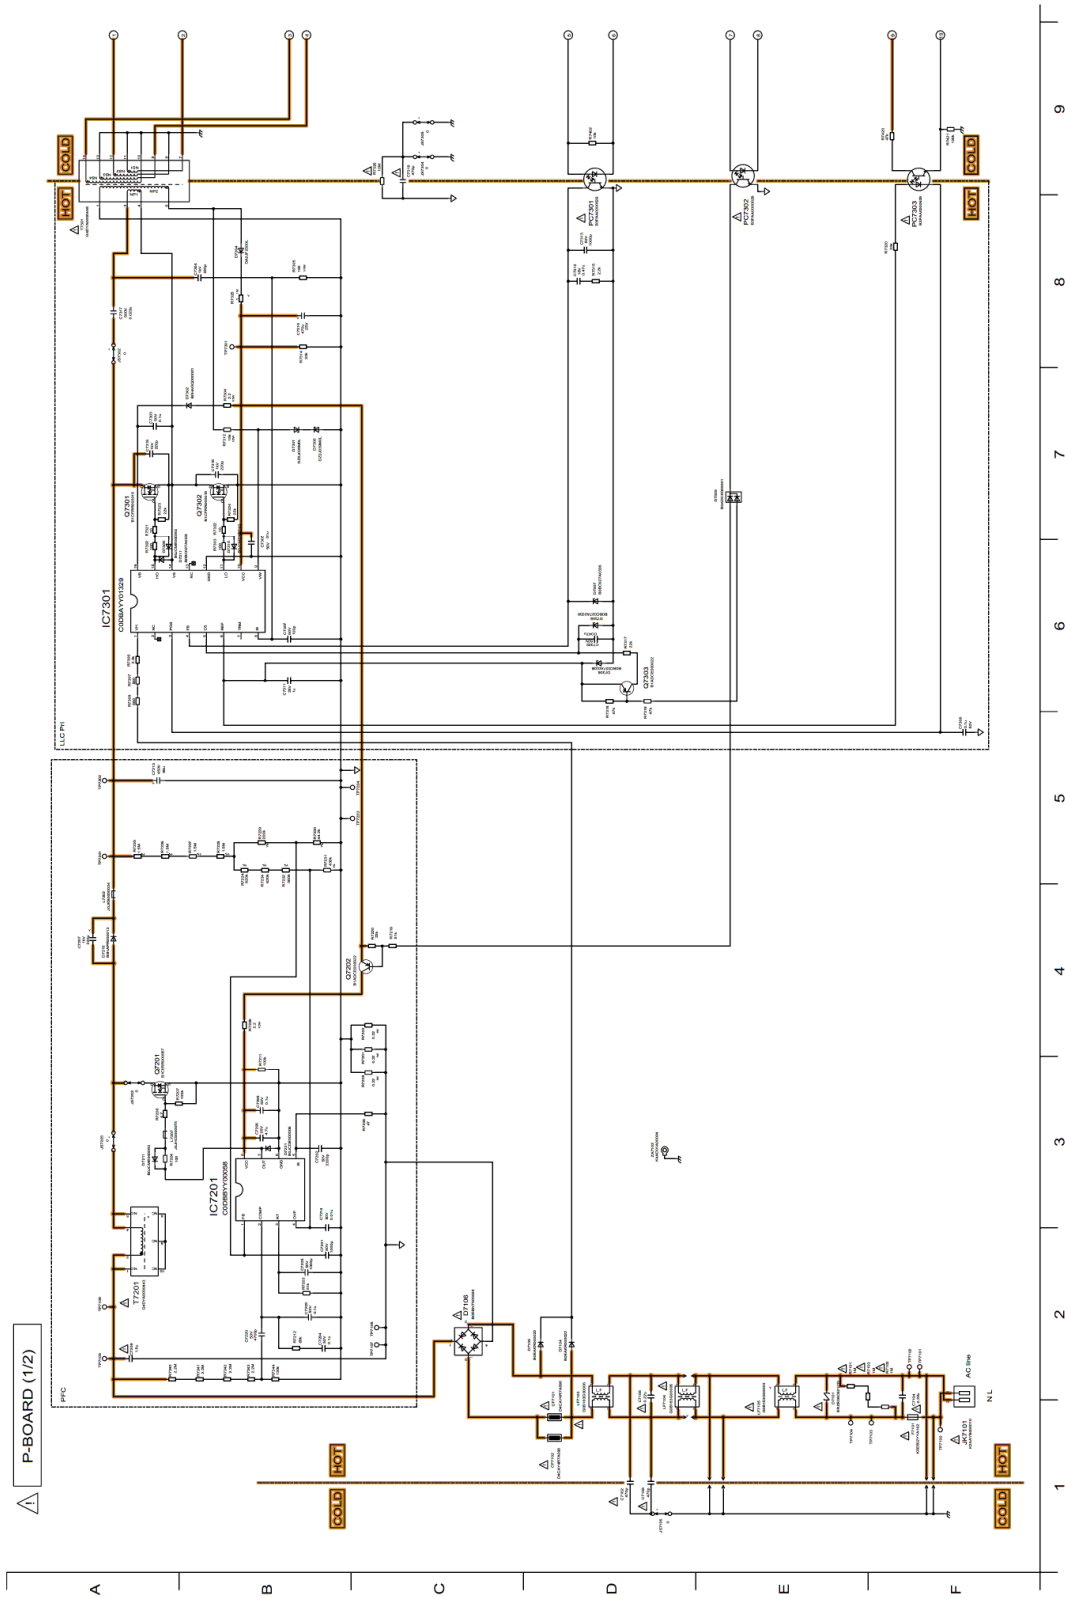

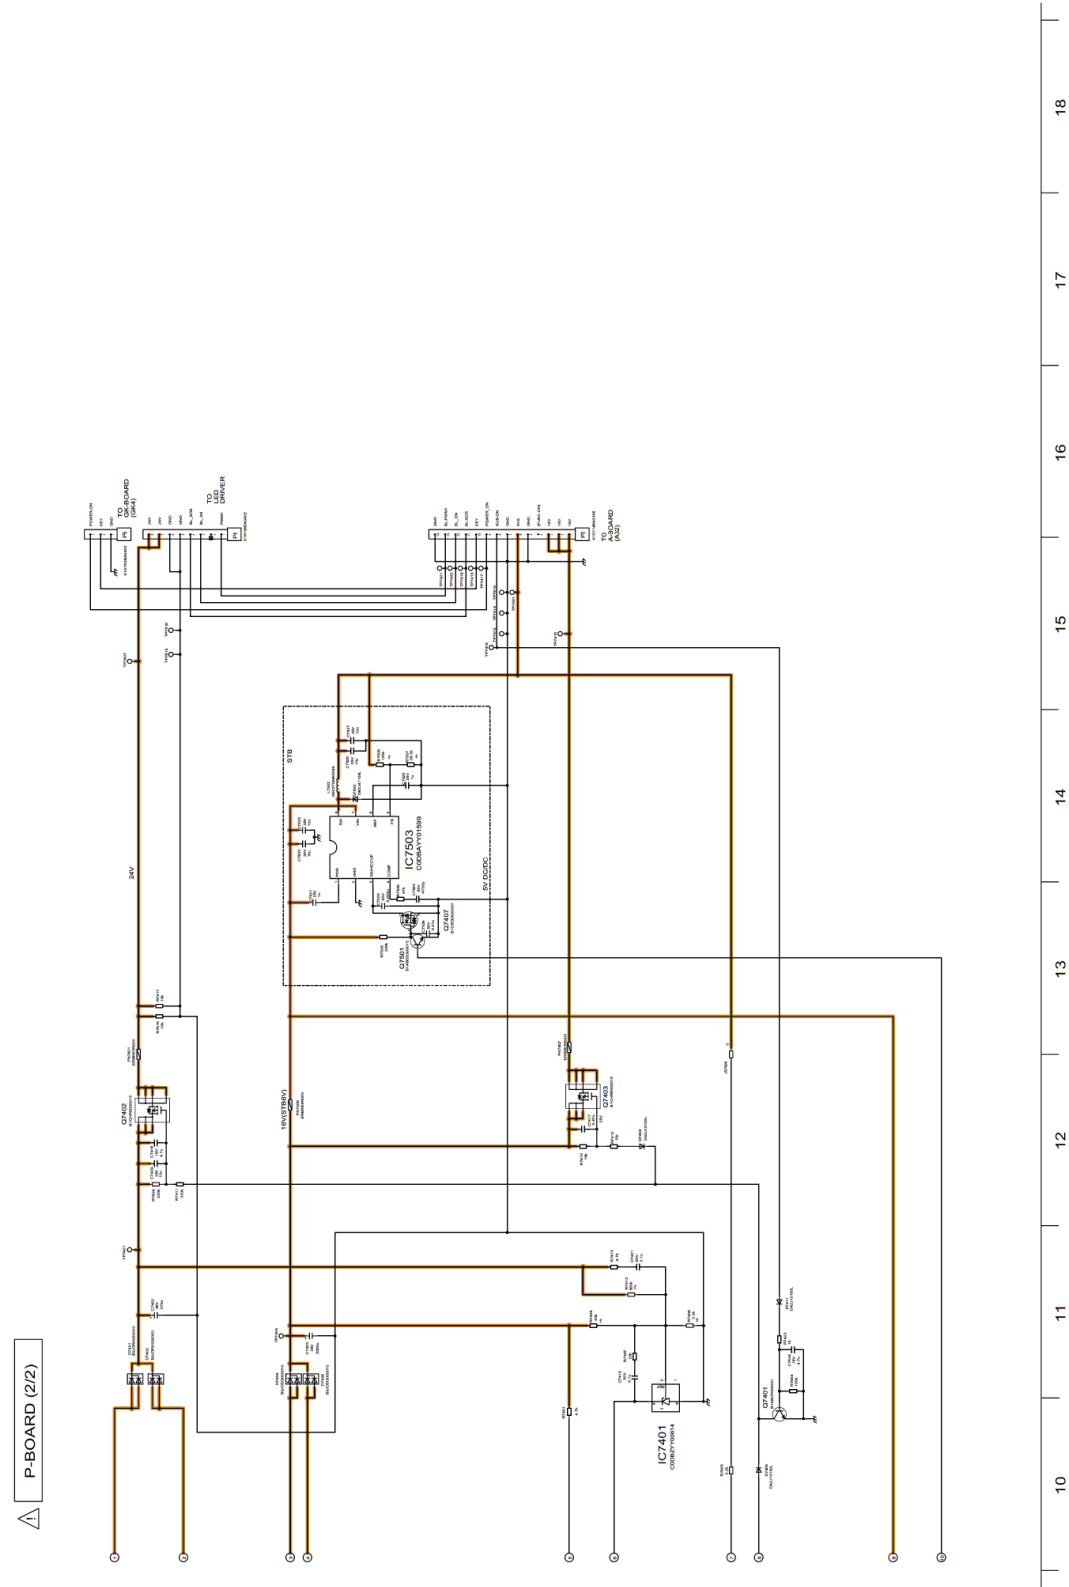



12 Printed Circuit Board


Model No. : TH-L42E6S A-Board (Top Component Side)

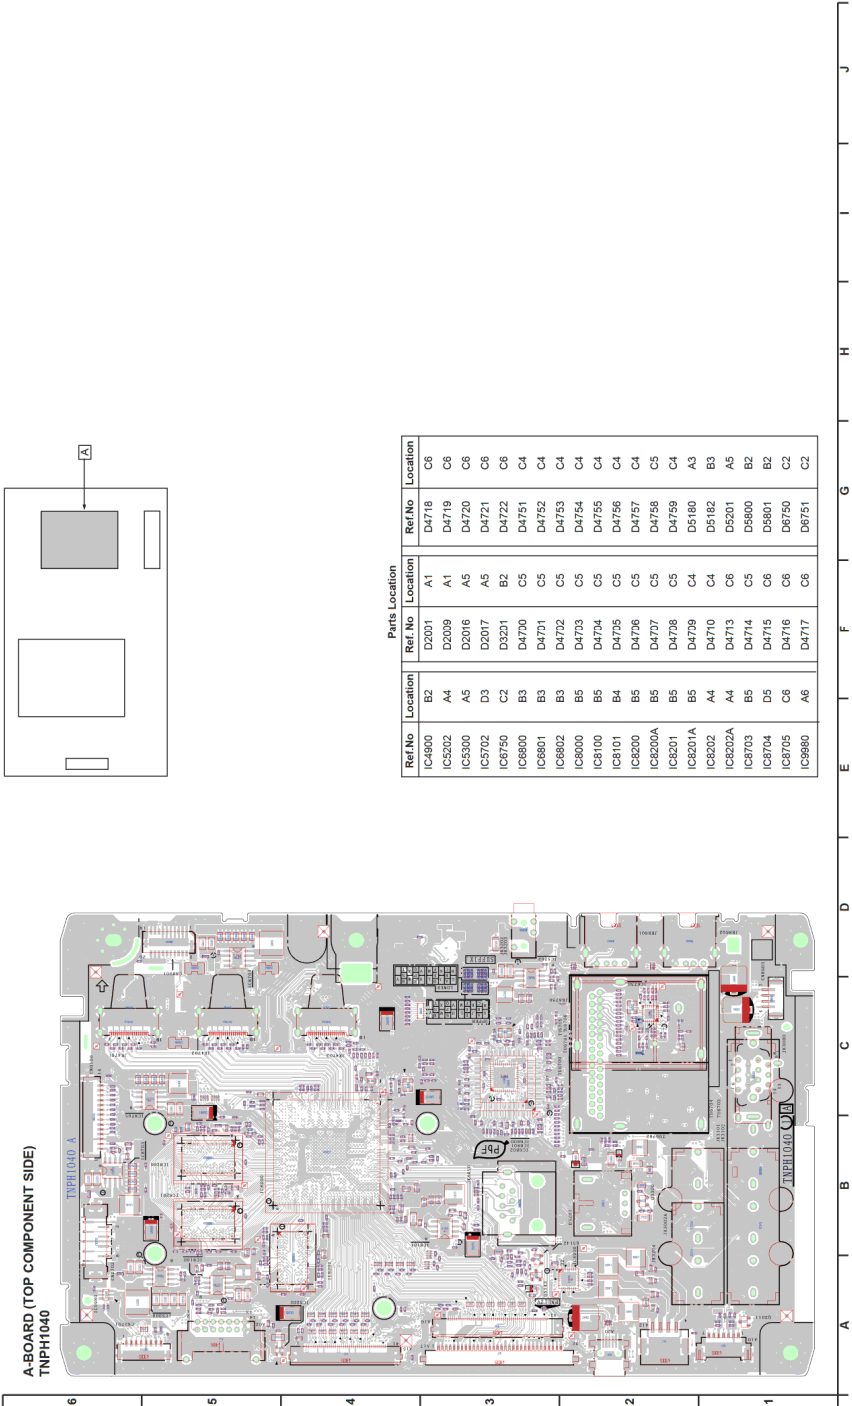

Model No. : TH-L42E6S A-Board (Bottom Component Side)

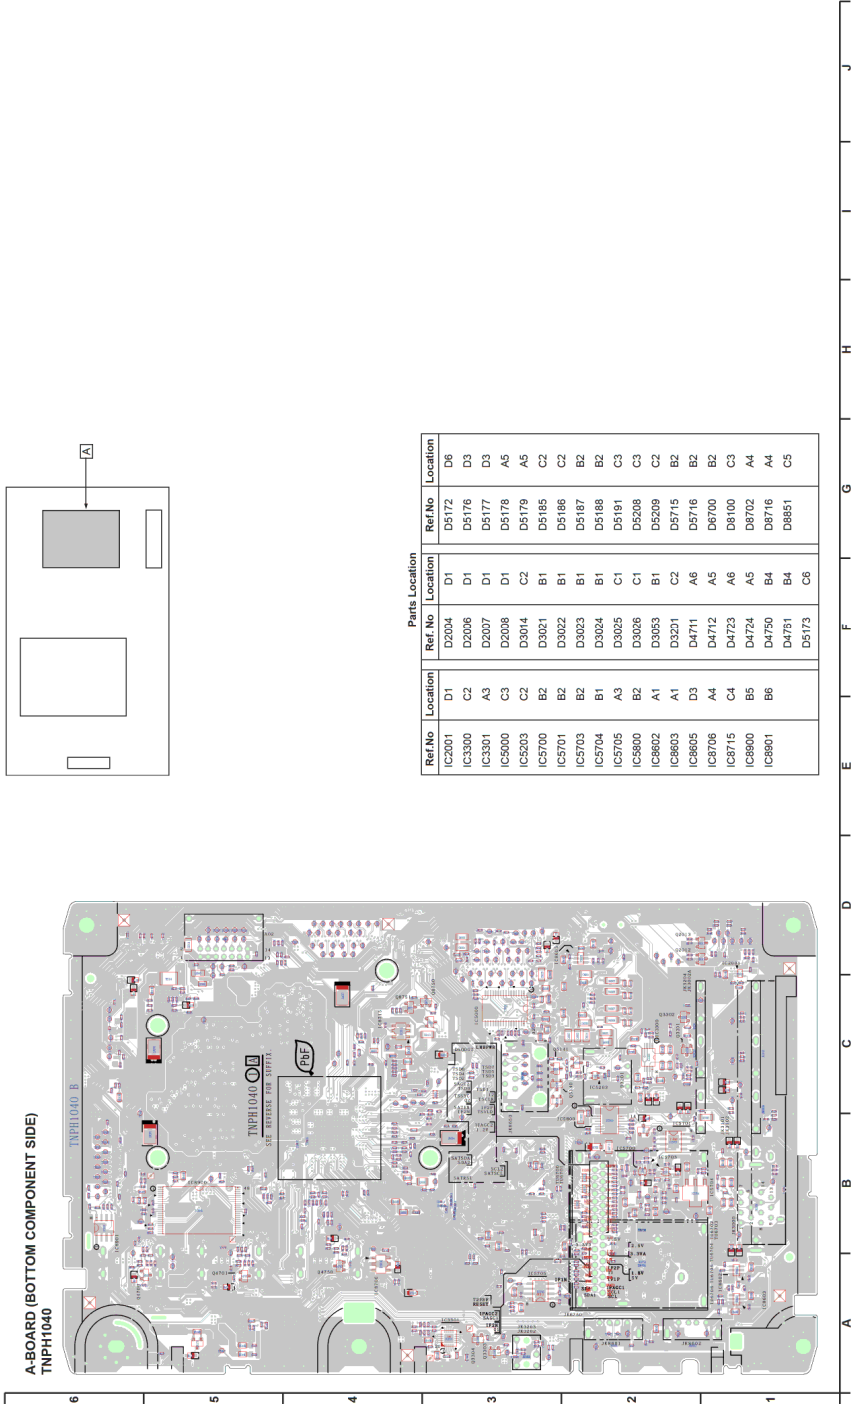


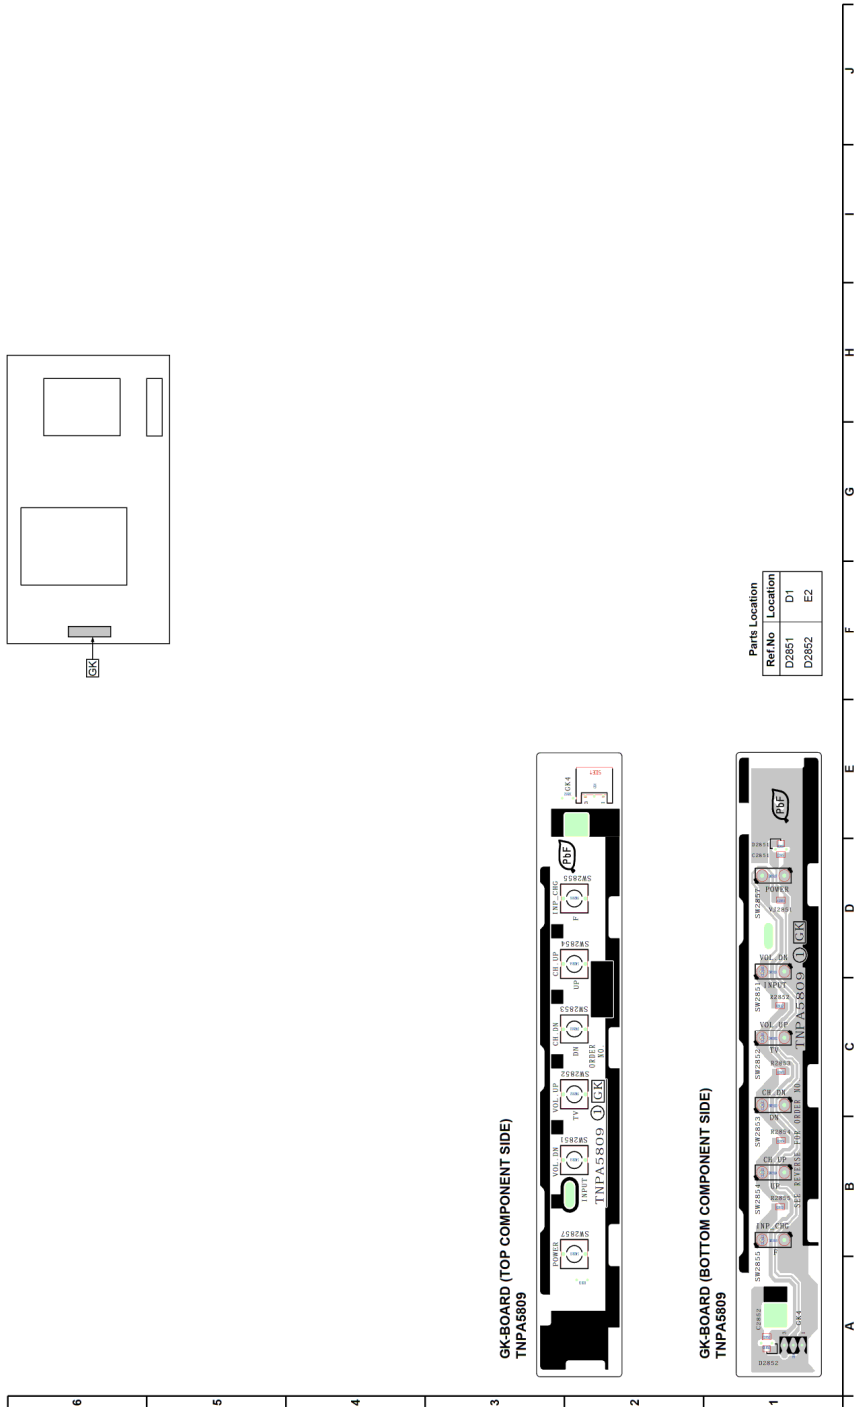

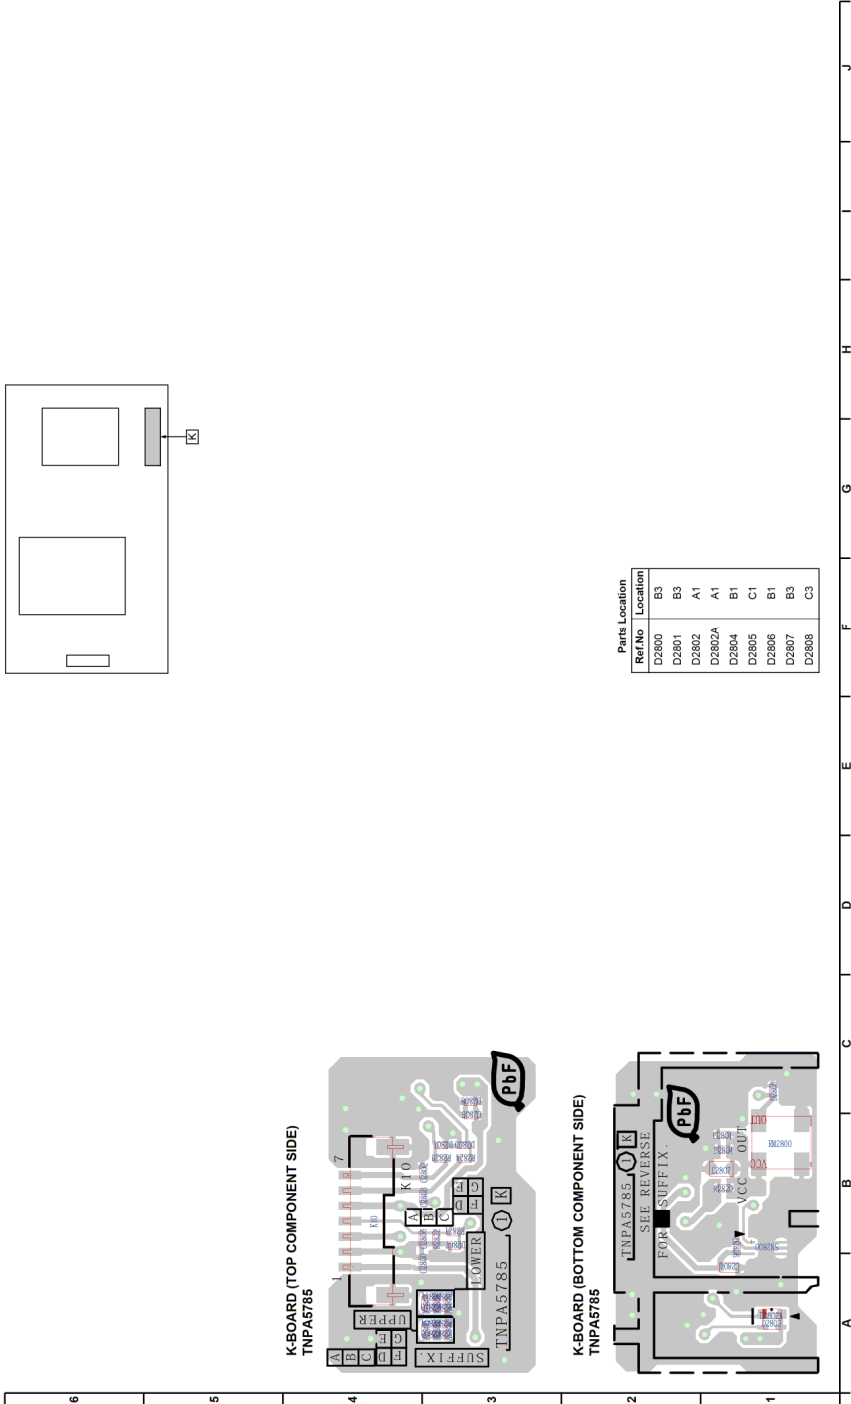


Model No. : TH-L42E6S P-Board (Top Component Side)

Model No. : TH-L42E6S P-Board (Bottom Component Side)

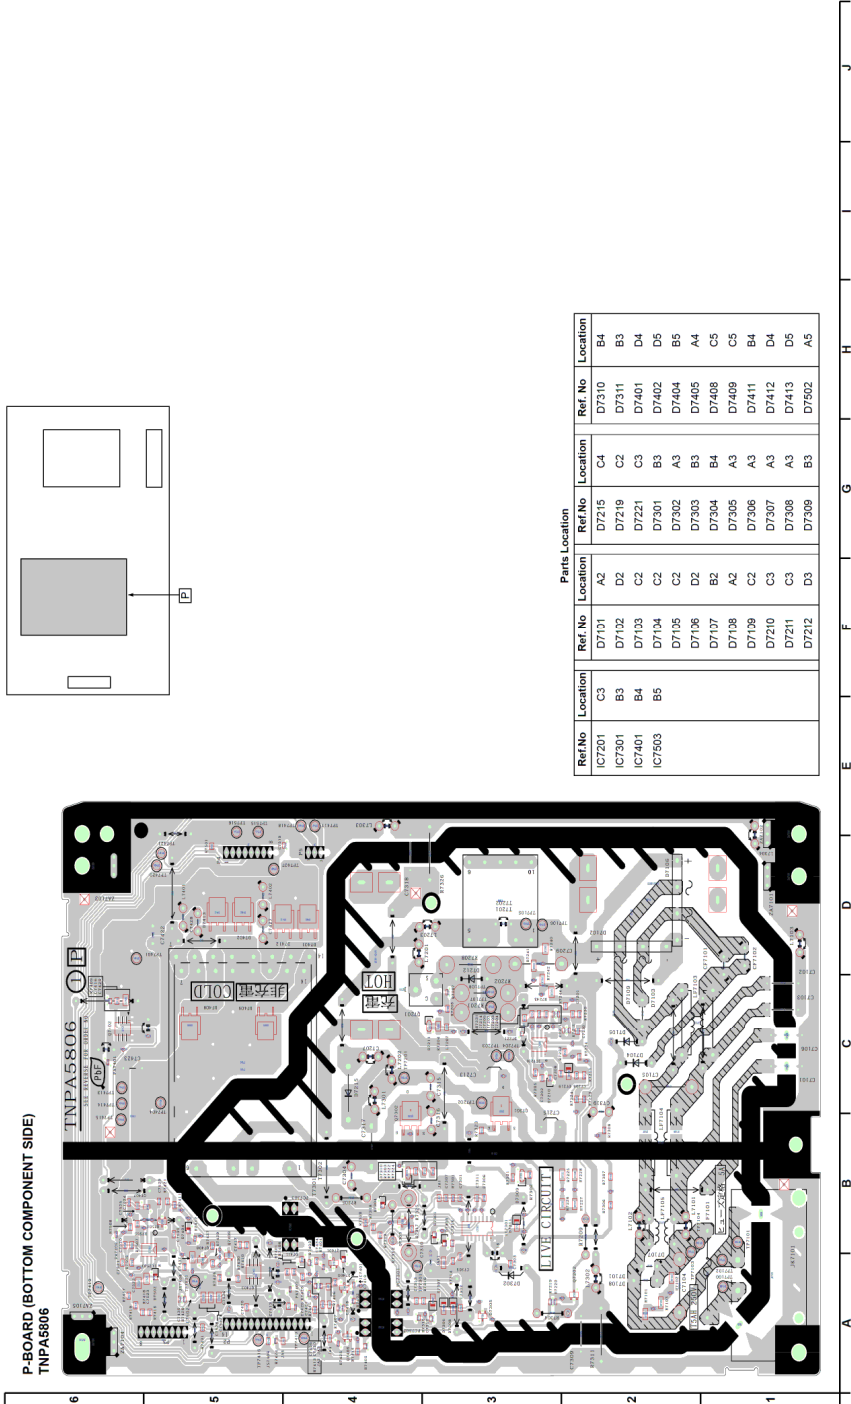


13 Exploded View and Replacement Parts List

Model No. : TH-L42E6S Parts Location

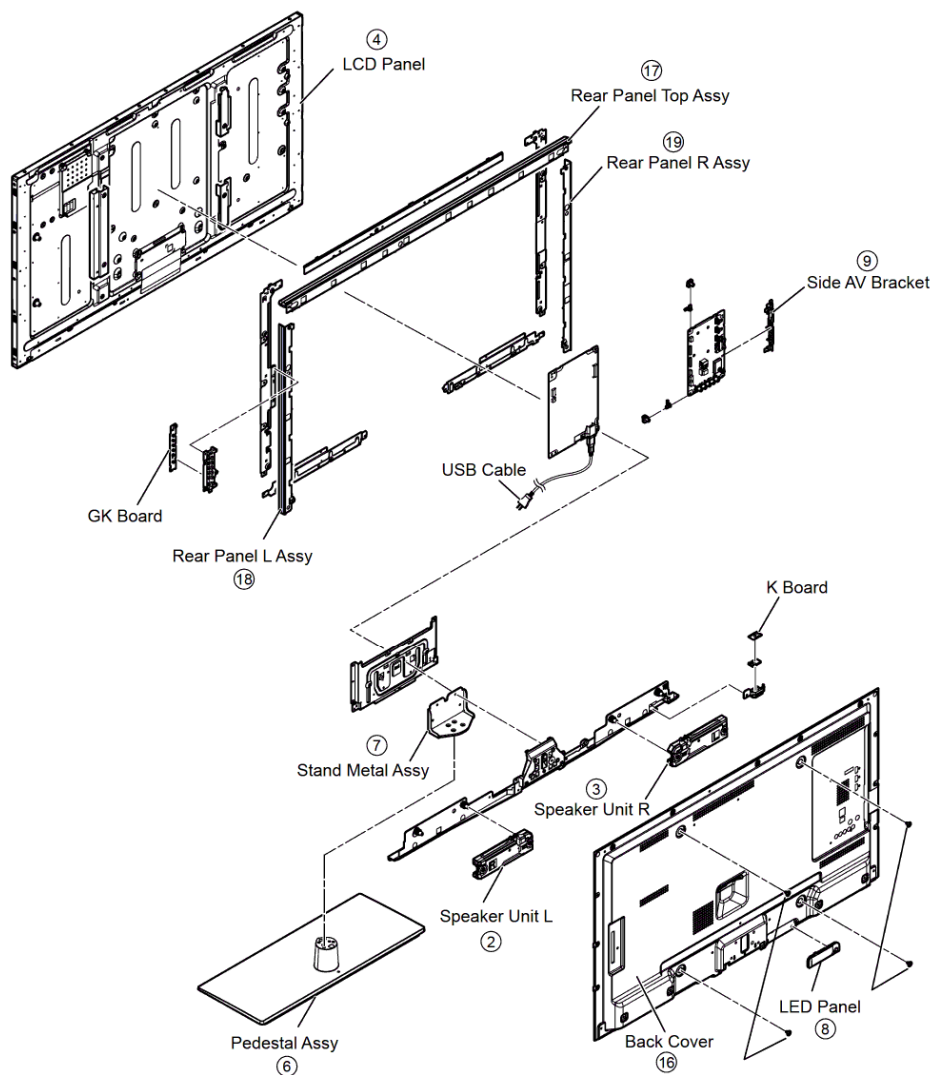

Model No. : TH-L42E6S Packing Exploded View

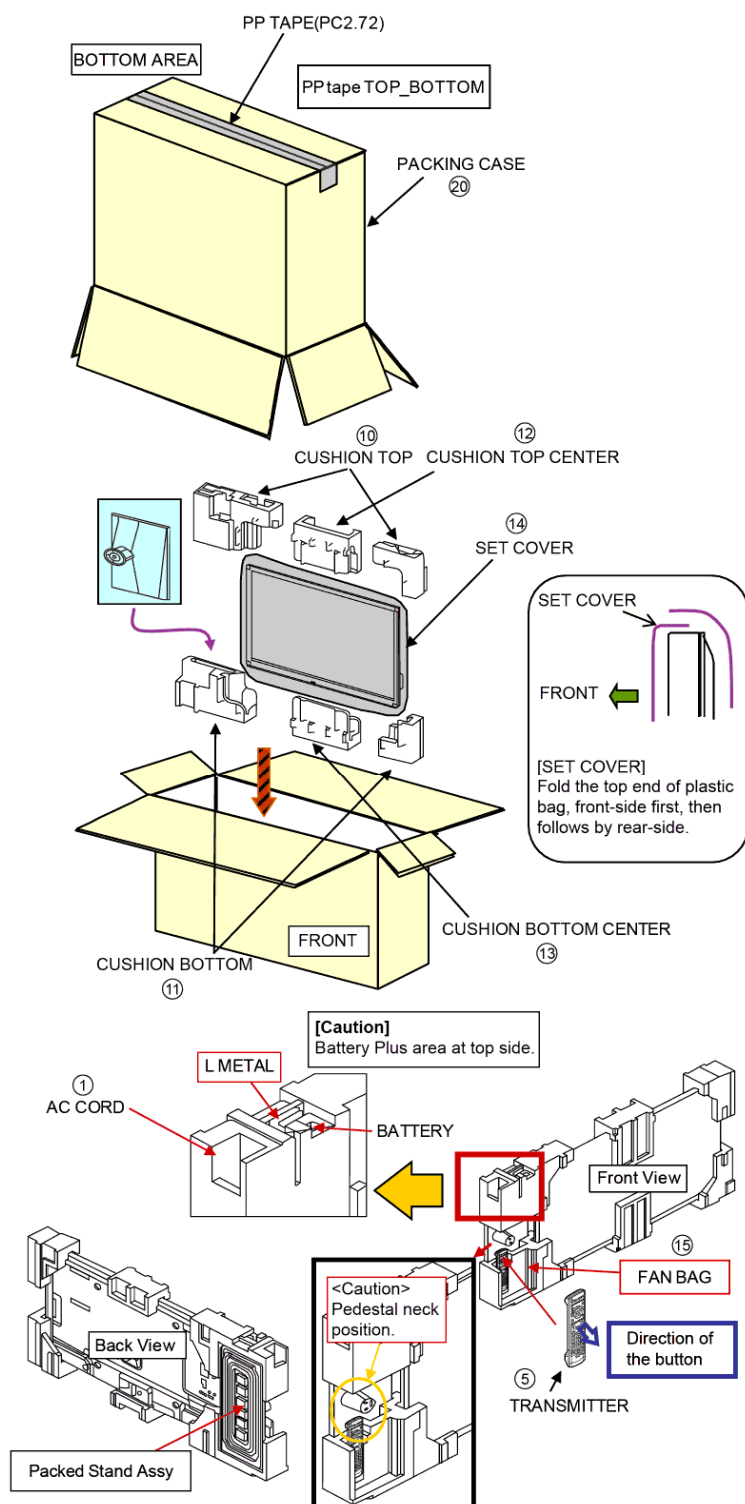

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
CAPACITORS						
		C2000	F1G1A105A047	C 1UF 10V		
		C2009	F1G1H1020008	C 1000PF 50V		
		C2012	F1G1E103A059	C 0.01UF 25V		
		C2014	F1K1V106A010	C 10UF, 25V		
		C2017	F1G1H1020008	C 1000PF 50V		
		C2023	F1G1C104A077	C 0.1UF 16V		
		C2801	F1G1C1030008	C 0.01UF 16V		
		C2804	F1H1C104A178	C 0.1UF, 16V		
		C2807	F1J1A106A043	C 10UF, 10V		
		C3000	F1G1C104A077	C 0.1UF 16V		
		C3009	F1G1H100A834	C 10PF 50V		
		C3010	F1G1H100A834	C 10PF 50V		
		C3011	F1G1H100A834	C 10PF 50V		
		C3012	F1G1H152A830	C 1500PF, 50V		
		C3013	F1G1C1030008	C 0.01UF 16V		
		C3014	F1G1C1030008	C 0.01UF 16V		
		C3015	F1G1C1030008	C 0.01UF 16V		
		C3016	F1G1C1030008	C 0.01UF 16V		
		C3036	F1G1A105A047	C 1UF 10V		
		C3037	F1G1A105A047	C 1UF 10V		
		C3042	F1G1A473A069	C0.047UF, 10V		
		C3180	F1G1C104A077	C 0.1UF 16V		
		C3181	F1G1A105A047	C 1UF 10V		
		C3319	F1H1A225A102	C 2.2UF , 10V		
		C4000	F1K1E106A134	C 10UF, 25V		
		C4001	F1K1E106A134	C 10UF, 25V		
		C4002	F1H1H103B047	C 0.01UF, 50V		
		C4003	F1H1H103B047	C 0.01UF, 50V		
		C4701	F1G1A105A047	C 1UF 10V		
		C4902	F1J1E105A287	C 1UF, 25V		
		C4904	F1J1E105A287	C 1UF, 25V		
		C4907	F1K1V106A010	C 10UF, 25V		
		C4908	F1J1E105A287	C 1UF, 25V		
		C4910	F1H1E104A161	C 0.1UF, 25V		
		C4911	F1J1E105A287	C 1UF, 25V		
		C4916	F1H1E104A161	C 0.1UF, 25V		
		C4920	F1H1C105A167	C 1UF, 10V		
		C4924	F1H1E104A161	C 0.1UF, 25V		
		C4933	F1H1E104A161	C 0.1UF, 25V		
		C4937	F1J1E224A272	C 0.22UF, 25V		
		C4938	F1J1E224A272	C 0.22UF, 25V		
		C5000	F1G1A105A047	C 1UF 10V		
		C5002	F1G1A105A047	C 1UF 10V		
		C5004	F1G1A105A047	C 1UF 10V		
		C5006	F1J1E105A287	C 1UF, 25V		
		C5012	F1G1A105A047	C 1UF 10V		
		C5020	F1G1C104A077	C 0.1UF 16V		
		C5021	F1G1A105A047	C 1UF 10V		
		C5022	F1G1A105A047	C 1UF 10V		
		C5026	F1H1E105A153	C 1UF, 16V		
		C5171	F1G1C1030008	C 0.01UF 16V		
		C5181	F1G1H332A830	C 3300PF, 50V		
		C5182	F1G1C104A077	C 0.1UF 16V		
		C5183	F1G1H1020008	C 1000PF 50V		
		C5244	F1G1H1020008	C 1000PF 50V		
		C5318	F1G1C104A077	C 0.1UF 16V		
		C5319	F1K1V106A010	C 10UF, 25V		
		C5320	F1K1V106A010	C 10UF, 25V		
		C5321	F1K1V106A010	C 10UF, 25V		
		C5322	F1K1V106A010	C 10UF, 25V		
		C5323	F1K1V106A010	C 10UF, 25V		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C5324	F1K1V106A010	C 10UF, 25V		
		C5328	F1G1H332A830	C 3300PF, 50V		
		C5329	F1G1E333A144	C 0.033UF 25V		
		C5400	F1K1V106A010	C 10UF, 25V		
		C5401	F1K1V106A010	C 10UF, 25V		
		C5402	F1G1C104A077	C 0.1UF 16V		
		C5403	F1J0J2260004	C 22 UF 6.3 V		
		C5404	F1J0J2260004	C 22 UF 6.3 V		
		C5407	F1G1E333A144	C 0.033UF 25V		
		C5408	F1G1H222A830	C 2200PF, 50V		
		C5440	F1K1V106A010	C 10UF, 25V		
		C5443	F1J1A106A087	C 10UF, 10V		
		C5444	F1J1A106A087	C 10UF, 10V		
		C5445	F1J1A106A087	C 10UF, 10V		
		C5446	F1J1A106A087	C 10UF, 10V		
		C5449	F1G1H152A830	C 1500PF, 50V		
		C5450	F1G1H680A834	C 68 PF 50 V		
		C5453	F1G1E104A145	C 0.1UF, 25V		
		C5705	F1K1V106A010	C 10UF, 25V		
		C5706	F1K1V106A010	C 10UF, 25V		
		C5707	F1J0G2260001	C 22UF, 4V		
		C5708	F1J0G2260001	C 22UF, 4V		
		C5709	F1G1C104A077	C 0.1UF 16V		
		C5711	F1G1E333A144	C 0.033UF, 25V		
		C5713	F1G1H821A830	C 820PF, 50V		
		C5717	F1J1A106A087	C 10UF, 10V		
		C5718	F1J1A106A087	C 10UF, 10V		
		C6704	F1J1A106A087	C 10UF, 10V		
		C6707	F1G1C104A077	C 0.1UF 16V		
		C6708	F1J1A106A087	C 10UF, 10V		
		C6710	F1G1C104A077	C 0.1UF 16V		
		C6720	F1G1H220A834	C 22PF, 50V		
		C6721	F1G1H220A834	C 22PF, 50V		
		C6722	F1G1C104A077	C 0.1UF 16V		
		C6723	F1G1H220A834	C 22PF, 50V		
		C6724	F1G1H220A834	C 22PF, 50V		
		C6726	F1G1H220A834	C 22PF, 50V		
		C6727	F1G1H220A834	C 22PF, 50V		
		C6728	F1G1H102A834	C 1000PF 50V		
		C6732	F1G1C104A077	C 0.1UF 16V		
		C6736	F1G1H101A834	C 100PF 50V		
		C6737	F1G1H101A834	C 100PF 50V		
		C6745	F1G1H102A834	C 1000PF 50V		
		C6750	F1G1H471A834	C 470PF , 240V		
		C6751	F1G1H471A834	C 470PF , 240V		
		C6752	F1G1H101A834	C 100PF, 50V		
		C6753	F1G1H5R0A831	C 5PF , 50V		
		C6754	F1G1H5R0A831	C 5PF , 50V		
		C6757	F1G1H101A834	C 100PF 50V		
		C6758	F1G1H181A834	C 180PF , 50V		
		C6759	F1G1H181A834	C 180PF , 50V		
		C6760	F1G1H102A834	C 1000PF 50V		
		C6762	F1G1H102A834	C 1000PF 50V		
		C6764	F1G1C104A077	C 0.1UF 16V		
		C6766	F1G1H1020008	C 1000PF 50V		
		C6767	F1G1H1020008	C 1000PF 50V		
		C6768	F1G1H1020008	C 1000PF 50V		
		C6769	F1G1E103A059	C 0.01UF , 25V		
		C6770	F1G1E103A059	C 0.01UF , 25V		
		C6771	F1G1E103A059	C 0.01UF , 25V		
		C6772	F1G1E103A059	C 0.01UF , 25V		
		C6773	F1G1H1020008	C 1000PF 50V		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C6774	F1G1C104A077	C 0.1UF 16V		
		C6775	F1G1C104A077	C 0.1UF 16V		
		C6777	F1G0J105A049	C 1UF , 6.3V		
		C6804	F1G1C104A077	C 0.1UF 16V		
		C6805	F1J1A106A087	C 10UF, 10V		
		C6806	F1J1A106A087	C 10UF, 10V		
		C6809	F1G1C104A077	C 0.1UF 16V		
		C6820	F1G1C104A077	C 0.1UF 16V		
		C6822	F1G1C104A077	C 0.1UF 16V		
		C6830	F1G1C104A077	C 0.1UF 16V		
		C6832	F1J1A106A087	C 10UF, 10V		
		C6838	F1G1C104A077	C 0.1UF 16V		
		C6840	F1G1C104A077	C 0.1UF 16V		
		C6844	F1G1C104A077	C 0.1UF 16V		
		C6847	F1G1H8R0A833	C 8PF, 50V		
		C6848	F1G1H8R0A833	C 8PF, 50V		
		C6864	F1G1C104A077	C 0.1UF 16V		
		C6872	F1G1C104A077	C 0.1UF 16V		
		C6873	F1G1C104A077	C 0.1UF 16V		
	⚠	C7102	F1AAF471A019	C 470PF , 240V		
	⚠	C7103	F1AAF471A019	C 470PF , 240V		
	⚠	C7104	F0CAF2240010	C 0.22UF, 240V		
	⚠	C7105	F0CAF2240010	C 0.22UF, 240V		
		C7201	F1J1H102A909	C 1000pF, 50V		
		C7202	F1J1H222A911	C 2200pF, 50V		
		C7203	F1H1H104B047	C 0.1UF, 50V		
		C7204	F1H1H104B047	C 0.1UF, 50V		
		C7205	F1J1H102A909	C 1000pF, 50V		
		C7206	F1J1E475A257	C 4.7UF, 25V		
		C7207	F1A3A221A060	C 220PF 1KV		
		C7208	F1J1H104A902	C 0.1UF, 50V		
	⚠	C7209	ECWFD2W155KC	C 1.5UF, 240V		
		C7213	F2A2W6800013	C 68UF, 450V		
		C7214	F1J1H103A900	C 0.01UF, 50V		
		C7220	F1J1H472A900	C 4700PF, 50V		
		C7302	F1J1H473A900	C 0.047UF, 16V		
		C7303	F1J1H104A902	C 0.1UF, 50V		
		C7304	F1A3A221A060	C 220PF 1KV		
		C7305	F1J1H104A902	C 0.1UF, 50V		
		C7306	F1J1H104A902	C 0.1UF, 50V		
		C7307	F1J1H101A906	C 100PF, 50V		
		C7310	F2A1E4710124	C 470UF, 25V		
		C7311	F1J1E105A287	C 1UF, 25V		
		C7312	F1H1C474A178	C 0.47UF, 16V		
		C7313	F1J1H102A909	C 1000pF, 50V		
		C7315	F1A3A221A060	C 220PF 1KV		
		C7316	F1A3A221A060	C 220PF 1KV		
		C7317	ECWH8223HAC	C 0.022UF, Z, 800V		
		C7318	F1AAF471A019	C 470PF , 240V		
		C7416	F1J1C475A225	C 4.7UF, 10V		
		C7417	F1J1E474A272	C 0.47UF, 25V		
		C7418	F1H1H104B047	C 0.1UF, 50V		
		C7421	F1H1H104B047	C 0.1UF, 50V		
		C7422	F2A1V2710019	C 270UF, 35V		
		C7423	F2A1E222B927	C 2200UF, 25V		
		C7429	F1K1V106A010	C 10UF, 25V		
		C7434	F1J1C475A225	C 4.7UF, 10V		
		C7520	F1J1E105A287	C 1UF, 25V		
		C7521	F1J1E105A287	C 1UF, 25V		
		C7522	F1K1V106A010	C 10UF, 25V		
		C7523	F1K1V106A010	C 10UF, 25V		
		C7524	F1J1H472A900	C 4700PF, 50V		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C7525	F1J1H223A900	C 0.022UF, 50V		
		C7526	F1K1V106A010	C 10UF, 25V		
		C7527	F1K1V106A010	C 10UF, 25V		
		C7529	F1J1H103A900	C 0.01UF, 50V		
		C8002	F1G1C104A077	C 0.1UF 16V		
		C8007	F1J0G2260001	C 22 UF 4 V		
		C8008	F1G1C104A077	C 0.1UF 16V		
		C8012	F1G1C104A077	C 0.1UF 16V		
		C8013	F1G1C104A077	C 0.1UF 16V		
		C8014	F1J1A106A087	C 10UF, 10V		
		C8015	F1G1A105A047	C 1UF 10V		
		C8016	F1G1C104A077	C 0.1UF 16V		
		C8018	F1G1C104A077	C 0.1UF 16V		
		C8019	F1J0G2260001	C 22 UF 4 V		
		C8021	F1G1A105A047	C 1UF 10V		
		C8022	F1G1C104A077	C 0.1UF 16V		
		C8023	F1G1C104A077	C 0.1UF 16V		
		C8024	F1G1C104A077	C 0.1UF 16V		
		C8025	F1G1C104A077	C 0.1UF 16V		
		C8027	F1G1C104A077	C 0.1UF 16V		
		C8030	F1G1C104A077	C 0.1UF 16V		
		C8031	F1G1C104A077	C 0.1UF 16V		
		C8032	F1G1A105A047	C 1UF 10V		
		C8033	F1H0J4750004	C 4.7UF, 16V		
		C8034	F1G1C104A077	C 0.1UF 16V		
		C8036	F1G1C104A077	C 0.1UF 16V		
		C8038	F1G1C104A077	C 0.1UF 16V		
		C8039	F1G1A105A047	C 1UF 10V		
		C8040	F1G1A105A047	C 1UF 10V		
		C8041	F1J0G2260001	C 22 UF 4 V		
		C8042	F1G1C104A077	C 0.1UF 16V		
		C8044	F1G1C104A077	C 0.1UF 16V		
		C8046	F1G1C104A077	C 0.1UF 16V		
		C8048	F1J0G2260001	C 22 UF 4 V		
		C8049	F1G1C104A077	C 0.1UF 16V		
		C8050	F1G1C104A077	C 0.1UF 16V		
		C8051	F1G1C104A077	C 0.1UF 16V		
		C8052	F1J0G2260001	C 22 UF 4 V		
		C8100	F1K1V106A010	C 10UF, 25V		
		C8102	F1G1C104A077	C 0.1UF 16V		
		C8103	F1G1C473A048	C 0.047UF, 16V		
		C8105	F1G1E332A144	C 3300PF, 25V		
		C8107	F1J0G2260001	C 22 UF 4 V		
		C8108	F1J0G2260001	C 22 UF 4 V		
		C8109	F1H1E105A153	C 1UF, 16V		
		C8110	F1G1C183A146	C 0.018UF, 16V		
		C8111	F1G1C104A077	C 0.1UF 16V		
		C8112	F1K1V106A010	C 10UF, 25V		
		C8114	F1J0G2260001	C 22 UF 4 V		
		C8116	F1J0G2260001	C 22 UF 4 V		
		C8117	F1H1E104A161	C 0.1UF, 25V		
		C8200	F1G1C104A077	C 0.1UF 16V		
		C8201	F1G1C104A077	C 0.1UF 16V		
		C8202	F1G1C104A077	C 0.1UF 16V		
		C8203	F1G1C104A077	C 0.1UF 16V		
		C8204	F1G1C104A077	C 0.1UF 16V		
		C8205	F1G1C104A077	C 0.1UF 16V		
		C8206	F1G1C104A077	C 0.1UF 16V		
		C8207	F1J1A106A087	C 10UF, 10V		
		C8208	F1G1C104A077	C 0.1UF 16V		
		C8213	F1G1C104A077	C 0.1UF 16V		
		C8215	F1G1C104A077	C 0.1UF 16V		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8216	F1J1A106A087	C 10UF, 10V		
		C8217	F1G1C104A077	C 0.1UF 16V		
		C8218	F1G1C104A077	C 0.1UF 16V		
		C8219	F1G1C104A077	C 0.1UF 16V		
		C8220	F1G1C104A077	C 0.1UF 16V		
		C8222	F1G1C104A077	C 0.1UF 16V		
		C8225	F1G1C104A077	C 0.1UF 16V		
		C8230	F1G1C104A077	C 0.1UF 16V		
		C8232	F1G1C104A077	C 0.1UF 16V		
		C8255	F1J0G2260001	C 22 UF 4 V		
		C8300	F1G1H8R0A831	C 8 PF, 50V		
		C8301	F1G1H8R0A831	C 8 PF, 50V		
		C8601	F1G1C1030008	C 0.01UF 16V		
		C8602	F1G1C1030008	C 0.01UF 16V		
		C8613	F1J1A106A087	C 10UF, 10V		
		C8615	F1G1C104A077	C 0.1UF 16V		
		C8642	F1J1A106A087	C 10UF, 10V		
		C8643	F1G1C104A077	C 0.1UF 16V		
		C8680	EEH0B0J221UP	E 220UF, 6.3V		
		C8681	EEH0B0J221UP	E 220UF, 6.3V		
		C8682	F1J1A106A087	C 10UF, 10V		
		C8683	F1G1C104A077	C 0.1UF 16V		
		C8687	F1J1A106A087	C 10UF, 10V		
		C8688	F1G1C104A077	C 0.1UF 16V		
		C8689	F1J1A106A087	C 10UF, 10V		
		C8690	F1G1C104A077	C 0.1UF 16V		
		C8692	F1J1A106A087	C 10UF, 10V		
		C8693	F1G1C104A077	C 0.1UF 16V		
		C8760	F1G1C104A077	C 0.1UF 16V		
		C8764	F1G1A105A047	C 1UF 10V		
		C8765	F1H0J4750004	C 4.7UF, 16V		
		C8850	F1H0J4750004	C 4.7UF, 16V		
		C8851	F1H0J4750004	C 4.7UF, 16V		
		C8902	F1G1C104A077	C 0.1UF 16V		
		C8903	F1G1C104A077	C 0.1UF 16V		
DIODES						
		D2802	B3AGB0000060	LED		
		D3021	DZ2J140M0L	DIODE		
		D3022	DZ2J140M0L	DIODE		
		D3023	DZ2J140M0L	DIODE		
		D3024	DZ2J140M0L	DIODE		
		D3025	DZ2J140M0L	DIODE		
		D3026	DZ2J140M0L	DIODE		
		D3201	K7AAAY000016	DIODE		
		D5172	DZ2J220M0L	DIODE		
		D5173	DA2J10100L	DIODE		
		D5178	DZ2J068M0L	DIODE		
		D5179	B0ADCK000001	DIODE		
		D5180	DZ2J033M0L	DIODE		
		D5187	DZ2J047M0L	DIODE		
		D5188	B0ADCK000001	DIODE		
		D5191	B0ADCK000001	DIODE		
		D5208	B0ADCK000001	DIODE		
		D6750	J0ZZB0000175	DIODE		
		D6751	B0ZBZ0000203	DIODE		
		D7101	ERZE08C621CD	SURGE ABSORBER		
		D7104	B0EAKR000022	DIODE		
		D7105	B0EAKR000022	DIODE		
		D7106	B0EBNT000028	DIODE		
		D7211	B0JCME000093	DIODE		
		D7215	B0HAPR000013	DIODE		
		D7221	B0JCDE000006	DIODE		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		D7301	DZ2J039M0L	DIODE		
		D7302	B0HAGQ000001	DIODE		
		D7303	DZ2J039M0L	DIODE		
		D7304	DA2JF2300L	DIODE		
		D7305	B0ADCK000001	DIODE		
		D7306	B0BC027A0336	DIODE		
		D7307	B0BC027A0336	DIODE		
		D7308	B0BC027A0336	DIODE		
		D7309	B0JCME000093	DIODE		
		D7310	B0JCME000093	DIODE		
		D7311	B0BC027A0336	DIODE		
		D7401	B0JDRK000003	DIODE		
		D7402	B0JDRK000003	DIODE		
		D7404	DA2J10100L	DIODE		
		D7405	DA2J10100L	DIODE		
		D7408	B0JDSG000010	DIODE		
		D7409	B0JDSG000010	DIODE		
		D7411	DA2J10100L	DIODE		
		D7502	DB2J41100L	DIODE		
		D8716	B0ACGM000001	DIODE		
INTEGRATED CIRCUITS						
		IC4900	C1AB00003984	IC		
		IC5000	AN34043AAVF	IC		
		IC5203	C0EBD0000300	IC		
		IC5300	C0DBAYY01648	IC		
		IC5702	C0DBAYY01656	IC		
		IC5704	C0DBEYY00102	IC		
		IC6750	C1AB00004053	IC		
		IC6800	C1AB00004028	IC		
		IC7201	C0DBBY000058	IC		
		IC7301	C0DBAYY01329	IC		
		IC7401	C0DBZYY00614	IC		
		IC7503	C0DBAYY01599	IC		
		IC8000	C1AB00004073	IC		
		IC8100	C0DBAYY01644	IC		
		IC8101	C0DBAYY01692	IC		
		IC8200	C3ABUY000020	IC		
		IC8201	C3ABUY000020	IC		
		IC8602	C0DBZYY00541	IC		
		IC8603	C0DBZYY00541	IC		
		IC8605	C0DBZYY00541	IC		
		IC8704	C0DBAYY01647	IC		
		IC8705	C0DBAYY01299	IC		
		IC8706	C0DBGYY01682	IC		
		IC8900	TVRT271	ROM IC (C3FBVY000034)		
COILS						
		L2000	J0JHC0000042	COIL		
		L4006	J0ZZB0000147	COIL		
		L4007	J0ZZB0000147	COIL		
		L4008	J0ZZB0000147	COIL		
		L4009	J0ZZB0000147	COIL		
		L4010	J0ZZB0000147	COIL		
		L4011	J0ZZB0000147	COIL		
		L4901	G1C220MA0533	INDUCTOR		
		L4902	G1C220MA0533	INDUCTOR		
		L4903	G1C220MA0533	INDUCTOR		
		L4904	G1C220MA0533	INDUCTOR		
		L5201	J0JYC0000464	BEAD CORE		
		L5300	G1C220MA0445	INDUCTOR		
		L5400	G1C4R7ZA0311	INDUCTOR		
		L5440	G1C4R7MA0445	INDUCTOR		
		L5700	G1C2R2MA0464	INDUCTOR		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		L5701	J0JYC0000464	BEAD CORE		
		L6704	J0JYC0000464	BEAD CORE		
		L6706	J0JYC0000464	BEAD CORE		
		L6761	J0JYC0000464	BEAD CORE		
		L6762	J0JYC0000464	BEAD CORE		
		L6763	G1CR27JA0097	COIL		
		L6765	G1C82NJ00010	COIL		
		L6772	G1CR27JA0097	COIL		
		L6773	G1CR27JA0097	COIL		
		L6774	G1CR27JA0097	COIL		
		L6775	G1CR22JA0097	COIL		
		L6776	G1CR27JA0097	COIL		
		L6777	G1CR22JA0097	COIL		
		L6778	G1CR22JA0097	COIL		
		L6779	G1CR22JA0097	COIL		
		L6800	J0JYC0000464	BEAD CORE		
		L6801	J0JYC0000464	BEAD CORE		
		L6802	J0JYC0000464	BEAD CORE		
		L7202	J0JKB0000034	EMI FILTER		
		L7207	J0JHC0000075	BEAD COIL		
		L7502	G0C270MA0049	INDUCTOR		
		L8100	G1C3R3MA0464	INDUCTOR		
		L8101	G1C1R5ZA0311	COIL		
		L8605	J0JYC0000464	BEAD CORE		
		L8617	J0JYC0000464	BEAD CORE		
		L8618	J0JYC0000464	BEAD CORE		
TRANSISTORS						
		Q2012	B1ABCE000015	TRANSISTOR		
		Q2013	B1ABCE000015	TRANSISTOR		
		Q4700	B1ABCF000231	TRANSISTOR		
		Q4701	B1ABCF000231	TRANSISTOR		
		Q4750	B1ABCF000231	TRANSISTOR		
		Q5140	B1ABCE000015	TRANSISTOR		
		Q5141	B1ABCE000015	TRANSISTOR		
		Q5142	B1ADCE000022	TRANSISTOR		
		Q5143	B1ABCE000015	TRANSISTOR		
		Q7201	B1CERR000057	TRANSISTOR		
		Q7202	B1ADCE000022	TRANSISTOR		
		Q7301	B1CFRR000016	TRANSISTOR		
		Q7302	B1CFRR000016	TRANSISTOR		
		Q7303	B1ADCE000022	TRANSISTOR		
		Q7401	B1ABCF000231	TRANSISTOR		
		Q7402	B1CHRE000015	TRANSISTOR		
		Q7403	B1CHRE000015	TRANSISTOR		
		Q7407	B1CBGD000001	TRANSISTOR		
		Q7501	B1ABGE000015	TRANSISTOR		
		Q8750	B1ABBE000003	TRANSISTOR		
		Q8751	B1ABBE000003	TRANSISTOR		
RESISTORS						
		R0900	D0GA473JA039	M 47KOHM J. 1/10W		
		R0901	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0902	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0903	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0904	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0905	D0GA330JA023	M 33 OHM, J,1/16W		
		R0906	D0GA330JA023	M 33 OHM, J,1/16W		
		R0908	D0GA272JA023	M 2.7KOHM, J.1/16W		
		R0911	D0GA272JA023	M 2.7KOHM, J.1/16W		
		R0926	D0GA473JA039	M 47KOHM J. 1/10W		
		R0927	D0GA473JA039	M 47KOHM J. 1/10W		
		R0928	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0929	D0GA332JA023	M 3.3KOHM, J,1/16W		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R0935	D0GA473JA039	M 47KOHM J. 1/10W		
		R2003	D0GAR00J0005	M 0 OHM, 1/16W		
		R2004	D0GA103JA039	M 10KOHM,F,1/16W		
		R2007	D0GA680JA023	M 68 OHM, J,1/16W		
		R2008	D0GA153JA023	M 15K OHM J 1/16W		
		R2009	D1BA1002A023	M 10KOHM,F,1/16W		
		R2010	D1BA7151A023	M 7.15KOHM, F 1/16 W		
		R2011	D0GAR00J0005	M 0 OHM, 1/16W		
		R2012	D0GA473JA039	M 47KOHM J. 1/10W		
		R2013	D0GAR00J0005	M 0 OHM, 1/16W		
		R2016	D0GAR00J0005	M 0 OHM, 1/16W		
		R2034	D0GAR00J0005	M 0 OHM, 1/16W		
		R2040	D0GA473JA039	M 47KOHM J. 1/10W		
		R2051	D0GAR00J0005	M 0 OHM, 1/16W		
		R2056	D0GAR00J0005	M 0 OHM, 1/16W		
		R2058	D0GA473JA039	M 47KOHM J. 1/10W		
		R2059	D0GA103JA039	M 47KOHM J. 1/10W		
		R2060	D0GA473JA039	M 47KOHM J. 1/10W		
		R2061	D0GA223JA023	M 22K OHM J 1/16W		
		R2062	D0GAR00J0005	M 0 OHM, 1/16W		
		R2067	D0GAR00J0005	M 0 OHM, 1/16W		
		R2713	D0GA222JA023	M 2.2KOHM, J,1/16W		
		R2714	D0GA222JA023	M 2.2KOHM, J,1/16W		
		R2715	D0GA680JA023	M 68 OHM, J,1/16W		
		R2802	D0GAR00J0005	M 0 OHM, 1/16W		
		R2807	D0GAR00J0005	M 0 OHM, 1/16W		
		R2820	D0GA470JA023	M 47 OHM, J,1/16W		
		R2821	D0GA473JA023	M 47KOHM, J,1/16W		
		R2822	D0GA154JA023	M 150KOHM J 1/16W		
		R2823	D1BA1821A023	M 1.82K ,J, 1/16W		
		R2824	D1BA6800A023	M 680OHM ,J, 1/16W		
		R2852	D1BD1911A177	M 1.91KOHM ,F, 1/16W		
		R2853	D1BD3091A177	M 3.09KOHM ,F, 1/16W		
		R2854	D1BD6041A076	M 6.04KOHM ,F, 1/16W		
		R2855	D1BD1692A177	M 16.9KOHM ,F, 1/16W		
		R3008	D1BD18R0A179	M 18OHM ,F, 1/10W		
		R3009	D1BD18R0A179	M 18OHM ,F, 1/10W		
		R3010	D1BD18R0A179	M 18OHM ,F, 1/10W		
		R3011	D0GA100JA023	M 10 OHM, J,1/16W		
		R3012	D1BD56R0A179	M 56OHM ,J, 1/10W		
		R3013	D1BD56R0A179	M 56OHM ,J, 1/10W		
		R3014	D1BD56R0A179	M 56OHM ,J, 1/10W		
		R3015	D1H81014A042	M 100OHM ,J, 1/10W		
		R3038	D0GA473JA039	M 47KOHM J. 1/10W		
		R3053	D0GA333JA023	M 33KOHM,J,1/16W		
		R3054	D0GA333JA023	M 33KOHM,J,1/16W		
		R3056	D0GA473JA039	M 47KOHM J. 1/10W		
		R3058	D0GA101JA039	M 100OHM ,J, 1/10W		
		R3063	D0GA103JA039	M 10KOHM,F,1/16W		
		R3064	D0GAR00J0005	M 0 OHM, 1/16W		
		R3121	D0GA101JA039	M 100OHM ,J, 1/10W		
		R3325	D0GA473JA039	M 47KOHM J. 1/10W		
		R4004	D0GA243JA023	M 24K OHM J 0.063W		
		R4010	D0GAR00J0005	M 0 OHM, 1/16W		
		R4700	D0GA103JA039	M 10KOHM,F,1/16W		
		R4701	D0GA103JA039	M 10KOHM,F,1/16W		
		R4702	D0GA103JA039	M 10KOHM,F,1/16W		
		R4703	D0GA103JA039	M 10KOHM,F,1/16W		
		R4704	D0GA473JA039	M 47KOHM J. 1/10W		
		R4705	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4706	D0GA220JA023	M22 OHM, J.1/16 W		
		R4707	D0GA680JA023	M 68 OHM, J,1/16W		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R4708	D0GA680JA023	M 68 OHM, J,1/16W		
		R4709	D0GA680JA023	M 68 OHM, J,1/16W		
		R4710	D0GA680JA023	M 68 OHM, J,1/16W		
		R4711	D0GA103JA039	M 10KOHM,F,1/16W		
		R4712	D0GA103JA039	M 10KOHM,F,1/16W		
		R4713	D0GA103JA039	M 10KOHM,F,1/16W		
		R4714	D0GA473JA039	M 47KOHM J. 1/10W		
		R4715	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4717	D0GA473JA039	M 47KOHM J. 1/10W		
		R4718	D0GA473JA039	M 47KOHM J. 1/10W		
		R4720	D0GA473JA039	M 47KOHM J. 1/10W		
		R4721	D0GA473JA039	M 47KOHM J. 1/10W		
		R4722	D1BA1800A023	M 180OHM ,F, 1/10W		
		R4723	D1BA82R0A023	M 82OHM ,F, 1/10W		
		R4725	D0GA680JA023	M 68 OHM, J,1/16W		
		R4726	D0GA680JA023	M 68 OHM, J,1/16W		
		R4751	D0GA103JA039	M 10KOHM,F,1/16W		
		R4752	D0GA103JA039	M 10KOHM,F,1/16W		
		R4753	D0GA103JA039	M 10KOHM,F,1/16W		
		R4754	D0GA473JA039	M 47KOHM J. 1/10W		
		R4755	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4757	D0GA473JA039	M 47KOHM J. 1/10W		
		R4758	D0GA473JA039	M 47KOHM J. 1/10W		
		R4900	D0GA103JA039	M 10KOHM,F,1/16W		
		R4901	D0GFR00J0005	M 0 OHM,J,1/3W		
		R4902	D1H86804A042	M 68OHM ,F, 1/10W		
		R4903	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4904	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4910	D0GA473JA039	M 47KOHM J. 1/10W		
		R5002	D0GA683JA023	M 68KOHM, J,1/16W		
		R5003	D0GA103JA039	M 10KOHM,F,1/16W		
		R5006	D0GA223JA023	M 22K OHM J 1/16W		
		R5007	D0GA223JA023	M 22K OHM J 1/16W		
		R5009	D1BA5602A023	M 56KOHM,F. 1/16 W		
		R5012	D1BA2202A023	M 22KOHM,F. 1/16 W		
		R5140	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5141	D0GA333JA023	M 33KOHM,J,1/16W		
		R5143	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5144	D0GA103JA039	M 10KOHM,F,1/16W		
		R5171	D0GA103JA039	M 10KOHM,F,1/16W		
		R5172	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5175	D0GA680JA023	M 68 OHM, J,1/16W		
		R5176	D0GA333JA023	M 33KOHM,J,1/16W		
		R5177	D0GA473JA039	M 47KOHM J. 1/10W		
		R5178	D0GA473JA039	M 47KOHM J. 1/10W		
		R5179	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5203	D0GA473JA039	M 47KOHM J. 1/10W		
		R5204	D0GA822JA023	M8.2KOHM, J,1/16W		
		R5207	D0GA333JA023	M 33KOHM,J,1/16W		
		R5215	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R5312	D0GA220JA023	M22 OHM, J.1/16 W		
		R5315	D1BA1402A023	M 14KOHM,F. 1/16 W		
		R5316	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R5317	D0GA103JA039	M 10KOHM,F,1/16W		
		R5318	D1BA3902A023	M 39KOHM ,F, 1/10W		
		R5400	D0GA220JA023	M22 OHM, J.1/16 W		
		R5401	D1BA2202A023	M 22KOHM,F. 1/16 W		
		R5402	D0GB911ZA037	M 910 OHM,1/10W		
		R5403	D1BB2871A106	M 2.87 KOHM,F.1/10 W		
		R5442	D1BB1241A196	M 1.24KOHM ,F, 1/10W		
		R5443	D1BB6801A195	M 6.8KOHM ,F, 1/10W		
		R5446	D0GDR00J0004	M 0 OHM, 1/8W		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R5447	D1BA1502A023	M 15KOHM ,F, 1/10W		
		R5713	D0GA220JA023	M 220HM J 1/16W		
		R5715	D1BA3242A023	M 32.4KOHM ,F, 1/16W		
		R5716	D1BA1502A023	M 15KOHM ,F, 1/10W		
		R5717	D0GA123JA023	M 120KOHM,F.1/16 W		
		R5731	D1BA1200A023	M 120 OHM,F.1/16 W		
		R5732	D1BA56R0A023	M 56 OHM,F.1/16 W		
		R5736	D0GA103JA039	M 10KOHM,F,1/16W		
		R6717	D0GBR00J0004	M 0 OHM, 1/8W		
		R6725	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6726	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6727	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6730	D0GA103JA039	M 10KOHM,F,1/16W		
		R6743	D0GA681JA023	680OHM ,J, 1/16W		
		R6744	D0GA681JA023	680OHM ,J, 1/16W		
		R6750	D0GA101JA039	M 100OHM ,J, 1/10W		
		R6751	D0GA103JA039	M 10KOHM,F,1/16W		
		R6752	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6753	D0GA101JA039	M 100OHM ,J, 1/10W		
		R6754	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R6755	D0GA101JA039	M 100OHM ,J, 1/10W		
		R6756	D0GA101JA039	M 100OHM ,J, 1/10W		
		R6757	D0GA101JA039	M 100OHM ,J, 1/10W		
		R6758	D0GA101JA039	M 100OHM ,J, 1/10W		
		R6759	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R6760	D0GA332JA023	3.3KOHM ,J, 1/16W		
		R6761	D0GA332JA023	3.3KOHM ,J, 1/16W		
		R6804	D0GA681JA023	680OHM ,J, 1/16W		
		R6805	D0GA681JA023	680OHM ,J, 1/16W		
		R6810	D0GA332JA023	3.3KOHM ,J, 1/16W		
		R6812	D0GA680JA023	M 68 OHM, J,1/16W		
		R6813	D0GA680JA023	M 68 OHM, J,1/16W		
		R6818	D0GA680JA023	M 68 OHM, J,1/16W		
		R6819	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6820	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6821	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6840	D0GA471JA023	C 470OHM ,J, 1/16W		
		R6846	D0GA680JA023	M 68 OHM, J,1/16W		
		R6847	D0GA680JA023	M 68 OHM, J,1/16W		
		R6848	D0GA680JA023	M 68 OHM, J,1/16W		
		R6849	D0GA680JA023	M 68 OHM, J,1/16W		
		R6850	D0GA680JA023	M 68 OHM, J,1/16W		
		R6861	D0GA680JA023	M 68 OHM, J,1/16W		
		R6862	D0GA680JA023	M 68 OHM, J,1/16W		
		R6863	D0GA680JA023	M 68 OHM, J,1/16W		
		R6871	D0GA332JA023	3.3KOHM ,J, 1/16W		
		R6872	D0GA332JA023	3.3KOHM ,J, 1/16W		
		R6880	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6881	D0GAR00J0005	M 0 OHM,J,1/3W		
		R6882	D0GBR00J0004	M 0 OHM, 1/8W		
		R6884	D0GA103JA039	M 10KOHM,F,1/16W		
	⚠	R7101	D0GF105JA048	C 1MOHM ,J, 1/16W		
	⚠	R7102	D0GF105JA048	C 1MOHM ,J, 1/16W		
	⚠	R7103	D0GF105JA048	C 1MOHM ,J, 1/16W		
		R7201	ERX1SJR22	0.22OHM ,J, 1W		
		R7202	ERX1SJR22	0.22OHM ,J, 1W		
		R7203	D0GD513JA052	C 51KOHM ,J, 1/16W		
		R7204	D0GF101JA048	C 100OHM ,J, 1/16W		
		R7205	D0GD470JA052	470HM ,J, 1/16W		
		R7206	D0GD4R7JA059	C 4.7OHM ,J, 1/16W		
		R7207	D0GB104JA065	C 100KOHM ,J, 1/16W		
		R7208	ERX1SJR22	0.22OHM ,J, 1W		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7209	D0AF2R2JA112	2.2OHM ,J, 1/2W		
		R7211	D0GD104JA052	C 100KOHM ,J, 1/16W		
		R7212	D0GB683JA065	C 68KOHM ,J, 1/16W		
		R7219	D0GB513JA065	C 51KOHM ,J, 1/16W		
		R7220	D0GB223JA065	C 22KOHM ,F, 1/16W		
		R7224	D1BD8203A177	C 820KOHM ,F, 1/16W		
		R7225	D1BF1504A073	1.5MOHM ,F, 1/16W		
		R7226	D1BF1504A073	1.5MOHM ,F, 1/16W		
		R7227	D1BF1504A073	1.5MOHM ,F, 1/16W		
		R7228	D1BF1504A073	1.5MOHM ,F, 1/16W		
		R7229	D1BD2003A076	C 200KOHM ,F, 1/16W		
		R7230	D1BD4422A177	C 44.2KOHM ,F, 1/16W		
		R7231	D1BD4303A177	C 430KOHM ,F, 1/16W		
		R7232	D1BD3603A177	C 360KOHM ,F, 1/16W		
		R7234	D1BD8203A177	C 820KOHM ,F, 1/16W		
		R7240	D0GF225JA048	2.2MOHM ,J, 1/16W		
		R7241	D0GF225JA048	2.2MOHM ,J, 1/16W		
		R7242	D0GF225JA048	2.2MOHM ,J, 1/16W		
		R7243	D0GF225JA048	2.2MOHM ,J, 1/16W		
		R7244	D0GD124JA052	C 120KOHM ,J, 1/16W		
		R7302	D0GD101JA059	C 100OHM ,J, 1/16W		
		R7303	D0GD101JA059	C 100OHM ,J, 1/16W		
		R7304	D0AF2R2JA112	2.2OHM ,J, 1/2W		
		R7305	D0AF151JA112	150OHM ,J, 1/16W		
		R7306	D0GD222JA052	C 2.2KOHM ,J, 1/16W		
		R7307	D0GD561JA052	C 560OHM ,J, 1/16W		
		R7308	D0GD561JA052	C 560OHM ,J, 1/16W		
		R7312	D0AF153JA112	15KOHM ,J, 1/16W		
		R7314	D0GD333JA052	33KOHM ,J, 1/16W		
		R7315	D0GB222JA065	C 2.2KOHM ,J, 1/16W		
		R7317	D0GD223JA052	C 22KOHM ,F, 1/16W		
		R7318	D0GD473JA052	C 47KOHM ,J, 1/16W		
		R7319	D0GD473JA052	C 47KOHM ,J, 1/16W		
		R7320	D0GD333JA052	33KOHM ,J, 1/16W		
		R7321	D0GD100JA059	C 10OHM ,J, 1/16W		
		R7322	D0GD100JA059	C 10OHM ,J, 1/16W		
		R7323	D0GD223JA052	C 22KOHM ,F, 1/16W		
		R7324	D0GD223JA052	C 22KOHM ,F, 1/16W		
		R7325	ERX1SJ1R0V	1OHM ,J, 1W		
		R7326	D0B1106JA033	10MOHM ,J, 1/16W		
		R7401	D0GD472JA052	C 4.7OHM ,J, 1/16W		
		R7402	D0GB103JA065	C 10KOHM ,J, 1/16W		
		R7403	D0GB102JA065	C 1KOHM ,J, 1/16W		
		R7404	D0GB104JA065	C 100KOHM ,J, 1/16W		
		R7405	D0GB222JA065	C 2.2KOHM ,J, 1/16W		
		R7406	D1BD3301A180	C 3.3KOHM ,F, 1/16W		
		R7407	D0GB223JA065	C 22KOHM ,F, 1/16W		
		R7408	D1BD4302A180	43KOHM ,F, 1/16W		
		R7409	D0GB224JA065	C 220KOHM ,J, 1/16W		
		R7410	D0GD153JA052	15KOHM ,J, 1/16W		
		R7411	D0GD334JA052	C 330KOHM ,J, 1/16W		
		R7412	D0GB153JA065	C 15KOHM ,J, 1/16W		
		R7413	D1BD5603A066	560KOHM ,F, 1/16W		
		R7415	D0GD472JA052	C 4.7OHM ,J, 1/16W		
		R7416	D0GD103JA052	C 10KOHM ,J, 1/16W		
		R7417	D0GD103JA052	C 10KOHM ,J, 1/16W		
		R7420	D0GB473JA065	C 47KOHM ,J, 1/16W		
		R7421	D0GD124JA052	C 120KOHM ,J, 1/16W		
		R7505	D0GD473JA052	C 36.5KOHM ,F, 1/16W		
		R7506	D1BD1203A076	120KOHM ,F, 1/16W		
		R7507	D1BD3652A177	C 36.5KOHM ,F, 1/16W		
		R7508	D0GD334JA052	C 330KOHM ,J, 1/16W		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R8005	DOGBR00J0004	M 0 OHM, 1/8W		
		R8101	D1BA4701A023	4.7KOHM ,F, 1/16W		
		R8102	D1BB2002A195	20KOHM ,F, 1/16W		
		R8103	D1BB1802A195	18KOHM ,F, 1/16W		
		R8104	D1BB1801A195	C 1.8KOHM ,F, 1/16W		
		R8105	D1BB1051A196	C 1.05KOHM ,F, 1/6W		
		R8203	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8204	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8206	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8207	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8217	DOGA101JA039	M 1KOHM ,J, 1/10W		
		R8218	DOGA101JA039	M 1KOHM ,J, 1/10W		
		R8219	D1BA2400A023	C 240OHM ,J, 1/16W		
		R8220	D1BA2400A023	C 240OHM ,J, 1/16W		
		R8230	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8231	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8232	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8233	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8234	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8235	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8236	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8237	D1BA1001A023	C 1KOHM ,J, 1/16W		
		R8300	DOGA221JA023	C 220OHM ,J, 1/16W		
		R8411	DOGA103JA039	M 10KOHM,F,1/16W		
		R8605	D1BA2402A023	24KOHM ,F, 1/16W		
		R8608	DOGA103JA039	M 10KOHM,F,1/16W		
		R8609	DOGA103JA039	M 10KOHM,F,1/16W		
		R8610	DOGA103JA039	M 10KOHM,F,1/16W		
		R8611	DOGA103JA039	M 10KOHM,F,1/16W		
		R8612	DOGA103JA039	M 10KOHM,F,1/16W		
		R8613	DOGA103JA039	M 10KOHM,F,1/16W		
		R8614	DOGA272JA023	C 2.7KOHM ,J, 1/16W		
		R8615	DOGA272JA023	C 2.7KOHM ,J, 1/16W		
		R8616	D1H8R0040016	RESISTOR		
		R8617	D1H8R0040016	RESISTOR		
		R8618	D1BA3742A023	C 37.4KOHM ,F, 1/16W		
		R8619	D1BA1822A023	C 18.2KOHM ,F, 1/16W		
		R8623	DOGA272JA023	C 2.7KOHM ,J, 1/16W		
		R8632	D1BA3742A023	C 37.4KOHM ,F, 1/16W		
		R8647	D1H8R0040016	RESISTOR		
		R8666	D1HY1038A012	NETWORK RESISTOR		
		R8760	DOGA333JA023	C 33KOHM ,J, 1/16W		
		R8761	DOGA473JA039	M 47KOHM J. 1/10W		
		R8762	DOGA153JA023	C 15KOHM ,J, 1/16W		
		R8763	DOGA473JA039	M 47KOHM J. 1/10W		
		R8801	DOGA473JA039	M 47KOHM J. 1/10W		
		R8802	DOGA103JA039	M 10KOHM,F,1/16W		
		R8805	DOGA103JA039	M 10KOHM,F,1/16W		
		R8806	DOGA473JA039	M 47KOHM J. 1/10W		
		R8808	DOGA473JA039	M 47KOHM J. 1/10W		
		R8809	DOGA473JA039	M 47KOHM J. 1/10W		
		R8812	DOGA473JA039	M 47KOHM J. 1/10W		
		R8814	DOGA472JA023	M 4.7KOHM ,J,1/16W		
		R8815	DOGA473JA039	M 47KOHM J. 1/10W		
		R8817	DOGA473JA039	M 47KOHM J. 1/10W		
		R8818	DOGA473JA039	M 47KOHM J. 1/10W		
		R8819	DOGA473JA039	M 47KOHM J. 1/10W		
		R8823	DOGA473JA039	M 47KOHM J. 1/10W		
		R8854	DOGA102JA039	M 1KOHM ,J, 1/10W		
		R8870	DOGA473JA039	M 47KOHM J. 1/10W		
		R8901	D1HY1034A012	NETWORK RESISTOR		
		R8902	DOGA103JA039	M 10KOHM,F,1/16W		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R8905	D0GA222JA023	C 2.2KOHM ,J, 1/16W		
		R8906	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8910	D0GA103JA039	M 10KOHM,F,1/16W		
		R8913	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8914	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8915	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8942	D0GA473JA039	M 47KOHM J. 1/10W		
		R8943	D0GA473JA039	M 47KOHM J. 1/10W		
		R8944	D0GA101JA039	M 100OHM ,J, 1/10W		
		R9005	D0GA153JA023	C 15KOHM ,J, 1/16W		
		R9006	D0GA472JA023	M 4.7KOHM, J,1/16W		
TRANSFORMERS						
		T7201	G4DYA0000443	TRANSFORMER		
		T7301	G4DYA0000448	TRANSFORMER		
OTHERS						
		A02	K1KY14BA0484	CONNECTOR		
		A10	K1KY07BA0483	CONNECTOR		
		A12	K1KY04BA0387	CONNECTOR		
		A16	K1MY51BA0526	CONNECTOR		
		A20	K1FY105E0017	CONNECTOR		
		CF7101	D4CAY4R7A096	THERMISTOR RESISTOR		
		CF7102	D4CAY4R7A096	THERMISTOR RESISTOR		
		CN0100	K1KA14A00248	CONNECTOR		
		F7101	K5E502YYA162	FUSE		
		GK4	K1KY03BA0402	CONNECTOR		
		JA1	D0GDR00J0004	CHIP RESISTOR		
		JA2	D0GDR00J0004	CHIP RESISTOR		
		JA3	D0GDR00J0004	CHIP RESISTOR		
		JA5	D0GDR00J0004	CHIP RESISTOR		
		JA51	D0GFR00J0005	CHIP RESISTOR		
		JK3101A	K1U510D00002	TERMINAL		
		JK4701	K1FY119D0028	HDMI TERMINAL		
		JK4702	K1FY119D0028	HDMI TERMINAL		
		JK4703	K1FY119D0028	HDMI TERMINAL		
		JK6750	K1ZZ00001551	TUNER SHIELD		
		JK7101	K2AAYB000010	AC INLET		
		JK8601	K1FY104B0093	USB TERMINAL		
		JK8602	K1FY104B0093	USB TERMINAL		
		JK8650A	K2LC1YYA0020	LAN TERMINAL		
		JS0048	D0GAR00J0005	CHIP RESISTOR		
		JS0066	D0GAR00J0005	CHIP RESISTOR		
		JS7406	D0GDR00J0004	CHIP RESISTOR		
		K10	K1KY07AA1311	CONNECTOR		
		LF7103	G0B183G00006	LINE FILTER		
		LF7104	G0B183G00006	LINE FILTER		
		LF7105	G0B350HA0036	LINE FILTER		
		P2	K1KY14BA0386	CONNECTOR		
		P4	K1KY08BA0402	CONNECTOR		
		P5	K1KY03BA0402	CONNECTOR		
		PA7401	ERBRE5R00V	FUSE RESISTOR		
		PA7402	ERBRE5R00V	FUSE RESISTOR		
		PA7406	ERBRE5R00V	FUSE RESISTOR		
		PC7301	B3PAA0000629	PHOTO COUPLER		
		PC7302	B3PAA0000629	PHOTO COUPLER		
		PC7303	B3PAA0000629	PHOTO COUPLER		
		RM2800	B3RBB0000018	PHOTO DETECTOR		
		SN2800	B3JB00000208	IC		
		SW2851	EVQ11G05R	SWITCH		
		SW2852	EVQ11G05R	SWITCH		
		SW2853	EVQ11G05R	SWITCH		
		SW2854	EVQ11G05R	SWITCH		
		SW2855	EVQ11G05R	SWITCH		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		SW2857	EVQ11G05R	SWITCH		
		X6750	H0J240500067	CRYSTAL OSCILLATOR		
		X6800	H0J410500001	CRYSTAL		
		X8300	H0J270500166	CRYSTAL RESONATOR		
		ZA7102	K4AD01A00004	RUG TERMINAL		

Model No. : TH-L42E6S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
Exploded View						
		1	K2CQ2YY00107	AC CORD		
		2	L0EYAA000022	SPEAKER UNIT L		
		3	L0EYAA000023	SPEAKER UNIT R		
		4	L5EDDYY00481	LCD PANEL		
		5	N2QAYB000832	REMOTE TRANSMITTER		
			N5HBZ0000101	WI FI DONGLE		
		6	TBL5ZX06051	PEDESTAL ASSY		
		7	TBL5ZX06561	STAND METAL ASSY		
			TBM4GD1711	MODEL NAME PLATE		
			TBX5ZA02501B	KEY BUTTON BRACKET		
		8	TKK5ZC50381	LED PANEL		
		9	TKP5ZA29402	SIDE AV BRACKET		
		10	TPD4GA04251	TOP CUSHION		
		11	TPD4GA04261	BOTTOM CUSHION		
		12	TPD4GA04271	TOP CUSHION CENTER		
		13	TPD4GA04281	BOTTOM CENTER CUSHION		
		14	TPE4GH015-1	SET COVER		
		15	TQZ4GB677-1	FAN BAG ASSY		
			TSCKF0170005	LVDS FFC		
		16	TTU4GA1019	BACK COVER ASSY		
		17	TXFKP5Z0102	REAR PANEL TOP ASSY		
		18	TXFKP5Z0115	REAR PANEL L ASSY		
		19	TXFKP5Z0129	REAR PANEL R ASSY		
			TXFKP5Z0194	REAR PANEL BOTTOM		
		20	TXFPC01QQUS	PACKING CASE ASSY		
			XSS5+16FJK	STAND BRAC SCREW		
			XYN4+F25FJK	SCREW		
Electrical Replacement Part List						
		RTL	TXN/K1YLUE	K PRINT		
		RTL	TXN/P1QQUS	P PRINT		
		RTL	TXNGK1YLUE	GK PRINT		
		RTL	TZT/A1RAUK	A PRINT ASSY		