


Service Manual

Epilator

ES2037-M3

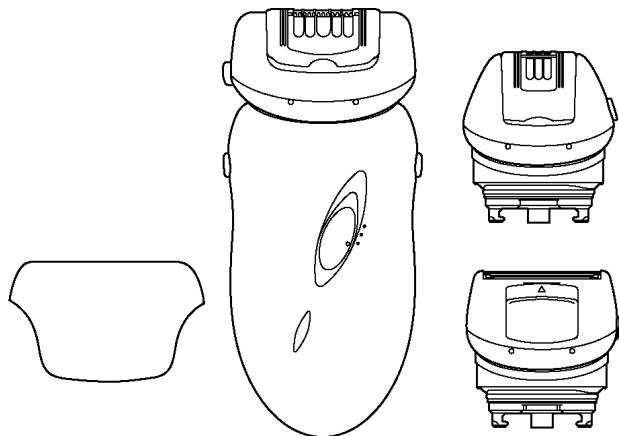

SPECIFICATIONS

| | |
|----------------------|--|
| Power source | AC 220V, 50Hz |
| Power consumption | Approx. 5W |
| Motor voltage | 12V DC |
| Charging time | 12 hours |
| Weight | 135g (unit with the big epilation head) 130g (unit with the small epilation head / unit with the shaver head) |
| Supplied accessories | Soft case Cleaning brush |


WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

| | Page | | Page |
|----------------------------------|------|--------------------------------|------|
| 1 SCHEMATIC DIAGRAM | 2 | 4 TROUBLESHOOTING GUIDE | 5 |
| 2 DISASSEMBLY INSTRUCTIONS | 3 | 5 EXPLODED VIEW | 6 |
| 3 ASSEMBLY INSTRUCTIONS | 4 | 6 REPLACEMENT PARTS LIST | 7 |

1 SCHEMATIC DIAGRAM

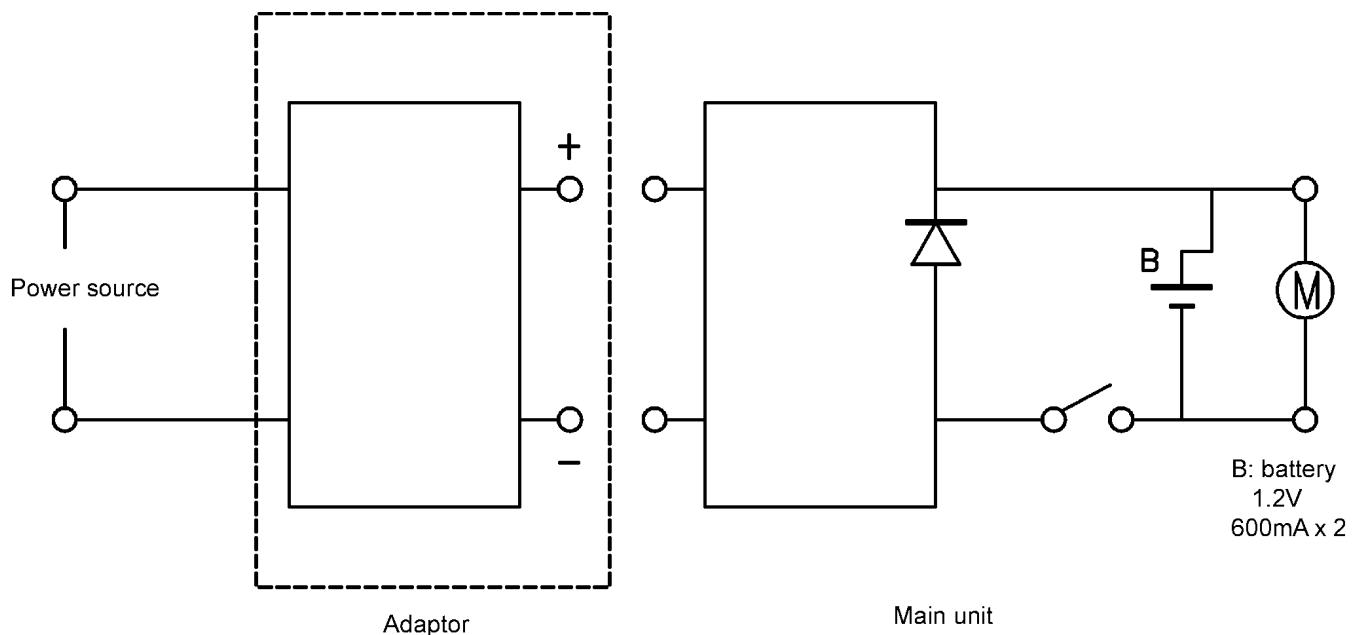


2 DISASSEMBLY INSTRUCTIONS

2.1. MAIN UNIT


Follow the procedure below to disassemble the main body.

1. Remove the cap and the epilation head.

Loosen three screws on top and one screw on the housing.

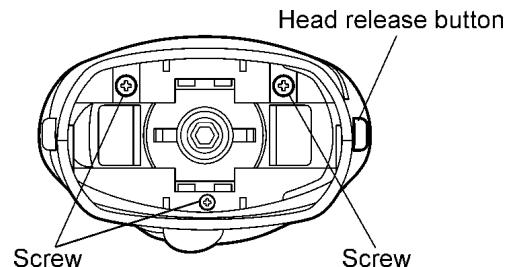


2. Open the housings with pushing the head release buttons.

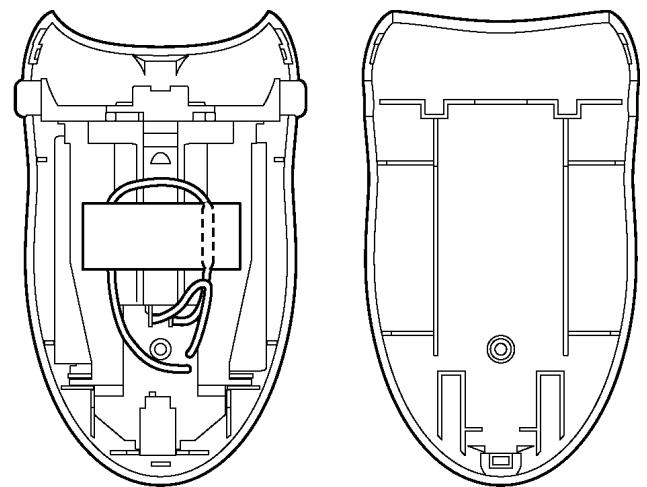

2.2. SHAVER HEAD

1. Remove the foil frame, inner blade and trimmer driving bar.

NOTE: Lift the trimmer driving bar up by using something like a slotted head screwdriver as shown in figure with care of breakage.

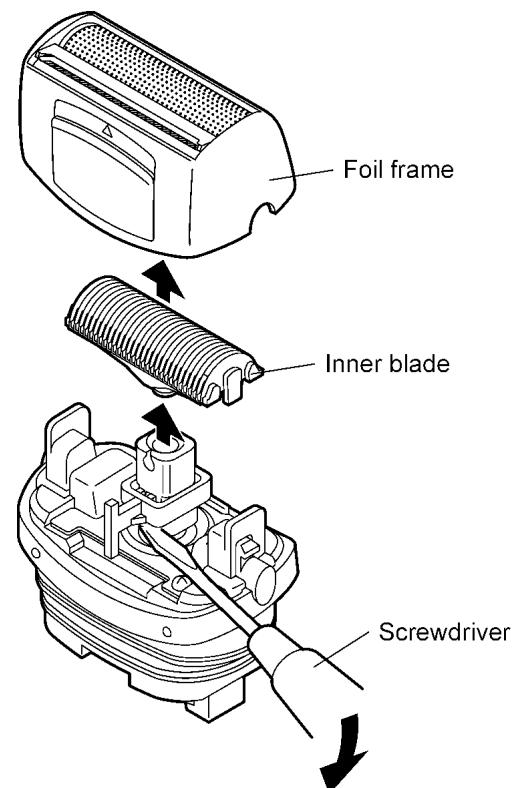


3 ASSEMBLY INSTRUCTIONS

3.1. MAIN UNIT



For assembly, reverse the order of disassembly.

1. Confirm the colors of each lead wire when soldering with motor.

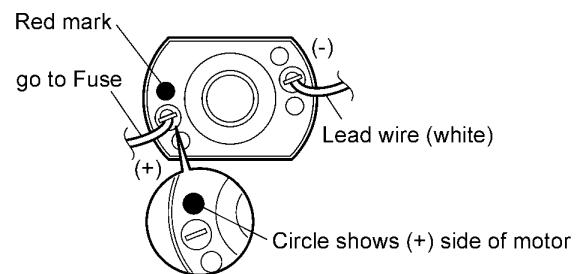


2. Press fit the lead wires into housing neatly.

3. Put fuse into frame located side of chassis and fixed it with an adhesive tape.

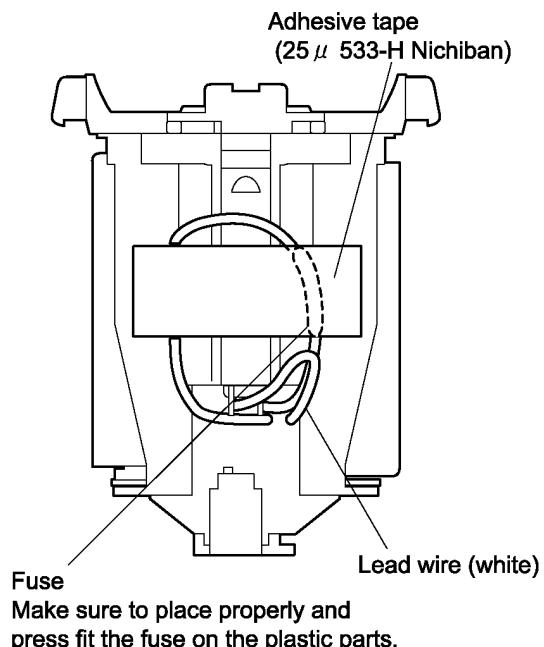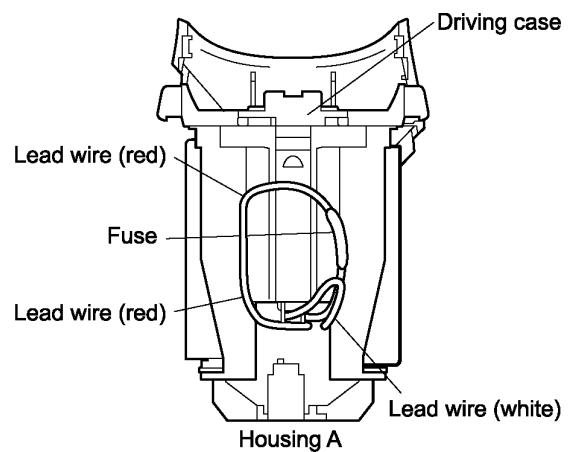


4. Apply the grease (FLOIL AH137N) on the switch metal plate. And assemble the switch handle and switch terminal plate with OFF position.

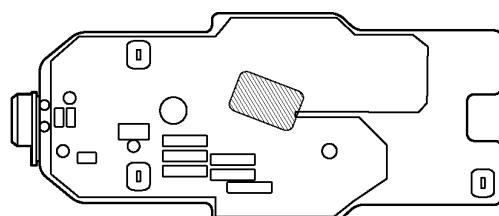


4 TROUBLESHOOTING GUIDE

(Refer to WIRING CONNECTION DIAGRAM)

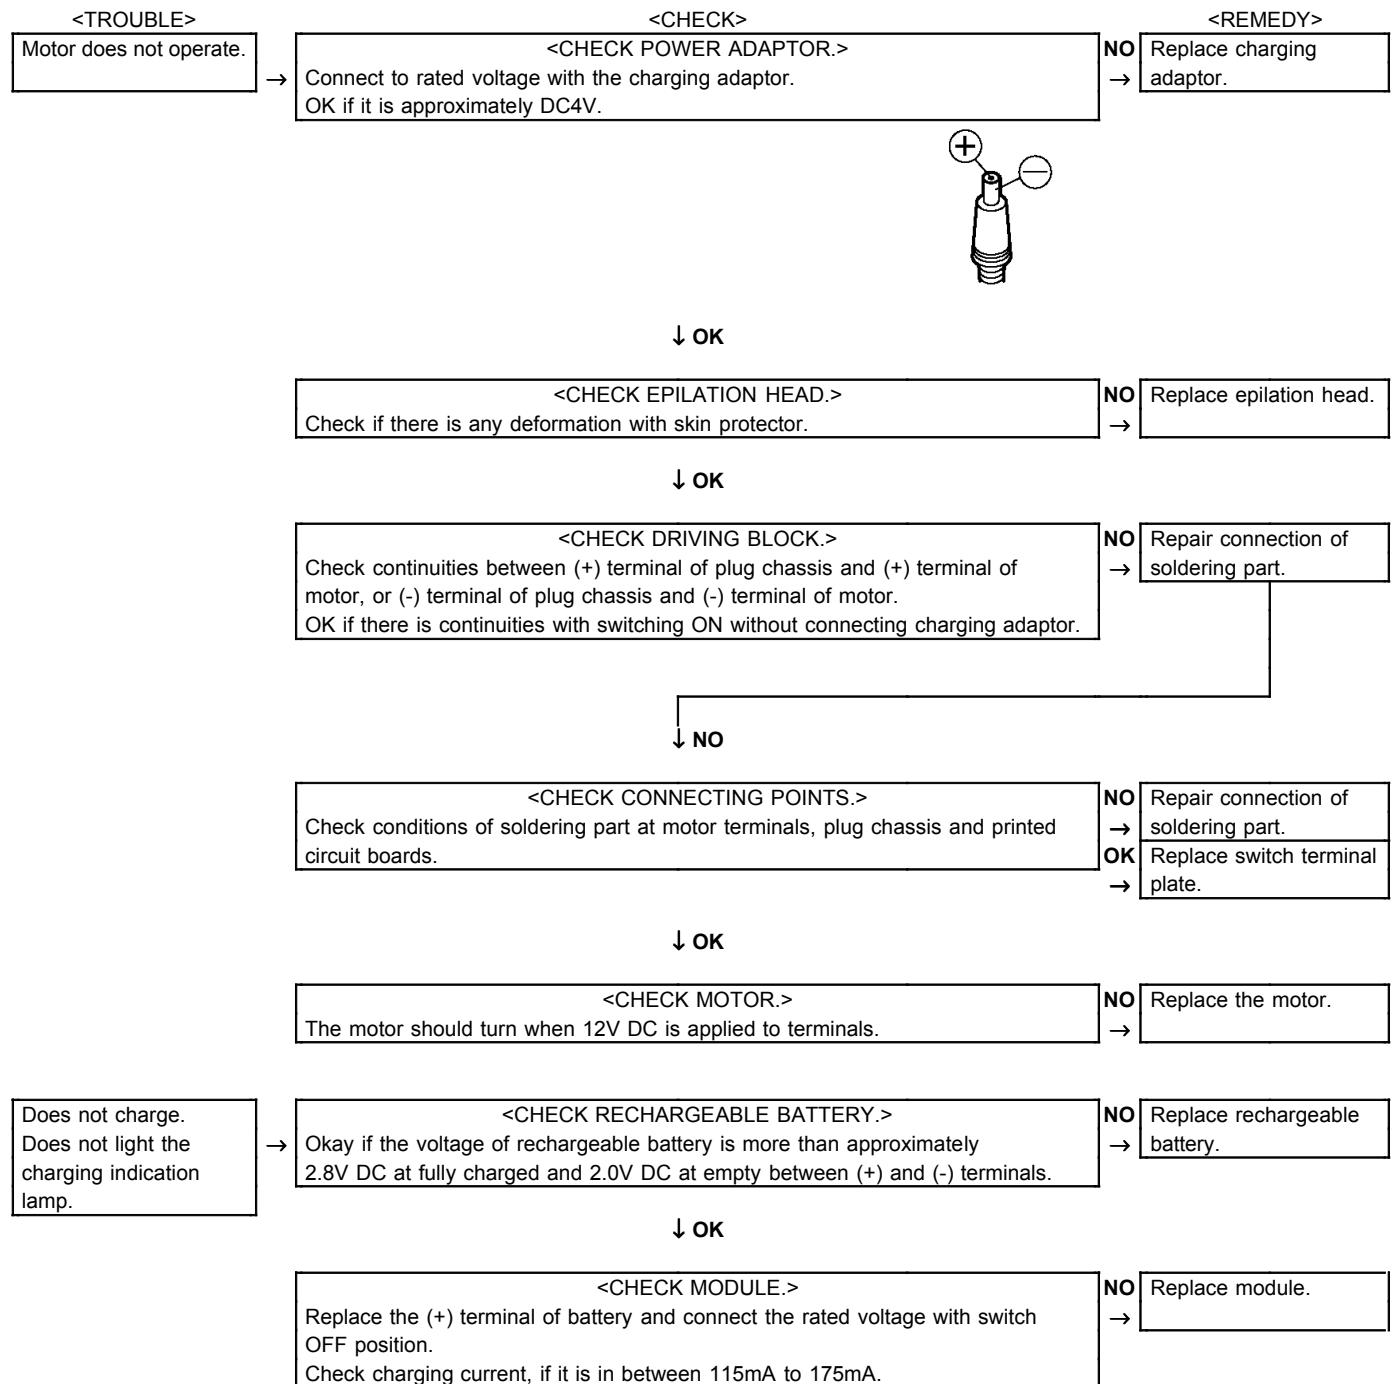

5 EXPLODED VIEW

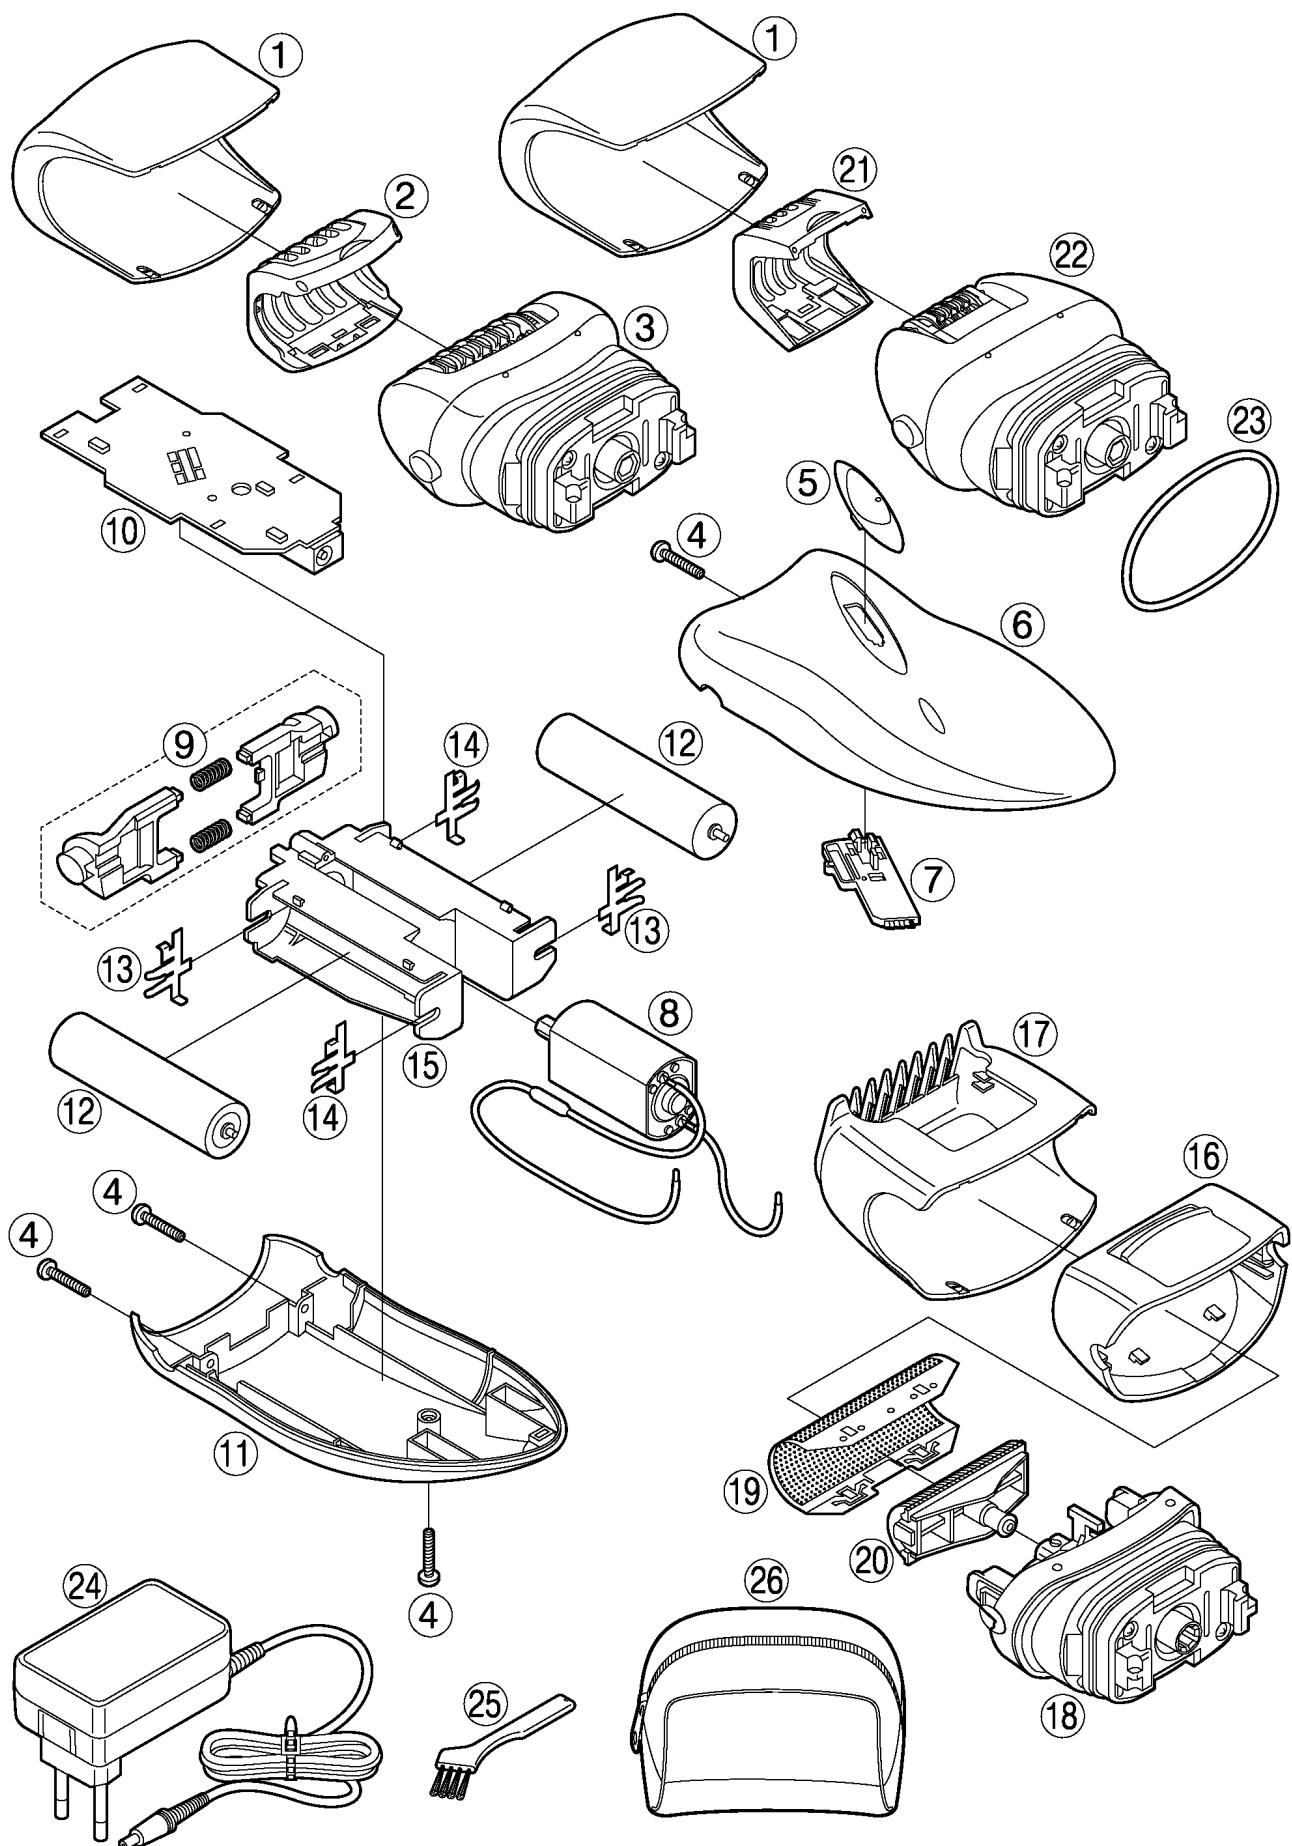

6 REPLACEMENT PARTS LIST

NOTE:

*A=available as an optional accessory

*B=only available as set

*C=available individually

| Ref. No. | Part No. | Part Name & Description | Remarks | | | Per Unit |
|----------|--------------|------------------------------|---------|---------------------------|------|----------|
| 1 | WES2037V7158 | PROTECTIVE CAP | *C | | (BG) | 2 |
| 2 | WES2037V3108 | BIG EPILATION HEAD FRAME | | | (BG) | 1 |
| 3 | WES2037V1068 | BIG EPILATION HEAD | | for LEGS/ARMS | (BG) | 1 |
| 4 | WES331B9257 | TAPPING SCREW | *C | K2-8 | | 4 |
| 5 | WES2037S3207 | SWITCH HANDLE | | | (BG) | 1 |
| 6 | WES2037V3058 | HOUSING A | | | (BG) | 1 |
| 7 | WES2037L2447 | SWITCH PLATE | | | (BG) | 1 |
| 8 | WES2037L1008 | MOTOR | | | (BG) | 1 |
| 9 | WES2037V3278 | HEAD RELEASE BUTTON W/SPRING | | | (BG) | 1 |
| 10 | WES2037L2148 | MODULE | | | (BG) | 1 |
| 11 | WES2037V3068 | HOUSING B | | | (BG) | 1 |
| 12 | WES2037L2508 | RECHARGEABLE BATTERY | *B | Ni-Mh TYPE (2PCS/PK) | (BG) | 2 |
| 13 | WES2028L0286 | CURRENT-CARRYING PLATE A | *B | (2PCS/PK) | (BG) | 2 |
| 14 | WES2028L0296 | CURRENT-CARRYING PLATE B | *B | (2PCS/PK) | (BG) | 2 |
| 15 | WES2037H2447 | MOTOR HOLDER | | | (BG) | 1 |
| 16 | WES2037V4038 | FOIL FRAME | | | (BG) | 1 |
| 17 | WES2037V3558 | SMALL EPILATION COMB | | | (BG) | 1 |
| 18 | WES2037V0788 | SHAVER HEAD | | | (BG) | 1 |
| 19 | WES9753E | OUTER FOIL | | | | 1 |
| 20 | WES9752E | INNER BLADE | | | | 1 |
| 21 | WES2037V3128 | SMALL EPILATION HEAD FRAME | | | (BG) | 1 |
| 22 | WES2037V1078 | SMALL EPILATION HEAD | | for UNDERARMS/BIKINI-LINE | (BG) | 1 |
| 23 | WES2027L0967 | O-RING | *B | (2PCS/PK) | (BG) | 2 |
| 24 | WES2037W7663 | POWER ADAPTOR | | C-2 PLUG | (BG) | 1 |
| 25 | WES76806766 | CLEANING BRUSH | | | (BG) | 1 |
| 26 | WES2004W7006 | SOFT CASE | | | (BG) | 1 |
| - | WES2037V8008 | INDIVIDUAL BOX | | | (BG) | 1 |
| - | WES2037V8009 | INDIVIDUAL BOX | | only for SAUDI ARABIA | (BG) | 1 |
| - | WES2037V8108 | OPERATING INSTRUCTIONS | | | (BG) | 1 |