

Service Manual

(Household) Multi-Styling Straightener

Model No. EH-HW58

Model No. EH-HW38

Model No. EH-HW18

Russia
CIS



⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE
1 Warning	2
2 Specifications	2
3 Troubleshooting Guide	3
4 Disassembly and Assembly Instructions	5
4.1. Disassembly instruction	5
4.2. ASSEMBLY instruction	8
4.3. Lead wire of Iron Plate (Heater A , Heater B) and Circuit arrangement points.	9
5 Wiring Connection Diagram	10
6 Schematic Diagram	10
7 Exploded View and Replacement Parts List	11
7.1. Exploded View for EH-HW58	11
7.2. Parts List for EH-HW58	12
7.3. Exploded View for EH-HW38	13
7.4. Parts List for EH-HW38	14
7.5. Exploded View for EH-HW18	15
7.6. Parts List for EH-HW18	16

1 Warning

Caution:

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 - 70°F (30 - 40°C) higher.
- Please use soldering iron with temperature control and adjust it to 750 ± 20°F (400 ± 10°C).
- In case of using high temperature soldering iron, please be careful not to heat too long.
- Pb free solder will tend to splash when heated too high (about 1100°F / 600°C).

2 Specifications

Model	EH-HW58	EH-HW38	EH-HW18
Sales Area	Russia/Ukraine/Kazakhstan		
Power source / Power consumption	AC 100-130V ~ 50-60Hz 41W (Max.400W) AC 220-240V ~ 50-60Hz 43W (Max.400W)		
Iron Plate temperature	150-170-180-190-200°C (5 level settings)		
Body size (mm.)	Without Attachment		
Weight	B2 Plug(SF82) Without Attachment	370 g	
	MEDIUM CURL	28 g	
	LARGE CURL	29 g	—
	EXTRA LARGE CURL	33 g	—
	STRAIGHTENER	31 g	—
	VOLUMIZER	32 g	—
Cord length	B2(SF82) Plug	2.0 m	



3 Troubleshooting Guide

Refer to WIRING CONNECTION DIAGRAM.

<CHECKING PROCEDURE>

<CHECKING METHOD>


<REMEDY>

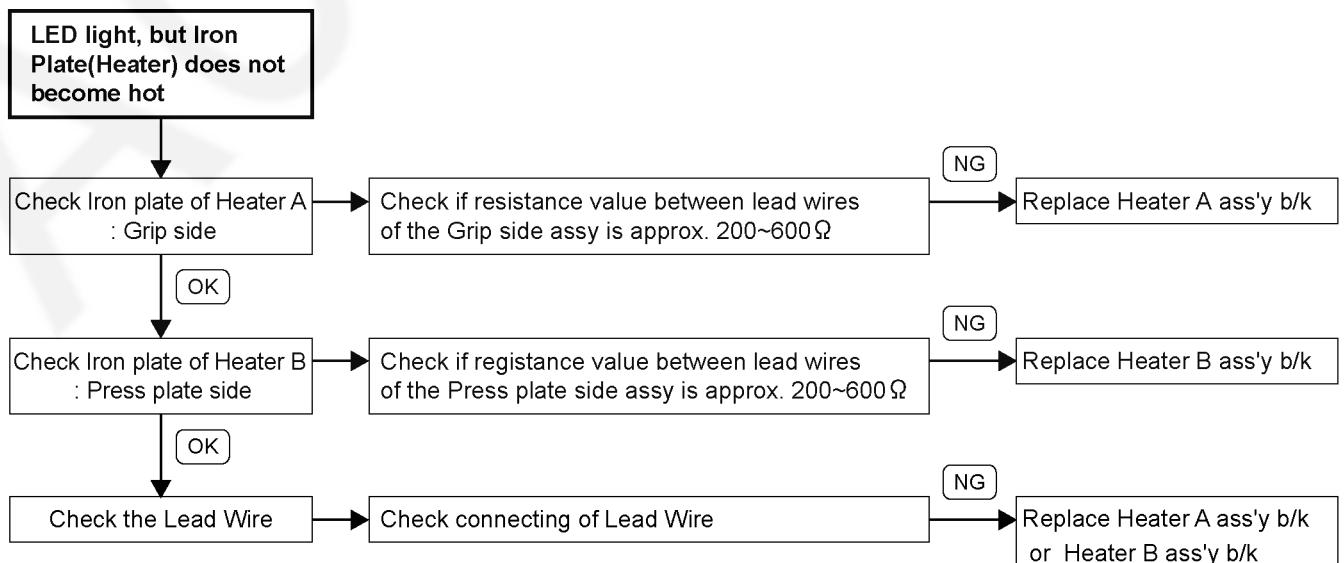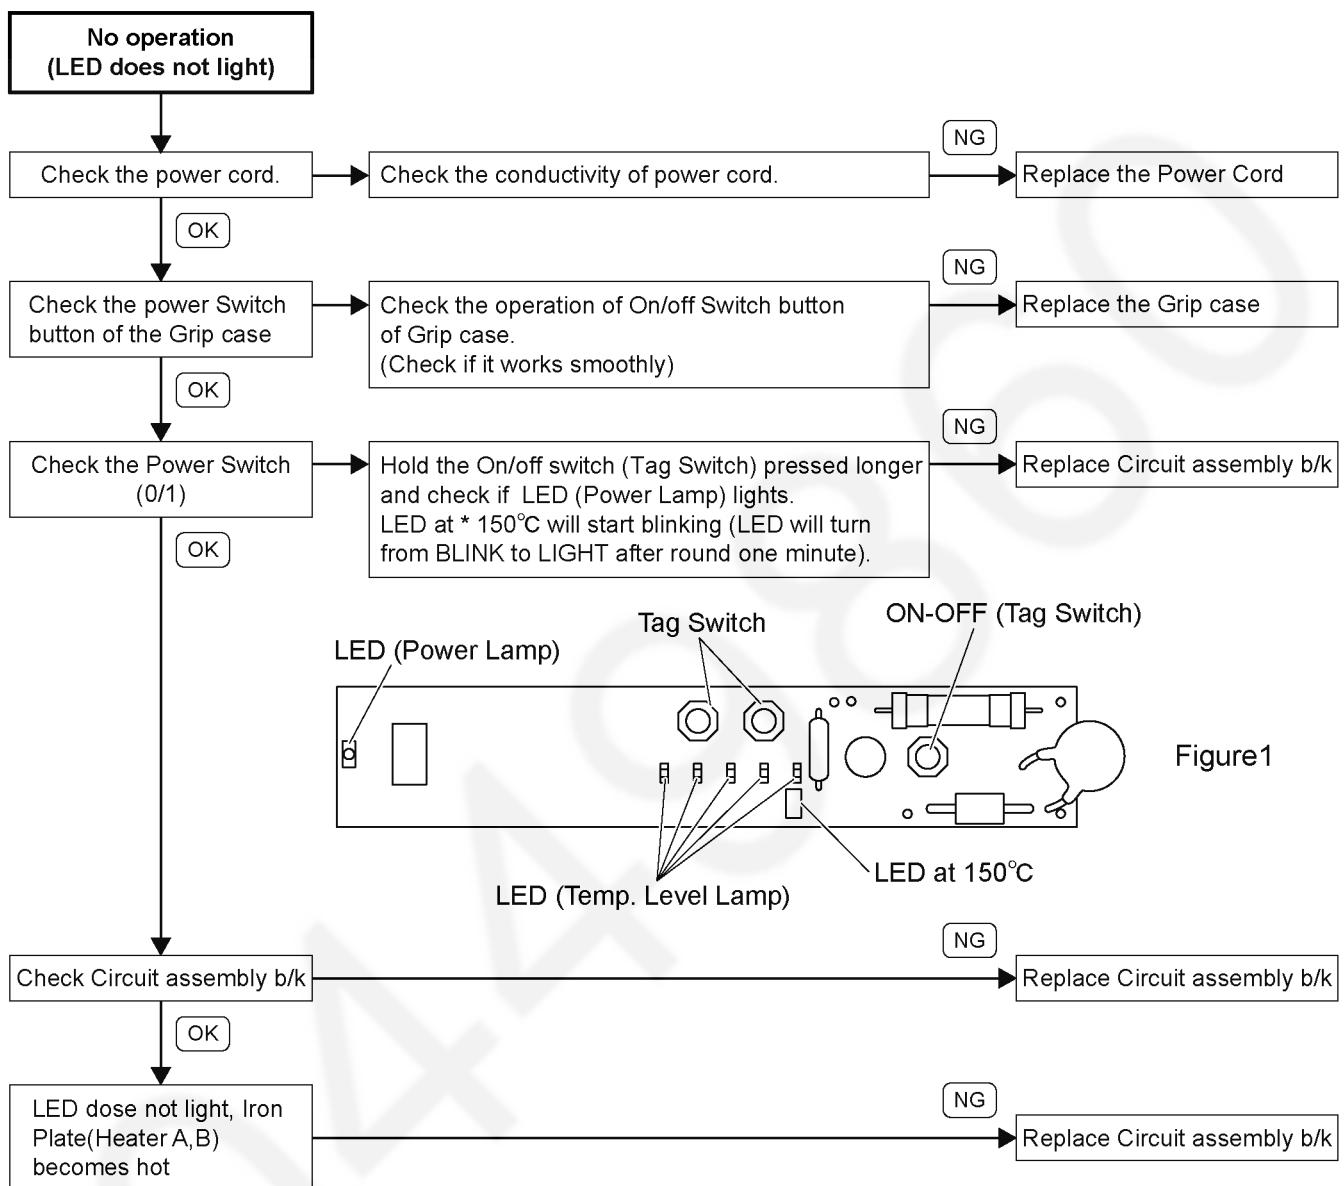

<CHECKING PROCEDURE>

<CHECKING METHOD>


<REMEDY>

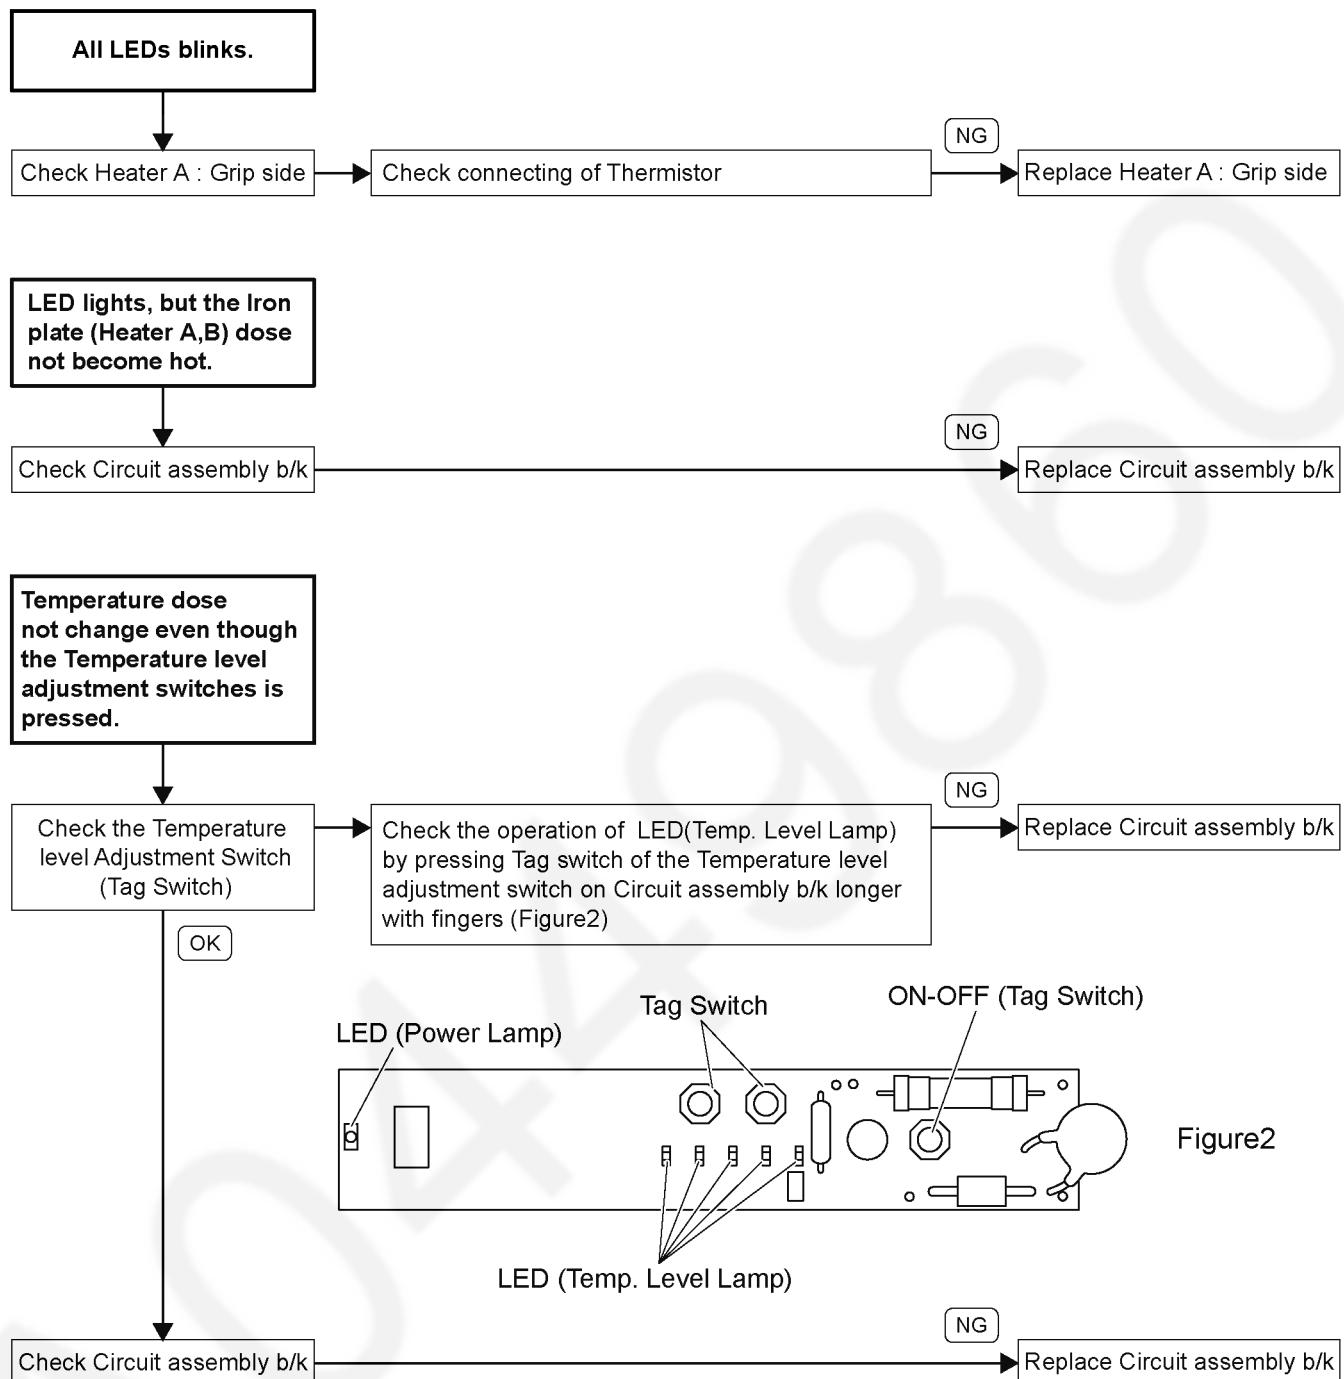


4 Disassembly and Assembly Instructions

4.1. Disassembly instruction


1. Remove Shaft Cover from Main Body by Slotted screw driver (Minus Driver.)

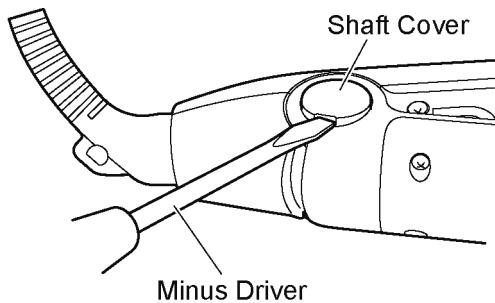


2. Remove Torx screws at Shaft position by Phillips screw driver (Plus driver).

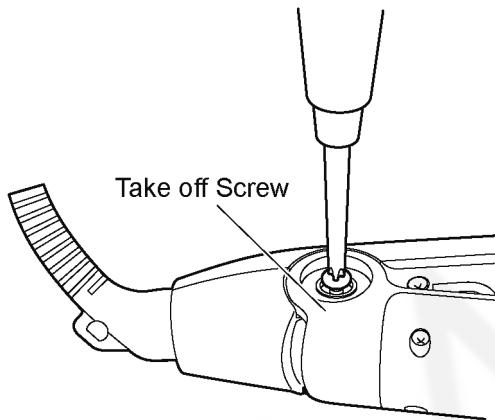


3. Remove Shaft out by tiny-shaped Phillips screw drivers (Plus Driver) and pull it out from the main body.

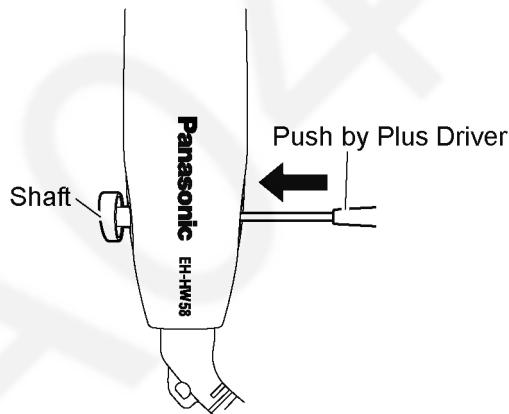


4. Remove Pivot spring by gripping and pulling it out from the Main body.

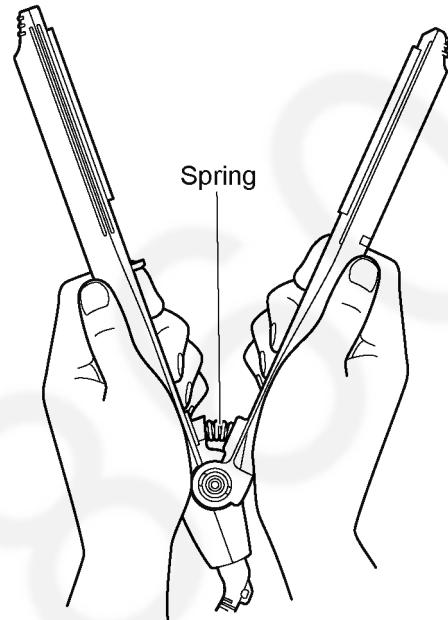


5. Remove 6 screws for fitting Press Plate side by Phillips screw drivers (Plus Driver).

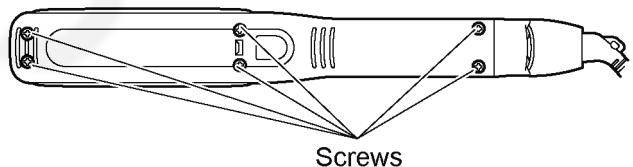


6. Remove Press Plate Cover at the Hook part by Slotted screw driver (Minus Driver).

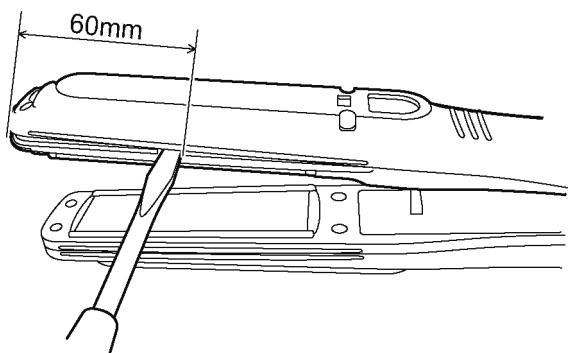


7. Remove Lock Button and Lock Button Spring.

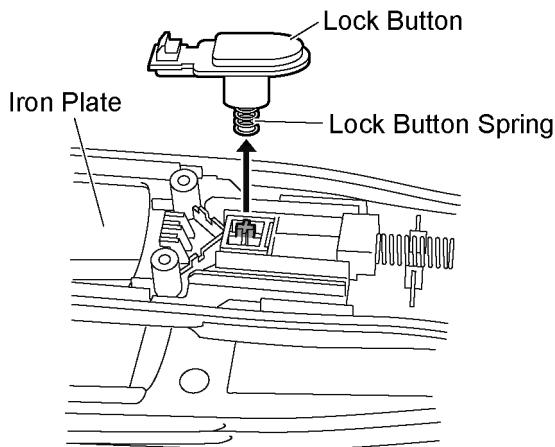


8. Remove Iron Plate of Heater B from Hook.

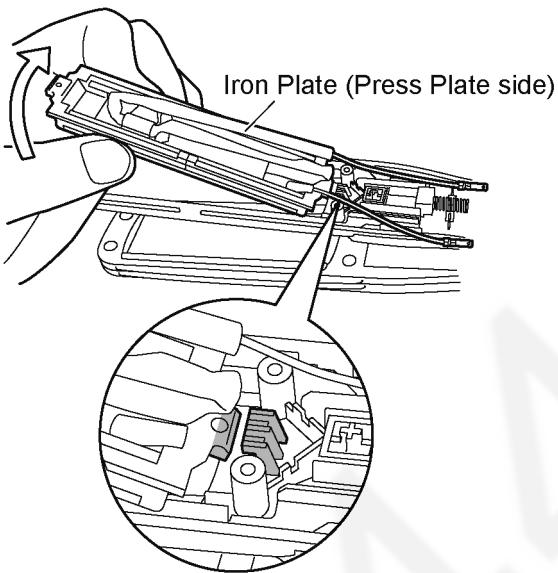


9. Remove Slide Plate and Slide Spring.

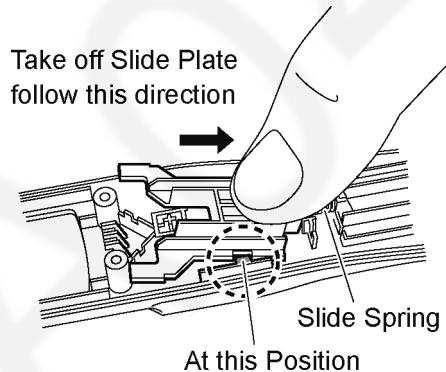


10. Take off Press Plate.

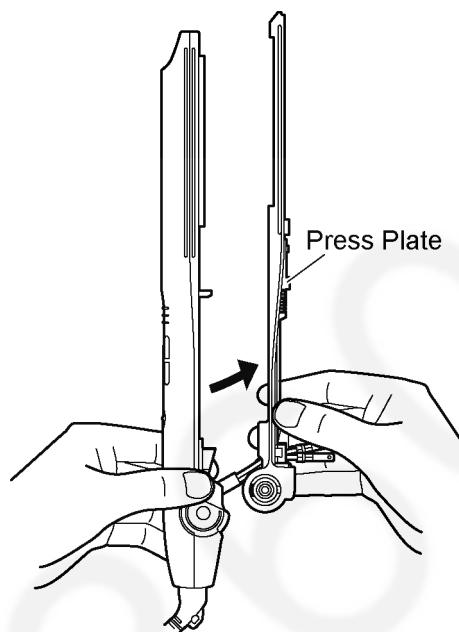


11. Remove 2 screws of the Housing side by Phillips screw driver (Plus Driver).

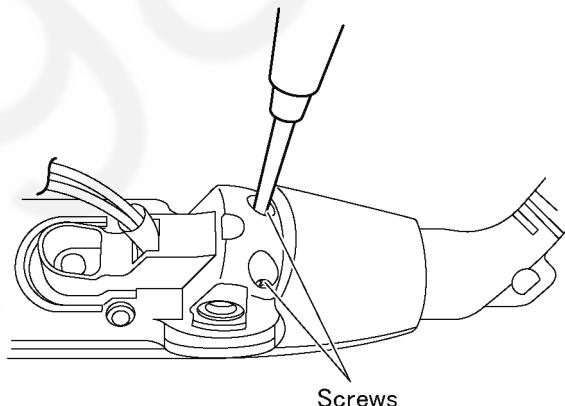

12. Remove 6 Screws by Phillips screw driver (Plus Driver).

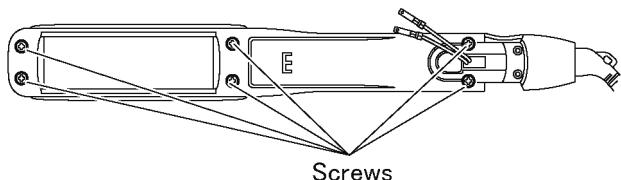


13. Remove Housing A from Housing B in Grip follow as below drawing.

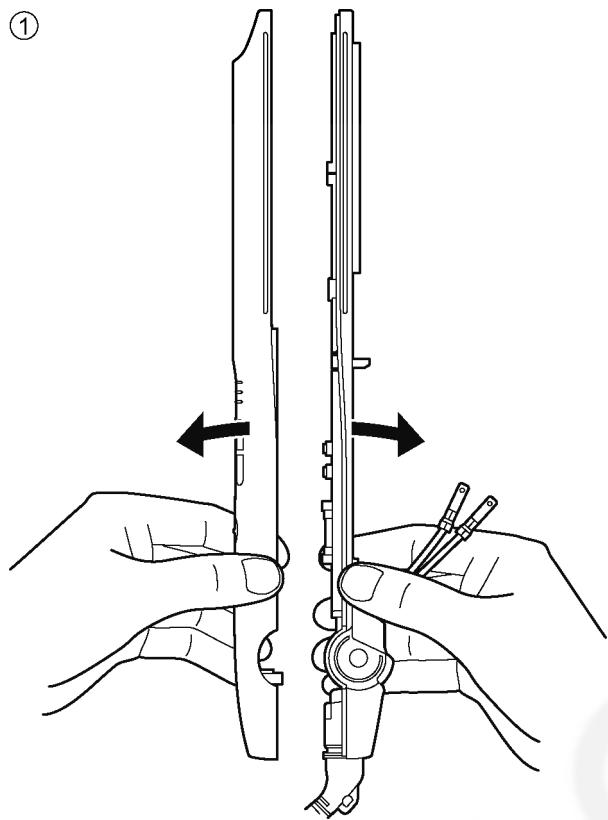


14. Take off Iron Plate and Circuit assembly b/k from Housing A.


① Take off Iron Plate from Hook of Housing A.

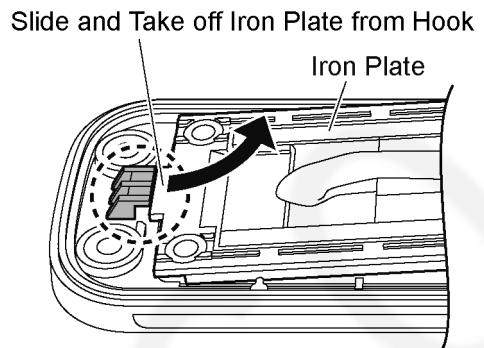

② Take off Circuit by push at Hook of Housing A.

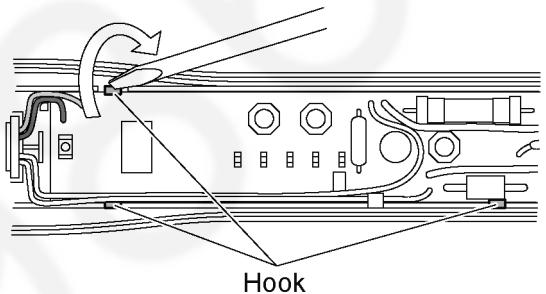


② When Remove Housing A,
Becaureful 4 Springs disappear.

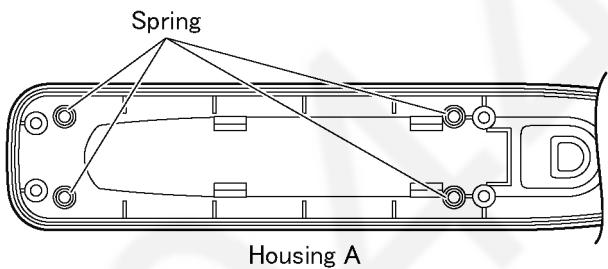

4.2. ASSEMBLY instruction

1. Shaft Cover fixing point.


- Have Control direction.
part  and part  must be same direction.

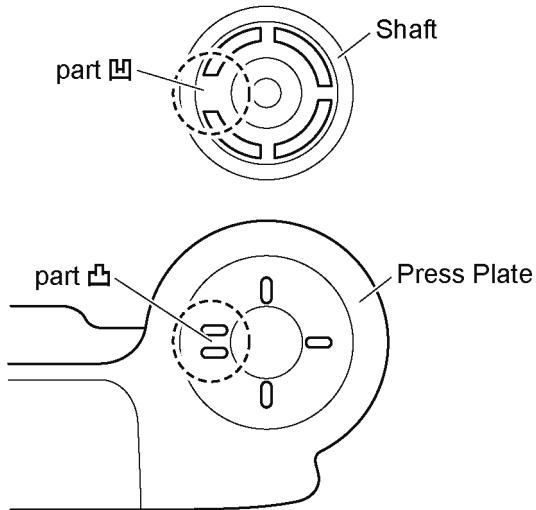

2. Housing B Assembly Point.


- When insert Power cord must be surely assembly in Connector Cover follow as below.

(Should be apply Foil at Connector of Power Cord)

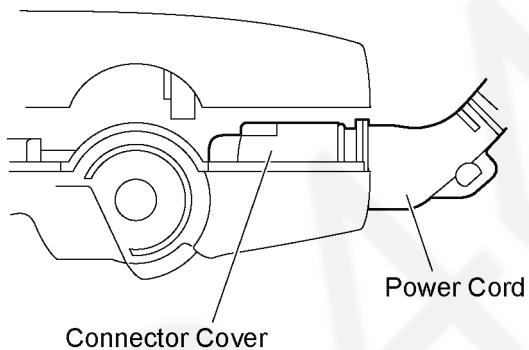


4.3. Lead wire of Iron Plate (Heater A , Heater B) and Circuit arrangement points.


1. Lead wire of Iron Plate (Heater A assembly b/k) and Circuit assembly b/k arrangement follow as below.

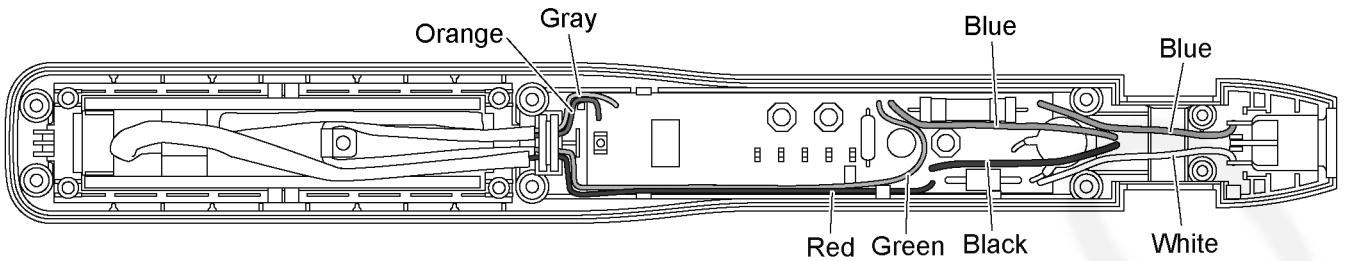


2. Lead wire of Iron Plate(Heater B assembly b/k) arrangement follow as below.

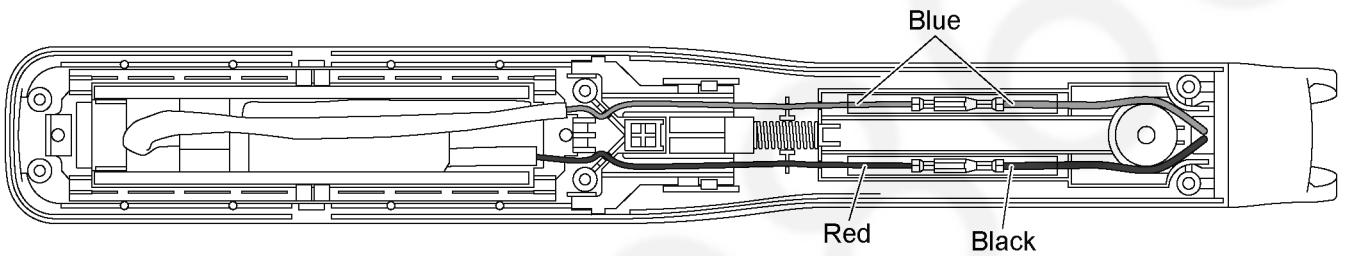


3. Shaft Cover must be control direction follow as below.

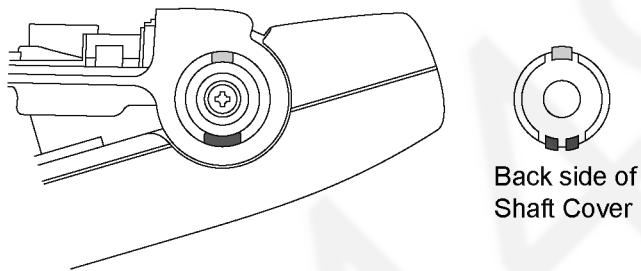

5 Wiring Connection Diagram

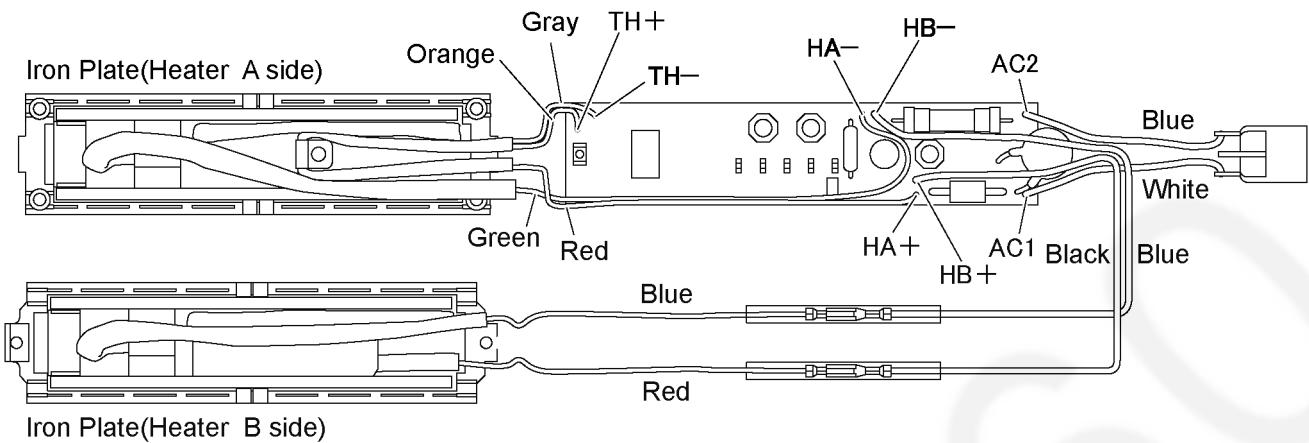


6 Schematic Diagram

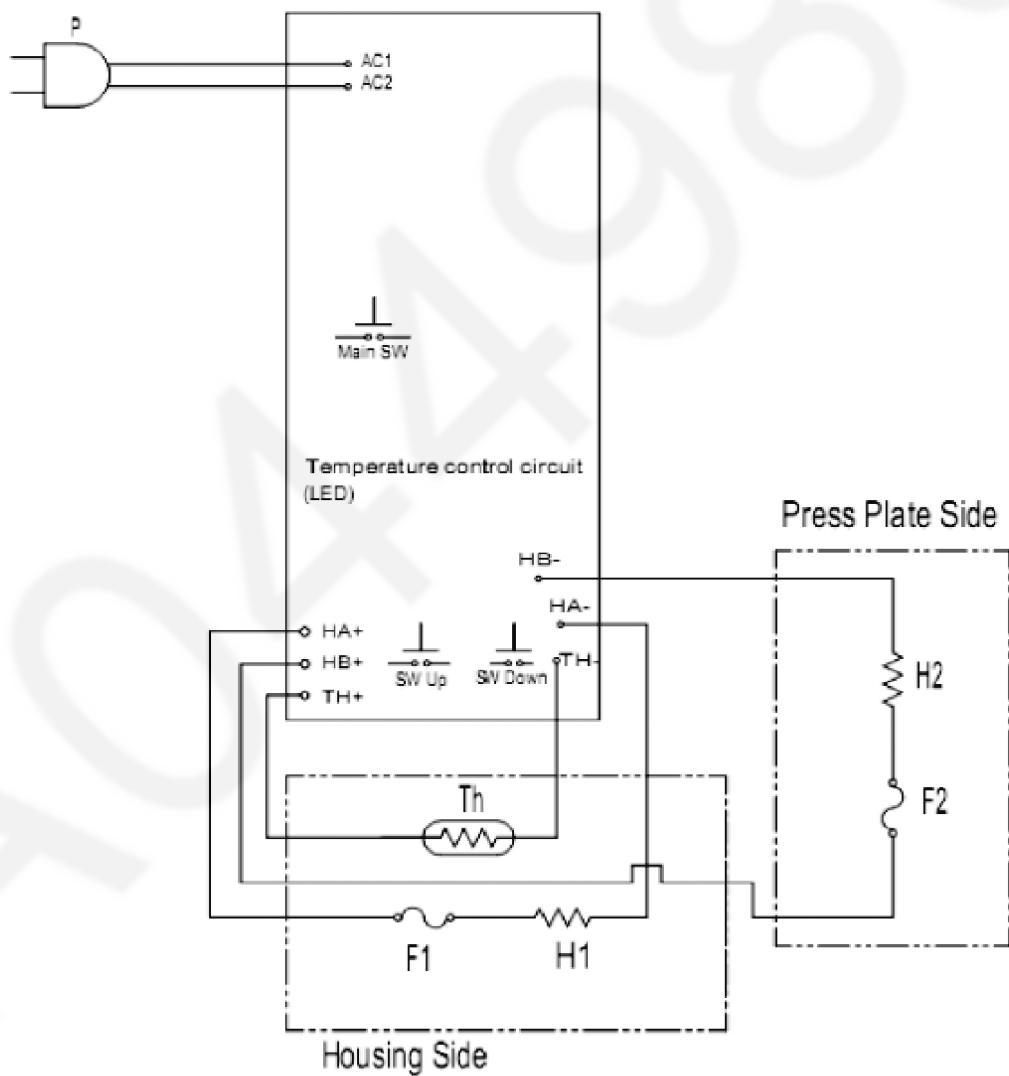

7 Exploded View and Replacement Parts List

7.1. Exploded View for EH-HW58

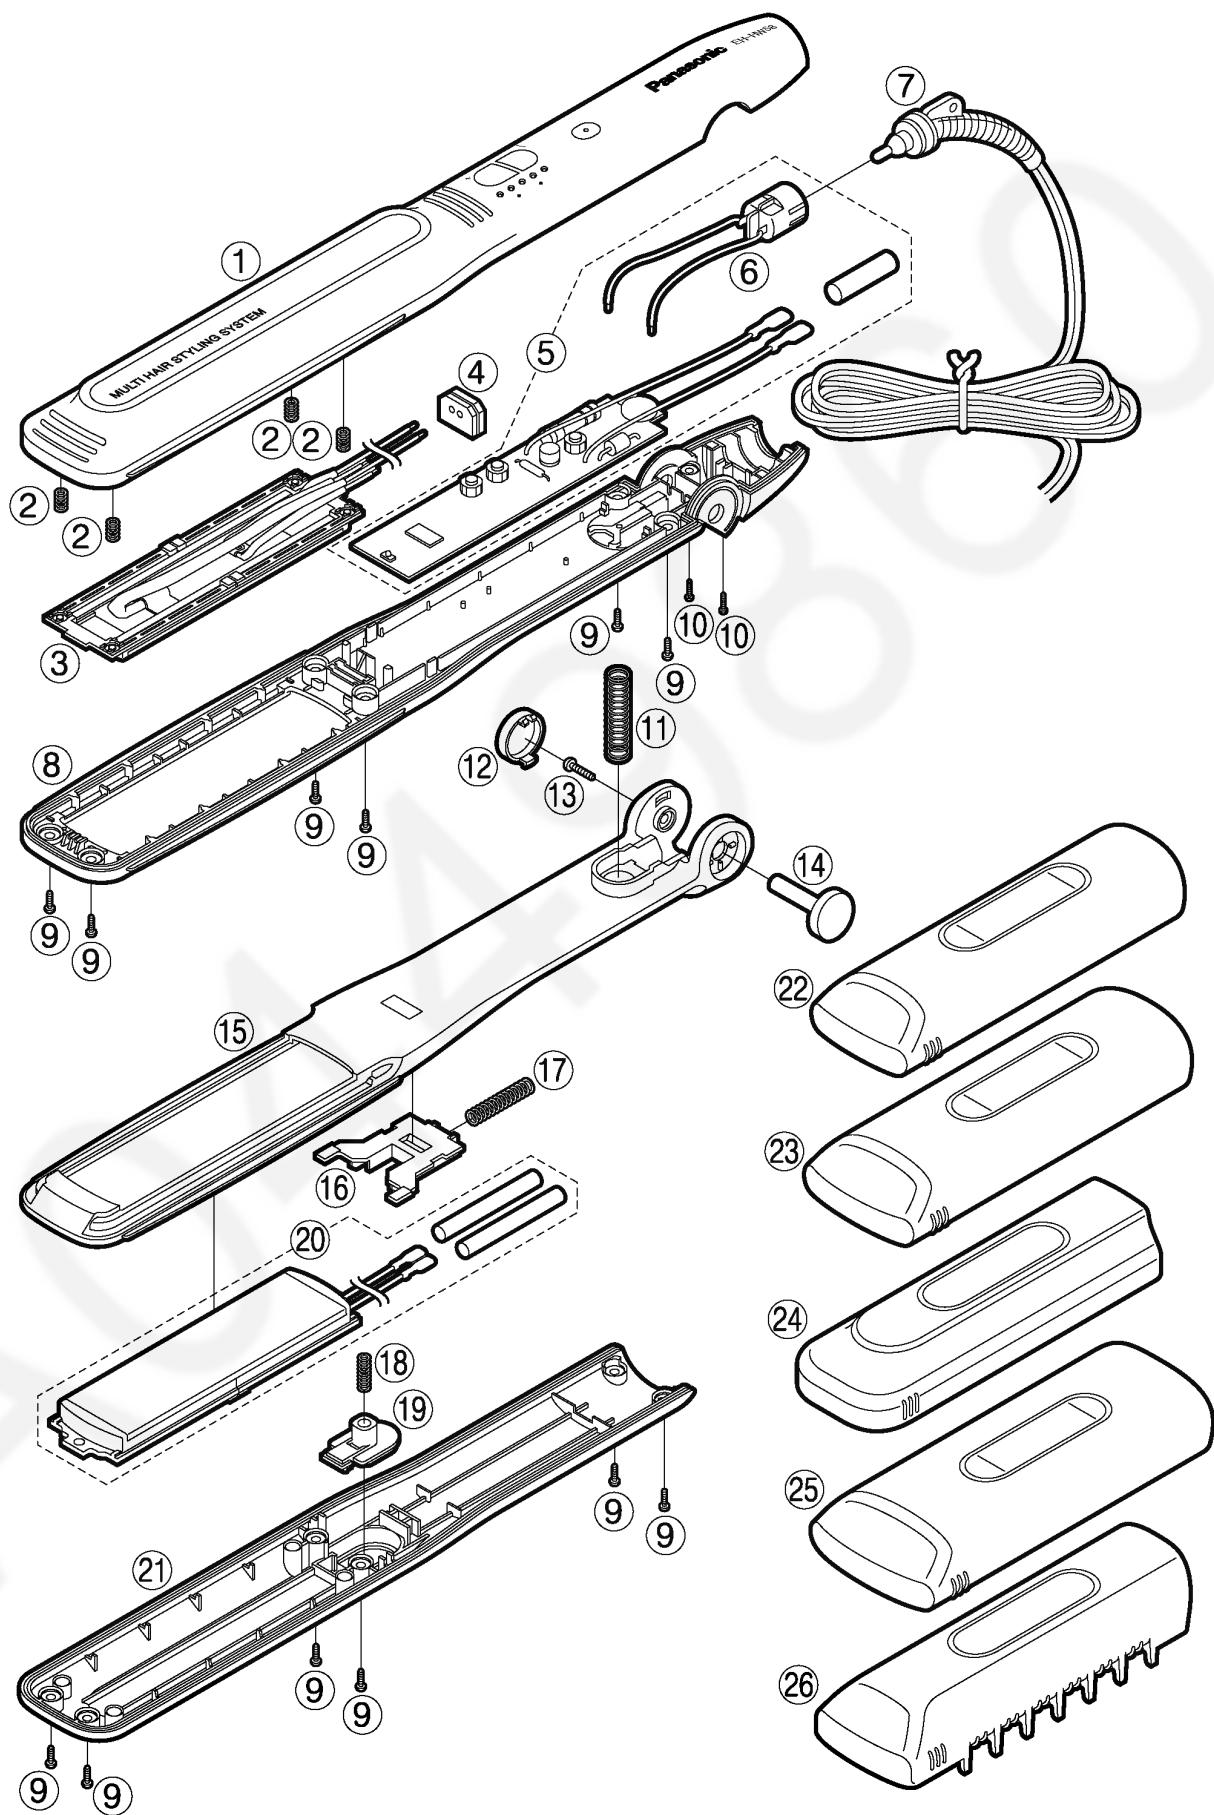


All parts are supplied from PMFTH-AP through PLAP

7.2. Parts List for EH-HW58

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	1	EHHW58HSABW	HOUSING A BLOCK (BLACK)	1	
	2	EHHW58FSW	FLOATING SPRING	4	*1
	3	EHHW58HABW	HEATER A ASSEMBLY BLOCK	1	
	4	EHHW58PKW	PACKING	1	
	5	EHHW58CCAW	CIRCUIT ASSEMBLY BLOCK	1	(INCLUDE 1 INSULATION TUBE, CONNECTOR COVER BLOCK)
	6	EHHW58CTBW	CONNECTOR COVER BLOCK	1	
	7	EHHW58PCB2BW	POWER CORD (BLACK)	1	(B2-PLUG)
	8	EHHW58HS86BW	HOUSING B (BLACK)	1	
	9	EHHW58T2606W	TAPPING SCREW 2.6*6 (BLACK)	12	*1
	10	EHHW58T2060W	TAPPING SCREW 2.0*6 (BLACK)	2	*1
	11	EHHW58PSSW	PIVOT SPRING (SILVER)	1	
	12	EHHW58SCBW	SHAFT COVER (BLACK)	1	
	13	EHHW58T3012W	TORX SCREW 3.0*12 (BLACK)	1	
	14	EHHW58SHBW	SHAFT (BLACK)	1	
	15	EHHW58PPBW	PRESS PLATE (BLACK)	1	
	16	EHHW58SPBW	SLIDE PLATE (BLACK)	1	
	17	EHHW58SSW	SLIDE SPRING	1	
	18	EHHW58LBSW	LOCK BUTTON SPRING	1	
	19	EHHW58LBBW	LOCK BUTTON (BLACK)	1	
	20	EHHW58HBBW	HEATER B ASSEMBLY BLOCK	1	(INCLUDE 2 INSULATION TUBES)
	21	EHHW58PPCBW	PRESS PLATE COVER (BLACK)	1	(INCLUDE 1 ALUMINUM SEAL)
	22	EHHW58C26BW	MEDIUM CURL (BLACK)	1	
	23	EHHW58C32BW	LARGE CURL (BLACK)	1	
	24	EHHW58STBW	STRAIGHTENER (BLACK)	1	
	25	EHHW58C38BW	EXTRA LARGE CUR (BLACK)	1	
	26	EHHW58VLBW	VOLUMIZER (BLACK)	1	
-	-	EHHW58S865KW	INDIVIDUAL PACKAGE	1	
-	-	EHHW5886503W	OPERATING INSTRUCTIONS	1	
-	-	EHHW58S09W	PULP FILLER	1	
-	-	EHHW5886504W	EASY MANUAL	1	

Remarks : *1 Individual Available

7.3. Exploded View for EH-HW38

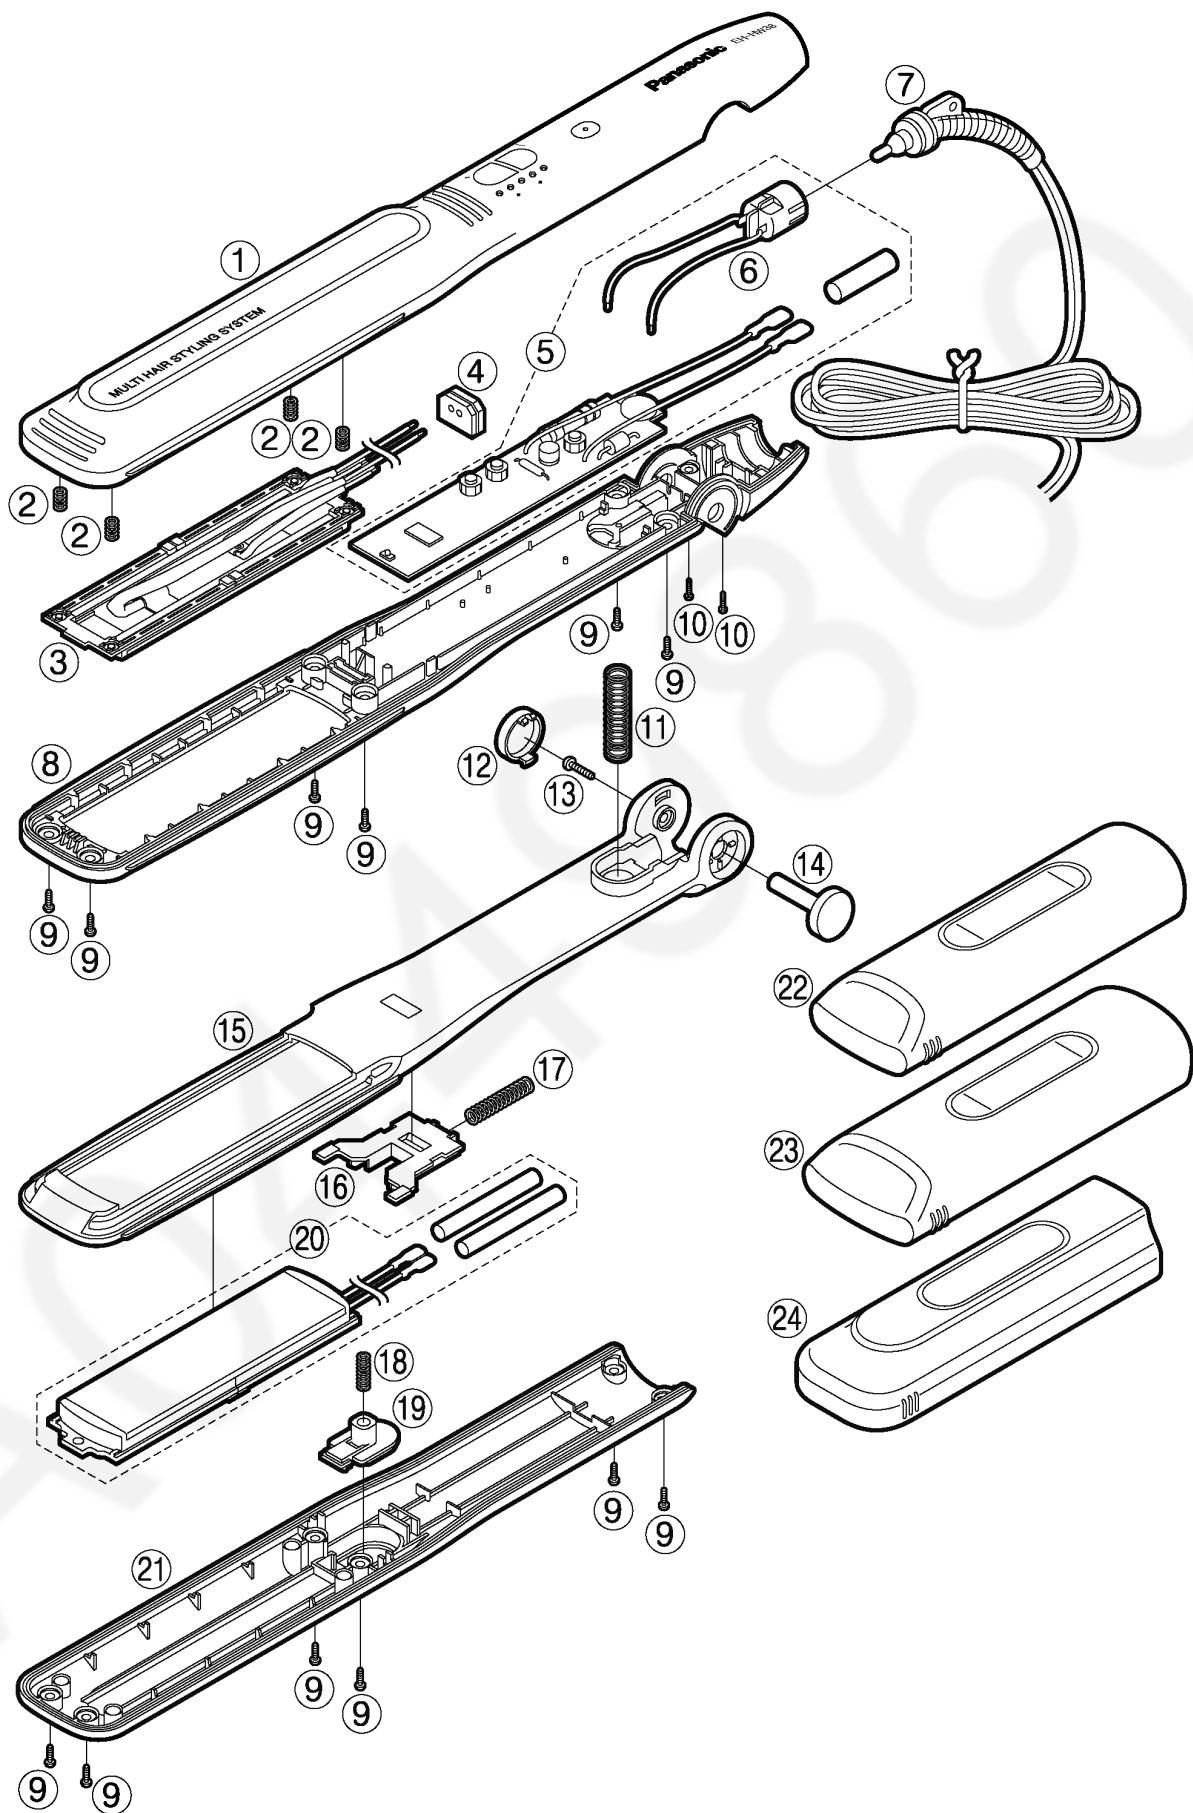


All parts are supplied from PMFTH-AP through PLAP

7.4. Parts List for EH-HW38

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	1	EHHW38HSABW	HOUSING A BLOCK (BLACK)	1	
	2	EHHW38FSW	FLOATING SPRING	4	*1
	3	EHHW38HABW	HEATER A ASSEMBLY BLOCK	1	
	4	EHHW38PKW	PACKING	1	
	5	EHHW38CCAW	CIRCUIT ASSEMBLY BLOCK	1	(INCLUDE 1 INSULATION TUBE, CONNECTOR COVER BLOCK)
	6	EHHW38CTBW	CONNECTOR COVER BLOCK	1	
	7	EHHW38PCB2BW	POWER CORD (BLACK)	1	(B2-PLUG)
	8	EHHW38HS86BW	HOUSING B (BLACK)	1	
	9	EHHW38T2606W	TAPPING SCREW 2.6*6 (BLACK)	12	*1
	10	EHHW38T2060W	TAPPING SCREW 2.0*6 (BLACK)	2	*1
	11	EHHW38PSSW	PIVOT SPRING (SILVER)	1	
	12	EHHW38SCBW	SHAFT COVER (BLACK)	1	
	13	EHHW38T3012W	TORX SCREW 3.0*12 (BLACK)	1	
	14	EHHW38SHBW	SHAFT (BLACK)	1	
	15	EHHW38PPBW	PRESS PLATE (BLACK)	1	
	16	EHHW38SPBW	SLIDE PLATE (BLACK)	1	
	17	EHHW38SSW	SLIDE SPRING	1	
	18	EHHW38LBSW	LOCK BUTTON SPRING	1	
	19	EHHW38LBBW	LOCK BUTTON (BLACK)	1	
	20	EHHW38HBBW	HEATER B ASSEMBLY BLOCK	1	(INCLUDE 2 INSULATION TUBES)
	21	EHHW38PPCBW	PRESS PLATE COVER (BLACK)	1	(INCLUDE 1 ALUMINUM SEAL)
	22	EHHW38C26BW	MEDIUM CURL (BLACK)	1	
	23	EHHW38C32BW	LARGE CURL (BLACK)	1	
	24	EHHW38STBW	STRAIGHTENER (BLACK)	1	
-	EHHW38S865KW	INDIVIDUAL PACKAGE	1		
-	EHHW3886503W	OPERATING INSTRUCTIONS	1		
-	EHHW38S09W	PULP FILLER	1		
-	EHHW3886504W	EASY MANUAL	1		

Remarks : *1 Individual Available

7.5. Exploded View for EH-HW18

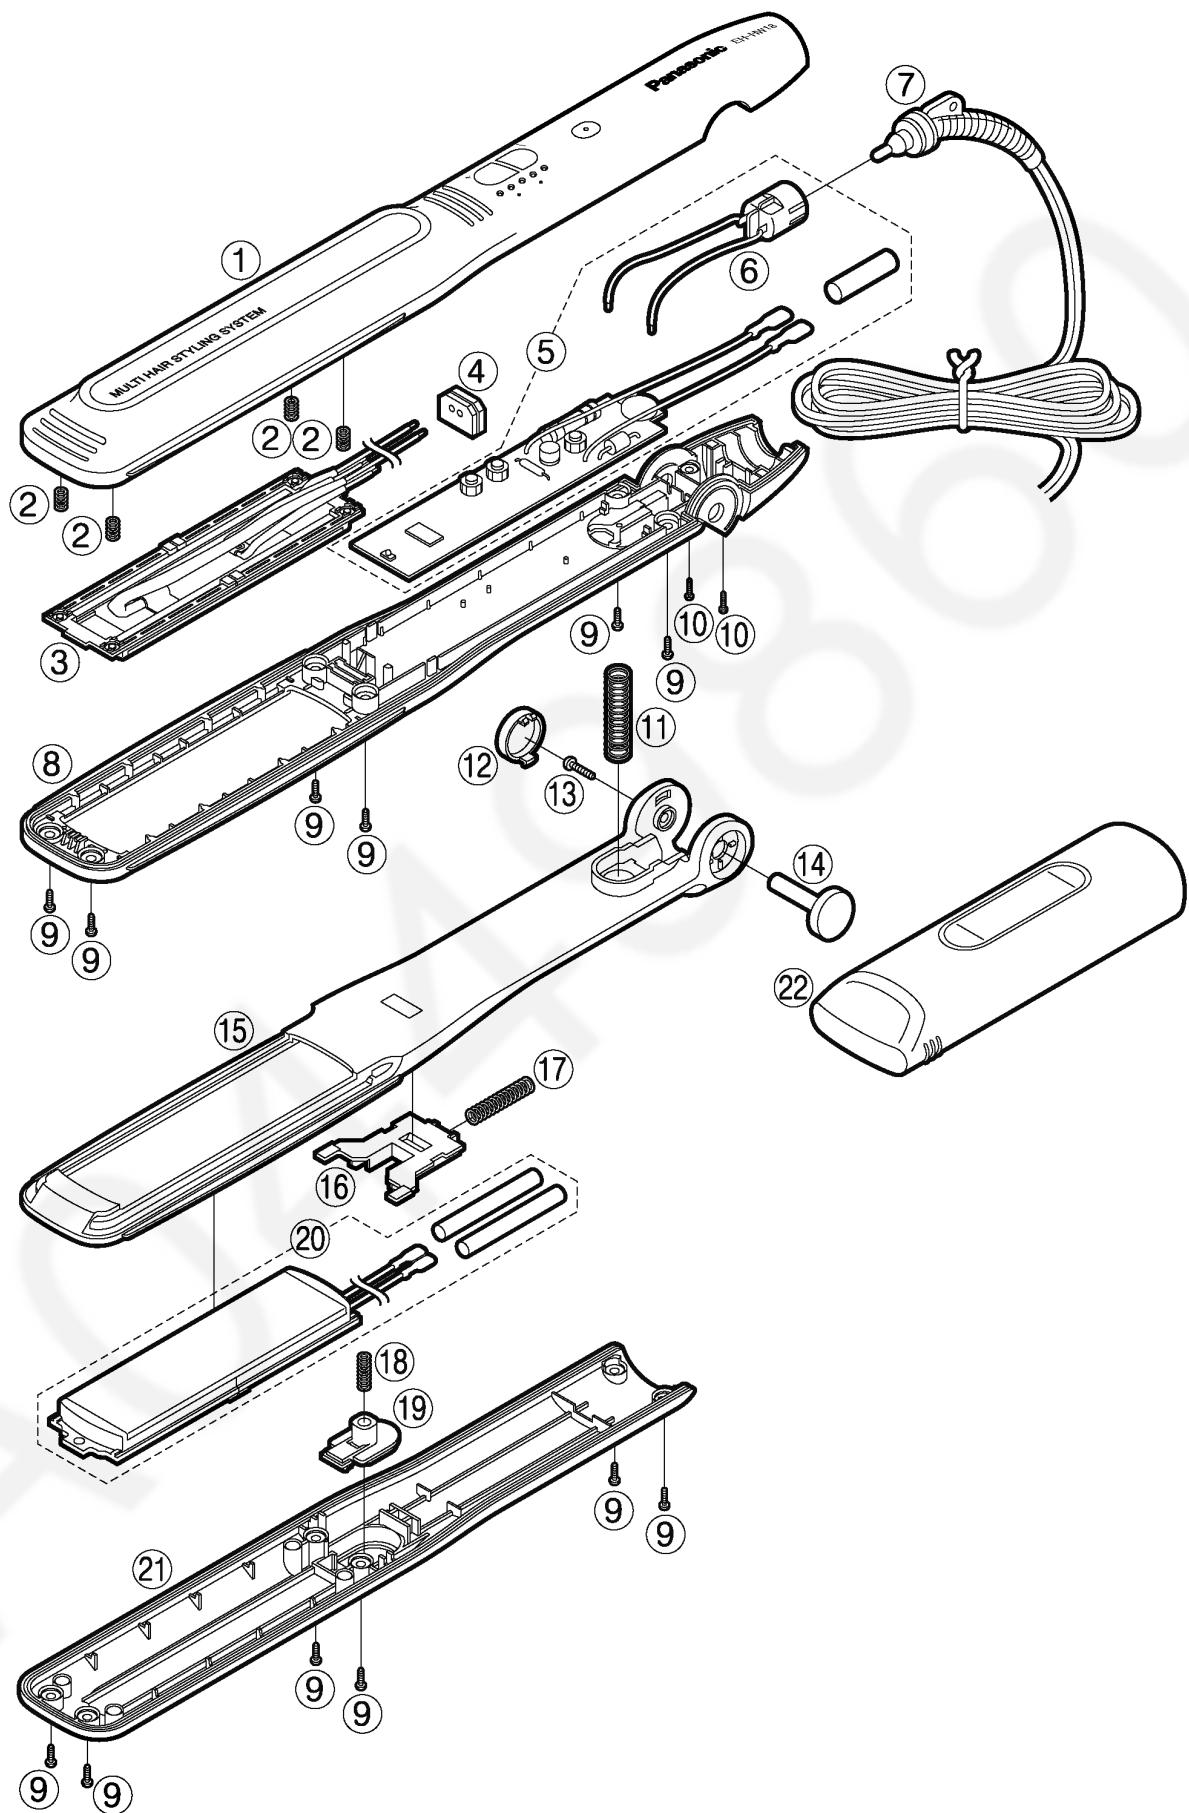

All parts are supplied from PMFTH-AP through PLAP

7.6. Parts List for EH-HW18

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	1	EHHW18HSABW	HOUSING A BLOCK (BLACK)	1	
	2	EHHW18FSW	FLOATING SPRING	4	*1
	3	EHHW18HABW	HEATER A ASSEMBLY BLOCK	1	
	4	EHHW18PKW	PACKING	1	
	5	EHHW18CCAW	CIRCUIT ASSEMBLY BLOCK	1	(INCLUDE 1 INSULATION TUBE, CONNECTOR COVER BLOCK)
	6	EHHW18CTBW	CONNECTOR COVER BLOCK	1	
	7	EHHW18PCB2BW	POWER CORD (BLACK)	1	(B2-PLUG)
	8	EHHW18HS86BW	HOUSING B (BLACK)	1	
	9	EHHW18T2606W	TAPPING SCREW 2.6*6 (BLACK)	12	*1
	10	EHHW18T2060W	TAPPING SCREW 2.0*6 (BLACK)	2	*1
	11	EHHW18PSSW	PIVOT SPRING (SILVER)	1	
	12	EHHW18SCBW	SHAFT COVER (BLACK)	1	
	13	EHHW18T3012W	TORX SCREW 3.0*12 (BLACK)	1	
	14	EHHW18SHBW	SHAFT (BLACK)	1	
	15	EHHW18PPBW	PRESS PLATE (BLACK)	1	
	16	EHHW18SPBW	SLIDE PLATE (BLACK)	1	
	17	EHHW18SSW	SLIDE SPRING	1	
	18	EHHW18LBSW	LOCK BUTTON SPRING	1	
	19	EHHW18LBBW	LOCK BUTTON (BLACK)	1	
	20	EHHW18HBBW	HEATER B ASSEMBLY BLOCK	1	(INCLUDE 2 INSULATION TUBES)
	21	EHHW18PPCBW	PRESS PLATE COVER (BLACK)	1	(INCLUDE 1 ALUMINUM SEAL)
	22	EHHW18C26BW	MEDIUM CURL (BLACK)	1	
-	EHHW18S865KW	INDIVIDUAL PACKAGE	1		
-	EHHW1886503W	OPERATING INSTRUCTIONS	1		
-	EHHW18S09W	PULP FILLER	1		
-	EHHW1886504W	EASY MANUAL	1		

Remarks : *1 Individual Available