

Service Manual

Telephone Equipment

Model No. **KX-TGF340B**

KX-TGF342B

KX-TGF343B

KX-TGF344B

KX-TGF345B

KX-TGF372S

KX-TGF373S

KX-TGF374S

KX-TGF375S

KX-TG585SK

KX-TGFA30B

KX-TGFA30S


KX-TGFA30M



KX-TGFA30
(Handset)



KX-TGF340
(Base Unit)

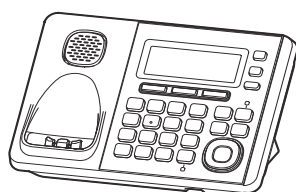

KX-TGF370
(Base Unit)



(Charger Unit)

Configuration for each model

Model No	Base Unit	Handset	Charger Unit	Expandable
KX-TGF340	1 (TGF340)	1 (TGFA30)		Up to 6
KX-TGF342	1 (TGF340)	2 (TGFA30)	1	Up to 6
KX-TGF343	1 (TGF340)	3 (TGFA30)	2	Up to 6
KX-TGF344	1 (TGF340)	4 (TGFA30)	3	Up to 6
KX-TGF345	1 (TGF340)	5 (TGFA30)	4	Up to 6
KX-TGF372	1 (TGF370)	2 (TGFA30)	1	Up to 6
KX-TGF373	1 (TGF370)	3 (TGFA30)	2	Up to 6
KX-TGF374	1 (TGF370)	4 (TGFA30)	3	Up to 6
KX-TGF375	1 (TGF370)	5 (TGFA30)	4	Up to 6
KX-TG585	1 (TGF370)	5 (TGFA30)	4	Up to 6
KX-TGFA30*		1 (TGFA30)	1	

*KX-TGFA30 is also an optional accessory, which contains a handset and a charger.

Digital Cordless Answering System
Link-to-Cell Bluetooth Convergence
Solution

B: Black Version

S: Silver Version

M: Metallic Black
(for U.S.A.)

 WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark. When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary slightly from the actual product.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions	5	10.1.8. Deregistering a Handset	46
1.1. For Service Technicians	5	10.1.9. Check Handset Transmission	47
2 Warning	5	10.1.10. Check Handset Reception	47
2.1. Battery Caution	5	10.1.11. Check Caller ID	47
2.2. About Lead Free Solder (PbF: Pb free)	5	10.1.12. Check BT Communication	48
2.2.1. Suggested PbF Solder	6	11 Disassembly and Assembly Instructions	50
2.3. Discarding of P. C. Board	6	11.1. Disassembly Instructions	50
3 Specifications	7	11.1.1. Base Unit	50
4 Technical Descriptions	8	11.1.2. Handset	54
4.1. Circuit Configuration of TGF34x/TGF37x Series Phones	8	11.1.3. Charger Unit	55
4.2. US-DECT Description	9	11.2. How to Replace the Base unit LCD	56
4.2.1. TDD Frame Format	9	11.3. How to Replace the Handset LCD	58
4.2.2. TDMA system	9	12 Measurements and Adjustments	59
4.2.3. Signal Flowchart in the Radio Parts	10	12.1. Equipment Required	59
4.3. Block Diagram (Base Unit_Main)	11	12.2. The Setting Method of JIG	59
4.4. Tel Interface Circuit	12	12.2.1. Connections (Base Unit)	59
4.5. Block Diagram (Base Unit_RF Part)	13	12.2.2. Connections (Handset)	60
4.6. Circuit Operation (Base Unit)	14	12.2.3. How to install Batch file into P.C.	61
4.6.1. BBIC (Base Band IC: IC501)	14	12.2.4. Commands	62
4.6.2. Flash Memory (IC502)	14	12.3. Adjustment Standard (Base Unit)	63
4.6.3. Flash Memory (IC601)	14	12.3.1. Bottom View	63
4.6.4. Bluetooth Unit (IC721)	14	12.4. Adjustment Standard (Handset)	64
4.6.5. Power Supply Circuit/Reset Circuit	15	12.4.1. Component View	64
4.6.6. Telephone Line Interface	17	12.5. Things to Do after Replacing IC or X'tal	65
4.6.7. Parallel Connection Detect Circuit/Auto Disconnect Circuit	18	12.5.1. How to download the data	65
4.6.8. Calling Line Identification (Caller ID)/Call Waiting Caller ID	19	12.6. Frequency Table	70
4.7. Block Diagram (Handset)	21	12.7. Bluetooth Frequency Table	71
4.8. Block Diagram (Handset_RF Part)	22	13 Miscellaneous	72
4.9. Circuit Operation (Handset)	23	13.1. How to Replace the LLP (Leadless Leadframe Package) IC	72
4.9.1. Outline	23	13.1.1. Preparation	72
4.9.2. Power Supply Circuit/Reset Circuit	23	13.1.2. Caution	72
4.9.3. Charge Circuit	24	13.1.3. How to Remove the IC	72
4.9.4. Battery Low/Power Down Detector	24	13.1.4. How to Install the IC	73
4.9.5. Speakerphone	24	13.2. How to Replace the Flat Package IC	74
4.10. Behavior of Electric Power Failure	25	13.2.1. Preparation	74
4.11. Circuit Operation (Charger Unit)	25	13.2.2. How to Remove the IC	74
4.12. Signal Route	26	13.2.3. How to Install the IC	75
5 Location of Controls and Components	28	13.2.4. How to Remove a Solder Bridge	75
6 Installation Instructions	28	13.3. Terminal Guide of the ICs, Transistors and Diodes	76
7 Operating Instructions	28	13.3.1. Base Unit	76
8 Test Mode	29	13.3.2. Handset	76
8.1. Engineering Mode	29	14 Schematic Diagram	77
8.1.1. Base Unit	29	14.1. For Schematic Diagram	77
8.1.2. Handset	31	14.1.1. Base Unit (Schematic Diagram (Base Unit_Main))	77
9 Service Mode	33	14.1.2. Handset (Schematic Diagram (Handset_Main))	77
9.1. How to Clear User Setting (Handset Only)	33	14.2. Schematic Diagram (Base Unit_Main)	78
10 Troubleshooting Guide	34	14.3. Schematic Diagram (Base Unit_RF)	80
10.1. Troubleshooting Flowchart	34	14.4. Schematic Diagram (Base Unit_Operation)	81
10.1.1. Check Power	35	14.5. Schematic Diagram (Base Unit_LED)	82
10.1.2. Check Record	36	14.6. Schematic Diagram (Handset_Main)	83
10.1.3. Check Playback	39	14.7. Schematic Diagram (Handset_BBIC Module)	84
10.1.4. Check Battery Charge	39	15 Printed Circuit Board	87
10.1.5. Check Link	40	15.1. Circuit Board (Base Unit_Main)	87
10.1.6. Check the RF part	42	15.1.1. Component View	87
10.1.7. Registering a Handset to the Base Unit	46		

15.1.2. Bottom View	88
15.2. Circuit Board (Base Unit_Operation)	89
15.3. Circuit Board (Base Unit_LED)	89
15.4. Circuit Board (Handset_Main)	91
15.4.1. Component View	91
15.4.2. Bottom View	92
15.5. Circuit Board (Handset_BBIC Module)	93
15.5.1. Component View	93
16 Exploded View and Replacement Parts List	94
16.1. Cabinet and Electrical Parts (Base Unit)	94
16.2. Cabinet and Electrical Parts (Handset)	95
16.3. Cabinet and Electrical Parts (Charger Unit)	96
16.4. Accessories and Packing Materials	97
16.4.1. KX-TGF340B	97
16.4.2. KX-TGF342B	98
16.4.3. KX-TGF343B	99
16.4.4. KX-TGF344B	100
16.4.5. KX-TGF345B	101
16.4.6. KX-TGF372S	102
16.4.7. KX-TGF373S	103
16.4.8. KX-TGF374S	104
16.4.9. KX-TGF375S	105
16.4.10. KX-TG585SK	105
16.4.11. KX-TGFA30B	106
16.4.12. KX-TGFA30S	106
16.4.13. KX-TGFA30M	107
16.5. Replacement Parts List	108
16.5.1. Base Unit	108
16.5.2. Handset	111
16.5.3. Charger Unit	112
16.5.4. Accessories and Packing Materials	113
16.5.5. Screws	114
16.5.6. Fixtures and Tools	114

1 Safety Precautions

1.1. For Service Technicians

• Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work.

1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
3. FASTON terminals shall be plugged straight in and unplugged straight out.

• ICs and LSIs are vulnerable to static electricity.

When repairing, the following precautions will help prevent recurring malfunctions.

1. Cover plastic parts boxes with aluminum foil.
2. Ground the soldering irons.
3. Use a conductive mat on worktable.
4. Do not grasp IC or LSI pins with bare fingers.

2 Warning

2.1. Battery Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Attention:



A nickel metal hydride battery that is recyclable powers the product you have purchased.

Please call 1-800-8-BATTERY (1-800-822-8837) for information on how to recycle this battery.

2.2. About Lead Free Solder (PbF: Pb free)

Note:


In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.

Caution




- PbF solder has a melting point that is 50 °F ~ 70 °F (30 °C ~ 40 °C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 °F ± 20 °F (370 °C ± 10 °C).
- Exercise care while using higher temperature soldering irons.:
Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

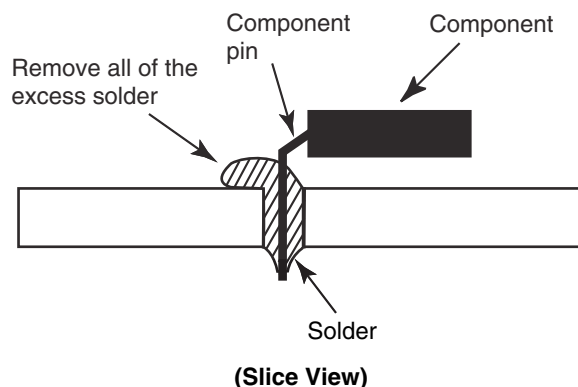

2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu), or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials.

The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

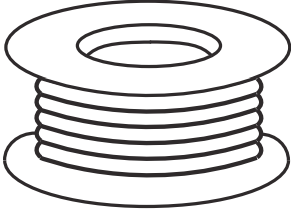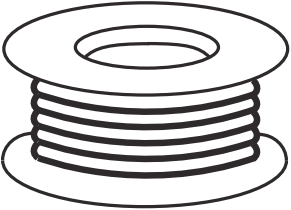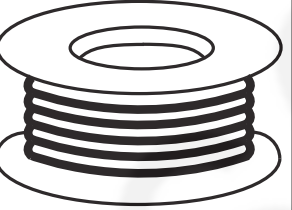0.3 mm X 100 g	0.6 mm X 100 g	1.0 mm X 100 g
		

2.3. Discarding of P. C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

3 Specifications

■ Standard:

DECT 6.0 (Digital Enhanced Cordless
Telecommunications 6.0)
Bluetooth wireless technology 2.1 (*2)

■ Number of channels:

60 Duplex Channels (DECT 6.0)
79 Duplex channels (Bluetooth) (*2)

■ Frequency range:

1.92 GHz to 1.93 GHz (DECT 6.0)
2.402 GHz to 2.48 GHz (Bluetooth) (*2)

■ Duplex procedure:

TDMA (Time Division Multiple Access)

■ Channel spacing:

1.728MHz (DECT 6.0)
1.0MHz (Bluetooth) (*2)

■ Bit rate:

1.152Mbit/s (DECT 6.0)
1.0 Mbit/s (Bluetooth) (*2)

■ Modulation:

GFSK (Gaussian Frequency Shift Keying)

■ RF transmission power:

115 mW (max/DECT6.0)

■ Voice coding:

ADPCM 32 kbit/s (DECT 6.0)
CVSD/PCM 64kbit/s (Bluetooth) (*2)
PCM 64kbit/s (BT_IC)

	Base Unit	Handset	Charger
Power source	AC Adaptor (PNLV226Z, 120 V AC, 60 Hz)	Rechargeable Ni-MH battery AAA (R03) size (1.2 V 400 mAh)	AC Adaptor (PNLV233-AZ, 120 V AC, 60 Hz)
Receiving Method	Super Heterodyne	Super Heterodyne	—
Oscillation Method	PLL synthesizer	PLL synthesizer	—
Detecting Method	Quadrature Discriminator	Quadrature Discriminator	—
Tolerance of OSC Frequency	10.368 MHz ±100 Hz	13.824 MHz ±100 Hz	—
Modulation Method	Frequency Modulation	Frequency Modulation	—
ID Code	40 bit	40 bit	—
Ringer Equivalence No. (REN)	0.1B	—	—
Dialing Mode	Tone (DTMF)/Pulse	Tone (DTMF)/Pulse	—
Redial	Up to 48 digits	Up to 48 digits	—
Speed Dialer	Up to 24 digits (Phonebook)	Up to 24 digits (Phonebook)	—
Power Consumption	Standby: Approx. 1.0 W (*1) Standby: Approx. 1.2 W (*2) Maximum: Approx. 4.3 W (*1) Maximum: Approx. 4.5 W (*2)	12 days at Standby (eco mode) 13 hours at Talk (eco mode)	Standby: Approx. 0.1 W Maximum: Approx. 1.8 W
Operating Conditions	0 °C - 40 °C (32 °F - 104 °F) 20 % - 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F - 104 °F) 20 % - 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F - 104 °F) 20 % - 80 % relative air humidity (dry)
Dimensions (W x D x H)	Approx. 179 mm x 115 mm x 101 mm	Approx. 48 mm x 30 mm x 168 mm	Approx. 72 mm x 73 mm x 39 mm
Mass (Weight)	Approx. 350 g (*1) Approx. 355 g (*2)	Approx. 140 g	Approx. 100 g

Note:

(*1) KX-TGF340/KX-TGF342/KX-TGF343/KX-TGF344/KX-TGF345

(*2) KX-TGF372/KX-TGF373/KX-TGF374/KX-TGF375/KX-TG585SK

Design and specifications are subject to change without notice.

Note for Service:

- **Operation range:** Up to 300 m outdoors, Up to 50 m indoors, depending on the condition.
- **Analog telephone connection:** Telephone Line
- **Optional headset:** KX-TCA60, KX-TCA93, KX-TCA400, KX-TCA430
- **Optional Range extender:** KX-TGA405
- **Optional Key detector:** KX-TGA20


4 Technical Descriptions

4.1. Circuit Configuration of TGF34x/TGF37x Series Phones

TGF34x/TGF37x consists of DECT cordless telephone and Bluetooth Module.

Both voices of transmission and reception are transferred by PCM.


BBIC on DECT side controls the cordless telephone system, which makes control data communication with BT_IC on BT Module in serial data.

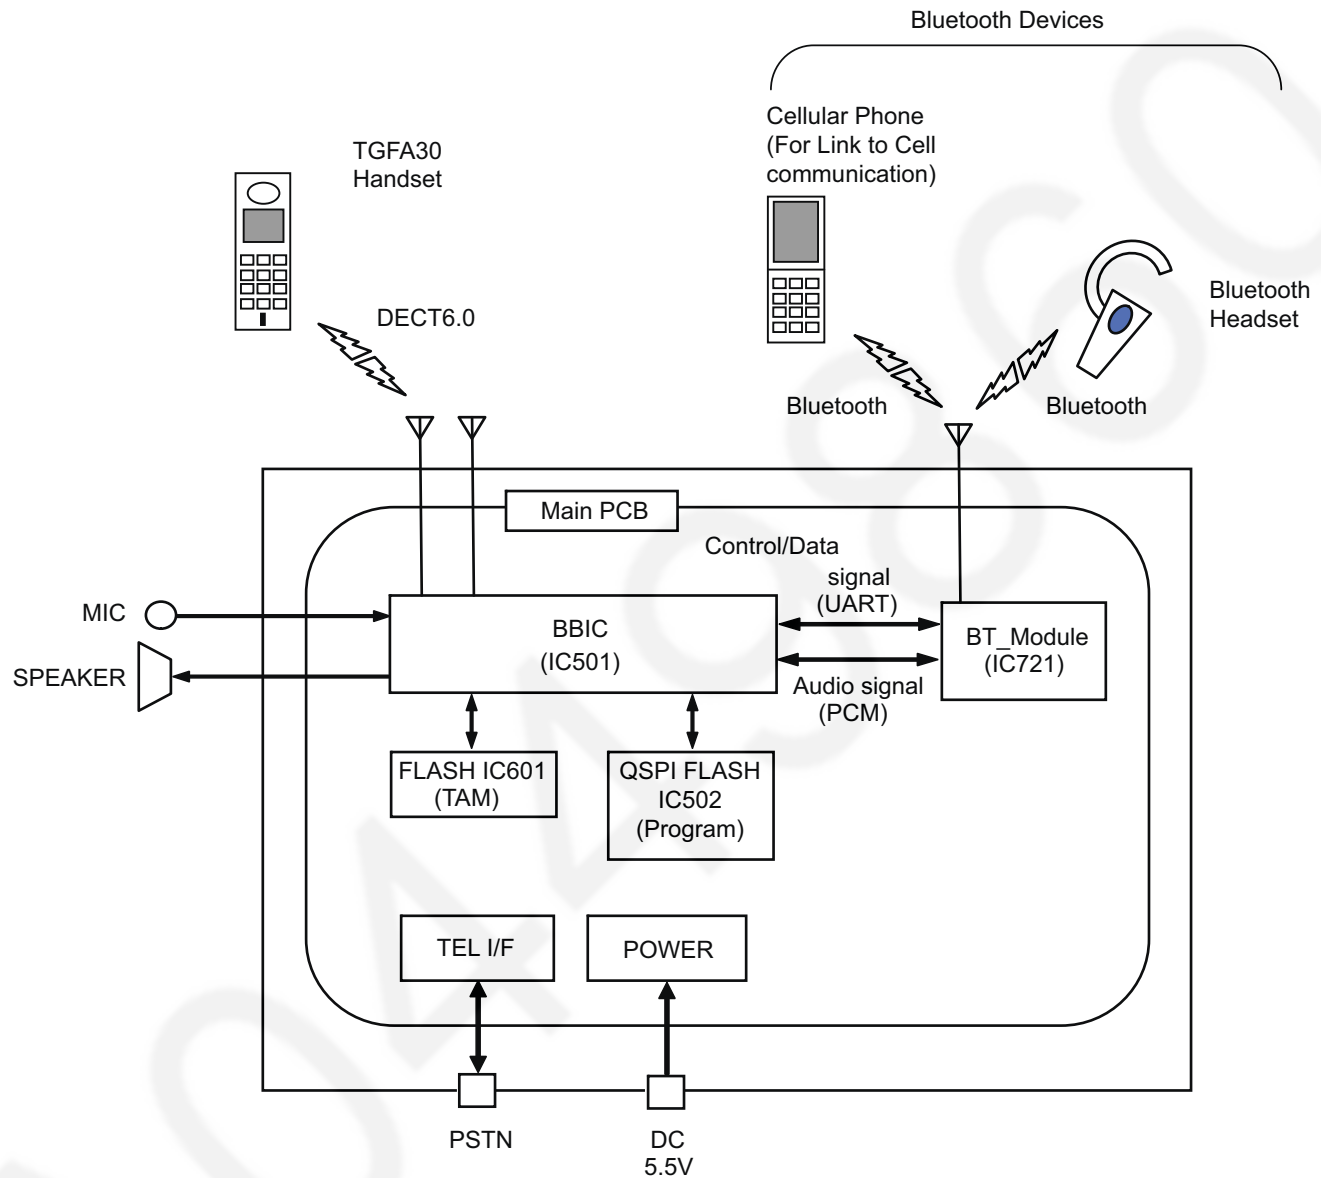

4.2. US-DECT Description

The frequency range of 1.92 GHz-1.93 GHz is used. Transmitting and receiving carrier between base unit and handset is same frequency. Refer to **Frequency Table** (P.70).

4.2.1. TDD Frame Format

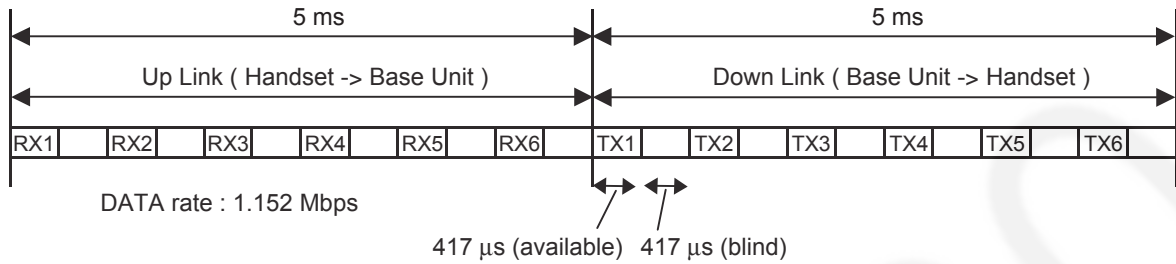


4.2.2. TDMA system

This system is the cycles of 10 ms, and has 6 duplex paths, but maximum duplex communication path is 5 because of dummy bearer use.

In 1 slot 417 μ s, the 10 ms of voice data is transmitted.

• 2 - Handsets Link

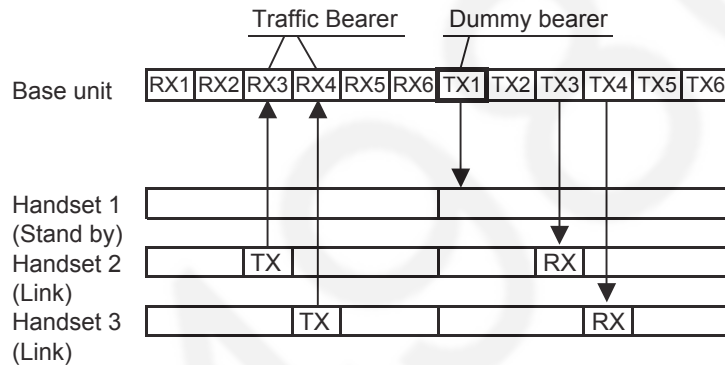

Traffic Bearer

A link is established between base unit and handset.

The state where duplex communication is performed.

Handset doesn't make up duplex in no free RF channels because of interference. (*1)

Dummy Bearer

Base unit sends Dummy-data to the all stand-by state handsets.

Handsets receive that data for synchronization and monitoring request from the base unit.

Base unit doesn't send Dummy bearer in no free RF channels because of interference. (*1)

Note:

(*1) It is a feature under FCC 15 regulation and for interference avoidance.

In the case of checking RF parts, it is better in least interference condition.

4.2.3. Signal Flowchart in the Radio Parts

Reception

Base unit:

A voice signal from TEL line is encoded to digital data and converted into a 1.9GHz modulated radio signal by BBIC(IC501). The RF signal, after which is amplified in BBIC, is fed to selected antenna.

Handset:

As for a handset RF, RF signal is received in one antenna.

BBIC down-converts to 864 kHz IF signal from RX signal and demodulates it to digital data "RXDATA".

BBIC (IC1) converts RXDATA into a voice signal and outputs it to speaker.

Transmission

Handset:

A voice signal from microphone is encoded to digital data and converted into a 1.9GHz modulated radio signal by BBIC(IC1). The RF signal, after which is amplified in BBIC, is fed to an antenna.


Base unit:

As for a base unit RF, RF signal is received in two antennas.

BBIC (IC501) compares RF signal levels and selects the antenna to be used. Then BBIC down-converts to 864 kHz IF signal from RX signal in the selected antenna, and demodulates it to digital data "RXDATA".


BBIC (IC501) converts RXDATA into a voice signal and outputs it to TEL line.

4.3. Block Diagram (Base Unit_Main)

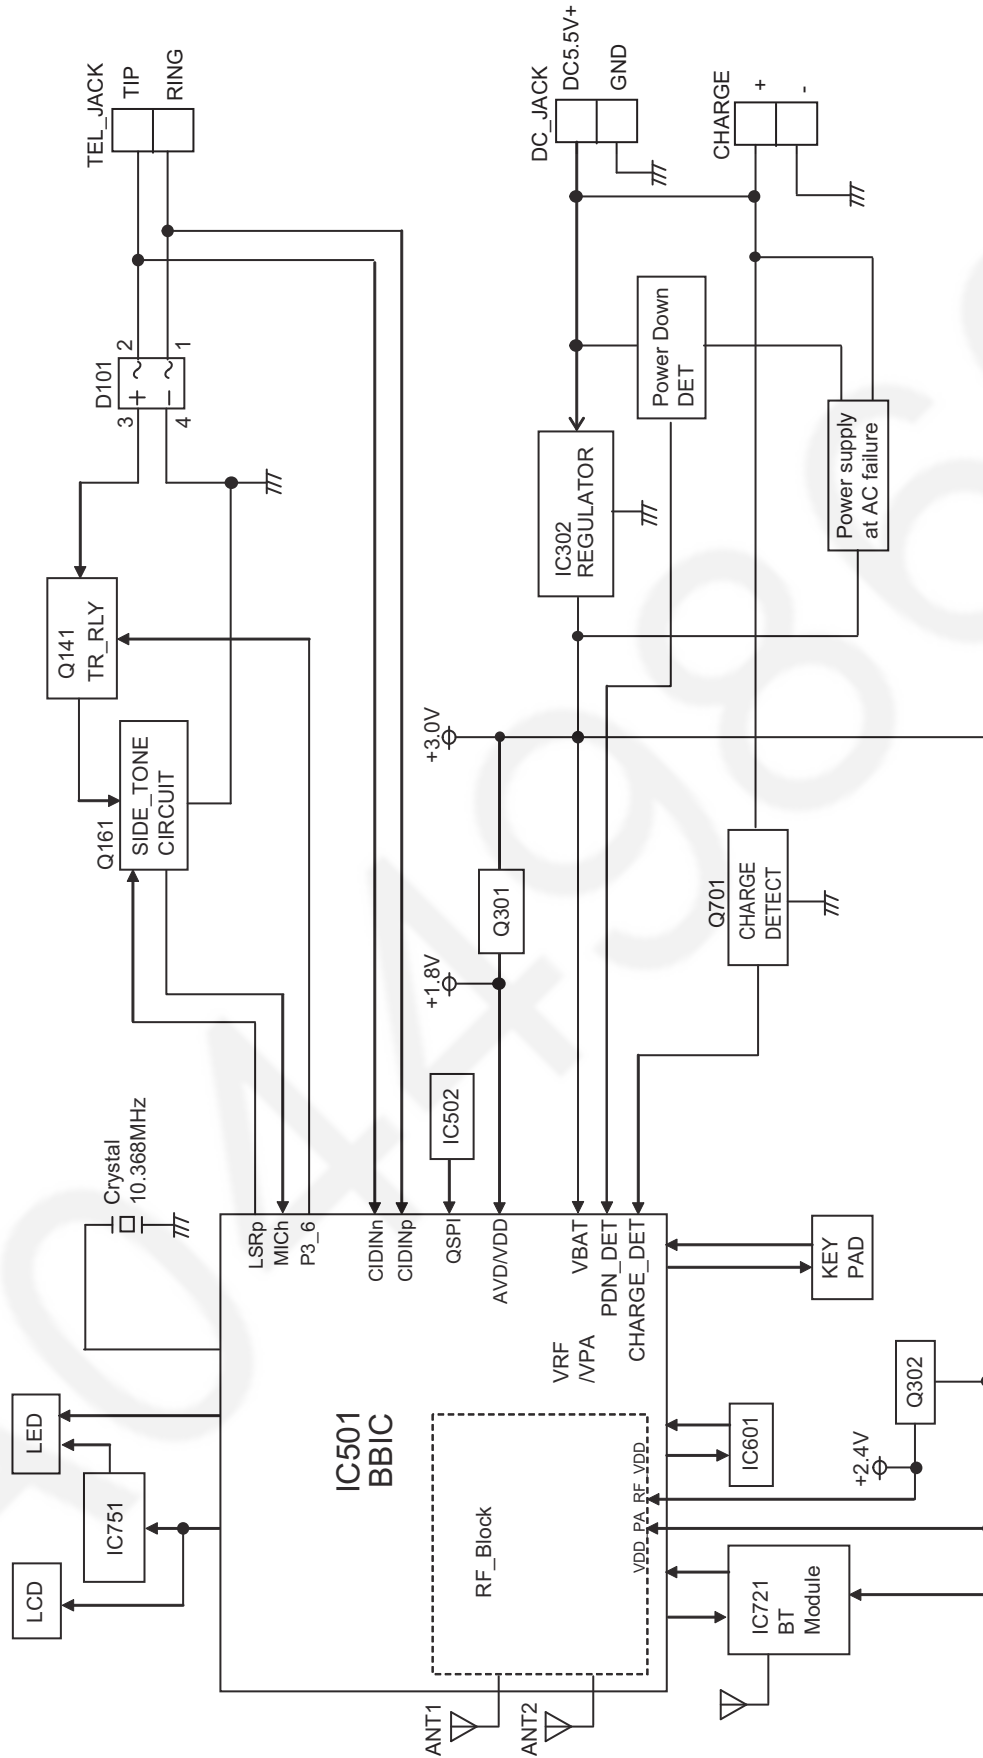


KX-TGF340/342/343/344/345/372/373/374/375/TG585 BLOCK DIAGRAM (Base Unit_Main)

4.4. Tel Interface Circuit

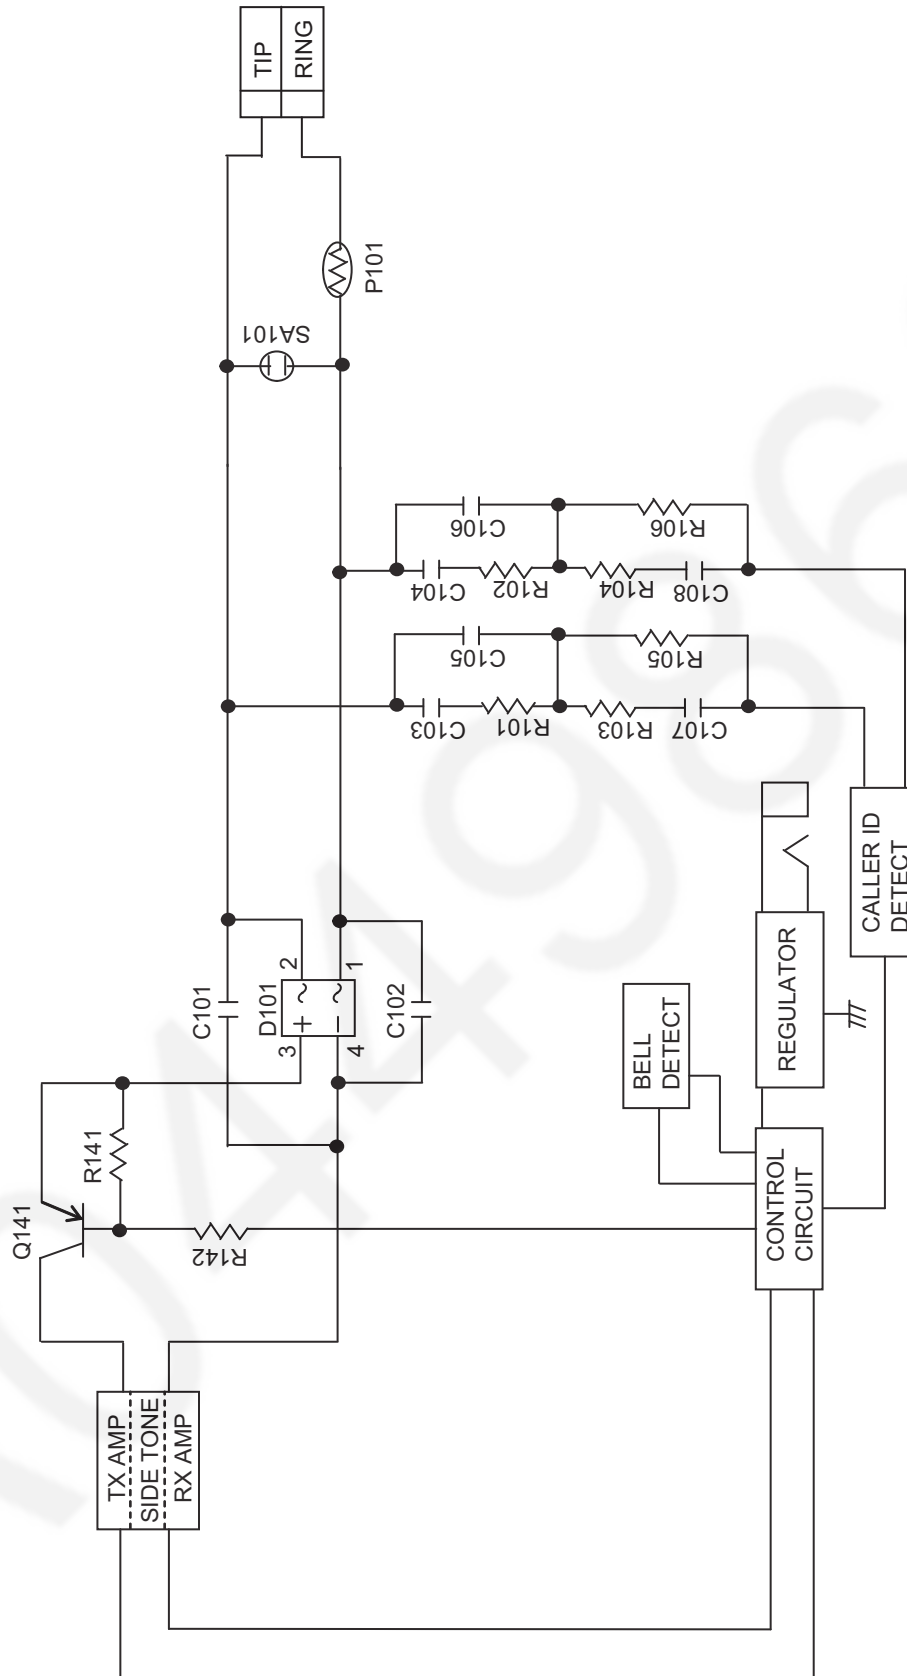

4.5. Block Diagram (Base Unit_RF Part)

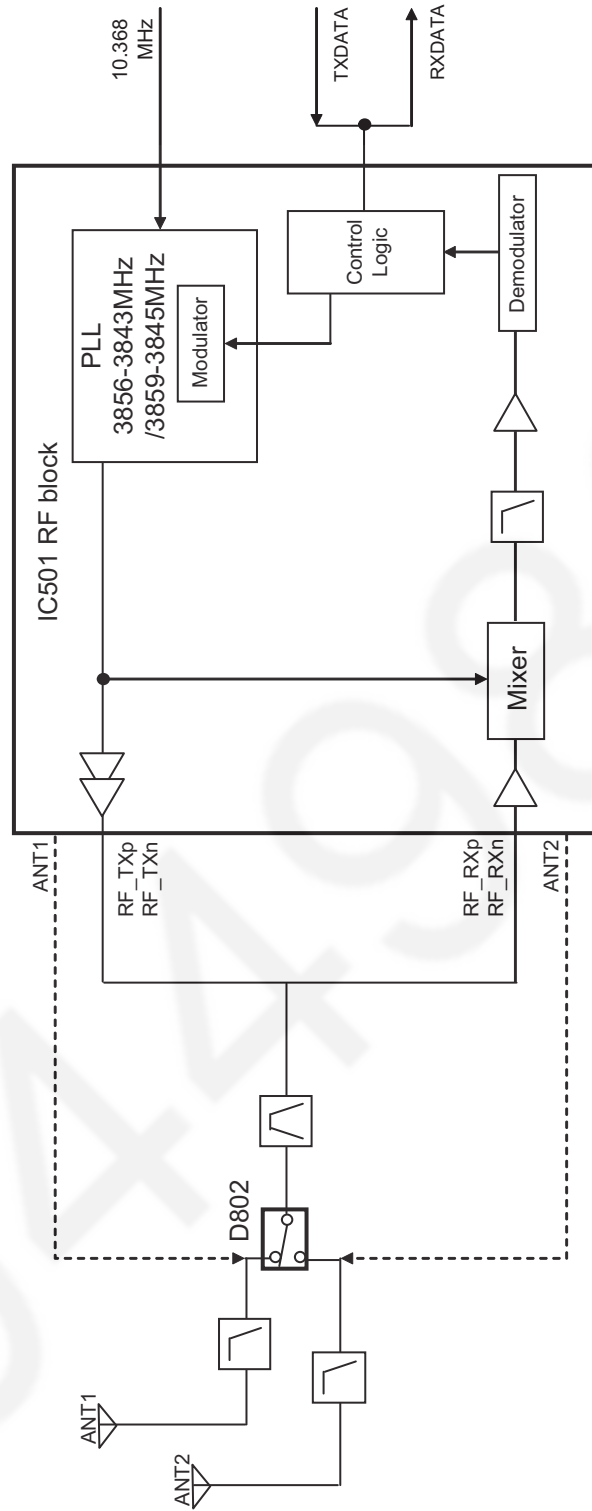


KX-TGF340/342/343/344/345/372/373/374/375/TG585 BLOCK DIAGRAM (Base Unit_RF Part)

4.6. Circuit Operation (Base Unit)

General Description:

(BBIC, Flash Memory) is a digital speech/signal processing system that implements all the functions of speech compression, record and playback, and memory management required in a digital telephone answering machine.

The BBIC system is fully controlled by a host processor. The host processor provides activation and control of all that functions as follows.

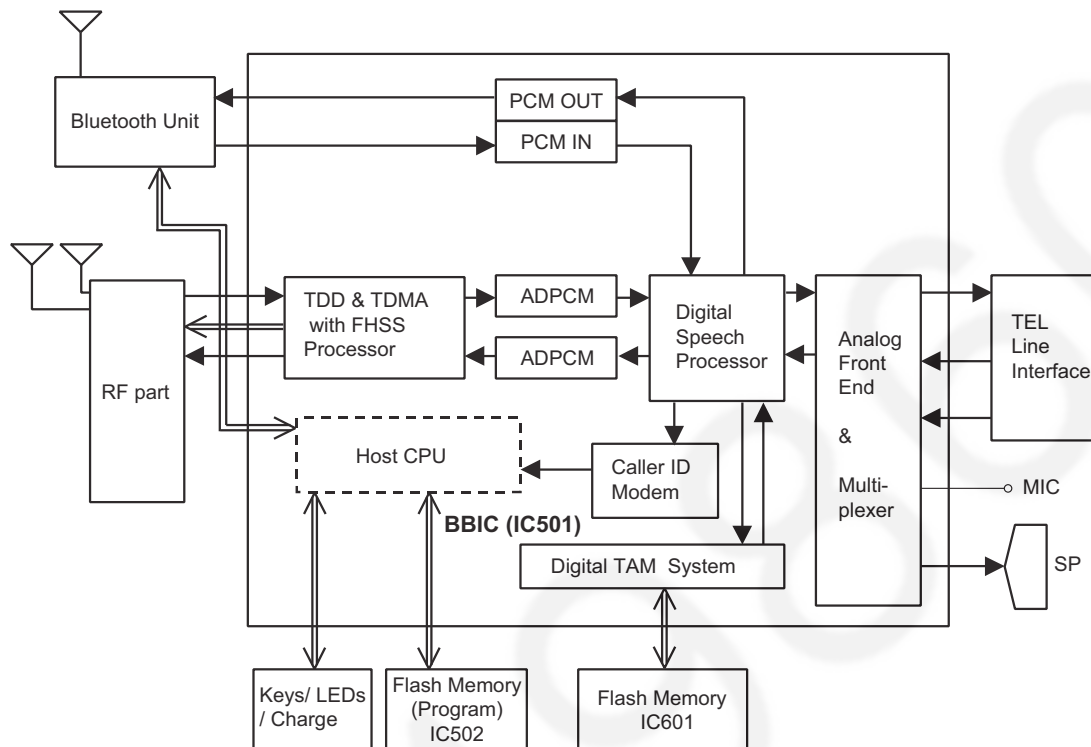

4.6.1. BBIC (Base Band IC: IC501)

• Voice Message Recording/Play back

The BBIC system uses a proprietary speech compression technique to record and store voice message in Flash Memory. An error correction algorithm is used to enable playback of these messages from the Flash Memory.

• DTMF Generator

When the DTMF data from the handset is received, the DTMF signal is output.

• Synthesized Voice (Pre-recorded message)

The BBIC implements synthesized Voice, utilizing the built in speech detector and a Flash Memory, which stored the vocabulary.

• Caller ID demodulation

The BBIC implements monitor and demodulate the FSK/DTMF signals that provide CID information from the Central Office.

• Digital Switching

The voice signal from telephone line is transmitted to the handset or the voice signal from the handset is transmitted to the Telephone line, etc. They are determined by the signal path route operation of voice signal.

• Block Interface Circuit

RF part, LED, Key scan, Speaker, Telephone line.

4.6.2. Flash Memory (IC502)

Main program data is stored.

4.6.3. Flash Memory (IC601)

Following information data is stored.

• Voice signal

ex: Pre-recorded Greeting message, Incoming message



4.6.4. Bluetooth Unit (IC721)

Use for Bluetooth communication.

4.6.5. Power Supply Circuit/Reset Circuit


The power supply voltage from AC adaptor is converted to VBAT (3.0V) in IC302. And +3.0V for peripherals and analog part is insulated from VBAT by Doubler of BBIC.

Circuit Operation:

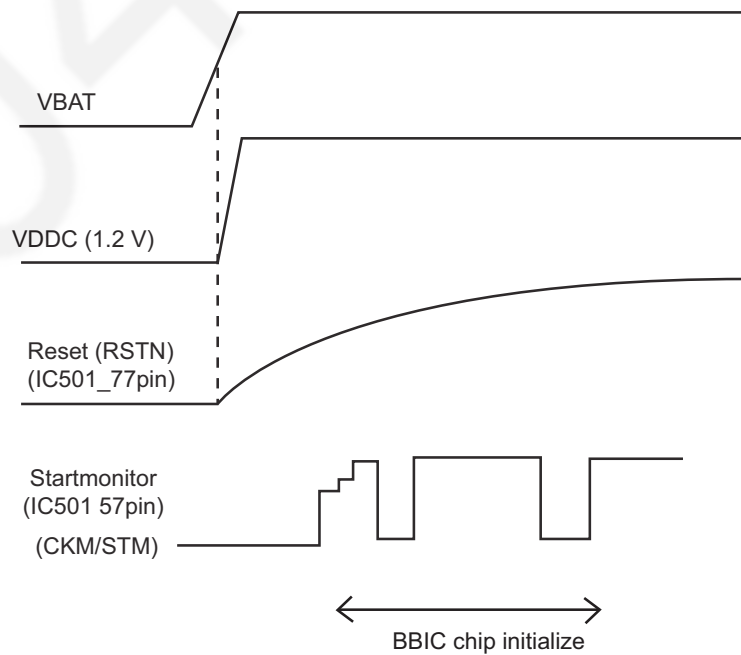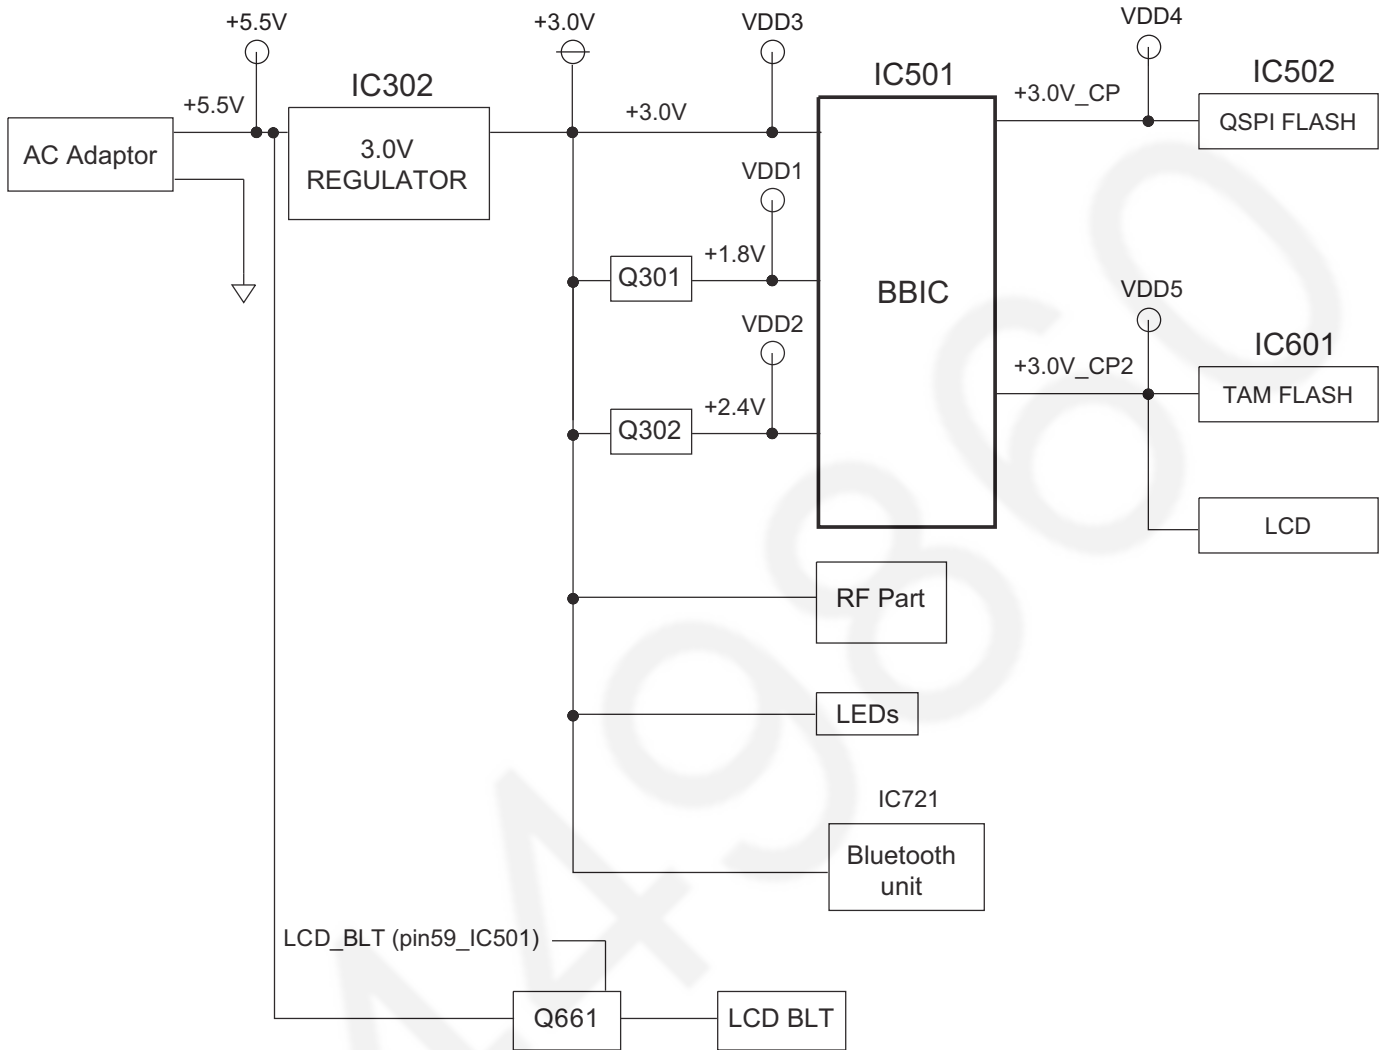

4.6.5.1. Charge Circuit

The voltage from the AC adaptor is supplied to the charge circuits.

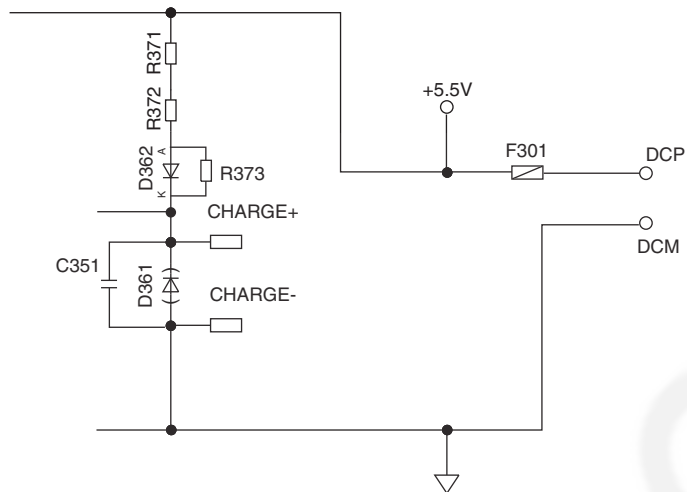

4.6.6. Telephone Line Interface

Telephone Line Interface Circuit:

Function

- Bell signal detection
- ON/OFF hook and pulse dial circuit
- Side tone circuit

Bell (RINGING) signal detection and OFF HOOK circuit:

In the idle mode, Q141 is open to cut the DC loop current and decrease the ring load. When ring voltage appears at the Tip (T) and Ring (R) leads (When the telephone rings), the AC ring voltage is transferred as follows:

L1T → C105 → R105 → R110 → R111 → R112 → BBIC pin18(RINGING)

When the CPU (BBIC) detects a ring signal, Q141 turns on, thus providing an off-hook condition (active DC current flow through the circuit). Following signal flow is the DC current flow.

T → D101 → Q141 → Q161 → R163 → D101 → P101 → R

ON HOOK Circuit:


Q141 is open, Q141 is connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an on-hook condition.

Pulse Dial Circuit:

Pin 19 of BBIC turns Q141 ON/OFF to make the pulse dialing.

Side Tone Circuit:

Basically this circuit prevents the TX signal from feeding back to RX signal. As for this unit, TX signal feed back from Q161 is canceled by the canceller circuit of BBIC.

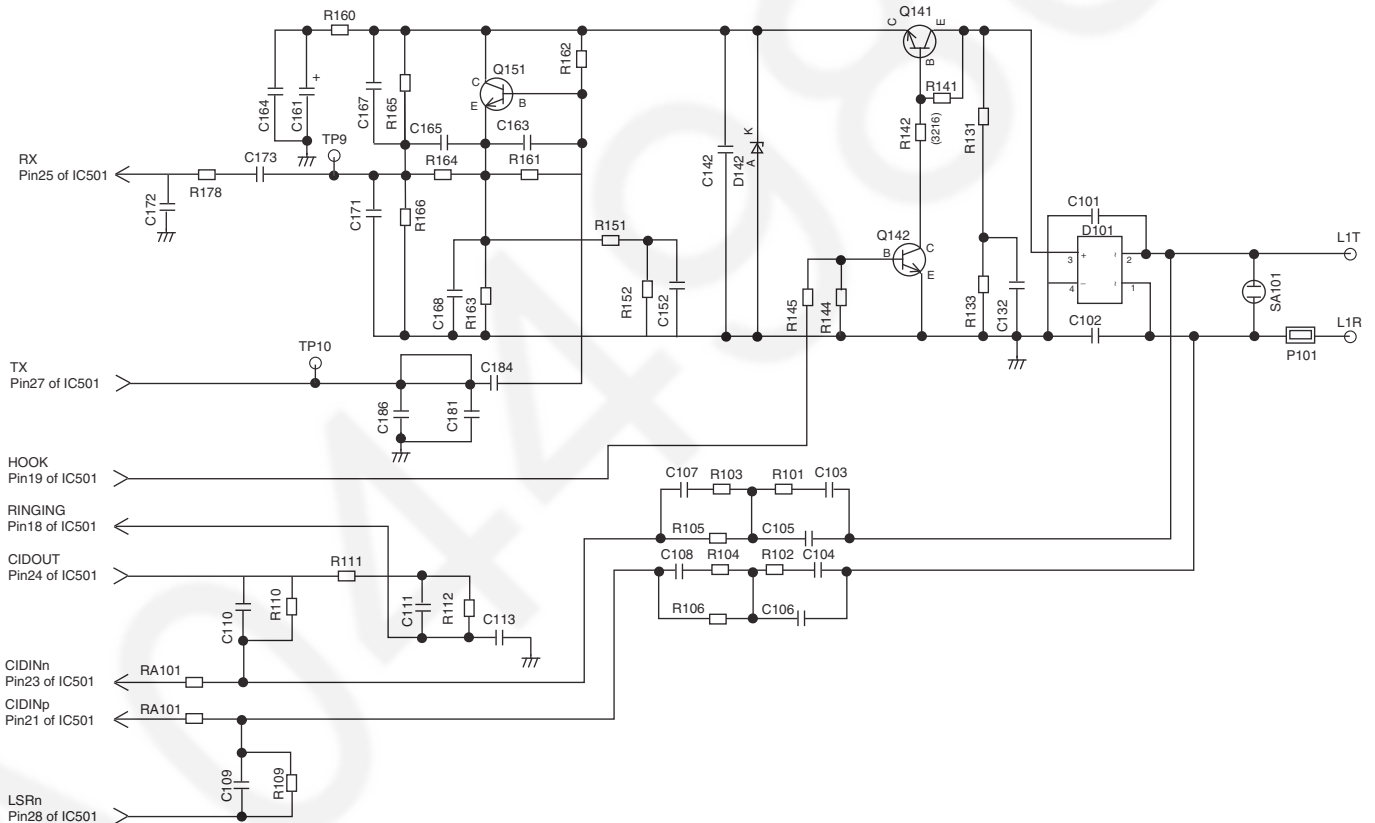

4.6.7. Parallel Connection Detect Circuit/Auto Disconnect Circuit

Function:

In order to disable call waiting and stutter tone functions when using telephones connected in parallel, it is necessary to have a circuit that judges whether a telephone connected in parallel is in use or not. This circuit determines whether the telephone connected in parallel is on hook or off hook by detecting changes in the T/R voltage.

Circuit Operation:


Parallel connection detection when on hook:

When on hook, the voltage is monitored at pin 32 of IC501. There is no parallel connection if the voltage is 0.54 V or higher, while a parallel connection is deemed to exist if the voltage is lower.

Parallel connection detection when off hook:

When off hook, the voltage is monitored at pin 17 of IC501; the presence/absence of a parallel connection is determined by detecting the voltage changes.

If the Auto disconnect function is ON and statuses are Hold, receiving ICM, OGM transmitting, BBIC disconnects the line after detecting parallel connection is off hook.

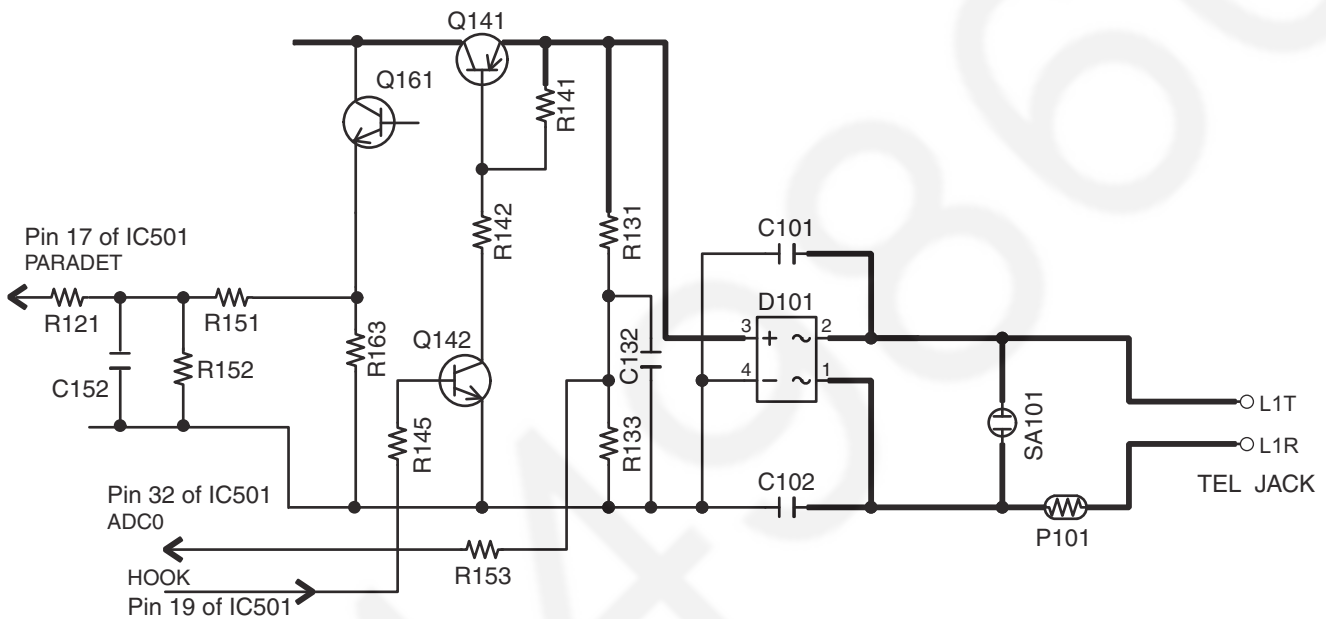

Call Waiting Caller ID

Calling Identity Delivery on Call Waiting (CIDCW) is a CLASS service that allows a customer, while off-hook on an existing call, to receive information about a calling party on a waited call. The transmission of the calling information takes place almost immediately after the customer is alerted to the new call so he/she can use this information to decide whether to take the new call.



Function:

The telephone exchange transmits or receives CAS and ACK signals through each voice RX/TX route. Then FSK data and MARK data pass the following route.


Telephone Line → P101 → C105, C106 → R105, R106 → RA101 → IC501(23, 21).

If the unit deems that a telephone connected in parallel is in use, ACK is not returned even if CAS is received, and the information for the second and subsequent callers is not displayed on the portable handset display.

Call Waiting Format

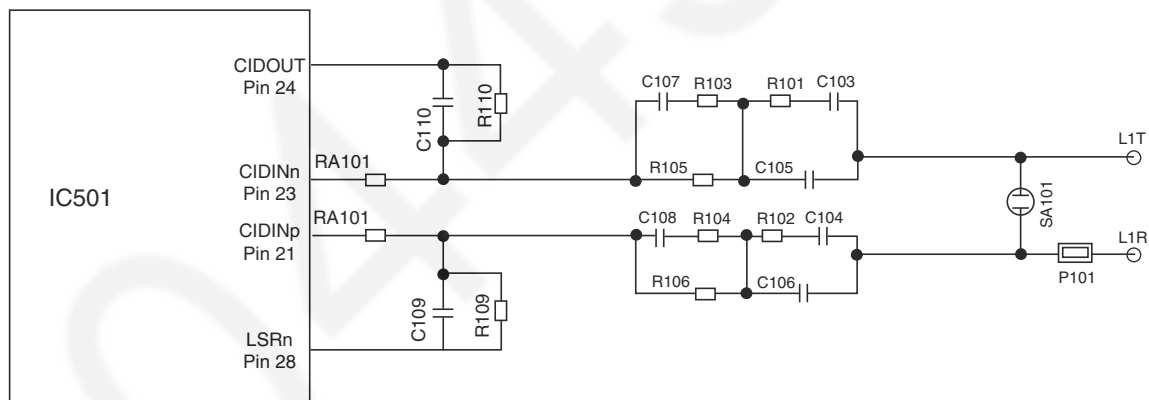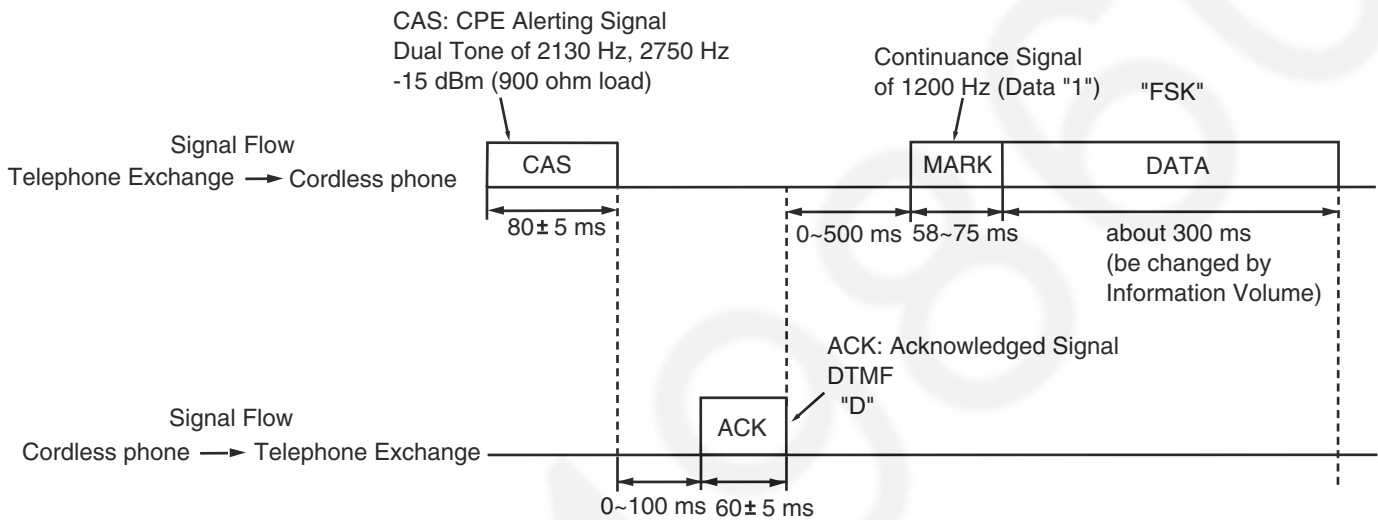


4.7. Block Diagram (Handset)

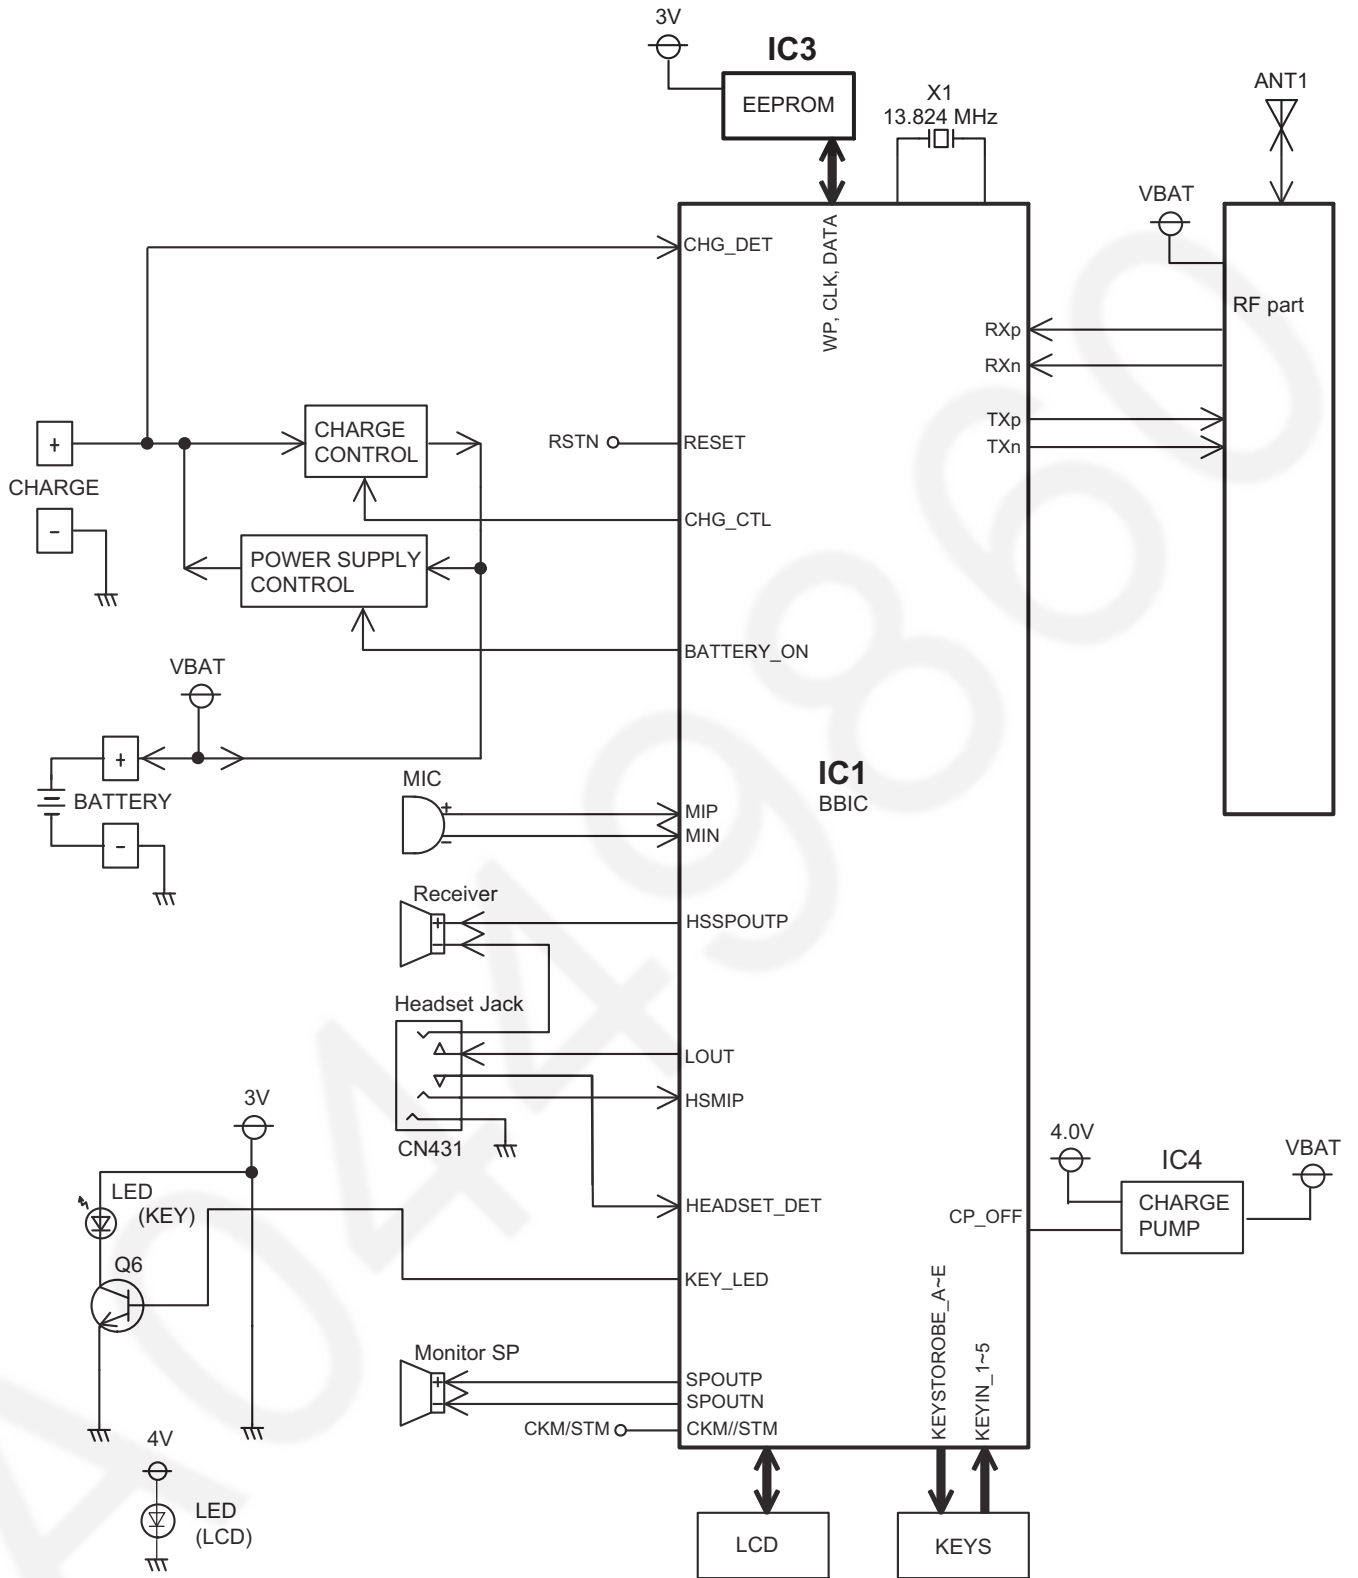

KX-TGFA30 BLOCK DIAGRAM (Handset)

4.8. Block Diagram (Handset_RF Part)

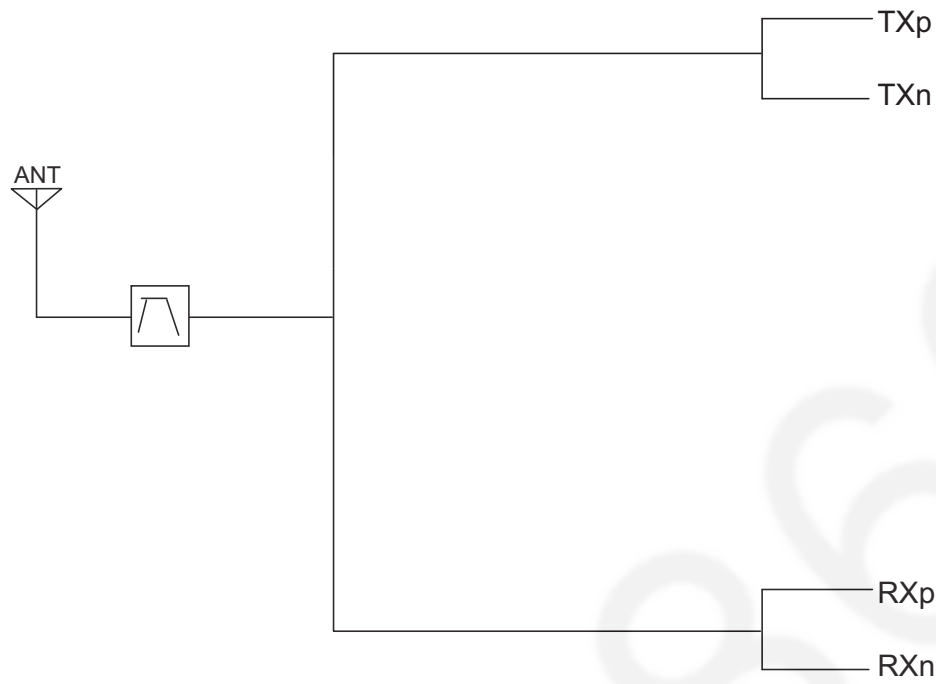

KX-TGFA30 BLOCK DIAGRAM (Handset_RF Part)

4.9. Circuit Operation (Handset)

4.9.1. Outline

Handset consists of the following ICs as shown in **Block Diagram (Handset)** (P.21).

- DECT BBIC (**B**ase **B**and IC): IC1
 - All data signals (forming/analyzing ACK or CMD signal)
 - All interfaces (ex: Key, Detector Circuit, Charge, EEPROM, LCD)
- EEPROM: IC3
 - Setting data is stored. (e.g. ID, user setting)



4.9.2. Power Supply Circuit/Reset Circuit

Circuit Operation:

When powering on the Handset, the voltage is as follows;

BATTERY(2.2 V ~ 2.6 V: BATT+) → F1 → BBC1 (IC1) 10 pin

The Reset signal generates IC1 (54 pin) and 1.8 V.

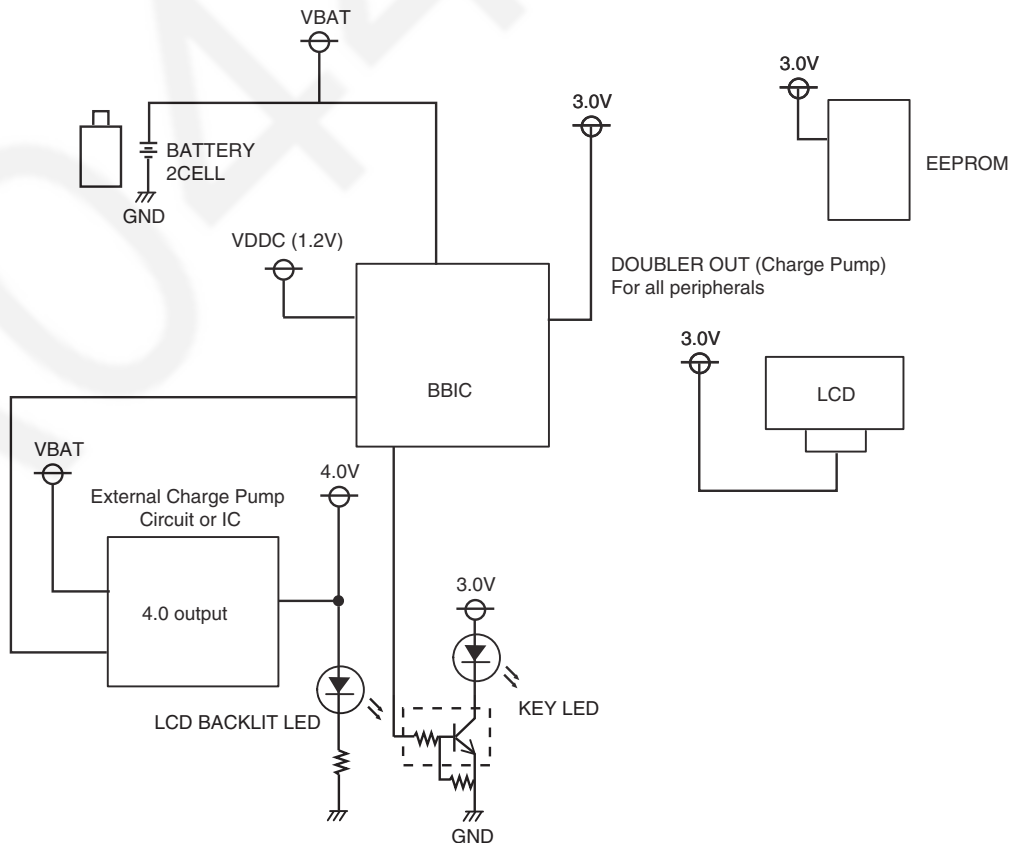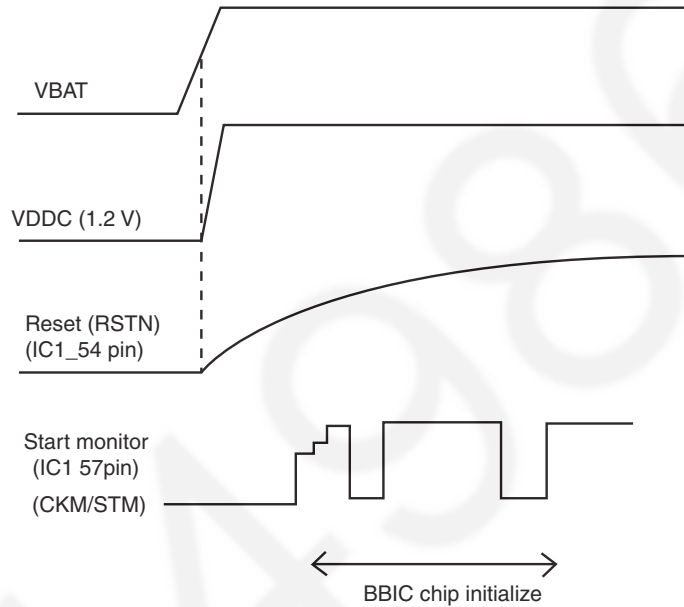

4.9.3. Charge Circuit

Circuit Operation:

When charging the handset on the Base Unit, the charge current is as follows;


DCP(5.5V) → F301 → R371 → R372 → D362 → CHARGE+(Base) → CHARGE+(Handset) → R8 → Q3 → F1 → BATTERY+...
Battery...

BATTERY- → R45 → GND → CHARGE-(Handset) → CHARGE-(Base) → GND → DC-(GND)

In this way, the BBIC on Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q9 of Handset.

Refer to Fig.101 in **Power Supply Circuit/Reset Circuit** (P.15).

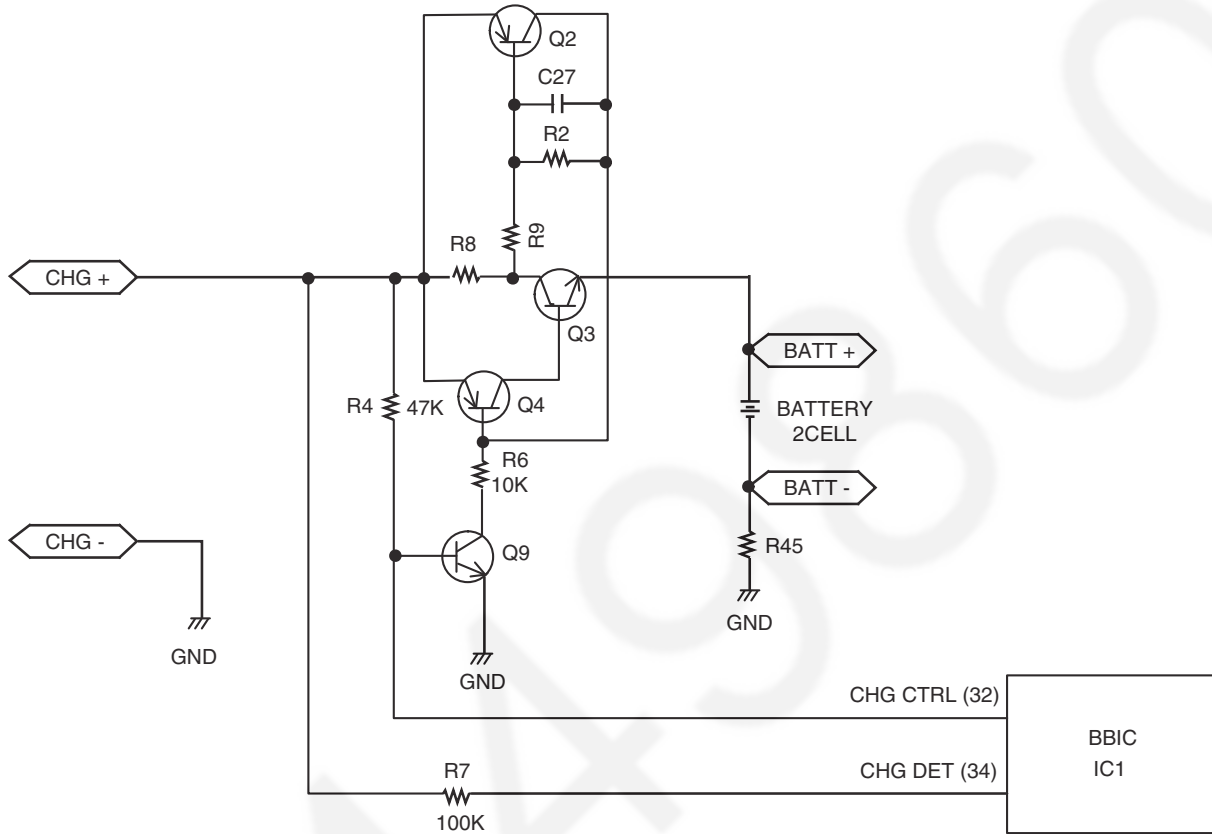

4.9.4. Battery Low/Power Down Detector

Circuit Operation:

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

- Battery Low

Battery voltage: $V(\text{Batt}) \leq 2.35 \text{ V} \pm 50 \text{ mV}$

The BBIC detects this level and "■" starts flashing.

- Power Down

Battery voltage: $V(\text{Batt}) \leq 2.1 \text{ V} \pm 50 \text{ mV}$

The BBIC detects this level and power down.

4.9.5. Speakerphone


The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm.

4.10. Behavior of Electric Power Failure

In case that the power from AC adaptor is lost and lose radio waves, BBIC (IC1) turns Q11 ON since handset presumes that base unit's power is failed.

Base unit detects that power voltage of AC adaptor +5.5V is OFF, then turns Q351 ON.


It's possible to use the units during the power failure, supplying power to VBAT of base unit from battery of handset through Q10, CHG terminal and Q351.

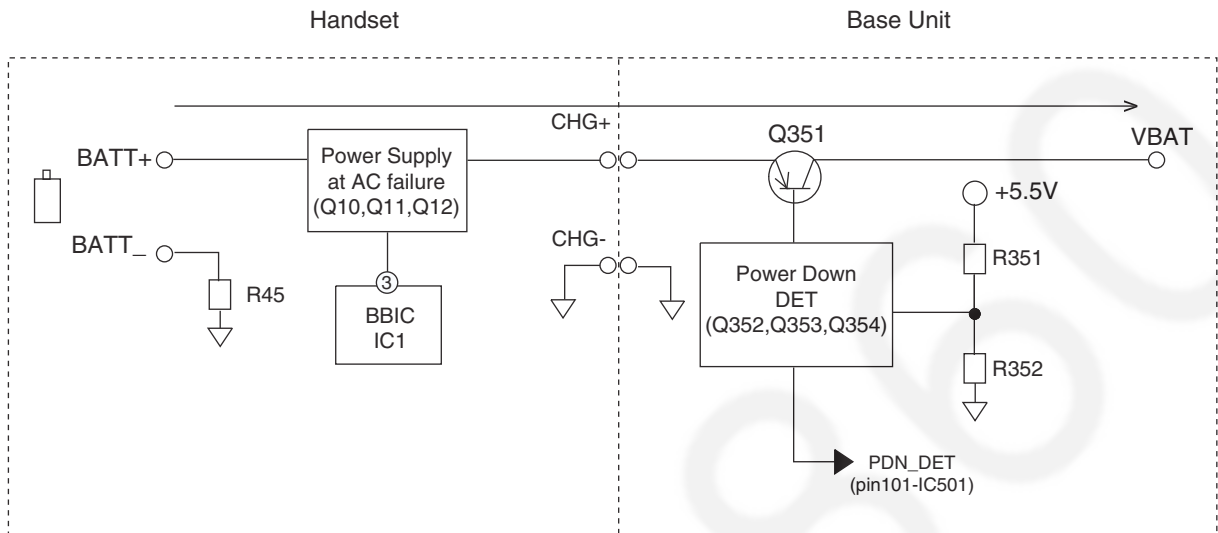

4.11. Circuit Operation (Charger Unit)

Charge control is executed at handset side so that the operation when using charger is also controlled by handset.

Refer to **Circuit Operation (Handset)** (P.23)

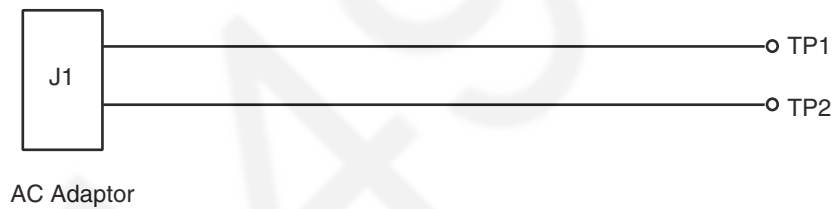

The route for this is as follows: DC+pin of J1(+) → CHARGE+pad → Handset → CHARGE-pad → DC-pin of J1(-).

4.12. Signal Route

SIGNAL ROUTE	IN	→	ROUTE	→	OUT
HANDSET TX	HANDSET MIC - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. --- ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(2/3 - 27) - C184 - Q161 -Q141 - D101 - P101 - T/R (TEL LINE)				
HANDSET RX	T/R (TEL LINE) - P101 - D101 - Q141 - R165 - C173 - R178 - IC501(25 - 94/95) - <BASE_UNIT_RF_TX_ROUTE> - ANT --- ANT. - <HANDSET_RF_RX_ROUTE> - IC1(28/27) - C16 - L8 - HEADSET_JACK(5 - 4) - HANDSET SPEAKER				
HEADSET TX	HEADSET_JACK(2) - C14 - R22 - IC1(25) - <HANDSET_RF_TX_ROUTE> - ANT. --- ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(2/3 - 27) - C184 - Q161 -Q141 - D101 - P101 - T/R (TEL LINE)				
HEADSET RX	T/R (TEL LINE) - P101 - D101 - Q141 - R165 - C173 - R178 - IC501(25 - 94/95) - <BASE_UNIT_RF_TX_ROUTE> - ANT --- ANT. - <HANDSET_RF_RX_ROUTE> - IC1(28) - C16 - L8 - HEADSET_JACK(5)				
HANDSET SP-Phone TX	HANDSET MIC - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. --- ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(2/3 - 27) - C184 - Q161 -Q141 - D101 - P101 - T/R (TEL LINE)				
HANDSET SP-Phone RX	T/R (TEL LINE) - P101 - D101 - Q141 - R165 - C173 - R178 - IC501(25 - 94/95) - <BASE_UNIT_RF_TX_ROUTE> - ANT --- ANT. - <HANDSET_RF_RX_ROUTE> - IC1(29/31) - Backside SP				
BASE SP-Phone TX	MIC - C457/C458 - RA452 - IC501(37/38 - 27) - C184 - Q161 -Q141 - D101 - P101 - T/R (TEL LINE)				
BASE SP-Phone RX	T/R (TEL LINE) - P101 - D101 - Q141 - R165 - C173 - R178 - IC501(25 - 41/43) - SPEAKER				
CELLULAR TX	HANDSET MIC - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. --- ANT. - <BASE_UNIT_RF_RX_ROUTE> - IC501(2/3 - 80) - IC721(31 - 19) - ANT_BT - CELL PHONE				
CELLULAR RX	CELL PHONE - ANT_BT - IC721(19 - 3) - IC501(81 - 94/95) - <BASE_UNIT_RF_TX_ROUTE> - ANT ---ANT. - <HANDSET_RF_RX_ROUTE> - IC1(28/27) - C16 - L8 - HEADSET JACK(5-4) - HANDSET SPEAKER				
Bluetooth Headset Sound TX(to Tel Line)	from BT Headset - ANT_BT - IC721(19 - 3) - IC501(81 - 27) - C184 - Q161 -Q141 - D101 - P101 - T/R (TEL LINE)				
Bluetooth Headset Sound RX(from Tel Line)	T/R (TEL LINE) - P101 - D101 - Q141 - R165 - C173 - R178 - IC501(25 - 80) - IC721(31 - 19) - ANT_BT - to BT Headset				

Note:
☐ : inside of Handset

SIGNAL ROUTE	IN	→	ROUTE	→	OUT
INTERCOM HANDSET TO BASE UNIT	HANDSET MIC - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. --- ANT - <BASE_UNIT_RF_RX_ROUTE> - IC501(2/3 - 41/43) - SPEAKER				
INTERCOM BASE UNIT TO HANDSET	MIC - C457/C458 - RA452 - IC501(37/38 - 94/95) - <BASE_UNIT_RF_TX_ROUTE> - ANT --- ANT. - <HANDSET_RF_RX_ROUTE> - IC1(28/27) - C16 - L8 - HEADSET_JACK(5 - 4) - HANDSET SPEAKER				
GREETING RECORDING	HANDSET MIC - C11/13 - RA4 - IC1(22/23) - <HANDSET_RF_TX_ROUTE> - ANT. --- ANT - <BASE_UNIT_RF_RX_ROUTE> - IC501(2/3 - 69/70) - IC601				
GREETING PLAY TO TEL LINE	IC601 - IC501(69/70 - 27) - C184 - Q161 - Q141 - D101 - P101 - T/R (TEL LINE)				
ICM RECORDING	T/R (TEL LINE) - P101 - D101 - Q141 - R165 - C173 - R178 - IC501(25 - 69/70) - IC601				
ICM PLAY TO SPEAKER	IC601 - IC501(69/70 - 41/43) - SPEAKER				
DTMF SIGNAL TO TEL LINE	IC501(27) - C184 - Q161 - Q141 - D101 - P101 - T/R (TEL LINE)				
CALLER ID	T/R(TEL LINE) - P101 - C105/C106 - R105/R106 - RA101 - IC501(23/21)				
BELL DETECTION	T/R(TEL LINE) - C105 - R105 - R110 - R111 - R112 - IC501(18)				

Note:: inside of Handset
RF part signal route

SIGNAL ROUTE	IN	→	ROUTE	→	OUT
HANDSET RF [TX_ROUTE]	IC1(44/45) - C802 - C808 - ANT				
HANDSET RF [RX_ROUTE]	ANT - C808 - C801 - IC1(46/47)				
BASE UNIT RF [TX_ROUTE]	IC501(95/94) - C859 - DA802 - C851/C853 - ANT1/ANT2				
BASE UNIT RF [RX_ROUTE]	ANT1/ANT2 - C851/C853 - DA802 - IC501(3/2)				

Note:: inside of Handset

5 Location of Controls and Components

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

6 Installation Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

7 Operating Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.


8 Test Mode

8.1. Engineering Mode

8.1.1. Base Unit

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

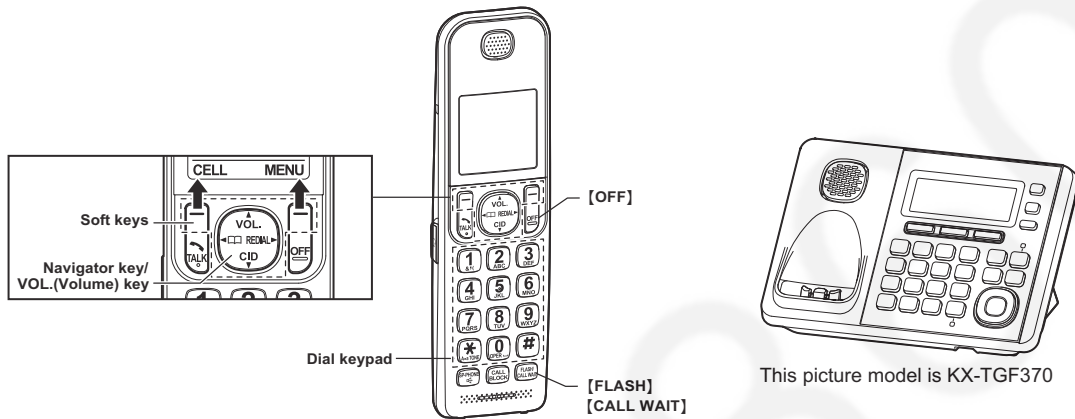


H/S key operation

- 1). Press [MENU].
- 2). Select "Settings" using [▲] or [▼] then press [SELECT] or [►].

Select "Set tel line" using [▲] or [▼] then press [SELECT] or [►].
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".
Note: 7262 7664 = PANA SONI
(see letters printed on dial keys)

- 4). Select "Write EEP" using [▲] or [▼] then press [SELECT] or [►].
- 5). Enter "●", "●", "●", "●" (Address). (*1)
- 6). Enter "*", "*" (New Data). (*1)

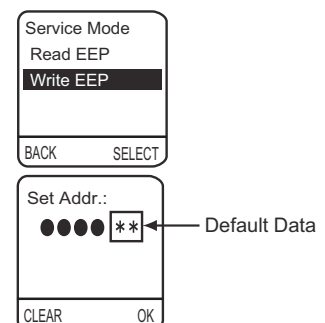

- 7). Press **[OK]** , a long confirmation beep will be heard.

Set Addr.:
●●●●** ← New Data

CLEAR OK

- 8). Press **[OFF]** to return to standby mode.
After that, turn the base unit power off and then power on.

Set Addr.:

BACK

Note: * To enter "Set dial mode", press **[SELECT]** or **[▶]** at " Set tel line".
It is necessary to turn on the power of base unit.

* "Set tel line" isn't displayed in Cell line only mode.

To return to normal mode, execute the following procedure:

- 1 **[MENU]** → **[#][1][5][7]**
- 2 **[▼]/[▲]**: Select "off " → **[SELECT]**
- 3 **[OFF]**

Frequently Used Items (Base Unit)

ex.)

Items	Address	Default Data	New Data		Remarks
Frequency	00 07 / 00 08	70/02	-	-	Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the computer system.
ID	00 02 ~ 00 06	Given value	-	-	

Note:


(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex)	Input Keys	Desired Number (hex)	Input Keys
0	0	A	[Flash] + 0
1	1	B	[Flash] + 1
.	.	C	[Flash] + 2
.	.	D	[Flash] + 3
.	.	E	[Flash] + 4
9	9	F	[Flash] + 5

8.1.2. Handset

Important:

Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

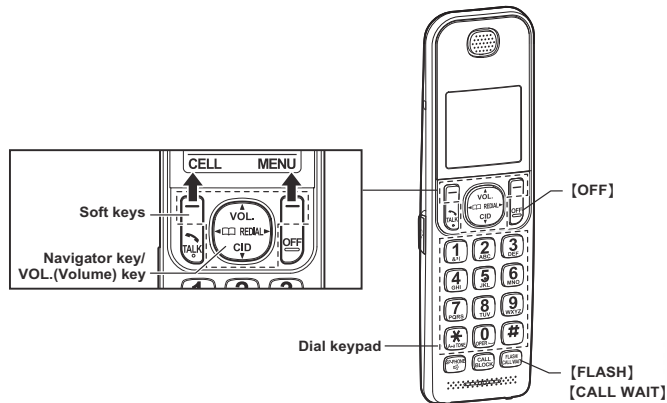

H/S key operation

- 1). Press [MENU].
- 2). Select "Settings" using [▲] or [▼] then press [SELECT] or [▶].
- 3). Enter "7", "2", "6", "2", "7", "6", "6", "4".
Note: 7262 7664 = PANA SONI
 (see letters printed on dial keys)
- 4). Select "Write EEP" using [▲] or [▼] then press [SELECT] or [▶].


- 5). Enter "●", "●", "●", "●" (Address). (*1)

- 6). Enter "*", "*" (New Data). (*1)

- 7). Press [OK], a long confirmation beep will be heard.

- 8). Press [OFF] to return to standby mode.

After that, remove and reinsert the batteries. Press the Power button for about 1 second if the power is not turned on.

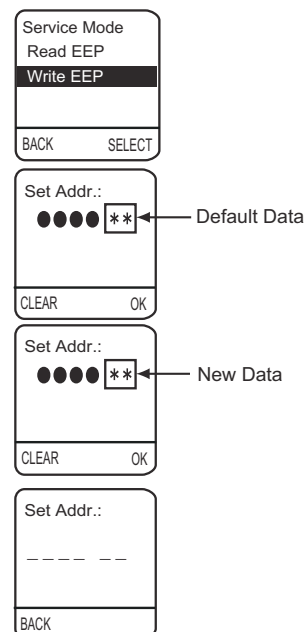

Frequently Used Items (Handset)

ex.)

Items	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Battery Low	00 12/00 13	00 / 00	-	-	-	(*2)
Frequency	00 07 / 00 08	00 / 01	-	-	-	
ID	00 02 ~ 00 06	Given value	-	-	-	

Note:

(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[Flash] + 0
1	1	B	[Flash] + 1
.	.	C	[Flash] + 2
.	.	D	[Flash] + 3
.	.	E	[Flash] + 4
9	9	F	[Flash] + 5

(*2) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the handset.

9 Service Mode

9.1. How to Clear User Setting (Handset Only)

Handset

Press **[2][5][8][0]** simultaneously until a beep sound is heard. Then single handset is initialized.


(The contents of user setting are reset to factory default)

*Usage time is not cleared.

10 Troubleshooting Guide

10.1. Troubleshooting Flowchart

FLOW CHART

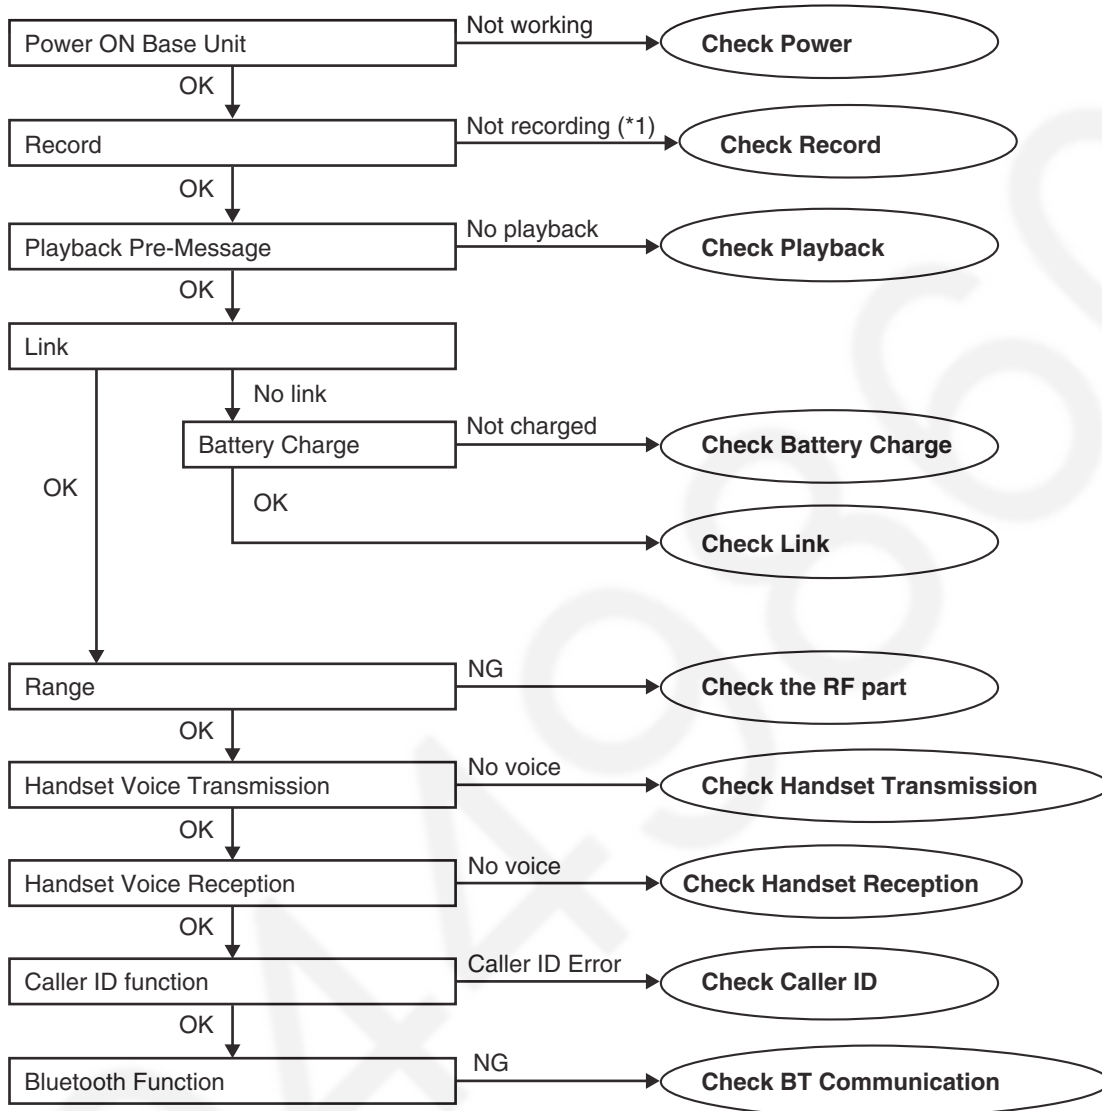

Cross Reference:

Check Power (P.35)

Check Record (P.36)

Check Playback (P.39)

Check Battery Charge (P.39)

Check Link (P.40)

Check the RF part (P.42)

Check Handset Transmission (P.47)

Check Handset Reception (P.47)

Check Caller ID (P.47)

Check BT Communication (P.48)


Note:

(*1) When a user claims that the unit disconnects a call right after the greeting message and no incoming messages can be recorded, this symptom can not reappear with TEL simulator in the service center. In this case, try to change the Auto disconnect activation time and Vox level.

<How to change the Auto Disconnect activation time and VOX level> (P.37) item (A) and (B).

10.1.1. Check Power


10.1.1.1. Base Unit

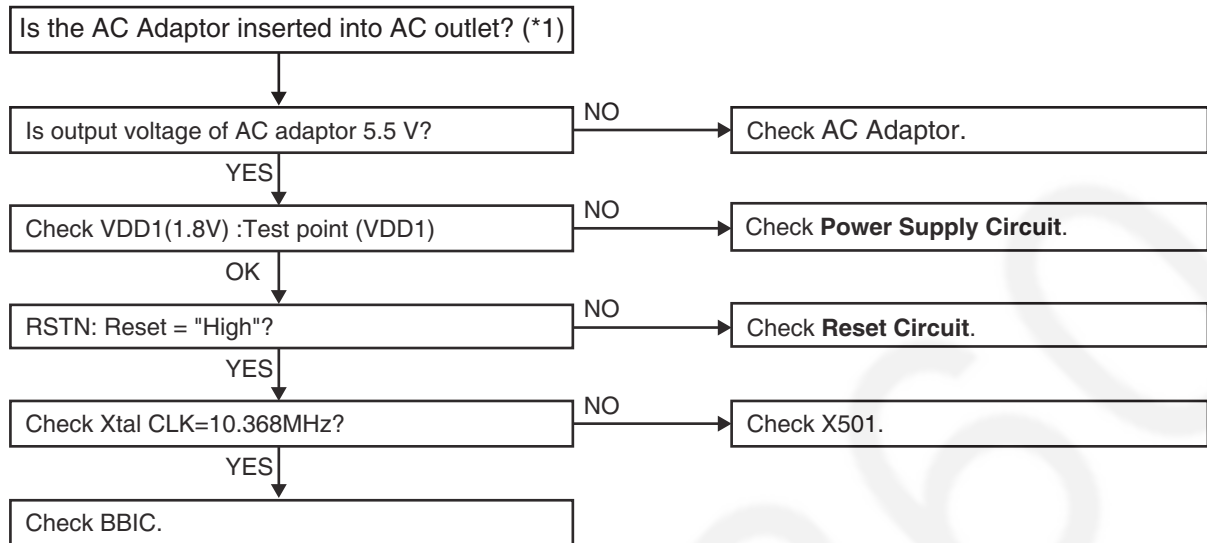

Cross Reference:
Power Supply Circuit/Reset Circuit (P.15)

Note:
BBIC is IC501.
(*1) Refer to **Specifications** (P.7) for part number and supply voltage of AC adaptor.
(*2) Refer to **Circuit Board (Base Unit_Main)** (P.87).

10.1.1.2. Handset

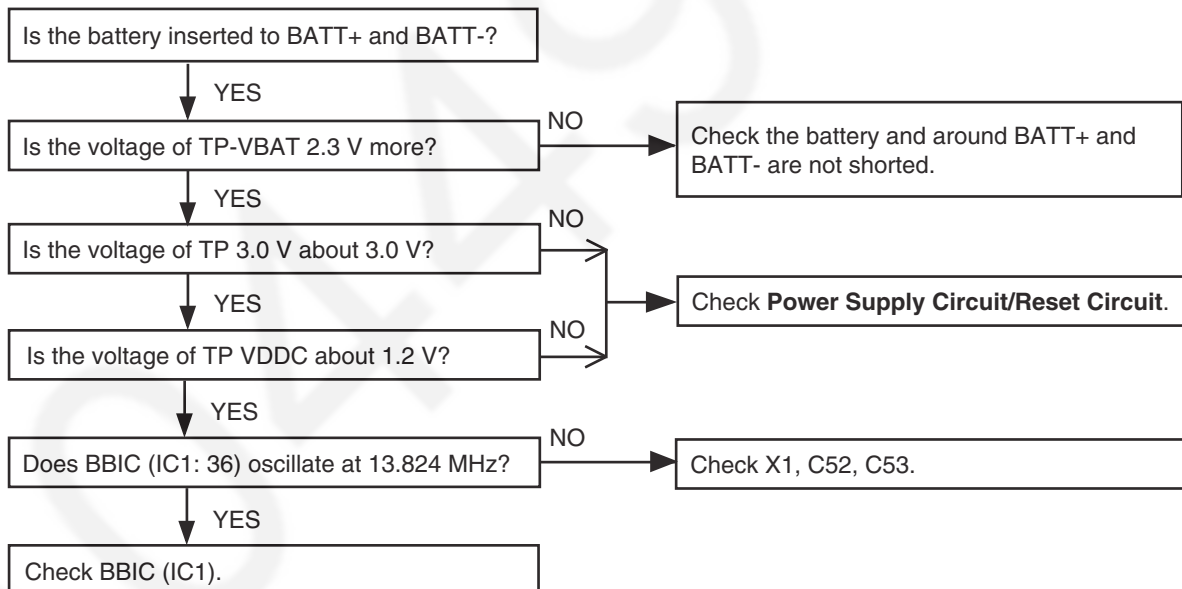


Cross Reference:
Power Supply Circuit/Reset Circuit (P.23)

10.1.2. Check Record

10.1.2.1. Base Unit

Not record Incoming Message

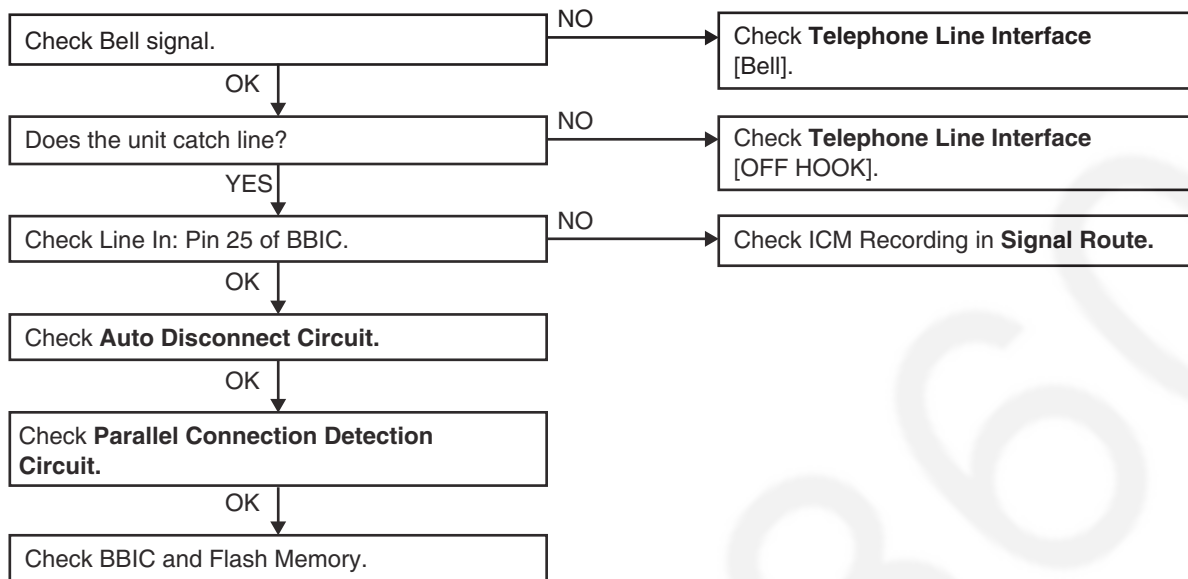

Cross Reference:

Signal Route (P.26)

Telephone Line Interface (P.17)

Parallel Connection Detect Circuit/Auto Disconnect Circuit (P.18)

Note:

Flash Memory is IC601.

BBIC is IC501.

<How to change the Auto Disconnect activation time and VOX level>

A) Auto Disconnect activation time:

Some Telephone Company lines (fiber or cable) ON Hook and OFF Hook voltages are lower than conventional lines, which may cause a malfunction of Auto Disconnect detection. To solve this problem, try changing the Auto Disconnect activation through the procedures below.

- 1) Press "MENU " key at standby Mode and "#" key.

Note: The set must power on and be linked.

- 2) Press "9", "0", "0", "0", " * " .

LCD (H/S)

```
Service ready
: _____
BACK
```

- 3) Press "7", "3", "1".

```
Service ready
: 7 3 1 _
CLEAR
```

- 4) Then enter the below last digit;

last digit	"0"	Auto disconnect & CPC ^(*1) : enable . . . [default]
	"1"	Auto disconnect : enable ^(*1) CPC : disable
	"2"	Auto disconnect & CPC : disable ^(*2)

Note:

(*1) Both Auto Disconnect and CPC don't detect for the first 2 seconds.

(*2) If the "Disable" is selected, even if the parallel-connected telephone is OFF HOOK, the line isn't disconnected.

- 5) Back to "standby" mode automatically after step 4).
You can hear beep sound which is a confirmation tone.

B) Vox level:

It makes easier to detect a small voice (caller) by raising the sensitivity of VOX level. Therefore, the recording of TAM is not turned off during detection.

1) ~ 2) are same as (A).

3) Press "5","1","1".

Service ready :5 1 1 _ CLEAR
--


4) Then enter the below last digit;

last digit	"0"	default setting : normal
	"1"	6dB up

5) Back to "standby" mode automatically after step 4.
You can hear beep sound which is a confirmation tone.

10.1.3. Check Playback

10.1.3.1. Base Unit

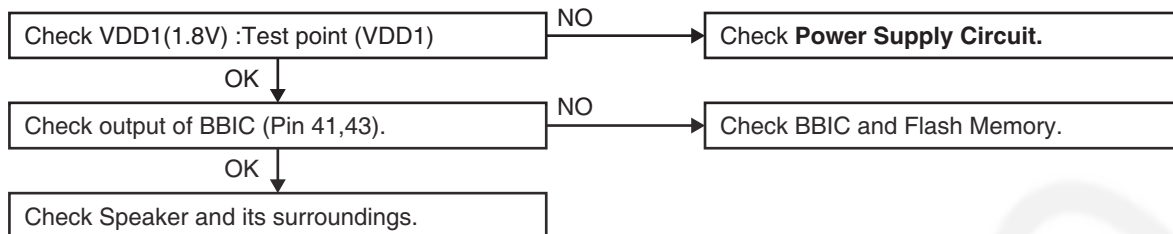

Cross Reference:

Power Supply Circuit/Reset Circuit (P.15)

Note:


Flash Memory is IC601.

BBIC is IC501.

(*1) Refer to **Circuit Board (Base Unit_Main) (P.87)**.

10.1.4. Check Battery Charge


10.1.4.1. Base Unit

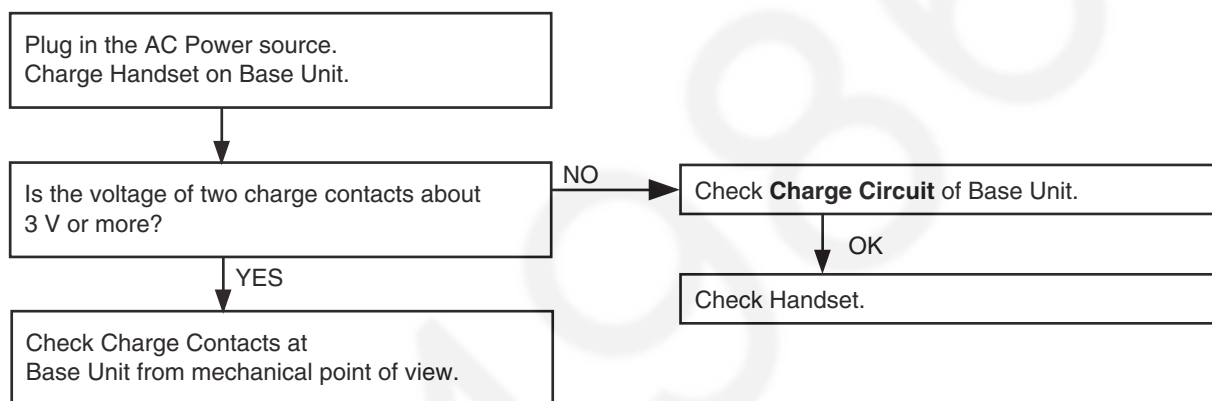

Cross Reference:

Charge Circuit (P.16)

10.1.4.2. Handset

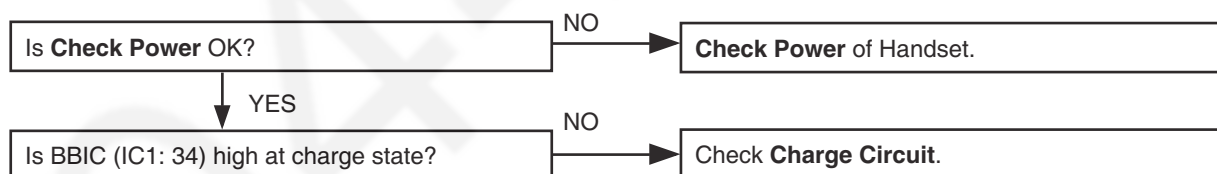


Cross Reference:

Check Power (P.35)

Charge Circuit (P.24)

10.1.4.3. Charger Unit

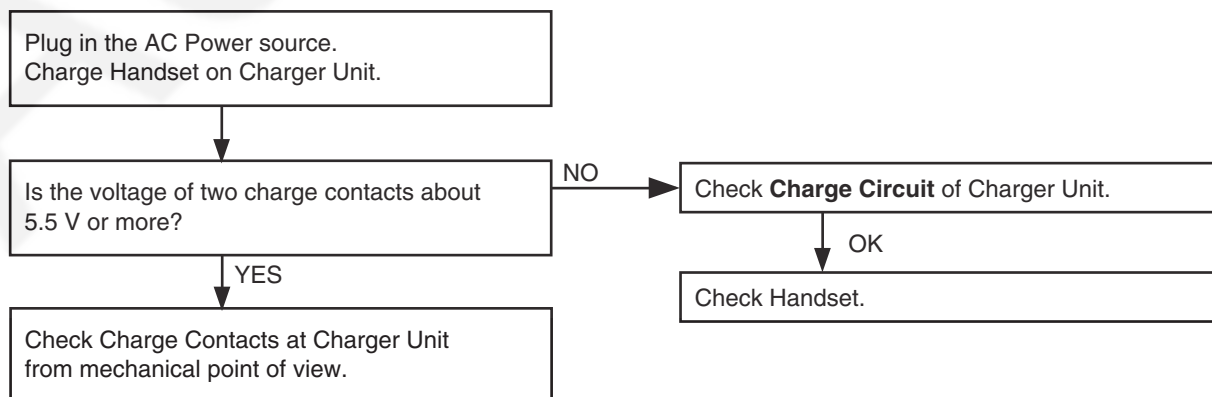


Cross Reference:

Charge Circuit (P.24)

10.1.5. Check Link

10.1.5.1. Base Unit

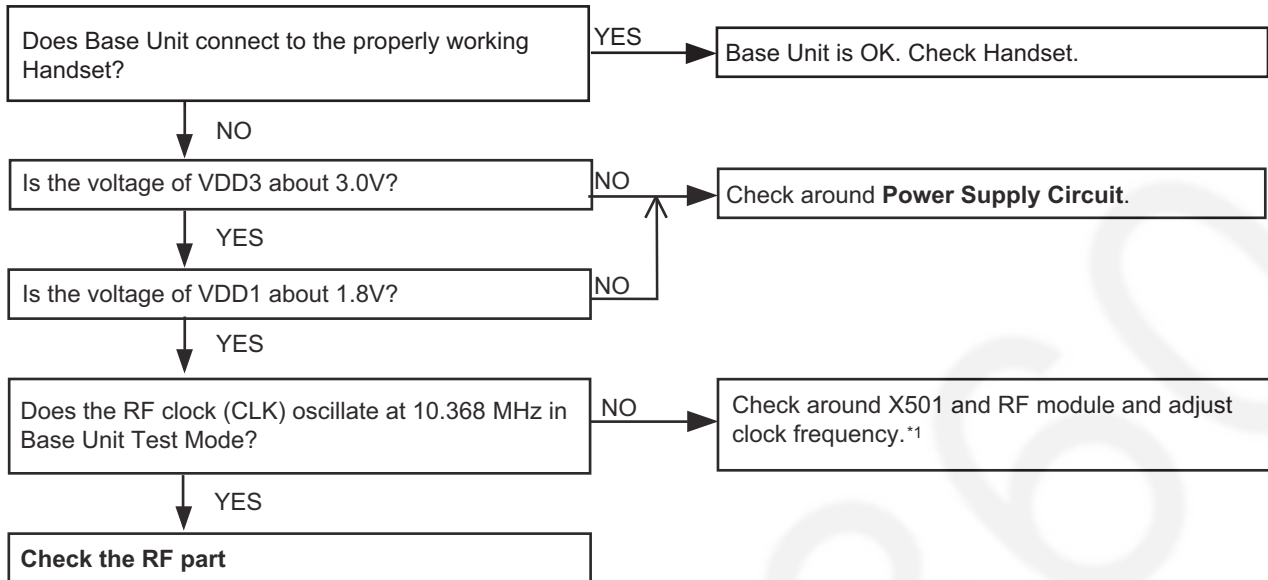

Cross Reference:

Power Supply Circuit/Reset Circuit (P.15)

Check the RF part (P.42)

Note:


Refer to **Things to Do after Replacing IC or X'tal** (P.59)(P.65) for Base Unit.

*1 How to adjust the frequency of X501:

To see the frequency, execute the command "SFR", then check the TP_CKM (IC501-57pin).

To adjust frequency, send command "SFR □○○□○○" until the frequency counter becomes 10.368 MHz±55HZ.

10.1.5.2. Handset

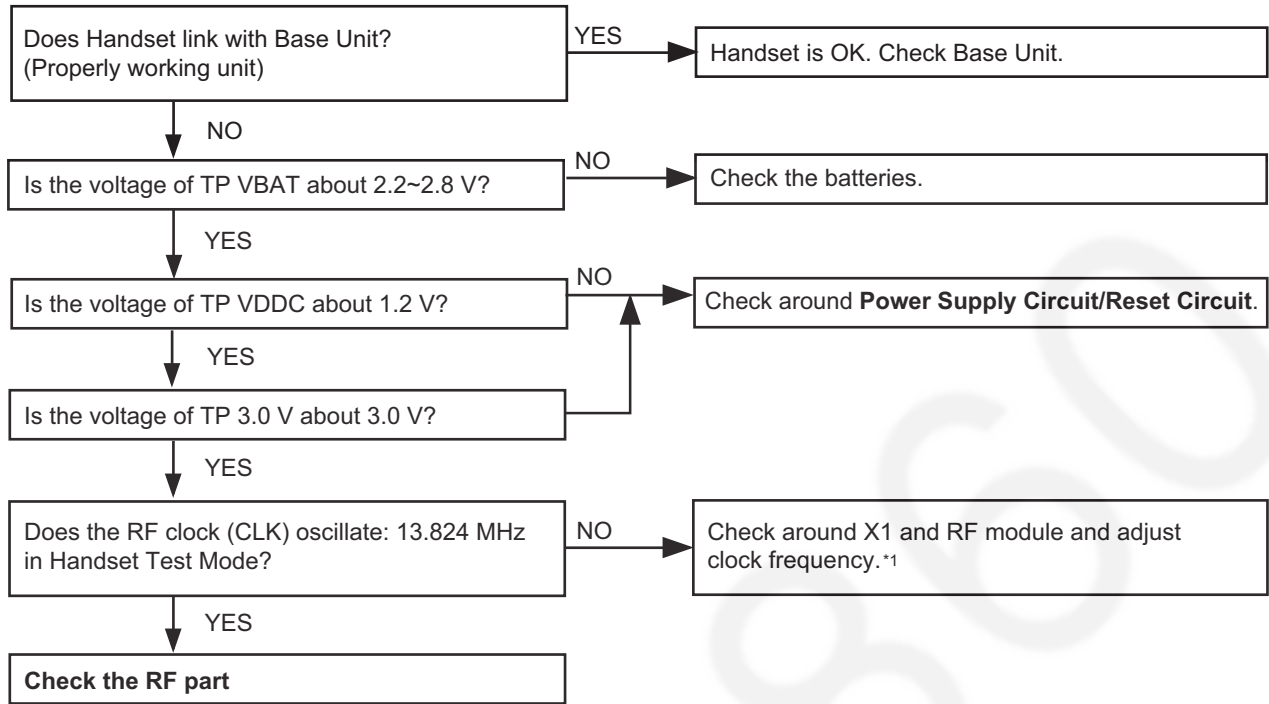

Cross Reference:

Power Supply Circuit/Reset Circuit (P.23)

Check the RF part (P.42)

Note:

Refer to **Things to Do after Replacing IC or X'tal** (P.60)(P.69) for Handset.

*1 How to adjust the frequency of X1:

To see the frequency, execute the command "SFR", then check the TP_CKM (IC1-57pin).

To adjust frequency, send command "SFR 100100" until the frequency counter becomes 13.824 MHz±55HZ.


10.1.6. Check the RF part

10.1.6.1. Finding out the Defective part

1. Prepare Regular HS(*1) and Regular BU(*2).
2. a. Re-register regular HS (Normal mode) to base unit (to be checked).
If this operation fails in some ways, the base unit is defective.
- b. Re-register handset (to be checked) to regular BU (Normal mode).
If this operation fails in some ways, the handset is defective.

After All the Checkings or Repairing

1. Re-register the checked handset to the checked base unit, and Regular HS to Regular BU.

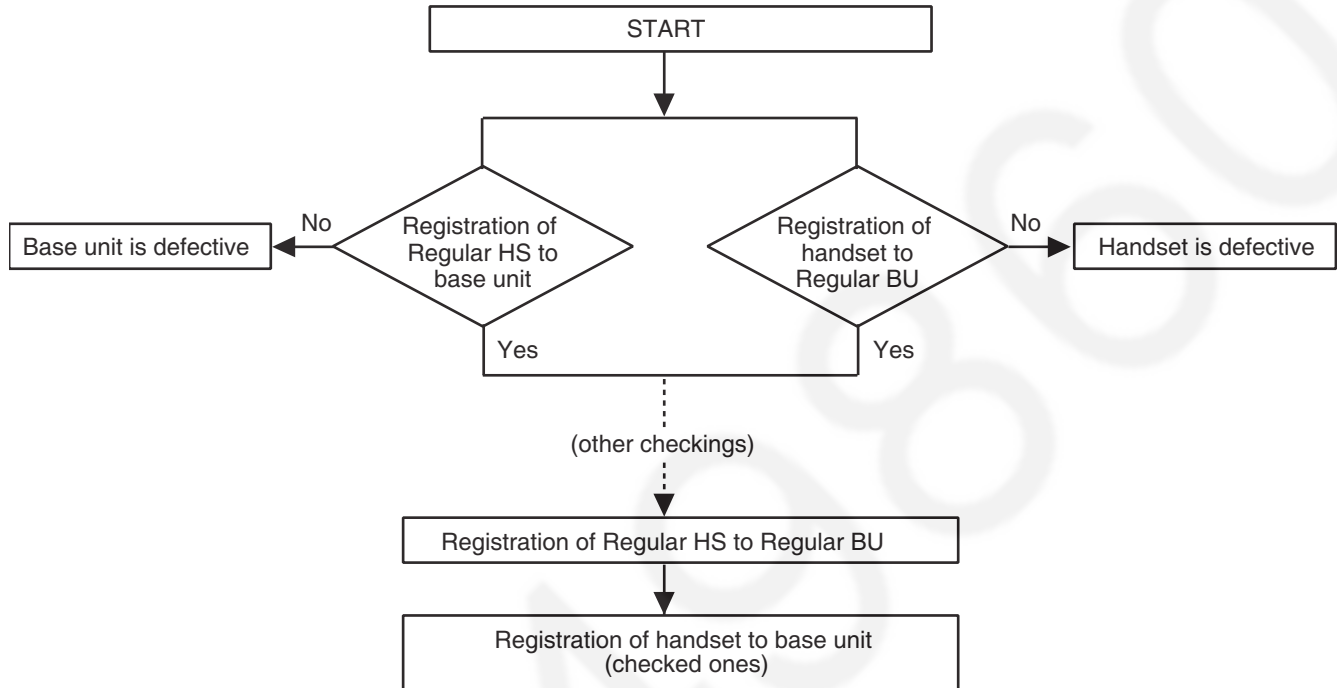


Note:

- (*1) HS: Handset
(*2) BU: Base Unit

10.1.6.2. RF Check Flowchart

Each item (1 ~ 5) of RF Check Flowchart corresponds to **Check Table for RF part** (P.44).
Please refer to the each item.

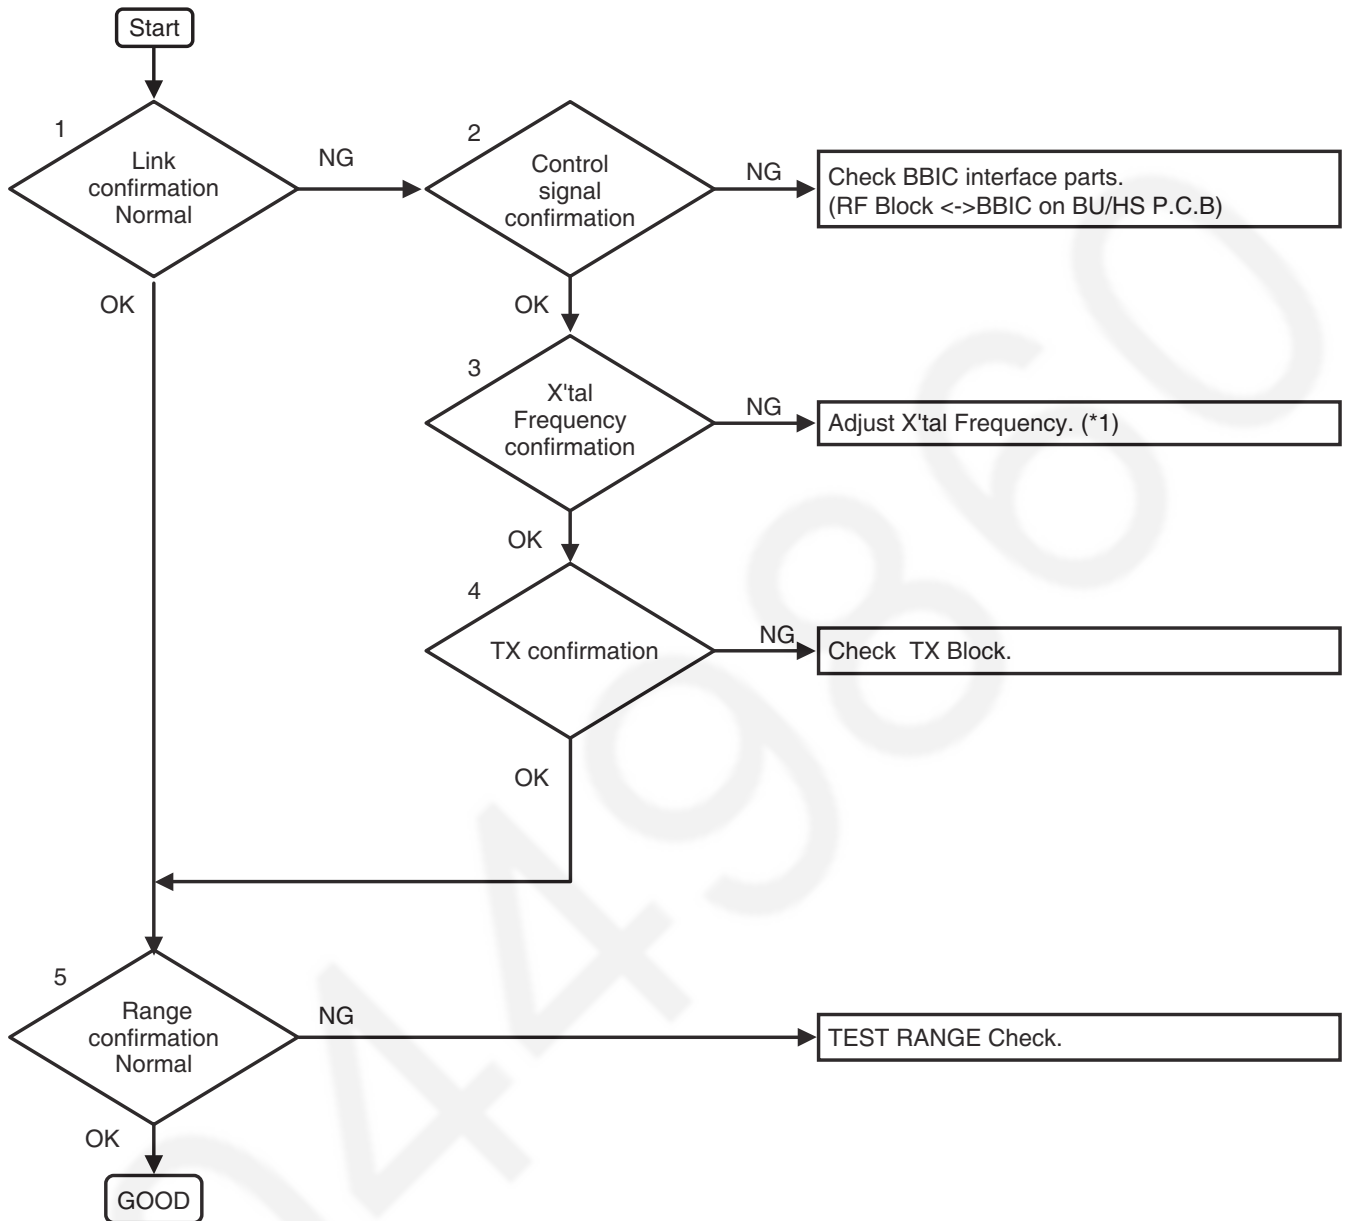

Note:

(*1) Refer to **Check Link** (P.40).

10.1.6.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	HS (Handset) Check
1	Link Confirmation Normal HS, BU Mode [Normal Mode]	1. Register Regular HS to BU (to be checked). 2. Press [Talk] key of the Regular HS to establish link.	1. Register HS (to be checked) to Regular BU. 2. Press [Talk] key of the HS to establish link.
2	X'tal Frequency confirmation HS, BU Mode: [Adjustment]	Check X'tal Frequency. (10.368 MHz $\pm$ 100Hz)	Check X'tal Frequency. (13.824 MHz $\pm$ 100 Hz)
3	TX confirmation HS Mode: HS_Burst Mode] (*1) BS Mode: BS_Burst Mode] (*1)	1. Remove wire antenna 2 and connect spectrum analyzer to TP. (*2) 2. Confirm TX power whether spec. is satisfied. Power $\geq$ 13.5dBm	1. Connect spectrum analyzer to TP. (*3) 2. Confirm TX power whether satisfied spec. Power $\geq$ 16.0dBm
4	Range Confirmation Normal HS, BU Mode: [Normal Mode]	1. Register Regular HS to BU (to be checked). 2. Press [Talk] key of the Regular HS to establish link. 3. Compare the range of the BU (being checked) with that of the Regular BU.	1. Register HS (to be checked) to Regular BU. 2. Press [Talk] key of the HS to establish link. 3. Compare the range of the HS (being checked) with that of the Regular HS.

Note:

(*1) Refer to **Commands** (P.62)

(*2) **Adjustment Standard (Base Unit)** (P.63)

(*3) **Adjustment Standard (Handset)** (P.64)

10.1.6.4. TEST RANGE Check

Circuit block which range is defective can be found by the following check.

Item	BU (Base Unit) Check	HS (Handset) Check
Range Confirmation TX TEST (TX Power check) HS, BU setting Checked unit: Low TX power (*1) Regular unit: High TX power (*1)	1. Register Regular HS to BU (to be checked). 2. Set TX Power of the BU and the Regular HS according to CHART1. 3. At distance of about 20m between HS and BU, Link OK = TX Power of the BU is OK. No Link = TX Power of the BU is NG.	1. Register HS (to be checked) to Regular BU. 2. Set TX Power of the HS and the Regular BU according to CHART1. 3. At distance of about 20m between HS and BU, Link OK = TX Power of the HS is OK. No Link = TX Power of the HS is NG.
Range Confirmation RX TEST (RX sensitivity check) HS, BU setting Checked unit: High TX power (*1) Regular unit: Low TX power (*1)	1. Register Regular HS to BU (to be checked). 2. Set TX Power of the BU and the Regular HS according to CHART1. 3. At distance of about 20m between HS and BU, Link OK= RX Sensitivity of the BU is OK. No Link = RX Sensitivity of the BU is NG.	1. Register HS (to be checked) to Regular BU. 2. Set TX Power of the Checking HS and the Regular BU according to CHART1. 3. At distance of about 20m between HS and BU, Link OK= RX Sensitivity of the HS is OK. No Link = RX Sensitivity of the HS is NG.

CHART1: Setting of TX Power and RX Sensitivity in Range Confirmation TX TEST, RX TEST

	BU (to be checked)	Regular_HS
	TX Power	TX Power
BU (Base Unit) TX Power Check	Low	High
BU (Base Unit) RX Sensitivity Check	High	Low

	HS (to be checked)	Regular_BU
	TX Power	TX Power
HS (Handset) TX Power Check	Low	High
HS (Handset) RX Sensitivity Check	High	Low

Note:

(*1) Refer to **Commands** (P.62).

10.1.7. Registering a Handset to the Base Unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.

1 Handset:

[MENU] → **#130**

2 Base unit:

Press and hold **[LOCATOR]** for about 5 seconds until the registration tone sounds.

- If all registered handsets start ringing, press **[LOCATOR]** again to stop, then repeat this step.
- The next step must be completed within 90 seconds.

3 Handset:

Press **[OK]**, then wait until a long beep sounds.

Note:

- While registering, “**Base in registering**” is displayed on all registered handsets.
- When you purchase an additional handset, refer to the additional handset's installation manual for registration.

10.1.8. Deregistering a Handset

A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system.

1 [MENU] → **#131**


- All handsets registered to the base unit are displayed.

2 [↕]: Select the handset you want to cancel. → **[SELECT]**

3 [↕]: “**Yes**” → **[SELECT]**


4 [OFF]

10.1.9. Check Handset Transmission

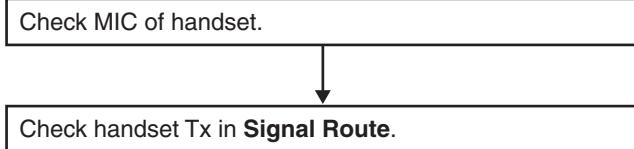

Cross Reference:
Signal Route (P.26)

10.1.10. Check Handset Reception

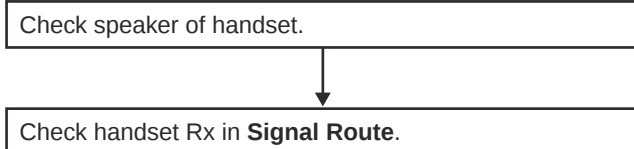


Cross Reference:
Signal Route (P.26)

Note:
 When checking the RF part, Refer to **Check the RF part** (P.42).

10.1.11. Check Caller ID

BASE UNIT

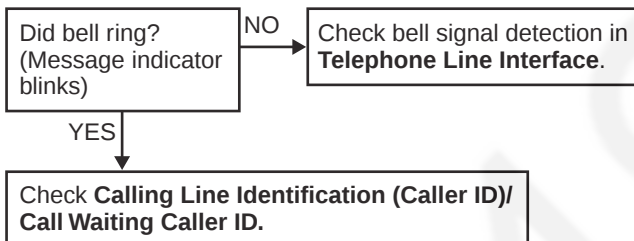


Cross Reference:
Telephone Line Interface (P.17)
Calling Line Identification (Caller ID)/Call Waiting Caller ID (P.19)


Note:

- Make sure the format of the Caller ID service of the Telephone company that the customer subscribes to.
- It is also recommended to confirm that the customer is really a subscriber of the service.

10.1.12. Check BT Communication

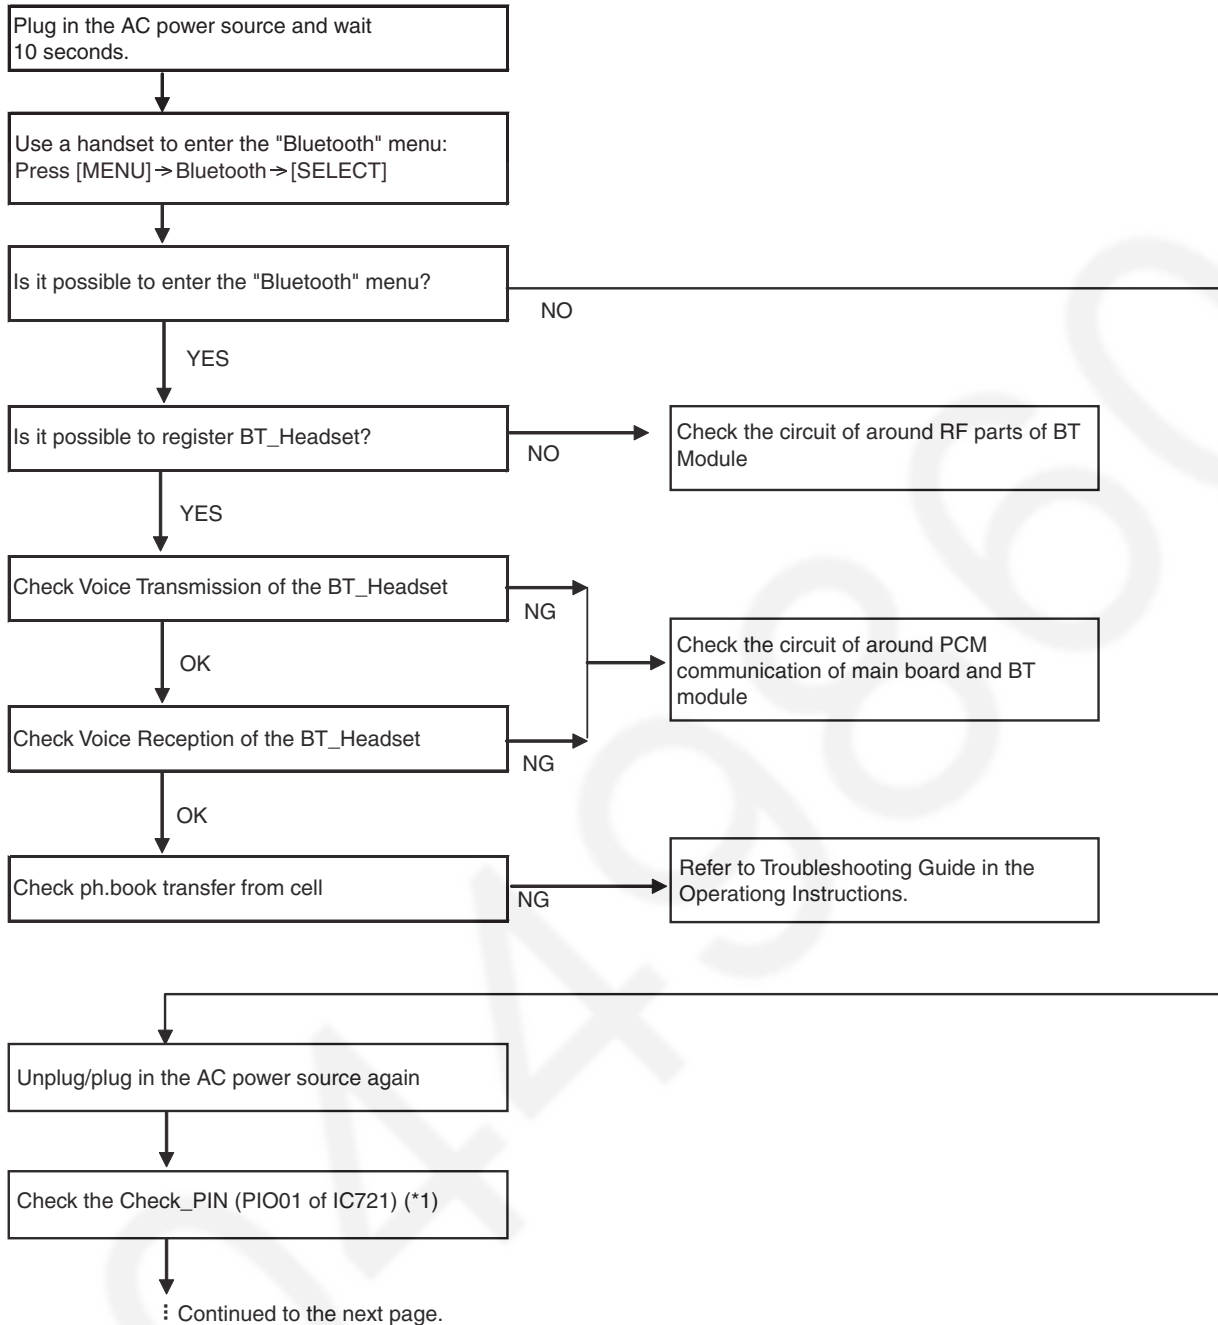

Cross Reference:
Bottom View (P.88)

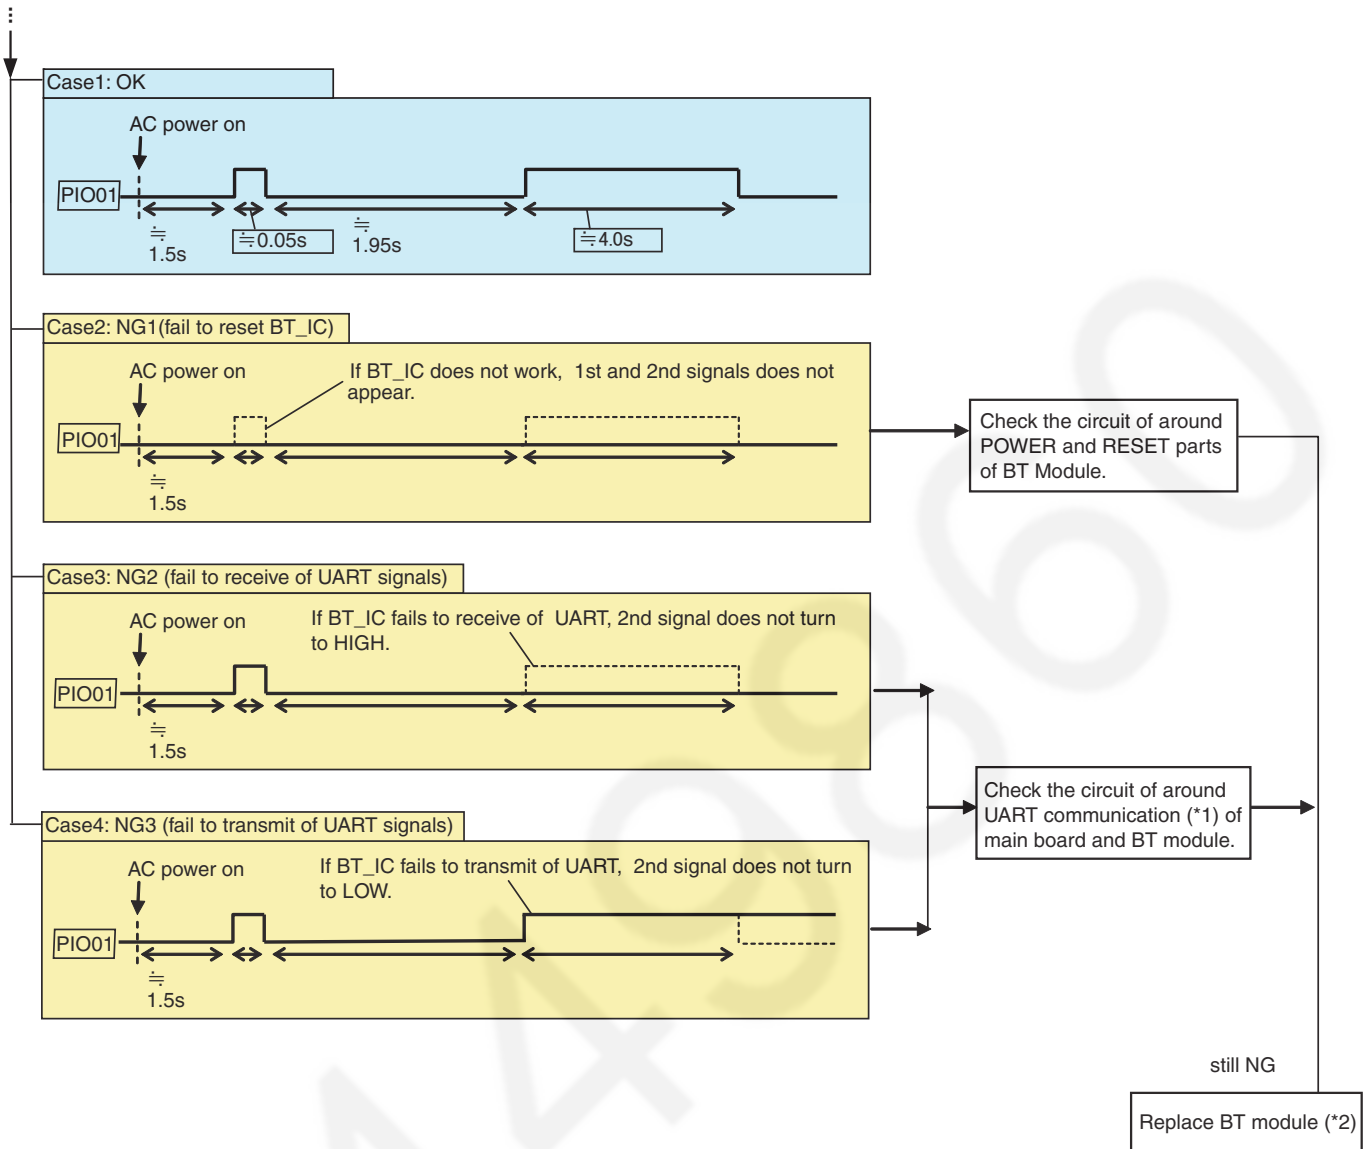**Cross Reference:**

Schematic Diagram (Base Unit_RF) (P.80)

Note:

(*2) After replacing, need to adjust the frequency of BT.

Refer to **Things to Do after Replacing IC or X'tal** (P.65)

11 Disassembly and Assembly Instructions


11.1. Disassembly Instructions

11.1.1. Base Unit


11.1.1.1. KX-TGF340

① Remove the 5 screws to remove the cabinet cover.


② Remove the solders.

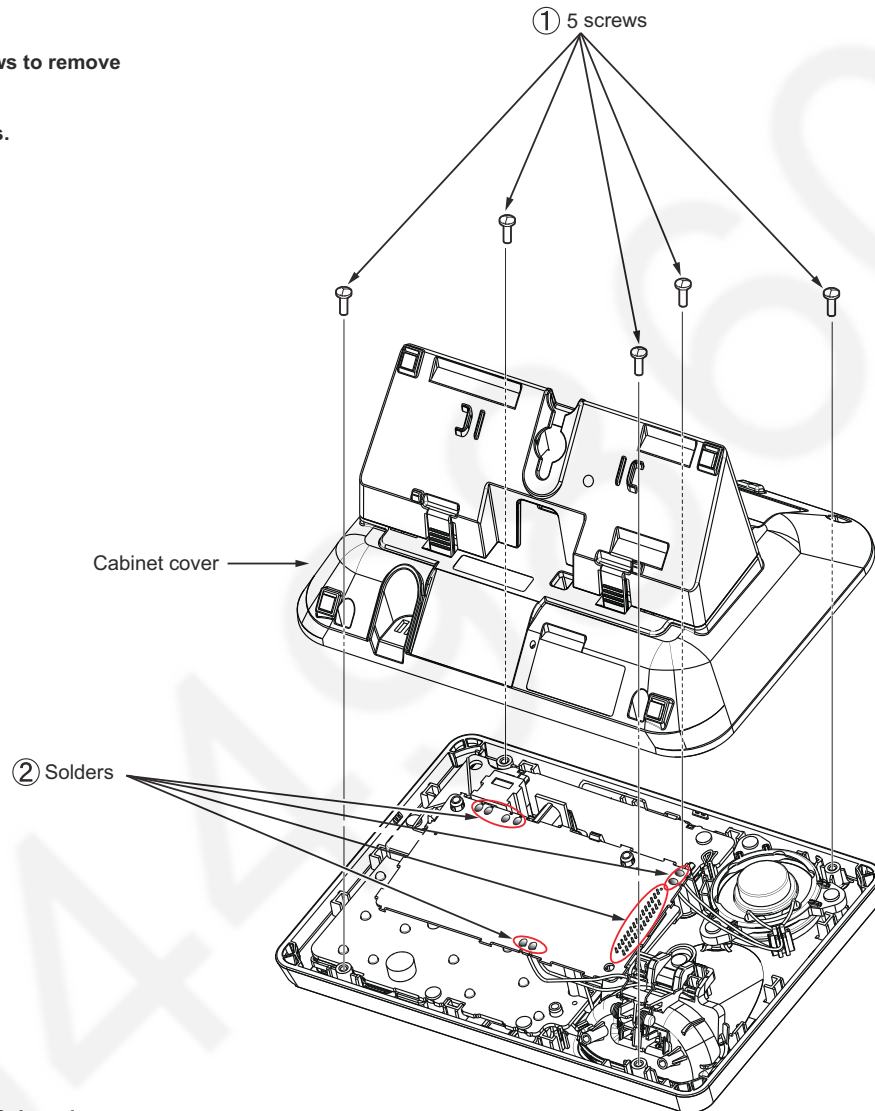


③ Remove the main P.C. board.

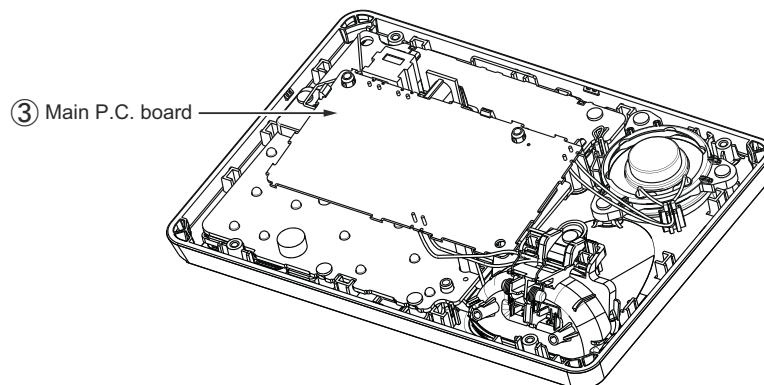

- ④ Remove the 2 screws to remove the Jack holder.

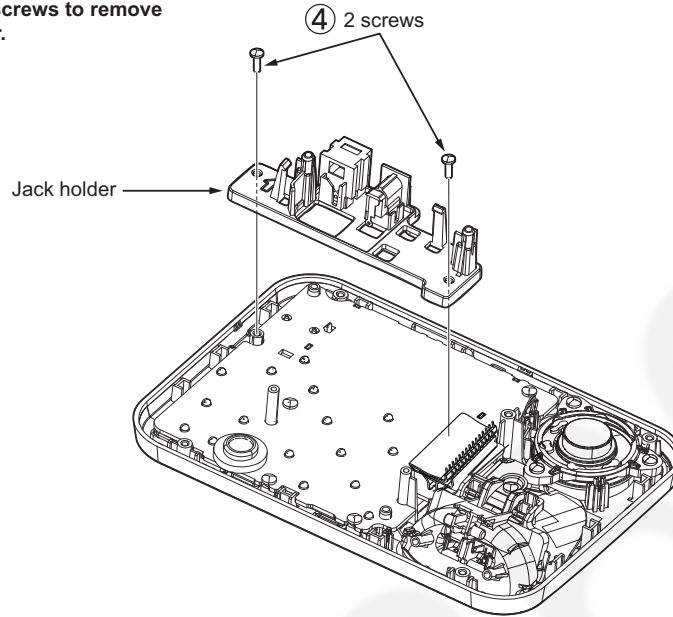


- ⑤ Remove the 4 screws to remove the operational P.C.B board.

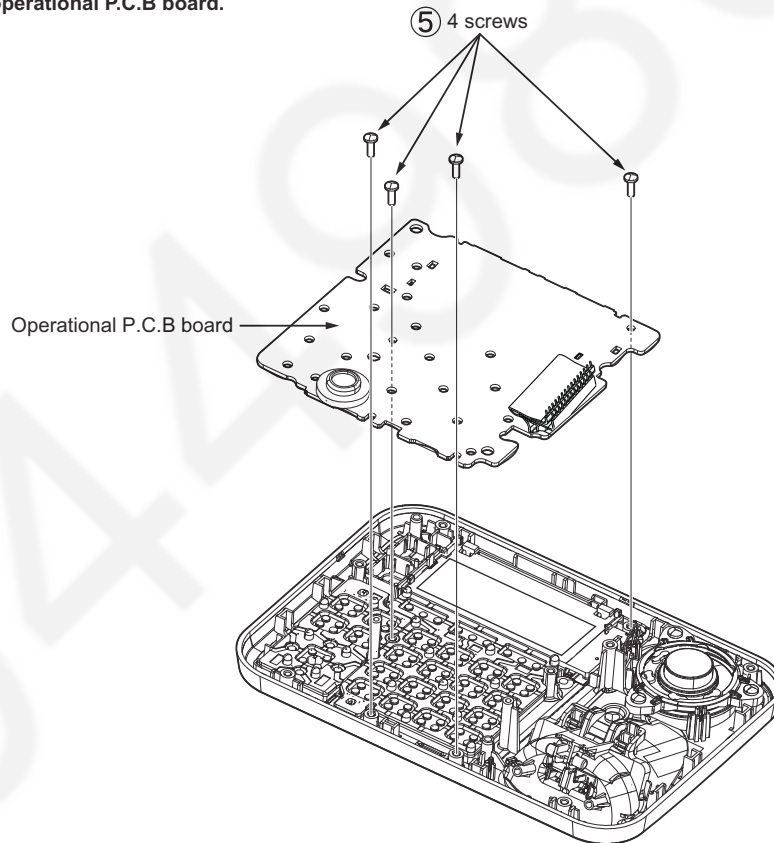


11.1.1.2. KX-TGF370

① Remove the 5 screws to remove the cabinet cover.


② Remove the solders.

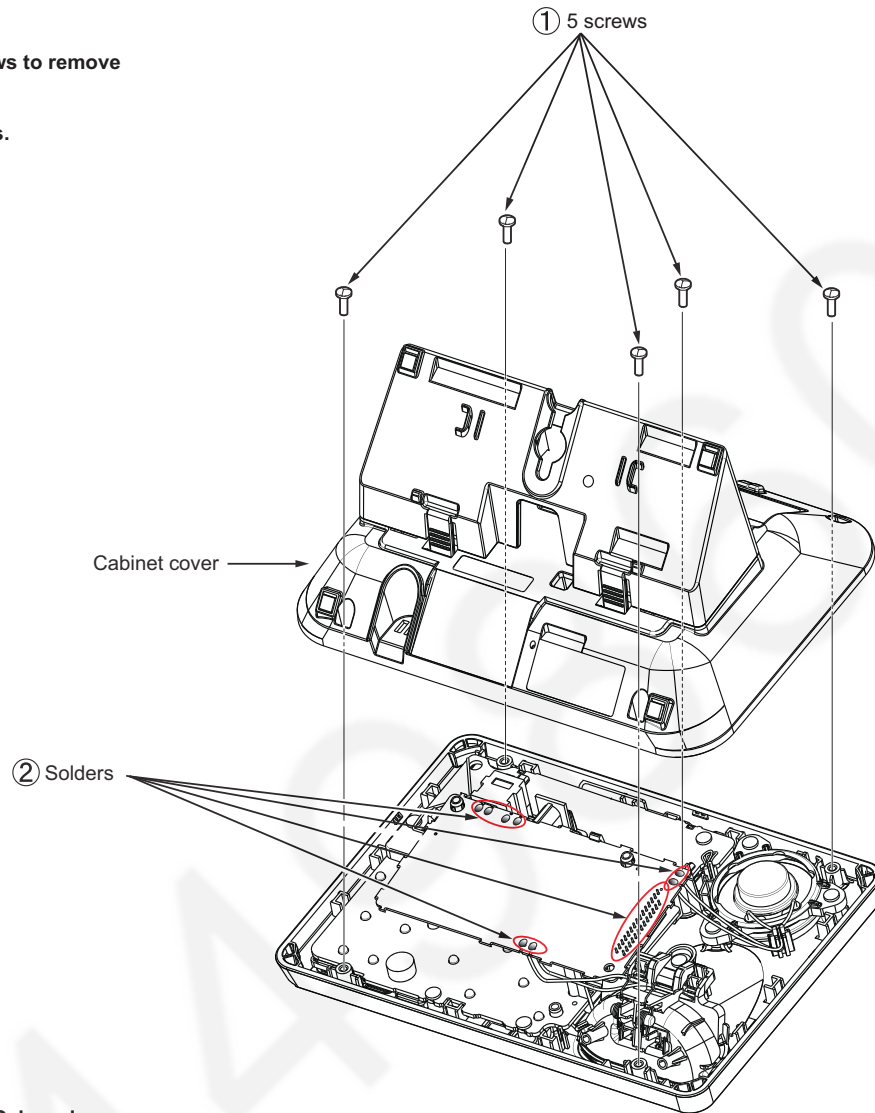


③ Remove the main P.C. board.

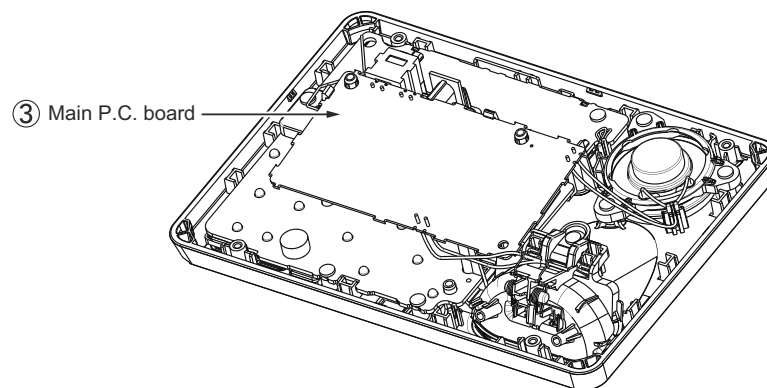

- ④ Remove the 2 screws to remove the Jack holder.

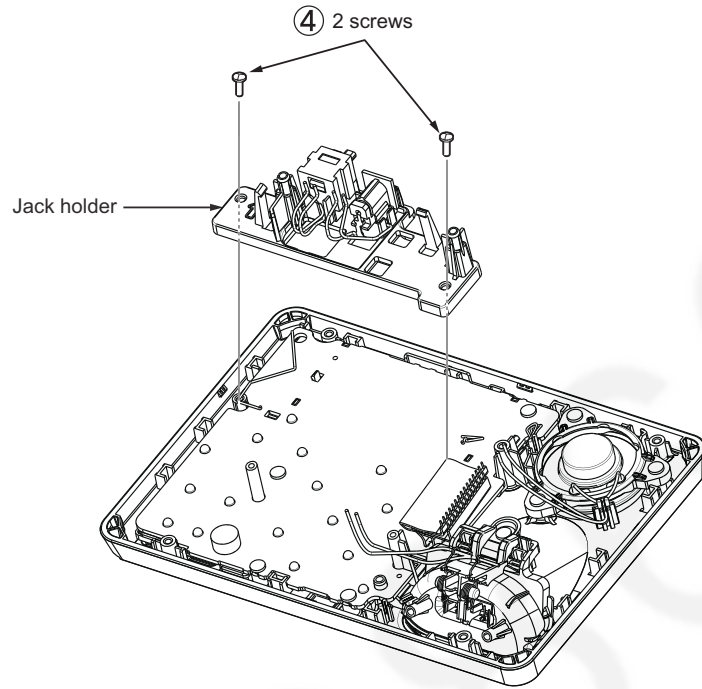


- ⑤ Remove the 4 screws to remove the operational P.C.B board.

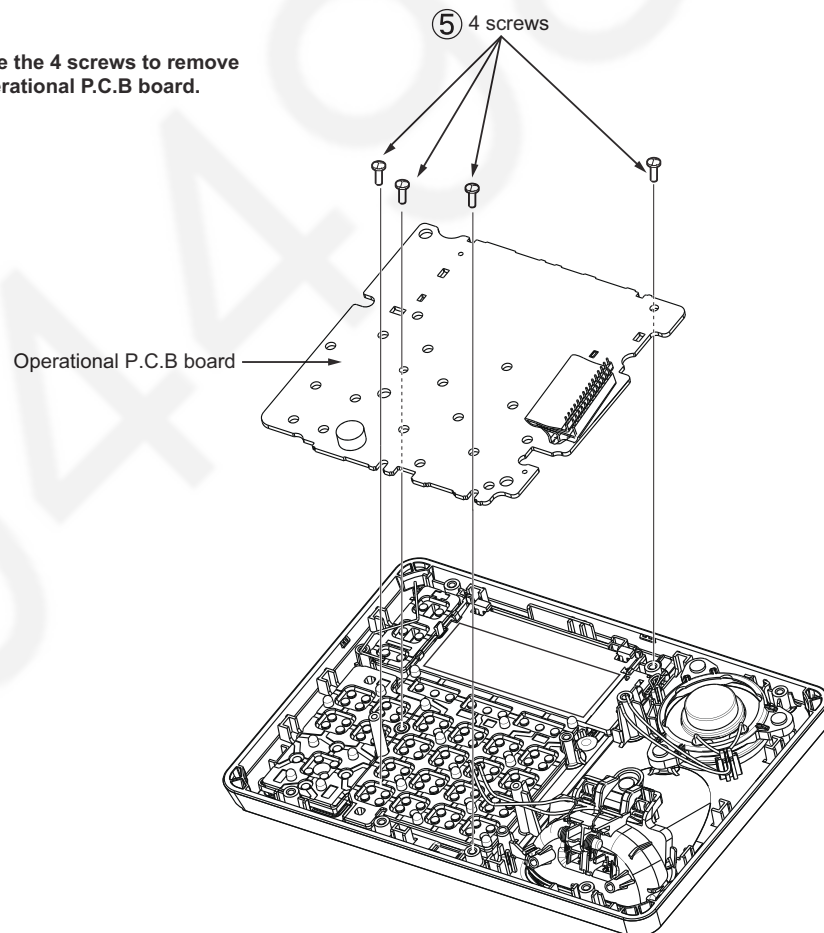


11.1.2. Handset


- ① Remove the 2 screws.

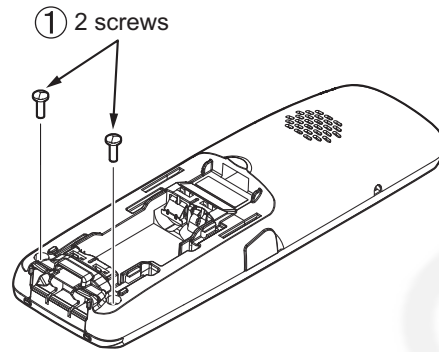


- ② Insert a JIG (PQDJ10006Y) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.

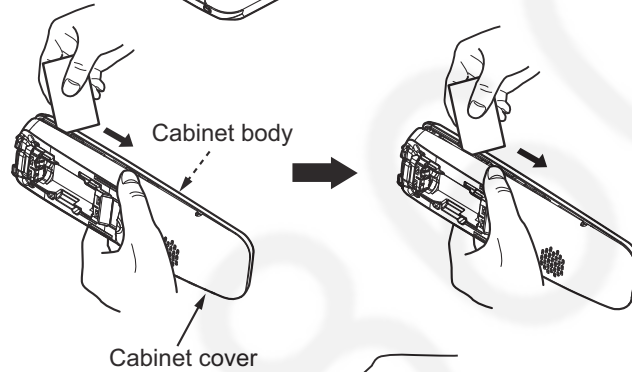


- ③ Likewise, open the other side of the cabinet.

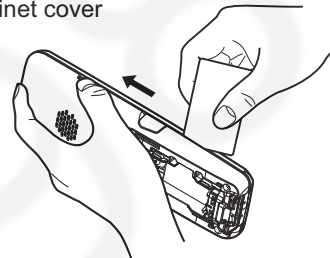

- ④ Remove the cabinet cover by pushing it upward.

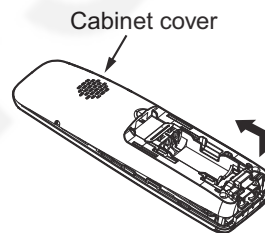


- ⑤ Remove the solders.

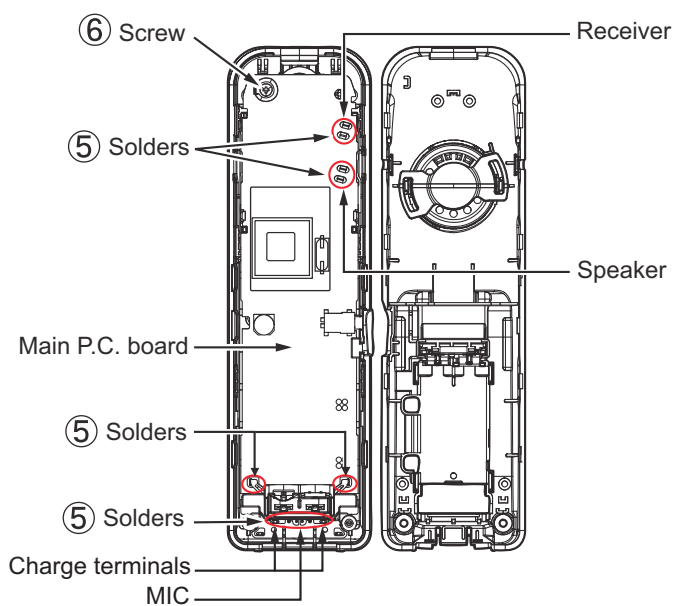


- ⑥ Remove the screw to remove the main P. C. board.

11.1.3. Charger Unit

① Unhook the click of one side.






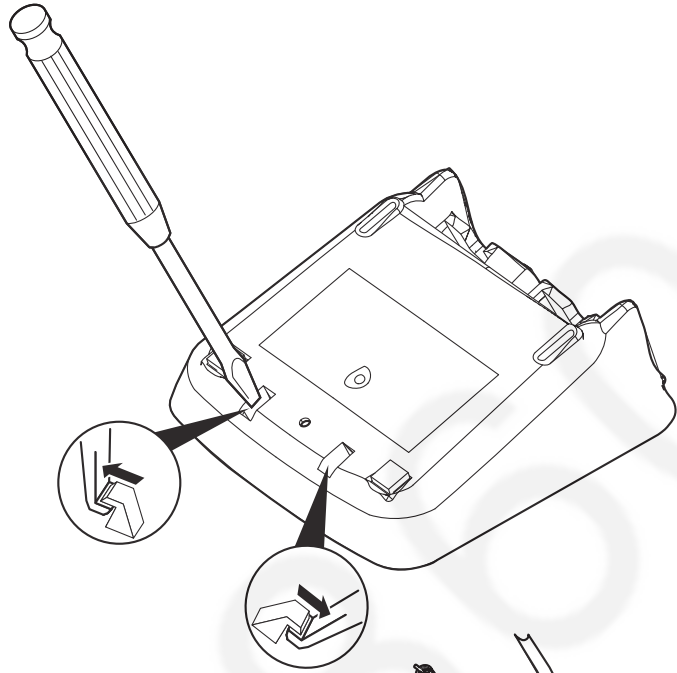


② Then unhook the other one.

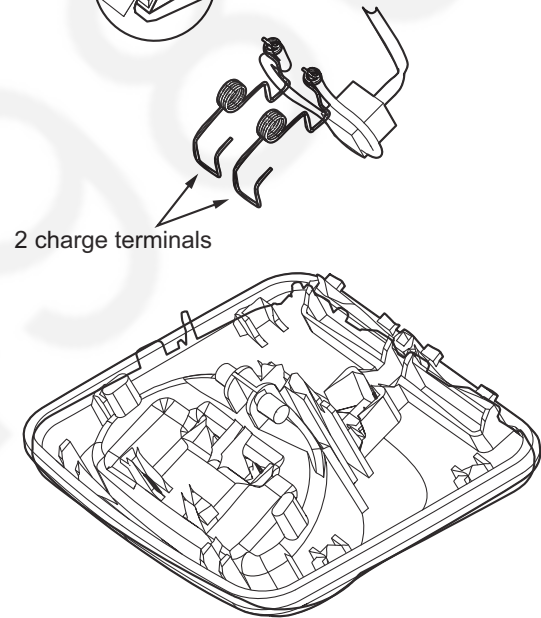


11.2. How to Replace the Base unit LCD


- ① Fit the heatseal of a new LCD.

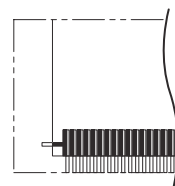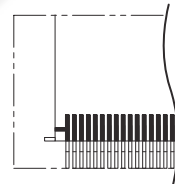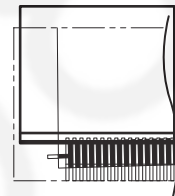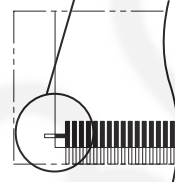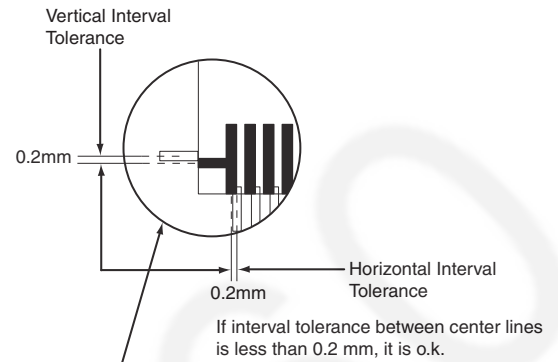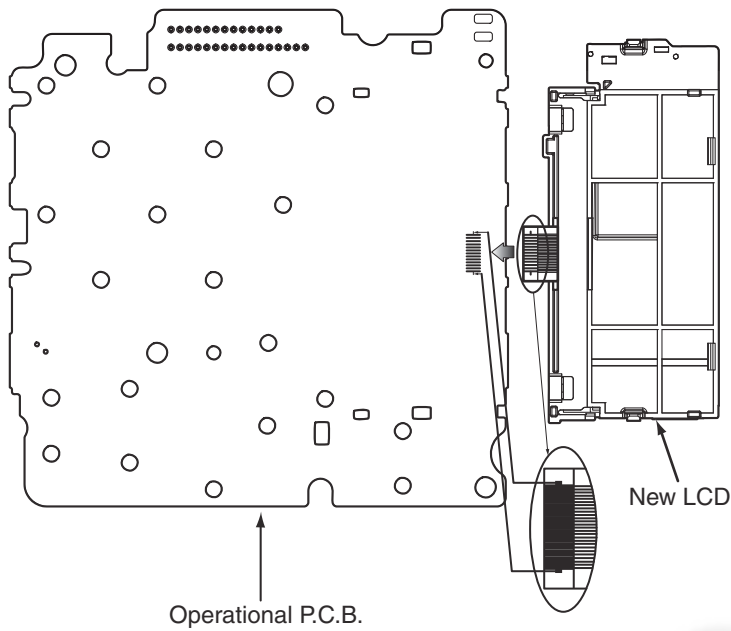


- ② Heatweld with the tip of the soldering iron about 5 to 8 seconds (in case of 60W soldering iron).

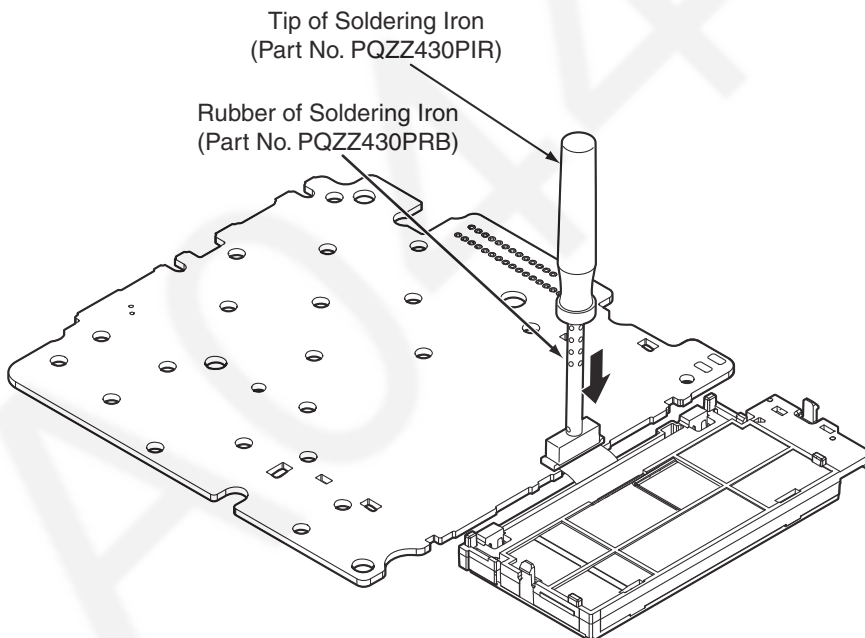

- ③ Attach the LCD and fix by hook A (two points).

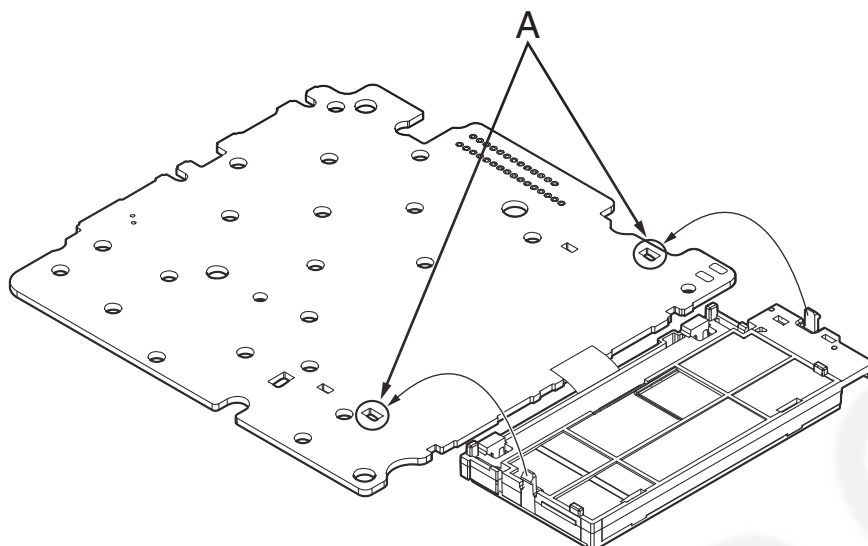

- ④ Solder the wires.

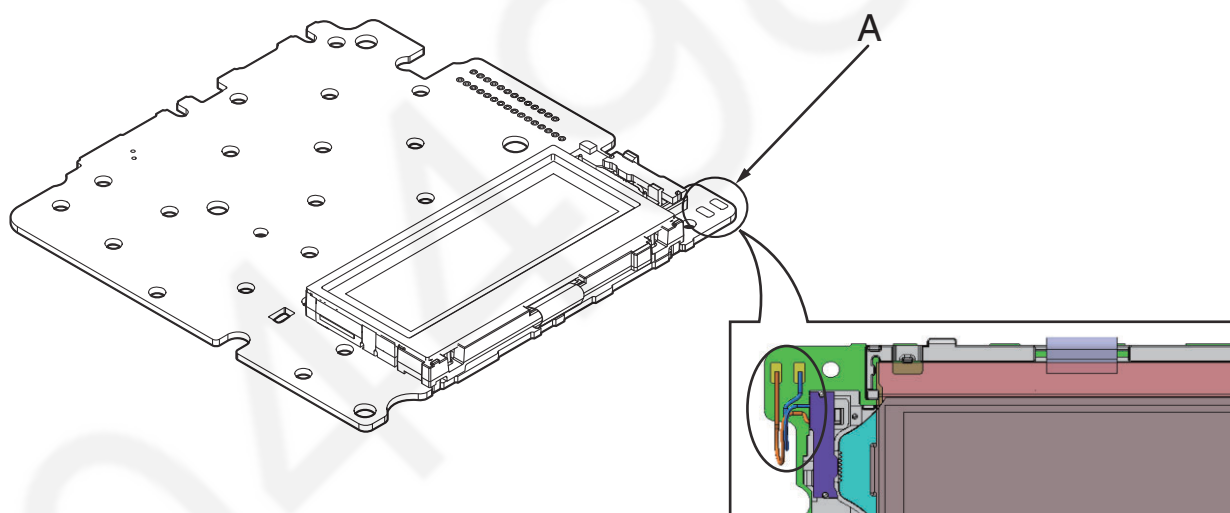


11.3. How to Replace the Handset LCD

Note:


The illustrations are simplified in this page.
They may differ from the actual product.

①

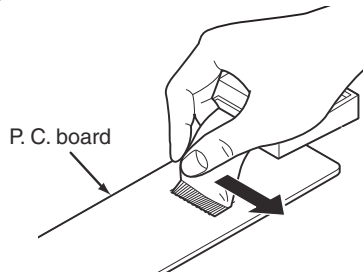


Peel off the FFC (Flexible Flat Cable) from the LCD, in the direction of the arrow. Take care to ensure that the foil on the P.C. board is not damaged.

②

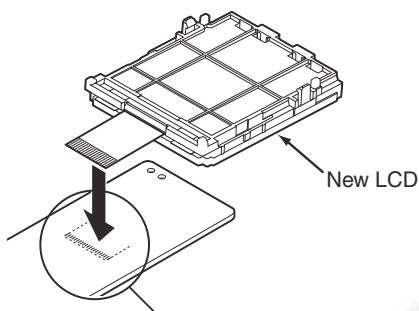


Fit the heatseal of a new LCD.

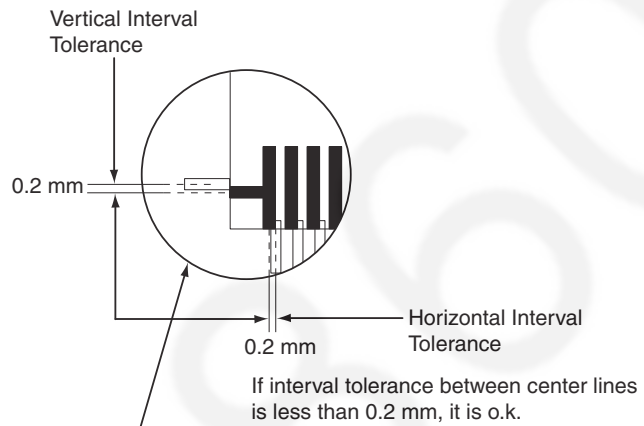


OK

③

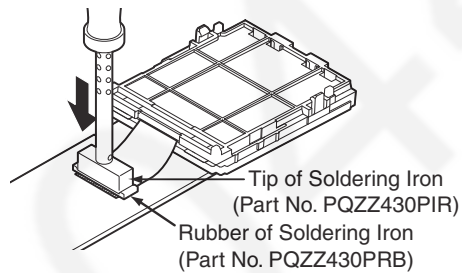


Heatweld with the tip of the soldering iron about 5 to 8 seconds (in case of 60W soldering iron).

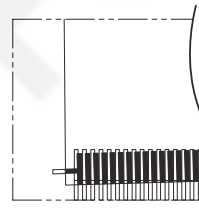


NG

(Inclined)

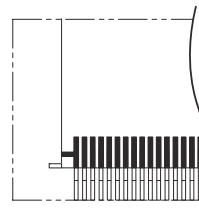

NG

(Vertical interval tolerance is more than 0.2 mm.)

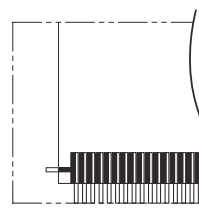

NG

(Horizontal interval tolerance is more than 0.2 mm.)

12 Measurements and Adjustments

This chapter explains the measuring equipment, the JIG connection, and the PC setting method necessary for the measurement in **Troubleshooting Guide** (P.34)

12.1. Equipment Required

- Digital multi-meter (DMM): it must be able to measure voltage and current.
 - Oscilloscope.
 - Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision; ± 4 ppm)
Hewlett Packard, 53131A is recommended.
 - DECT tester: Rohde & Schwarz, CMD 60 is recommended.
- This equipment may be useful in order to precisely adjust like a mass production.

12.2. The Setting Method of JIG

<Preparation>

- Serial JIG cable: PQZZ1CD300E*
- PC which runs in DOS mode
- **Batch file CD-ROM** for setting: Refer to parts list of **Fixtures and Tools**(P.114)


Note:

*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (k Ω)	New value (k Ω)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

12.2.1. Connections (Base Unit)

- ① Connect the AC adaptor.
- ② Connect the JIG Cable GND (black).
- ③ Connect the JIG Cable RX (red) and TX (yellow).

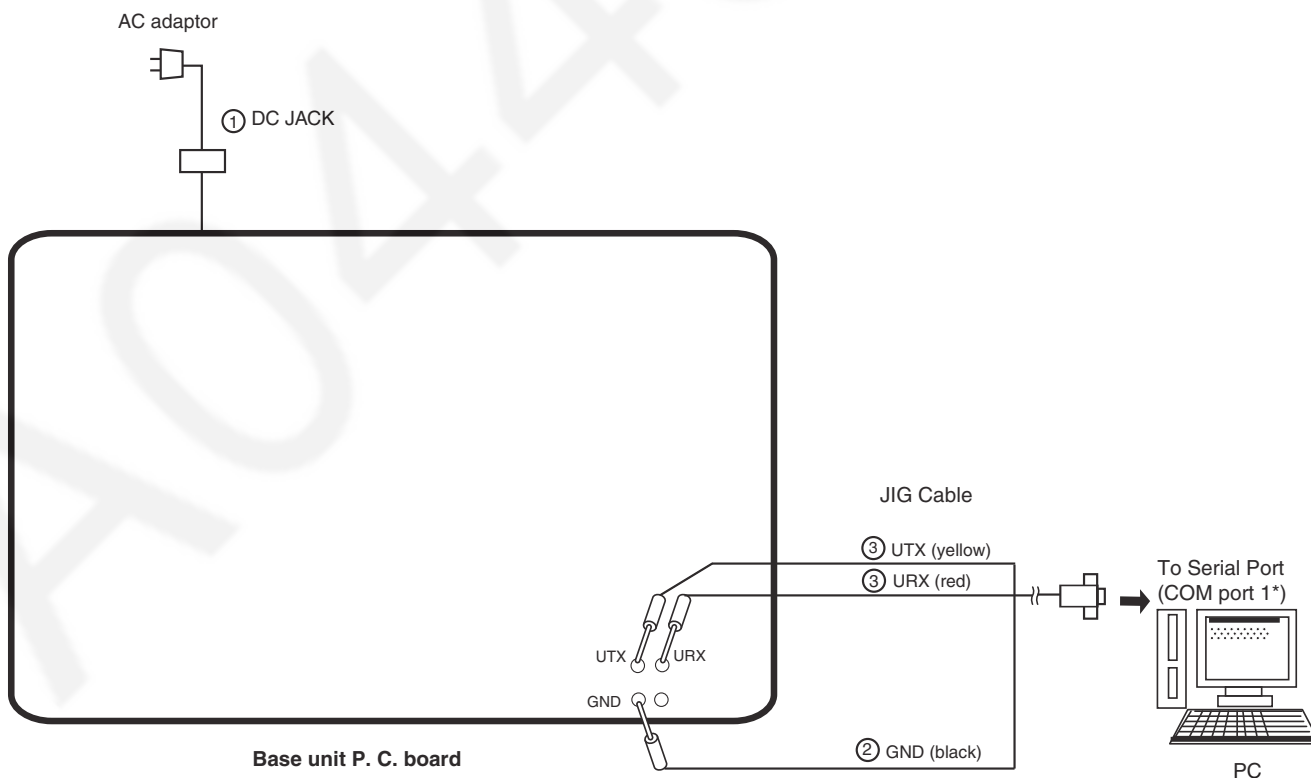


Note:

*: COM port names may vary depending on what your PC calls it.

12.2.2. Connections (Handset)

- ① Connect the DC Power or Battery to BATT+ and BATT-.
- ② Connect the JIG cable GND (black) to GND.
- ③ Connect the JIG cable UTX (yellow) to UTX and URX (red) to URX.

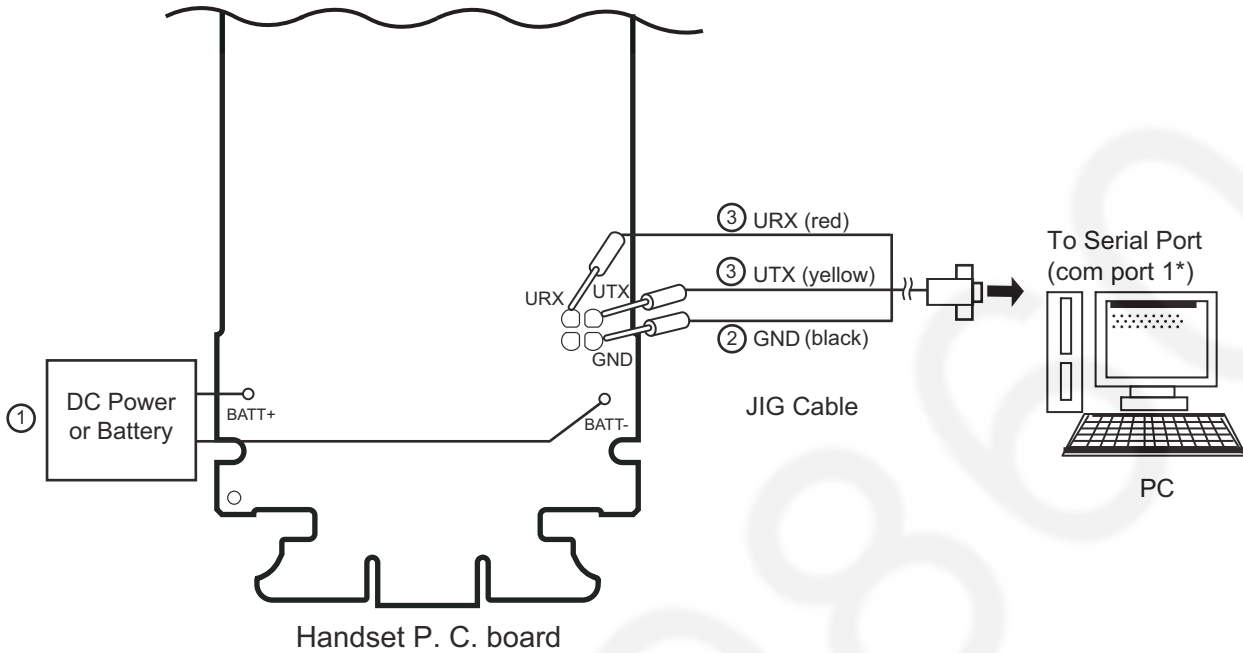

Note:

*: COM port names may vary depending on what your PC calls it.

12.2.3. How to install Batch file into P.C.

1. Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG**** folder to your PC (example: D drive).

2. Open an MS-DOS mode window.

<Example for Windows>

On your computer, click **[Start]**, select **Programs** (**All Programs** for Windows XP/Windows Server 2003), then click
MS-DOS Prompt. (for Windows 95/Windows 98)
 Or
Accessories-MS-DOS Prompt. (for Windows Me)
 Or
Command Prompt. (for Windows NT 4.0)
 Or
Accessories-Command Prompt. (for Windows 2000/Windows XP/Windows Server 2003)

3. At the DOS prompt, type "**D:**" (for example) to select the drive, then press the **Enter** key.

4. Type "**CD ¥PNZZTG******", then press the **Enter** key.

5. Type "**SET_COM=X**", then press the **Enter** key
 (X: COM port number used for the serial connection on your PC).

6. Type "**READID**", then press the **Enter** key.
 • If any error messages appear, change the port number or check the cable connection.
 • If any value appear, go to next step.

7. Type "**DOSKEY**", then press the **Enter** key.

<Example>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
00 52 4F A8 A8
D: ¥PNZZTG****>DOSKEY
D: ¥PNZZTG****>_
```

<Example: error happens>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
CreateFile error
ERROR 10: Can't open serial port
D: ¥PNZZTG ****>_
```

Note:

- "****" varies depending on the country or models.

12.2.4. Commands

See the table below for frequently used commands.


Command name		Function	Example
rdeeprom		Read the data of EEPROM/VES*	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid		Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid		Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
hookoff		Off-hook mode on Base	Type "hookoff".
hookon		On-hook mode on Base	Type "hookon".
getchk (Base unit)		Read checksum	Type "getchk".
How to use of "getchk" in Handset	1.rdeeprom	Read EEPROM/VES*	Type "RdEeprom 03 7D 04", and the data from address "03 7D" to "03 80" is read out *This command gets 4 byte "WW", "XX", "YY", "ZZ". *Please NEVER forget these 4 byte data!
	2.sendchar epw	Write EEPROM/VES*	Type "sendchar epw 03 7D 04 FF FF FF FF"
	3.sendchar RST	Reset baseset	Type "sendchar RST"
	4.getchk	Read checksum	Type "getchk".
	5.sendchar epw	Write EEPROM/VES*	Type "sendchar epw 03 7D 04 WW XX YY ZZ" **"WW", "XX", "YY", "ZZ" is 4 byte data that already read from same address.
wreeprom		Write the data of EEPROM/VES*	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

*VES: Virtual EEPROM system (adjustment data is stored in program Flash (IC502)).

12.3. Adjustment Standard (Base Unit)

When connecting the simulator equipment for checking, please refer to below.

12.3.1. Bottom View

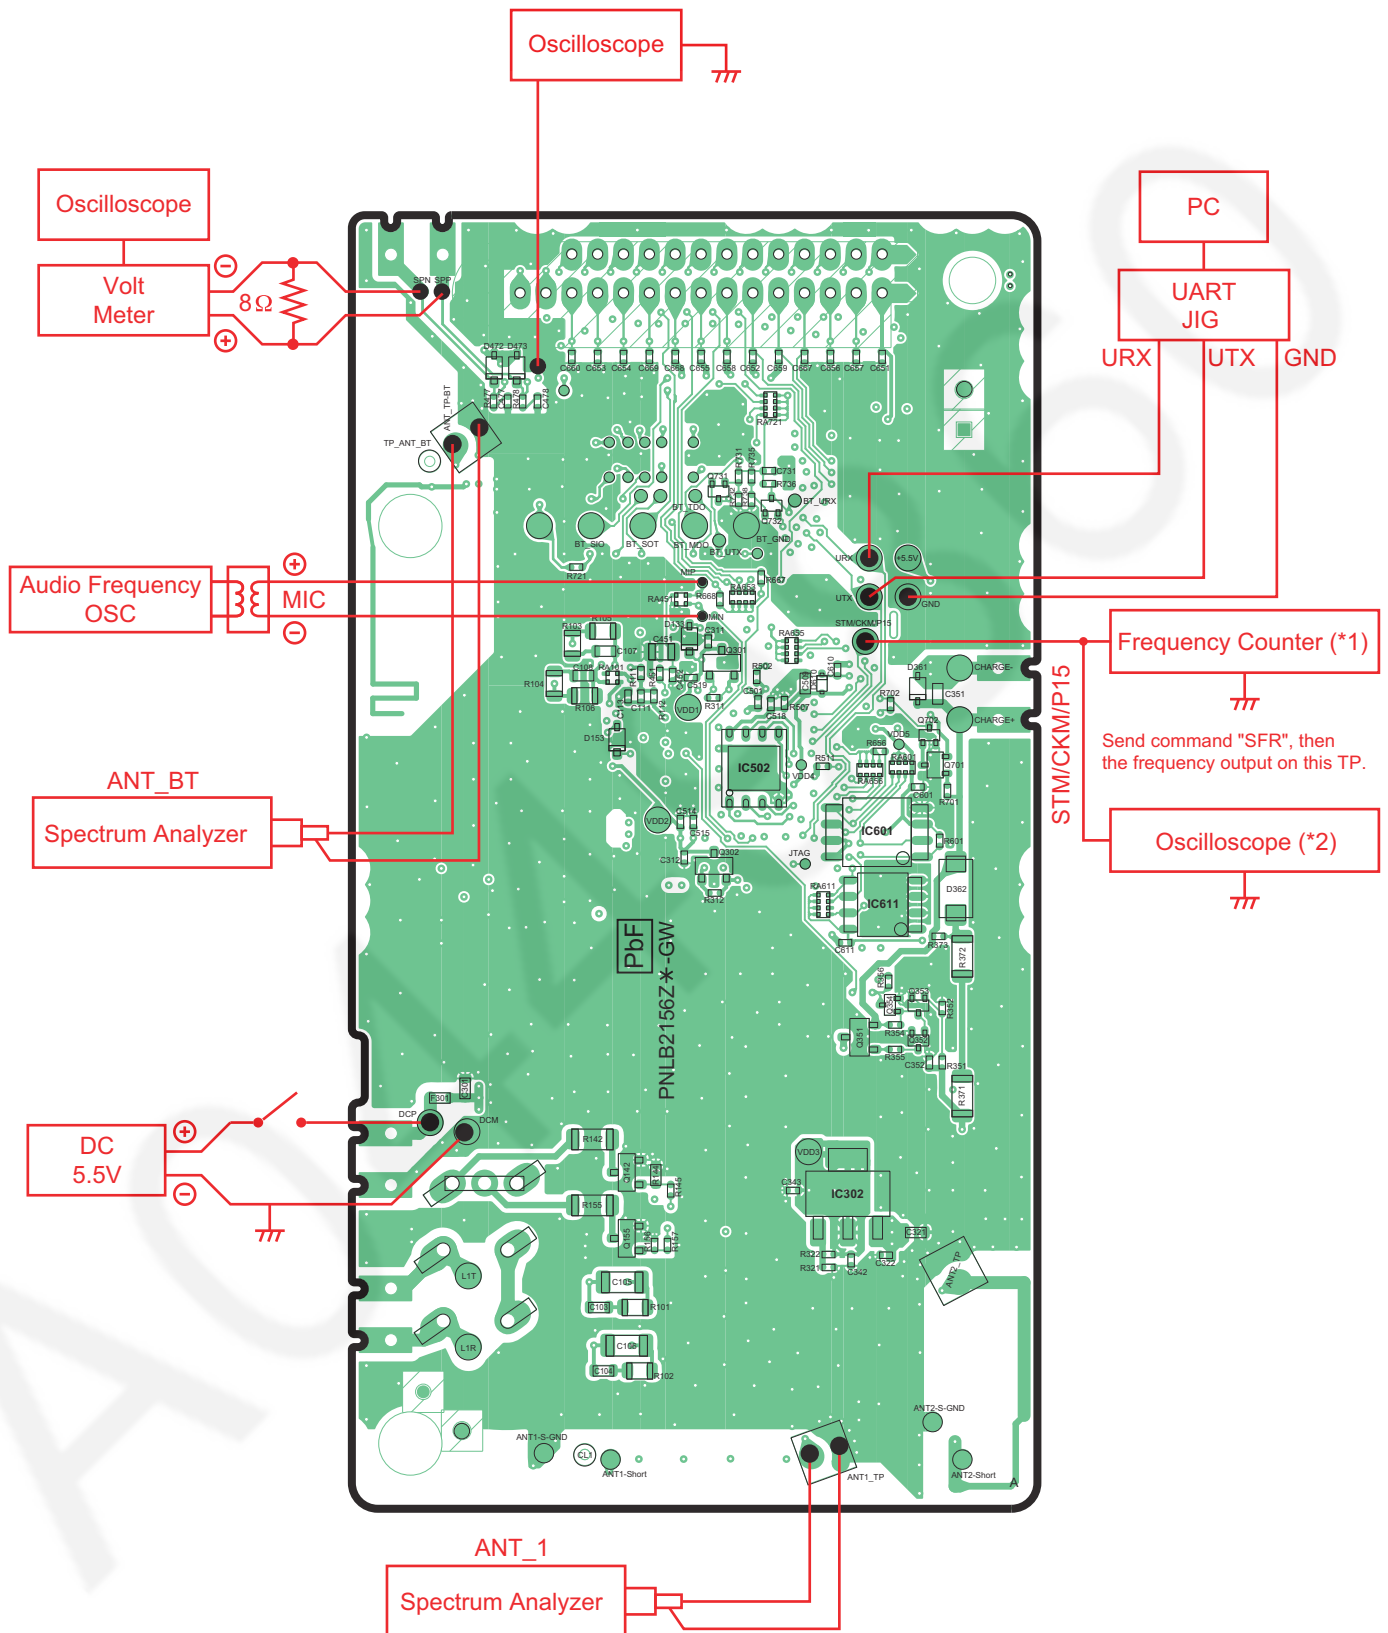

Note:


(*1) refers to No.2 of Check Table for RF part (P.44)

(*2) refers to Power Supply Circuit/Reset Circuit (P.15)

12.4. Adjustment Standard (Handset)

When connecting the simulator equipment for checking, please refer to below.

12.4.1. Component View

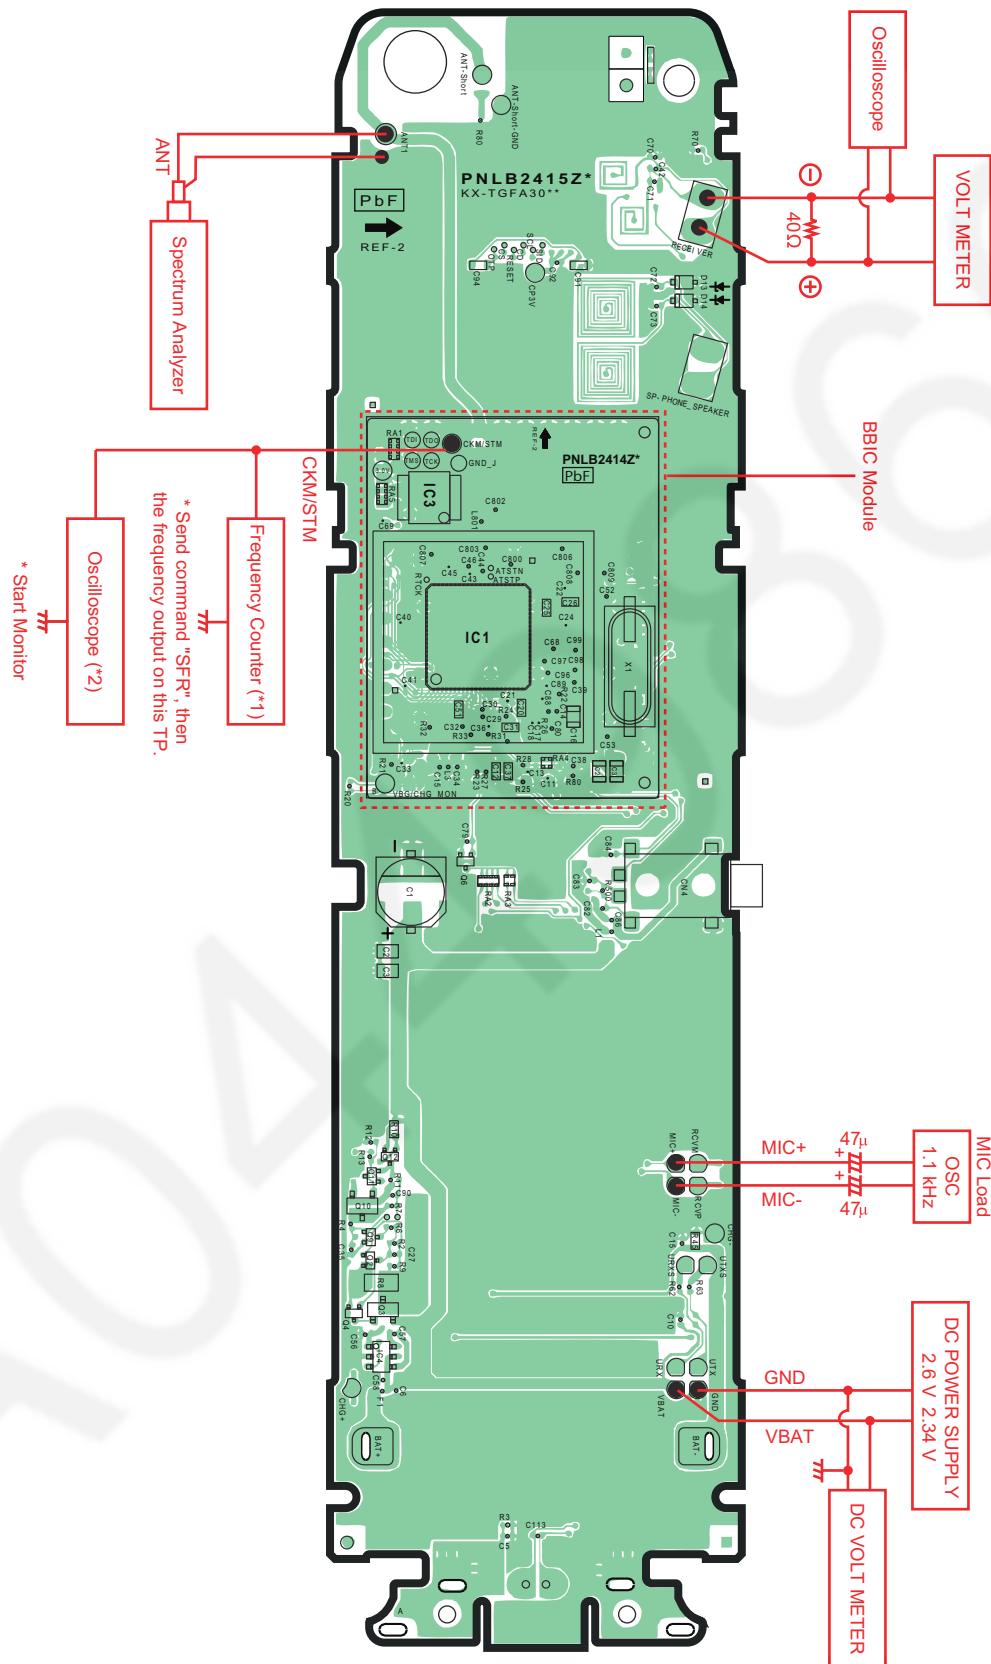

Note:

(*1) refers to No.2 of Check Table for RF part (P.44)

(*2) refers to Power Supply Circuit/Reset Circuit (P.23)

12.5. Things to Do after Replacing IC or X'tal

If repairing or replacing IC and X'tal, it is necessary to download the required data such as Programming data or adjustment data, etc. in memory.

The set doesn't operate if it is not executed.

12.5.1. How to download the data

12.5.1.1. Base Unit

First, operate the PC setting according to **The Setting Method of JIG** (P.59).

Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
BBIC(IC501)	Programming data is stored in memory.	1) Clock adjustment: Refer to Check Record .(*2)
FLASH1 (IC601)	Voice prompt data is stored in memory. (vary depending on country version)	1) Wait more than 15 seconds after connecting the JIG Cable. 2) Execute the command "VPDL2011 -AA ZZZ.bin" (*1). (writing time: approx. 1 min (115200 bps).)
FLASH2 (IC502)	Program D/L	1) Update BBIC. 2) Detach the JIG cable, then disconnect the DC Power. 3) Connect the DC Power. 4) Connect the JIG cable again, and execute the command "getchk", then confirm the checksum value is correct. If the downloading failes, start again from step 1. 5) Execute the command "wreeprom 00 01 CC". Refer to 12.2.4. Commands . 6) Default bath file: Execute the command "default.bat" 7) Country version batch file: Execute the command "TGF34x_US_US_RevXXX_YYY.bat" (for KX-TGF340) or "TGF37x_US_US_RevXXX_YYY.bat" (for KX-TGF370). (*1) 8) Confirm DECT ID written in the label pated plastic bag of FLASH rom. 9) Write ID(PFPI): Write DECT ID in step 8. => Execute the command "writeid". Refer to 12.2.4. Commands . 10) Verify ID(PFPI): Execute the command "readid". Refer to 12.2.4. Commands . 11) Clock adjustment: Refer to Check Record .(*2)
X'tal (X501)	System clock	Clock adjustment data is in EEPROM, adjust the data again after replacing it. 1) Apply 5.5V between DCP ad DCM with DC power. 2) Input Command "sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(10.368MHz $\pm$ 41Hz). 4) If the frequency is not 10.368MHz $\pm$ 41Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 10.368MHz $\pm$ 5Hz.

Note:

(*1) XXX_YYY: revision number, ZZZ:Voice prompt, AA: Baud rate(9600/19200/57600/115200)

"XXX_YYY and "ZZZ" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.59).

(*2) Refer **Check Record** (P.36)

When adjust the frequency the BT Unit.

	Item	Test command		Description
		Input	Echo back	
1	Power on	-	-	Wait 10seconds and connect JIG
2	Test mode	sendchar XBT 1 ␣ sendchar #X ts ␣	OK #XXTEST	Enter"XBT 1" and then "OK" is back when it succeeds to enter test mode.
3	Confirm a default value	sendchar #X nc ␣	#XXnc=0x1A	Confirm a default value before adjusting the frequency.
4	Adjust the frequency	sendchar #X b3 39 19 ␣ sendchar nc,, ␣	#XXTS ch=2441 pwr=19 #XXnc=0x,,	Adjust the frequency to "2441MHz $\pm$ 10kHz" by changing the value of, Test Point: ANT_BT, refer to Bottom View (P.88)

Note:


␣: Enter key

12.5.1.1.1. How to update the BBIC.

- Execute COM communicator.exe

1. Initialize COM port.(Only once at first.)


Select "Setting" → "Serial Port" → "Initial Setting" → "OK".

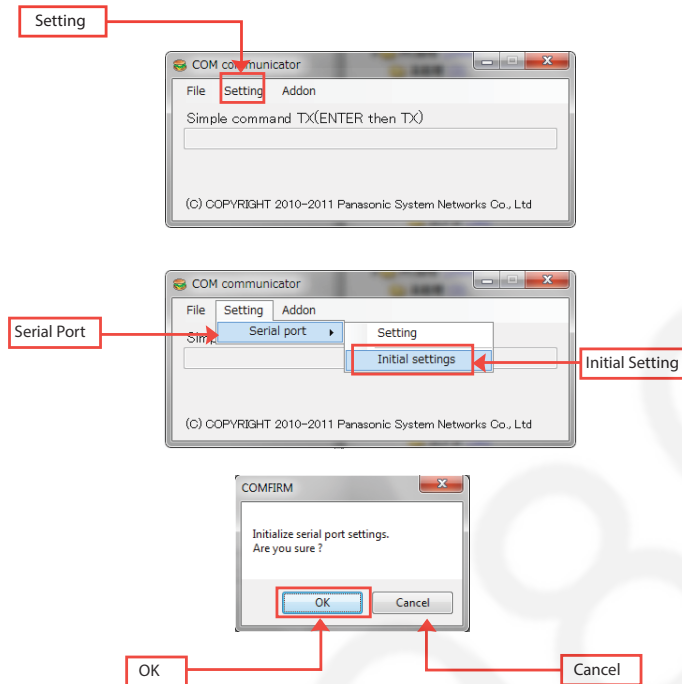

2. Select serial port COM number.

Select "Setting" → "Serial Port" → "Initial Setting" → "OK".

Fill up the "COM Option" → "OK".


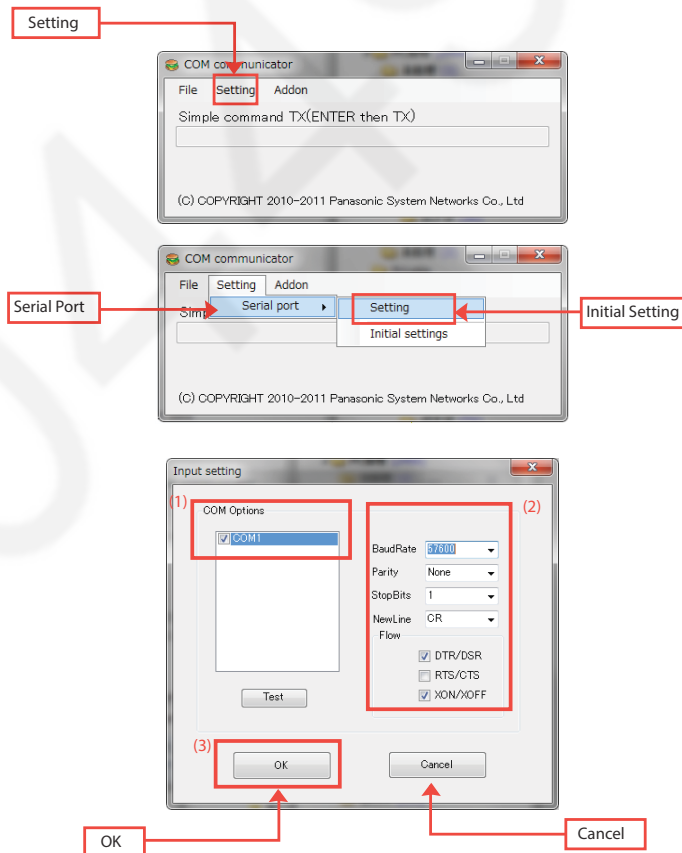


Note:

Once download is successful for a PC, this step is unnecessary next time to the PC.



- Execute COM communicator.exe again <<Write program>>

1. Select "ProgramLoader".

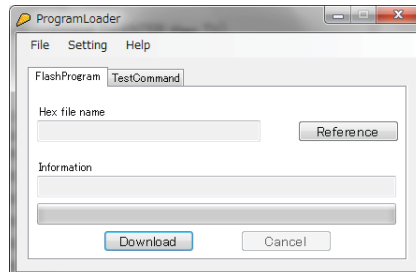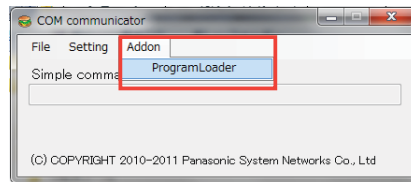

2. Select "Setting"/"Config".


Fill up the "Config Settings".

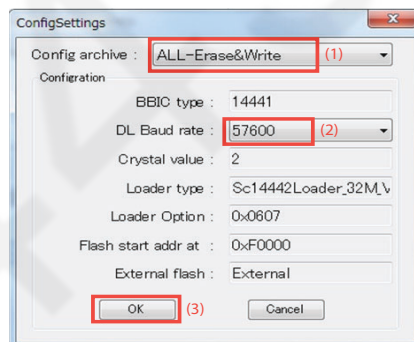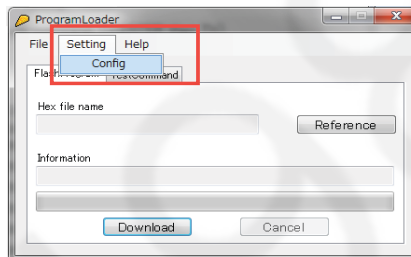

Note:


(2) Select Baud Rate as 57600. If write error happens, select slower Baud Rate (example: 19200).

3. Select download file.

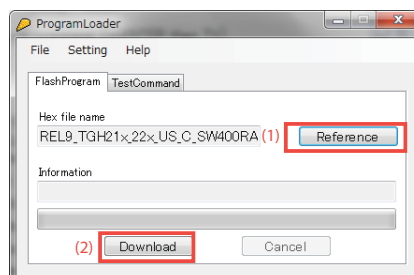


4. Start download.

- (1). Connect Unit and 3wire jig.
- (2). Confirm "Turn on power to target and press download." display.
- (3). Power off the unit, then power on.
- (4). Press "Download" button again.

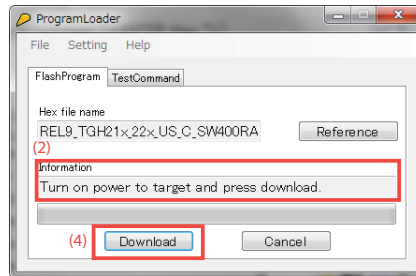

5. Finish download.

Completed dialog means "Download finished successfully!." It takes more than 20 minutes to download (It depends on baud rate). If error message is displayed, proceed from step 3 again.

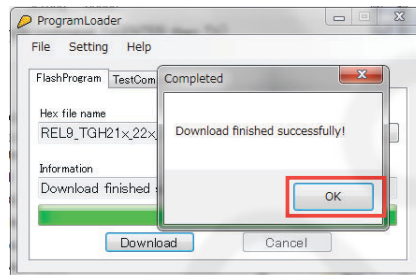

6. Continuous download.

Write next unit's software with proceeding from step 3 to Step 5.

12.5.1.2. Handset

First, operate the PC setting according to **The Setting Method of JIG** (P.59).

Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
EEPROM (IC3)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	1) Default batch file: Execute the command "default.bat". 2) Default batch file (remaining): Execute the command "TGFA30_US_DEF_RevXXX_YYY.bat". (*1) 3) Country version batch file: Execute the command "TGFA30_US_US_RevXXX_YYY.bat". (*1) 4) Clock adjustment 5) 2.35 V setting and battery low detection
X'tal (X1)	System clock	1) Apply 2.6V between BATT+ and BATT- with DC power. 2) Input Command " sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(13.824 MHz $\pm$ 100 Hz). 4) If the frequency is not 13.824 MHz $\pm$ 100 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 13.824000 MHz $\pm$ 5 Hz.

Note:

(*1) XXX_YYY: revision number

"XXX_YYY" vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.59).

12.6. Frequency Table

	Ch. (hex)	TX/RX Frequency (MHz)
Channel 0	00	1928.448
Channel 1	01	1926.720
Channel 2	02	1924.992
Channel 3	03	1923.264
Channel 4	04	1921.536

12.7. Bluetooth Frequency Table

Ch.	Frequency (MHz)	Ch.	Frequency (MHz)	Ch.	Frequency (MHz)
0	2402	33	2435	66	2468
1	2403	34	2436	67	2469
2	2404	35	2437	68	2470
3	2405	36	2438	69	2471
4	2406	37	2439	70	2472
5	2407	38	2440	71	2473
6	2408	39	2441	72	2474
7	2409	40	2442	73	2475
8	2410	41	2443	74	2476
9	2411	42	2444	75	2477
10	2412	43	2445	76	2478
11	2413	44	2446	77	2479
12	2414	45	2447	78	2480
13	2415	46	2448		
14	2416	47	2449		
15	2417	48	2450		
16	2418	49	2451		
17	2419	50	2452		
18	2420	51	2453		
19	2421	52	2454		
20	2422	53	2455		
21	2423	54	2456		
22	2424	55	2457		
23	2425	56	2458		
24	2426	57	2459		
25	2427	58	2460		
26	2428	59	2461		
27	2429	60	2462		
28	2430	61	2463		
29	2431	62	2464		
30	2432	63	2465		
31	2433	64	2466		
32	2434	65	2467		

13 Miscellaneous

13.1. How to Replace the LLP (Leadless Leadframe Package) IC

Note:

This description only applies to the model with Shield case.

13.1.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron
Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

Note:

We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.


- Hot Air Desoldering Tool
Temperature: 608 °F ± 68 °F (320 °C ± 20 °C)

13.1.2. Caution

- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

13.1.3. How to Remove the IC


1. Heat the IC with a hot air desoldering tool through the P.C.Board.

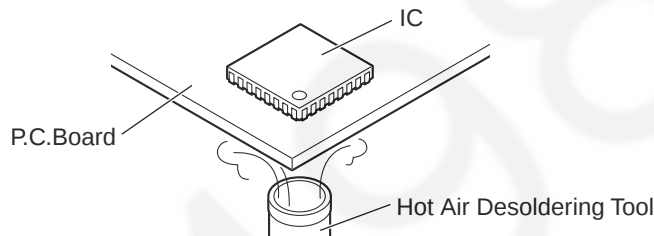


2. Pick up the IC with tweezers, etc. when the solder is melted completely.

Note:

- Be careful not to touch the peripheral parts with tweezers, etc. They are unstable.

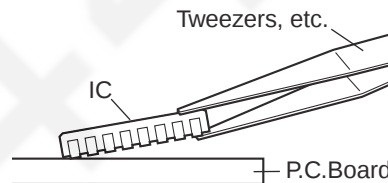


When it is hard to melt the solder completely, heat it with a hot air desoldering tool through the IC besides through the P.C.Board.

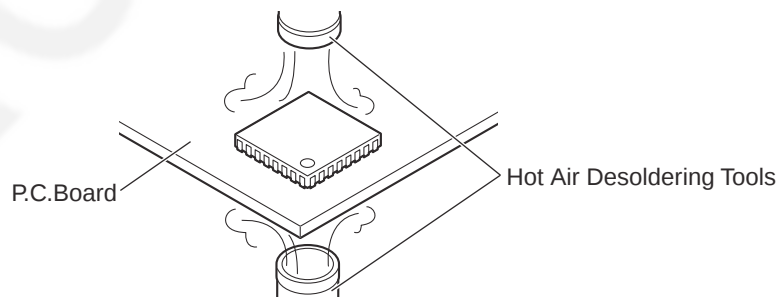

3. After removing the IC, clean the P.C.Board of residual solder.

13.1.4. How to Install the IC


1. Place the solder a little on the land where the radiation GND pad on IC bottom is to be attached.

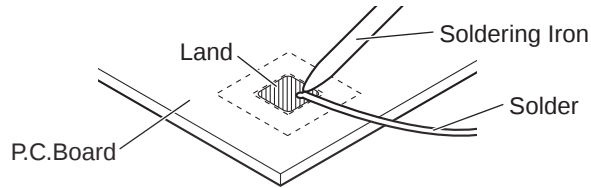

2. Place the solder a little on the land where IC pins are to be attached, then place the IC.

Note:


- When placing the IC, the positioning should be done very carefully.

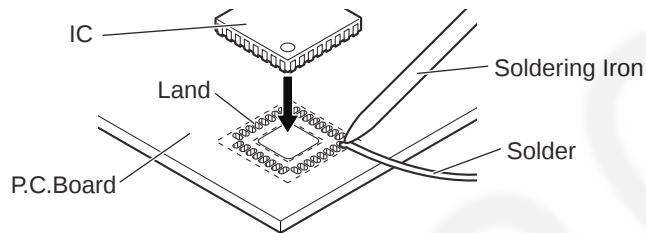

3. Heat the IC with a hot air desoldering tool through the P.C.Board until the solder on IC bottom is melted.

Note:

- Be sure to place it precisely, controlling the air volume of the hot air desoldering tool.

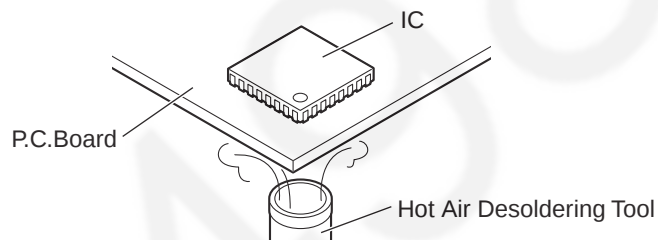

4. After soldering, confirm there are no short and open circuits with visual inspection.

13.2. How to Replace the Flat Package IC

Even if you do not have the special tools (for example, a spot heater) to remove the Flat IC, with some solder (large amount), a soldering iron and a cutter knife, you can easily remove the ICs that have more than 100 pins.

13.2.1. Preparation

- PbF (: Pb free) Solder

- Soldering Iron

Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)

Note: We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.

- Flux

Recommended Flux: Specific Gravity → 0.82.

Type → RMA (lower residue, non-cleaning type)


Note: See **About Lead Free Solder (PbF: Pb free)** (P.5)

13.2.2. How to Remove the IC


1. Put plenty of solder on the IC pins so that the pins can be completely covered.

Note:


If the IC pins are not soldered enough, you may give pressure to the P.C. board when cutting the pins with a cutter.

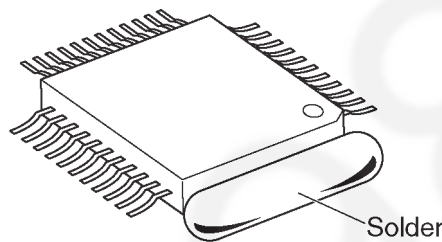

2. Make a few cuts into the joint (between the IC and its pins) first and then cut off the pins thoroughly.

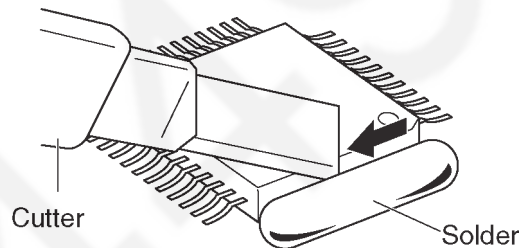

3. While the solder melts, remove it together with the IC pins.

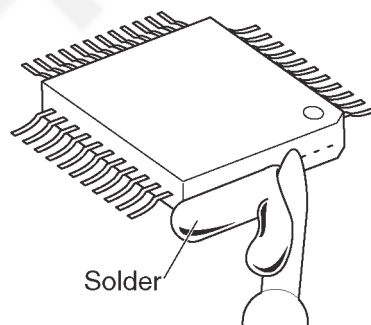

When you attach a new IC to the board, remove all solder left on the board with some tools like a soldering wire. If some solder is left at the joint on the board, the new IC will not be attached properly.


13.2.3. How to Install the IC

1. Temporarily fix the FLAT PACKAGE IC, soldering the two marked pins.




*Check the accuracy of the IC setting with the corresponding soldering foil.

2. Apply flux to all pins of the FLAT PACKAGE IC.

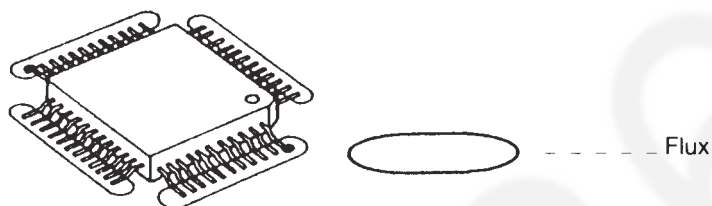


3. Solder the pins, sliding the soldering iron in the direction of the arrow.

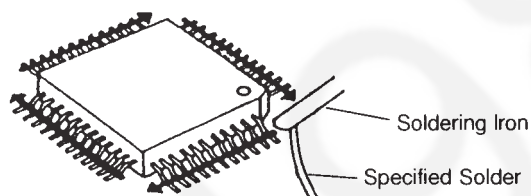

13.2.4. How to Remove a Solder Bridge

1. Lightly resolder the bridged portion.
2. Remove the remaining solder along the pins using a soldering iron as shown in the figure below.

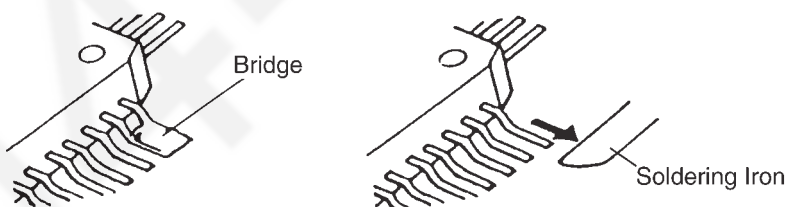

13.3. Terminal Guide of the ICs, Transistors and Diodes

13.3.1. Base Unit

 C0DBEYY00102	 C1CB00003663	 PNWIATGF340H ^(*) PNWIATGF370H ^(*)	 PNWIBTGF340H ^(*) PNWIBTGF370H ^(*)	 DSC7003S0L
 B1ABDM000001, B1ADGE000012, DSA5001S0L DSA900100L, 2SC6054JSL, UNR9216J0L, B1GBCFYY0020, B1ADNB000003	 B0EDER000009	 DY2J25000L	 B0ECKM000008	
 B0DDBF000012	 B3AAB0000347	 B3ABB0000331 ^(*)	 B1ACGP000008	 B3AFB0000370

Note:

(*) KX-TGF340/KX-TGF342/KX-TGF343/KX-TGF344/KX-TGF345

(*) KX-TGF372/KX-TGF373/KX-TGF374/KX-TGF375/KX-TG585SK

13.3.2. Handset

 C2HBCY000162	 PNWITGFA30R	 C0DBZYY00357	 DSA900100L DRC9113Z0L 2SC6054JSL B1ADNB000003	 B1ABGE000011
 B0BC4R3A0006	 B3ACB0000190	 B3AFB0000370		

14 Schematic Diagram

14.1. For Schematic Diagram

14.1.1. Base Unit (Schematic Diagram (Base Unit_Main))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

Important Safety Notice:

Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacture's specified parts.


2. The schematic diagrams may be modified at any time with the development of new technology.

14.1.2. Handset (Schematic Diagram (Handset_Main))

Notes:

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
2. The schematic diagrams may be modified at any time with the development of new technology.




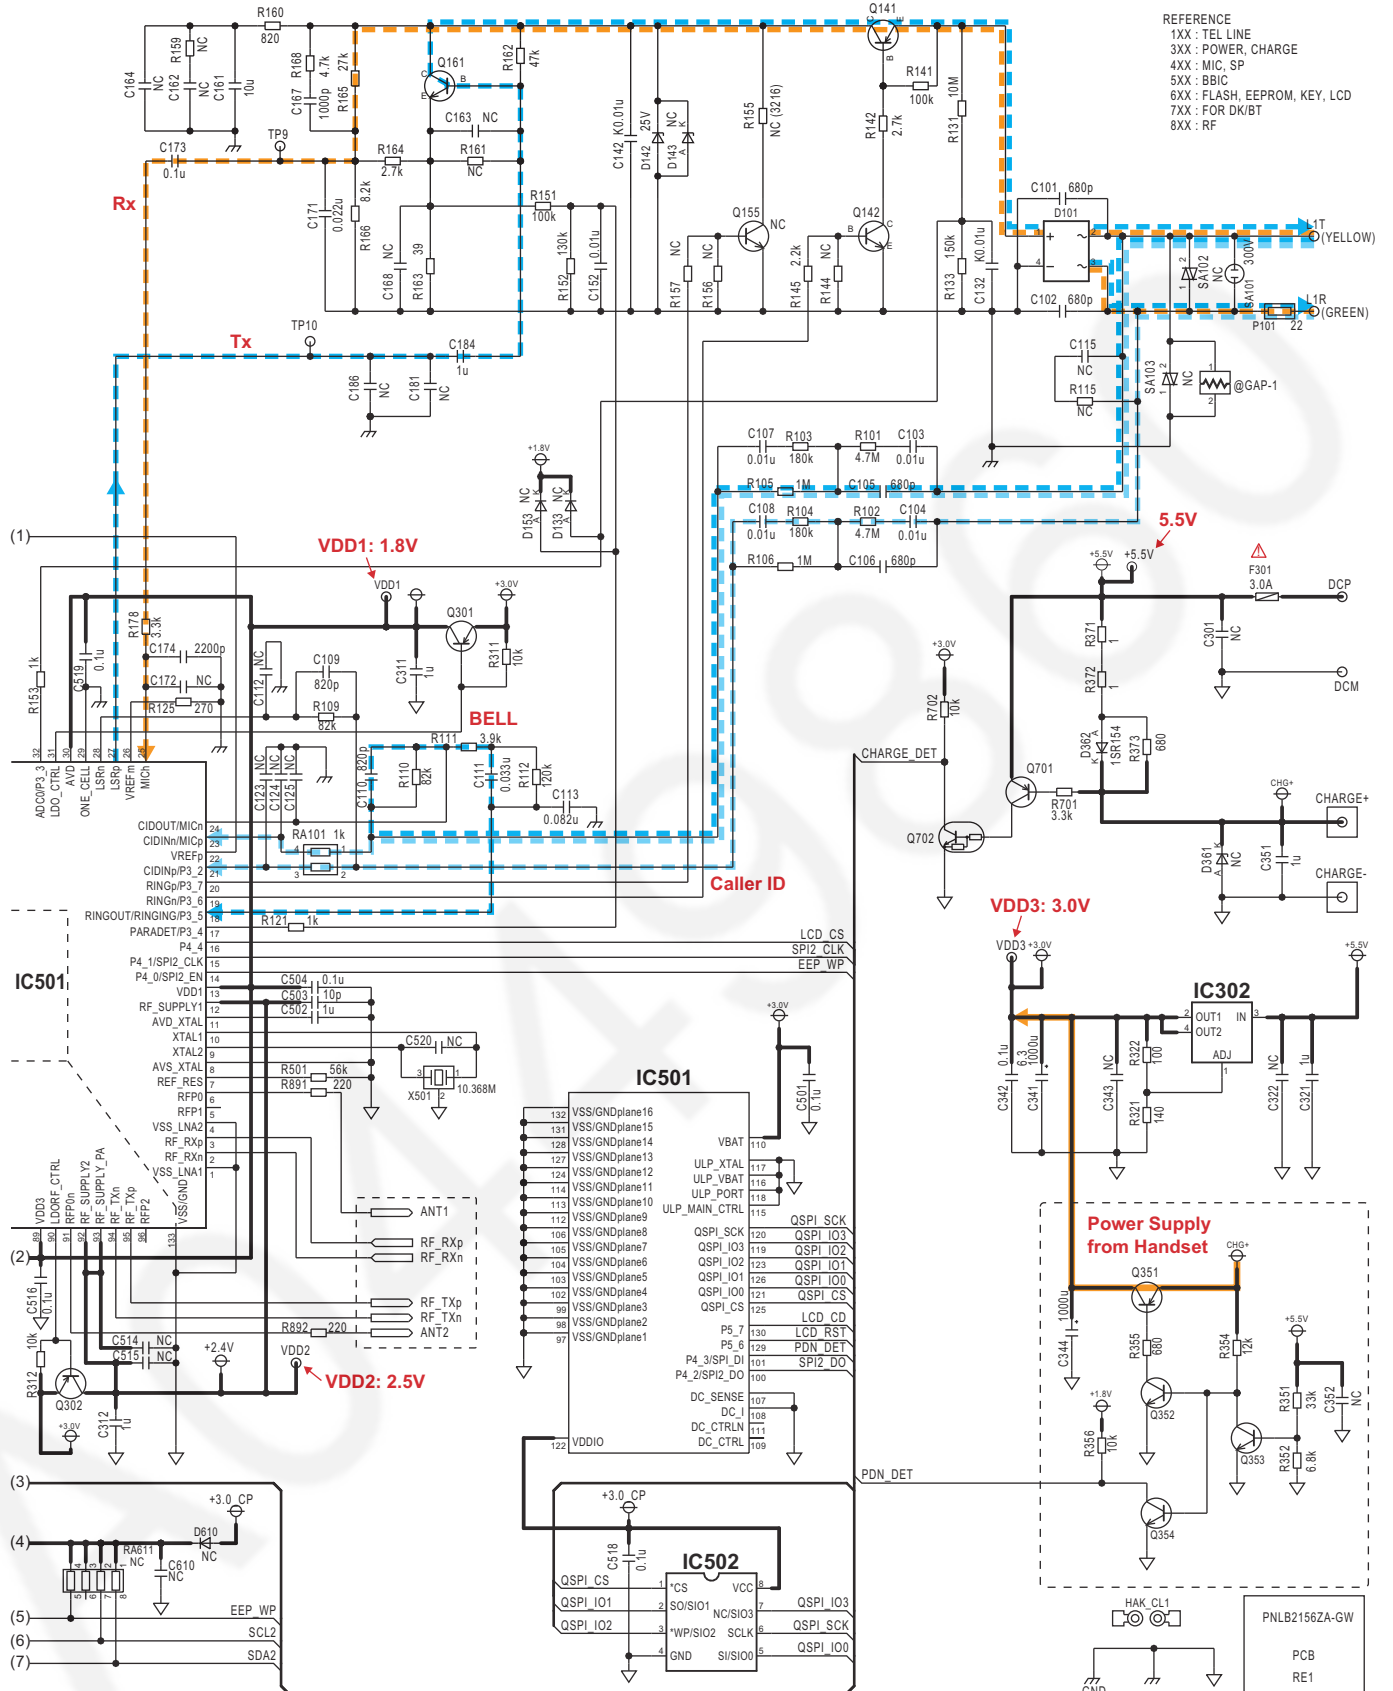

NC: No Components

KX-TGF340/342/343/344/345/372/373/374/375/TG585SK
 SCHEMATIC DIAGRAM (Base Unit_Main)

14.3. Schematic Diagram (Base Unit_RF)

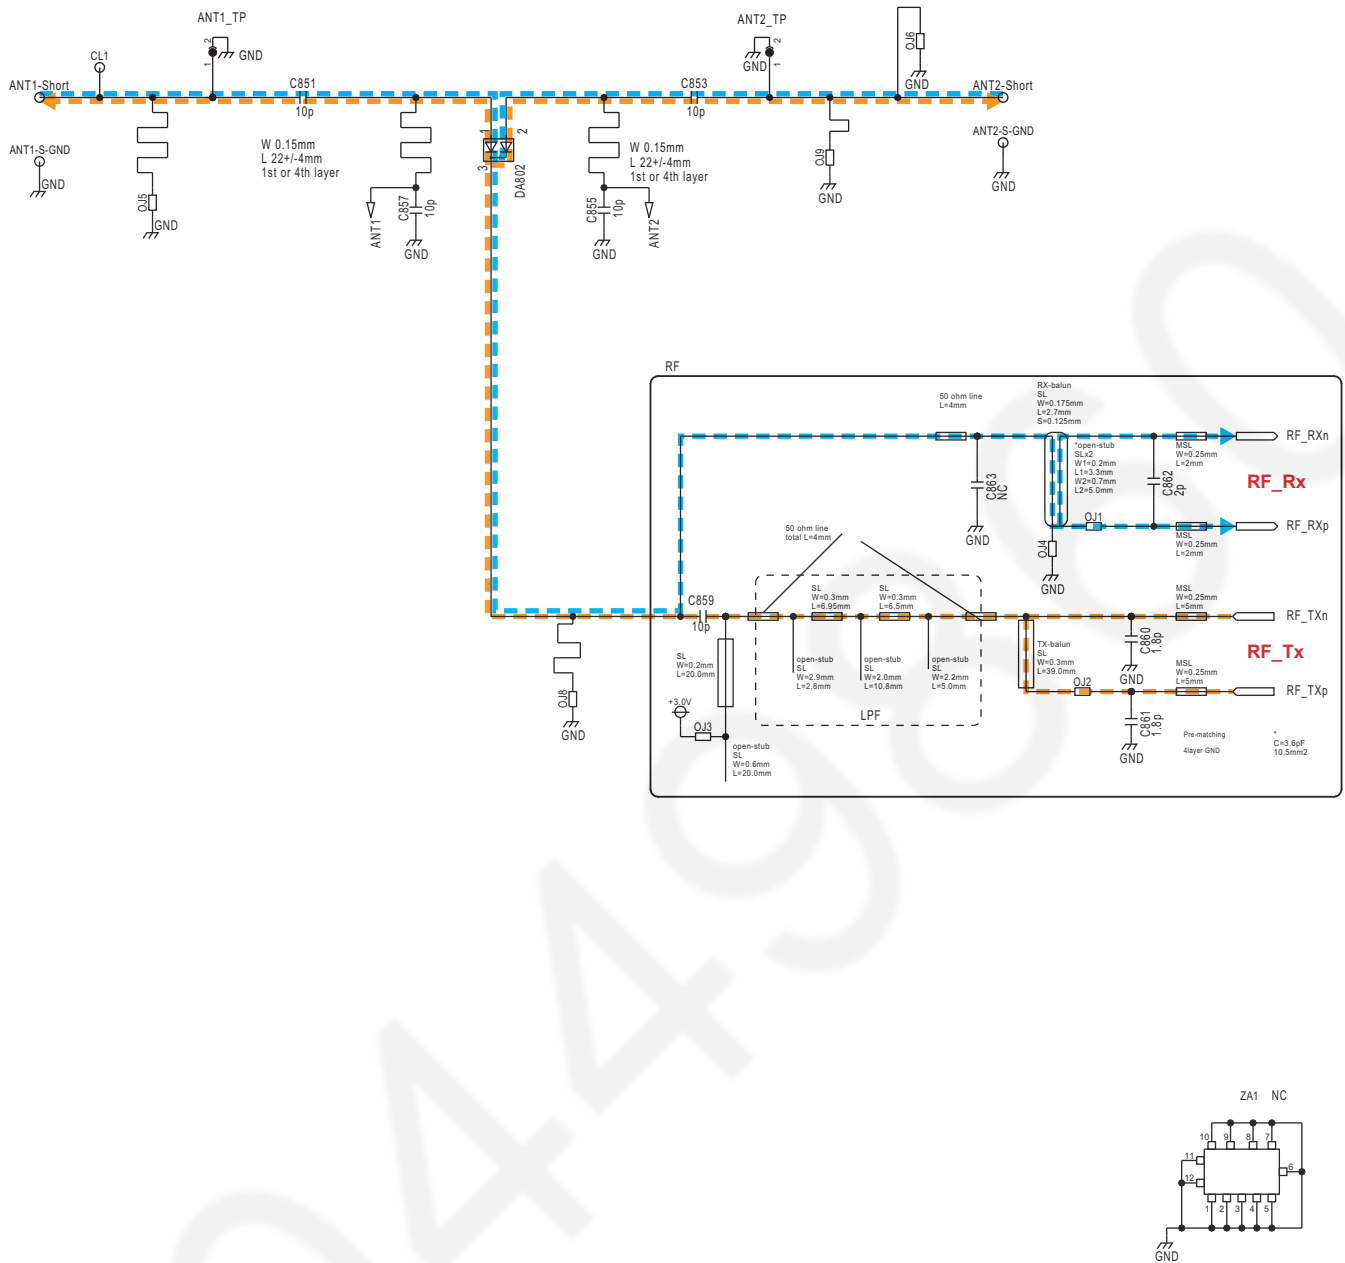


NC: No Components

KX-TGF372/373/374/375/TG585SK


SCHEMATIC DIAGRAM (Base Unit_RF)

14.4. Schematic Diagram (Base Unit_Operation)

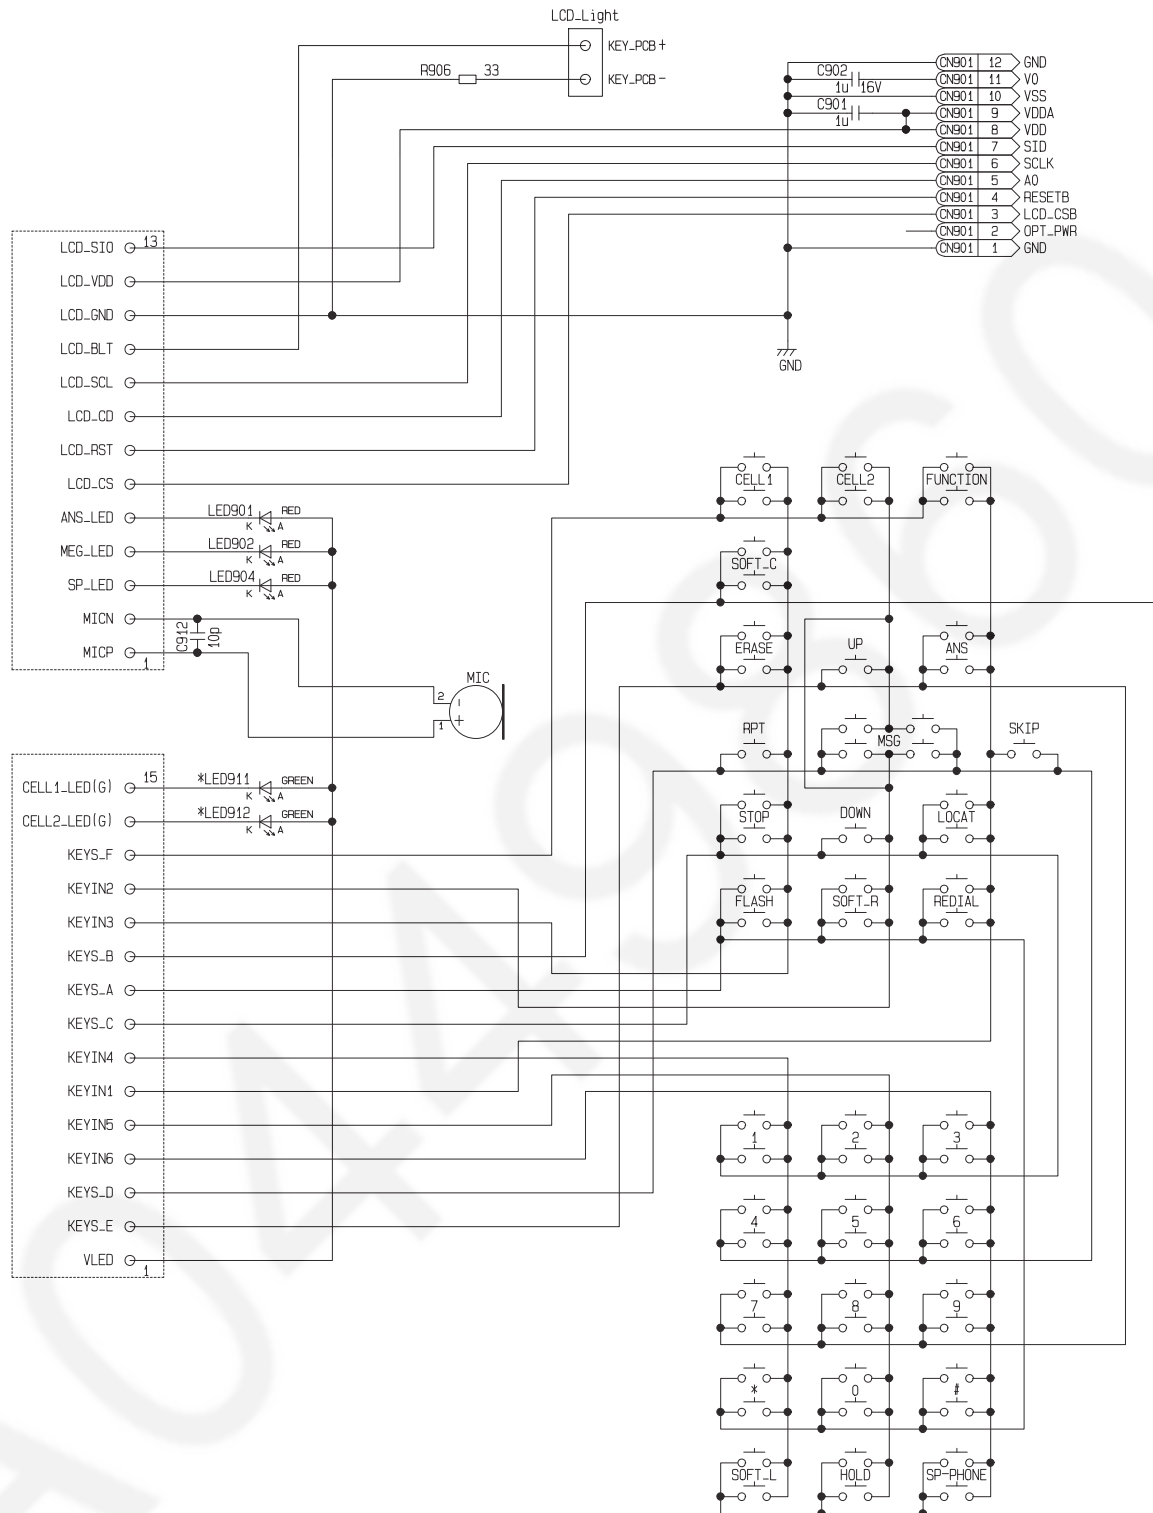


KX-TGF340/342/343/344/345/372/373/374/375/TG585SK
SCHEMATIC DIAGRAM (Base Unit_Operation)

14.5. Schematic Diagram (Base Unit_LED)

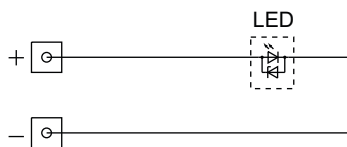


KX-TGF340/342/343/344/345/372/373/374/375/TG585SK SCHEMATIC DIAGRAM (Base Unit_LED)


14.6. Schematic Diagram (Handset_Main)

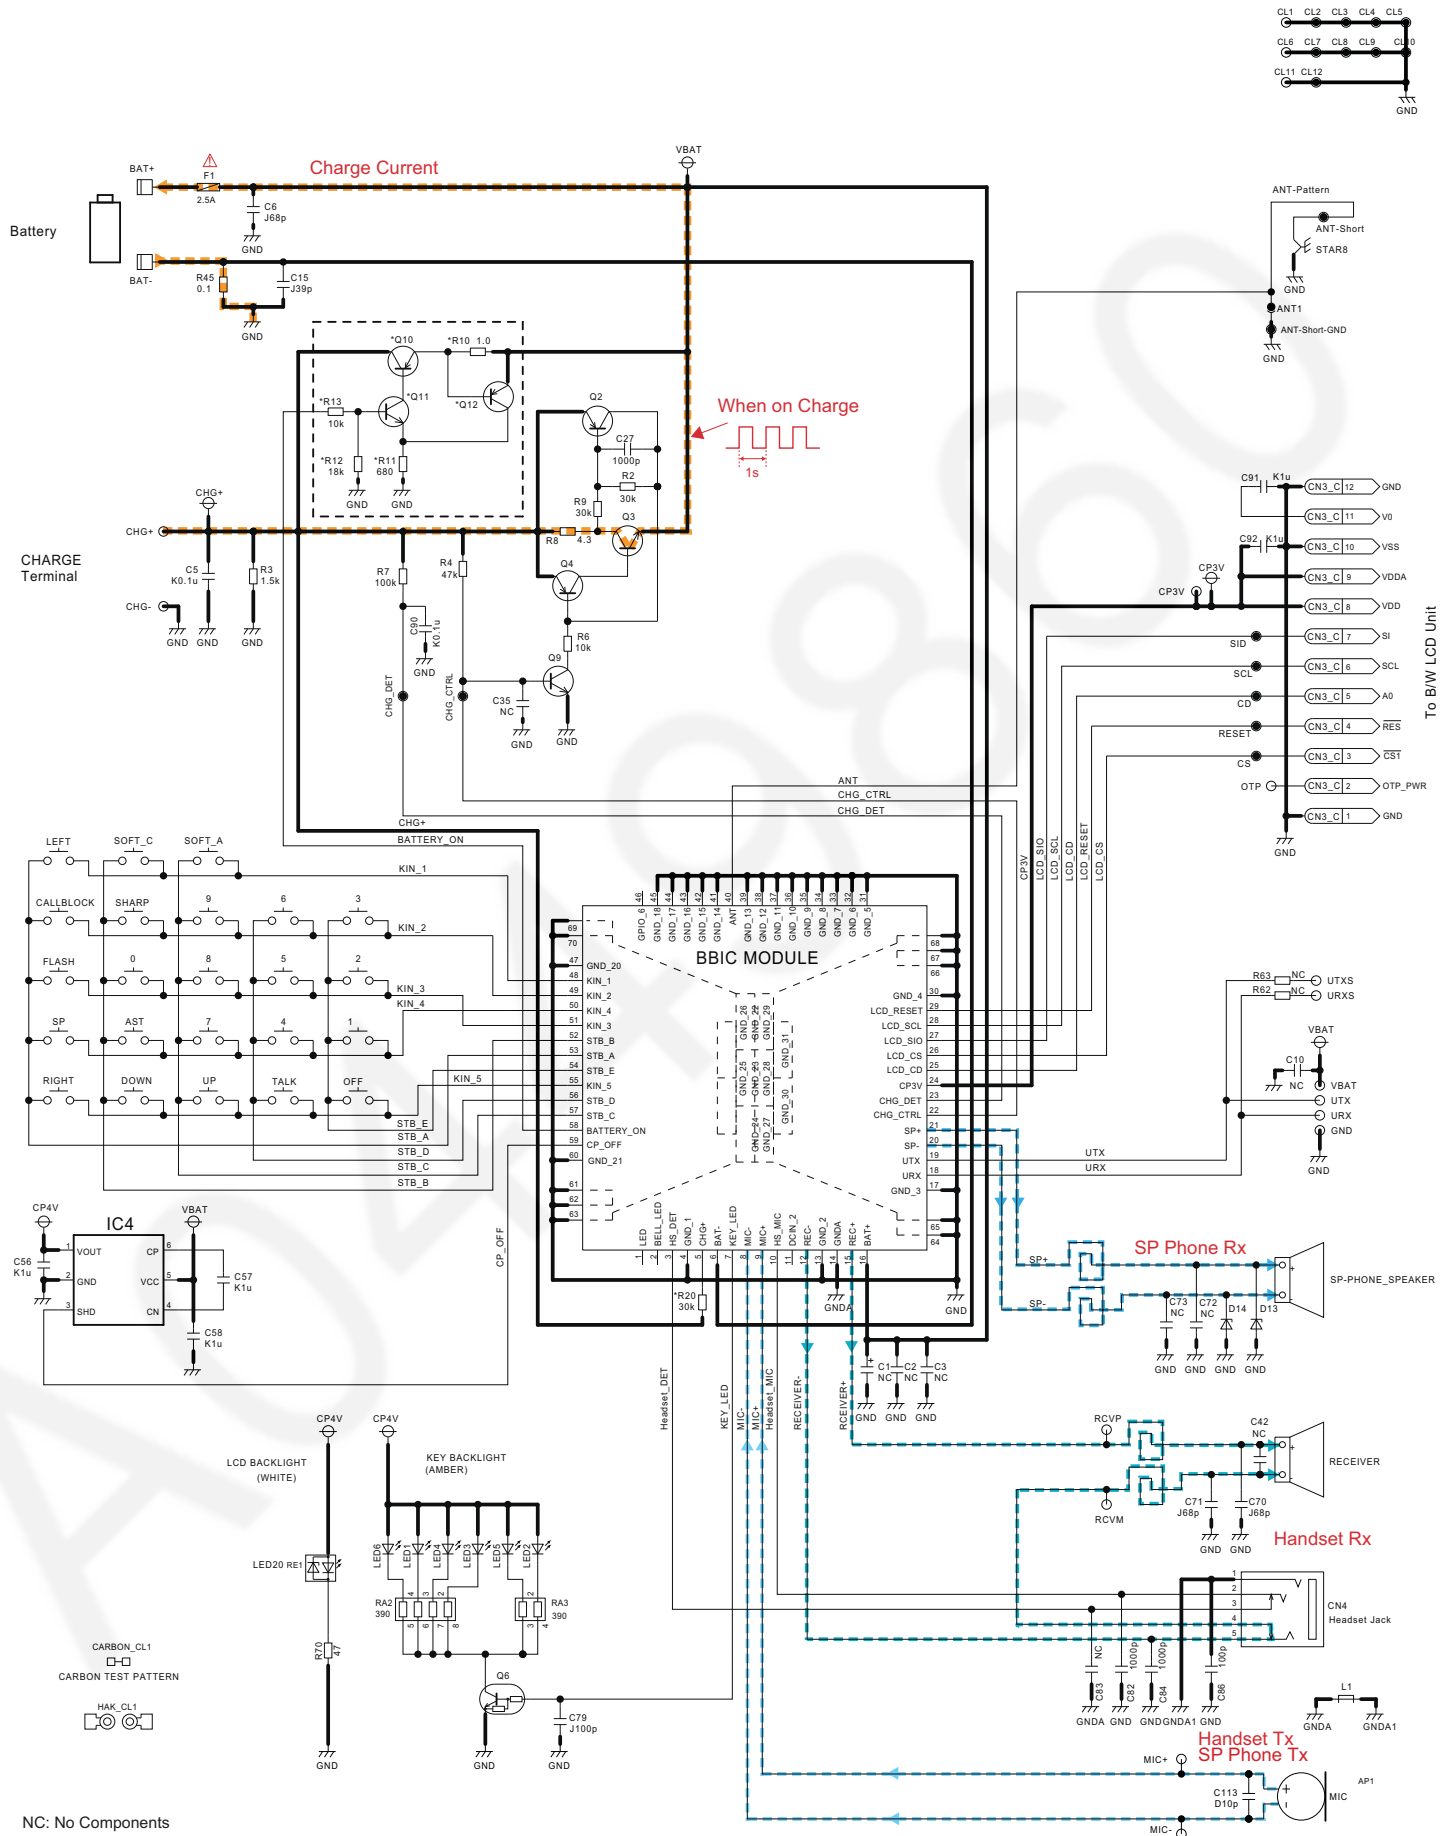

KX-TGFA30 SCHEMATIC DIAGRAM (Handset_Main)

14.7. Schematic Diagram (Handset_BBIC Module)

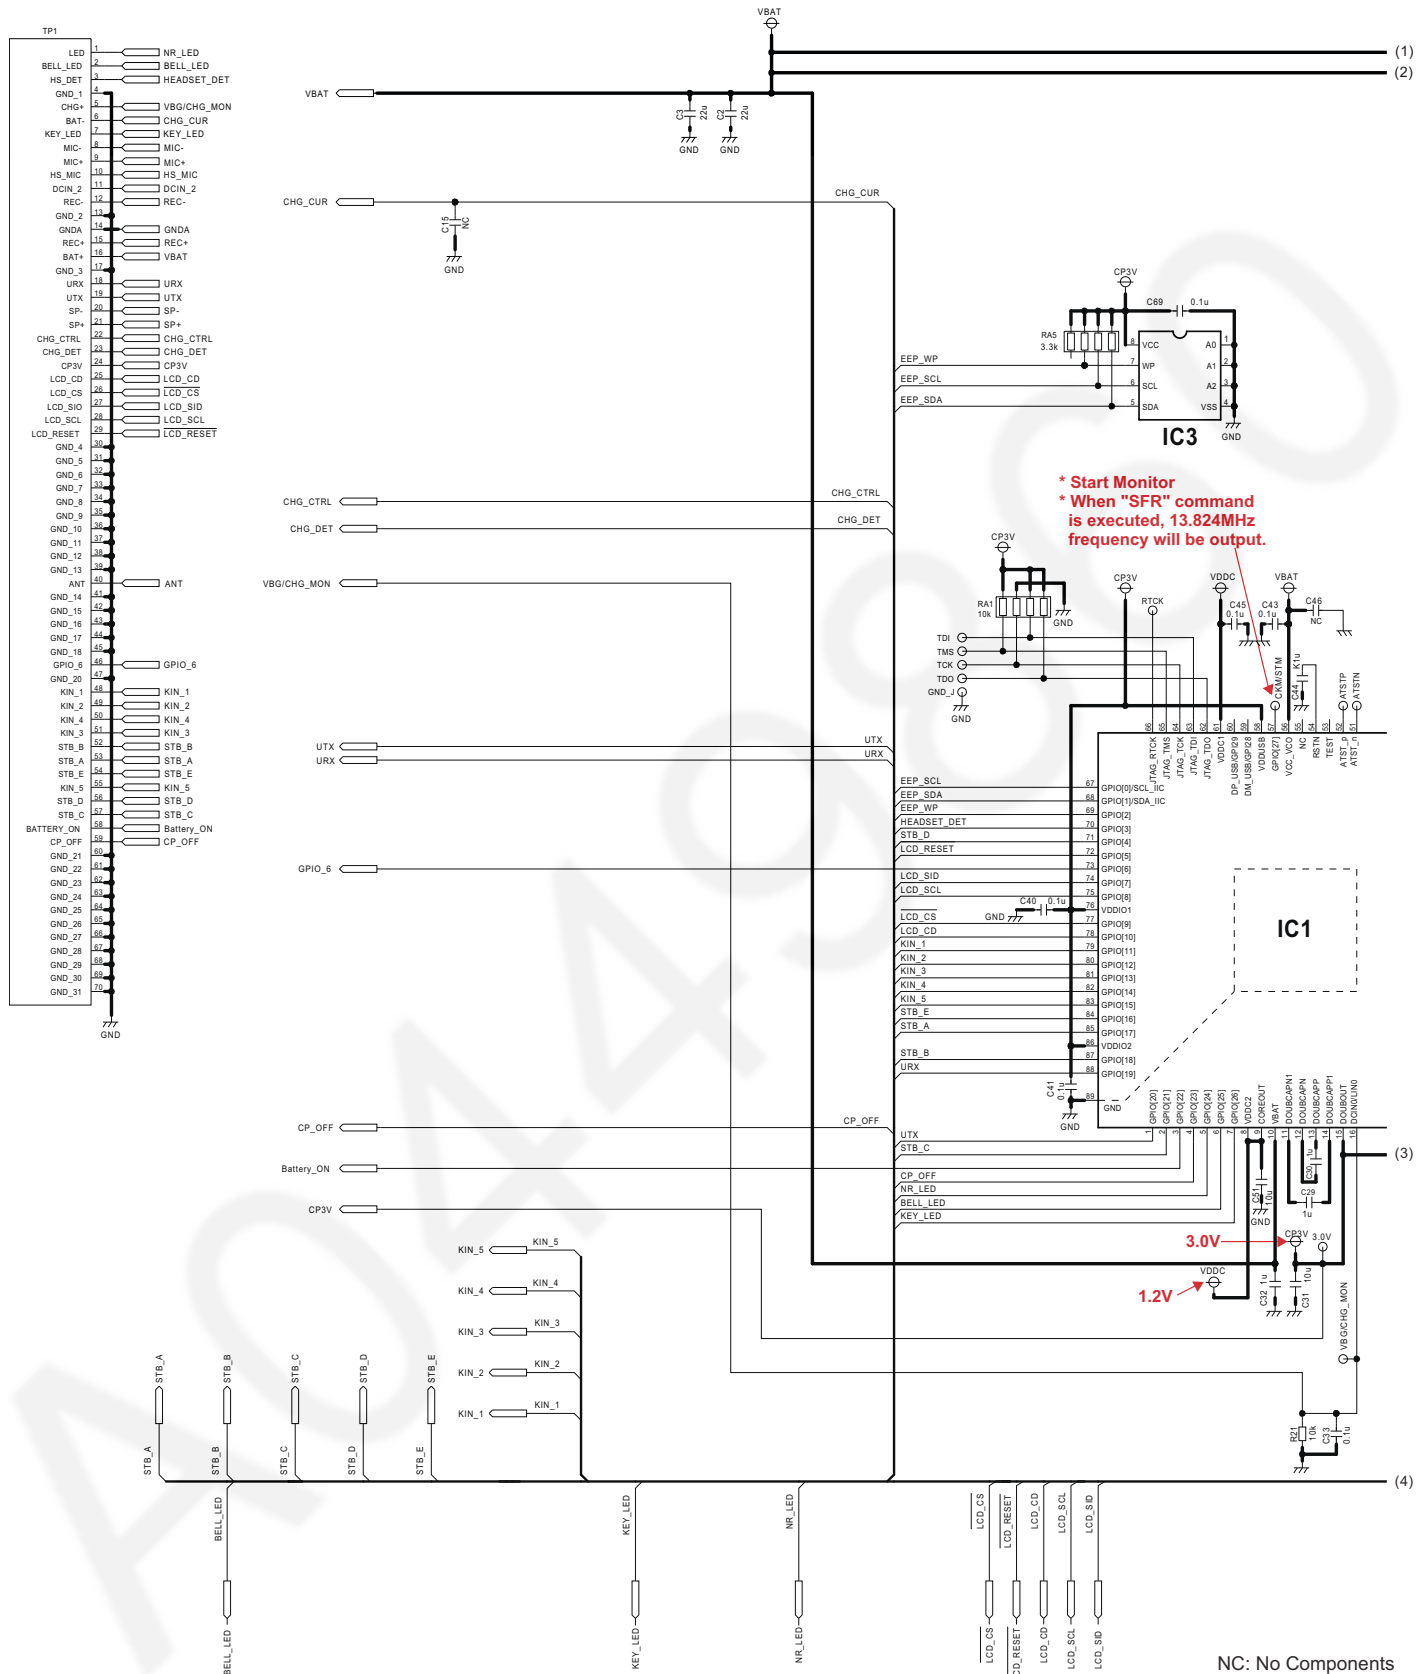

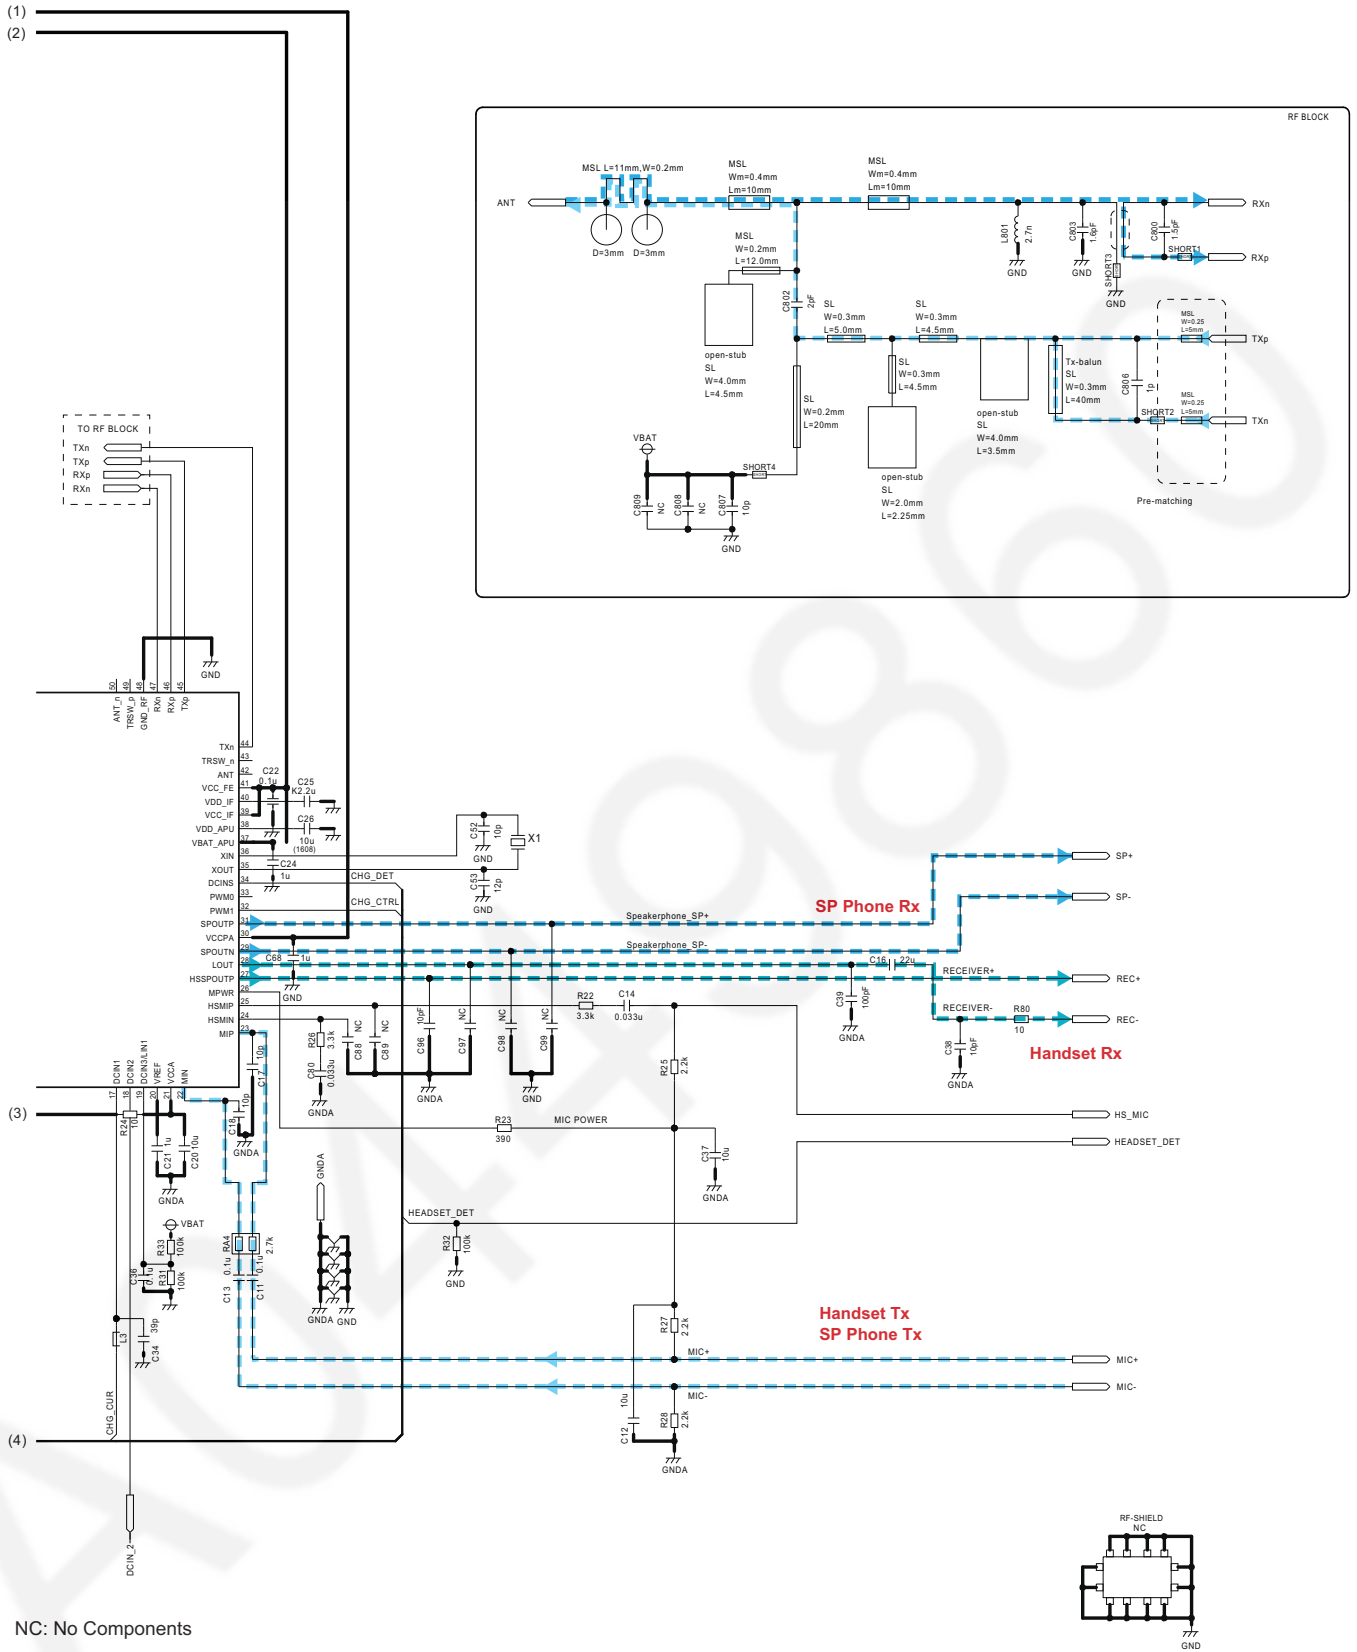


KX-TGFA30 SCHEMATIC DIAGRAM (Handset_BBIC Module)

Memo


15 Printed Circuit Board

15.1. Circuit Board (Base Unit_Main)


15.1.1. Component View

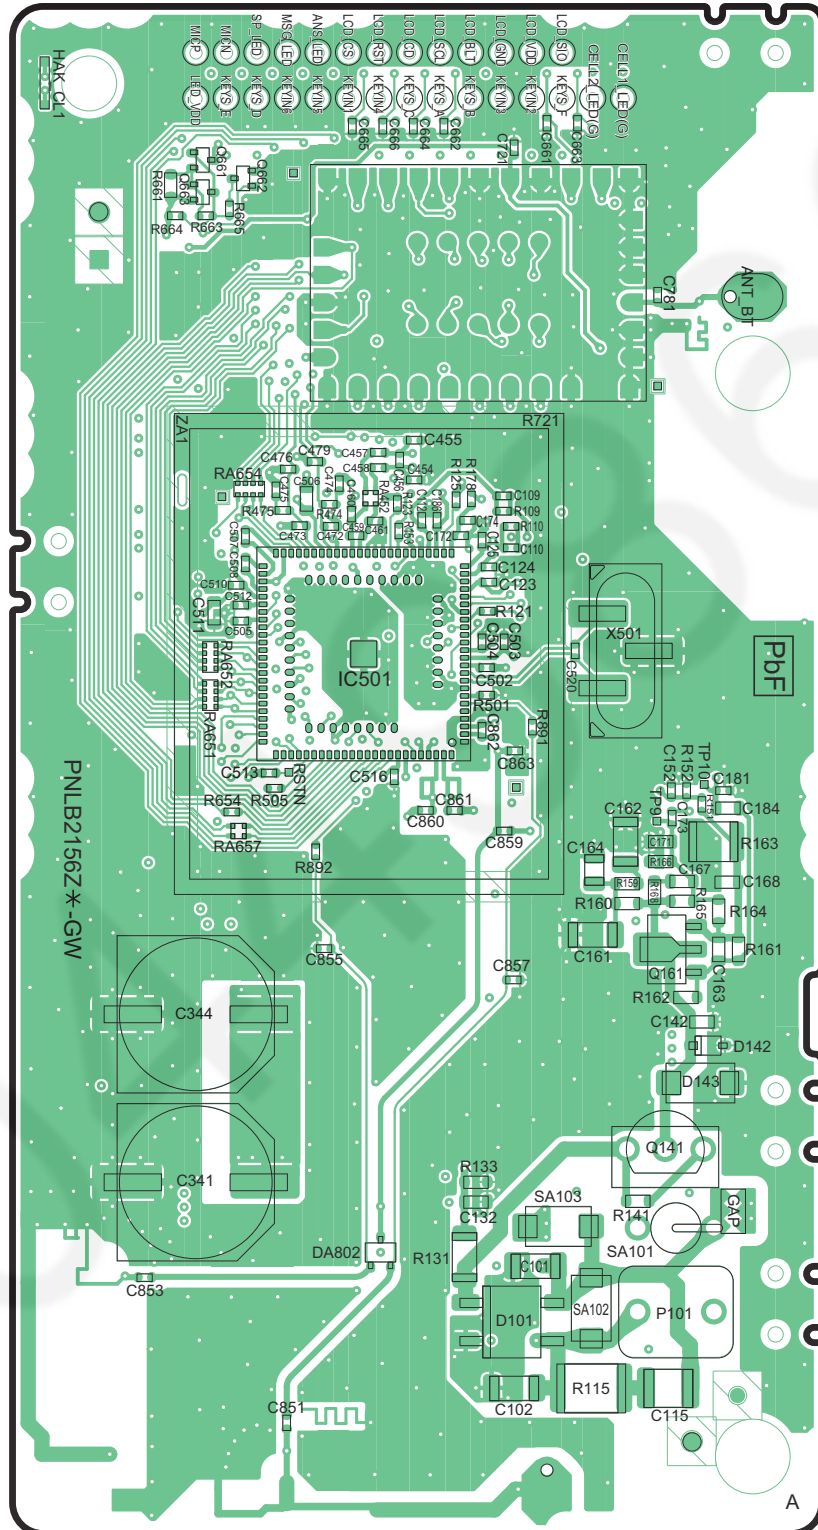

 KX-TGF340/342/343/344/345/372/373/374/375/TG585SK
CIRCUIT BOARD (Base Unit_Main (Component View))



15.2. Circuit Board (Base Unit_Operation)

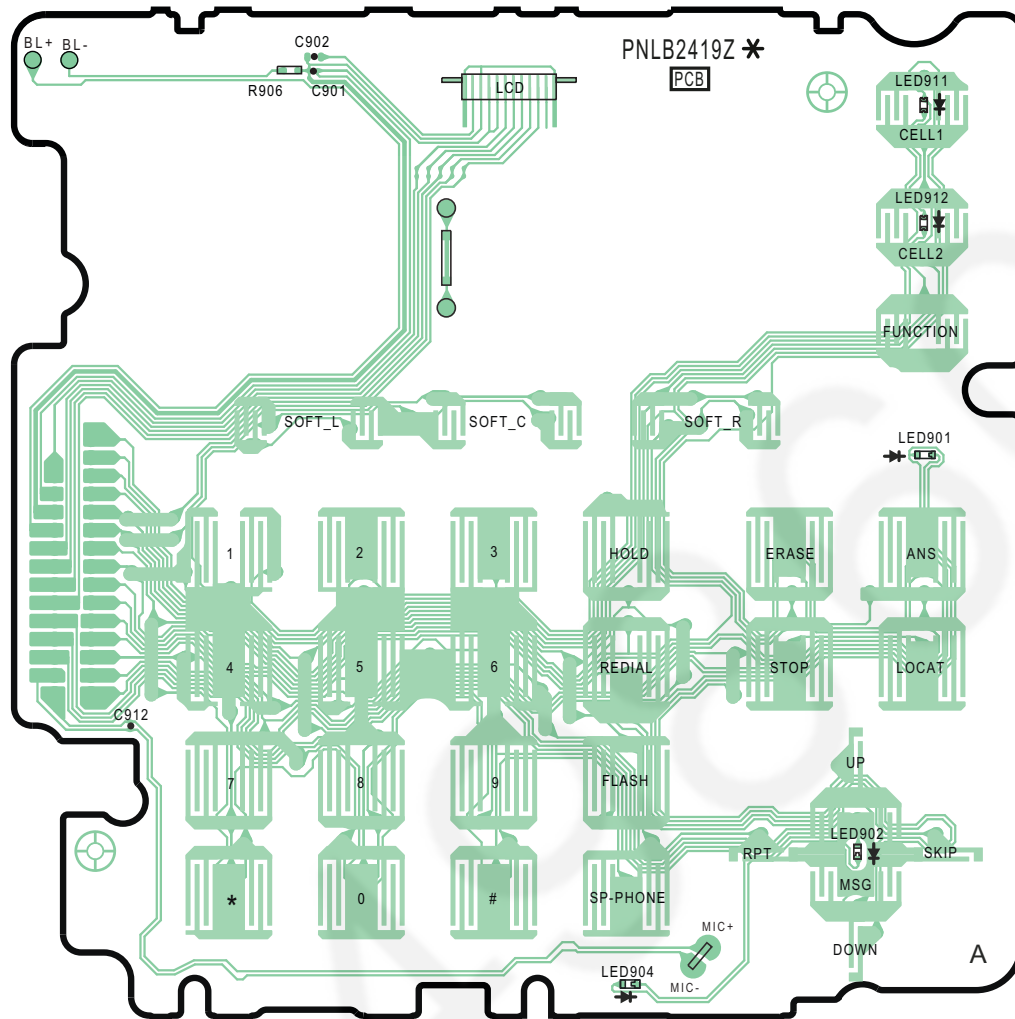

KX-TGF340/342/343/344/345/372/373/374/375/TG585SK
CIRCUIT BOARD (Base Unit_Operation (Component View))


15.3. Circuit Board (Base Unit_LED)



KX-TGF340/342/343/344/345/372/373/374/375/TG585SK
CIRCUIT BOARD (Base Unit_LED (Component View))

Memo


15.4.2. Bottom View

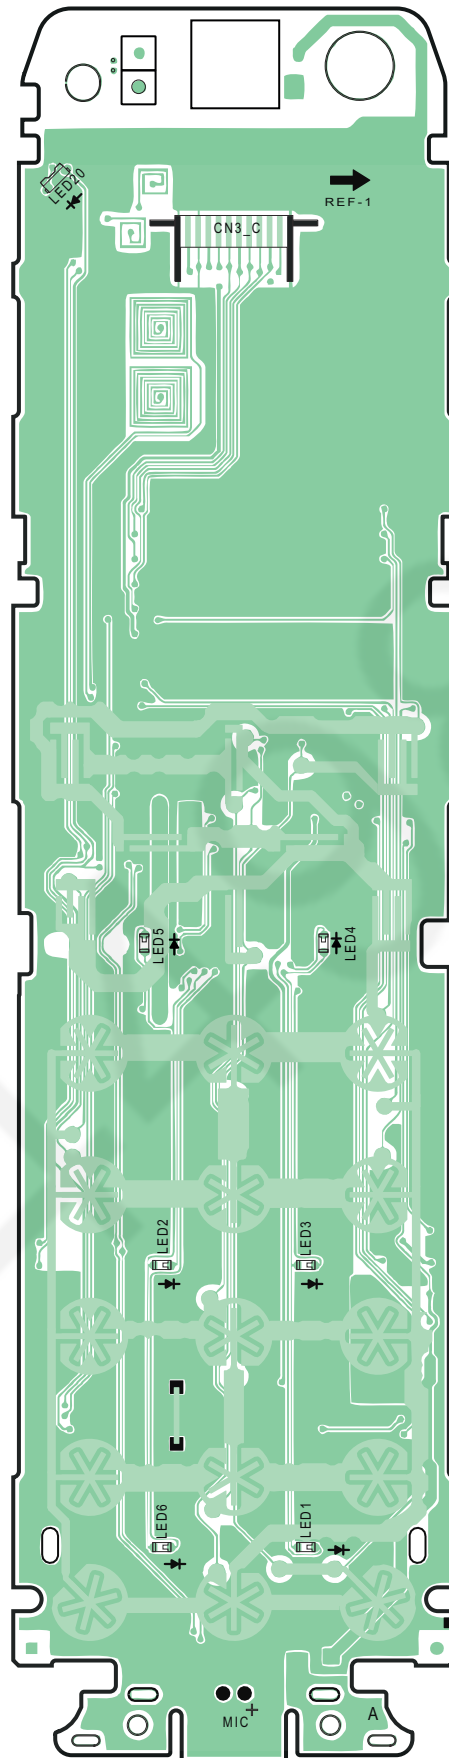

KX-TGFA30 CIRCUIT BOARD (Handset_Main (Bottom View))

15.5. Circuit Board (Handset_BBIC Module)


15.5.1. Component View

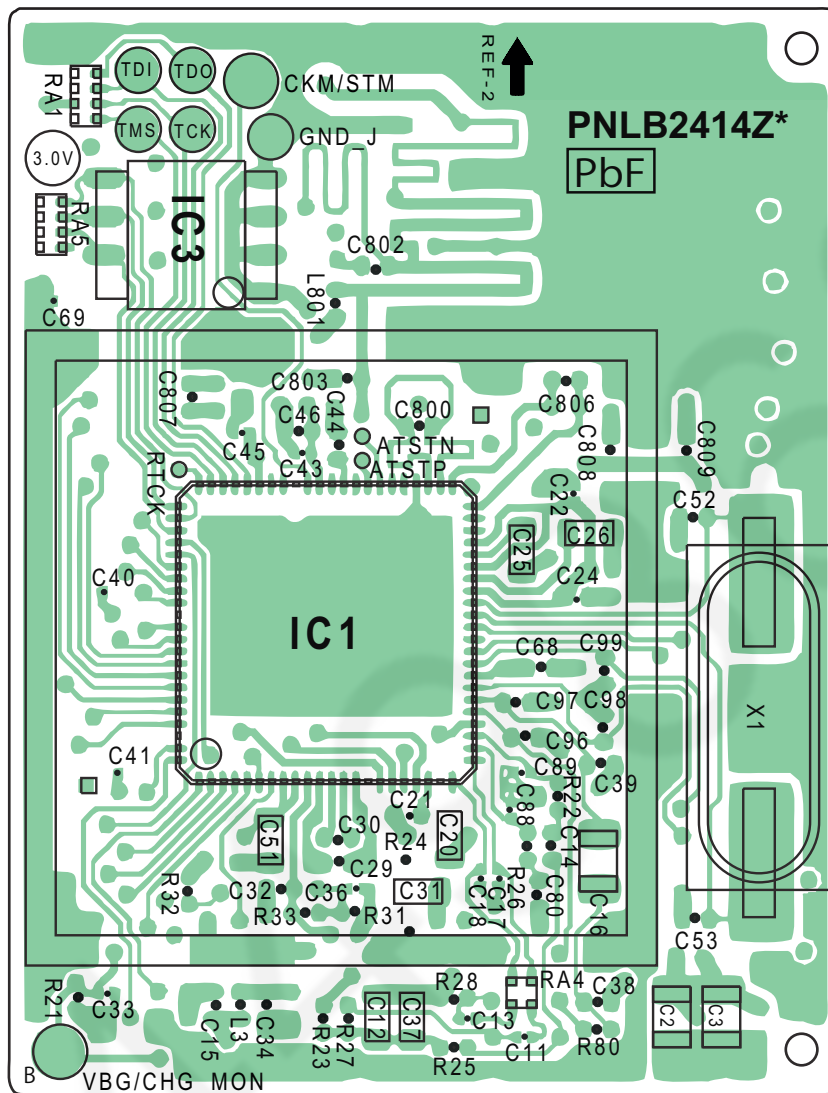

KX-TGFA30 CIRCUIT BOARD (Handset_BBIC Module (Component View))

16 Exploded View and Replacement Parts List

16.1. Cabinet and Electrical Parts (Base Unit)

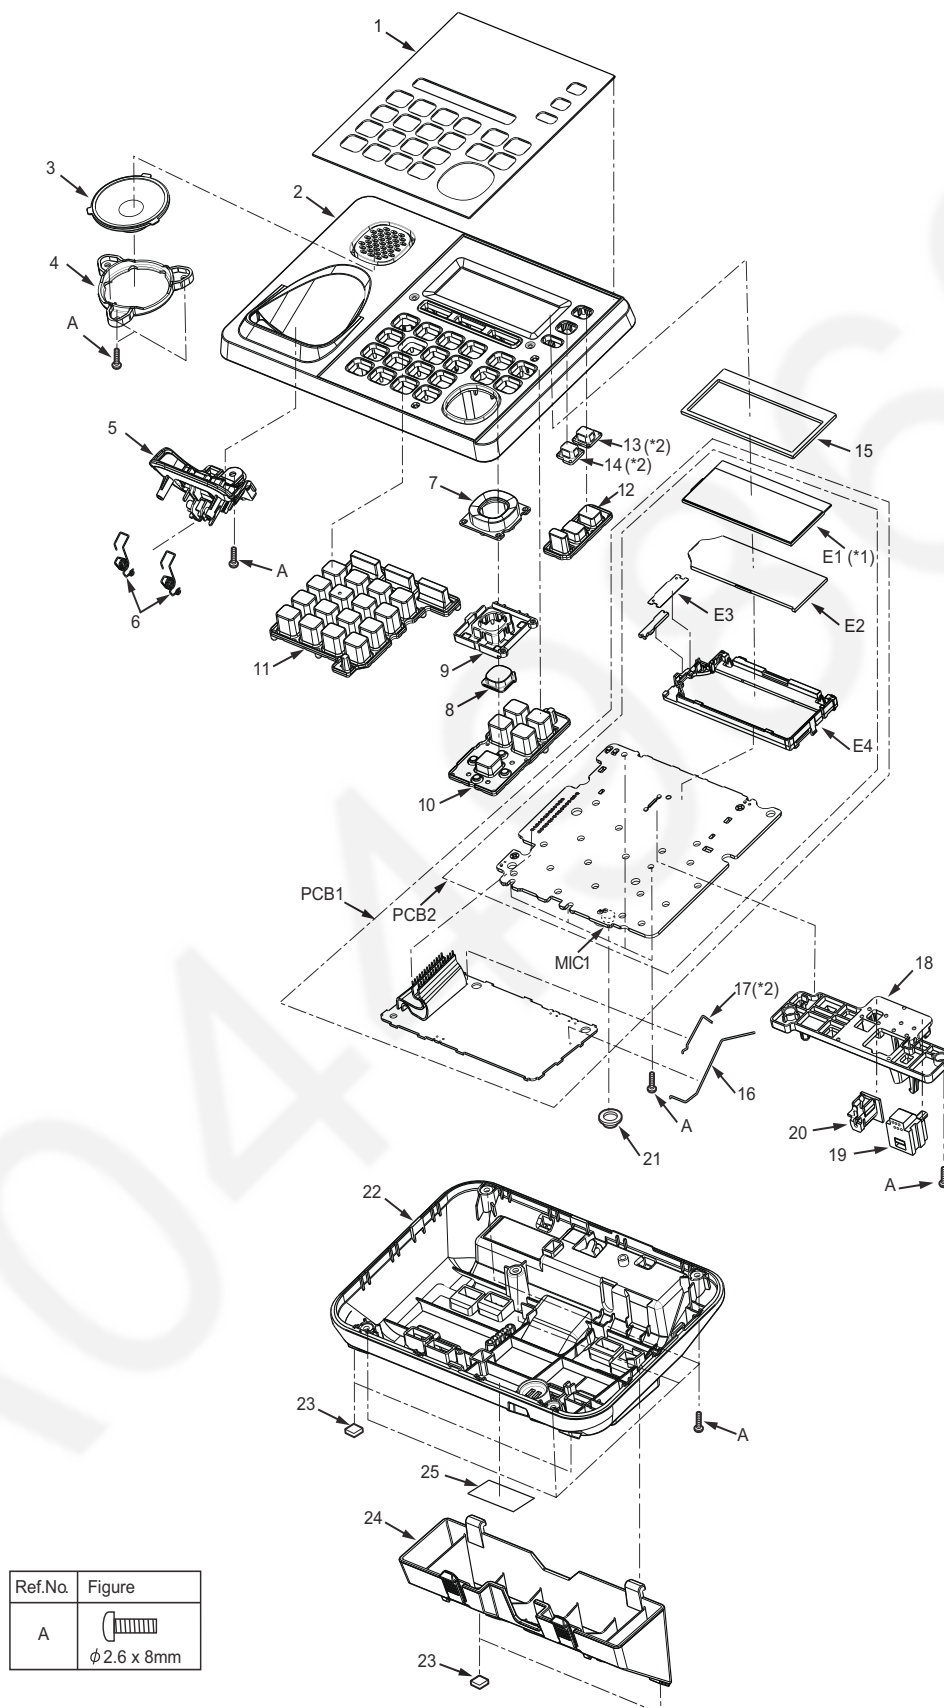


Note:

(*1) This cable is fixed by heat-sealing. Refer to **How to Replace the Base unit LCD** (P.56).

(*2) KX-TGF372/KX-TGF373/KX-TGF374/KX-TGF375/KX-TG585SK


16.2. Cabinet and Electrical Parts (Handset)

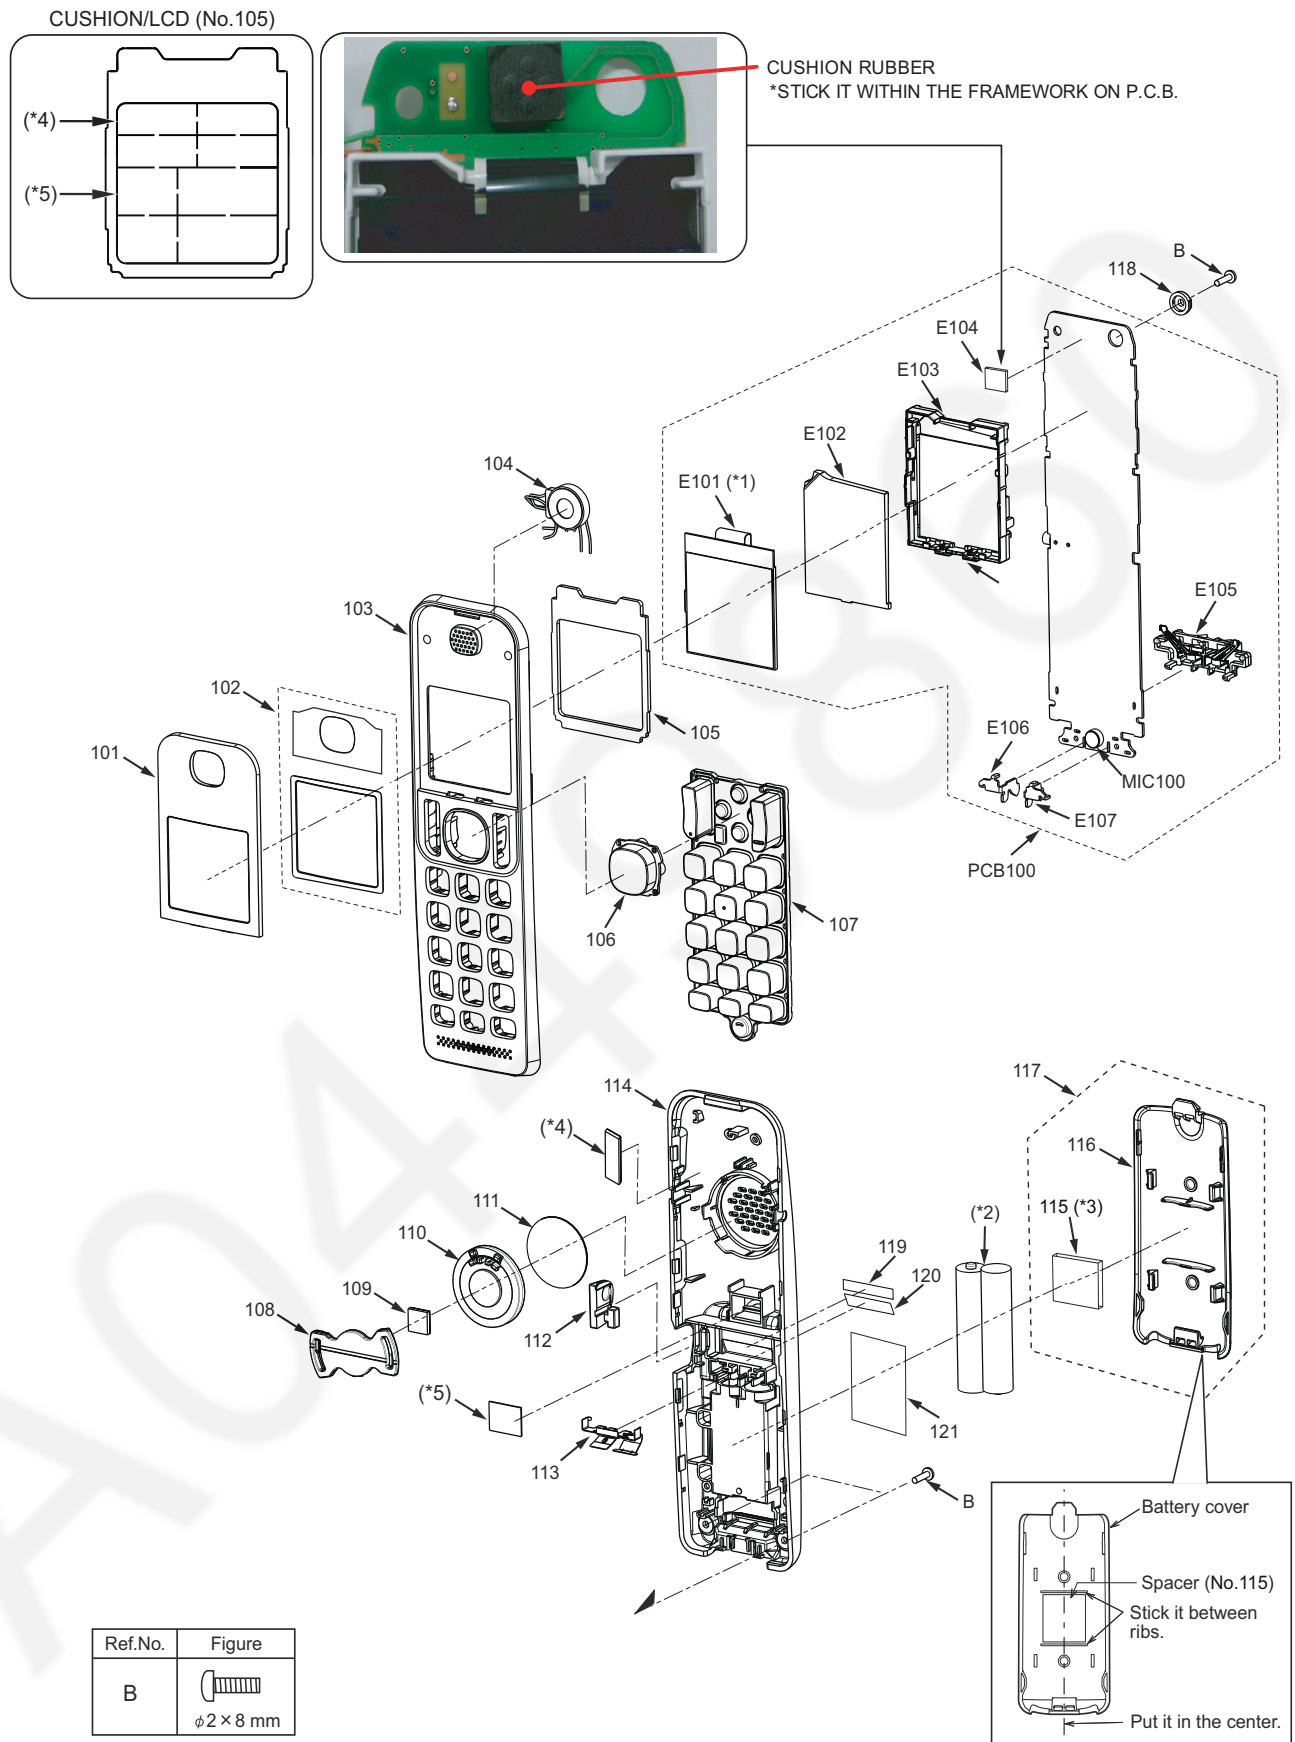

Note:


- (*1) This cable is fixed by heat-sealing. Refer to **How to Replace the Handset LCD (P.58)**.
- (*2) The rechargeable Ni-MH battery HHR-4DPA is available through sales route of Panasonic.
- (*3) Attach the SPACER (No. 115) to the exact location described above.
- (*4)(*5) This SPACER is cut from the excess parts of CUSHION/LCD (No.105).

16.3. Cabinet and Electrical Parts (Charger Unit)

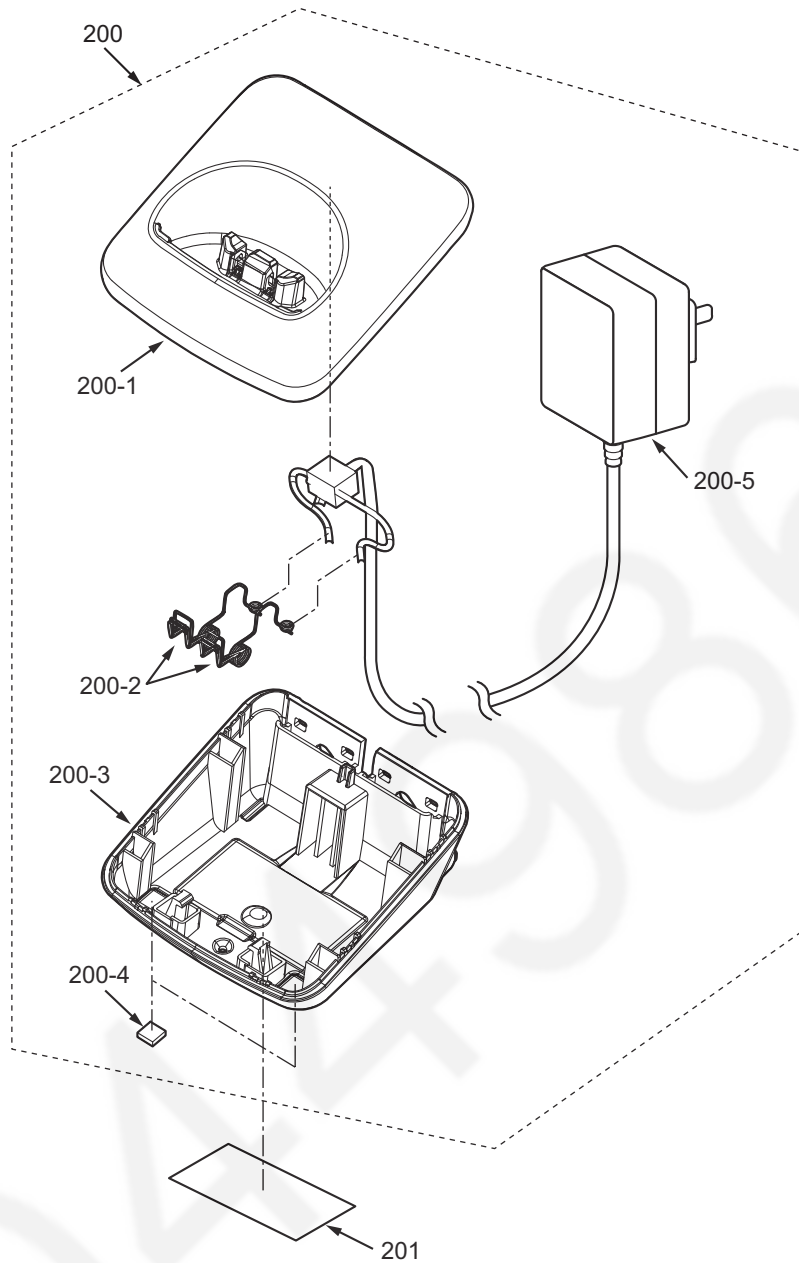

16.4. Accessories and Packing Materials

16.4.1. KX-TGF340B

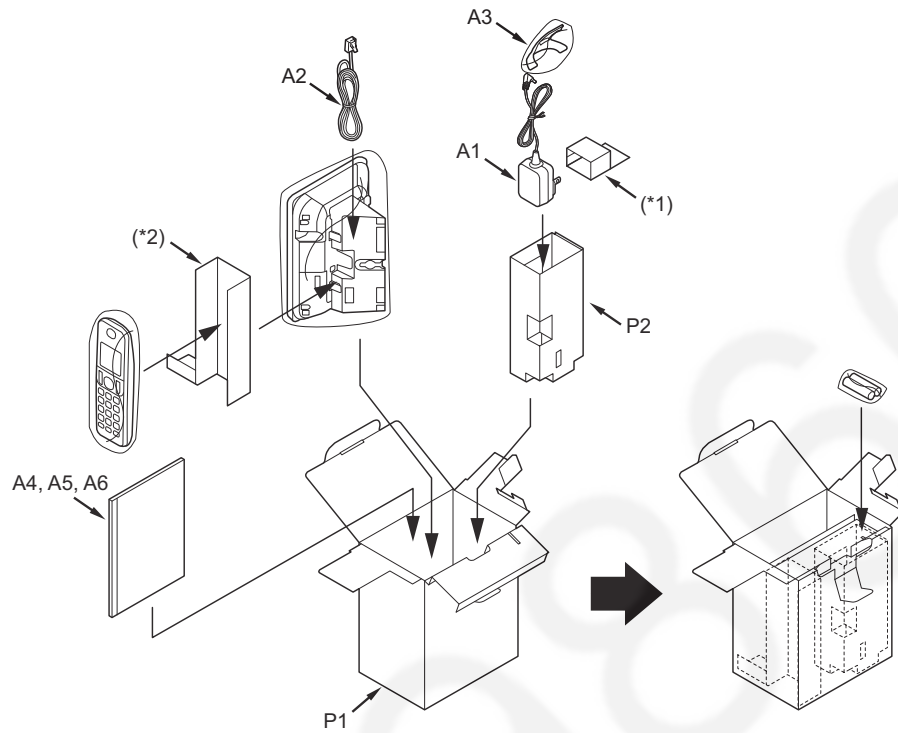


Note:

(*1) This pad is a piece of Ref No.P1 (Gift box). This pad is for AC Adaptor.

(*2) This pad is a piece of Ref No.P2 (Pad).

16.4.2. KX-TGF342B

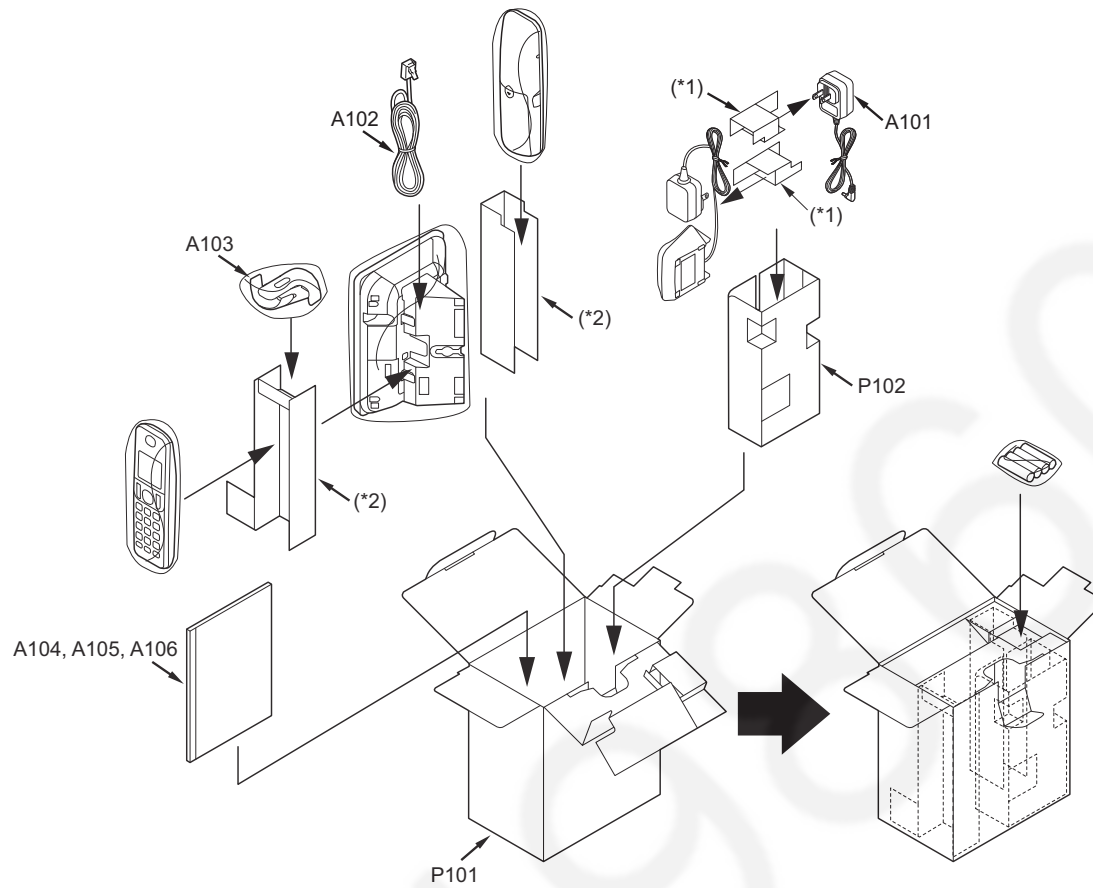


Note:


(*1) This pad is a piece of Ref No.P102 (Pad). This pad is for AC Adaptor.

(*2) This pad is a piece of Ref No.P102 (Pad).

16.4.3. KX-TGF343B

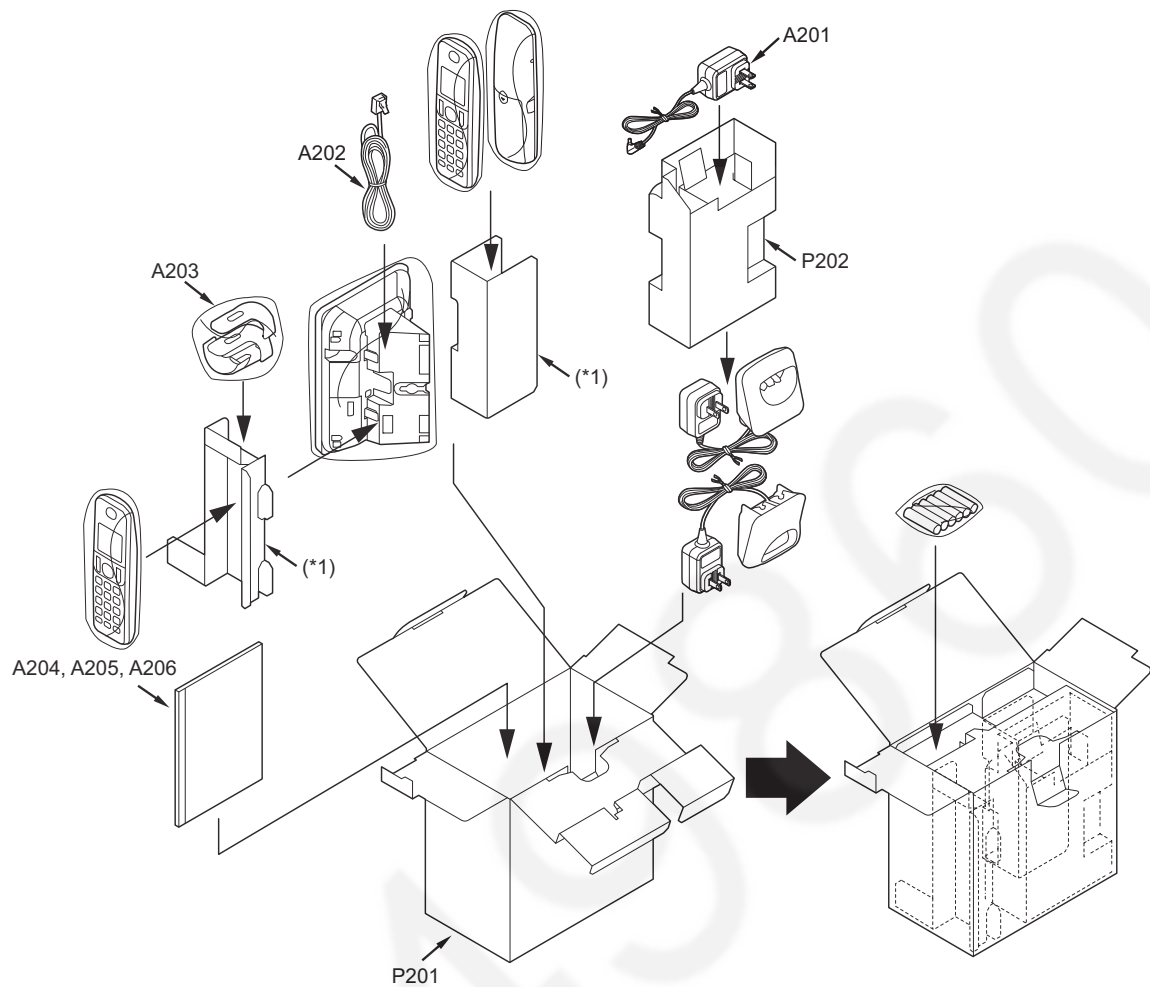


16.4.4. KX-TGF344B

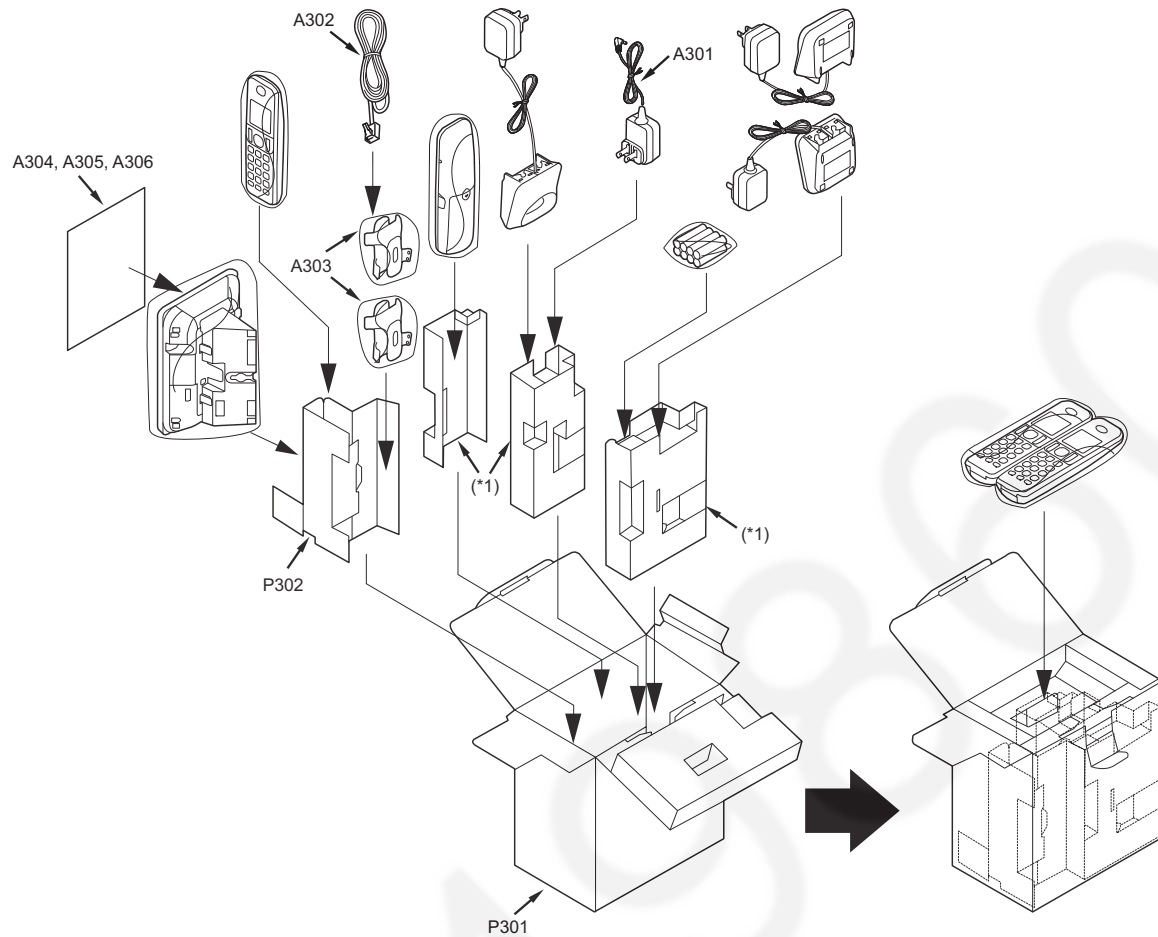

Note:

(*1) This pad is a piece of Ref No.P302 (Pad).


16.4.5. KX-TGF345B

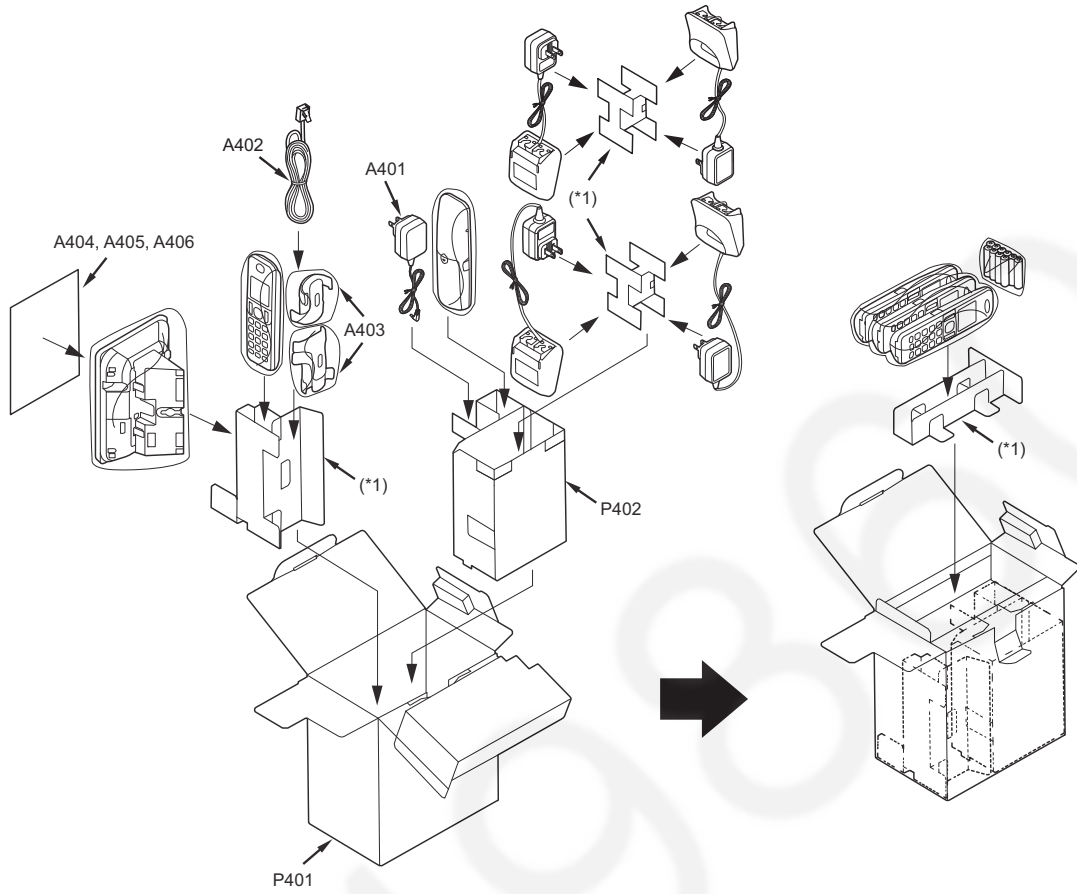

Note:

(*1) This pad is a piece of Ref No.P402 (Pad).

16.4.6. KX-TGF372S

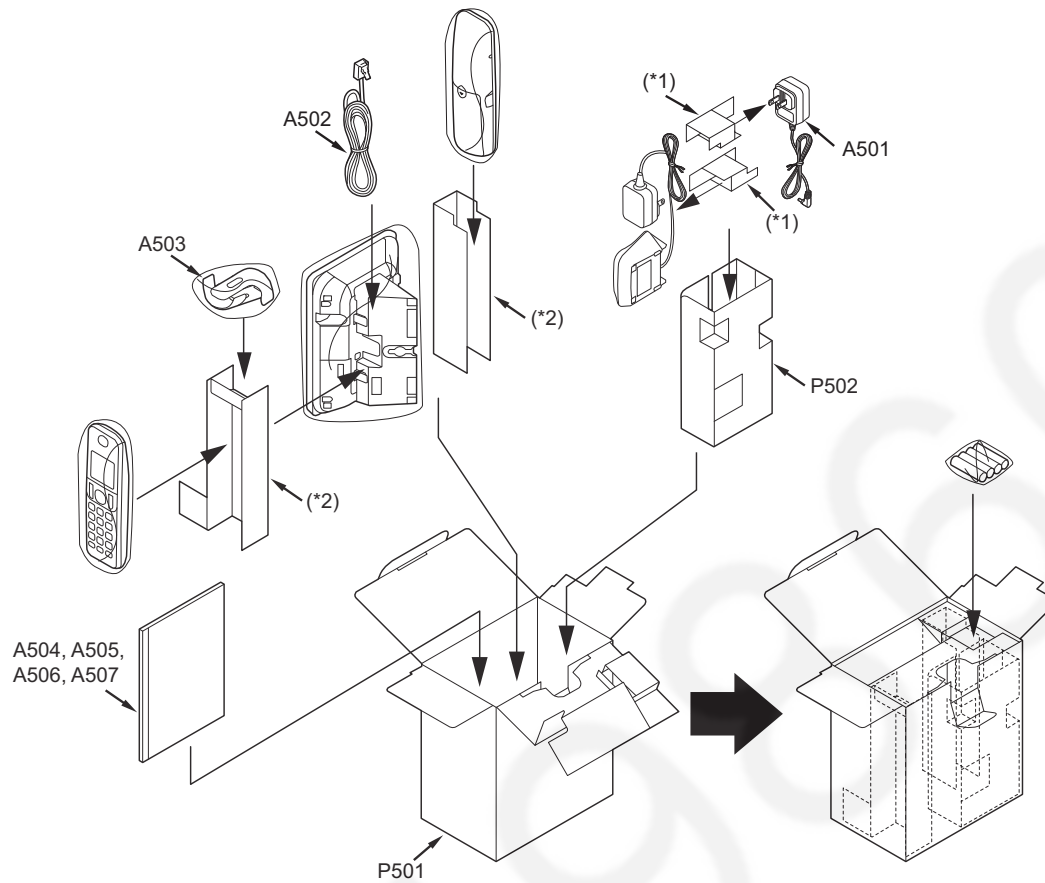


Note:

(*1) This pad is a piece of Ref No.P502 (Pad). This pad is for AC Adaptor.

(*2) This pad is a piece of Ref No.P502 (Pad).


16.4.7. KX-TGF373S

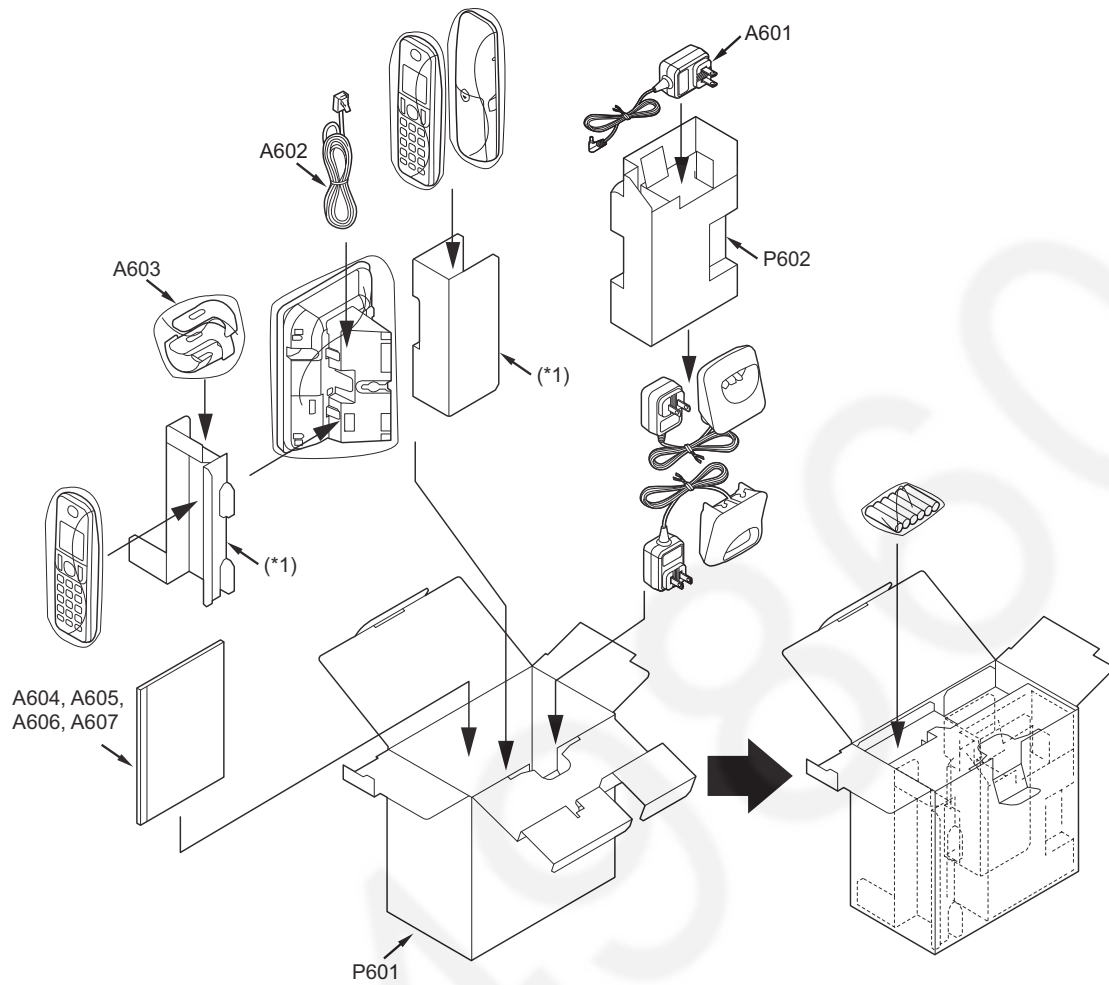

Note:

(*1) This pad is a piece of Ref No.P602 (Pad).


16.4.8. KX-TGF374S

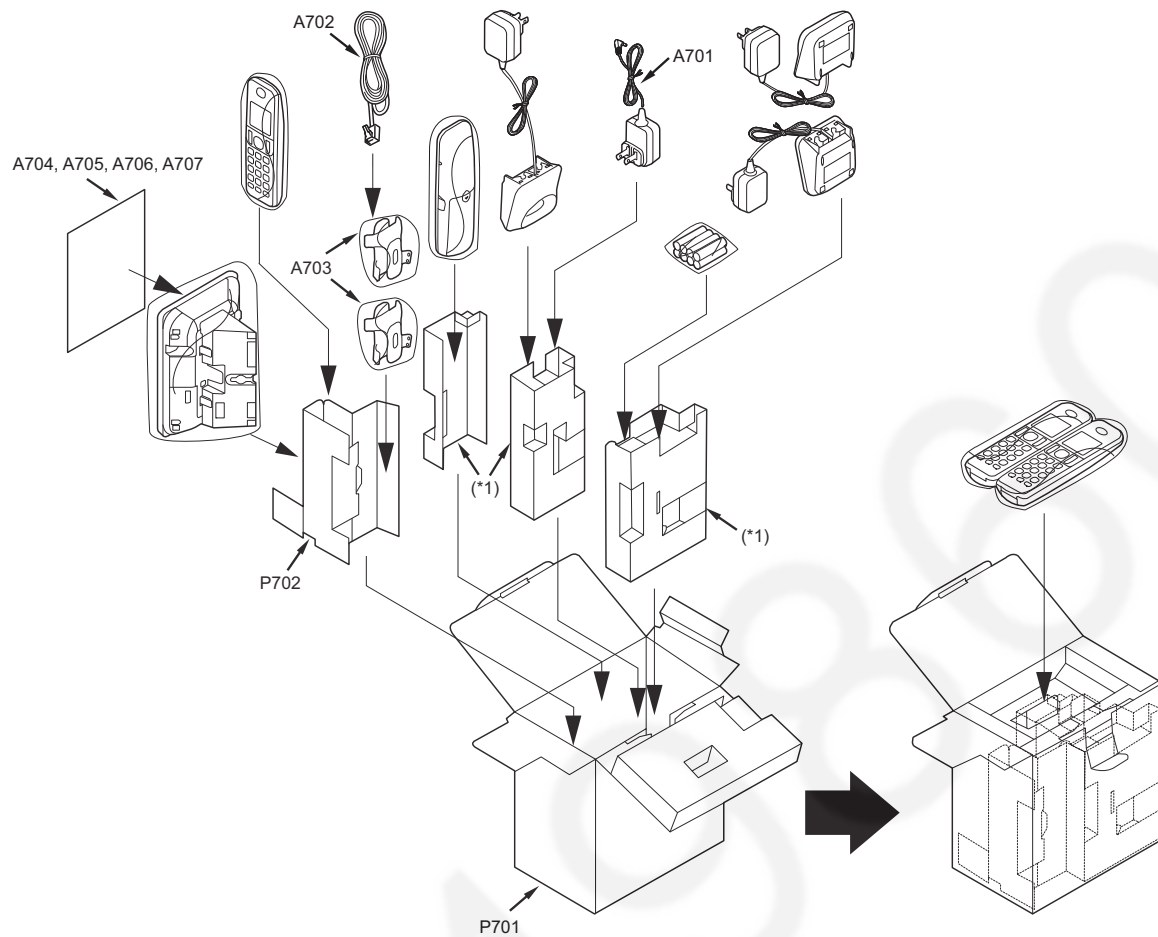

Note:

(*1) This pad is a piece of Ref No.P702 (Pad).


16.4.9. KX-TGF375S

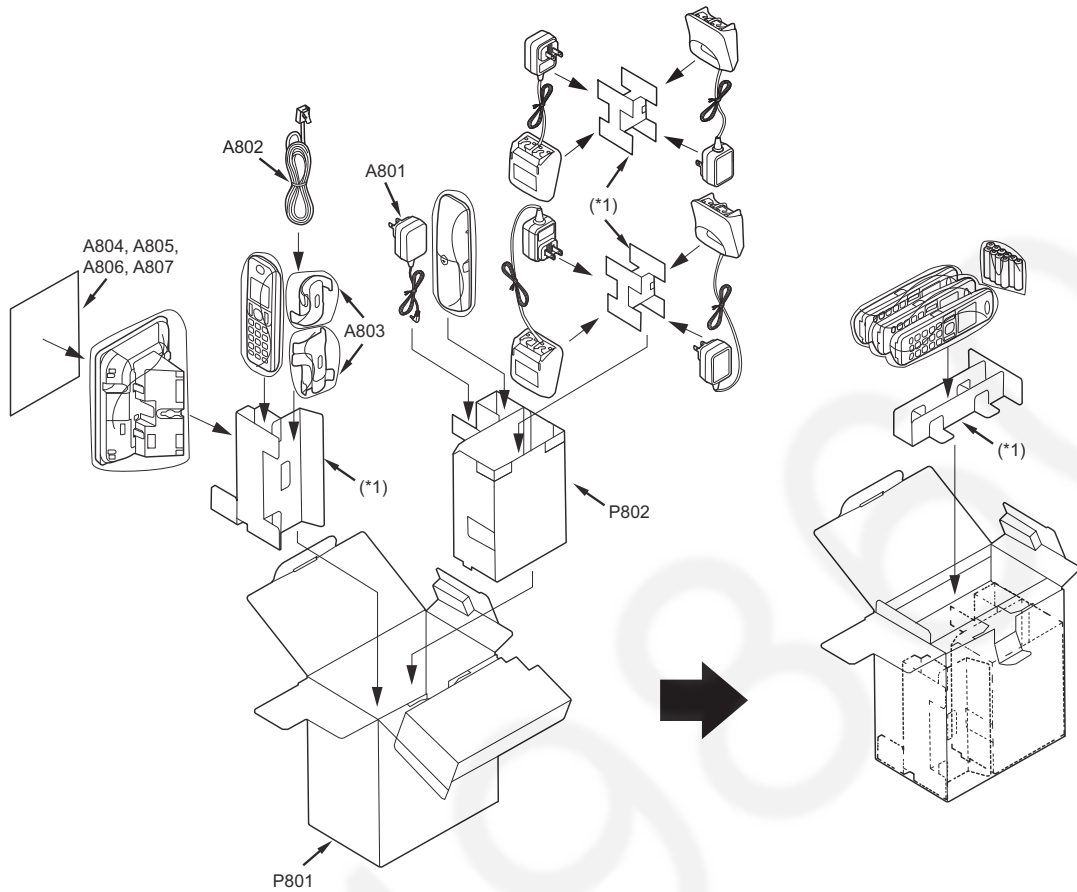


Note:

(*1) This pad is a piece of Ref No.P802 (Pad).

16.4.10. KX-TG585SK

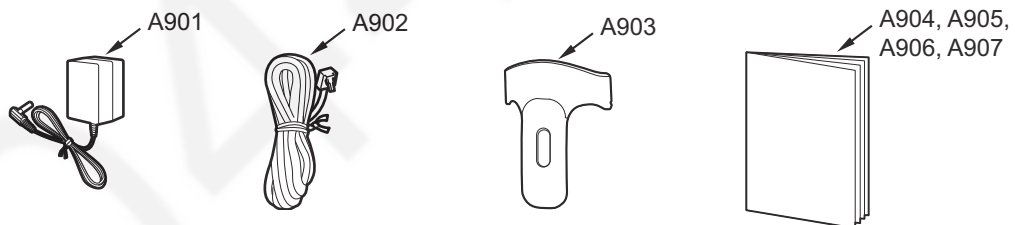


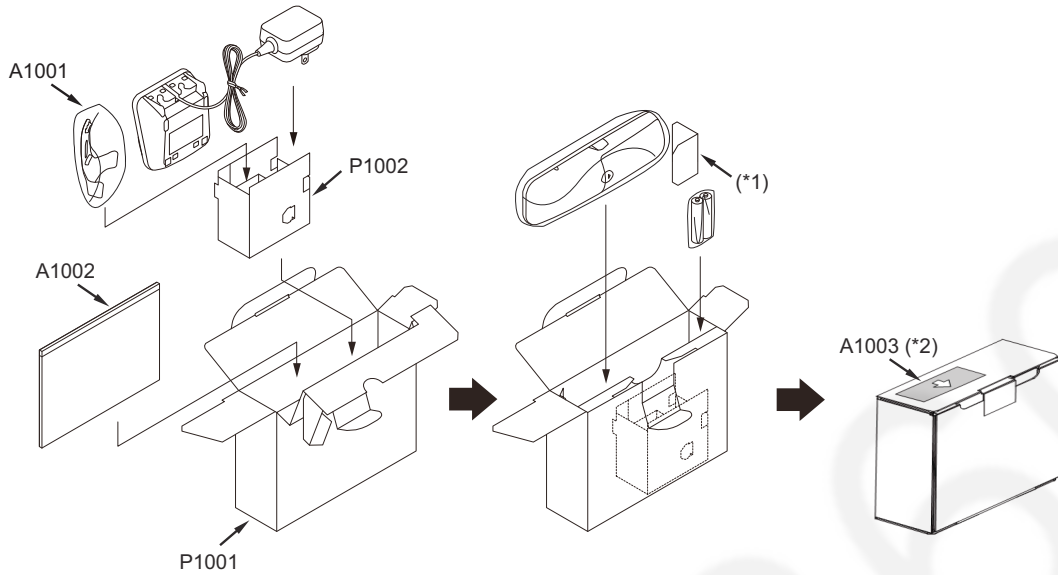16.4.11. KX-TGFA30B

Note:

(*1) This pad is a piece of Ref No.P1001 (Gift box).

(*2) Stick it on position of printing relation to set color.

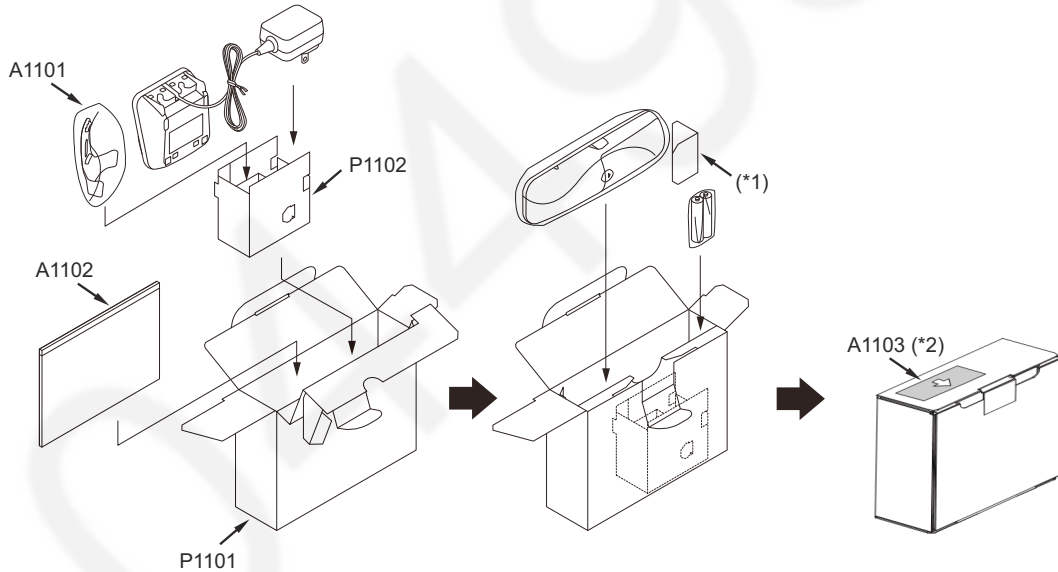
16.4.12. KX-TGFA30S

Note:

(*1) This pad is a piece of Ref No.P1101 (Gift box).

(*2) Stick it on position of printing relation to set color.

16.4.13. KX-TGFA30M

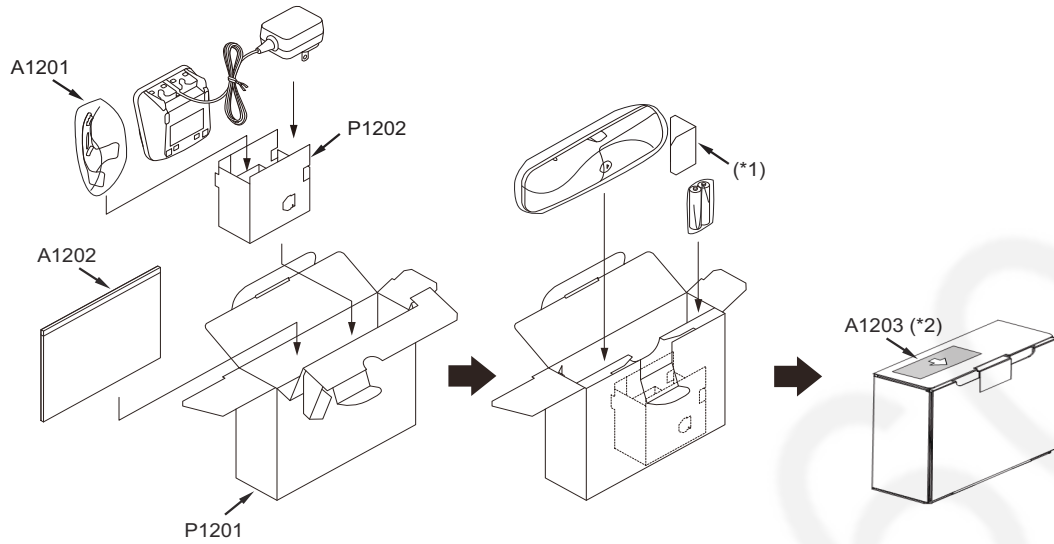

Note:

(*1) This pad is a piece of Ref No.P1201 (Gift box).

(*2) Stick it on position of printing relation to set color.

16.5. Replacement Parts List

1. RTL (Retention Time Limited)

Note:

The "RTL" marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time.

This period of time depends on the type of item, and the local laws governing parts and product retention. At the end of this period, the item will no longer be available.

2. Important safety notice

Components identified by the Δ mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

3. The S mark means the part is one of some identical parts.

For that reason, it may be different from the installed part.

4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.

5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) k=1000 Ω , M=1000k Ω

All capacitors are in MICRO FARADS (μ F) p= μ μ F

*Type & Wattage of Resistor

Type

ERC:Solid	ERX:Metal Film	PQ4R:Chip
ERDS:Carbon	ERG:Metal Oxide	ERS:Fusible Resistor
ERJ:Chip	ER0:Metal Film	ERF:Cement Resistor

Wattage

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W
------------	------------	---------	------	------	------

*Type & Voltage Of Capacitor

Type

ECFD:Semi-Conductor	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic
ECQS:Styrol	ECQE,ECQV,ECQG:Polyester
ECUV,PQCUV, ECUE:Chip	ECEA,ECST,EEE:Electlytic
ECQMS:Mica	ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others		
1H:50V	05:50V	0F:3.15V	0J :6.3V	1V :35V	
2A:100V	1:100V	1A:10V	1A :10V	50,1H:50V	
2E:250V	2:200V	1V:35V	1C :16V	1J :16V	
2H:500V		0J:6.3V	1E,25:25V	2A :100V	

16.5.1. Base Unit

16.5.1.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	1	PNGP1361Z1	PANEL, UPPER (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	PC-V2
	1	PNGP1359Z1	PANEL, UPPER (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	PC-V2

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	2	PNKM1600Y2	CABINET BODY (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	PS-HB
	2	PNKM1600Z1	CABINET BODY (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S)	PS-HB
	2	PNKM1600X3	CABINET BODY (for KX-TG585SK)	PS-HB
	3	L0AA04A00028	SPEAKER	
	4	PQHR11082Z	GUIDE, SPEAKER	POM-HB
	5	PNKE1272Z1	CASE, CHARGE TERMINAL (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B) (for KX-TG585SK)	PS-HB
	5	PNKE1272Z3	CASE, CHARGE TERMINAL (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S)	PS-HB
	6	PNJT1144Z	CHARGE TERMINAL	
	7	PNBC1486Y2	BUTTON, NAVIGATOR KEY	ABS-HB
	8	PNBC1345N1	BUTTON, MESSAGE	PMMA-HB
	9	PNHR1760Z	GUIDE, BUTTON	PS-HB
	10	PNJK1184Y	KEYBOARD SWITCH, TAM	
	11	PNJK1183W	KEYBOARD SWITCH, DIAL	
	12	PNJK1245Y	KEYBOARD SWITCH, CELL (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	
	12	PNJK1245Z	KEYBOARD SWITCH, CELL (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	13	PNBC1484Z1	BUTTON, CELL 1 (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	PMMA-HB
	14	PNBC1485Z1	BUTTON, CELL 2 (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	PMMA-HB
	15	PNYE1014Z	SPACER, CUSHION LCD	
	16	PNLA1100Z	ANTENNA	
	17	PNLA1101Z	ANTENNA, BT (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	18	PNHR1759Z	GUIDE, JACK	PS-HB
	19	PQJJ1T039H	JACK, MODULAR	
	20	K2ECYZ000001	JACK, DC	
	21	PQMG10025W	RUBBER PARTS, MIC	
	22	PNKF1273Z1	CABINET COVER	PS-HB
	23	PNHA1013Z	RUBBER PARTS, FOOT CUSHION	
	24	PNKL1038Z1	STAND, WALL MOUNT	ABS-HB
	25	PNGT8836Z	NAME PLATE (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	
	25	PNGT8837Z	NAME PLATE (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S)	
	25	PNGT8837Y	NAME PLATE (for KX-TG585SK)	

16.5.1.2. Main P.C. Board Parts

Note:

(*1) When replacing IC501, IC502, IC601 or X501, make the adjustment using **Batch file CD-ROM** for setting. Refer to parts list of **Fixtures and Tools** (P.114). Refer to **How to download the data** (P.65) of Things to Do after Replacing IC or X'tal.

(*2) When replacing the base unit LCD, See **How to Replace the Base unit LCD** (P.56).

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB1	PNWPGTGF340H	MAIN P.C.BOARD ASS'Y (RTL) (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	
	PCB1	PNWPGTGF370H	MAIN P.C.BOARD ASS'Y (RTL) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
			(ICs)	
	IC302	C0DBEY00102	IC	
	IC501	C1CB00003663	IC (*1)	
	IC502	PNWIATGF340H	IC (FLASH) (*1) (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	
	IC502	PNWIATGF370H	IC (FLASH) (*1) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	IC601	PNWIBTGF340H	IC (FLASH) (*1) (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	
	IC601	PNWIBTGF370H	IC (FLASH) (*1) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
			(TRANSISTORS)	
	Q141	B1ACGP000008	TRANSISTOR (SI)	
	Q142	B1ABDM000001	TRANSISTOR (SI)	S
	Q161	DSC7003S0L	TRANSISTOR (SI)	
	Q301	B1ADGE000012	TRANSISTOR (SI)	
	Q302	B1ADGE000012	TRANSISTOR (SI)	
	Q351	B1ADNB000003	TRANSISTOR (SI)	
	Q352	2SC6054JSL	TRANSISTOR (SI)	S
	Q353	2SC6054JSL	TRANSISTOR (SI)	S
	Q354	2SC6054JSL	TRANSISTOR (SI)	S
	Q661	DSA900100L	TRANSISTOR (SI)	
	Q662	UNR9216J0L	TRANSISTOR (SI)	S
	Q701	2SA1576S	TRANSISTOR (SI)	
	Q702	B1GBCFY0020	TRANSISTOR (SI)	S
	Q731	2SC6054JSL	TRANSISTOR (SI) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
	Q732	2SC6054JSL	TRANSISTOR (SI) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
			(DIODES)	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	D101	B0EDER000009	DIODE (SI)	S
	D142	DY2J25000L	DIODE (SI)	
	D362	B0ECKM000008	DIODE (SI)	
	DA802	B0DBBF000012	DIODE (SI)	
			(COIL)	
	C781	G1C4N7Z00006	COIL (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
			(RESISTOR ARRAYS)	
	RA101	EXB24V102JX	RESISTOR ARRAY	
	RA451	EXB24V222J	RESISTOR ARRAY	
	RA452	EXB24V272J	RESISTOR ARRAY	
	RA601	EXB28V561JX	RESISTOR ARRAY	
	RA651	D1H810240004	RESISTOR ARRAY	S
	RA652	D1H810240004	RESISTOR ARRAY	S
	RA653	D1H810240004	RESISTOR ARRAY	S
	RA654	D1H810240004	RESISTOR ARRAY	S
	RA655	EXB28V473JX	RESISTOR ARRAY	
	RA656	EXB28V473JX	RESISTOR ARRAY	
	RA657	EXB24V101JX	RESISTOR ARRAY (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	RA721	D1H810240004	RESISTOR ARRAY (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
			(BT UNIT)	
	IC721	PNWPCTGF370H	BT UNIT (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
			(VARISTOR)	
	SA101	PQVDDSS301L	VARISTOR (SURGE ABSORBER)	!S
			(RESISTORS)	
	R101	PQ4R10XJ475	4.7M	S
	R102	PQ4R10XJ475	4.7M	S
	R103	PQ4R10XJ184	180k	S
	R104	PQ4R10XJ184	180k	S
	R105	PQ4R10XJ105	1M	S
	R106	PQ4R10XJ105	1M	S
	R109	ERJ2GEJ823	82k	S
	R110	ERJ2GEJ823	82k	S
	R111	D0GA392JA015	3.9k	S
	R112	D0GA124JA015	120k	S
	R121	ERJ2GEJ102	1k	S
	R123	ERJ2GEJ102	1k	S
	R125	ERJ2GEJ271	270	S
	R131	PQ4R18XJ106	10M	S
	R133	ERJ3GEYJ154	150k	S
	R141	ERJ3GEYJ104	100k	S
	R142	PQ4R18XJ272	2.7k	S
	R145	ERJ2GEJ222	2.2k	S
	R151	D0GA104JA021	100k	S
	R152	ERJ2GEJ134X	130k	S
	R153	ERJ2GEJ102	1k	S
	R160	ERJ3GEYJ821	820	S
	R162	ERJ3GEYJ473	47k	S
	R163	D0GG390JA007	39	
	R164	ERJ3GEYJ272	2.7k	S
	R165	ERJ3GEYJ273	27k	S
	R166	ERJ3GEYJ822	8.2k	S
	R168	ERJ3GEYJ472	4.7k	S
	R178	D0GA332JA015	3.3k	S
	R311	ERJ2GEJ103	10k	S
	R312	ERJ2GEJ103	10k	S
	R321	ERJ2RKF1400	140	S

KX-TGF340/KX-TGF342/KX-TGF343/KX-TGF344/KX-TGF345/KX-TGF372/KX-TGF373/KX-TGF374/KX-TGF375/KX-TG585/KX-TGFA30

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R322	ERJ2RKF1000	100	S
	R351	ERJ2GEJ333	33k	S
	R352	ERJ2GEJ682	6.8k	S
	R354	ERJ2GEJ123	12k	S
	R355	D0GA681JA021	680	S
	R356	ERJ2GEJ103	10k	S
	R371	ERJ8GEYJ1R0	1	S
	R372	ERJ8GEYJ1R0	1	S
	R373	D0GA681JA021	680	S
	R451	ERJ2GEJ391	390	S
	R477	ERJ2GEJ1R0	1	S
	R478	ERJ2GEJ1R0	1	S
	R501	ERJ2RKF5602	56k	S
	R502	D0GA332JA015	3.3k	S
	R505	ERJ2GEJ102	1k	S
	R507	ERJ2GEJ333	33k	S
	R601	D0GA332JA015	3.3k	S
	R654	D0GA681JA021	680	S
	R656	ERJ2GEJ473	47k	S
	R661	ERJ3GEYJ390	39	S
	R665	ERJ2GEJ821	820	S
	R667	ERJ2GEJ103	10k	S
	R668	D0GA561JA021	560	S
	R701	D0GA332JA015	3.3k	S
	R702	ERJ2GEJ103	10k	S
	R721	ERJ2GEJ474X	470k (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
	R731	D0GA124JA015	120k (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
	R732	ERJ2GEJ184	180k (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
	R735	ERJ2RKF4702	47k (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	R736	ERJ2GEJ223	22k (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
	R738	ERJ2RKF3302	33k (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	S
	R891	ERJ2GEJ221	220	S
	R892	ERJ2GEJ221	220	S
			(CAPACITORS)	
	C101	F1K2H681A008	680P	S
	C102	F1K2H681A008	680P	S
	C103	ECUV1H103KBV	0.01	
	C104	ECUV1H103KBV	0.01	
	C105	F1K2H681A008	680P	S
	C106	F1K2H681A008	680P	S
	C107	ECUV1H103KBV	0.01	
	C108	ECUV1H103KBV	0.01	
	C109	ECUE1H821KBQ	820p	
	C110	ECUE1H821KBQ	820p	
	C111	ECUE1A333KBQ	0.033	
	C113	ECUE1A823KBQ	0.082	
	C132	ECUV1H103KBV	0.01	
	C142	ECUV1H103KBV	0.01	
	C152	ECUE1C103KBQ	0.01	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C161	F1K1E1060001	10	
	C167	ECUV1H102KBV	0.001	
	C171	ECUV1C223KBV	0.022	
	C173	ECUE1A104KBQ	0.1	
	C174	ECUE1H222KBQ	0.0022	
	C184	ECUV1C105KBV	1	
	C311	ECUE0J105KBQ	1	
	C312	ECUE0J105KBQ	1	
	C321	ECUV1C105KBV	1	
	C341	F2G0J102A148	1000	
	C342	ECUE1A104KBQ	0.1	
	C344	F2G0J102A148	1000	
	C351	ECUV1C105KBV	1	
	C451	PQCUV0J106KB	10	
	C457	ECUE1C333KBQ	0.033	
	C458	ECUE1C333KBQ	0.033	
	C459	ECUE1H102KBQ	0.001	
	C472	ECUE1H100DCQ	10p	
	C473	ECUE1H100DCQ	10p	
	C477	ECUE1H222KBQ	0.0022	
	C478	ECUE1H222KBQ	0.0022	
	C501	ECUE1A104KBQ	0.1	
	C502	ECUE0J105KBQ	1	
	C503	ECUE1H100DCQ	10p	
	C504	ECUE1A104KBQ	0.1	
	C505	ECUE1A104KBQ	0.1	
	C506	ECUV0J225KBV	2.2	
	C508	ECUE0J105KBQ	1	
	C509	ECUV0J225KBV	2.2	
	C512	ECUE0J105KBQ	1	
	C513	ECUE1A104KBQ	0.1	
	C516	ECUE1A104KBQ	0.1	
	C518	ECUE1A104KBQ	0.1	
	C519	ECUE1A104KBQ	0.1	
	C601	ECUE1A104KBQ	0.1	
	C661	ECUE1A104KBQ	0.1	
	C721	ECUE1A104KBQ	0.1 (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	C731	ECUE1A104KBQ	0.1 (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	C851	ECUE1H100DCQ	10p	
	C853	ECUE1H100DCQ	10p	
	C855	ECUE1H100DCQ	10p	
	C857	ECUE1H100DCQ	10p	
	C859	ECUE1H100DCQ	10p	
	C860	F1G1H1R8A765	1.8P	
	C861	F1G1H1R8A765	1.8P	
	C862	F1G1H2R0A765	2P	
			(OTHERS)	
	E1	L5DYAYY00004	LIQUID CRYSTAL DISPLAY (*2)	
	E2	PNHR1762Z	TRANSPARENT PLATE, LCD	PMMA-HB
	E3	PNHX1617Z	COVER, REFLECTOR SHEET	
	E4	PNHR1761Z	GUIDE, LCD	ABS-HB
⚠	F301	K5H302Y00003	FUSE	
	P101	D4DAY220A022	THERMISTOR (POSISTOR)	
	X501	H0J103500038	CRYSTAL OSCILLATOR (*1)	

16.5.1.3. Operational P.C. Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB2	PNWPBTGF340H	OPERATIONAL P.C. BOARD ASS'Y (RTL) (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB2	PNWPBTGF370H	OPERATIONAL P.C.BOARD ASS'Y (RTL) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
			(LEDS)	
	LED901	B3AAB0000347	LED	
	LED902	B3AAB0000347	LED	
	LED904	B3AAB0000347	LED	
	LED911	B3ABB0000331	LED (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
	LED912	B3ABB0000331	LED (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
			(RESISTOR)	
	R906	ERJ3GEYJ330	33	S
			(CAPACITORS)	
	C901	ECUE0J105KBQ	1	
	C902	ECUV1C105KBV	1	
	C912	ECUE1H100DCQ	10p	
			(OTHER)	
	MIC1	L0CBAY000123	MICROPHONE	

16.5.1.4. LED Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
			(LED)	
	WLED	B3AFB0000370	LED	

16.5.2. Handset

16.5.2.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	101	PNGP1360Z1	PANEL, LCD	PMMA-HB
	102	PNYE7744Z	TAPE, DOUBLE SIDED	
	103	PNKM1601Y2	CABINET BODY (for KX-TGFA30B)	ABS-HB
	103	PNKM1601Z1	CABINET BODY (for KX-TGFA30S)	ABS-HB
	103	PNKM1601Z3	CABINET BODY (for KX-TGFA30M)	ABS-HB
	104	L0AD01A00026	RECEIVER	
	105	PNYE1107Z	SPACER, CUSHION LCD	
	106	PNBC1492V1	BUTTON, NAVIGATOR KEY	ABS-HB
	107	PNJK1246Z	KEYBOARD SWITCH	
	108	PNHR1757Z	GUIDE, SPEAKER	ABS-HB
	109	PNHG1287Z	RUBBER PARTS, RECEIVER	
	110	L0AA02A00120	SPEAKER	
	111	PNHS1502Z	SPACER, SPEAKER NET	
	112	PNKE1269Z1	COVER, EP CAP	
	113	PNJC1018Z	BATTERY TERMINAL	
	114	PNKF1271Z1	CABINET COVER	ABS-HB
	115	PNHS1466Z	SPACER, BATTERY	
	116	PNKK1076Z1	LID, BATTERY	ABS-HB
	117	PNYNTGA680BR	LID, BATTERY ASS'Y	ABS-HB
	118	PNHR1644Z	SPACER	PS-HB
	119	PNGT8838Z	NAME PLATE (for KX-TGFA30B)	
	119	PNGT8838Y	NAME PLATE (for KX-TGFA30S)	
	119	PNGT8838X	NAME PLATE (for KX-TG585SK)	
	119	PNGT9006Z	NAME PLATE (for KX-TGFA30M)	
	120	PNQT2006Z	LABEL, ATTENTION	
	121	PNQT3065Z	LABEL, BATTERY	

16.5.2.2. Main P.C. Board Parts

Note:

- (*1) Reconfirm the model No. written on the handset's name plate when replacing PCB100. Because the model No. of the optional handset may differ from the included handset.
- (*2) When replacing IC3 or X1, make the adjustment using **Batch file CD-ROM** for setting. Refer to parts list of **Fixtures and Tools** (P.114). Refer to **Handset** (P.69) of Things to Do after Replacing IC or X'tal.
- (*3) When replacing the handset LCD, See **How to Replace the Handset LCD** (P.58).

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB100	PNWPATGFA30R	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(IC)	
	IC4	C0DBZYY00357	IC	
			(TRANSISTORS)	
	Q10	B1ADNB000003	TRANSISTOR (SI)	
	Q11	2SC6054JSL	TRANSISTOR (SI)	S
	Q12	DSA900100L	TRANSISTOR (SI)	S
	Q2	DSA900100L	TRANSISTOR (SI)	S
	Q3	B1ABGE000011	TRANSISTOR (SI)	S
	Q4	DSA900100L	TRANSISTOR (SI)	S
	Q6	DRC9113ZOL	TRANSISTOR (SI)	
	Q9	2SC6054JSL	TRANSISTOR (SI)	S
			(DIODES)	
	D13	B0BC4R3A0006	DIODE (SI)	S
	D14	B0BC4R3A0006	DIODE (SI)	S
			(LEDS)	
	LED1	B3ACB0000190	LED	
	LED2	B3ACB0000190	LED	
	LED3	B3ACB0000190	LED	
	LED4	B3ACB0000190	LED	
	LED5	B3ACB0000190	LED	
	LED6	B3ACB0000190	LED	
	LED20	B3AFB0000370	LED	
			(RESISTOR ARRAYS)	
	RA2	EXB28V391JX	RESISTOR ARRAY	
	RA3	D1H43912A014	RESISTOR ARRAY	
			(IC FILTER)	
	L1	J0JCC0000286	IC FILTER	
			(RESISTORS)	
	R2	ERJ2GEJ303	30k	S
	R3	D0GA152JA021	1.5k	S
	R4	D0GA473JA021	47k	S
	R6	D0GA103JA021	10k	S
	R7	D0GA104JA021	100k	S
	R8	ERJ8GEYJ4R3V	4.3	S
	R9	ERJ2GEJ303	30k	S
	R10	ERJ3GEYJ1R0	1	S
	R11	D0GA681JA021	680	S
	R12	ERJ2GEJ183	18k	S
	R13	D0GA103JA021	10k	S
	R20	ERJ2GEJ303	30k	S
	R45	D0GBR10JA113	0.1	
	R70	D0GA470JA021	47	S
			(CAPACITORS)	
	C113	ECUE1H100DCQ	10p	
	C15	ECUE1H390JCQ	39p	
	C27	ECUE1H102KBQ	0.001	
	C5	ECUE1A104KBQ	0.1	
	C56	ECUE0J105KBQ	1	
	C57	ECUE0J105KBQ	1	
	C58	ECUE0J105KBQ	1	
	C6	ECUE1H680JCQ	68p	
	C70	ECUE1H680JCQ	68p	
	C71	ECUE1H680JCQ	68p	
	C79	ECUE1H101JCQ	100p	
	C82	ECUE1H102KBQ	0.001	
	C84	ECUE1H102KBQ	0.001	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C86	ECUE1H101JCQ	100p	
	C90	ECUE1A104KBQ	0.1	
	C91	ECUV1C105KBV	1	
	C92	ECUE0J105KBQ	1	
			(OTHERS)	
	CN4	K2HD103D0001	JACK/SOCKET	S
△	F1	ERBRD2R50X	FUSE	
	MIC100	L0CBAY000053	BUILTIN-MICROPHONE	
	E101	L5DYBY00001	LIQUID CRYSTAL DISPLAY (*3)	S
	E102	PNHR1756Z	TRANSPARENT PLATE, LCD	PMMA-HB
	E103	PNHR1755Z	GUIDE, LCD	ABS-HB
	E104	PQHG10729Z	RUBBER PARTS, RECEIVER	
	E105	PNVE1011Z	BATTERY TERMINAL	ABS-HB
	E106	PNJT1141Z	CHARGE TERMINAL (L)	
	E107	PNJT1140Z	CHARGE TERMINAL (R)	

16.5.2.3. BBIC Module P.C.Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
			(ICs)	
	IC1	C2HBCY000162	IC	
	IC3	PNWITGFA30R	IC (EEPROM) (*2)	
			(COIL)	
	L801	G1C2N7Z00009	COIL	
			(RESISTOR ARRAYS)	
	RA1	EXB28V103	RESISTOR ARRAY	
	RA4	EXB24V272J	RESISTOR ARRAY	
	RA5	EXB28V332JX	RESISTOR ARRAY	
			(IC FILTER)	
	L3	J0JDC0000045	IC FILTER	
			(RESISTORS)	
	R21	D0GA103JA021	10k	S
	R22	D0GA332JA015	3.3k	S
	R23	ERJ2GEYJ391	390	S
	R24	ERJ2GEJ100	10	
	R25	ERJ2GEJ222	2.2k	S
	R26	D0GA332JA015	3.3k	S
	R27	ERJ2GEJ222	2.2k	S
	R28	ERJ2GEJ222	2.2k	S
	R31	ERJ2RKF1003X	100k	S
	R32	D0GA104JA021	100k	S
	R33	ERJ2RKF1003X	100k	S
	R80	ERJ2GEJ100	10	S
			(CAPACITORS)	
	C11	F1L1A104A054	CERAMIC CAPACITOR	
	C12	ECJ1VB0G106M	10	S
	C13	F1L1A104A054	CERAMIC CAPACITOR	
	C14	ECUE1A333KBQ	0.033	
	C16	F1J0J2260002	22	
	C17	F1L1H100A180	CERAMIC CAPACITOR	
	C18	F1L1H100A180	CERAMIC CAPACITOR	
	C2	F1J0J2260002	22	
	C20	ECJ1VB0G106M	10	S
	C21	ECUE0J105KBQ	1	S
	C22	F1L1A104A054	CERAMIC CAPACITOR	
	C24	ECUE0J105KBQ	1	
	C25	ECUV1A225KBV	2.2	
	C26	ECJ1VB0G106M	10	S
	C29	ECUE0J105KBQ	1	
	C3	F1J0J2260002	22	
	C30	ECUE0J105KBQ	1	
	C31	ECJ1VB0G106M	10	S
	C32	ECUE0J105KBQ	1	
	C33	F1L1A104A054	CERAMIC CAPACITOR	
	C34	ECUE1H390JCQ	39p	
	C36	F1L1A104A054	CERAMIC CAPACITOR	
	C37	ECJ1VB0G106M	10	S
	C38	ECUE1H100DCQ	10p	
	C39	ECUE1H101JCQ	100p	
	C40	F1L1A104A054	CERAMIC CAPACITOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C41	F1L1A104A054	CERAMIC CAPACITOR	
	C43	F1L1A104A054	CERAMIC CAPACITOR	
	C44	ECUE0J105KBQ	1	
	C45	F1L1A104A054	CERAMIC CAPACITOR	
	C51	ECJ1VB0G106M	10	S
	C52	ECUE1H100DCQ	10p	
	C53	ECUE1H120JCQ	12p	
	C68	ECUE0J105KBQ	1	
	C69	F1L1A104A054	CERAMIC CAPACITOR	
	C80	ECUE1A333KBQ	0.033	
	C800	F1G1H1R5A765	1.5p	
	C802	F1G1H2R0A765	2p	
	C803	F1G1H1R6A765	1.6p	
	C806	F1G1H1R0A765	1p	
	C807	ECUE1H100DCQ	10p	
	C96	ECUE1H100DCQ	10p	
			(OTHERS)	
	X1	H0J138500003	CRYSTAL OSCILLATOR (*2)	S

16.5.3. Charger Unit

16.5.3.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1040ZB	CHARGER UNIT ASS'Y without NAME PLATE (RTL) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B) (for KX-TGFA30B) (for KX-TGFA30M) (for KX-TG585SK)	
	200	PNLC1040ZS	CHARGER UNIT ASS'Y without NAME PLATE (RTL) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TGFA30S)	
	200-1	PNKM1477Z1	CABINET BODY (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B) (for KX-TGFA30B) (for KX-TGFA30M) (for KX-TG585SK)	PS-HB
	200-1	PNKM1477Y3	CABINET BODY (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TGFA30S)	PS-HB
	200-2	PNJT1146Z	CHARGE TERMINAL	
	200-3	PNKF1279Z1	CABINET COVER	PS-HB
	200-4	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	
△	200-5	PNLV233-AZ	AC ADAPTOR	
	201	PNGT7856Z	NAME PLATE (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B) (for KX-TGFA30B) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TGFA30S) (for KX-TG585SK)	
	201	PNGT7141Z	NAME PLATE (for KX-TGFA30M)	

16.5.4. Accessories and Packing Materials

Note:

(*1) You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

16.5.4.1. KX-TGF340B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A1	PNLV226Z	AC ADAPTOR	
	A2	PQJA10075Y	CORD, TELEPHONE	
	A3	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A4	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A5	PNQW2611Z	LEAFLET, REPEATER	
	A6	PNQX6710Z	INSTRUCTION BOOK (*1)	
	P1	PNPK3915001Z	GIFT BOX	
	P2	PNPD1945Z	CUSHION	

16.5.4.2. KX-TGF342B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A101	PNLV226Z	AC ADAPTOR	
	A102	PQJA10075Y	CORD, TELEPHONE	
	A103	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A104	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A105	PNQW2611Z	LEAFLET, REPEATER	
	A106	PNQX6710Z	INSTRUCTION BOOK (*1)	
	P101	PNPK3916001Z	GIFT BOX	
	P102	PNPD1946Z	CUSHION	

16.5.4.3. KX-TGF343B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A201	PNLV226Z	AC ADAPTOR	
	A202	PQJA10075Y	CORD, TELEPHONE	
	A203	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A204	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A205	PNQW2611Z	LEAFLET, REPEATER	
	A206	PNQX6710Z	INSTRUCTION BOOK (*1)	
	P201	PNPK3917001Z	GIFT BOX	
	P202	PNPD1947Z	CUSHION	

16.5.4.4. KX-TGF344B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A301	PNLV226Z	AC ADAPTOR	
	A302	PQJA10075Y	CORD, TELEPHONE	
	A303	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A304	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A305	PNQW2611Z	LEAFLET, REPEATER	
	A306	PNQX6710Z	INSTRUCTION BOOK (*1)	
	P301	PNPK3918001Z	GIFT BOX	
	P302	PNPD1948Z	CUSHION	

16.5.4.5. KX-TGF345B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A401	PNLV226Z	AC ADAPTOR	
	A402	PQJA10075Y	CORD, TELEPHONE	
	A403	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A404	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A405	PNQW2611Z	LEAFLET, REPEATER	
	A406	PNQX6710Z	INSTRUCTION BOOK (*1)	
	P401	PNPK3919001Z	GIFT BOX	
	P402	PNPD1949Z	CUSHION	

16.5.4.6. KX-TGF372S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A501	PNLV226Z	AC ADAPTOR	
	A502	PQJA10075Y	CORD, TELEPHONE	
	A503	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A504	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A505	PNQW4253Z	LEAFLET, QUICK GUIDE	
	A506	PNQW2611Z	LEAFLET, REPEATER	
	A507	PNQX6718Z	INSTRUCTION BOOK (*1)	
	P501	PNPK3916002Z	GIFT BOX	
	P502	PNPD1946Z	CUSHION	

16.5.4.7. KX-TGF373S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A601	PNLV226Z	AC ADAPTOR	
	A602	PQJA10075Y	CORD, TELEPHONE	
	A603	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A604	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A605	PNQW4253Z	LEAFLET, QUICK GUIDE	
	A606	PNQW2611Z	LEAFLET, REPEATER	
	A607	PNQX6718Z	INSTRUCTION BOOK (*1)	
	P601	PNPK3917002Z	GIFT BOX	
	P602	PNPD1947Z	CUSHION	

16.5.4.8. KX-TGF374S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A701	PNLV226Z	AC ADAPTOR	
	A702	PQJA10075Y	CORD, TELEPHONE	
	A703	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A704	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A705	PNQW4253Z	LEAFLET, QUICK GUIDE	
	A706	PNQW2611Z	LEAFLET, REPEATER	
	A707	PNQX6718Z	INSTRUCTION BOOK (*1)	
	P701	PNPK3918002Z	GIFT BOX	
	P702	PNPD1948Z	CUSHION	

16.5.4.9. KX-TGF375S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A801	PNLV226Z	AC ADAPTOR	
	A802	PQJA10075Y	CORD, TELEPHONE	
	A803	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A804	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A805	PNQW4253Z	LEAFLET, QUICK GUIDE	
	A806	PNQW2611Z	LEAFLET, REPEATER	
	A807	PNQX6718Z	INSTRUCTION BOOK (*1)	
	P801	PNPK3919002Z	GIFT BOX	
	P802	PNPD1949Z	CUSHION	

16.5.4.10. KX-TG585SK

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
△	A901	PNLV226Z	AC ADAPTOR	
	A902	PQJA10075Y	CORD, TELEPHONE	
	A903	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A904	PNQW3426Z	LEAFLET, MINI-LOCATOR	
	A905	PNQW4253Z	LEAFLET, QUICK GUIDE	
	A906	PNQW2611Z	LEAFLET, REPEATER	
	A907	PNQX6718Z	INSTRUCTION BOOK (*1)	

16.5.4.11. KX-TGFA30B

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A1001	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A1002	PNQX6731Z	INSTRUCTION BOOK (*1)	
	A1003	PQQA22435Z	LABEL, COLOUR INDICATION	
	P1001	PNPK3638004Z	GIFT BOX	
	P1002	PNPD1715Z	CUSHION	

16.5.4.12. KX-TGFA30S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A1101	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A1102	PNQX6731Z	INSTRUCTION BOOK (*1)	
	A1103	PNQA1882Z	LABEL, COLOUR INDICATION	
	P1101	PNPK3638004Z	GIFT BOX	
	P1102	PNPD1715Z	CUSHION	

16.5.4.13. KX-TGFA30M

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A1201	PNKE1268Z1	HANGER, BELT CLIP	ABS-HB
	A1202	PNQX6731Z	INSTRUCTION BOOK (*1)	
	A1203	PNQA1881Z	LABEL, COLOUR INDICATION	
	P1201	PNPK3638003Z	GIFT BOX	
	P1202	PNPD1715Z	CUSHION	

16.5.5. Screws

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	B	XTB2+8GFJ	TAPPING SCREW	

16.5.6. Fixtures and Tools**Note:**

(*1) See **Equipment Required** (P.59), and **The Setting Method of JIG** (P.59)

(*2) When replacing the Handset LCD, See **How to Replace the Handset LCD** (P.58)

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
		PQZZ1CD300E	JIG CABLE (*1)	
		PNZZTGF340M	BATCH FILE CD-ROM (*1) (for KX-TGF340B) (for KX-TGF342B) (for KX-TGF343B) (for KX-TGF344B) (for KX-TGF345B)	
		PNZZTGF370M	BATCH FILE CD-ROM (*1) (for KX-TGF372S) (for KX-TGF373S) (for KX-TGF374S) (for KX-TGF375S) (for KX-TG585SK)	
		PNZZTGF380M	BATCH FILE CD-ROM (*1) (for KX-TGFA30M) (for KX-TGFA30B) (for KX-TGFA30S)	
		PQZZ430PIR	TIP OF SOLDERING IRON (*2)	
		PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)	

SH/N
KXTGF340B
KXTGF342B
KXTGF343B
KXTGF344B
KXTGF345B
KXTGF372S
KXTGF373S
KXTGF374S
KXTGF375S
KXTG585SK
KXTGFA30B
KXTGFA30S
KXTGFA30M