


Service Manual

LED TV

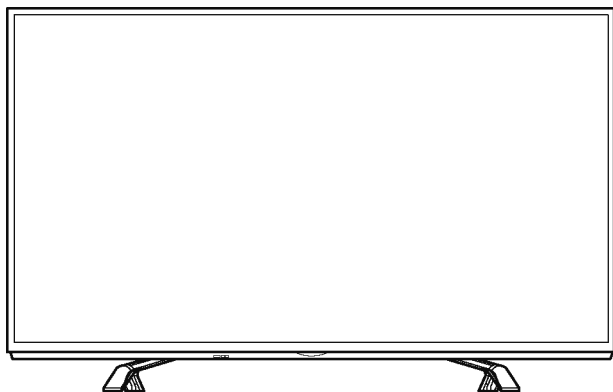

Model No. **TH-40D400K**
TH-40D400S
TH-40D400T

Chassis: **KM25**
Destination: **K: Malaysia**
S: Singapore
T: Thailand

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE	PAGE
1 Safety Precautions	3	
1.1. General Guidelines	3	
1.1.1. Leakage Current Cold Check	3	
1.1.2. Leakage Current Hot Check (See Figure 1.)	3	
2 Warning	4	
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices	4	
2.2. About lead free solder (PbF)	5	
3 Service Navigation	6	
3.1. Service Hint	6	
4 Specifications	7	
5 Service Mode	8	
5.1. How to enter into Service Mode	8	
5.1.1. Purpose	8	
5.1.2. Key command	8	
5.1.3. How to exit	8	
5.1.4. Contents of adjustment mode	8	
5.1.5. Display of SOS History	9	
5.1.6. Exit	9	
5.1.7. Hotel Mode	9	
6 Troubleshooting Guide	10	
6.1. Check of the IIC bus lines	10	
6.1.1. How to access	10	
6.1.2. Self-check indication only	10	
6.1.3. Self-check indication and forced to factory shipment setting	10	
6.1.4. Exit	10	
6.1.5. Screen display	10	
6.2. Power LED Blinking timing chart	11	
6.3. Method of detecting SOS	11	
6.4. LCD Panel test mode	12	
6.5. No Power	12	
7 Disassembly and Assembly Instructions	13	
7.1. Screw Removal	13	
7.2. Blue Tape Ornament	14	
7.3. Sticking Felt	15	
7.4. Install Metal parts	16	
7.5. Screw Spec	17	
7.6. Cabinet Assembly	18	
7.7. Set Assembly	19	
7.8. SP Assy	20	
7.9. Back Cover Assy 1	21	
7.10. Back Cover Assy 2	22	
7.11. Back Cover Assy 3	23	
7.12. Back Cover Assy 4	24	
7.13. Labelling	25	
7.14. Handling SPEC	26	
8 Measurements and Adjustments	27	
8.1. Voltage chart of A-board	27	
8.2. Voltage chart of P-board	27	
9 Block Diagram	28	
9.1. Main Block Diagram	28	
10 Wiring Connection Diagram	29	
10.1. Wire Dressing	29	
10.2. Wire Dressing II	30	

1 Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.
4. When conducting repairs and servicing, do not attempt to modify the equipment, its parts or its materials.
5. When wiring units (with cables, flexible cables or lead wires) are supplied as repair parts and only one wire or some of the wires have been broken or disconnected, do not attempt to repair or re-wire the units. Replace the entire wiring unit instead.
6. When conducting repairs and servicing, do not twist the Faston connectors but plug them straight in or unplug them straight out.

1.1.1. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be 8.5Mohm to 13Mohm. When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

1.1.2. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5kohm, 10 watts resistor, in parallel with a 0.15 μ F capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

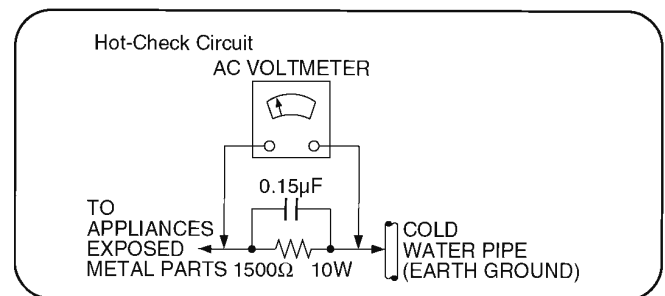


Figure 1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor [chip] components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as [anti-static (ESD protected)] can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise ham less motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol **PbF** stamped on the back of PCB.


Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

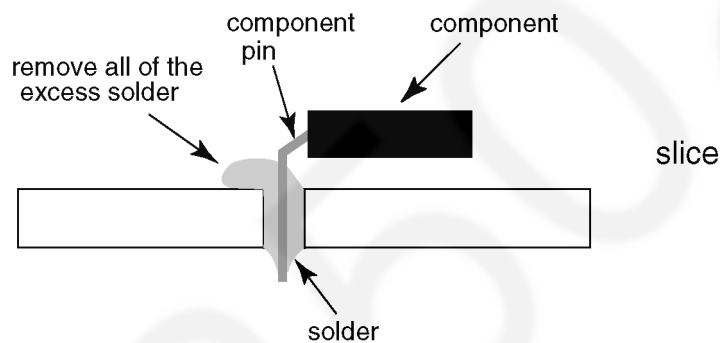

3 Service Navigation

3.1. Service Hint

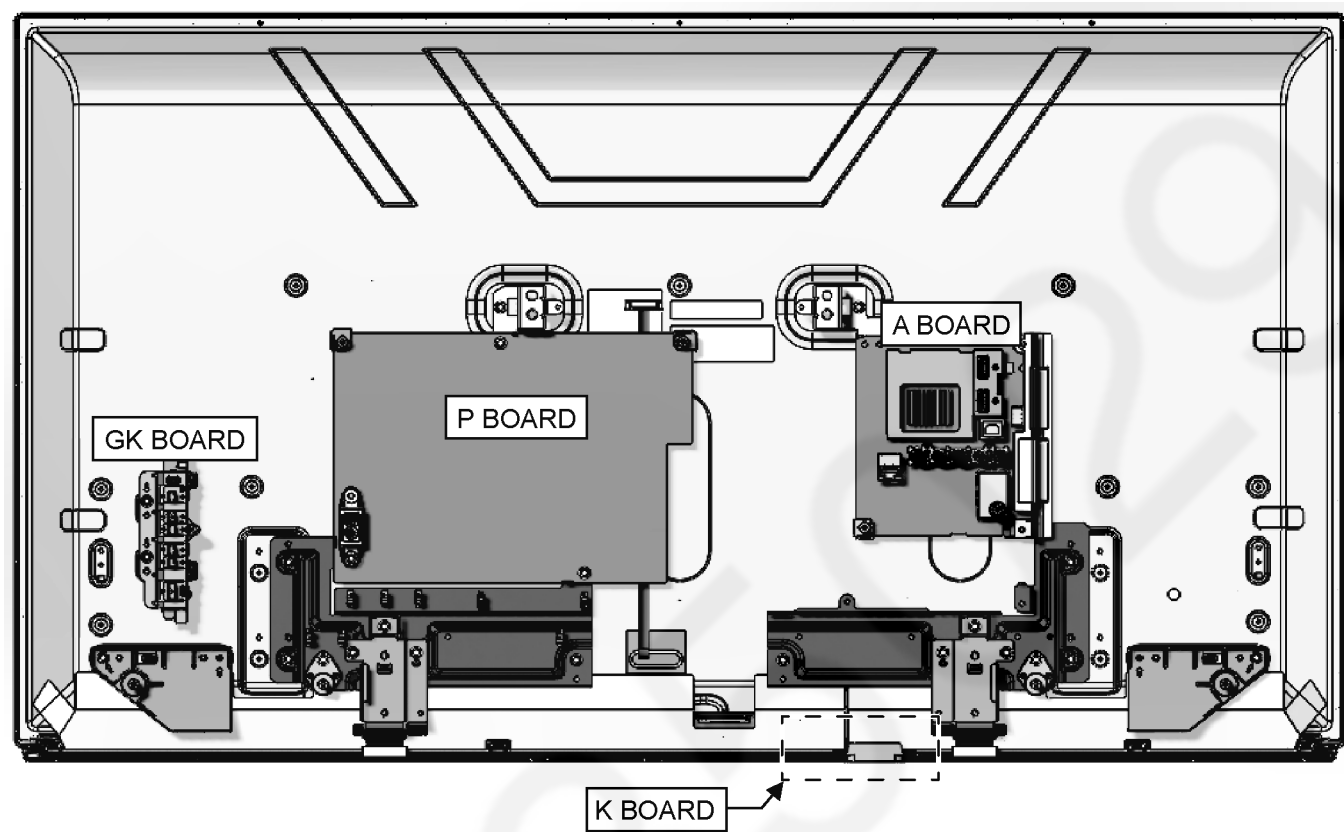

Board Name	Main Device	Remarks
A BOARD	TUN, EEP, SPI, MTK IC	Repairable
P BOARD	Power Supply	Repairable
GK BOARD	Function SW	Repairable
K BOARD	LED/RM/CATS	Repairable

4 Specifications

Power Source	AC 220-240 V, 50/60 Hz
Power consumption	
(Rated power / Standby power)	56 W / 0.25 W
Display panel	
Panel	LCD panel (LED backlight)
Visible screen size (diagonal)	100 cm
Display resolution	1,920 (W) × 1,080 (H)
Dimensions (W × H × D)	902 mm × 569 mm × 238mm (With Pedestal) 902 mm × 522 mm × 88 mm (TV only)
Mass	8.5 kg (With Pedestal) 8.0 kg (TV only)
Connection terminals	
AV IN (COMPONENT / VIDEO)	VIDEO RCA PIN Type × 1, 1.0 V[p-p] (75 Ω) AUDIO L - R RCA PIN Type × 2, 0.5 V [rms] Y 1.0 V [p-p] (including synchronisation) P_B / C_B, P_R / C_R ±0.35 V [p-p]
HDMI 1 / 2 input	TYPE A Connectors
USB	USB 2.0 TYPE A Connectors
DIGITAL AUDIO OUT	DC = 5 V, Max. 500 mA PCM / Dolby Digital / Fibre optic

Sound

Audio output 20 W (10 W + 10 W)

Receiving Systems / Band name	17 SYSTEMS	FUNCTION
	1 PAL B, G, H 2 PAL I 3 PAL D, K 4 SECAM B, G 5 SECAM D, K 6 SECAM K1 7 NTSC M (NTSC 3.58 / 4.5 MHz)	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders
	8 NTSC 4.43 / 5.5 MHz 9 NTSC 4.43 / 6.0 MHz 10 NTSC 4.43 / 6.5 MHz 11 NTSC 3.58 / 5.5 MHz 12 NTSC 3.58 / 6.0 MHz 13 NTSC 3.58 / 6.5 MHz 14 SECAM I	Playback from Special VCR's or DVD
	15 PAL 60 Hz / 5.5 MHz 16 PAL 60 Hz / 6.0 MHz 17 PAL 60 Hz / 6.5 MHz	Playback from Special Disc Players and Special VCR's or DVD
Digital TV	7 MHz VHF / 8 MHz UHF free-to-air TV broadcast reception	

Receiving channels (Analogue TV)

VHF BAND	2 - 12 (PAL / SECAM B, K1) 0 - 12 (PAL B AUST.) 1 - 9 (PAL B N.Z.) 1 - 12 (PAL / SECAM D) 1 - 12 (NTSC M Japan) 2 - 13 (NTSC M USA)
UHF BAND	21 - 69 (PAL G, H, I / SECAM G, K, K1) 28 - 69 (PAL B AUST.) 13 - 57 (PAL D, K) 13 - 62 (NTSC M Japan) 14 - 69 (NTSC M USA)
CATV	S1 - S20 (OSCAR) 1 - 125 (USA CATV) C13 - C49 (JAPAN) S21 - S41 (HYPER) Z1 - Z37 (CHINA) 5A, 9A (AUST.)

Aerial input

VHF / UHF

Operating Conditions

Temperature : 0°C - 40°C

Humidity : 20 % - 80 % RH (non-condensing)

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.


5 Service Mode

5.1. How to enter into Service Mode

5.1.1. Purpose

After exchange parts, check and adjust the contents of adjustment mode.

While pressing [VOLUME (-)] button of the main unit, press [INFO] button of the remote control three times within 2 seconds.

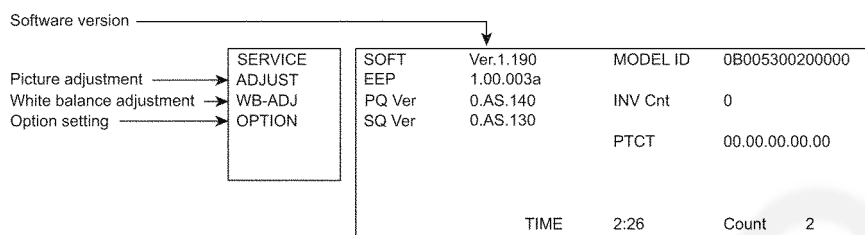

5.1.2. Key command

[1] button...Main items Selection in forward direction

[2] button...Main items Selection in reverse direction

[3] button...Sub items Selection in forward direction

[4] button...Sub items Selection in reverse direction

[VOL] button...Value of sub items change in forward direction (+), in reverse direction (-)

5.1.3. How to exit

Switch off the power with the [POWER] button on the main unit or the [POWER] button on the remote control.

5.1.4. Contents of adjustment mode

- Value is shown as a hexadecimal number.
- Preset value differs depending on models.
- After entering the adjustment mode, take note of the value in each item before starting adjustment.

Main item	Sub item	Sample Data
ADJUST	H POS	
	H AMP	
	V POS	
	V AMP	
	V COM	
WB-ADJ	R-GAIN	8D
	G-GAIN	AE
	B-GAIN	FF
	R-CENT	6C
	G-RENT	80
	B-CENT	A0
OPTION	Boot upgrade	NO
	STBY-SET	00
	EMERGENCY	ON
	CLK MODE	00
	CLOCK	FC7
	Y/C DELAY	DYNAMIC
	OPT 1	00000000
	OPT 2	11100110
	OPT 3	00001001
	OPT 4	00000000
	EDID-CLK	HIGH

5.1.5. Display of SOS History

SOS History (Number of LED blinking) indication.

From left side; Last SOS, before Last, three occurrence before, 2nd occurrence after shipment, 1st occurrence after shipment.

This indication except 2nd and 1st occurrence after shipment will be cleared by [Self-check indication and forced to factory shipment setting].

5.1.6. Exit

1. Disconnect the AC cord from wall outlet.

5.1.7. Hotel Mode

1. Purpose
Restrict a function for hotels.
2. Access command to the Hotel mode setup menu.
In order to display the Hotel mode setup menu:
While pressing [VOLUME (-)] button of the main unit, press [AV] button of the remote control three times within 2 seconds.

Then, the Hotel mode setup menu is displayed.

Hotel Mode	
Hotel Mode	Off
Initial INPUT	Off
Initial POS	1
Initial VOL Level	Off
Maximum VOL Level	100
Button Lock	Off
Remote Lock	Off
Copy TV to USB	[>]
Copy USB to TV	[>]

Select

3. To exit the Hotel mode setup menu
Disconnect AC power cord from wall outlet.
4. Explain the Hotel mode setup menu

Item	Function
Hotel Mode	Select hotel mode On/Off
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : Off, Analogue, DVB-C, DVB-T, AV1, AV2, HDMI1, HDMI2 • Off: give priority to a last memory. However, Euro model is compulsorily set to TV.
Initial POS	Select programme number. Selection : Off/0 to 99 • Off: give priority to a last memory.
Initial VOL LEVEL	Adjust the volume when each time power is switched on. Selection Range : Off/0 to 100 • Off: give priority to a last memory.
Maximum Vol Level	Adjust maximum volume. Range : 0 to 100
Button Lock	Select local key conditions. Selection : Off/SETUP/MENU/ALL • OFF: altogether valid • SETUP: only F-key is invalid (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid (only Volume/Mute can be selected.) • ALL: altogether invalid.
Remote Lock	Select remote control key conditions. Selection : Off/SETUP/MENU • OFF: altogether valid. • SETUP: only Setup menu is invalid. • MENU: Picture/Sound/Setup menu are invalid.
Hotel Mode USB	Basically after user already setup the hotel mode according to their criteria, what they need to do is • insert USB (while in hotel mode) • choose 'Copy TV to USB' to copy the setting into the USB (a file will be created to store the hotel mode setting in the USB) • switch 'OFF' the unit • pull out USB from unit To copy the hotel mode setting from USB. • enter hotel mode • insert USB • choose 'Copy USB to TV' • follow instruction as shown on the units • once finish, switch 'OFF' the unit • pull out USB from unit
Private Information	Select private information for VIERA Cast is Keep or Reset if Hotel mode is set to [On] when TV power on Selection : Keep/Reset • Keep: private information for VIERA Cast is keep • Reset: private information for VIERA Cast is reset

6 Troubleshooting Guide

Use the self-check function to test the unit.

- 1. Checking the IIC bus lines
- 2. Power LED Blinking timing

6.1. Check of the IIC bus lines

6.1.1. How to access

6.1.2. Self-check indication only

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [OK] button on the remote control for more than 3 seconds.

6.1.3. Self-check indication and forced to factory shipment setting

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

6.1.4. Exit

Disconnect the AC cord from wall outlet.

6.1.5. Screen display

40 FHD			
Self check complete			
TUN	OK	SOFT	Ver.1.190
EEPROM	OK	EEP	1.00.003a
		Model id	0B005300200000
		PQ Ver	0.AS.140
		SQ Ver	0.AS.130

6.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents


When an abnormality occurs, the protection circuit will operate and reset the unit to stand by mode. During this time, the defective block can be identified by the number of blinking times of the Power LED on the front panel of the unit as follow:

Priority	Name	Factor	R_LED Blink
1	BL_SOS	SOS from PANEL inverter	1
2	TV_SOS	TCON power down	3
3	SOUND_SOS	SOS from audio AMP	9

6.3. Method of detecting SOS


1. BL_SOS

Detection beginning after one second pass from 'BL_ON'=ON

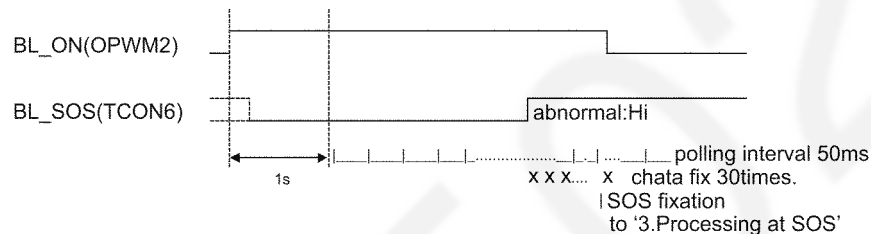


2. TV_SOS

Detection beginning after one second pass from 'AMP_SHUTDOWN'=ON

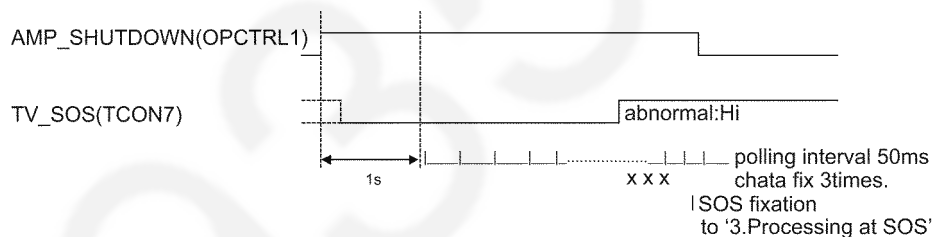

3. SOUND_SOS

Detection beginning 'AMP_SHUTDOWN'=ON

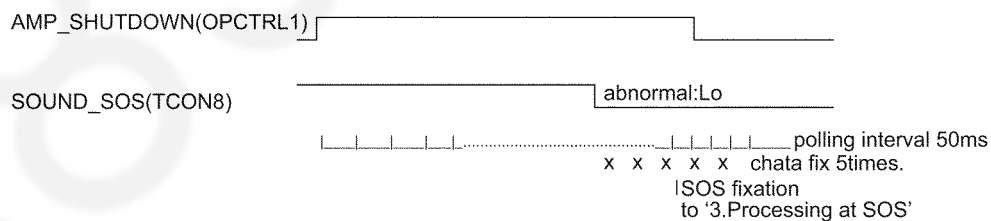

6.4. LCD Panel test mode

Purpose:

To find the possible failure point where in LCD Panel or Printed Circuit Board when the abnormal picture is displayed.

How to Enter:

While pressing [VOLUME (-)] button of the main unit, press [OPTION] button of the remote control three times within 2 seconds.

How to Exit:

Disconnect AC plug from wall outlet.

How to confirm:

If the abnormal picture is displayed, go into LCD Panel test mode to display the several test patterns.

And then, judge by the following method.

Still abnormal picture is displayed: The cause must be in LCD Panel.

Normal picture is displayed: The cause must be in A board.

Remarks:

The test pattern is created by the circuit in LCD Panel.

In LCD Panel test mode, this test pattern is displayed unaffected by signal processing for RF or input signal.


If the normal picture is displayed, LCD Panel must be okay and the cause of failure must be in A board.

6.5. No Power

First check point

There are following 2 states of No Power indication by power LED.


1. No lit
2. Red is lit then turns red blinking a few seconds later. (See 6.2.)

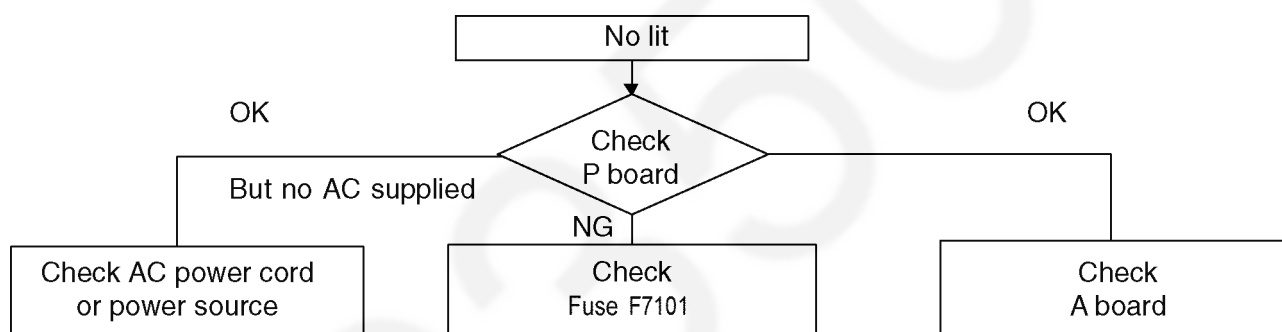


7 Disassembly and Assembly Instructions

7.1. Screw Removal

1. Remove screw from LCM.
2. Screw back with new part screw at below diagram.

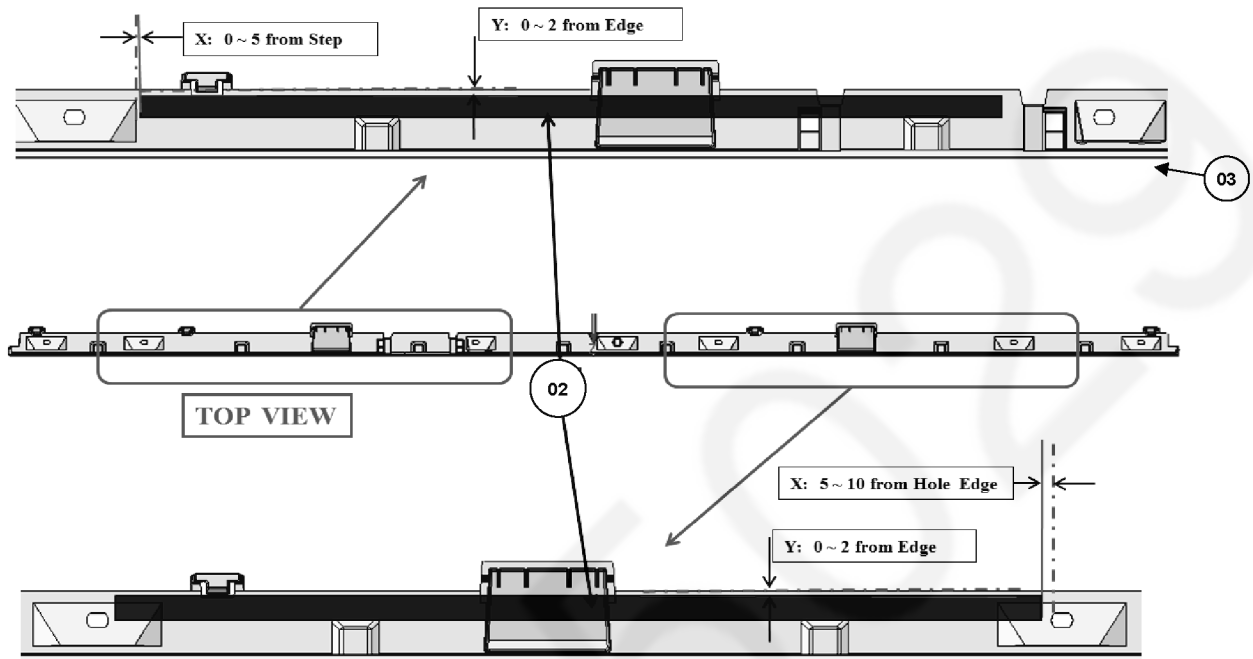


⚠ <Caution Point>
Screw back after assemble
Bottom Ornament. Bottom
Ornament Assy process
please refer to page 5

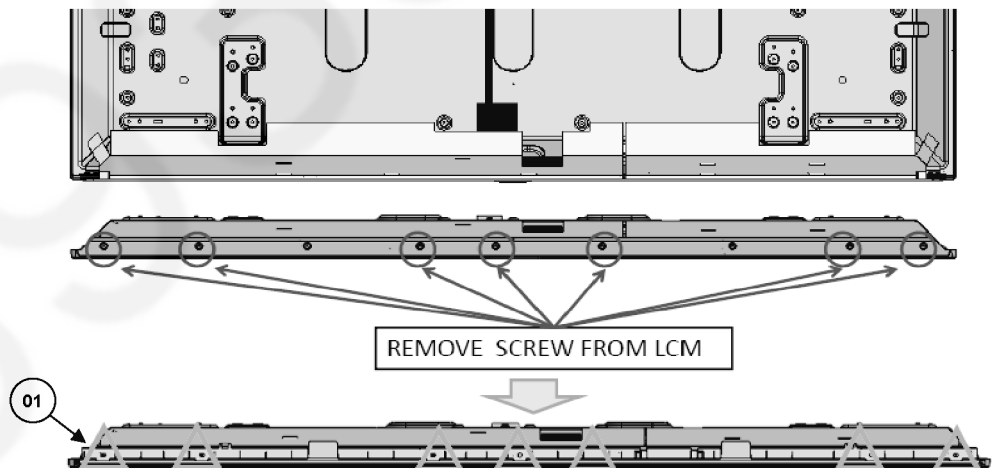


No	Description	Qty	UOM	Remarks
01	SCREW(BTM_OMT7)	7	PC	3-4 Kgfc
02	FELT (T0.35XW8XL210)	2	PC	
03	BOTTOM ORNAMENT ASSY	1	PC	

7.2. Blue Tape Ornament

1. Follow Ornament specification assy in diagram below.

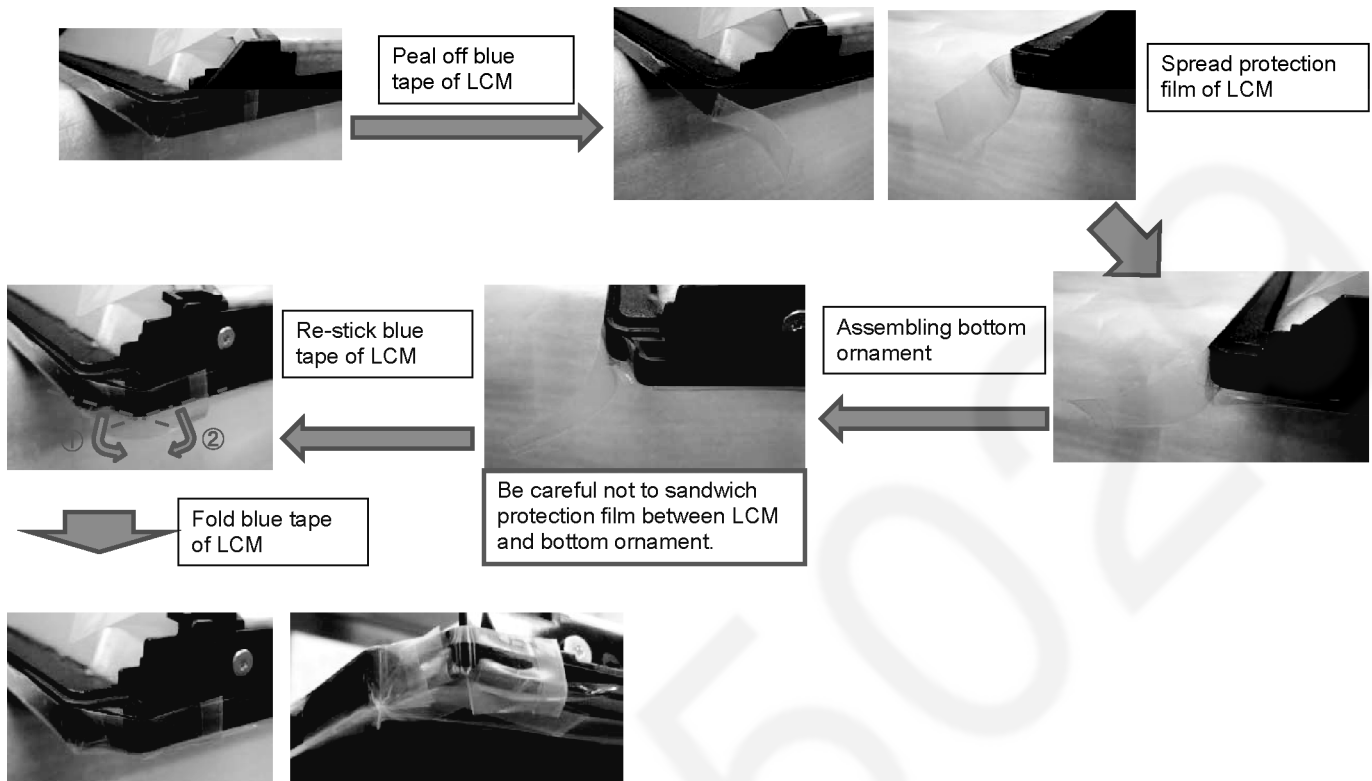




7.3. Sticking Felt

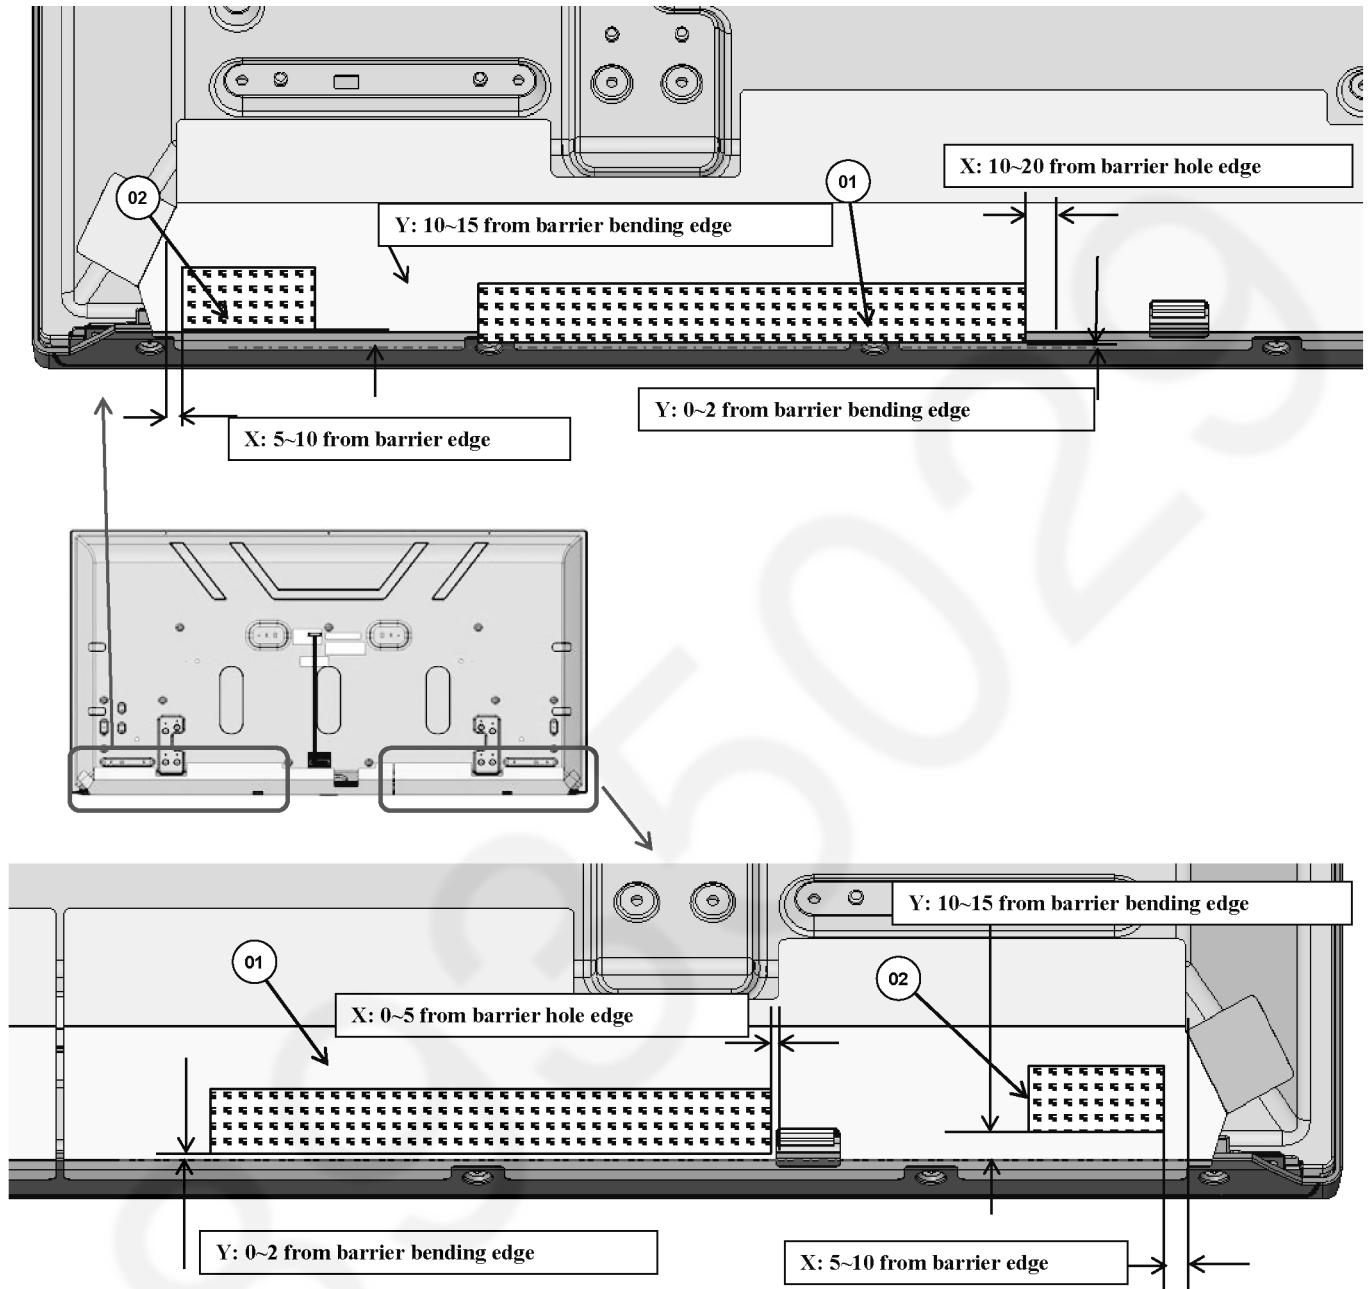


No	Description	Qty	UOM	Remarks
01	FELT(T0.5XW20XL170)	2	PC	
02	FELT(T0.5XW20XL40)	2	PC	

7.4. Install Metal parts

1. Please follow the sequence for assembly each part of metal.

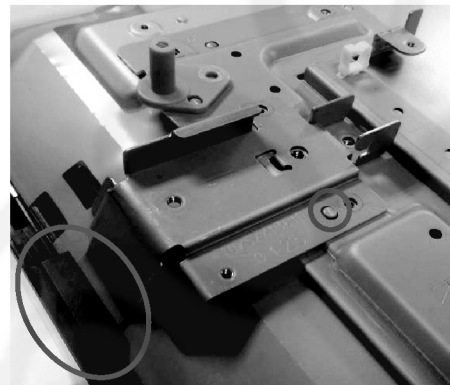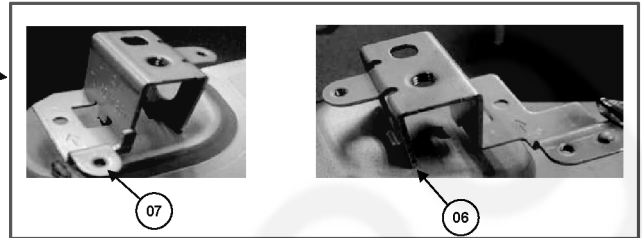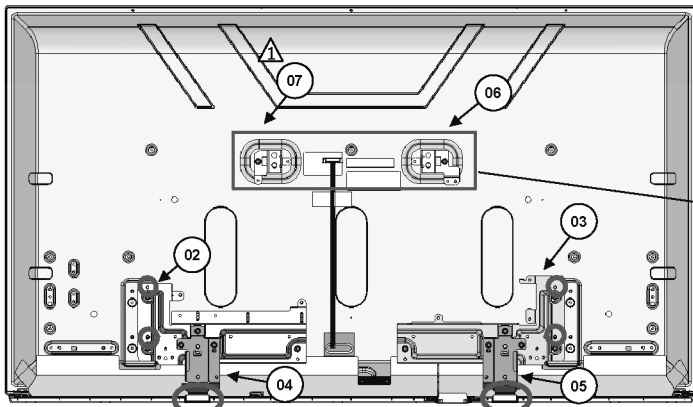

<Caution Point>
Make sure bottom metal
is hook properly under
bottom cabinet.

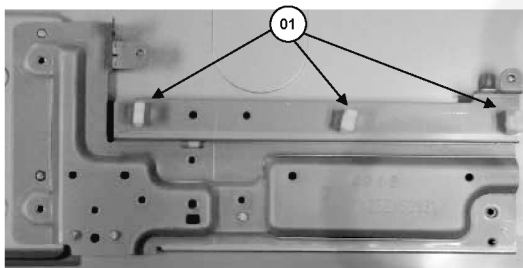


○ Guide pin

No	Description	Qty	UOM	Remarks
01	CLAMPER	3	PC	
02	BOTTOM BASE METAL R	1	PC	
03	BOTTOM BASE METAL L	1	PC	
04	BOTTOM METAL R	1	PC	
05	BOTTOM METAL L	1	PC	
06	VESA METAL L	1	PC	
07	VESA METAL R	1	PC	


7.5. Screw Spec

1. Screw assy follow step below.

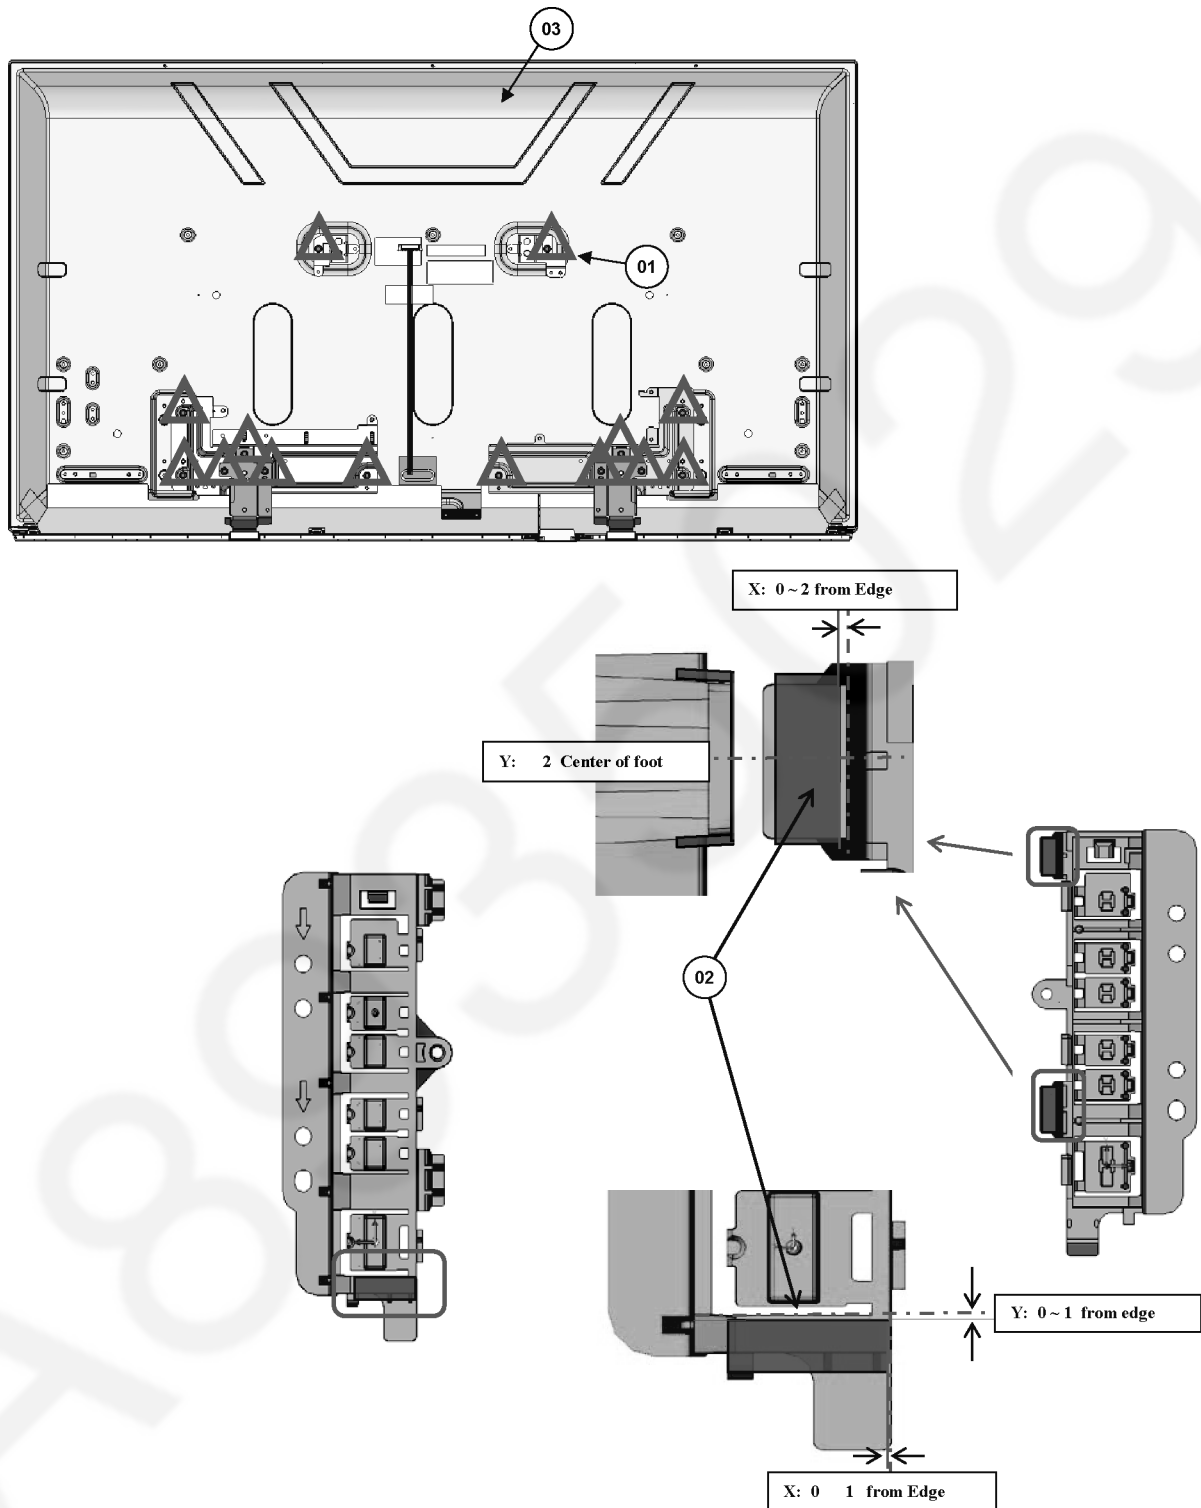

No	Description	Qty	UOM	Remarks
01	SCREW	14	PC	4-4 Kgfc
02	FELT	3	PC	
03	LCD_PANEL	1	PC	


7.6. Cabinet Assembly

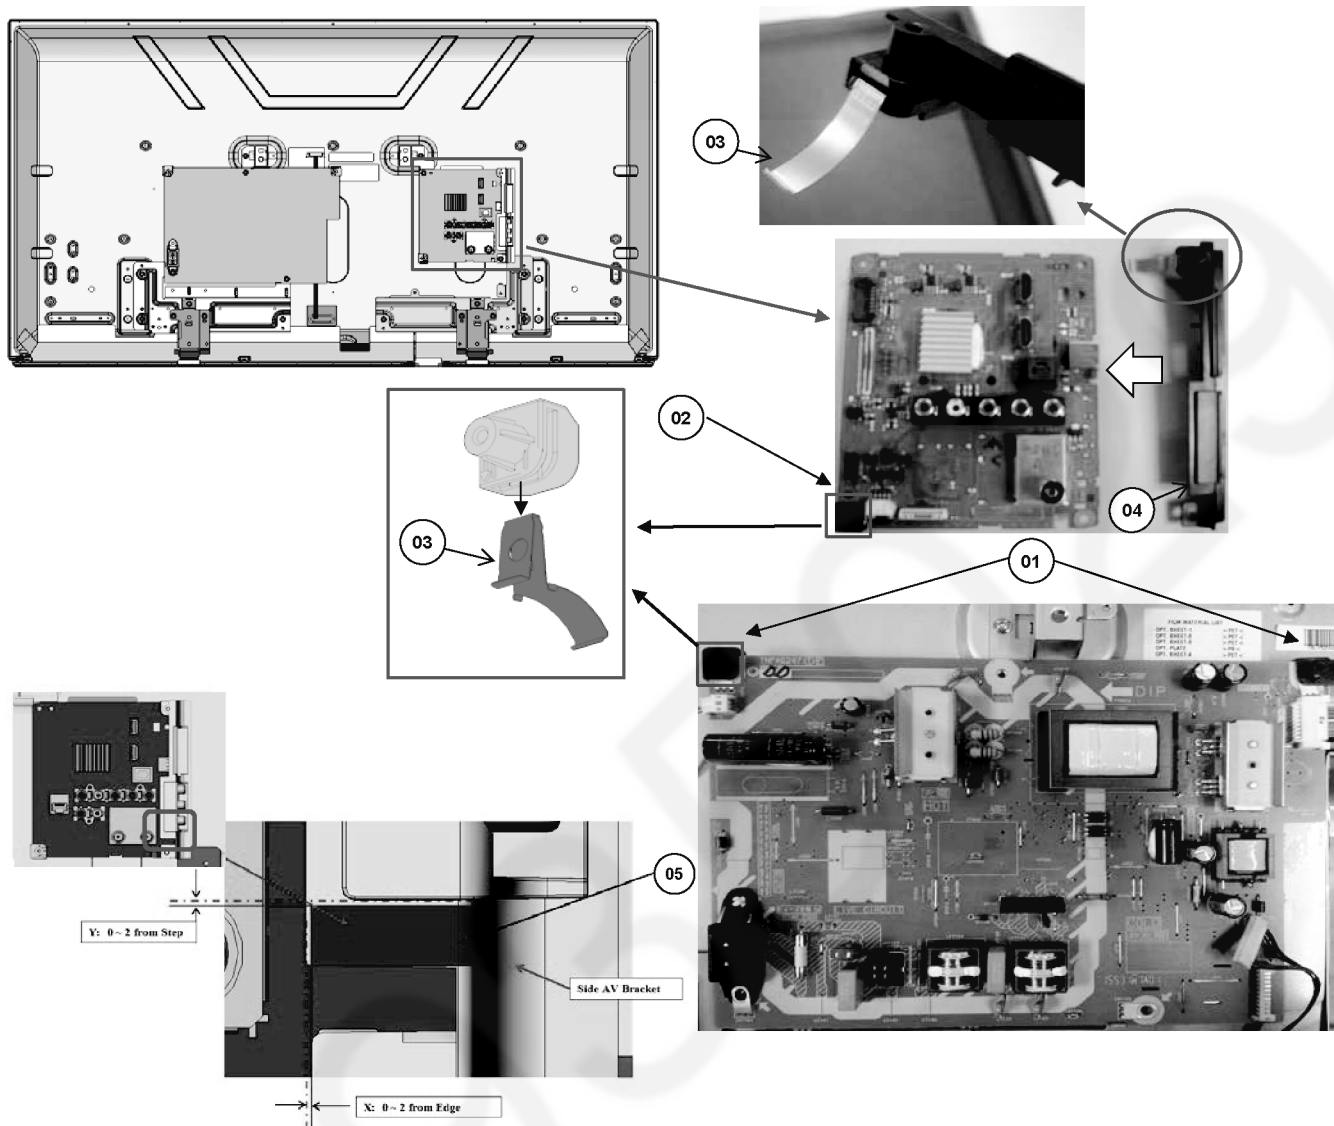

No	Description	Qty	UOM	Remarks
01	CH MOUNT BOSS	2	PC	
02	CH MOUNT BOSS	1	PC	
03	GROUND SPRING	3	PC	
04	SIDE_AV_BRACKET	1	PC	
05	FELT (T0.35XW5XL15)	1	PC	


7.7. Set Assembly

1. Screw assy follow step below.

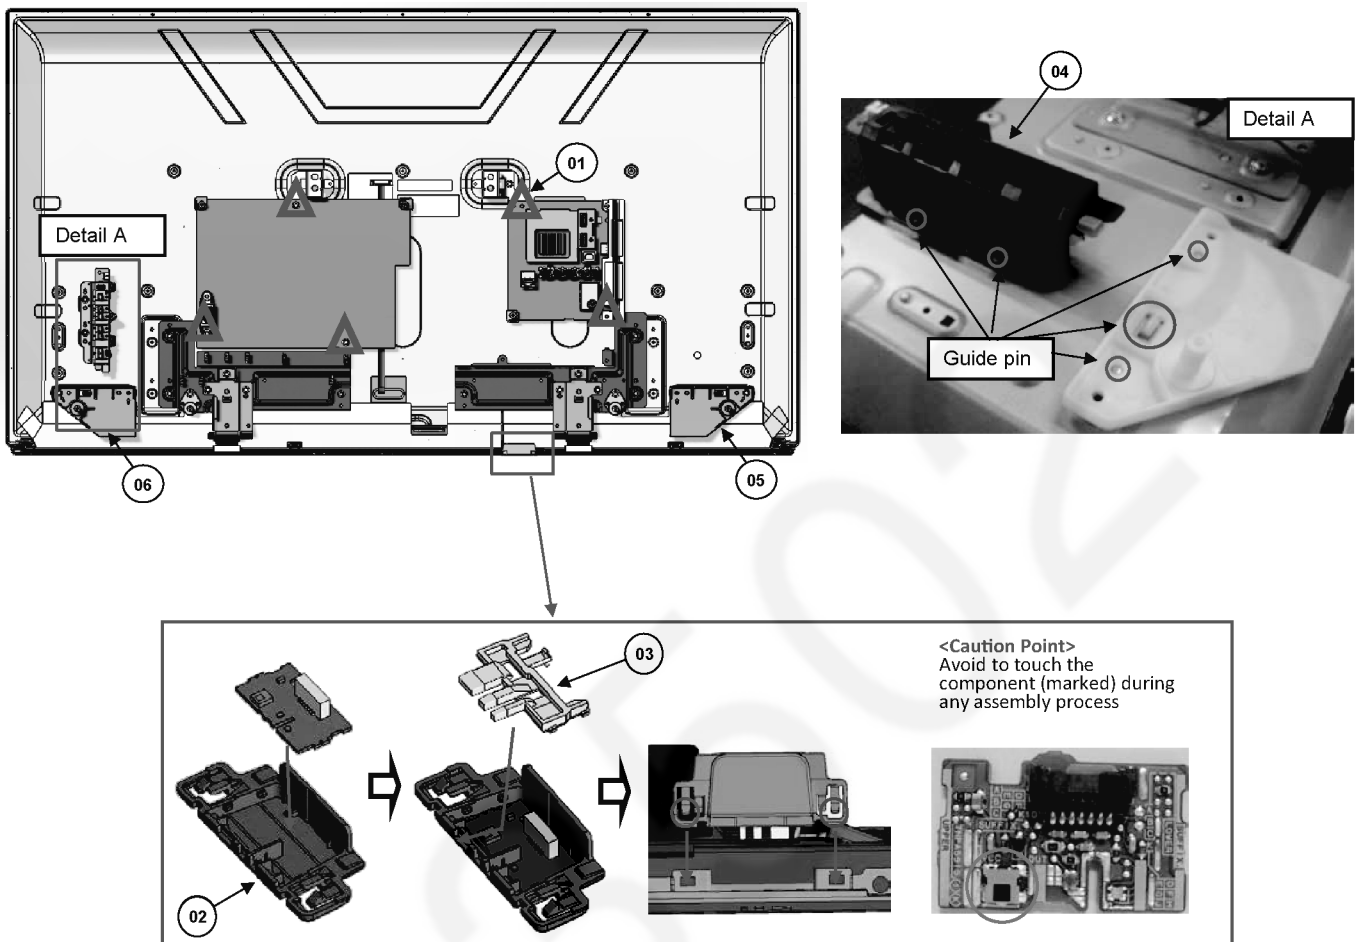



No	Description	Qty	UOM	Remarks
01	SCREW	5	PC	4-5Kgfcmm
02	LED_PANEL_CASE	1	PC	
03	LED_PANEL	1	PC	
04	KEY_BUTTON_BRACKET	1	PC	
05	SP_BRACKET_L	1	PC	
06	SP_BRACKET_R	1	PC	

7.8. SP Assy

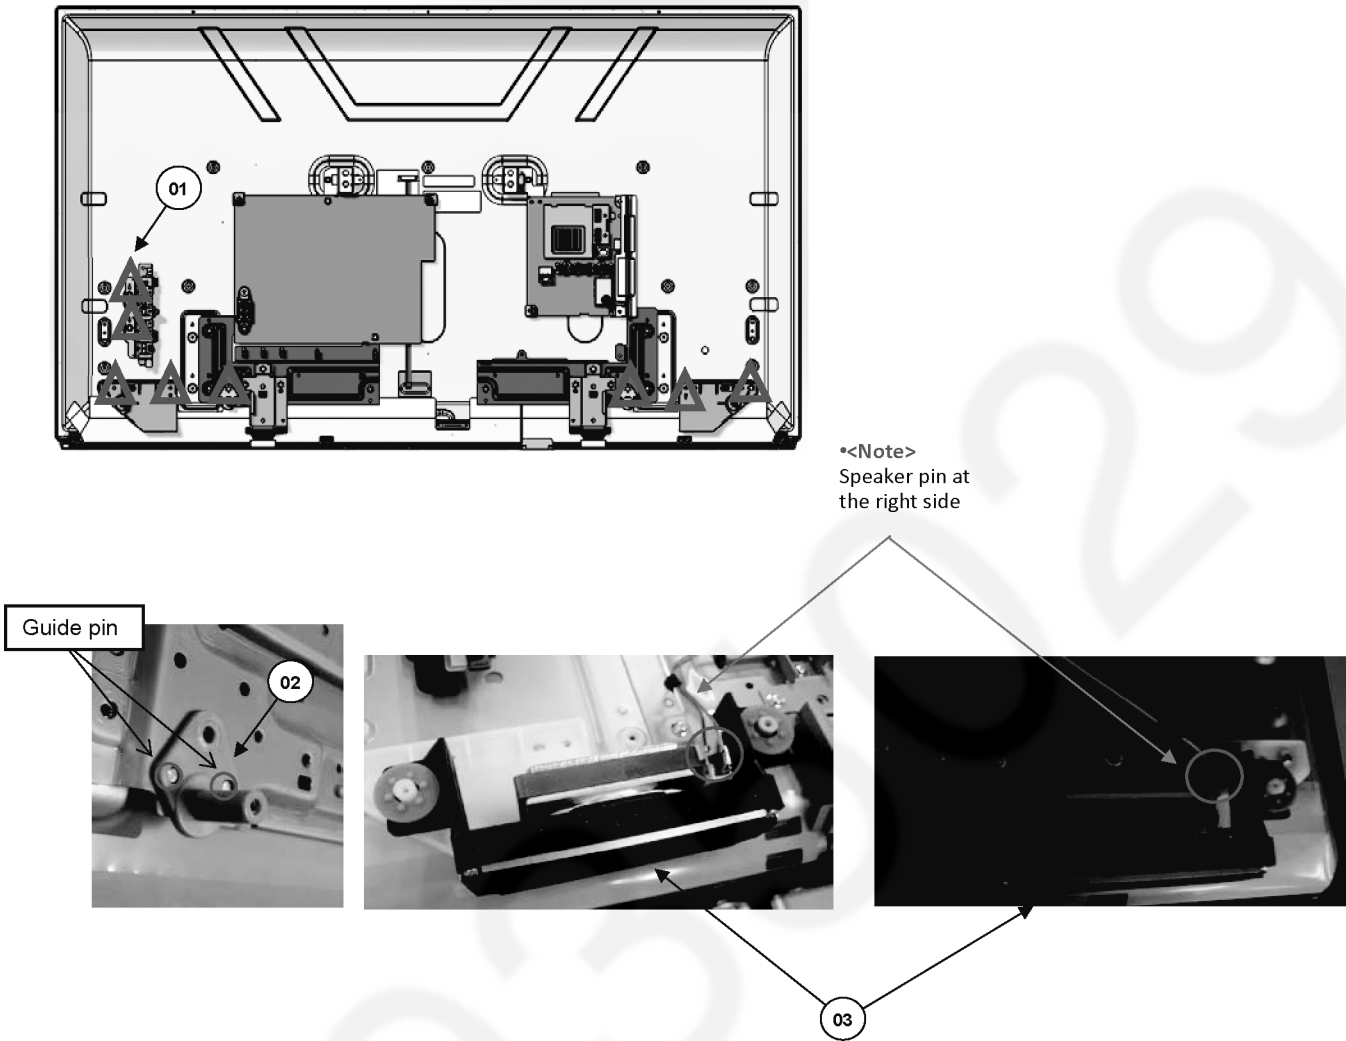


No	Description	Qty	UOM	Remarks
01	SCREW	8	PC	4-5Kgfcmm
02	SP_BRACKET	2	PC	
03	SPEAKER_L/R	2	PC	

7.9. Back Cover Assy 1

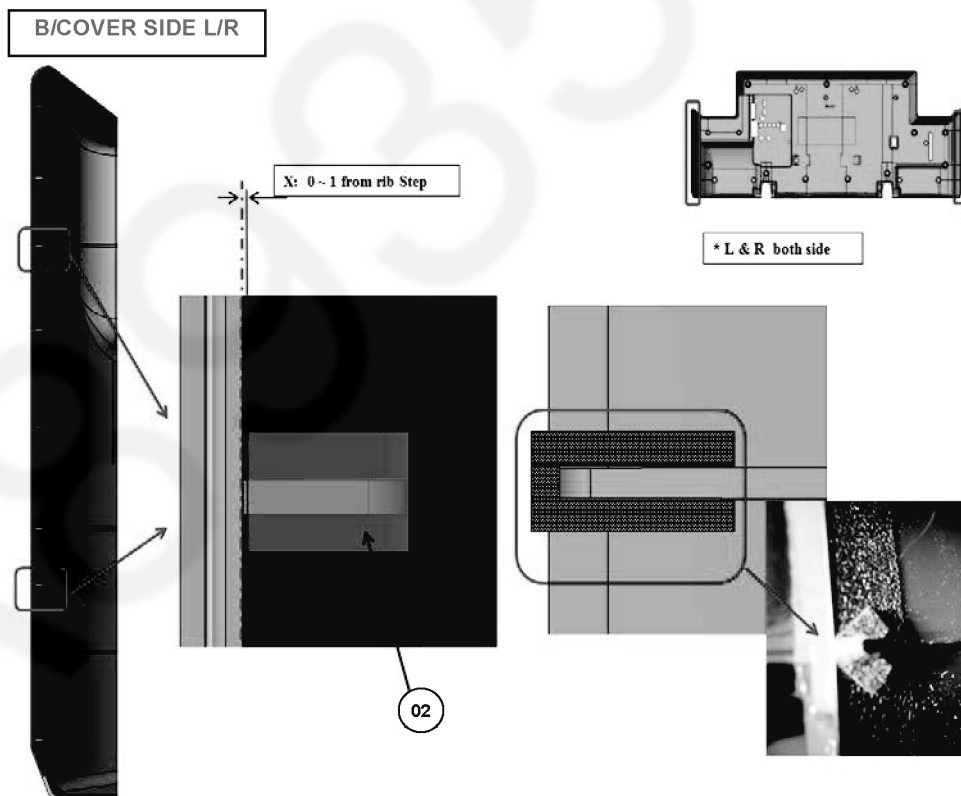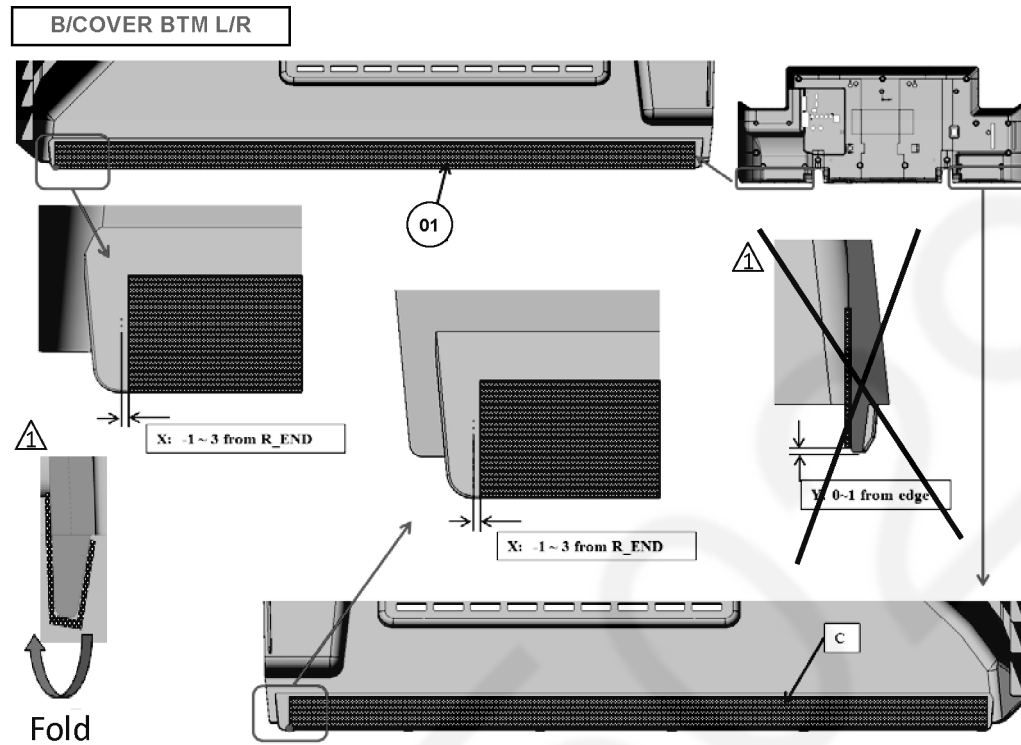


No	Description	Qty	UOM	Remarks
01	FELT	2	PC	
02	FELT	4	PC	

7.10. Back Cover Assy 2

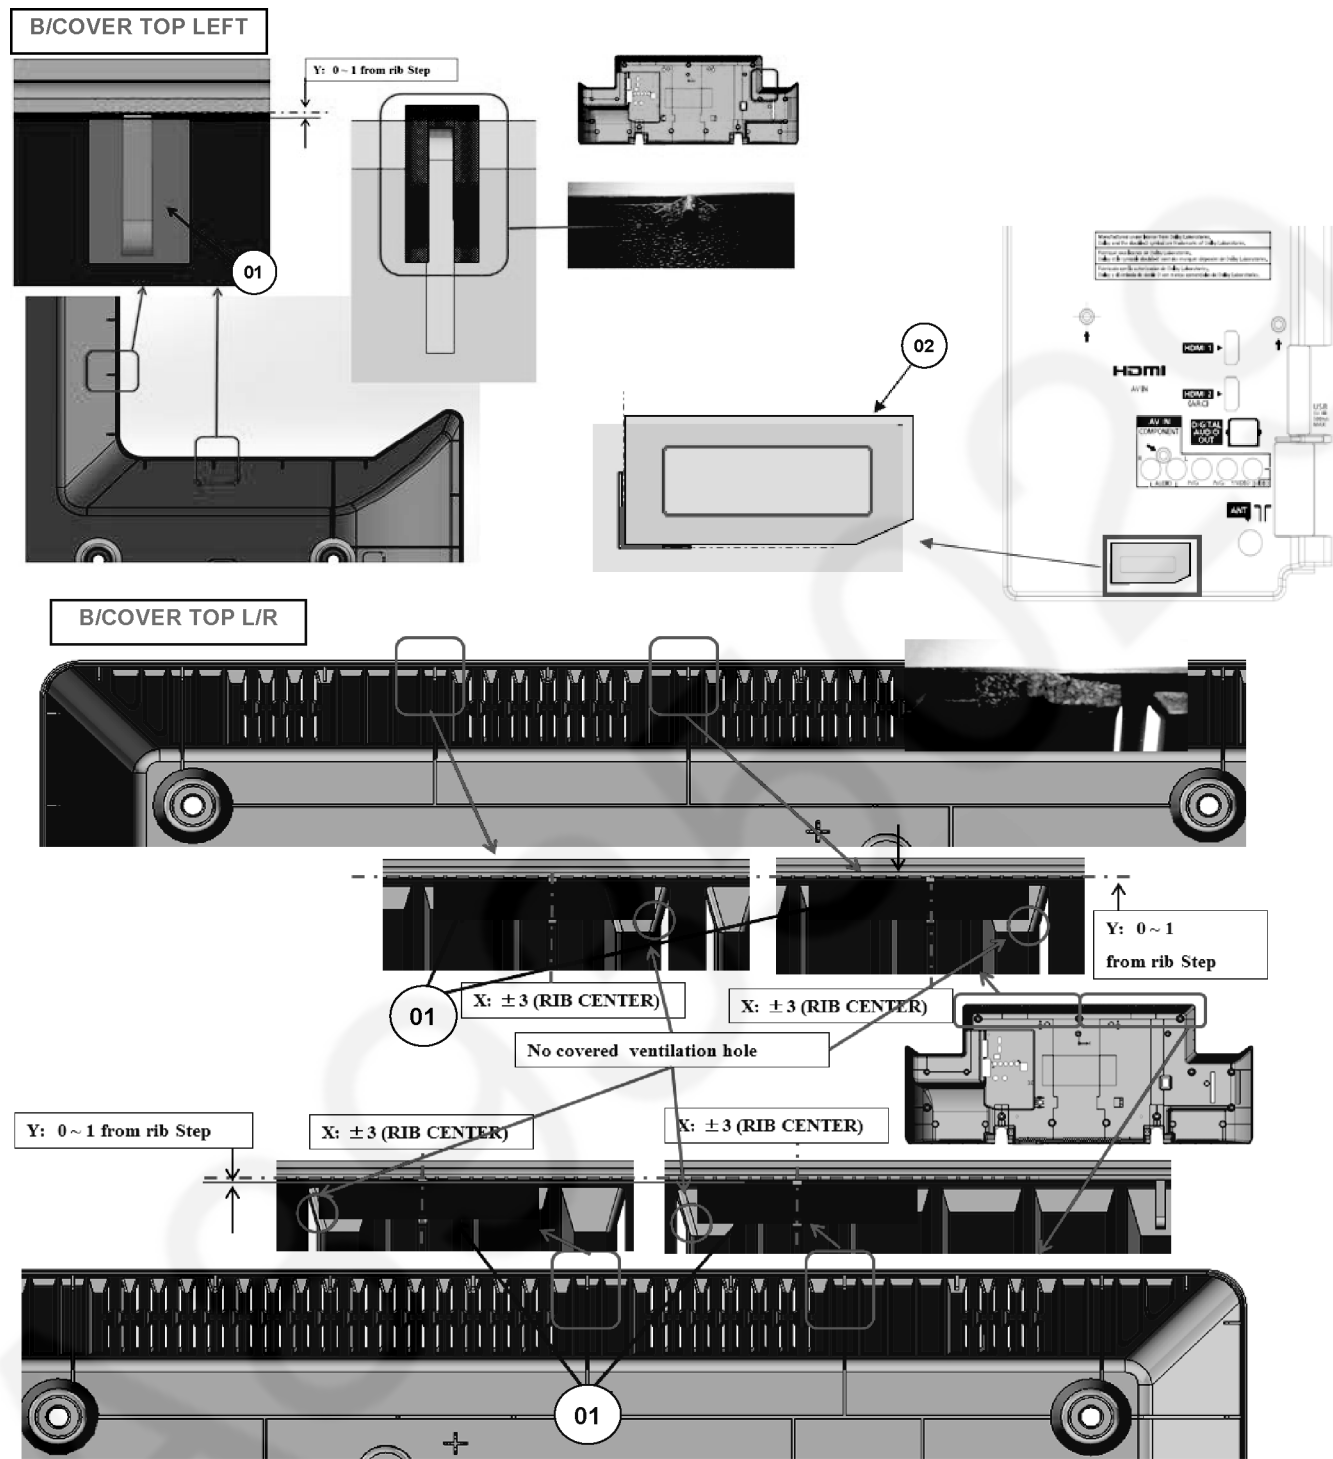



No	Description	Qty	UOM	Remarks
01	FELT	6	PC	
02	ADJUSTMENT SHEET	1	PC	

7.11. Back Cover Assy 3

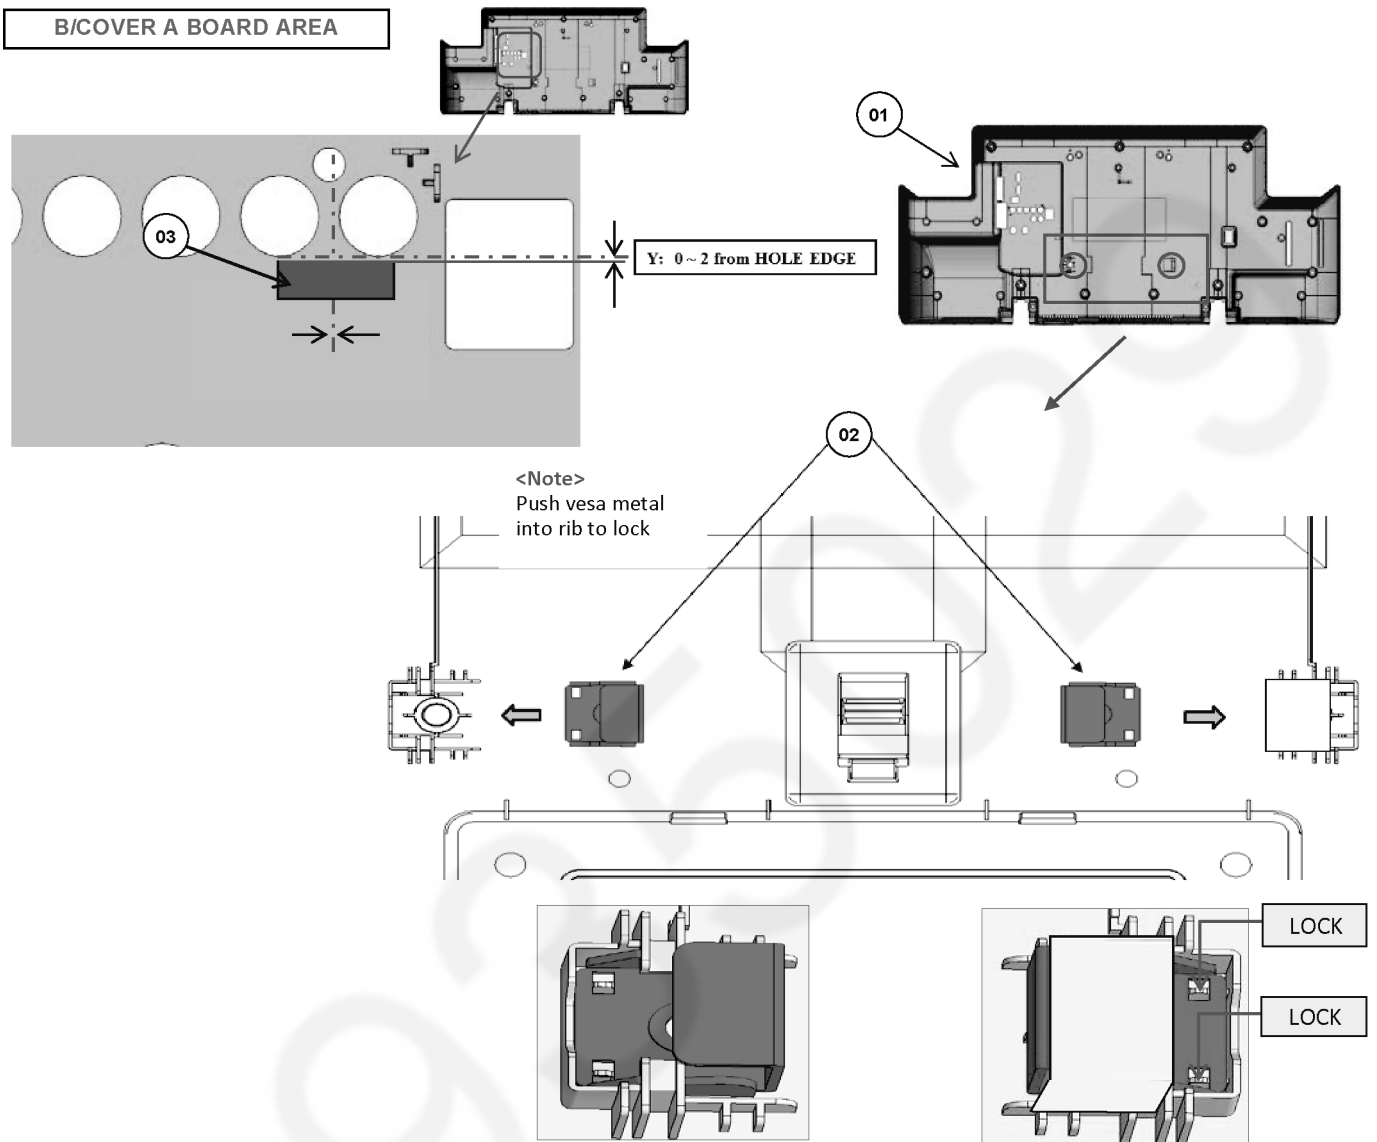


No	Description	Qty	UOM	Remarks
01	BACK_COVER	1	PC	
02	VESA_METAL_BOTTOM	2	PC	
03	FELT	1	PC	

7.12. Back Cover Assy 4

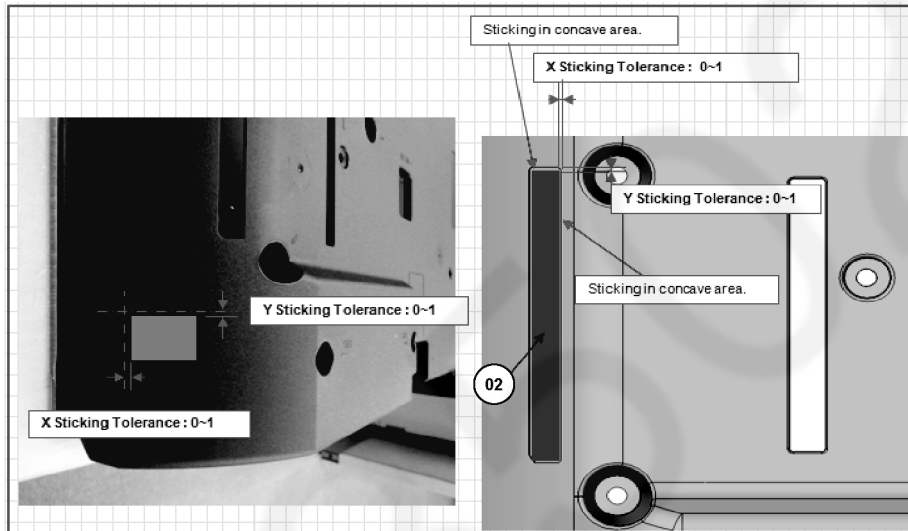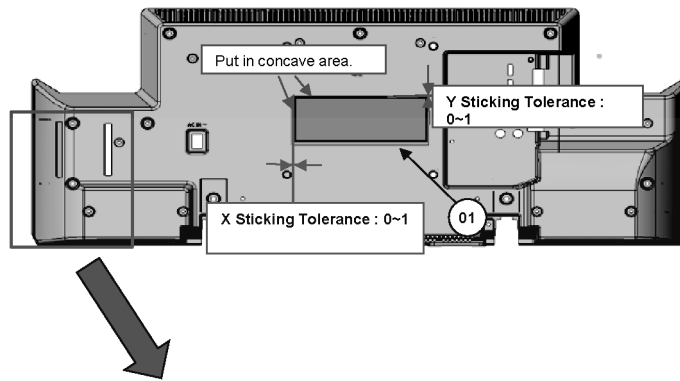


⚠ <Caution Point>
Please screw this point 1st.

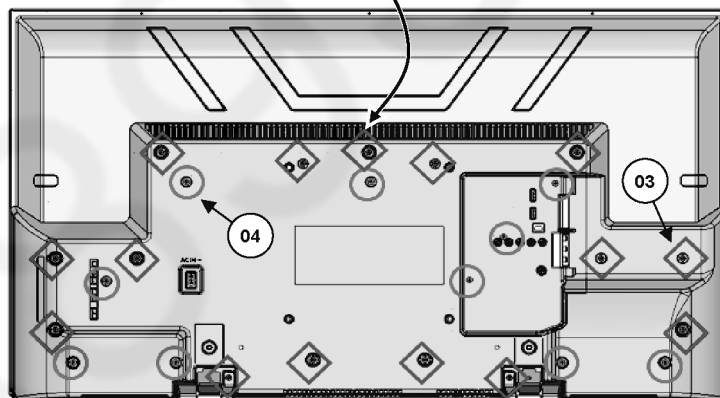

No	Description	Qty	UOM	Remarks
01	MODEL NAME PLATE	1	PC	
02	SIDE_BUTTON_LABEL	1	PC	
03	SCREW(BC15)	15	PC	3.5-5.5KgfcM
04	SCREW(BCSP/4/KEY1/P2/A3)	10	PC	5-7KgfcM

7.13. Labelling

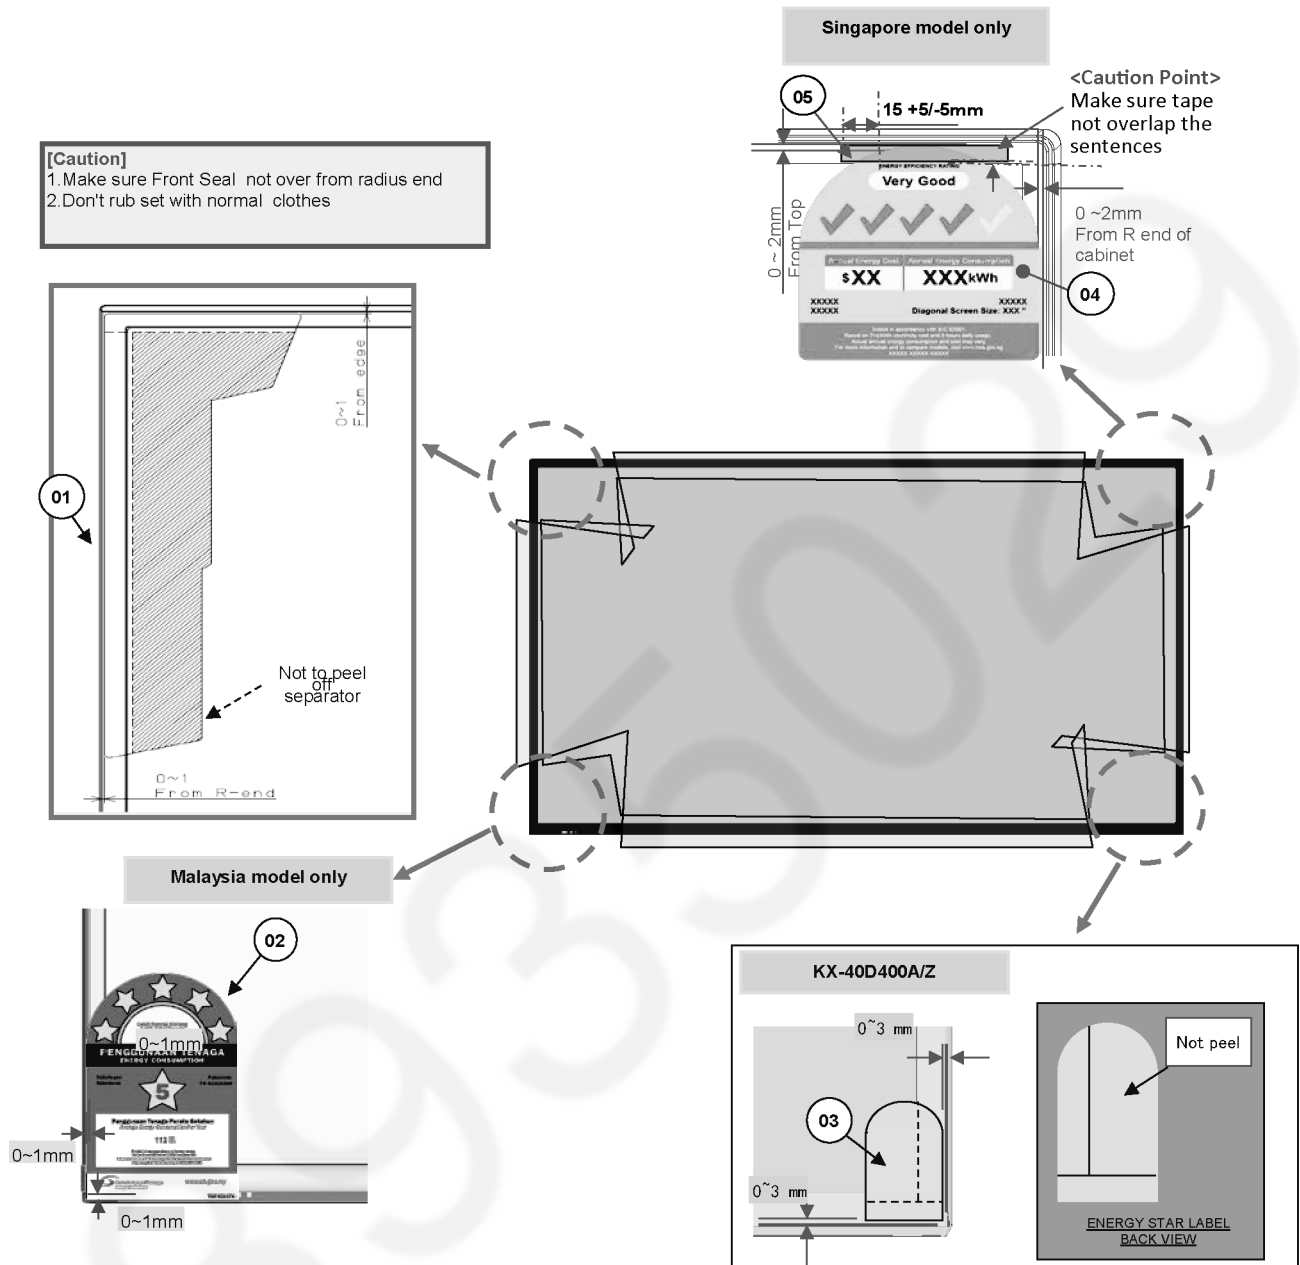

No	Description	Qty	UOM	Remarks
01	POP STICKER	1	PC	
02	ENERGY LABEL	1	PC	40D400K
03	ENERGY LABEL	1	PC	40D400A/Z
04	ENERGY LABEL	1	PC	40D400S
05	BLUE TAPE(0.06)	1	PC	S MARKET ONLY

7.14. Handling SPEC

? Moving the LCD module


The module should be handle by two people and hold on that top and bottom long side by both hands without module warping. Never handle the module with keeping horizontal position when moving the module in order to avoid internal damage and deformation. Never drop or hit the module.

? About the work table

When tightening a screw, retention structures are required not to deform the LCD module.

? Moving the TV (Case with a stand)

Hold the specified parts as shown to stand the TV up and move it with two people.

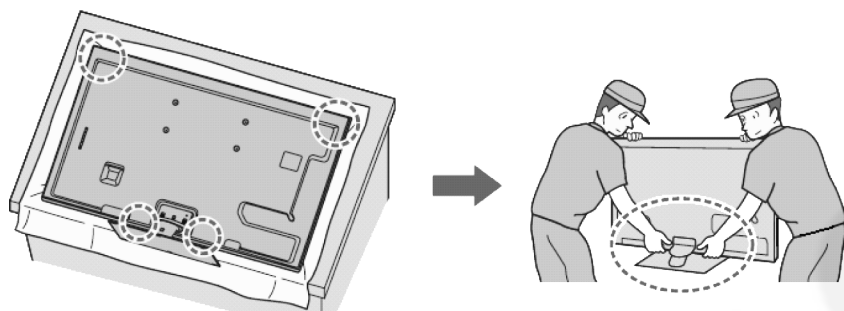

8 Measurements and Adjustments

8.1. Voltage chart of A-board

Set A-Board to a dummy set and check the satisfaction with the specified voltage as following table.

Power Supply Name	Measurement Point	Specification (V)	Remark
SUB1.2V	TP8004	1.14 - 1.26	-
SUB3.3V	TP8003	3.19 - 3.46	-
SUB5V	TP8002	4.92 - 5.25	-
STB5V	TP8009	5.3 ± 0.3	-
PNL12V	TP4300	11.5 - 12.5	-

8.2. Voltage chart of P-board

Set P-Board to a dummy load and check the satisfaction with the specified voltage as following table.

Voltage	Test Point	Specification	
		Operate	STBY
STB5.3V	TP7507	5.2 ± 0.2V	5.3 ± 0.2V
P16V	TP7508	15.8 ± 0.5V	-
LED ANODE	TP7511	24.0 ± 2.4V	-

NOTE: GND REFERENCE TP7520/ TP7521/ TP7522 (COLD SIDE)


Step 1 Supply AC 100V/230 to JK7101 connector in the P-Board. Main power button is OFF.

Step 2 Supply DC 2.5V to TV_SUB_ON P2 connector - pin 8 (TP7416), displayed as SWITCH.

NOTE : GND REFERENCE TP7413/TP7414/TP7415/TP7515/TP7516/TP7517 (COLD SIDE)

9 Block Diagram


9.1. Main Block Diagram

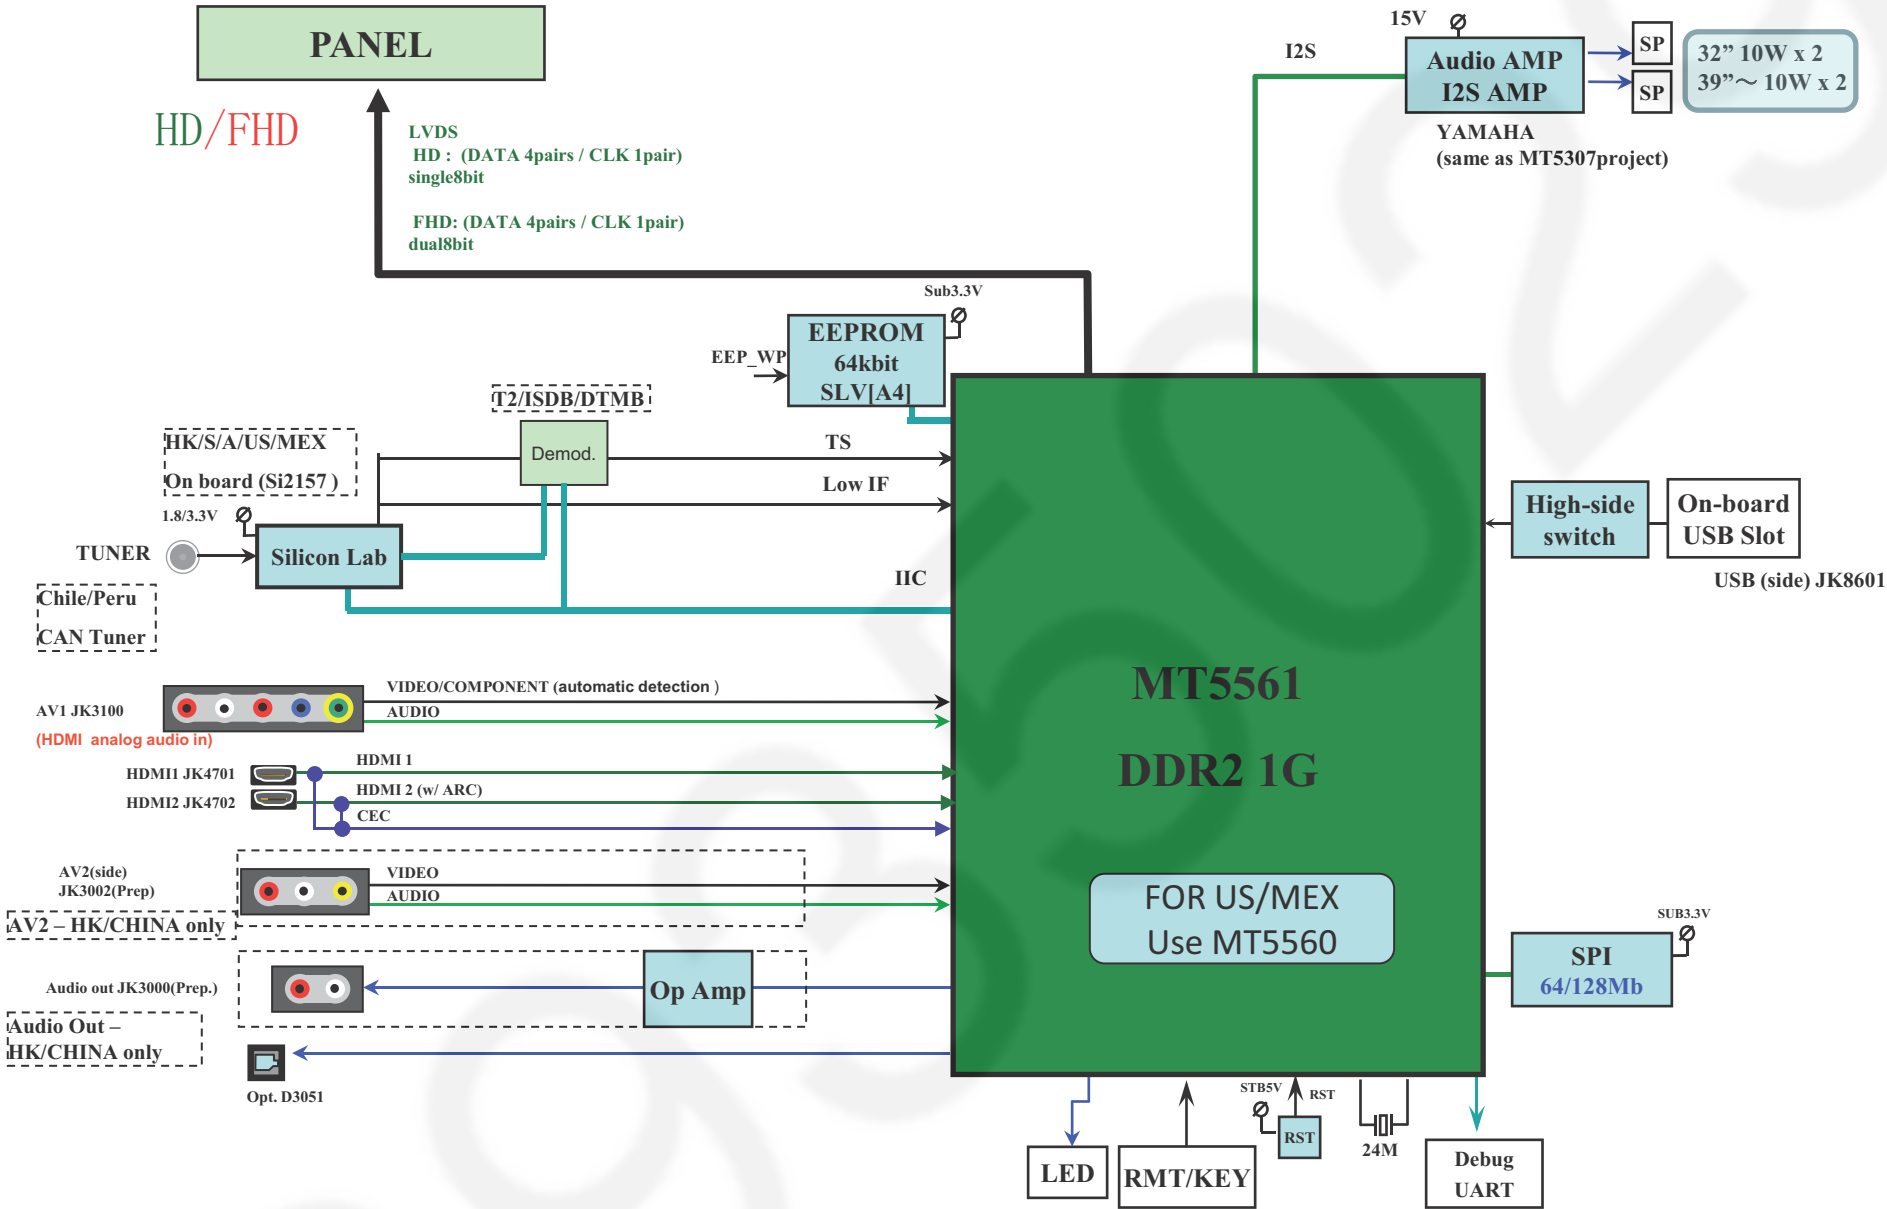

10 Wiring Connection Diagram

10.1. Wire Dressing


1. Stick PET TAPE follow spec and market accordingly.

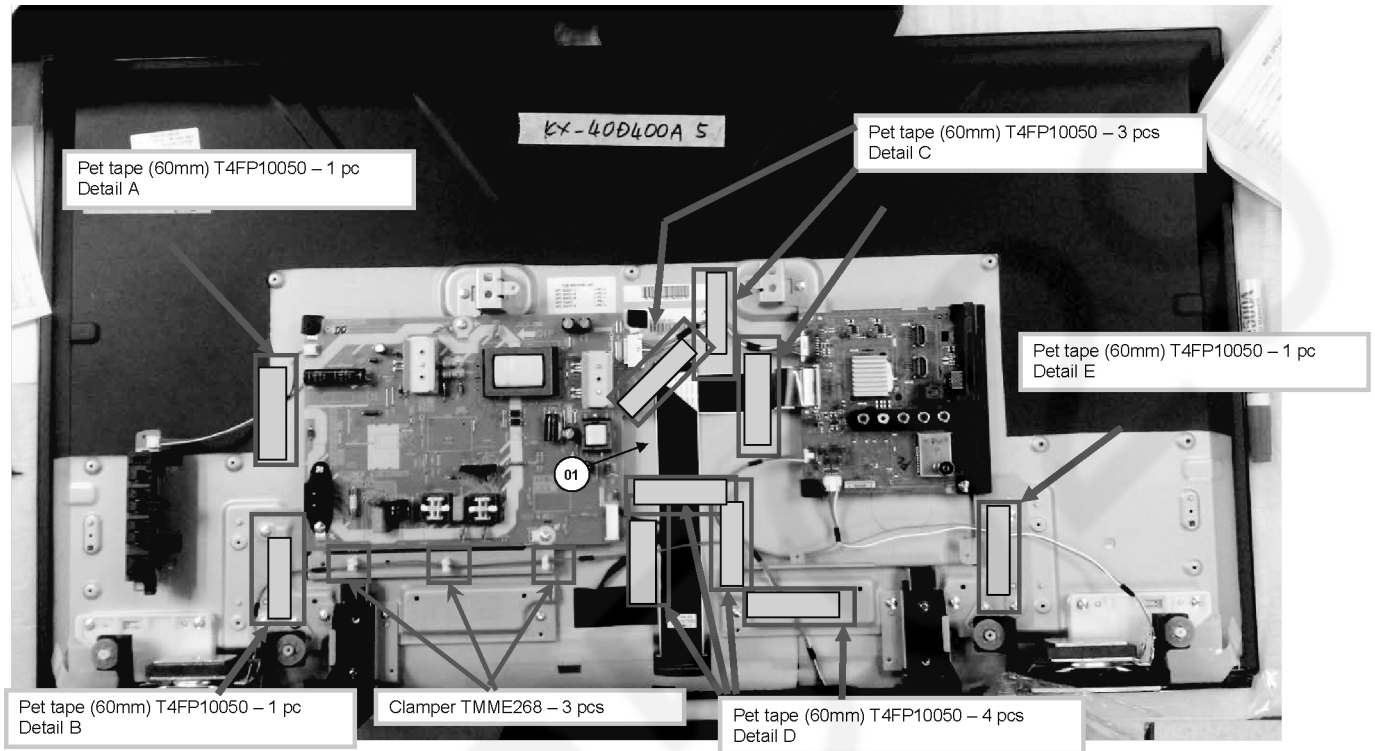


No	Description	Qty	UOM	Remarks
01	LVDS CABLE	1	PC	
02	PET TAPE(0.06*10)	0.66	MT	

10.2. Wire Dressing II

1. Stick PET TAPE follow spec and market accordingly.

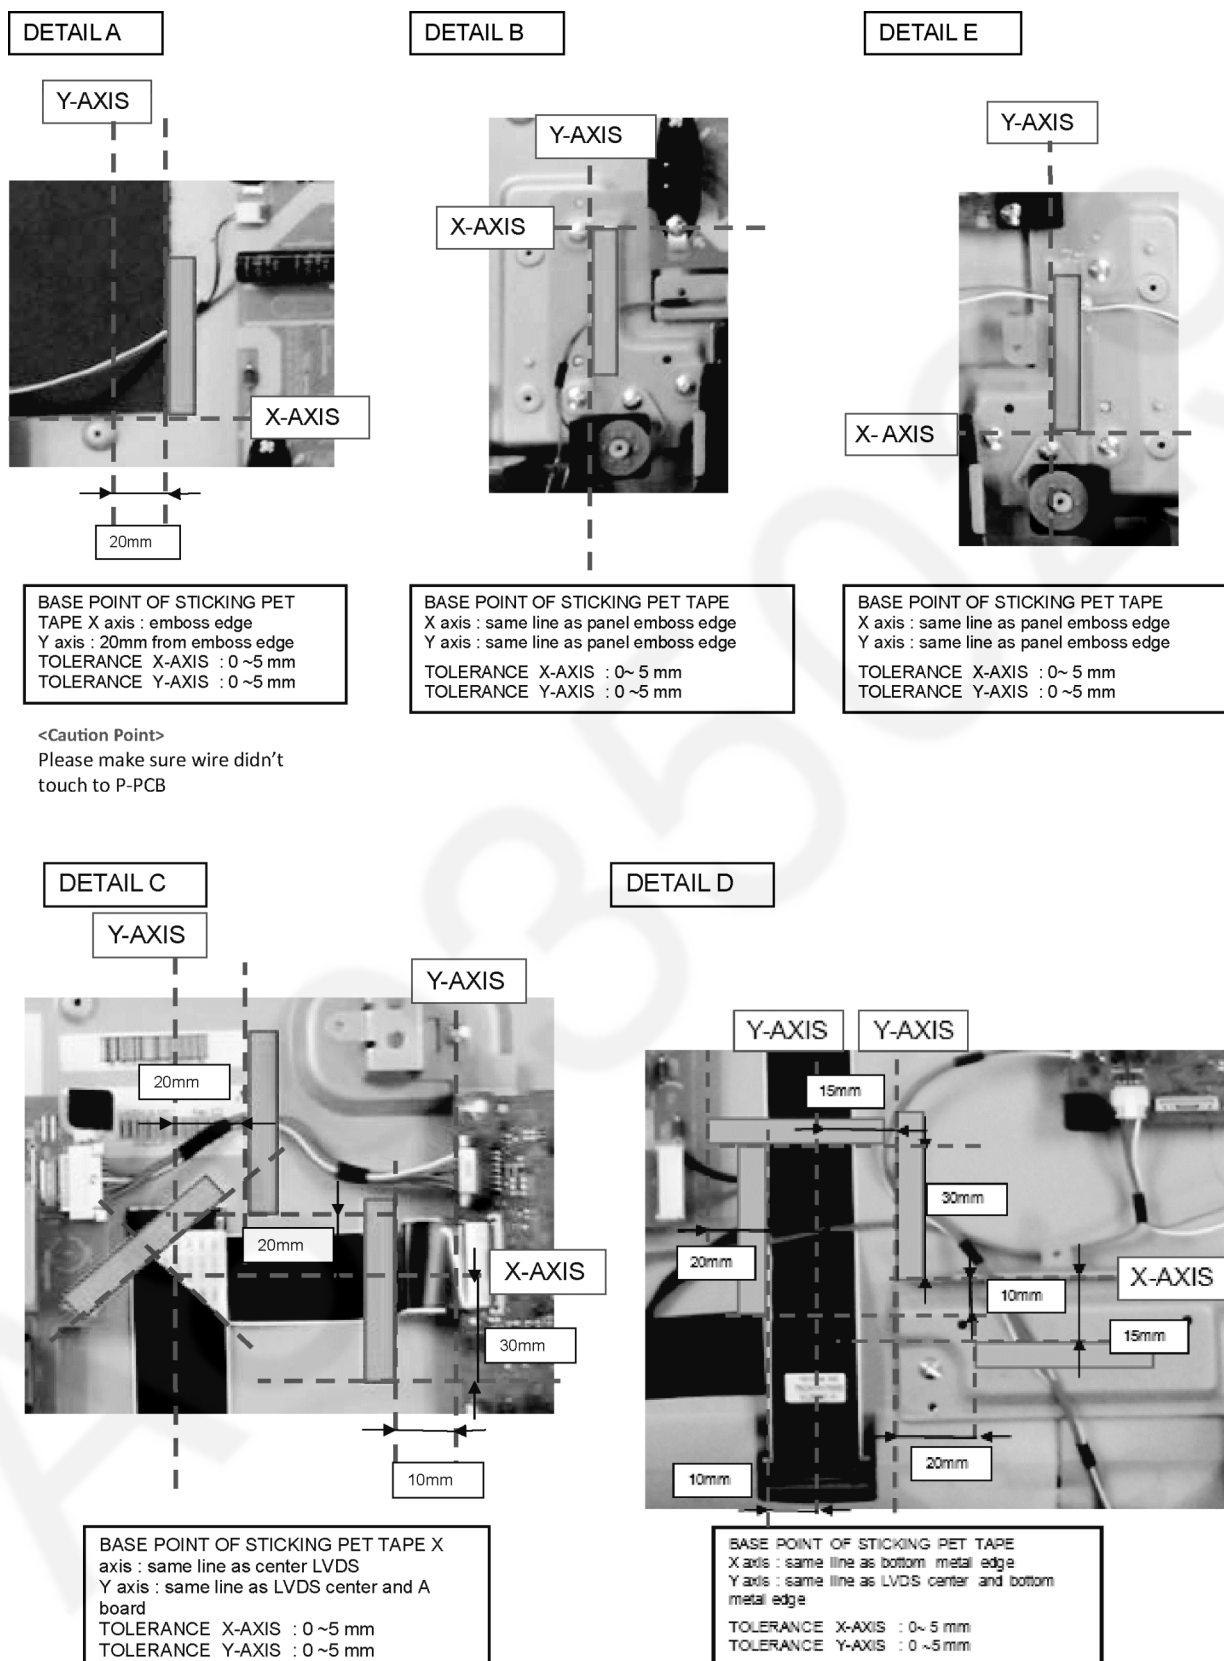

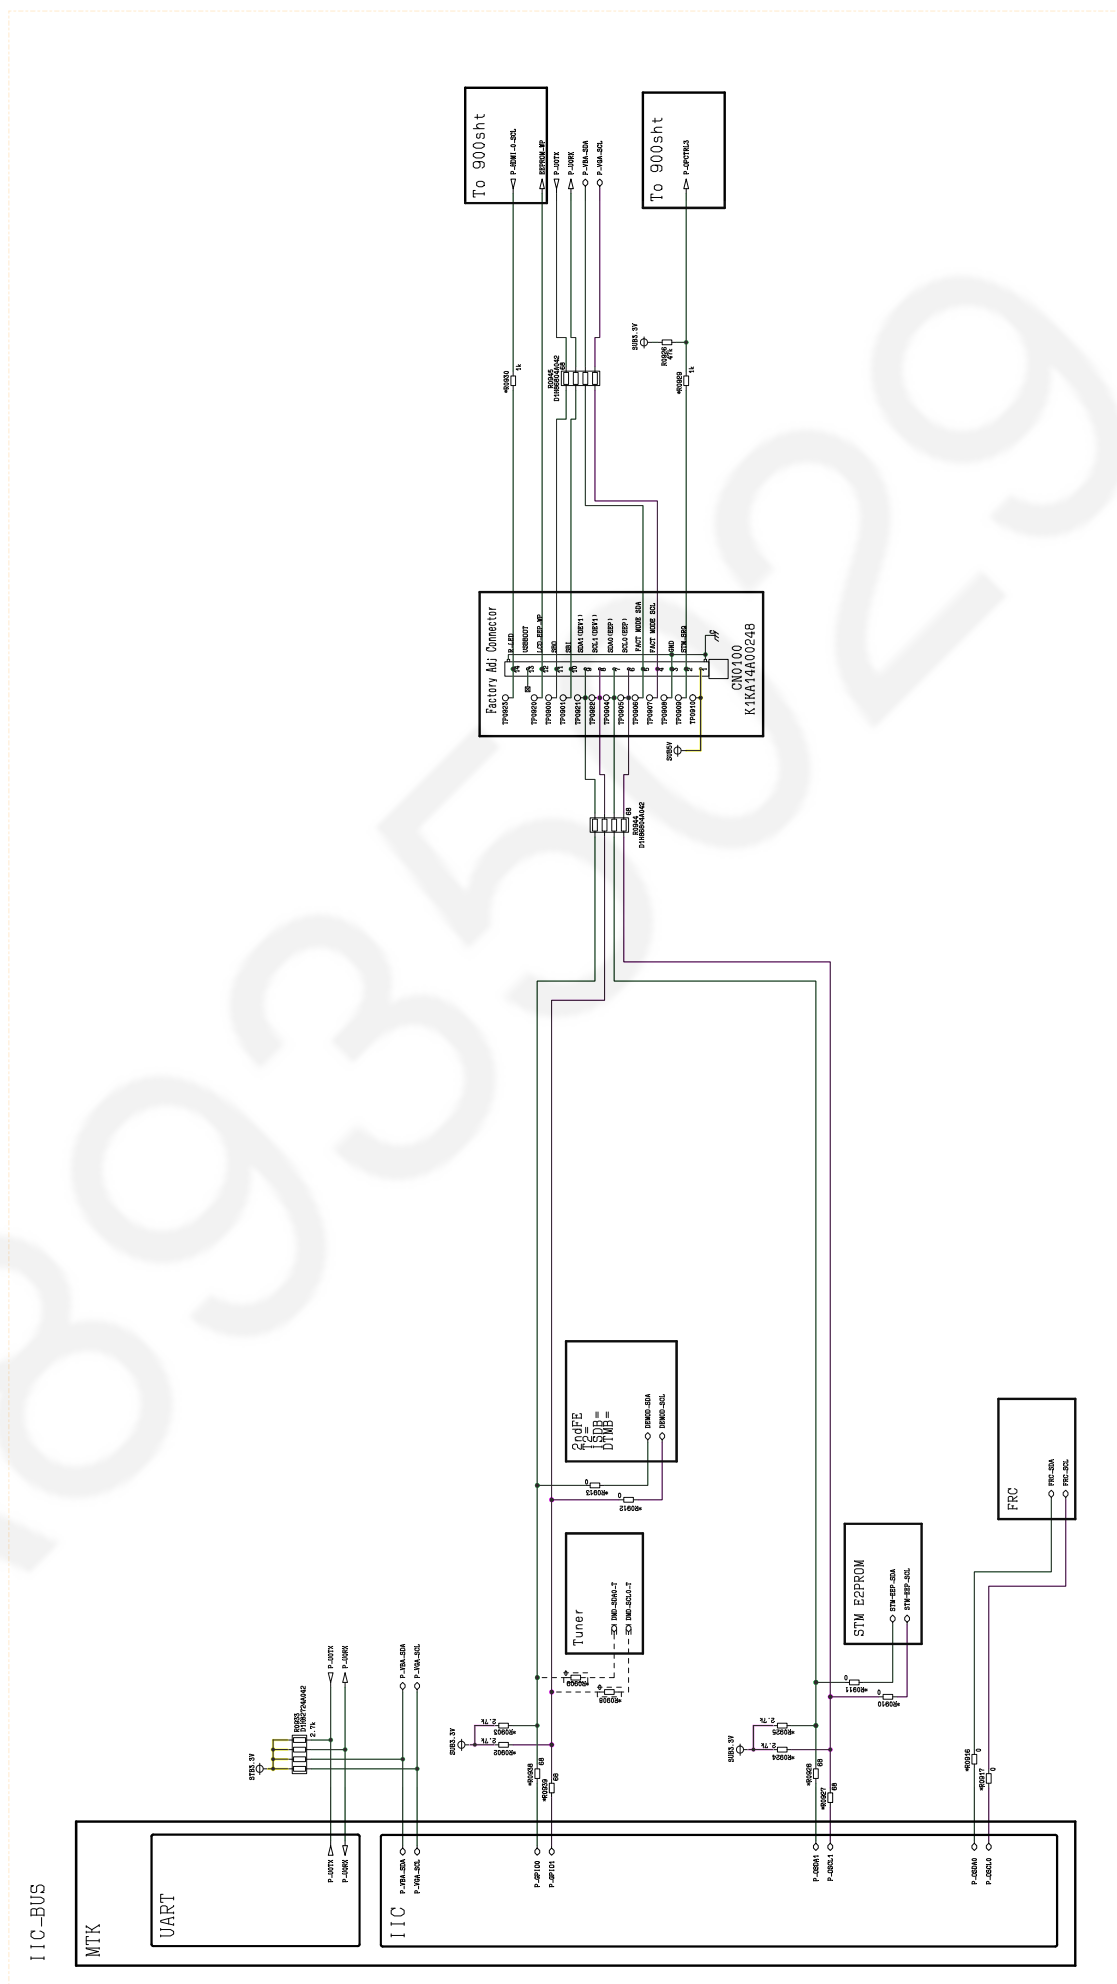


[Block Name] [Net Variation] Common

Audio-AMP

REF No. 4900 - 4999


AMP

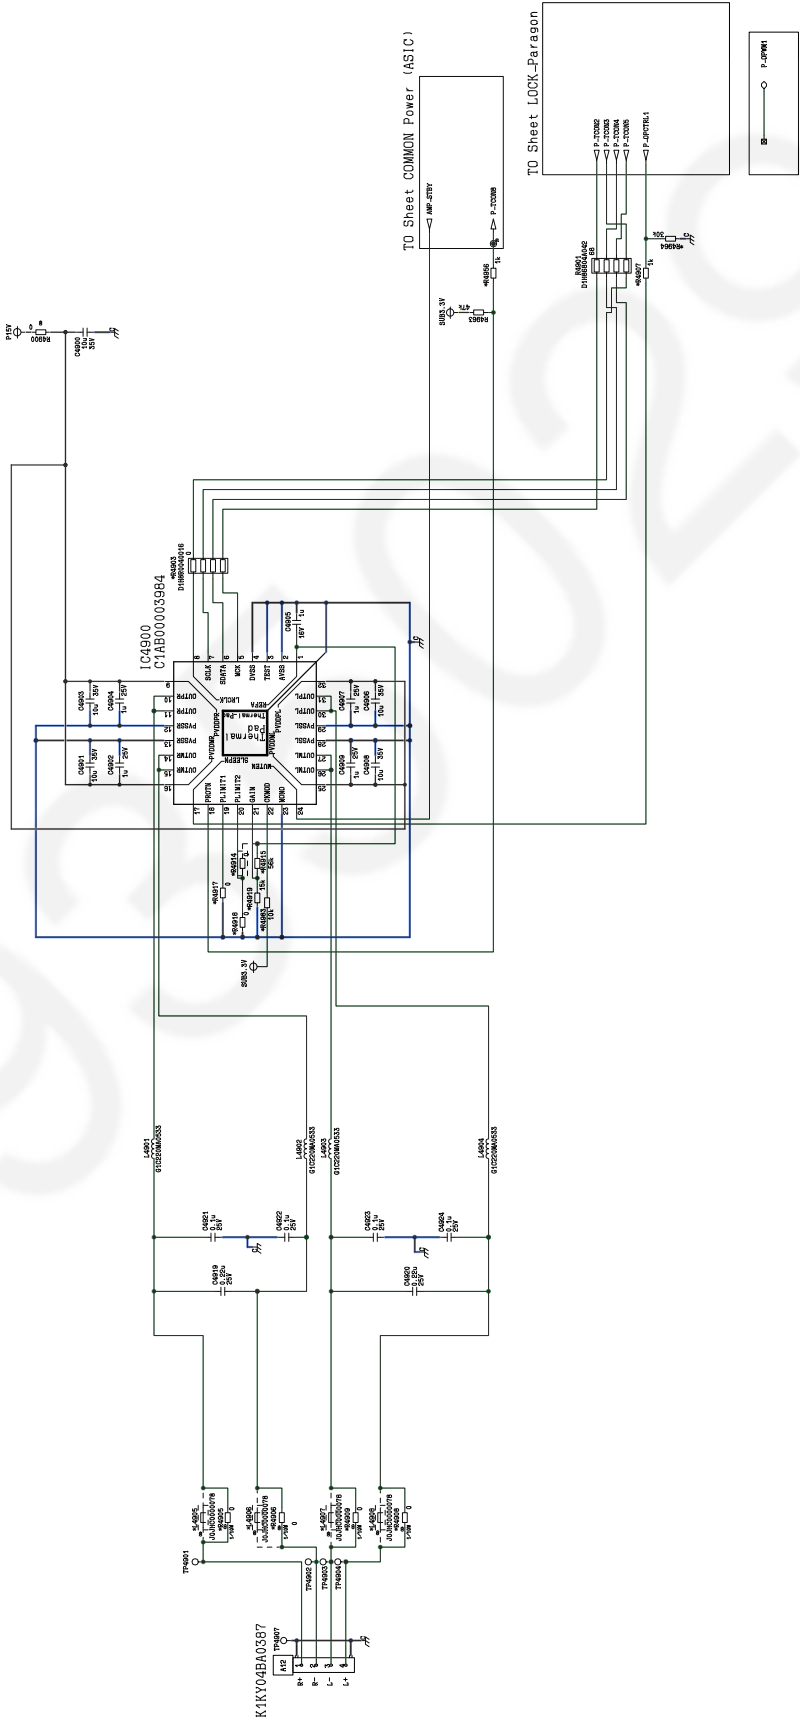

[Block Name]
HDMI Connector IF
REF No. 4500 - 4749
[Net Variation]
MTK-HDMI2-MODEL

SHEET 003
HDMI / AudioAMP


HDMI 1

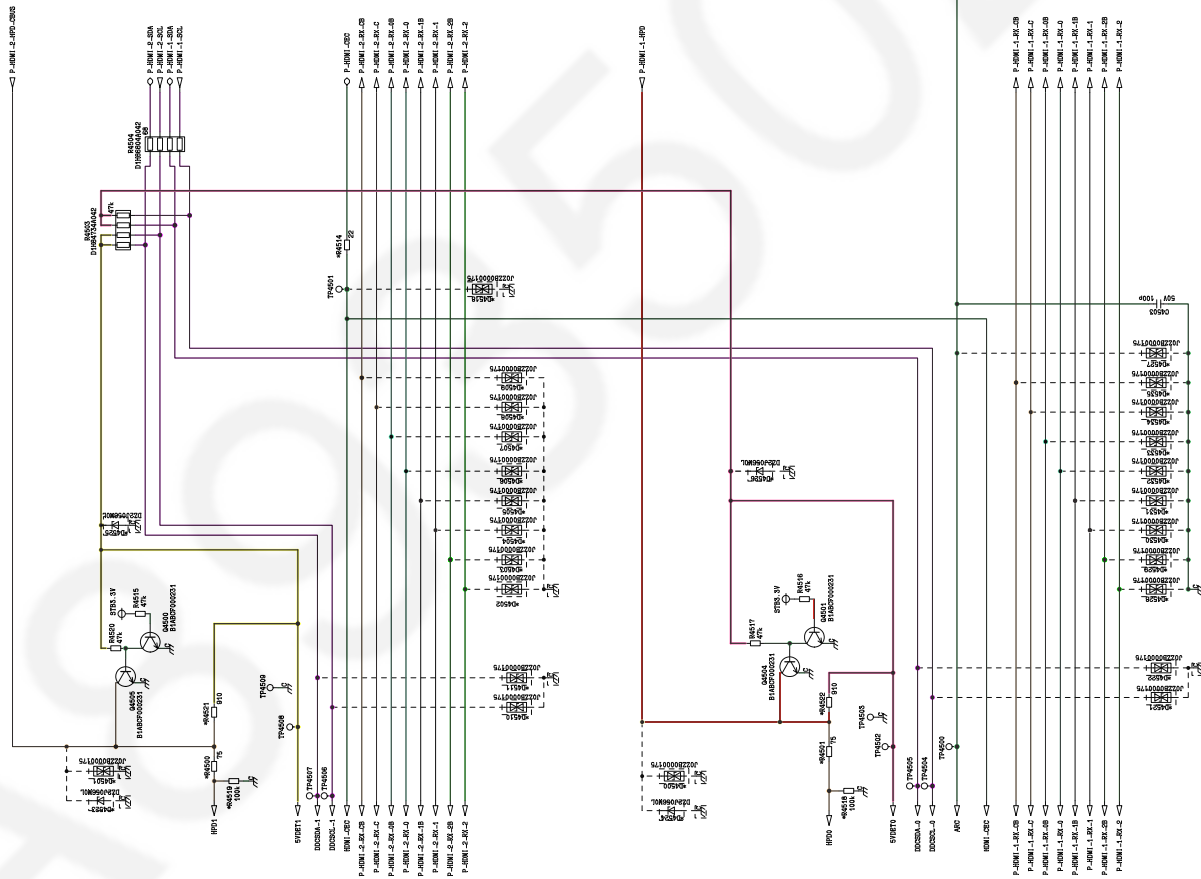


HDMI 2

MONITOR OUT

US	:NON	USE
GM	:USE	

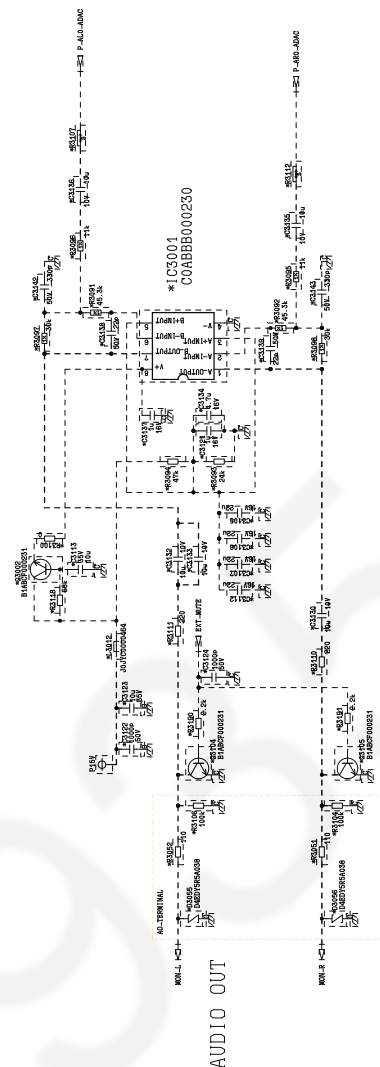


YPPBY

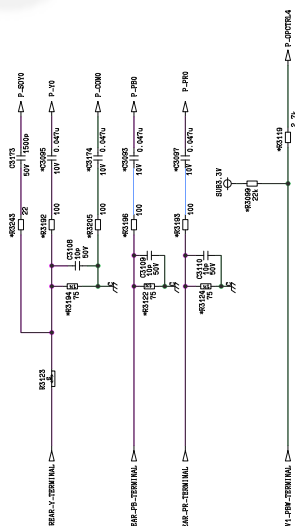


AV2(SIDE)

	US	GM	:NON	:USE	USE
--	----	----	------	------	-----

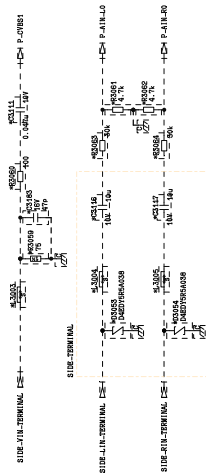


VIDEO/AUDIO IN

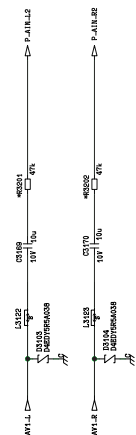


SHEET 009
LVDS-IF

REF No. 4000 - 4499

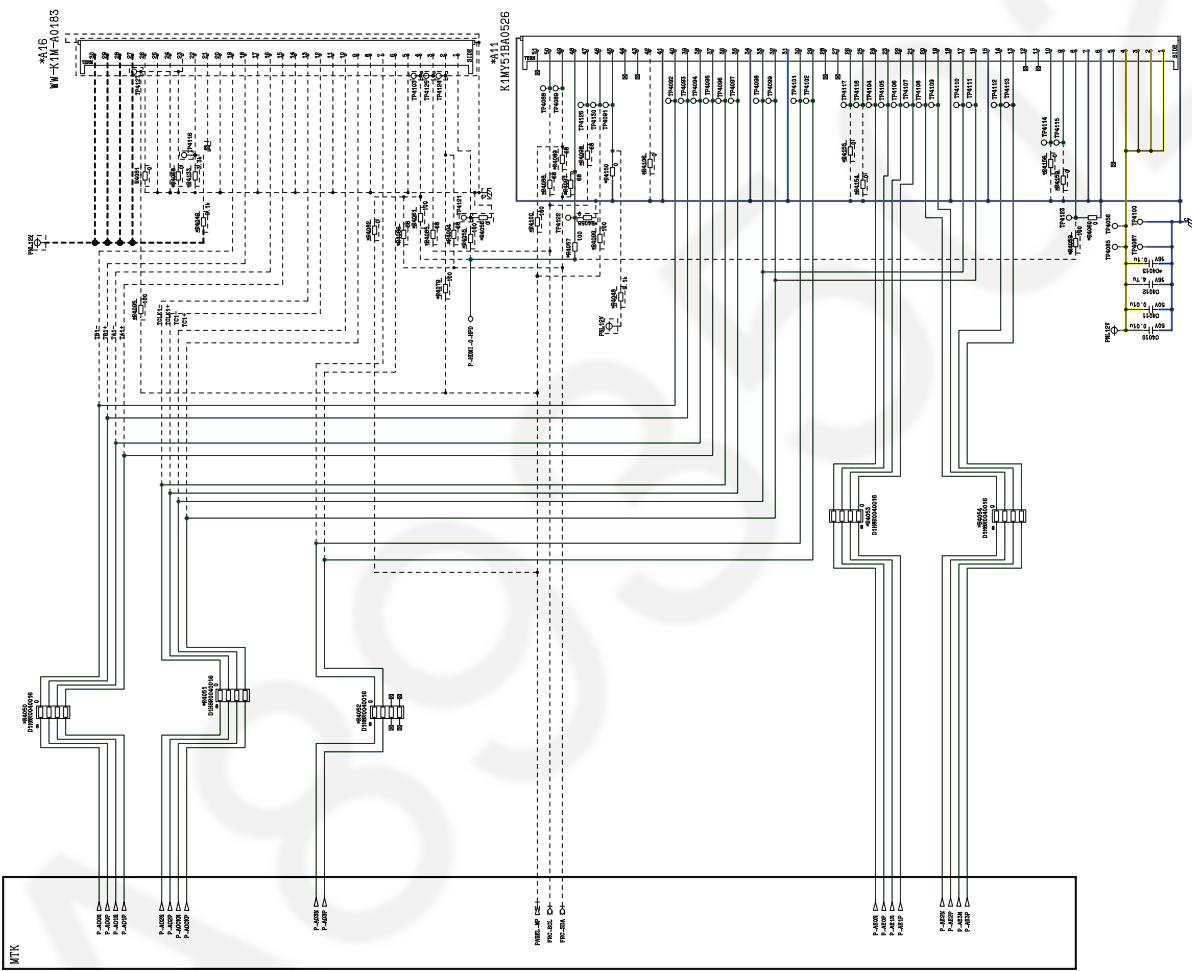


PNL12

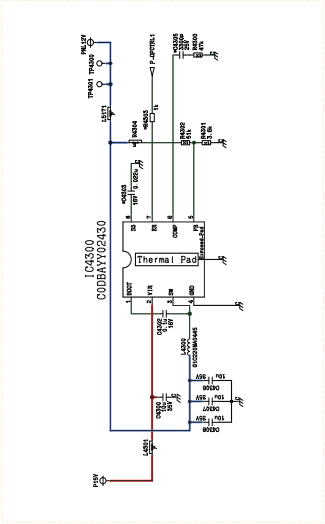




Analog ASIC
REF No. 5000 - 5139



SHEET 100
SOS / ASIC

SOS
REF No. 5170 - 5199

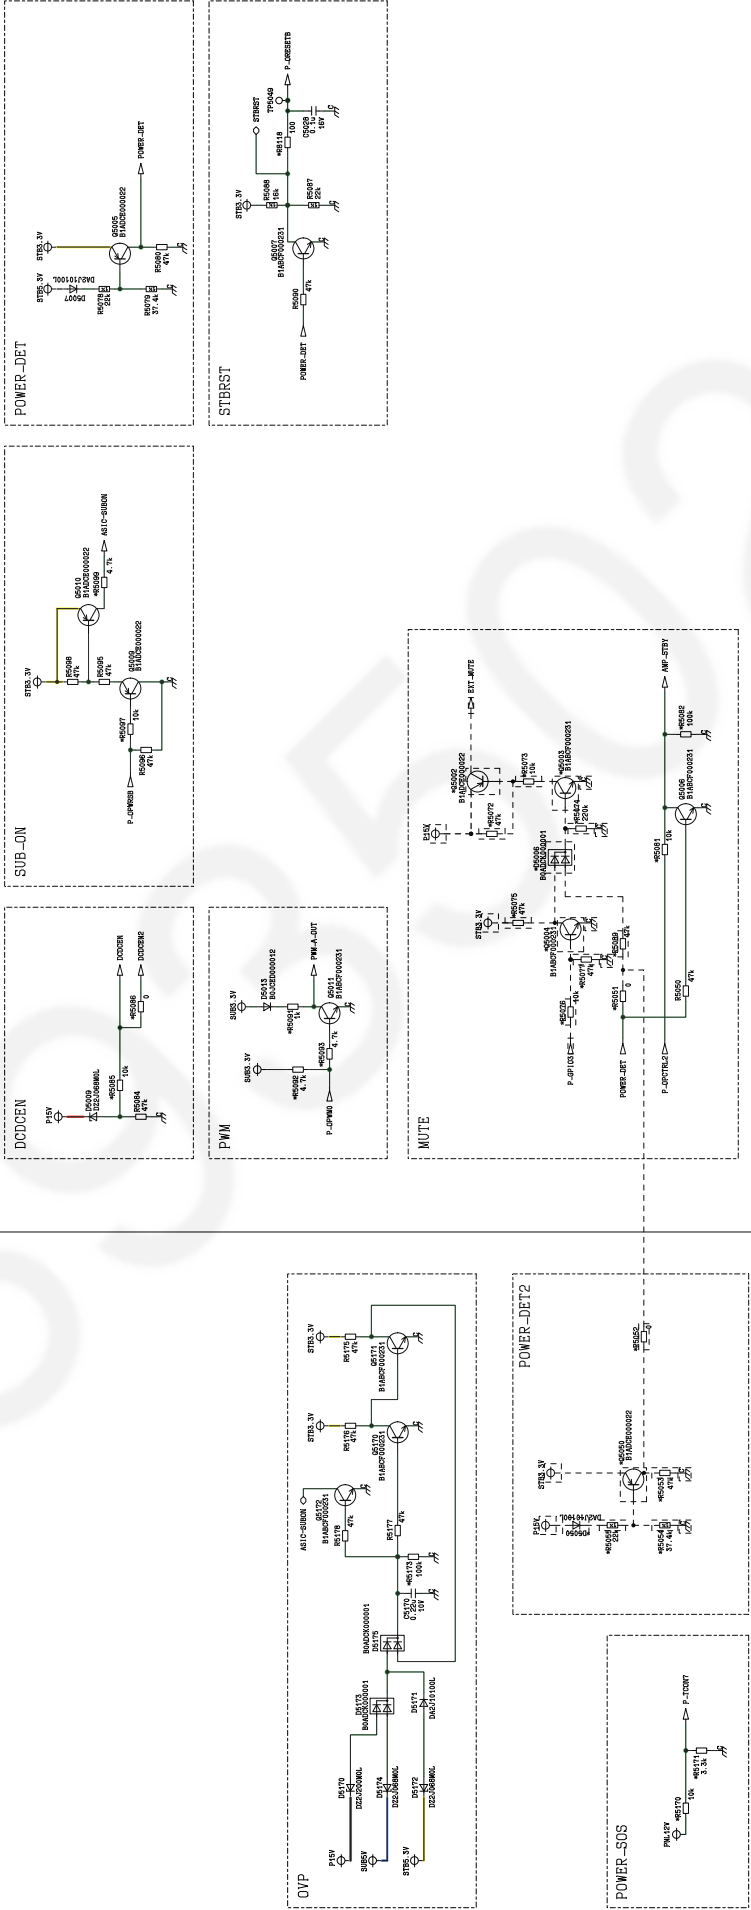


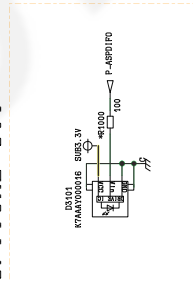

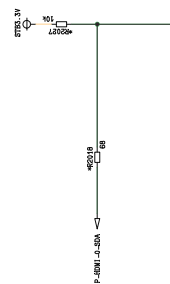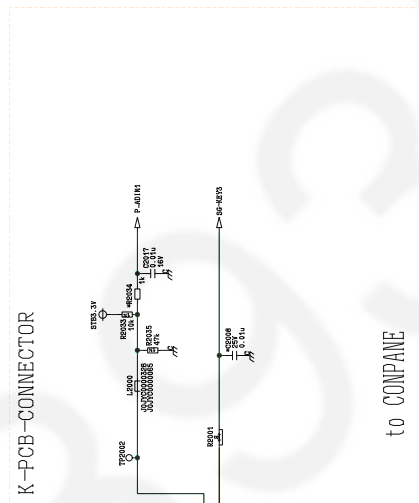


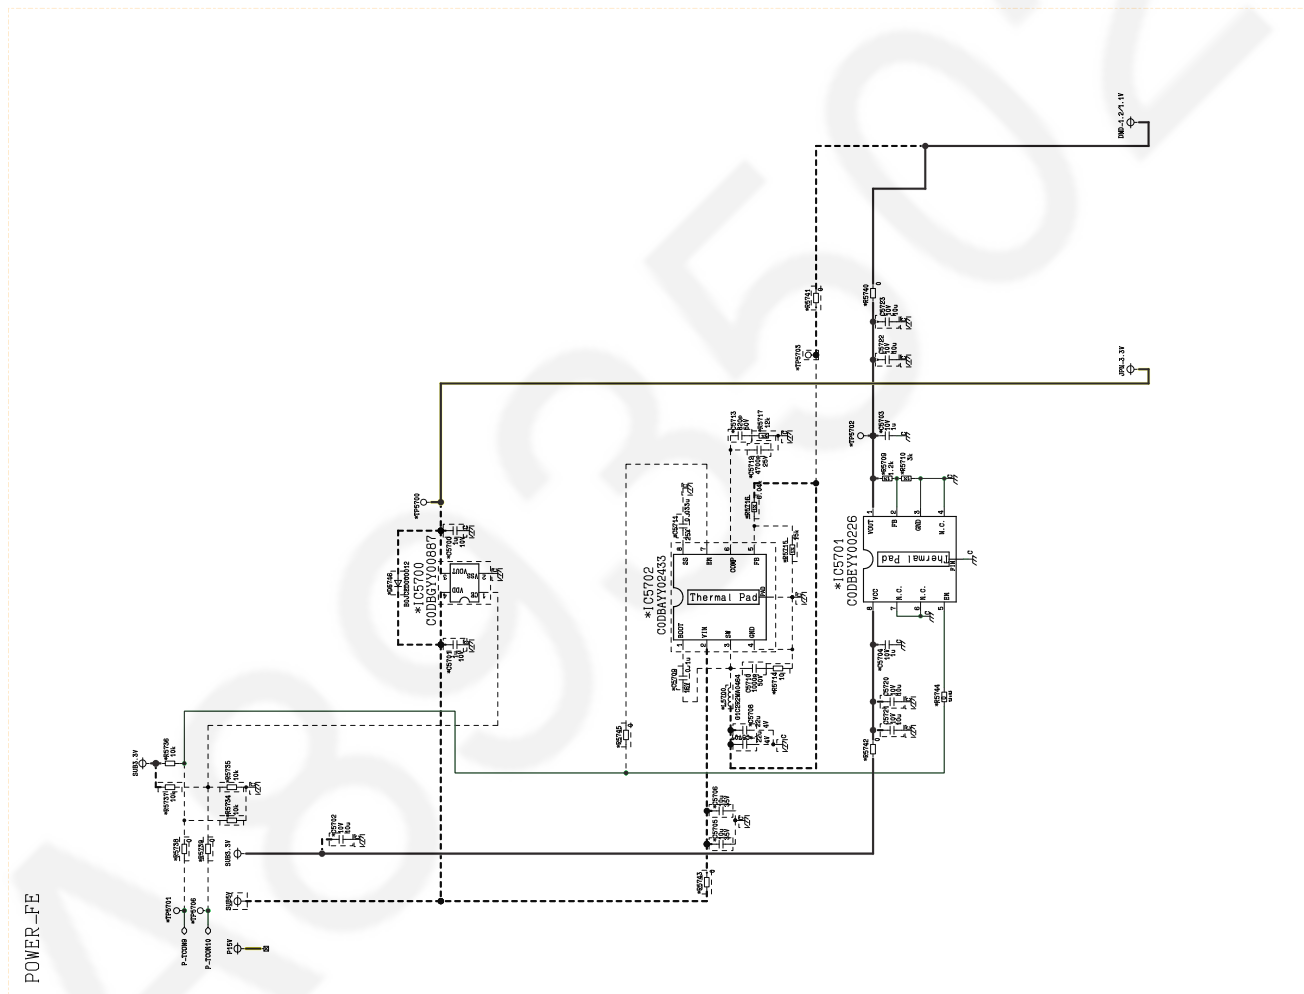

STM_EEPROM

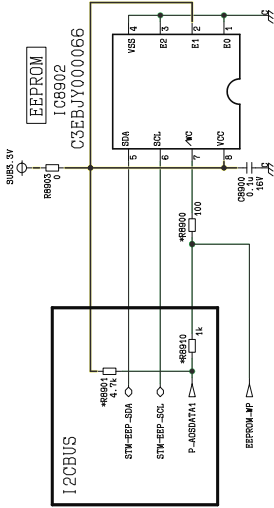


SPI_ROM

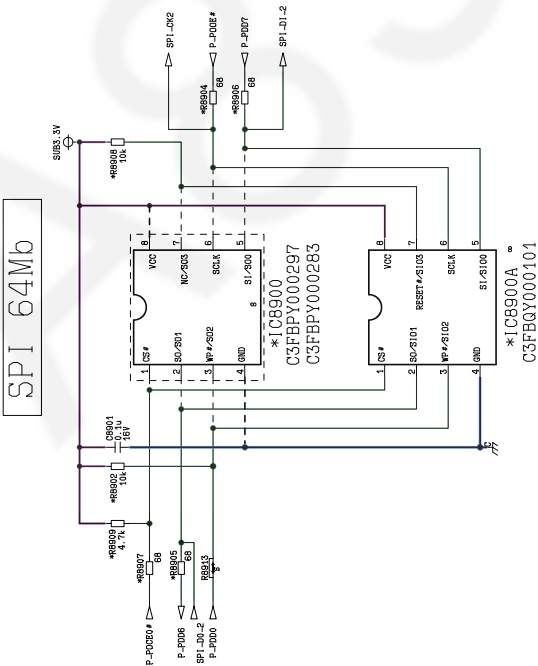


SPI 16Mb (128Mb)


SPI 128Mb

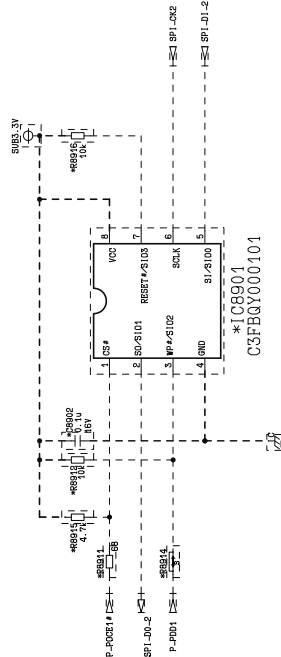


USB

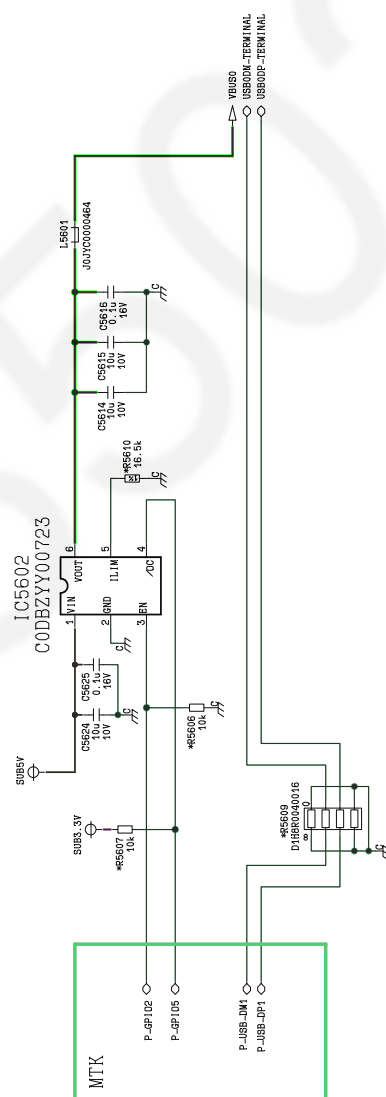


STB5V

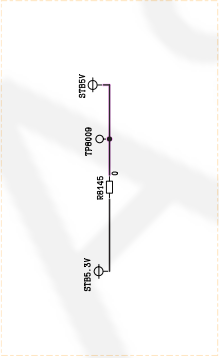


STB3.3V

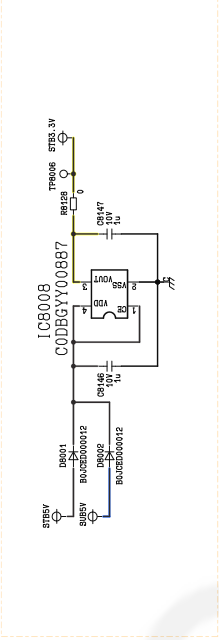


VCCK1.2V

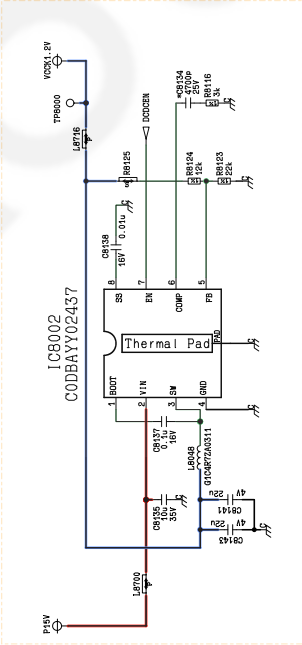


DDR1.5V

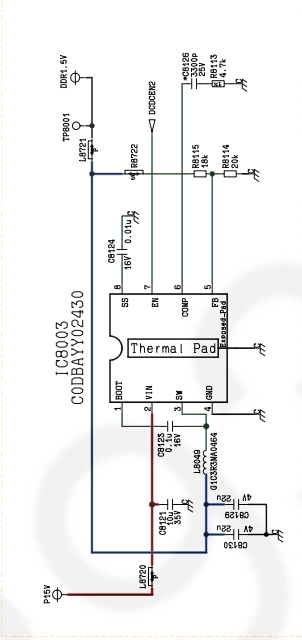


SUB1.2V

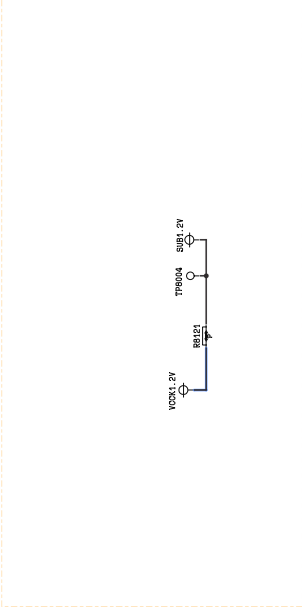


SUB3.3V

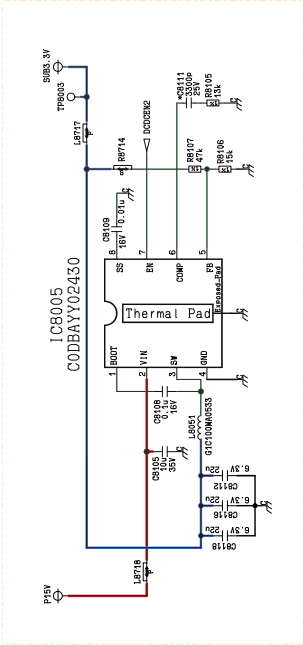

SUB5V

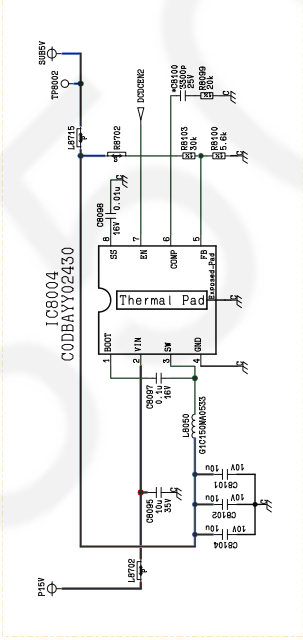

AVDDH3.3V






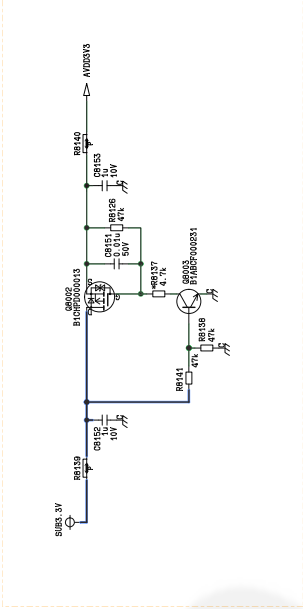


SHEET 302

Common - POWER


CRNo : 8000

POWER

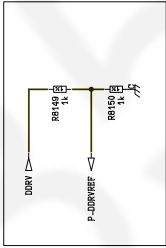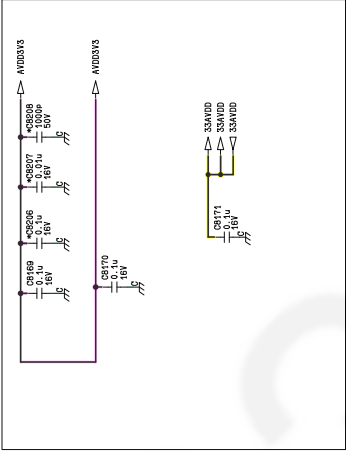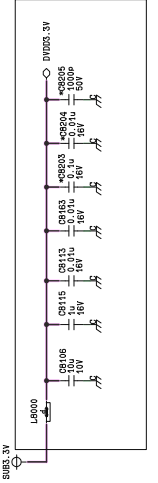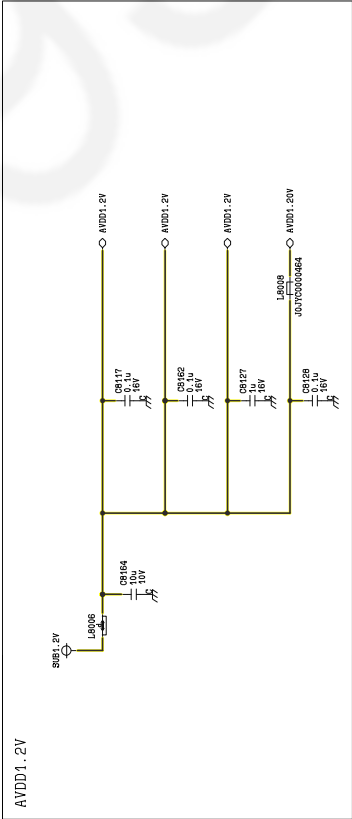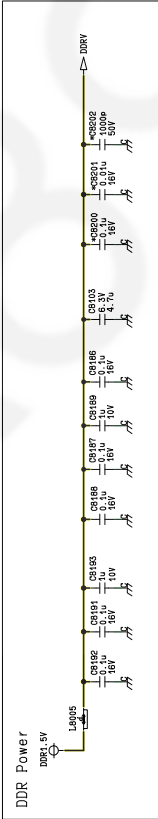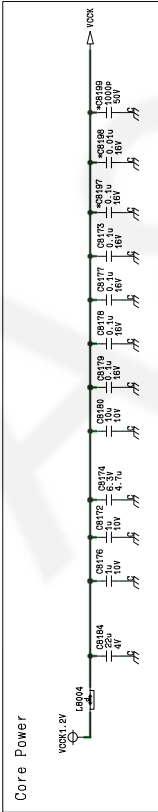


SHEET 701


POWER DEVIDING

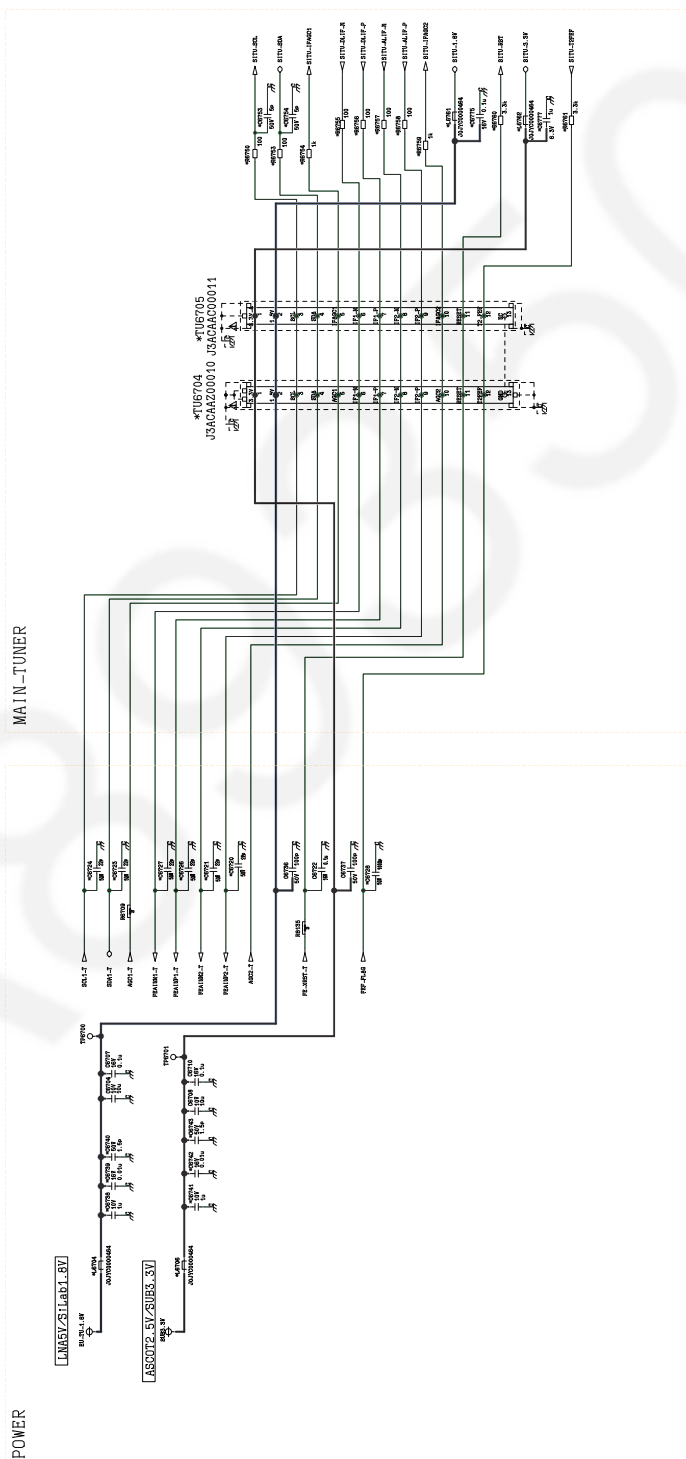

SHEET 706
TUNER

ONBOARD

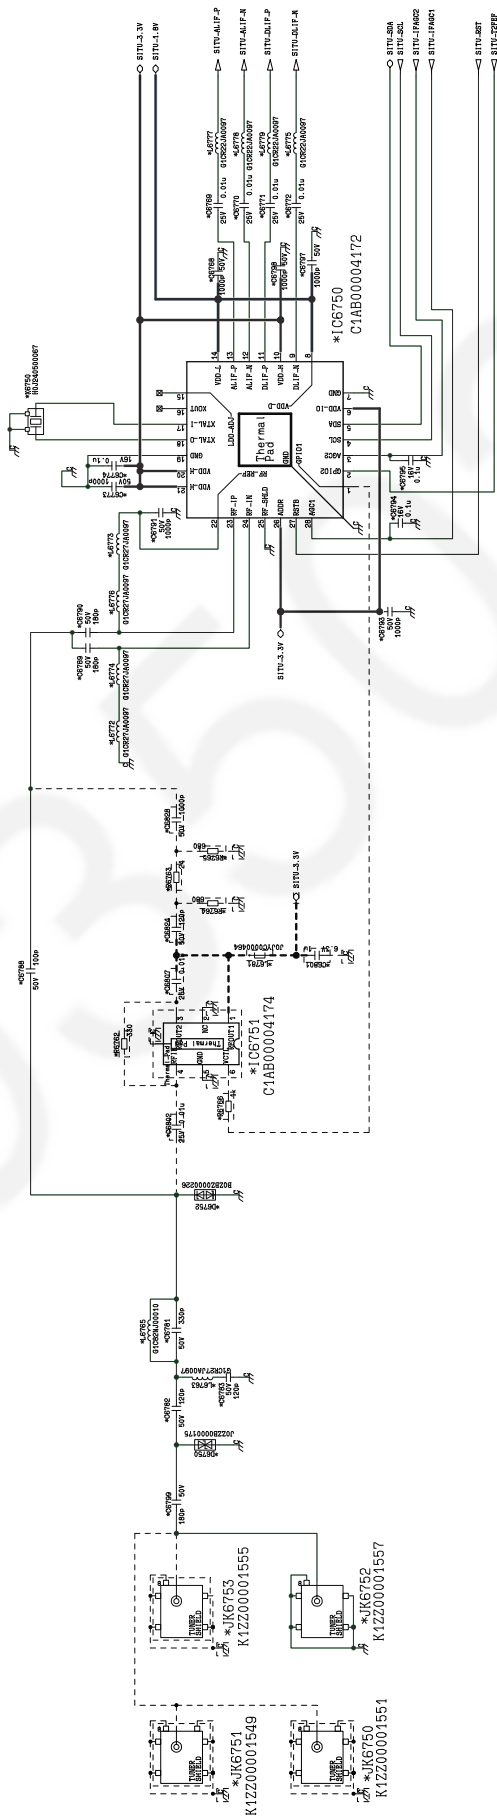



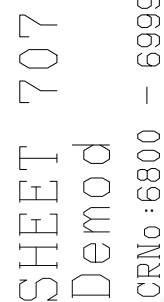




Audi o-AMP


REF No. 4900 - 4999

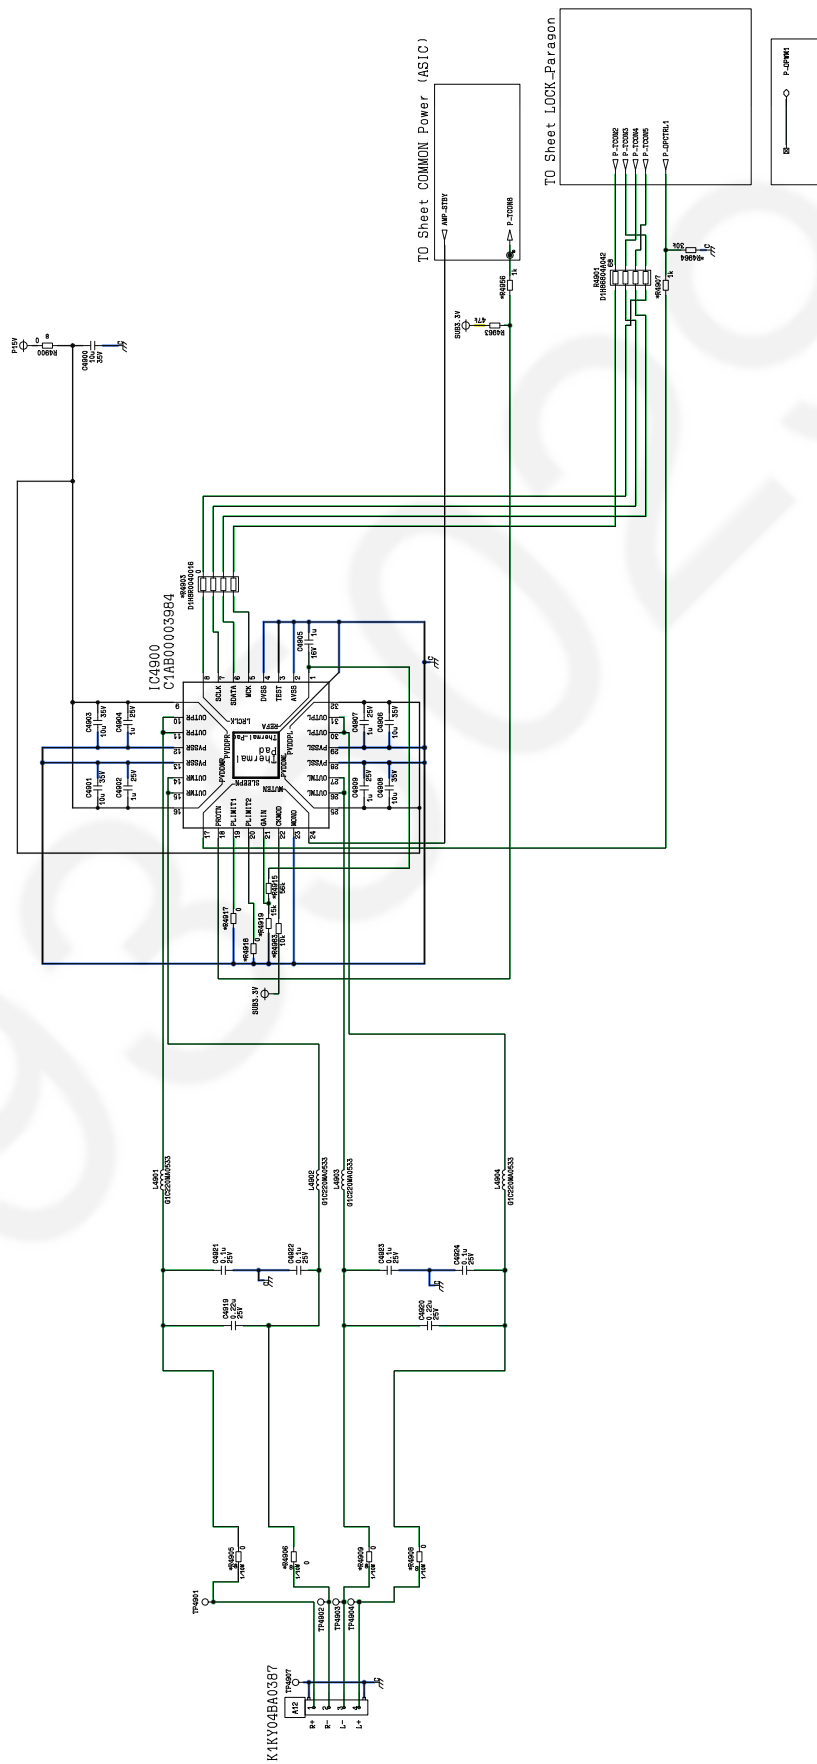

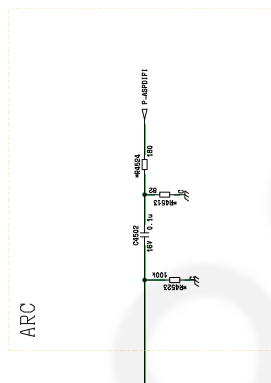



SHEET 004
AVSW-Connection
REF No. 3000-3399

VIDEO/AUDIO IN

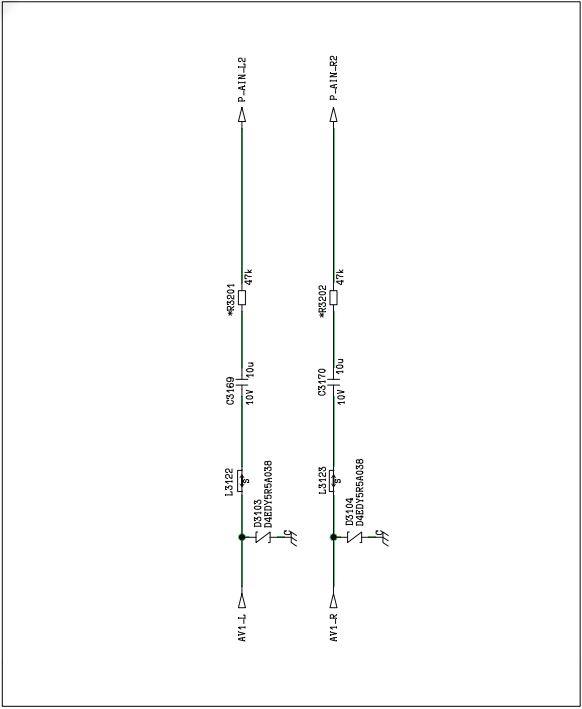

YPbPr



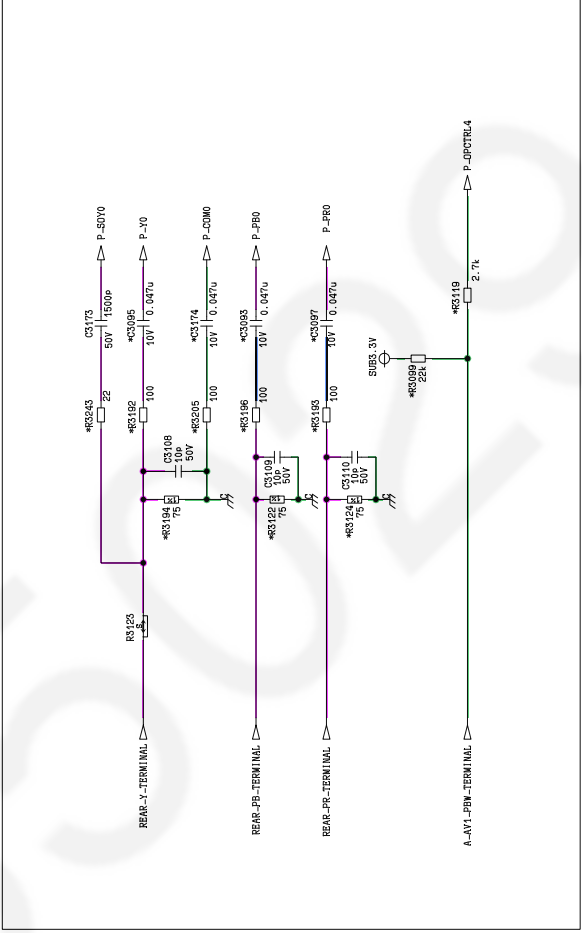


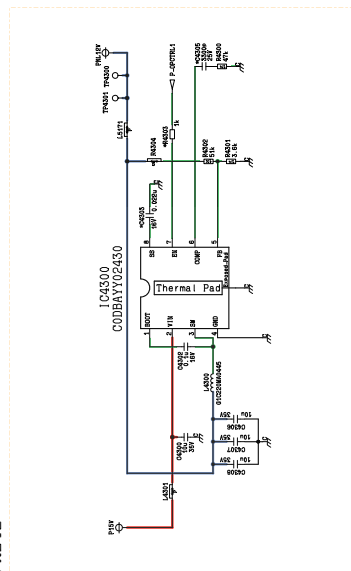


SHEET 100
SOS / ASIC

REF No. 5000 - 5139


SOS
REF No. 5170 - 5199

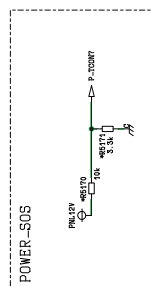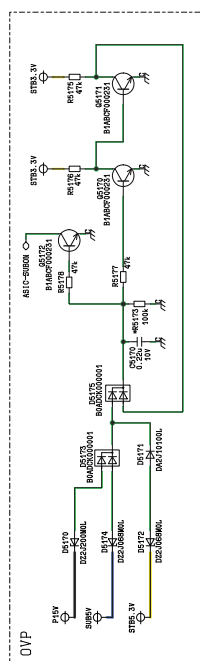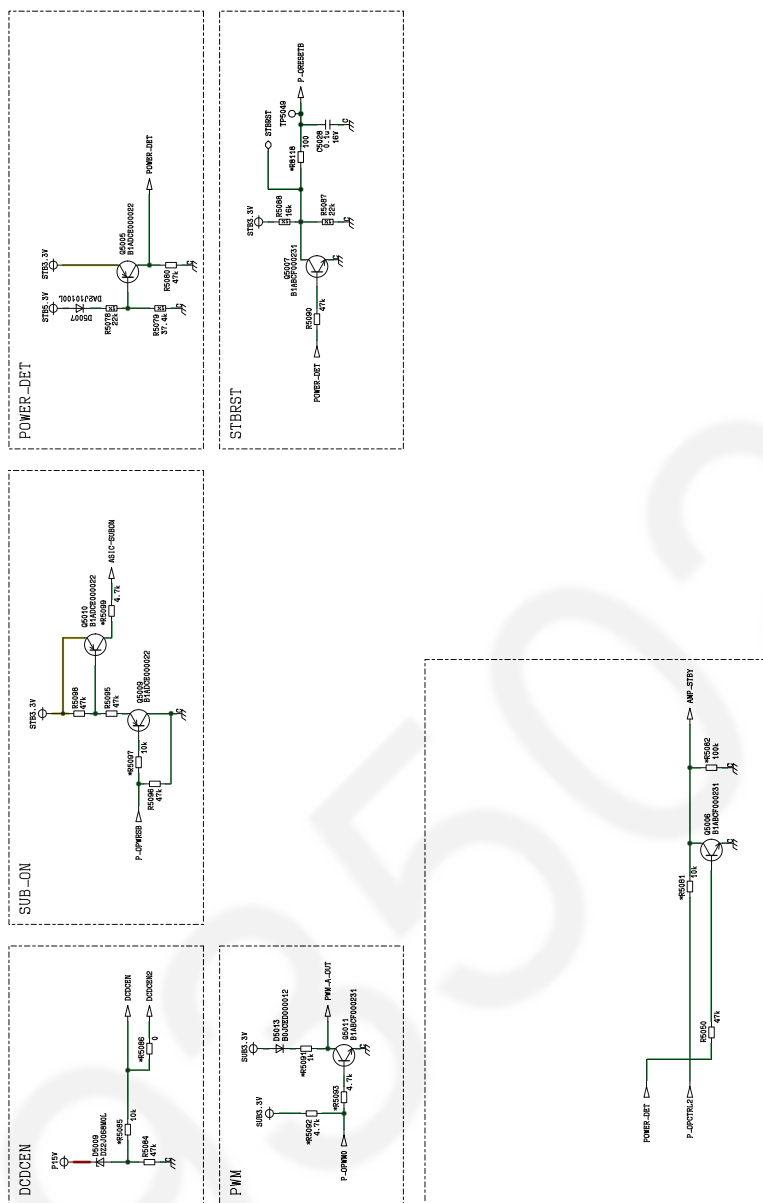


HDMI

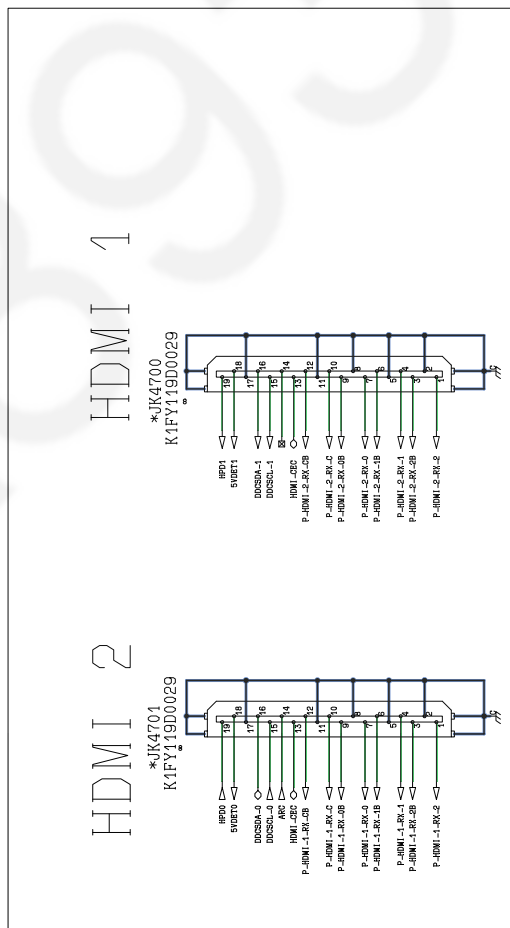


Side USB-1

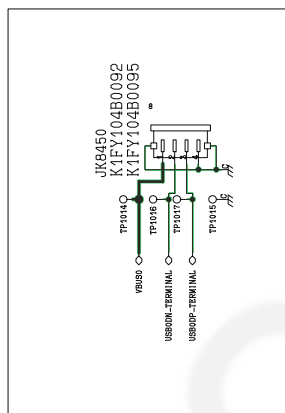


Rear Terminal


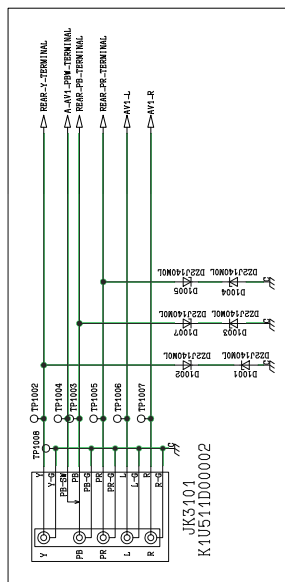




Analog AUDIO-OUT

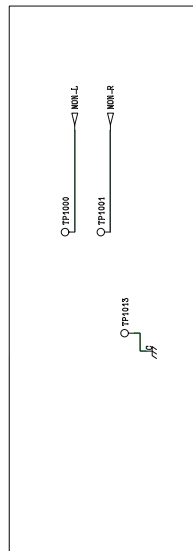


OPTICAL-OUT

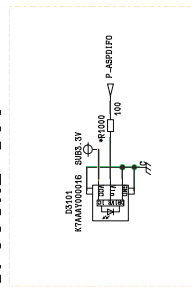

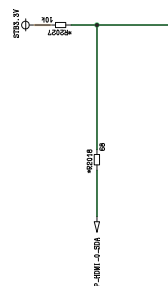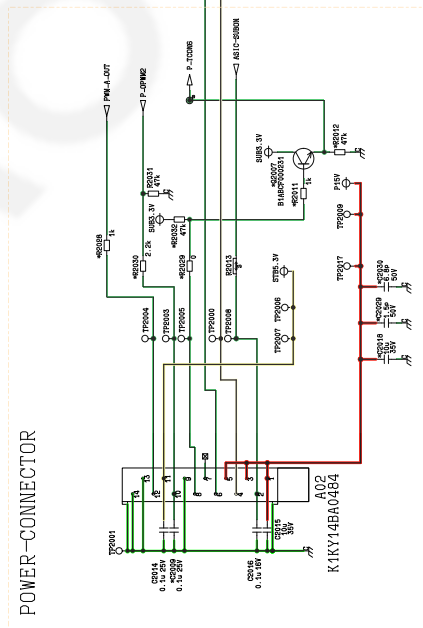


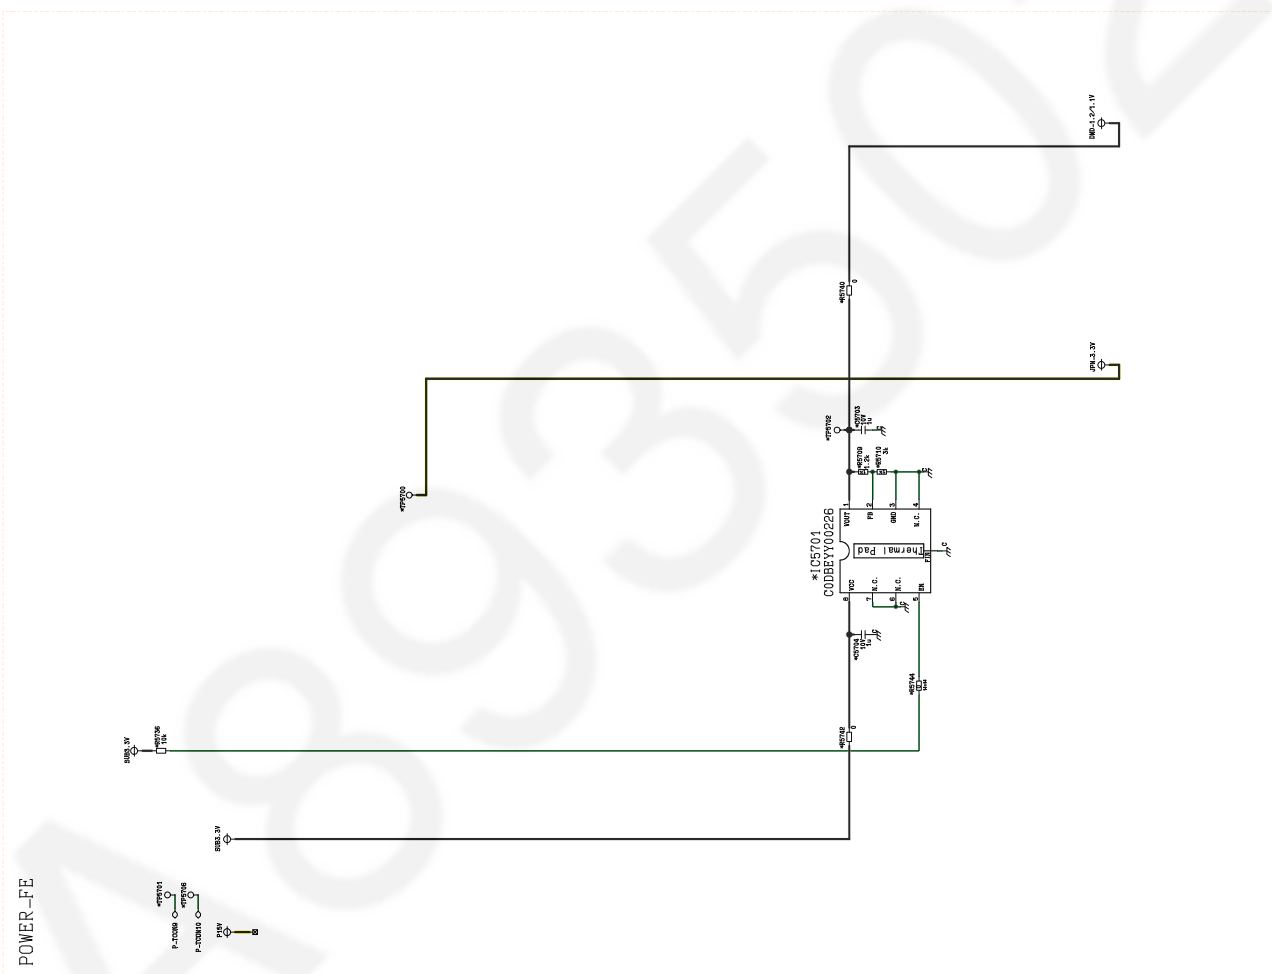

STM-EEPROM

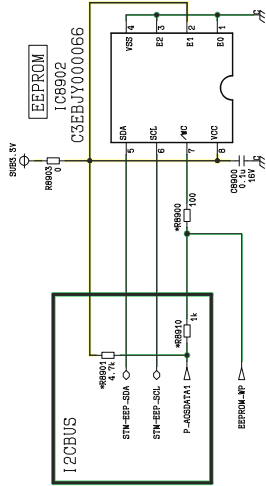

SPI-ROM

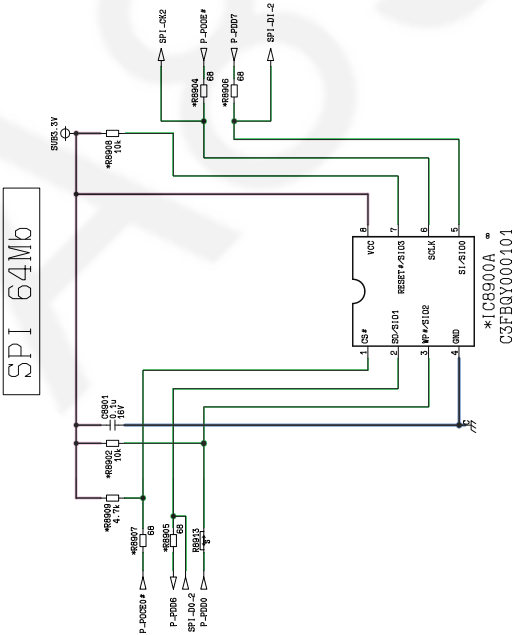

SPI 16MB (128Mb)

SPI 128Mb

SHEET 300
SPI / EEPROM


CRNo : 8900 - 8999

SHEET 301


USB

REF No. 5600 - 5649


USB0

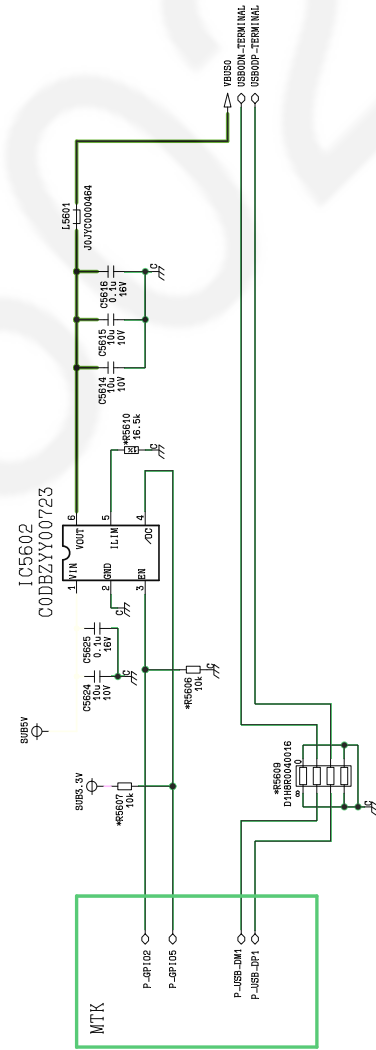


STB5V

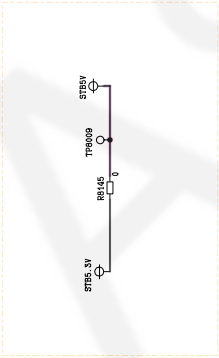


STB3.3V

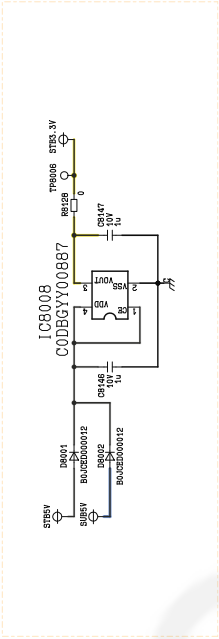


VCCK1.2V

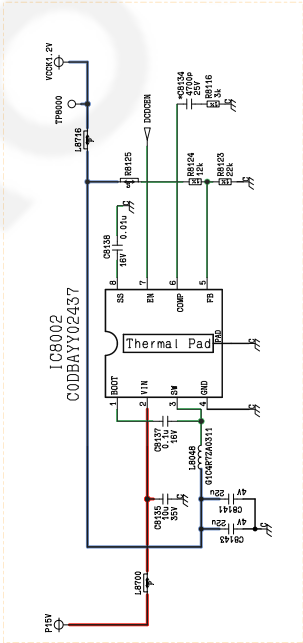


DDR1.5V

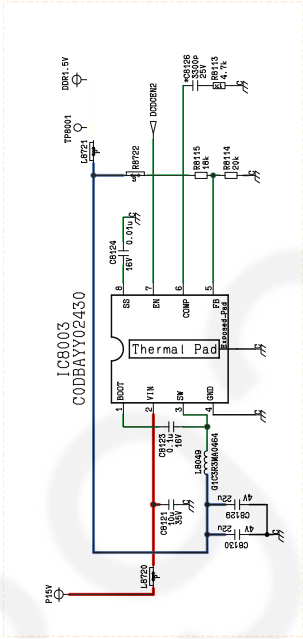


SUB1.2V

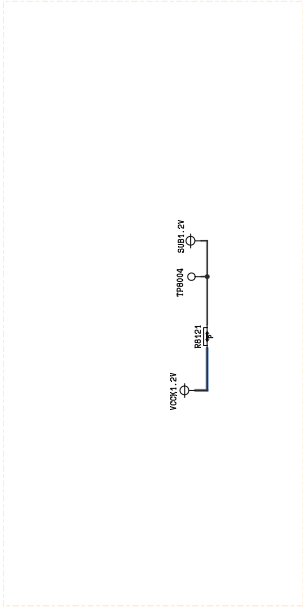


SUB3.3V

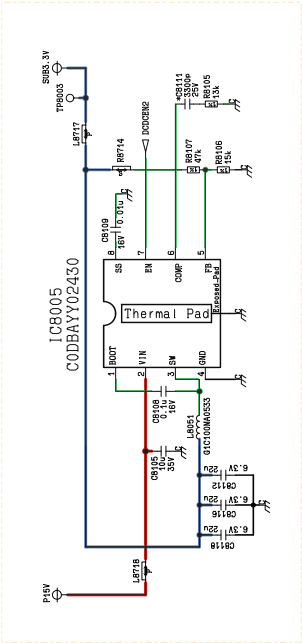




SUB5V

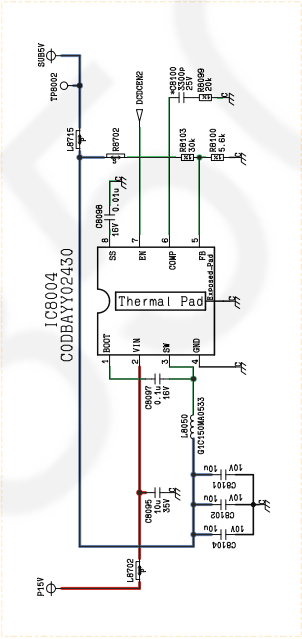



AVDDH3.3V

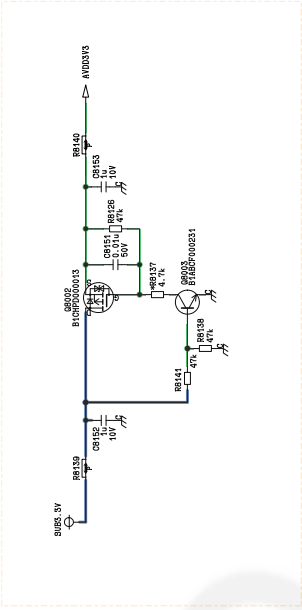

POWER

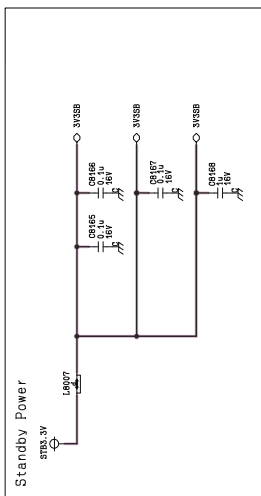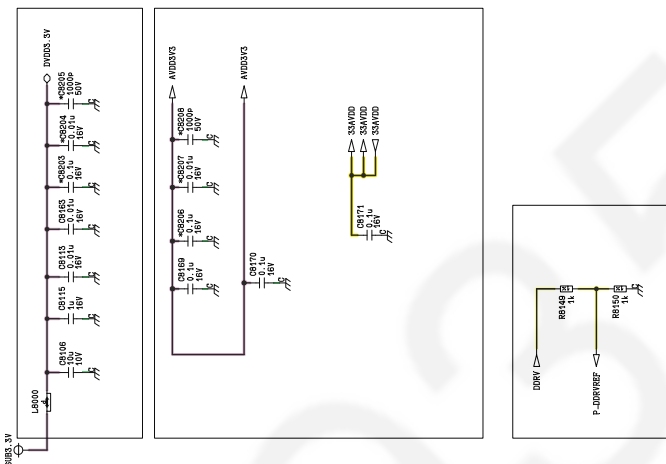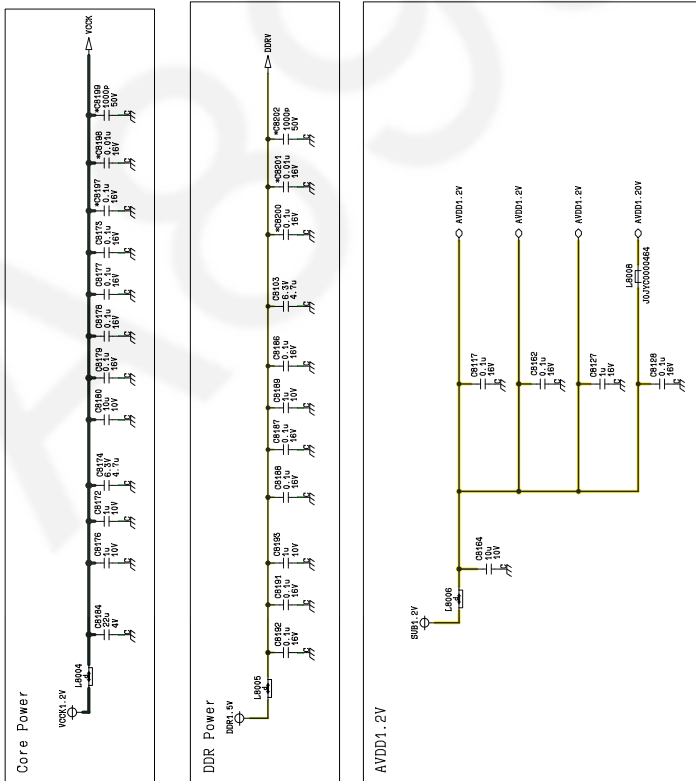


SHEET 701
POWER DEVIDING

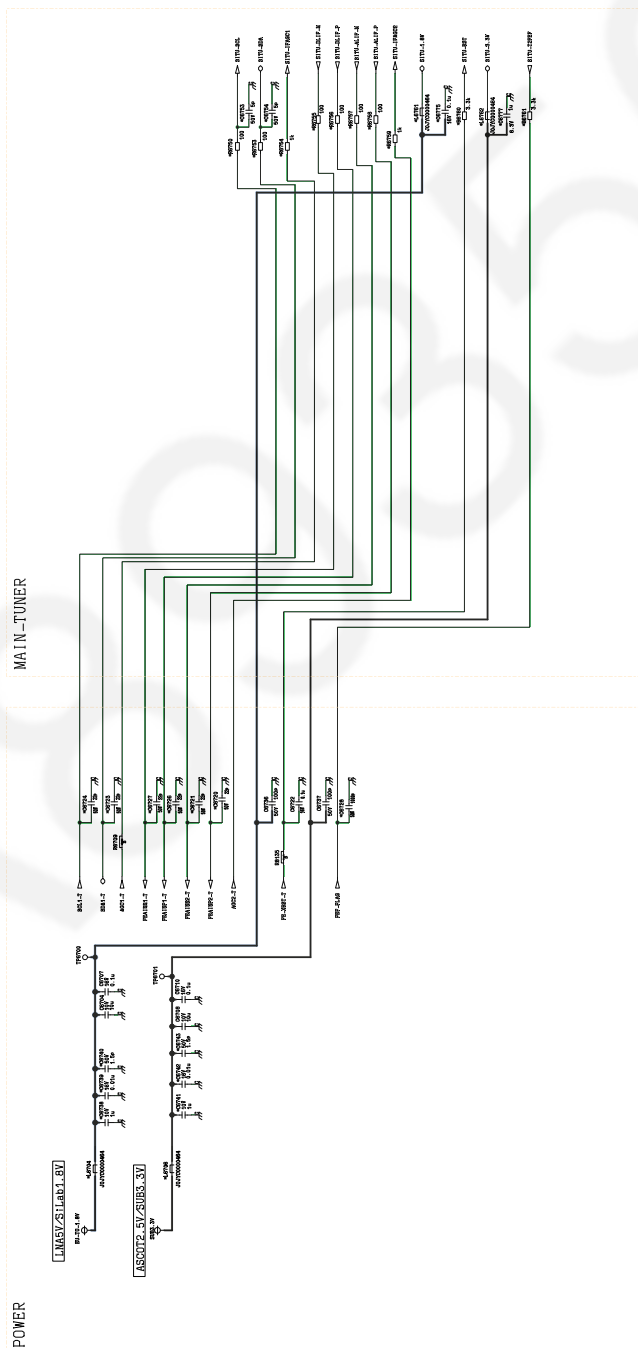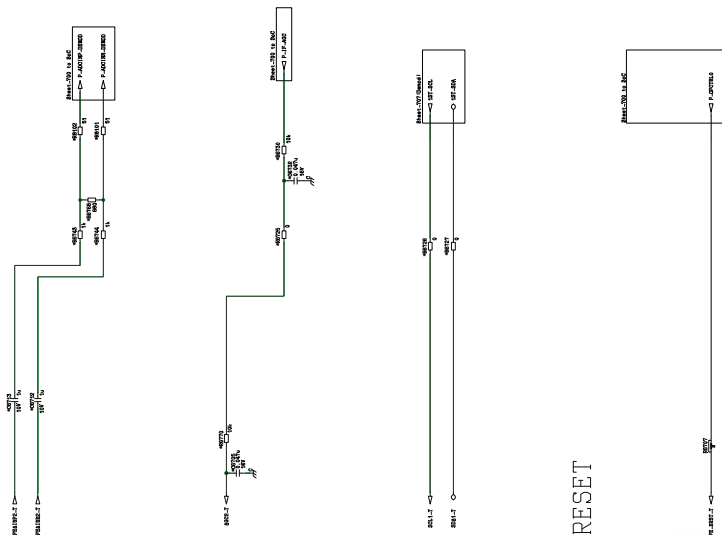


SHEET 706
TUNER


ONBOARD

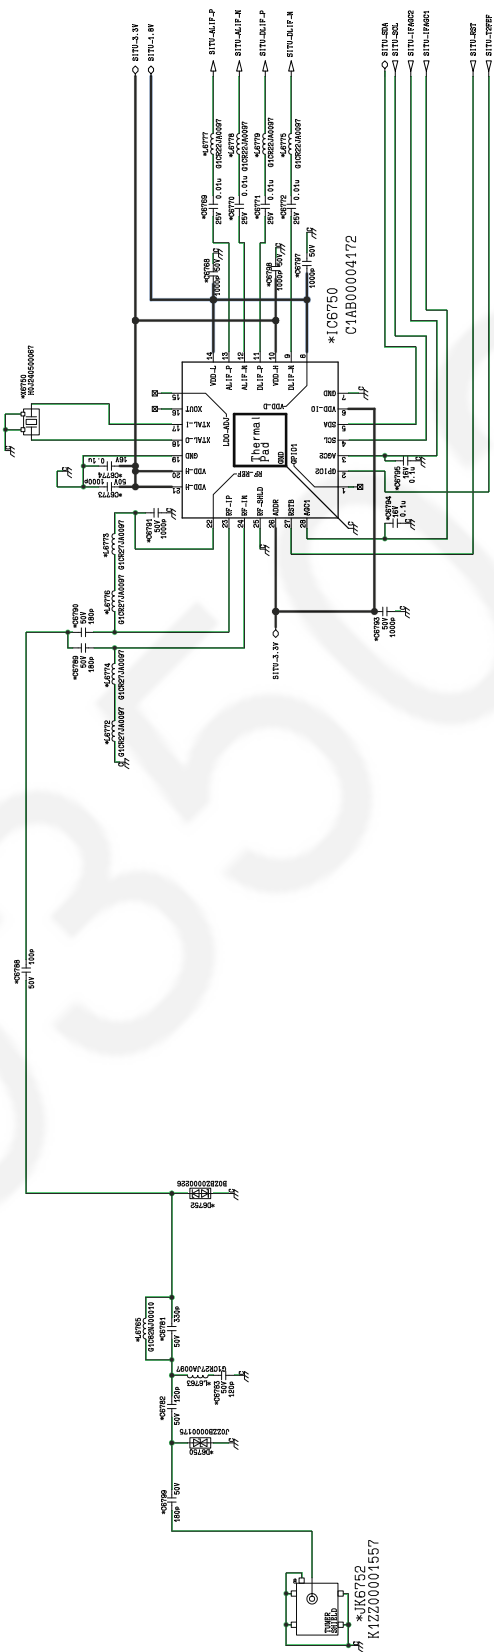




ISDB-T/S/DVB-T2/DTMB/JPN-W

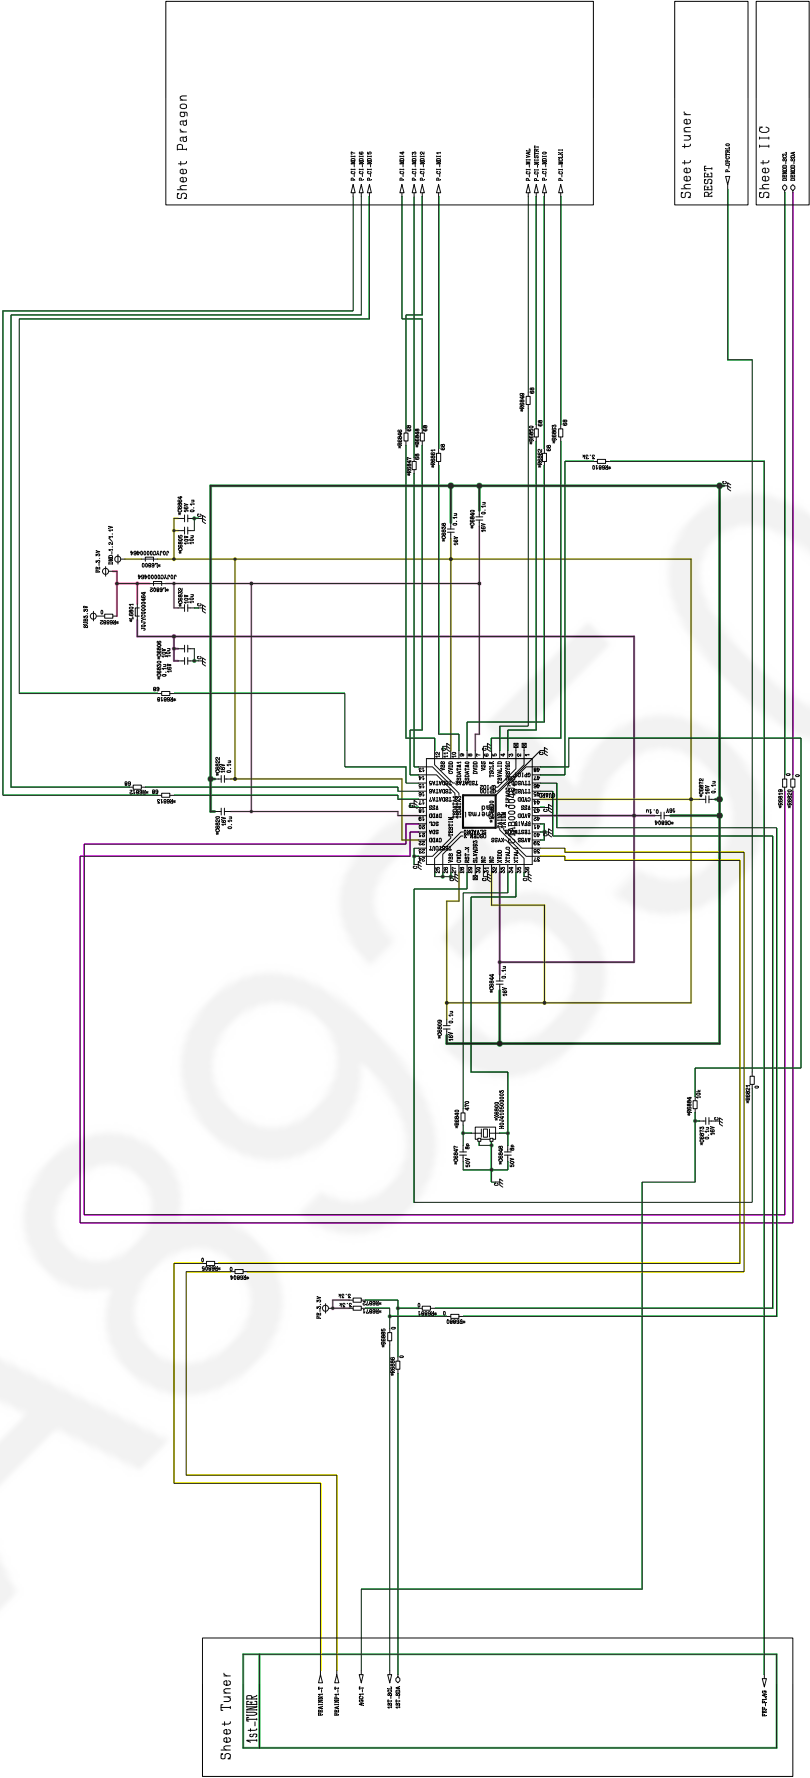



SHEET 707
Demod
CRNo :6800 - 6999

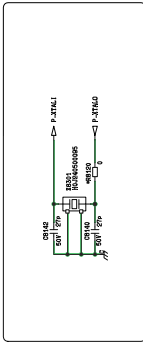


SHEET 900
POWER MT56X

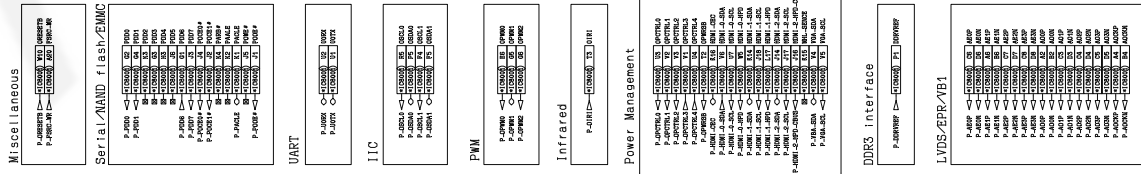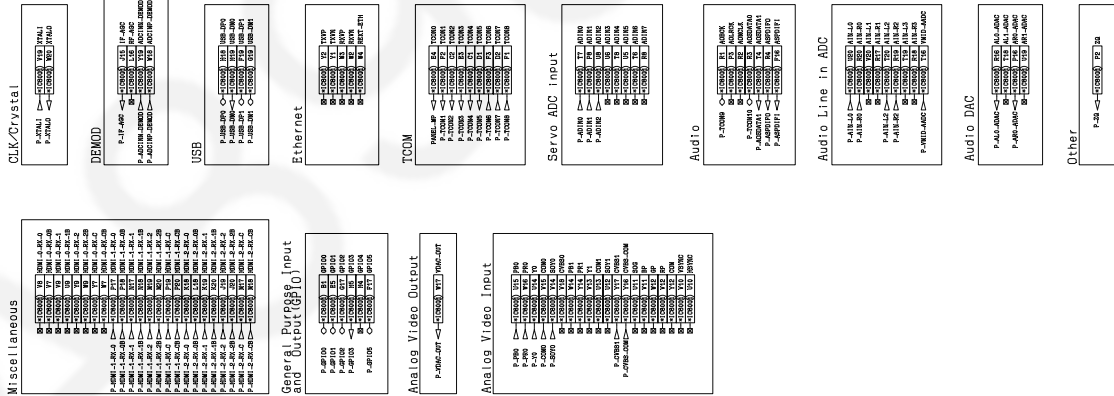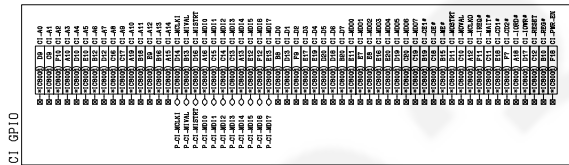


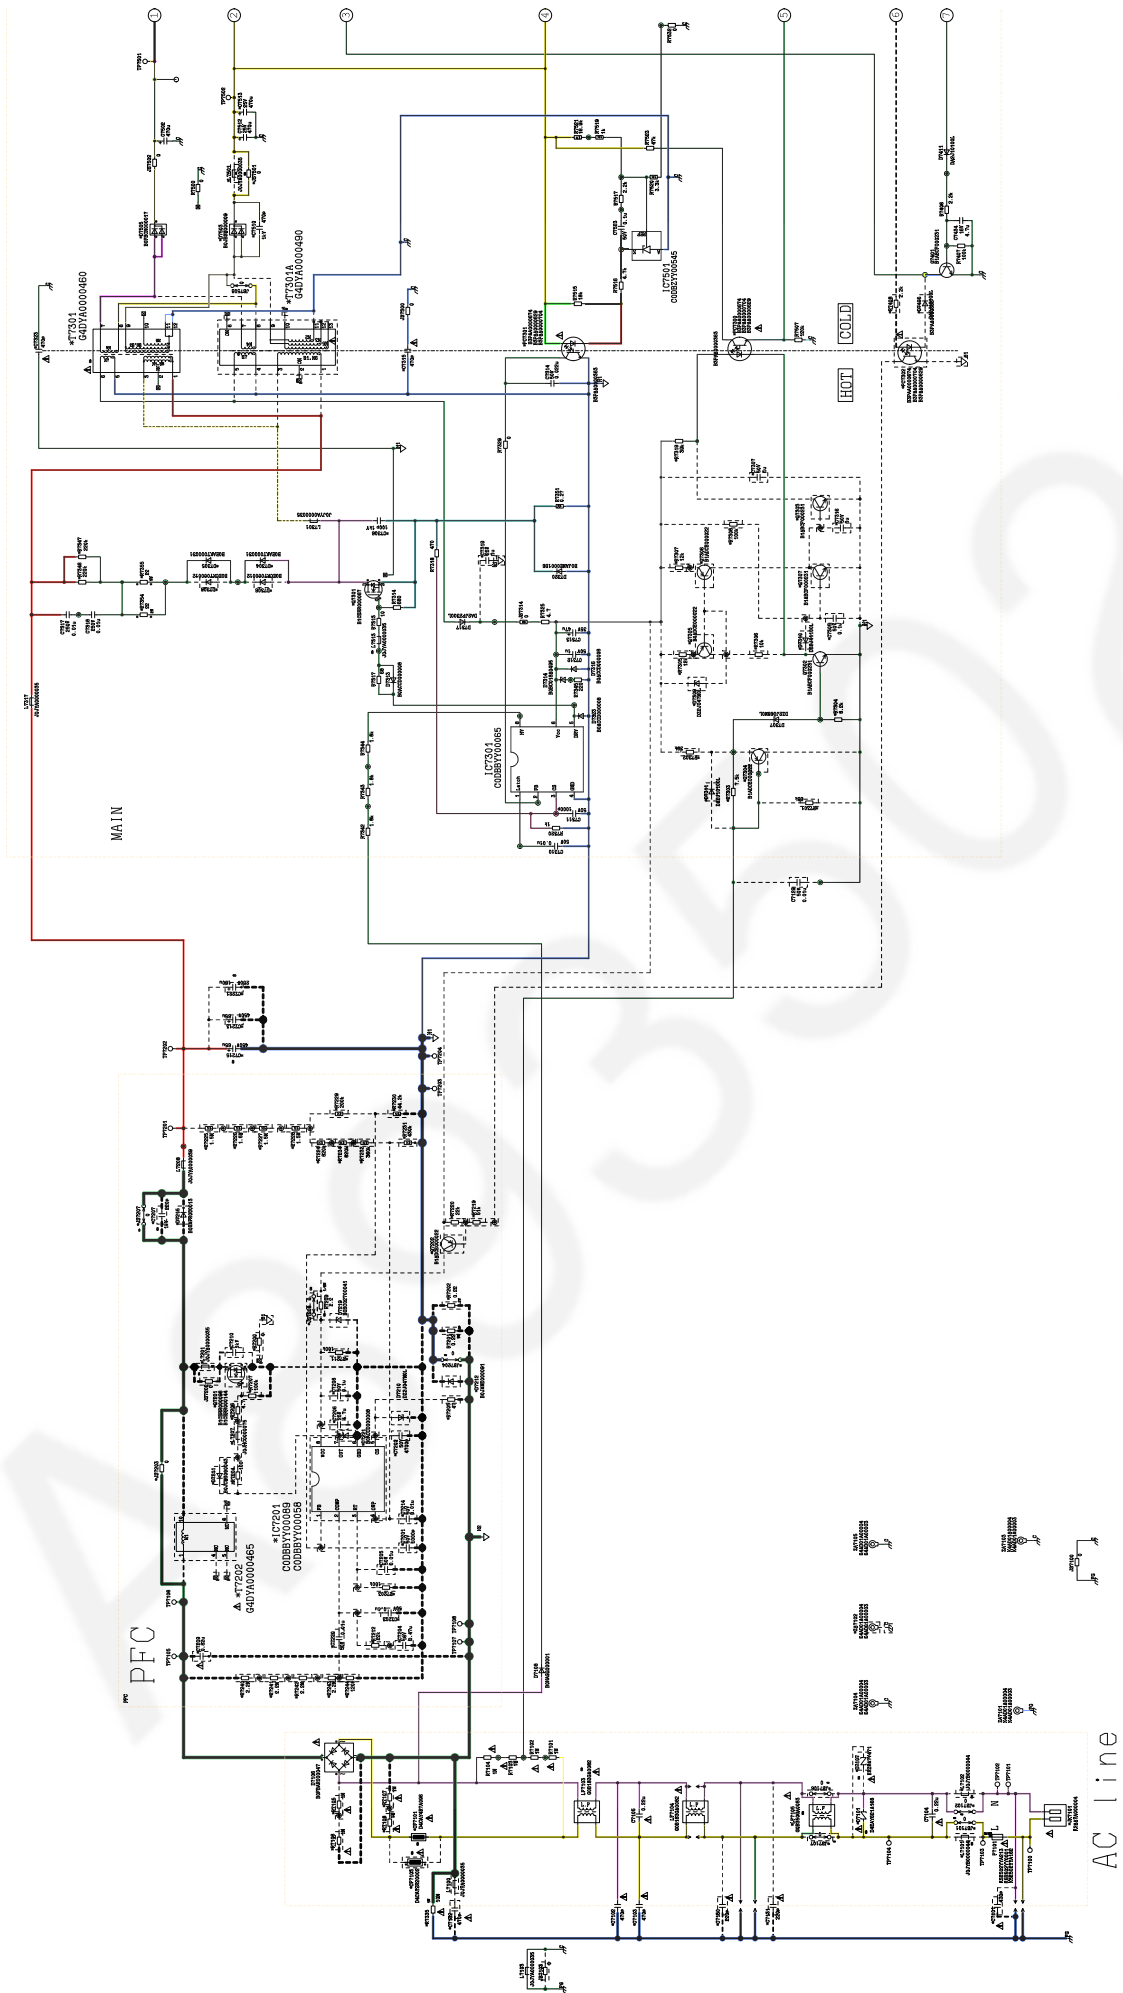

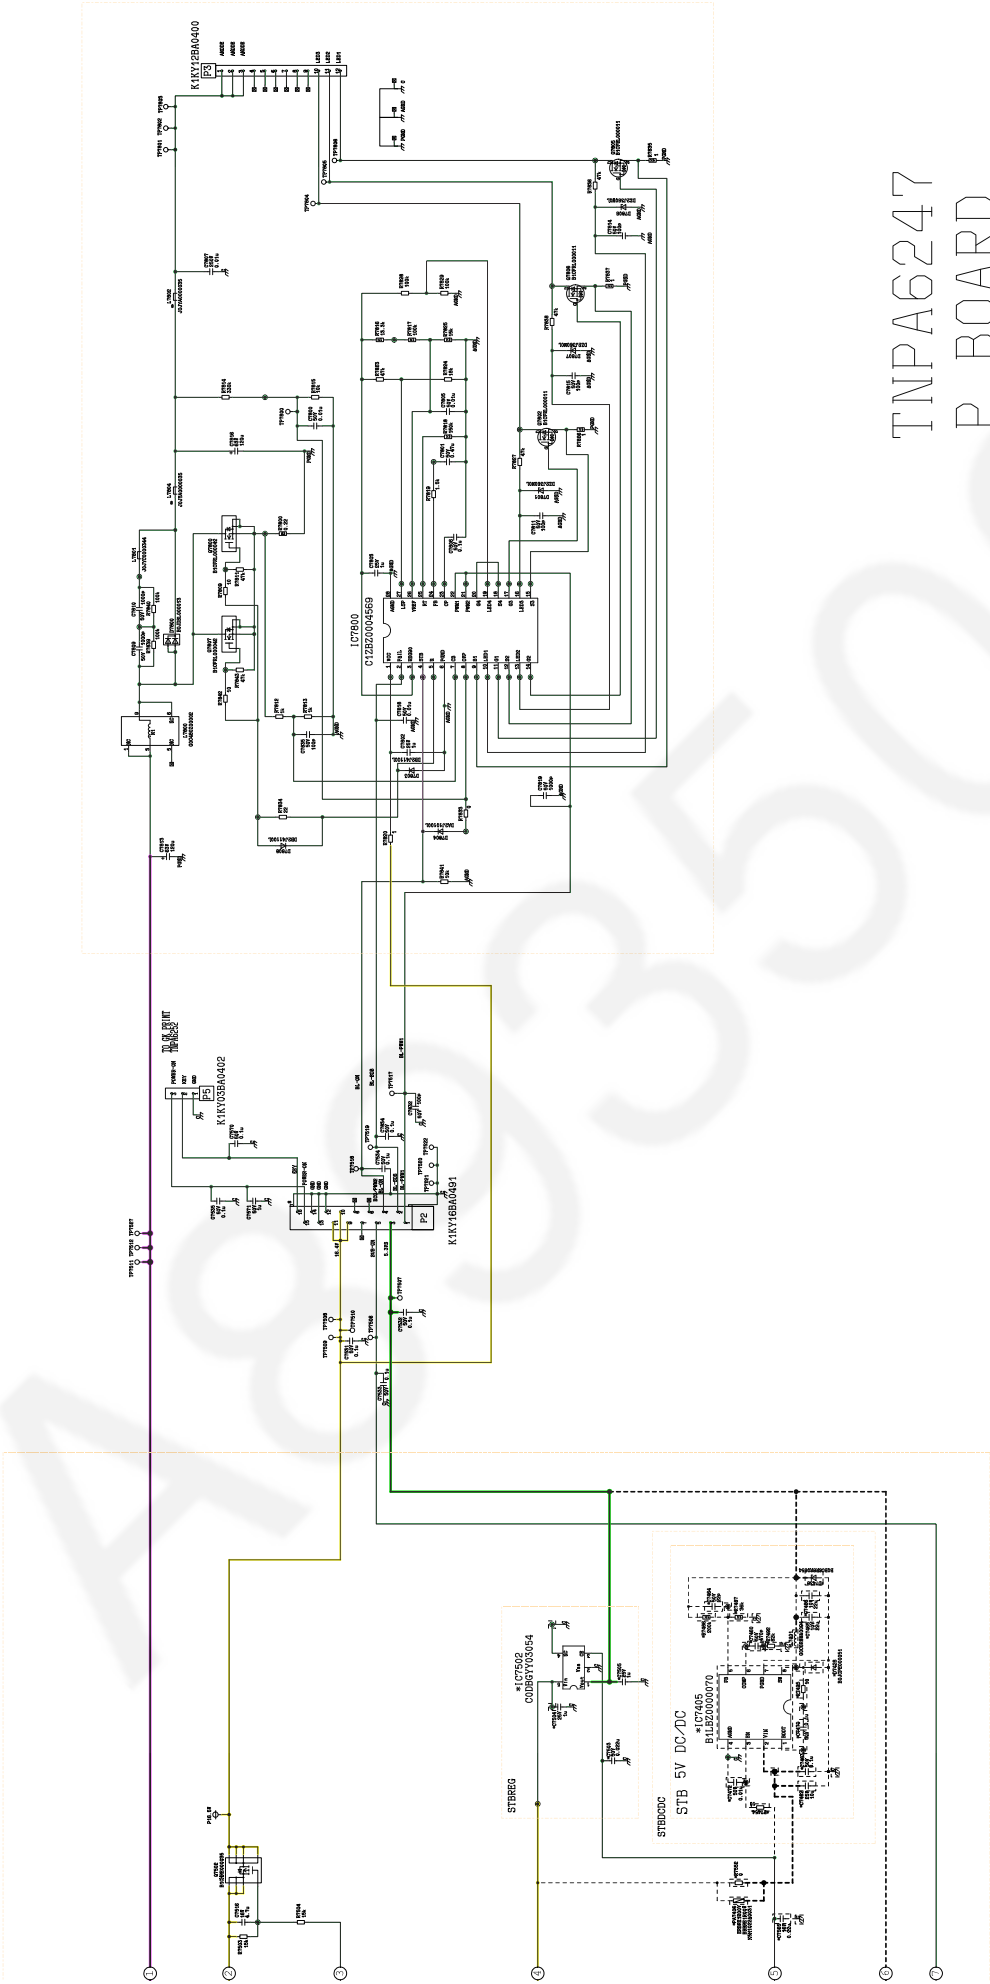


TNPA6247
P BOARD

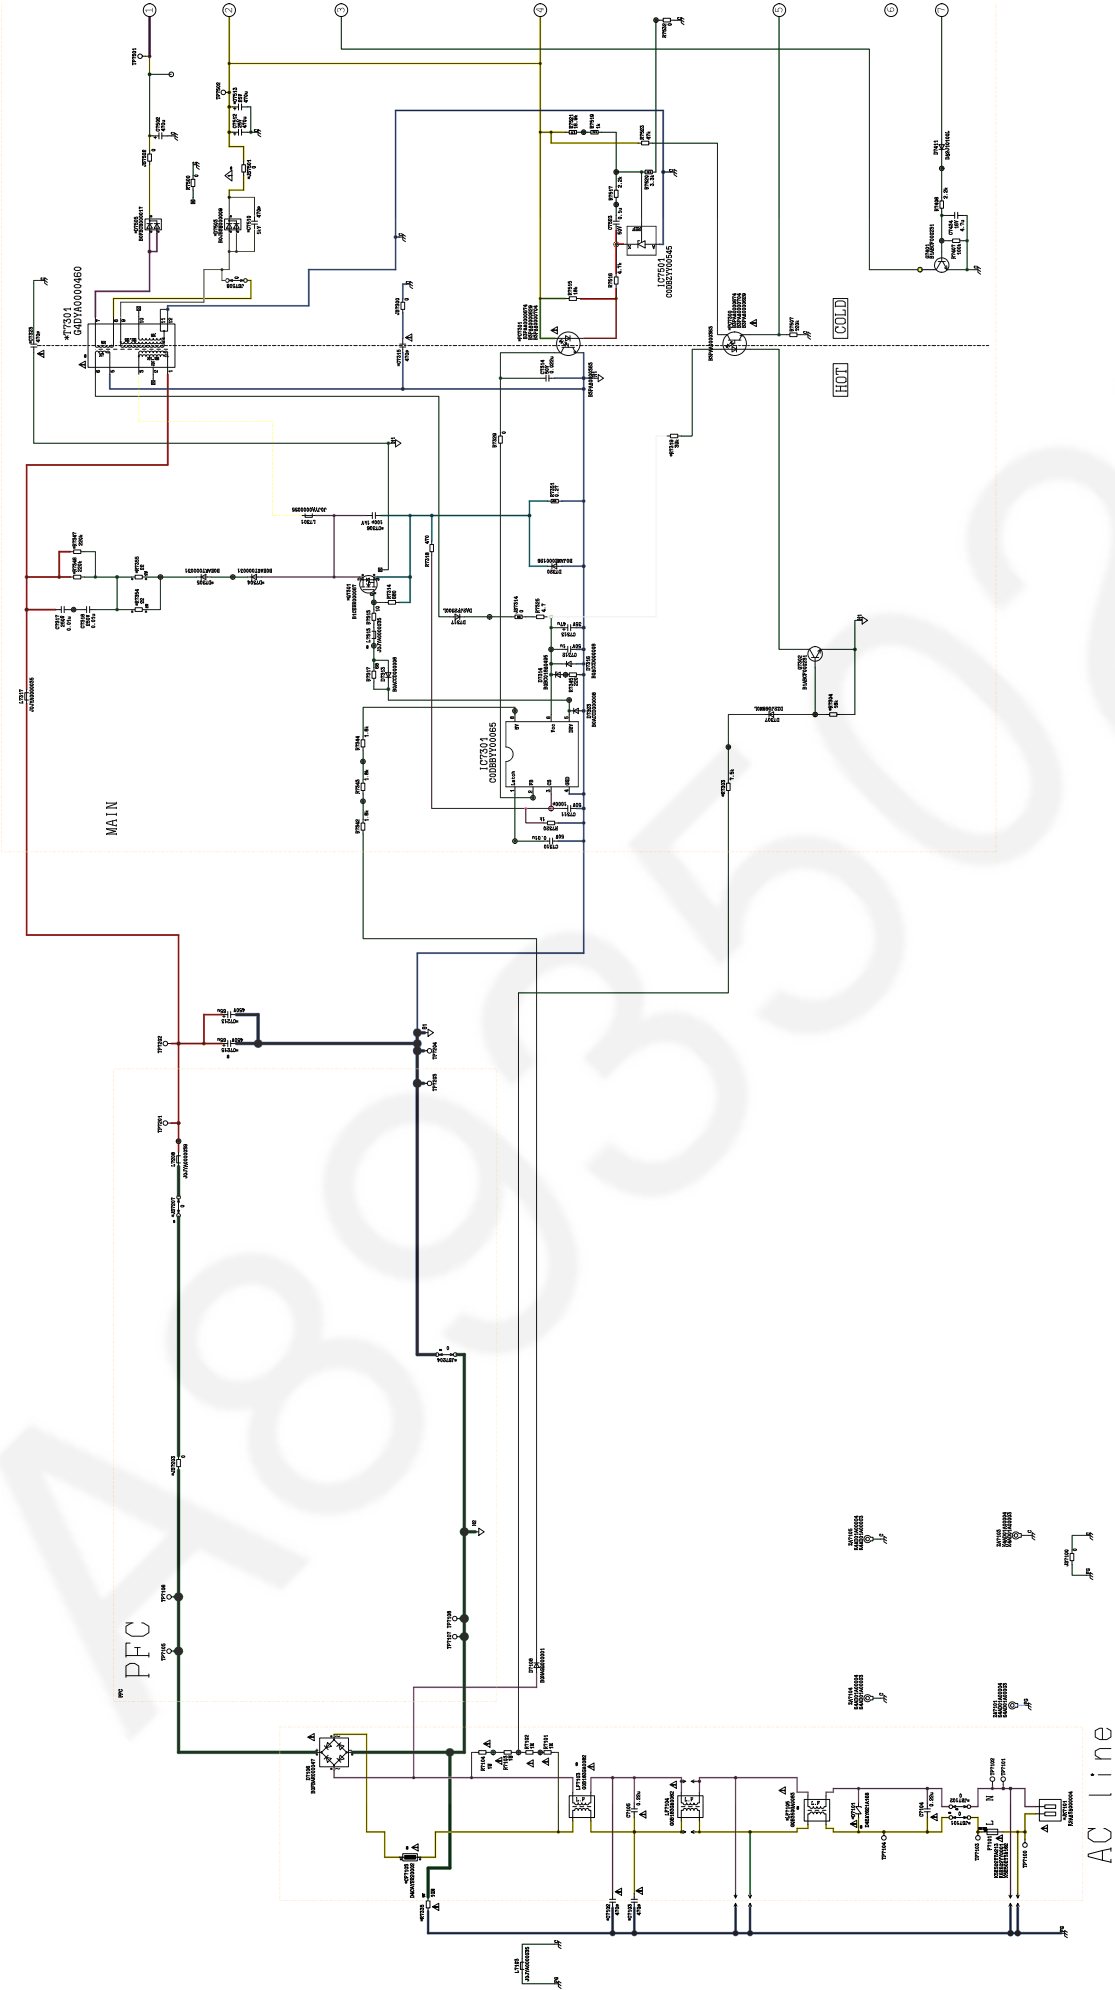

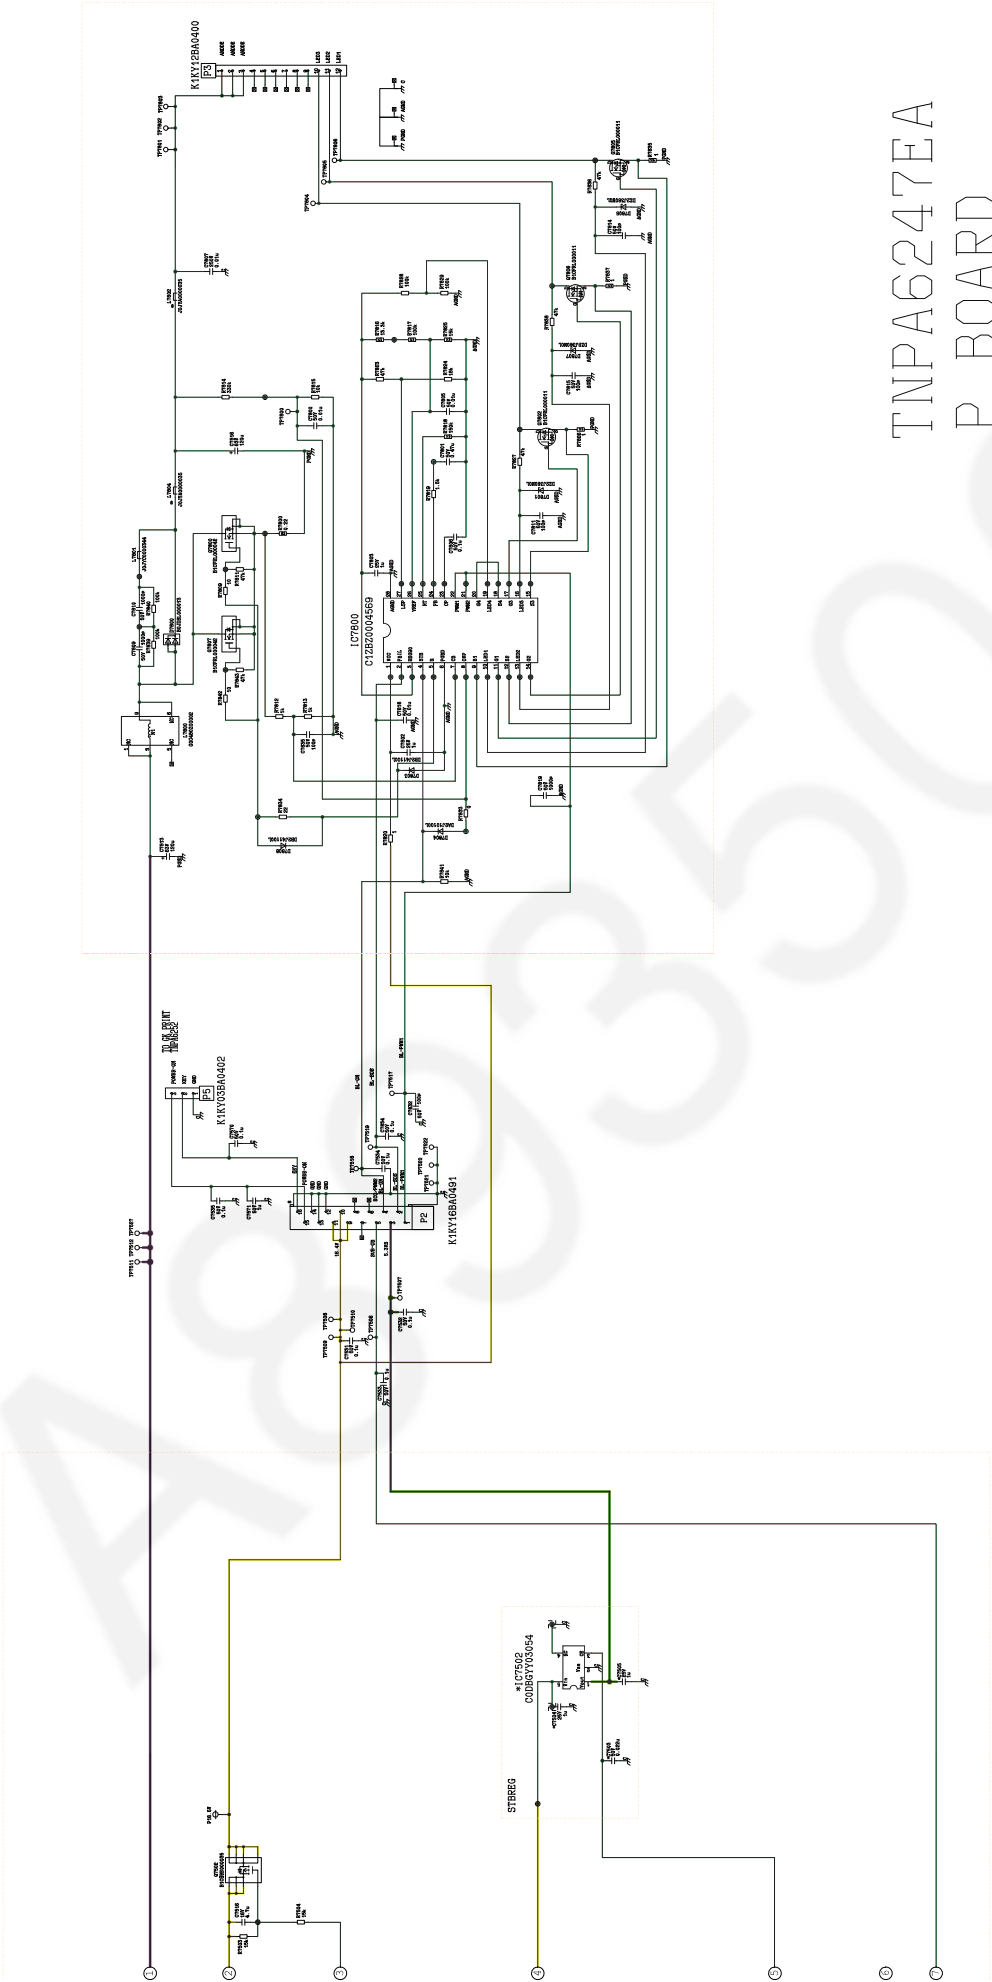


TNPA6247EA
P BOARD

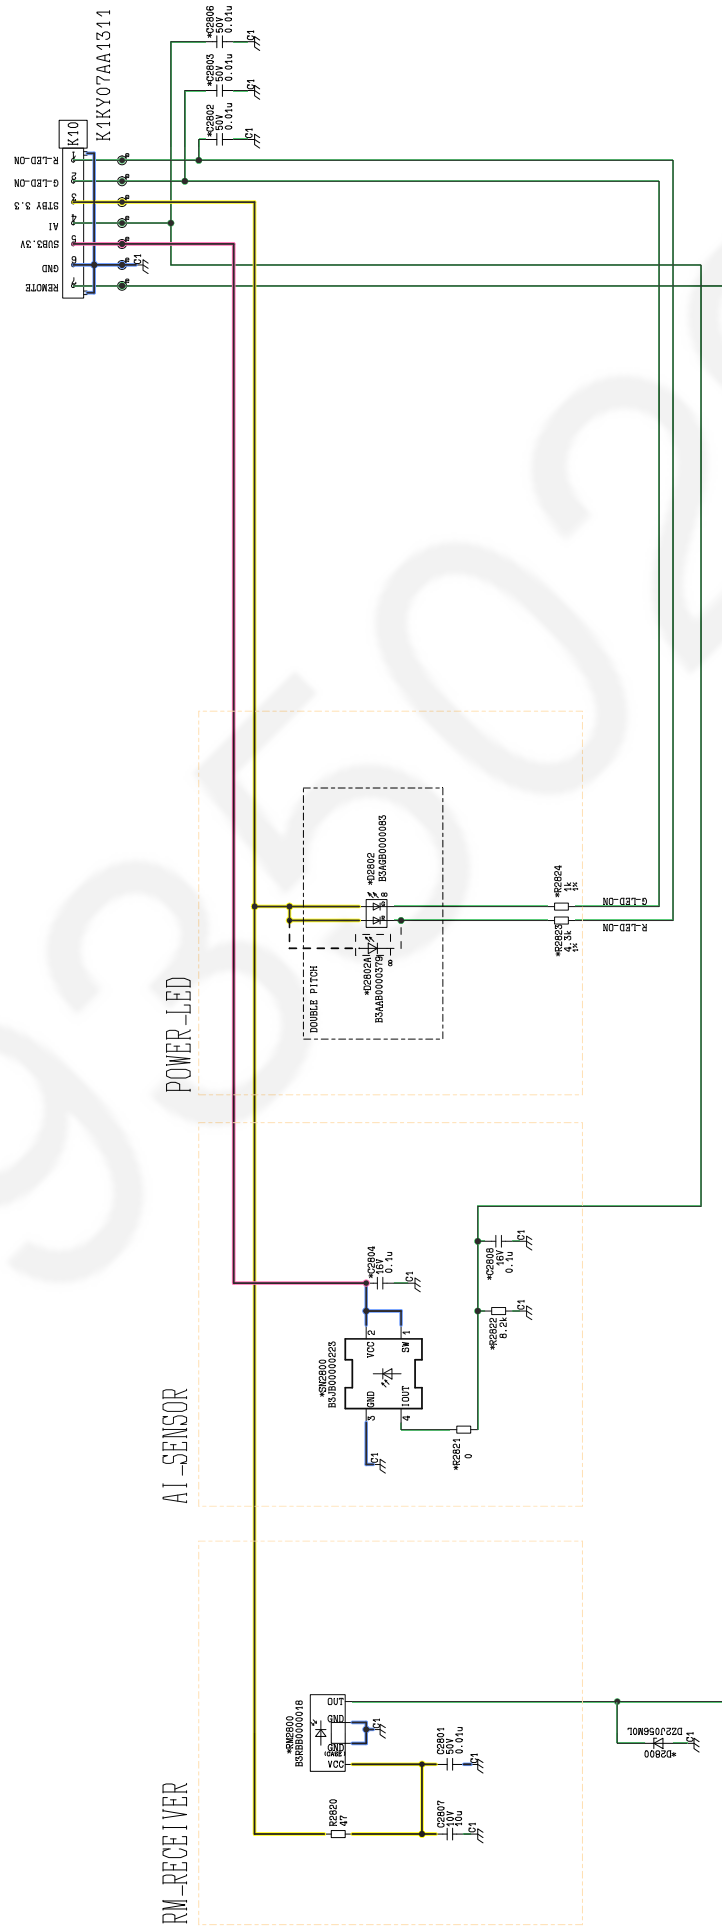


GK BOARD


TNPA6252AA


CRNo. : 2850~2879

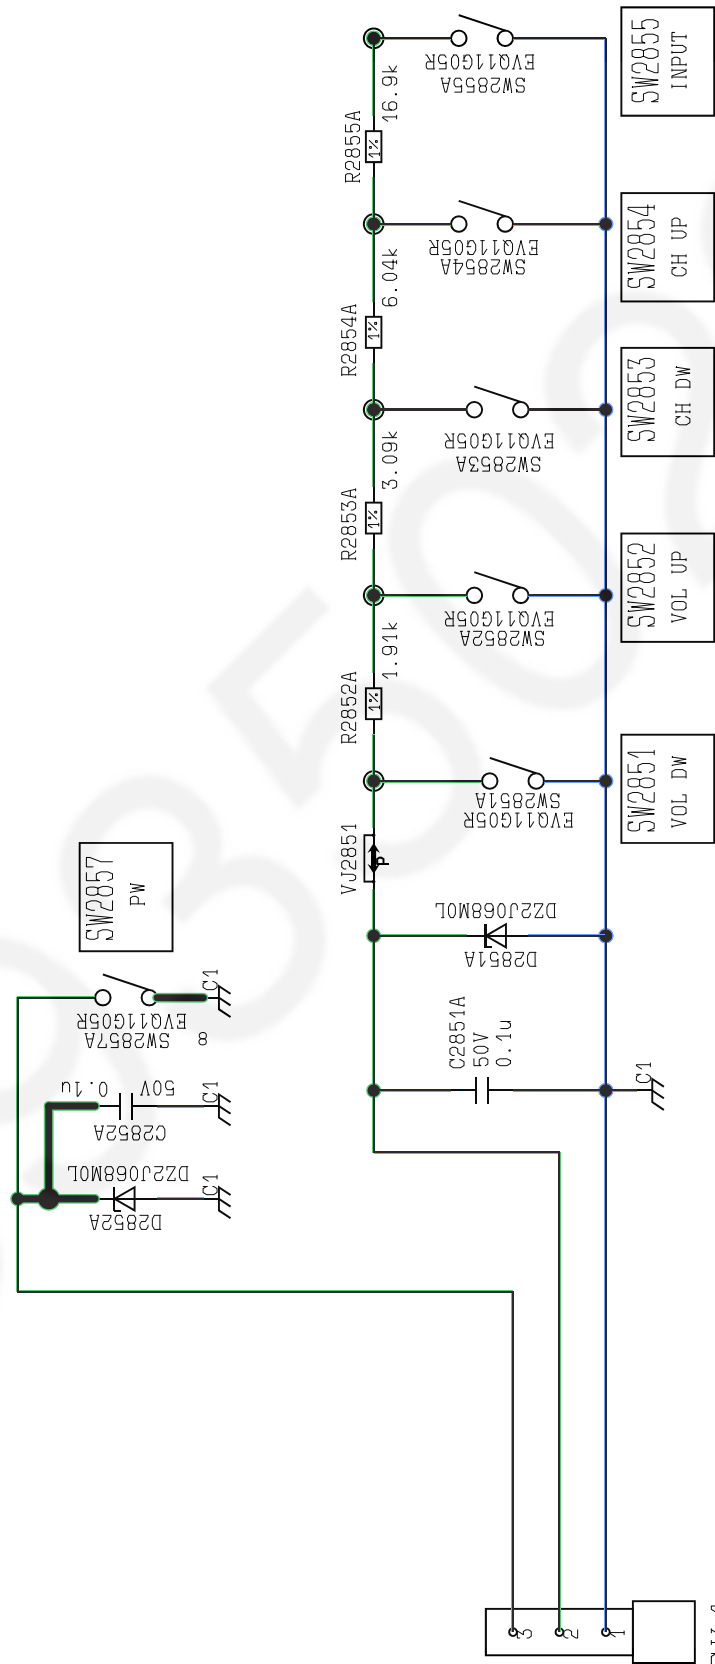


GK4
K1KY03BA0402

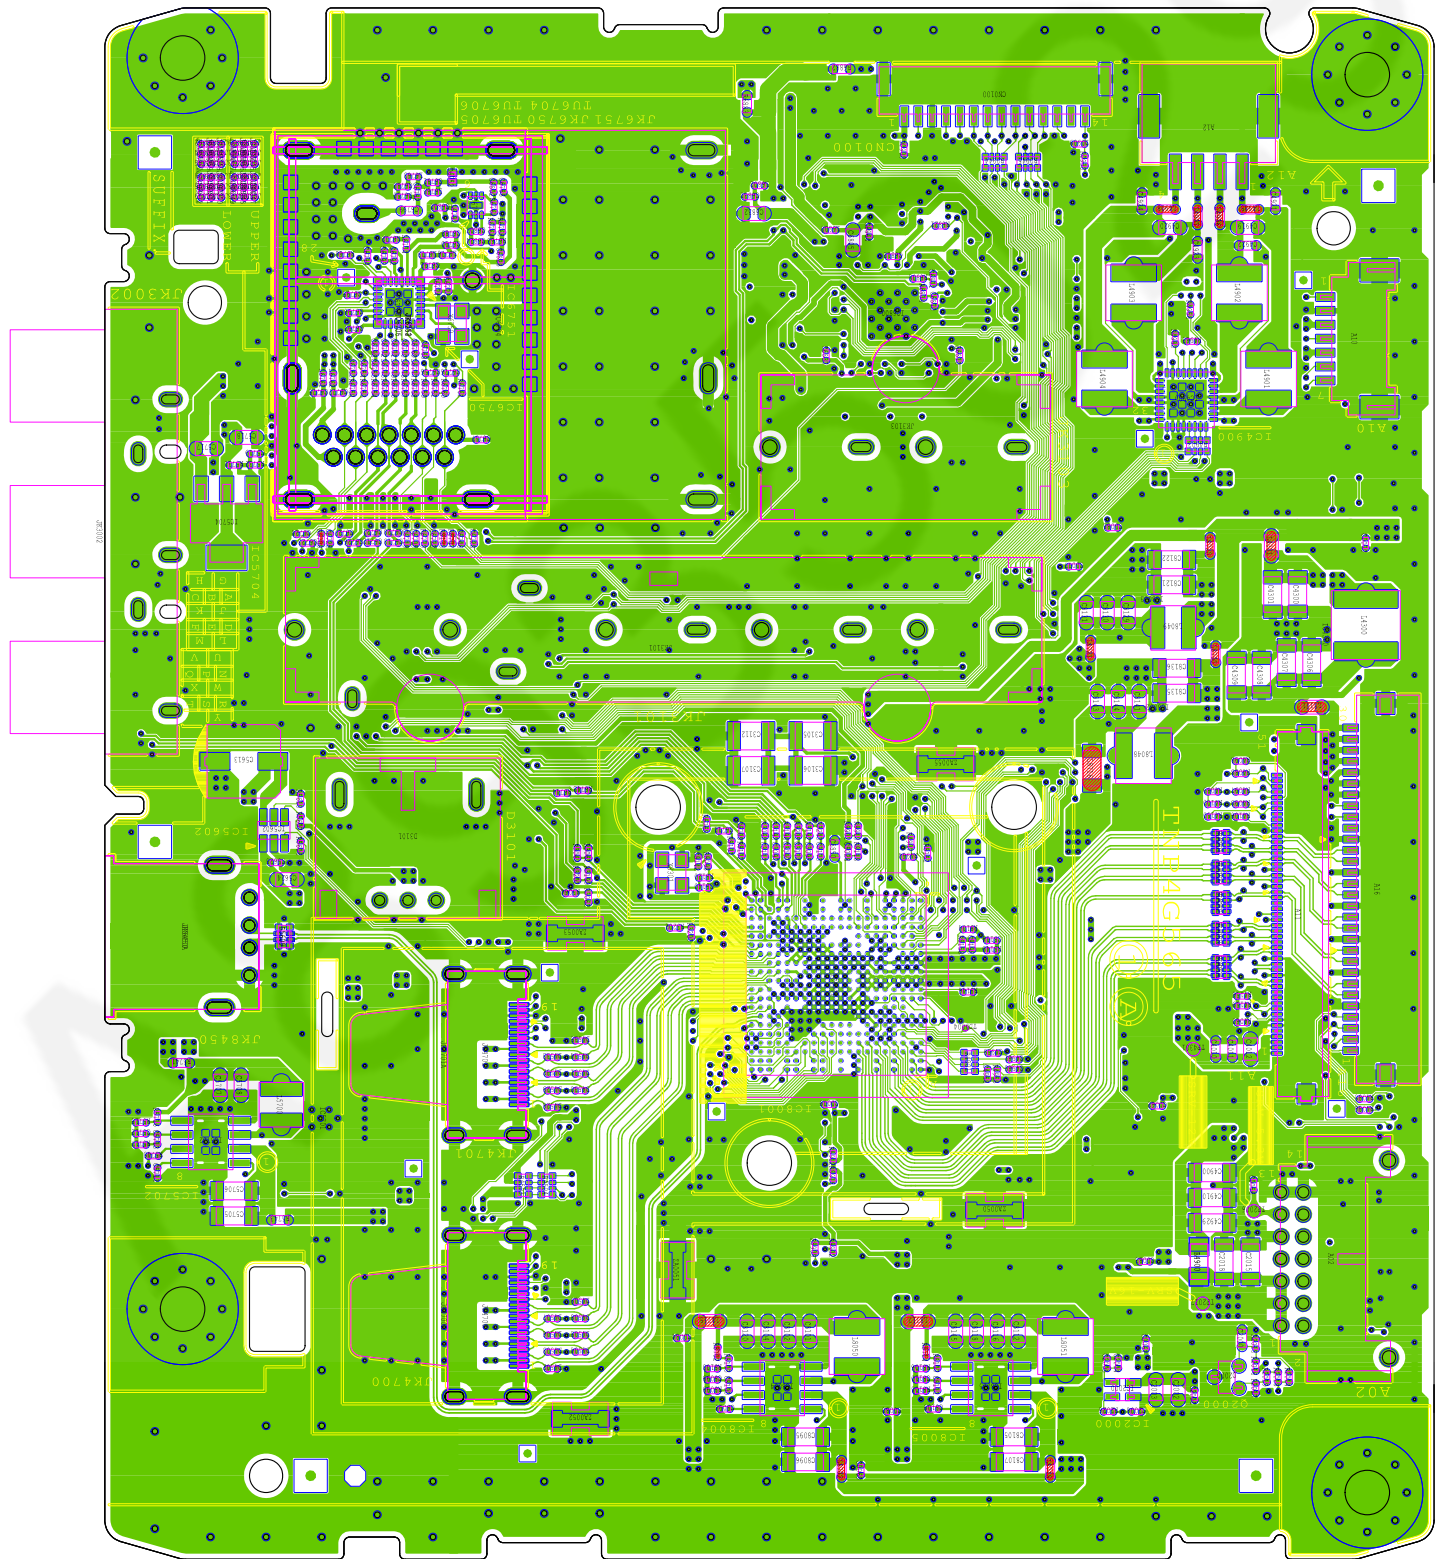


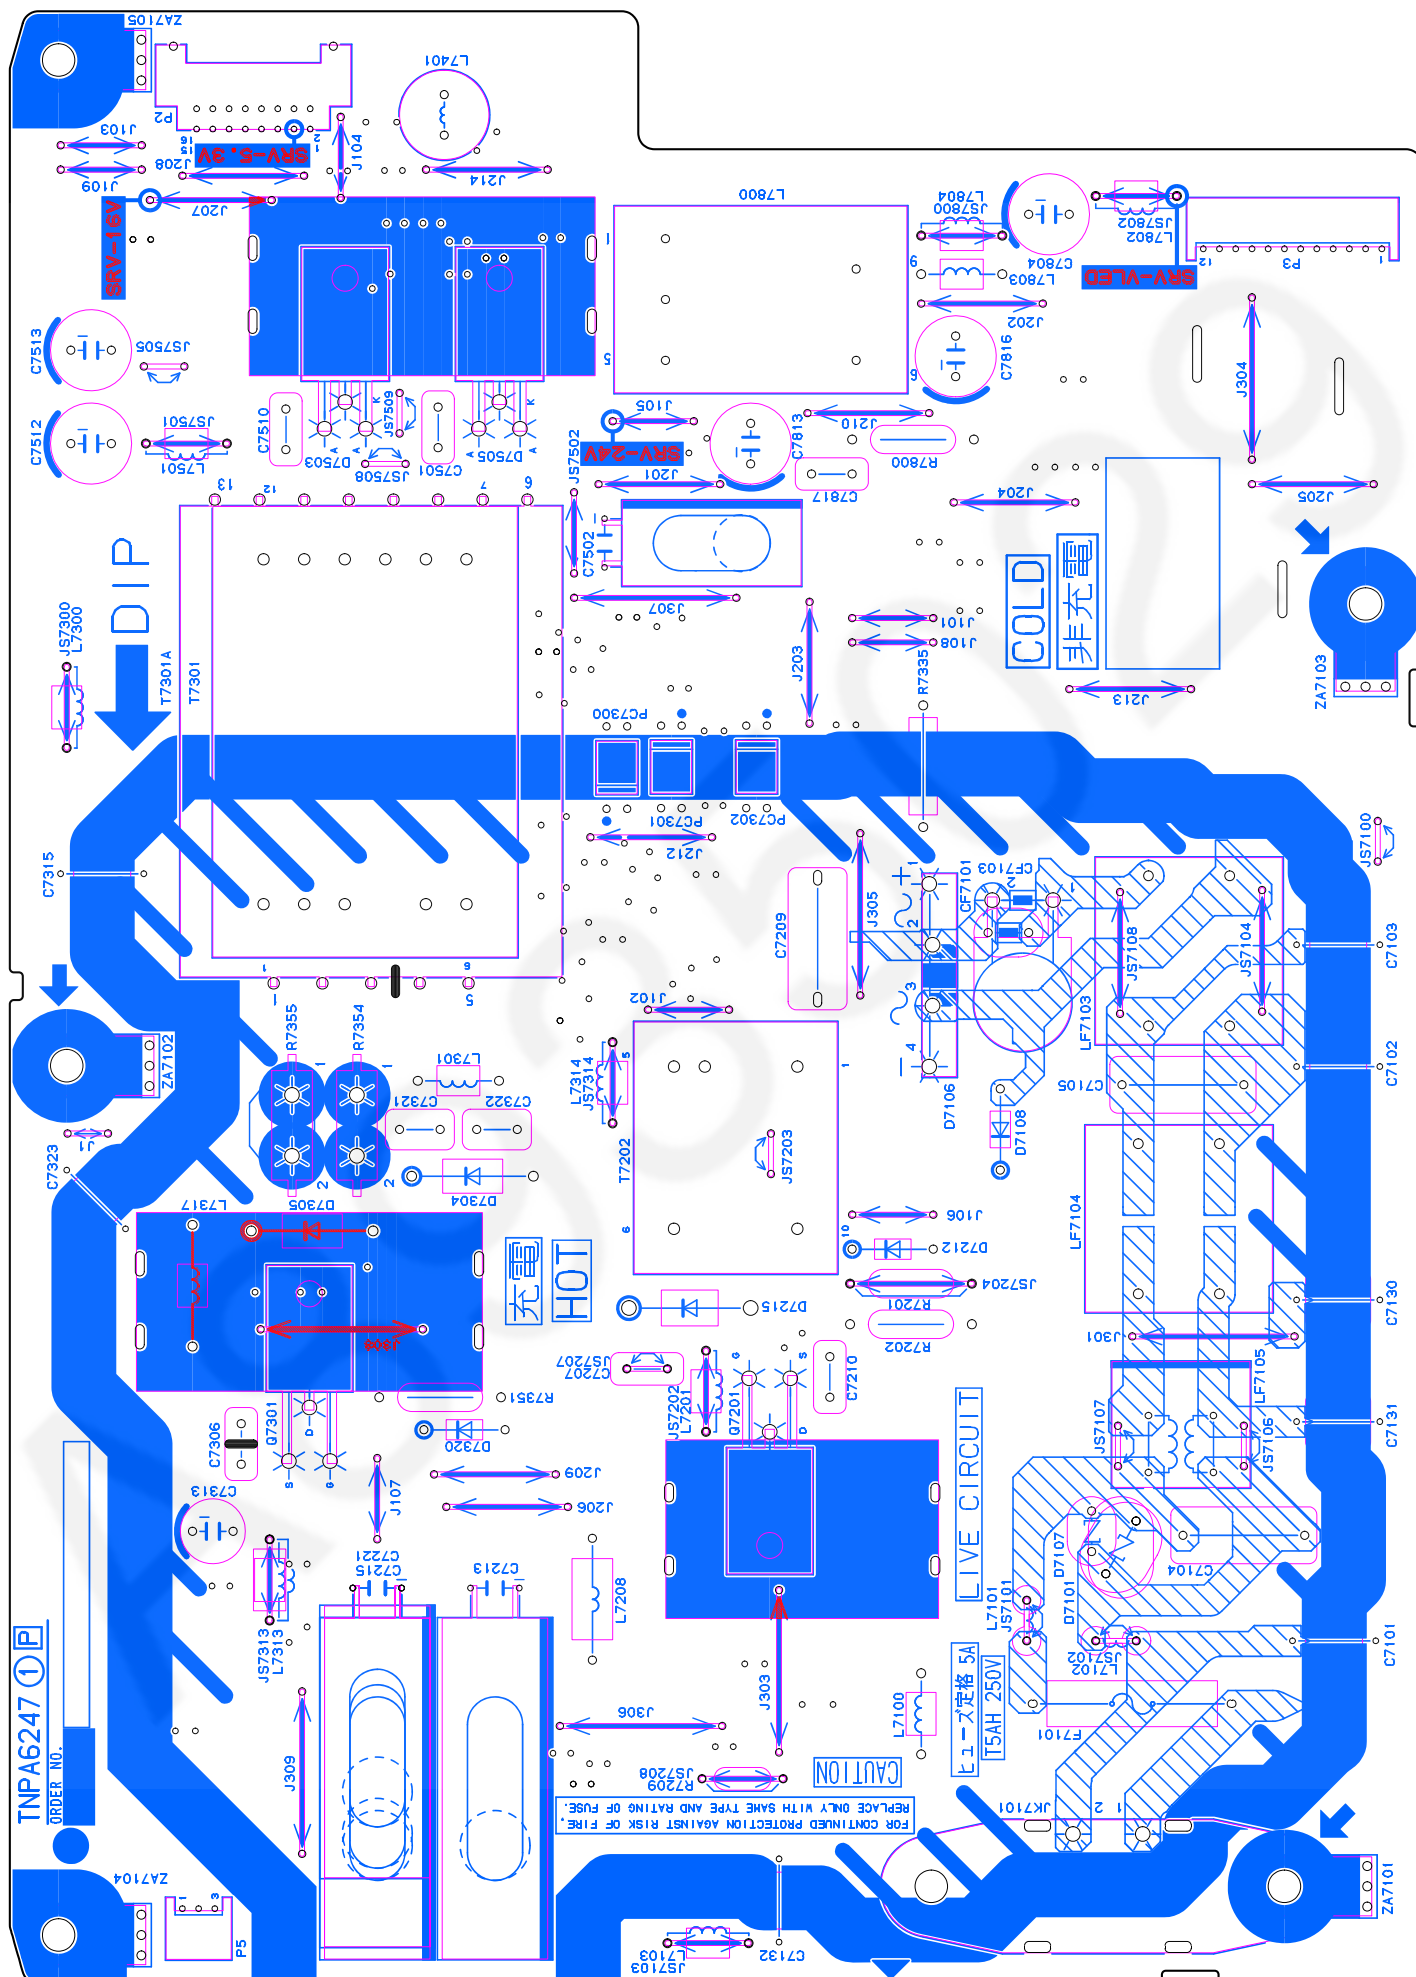


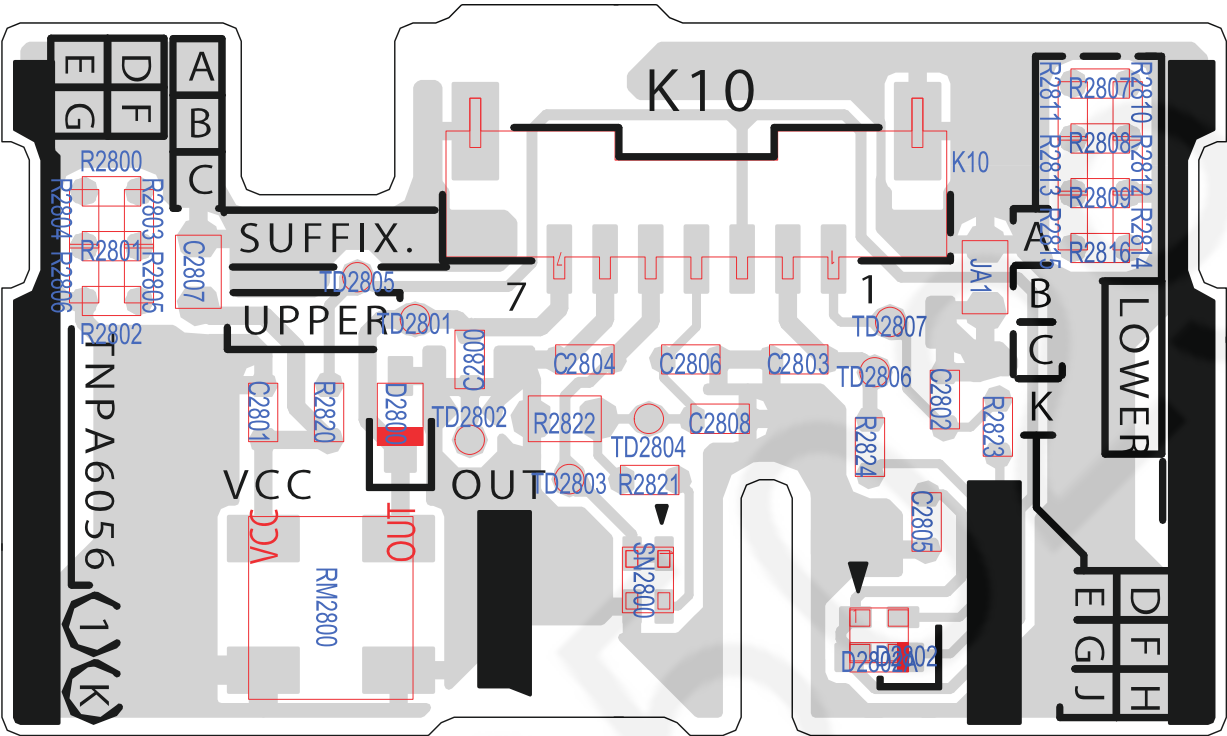


(FOIL SIDE)

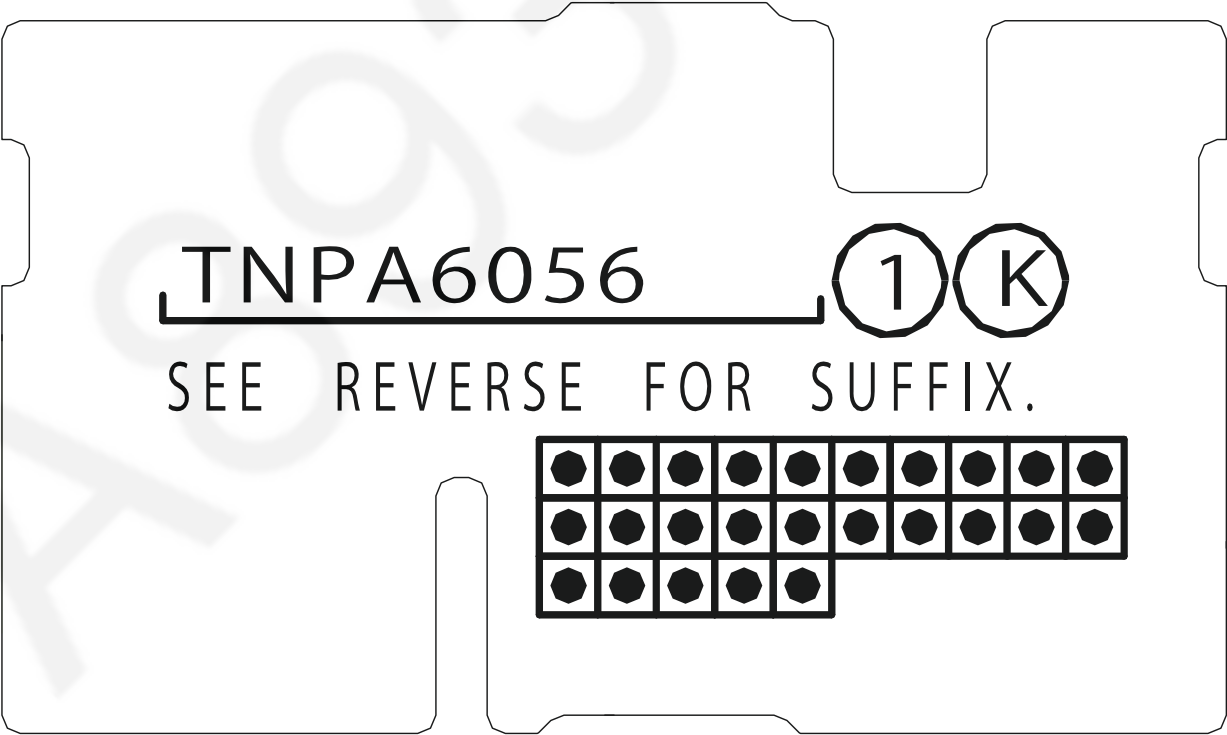

(COMPONENT SIDE)

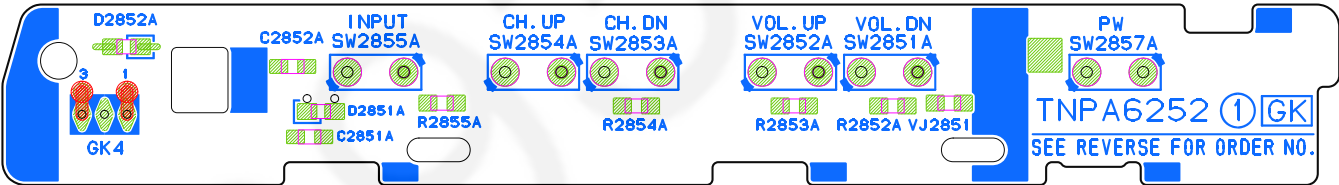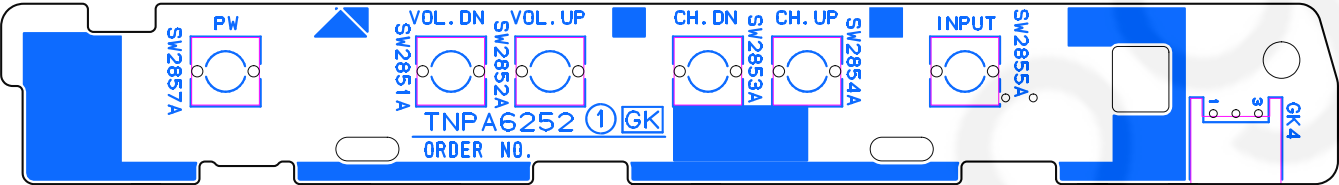

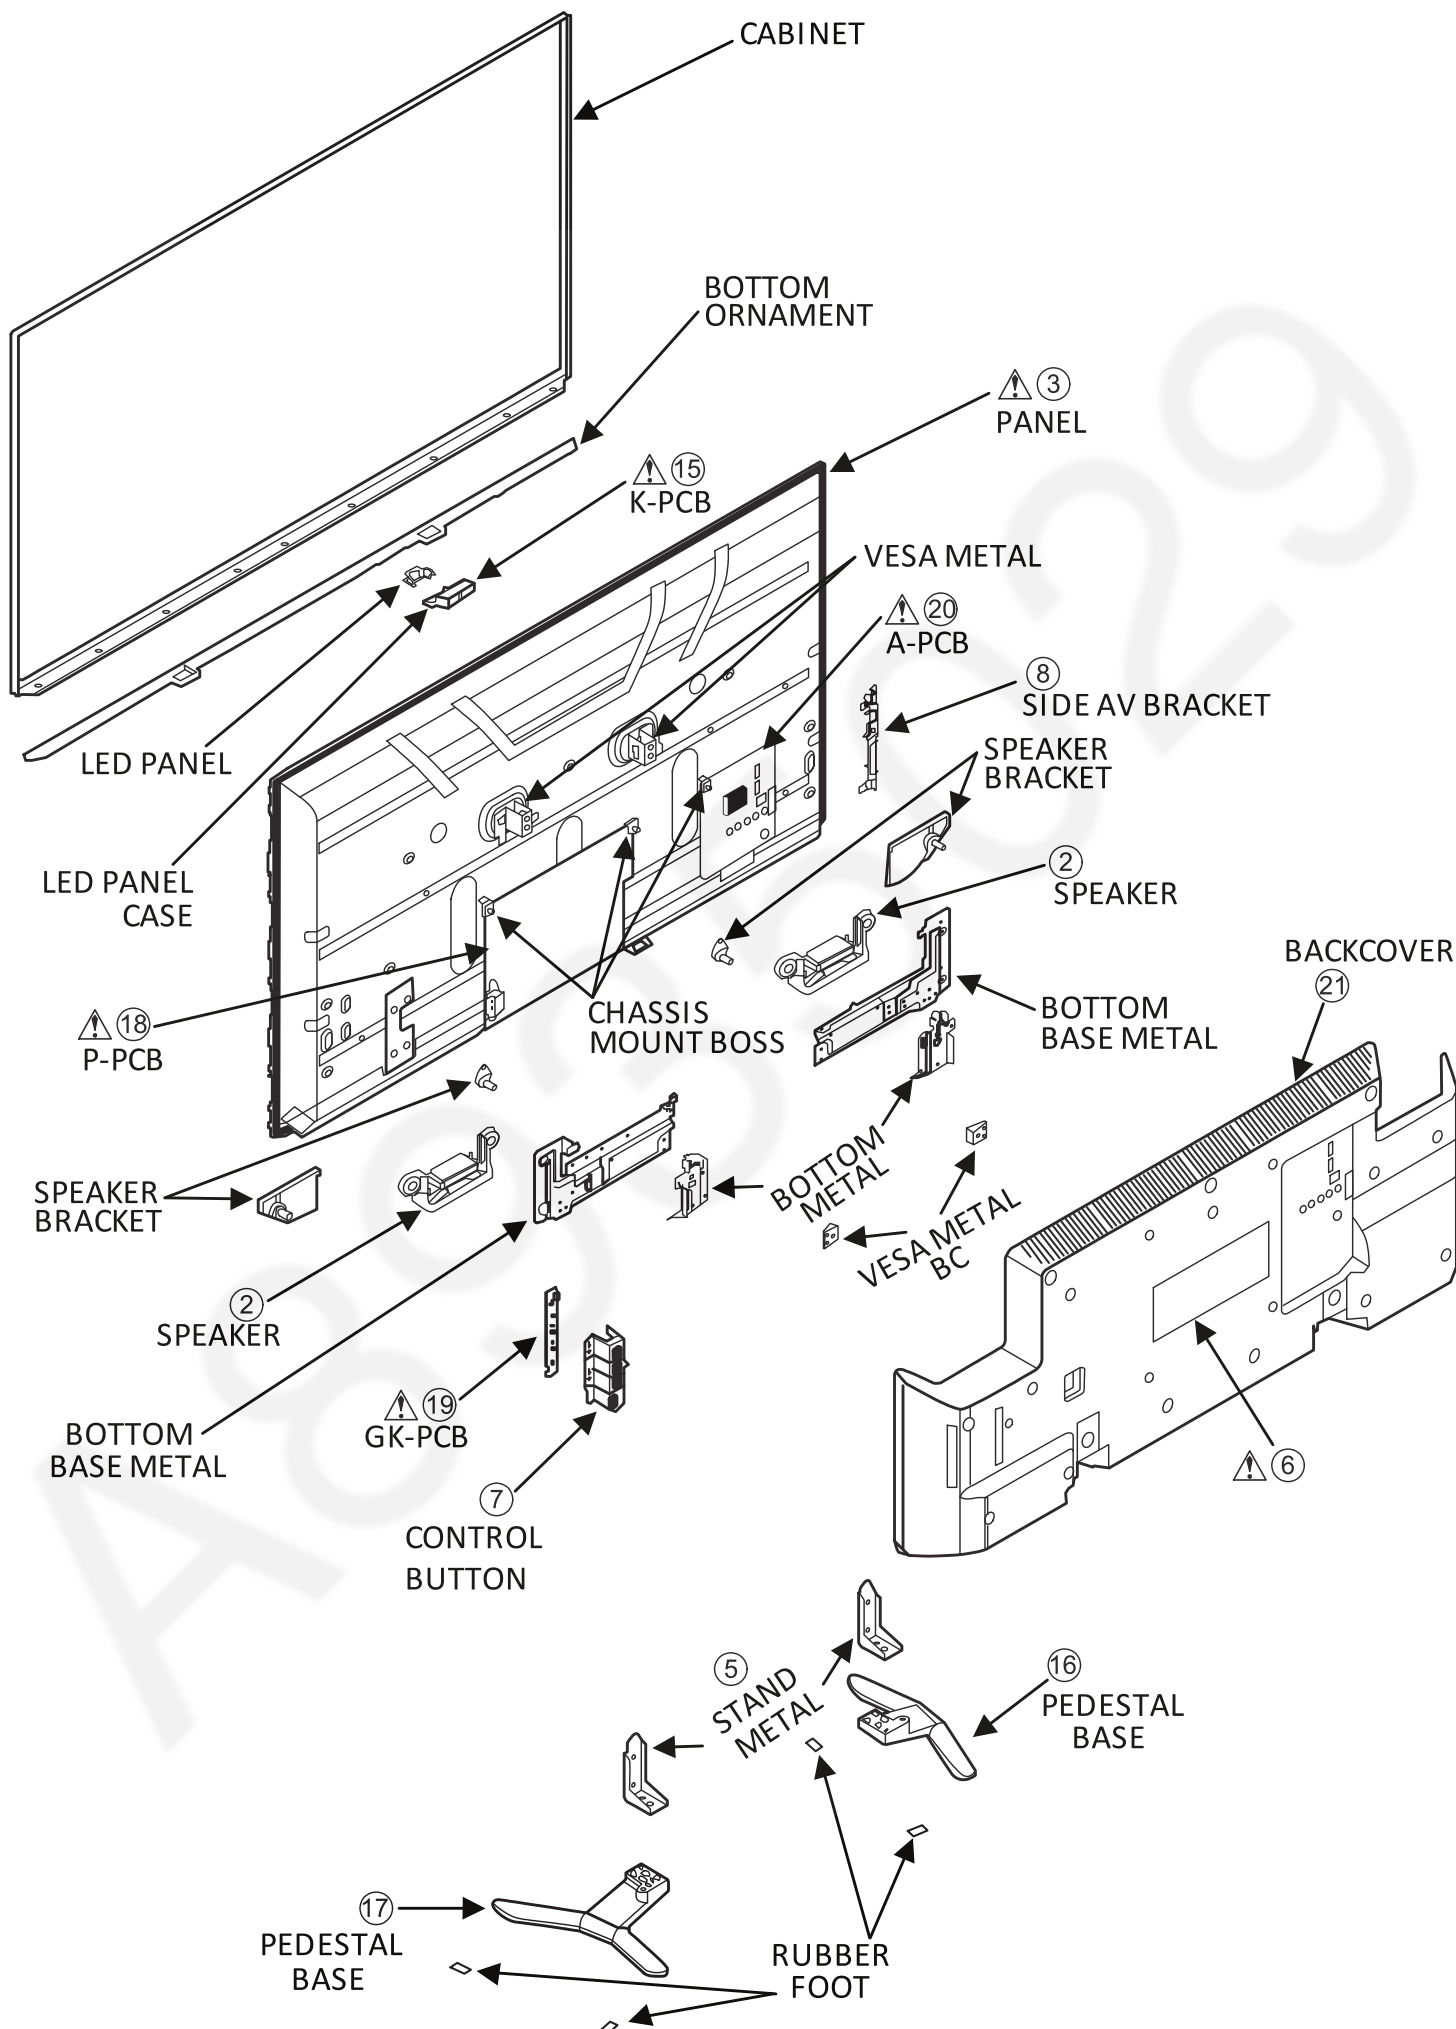

ASSEMBLY CONTENT :
1. Locate all accessories follow accordingly




No.	Description	Qty	UOM	Remarks
01	CUSHION ACCESSORY L	1	PC	0.9 kgf
02	REMOTE TRANSMITTER	1	PC	
03	BATTERY	1	PC	
04	PEDESTAL ASSY	1	PC	
05	STAND METAL ASSY	1	PC	



ASSEMBLY CONTENT :


- 1. Tapping bottom flap carton
- 2. Pack tv set with set cover then insert into packing case
- 3. Set air cushion into packing case and tv set

No.	Description	Qty	UOM	Remarks
01	CARTON	1	PC	
02	CUSHION BOTTOM CORNER	2	PC	0.66 kgf
03	CUSHION BOTTOM CENTER	1	PC	0.66 kgf
04	CUSHION TOP CORNER	2	PC	0.5 kgf
05	CUSHION TOP CENTER	1	PC	0.66 kgf
06	AC CORD	1	PC	
07	SET BAG	1	PC	
08	PP_TAPE(T1.09/B1.09)	2.18	MT	

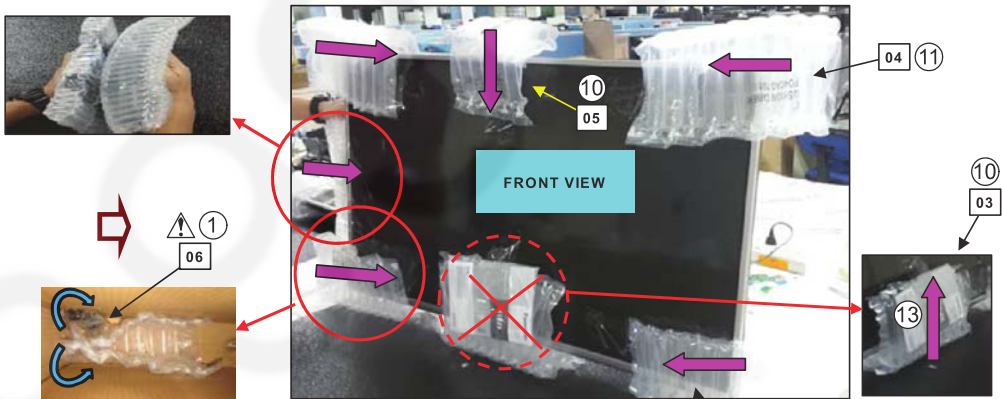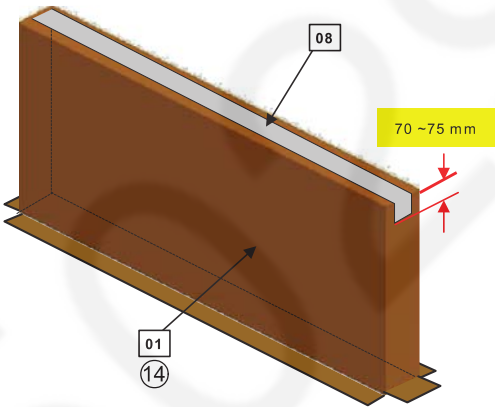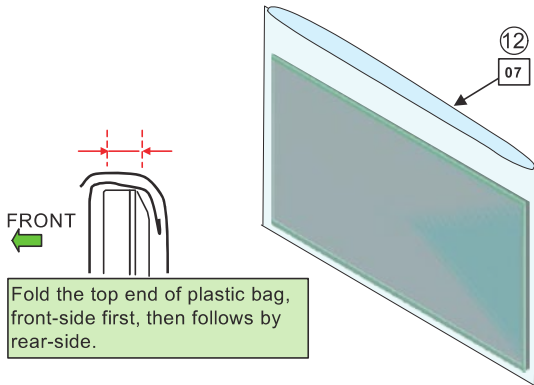

<Note>
Both bottom corner cushion need to folded before fix into pakaging


<Note>
Bottom center cushion (content -OIB) need to place at rear of tv set

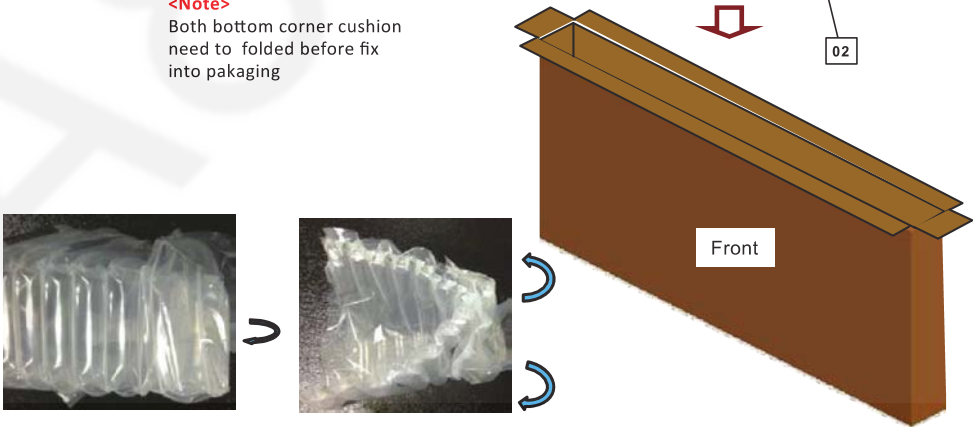

ASSEMBLY CONTENTS

1) Stick all LABEL follow market accordingly.

No.	Description	Qty	UOM	Remarks
01	PP_TAPE(TOP1.36/BTM1.36)	2.18	MT	
02	BARCODE LABEL	1	PC	
03	CARTON_LABEL	1	PC	

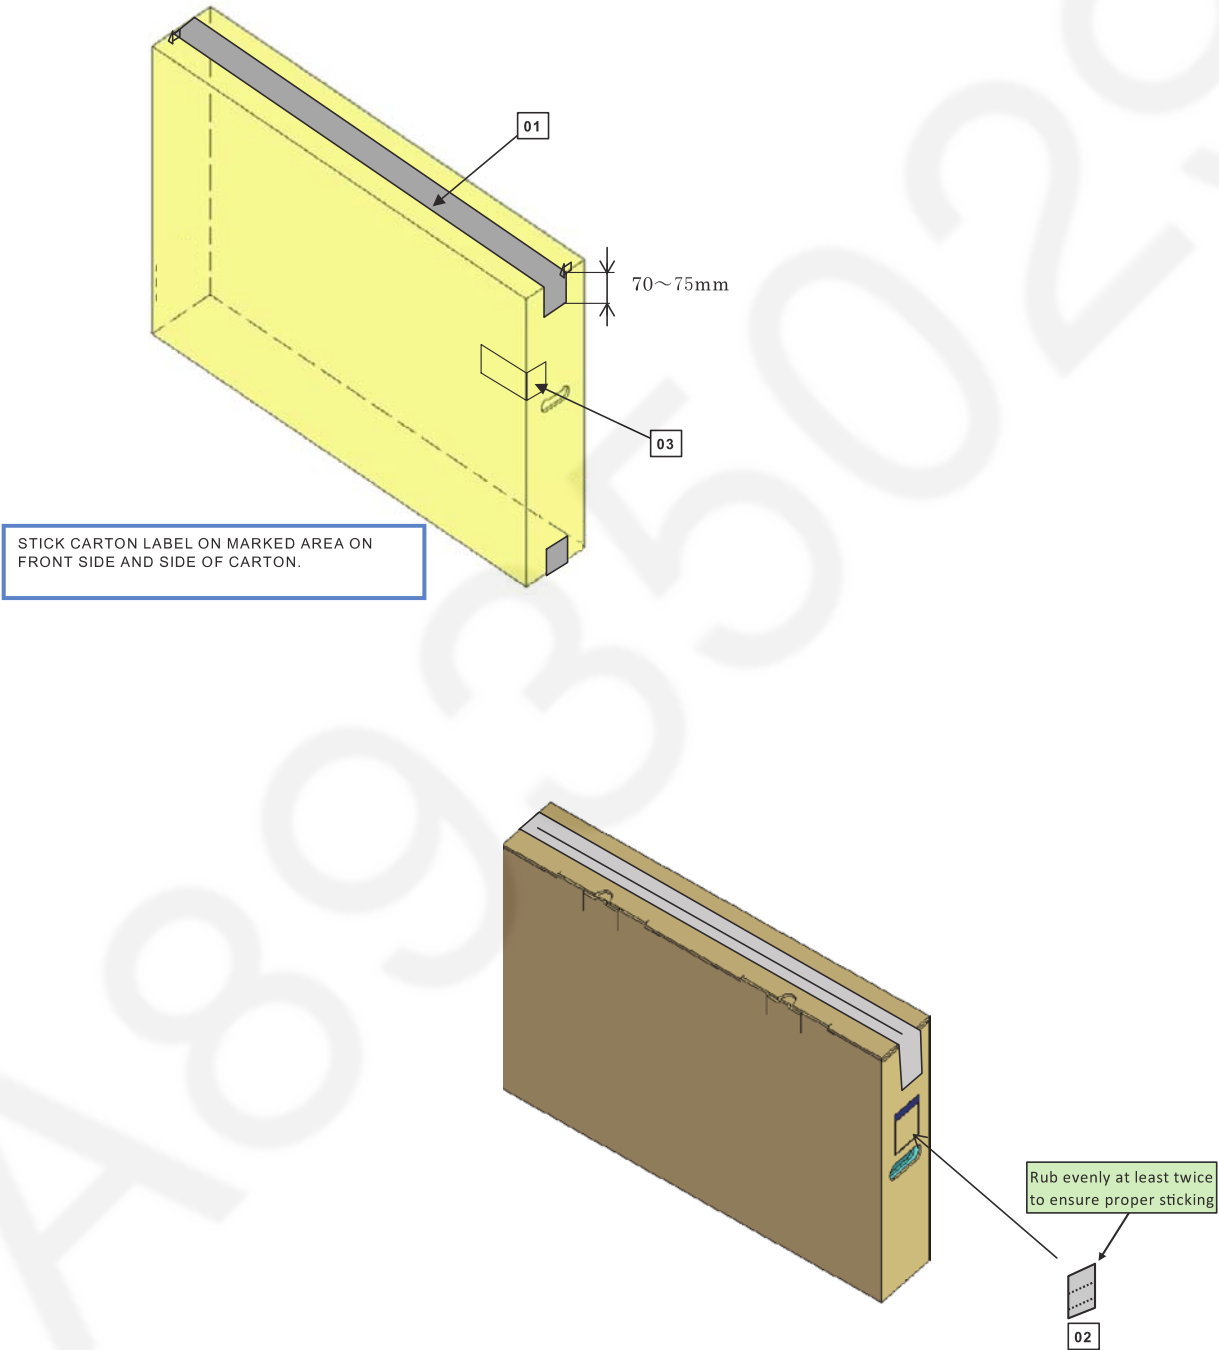

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		A02	K1KY14BA0484	CONNECTOR		
		A10	K1KY07BA0483	CONNECTOR		
		A11	K1MY51BA0526	CONNECTOR		
		A12	K1KY04BA0387	CONNECTOR		
		C2008	F1G1E103A144	C 0.01UF, 25V		
		C2009	F1H1E104A161	C 0.1UF, 25V		
		C2014	F1H1E104A161	C 0.1UF, 25V		
		C2015	F1K1V106A010	C 10UF, 35V		
		C2016	F1G1C104A146	C 0.1UF, 16V		
		C2017	F1G1C103A173	C 0.01UF, 16V		
		C2018	F1K1V106A010	C 10UF, 35V		
		C2023	F1G1H102A830	C 1000PF, 50V		
		C2024	F1G1H102A830	C 1000PF, 50V		
		C2025	F1G1H102A830	C 1000PF, 50V		
		C2026	F1G1H102A830	C 1000PF, 50V		
		C2027	F1G1H102A830	C 1000PF, 50V		
		C2028	F1G1H101A948	C 100PF, 50V		
		C2029	F1G1H1R5A543	C 1.5PF, 50V		
		C2030	F1G1H6R8A544	C 6.8PF, 50V		
		C2801	F1H1H103B047	C 0.01UF, 50V		
		C2802	F1H1H103B047	C 0.01UF, 50V		
		C2803	F1H1H103B047	C 0.01UF, 50V		
		C2804	F1H1C104A178	C 0.1UF, 16V		
		C2806	F1H1H103B047	C 0.01UF, 50V		
		C2807	F1J1A106A043	C 10UF, 10V		
		C2808	F1H1C104A178	C 0.1UF, 16V		
		C2851A	F1J1H104A902	C 0.1UF, 50V		
		C2852A	F1J1H104A902	C 0.1UF, 50V		
		C3093	F1G1A473A079	C 0.047UF, 10V		
		C3095	F1G1A473A079	C 0.047UF, 10V		
		C3097	F1G1A473A079	C 0.047UF, 10V		
		C3108	F1G1H100A948	C 10PF, 50V		
		C3109	F1G1H100A948	C 10PF, 50V		
		C3110	F1G1H100A948	C 10PF, 50V		
		C3169	F1J1A106A043	C 10UF, 10V		
		C3170	F1J1A106A043	C 10UF, 10V		
		C3173	F1G1H152A946	C 1500PF, 50V		
		C3174	F1G1A473A079	C 0.047UF, 10V		
		C4010	F1H1H103B047	C 0.01UF, 50V		
		C4011	F1H1H103B047	C 0.01UF, 50V		
		C4012	F1J1C475A225	C 4.7UF, 16V		
		C4013	F1G1C104A146	C 0.1UF, 16V		
		C4300	F1K1V106A010	C 10UF, 35V		
		C4302	F1G1C104A146	C 0.1UF, 16V		
		C4303	F1G1C223A173	C 0.022UF, 16V		
		C4305	F1G1E332A172	C 3300PF, 25V		
		C4306	F1K1V106A010	C 10UF, 35V		
		C4307	F1K1V106A010	C 10UF, 35V		
		C4308	F1K1V106A010	C 10UF, 35V		
		C4502	F1G1C104A146	C 0.1UF, 16V		
		C4503	F1G1H101A948	C 100PF, 50V		
		C4900	F1K1V106A010	C 10UF, 35V		
		C4901	F1K1V106A010	C 10UF, 35V		
		C4902	F1J1E105A287	C 1UF, 25V		
		C4903	F1K1V106A010	C 10UF, 35V		
		C4904	F1J1E105A287	C 1UF, 25V		
		C4905	F1H1C105A167	C 1UF, 16V		
		C4906	F1K1V106A010	C 10UF, 35V		
		C4907	F1J1E105A287	C 1UF, 25V		
		C4908	F1K1V106A010	C 10UF, 35V		
		C4909	F1J1E105A287	C 1UF, 25V		
		C4919	F1J1E224A272	C 0.22UF, 25V		
		C4920	F1J1E224A272	C 0.22UF, 25V		
		C4921	F1H1E104A161	C 0.1UF, 25V		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C4922	F1H1E104A161	C 0.1UF, 25V		
		C4923	F1H1E104A161	C 0.1UF, 25V		
		C4924	F1H1E104A161	C 0.1UF, 25V		
		C5028	F1G1C104A146	C 0.1UF, 16V		
		C5170	F1G1A224A069	C 220000PF, 10V		
		C5614	F1J1A106A043	C 10UF, 10V		
		C5615	F1J1A106A043	C 10UF, 10V		
		C5616	F1G1C104A146	C 0.1UF, 16V		
		C5624	F1J1A106A043	C 10UF, 10V		
		C5625	F1G1C104A146	C 0.1UF, 16V		
		C5703	F1G1A105A047	C 1UF, 10V		
		C5704	F1G1A105A047	C 1UF, 10V		
		C5717	F1J1A106A043	C 10UF, 10V		
		C5718	F1J1A106A043	C 10UF, 10V		
		C6704	F1J1A106A043	C 10UF, 10V		
		C6705	F1G1C473A146	C 0.047UF, 16V		
		C6707	F1G1C104A146	C 0.1UF, 16V		
		C6708	F1J1A106A043	C 10UF, 10V		
		C6710	F1G1C104A146	C 0.1UF, 16V		
		C6712	F1G1A105A047	C 1UF, 10V		
		C6713	F1G1A105A047	C 1UF, 10V		
		C6720	F1G1H220A834	C 22PF, 50V		
		C6721	F1G1H220A834	C 22PF, 50V		
		C6722	F1G1C104A146	C 0.1UF, 16V		
		C6723	F1G1H220A834	C 22PF, 50V		
		C6724	F1G1H220A834	C 22PF, 50V		
		C6726	F1G1H220A834	C 22PF, 50V		
		C6727	F1G1H220A834	C 22PF, 50V		
		C6728	F1G1H102A948	C 1000PF, 50V		
		C6732	F1G1C473A146	C 0.047UF, 16V		
		C6736	F1G1H101A948	C 100PF, 50V		
		C6737	F1G1H101A948	C 100PF, 50V		
		C6738	F1G1A105A047	C 1UF, 10V		
		C6739	F1G1C103A173	C 0.01UF, 16V		
		C6740	F1G1H1R5A543	C 1.5PF, 50V		
		C6741	F1G1A105A047	C 1UF, 10V		
		C6742	F1G1C103A173	C 0.01UF, 16V		
		C6743	F1G1H1R5A543	C 1.5PF, 50V		
		C6753	F1G1H5R0A947	C 5PF, 50V		
		C6754	F1G1H5R0A947	C 5PF, 50V		
		C6768	F1G1H102A830	C 1000PF, 50V		
		C6769	F1G1E103A144	C 0.01UF, 25V		
		C6770	F1G1E103A144	C 0.01UF, 25V		
		C6771	F1G1E103A144	C 0.01UF, 25V		
		C6772	F1G1E103A144	C 0.01UF, 25V		
		C6773	F1G1H102A830	C 1000PF, 50V		
		C6774	F1G1C104A146	C 0.1UF, 16V		
		C6775	F1G1C104A146	C 0.1UF, 16V		
		C6777	F1G0J1050007	C 1.0UF, 6.3V		
		C6781	F1G1H331A946	C 330PF, 50V		
		C6782	F1G1H121A834	C 120PF, 50V		
		C6783	F1G1H121A834	C 120PF, 50V		
		C6788	F1G1H101A948	C 100PF, 50V		
		C6789	F1G1H181A834	C 180PF, 50V		
		C6790	F1G1H181A834	C 180PF, 50V		
		C6791	F1G1H102A948	C 1000PF, 50V		
		C6793	F1G1H102A948	C 1000PF, 50V		
		C6794	F1G1C104A146	C 0.1UF, 16V		
		C6795	F1G1C104A146	C 0.1UF, 16V		
		C6797	F1G1H102A830	C 1000PF, 50V		
		C6798	F1G1H102A830	C 1000PF, 50V		
		C6799	F1H1H181B052	C 180PF, 50V		
		C6804	F1G1C104A146	C 0.1UF, 16V		
		C6805	F1J1A106A043	C 10UF, 10V		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C6806	F1J1A106A043	C 10UF, 10V		
		C6809	F1G1C104A146	C 0.1UF, 16V		
		C6820	F1G1C104A146	C 0.1UF, 16V		
		C6822	F1G1C104A146	C 0.1UF, 16V		
		C6830	F1G1C104A146	C 0.1UF, 16V		
		C6832	F1J1A106A043	C 10UF, 10V		
		C6838	F1G1C104A146	C 0.1UF, 16V		
		C6840	F1G1C104A146	C 0.1UF, 16V		
		C6844	F1G1C104A146	C 0.1UF, 16V		
		C6847	F1G1H8R0A833	C 8PF, 50V		
		C6848	F1G1H8R0A833	C 8PF, 50V		
		C6864	F1G1C104A146	C 0.1UF, 16V		
		C6872	F1G1C104A146	C 0.1UF, 16V		
		C6873	F1G1C104A146	C 0.1UF, 16V		
	⚠	C7102	F1AAF471A019	C 470PF, 240V		
	⚠	C7103	F1AAF471A019	C 470PF, 240V		
		C7104	F0CAF2240010	C 0.22UF, 250V		
		C7105	F0CAF2240010	C 0.22UF, 250V		
	⚠	C7130	F1AAF471A019	C 470PF, 240V		
	⚠	C7131	F1AAF471A019	C 470PF, 240V		
		C7213	F2A2W6500001	C 65UF, 450V		For TH-40D400S & TH-40D400T Only
		C7215	F2A2W6500001	C 65UF, 450V		
		C7306	F1A3A101A079	C 100PF, 1KV		
		C7310	F1J1H103A900	C 0.01UF, 50V		
		C7311	F1J1H102A909	C 1000PF, 50V		
		C7312	F1J1H105A919	C 1UF, 50V		
		C7313	F2A1V470B660	C 47PF, 35V		
		C7314	F1H1H223B047	C 22000PF, 50V		
	⚠	C7315	F1AAF471A019	C 470PF, 240V		
		C7317	F1J2E103A035	C 0.01UF, 250V		
		C7318	F1J2E103A035	C 0.01UF, 250V		
	⚠	C7323	F1AAF471A019	C 470PF, 240V		
		C7434	F1J1C475A225	C 4.7UF, 16V		
		C7502	F2AZZ4710003	C 470UF, 240V		
		C7503	F1H1H223B047	C 22000PF, 50V		
		C7504	F1J1E105A287	C 1UF, 25V		
		C7505	F1J1E105A287	C 1UF, 25V		
		C7510	F1A3A471A079	C 470PF, 1KV		
		C7512	F2A1E4710124	C 470PF, 25V		
		C7513	F2A1E4710124	C 470PF, 25V		
		C7516	F1J1C475A225	C 4.7UF, 16V		
		C7523	F1J1H104A902	C 0.1UF, 50V		
		C7531	F1H1H104B047	C 0.1UF, 50V		
		C7532	F1H1H104B047	C 0.1UF, 50V		
		C7533	F1J1H104A902	C 0.1UF, 50V		
		C7534	F1J1H104A902	C 0.1UF, 50V		
		C7535	F1J1H104A902	C 0.1UF, 50V		
		C7570	F1J1H104A902	C 0.1UF, 50V		
		C7571	F1J1H105A919	C 1UF, 50V		
		C7800	F1J1H103A900	C 0.01UF, 50V		
		C7801	F1J1H474A918	C 0.47UF, 50V		
		C7802	F1J1E105A287	C 1UF, 25V		
		C7803	F1J1E105A287	C 1UF, 25V		
		C7805	F1J1H103A900	C 0.01UF, 50V		
		C7806	F1J1H104A902	C 0.1UF, 50V		
		C7807	F1J2E103A035	C 0.01UF, 250V		
		C7809	F1J1H102A909	C 1000PF, 50V		
		C7810	F1J1H102A909	C 1000PF, 50V		
		C7811	F1J1H101A906	C 100PF, 50V		
		C7813	F2A1J1210012	C 120UF, 63V		
		C7814	F1J1H101A906	C 100PF, 50V		
		C7815	F1J1H101A906	C 100PF, 50V		
		C7816	F2A1J1210012	C 120UF, 63V		
		C7818	F1J1H103A900	C 0.01UF, 50V		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C7819	F1J1H102A909	C 1000PF, 50V		
		C7832	F1J1H101A906	C 100PF, 50V		
		C7834	F1J1H104A902	C 0.1UF, 50V		
		C7835	F1J1H101A906	C 100PF, 50V		
		C8095	F1K1V106A010	C 10UF, 35V		
		C8097	F1G1C104A146	C 0.1UF, 16V		
		C8098	F1G1C103A173	C 0.01UF, 16V		
		C8100	F1G1E332A172	C 3300PF, 25V		
		C8101	F1J1A106A043	C 10UF, 10V		
		C8102	F1J1A106A043	C 10UF, 10V		
		C8103	F1H0J4750004	C 4.7UF, 6.3V		
		C8104	F1J1A106A043	C 10UF, 10V		
		C8105	F1K1V106A010	C 10UF, 35V		
		C8106	F1J1A106A043	C 10UF, 10V		
		C8108	F1G1C104A146	C 0.1UF, 16V		
		C8109	F1G1C103A173	C 0.01UF, 16V		
		C8111	F1G1E332A172	C 3300PF, 25V		
		C8112	F1J0J2260004	C 22UF, 6.3V		
		C8113	F1G1C103A173	C 0.01UF, 16V		
		C8115	F1H1C105A167	C 1UF, 16V		
		C8116	F1J0J2260004	C 22UF, 6.3V		
		C8117	F1G1C104A146	C 0.1UF, 16V		
		C8118	F1J0J2260004	C 22UF, 6.3V		
		C8121	F1K1V106A010	C 10UF, 35V		
		C8123	F1G1C104A146	C 0.1UF, 16V		
		C8124	F1G1C103A173	C 0.01UF, 16V		
		C8126	F1G1E332A172	C 3300PF, 25V		
		C8127	F1H1C105A167	C 1UF, 16V		
		C8128	F1G1C104A146	C 0.1UF, 16V		
		C8129	F1J0G2260001	C 22UF, 4V		
		C8130	F1J0G2260001	C 22UF, 4V		
		C8134	F1G1E472A172	C 4700PF, 25V		
		C8135	F1K1V106A010	C 10UF, 35V		
		C8137	F1G1C104A146	C 0.1UF, 16V		
		C8138	F1G1C103A173	C 0.01UF, 16V		
		C8140	F1G1H270A834	C 27PF, 50V		
		C8141	F1J0G2260001	C 22UF, 4V		
		C8142	F1G1H270A834	C 27PF, 50V		
		C8143	F1J0G2260001	C 22UF, 4V		
		C8146	F1G1A105A047	C 1UF, 10V		
		C8147	F1G1A105A047	C 1UF, 10V		
		C8148	F1H1C105A167	C 1UF, 16V		
		C8151	F1H1H103B047	C 0.01UF, 50V		
		C8152	F1G1A105A047	C 1UF, 10V		
		C8153	F1G1A105A047	C 1UF, 10V		
		C8162	F1G1C104A146	C 0.1UF, 16V		
		C8163	F1G1C103A173	C 0.01UF, 16V		
		C8164	F1J1A106A043	C 10UF, 10V		
		C8165	F1G1C104A146	C 0.1UF, 16V		
		C8166	F1G1C104A146	C 0.1UF, 16V		
		C8167	F1G1C104A146	C 0.1UF, 16V		
		C8168	F1H1C105A167	C 1UF, 16V		
		C8169	F1G1C104A146	C 0.1UF, 16V		
		C8170	F1G1C104A146	C 0.1UF, 16V		
		C8171	F1G1C104A146	C 0.1UF, 16V		
		C8172	F1G1A105A047	C 1UF, 10V		
		C8173	F1G1C104A146	C 0.1UF, 16V		
		C8174	F1H0J4750004	C 4.7UF, 6.3V		
		C8176	F1G1A105A047	C 1UF, 10V		
		C8177	F1G1C104A146	C 0.1UF, 16V		
		C8178	F1G1C104A146	C 0.1UF, 16V		
		C8179	F1G1C104A146	C 0.1UF, 16V		
		C8180	F1J1A106A043	C 10UF, 10V		
		C8184	F1J0G2260001	C 22UF, 4V		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8186	F1G1C104A146	C 0.1UF, 16V		
		C8187	F1G1C104A146	C 0.1UF, 16V		
		C8188	F1G1C104A146	C 0.1UF, 16V		
		C8189	F1G1A105A047	C 1UF, 10V		
		C8191	F1G1C104A146	C 0.1UF, 16V		
		C8192	F1G1C104A146	C 0.1UF, 16V		
		C8193	F1G1A105A047	C 1UF, 10V		
		C8196	F1H1C105A167	C 1UF, 16V		
		C8197	F1G1C104A146	C 0.1UF, 16V		
		C8198	F1G1C103A173	C 0.01UF, 16V		
		C8199	F1G1H102A948	C 1000PF, 50V		
		C8200	F1G1C104A146	C 0.1UF, 16V		
		C8201	F1G1C103A173	C 0.01UF, 16V		
		C8202	F1G1H102A948	C 1000PF, 50V		
		C8203	F1G1C104A146	C 0.1UF, 16V		
		C8204	F1G1C103A173	C 0.01UF, 16V		
		C8205	F1G1H102A948	C 1000PF, 50V		
		C8206	F1G1C104A146	C 0.1UF, 16V		
		C8207	F1G1C103A173	C 0.01UF, 16V		
		C8208	F1G1H102A948	C 1000PF, 50V		
		C8850	F1H0J4750004	C 4.7UF, 6.3V		
		C8900	F1G1C104A146	C 0.1UF, 16V		
		C8901	F1G1C104A146	C 0.1UF, 16V		
		CF7101	D4CAY4R7A096	THERMISTORS RESISTOR		For TH-40D400K Only
		CF7103	D4CAY2R20002	THERMISTOR		For TH-40D400S and TH-40D400T Only
		CN0100	K1KA14A00248	CONNECTOR		
		D1001	DZ2J140M0L	DIODE		
		D1002	DZ2J140M0L	DIODE		
		D1003	DZ2J140M0L	DIODE		
		D1004	DZ2J140M0L	DIODE		
		D1005	DZ2J140M0L	DIODE		
		D1007	DZ2J140M0L	DIODE		
		D2006	D4ED11200003	DIODE		
		D2008	D4ED11200003	DIODE		
		D2800	DZ2J056M0L	DIODE		
		D2802	B3AGB0000083	LED		
		D2851A	DZ2J068M0L	DIODE		
		D2852A	DZ2J068M0L	DIODE		
		D3101	K7AAAY000016	DIODE		
		D3103	D4EDY5R5A038	DIODE		
		D3104	D4EDY5R5A038	DIODE		
		D5007	DA2J10100L	DIODE		
		D5009	DZ2J068M0L	DIODE		
		D5013	B0JCED000012	DIODE		
		D5170	DZ2J200M0L	DIODE		
		D5171	DA2J10100L	DIODE		
		D5172	DZ2J068M0L	DIODE		
		D5173	B0ADCK000001	DIODE		
		D5174	DZ2J068M0L	DIODE		
		D5175	B0ADCK000001	DIODE		
		D6750	J0ZZB0000175	DIODE		
		D6752	B0ZBZ0000226	DIODE		
		D7101	D4EAY621A168	DIODE		
		D7106	B0FBAR000047	DIODE		
		D7108	B0HAGQ000001	DIODE		
		D7304	B0EAKT000031	DIODE		
		D7305	B0EAKT000031	DIODE		
		D7307	DZ2J068M0L	DIODE		
		D7313	B0ACCD000008	DIODE		
		D7314	B0BC018A0495	ZENER DIODE		For TH-40D400K Only
		D7316	B0ACCD000008	DIODE		
		D7317	DA2JF2300L	DIODE		
		D7320	B0JAME000126	DIODE		
		D7323	B0ACCD000008	DIODE		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		D7411	DA2J10100L	DIODE		
		D7503	B0JBMS000009	DIODE		
		D7505	B0FBCN000017	DIODE		
		D7800	B0JDSL000013	DIODE		
		D7801	DZ2J360M0L	DIODE		
		D7803	DB2J41100L	DIODE		
		D7804	DA2J10100L	DIODE		
		D7806	DZ2J360M0L	DIODE		
		D7807	DZ2J360M0L	DIODE		
		D7808	DB2J41100L	DIODE		
		D8001	B0JCED000012	DIODE		
		D8002	B0JCED000012	DIODE		
	⚠	F7101	K5E502YYA213	FUSE		
		GK4	K1KY03BA0402	CONNECTOR		
		IC4300	C0DBAYY02430	IC		
		IC4900	C1AB00003984	IC		
		IC5602	C0DBZYY00723	IC		
		IC5701	C0DBEYY00226	IC		
		IC5704	C0DBEYY00102	IC		
		IC6750	C1AB00004172	IC		
		IC6800	C1AB00004028	IC		
		IC7301	C0DBBY000065	IC		
		IC7501	C0DBZYY00545	IC		
		IC7502	C0DBGYY03054	IC		
		IC7800	C1ZBZ0004569	IC		
		IC8001	C1AB00004200	IC		
		IC8002	C0DBAYY02437	IC		
		IC8003	C0DBAYY02430	IC		
		IC8004	C0DBAYY02430	IC		
		IC8005	C0DBAYY02430	IC		
		IC8008	C0DBGYY00887	IC		
		IC8900A	TVR4G334-AE	ROM VERSION ASSEMBLY		
		IC8902	C3EBJY000066	IC		
		JA1	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA1	D0GFR00J0005	M 0 OHM, J, 1/3W		
		JA4	D0GFR00J0005	M 0 OHM, J, 1/3W		
		JA5	D0GFR00J0005	M 0 OHM, J, 1/3W		
		JK3101	K1U511D00002	AV TERMINAL		
		JK4700	K1FY119D0029	TERMINAL		
		JK4701	K1FY119D0029	TERMINAL		
		JK6752	K1ZZ00001557	TUNER SHIELD		
	⚠	JK7101	K2AAYA000004	AC INLET		
		JK8450	K1FY104B0092	TERMINAL		
		JS0037	D0GAR00JA039	M 0 OHM, 1/16W		
		JS0057	D0GAR00JA039	M 0 OHM, 1/16W		For TH-40D400S Only
		JS0062	D0GAR00JA039	M 0 OHM, 1/16W		For TH-40D400K and TH-40D400T Only
		K10	K1KY07AA1311	CONNECTOR		
		L2000	J0JYC0000328	INDUCTOR		
		L4300	G1C220MA0445	INDUCTOR		
		L4901	G1C220MA0533	INDUCTOR		
		L4902	G1C220MA0533	INDUCTOR		
		L4903	G1C220MA0533	INDUCTOR		
		L4904	G1C220MA0533	INDUCTOR		
		L5601	J0JYC0000464	BEAD CORE		
		L6704	J0JYC0000464	BEAD CORE		
		L6706	J0JYC0000464	BEAD CORE		
		L6761	J0JYC0000464	BEAD CORE		
		L6762	J0JYC0000464	BEAD CORE		
		L6763	G1CR27JA0097	COIL		
		L6765	G1C82NJ00010	COIL		
		L6772	G1CR27JA0097	COIL		
		L6773	G1CR27JA0097	COIL		
		L6774	G1CR27JA0097	COIL		
		L6775	G1CR22JA0097	COIL		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		L6776	G1CR27JA0097	COIL		
		L6777	G1CR22JA0097	COIL		
		L6778	G1CR22JA0097	COIL		
		L6779	G1CR22JA0097	COIL		
		L6800	J0JYC0000464	BEAD CORE		
		L6801	J0JYC0000464	BEAD CORE		
		L6802	J0JYC0000464	BEAD CORE		
		L7103	J0JYA0000035	BEAD CORE		
		L7208	J0JYA0000039	BEAD CORE		
		L7301	J0JYA0000035	BEAD CORE		
		L7313	J0JYA0000035	BEAD CORE		
		L7317	J0JYA0000035	BEAD CORE		
		L7800	G0C480Z00002	COIL		
		L7801	J0JYC0000344	COIL		
		L7802	J0JYA0000035	BEAD CORE		
		L7804	J0JYA0000035	BEAD CORE		
		L8008	J0JYC0000464	BEAD CORE		
		L8048	G1C4R7ZA0311	INDUCTOR		
		L8049	G1C3R3MA0464	INDUCTOR		
		L8050	G1C150MA0533	INDUCTOR		
		L8051	G1C100MA0533	COIL		
	⚠	LF7103	G0B183GA0082	LINE FILTER		
	⚠	LF7104	G0B183GA0082	LINE FILTER		
	⚠	LF7105	G0B350GA0083	LINE FILTER		
		P2	K1KY16BA0491	CONNECTOR		
		P3	K1KY12BA0400	CONNECTOR		
		P5	K1KY03BA0402	CONNECTOR		
	⚠	PC7300	B3PAA0000674	PHOTO COUPLER		
	⚠	PC7301	B3PAA0000674	PHOTO COUPLER		
		Q2004	B1ABCF000231	TRANSISTOR		
		Q2005	B1ABCF000231	TRANSISTOR		
		Q2007	B1ABCF000231	TRANSISTOR		
		Q4500	B1ABCF000231	TRANSISTOR		
		Q4501	B1ABCF000231	TRANSISTOR		
		Q4504	B1ABCF000231	TRANSISTOR		
		Q4505	B1ABCF000231	TRANSISTOR		
		Q5005	B1ADCE000022	TRANSISTOR		
		Q5006	B1ABCF000231	TRANSISTOR		
		Q5007	B1ABCF000231	TRANSISTOR		
		Q5009	B1ADCE000022	TRANSISTOR		
		Q5010	B1ADCE000022	TRANSISTOR		
		Q5011	B1ABCF000231	TRANSISTOR		
		Q5170	B1ABCF000231	TRANSISTOR		
		Q5171	B1ABCF000231	TRANSISTOR		
		Q5172	B1ABCF000231	TRANSISTOR		
		Q7301	B1CERR000067	TRANSISTOR		
		Q7302	B1ABCF000231	TRANSISTOR		
		Q7401	B1ABCF000231	TRANSISTOR		
		Q7502	B1CHRE000035	TRANSISTOR		
		Q7800	B1CFRL000042	TRANSISTOR		
		Q7802	B1CFRL000011	TRANSISTOR		
		Q7805	B1CFRL000011	TRANSISTOR		
		Q7806	B1CFRL000011	TRANSISTOR		
		Q7807	B1CFRL000042	TRANSISTOR		
		Q8002	B1CHPD000013	TRANSISTOR		
		Q8003	B1ABCF000231	TRANSISTOR		
		R0902	D0GA272JA039	M 2.7K OHM, J, 1/16W		
		R0903	D0GA272JA039	M 2.7K OHM, J, 1/16W		
		R0910	D0GAR00JA039	M 0 OHM, 1/16W		
		R0911	D0GAR00JA039	M 0 OHM, 1/16W		
		R0912	D0GAR00JA039	M 0 OHM, 1/16W		
		R0913	D0GAR00JA039	M 0 OHM, 1/16W		
		R0916	D0GAR00JA039	M 0 OHM, 1/16W		
		R0917	D0GAR00JA039	M 0 OHM, 1/16W		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R0924	D0GA272JA039	M 2.7K OHM, J, 1/16W		
		R0925	D0GA272JA039	M 2.7K OHM, J, 1/16W		
		R0926	D0GA473JA039	M 47K OHM, J, 1/16W		
		R0927	D0GA680JA039	M 68 OHM, J, 1/16W		
		R0928	D0GA680JA039	M 68 OHM, J, 1/16W		
		R0929	D0GA102JA039	M 1K OHM, J, 1/16W		
		R0930	D0GA102JA039	M 1K OHM, J, 1/16W		
		R0933	D1H82724A042	M 2.7KOHM, J,1/16W		
		R0938	D0GA680JA039	M 68 OHM, J, 1/16W		
		R0939	D0GA680JA039	M 68 OHM, J, 1/16W		
		R0944	D1H86804A042	M 68 OHM, J, 1/16W		
		R0945	D1H86804A042	M 68 OHM, J, 1/16W		
		R1000	D0GA101JA039	M 100 OHM, J, 1/16W		
		R2011	D0GA102JA039	M 1K OHM, J, 1/16W		
		R2012	D0GA473JA039	M 47K OHM, J, 1/16W		
		R2018	D0GA680JA039	M 68 OHM, J, 1/16W		
		R2027	D0GA103JA039	M 10K OHM, J, 1/16W		
		R2028	D0GA102JA039	M 1K OHM, J, 1/16W		
		R2029	D0GAR00JA039	M 0 OHM, 1/16W		
		R2030	D0GA222JA039	M 2.2K OHM, J, 1/16W		
		R2031	D0GA473JA039	M 47K OHM, J, 1/16W		
		R2032	D0GA473JA039	M 47K OHM, J, 1/16W		
		R2033	D1BA1002A023	M 10K OHM, F, 1/16W		
		R2034	D0GA102JA039	M 1K OHM, J, 1/16W		
		R2035	D1BA4702A023	M 47K OHM, F, 1/16W		
		R2045	D0GA183JA039	M 18K OHM, J, 1/16W		
		R2046	D0GB101JA065	M 100 OHM, J, 1/10W		
		R2047	D0GB153JA065	M 15K OHM, J, 1/10W		
		R2049	D0GA103JA039	M 10K OHM, J, 1/16W		
		R2050	D0GA473JA039	M 47K OHM, J, 1/16W		
		R2052	D0GA223JA039	M 22K OHM, J, 1/16W		
		R2053	D0GA473JA039	M 47K OHM, J, 1/16W		
		R2806	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R2808	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R2820	D0GB470JA065	M 47 OHM, J, 1/10W		
		R2821	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R2822	D0GD822JA052	M 8.2K OHM, J, 1/8W		
		R2823	D1BB4301A073	M 4.3K OHM, J, 1/10W		
		R2824	D1BB1001A073	M 1K OHM, J, 1/10W		
		R2852A	D1BD1911A066	M 1.91K OHM, F, 1/8W		
		R2853A	D1BD3091A066	M 3.09K OHM, F, 1/8W		
		R2854A	D1BD6041A066	M 6.04K OHM, F, 1/8W		
		R2855A	D1BD1692A066	M 16.9K OHM, F, 1/8W		
		R3099	D0GA223JA039	M 22K OHM, J, 1/16W		
		R3119	D0GA272JA039	M 2.7K OHM, J, 1/16W		
		R3122	D1BD75R0A066	M 75 OHM, F, 1/8W		
		R3124	D1BD75R0A066	M 75 OHM, F, 1/8W		
		R3192	D0GA101JA039	M 100 OHM, J, 1/16W		
		R3193	D0GA101JA039	M 100 OHM, J, 1/16W		
		R3194	D1BD75R0A066	M 75 OHM, F, 1/8W		
		R3196	D0GA101JA039	M 100 OHM, J, 1/16W		
		R3201	D0GA473JA039	M 47K OHM, J, 1/16W		
		R3202	D0GA473JA039	M 47K OHM, J, 1/16W		
		R3205	D0GA101JA039	M 100 OHM, J, 1/16W		
		R3243	D0GA220JA039	M 22 OHM, J, 1/16W		
		R4050	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R4051	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R4052	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R4053	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R4054	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R4057	D0GA101JA039	M 100 OHM, J, 1/16W		
		R4060	D0GAR00JA039	M 0 OHM, 1/16W		
		R4150	D0GAR00JA039	M 0 OHM, 1/16W		
		R4300	D1BA4702A023	M 47K OHM, F, 1/16W		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R4301	D1BA3601A023	M 3.6K OHM, F, 1/16W		
		R4302	D1BA5102A023	M 51K OHM, F, 1/16W		
		R4303	D0GA102JA039	M 1K OHM, J, 1/16W		
		R4500	D0GA750JA039	M 75 OHM, J, 1/16W		
		R4501	D0GA750JA039	M 75 OHM, J, 1/16W		
		R4503	D1H84734A042	M 47K OHM, J, 1/16W		
		R4504	D1H86804A042	M 68 OHM, J, 1/16W		
		R4513	D0GA820JA039	M 82 OHM, J, 1/16W		
		R4514	D0GA220JA039	M 22 OHM, J, 1/16W		
		R4515	D0GA473JA039	M 47K OHM, J, 1/16W		
		R4516	D0GA473JA039	M 47K OHM, J, 1/16W		
		R4517	D0GA473JA039	M 47K OHM, J, 1/16W		
		R4518	D0GA104JA039	M 100K OHM, J, 1/16W		
		R4519	D0GA104JA039	M 100K OHM, J, 1/16W		
		R4520	D0GA473JA039	M 47K OHM, J, 1/16W		
		R4521	D0GA911JA039	M 910 OHM, J, 1/16W		
		R4522	D0GA911JA039	M 910 OHM, J, 1/16W		
		R4523	D0GA104JA039	M 100K OHM, J, 1/16W		
		R4524	D0GA181JA039	M 180 OHM, J, 1/16W		
		R4900	D0GFR00J0005	M 0 OHM, J, 1/3W		
		R4901	D1H86804A042	M 68 OHM, J, 1/16W		
		R4903	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R4905	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R4906	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R4907	D0GA102JA039	M 1K OHM, J, 1/16W		
		R4908	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R4909	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R4915	D0GA563JA039	M 56K OHM, J, 1/16W		
		R4917	D0GAR00JA039	M 0 OHM, 1/16W		
		R4918	D0GAR00JA039	M 0 OHM, 1/16W		
		R4919	D0GA153JA039	M 15K OHM, J, 1/16W		
		R4956	D0GA102JA039	M 1K OHM, J, 1/16W		
		R4963	D0GA473JA039	M 47K OHM, J, 1/16W		
		R4964	D0GA303JA039	M 30K OHM, J, 1/16W		
		R4983	D0GA103JA039	M 10K OHM, J, 1/16W		
		R5050	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5051	D0GAR00JA039	M 0 OHM, 1/16W		
		R5078	D1BA2202A023	M 22K OHM, F, 1/16W		
		R5079	D1BA3742A023	M 37.4K OHM, F, 1/16W		
		R5080	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5081	D0GA103JA039	M 10K OHM, J, 1/16W		
		R5082	D0GA104JA039	M 100K OHM, J, 1/16W		
		R5084	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5085	D0GA103JA039	M 10K OHM, J, 1/16W		
		R5086	D0GAR00JA039	M 0 OHM, 1/16W		
		R5087	D1BA2202A023	M 22K OHM, F, 1/16W		
		R5088	D1BA1602A023	M 16.2K OHM, F, 1/16W		
		R5090	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5091	D0GA102JA039	M 1K OHM, J, 1/16W		
		R5092	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R5093	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R5095	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5096	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5097	D0GA103JA039	M 10K OHM, J, 1/16W		
		R5098	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5099	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R5170	D0GA103JA039	M 10K OHM, J, 1/16W		
		R5171	D0GA332JA039	M 3.3K OHM, J, 1/16W		
		R5173	D0GA104JA039	M 100K OHM, J, 1/16W		
		R5175	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5176	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5177	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5178	D0GA473JA039	M 47K OHM, J, 1/16W		
		R5606	D0GA103JA039	M 10K OHM, J, 1/16W		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R5607	D0GA103JA039	M 10K OHM, J, 1/16W		
		R5609	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R5610	D1BA1652A023	M 16.5K OHM, F, 1/16W		
		R5709	D1BA1201A023	M 1.2K OHM, F, 1/16W		
		R5710	D1BA3001A023	M 3K OHM, F, 1/16W		
		R5731	D1BA1200A023	M 120 OHM, F, 1/16W		
		R5732	D1BA56R0A023	M 56 OHM, F, 1/16W		
		R5736	D0GA103JA039	M 10K OHM, J, 1/16W		
		R5740	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R5742	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R5744	D0GAR00JA039	M 0 OHM, 1/16W		
		R6725	D0GAR00JA039	M 0 OHM, 1/16W		
		R6726	D0GAR00JA039	M 0 OHM, 1/16W		
		R6727	D0GAR00JA039	M 0 OHM, 1/16W		
		R6730	D0GA103JA039	M 10K OHM, J, 1/16W		
		R6743	D0GA102JA039	M 1K OHM, J, 1/16W		
		R6744	D0GA102JA039	M 1K OHM, J, 1/16W		
		R6750	D0GA101JA039	M 100 OHM, J, 1/16W		
		R6753	D0GA101JA039	M 100 OHM, J, 1/16W		
		R6754	D0GA102JA039	M 1K OHM, J, 1/16W		
		R6755	D0GA101JA039	M 100 OHM, J, 1/16W		
		R6756	D0GA101JA039	M 100 OHM, J, 1/16W		
		R6757	D0GA101JA039	M 100 OHM, J, 1/16W		
		R6758	D0GA101JA039	M 100 OHM, J, 1/16W		
		R6759	D0GA102JA039	M 1K OHM, J, 1/16W		
		R6760	D0GA332JA039	M 3.3K OHM, J, 1/16W		
		R6761	D0GA332JA039	M 3.3K OHM, J, 1/16W		
		R6768	D0GA681JA039	M 680 OHM, J, 1/16W		
		R6770	D0GA103JA039	M 10K OHM, J, 1/16W		
		R6804	D0GAR00JA039	M 0 OHM, 1/16W		
		R6805	D0GAR00JA039	M 0 OHM, 1/16W		
		R6810	D0GA332JA039	M 3.3K OHM, J, 1/16W		
		R6812	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6813	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6818	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6819	D0GAR00JA039	M 0 OHM, 1/16W		
		R6820	D0GAR00JA039	M 0 OHM, 1/16W		
		R6821	D0GAR00JA039	M 0 OHM, 1/16W		
		R6840	D0GA471JA039	M 470 OHM, J, 1/16W		
		R6846	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6847	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6848	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6849	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6850	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6861	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6862	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6863	D0GA680JA039	M 68 OHM, J, 1/16W		
		R6871	D0GA332JA039	M 3.3K OHM, J, 1/16W		
		R6872	D0GA332JA039	M 3.3K OHM, J, 1/16W		
		R6880	D0GAR00JA039	M 0 OHM, 1/16W		
		R6881	D0GAR00JA039	M 0 OHM, 1/16W		
		R6882	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R6884	D0GA103JA039	M 10K OHM, J, 1/16W		
		R6885	D0GAR00JA039	M 0 OHM, 1/16W		
		R6886	D0GAR00JA039	M 0 OHM, 1/16W		
		R7101	D0GF105JA048	M 1M OHM, J, 1/4W		
		R7102	D0GF105JA048	M 1M OHM, J, 1/4W		
		R7103	D0GF105JA048	M 1M OHM, J, 1/4W		
		R7104	D0GF105JA048	M 1M OHM, J, 1/4W		
		R7303	D0GD752JA052	M 7.5K OHM, J, 1/8W		
		R7304	D0GD183JA052	M 18K OHM, J, 1/8W		For TH-40D400S & TH-40D400T Only
		R7304	D0GD822JA052	M 8.2K OHM, J, 1/8W		For TH-40D400K Only
		R7313	D0GD100JA059	M 10 OHM, J, 1/4W		
		R7314	D0GD681JA052	M 680 OHM, J, 1/3W		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7317	D0GD680JA059	M 68 OHM, J, 1/4W		
		R7318	D0GD471JA052	M 470 OHM, J, 1/8W		
		R7319	D0GD393JA052	M 39K OHM, J, 1/8W		
		R7320	D0GD102JA052	M 1K OHM, J, 1/8W		
		R7325	D0GD4R7JA059	M 4.7 OHM, J, 1/4W		
		R7329	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7335	D0XB106JA018	M 10M OHM, J, 1/16W		
		R7342	D0GD182JA052	M 1.8K OHM, J, 1/3W		
		R7343	D0GD182JA052	M 1.8K OHM, J, 1/3W		
		R7344	D0GD182JA052	M 1.8K OHM, J, 1/3W		
		R7345	D0GD221JA059	M 200 OHM, J, 1/8W		For TH-40D400K Only
		R7346	D0GF224JA047	M 220K OHM, J, 1/4W		
		R7347	D0GF224JA047	M 220K OHM, J, 1/4W		
		R7351	ERX1SJR27V	M 0.27 OHM, J, 1W		
		R7354	D0C2220JA140	M 22 OHM, J, 2W		
		R7355	D0C2220JA140	M 22 OHM, J, 2W		
		R7406	D0GB222JA065	M 2.2K OHM, J, 1/10W		
		R7407	D0GB104JA065	M 100K OHM, J, 1/10W		
		R7500	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7503	D0GB153JA065	M 15K OHM, J, 1/10W		
		R7504	D0GD153JA052	M 15K OHM, J, 1/8W		
		R7507	D0GB124JA065	M 120K OHM, J, 1/10W		
		R7515	D0GB183JA065	M 18K OHM, J, 1/10W		
		R7516	D0GD472JA052	M 4.7K OHM, J, 1/8W		
		R7517	D0GD222JA052	M 2.2K OHM, J, 1/8W		
		R7519	D1BD1001A066	M 1K OHM, F, 1/8W		
		R7520	D1BD3301A066	M 3.3K OHM, F, 1/8W		
		R7521	D1BD1692A066	M 16.9K OHM, F, 1/8W		
		R7523	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7532	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7800	ERX1SJR22V	M 0.22 OHM, J, 1W		
		R7809	D0GD100JA059	M 10 OHM, J, 1/4W		
		R7811	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7812	D0GD102JA052	M 1K OHM, J, 1/8W		
		R7813	D0GD102JA052	M 1K OHM, J, 1/8W		
		R7814	D0GD334JA052	M 330K OHM, J, 1/8W		
		R7815	D0GD103JA052	M 10K OHM, J, 1/8W		
		R7816	D1BD1332A066	M 1.33K OHM, F, 1/8W		
		R7817	D1BD1003A066	M 100K OHM, F, 1/8W		
		R7818	D1BD1503A066	M 150K OHM, F, 1/8W		
		R7819	D0GD152JA052	M 1.5K OHM, J, 1/8W		
		R7820	D0GD1R0JA052	M 1.0 OHM, J, 1/8W		
		R7823	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7824	D0GD183JA052	M 18K OHM, J, 1/8W		
		R7825	D1BD1502A066	M 15K OHM, F, 1/8W		
		R7826	D1BD1R00A066	M 1.0 OHM, F, 1/8W		
		R7827	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7828	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7829	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7833	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7834	D0GD220JA052	M 22 OHM, J, 1/8W		
		R7835	D1BD1R00A066	M 1.0 OHM, F, 1/8W		
		R7836	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7837	D1BD1R00A066	M 1.0 OHM, F, 1/8W		
		R7838	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7839	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7840	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7841	D0GD103JA052	M 10K OHM, J, 1/8W		
		R7842	D0GD100JA059	M 10 OHM, J, 1/4W		
		R7843	D0GD473JA052	M 47K OHM, J, 1/8W		
		R8099	D1BA2002A023	M 20K OHM, F, 1/16W		
		R8100	D1BA5601A023	M 5.6K OHM, F, 1/16W		
		R8101	D0GA510JA039	M 51 OHM, J, 1/16W		
		R8102	D0GA510JA039	M 51 OHM, J, 1/16W		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R8103	D1BA3002A023	M 30K OHM, F, 1/16W		
		R8104	D1BA2400A023	M 240 OHM, F, 1/16W		
		R8105	D1BA1302A023	M 13K OHM, F, 1/16W		
		R8106	D1BA1502A023	M 15K OHM, F, 1/16 W		
		R8107	D1BA4702A023	M 47K OHM, F, 1/16W		
		R8113	D1BA4701A023	M 4.7K OHM, F, 1/16W		
		R8114	D1BA2002A023	M 20K OHM, F, 1/16W		
		R8115	D1BA1802A023	M 18K OHM, F, 1/16W		
		R8116	D1BA3001A023	M 3K OHM, F, 1/16W		
		R8118	D0GA101JA039	M 100 OHM, J, 1/16W		
		R8120	D0GAR00JA039	M 0 OHM, 1/16W		
		R8123	D1BA2202A023	M 22K OHM, F, 1/16W		
		R8124	D1BA1202A023	M 12K OHM, F, 1/16W		
		R8126	D0GA473JA039	M 47K OHM, J, 1/16W		
		R8128	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R8130	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R8137	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R8138	D0GA473JA039	M 47K OHM, J, 1/16W		
		R8141	D0GA473JA039	M 47K OHM, J, 1/16W		
		R8145	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R8146	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R8147	D0GA750JA039	M 75 OHM, J, 1/16W		
		R8148	D0GA103JA039	M 10K OHM, J, 1/16W		
		R8149	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8150	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8151	D0GA103JA039	M 10K OHM, J, 1/16W		
		R8900	D0GA101JA039	M 100 OHM, J, 1/16W		
		R8901	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R8902	D0GA103JA039	M 10K OHM, J, 1/16W		
		R8903	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R8904	D0GA680JA039	M 68 OHM, J, 1/16W		
		R8905	D0GA680JA039	M 68 OHM, J, 1/16W		
		R8906	D0GA680JA039	M 68 OHM, J, 1/16W		
		R8907	D0GA680JA039	M 68 OHM, J, 1/16W		
		R8908	D0GA103JA039	M 10K OHM, J, 1/16W		
		R8909	D0GA472JA039	M 4.7K OHM, J, 1/16W		
		R8910	D0GA102JA039	M 1K OHM, J, 1/16W		
		RM2800	B3RBB0000018	PHOTO DETECTOR		
		SN2800	B3JB00000223	PHOTO DETECTOR		
		SW2851A	EVQ11G05R	SWITCH		
		SW2852A	EVQ11G05R	SWITCH		
		SW2853A	EVQ11G05R	SWITCH		
		SW2854A	EVQ11G05R	SWITCH		
		SW2855A	EVQ11G05R	SWITCH		
		SW2857A	EVQ11G05R	SWITCH		
	⚠	T7301	G4DYA0000460	TRANSFORMER		
		X6750	H0J240500067	CRYSTAL OSCILLATOR		
		X6800	H0J410500003	CRYSTAL RESONATORS		
		X8301	H0J240500095	CRYSTAL OSCILLATOR		
		ZA7101	K4AD01A00004	RUG TERMINAL		
		ZA7102	K4AD01A00004	RUG TERMINAL		
		ZA7103	K4AD01A00004	RUG TERMINAL		
		ZA7104	K4AD01A00004	RUG TERMINAL		
		ZA7105	K4AD01A00004	RUG TERMINAL		

Model No. : TH-40D400K / TH-40D400S / TH-40D400T Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		1	K2CP2YY00074	AC_CORD		For TH-40D400T Only
		1	K2CQ2YY00138	AC CORD		For TH-40D400K & TH-40D400S Only
		2	L0EYAA000068	SPEAKER L/R		
		3	L5EDDYY00843	LCD_PANEL		
		4	N2QAYB000976	REMOTE_TRANSMITTER		
		5	TBL5ZX10741	STAND MOULD KIT ASSY		Kit Includes All and Screws
		6	TBM4GD7634	MODEL_NAME_PLATE		For TH-40D400K Only
		6	TBM4GD7635	MODEL_NAME_PLATE		For TH-40D400S Only
		6	TBM4GD7636	MODEL_NAME_PLATE		For TH-40D400T Only
		7	TBX5ZA04001	KEY_BUTTON_BRACKET		
			THE5ZL002N	SCREW (B) M4x12mm (Round Screw)		Pedestal Assembly to TV Screw (Note : Screws Supplied with Stand Metal Kit Assy)
		8	TKP5ZA64301	SIDE_AV_BRACKET		
		9	TPD4GA07091	CUSHION_ACCESSORY_L		
		10	TPD4GA07101	CUSHION_BT_M_TOP_CENTER		
		11	TPD4GA07691	CUSHION_TOP_CORNER		
		12	TPE4GH115	SET_BAG		
		13	TQZ4GC109	FAN_BAG_ASSEMBLY		For TH-40D400S Only
		13	TQZ4GC110	FAN_BAG_ASSEMBLY		For TH-40D400K Only
		13	TQZ4GC111	FAN_BAG_ASSEMBLY		For TH-40D400T Only
			TSCKF0170202	LVDS_CABLE		
		14	TXFPC01WZUK	CARTON_ASSEMBLY		For TH-40D400K Only
		14	TXFPC01UYUS	CARTON_ASSEMBLY		For TH-40D400S Only
		14	TXFPC01VPUT	CARTON_ASSEMBLY		For TH-40D400T Only
		15	TXN/K1XYUH	K PRINT ASSEMBLY		
		16	TZBL4ZX00031	PEDESTAL_ASSY-L		
		17	TZBL4ZX00041	PEDESTAL_ASSY-R		
		18	TZRN11VPUT	P PRINT ASSEMBLY		For TH-40D400S & TH-40D400T Only
		18	TZRN11XVUZ	P PRINT ASSEMBLY		For TH-40D400K Only
		19	TZRN12CUWE	GK PCB ASSEMBLY		
		20	TZT/A1UYUS	A PRINT ASSEMBLY		For TH-40D400S Only
		20	TZT/A1VPUT	A PRINT ASSEMBLY		For TH-40D400T Only
		20	TZT/A1WZUK	A PRINT ASSEMBLY		For TH-40D400K Only
		21	TZTU4GA1652	BACK_COVER_COMPLETE		For TH-40D400K Only
		21	TZTU4GA1653	BACK_COVER_COMPLETE		For TH-40D400T Only
		21	TZTU4GA1654	BACK_COVER_COMPLETE		For TH-40D400S Only
			XSS5+15FNK	SCREW (A) M5x15mm (Flat Screw)		Bracket to Pedestal Base Screw (Note : Screws Supplied with Stand Metal Kit Assy)