


Service Manual

LCD TV

Model No. **TH-L37X20R**

Chassis: **KM06**

Destination: **IRAN**

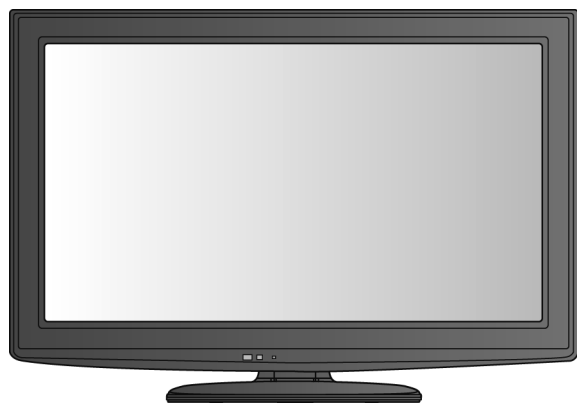

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions -----	3	5.2.2. Display of SOS History -----	11
1.1. General Guidelines-----	3	5.2.3. POWER ON TIME/COUNT-----	11
1.1.1. Leakage Current Cold Check-----	3	5.2.4. Exit-----	11
1.1.2. Leakage Current Hot Check (See Figure 1.)-----	3	5.3. Service Mode Adjustment -----	12
2 Warning -----	4	5.3.1. Self Check Mode -----	12
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices-----	4	5.3.2. Hotel Mode Adjustment-----	12
2.2. About lead free solder (PbF)-----	5	5.3.3. Hotel Mode-----	12
3 Service Navigation -----	6	6 Troubleshooting Guide -----	13
3.1. Service Hint-----	6	6.1. Check of the IIC bus lines-----	13
3.2. Applicable signals-----	7	6.1.1. How to access -----	13
4 Specifications -----	8	6.1.2. Exit-----	13
5 Service Mode -----	10	6.1.3. Screen display -----	13
5.1. How to enter into Service Mode -----	10	6.1.4. Check Point-----	13
5.1.1. Contents of adjustment mode -----	10	6.2. Power LED Blinking timing chart-----	14
5.1.2. How to exit-----	10	6.3. No Power-----	14
5.2. SRV-TOOL -----	11	7 Disassembly and Assembly Instructions -----	15
5.2.1. How to access-----	11	7.1. AC Cord Dressing-----	15
		7.2. AC Cord Installation-----	16
		7.3. Metal Support Installation-----	17

7.4. VESA Metal Assembly	18	11.2.34. A Board - Sheet : 016 (3 / 4)	72
7.5. Control Panel Assembly	19	11.2.35. A Board - Sheet : 016 (4 / 4)	73
7.6. Side AV Assembly Installation	20	11.2.36. A Board - Sheet : 017 (1 / 4)	74
7.7. SP Installation	21	11.2.37. A Board - Sheet : 017 (2 / 4)	75
7.8. LCD Panel Fixing & Handling Method	22	11.2.38. A Board - Sheet : 017 (3 / 4)	76
7.9. LED Panel Installation & Fitting	23	11.2.39. A Board - Sheet : 017 (4 / 4)	77
7.10. LCD Mounting Installation 1	24	11.2.40. A Board - Sheet : 018 (1 / 1)	78
7.11. LCD Mounting Installation 2	25	11.3. K Board	79
7.12. LCD Mounting Installation 3	26	11.3.1. K Board (1 / 2)	79
7.13. EMI Spec (LVDS)	27	11.3.2. K Board (2 / 2)	80
7.14. PCB and Clamper Assembly	28	11.4. P Board	81
7.15. PB MTG Installation	29	11.4.1. P Board (1 / 5)	81
7.16. Pedestal Assembly 1	30	11.4.2. P Board (2 / 5)	82
7.17. Pedestal Assembly 2	32	11.4.3. P Board (3 / 5)	83
7.18. Rear cover	32	11.4.4. P Board (4 / 5)	84
7.19. Stand MTG Assembly	33	11.4.5. P Board (5 / 5)	85
8 Measurements and Adjustments	34	11.5. V Board	86
8.1. Voltage chart of A-board	34	11.5.1. V Board (1 / 3)	86
8.2. Voltage chart of P-board	34	11.5.2. V Board (2 / 3)	87
8.3. Picture level adjustment (RF)	34	11.5.3. V Board (3 / 3)	88
8.4. Picture level adjustment (VIDEO)	35	12 Printed Circuit Board	89
8.5. Picture level adjustment (YUV)	35	12.1. A-Board	89
9 Block Diagram	36	12.2. A-Board	90
9.1. Main Block Diagram	36	12.3. K-Board	91
10 Wiring Connection Diagram	37	12.4. K-Board	91
11 Schematic Diagram	38	12.5. V-Board	91
11.1. Schematic Diagram Notes	38	12.6. V-Board	91
11.2. A Board	39	12.7. P-Board	92
11.2.1. A Board - Sheet : 002 (1 / 4)	39	12.8. P-Board	94
11.2.2. A Board - Sheet : 002 (2 / 4)	40	13 Exploded View and Replacement Parts List	96
11.2.3. A Board - Sheet : 002 (3 / 4)	41	13.1. Exploded View and Mechanical Replacement	
11.2.4. A Board - Sheet : 002 (4 / 4)	42	Parts List	96
11.2.5. A Board - Sheet : 003 (1 / 3)	43	13.2. Electrical Replacement Parts List	96
11.2.6. A Board - Sheet : 003 (2 / 3)	44	13.2.1. Replacement Parts List Notes	96
11.2.7. A Board - Sheet : 003 (3 / 3)	45	13.2.2. Electrical Replacement Parts List	97
11.2.8. A Board - Sheet : 005 (1 / 3)	46		
11.2.9. A Board - Sheet : 005 (2 / 3)	47		
11.2.10. A Board - Sheet : 005 (3 / 3)	48		
11.2.11. A Board - Sheet : 007 (1 / 4)	49		
11.2.12. A Board - Sheet : 007 (2 / 4)	50		
11.2.13. A Board - Sheet : 007 (3 / 4)	51		
11.2.14. A Board - Sheet : 007 (4 / 4)	52		
11.2.15. A Board - Sheet : 009 (1 / 4)	53		
11.2.16. A Board - Sheet : 009 (2 / 4)	54		
11.2.17. A Board - Sheet : 009 (3 / 4)	55		
11.2.18. A Board - Sheet : 009 (4 / 4)	56		
11.2.19. A Board - Sheet : 010 (1 / 6)	57		
11.2.20. A Board - Sheet : 010 (2 / 6)	58		
11.2.21. A Board - Sheet : 010 (3 / 6)	59		
11.2.22. A Board - Sheet : 010 (4 / 6)	60		
11.2.23. A Board - Sheet : 010 (5 / 6)	61		
11.2.24. A Board - Sheet : 010 (6 / 6)	62		
11.2.25. A Board - Sheet : 012 (1 / 3)	63		
11.2.26. A Board - Sheet : 012 (2 / 3)	64		
11.2.27. A Board - Sheet : 012 (3 / 3)	65		
11.2.28. A Board - Sheet : 015 (1 / 4)	66		
11.2.29. A Board - Sheet : 015 (2 / 4)	67		
11.2.30. A Board - Sheet : 015 (3 / 4)	68		
11.2.31. A Board - Sheet : 015 (4 / 4)	69		
11.2.32. A Board - Sheet : 016 (1 / 4)	70		
11.2.33. A Board - Sheet : 016 (2 / 4)	71		

1 Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.
4. When conducting repairs and servicing, do not attempt to modify the equipment, its parts or its materials.
5. When wiring units (with cables, flexible cables or lead wires) are supplied as repair parts and only one wire or some of the wires have been broken or disconnected, do not attempt to repair or re-wire the units. Replace the entire wiring unit instead.
6. When conducting repairs and servicing, do not twist the Faston connectors but plug them straight in or unplug them straight out.

1.1.1. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be 100 Mohm and over. When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

1.1.2. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5kohm, 10 watts resistor, in parallel with a 0.15 μ F capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

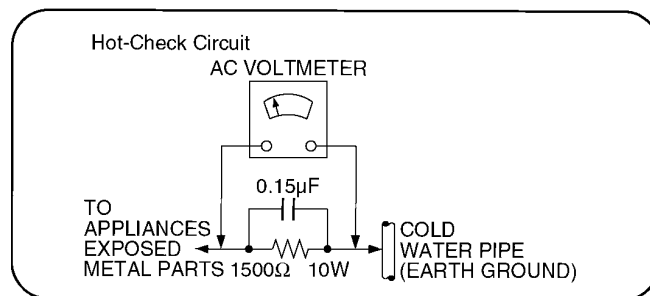


Figure 1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor [chip] components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as [anti-static (ESD protected)] can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise ham less motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol **PbF** stamped on the back of PCB.




Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

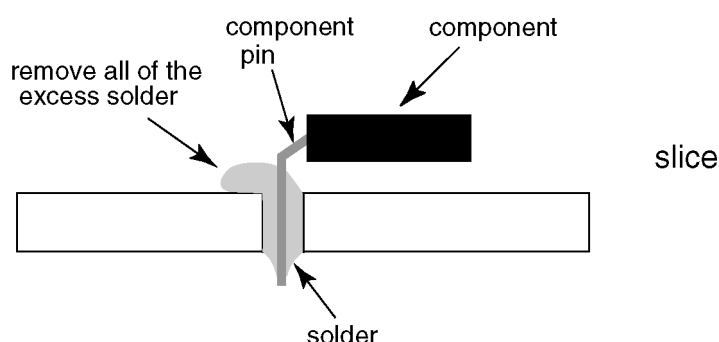


Suggested Pb free solder

There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also be used.

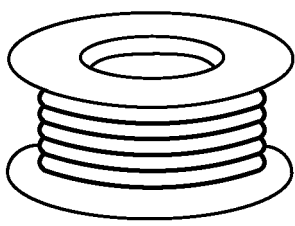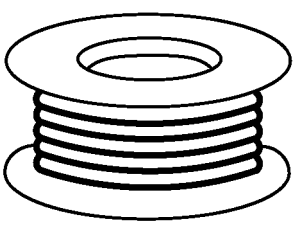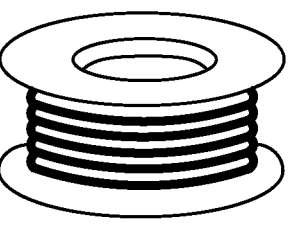0.3mm X 100g	0.6mm X 100g	1.0mm X 100g
		

3 Service Navigation

3.1. Service Hint

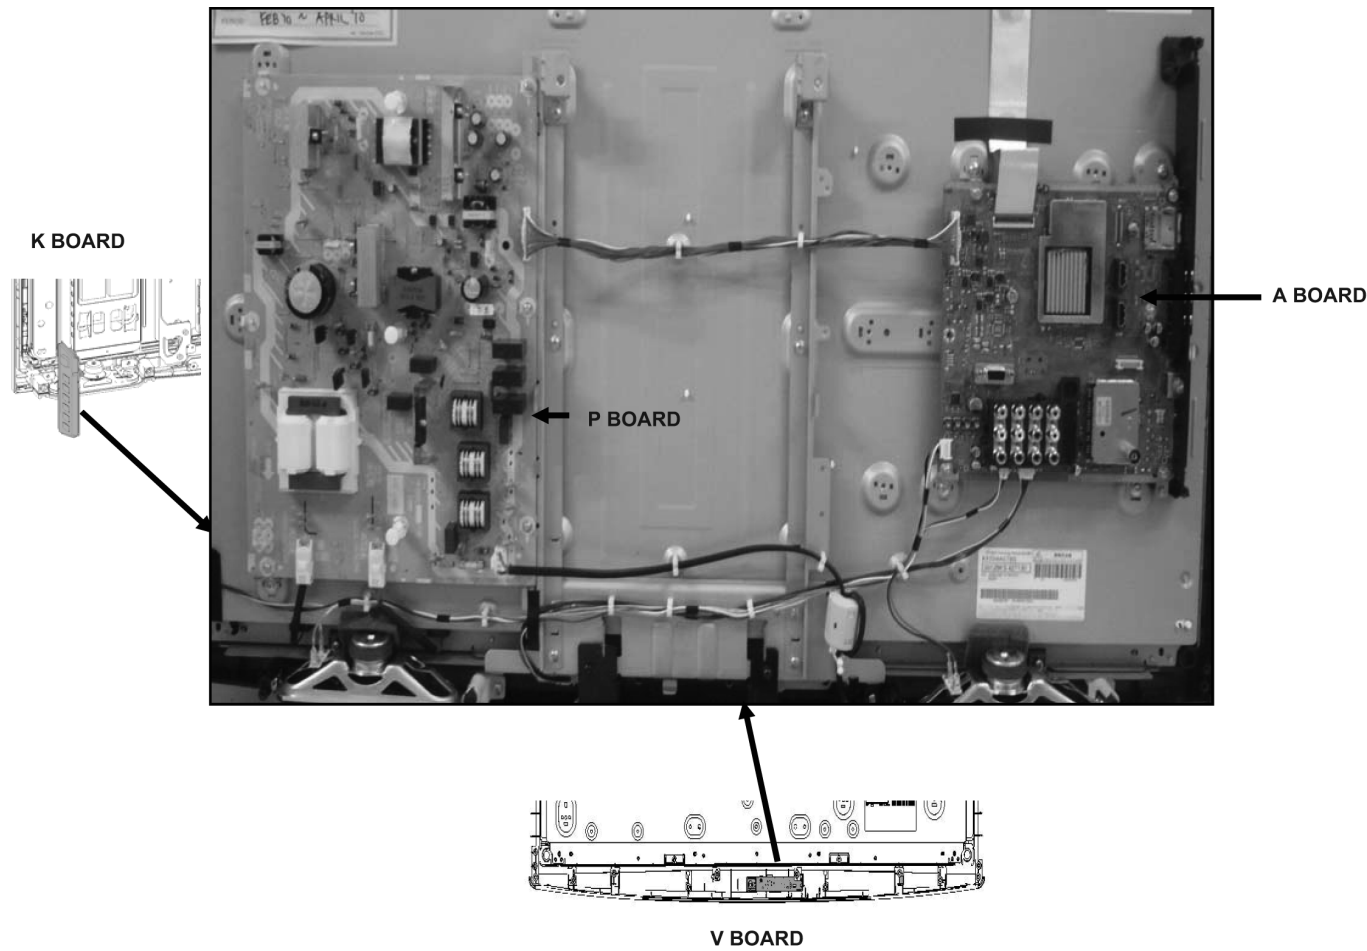

Board Name	Function
A BOARD	AVSW, TUN, GENX, PEAKS-AVCEEP, TEMP TUN
V BOARD	REMOTE, LED, LUMINUNCE SENSOR
K BOARD	CONTROL BUTTON, POWER BUTTON
P BOARD	POWER AC / DC

3.2. Applicable signals

Input signal that can be displayed

* Mark: Applicable input signal for Component (Y, P_B, P_R), HDMI and PC

	horizontal frequency (kHz)	vertical frequency (Hz)	COMPONENT	HDMI	PC
525 (480) / 60i	15.73	59.94	*	*	
525 (480) /60p	31.47	59.94	*	*	
750 (720) /60p	45.00	59.94	*	*	
1,125 (1,080) /60i	33.75	59.94	*	*	
640 × 400 @70	31.47	70.08			*
640 × 480 @60	31.47	59.94			*
Macintosh13 inch (640 × 480)	35.00	66.67			*
640 × 480 @75	37.50	75.00			*
852 × 480 @60	31.47	59.94			*
800 × 600 @60	37.88	60.32			*
800 × 600 @75	46.88	75.00			*
800 × 600 @85	53.67	85.08			*
Macintosh16 inch (832 × 624)	49.73	74.55			*
1,024 × 768 @60	48.36	60.00			*
1,024 × 768 @70	56.48	70.07			*
1,024 × 768 @75	60.02	75.03			*
1,024 × 768 @85	68.68	85.00			*
Macintosh 21 inch (1,152 × 870)	68.68	75.06			*
1,280 × 768 @60	47.70	60.00			*
1,280 × 1,024 @60	63.98	60.02			*
1,366 × 768 @60	48.36	60.00			*

Note:

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

4 Specifications

Power Source	AC Single 220 - 240 V, 50 / 60 Hz
Power Consumption	
Average use	134 W
Standby Condition	0.33 W
Display panel	
Aspect Ratio	16:9
Visible screen size	94 cm (diagonal) 819 mm (W) × 460 mm (H)
Number of pixels	1,049,088 (1,366 (W) × 768 (H))
Sound	
Speaker	160 mm × 40 mm × 2 pcs, 8 Ω
Audio Output	20 W (10 W + 10 W), 10% THD
Headphones	M3 (3.5 mm) stereo mini Jack × 1
PC signals	VGA, SVGA, WVGA, XGA SXGA, WXGA (compressed) Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz

Receiving Systems / Band name	17 SYSTEMS	FUNCTIONS
	1 PAL B, G, H 2 PAL I 3 PAL D, K 4 SECAM B, G 5 SECAM D, K 6 SECAM K1 7 NTSC M (NTSC 3.58 / 4.5MHZ)	Reception of broadcast transmission and playback from video cassette tape recorders.
	8 NTSC 4.43 / 5.5 MHz 9 NTSC 4.43 / 6.0 MHz 10 NTSC 4.43 / 6.5 MHz 11 NTSC 3.58 / 5.5 MHz 12 NTSC 3.58 / 6.0 MHz 13 NTSC 3.58 / 6.5 MHz 14 SECAM I	Playback from special VCR's or DVD.
	15 PAL 60 Hz / 5.5 MHz 16 PAL 60 Hz / 6.0 MHz 17 PAL 60 Hz / 6.5 MHz	Playback from Special Disc Players and Special VCR's or DVD.

Receiving Channels (Regular TV)	
PAL B/G	2 - 12 (PAL / SECAM B, K1) 0 - 12 (PAL B AUST.) 1 - 9 (PAL B N.Z.) 1 - 12 (PAL / SECAM D) 1 - 12 (NTSC M JAPAN) 2 - 13 (NTSC M USA)
UHF BAND	21 - 69 (PAL G, H, I / SECAM G, K, K1) 28 - 69 (PAL B AUST.) 13 - 57 (PAL D, K) 13 - 62 (NTSC M JAPAN) 14 - 69 (NTSC M USA)
CATV	S1 - S20 (OSCAR) 1 - 125 (USA CATV) C13 - C49 (JAPAN) S21 - S41 (HYPER) Z1 - Z37 (CHINA) 5A, 9A (AUST.)

Aerial - Rear	VHF / UHF
Operating Conditions	Temperature : 0°C - 40°C Humidity : 20 % - 80 % RH (non-condensing)

Connection Terminals		
AV1 Input	AUDIO L-R	RCA PIN Type × 2 0.5 V [rms]
	VIDEO	RCA PIN Type × 1 1.0 V [p-p] (75 Ω)
	COMPONENT	Y 1.0 V [p-p] (including synchronization)
		P _B /C _B , P _R /C _R ± 0.35 V [p-p]
AV2 Input	AUDIO L-R	RCA PIN Type × 2 0.5 V [rms]
	VIDEO	RCA PIN Type × 1 1.0 V [p-p] (75 Ω)
AV3 Input	AUDIO L-R	RCA PIN Type × 2 0.5 V [rms]
	VIDEO	RCA PIN Type × 1 1.0 V [p-p] (75 Ω)

Monitor Output	AUDIO L-R	RCA PIN Type × 2	0.5 V [rms] (high impedance)
	VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)
Others	HDMI 1 - 3 Input	TYPE A Connectors	• This TV supports "HDAVI Control 5" function.
	PC Input	HIGH-DENSITY D-SUB 15 PIN	R, G, B / 0.7 V[p-p] (75 Ω)
	Card Slot	SD Card slot × 1	HD, VD / TTL LEVEL 2.0-5.0 V [p-p] (high impedance)
Dimension (W x H x D)		915 mm × 620 mm × 287 mm (With Pedestal)	
		915 mm × 577 mm × 87 mm (TV only)	
Mass		15.0 kg Net (With Pedestal)	
		13.0 kg Net (TV only)	


Note

Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.

5 Service Mode

5.1. How to enter into Service Mode

While pressing [VOLUME (-)] button of the main unit, press [INFO] button of the remote control three times within 2 seconds.

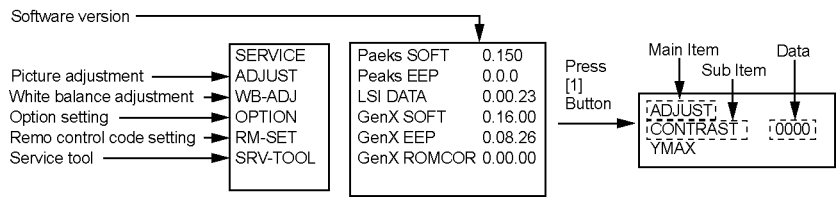

5.1.1. Contents of adjustment mode

- Value is shown as a hexadecimal number.
- Preset value differs depending on models.
- After entering the adjustment mode, take note of the value in each item before starting adjustment.

Main item	Sub item	Sample Data	Remark
ADJUST	CONTRAST	000	
	COLOR	4C	
	TINT	00	
	SUB-BRT	808	
	BACKLGT	22E	
	B-Y-G	34	
	R-Y-A	00	
WB-ADJ	R-GAIN	F7	
	G-GAIN	FB	
	B-GAIN	DB	
	R-CENT	82	
	G-CENT	80	
	B-CENT	86	
OPTION	Boot	ROM	Factory Preset.
	STBY-SET	00	
	EMERGENCY	ON	
	CLK MODE	00	
	CLOCK	0E4	
RM-SET		00	Fixed.
SRV-TOOL		00	See next.

5.1.2. How to exit

Switch off the power with the [POWER] button on the main unit or the [POWER] button on the remote control.

5.2. SRV-TOOL

5.2.1. How to access

1. Select [SRV-TOOL] in Service Mode.
2. Press [OK] button on the remote control.

	SRV-TOOL	
Display of TD2Microcode version →	TD2Microcode:81c00011	
Display of Flash ROM maker code →	Flash ROM : 1 - 227E	
Display of SOS History →	PTCT : 00 . 00 . 00 . 00 . 00	Time 000040:40 Count 0000049

POWER ON TIME/COUNT
Press [MUTE] button (3sec)

5.2.2. Display of SOS History

SOS History (Number of LED blinking) indication.

From left side; Last SOS, before Last, three occurrence before, 2nd occurrence after shipment, 1st occurrence after shipment.

This indication except 2nd and 1st occurrence after shipment will be cleared by [Self-check indication and forced to factory shipment setting].

5.2.3. POWER ON TIME/COUNT

Note : To display TIME/COUNT menu, highlight position, then press MUTE for 3sec.

Time : Cumulative power on time, indicated hour : minute by decimal

Count : Number of ON times by decimal

Note : This indication will not be cleared by either of the self-checks or any other command.

5.2.4. Exit

1. Disconnect the AC cord from wall outlet.

5.3. Service Mode Adjustment

1. Press the 'RECALL' button on the remote control and press '-' vol button on the LCD panel.
2. Press button number 1 on the remote control to select for Adjustment.
3. Self Check to Exit.

5.3.1. Self Check Mode

1. Press the 'MENU' button (on the remote control) and the 'DOWN' button on the LCD panel.
2. Press ON/OFF button on the panel to Exit.

5.3.2. Hotel Mode Adjustment

1. Press the 'VOLUME DOWN' button on the TV panel and simultaneously press the AV button on the remote control 3 times to enter Hotel Mode.
2. Set Hotel mode 'on', then press 'EXIT' to come out.

5.3.3. Hotel Mode

Hotel Mode	
Hotel Mode	Off
Initial INPUT	Off
Initial POS	Off
Initial VOL Level	Off
Maximum Vol Level	100
Button Lock	Off
Remote Lock	Off

Select



EXIT
Change
RETURN

Item	Function
Hotel Mode	Select hotel mode ON/OFF
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : OFF/Analogue TV/Digital TV/AV1/AV2/AV3/PC/HDMI1/HDMI2/HDMI3 • Off: give priority to a last memory. • Selectable input is depend on the model.
Initial POS	Select programme number. Selection : Off/0 to 100 • Off: give priority to a last memory.
Initial VOL level	Adjust the volume when each time power is switched on. Selection/Range : Off/0 to 100 • Off: give priority to a last memory.
Maximum VOL level	Adjust maximum volume. Range : 0 to 100
Button lock	Select local key conditions. Selection : Off/SETUP/MENU/All • Off: altogether valid. • SETUP: only F-key is invalid. (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid. (only Volume/Mute can be selected.) • ALL: altogether invalid.
Remote lock	Select remote control key conditions. Selection : Off/SETUP/MENU • Off: altogether valid. • SETUP: only Setup menu is invalid. • MENU: Picture/Sound/Setup menu are invalid.

6 Troubleshooting Guide

Use the self-check function to test the unit.

1. Checking the IIC bus lines
2. Power LED Blinking timing

6.1. Check of the IIC bus lines

6.1.1. How to access

Self-check indication only:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [OK] button on the remote control for more than 3 seconds.

Self-check indication and forced to factory shipment setting:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

6.1.2. Exit

Disconnect the AC cord from wall outlet.

6.1.3. Screen display

SELF CHECK		---- . XXXXXX - XXXXXX
PEAKS	OK	
TUN1	OK	
FE	OK	
Hudson	OK	
MEM2	OK	
MEM3	OK	
MEM4	OK	
Copyright Panasonic Corporation 2009.		

6.1.4. Check Point

Confirm the following parts if NG was displayed.

DISPLAY	Ref. No.	Description	P.C.B.
PEAKS	IC8001	PEAKS LITE 2P	A-Board
TUN1	TU8300	TUNER	A-Board
FE	IC8300	FRONT END	A-Board
Hudson	IC4003	Hudson2	A-Board
MEM2	IC8503	EEPROM	A-Board
MEM3	IC4004	EEPROM	A-Board
MEM4	IC4504	EEPROM	A-Board

6.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abnormality occurs, the protection circuit will operate and reset the unit to stand by mode. During this time, the defective block can be identified by the number of blinking times of the Power LED on the front panel of the unit as follow:


Blinking times	Contents	BOARD
1	Inverter_SOS	P BOARD
2	SUB 1.8V_SOS	A BOARD
3	SUB 1.2V_SOS	A BOARD
4	POWER_SOS	P/A BOARD
5	SUB 5V_SOS	A BOARD
9	TCON_SOS	A BOARD
10	SUB 3.3V_SENSE	A BOARD
11	DCDC_SOS	A BOARD
12	SOS	A BOARD

6.3. No Power

First check point

There are following 2 states of No Power indication by power LED.


1. No lit
2. Red is lit then turns red blinking a few seconds later. (See 6.2.)

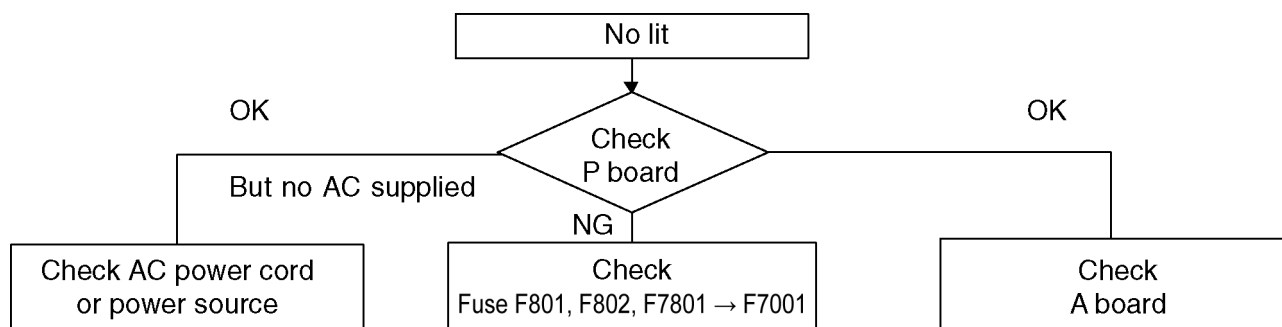

7 Disassembly and Assembly Instructions


7.1. AC Cord Dressing

【AC cord dressing】 Oder: ①→②


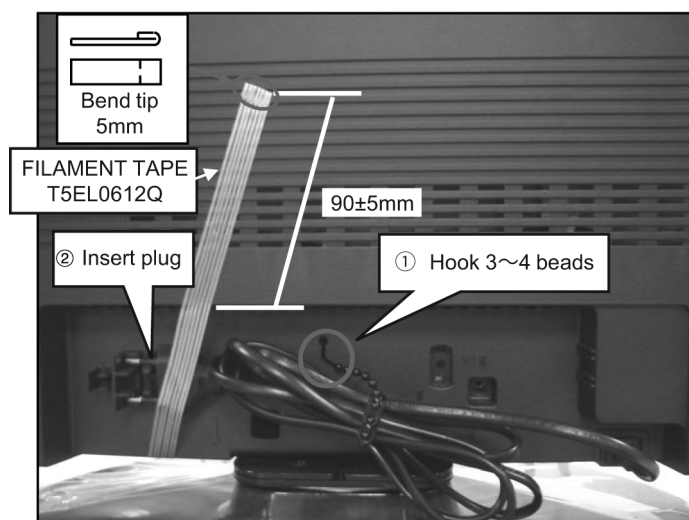


7.2. AC Cord Installation

1. Put on the AC CORD BRACKET on the CABINET.
2. Fix the AC CORD BRACKET with SCREW.
3. Insert AC CORD connector into P-PCB connector.
4. Clamp the AC CORD.
5. Insert AC CORD bushing into the AC CORD BRACKET.
6. AC CORD is pushed into the bottom of the bracket.

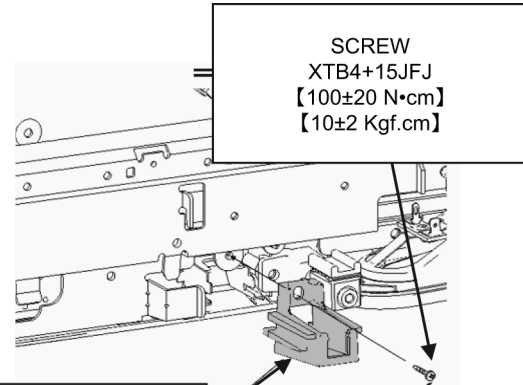


AC CORD BRACKET

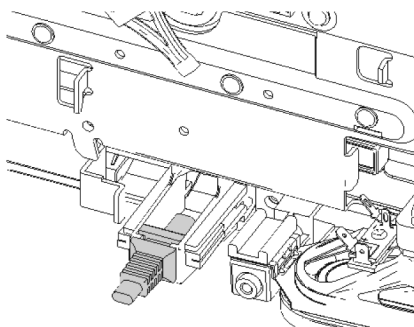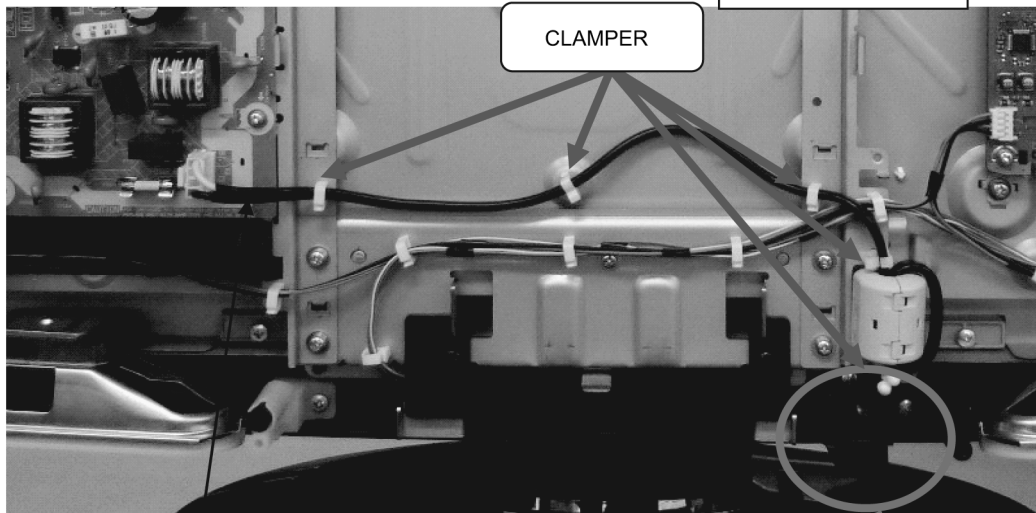


Push an AC cord
to the bottom

NG

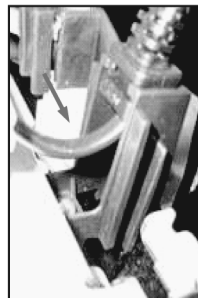

OK

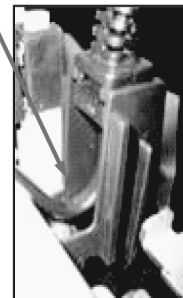


CAUTION POINT FOR AC CORD BRACKET




7.3. Metal Support Installation

1. Stick the FELT.
2. Metal Support on the LCD PANEL.
(insert positioning. ①→②)
3. Fix them with SCREW.

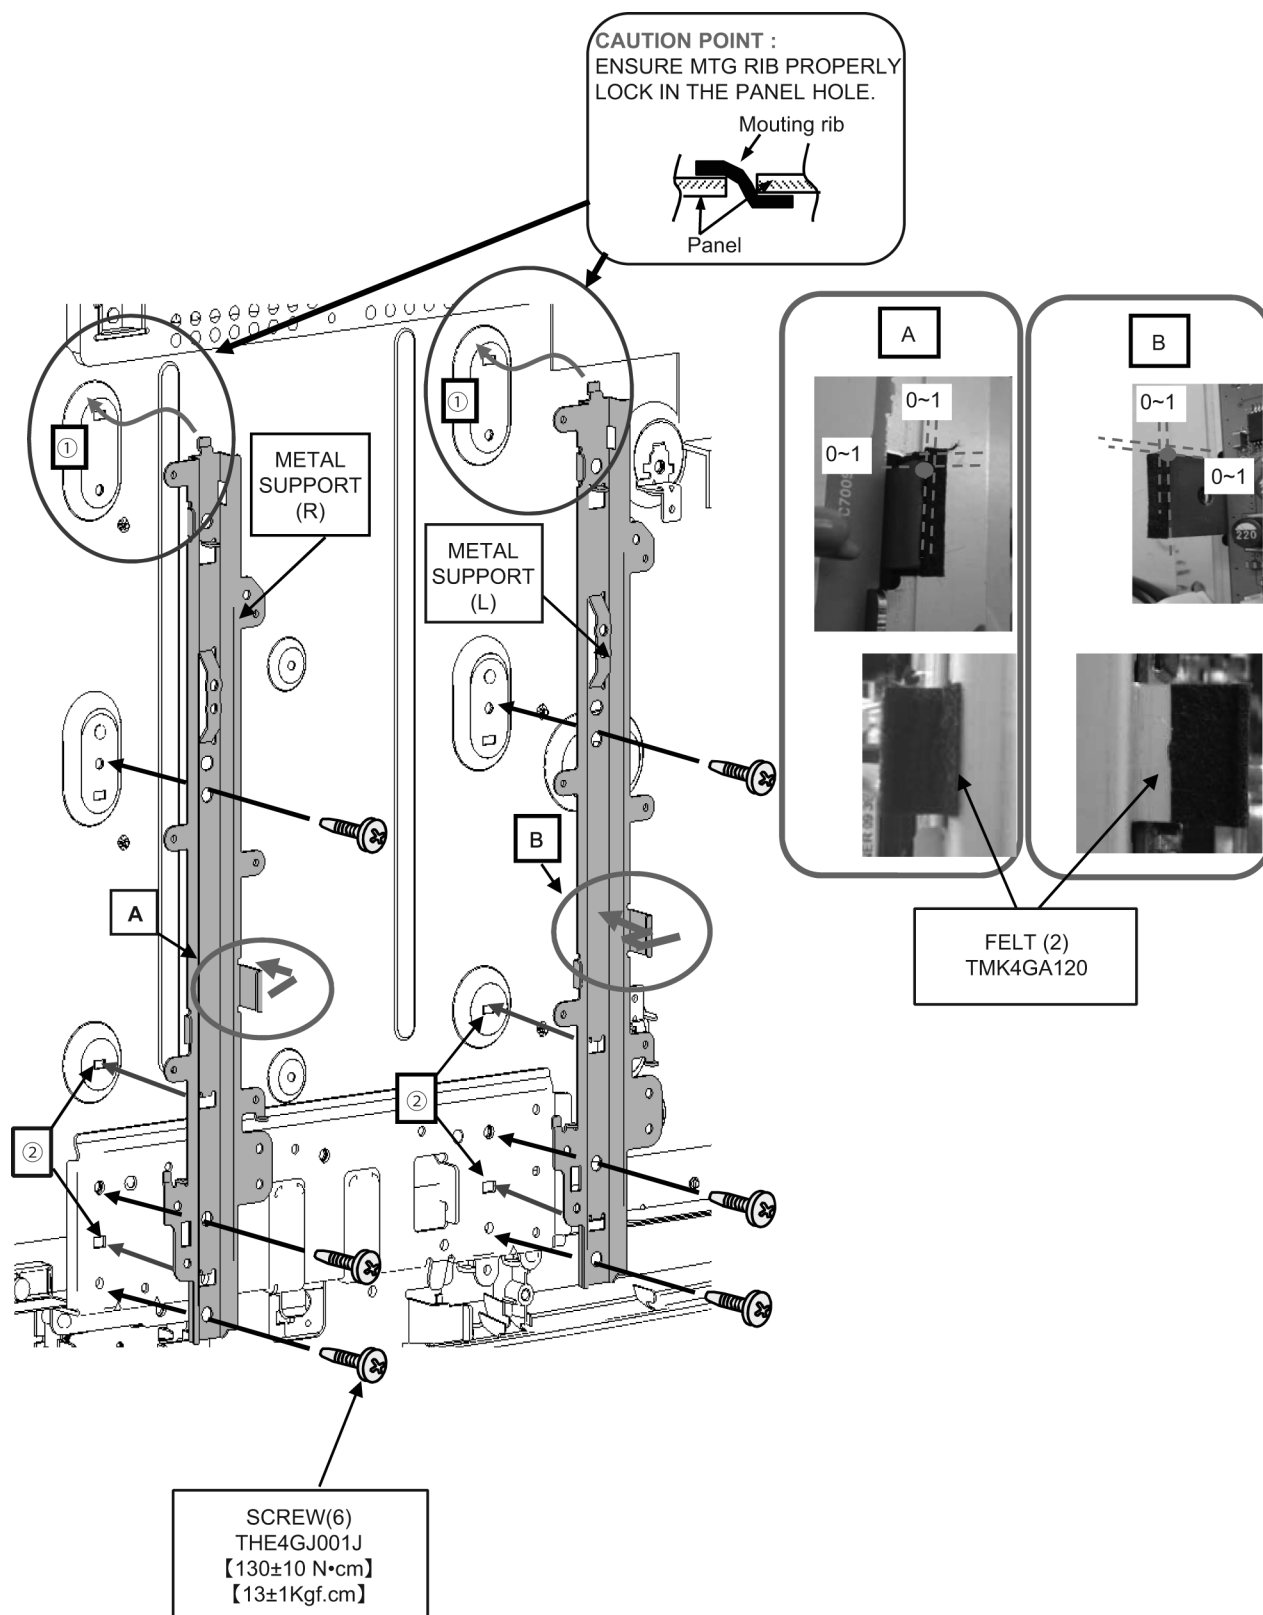


7.4. VESA Metal Assembly

1. Put VESA METAL on the METAL SUPPORT.
2. Fix them with SCREW.

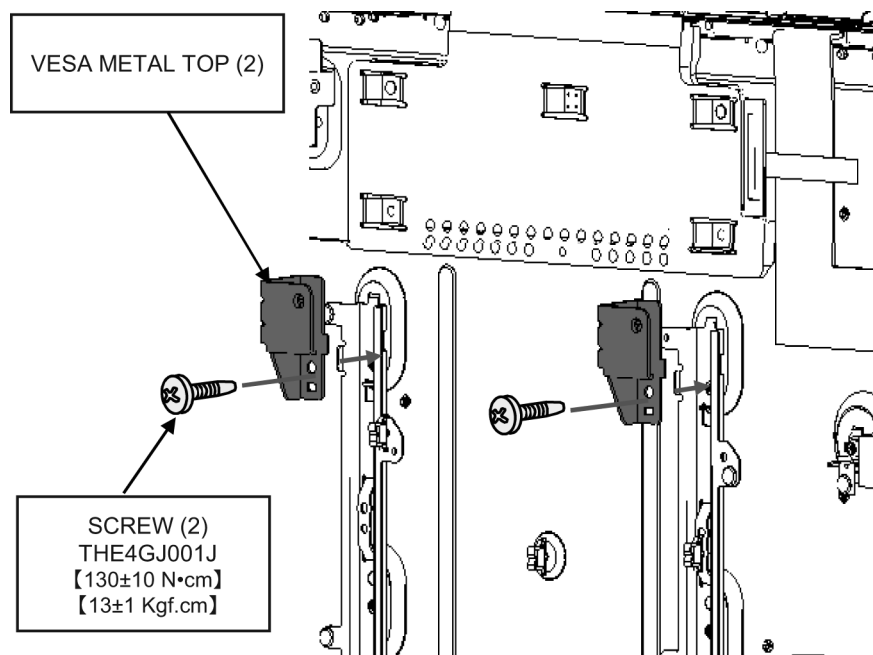




7.5. Control Panel Assembly

Stick the FELT to CONTROL PANEL BRACKET.

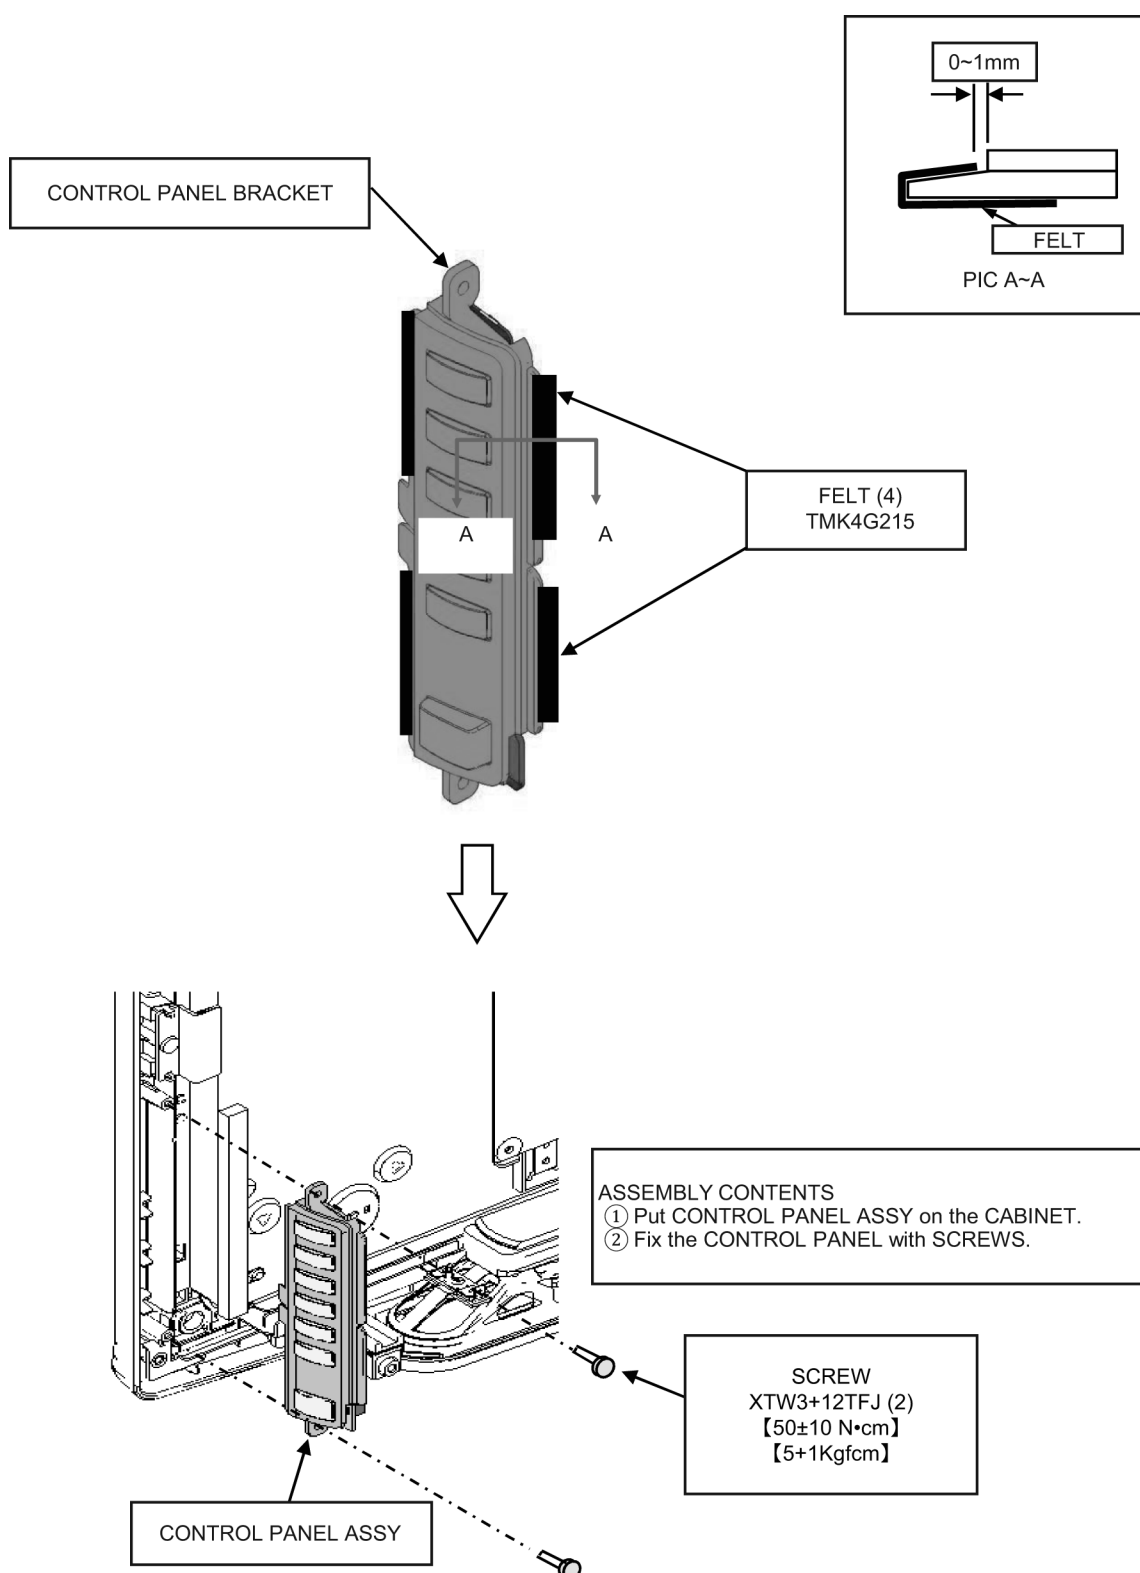

7.6. Side AV Bracket Assembly


1. Put SIDE AV BRACKET ASSY on A-PCB.
2. Fix them with screw.

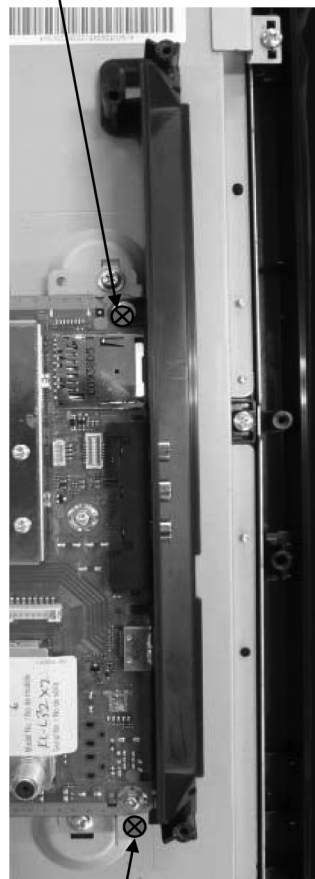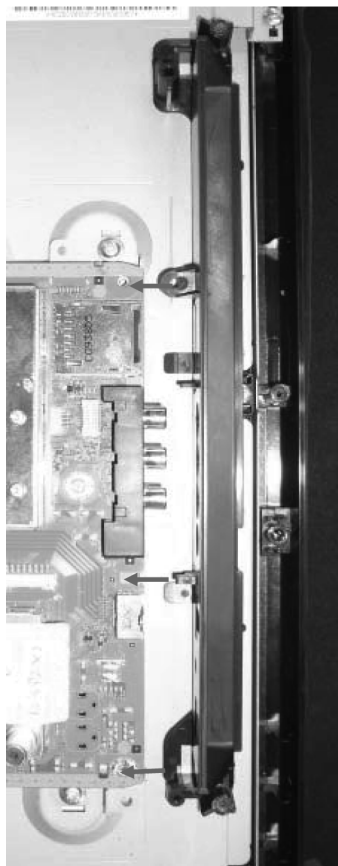

SCREW
XYC3+FJ8FJ
【90±10 N·cm】
【9±1 Kgf·cm】

SCREW
XTW3+12TFJ
【50±10 N·cm】
【5±1 Kgf·cm】


CAUTION POINT:
ENSURE HOOK PROPERLY LOCK
ON A-PB-MTG METAL R.
A-PB-MTG METAL R



HOOK



7.7. SP Installation

1. Fix SP RUBBER BUSH on SP UNIT.
2. Put SP BRACKET on the CABINET.
3. Fix them with SCREW.
4. Set the SPEAKER UNIT.

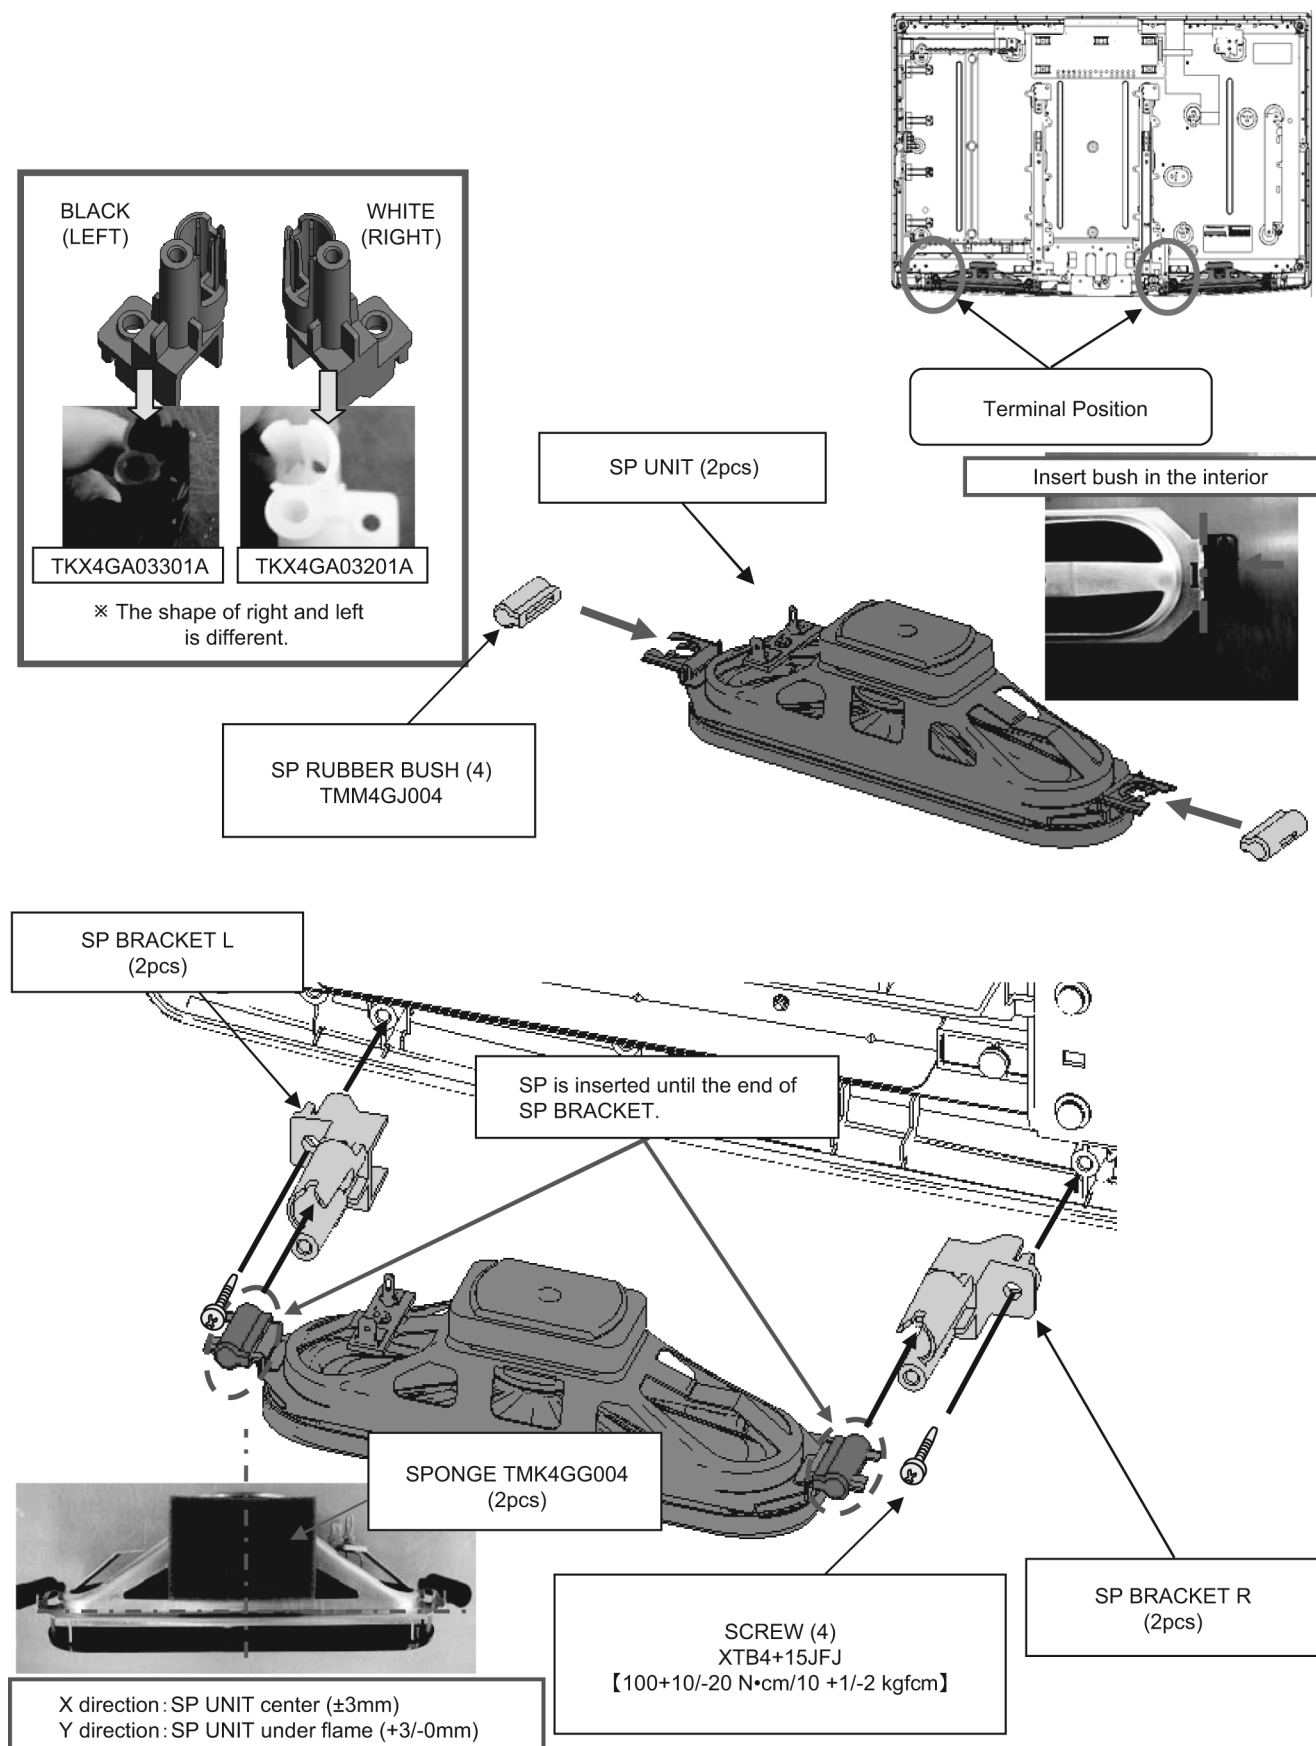

7.8. LCD Panel Fixing & Handling Method

1. Place down the cabinet as shown below.
2. Fix LCD panel into the cabinet by taking below precautions.

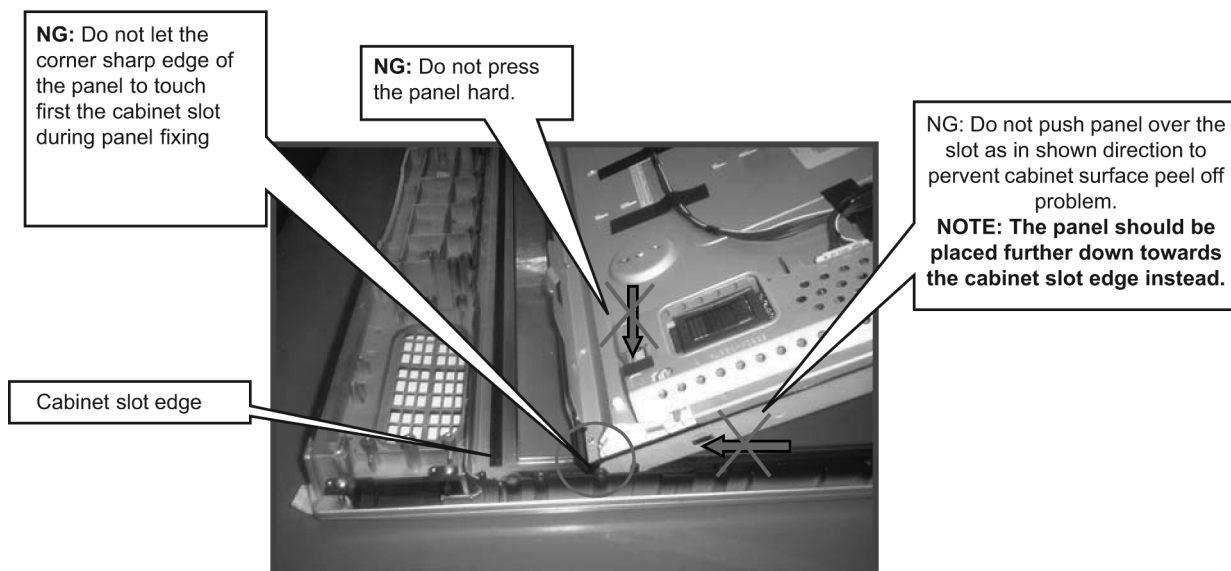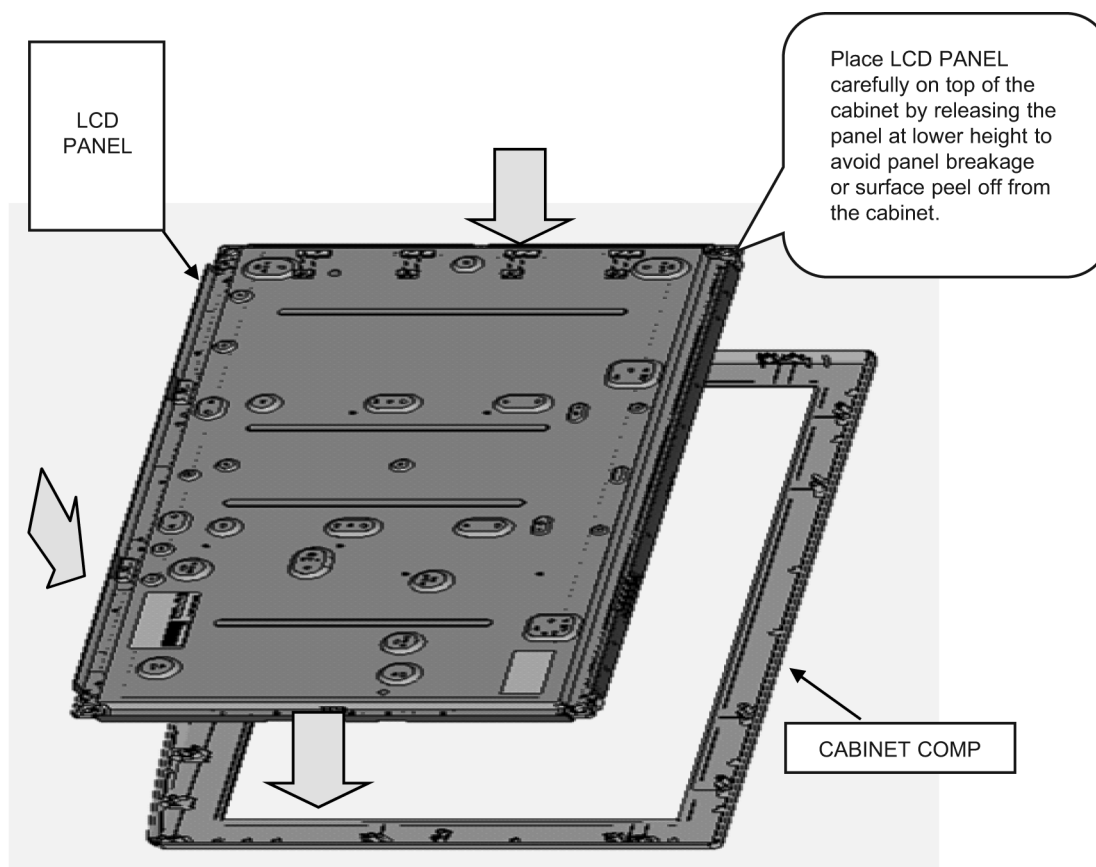


Other general precautions

1. Do not press panel surface to avoid blue spot on the panel display.
2. Do not use hard cloth or rub the surface too hard. This may cause scratches on the surface.
3. Take care not to subject the TV's surface to water or detergent. Any liquid (including pets urine) if enters the product could lead to TV failure.
4. Take care not to subject the surface to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
5. The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch with your fingernail or other hard objects.


7.9. LED Panel Installation & Fitting

1. Fix LED PANEL on CABINET.
2. Insert an A10-V10 lead connector in V-Print.
3. Put V-PCB on LED PANEL.
4. Fix LED PANEL ass'y with SCREW.
5. Insert the CLAMPER and stick FELT at V10 wire.

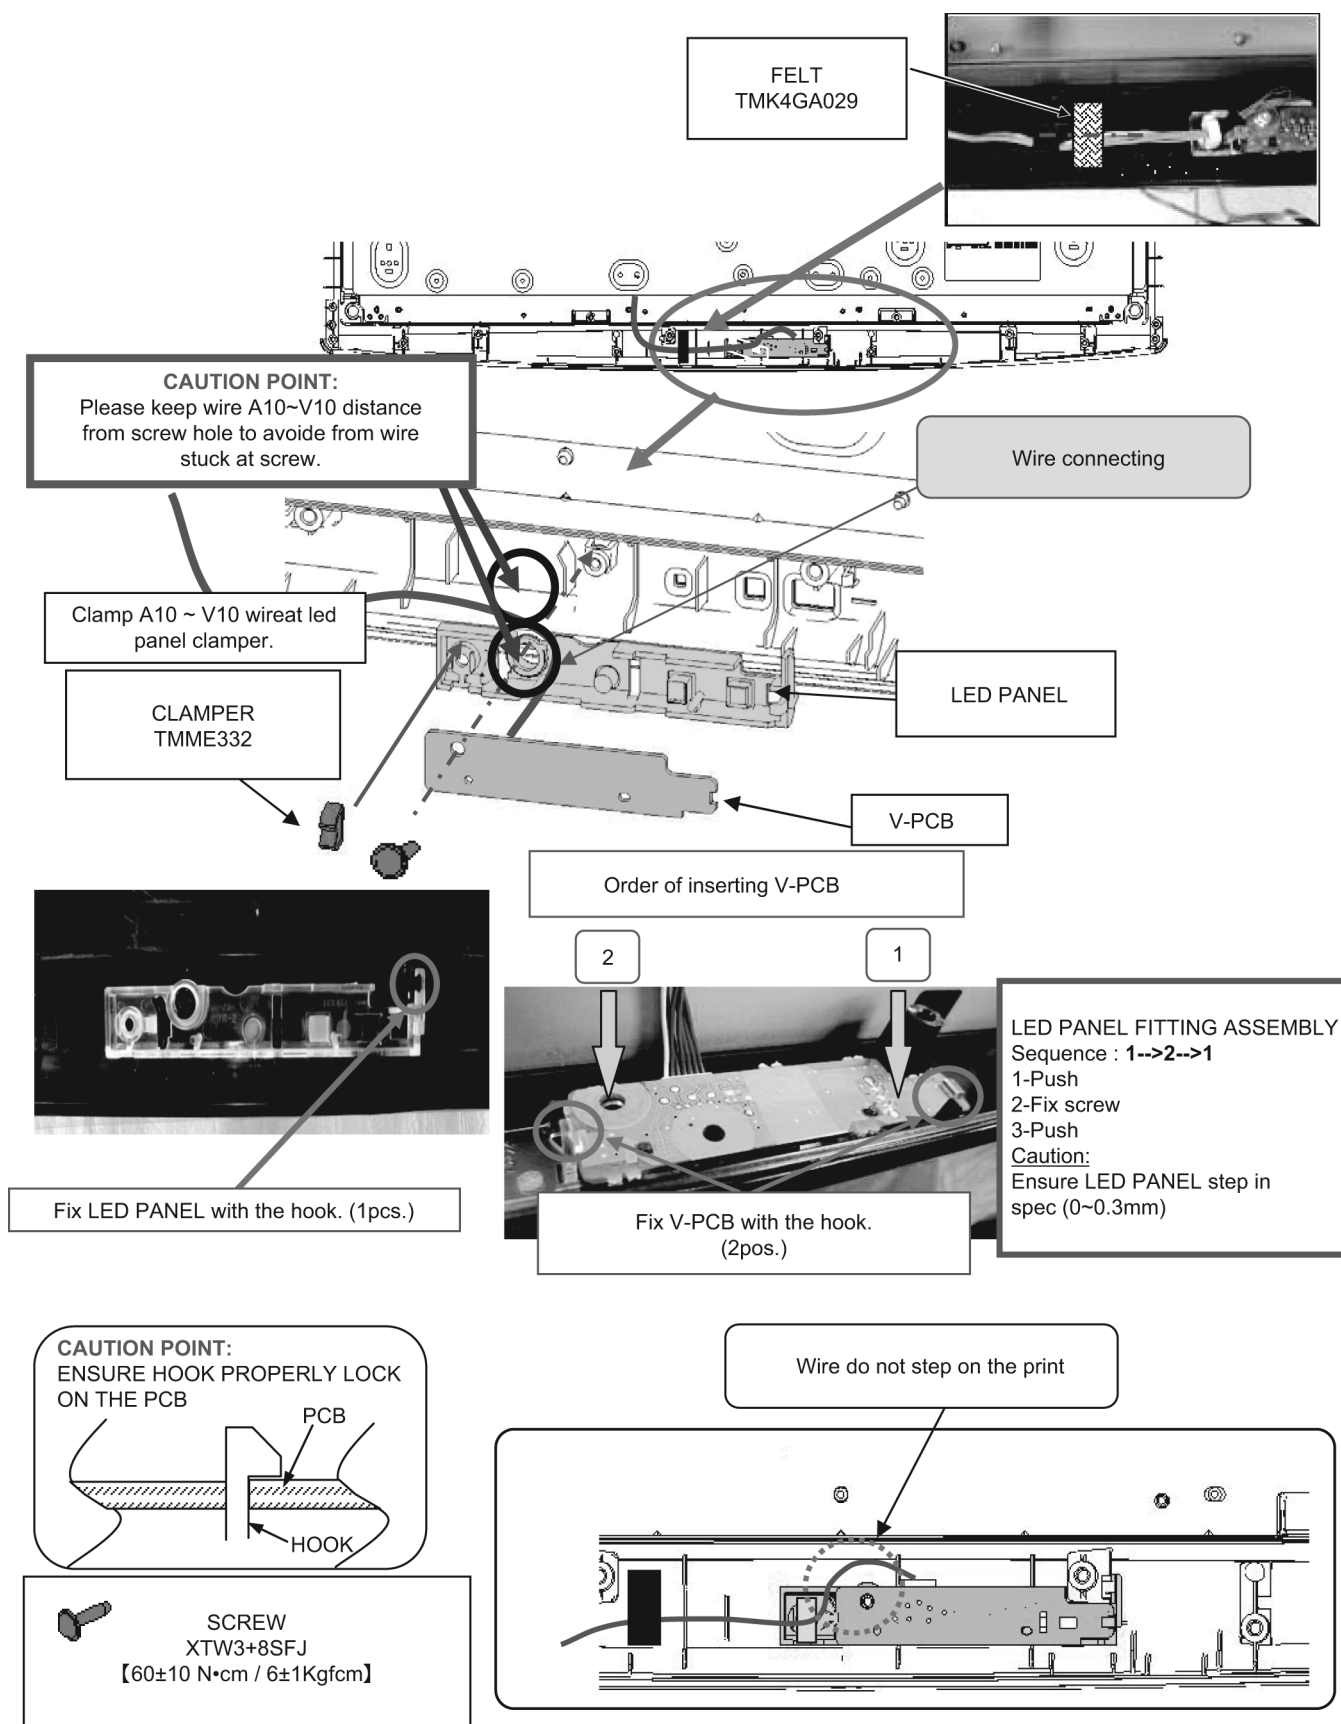


7.10. LCD Mounting Installation 1

1. Put clumper on METAL BRACKET BOTTOM.
2. Put METAL BRACKET BOTTOM on the LCD PANEL.
3. Fix them with screw.
4. Wire dressing and lock CLAMPER.

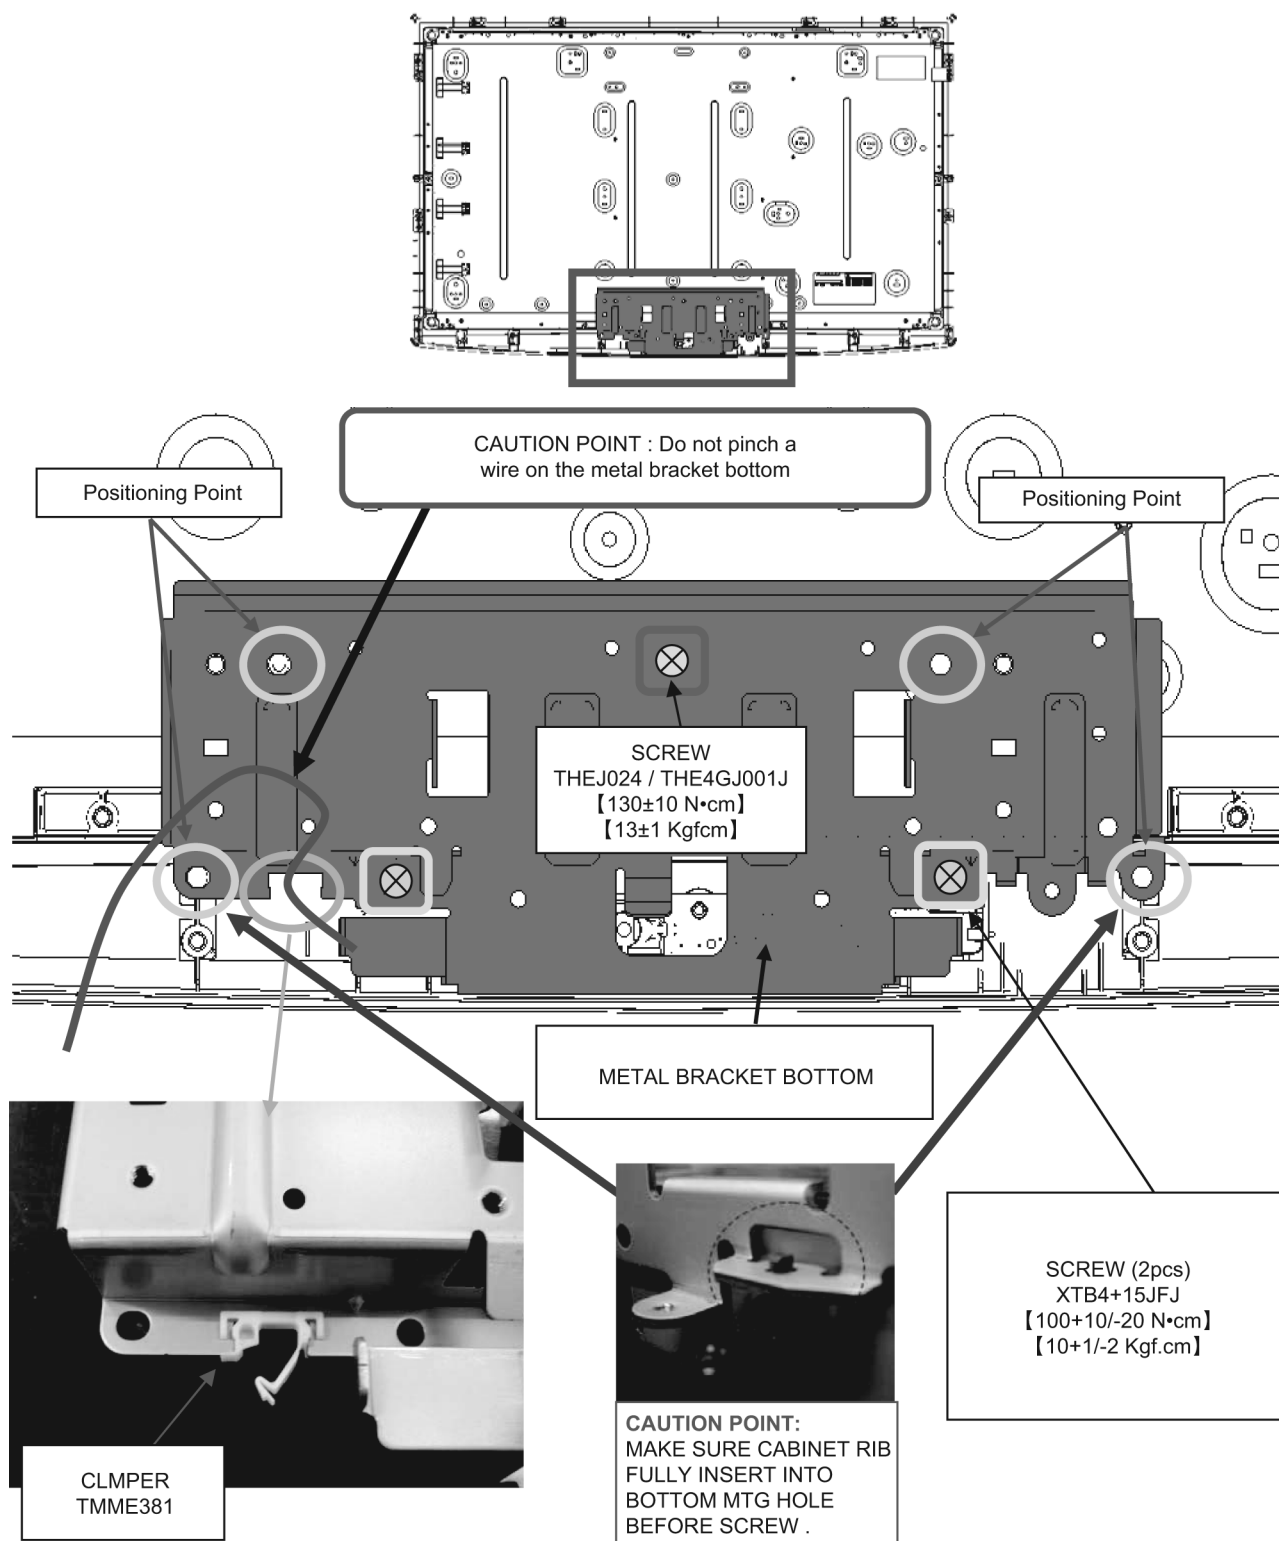


7.11. LCD Mounting Installation 2

1. Put BARRIER & METAL BRACKET TOP-L on the LCD PANEL.
2. Fix them with screw.

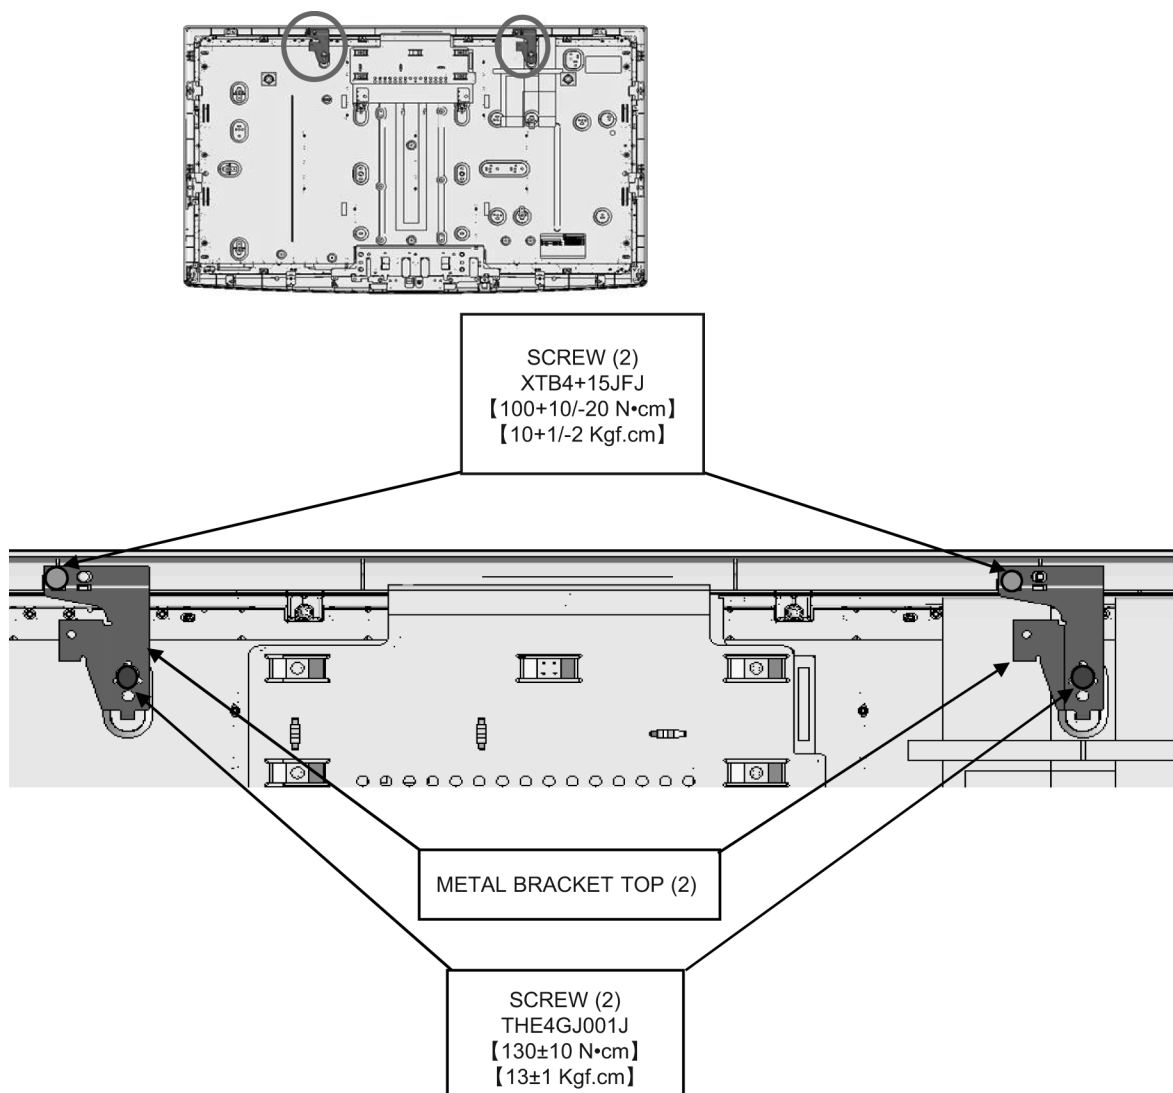

7.12. LCD Mounting Installation 3


1. Put METAL BRACKET on the LCD PANEL.
2. Fix them with screw.

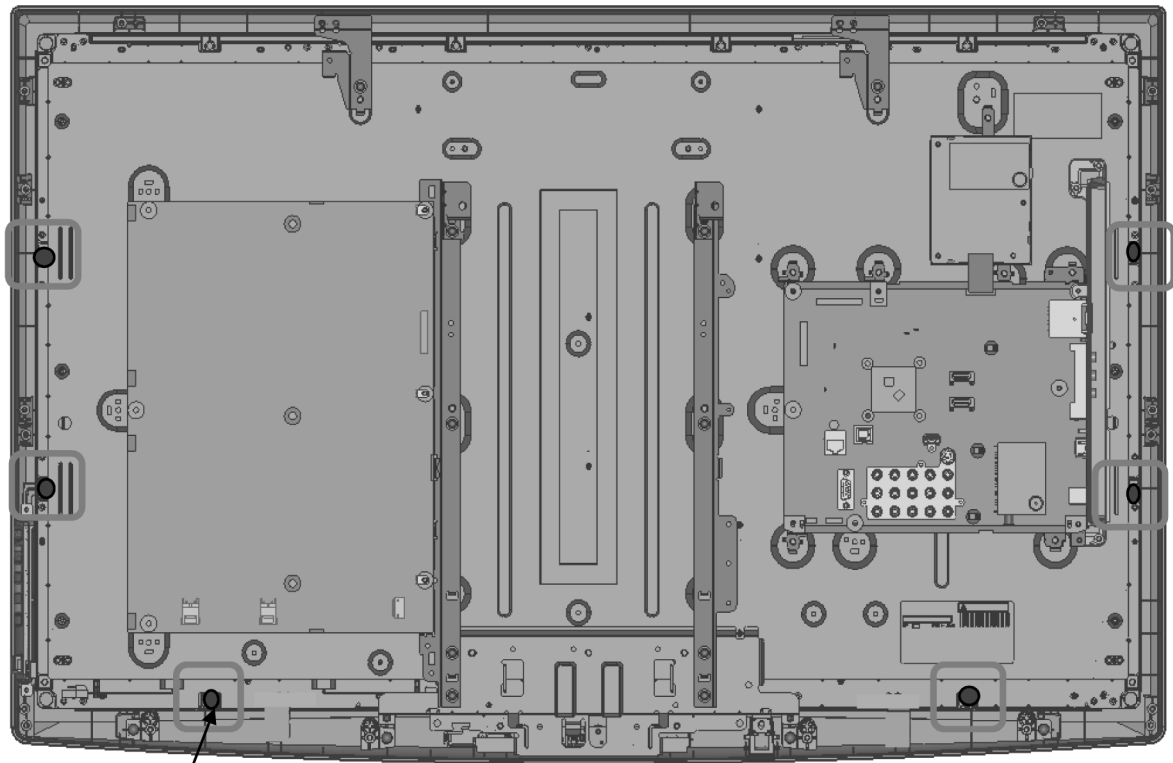

SCREW (10)
XTB4+15JFJ
【100±20N•cm】
【10±2Kgf.cm】





7.13. EMI Spec (LVDS)

1. Put LVDS HARNESS to LCD PANEL.
2. STICK FELT TMK4GA020 AT LVDS HARNESS.
3. STICK FELT TMK4GA029 AT LVDS BARRIER.

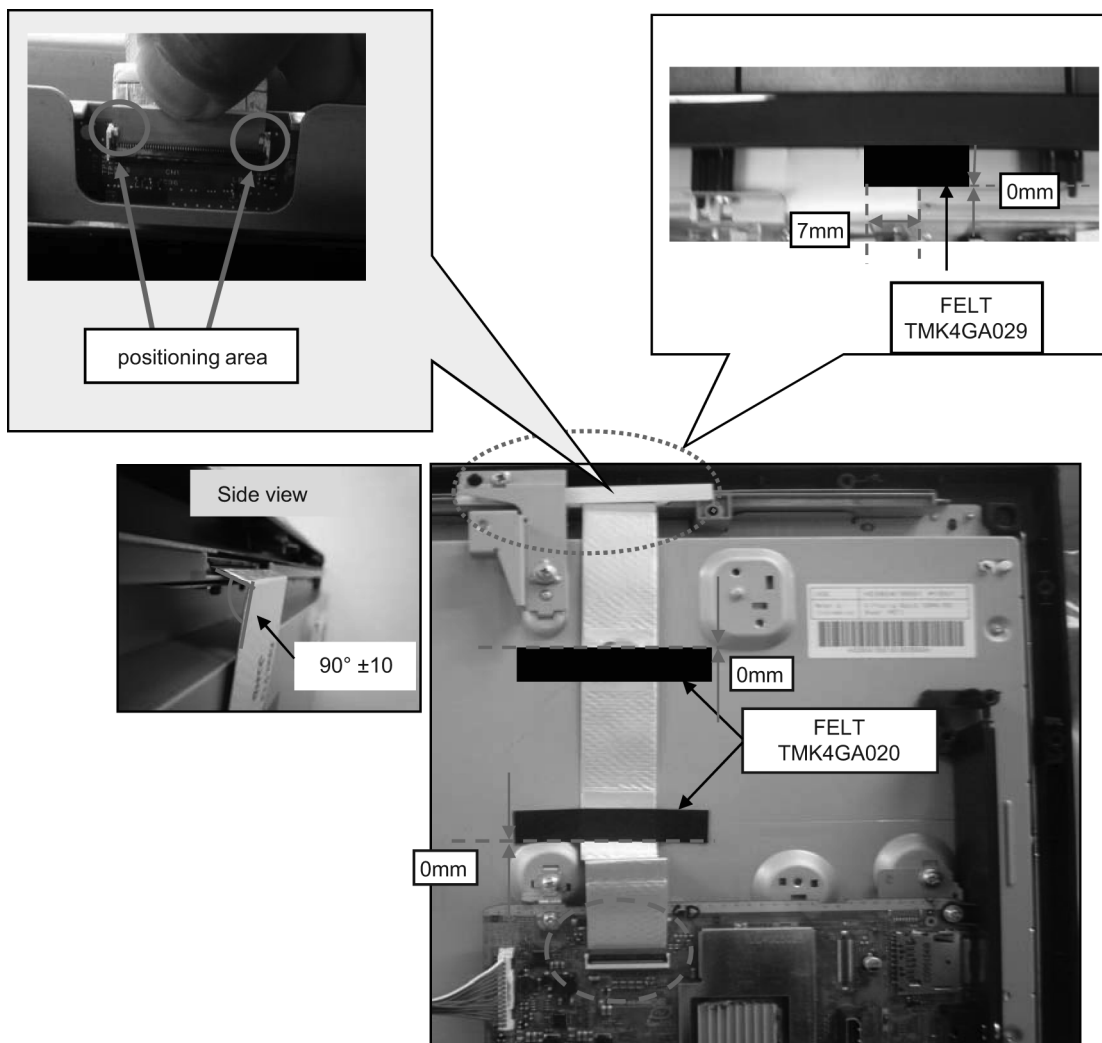


7.14. PCB and Clamper Assembly

1. Put the P-PCB, A-PCB on the MTG METAL.
2. Fix them with SCREWS.
3. Setting the CLAMPER.
4. Insert inv-lead in P PCB.

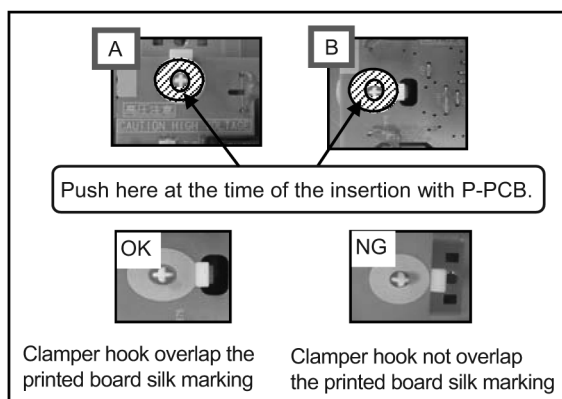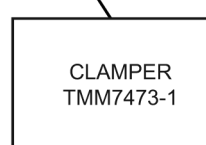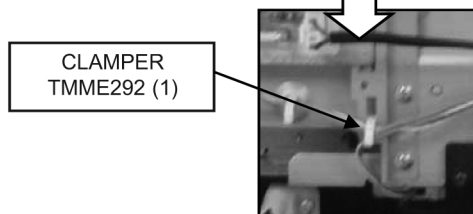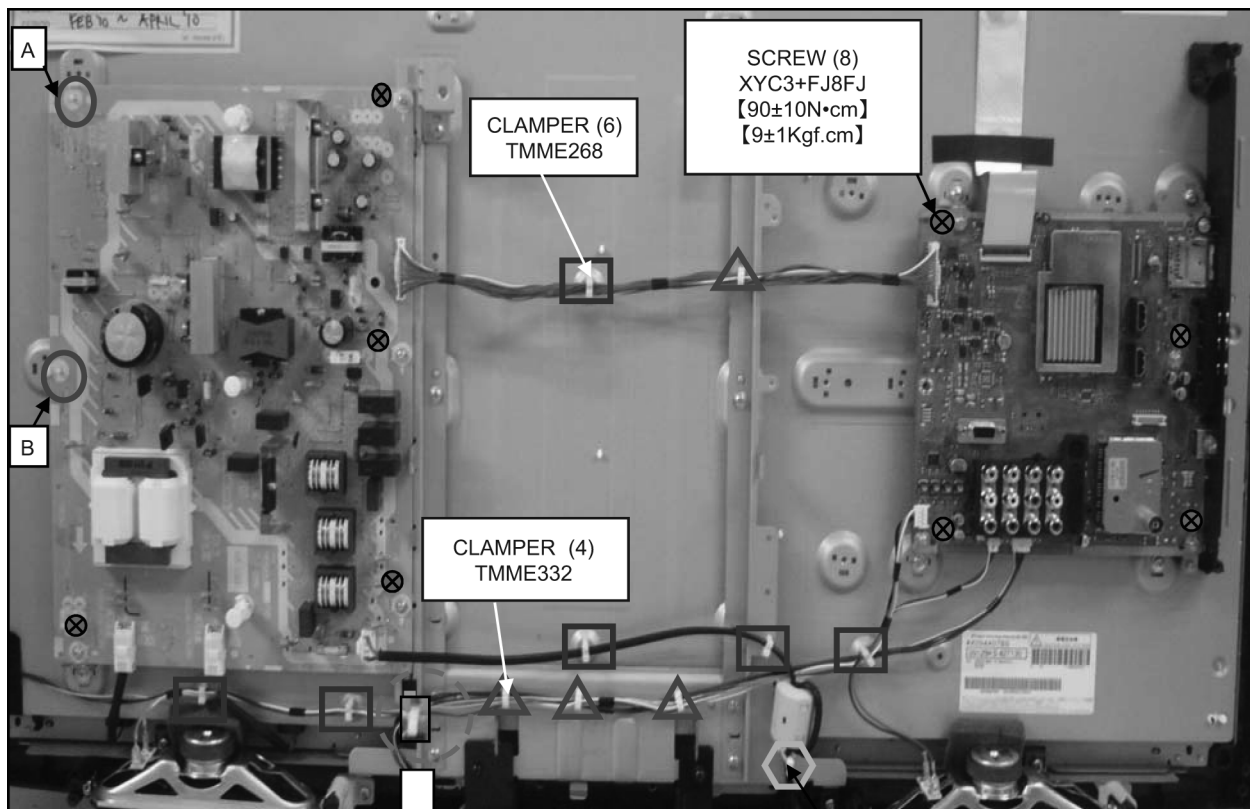

7.15. PB MTG Installation


1. Put METAL Parts on the LCD PANEL.
2. Fix them with SCREW.

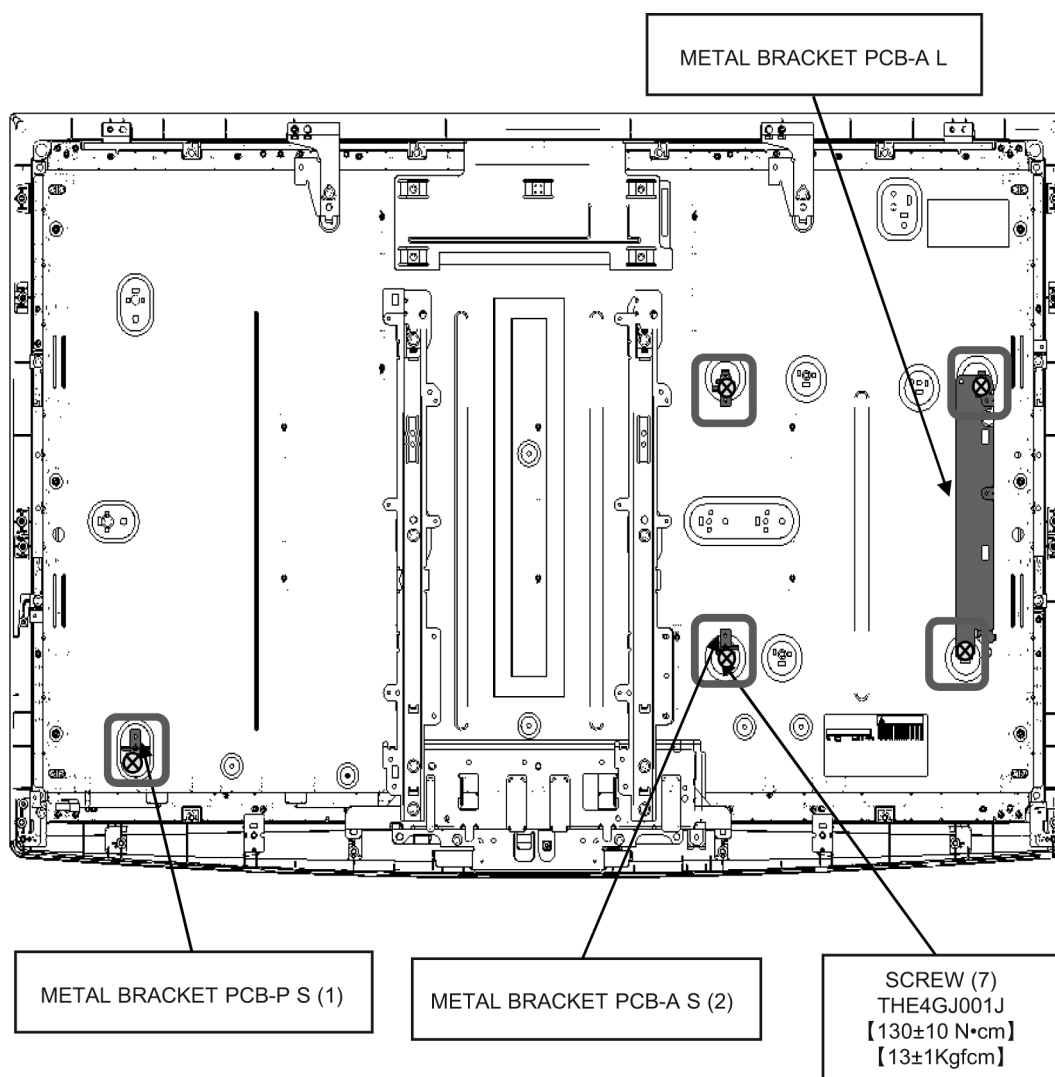

7.16. Pedestal Assembly 1


Step 1

Setting PEDESTAL COVER and STAND MTG SPACER and BASE PLATE with SCREWS.

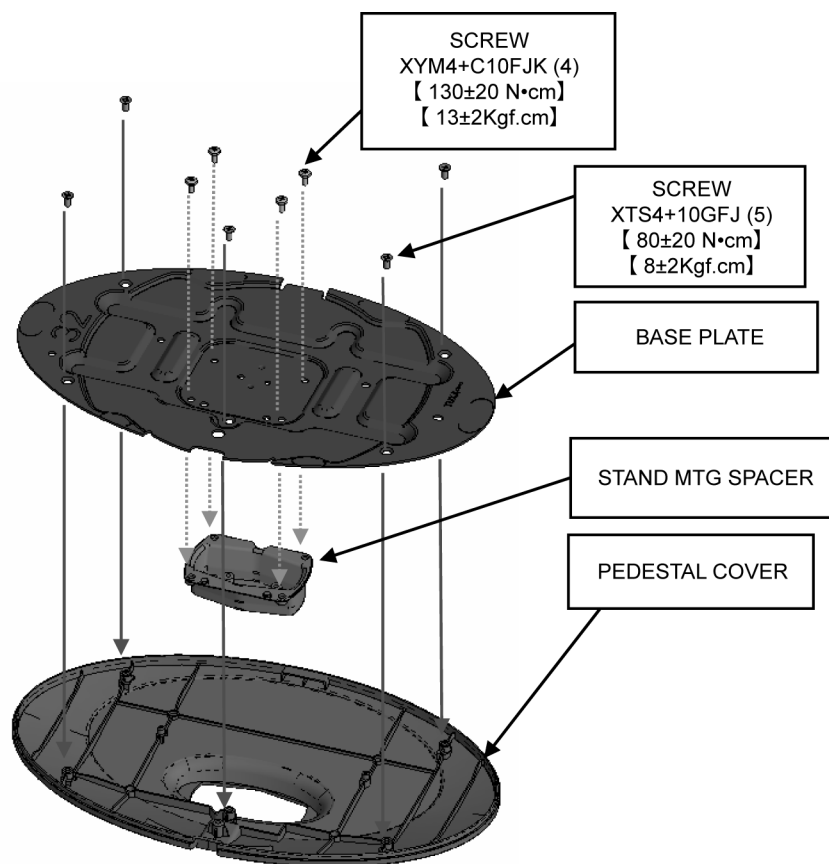


Step 2

1. Stick the RUBBER FOOT at bottom ROTATION PLATE.
2. Make sure ROTATION PLATE surfacefully cover by grease. Follow the picture

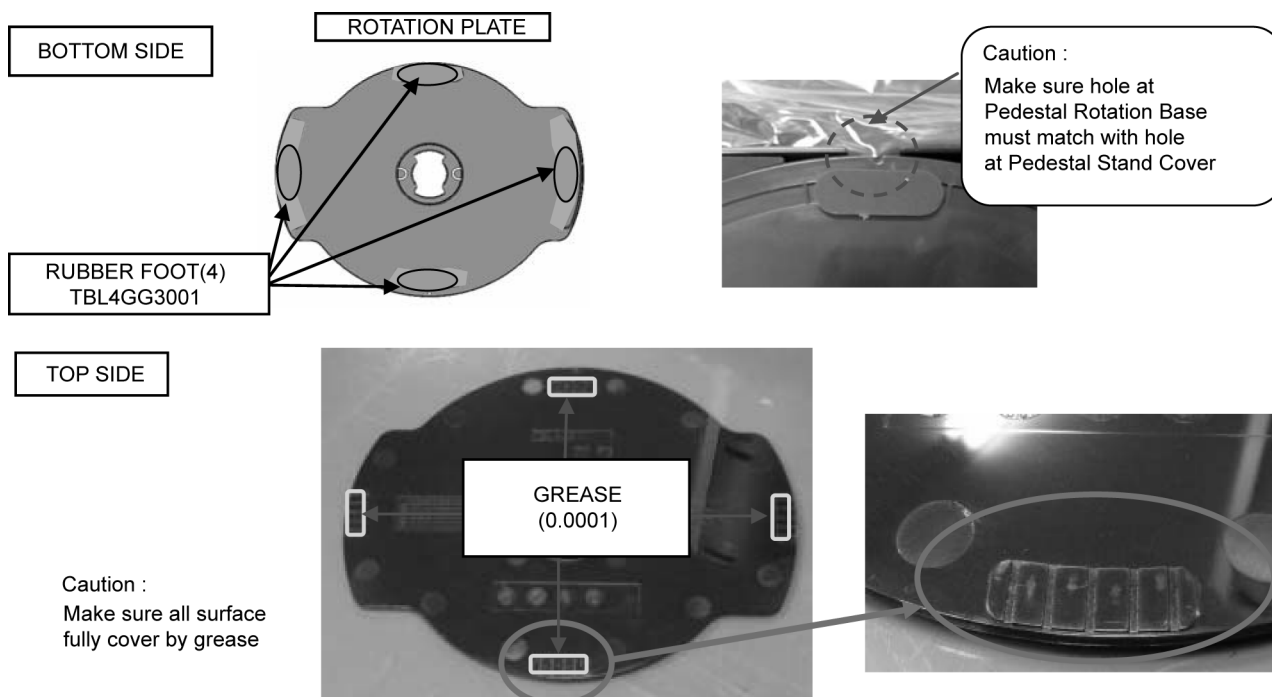


Step 3

Setting ROTATION PLATE and BUSH with SCREWS.

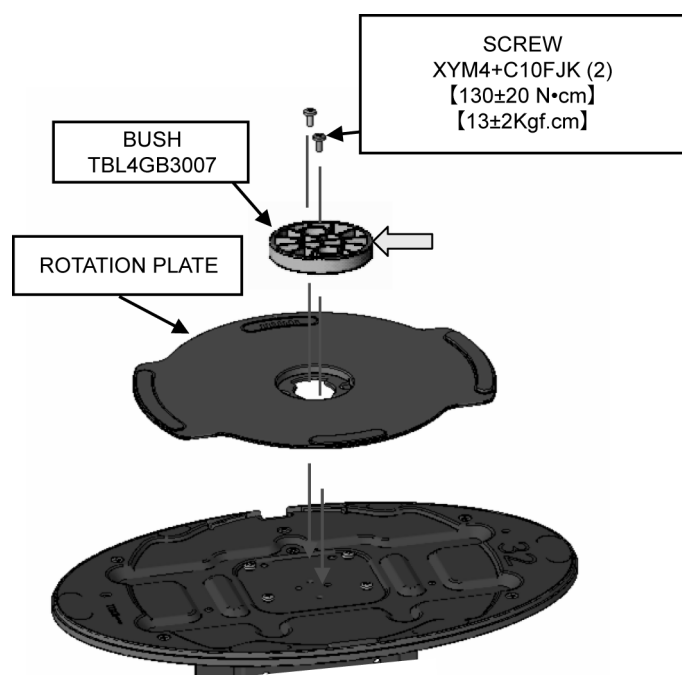


7.17. Pedestal Assembly 2

1. Lay down the unit so that the rear cover faces upward.
2. Remove the 4 screws.
3. Remove the pedestal.

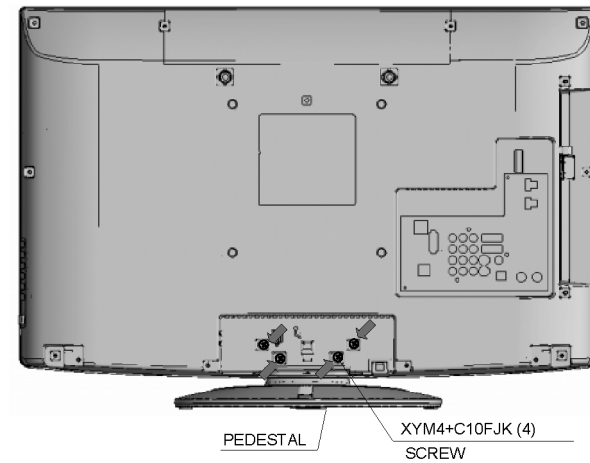

7.18. Rear cover


1. Remove the 15 screws (A).
2. Remove the 2 screws (B),
3. Remove the rear cover.

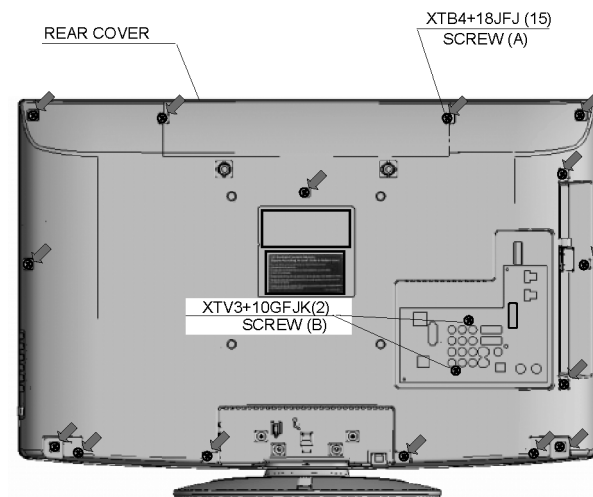

7.19. Stand MTG Assembly

(Refer each part no. to part list)

1. STAND MTG are put in BAG.
2. BAG is wrapped around STAND MTG.
3. SCREW is put in the BAG and use yellow tape to hold screw bag.

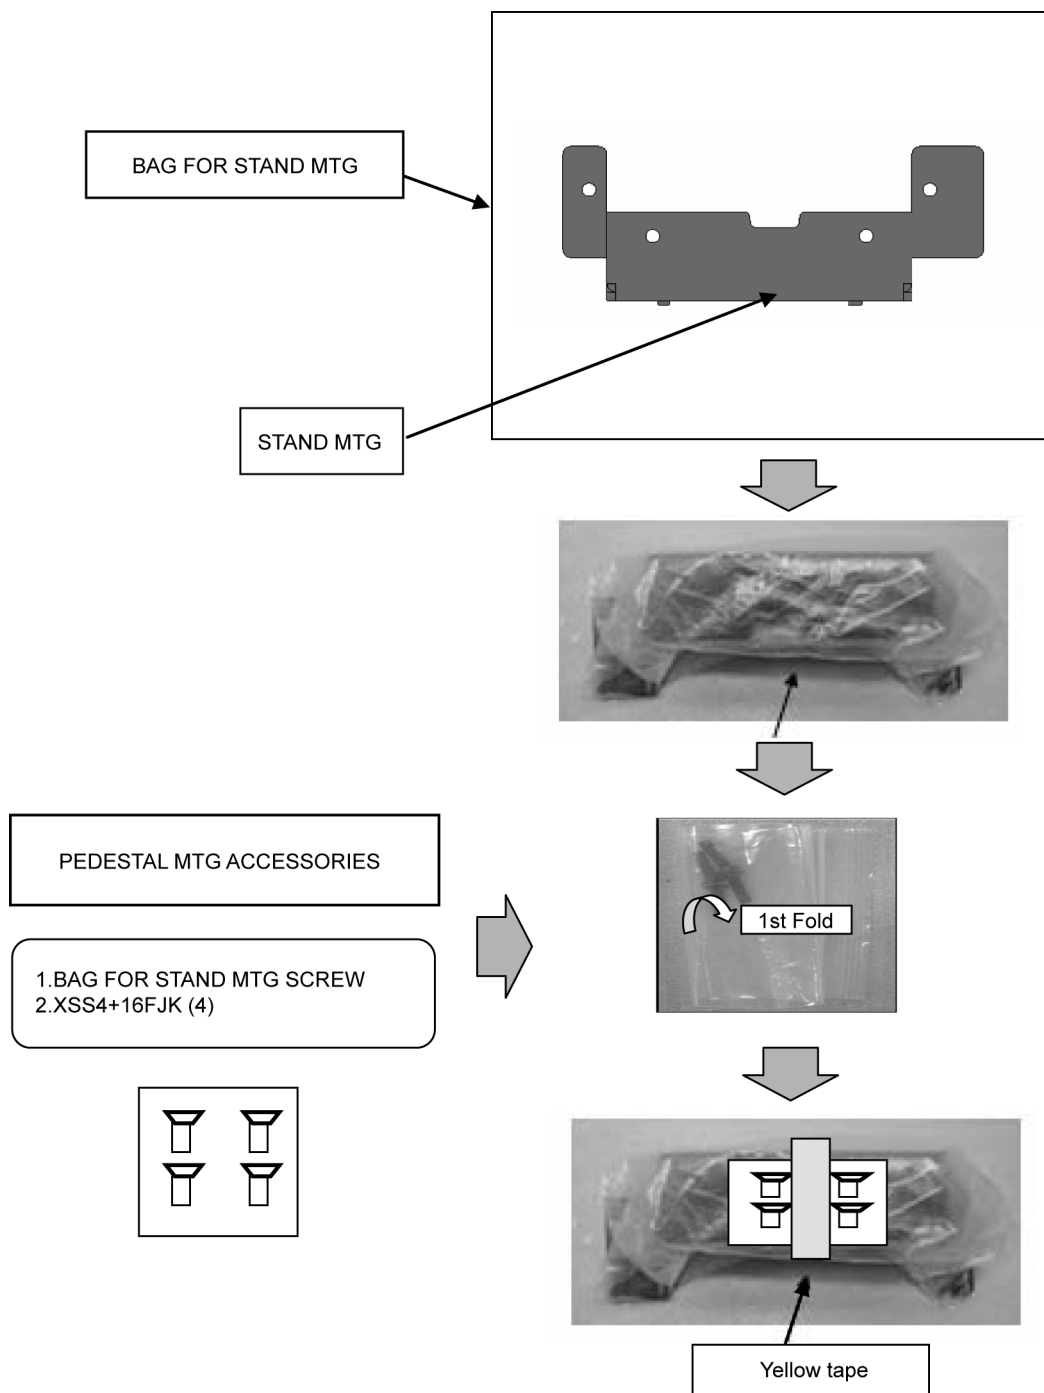

8 Measurements and Adjustments

8.1. Voltage chart of A-board

VOLTAGE	TEST POINT	SPECIFICATION
TCON13.7V	TP7019	$12.5 \pm 2 \text{ V}$
TCON2.5V	TP4826	$2.5 \pm 0.12 \text{ V}$
TCON31V	TP7013	$31 \pm 3.1 \text{ V}$
TCON-6V	TP7014	$-5.7 \pm 0.6 \text{ V}$

8.2. Voltage chart of P-board

VOLTAGE	TEST POINT	SPECIFICATION	TEST POINT
17V	TP7952, TP7953	$18 \pm 2 \text{ V}$	D7503K
DTV12V	TP7954, TP7955	$12.2 \pm 0.6 \text{ V}$	D7552K
TUNER6V	TP7956, TP7957	$6.1 \pm 0.3 \text{ V}$	D7603K
DC390V	TP7201, TP7801, TP7802, TP7803, TP7804	$390 \pm 10 \text{ V}$	Q7803D

8.3. Picture level adjustment (RF)

Instrument Name	Remarks
1. REMOTE TRANSMITTER 2. Ex. Signal (Sprit color bar)	
Adjustment or Inspection Procedure	Remarks
<procedure> 1. Receive the Sprit color bar. (Screen mode: ZOOM or FULL Picture mode: DYNAMIC AI: OFF AI Picture: OFF) *BACK LIGHT +30 <Inspection> 1. Enter Service mode, and select MAIN_ADJ PICTURE. Volume UP/DOWN key makes GAIN displayed under PICTURE to set. Pushing the remote controller [OK] key for about 3 seconds, GAIN is suited to the adjustment value automatically. (The Sprit Color Bar Pattern)	

8.4. Picture level adjustment (VIDEO)


Instrument Name	Remarks
1. REMOTE TRANSMITTER 2. Video signal generator (100% Color bar)	
Adjustment or Inspection Procedure	Remarks
<procedure> 1. Receive 100% Color bar. (ASPECT: ZOOM or FULL, Picture mode: VIVID, AI Picture: OFF) * BACK LIGHT MAX VALUE <Inspection> 1. Enter Service mode, and select ADJUST CONTRAST. Volume UP/DOWN key makes GAIN value displayed on the right of CONTRAST to set. Pushing the remote controller [OK] key for about 3 seconds, GAIN is suited to the adjustment value automatically.	

8.5. Picture level adjustment (YUV)

Instrument Name	Remarks
1. REMOTE TRANSMITTER 2. Component Video signal generator (100% Color bar 1080i)	
Adjustment or Inspection Procedure	Remarks
<procedure> 1. Receive 100% Color bar. (ASPECT: ZOOM or FULL, Picture mode: VIVID, AI Picture: OFF) * BACK LIGHT MAX VALUE <Inspection> 1. Enter Service mode, and select ADJUST CONTRAST. Volume UP/DOWN key makes GAIN value displayed on the right of CONTRAST to set. Pushing the remote controller [OK] key for about 3 seconds, GAIN is suited to the adjustment value automatically.	


9 Block Diagram

9.1. Main Block Diagram

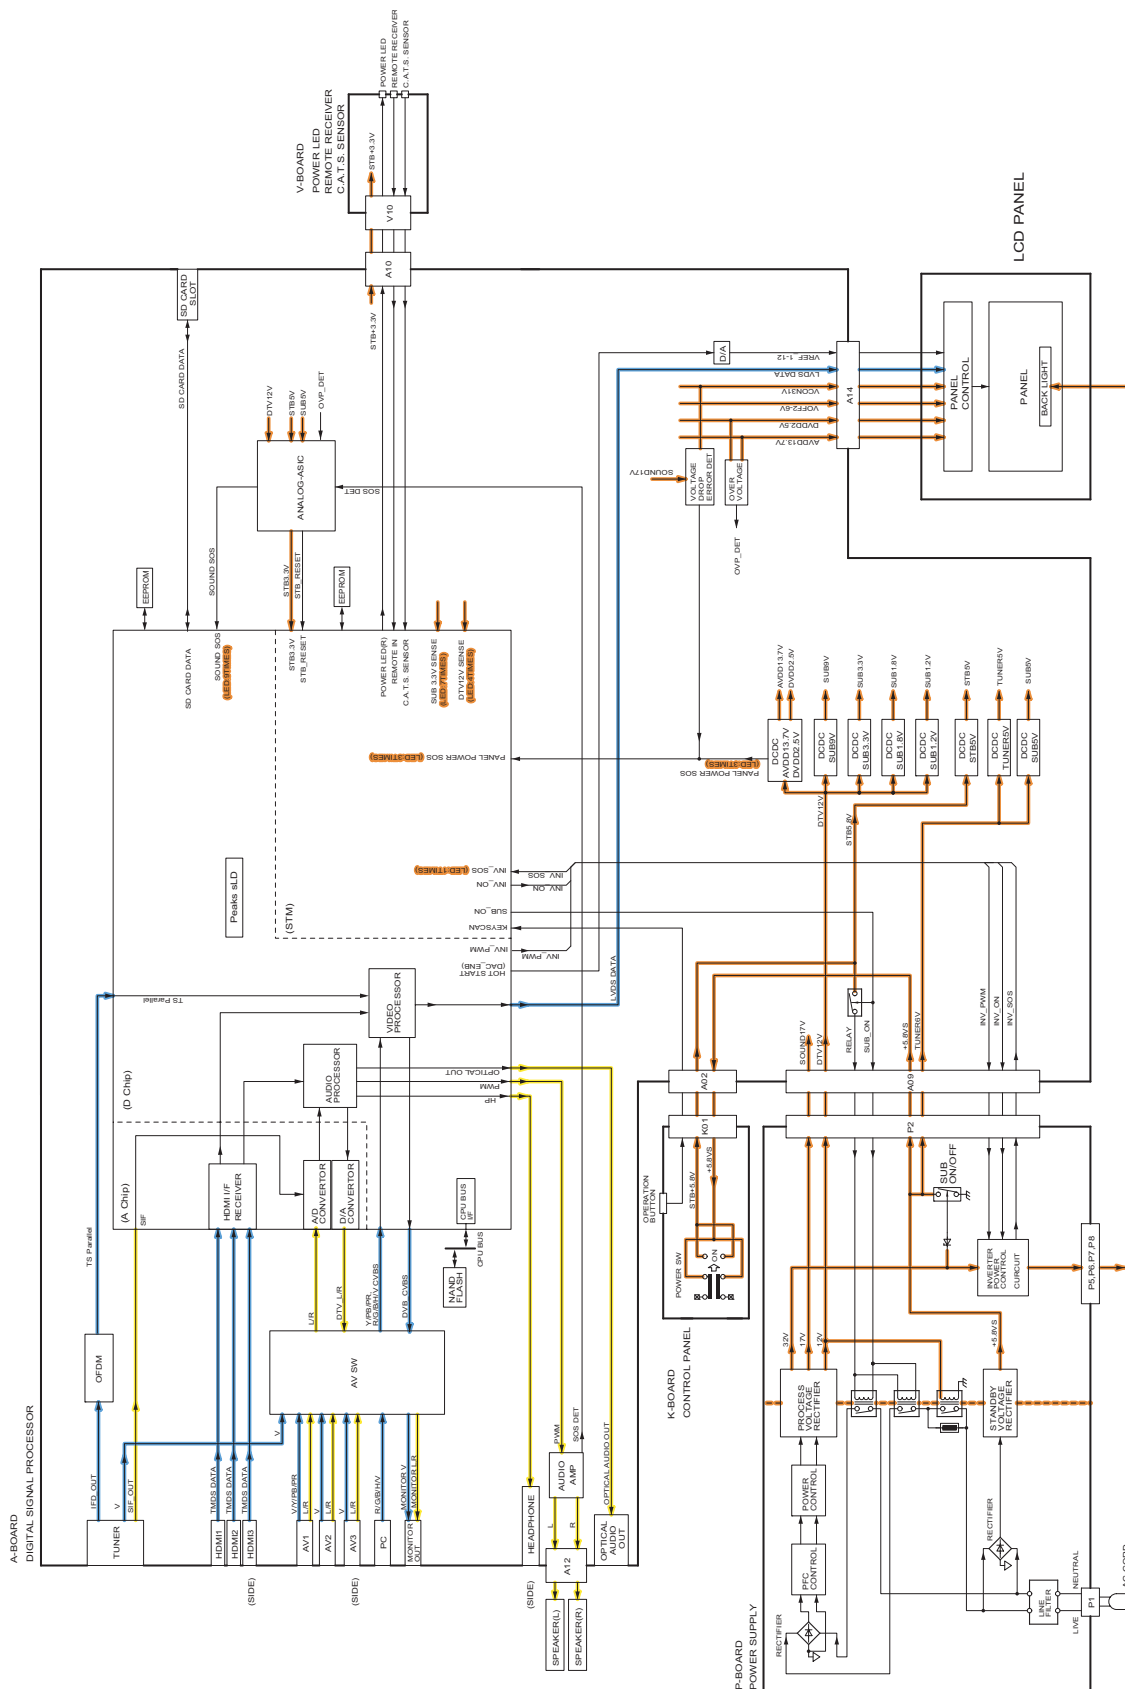


10 Wiring Connection Diagram

- 1. Wiring No. 1 ~ No. 5
- 2. Remove dust of terminal of LVDS and PB connector. (by ion blow) Pos. A14.
- 3. Insert LVDS into Pos.A14.

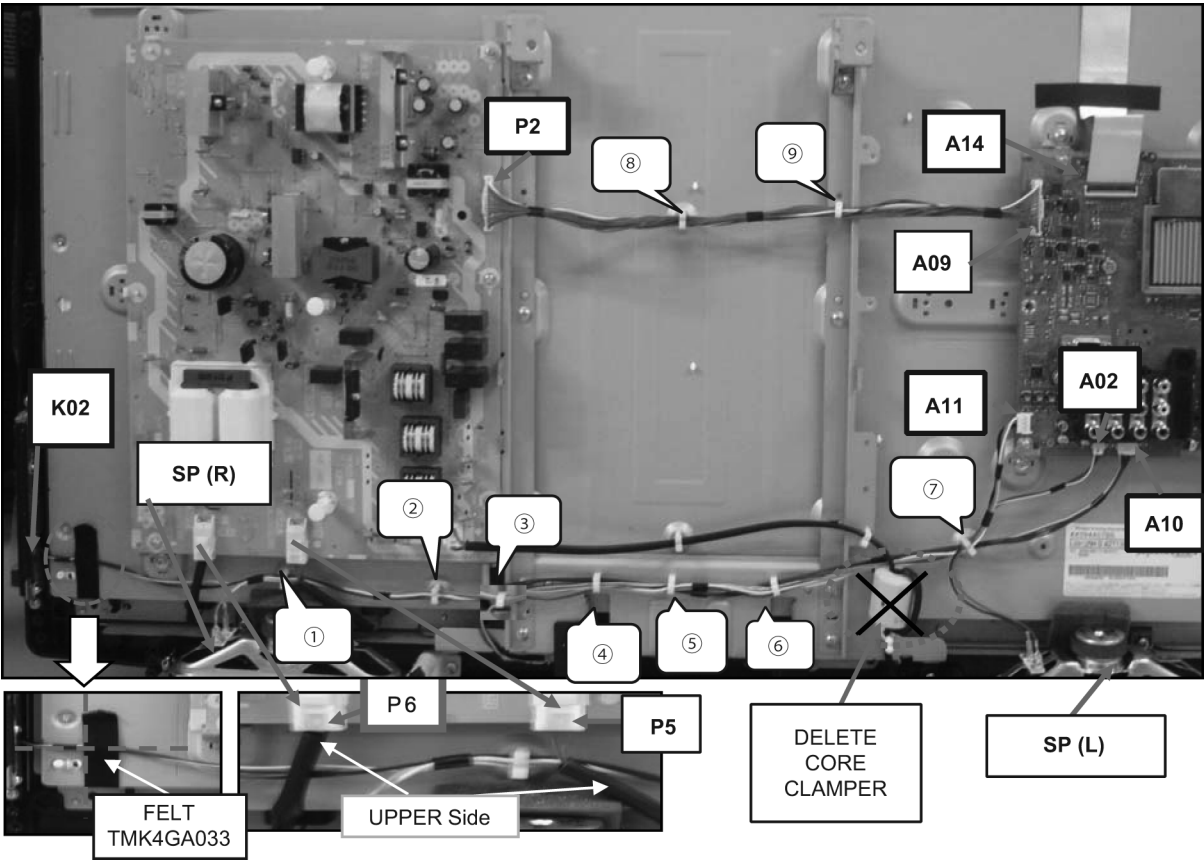

Wire		Clamper								
		1	2	3	4	5	6	7	8	9
No.1	A09 - P2								●	●
No.2	A10 - V10			●	●	●	●	●		
No.3	A02 - K02	●	●	●	●	●	●	●		
No.4	A11 - SP (L)							●		
No.5	A11 - SP (R)	●	●	●	●	●	●	●		

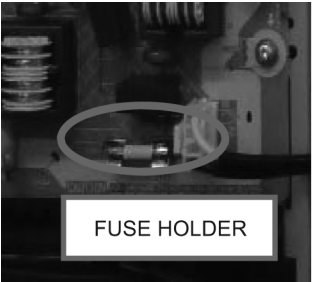

SAFETY

Insert the fuse so that the indication "5A" can be seen from above.
Insert the fuse surely to not distort its holder.
Insert the fuse surely to not put on the stopper of its holder.



11 Schematic Diagram

11.1. Schematic Diagram Notes

Notes:

1. **Resistor**
Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).
2. **Capacitor**
Unit of capacitance is μ F, unless otherwise noted.
3. **Coil**
Unit of inductance is H, unless otherwise noted.
4. **Test Point**
 : Test Point position
5. **Earth Symbol**
 : Chassis Earth (Cold)  : Line Earth (Hot)
6. **Voltage Measurement**
Voltage is measured by a DC voltmeter.
Conditions of the measurement are the following:






Power Source	AC110-127V, 60Hz
Receiving Signal	Colour Bar signal (RF)
All customer's controls	Maximum positions
7. When arrow mark (↗) is found, connection is easily found from the direction of arrow.
8. Indicates the major signal flow. : Video ➡ Audio ⇌
9. This schematic diagram is the latest at the time of printing and subject to change without notice.


Remarks:


1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.
The circuit is defined by HOT and COLD indications in the schematic diagram. Take the following precautions.
All circuits, except the Power Circuit, are cold.
Precautions
 - a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
 - b. Do not short- circuit the hot and cold circuits or a fuse may blow and parts may break.
 - c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously or a fuse may blow.
Connect the earth of instruments to the earth connection of the circuit being measured.
 - d. Make sure to disconnect the power plug before removing the chassis.

11.2. A Board

11.2.1. A Board - Sheet : 002 (1 / 4)

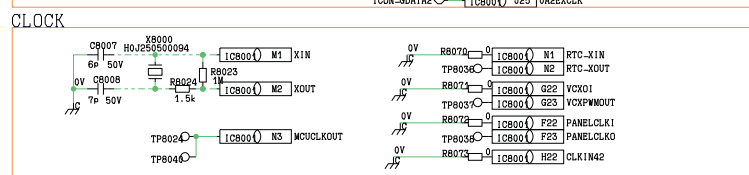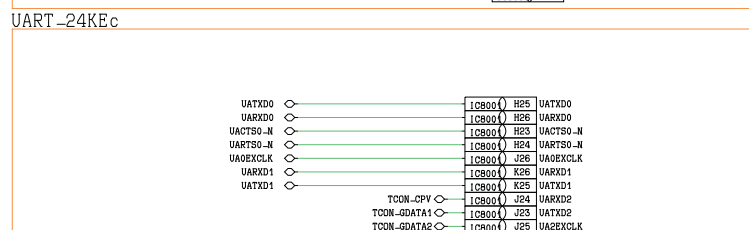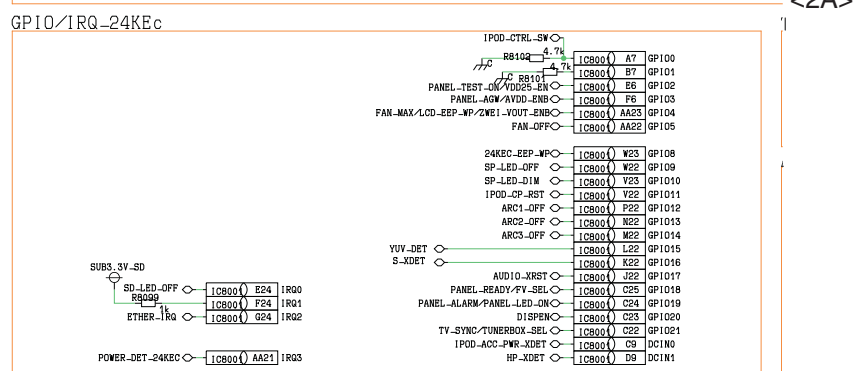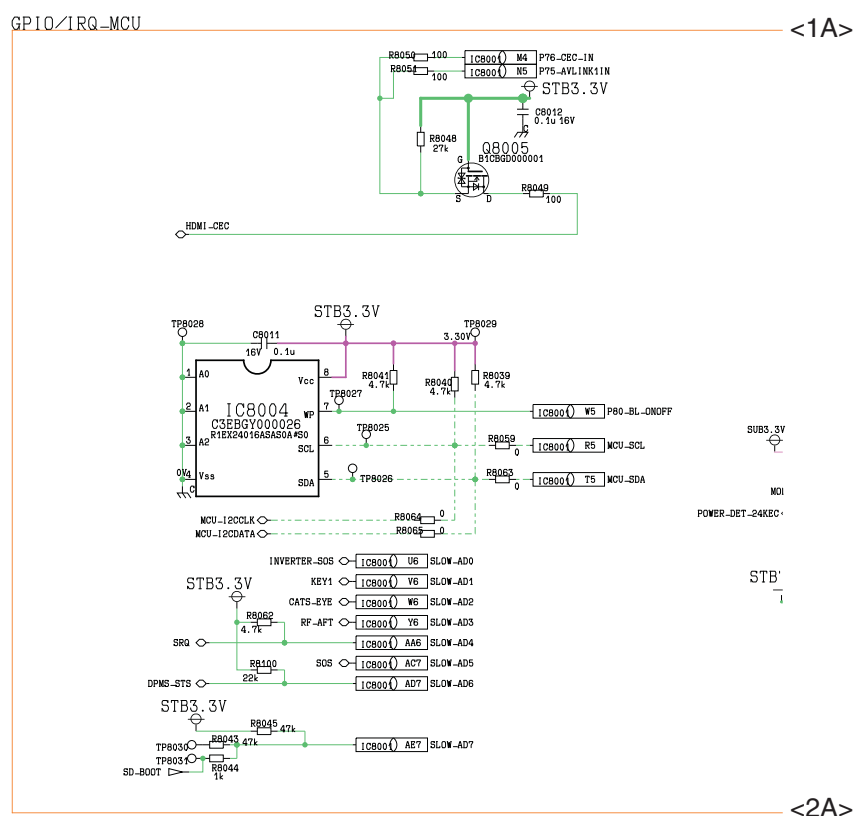


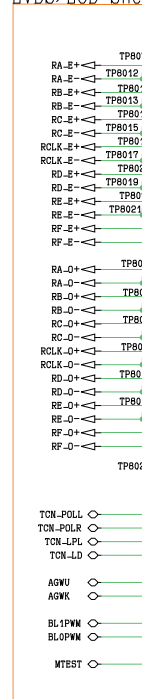

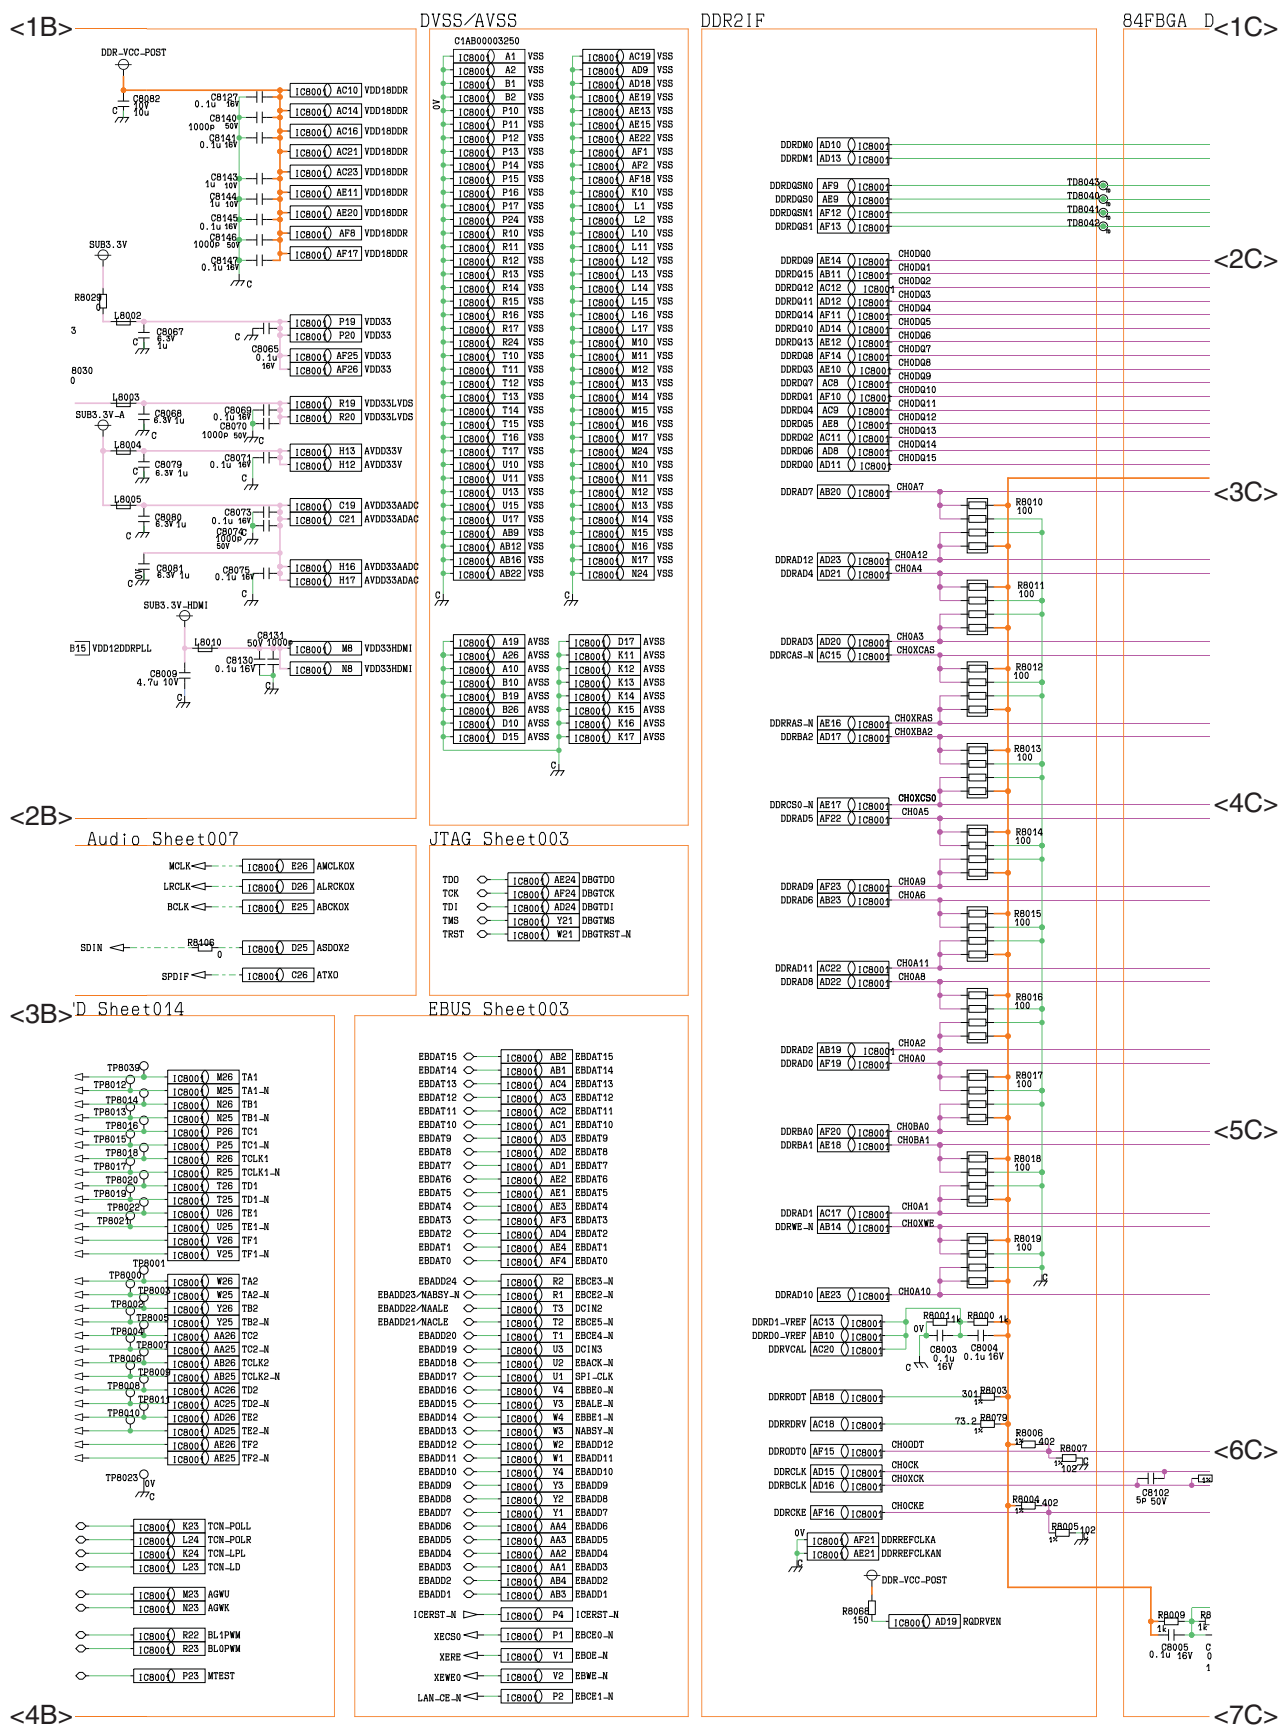

11.2.4. A Board - Sheet : 002 (4 / 4)

<1C> FBGA DDR2 800Mz x 16bit

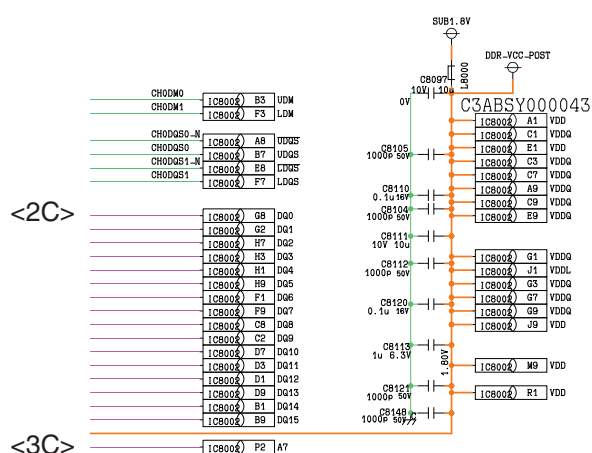

<2C>

<3C>

<4C>


<5C>

<6C>

<7C>


SHEET 002
Nile-TCON
DDR2

11.2.5. A Board - Sheet : 003 (1 / 3)

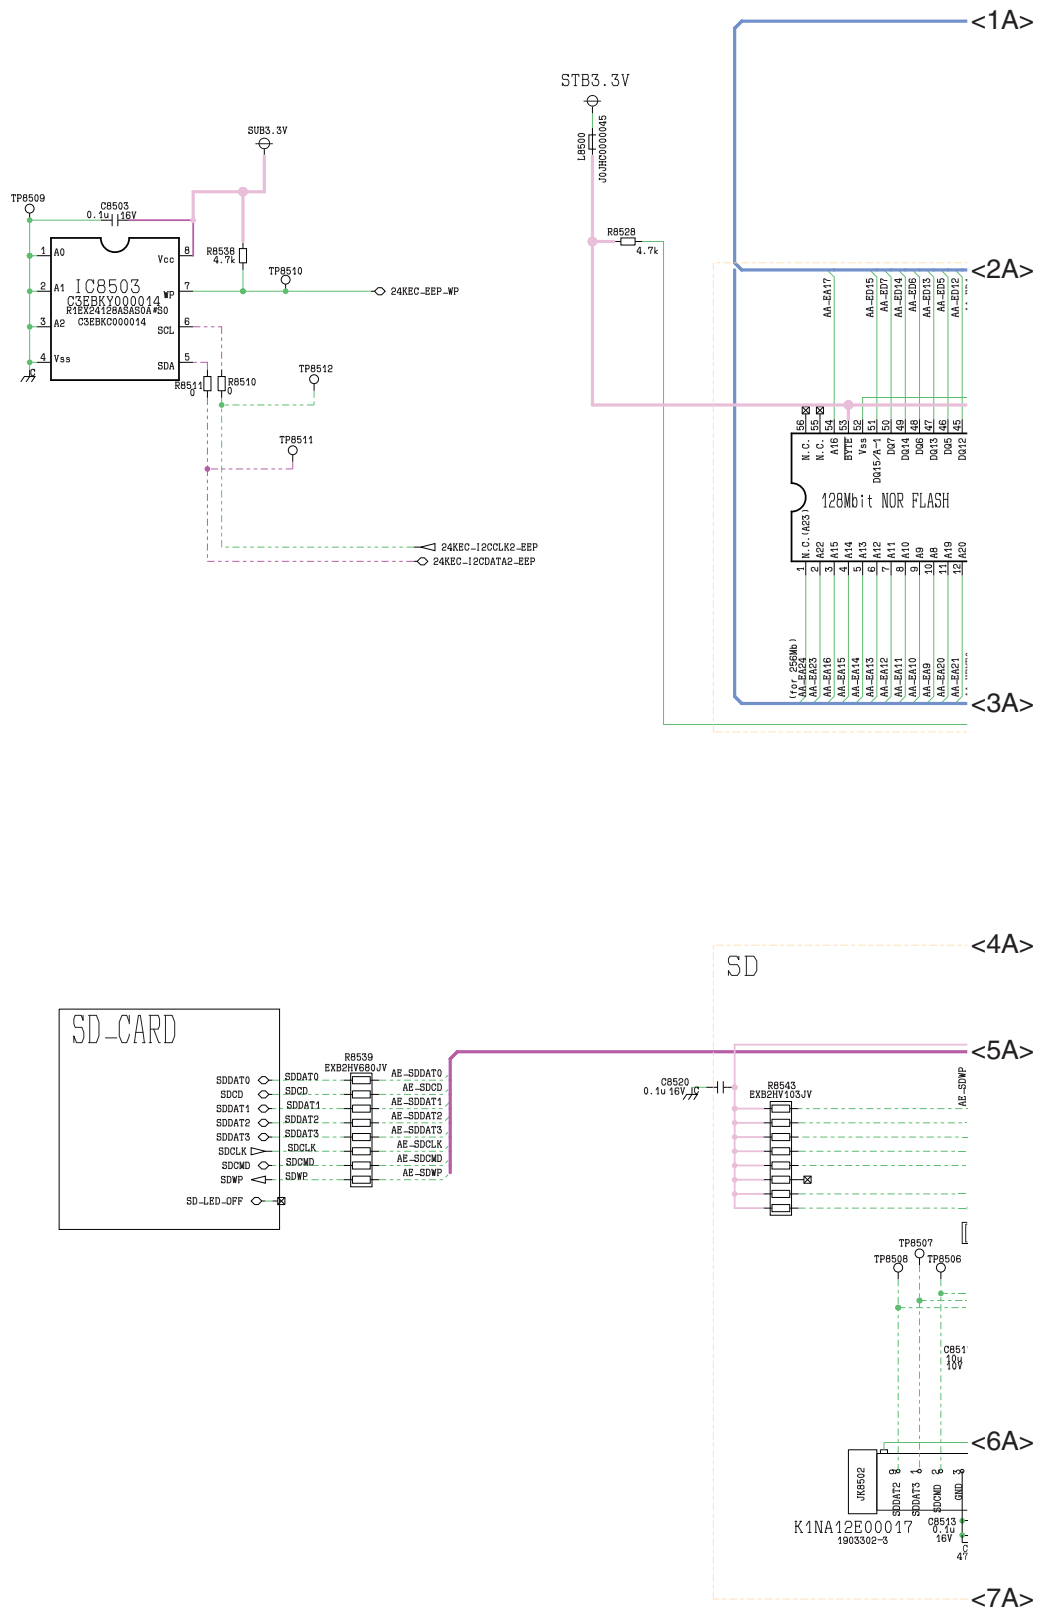




11.2.7. A Board - Sheet : 003 (3 / 3)

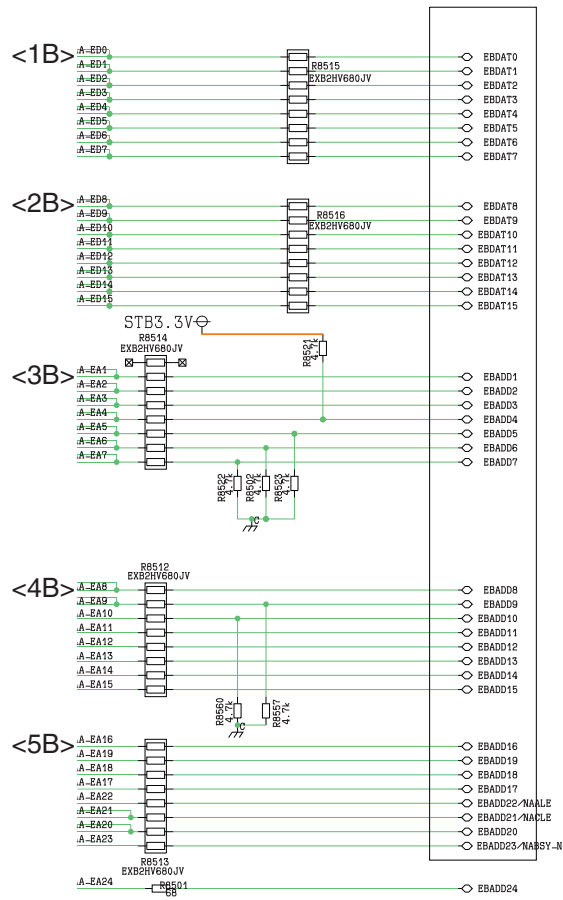

SHEET 003
DIGITAL SD-PDF

11.2.8. A Board - Sheet : 005 (1 / 3)

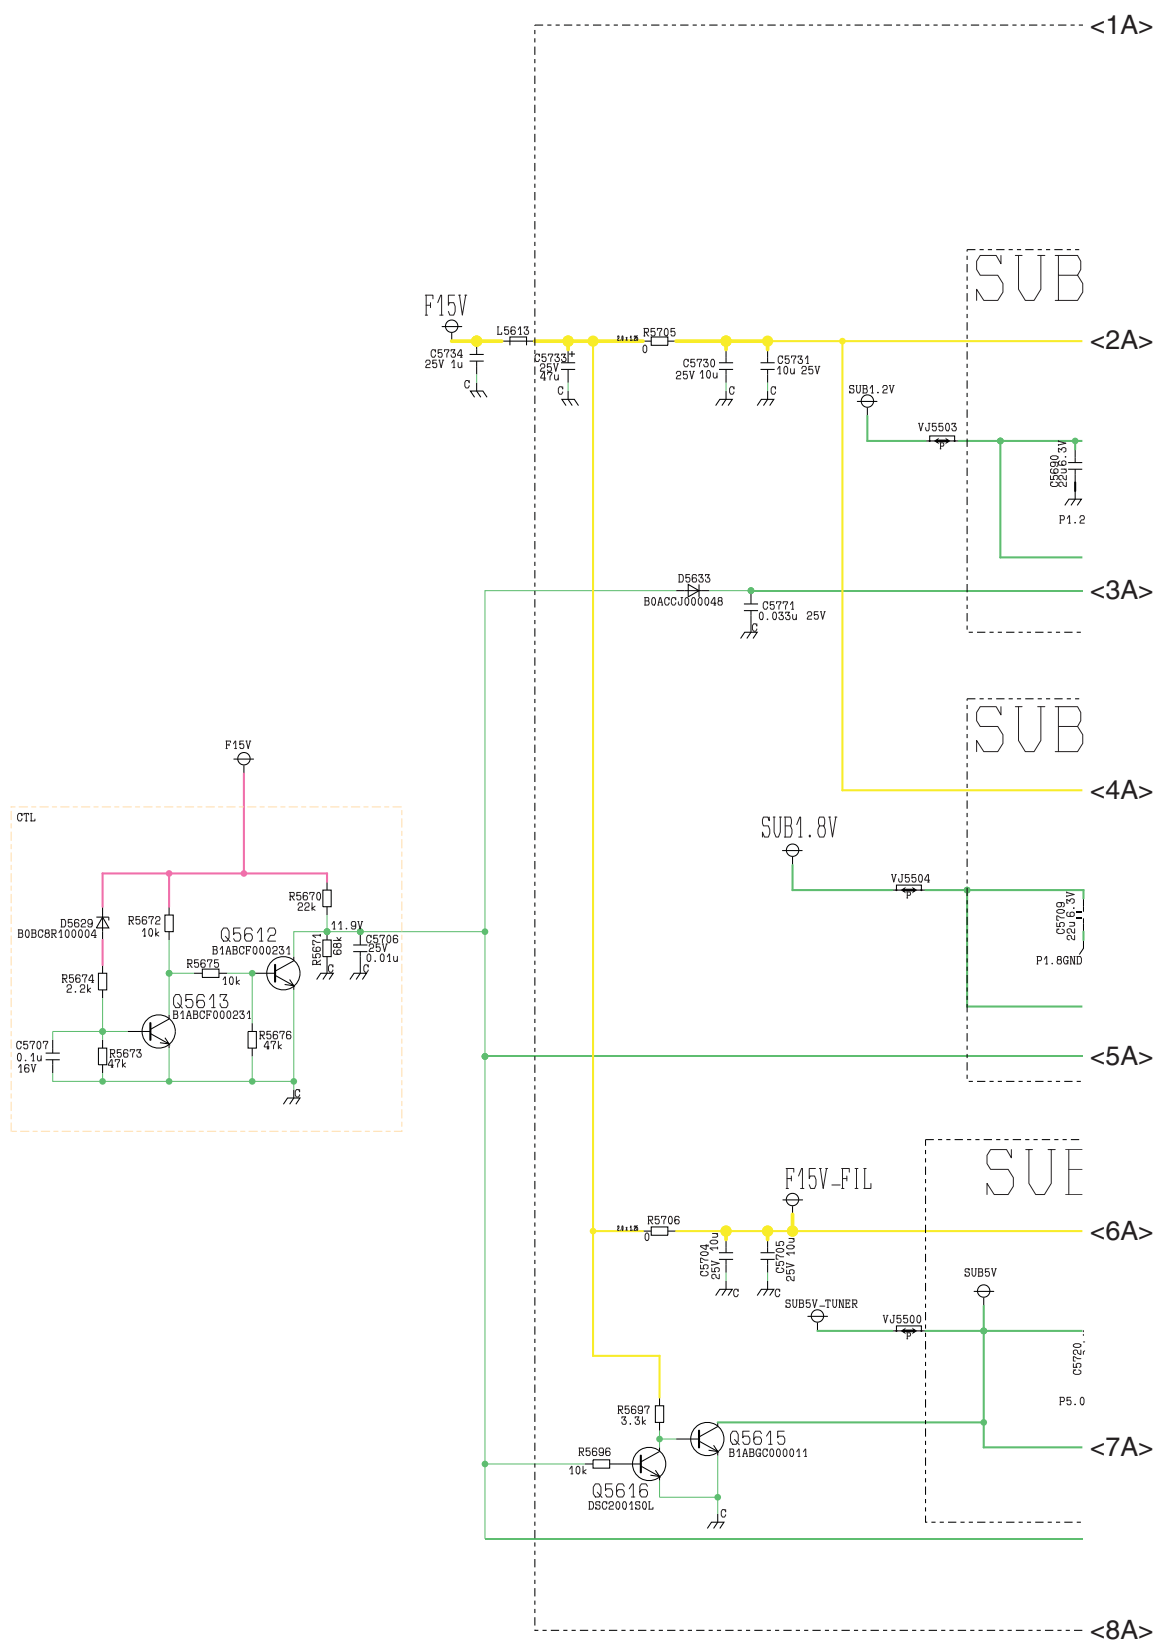


11.2.9. A Board - Sheet : 005 (2 / 3)

<1A>

JB1.2V


<2A>

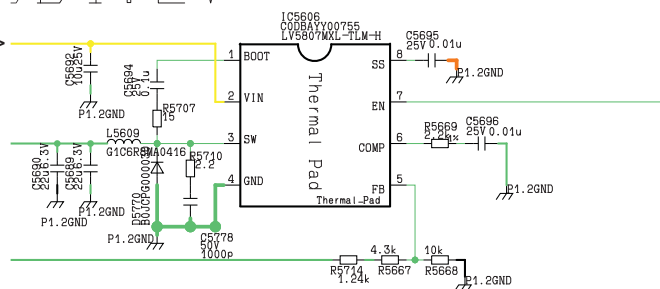

<3A>

JB1.8V


<4A>

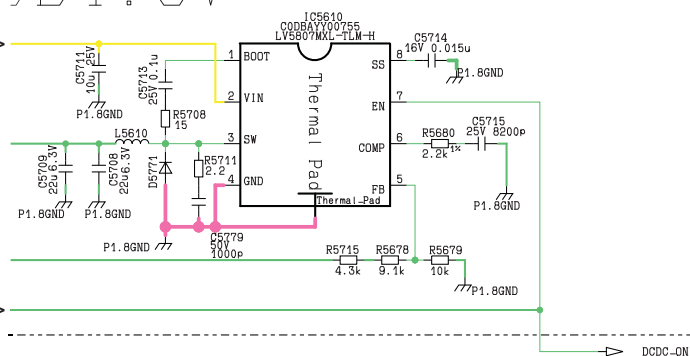

<5A>

UB5V

<6A>

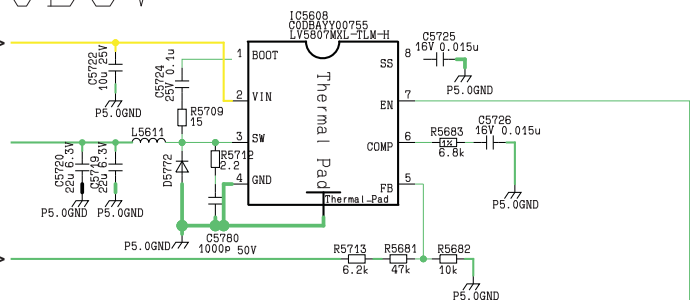


<7A>

<8A>


<1B>

SUB3.3V

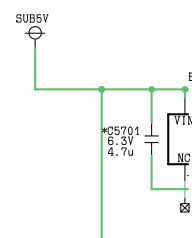


<2B>

SUB3.3V-A

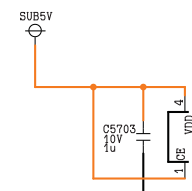

<3B>


SUB3.3V-HDI

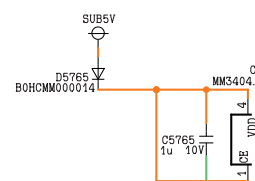

<4B>


11.2.10. A Board - Sheet : 005 (3 / 3)

<1B>

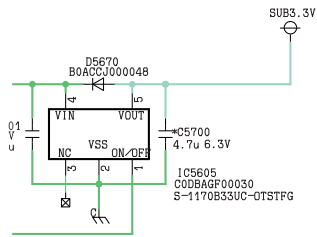


SHEET 005


<2B>

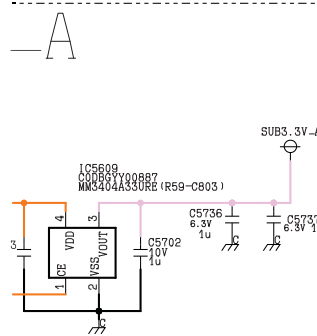

SUB3.3V-SD

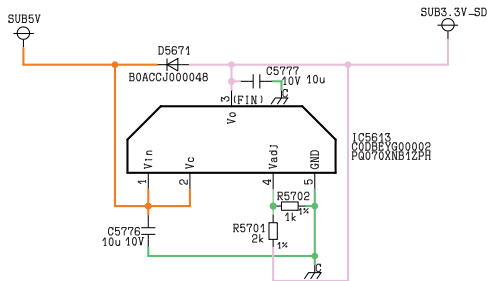

<3B>

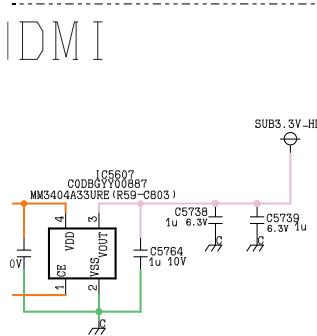


<4B>


11.2.11. A Board - Sheet : 007 (1 / 4)

ASIA model

<1A>

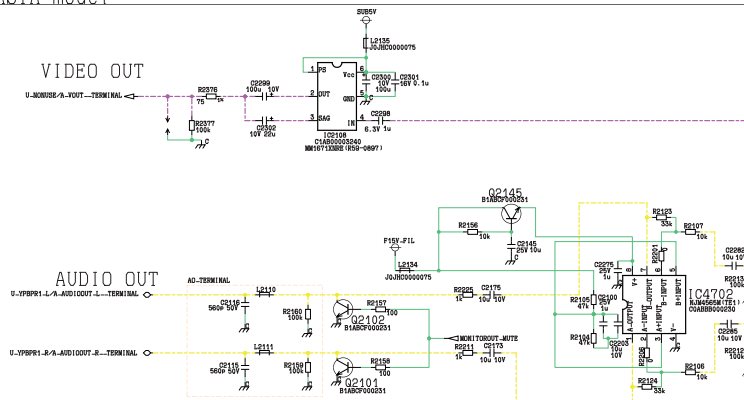


<2A>

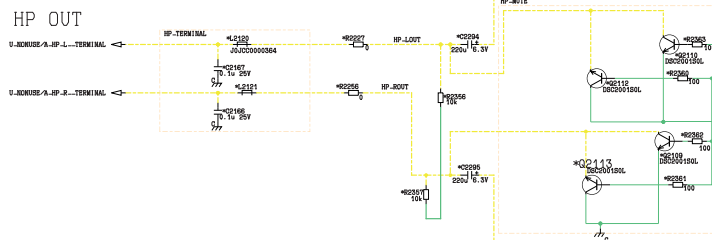

<3A>


PC MODEL

<4A>


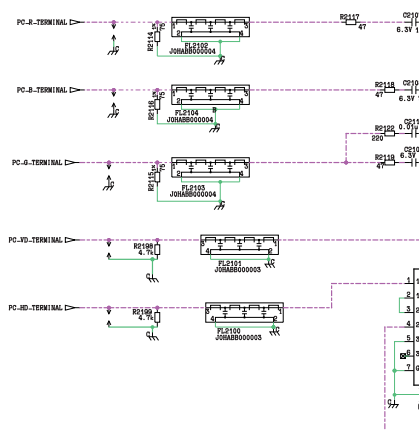


<5A>

<6A>

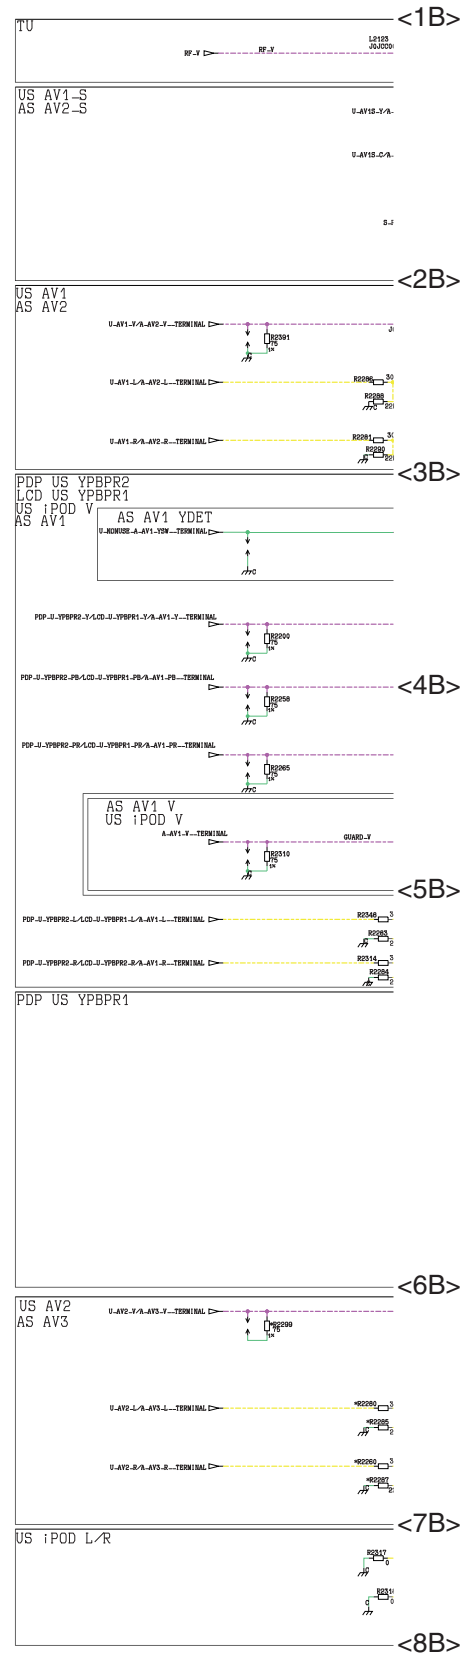


11.2.13. A Board - Sheet : 007 (3 / 4)

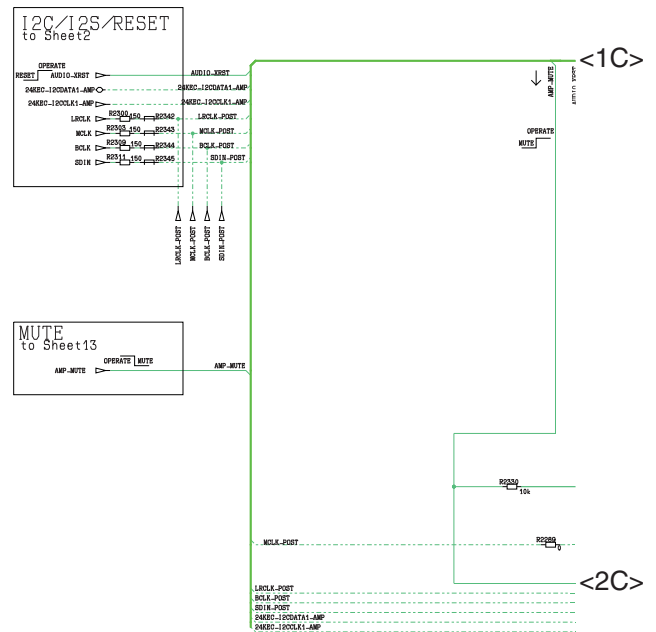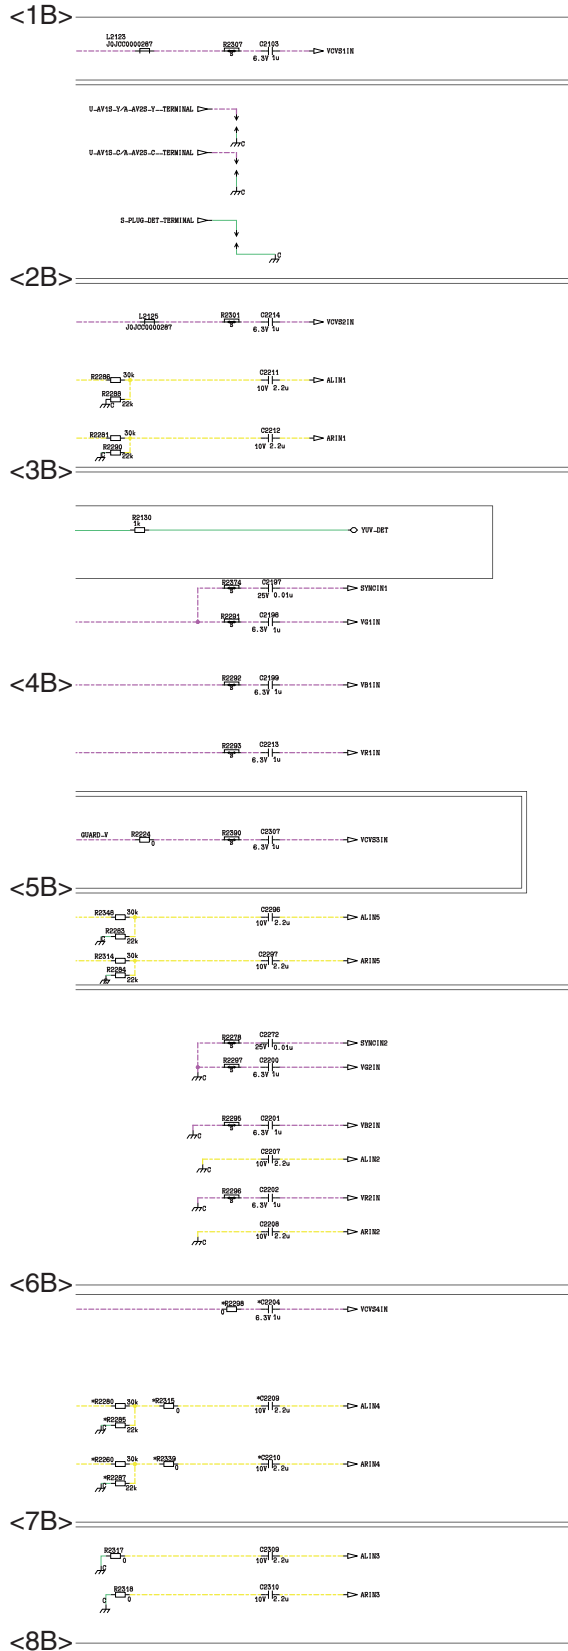


The schematic diagram illustrates the internal circuitry of the IC2106 TAS5709PHPR C1AB0003069. It shows the connection of the IC2106 to the IC2105 and IC2107. The IC2106 is a TAS5709PHPR, and the IC2107 is a TAS5709PHPR. The diagram includes various components such as resistors, capacitors, and integrated circuits, with labels for pins and components. The IC2106 is connected to the IC2105 and IC2107 via a series of resistors and capacitors. The IC2106 is also connected to a 5V supply and a 10V supply. The IC2107 is connected to a 5V supply and a 10V supply. The diagram shows the internal circuitry of the IC2106, including the input stage, the output stage, and the feedback network. The IC2106 is a TAS5709PHPR, and the IC2107 is a TAS5709PHPR. The diagram includes various components such as resistors, capacitors, and integrated circuits, with labels for pins and components. The IC2106 is connected to the IC2105 and IC2107 via a series of resistors and capacitors. The IC2106 is also connected to a 5V supply and a 10V supply. The IC2107 is connected to a 5V supply and a 10V supply. The diagram shows the internal circuitry of the IC2106, including the input stage, the output stage, and the feedback network.

11.2.15. A Board - Sheet : 009 (1 / 4)

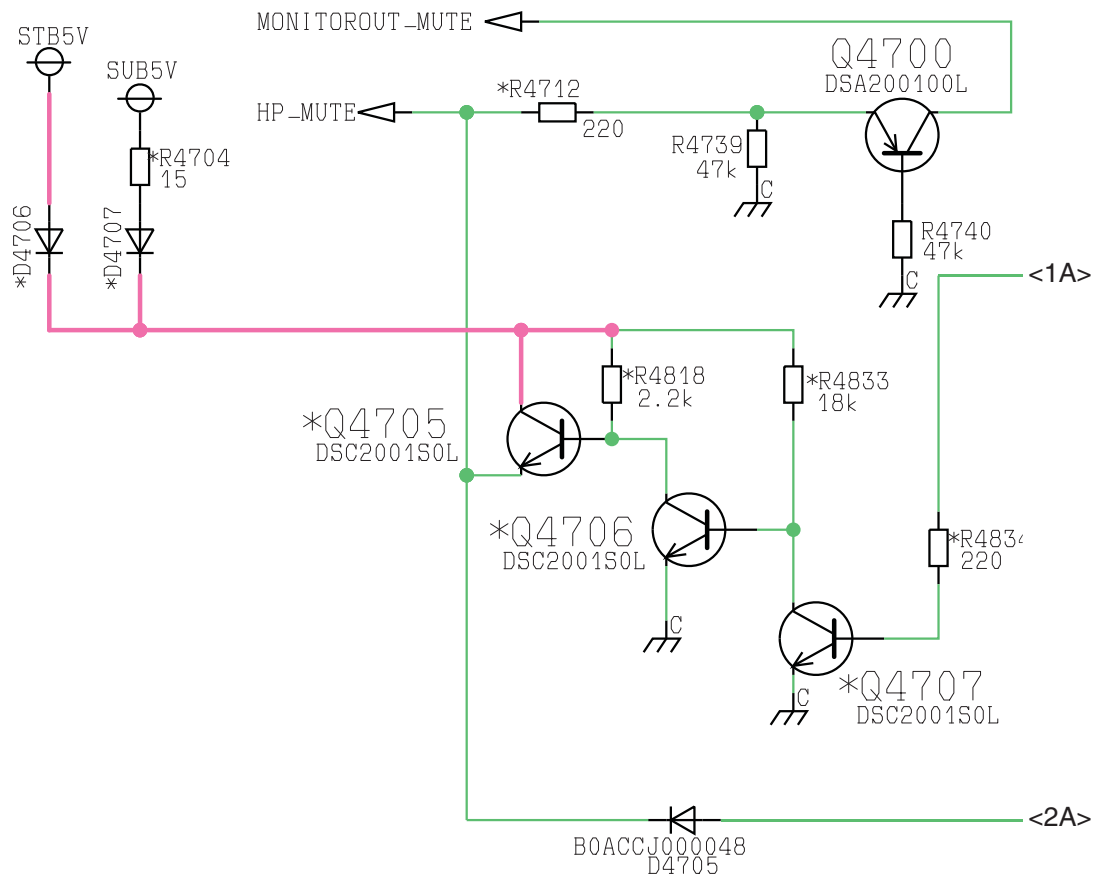


11.2.16. A Board - Sheet : 009 (2 / 4)

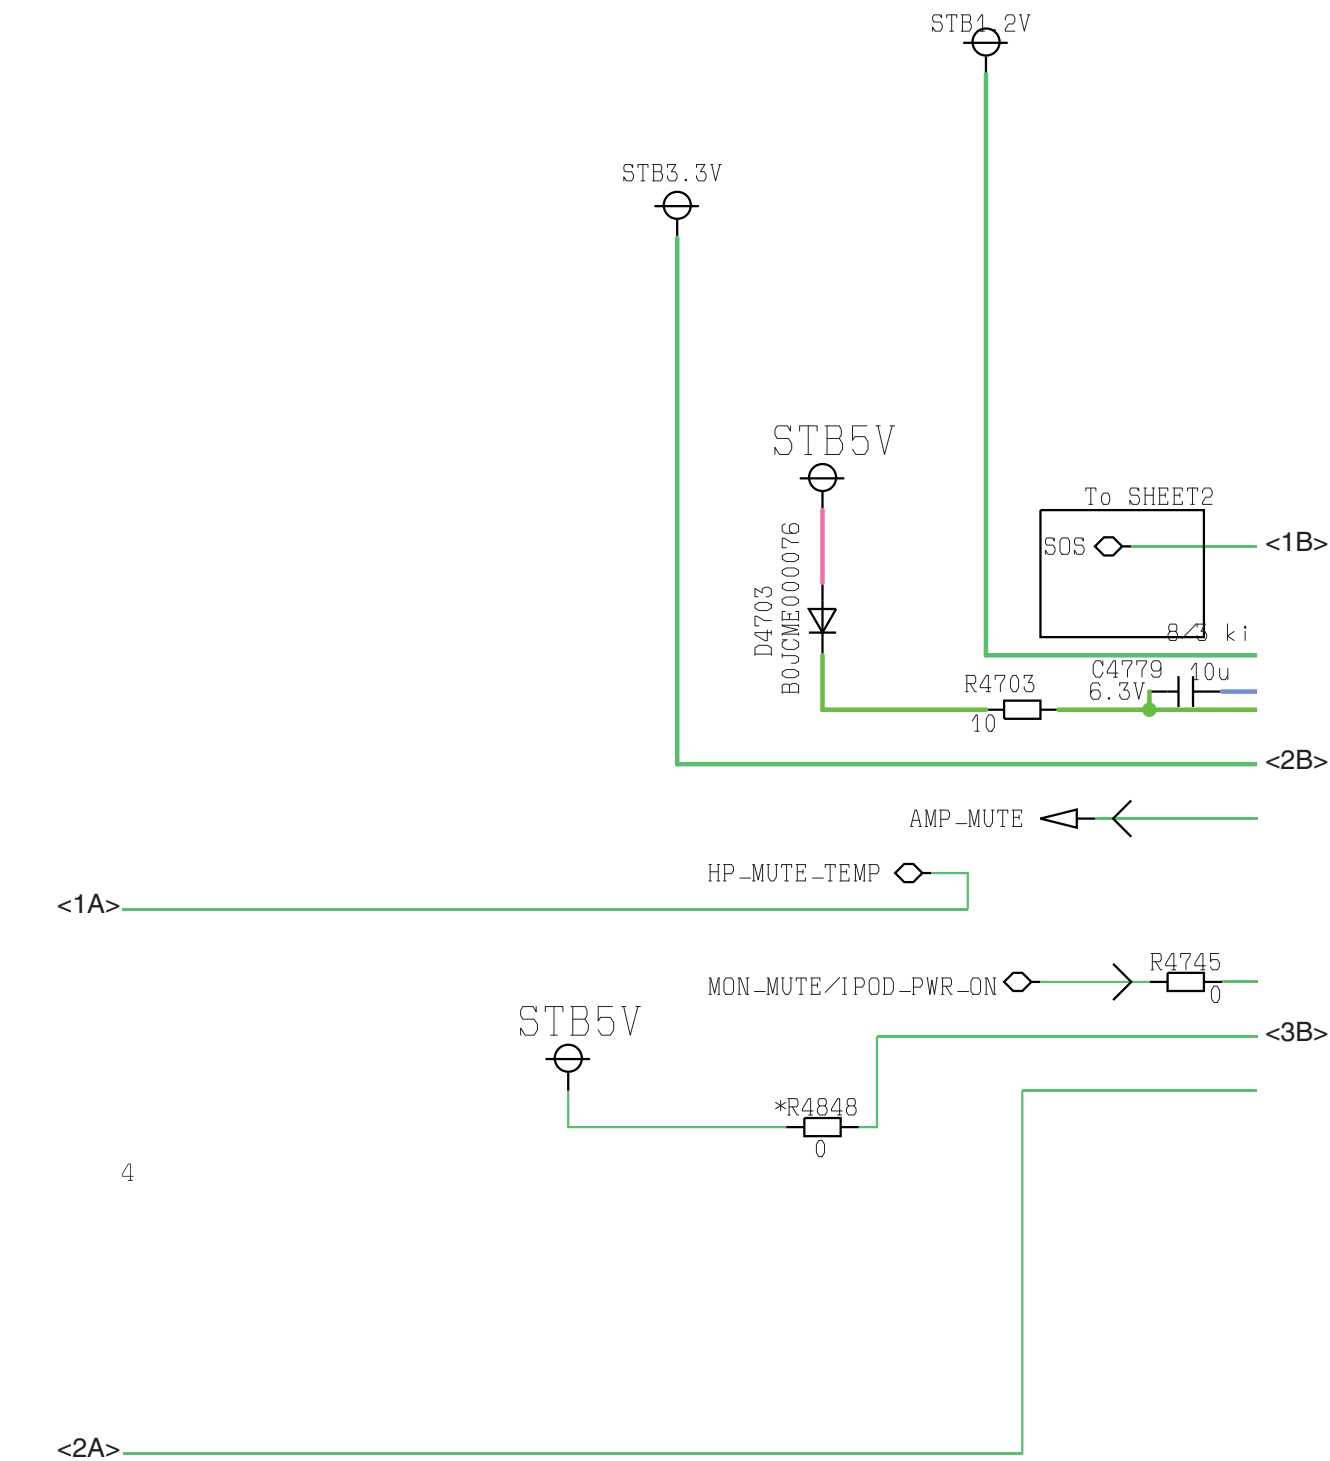


11.2.17. A Board - Sheet : 009 (3 / 4)

Sheet

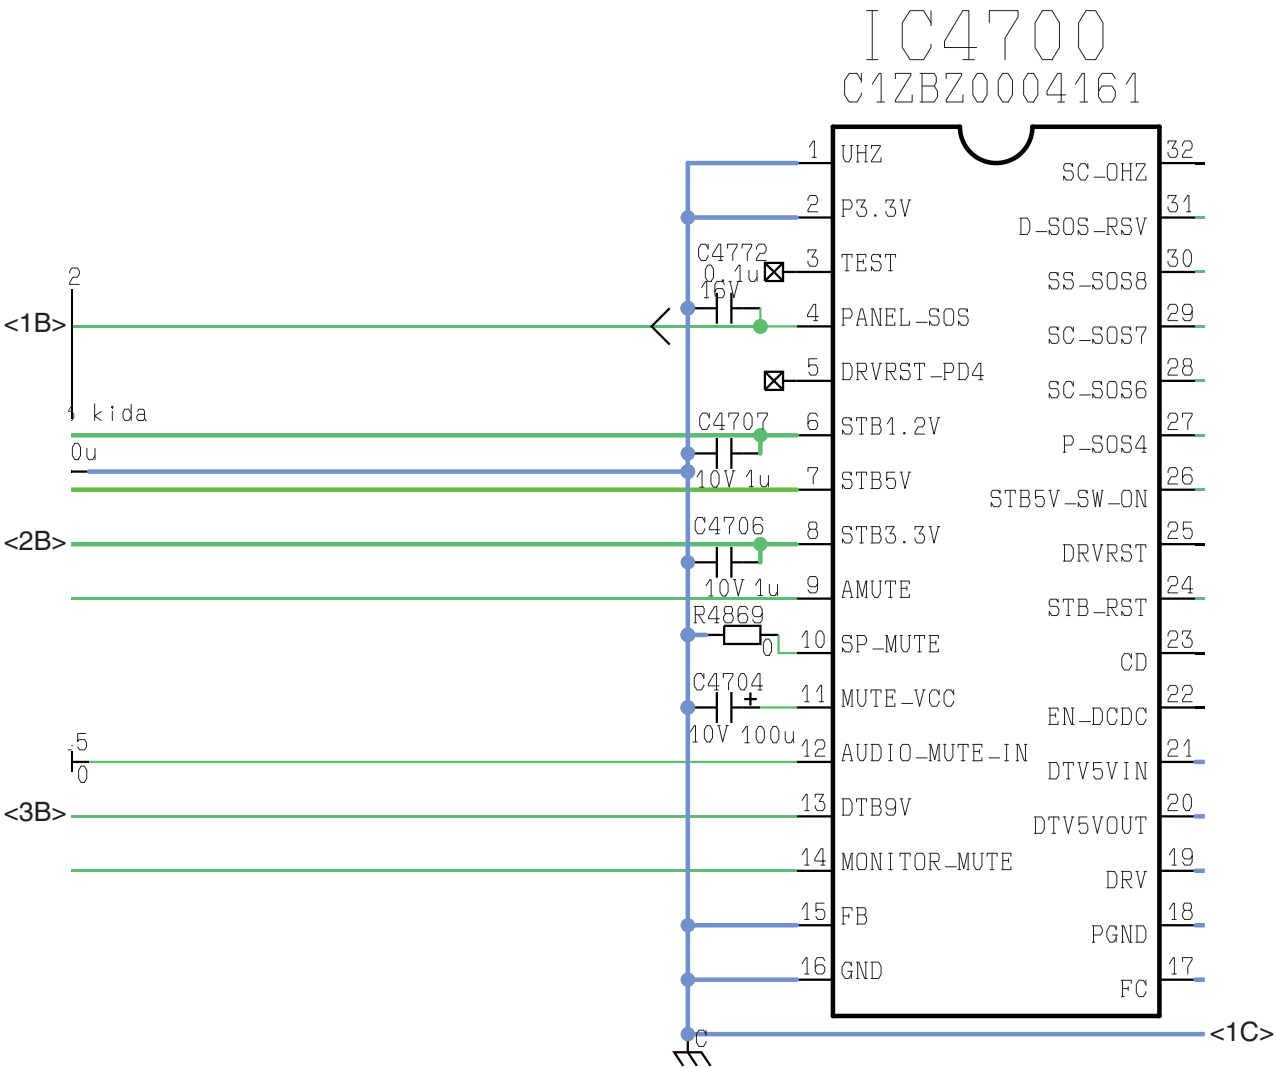


11.2.18. A Board - Sheet : 009 (4 / 4)


No. 009

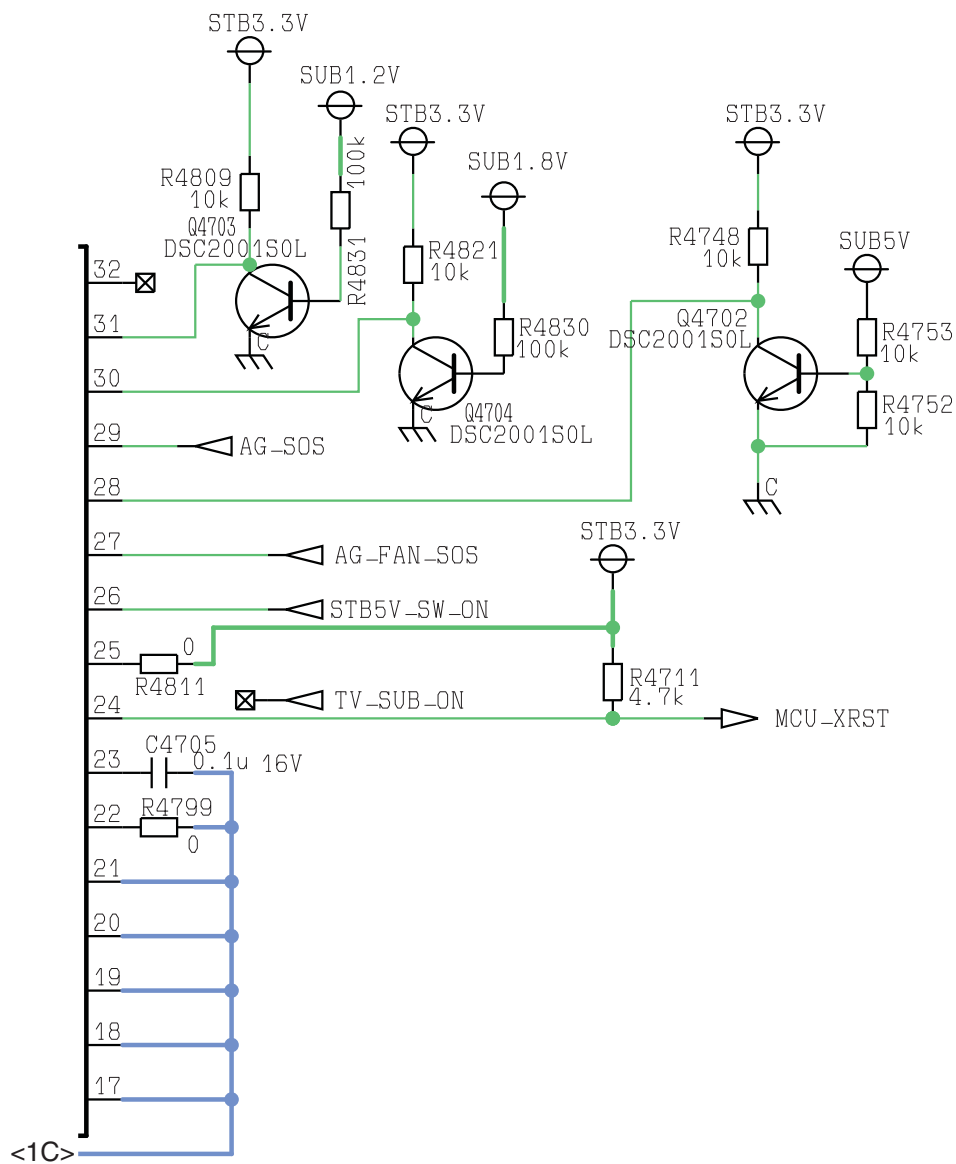


11.2.19. A Board - Sheet : 010 (1 / 6)

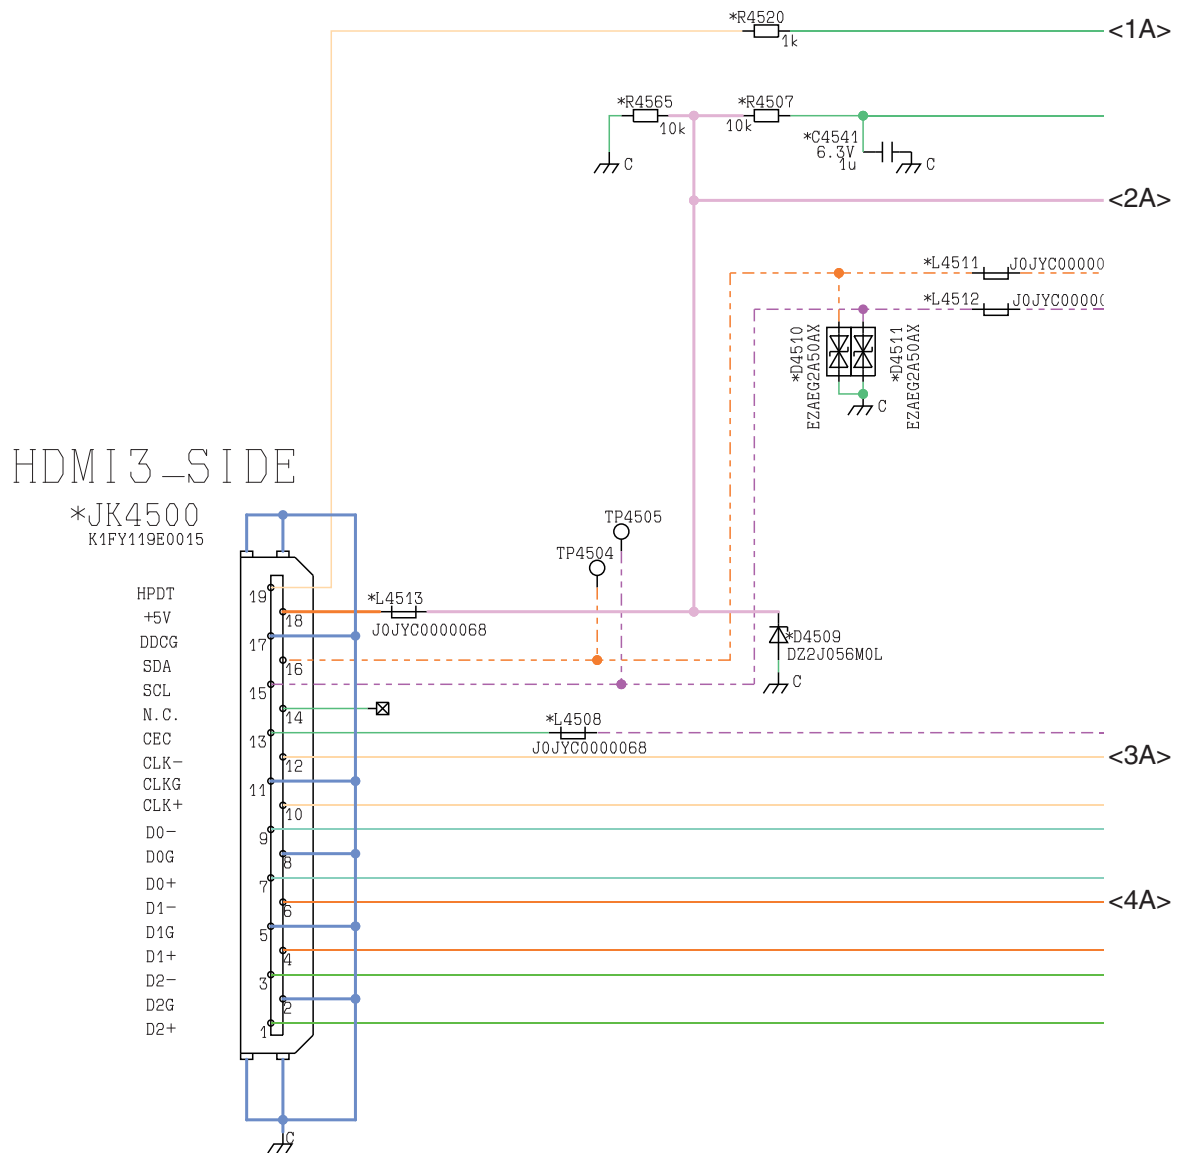


11.2.20. A Board - Sheet : 010 (2 / 6)

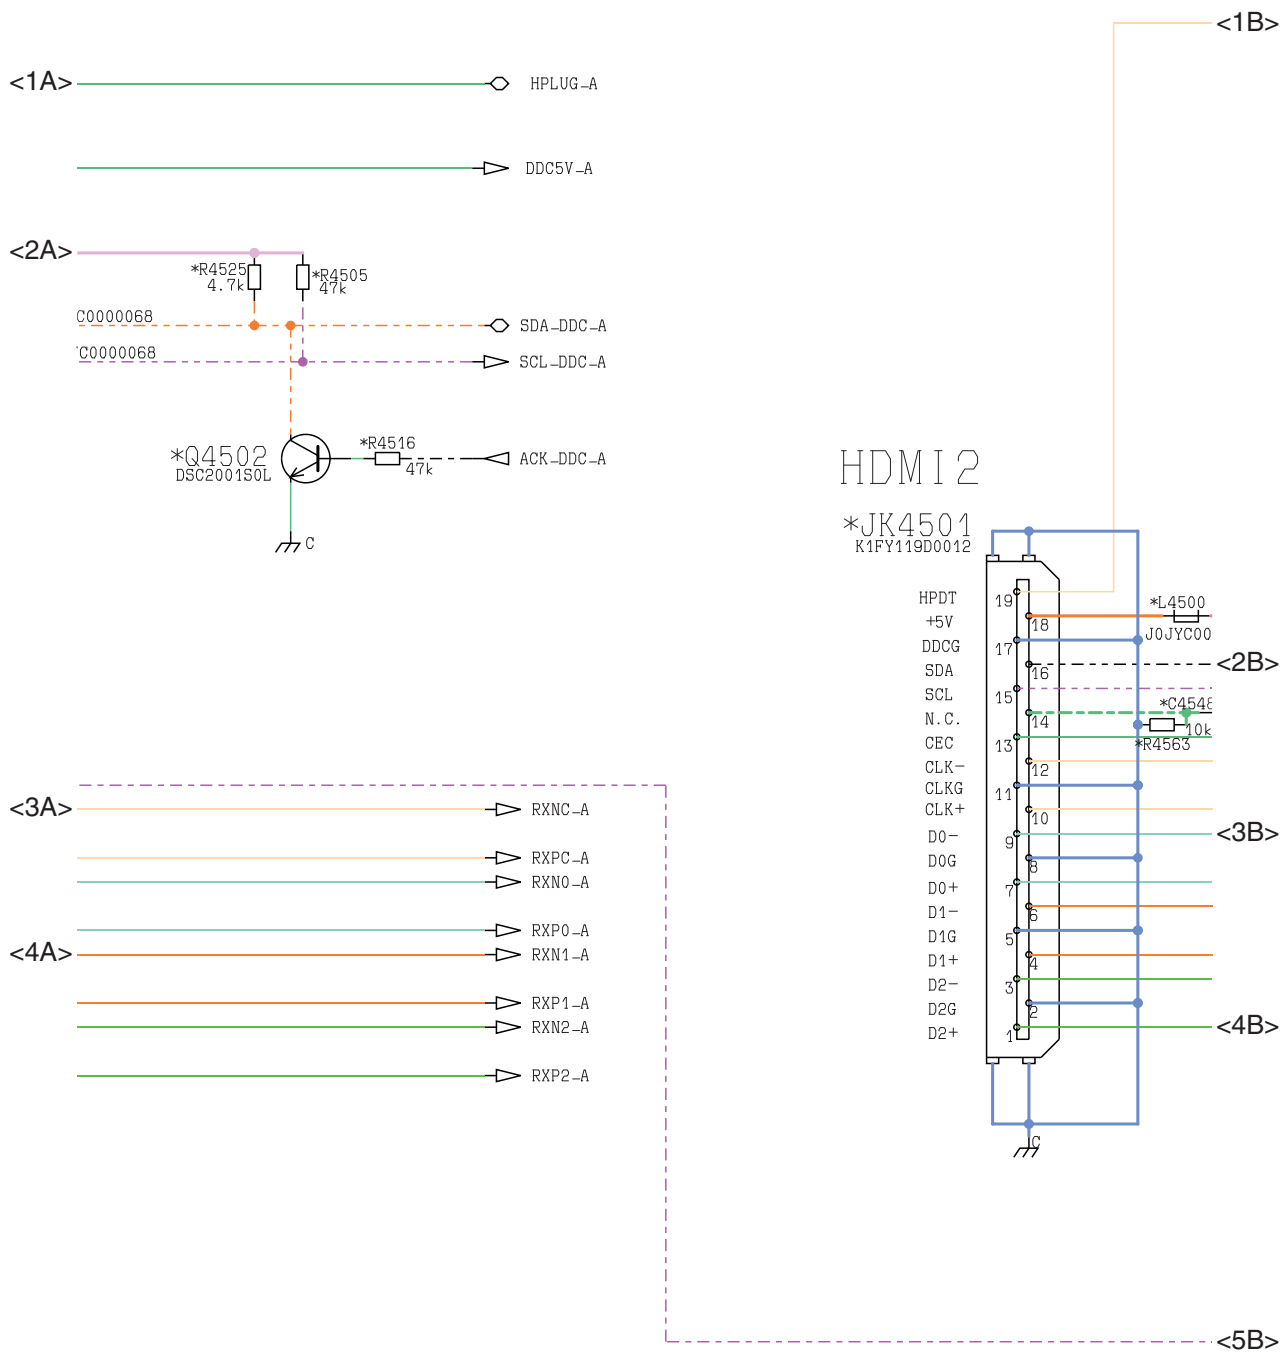


11.2.21. A Board - Sheet : 010 (3 / 6)

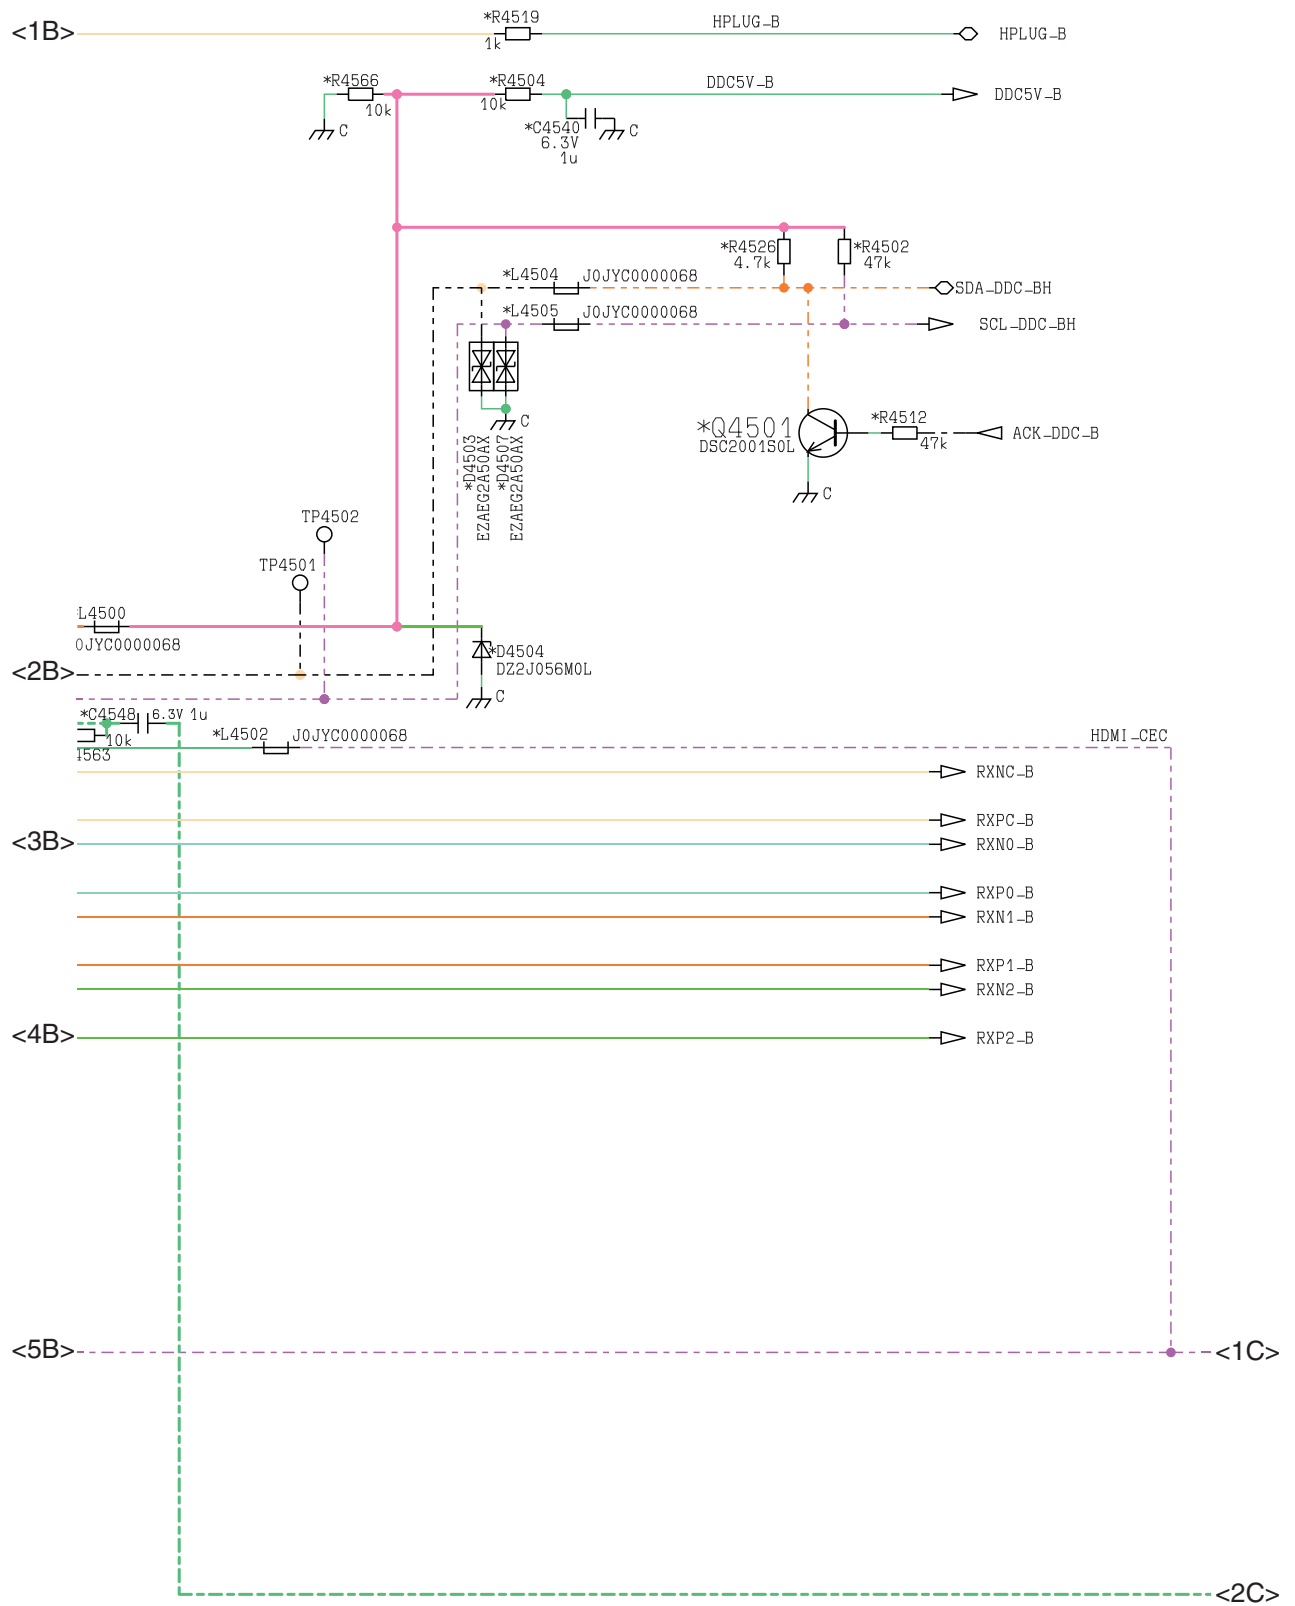


11.2.22. A Board - Sheet : 010 (4 / 6)

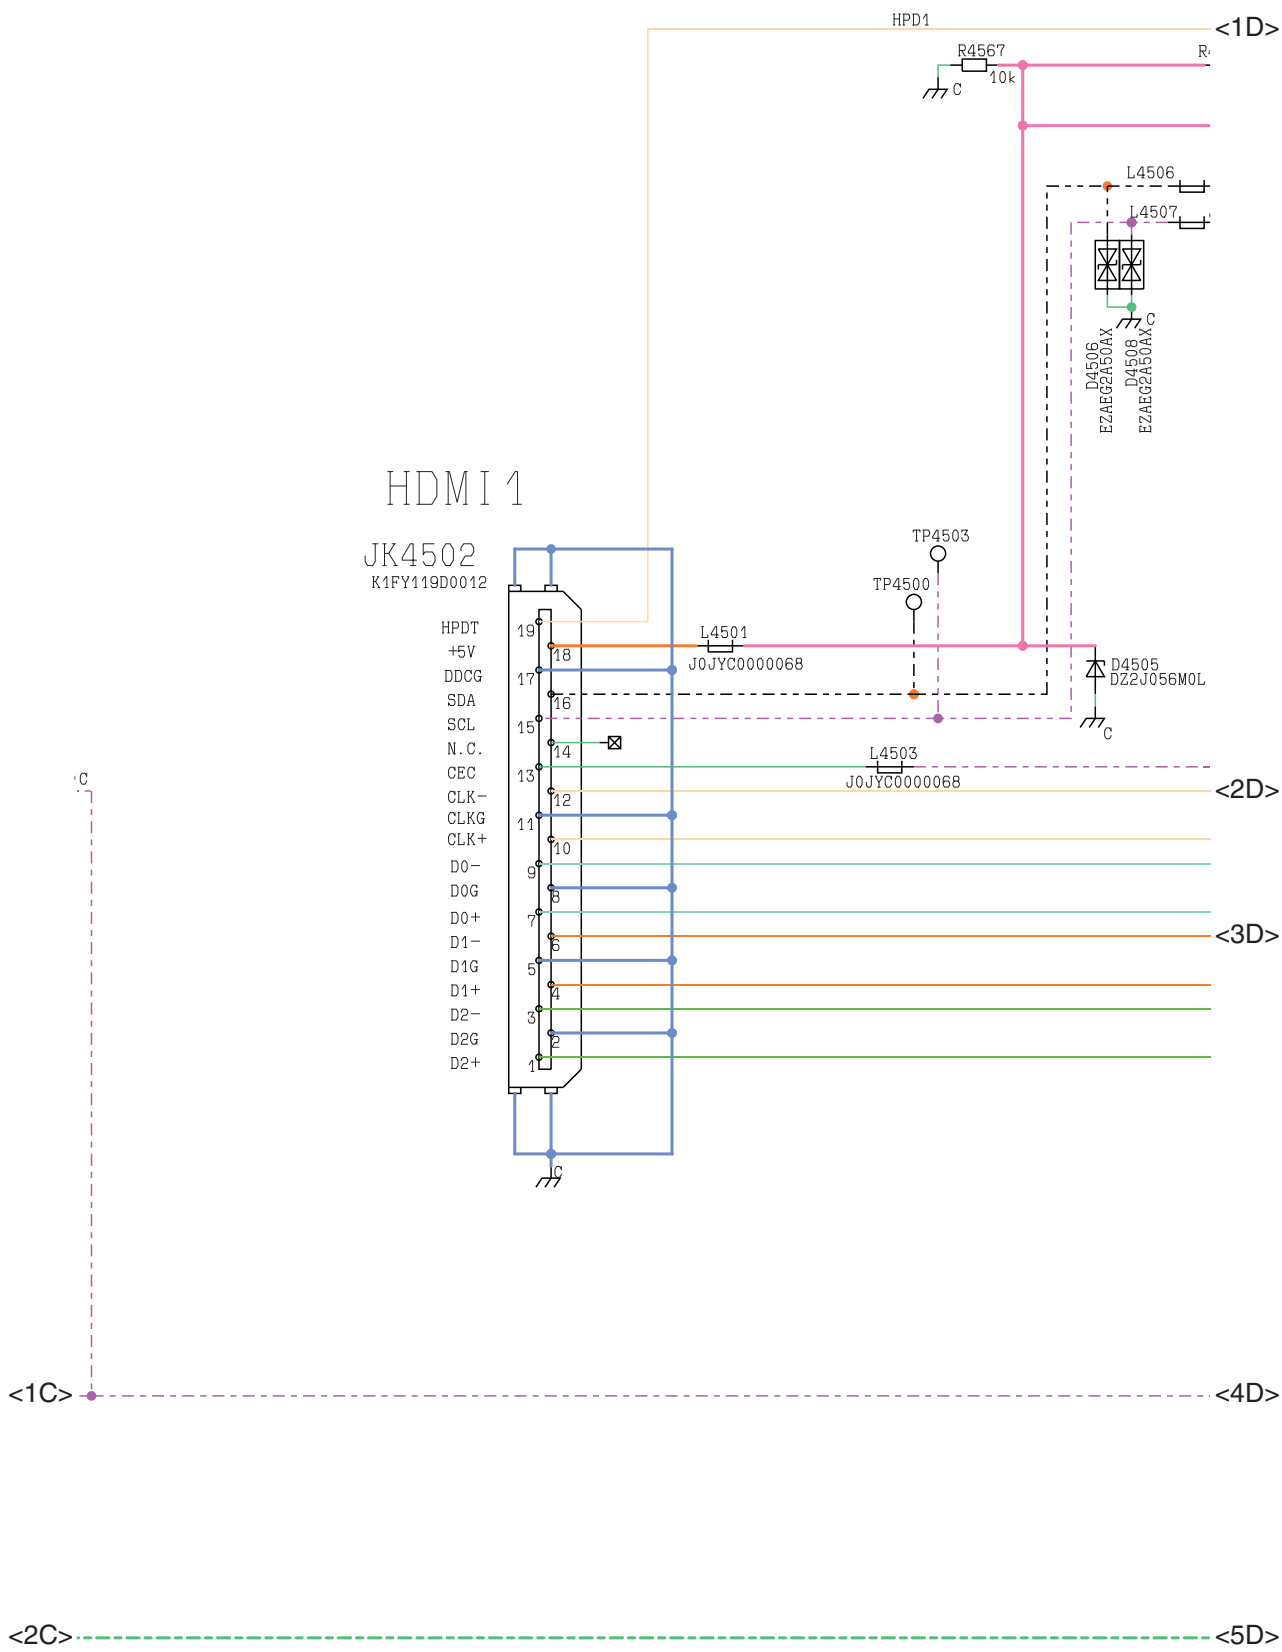

11.2.23. A Board - Sheet : 010 (5 / 6)

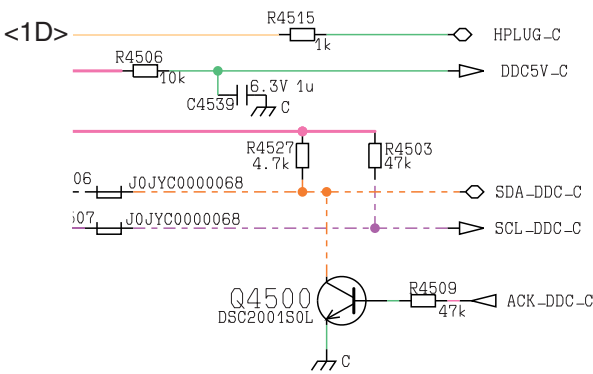


56M0L

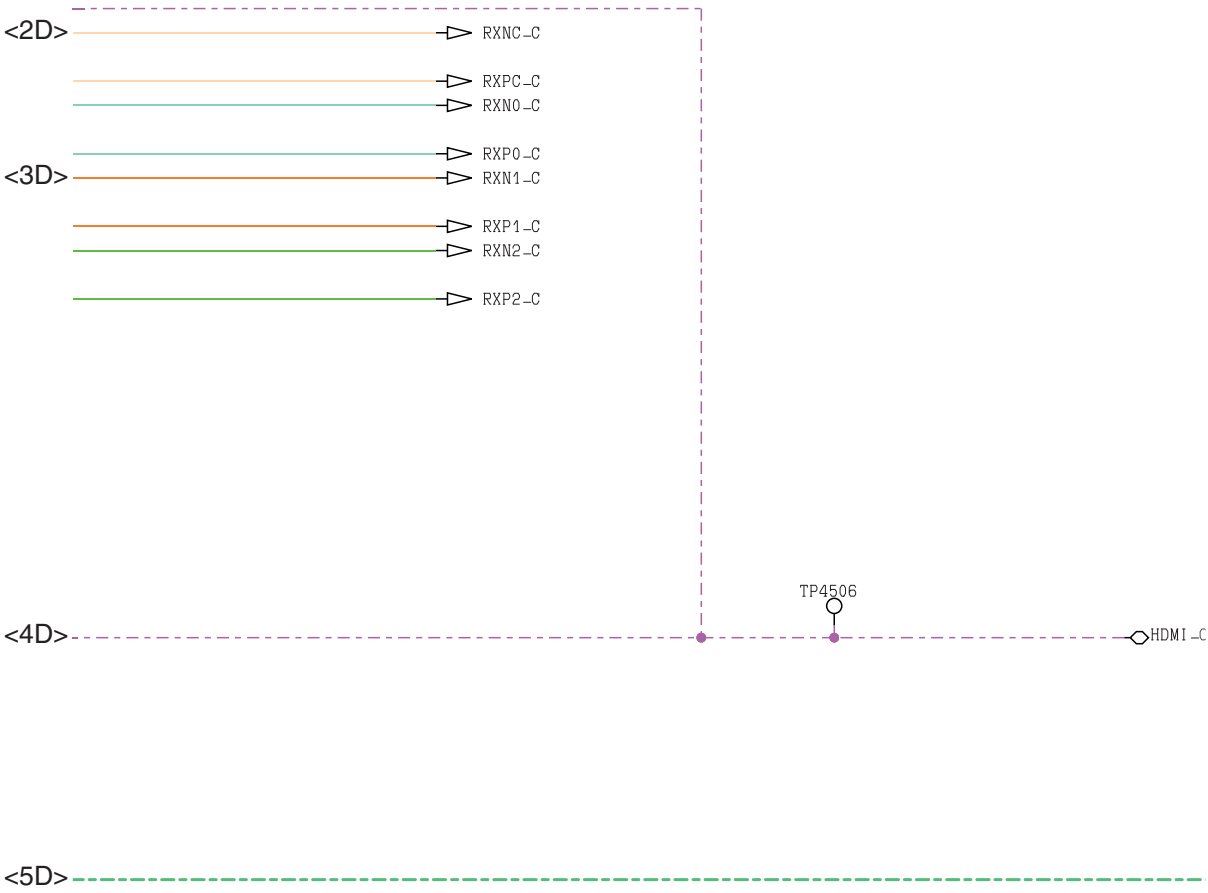


11.2.24. A Board - Sheet : 010 (6 / 6)

sheet No. 010


HDMI

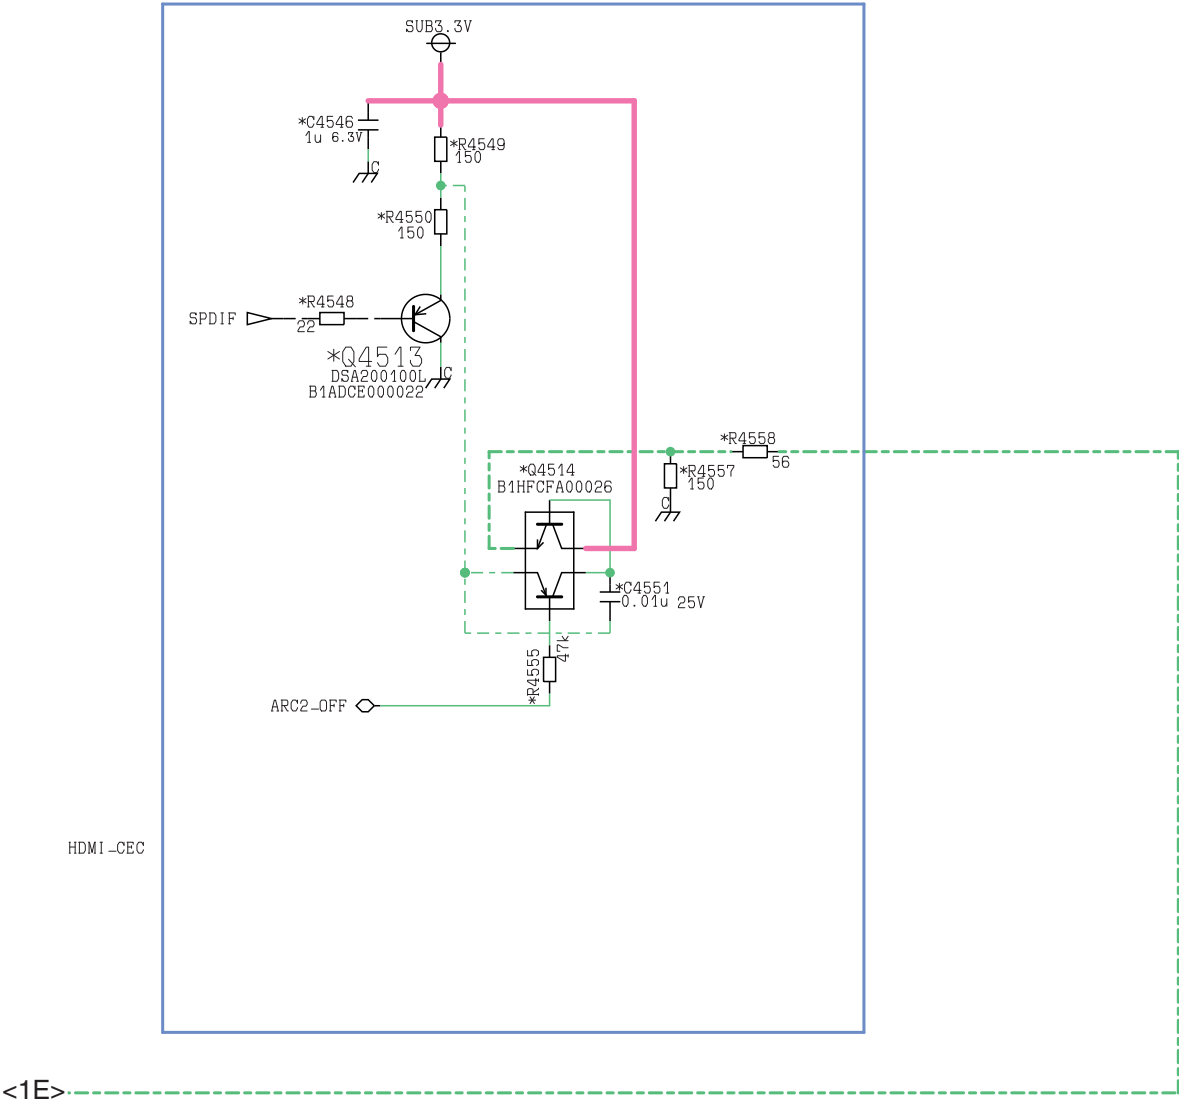

11.2.25. A Board - Sheet : 012 (1 / 3)

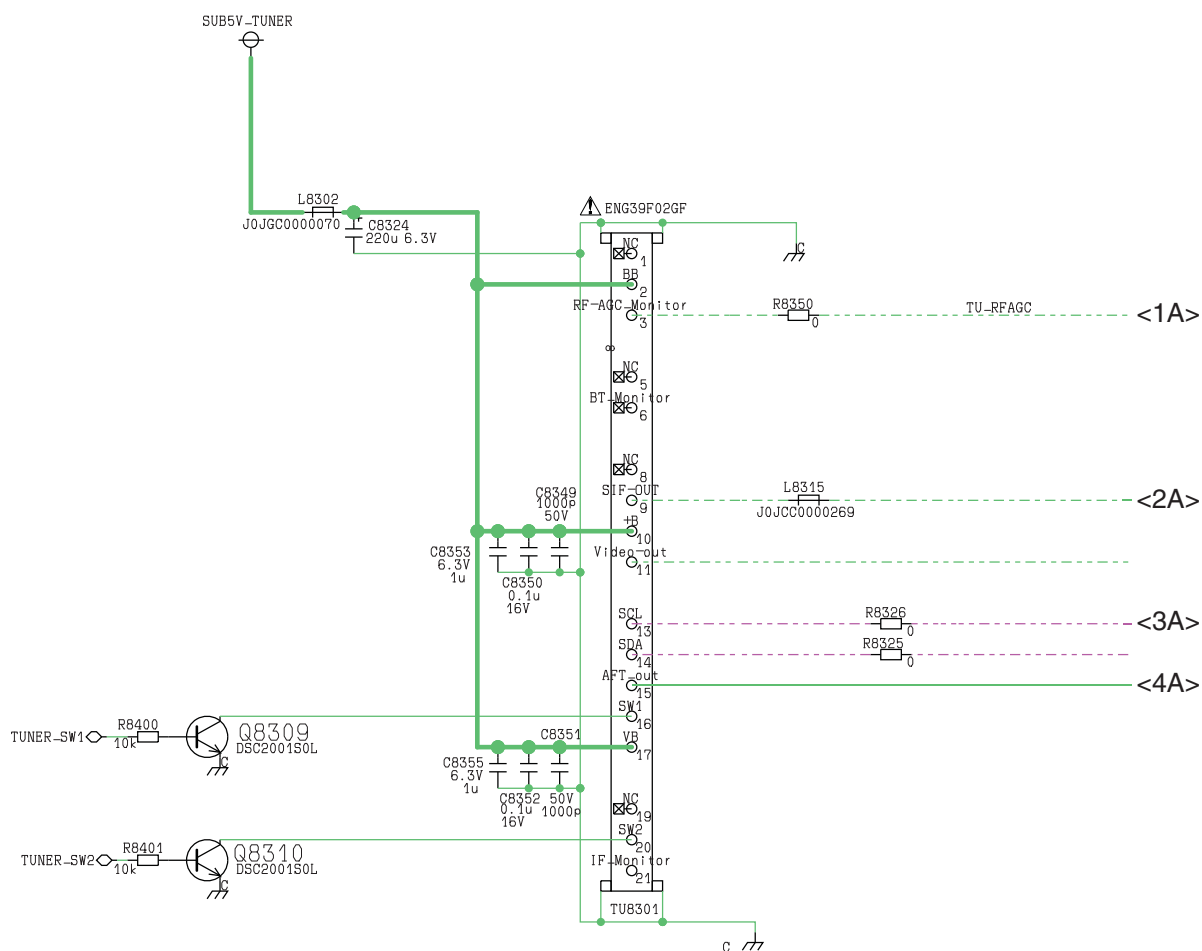


11.2.26. A Board - Sheet : 012 (2 / 3)

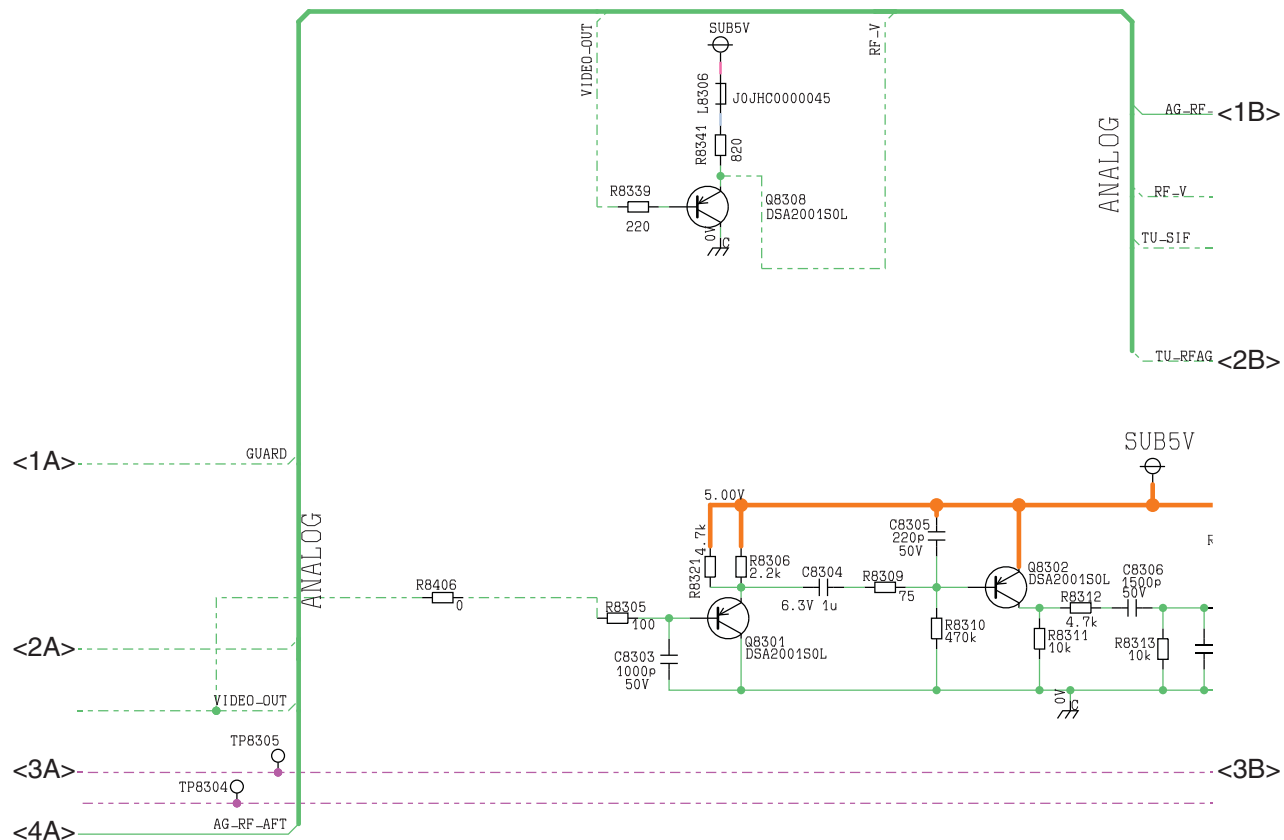


11.2.27. A Board - Sheet : 012 (3 / 3)

SHEET 012


Nile-TCON Sheet002

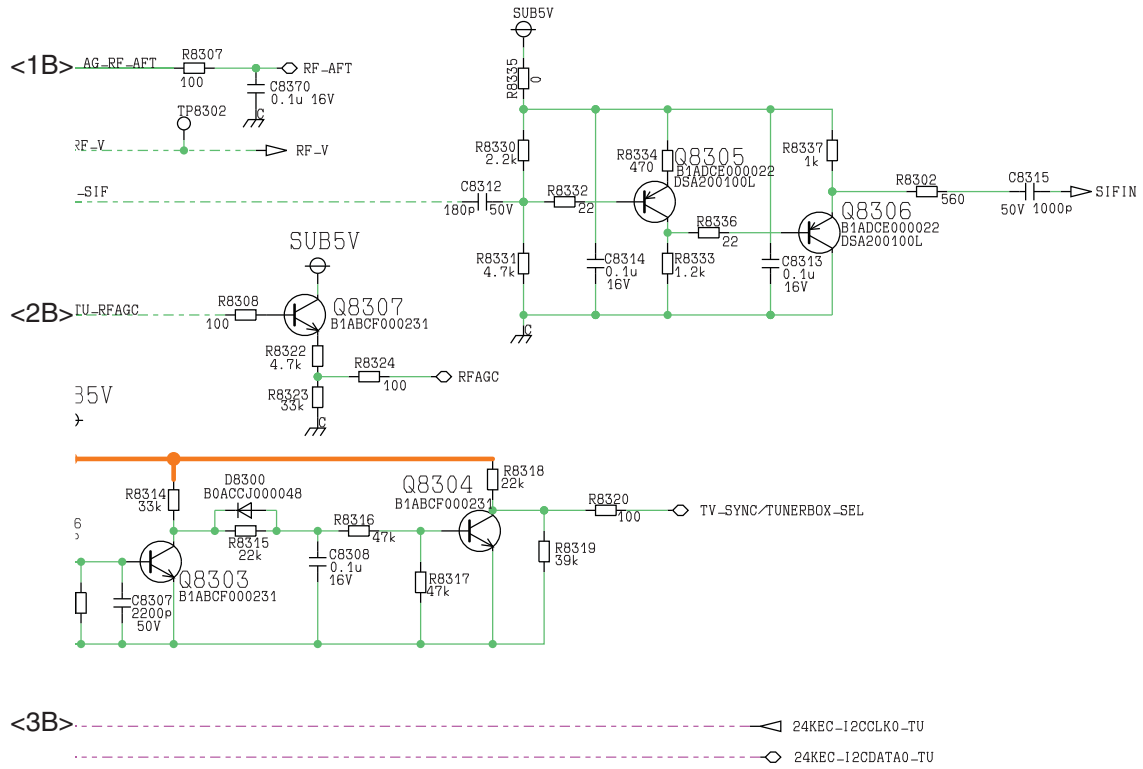


11.2.28. A Board - Sheet : 015 (1 / 4)

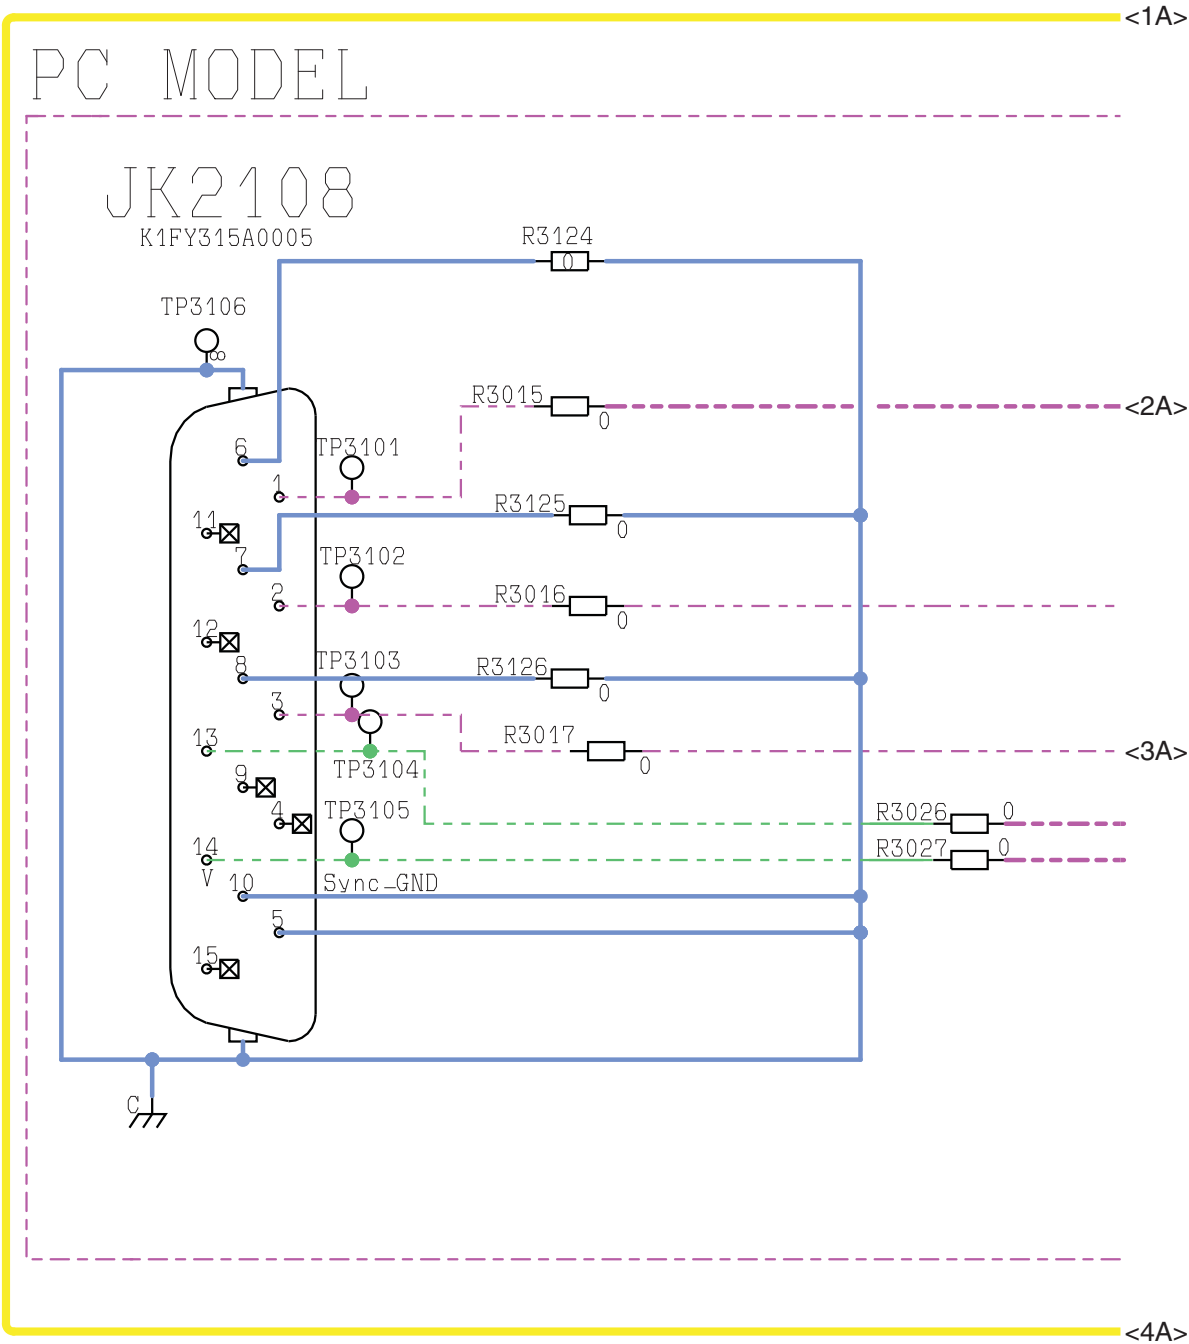

11.2.29. A Board - Sheet : 015 (2 / 4)

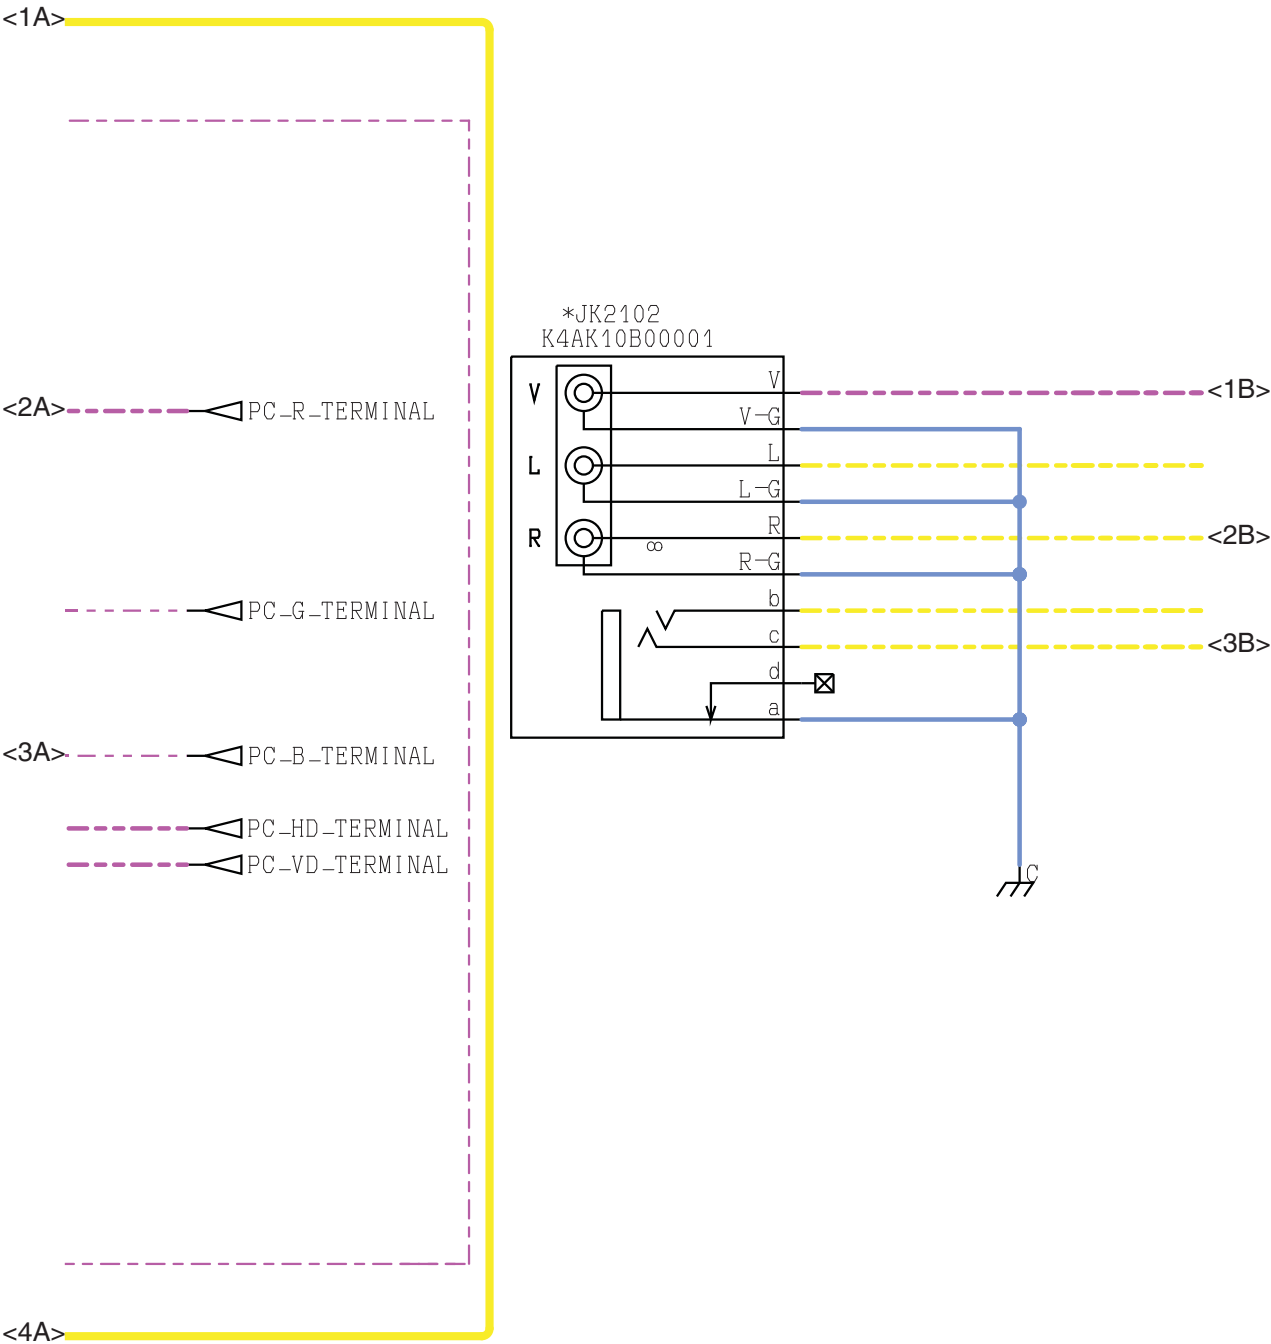


11.2.30. A Board - Sheet : 015 (3 / 4)

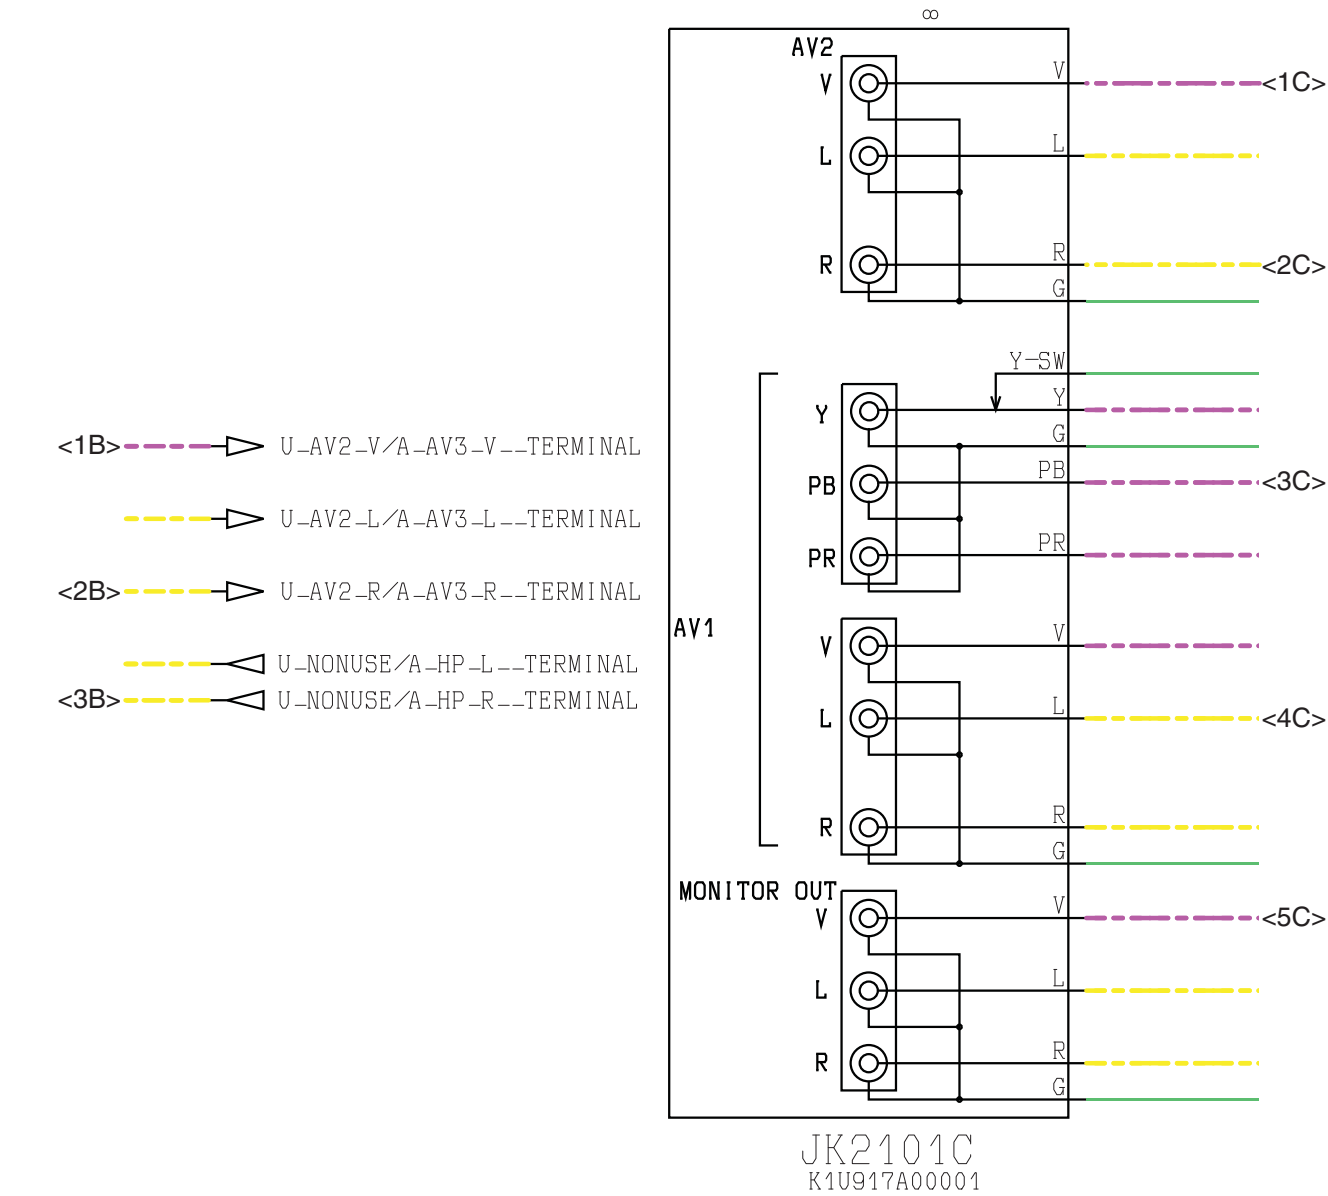

11.2.31. A Board - Sheet : 015 (4 / 4)


Sheet No. 015

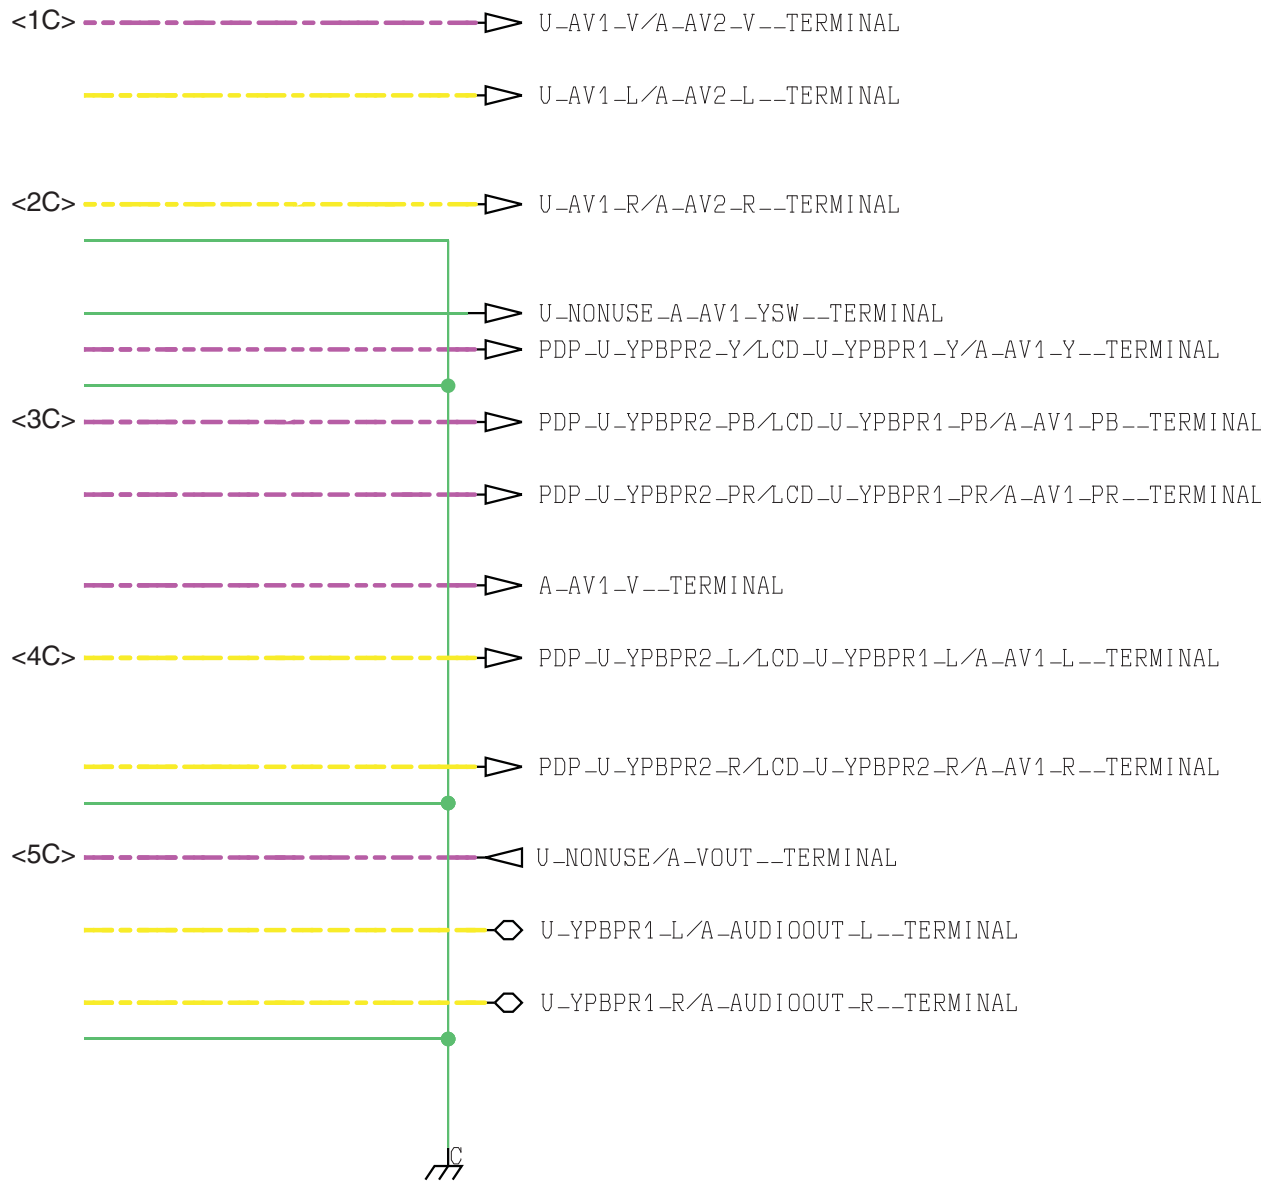




11.2.33. A Board - Sheet : 016 (2 / 4)

<1A>

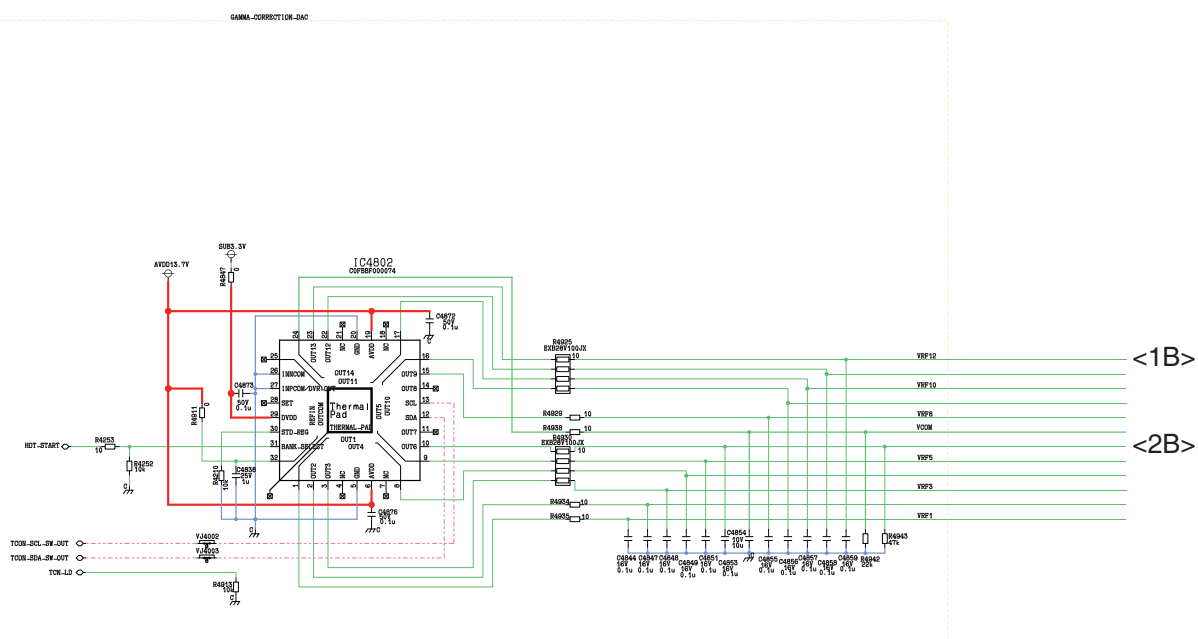



<2A>

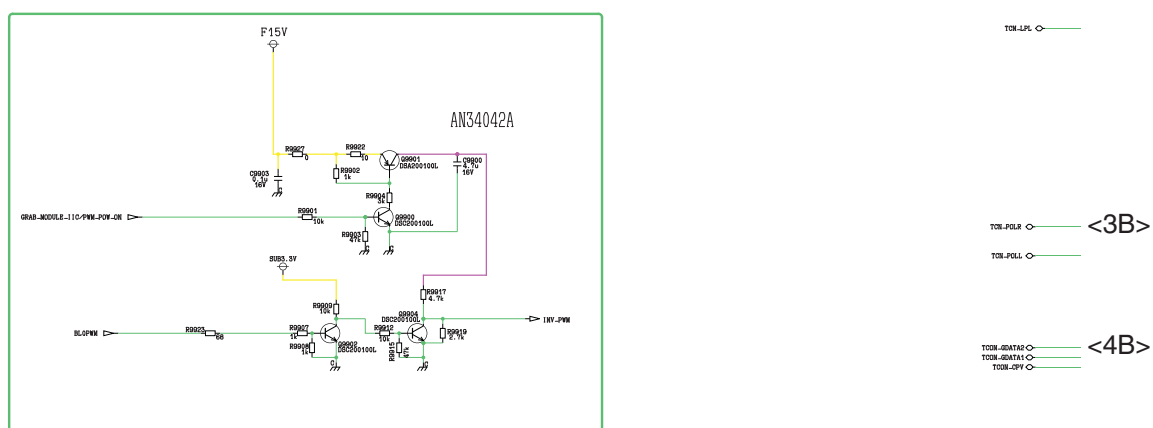





11.2.35. A Board - Sheet : 016 (4 / 4)


Sheet No. 016

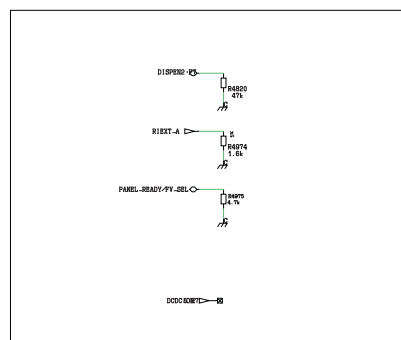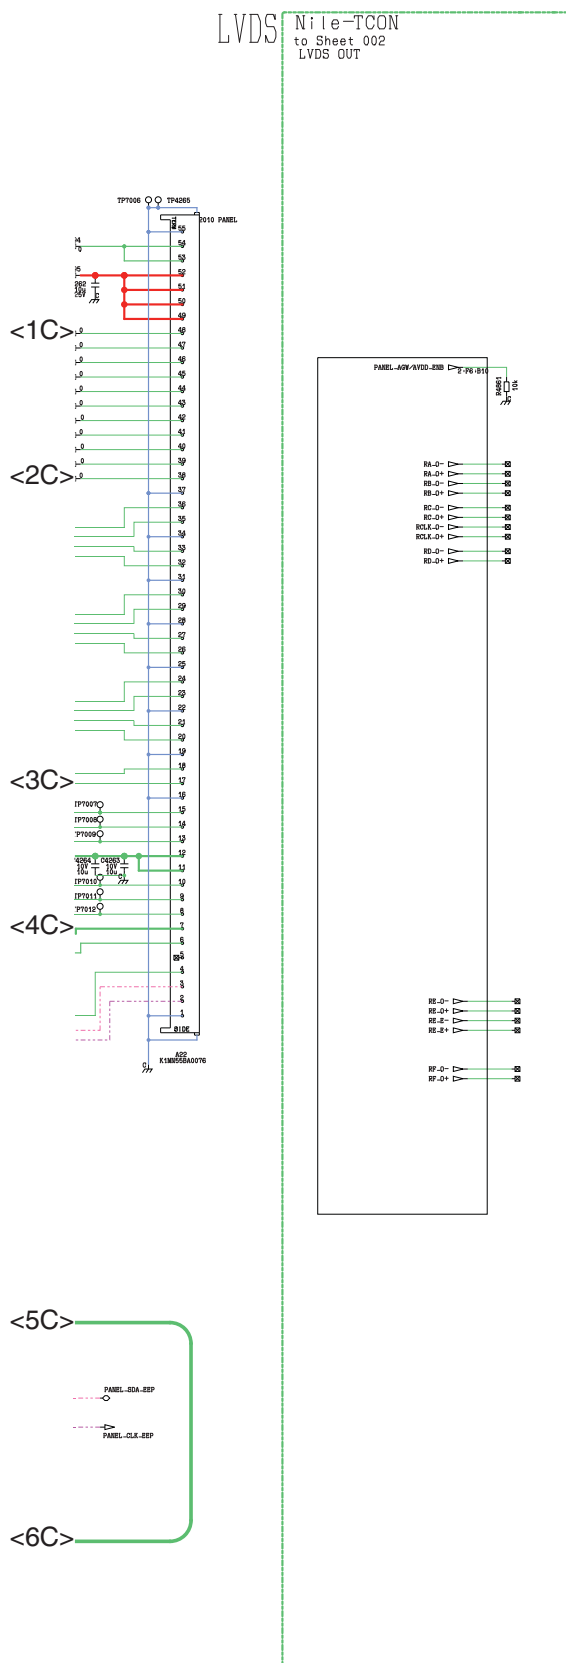

11.2.37. A Board - Sheet : 017 (2 / 4)

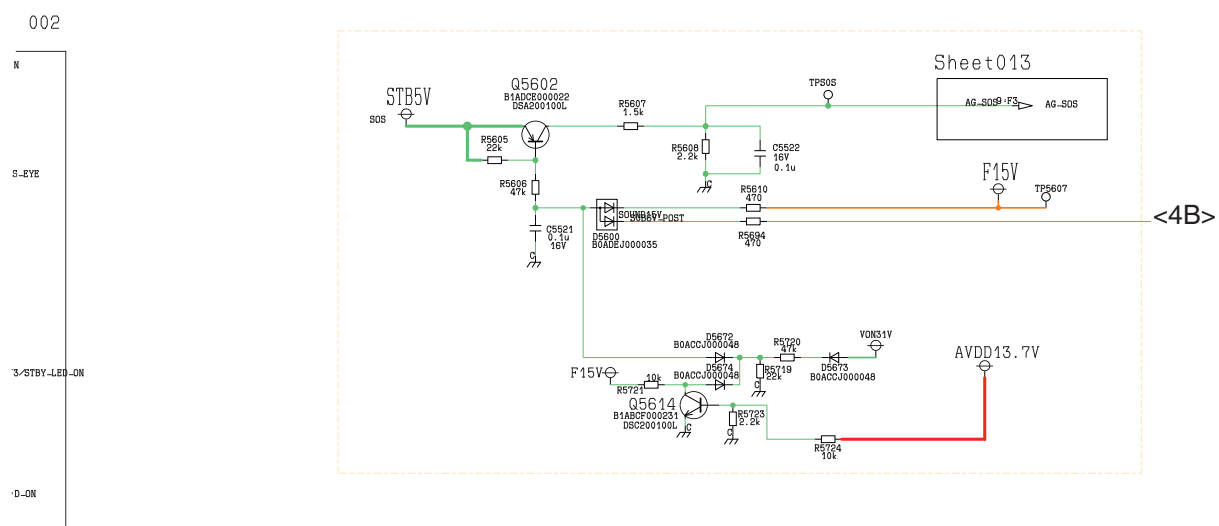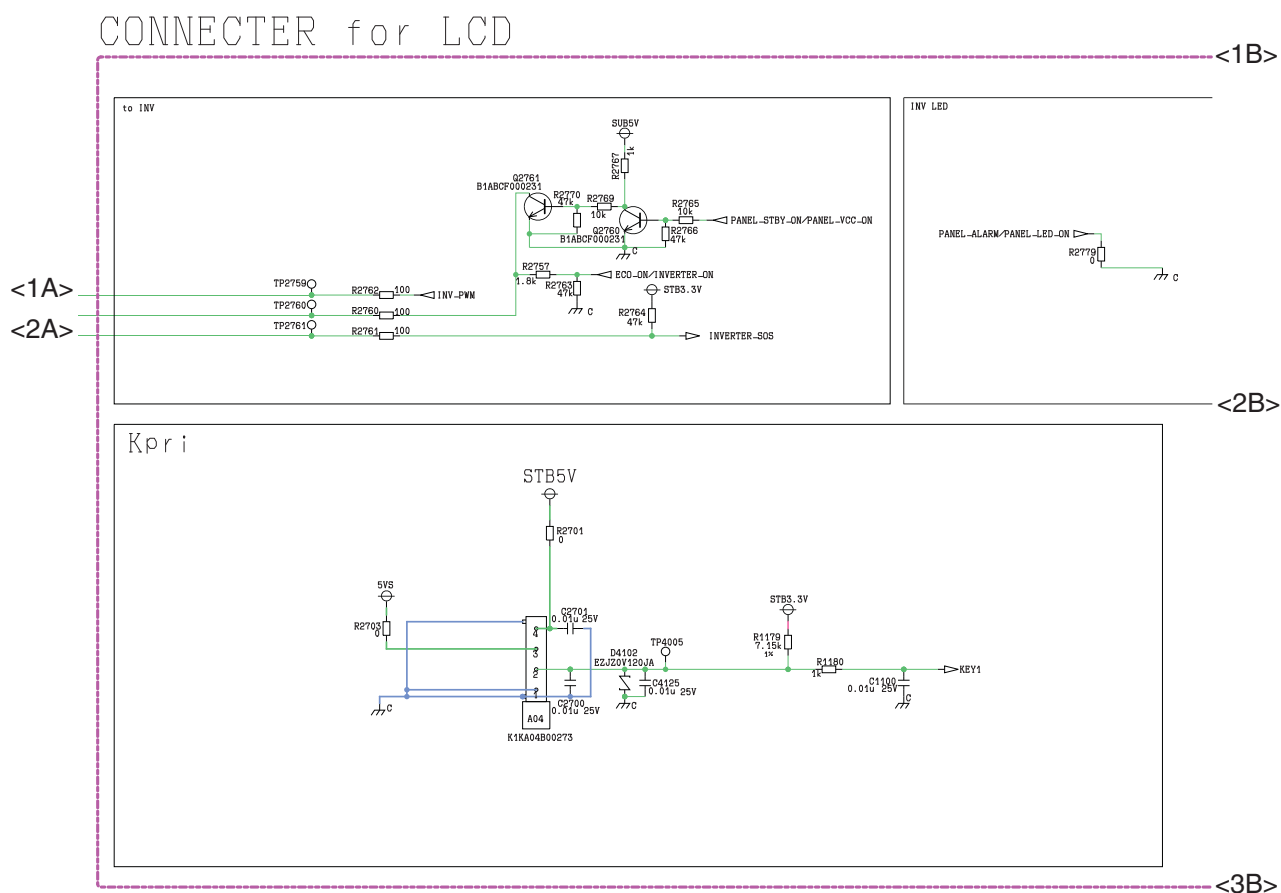


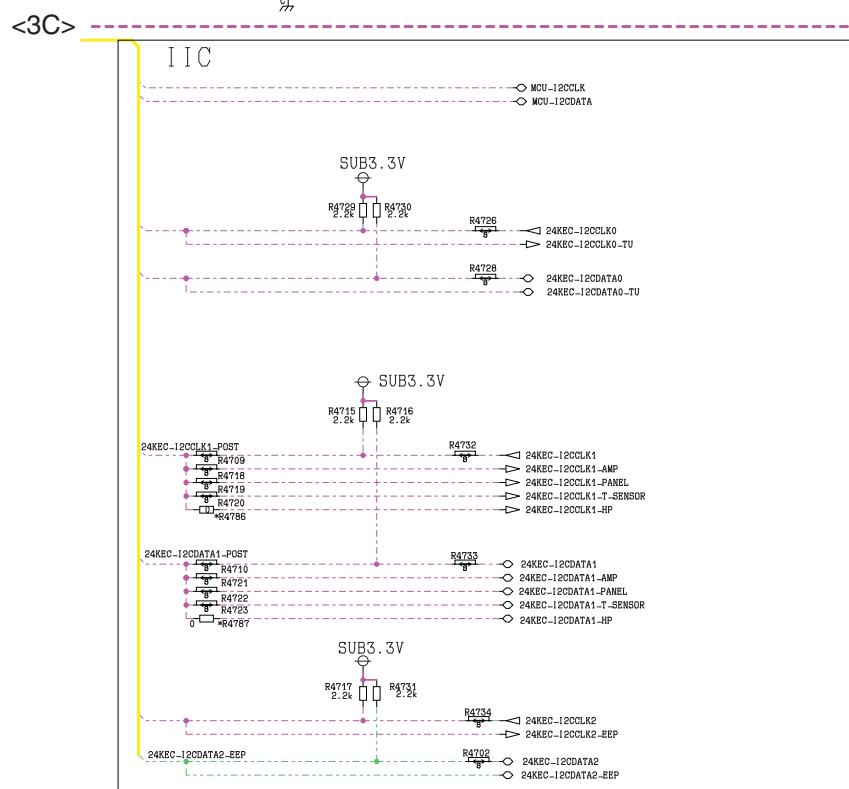

[illegible]


11.2.40. A Board - Sheet : 018 (1 / 1)

Sheet No. 018

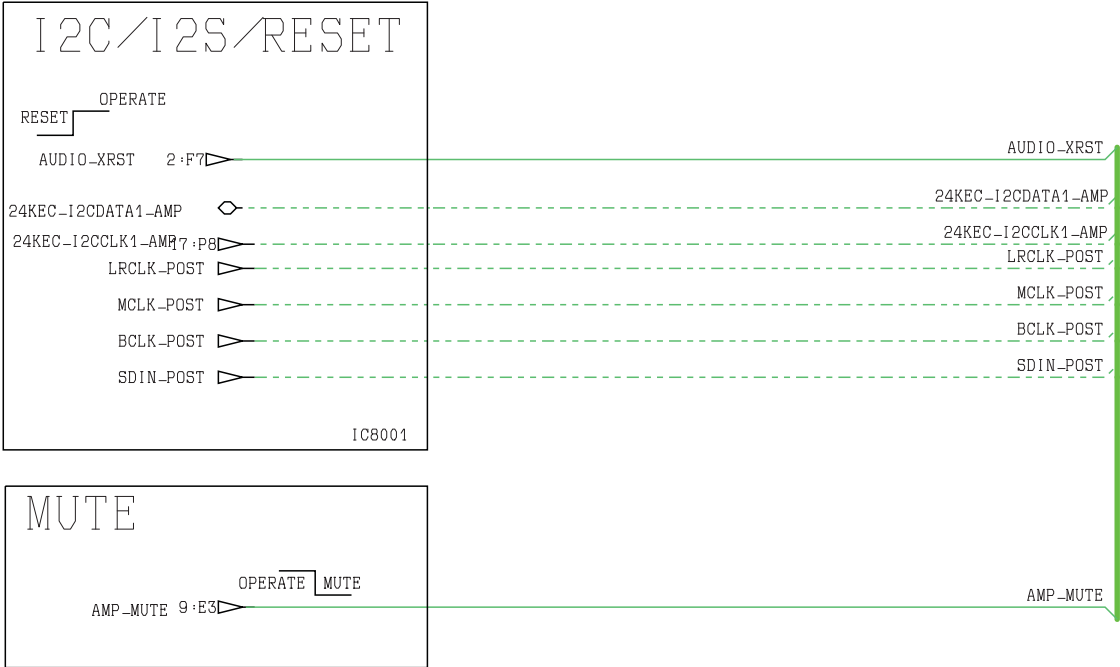

11.3. K Board


11.3.1. K Board (1 / 2)

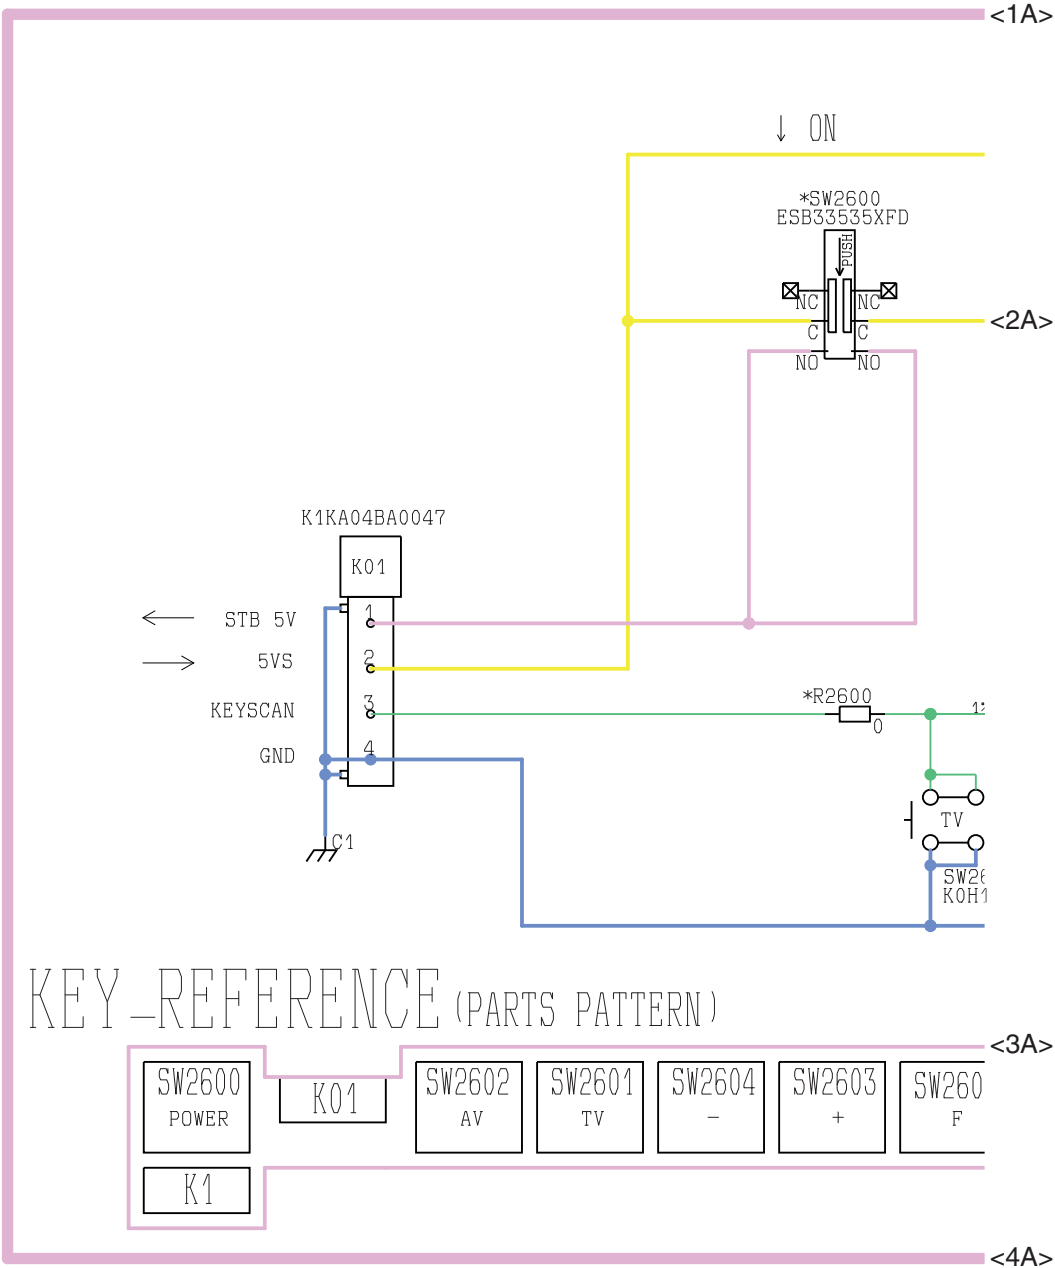

11.3.2. K Board (2 / 2)

TNPA4901


K

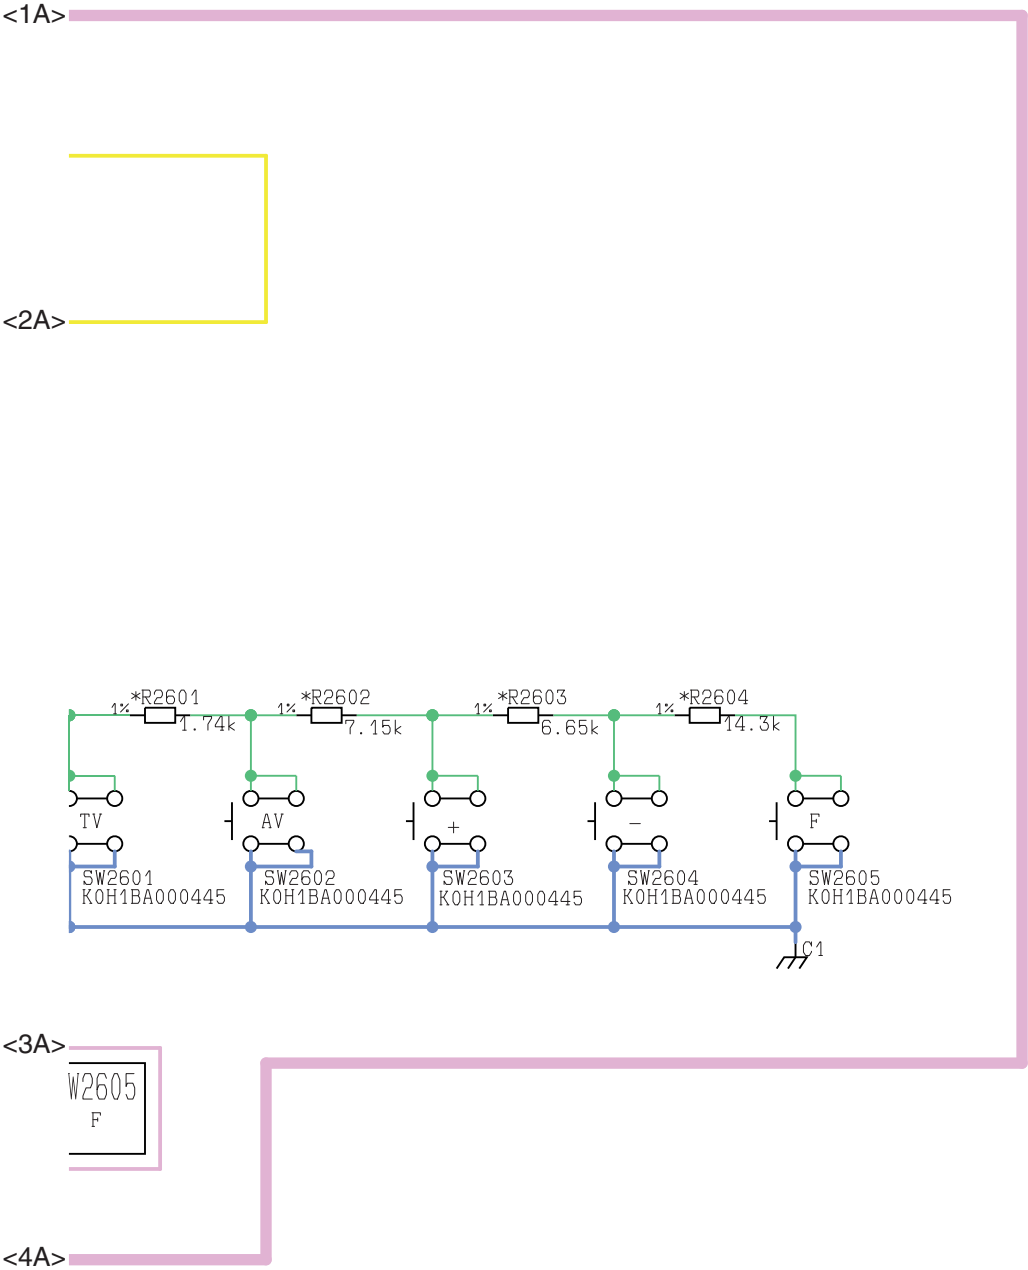





11.4.3. P Board (3 / 5)

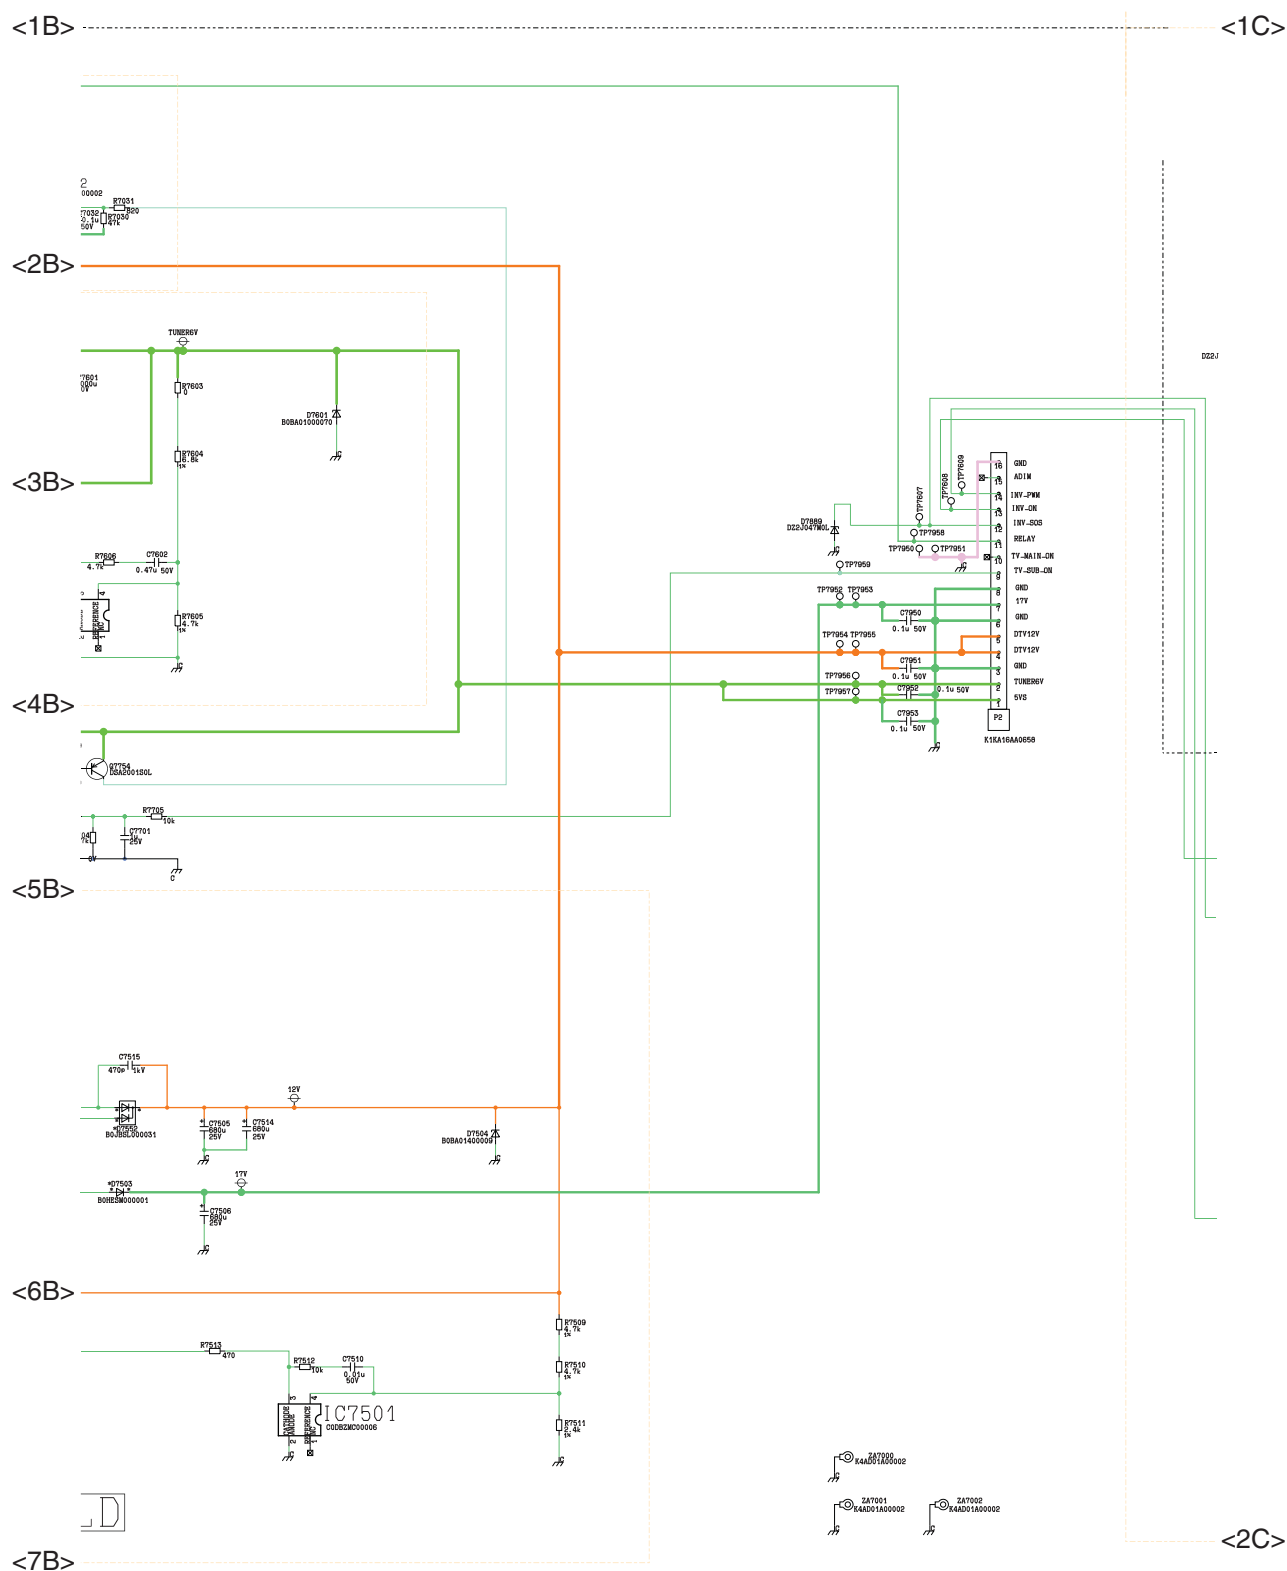

<1D>




<3D>

- <4D>

<5D>

<1D>


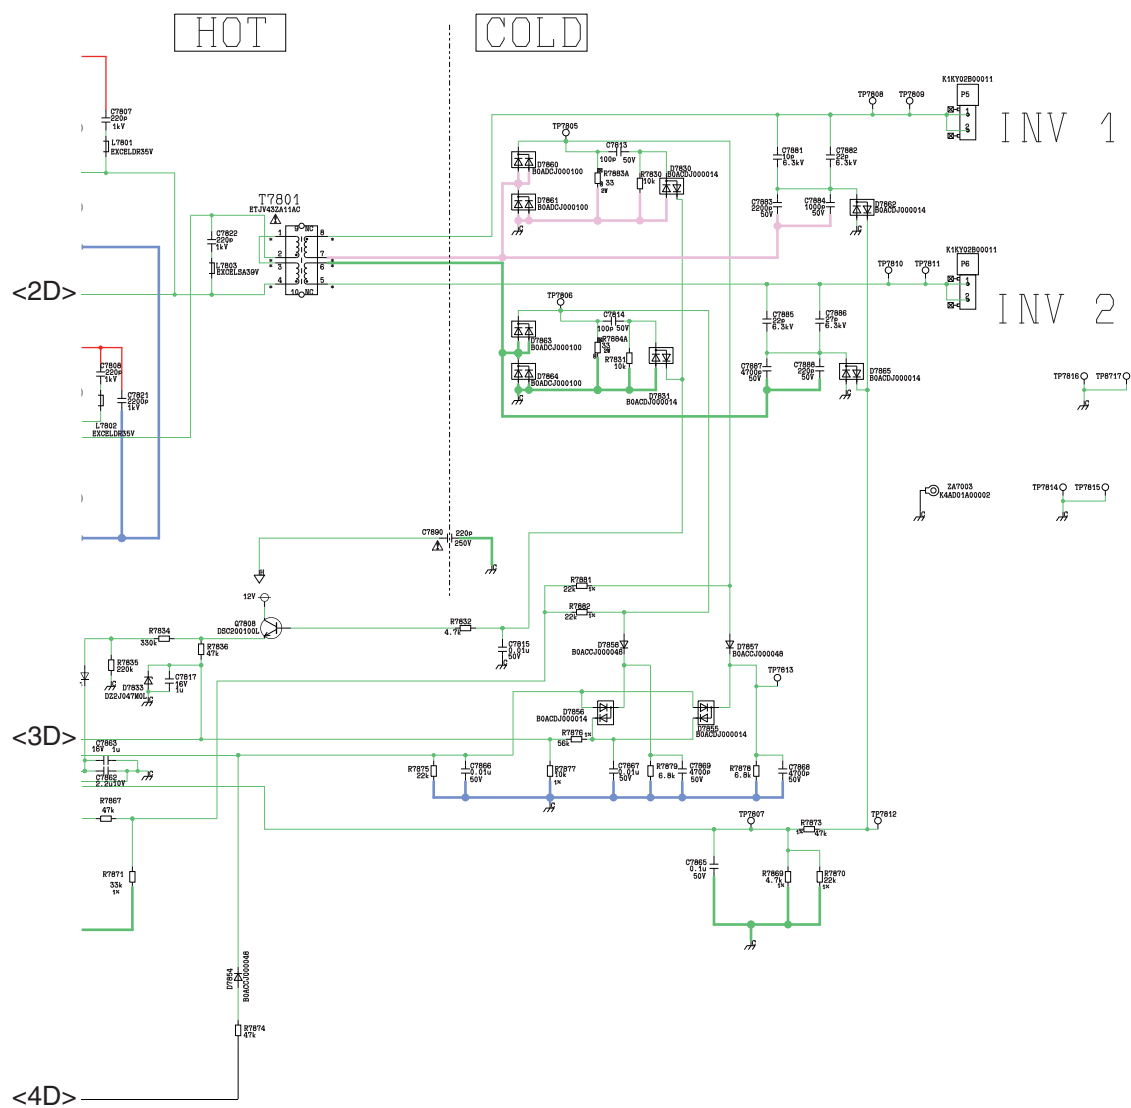


<5D>


11.5. V Board

11.5.1. V Board (1 / 3)


TNPA5134BA

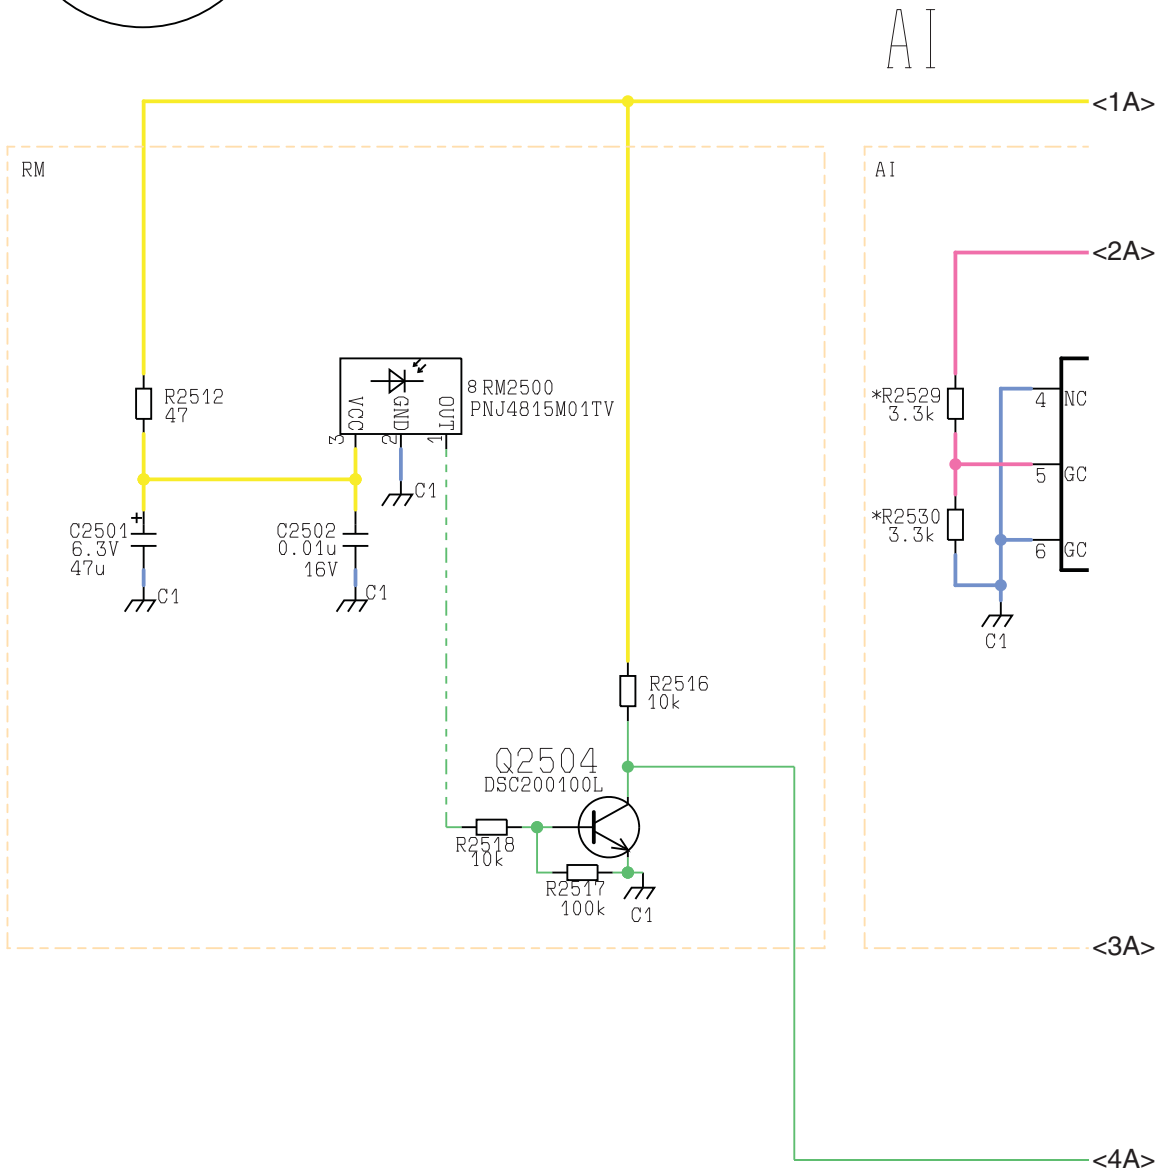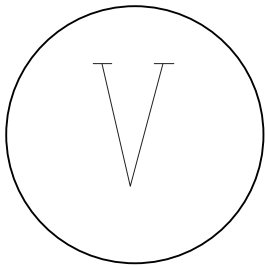

11.5.2. V Board (2 / 3)

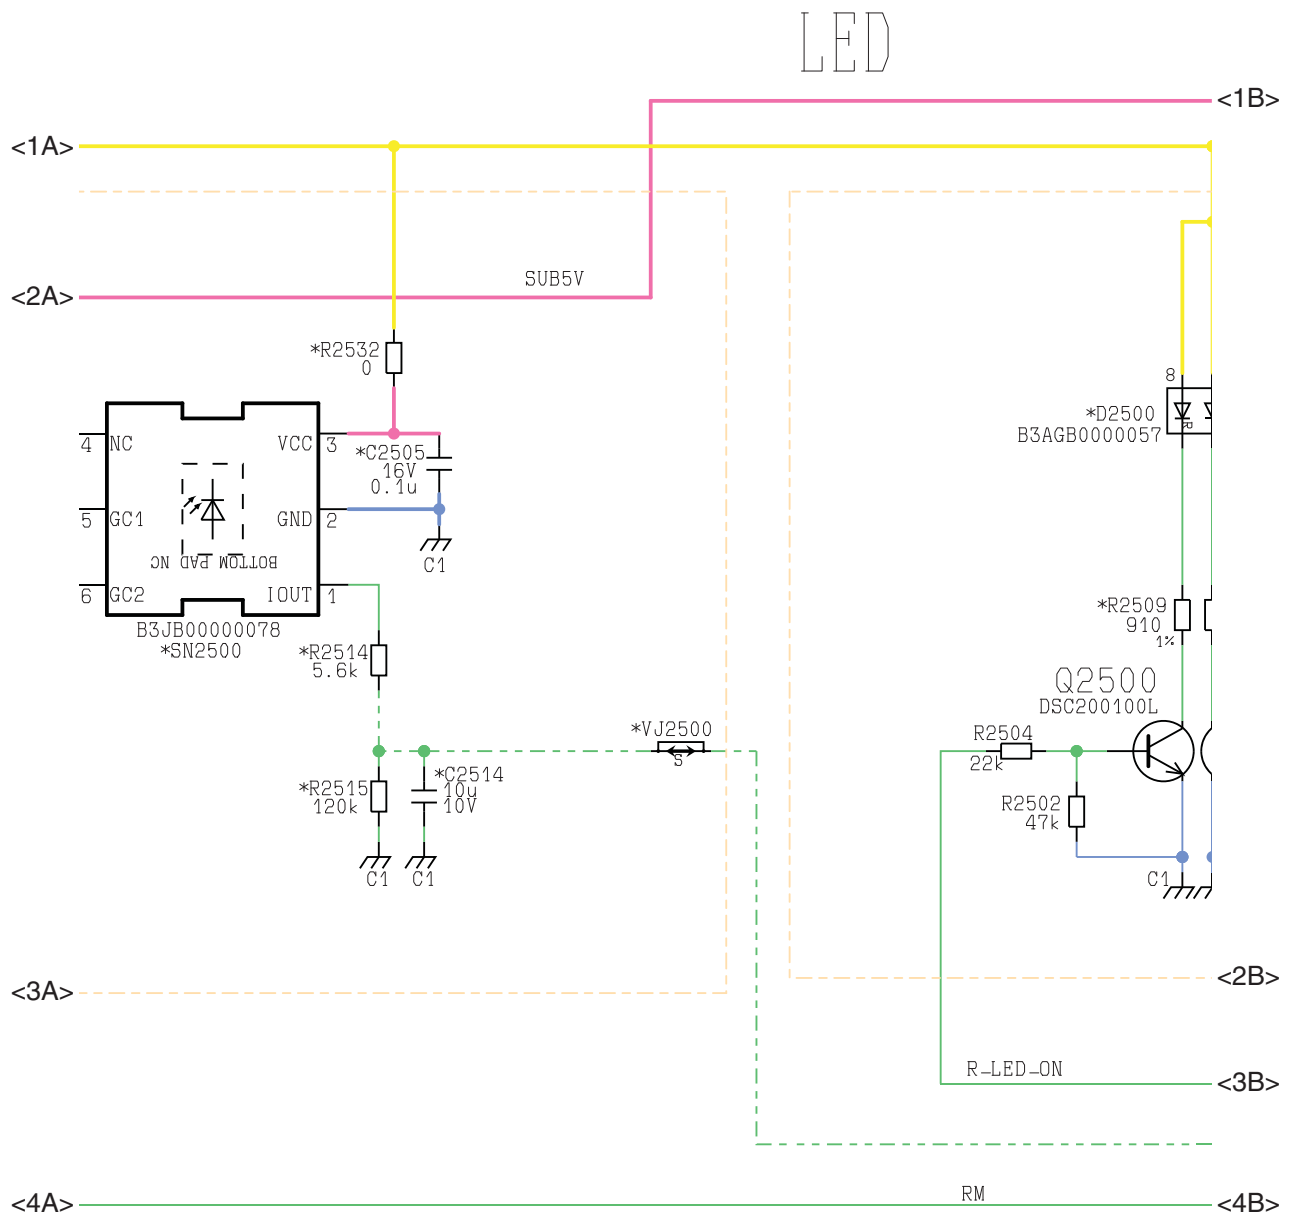


11.5.3. V Board (3 / 3)

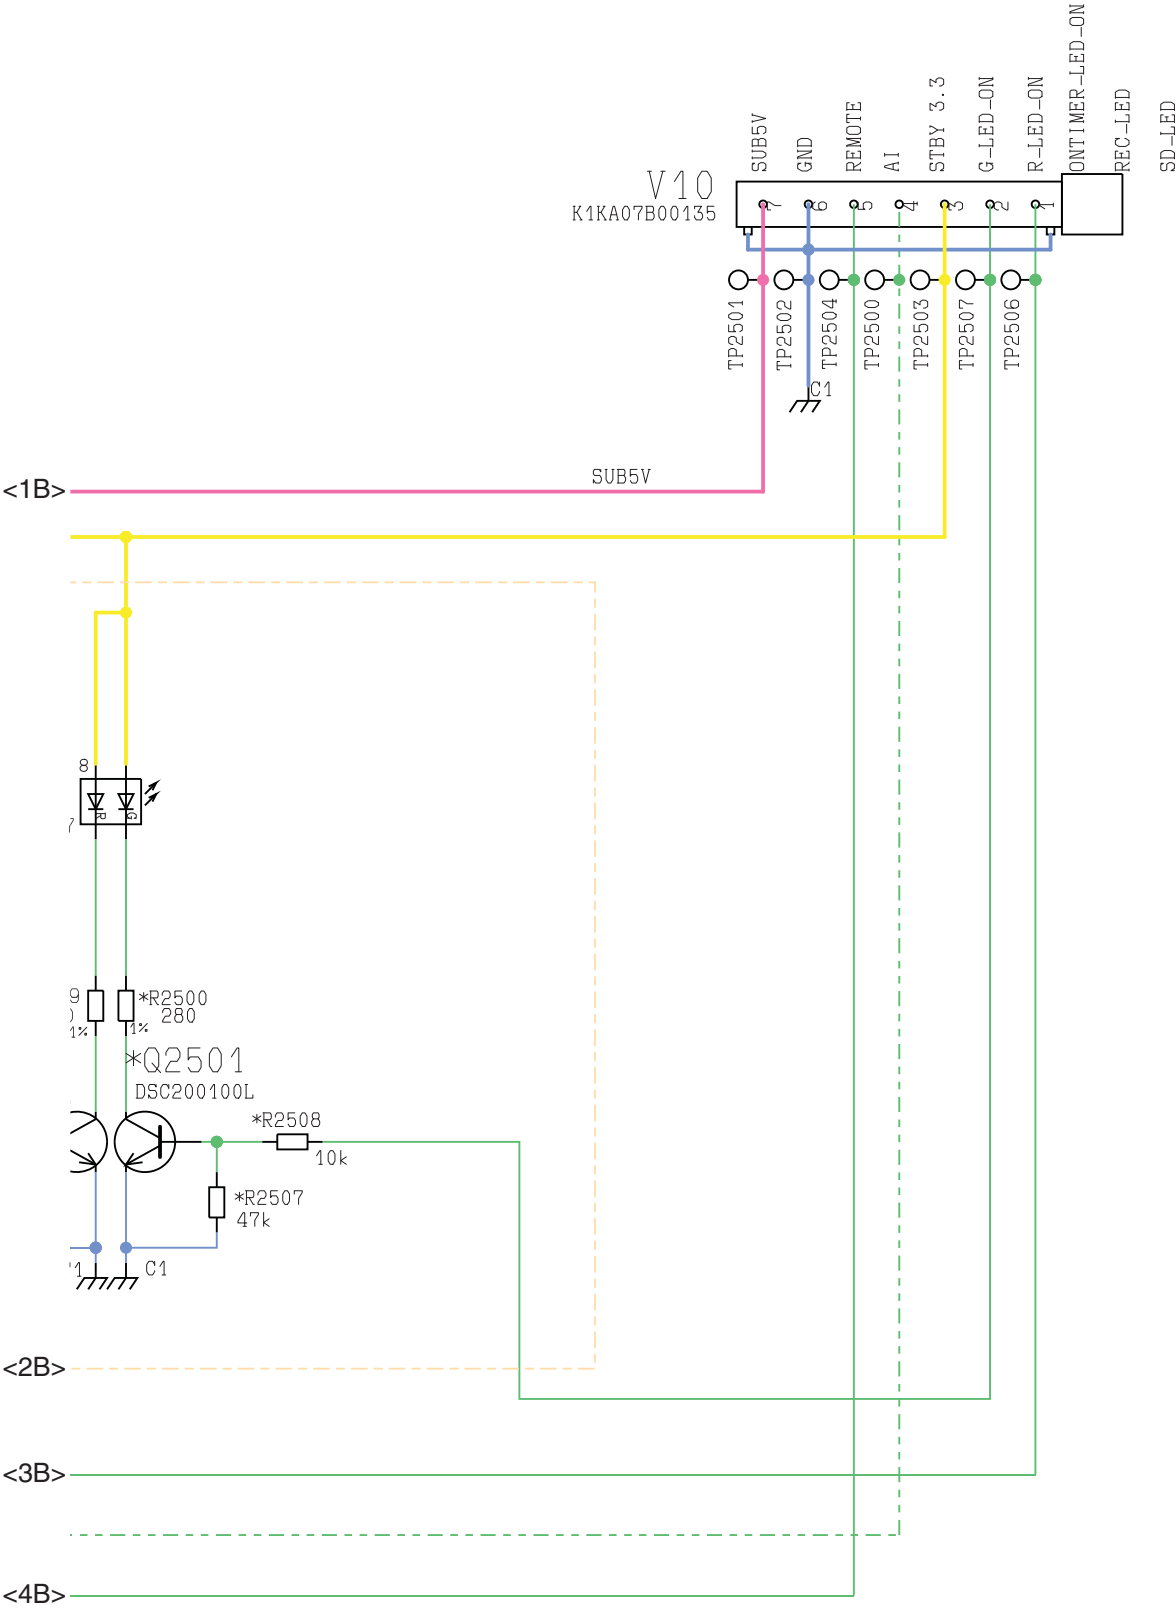

12 Printed Circuit Board

12.1. A-Board

A-Board (A Side)
TNP4G466

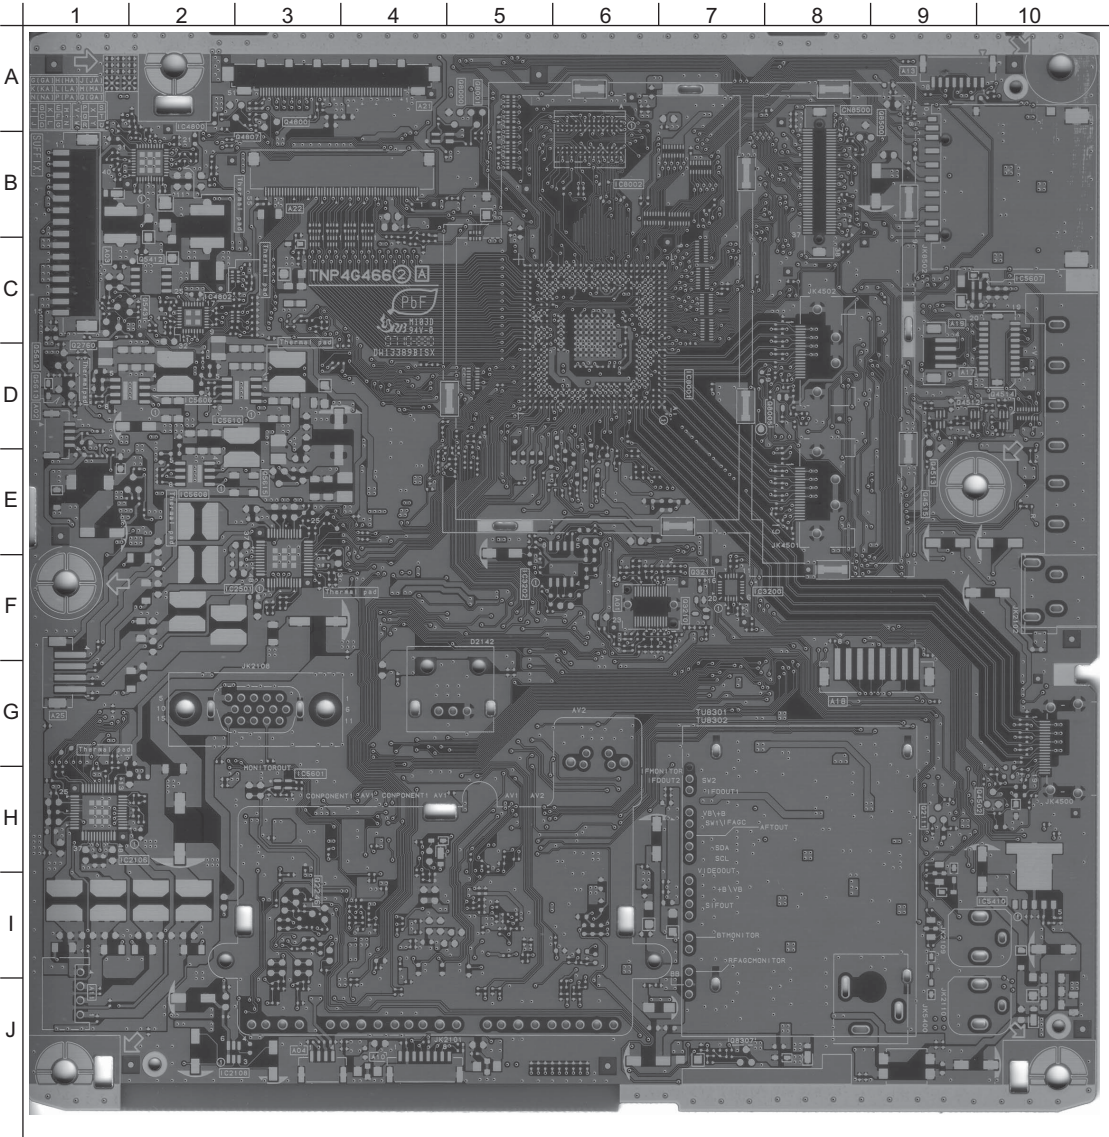


Parts Location

Ref. No	Location	Ref. No	Location	Ref. No	Location	Ref. No	Location
IC2106	H2	IC3202	F5	IC5601	H3	IC5610	D2
IC2108	J3	IC4800	B2	IC5606	D2	IC8001	D7
IC2501	F3	IC4802	C2	IC5607	C10	IC8002	B6
IC3200	F8	IC5410	I10	IC5608	E2		

12.2. A-Board

A-Board (B Side)
TNP4G466

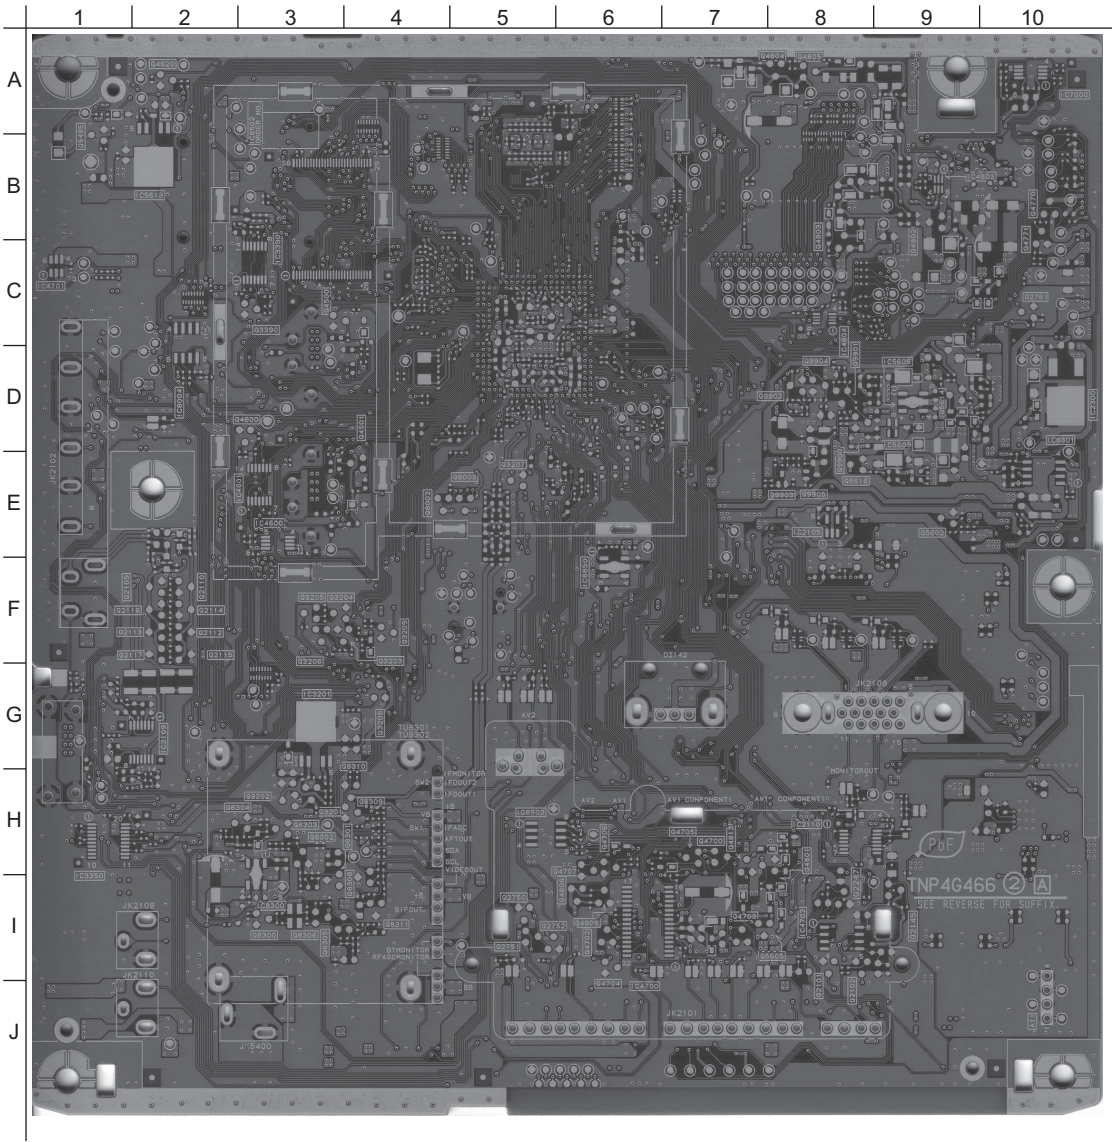


Parts Location

Ref. No	Location	Ref. No	Location	Ref. No	Location	Ref. No	Location
IC2105	E8	IC3390	C3	IC4803	B9	IC8004	C8
IC2109	G2	IC4600	E3	IC4804	C8	IC8300	I3
IC2110	H8	IC4601	E3	IC5605	D9	IC8301	D10
IC2300	D10	IC4700	J6	IC5609	D9	IC8502	A3
IC3201	G3	IC4701	C1	IC5613	B2	IC8503	H5
IC3350	H1	IC4702	I8	IC7000	A10	IC8850	F6

12.3. K-Board

K-Board (A Side)
TNPA4901

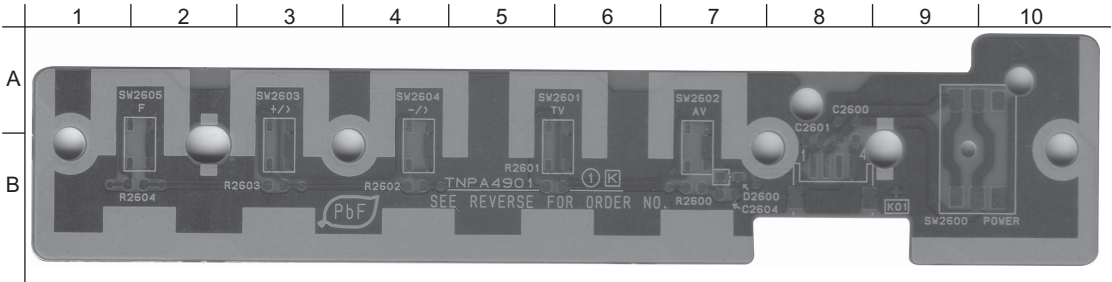


Parts Location

Ref. No	Location
D2600	B7


12.4. K-Board

K-Board (B Side)
TNPA4901

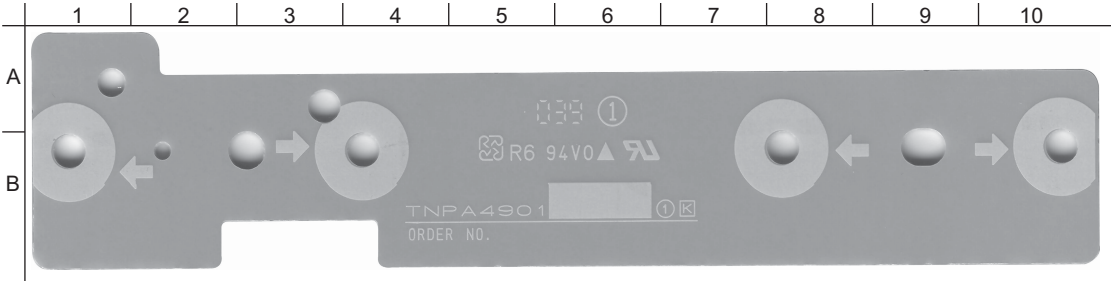


12.5. V-Board

V-Board (A Side)
TNPA5134

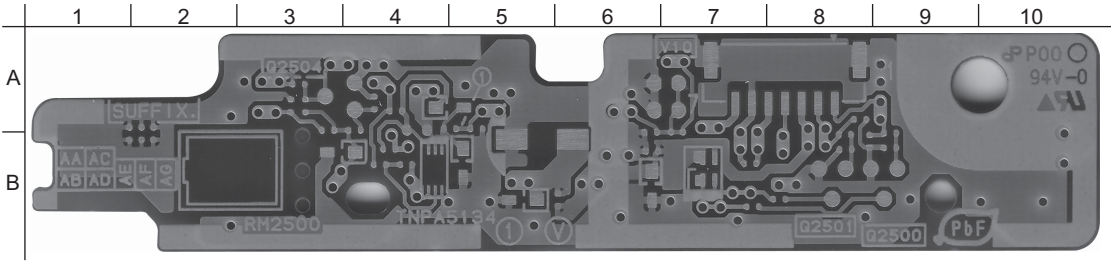

12.6. V-Board

V-Board (B Side)
TNPA5134

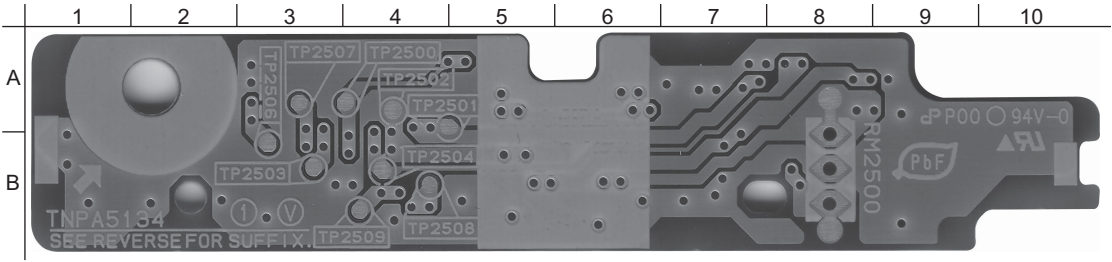

This image shows a detailed view of a power supply unit's internal circuit board. The board is densely packed with electronic components, including integrated circuits, capacitors, resistors, and inductors. Key features include a 'RED' section at the top left, a 'BLACK' section at the bottom left, and a 'HOT' section at the bottom right. A central 'LIVE CIRCUIT' is clearly marked. The board is surrounded by a metal frame with mounting holes. The image is labeled with a grid system (A-M, 1-10) for component location.

Parts Location

Ref. No	Location	Ref. No	Location	Ref. No	Location	Ref. No	Location
IC7201	E7	D7002	H2	D7407	G2	D7827	F9
IC7301	D5	D7030	J14	D7408	F2	D7828	F10
IC7401	E3	D7041	I1	D7503	B3	D7829	F10
IC7501	B4	D7201	E7	D7504	C1	D7830	N7
IC7601	B4	D7202	F7	D7552	C3	D7831	N8
IC7801	H9	D7204	F6	D7601	C1	D7832	B9
IC7851	C10	D7205	H6	D7602	C2	D7833	C10
		D7207	G3	D7603	C2	D7851	B9
		D7218	D8	D7701	C4	D7852	D10
		D7251	E8	D7704	E4	D7853	D9
		D7252	E8	D7705	E5	D7854	B10
		D7253	D8	D7802	G8	D7856	C10
		D7301	B7	D7803	H7	D7857	C10
		D7302	B7	D7805	F9	D7858	D10
		D7303	C8	D7806	G9	D7860	M7
		D7306	B7	D7807	H9	D7862	M7
		D7307	D6	D7808	H8	D7863	M8
		D7312	C7	D7809	H8	D7865	M8
		D7401	G2	D7820	H7	D7880	D9
		D7402	F2	D7822	I7	D7881	D10
		D7403	F4	D7823	I8	D7882	C9
		D7404	E4	D7824	F10	D7888	D9
		D7405	E3	D7825	F10	D7889	B9
		D7406	F4	D7826	H9		

The image shows a highly detailed printed circuit board (PCB) layout. It features a variety of electronic components such as resistors (labeled R7301, R7302, etc.), capacitors (C7508, C7506, etc.), and integrated circuits (IC7501, IC7502, etc.). The board is divided into functional areas, some labeled 'HOT' and 'COLD', indicating different temperature zones or operational modes. There are also labels like '非充電' (Non-Charging), '充電' (Charging), and 'LIVE CIRCUIT'. A large warning label at the bottom center reads 'CAUTION HIGH VOLTAGE'. The board has several mounting holes and is surrounded by various test points and connectors.

Parts Location

Ref. No	Location		Ref. No	Location		Ref. No	Location		Ref. No	Location
IC7301	C5		D7001	M8		D7304	B4		D7504	C10
IC7401	E9		D7002	H9		D7306	B4		D7552	C9
			D7201	D5		D7401	G9		D7602	C9
			D7202	F4		D7402	F9		D7603	C9
			D7204	F5		D7403	F8		D7806	G2
			D7205	H6		D7404	E8		D7807	H2
			D7207	G8		D7405	E8		D7852	E2
			D7301	B4		D7407	G9		D7853	D2
			D7302	B4		D7408	E10			
			D7303	C3		D7503	A8			

13 Exploded View and Replacement Parts List

13.1. Exploded View and Mechanical Replacement Parts List

Please click the radio button for "Diagrams II/Parts List" on the menu bar.

13.2. Electrical Replacement Parts List

13.2.1. Replacement Parts List Notes

RTL (Retention Time Limited)

Note: The marking (RTL) indicates that the Retention Time is Limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

Abbreviation of part name and description

1. Resistor

2. Capacitor

Example:

Example:

ERD25TJ104 C 100KOHM, J 1/4W
 Type Allowance

ECKF1H103ZF C 0.01UF, Z 50V
 Type Allowance

Type	Allowance
C : Carbon	F : ±1%
F : Fuse	G : ±2%
M : Metal Oxide	J : ±5%
Metal Film	K : ±10%
S : Solid	M : ±20%
W : Wire Wound	

Type	Allowance
C : Ceramic	C : ±0.25pF
E : Electrolytic	D : ±0.5pF
P : Polyester	F : ±1pF
Polyprop	G : ±3pF
lene	J : ±5pF
T : Tantalum	K : ±10pF
	L : ±15pF
	M : ±20pF
	P : +100%, -0%
	Z : +80%, -20%

13.2.2. Electrical Replacement Parts List

Note: All part will be supplied by PAVCKM.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
		CAPACITORS		
	C1100	F1G1E1030005	C 0.1UF,K, 25V	
	C2100	F1J1E105A231	C 1UF , 25V	
	C2103	F1H0J1050013	C 1UF , 6.3V	
	C2107	F1H0J1050013	C 1UF , 6.3V	
	C2108	F1H0J1050013	C 1UF , 6.3V	
	C2109	F1H0J1050013	C 1UF , 6.3V	
	C2111	F1G1E1030005	C 0.1UF, 25V	
	C2115	F1G1H5610004	C 560PF , 50V	
	C2116	F1G1H5610004	C 560PF , 50V	
	C2145	F1K1E106A136	C 10UF , 25V	
	C2166	F1G1E104A087	C 0.1UF , 25V	
	C2167	F1G1E104A087	C 0.1UF , 25V	
	C2173	F1J1A106A087	C 10UF , 10V	
	C2175	F1J1A106A087	C 10UF , 10V	
	C2197	F1G1E1030005	C 0.1UF, 25V	
	C2198	F1H0J1050013	C 1UF , 6.3V	
	C2199	F1H0J1050013	C 1UF , 6.3V	
	C2200	F1H0J1050013	C 1UF , 6.3V	
	C2201	F1H0J1050013	C 1UF , 6.3V	
	C2202	F1H0J1050013	C 1UF , 6.3V	
	C2203	F1J1A106A087	C 10UF , 10V	
	C2204	F1H0J1050013	C 1UF , 6.3V	
	C2205	F1J1A106A087	C 10UF , 10V	
	C2206	F1H0J475A041	C 4.7UF, 6.3V	
	C2207	F1H1A225A051	C 1UF, 16V	
	C2208	F1H1A225A051	C 1UF, 16V	
	C2209	F1H1A225A051	C 1UF, 16V	
	C2210	F1H1A225A051	C 1UF, 16V	
	C2211	F1H1A225A051	C 1UF, 16V	
	C2212	F1H1A225A051	C 1UF, 16V	
	C2213	F1H0J1050013	C 1UF , 6.3V	
	C2214	F1H0J1050013	C 1UF , 6.3V	
	C2217	F1H0J475A041	C 4.7UF, 6.3V	
	C2220	F1G1C104A081	C 0.1UF ,16V	
	C2221	F1G1C104A081	C 0.1UF ,16V	
	C2222	F1J1A106A087	C 10UF , 10V	
	C2223	F1G1H472A571	C 4700PF , 50V	
	C2224	F1G1H472A571	C 4700PF , 50V	
	C2225	F1G1C473A081	C 0.047UF , 16V	
	C2226	F1G1C473A081	C 0.047UF , 16V	
	C2227	F1J1A106A087	C 10UF , 10V	
	C2229	F1G1H222A571	C 2200PF , 50V	
	C2230	F1G1C104A081	C 0.1UF , 16V	
	C2232	F1H1E104A029	C 0.1UF , 25V	
	C2234	F1H1E104A029	C 0.1UF , 25V	
	C2237	F1J1E105A231	C 1UF , 25V	
	C2238	F1J1E105A231	C 1UF , 25V	
	C2240	F1H1E333A029	C 0.033UF , 25V	
	C2241	F1H1E333A029	C 0.033UF , 25V	
	C2242	F1H1E333A029	C 0.033UF , 25V	
	C2243	F1H1E333A029	C 0.033UF , 25V	
	C2244	F1J1H474A757	C 0.47UF , 50V	
	C2245	F1J1H474A757	C 0.47UF , 50V	
	C2246	F1J1H104A717	C 0.1UF , 50V	
	C2247	F1J1H104A717	C 0.1UF , 50V	
	C2248	F1H1H223A219	C 0.022UF , 50V	
	C2249	F1H1H223A219	C 0.022UF , 50V	
	C2250	F1J1H104A717	C 0.1UF , 50V	
	C2251	F1J1H104A717	C 0.1UF , 50V	
	C2252	F1H1H223A219	C 0.022UF , 50V	
	C2253	F1H1H223A219	C 0.022UF , 50V	
	C2254	F1H1E104A029	C 0.1UF , 25V	
	C2255	F1H1E104A029	C 0.1UF , 25V	
	C2256	F1H1H223A219	C 0.022UF , 50V	
	C2257	F1H1H223A219	C 0.022UF , 50V	
	C2258	F1H1H223A219	C 0.022UF , 50V	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C2259	F1H1H223A219	C 0.022UF , 50V	
	C2260	F1G1H1020008	C 1000PF , 50V	
	C2261	F1G1H1020008	C 1000PF , 50V	
	C2262	F1G1H1020008	C 1000PF , 50V	
	C2263	F1G1H1020008	C 1000PF , 50V	
	C2264	F1H1E104A029	C 0.1UF , 25V	
	C2265	F2H1E471A031	E 470PF , 25V	
	C2266	F1K1E106A136	C 10UF , 25V	
	C2267	F1H1H103A219	C 0.01UF , 50V	
	C2268	F2H1C470A041	E 47UF , 16V	
	C2269	F1J1A475A087	C 4.7UF, 10V	
	C2271	F1H1C105A145	C 1UF , 16V	
	C2272	F1G1E1030005	C 0.1UF, 25V	
	C2273	F1J1A106A087	C 10UF , 10V	
	C2274	F1J1A106A087	C 10UF , 10V	
	C2275	F1J1E105A231	C 1UF , 25V	
	C2277	F1H1C105A145	C 1UF , 16V	
	C2279	F1G1C104A081	C 0.1UF , 16V	
	C2282	F1J1A106A087	C 10UF , 10V	
	C2285	F1J1A106A087	C 10UF , 10V	
	C2294	F2H0J221A055	C 2.2UF , 6.3V	
	C2295	F2H0J221A055	C 2.2UF , 6.3V	
	C2296	F1H1A225A051	C 2.2UF , 10V	
	C2297	F1H1A225A051	C 2.2UF , 10V	
	C2298	F1H0J1050013	C 1UF , 6.3V	
	C2299	F2H1A101A040	C 100UF , 10V	
	C2300	F2H1A101A040	C 100UF , 10V	
	C2301	F1G1C104A081	C 0.1UF , 16V	
	C2302	F2H1A220A039	C 22UF , 10V	
	C2305	F1J1E105A231	C 1UF , 25V	
	C2306	F1H1C105A145	C 1UF , 16V	
	C2307	F1H0J1050013	C 1UF , 6.3V	
	C2308	F1G1H220A565	C 22PF , 50V	
	C2309	F1H1A225A051	C 2.2UF , 10V	
	C2310	F1H1A225A051	C 2.2UF , 10V	
	C2318	F1H1H102A970	C 1000PF , 50V	
	C2319	F1H1H102A970	C 1000PF , 50V	
	C2501	F2G0J470A019	E 47UF, 6.3V	
	C2502	F1G1C103A116	C 0.01UF, 16V	
	C2505	F1H1C104A143	C 0.1UF,K, 16V	
	C2514	F1J1A106A087	C 10UF , 10V	
	C2700	F1G1E1030005	C 0.01UF , 25V	
	C2701	F1G1E1030005	C 0.01UF , 25V	
	C4125	F1G1E1030005	C 0.01UF , 25V	
	C4262	F1K1E106A136	C 10UF , 25V	
	C4263	F1J1A106A087	C 10UF , 10V	
	C4264	F1J1A106A087	C 10UF , 10V	
	C4539	F1H0J1050013	C 1UF , 6.3V	
	C4540	F1H0J1050013	C 1UF , 6.3V	
	C4541	F1H0J1050013	C 1UF , 6.3V	
	C4546	F1H0J1050013	C 1UF , 6.3V	
	C4548	F1H0J1050013	C 1UF , 6.3V	
	C4551	F1G1E1030005	C 0.01UF , 25V	
	C4704	F2H1A101A040	C 100UF , 10V	
	C4705	F1G1C104A081	C 0.1UF, 16V	
	C4706	F1H1A105A025	C 1UF , 10V	
	C4707	F1H1A105A025	C 1UF , 10V	
	C4718	F1G1C104A081	C 0.1UF, 16V	
	C4721	F1G1C104A081	C 0.1UF, 16V	
	C4771	F1G1C104A077	C 0.1UF, 25V	
	C4772	F1G1C104A081	C 0.1UF, 16V	
	C4779	F1J0J106A004	C 10UF , 6.3V	
	C4792	F1H1H102A831	C 1000PF , 50V	
	C4793	F1H1H102A831	C 1000PF , 50V	
	C4796	F1H1E104A029	C 0.1UF , 25V	
	C4797	F1K1C106A126	C 10UF , 16V	
	C4798	F1G1C104A081	C 0.1UF, 16V	
	C4799	F1G1C104A081	C 0.1UF, 16V	
	C4800	F1K1E106A136	C 10UF , 25V	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C4803	F1H1H104A970	C 0.1UF, 50V	
	C4804	F1G1H330A565	C 33PF , 50V	
	C4805	F1H1H473A918	C 0.047UF , 50V	
	C4806	F1H1H104A970	C 0.1UF, 50V	
	C4807	F1G1H3320004	C 3300PF , 50V	
	C4808	F1G1C104A081	C 0.1UF, 16V	
	C4809	F1J1E105A231	C 1UF, 25V	
	C4810	F1K1E225A085	C 2.2UF, 25V	
	C4811	F1G1H101A731	C 100PF , 50V	
	C4812	F1H1H473A918	C 0.047UF , 50V	
	C4813	F1H1H104A970	C 0.1UF, 50V	
	C4814	F1H1H473A918	C 0.047UF , 50V	
	C4815	F1H1H104A970	C 0.1UF , 50V	
	C4816	F1K1E225A085	C 2.2UF, 25V	
	C4817	F1J1E105A231	C 1UF, 25V	
	C4818	F1J1E475A182	C 4.7UF , 25V	
	C4819	F1J1E475A182	C 4.7UF , 25V	
	C4820	F1J1E475A182	C 4.7UF , 25V	
	C4821	F1H1H104A970	C 0.1UF, 50V	
	C4822	F1G1C104A081	C 0.1UF, 16V	
	C4823	F1H1H104A970	C 0.1UF, 50V	
	C4824	F1G1C104A081	C 0.1UF, 16V	
	C4825	F1G1A105A047	C 1UF , 10V	
	C4826	F1G1H1020008	C 1000PF , 50V	
	C4827	F1H0J1050013	C 1UF , 6.3V	
	C4828	F2H0J1010009	C 100UF , 6.3V	
	C4829	F1G1H330A565	C 33PF , 50V	
	C4830	F1K1E106A136	C 10UF , 25V	
	C4831	F1K1E106A136	C 10UF , 25V	
	C4832	F1G1A105A047	C 1UF , 10V	
	C4833	F1G1C104A081	C 0.1UF, 16V	
	C4834	F1H1H104A970	C 0.1UF, 50V	
	C4838	F1J1E105A231	C 1UF , 25V	
	C4842	ERJ2GEJ102X	F 0.1UF , 16V	
	C4844	F1G1C104A081	C 0.1UF, 16V	
	C4846	F1K1E106A136	C 10UF , 25V	
	C4847	F1G1C104A081	C 0.1UF, 16V	
	C4848	F1G1C104A081	C 0.1UF, 16V	
	C4849	F1G1C104A081	C 0.1UF, 16V	
	C4851	F1G1C104A081	C 0.1UF, 16V	
	C4852	F1H1H473A918	C 0.047UF , 50V	
	C4853	F1G1C104A081	C 0.1UF, 16V	
	C4854	F1J1A106A087	C 10UF , 10V	
	C4855	F1G1C104A081	C 0.1UF, 16V	
	C4856	F1G1C104A081	C 0.1UF, 16V	
	C4857	F1G1C104A081	C 0.1UF, 16V	
	C4858	F1G1C104A081	C 0.1UF, 16V	
	C4859	F1G1C104A081	C 0.1UF, 16V	
	C4863	F1K1E225A085	C 2.2UF, 25V	
	C4864	F1K1E225A085	C 2.2UF, 25V	
	C4872	F1H1H104A970	C 0.1UF, 50V	
	C4873	F1H1H104A970	C 0.1UF, 50V	
	C4876	F1H1H104A970	C 0.1UF, 50V	
	C5521	F1G1C104A081	C 0.1UF, 16V	
	C5522	F1G1C104A081	C 0.1UF, 16V	
	C5689	F1K0J226A008	C 22UF , 6.3V	
	C5690	F1K0J226A008	C 22UF , 6.3V	
	C5692	F1K1E106A136	C 10UF , 25V	
	C5694	F1H1E104A029	C 0.1UF , 25V	
	C5695	F1G1E1030005	C 0.01UF , 25V	
	C5696	F1G1E1030005	C 0.01UF , 25V	
	C5700	F1H0J475A041	C 4.7UF , 6.3V	
	C5701	F1H0J475A041	C 4.7UF , 6.3V	
	C5702	F1H1A105A025	C 1UF , 10V	
	C5703	F1H1A105A025	C 1UF , 10V	
	C5704	F1K1E106A136	C 10UF , 25V	
	C5705	F1K1E106A136	C 10UF , 25V	
	C5706	F1G1E1030005	C 0.01UF , 25V	
	C5707	F1G1C104A081	C 0.1UF , 16V	
	C5708	F1K0J226A008	C 22UF , 6.3V	
	C5709	F1K0J226A008	C 22UF , 6.3V	
	C5711	F1K1E106A136	C 10UF , 25V	
	C5713	F1H1E104A029	C 0.1UF , 25V	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C5714	F1G1C153A081	C 0.015UF , 16V	
	C5715	F1G1E822A123	C 8200PF , 25V	
	C5719	F1K0J226A008	C 22UF , 6.3V	
	C5720	F1K0J226A008	C 22UF , 6.3V	
	C5722	F1K1E106A136	C 10UF , 25V	
	C5724	F1H1E104A029	C 0.1UF , 25V	
	C5725	F1G1C153A081	C 0.015UF , 16V	
	C5726	F1G1C153A081	C 0.015UF , 16V	
	C5730	F1K1E106A136	C 10UF , 25V	
	C5731	F1K1E106A136	C 10UF , 25V	
	C5733	F2H1E470A029	C 47UF , 25V	
	C5734	F1J1E105A231	C 1UF , 25V	
	C5736	F1H0J1050013	C 1UF , 6.3V	
	C5737	F1H0J1050013	C 1UF , 6.3V	
	C5738	F1H0J1050013	C 1UF , 6.3V	
	C5739	F1H0J1050013	C 1UF , 6.3V	
	C5764	F1H1A105A025	C 1UF , 10V	
	C5765	F1H1A105A025	C 1UF , 10V	
	C5771	F1H1E333A029	C 0.033UF , 25V	
	C5776	F1J1A106A087	C 10UF , 10V	
	C5777	F1J1A106A087	C 10UF , 10V	
	C5778	F1G1H102A730	C 1000PF , 50V	
	C5779	F1G1H102A730	C 1000PF , 50V	
	C5780	F1G1H102A730	C 1000PF , 50V	
⚠	C7001	F0CAF224A021	F 0.22UF , 250V	
⚠	C7003	F0CAF224A021	F 0.22UF , 250V	
⚠	C7004	F1A2E221A003	C 220PF , 250V	
⚠	C7005	F1A2E221A003	C 220PF , 250V	
⚠	C7010	F1A2E221A003	C 220PF , 250V	
	C7011	F1A2E221A003	C 220PF , 250V	
	C7032	F1J1H104A835	C 0.1UF , 50V	
	C7201	F1J1H474A757	C 0.47UF , 50V	
	C7203	F1J1H104A835	C 0.1UF , 50V	
	C7204	F1J1H221A834	C 220PF , 50V	
	C7206	F1J1C105A197	C 1UF , 16V	
	C7207	F1J1H332A834	C 3300PF , 50V	
	C7208	F1J1H102A834	C 1000PF , 50V	
	C7211	F1A3A471A060	C 470PF , 1KV	
	C7213	F1A3A222A060	C 2200PF , 1KV	
	C7214	F2A2W1710001	C 170UF , 450V	
	C7217	F0CZZ105A097	C 1UF , 250V	
	C7218	F0CZZ105A097	C 1UF , 250V	
	C7221	F1J1H474A757	C 0.47UF , 50V	
	C7251	F1J1H224A839	C 0.22UF , 50V	
	C7252	F1J1H224A839	C 0.22UF , 50V	
	C7301	ECQE6103KF	P 0.01UF , 630V	
	C7302	F1A3A101A060	C 100PF , 1KV	
	C7303	F1J1H102A834	C 1000PF , 50V	
	C7304	F1J1H223A834	C 0.022UF , 50V	
	C7305	F1J1H471A834	C 470PF , 50V	
	C7306	F1J1H221A836	C 220PF , 50V	
	C7307	F2A1E101A089	E 100UF , 25V	
	C7318	F1A2E471A003	C 470PF , 250V	
	C7401	F2A2W2200020	E 22UF , 450V	
	C7402	ECQE2103KF	P 0.01UF , 250V	
	C7404	F1J1H474A757	C 0.47UF , 50V	
	C7405	F1J1H103A834	C 0.01UF , 50V	
	C7406	F2A1H220A115	E 22UF , 50V	
	C7407	F2A1E101A089	E 100UF , 25V	
	C7409	F1J1H471A834	C 470PF , 50V	
	C7411	F1A2E102A004	C 1000PF , 250V	
	C7412	F1A2E102A004	C 1000PF , 250V	
	C7505	F2A1E681A100	E 680UF , 25V	
	C7506	F2A1E681A100	R 680UF , 25V	
	C7510	F1J1H103A834	C 0.01UF , 50V	
	C7514	F2A1E681A100	R 680UF , 25V	
	C7515	F1A3A471A060	C 470PF , 1KV	
	C7601	F2A1A102A118	E 1000UF , 10V	
	C7602	F1J1H474A757	C 0.47UF , 50V	
	C7604	F1A3A102A060	C 1000PF , 1KV	
	C7701	F1J1E105A231	C 1UF , 25V	
	C7703	F1J1E3340003	C 0.33UF , 25V	
	C7802	F1J1H104A835	C 0.1UF , 50V	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C7803	FLJ1H104A835	C 0.1UF , 50V	
	C7804	FLJ1H104A835	C 0.1UF , 50V	
	C7805	FLJ1H474A757	C 0.47UF , 50V	
	C7806	FLJ1H474A757	C 0.47UF , 50V	
	C7807	FLA3A221A060	C 2200PF , 1KV	
	C7808	FLA3A221A060	C 2200PF , 1KV	
	C7809	FLJ1H102A834	C 1000PF , 50V	
	C7810	FLJ1H102A834	C 1000PF , 50V	
	C7813	FLJ1H101A836	C 100PF , 50V	
	C7814	FLJ1H101A836	C 100PF , 50V	
	C7815	FLJ1H103A834	C 0.01UF , 50V	
	C7816	FLJ1C105A197	C 1UF , 16V	
	C7817	FLJ1C105A197	C 1UF , 16V	
	C7821	FLA3A222A060	C 2200PF , 1KV	
	C7822	FLA3A221A060	C 2200PF , 1KV	
	C7823	FLA3A222A060	C 2200PF , 1KV	
	C7852	FLJ1H104A835	C 0.1UF , 50V	
	C7854	FLJ1H474A757	C 0.47UF , 50V	
	C7855	FLJ1H474A757	C 0.47UF , 50V	
	C7856	FLJ1E224A227	C 0.22UF , 25V	
	C7858	FLJ1C105A197	C 1UF , 16V	
	C7859	FLJ1H471A753	C 470PF , 50V	
	C7860	FLJ1H103A834	C 0.01UF , 50V	
	C7861	FLJ1H104A835	C 0.1UF , 50V	
	C7862	FLJ1A2250007	C 2.2UF , 10V	
	C7863	FLJ1C105A197	C 1UF , 16V	
	C7864	FLJ1H103A834	C 0.01UF , 50V	
	C7865	FLJ1H104A835	C 0.1UF , 50V	
	C7866	FLJ1H103A834	C 0.01UF , 50V	
	C7867	FLJ1H103A834	C 0.01UF , 50V	
	C7868	FLJ1H472A834	C 4700PF , 50V	
	C7869	FLJ1H472A834	C 4700PF , 50V	
	C7881	FLB3J100A013	C 10PF , 6.3KV	
	C7882	FLB3J220A013	C 22PF , 6.3KV	
	C7883	FLJ1H222A836	C 2200PF , 50V	
	C7884	FLJ1H102A836	C 1000PF , 50V	
	C7885	FLB3J220A013	C 22PF , 6.3KV	
	C7886	FLB3J270A013	C 27PF , 6.3KV	
	C7887	FLJ1H472A729	C 4700PF , 50V	
	C7888	FLJ1H221A836	C 220PF , 250V	
	C7890	FLA2E221A003	C 220PF , 250V	
	C7950	FLJ1H104A835	C 0.1UF , 50V	
	C7951	FLJ1H104A835	C 0.1UF , 50V	
	C7952	FLJ1H104A835	C 0.1UF , 50V	
	C7953	FLJ1H104A835	C 0.1UF , 50V	
	C8001	FLH0J1050013	C 1UF , 6.3V	
	C8002	FLH0J1050013	C 1UF , 6.3V	
	C8003	FLG1C104A081	C 0.1UF , 16V	
	C8004	FLG1C104A081	C 0.1UF , 16V	
	C8005	FLG1C104A081	C 0.1UF , 16V	
	C8006	FLG1C104A081	C 0.1UF , 16V	
	C8007	FLG1H6R0A732	C 6PF , 50V	
	C8008	FLG1H7R0A732	C 7PF , 50V	
	C8009	FLJ1A475A087	C 4.7UF , 10V	
	C8011	FLG1C104A081	C 0.1UF , 16V	
	C8012	FLG1C104A081	C 0.1UF , 16V	
	C8013	FLG1C104A081	C 0.1UF , 16V	
	C8014	FLG1C104A081	C 0.1UF , 16V	
	C8015	FLG1C151A117	C 150PF , 16V	
	C8016	FLG1C104A081	C 0.1UF , 16V	
	C8017	FLG1C104A081	C 0.1UF , 16V	
	C8018	FLG1C104A081	C 0.1UF , 16V	
	C8019	FLG1C104A081	C 0.1UF , 16V	
	C8020	FLG1C104A081	C 0.1UF , 16V	
	C8021	FLG1C104A081	C 0.1UF , 16V	
	C8022	FLG1C103A116	C 0.01UF , 16V	
	C8023	FLG1H5R0A564	C 5PF , 50V	
	C8024	FLG1E1030005	C 0.01UF , 25V	
	C8025	FLG1C5R0A118	C 5PF , 16V	
	C8026	FLG1E1030005	C 0.01UF , 25V	
	C8027	FLG1C104A081	C 0.1UF , 16V	
	C8028	FLG1C104A081	C 0.1UF , 16V	
	C8029	FLG1E153A103	C 0.015UF , 25V	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C8030	FLJ1A106A087	C 10UF , 10V	
	C8033	FLJ1A106A087	C 10UF , 10V	
	C8034	FLG1C104A081	C 0.1UF , 16V	
	C8035	FLJ1A106A087	C 10UF , 10V	
	C8036	FLG1C104A081	C 0.1UF , 16V	
	C8037	FLG1C104A081	C 0.1UF , 16V	
	C8038	FLG1C104A081	C 0.1UF , 16V	
	C8039	FLJ1A106A087	C 10UF , 10V	
	C8040	FLG1C104A081	C 0.1UF , 16V	
	C8041	FLJ1A106A087	C 10UF , 10V	
	C8042	FLG1C104A081	C 0.1UF , 16V	
	C8043	FLG1A105A047	C 1UF , 10V	
	C8044	FLG1A105A047	C 1UF , 10V	
	C8045	FLG1A105A047	C 1UF , 10V	
	C8046	FLJ0G2260001	C 220UF , 4V	
	C8047	FLG1C104A081	C 0.1UF , 16V	
	C8048	FLG1H1020008	C 1000PF , 50V	
	C8049	FLH0J1050013	C 1UF , 6.3V	
	C8050	FLG1C104A081	C 0.1UF , 16V	
	C8051	FLJ1A106A087	C 10UF , 10V	
	C8053	FLG1C104A081	C 0.1UF , 16V	
	C8054	FLG1C104A081	C 0.1UF , 16V	
	C8056	FLG1C104A081	C 0.1UF , 16V	
	C8058	FLJ1A106A087	C 10UF , 10V	
	C8059	FLH0J1050013	C 1UF , 6.3V	
	C8060	FLG1C104A081	C 0.1UF , 16V	
	C8061	FLG1H1020008	C 1000PF , 50V	
	C8062	FLG1C104A081	C 0.1UF , 16V	
	C8063	FLG1H1020008	C 1000PF , 50V	
	C8064	FLH0J1050013	C 1UF , 6.3V	
	C8065	FLG1C104A081	C 0.1UF , 16V	
	C8067	FLH0J1050013	C 1UF , 6.3V	
	C8068	FLH0J1050013	C 1UF , 6.3V	
	C8069	FLG1C104A081	C 0.1UF , 16V	
	C8070	FLG1H1020008	C 1000PF , 50V	
	C8071	FLG1C104A081	C 0.1UF , 16V	
	C8073	FLG1C104A081	C 0.1UF , 16V	
	C8074	FLG1H1020008	C 1000PF , 50V	
	C8075	FLG1C104A081	C 0.1UF , 16V	
	C8078	FLH0J1050013	C 1UF , 6.3V	
	C8079	FLH0J1050013	C 1UF , 6.3V	
	C8080	FLH0J1050013	C 1UF , 6.3V	
	C8081	FLH0J1050013	C 1UF , 6.3V	
	C8082	FLJ1A106A087	C 10UF , 10V	
	C8097	FLJ1A106A087	C 10UF , 10V	
	C8101	FLG1C104A081	C 0.1UF , 16V	
	C8102	FLG1H5R0A564	C 5PF , 50V	
	C8104	FLG1H1020008	C 1000PF , 50V	
	C8105	FLG1H1020008	C 1000PF , 50V	
	C8110	FLG1C104A081	C 0.1UF , 16V	
	C8111	FLJ1A106A087	C 10UF , 10V	
	C8112	FLG1H1020008	C 1000PF , 50V	
	C8113	FLH0J1050013	C 1UF , 6.3V	
	C8116	FLG1C104A081	C 0.1UF , 16V	
	C8120	FLG1C104A081	C 0.1UF , 16V	
	C8121	FLG1H1020008	C 1000PF , 50V	
	C8127	FLG1C104A081	C 0.1UF , 16V	
	C8130	FLG1C104A081	C 0.1UF , 16V	
	C8131	FLG1H1020008	C 1000PF , 50V	
	C8132	FLH0J1050013	C 1UF , 6.3V	
	C8133	FLG1H1020008	C 1000PF , 50V	
	C8136	FLG1C104A081	C 0.1UF , 16V	
	C8139	FLG1C104A081	C 0.1UF , 16V	
	C8140	FLG1H1020008	C 1000PF , 50V	
	C8141	FLG1C104A081	C 0.1UF , 16V	
	C8143	FLG1A105A047	C 1UF , 10V	
	C8144	FLG1A105A047	C 1UF , 10V	
	C8145	FLG1C104A081	C 0.1UF , 16V	
	C8146	FLG1H1020008	C 1000PF , 50V	
	C8147	FLG1C104A081	C 0.1UF , 16V	
	C8148	FLG1H1020008	C 1000PF , 50V	
	C8303	FLG1H1020008	C 1000PF , 50V	
	C8304	FLH0J1050013	C 1UF , 6.3V	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C8305	F1G1H221A541	C 220PF , 50V	
	C8306	F1G1H152A571	C 1500PF , 50	
	C8307	F1G1H222A571	C 2200PF , 50V	
	C8308	F1G1C104A081	C 0.1UF , 16V	
	C8312	F1G1H181A541	C 180PF , 50V	
	C8313	F1G1C104A081	C 0.1UF , 16V	
	C8314	F1G1C104A081	C 0.1UF , 16V	
	C8315	F1G1H1020008	C 1000PF , 50V	
	C8324	F2H0J221A055	C 2.2UF , 6.3V	
	C8349	F1G1H1020008	C 1000PF , 50V	
	C8350	F1G1C104A081	C 0.1UF , 16V	
	C8351	F1G1H1020008	C 1000PF , 50V	
	C8352	F1G1C104A081	C 0.1UF , 16V	
	C8353	F1H0J1050013	C 1UF , 6.3V	
	C8355	F1H0J1050013	C 1UF , 6.3V	
	C8370	F1G1C104A081	C 0.1UF , 16V	
	C8501	F1G1C104A081	C 0.1UF , 16V	
	C8503	F1G1C104A081	C 0.1UF , 16V	
	C8504	F1G1C104A081	C 0.1UF , 16V	
	C8505	F1G1C104A081	C 0.1UF , 16V	
	C8506	F1G1C104A081	C 0.1UF , 16V	
	C8512	F2H1C470A041	E 47UF , 16V	
	C8513	F1G1C104A081	C 0.1UF , 16V	
	C8514	F1G1E1030005	C 0.01UF , 25V	
	C8515	F1J1A106A087	C 10UF , 10V	
	C8517	F1J1A106A087	C 10UF , 10V	
	C8519	F1H0J1050013	C 1UF , 6.3V	
	C8520	F1G1C104A081	C 0.1UF , 16V	
	C8851	F1H1A105A025	C 10UF , 10V	
	C8852	F1H1A105A025	C 1UF , 10V	
	C9900	F1J1C475A170	C 4.7UF , 10V	
	C9903	F1G1C104A081	C 0.1UF , 16V	
		DIODES		
	D1002	EZJZ0V120JA	VARISTOR	
	D1003	EZJZ0V120JA	VARISTOR	
	D1004	EZAEG2A50AX	FILTER	
	D1005	EZAEG2A50AX	FILTER	
	D1006	EZAEG2A50AX	FILTER	
	D1007	EZAEG2A50AX	FILTER	
	D1008	EZAEG2A50AX	FILTER	
	D2144	B0JCME000076	DIODE	
	D2145	B0ACCCJ000048	DIODE	
	D2300	B0BC01100001	DIODE	
	D2500	B3AGB0000057	DIODE	
	D2753	B3AEB0000131	LED DIODE	
	D4102	EZJZ0V120JA	VARISTOR	
	D4503	EZAEG2A50AX	FILTER	
	D4504	DZ2J056M0L	DIODE	
	D4505	DZ2J056M0L	DIODE	
	D4506	EZAEG2A50AX	FILTER	
	D4507	EZAEG2A50AX	FILTER	
	D4508	EZAEG2A50AX	FILTER	
	D4509	DZ2J056M0L	DIODE	
	D4510	EZAEG2A50AX	FILTER	
	D4511	EZAEG2A50AX	FILTER	
	D4703	B0JCME000076	DIODE	
	D4705	B0ACCCJ000048	DIODE	
	D4706	B0JCME000076	DIODE	
	D4707	B0ACCCJ000048	DIODE	
	D4800	B0JCME000076	DIODE	
	D4801	B0BC019A0007	DIODE	
	D4802	B0BC03200003	DIODE	
	D4803	B0JCPE000004	DIODE	
	D4804	B0JCPE000004	DIODE	
	D4805	B0JCME000076	DIODE	
	D4806	B0JCME000076	DIODE	
	D4807	B0JCME000076	DIODE	
	D4808	B0JCME000076	DIODE	
	D4809	B0JCME000076	DIODE	
	D4810	B0JCME000076	DIODE	
	D4811	B0JCME000076	DIODE	
	D4812	B0JCME000076	DIODE	
	D4813	B0JCME000076	DIODE	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	D4814	B0JCME000076	DIODE	
	D4815	B0ACCCJ000048	DIODE	
	D4816	B0ACCCJ000048	DIODE	
	D4817	B0BC4R700007	DIODE	
	D4818	B0BC17000001	DIODE	
	D4823	B0BC4R700007	DIODE	
	D4830	B0BC022A0007	DIODE	
	D4831	B0ACCCJ000048	DIODE	
	D4832	DZ2J047M0L	DIODE	
	D4833	B0ACCCJ000048	DIODE	
	D5600	B0ADEJ000035	DIODE	
	D5629	B0BC8R100004	DIODE	
	D5633	B0ACCCJ000048	DIODE	
	D5670	B0ACCCJ000048	DIODE	
	D5671	B0ACCCJ000048	DIODE	
	D5672	B0ACCCJ000048	DIODE	
	D5673	B0ACCCJ000048	DIODE	
	D5674	B0ACCCJ000048	DIODE	
	D5765	B0HCCM000014	DIODE	
	D5770	B0JCPCG000030	DIODE	
	D5771	B0JCPCG000030	DIODE	
	D5772	B0JCPCG000030	DIODE	
	⚠ D7001	ERZV10V621T2	VARISTOR	
	⚠ D7002	ERZV10V621T2	VARISTOR	
	D7030	B0FBAT000008	DIODE	
	D7040	B0ACCCJ000048	DIODE	
	D7201	B0JAME000091	DIODE	
	D7202	B0JAME000091	DIODE	
	D7204	B0FABR000004	DIODE	
	D7207	B0EAKT000012	DIODE	
	D7251	DZ2J068M0L	DIODE	
	D7252	B0ACCCJ000048	DIODE	
	D7253	B0ACCCJ000048	DIODE	
	D7301	B0EAKT000019	DIODE	
	D7302	B0EAKT000019	DIODE	
	D7303	B0JAME000091	DIODE	
	D7304	B0JAME000091	DIODE	
	D7306	B0JAME000091	DIODE	
	D7307	B0BC010A0007	DIODE	
	D7312	B0ECKM000048	DIODE	
	D7401	B0EAKR000016	DIODE	
	D7402	B0EAKT000019	DIODE	
	D7403	AU02A	DIODE	
	D7404	AU02A	DIODE	
	D7405	B0JAME000091	DIODE	
	D7407	B0EBKT000007	DIODE	
	D7408	B0EAKT000019	DIODE	
	D7503	B0HESM000001	DIODE	
	D7504	MTZJ15B	ZENER DIODE	
	D7552	B0JBSL000031	DIODE	
	D7601	B0BA01000070	DIODE	
	D7603	B0JAPK000011	DIODE	
	D7704	B0ACCCJ000048	DIODE	
	D7705	B0BC8R100004	DIODE	
	D7753	B0BC01400017	DIODE	
	D7801	B0ECKP000055	DIODE	
	D7802	B0ECKP000055	DIODE	
	D7803	B0ECKP000055	DIODE	
	D7804	B0ECKP000055	DIODE	
	D7805	B0ACCCJ000048	DIODE	
	D7806	EU02AV1	DIODE	
	D7807	EU02AV1	DIODE	
	D7808	B0BC01400017	DIODE	
	D7809	B0BC01400017	DIODE	
	D7820	B0BC01400017	DIODE	
	D7821	DZ2J150M0L	DIODE	
	D7822	B0BC01400017	DIODE	
	D7823	DZ2J150M0L	DIODE	
	D7824	DZ2J047M0L	DIODE	
	D7825	DZ2J047M0L	DIODE	
	D7826	DZ2J150M0L	DIODE	
	D7827	DZ2J120M0L	DIODE	
	D7828	B0BC01400017	DIODE	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	D7829	B0BC01400017	DIODE	
	D7830	B0ACDJ000014	DIODE	
	D7831	B0ACDJ000014	DIODE	
	D7832	B0ACJ0000048	DIODE	
	D7833	DZ2J047M0L	DIODE	
	D7851	B0ACJ0000048	DIODE	
	D7852	B0AACK000004	DIODE	
	D7853	B0AACK000004	DIODE	
	D7854	B0ACJ0000048	DIODE	
	D7855	B0ACDJ000014	DIODE	
	D7856	B0ACDJ000014	DIODE	
	D7857	B0ACJ0000048	DIODE	
	D7858	B0ACJ0000048	DIODE	
	D7860	B0ADJ0000100	DIODE	
	D7861	B0ADJ0000100	DIODE	
	D7862	B0ACDJ000014	DIODE	
	D7863	B0ADJ0000100	DIODE	
	D7864	B0ADJ0000100	DIODE	
	D7865	B0ACDJ000014	DIODE	
	D7880	DZ2J150M0L	DIODE	
	D7881	DZ2J150M0L	DIODE	
	D7888	DZ2J068M0L	DIODE	
	D7889	DZ2J047M0L	DIODE	
	D8300	B0ACJ0000048	DIODE	
		INTEGRATED CIRCUITS		
	IC2106	C1AB00003069	IC	
	IC2108	C1AB00003240	IC	
	IC2109	C1AB00002428	IC	
	IC2110	C0JBAB0000854	IC	
	IC2300	C0CBZZE00001	IC	
	IC4700	C1ZBZ0004161	IC	
	IC4701	C1ZBZ0004240	IC	
	IC4702	C0ABBB000230	IC	
	IC4800	C0DBZY000343	IC	
	IC4802	C0FBFB000074	IC	
	IC5605	C0DBAGF00030	IC	
	IC5606	C0DBAYY00755	IC	
	IC5607	C0DBGYY00887	IC	
	IC5608	C0DBAYY00755	IC	
	IC5609	C0DBGYY00887	IC	
	IC5610	C0DBAYY00755	IC	
	IC5613	C0DBEYG00002	IC REGULATOR	
	IC7201	C0DBBZG00004	IC	
	IC7301	C0DABYY00020	IC	
	IC7401	C0DABYY00018	IC	
	IC7501	C0DBZMC00006	IC	
	IC7601	C0DBZMC00006	IC	
	IC7801	C0DBZY000321	IC	
	IC7851	C0ZBZ0001729	IC	
	IC8001	C1AB00003250	IC	
	IC8002	C3ABSY000036	IC	
	IC8004	TVR4G151-AA	EEPROM IC (C3EBGY000026)	
	IC8502	TVR4G78	ROM IC (C3FBQD000024)	
	IC8503	TVR4G156-AB	EEPROM IC (C3EBKY000014)	
	IC8850	C0DBGYY00203	IC	
		COILS		
	L2110	J0JCC0000287	COIL	
	L2111	J0JCC0000287	COIL	
	L2120	J0JCC0000364	BEAD COIL	
	L2121	J0JCC0000364	BEAD COIL	
	L2123	J0JCC0000287	COIL	
	L2125	J0JCC0000287	COIL	
	L2126	J0JYC0000068	COIL	
	L2127	J0JYC0000068	COIL	
	L2128	G1C330MA0416	INDUCTOR	
	L2129	G1C330MA0416	INDUCTOR	
	L2130	G1C330MA0416	INDUCTOR	
	L2131	G1C330MA0416	INDUCTOR	
	L2134	J0JHC0000075	BEAD COIL	
	L2135	ELJFC2R2KFB	CHIP INDUCTOR	
	L4500	J0JYC0000068	COIL	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	L4501	J0JYC0000068	COIL	
	L4502	J0JYC0000068	COIL	
	L4503	J0JYC0000068	COIL	
	L4504	J0JYC0000068	COIL	
	L4505	J0JYC0000068	COIL	
	L4506	J0JYC0000068	COIL	
	L4507	J0JYC0000068	COIL	
	L4508	J0JYC0000068	COIL	
	L4511	J0JYC0000068	COIL	
	L4512	J0JYC0000068	COIL	
	L4513	J0JYC0000068	COIL	
	L4800	J0JHC0000118	COIL	
	L4801	J0JHC0000077	BEAD CORE	
	L4802	G1C220MA0234	COIL	
	L4803	G1C100MA0291	COIL	
	L5609	G1C6R8MA0416	COIL	
	L5610	G1C100MA0416	COIL	
	L5611	G1C220MA0416	COIL	
	L5613	J0JHC0000075	BEAD COIL	
	L7202	EXCELD35V	CORE	
	L7204	EXCELD35V	CORE	
	L7205	EXCELD35V	CORE	
	L7206	EXCELD35V	CORE	
	L7301	EXCELSA35T	BEAD CORE	
	L7401	EXCELD35V	CORE	
	L7402	EXCELD35V	CORE	
	L7601	J0JKA0000038	BEAD CORE	
	L7801	EXCELD35V	CORE	
	L7802	EXCELD35V	CORE	
	L7803	EXCELSA39V	BEAD CORE	
	L7804	EXCELD35V	CORE	
	L7805	EXCELD35V	CORE	
	L7806	EXCELD35V	CORE	
	L8000	J0JYC0000322	COIL	
	L8002	J0JYC0000322	COIL	
	L8003	J0JYC0000322	COIL	
	L8004	J0JYC0000322	COIL	
	L8005	J0JYC0000322	COIL	
	L8006	J0JYC0000322	COIL	
	L8007	ERJ2GEJ1R0X	RESISTOR	
	L8008	J0JYC0000322	COIL	
	L8009	J0JYC0000322	COIL	
	L8010	J0JYC0000322	COIL	
	L8011	J0JYC0000322	COIL	
	L8012	J0JYC0000322	COIL	
	L8013	J0JYC0000322	COIL	
	L8014	J0JYC0000322	COIL	
	L8016	J0JYC0000322	COIL	
	L8017	J0JYC0000322	COIL	
	L8302	J0JGC0000070	BEAD CORE	
	L8306	J0JYC0000322	COIL	
	L8315	J0JCC0000269	COIL	
	L8500	J0JYC0000322	COIL	
	L8501	J0JYC0000322	COIL	
		TRANSISTORS		
	Q2101	B1ABCF000231	TRANSISTOR	
	Q2102	B1ABCF000231	TRANSISTOR	
	Q2109	DSC2001S0L	TRANSISTOR	
	Q2110	DSC2001S0L	TRANSISTOR	
	Q2111	DSA2001S0L	TRANSISTOR	
	Q2112	DSC2001S0L	TRANSISTOR	
	Q2113	DSC2001S0L	TRANSISTOR	
	Q2145	B1ABCF000231	TRANSISTOR	
	Q2246	B1ABCF000231	TRANSISTOR	
	Q2247	B1ABCF000231	TRANSISTOR	
	Q2500	DSC200100L	TRANSISTOR	
	Q2501	DSC200100L	TRANSISTOR	
	Q2504	DSC200100L	TRANSISTOR	
	Q2760	B1ABCF000231	TRANSISTOR	
	Q2761	B1ABCF000231	TRANSISTOR	
	Q4500	DSC2001S0L	TRANSISTOR	
	Q4501	DSC2001S0L	TRANSISTOR	
	Q4502	DSC2001S0L	TRANSISTOR	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	Q4513	B1ADCE000022	TRANSISTOR	
	Q4514	B1HFCFA00026	TRANSISTOR	
	Q4700	DSA200100L	TRANSISTOR	
	Q4702	DSC2001S0L	TRANSISTOR	
	Q4703	DSC2001S0L	TRANSISTOR	
	Q4704	DSC2001S0L	TRANSISTOR	
	Q4705	DSC2001S0L	TRANSISTOR	
	Q4706	DSC2001S0L	TRANSISTOR	
	Q4707	DSC2001S0L	TRANSISTOR	
	Q4801	DSC2001S0L	TRANSISTOR	
	Q4802	B1CFQD000001	TRANSISTOR	
	Q4803	B1ABCF000231	TRANSISTOR	
	Q4804	B1ADCE000022	TRANSISTOR	
	Q4805	B1ADCE000022	TRANSISTOR	
	Q5495	DSC200100L	TRANSISTOR	
	Q5602	B1ADCE000022	TRANSISTOR	
	Q5612	B1ABCF000231	TRANSISTOR	
	Q5613	B1ABCF000231	TRANSISTOR	
	Q5614	B1ABCF000231	TRANSISTOR	
	Q5615	B1ABGC000011	TRANSISTOR	
	Q5616	DSC2001S0L	TRANSISTOR	
	Q7032	B1ABGF000019	TRANSISTOR	
	Q7201	B1CERR000043	TRANSISTOR	
	Q7251	DSA200100L	TRANSISTOR	
	Q7252	DSC200100L	TRANSISTOR	
	Q7301	B1CEPU000007	TRANSISTOR	
	Q7701	B1DHDC000028	TRANSISTOR	
	Q7702	DSC200100L	TRANSISTOR	
	Q7704	DSC200100L	TRANSISTOR	
	Q7754	DSA2001S0L	TRANSISTOR	
	Q7801	B1CERQ000067	TRANSISTOR	
	Q7802	B1CERQ000067	TRANSISTOR	
	Q7803	B1CERQ000067	TRANSISTOR	
	Q7804	B1CERQ000067	TRANSISTOR	
	Q7805	DSC2001S0L	TRANSISTOR	
	Q7808	DSC200100L	TRANSISTOR	
	Q8002	B1ABCF000231	TRANSISTOR	
	Q8003	B1ABCF000231	TRANSISTOR	
	Q8005	B1CBGD000001	TRANSISTOR	
	Q8301	DSA2001S0L	TRANSISTOR	
	Q8302	DSA2001S0L	TRANSISTOR	
	Q8303	B1ABCF000231	TRANSISTOR	
	Q8304	B1ABCF000231	TRANSISTOR	
	Q8305	B1ADCE000022	TRANSISTOR	
	Q8306	B1ADCE000022	TRANSISTOR	
	Q8307	B1ABCF000231	TRANSISTOR	
	Q8308	DSA2001S0L	TRANSISTOR	
	Q8309	DSC2001S0L	TRANSISTOR	
	Q8310	DSC2001S0L	TRANSISTOR	
	Q9900	DSC200100L	TRANSISTOR	
	Q9901	DSA200100L	TRANSISTOR	
	Q9902	DSC200100L	TRANSISTOR	
	Q9904	DSC200100L	TRANSISTOR	
		RESISTORS		
	R1179	D1BB7151A012	M 75OHM , 1/10W	
	R1180	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R2104	D0GB473JA065	C 47KOHM ,J, 1/10W	
	R2105	D0GB473JA065	C 47KOHM ,J, 1/10W	
	R2106	D0GB103JA065	C 10KOHM ,J, 1/10W	
	R2107	D0GB103JA065	C 10KOHM ,J, 1/10W	
	R2114	D1BB75R0A012	75OHM , 1/10W	
	R2115	D1BB75R0A012	75OHM , 1/10W	
	R2116	D1BB75R0A012	75OHM , 1/10W	
	R2117	ERJ2GEJ470X	47OHM , 1/10W	
	R2118	ERJ2GEJ470X	47OHM , 1/10W	
	R2119	ERJ2GEJ470X	47OHM , 1/10W	
	R2122	ERJ2GEJ221X	220OHM , 1/10W	
	R2123	D1BB3302A012	C 33KOHM , 1/10W	
	R2124	D1BB3302A012	C 33KOHM , 1/10W	
	R2130	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R2156	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2157	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2158	ERJ2GEJ101X	100OHM ,J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R2159	ERJ2GEJ104X	F 100KOHM ,J, 1/10W	
	R2160	ERJ2GEJ104X	F 100KOHM ,J, 1/10W	
	R2164	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R2184	ERJ2GEJ220X	F 220OHM ,J, 1/10W	
	R2185	ERJ2GEJ220X	F 220OHM ,J, 1/10W	
	R2198	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R2199	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R2200	D1BB75R0A012	75OHM , 1/10W	
	R2201	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2205	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2206	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2207	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2208	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2209	D0GA101JA015	100OHM ,J, 1/10W	
	R2210	D0GA101JA015	100OHM ,J, 1/10W	
	R2211	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R2212	ERJ2GEJ104X	F 100KOHM ,J, 1/10W	
	R2213	ERJ2GEJ104X	F 100KOHM ,J, 1/10W	
	R2218	ERJ2GEJ680X	68OHM ,J, 1/10W	
	R2219	ERJ14YJ220U	22OHM ,J, 1/2W	
	R2220	ERJ14YJ220U	22OHM ,J, 1/2W	
	R2221	ERJ14YJ220U	22OHM ,J, 1/2W	
	R2222	ERJ14YJ220U	22OHM ,J, 1/2W	
	R2223	ERJ2GEJ680X	68OHM ,J, 1/10W	
	R2224	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2225	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R2227	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2239	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R2256	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2258	D1BB75R0A012	75OHM , 1/10W	
	R2260	ERJ2GEJ303X	30KOHM ,J, 1/10W	
	R2265	D1BB75R0A012	75OHM , 1/10W	
	R2280	ERJ2GEJ303X	30KOHM ,J, 1/10W	
	R2281	ERJ2GEJ303X	30KOHM ,J, 1/10W	
	R2283	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R2284	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R2285	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R2286	ERJ2GEJ303X	30KOHM ,J, 1/10W	
	R2287	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R2288	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R2289	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2290	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R2298	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2299	D1BB75R0A012	75OHM , 1/10W	
	R2300	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R2303	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R2309	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R2310	D1BB75R0A012	75OHM , 1/10W	
	R2311	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R2312	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2314	ERJ2GEJ303X	30KOHM ,J, 1/10W	
	R2315	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2317	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2318	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2324	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R2325	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R2326	D1BB2212A012	22.1KOHM ,J, 1/10W	
	R2327	D0GBR00J0004	0 OHM ,J, 1/10W	
	R2329	D1BA1822A023	18.2KOHM ,J, 1/10W	
	R2330	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2331	D0GF3R3JA048	3.3OHM ,J, 1/10W	
	R2332	D0GF3R3JA048	3.3OHM ,J, 1/10W	
	R2333	D0GF3R3JA048	3.3OHM ,J, 1/10W	
	R2334	D0GF3R3JA048	3.3OHM ,J, 1/10W	
	R2335	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2339	D0GAR00J0005	0 OHM ,J, 1/10W	
	R2342	J0JBC0000116	0 OHM ,J, 1/10W	
	R2343	J0JBC0000116	0 OHM ,J, 1/10W	
	R2344	J0JBC0000116	0 OHM ,J, 1/10W	
	R2345	J0JBC0000116	0 OHM ,J, 1/10W	
	R2348	ERJ2GEJ303X	30KOHM ,J, 1/10W	
	R2356	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2357	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R2360	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2361	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2362	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2363	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2364	ERJ2GEJ105X	F 1MOHM ,J, 1/10W	
	R2366	ERJ3GEJ101	M 100OHM,J,1/16W	
	R2367	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2376	ERJ6ENF75R0	M 75OHM, 1/10W	
	R2377	ERJ2GEJ104X	F 100KOHM ,J, 1/10W	
	R2378	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2384	DOGAR00J0005	0 OHM ,J, 1/10W	
	R2385	DOGAR00J0005	0 OHM ,J, 1/10W	
	R2386	DOGAR00J0005	0 OHM ,J, 1/10W	
	R2387	DOGAR00J0005	0 OHM ,J, 1/10W	
	R2391	D1BB75R0A012	75OHM , 1/10W	
	R2500	ERJ2RKF2800X	C 280OHM , 1/10W	
	R2502	D0GA473JA015	C 47KOHM ,J, 1/10W	
	R2504	D0GA223JA015	C 22KOHM ,J, 1/10W	
	R2507	D0GA473JA015	C 47KOHM ,J, 1/10W	
	R2508	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2509	D1BA9100A014	C 910OHM , 1/10W	
	R2512	D0GA470JA015	C 47OHM ,J, 1/10W	
	R2514	D0GA562JA015	C 10UF ,J, 1/10W	
	R2515	D0GA124JA015	C 120KOHM ,J, 1/10W	
	R2516	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2517	DOGAR00J0005	0 OHM ,J, 1/10W (A BOARD)	
	R2517	ERJ2GEJ104X	F 100KOHM ,J, 1/10W (V BOARD)	
	R2518	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2529	D0GA332JA015	C 3.3KOM ,J, 1/10W	
	R2530	D0GA332JA015	C 3.3KOM ,J, 1/10W	
	R2532	DOGAR00Z0001	C 0OHM ,J, 1/10W	
	R2600	D0GDR00JA017	C 0OHM ,J, 1/10W	
	R2601	D1BD1741A044	C 1.74KOHM ,J, 1/10W	
	R2602	D1BD1751A044	C 7.15KOHM ,J, 1/10W	
	R2603	D1BD6651A044	C 6.65KOHM ,J, 1/10W	
	R2604	D1BD1432A044	C 14.3KOHM ,J, 1/10W	
	R2701	D0GBR00J0004	C 0OHM ,J, 1/10W	
	R2703	D0GBR00J0004	C 0OHM ,J, 1/10W	
	R2757	ERJ2GEJ182X	1.8KOHM ,J, 1/10W	
	R2759	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2760	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2761	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2762	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R2763	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R2764	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R2765	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2766	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R2767	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R2769	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2770	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R2777	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2778	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R2780	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R3015	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3016	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3017	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3026	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3027	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3124	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3125	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3126	DOGAR00J0005	0 OHM ,J, 1/10W	
	R3256	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4001	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R4210	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4252	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4253	ERJ2GEJ100X	100OHM ,J, 1/10W	
	R4502	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4503	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4504	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4505	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4506	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4507	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R4509	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4512	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4515	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R4516	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4519	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R4520	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R4525	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R4526	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R4527	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R4548	ERJ2GEJ220X	F 22OHM ,J, 1/10W	
	R4549	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R4550	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R4555	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4557	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R4558	ERJ2GEJ560X	56OHM ,J, 1/10W	
	R4563	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4565	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4566	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4567	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4601	DOGAR00J0005	C 0OHM ,J, 1/10W	
	R4602	DOGAR00J0005	C 0OHM ,J, 1/10W	
	R4703	D0GD100JA017	M 10OHM,J,1/10W	
	R4704	D0GD150JA052	C 15OHM ,J, 1/10W	
	R4705	ERJ2GEJ220X	F 22OHM ,J, 1/10W	
	R4706	ERJ2GEJ220X	F 22OHM ,J, 1/10W	
	R4708	DOGAR00J0005	0 OHM ,J, 1/10W	
	R4711	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R4712	ERJ2GEJ221X	220OHM ,J, 1/10W	
	R4715	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R4716	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R4717	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R4729	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R4730	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R4731	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R4739	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4740	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4745	DOGAR00J0005	C 0OHM ,J, 1/10W	
	R4748	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4752	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4753	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4762	EXB2HV220JV	C 22OHM ,J, 1/10W	
	R4774	D0GBR00J0004	C 0OHM ,J, 1/10W	
	R4776	D0GBR00J0004	C 0OHM ,J, 1/10W	
	R4780	EXB2HV220JV	C 22OHM ,J, 1/10W	
	R4781	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R4782	ERJ2GEJ182X	1.8KOHM ,J, 1/10W	
	R4786	DOGAR00J0005	C 0OHM ,J, 1/10W	
	R4787	DOGAR00J0005	C 0OHM ,J, 1/10W	
	R4791	D0GDR00J0004	C 0OHM ,J, 1/10W	
	R4793	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R4794	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R4795	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R4796	D0GDR00J0004	C 0OHM ,J, 1/10W	
	R4802	EXB2HV220JV	C 22OHM ,J, 1/10W	
	R4807	DOGAR00J0005	C 0OHM ,J, 1/10W	
	R4809	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4816	D1BA2202A023	C 22KOHM ,J, 1/10W	
	R4817	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4818	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R4820	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4821	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4822	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R4830	ERJ2GEJ104X	F 100KOHM ,J, 1/10W	
	R4831	ERJ2GEJ104X	F 100KOHM ,J, 1/10W	
	R4833	ERJ2GEJ183X	F 18KOHM ,J, 1/10W	
	R4834	ERJ2GEJ221X	220OHM ,J, 1/10W	
	R4845	EXB28VR000X	E 47UF , 16V	
	R4847	DOGAR00J0005	C 0OHM ,J, 1/10W	
	R4848	DOGAR00Z0001	C 0OHM ,J, 1/10W	
	R4849	EXB28VR000X	E 47UF , 16V	
	R4853	EXB28VR000X	E 47UF , 16V	
	R4857	EXB28VR000X	E 47UF , 16V	
	R4861	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R4869	D0GAR00J0005	C 0OHM ,J, 1/10W	
	R4873	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4874	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4884	D0GD391JA052	390OHM ,J, 1/10W	
	R4885	D1BA1001A023	1KOHM ,J, 1/10W	
	R4886	D1BA2201A023	2.2KOHM ,J, 1/10W	
	R4887	D0GD271JA052	270OHM ,J, 1/10W	
	R4888	D1BA2202A023	22KOHM ,J, 1/10W	
	R4889	D1BA3301A023	3.3KOHM ,J, 1/10W	
	R4890	D1BA1001A023	1KOHM ,J, 1/10W	
	R4891	D1BA3001A023	3KOHM ,J, 1/10W	
	R4892	D1BA3301A023	3.3KOHM ,J, 1/10W	
	R4893	D1BA3002A023	30KOHM ,J, 1/10W	
	R4894	D0GAR00J0005	0 OHM ,J, 1/10W	
	R4895	D1BA2201A023	2.2KOHM ,J, 1/10W	
	R4896	D1BA1002A023	10KOHM ,J, 1/10W	
	R4897	D1BA1002A023	10KOHM ,J, 1/10W	
	R4904	D0GAR00J0005	0 OHM ,J, 1/10W	
	R4911	D0GAR00J0005	0 OHM ,J, 1/10W	
	R4913	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4921	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R4922	D0GAR00J0005	0 OHM ,J, 1/10W	
	R4925	EXB28V100JX	100HM ,J, 1/10W	
	R4926	D0GAR00J0005	0 OHM ,J, 1/10W	
	R4929	ERJ2GEJ100X	100HM ,J, 1/10W	
	R4930	EXB28V100JX	100HM ,J, 1/10W	
	R4934	ERJ2GEJ100X	100HM ,J, 1/10W	
	R4935	ERJ2GEJ100X	100HM ,J, 1/10W	
	R4937	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R4938	ERJ2GEJ100X	100HM ,J, 1/10W	
	R4939	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R4940	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R4942	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R4943	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R4944	EXB28V151JX	F 150OHM ,J, 1/10W	
	R4946	EXB28V471JX	470OHM ,J, 1/10W	
	R4955	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R4958	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R4963	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R4964	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R4965	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R4969	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R4974	D1BA1601A023	C 1.6KOHM ,J, 1/10W	
	R4975	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R4991	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R4995	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R5605	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R5606	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R5607	ERJ2GEJ152X	C 1.5KOHM ,J, 1/10W	
	R5608	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R5610	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R5667	D1BB4301A087	C 4.3KOHM ,J, 1/10W	
	R5668	D1BB1002A087	C 10KOHM ,J, 1/10W	
	R5669	D1BA2201A023	C 2.2KOHM ,J, 1/10W	
	R5670	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R5671	ERJ2GEJ683X	68KOHM ,J, 1/10W	
	R5672	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R5673	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R5674	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R5675	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R5676	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R5678	D1BB9101A087	C 9.1KOHM , 1/10W	
	R5679	D1BB1002A087	C 10KOHM , 1/10W	
	R5680	D1BA2201A023	C 2.2KOHM , 1/10W	
	R5681	D1BB4702A087	C 47KOHM ,J, 1/10W	
	R5682	D1BB1002A087	C 10KOHM , 1/10W	
	R5683	D1BA6801A023	C 6.8KOHM , 1/10W	
	R5694	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R5696	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R5697	D0GB332JA065	C 3.3KOM ,J, 1/10W	
	R5701	D1BA20010002	C 2KOHM ,1/10W	
	R5702	D1BA1001A023	C 1KOHM ,J, 1/10W	
	R5705	D0GDR00J0004	C 0OHM ,J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R5706	D0GDR00J0004	C 0OHM ,J, 1/10W	
	R5707	D0GB150JA065	C 15OHM ,J, 1/10W	
	R5708	D0GB150JA065	C 15OHM ,J, 1/10W	
	R5709	D0GB150JA065	C 15OHM ,J, 1/10W	
	R5710	D0GB2R2JA065	C 2.2KOHM ,J, 1/10W	
	R5711	D0GB2R2JA065	C 2.2OHM , 1/10W	
	R5712	D0GB2R2JA065	2.2OHM ,J, 1/10W	
	R5713	D1BB6201A087	C 6.2KOHM , 1/10W	
	R5714	D1BB1241A087	C 1.24KOHM ,J, 1/10W	
	R5715	D1BB4301A087	C 4.3KOHM , 1/10W	
	R5719	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R5720	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R5721	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R5723	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R5724	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
⚠	R7001	ERC12ZGK105	S 1MOHM,K, 1/2W	
	R7030	D0GD473JA052	C 47KOHM ,J, 1/10W	
	R7031	D0GD821JA052	C 820OHM ,J, 1/10W	
	R7084	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7092	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7094	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7095	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7096	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7097	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7098	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7099	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7100	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7101	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7102	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7103	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7104	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7105	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7106	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7107	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7108	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7109	D0GAR00J0005	0 OHM ,J, 1/10W	
	R7110	ERJ2GEJ680X	M 68OHM ,J, 1/10W	
	R7111	ERJ2GEJ680X	M 68OHM ,J, 1/10W	
	R7201	ERJ6ENF3903	M 390KOHM,1/10W	
	R7202	ERJ6ENF3903	M 390KOHM,1/10W	
	R7203	ERJ6ENF3903	M 390KOHM,1/10W	
	R7204	ERJ6ENF3903	M 390KOHM,1/10W	
	R7205	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7206	D0GD223JA052	C 22KOHM ,J, 1/10W	
	R7209	D0GD104JA052	C 100KOHM,J, 1/4W	
	R7210	D0GD562JA052	C 5.6KOHM ,J, 1/10W	
	R7211	ERDS1TJ471	C 470OHM,J, 1/2W	
	R7212	D0GD681JA052	C 680OHM ,J, 1/10W	
	R7213	D0GF101JA048	C 100OHM ,J, 1/10W	
	R7214	ERDS1TJ220	C 22OHM,J, 1/2W	
	R7215	D0GD104JA052	C 100KOHM,J, 1/4W	
	R7216	ERX2SJR33P	M 0.33OHM, J, 2W	
	R7217	ERX2SJR22P	M 0.22OHM, J, 2W	
	R7220	ERJ6ENF3903	M 390KOHM,1/10W	
	R7221	ERJ6ENF3903	M 390KOHM,1/10W	
	R7222	ERJ6ENF3903	M 390KOHM,1/10W	
	R7223	ERJ6ENF3903	M 390KOHM,1/10W	
	R7224	ERJ6ENF1802	M 18KOHM, 1/10W	
	R7225	ERJ6ENF2701	M 2.7KOHM, 1/10W	
	R7226	ERJ6ENF3903	M 390KOHM,1/10W	
	R7227	ERJ6ENF3903	M 390KOHM,1/10W	
	R7228	ERJ6ENF3903	M 390KOHM,1/10W	
	R7229	ERJ6ENF3903	M 390KOHM,1/10W	
	R7230	ERJ6ENF3903	M 390KOHM,1/10W	
	R7231	ERJ6ENF3903	M 390KOHM,1/10W	
	R7232	ERJ6ENF3903	M 390KOHM,1/10W	
	R7233	ERJ6ENF3903	M 390KOHM,1/10W	
	R7235	D0GDR00J0004	C 0OHM ,J, 1/10W	
	R7236	D0GD103JA052	C 10KOHM ,J, 1/10W	
	R7251	ERJ6ENF3903	M 390KOHM,1/10W	
	R7252	ERJ6ENF6042	C 60.4KOHM ,J, 1/10W	
	R7253	ERJ6ENF3903	M 390KOHM,1/10W	
	R7254	ERJ6ENF3903	M 390KOHM,1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R7255	ERJ6ENF3903	M 390KOHM,1/10W	
	R7256	ERJ6ENF3903	M 390KOHM,1/10W	
	R7257	ERJ6ENF3903	M 390KOHM,1/10W	
	R7258	ERJ6ENF3903	M 390KOHM,1/10W	
	R7259	ERJ6ENF3903	M 390KOHM,1/10W	
	R7260	D0GD223JA052	C 220HM ,J, 1/10W	
	R7261	D0GD472JA052	C 4.7KOHM ,J, 1/10W	
	R7262	D0GD103JA052	C 10KOHM ,J, 1/10W	
	R7263	D0GD103JA052	C 10KOHM ,J, 1/10W	
	R7302	ERJ12YJ474U	470KOHM ,J, 1/2W	
	R7303	ERG3SJ470P	M 470HM,J,3W	
	R7304	ERX18JR56P	M 0.56OHM, J, 1W	
	R7306	D0GD102JA052	1KOHM ,J, 1/10W	
	R7308	D0GD102JA052	1KOHM ,J, 1/10W	
	R7309	ERDS1TJ330	C 330HM,J, 1/2W	
	R7310	ERDS1TJ100	C 100HM,J, 1/2W	
	R7312	D0GD101JA052	100OHM ,J, 1/10W	
	R7313	ERDS1TJ151	C 150OHM,J, 1/2W	
	R7317	DOXB106J0003	10MOHM ,J, 1W	
	R7318	D0GD683JA052	C 68KOHM ,J, 1/10W	
	R7401	ERF2AJ100P	10OHM ,J, 2W	
	R7402	ERJ12YJ474U	470KOHM ,J, 1/2W	
	R7403	ERX12SJ3R3V	3.3OHM ,J, 1/2W	
	R7404	ERX12SJ3R3V	3.3OHM ,J, 1/2W	
	R7405	ERDS1TJ220	C 220HM,J, 1/2W	
	R7406	D0GD222JA052	2.2KOHM ,J, 1/10W	
	R7407	D0GD101JA052	100OHM ,J, 1/10W	
	R7408	ERJ12YJ474U	470KOHM ,J, 1/2W	
	R7409	ERJ12YJ474U	470KOHM ,J, 1/2W	
	R7410	D0GD474JA052	470KOHM ,J, 1/10W	
	R7411	D0GD393JA052	39KOHM ,J, 1/10W	
	R7413	ERG2SJ330H	M 330HM,J,2W	
	R7506	D0GD102JA052	1KOHM ,J, 1/10W	
	R7509	ERJ6ENF4701	M 4.7KOHM, 1/10W	
	R7510	ERJ6ENF4701	M 4.7KOHM, 1/10W	
	R7511	ERJ6ENF2401	M 2.4KOHM, 1/10W	
	R7512	D0GD103JA052	C 10KOHM ,J, 1/10W	
	R7513	D0GD471JA052	C 470OHM ,J, 1/10W	
	R7601	D0GD102JA052	1KOHM ,J, 1/10W	
	R7602	D0GD151JA052	C 150OHM,J, 1/2W	
	R7603	D0GDR00J0004	0 OHM ,J, 1/10W	
	R7604	ERJ6ENF6801	M 6.8KOHM, 1/10W	
	R7605	ERJ6ENF4701	M 4.7KOHM, 1/10W	
	R7606	D0GD472JA052	4.7KOHM , 1/10W	
	R7701	D0GD223JA052	22KOHM ,J, 1/10W	
	R7702	D0GD103JA052	10KOHM ,J, 1/10W	
	R7703	D0GD102JA052	1KOHM ,J, 1/10W	
	R7704	D0GD473JA052	47KOHM ,J, 1/10W	
	R7705	D0GD103JA052	10KOHM ,J, 1/10W	
	R7708	D0GD473JA052	47KOHM ,J, 1/10W	
	R7710	D0GD124JA052	120KOHM ,J, 1/10W	
	R7711	D0GD101JA052	100OHM ,J, 1/10W	
	R7759	D0GD472JA052	4.7KOHM , 1/10W	
	R7760	D0GD472JA052	4.7KOHM , 1/10W	
	R7763	D0GD101JA052	100OHM ,J, 1/10W	
	R7801	D0GD220JA052	C 220HM ,J, 1/10W	
	R7802	D0GD471JA052	C 470OHM ,J, 1/10W	
	R7803	D0GD473JA052	47KOHM ,J, 1/10W	
	R7804	D0GD220JA052	C 220HM ,J, 1/10W	
	R7805	D0GD821JA052	820OHM ,J, 1/10W	
	R7806	D0GD473JA052	47KOHM ,J, 1/10W	
	R7807	D0GD220JA052	C 220HM ,J, 1/10W	
	R7808	D0GD471JA052	C 470OHM ,J, 1/10W	
	R7809	D0GD473JA052	47KOHM ,J, 1/10W	
	R7810	D0GD220JA052	C 220HM ,J, 1/10W	
	R7811	D0GD821JA052	820OHM ,J, 1/10W	
	R7812	D0GD473JA052	47KOHM ,J, 1/10W	
	R7813	D0GD472JA052	4.7KOHM , 1/10W	
	R7814	D0GD1R0JA052	C 1OHM ,J, 1/10W	
	R7815	D0GD273JA052	C 27KOHM ,J, 1/10W	
	R7816	D0GD222JA052	2.2KOHM ,J, 1/10W	
	R7817	D0GD222JA052	2.2KOHM ,J, 1/10W	
	R7818	D0GD103JA052	10KOHM ,J, 1/10W	


Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R7819	D0GD103JA052	10KOHM ,J, 1/10W	
	R7820	D0GDR00J0004	0 OHM ,J, 1/10W	
	R7821	D0GDR00J0004	0 OHM ,J, 1/10W	
	R7830	D0GD103JA052	10KOHM ,J, 1/10W	
	R7831	D0GD103JA052	10KOHM ,J, 1/10W	
	R7832	D0GD472JA052	4.7KOHM , 1/10W	
	R7834	D0GD334JA052	C 330KOHM ,J, 1/10W	
	R7835	D0GD224JA052	C 220KOHM ,J, 1/10	
	R7836	D0GD473JA052	47KOHM ,J, 1/10W	
	R7851	D0GD101JA052	100OHM ,J, 1/10W	
	R7852	D0GD101JA052	100OHM ,J, 1/10W	
	R7853	D0GD102JA052	1KOHM ,J, 1/10W	
	R7860	D0GD473JA052	47KOHM ,J, 1/10W	
	R7861	D0GD473JA052	47KOHM ,J, 1/10W	
	R7862	D0GD224JA052	C 220KOHM ,J, 1/10W	
	R7863	D0GD224JA052	C 220KOHM ,J, 1/10W	
	R7864	D0GD473JA052	47KOHM ,J, 1/10W	
	R7867	D0GD473JA052	47KOHM ,J, 1/10W	
	R7868	D0GD471JA052	470OHM ,J, 1/10W	
	R7869	ERJ6ENF4701	M 4.7KOHM, 1/10W	
	R7870	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7871	ERJ6ENF3302	M 33KOHM, 1/10W	
	R7873	ERJ6ENF4702	M 47KOHM, 1/10W	
	R7874	D0GD473JA052	47KOHM ,J, 1/10W	
	R7875	D0GD223JA052	C 22KOHM ,J, 1/10W	
	R7876	ERJ6ENF5602	M 56KOHM, 1/10W	
	R7877	ERJ6ENF1002	M 10KOHM, 1/10W	
	R7878	D0GD682JA052	6.8KOHM ,J, 1/10W	
	R7879	D0GD682JA052	6.8KOHM ,J, 1/10W	
	R7881	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7882	ERJ6ENF2202	M 22KOHM, 1/10W	
	R7883A	ERG2SJ330H	M 330HM,J,2W	
	R7884A	ERG2SJ330H	M 330HM,J,2W	
	R7902	D0GDR00J0004	0 OHM ,J, 1/10W	
	R8000	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R8001	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R8003	D1BA3010A023	301OHM ,J, 1/10W	
	R8004	D1BA4020A023	402OHM ,J, 1/10W	
	R8005	D1BA1020A023	102OHM ,J, 1/10W	
	R8006	D1BA4020A023	402OHM ,J, 1/10W	
	R8007	D1BA1020A023	102OHM ,J, 1/10W	
	R8008	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R8009	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R8010	EXB28V101JX	100OHM ,J, 1/10W	
	R8011	EXB28V101JX	100OHM ,J, 1/10W	
	R8012	EXB28V101JX	100OHM ,J, 1/10W	
	R8013	EXB28V101JX	100OHM ,J, 1/10W	
	R8014	EXB28V101JX	100OHM ,J, 1/10W	
	R8015	EXB28V101JX	100OHM ,J, 1/10W	
	R8016	EXB28V101JX	100OHM ,J, 1/10W	
	R8017	EXB28V101JX	100OHM ,J, 1/10W	
	R8018	EXB28V101JX	100OHM ,J, 1/10W	
	R8019	EXB28V101JX	100OHM ,J, 1/10W	
	R8023	ERJ2GEJ105X	F 1MOHM ,J, 1/10W	
	R8024	ERJ2GEJ152X	1.5KOHM ,J, 1/10W	
	R8025	D1BB2001A012	2KOHM ,J, 1/10W	
	R8026	D1BB2001A012	2KOHM ,J, 1/10W	
	R8027	D1BB2001A012	2KOHM ,J, 1/10W	
	R8029	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8030	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8037	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R8039	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R8040	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R8041	ERJ2GEJ472X	4.7KOHM , 1/10W	
	R8043	ERJ2GEJ473X	47KOHM ,J, 1/10W	
	R8044	ERJ2GEJ102X	1KOHM ,J, 1/10W	
	R8045	ERJ2GEJ473X	47KOHM ,J, 1/10W	
	R8048	ERJ2GEJ273X	27KOHM ,J, 1/10W	
	R8049	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8050	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8051	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8053	ERJ2GEJ102X	1KOHM ,J, 1/10W	
	R8054	ERJ2GEJ122X	1.2KOHM ,J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R8055	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R8056	ERJ2GEJ152X	1.5KOHM ,J, 1/10W	
	R8057	ERJ2GEJ152X	1.5KOHM ,J, 1/10W	
	R8058	ERJ2GEJ221X	220OHM ,J, 1/10W	
	R8062	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8068	ERJ2GEJ151X	150OHM ,J, 1/10W	
	R8079	ERJ2RKF73R2X	73.2OHM ,J, 1/10W	
	R8089	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8090	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8091	D1BA80R6A023	80.6OHM ,J, 1/10W	
	R8098	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8099	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R8100	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R8101	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8102	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8106	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8302	ERJ2GEJ561X	560OHM ,J, 1/10W	
	R8305	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8306	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R8307	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8308	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8309	ERJ2GEJ750X	F 750OHM ,J, 1/10W	
	R8310	ERJ2GEJ474X	470KOHM ,J, 1/10W	
	R8311	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R8312	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8313	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R8314	ERJ2GEJ333X	33KOHM ,J, 1/10W	
	R8315	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R8316	ERJ2GEJ473X	47KOHM ,J, 1/10W	
	R8317	ERJ2GEJ473X	47KOHM ,J, 1/10W	
	R8318	ERJ2GEJ223X	22KOHM ,J, 1/10W	
	R8319	ERJ2GEJ393X	F 39KOHM ,J, 1/10W	
	R8320	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8321	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8322	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8323	ERJ2GEJ333X	33KOHM ,J, 1/10W	
	R8324	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8325	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8326	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8330	ERJ2GEJ222X	2.2KOHM ,J, 1/10W	
	R8331	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8332	ERJ2GEJ220X	F 220OHM ,J, 1/10W	
	R8333	ERJ2GEJ122X	1.2KOHM ,J, 1/10W	
	R8334	ERJ2GEJ471X	470OHM ,J, 1/10W	
	R8335	D0GDR00J0004	0 OHM ,J, 1/10W	
	R8336	ERJ2GEJ220X	F 220OHM ,J, 1/10W	
	R8337	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R8339	ERJ2GEJ221X	220OHM ,J, 1/10W	
	R8341	D0GD821JA052	820OHM ,J, 1/10W	
	R8350	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8400	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R8401	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R8406	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8501	ERJ2GEJ680X	68OHM ,J, 1/10W	
	R8502	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8510	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8511	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8512	EXB2HV680JV	68OHM ,J, 1/10W	
	R8513	EXB2HV680JV	68OHM ,J, 1/10W	
	R8514	EXB2HV680JV	68OHM ,J, 1/10W	
	R8515	EXB2HV680JV	68OHM ,J, 1/10W	
	R8516	EXB2HV680JV	68OHM ,J, 1/10W	
	R8521	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8522	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8523	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8528	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8530	EXB2HV330JV	F 330OHM ,J, 1/10W	
	R8531	ERJ2GEJ680X	68OHM ,J, 1/10W	
	R8532	ERJ2GEJ680X	68OHM ,J, 1/10W	
	R8533	ERJ2GEJ680X	68OHM ,J, 1/10W	
	R8538	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8539	EXB2HV680JV	68OHM ,J, 1/10W	
	R8543	EXB2HV103JV	F 10KOHM ,J, 1/10W	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R8546	ERJ2GEJ101X	100OHM ,J, 1/10W	
	R8547	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R8548	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R8557	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8560	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R8851	D1BA2201A023	2.2KOHM ,J, 1/10W	
	R8852	D0GAR00J0005	0 OHM ,J, 1/10W	
	R8853	D1BA1001A023	1KOHM ,J, 1/10W	
	R9901	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R9902	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R9903	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R9904	ERJ2GEJ302X	F 30KOHM ,J, 1/10W	
	R9907	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R9908	ERJ2GEJ102X	F 1KOHM ,J, 1/10W	
	R9909	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R9912	ERJ2GEJ103X	F 10KOHM ,J, 1/10W	
	R9915	ERJ2GEJ473X	F 47KOHM ,J, 1/10W	
	R9917	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R9919	ERJ2GEJ272X	2.7KOHM ,J, 1/10W	
	R9922	ERJ2GEJ100X	10OHM ,J, 1/10W	
	R9923	ERJ2GEJ680X	68OHM ,J, 1/10W	
	R9927	D0GAR00J0005	0 OHM ,J, 1/10W	
	R9984	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
	R9985	ERJ2GEJ472X	4.7KOHM ,J, 1/10W	
		TRANSFORMERS		
⚠	T7201	G4D3A0000218	TRANSFOMER	
⚠	T7301	G4DYA0000158	TRANSFORMER	
⚠	T7401	G4DYA0000211	TRANSFORMER	
⚠	T7801	ETJV43ZA11AC	TRANSFOMER	
⚠	T7803	G4BYA0000022	PULSE TRANSFORMER	
		OTHERS		
	A03	K1KA15AA0409	CONNECTOR	
	A04	K1KA04B00273	CONNECTOR	
	A10	K1KA08B00270	CONNECTOR	
	A11	K1KA04BA0055	CONNECTOR	
	A18	K1KA08AA0714	CONNECTOR	
	A22	K1MN55BA0076	CONNECTOR	
	CF7101	D4CAY8R0A010	COIL	
⚠	F7001	K5D502BNA005	FUSE	
	F7001-1	K3GE1ZZ00001	FUSE HOLDER	
	F7001-2	K3GE1ZZ00001	FUSE HOLDER	
	F7801	K5D502BNA005	FUSE	
	F7801-1	K3GE1ZZ00001	FUSE HOLDER	
	F7801-2	K3GE1ZZ00001	FUSE HOLDER	
	FL2100	J0HABB000003	EMI FILTER	
	FL2101	J0HABB000003	EMI FILTER	
	FL2102	J0HABB000004	EMI FILTER	
	FL2103	J0HABB000004	EMI FILTER	
	FL2104	J0HABB000004	EMI FILTER	
	FL7000	EXC28CE201U	CHOKE COIL	
	FL7001	EXC28CE201U	CHOKE COIL	
	FL7002	EXC28CE201U	CHOKE COIL	
	FL7003	EXC28CE201U	CHOKE COIL	
	JK2101C	K1U917A00002	AV TERMINAL	
	JK2102	K4AK10B00003	AV TERMINAL	
	JK2108	K1FY315AA001	CONNECTOR	
	JK4500	K1FY119E0015	CONNECTOR	
	JK4501	K1FY119D0012	CONNECTOR	
	JK4502	K1FY119D0012	CONNECTOR	
	JK8502	K1NA12E00017	CONNECTOR	
	JS1000	D0GAR00J0005	CHIP RESISTOR	
	JS1012	D0GAR00J0005	CHIP RESISTOR	
	K01	K1KA04BA0047	CONNECTOR	
⚠	LF7001	G0B103H00010	LINE FILTER	
⚠	LF7002	G0B103H00010	LINE FILTER	
⚠	LF7003	G0B103H00010	LINE FILTER	
	P1	K1KY02A00001	CONNECTOR	
	P2	K1KA16AA0658	CONNECTOR	
	P5	K1KY02B00011	CONNECTOR	
	P6	K1KY02B00011	CONNECTOR	
	PA4800	K5H1622A0031	FUSE	
	PA4801	ERBSE1R50U	FUSE	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PA4802	ERBSE1R50U	FUSE	
	PA4803	ERBSE1R50U	FUSE	
	PC7301	B3PAA0000363	PHOTO COUPLER	
	PC7401	B3PAA0000363	PHOTO COUPLER	
	PC7701	B3PAA0000363	PHOTO COUPLER	
⚠	RL7101	K6B1AYY00060	RELAY	
⚠	RL7102	K6B1AYY00060	RELAY	
⚠	RL7103	K6B1AYY00061	RELAY	
	RM2500	PNJ4815M01TV	REMOCON SENSOR	
	SN2500	B3JB00000078	PHOTO DETECTOR	
⚠	SW2600	ESB33535XFD	POWER SWITCH	
	SW2601	K0H1BA000445	CONNECTOR	
	SW2602	K0H1BA000445	CONNECTOR	
	SW2603	K0H1BA000445	CONNECTOR	
	SW2604	K0H1BA000445	CONNECTOR	
	SW2605	K0H1BA000445	CONNECTOR	
⚠	TU8301	ENG39F02GF	TUNER	
	V10	K1KA07B00135	CONNECTOR	
	X8000	H0J250500094	CRYSTAL OSC	
	ZA5400	K4ZZ01000275	RUG TERMINAL	
	ZA5401	K4ZZ01000275	RUG TERMINAL	
	ZA5403	K4ZZ01000275	RUG TERMINAL	
	ZA5405	K4ZZ01000275	RUG TERMINAL	
	ZA5408	K4ZZ01000275	RUG TERMINAL	
	ZA5409	K4ZZ01000275	RUG TERMINAL	
	ZA5410	K4ZZ01000275	RUG TERMINAL	
	ZA5411	K4ZZ01000275	RUG TERMINAL	
	ZA5412	K4ZZ01000275	RUG TERMINAL	
	ZA5413	K4ZZ01000275	RUG TERMINAL	
	ZA5414	K4ZZ01000275	RUG TERMINAL	
	ZA5415	K4ZZ01000275	RUG TERMINAL	
	ZA5419	K4ZZ01000275	RUG TERMINAL	
	ZA7000	K4AD01A00002	CONNECTOR	
	ZA7001	K4AD01A00002	CONNECTOR	
	ZA7002	K4AD01A00002	CONNECTOR	
	ZA7003	K4AD01A00002	CONNECTOR	


Model No. : TH-L37X20R Parts Location

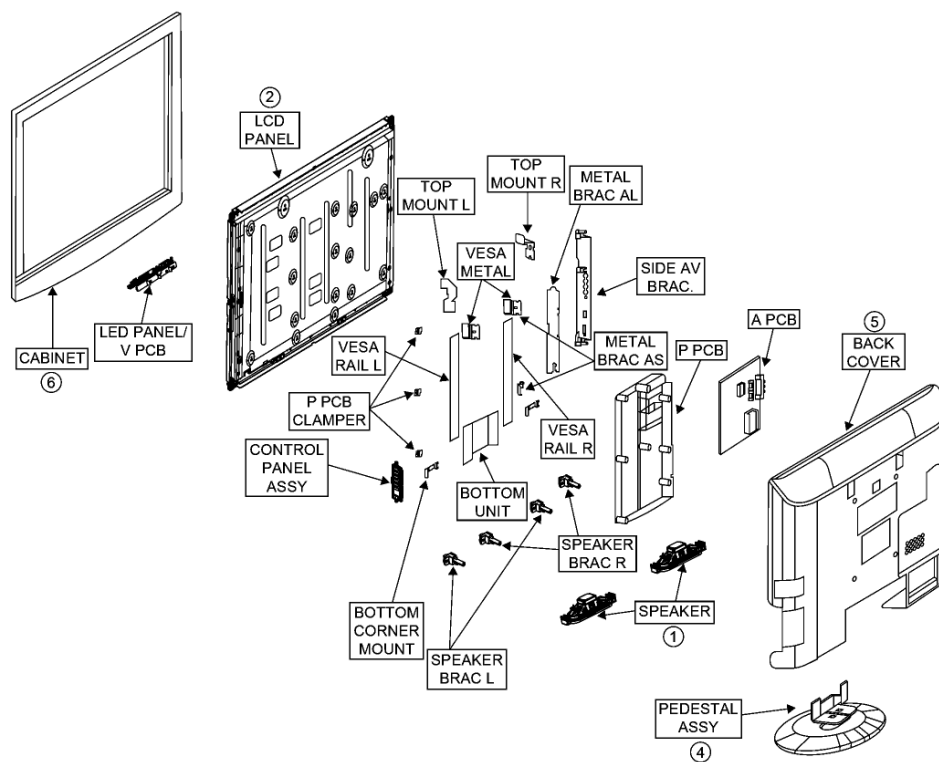

Model No. : TH-L37X20R Packing Exploded View 1

THE PEDESTAL TURN, ADJUST THE CENTRAL POSITION BEFORE COVERING THE SET WITH THE SET COVER.


CAUTION :
Pedestal poly bag at Top side area use foam and plastic side for pedestal bottom area.

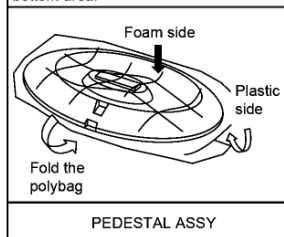

Direction for pedestal:


*Note : Insert pedestal only in ONE direction with Stand Mtg Spacer facing front side.

Notes: 1) Set a direction carton and cushion.
2) Insertion direction confirmation of the pedestal.

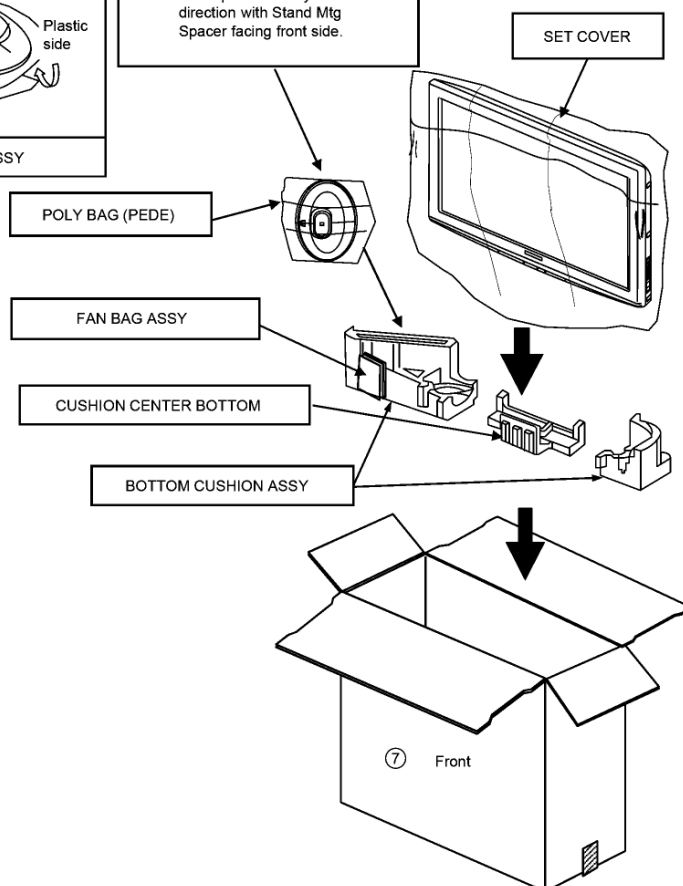

Model No. : TH-L37X20R Packing Exploded View 2

PUT A REMOTE CONTROL FACE DOWN TO THE
POCKET OF THE TOP REAR CUSHION.

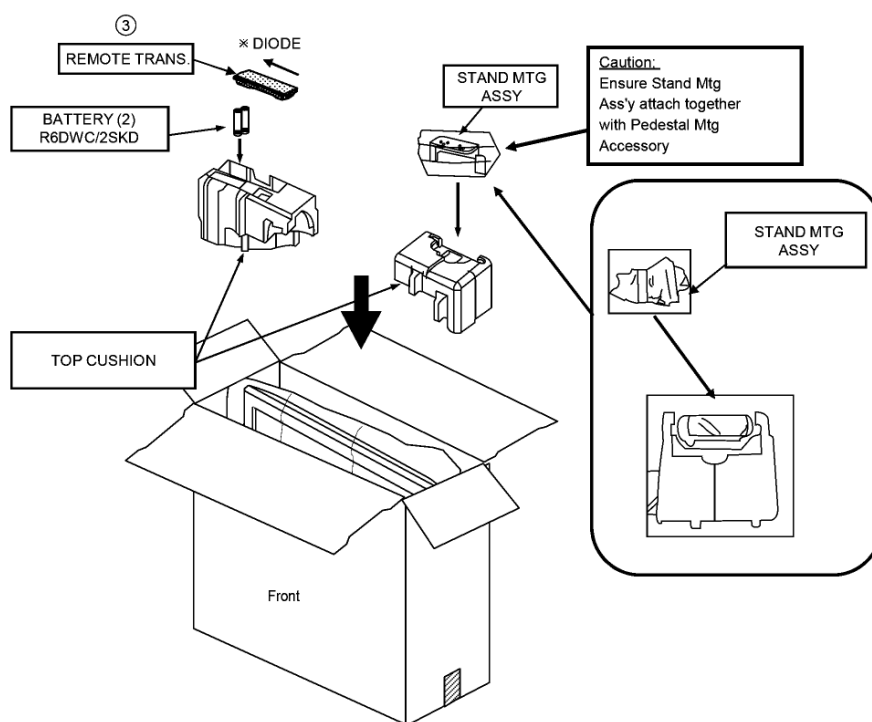

Model No. : TH-L37X20R Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		K2CQ2YY00060	AC CORD		
	1	L0AA14B00006	SPEAKER UNIT		
	2	L5EDD9Q00010	LCD PANEL		
	3	N2QAYB000399	REMOTE CONTROL		
	4	TBL4GA0036	PEDESTAL ASSY		
		TBL4GX0006	STAND MTG ASSY 37		
		TBM4GC445	MODEL NAME PLATE		
		TBX4GA01101A	CONTROL BUTTON		
		TBX4GA01201C	POWER BUTTON		
		TKK4GC5024-1	LED PANEL		
		TKP4GA02601A	CONTROL PANEL BRACKET		
		TKP4GA03801	SIDE AV BRACKET		
		TKX4GA03201A	SP BRACKET L		
		TKX4GA03301A	SP BRACKET R		
		TMX4GX001	AC CORD BRACKET		
	RTL	TZT/A10QNG	A BOARD		
	RTL	TNP4G470AA	P BOARD		
	RTL	TNPA4901BQ	K BOARD		
	RTL	TNPA5134BA	V BOARD		
		TPD4GA0127-1	TOP CUSHION		
		TPD4GA0128	BOTTOM CUSHION		
		TPD4GA0139	TOP CENTER CUSHION		
		TPD4GA0140	BOTTOM CENTER CUSHION		
		TPD4GF0107-1	TOP LAYER PAD		
		TPE4GH015-1	SET COVER		
		TQZ4GB273	FAN BAG ASSY		
		TSXL974	LVDS		
	5	TTU4GA0347	BACK COVER ASSY		
	6	TTY4GA0133	CABINET COMP ASSY		
	7	TXFPC020QNG	PACKING CASE ASSY		