


Service Manual

LED TV

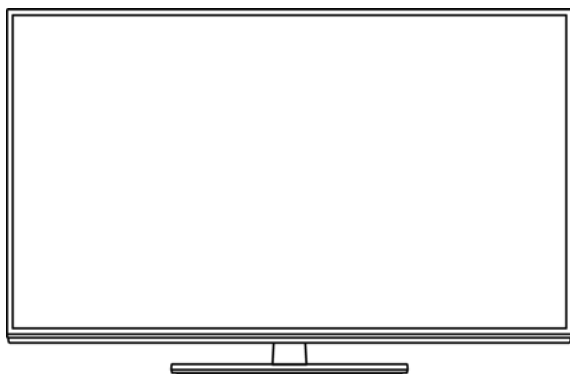

Model No. **TH-L42ET60S**
TH-L42ET60G

Chassis: LA41
Destination: SINGAPORE
INDONESIA

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions -----	3	5.2.2. Display of SOS History -----	10
1.1. General Guidelines-----	3	5.2.3. POWER ON TIME/COUNT-----	10
1.1.1. Leakage Current Cold Check-----	3	5.2.4. Exit-----	10
1.1.2. Leakage Current Hot Check (See Figure 1.)-----	3	5.2.5. DRV Check - USBHDD Check-----	11
2 Warning -----	4	5.2.6. Hotel Mode-----	11
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices-----	4	6 Troubleshooting Guide -----	12
2.2. About lead free solder (PbF)-----	5	6.1. Check of the IIC bus lines-----	12
3 Service Navigation -----	6	6.1.1. How to access -----	12
3.1. Service Hint-----	6	6.1.2. Self-check indication only: -----	12
4 Specifications -----	7	6.1.3. Self-check indication and forced to factory shipment setting: -----	12
5 Service Mode -----	9	6.1.4. Exit-----	12
5.1. How to enter into Service Mode -----	9	6.1.5. Screen display -----	12
5.1.1. Purpose -----	9	6.1.6. Check Point-----	12
5.1.2. Key command -----	9	6.2. Power LED Blinking timing chart-----	13
5.1.3. How to exit-----	9	6.3. LCD Panel test mode -----	13
5.1.4. Contents of adjustment mode -----	9	6.4. No Power-----	13
5.2. SRV-TOOL -----	10	7 Disassembly and Assembly Instructions -----	14
5.2.1. How to access-----	10	7.1. Rear Panel Installation-----	14
		7.2. LCD Panel Fixing & Handling Method -----	15

7.3. Install AV Bracket to A-Print -----	16
7.4. Fitting Control Button-----	17
7.5. Fix Metal Bracket BTM 1 -----	18
7.6. Fix Metal Bracket BTM 2 -----	19
7.7. Woofer & Barrier Installation -----	20
7.8. Barrier Sticking-----	21
7.9. Tightening Screw-----	22
7.10. Handling SPEC -----	23
8 Measurements and Adjustments -----	24
8.1. Voltage chart of A-board-----	24
8.2. Voltage chart of P-board-----	24
9 Block Diagram -----	25
9.1. Main Block Diagram -----	25
9.2. Detailed Block Diagram (1/2)-----	26
9.3. Detailed Block Diagram (2/2)-----	27
10 Wiring Connection Diagram -----	28
10.1. Wire Dressing 1-----	28
10.2. Wire Dressing 2-----	29
11 Schematic Diagram-----	30
12 Printed Circuit Board -----	47
13 Exploded View and Replacement Parts List -----	53
13.1. Exploded View and Mechanical Replacement Parts List -----	53

1 Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.
4. When conducting repairs and servicing, do not attempt to modify the equipment, its parts or its materials.
5. When wiring units (with cables, flexible cables or lead wires) are supplied as repair parts and only one wire or some of the wires have been broken or disconnected, do not attempt to repair or re-wire the units. Replace the entire wiring unit instead.
6. When conducting repairs and servicing, do not twist the Faston connectors but plug them straight in or unplug them straight out.

1.1.1. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be 100 Mohm and over. When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

1.1.2. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5kohm, 10 watts resistor, in parallel with a 0.15 μ F capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

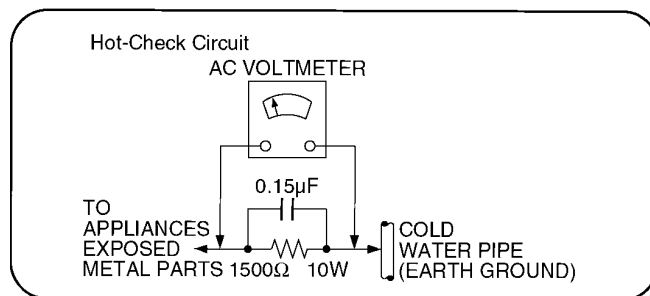


Figure 1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor [chip] components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as [anti-static (ESD protected)] can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise ham less motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol **PbF** stamped on the back of PCB.


Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

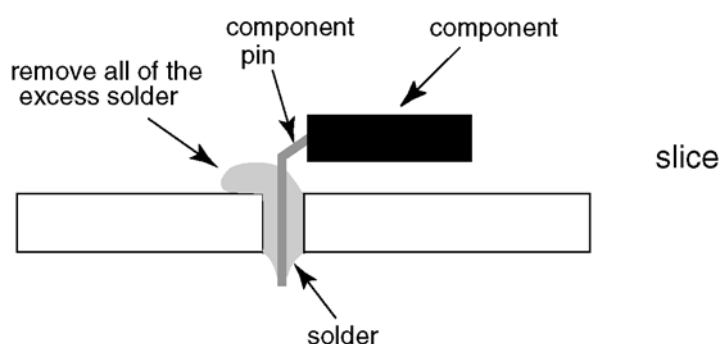

3 Service Navigation

3.1. Service Hint

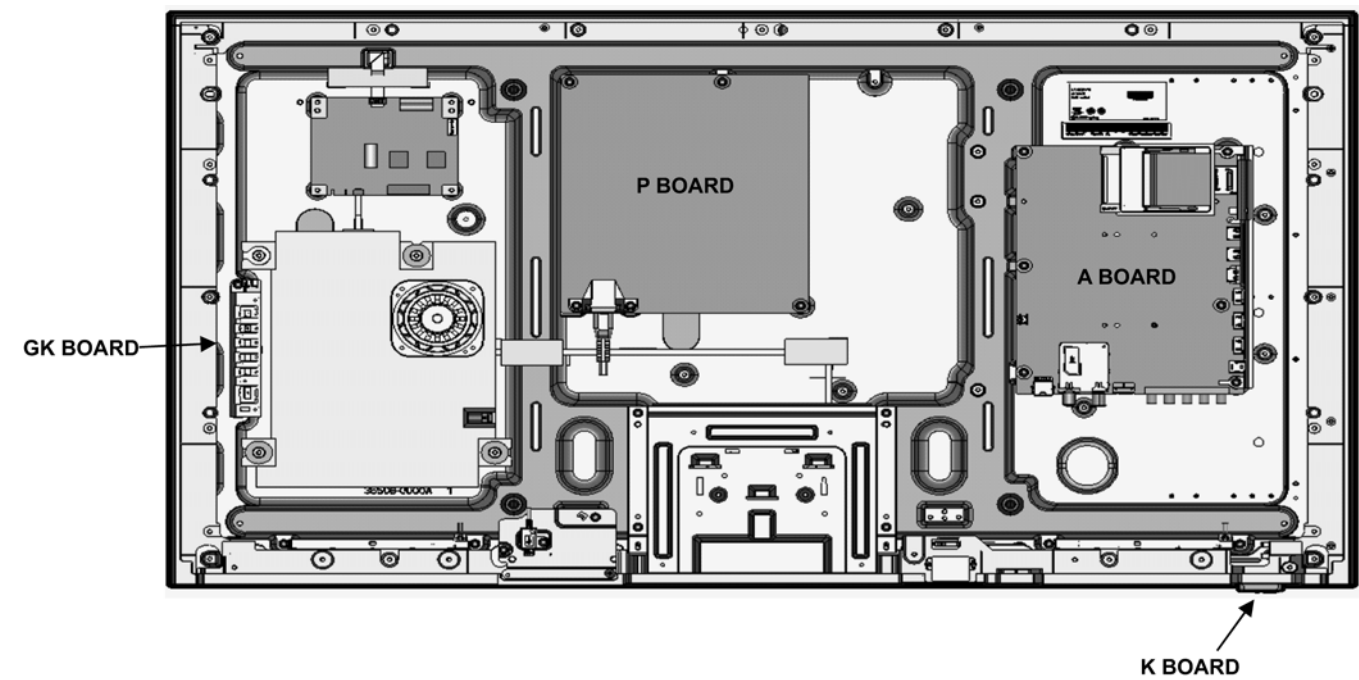

Board Name	Main Device	Remarks
A BOARD	TUN, OFDM, ADV, LD4, STBY EEP	Repairable
P BOARD	Power Supply	Repairable
GK BOARD	Function SW for LGD panel	Repairable
K BOARD	LED/RM/CATS	Repairable

4 Specifications

Power Source	AC 110-240 V, 50 / 60 Hz		
Power			
Rating	92 W		
Standby power consumption	0.2 W		
Visible screen size (diagonal)	106 cm		
Display resolution	1,920 (W) × 1,080 (H)		
Panel	LED backlight Liquid Crystal Display		
Dimensions (W × H × D)	956 mm × 620 mm × 227 mm (With Pedestal)		
	956 mm × 564 mm × 35 mm (TV only)		
Mass	14.5 kg Net (With Pedestal)		
	12.5 kg Net (TV only)		
Connection Terminals			
AV1 IN (COMPONENT / VIDEO)	VIDEO	RCA PIN Type × 1	1.0 V[p-p] (75 Ω)
	AUDIO L - R	RCA PIN Type × 2	0.5 V [rms]
	Y	1.0 V [p-p] (including synchronisation)	
	P _B /C _B , P _R /C _R	±0.35 V [p-p]	
HDMI 1 / 2 / 3 input	TYPE A Connectors		
	HDMI 1 / 3: 3 D, Content Type, Deep Colour		
	HDMI 2: 3D, Content Type, Audio Return Channel, Deep Colour		
	• This TV supports 'HDAVI Control 5' function.		
Card slot	SD Card slot × 1		
ETHERNET	10BASE-T / 100BASE-TX		
USB 1 / 2	USB 2.0 DC 5 V, Max. 500 mA		
DIGITAL AUDIO OUT	PCM / Dolby Digital / DTS, Fibre optic		

Sound	
Speaker	8 train speakers × 2, Woofer (ø 75 mm) × 1
Audio output	18 W (4 W + 4 W + 10 W)

Receiving Systems / Band name	17 SYSTEMS	FUNCTION
	1 PAL B, G, H	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders
	2 PAL I	
	3 PAL D, K	
	4 SECAM B, G	
	5 SECAM D, K	
	6 SECAM K1	
	7 NTSC M (NTSC 3.58 / 4.5 MHz)	
	8 NTSC 4.43 / 5.5 MHz	Playback from Special VCR's or DVD
	9 NTSC 4.43 / 6.0 MHz	
	10 NTSC 4.43 / 6.5 MHz	
	11 NTSC 3.58 / 5.5 MHz	
	12 NTSC 3.58 / 6.0 MHz	
	13 NTSC 3.58 / 6.5 MHz	
	14 SECAM I	
	15 PAL 60 Hz / 5.5 MHz	Playback from Special Disc Players and Special VCR's or DVD
	16 PAL 60 Hz / 6.0 MHz	
	17 PAL 60 Hz / 6.5 MHz	
Digital TV: 7 MHz VHF / 8 MHz UHF free-to-air TV broadcast reception		

Receiving Channels (Analogue TV)	
VHF BAND	2 - 12 (PAL / SECAM B, K1)
	0 - 12 (PAL B AUST.)
	1 - 9 (PAL B N.Z.)
	1 - 12 (PAL / SECAM D)
	1 - 12 (NTSC M Japan)
	2 - 13 (NTSC M USA)
UHF BAND	21 - 69 (PAL G, H, I / SECAM G, K, K1)
	28 - 69 (PAL B AUST.)
	13 - 57 (PAL D, K)
	13 - 62 (NTSC M Japan)
	14 - 69 (NTSC M USA)
CATV	S1 - S20 (OSCAR)
	1 - 125 (USA CATV)
	C13 - C49 (JAPAN)
	S21 - S41 (HYPER)
	Z1 - Z37 (CHINA)
	5A, 9A (AUST.)

Aerial input	VHF / UHF		
Operating Conditions	Temperature : 0°C - 40°C		
	Humidity : 20 % - 80 % RH (non-condensing)		
Built-in wireless LAN	Standard compliance and Frequency range* :		
	IEEE802.11a/n		
	5.15 GHz - 5.35 GHz, 5.47 GHz - 5.85 GHz		
	IEEE802.11b/g/n		
	2.40 GHz - 2.4835 GHz		
	Security : WPA2-PSK (TKIP/AES)	WPA-PSK (TKIP/AES)	WEP (64 bit/128 bit)

* The frequency and channel differ depending on the country.

3D Eyewear	
Dimensions (W × H × D)	165 mm × 38 mm × 166 mm
Mass	Approx. 18 g
Lens type	Circularly-polarised filter
Usage temperature range	0°C - 40°C
Materials	Main body / Lens section: Resin

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- For the information of the open source software, refer to [eHELP] (Support > Licence).


5 Service Mode

5.1. How to enter into Service Mode

5.1.1. Purpose

After exchange parts, check and adjust the contents of adjustment mode.

While pressing [VOLUME (-)] button of the main unit, press [INFO] button of the remote control three times within 2 seconds.

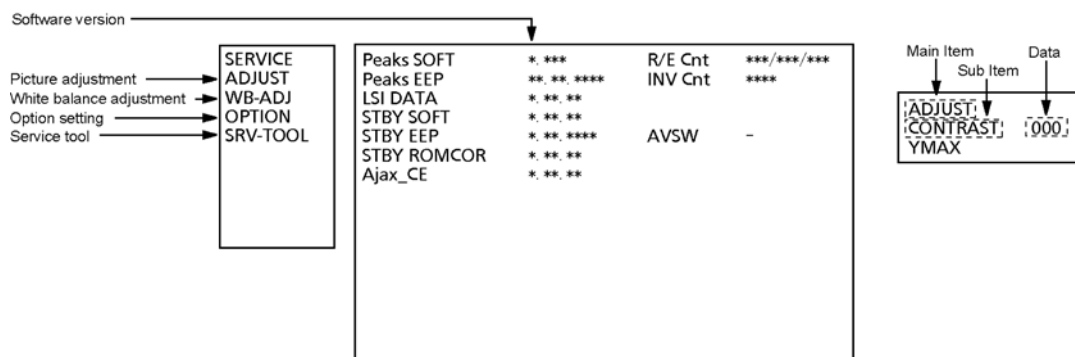

5.1.2. Key command

[1] button...Main items Selection in forward direction

[2] button...Main items Selection in reverse direction

[3] button...Sub items Selection in forward direction

[4] button...Sub items Selection in reverse direction

[VOL] button...Value of sub items change in forward direction (+), in reverse direction (-)

5.1.3. How to exit

Switch off the power with the [POWER] button on the main unit or the [POWER] button on the remote control.

5.1.4. Contents of adjustment mode

- Value is shown as a hexadecimal number.
- Preset value differs depending on models.
- After entering the adjustment mode, take note of the value in each item before starting adjustment.

Main item	Sub item	Sample Data	Remark
ADJUST	CONTRAST	000	
	COLOR	3A	
	TINT	00	
	SUB-BRT	800	
	BACKLGT	FFF	
	B-Y-G	40	
	R-Y-A	00	
	V COM	000	
WB-ADJ	R-GAIN	80	
	G-GAIN	75	
	B-GAIN	75	
	R-CENT	8D	
	G-CENT	80	
	B-CENT	7E	
OPTION	Boot	ROM	Factory Preset.
	STBY-SET	00	
	EMERGENCY	ON	
	CLK MODE	01	
	CLOCK	FFF	
	EDID-CLK	HIGH	
SRV-TOOL		00	See next.

5.2. SRV-TOOL

5.2.1. How to access

1. Select [SRV-TOOL] in Service Mode.
2. Press [OK] button on the remote control.

	SRV-TOOL	
Display of TD2Microcode version →	TD2Microcode:00000000	
Display of Flash ROM maker code →	Flash ROM : AD-DC	
Display of SOS History →	PTCT : 00 . 00 . 00 . 00 . 00	Time 000040.40 Count 0000049

POWER ON TIME/COUNT
Press [MUTE] button (3sec)

5.2.2. Display of SOS History

SOS History (Number of LED blinking) indication.

From left side; Last SOS, before Last, three occurrence before, 2nd occurrence after shipment, 1st occurrence after shipment.

This indication except 2nd and 1st occurrence after shipment will be cleared by [Self-check indication and forced to factory shipment setting].

5.2.3. POWER ON TIME/COUNT

Note : To display TIME/COUNT menu, highlight position, then press MUTE for 3sec.

Time : Cumulative power on time, indicated hour : minute by decimal

Count : Number of ON times by decimal


Note : This indication will not be cleared by either of the self-checks or any other command.

5.2.4. Exit

1. Disconnect the AC cord from wall outlet.

5.2.5. DRV Check - USBHDD Check

1. Select [DRV Check - USBHDD Check] in Service Mode.
2. Press [OK] button on the remote control for more than 3 seconds.

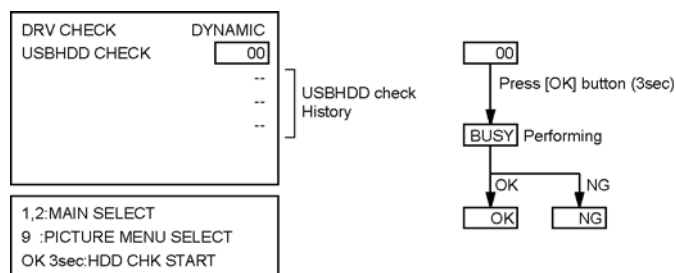

5.2.6. Hotel Mode

1. Purpose
Restrict a function for hotels.
2. Access command to the Hotel mode setup menu.
In order to display the Hotel mode setup menu:
While pressing [VOLUME (-)] button of the main unit,
press [AV] button of the remote control three times within
2 seconds.

Then, the Hotel mode setup menu is displayed.

Hotel Mode	
Hotel Mode	Off
Initial INPUT	Off
Initial POS	Off
Initial VOL Level	Off
Maximum VOL Level	100
Button Lock	Off
Remote Lock	Off
Private Information	Keep

Change Select
EXIT
RETURN

3. To exit the Hotel mode setup menu
Disconnect AC power cord from wall outlet.
4. Explain the Hotel mode setup menu

Item	Function
Hotel Mode	Select hotel mode On/Off
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : Off, Analogue, DVB-C, DVB-T, AV1, AV2, HDMI1, HDMI2 • Off: give priority to a last memory. However, Euro model is compulsorily set to TV.
Initial POS	Select programme number. Selection : Off/0 to 99 • Off: give priority to a last memory.
Initial VOL LEVEL	Adjust the volume when each time power is switched on. Selection Range : Off/0 to 100 • Off: give priority to a last memory.
Maximum Vol Level	Adjust maximum volume. Range : 0 to 100
Button Lock	Select local key conditions. Selection : Off/SETUP/MENU/ALL • OFF: altogether valid • SETUP: only F-key is invalid (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid (only Volume/Mute can be selected.) • ALL: altogether invalid.
Remote Lock	Select remote control key conditions. Selection : Off/SETUP/MENU • OFF: altogether valid. • SETUP: only Setup menu is invalid. • MENU: Picture/Sound/Setup menu are invalid.
Private Information	Select private information for VIERA Cast is Keep or Reset if Hotel mode is set to [On] when TV power on. Selection : Keep/Reset • Keep: private information for VIERA Cast is keep • Reset: private information for VIERA Cast is reset

6 Troubleshooting Guide

Use the self-check function to test the unit.

1. Checking the IIC bus lines
2. Power LED Blinking timing

6.1. Check of the IIC bus lines

6.1.1. How to access

6.1.2. Self-check indication only:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [OK] button on the remote control for more than 3 seconds.

6.1.3. Self-check indication and forced to factory shipment setting:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

6.1.4. Exit

Disconnect the AC cord from wall outlet.

6.1.5. Screen display

42 FHD			
SELF CHECK COMPLETE			
H14TUN	OK	PEAKS-SOFT	*, ***
H90STBY	OK	PEAKS-EEP	**., **., ****
H91MEM2	OK	LSI-PACKAGE	*, ***
H17LAN	OK	LSI-RELEASE	*, **
H96ID	OK	STBY-SOFT	*, **., **
H97ID2	OK	STBY-EEP	*, **., ****
H42WiFi	OK		
		MODEL ID	**

6.1.6. Check Point

Confirm the following parts if NG was displayed.

DISPLAY	Check Ref. No.	Description	Check Point
H14TUN	IC6750	TUNER	A-Board
H90STBY	IC8000	STM	A-Board
H91MEM2	IC8900	NAND FLASH	A-Board
H17LAN		LAN	LAN
H96ID		ID	
H97ID2		ID2	
H42WiFi		WiFi	WiFi Dongle

6.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abnormality occurs, the protection circuit will operate and reset the unit to stand by mode. During this time, the defective block can be identified by the number of blinking times of the Power LED on the front panel of the unit as follow:

Blinking Times	Contents	Check point
1	BACK LIGHT SOS	LCD PANEL P-Board
7	SUB 3.3V SENSE SOS	A-Board
9	SOUND SOS	A-Board Speaker
13	EMERGENCY	A-Board

6.3. LCD Panel test mode

Purpose:

To find the possible failure point where in LCD Panel or Printed Circuit Board when the abnormal picture is displayed.

How to Enter:

While pressing [VOLUME (-)] button of the main unit, press [OPTION] button of the remote control three times within 2 seconds.

How to Exit:

Disconnect AC plug from wall outlet.

How to confirm:

If the abnormal picture is displayed, go into LCD Panel test mode to display the several test patterns.

And then, judge by the following method.

Still abnormal picture is displayed: The cause must be in LCD Panel.

Normal picture is displayed: The cause must be in A board.

Remarks:

The test pattern is created by the circuit in LCD Panel.

In LCD Panel test mode, this test pattern is displayed unaffected by signal processing for RF or input signal.


If the normal picture is displayed, LCD Panel must be okay and the cause of failure must be in A board.

6.4. No Power

First check point

There are following 2 states of No Power indication by power LED.


1. No lit
2. Red is lit then turns red blinking a few seconds later. (See 6.2.)

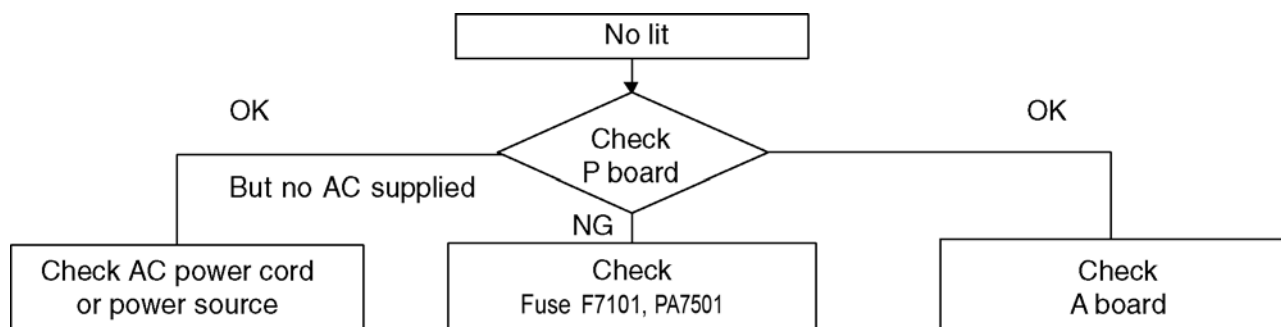

7 Disassembly and Assembly Instructions

7.1. Rear Panel Installation


1. Install REAR PANEL assy to each side of panel.
2. Assemble K-Print to LED PANEL ASSY.
3. Follow the sequence TOP → RIGHT → LEFT → M panel.

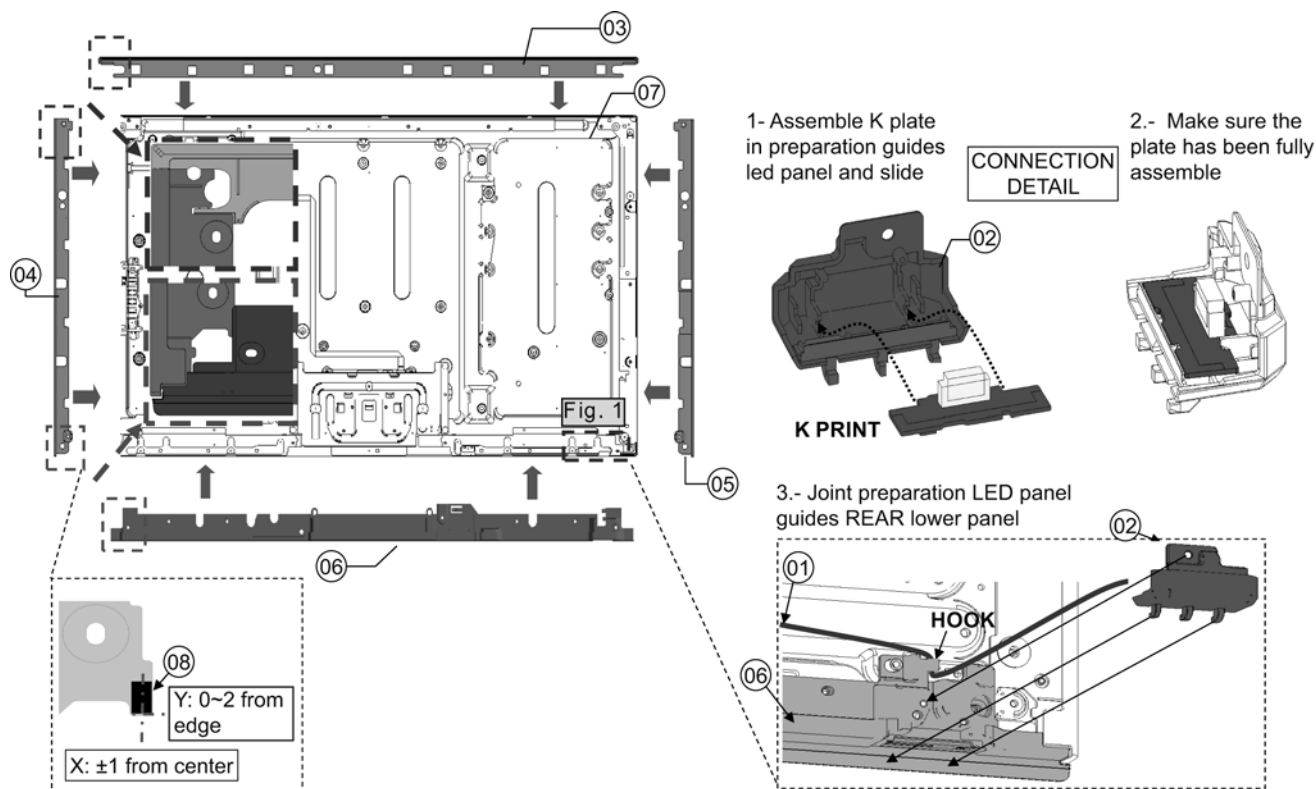

No	Description	Qty	UOM
01	A-K	1	PC
02	LED PANEL ASSY	1	PC
03	REAR PANEL TOP ASSY	1	PC
04	REAR PANEL R ASSY	1	PC
05	REAR PANEL L ASSY	1	PC
06	REAR PANEL BTM ASSY	1	PC
07	LCD PANEL	1	PC
08	FELT	1	PC

7.2. LCD Panel Fixing & Handling Method

1. Place down the cabinet as shown below.
2. Fix LCD panel into the cabinet by taking below precautions.

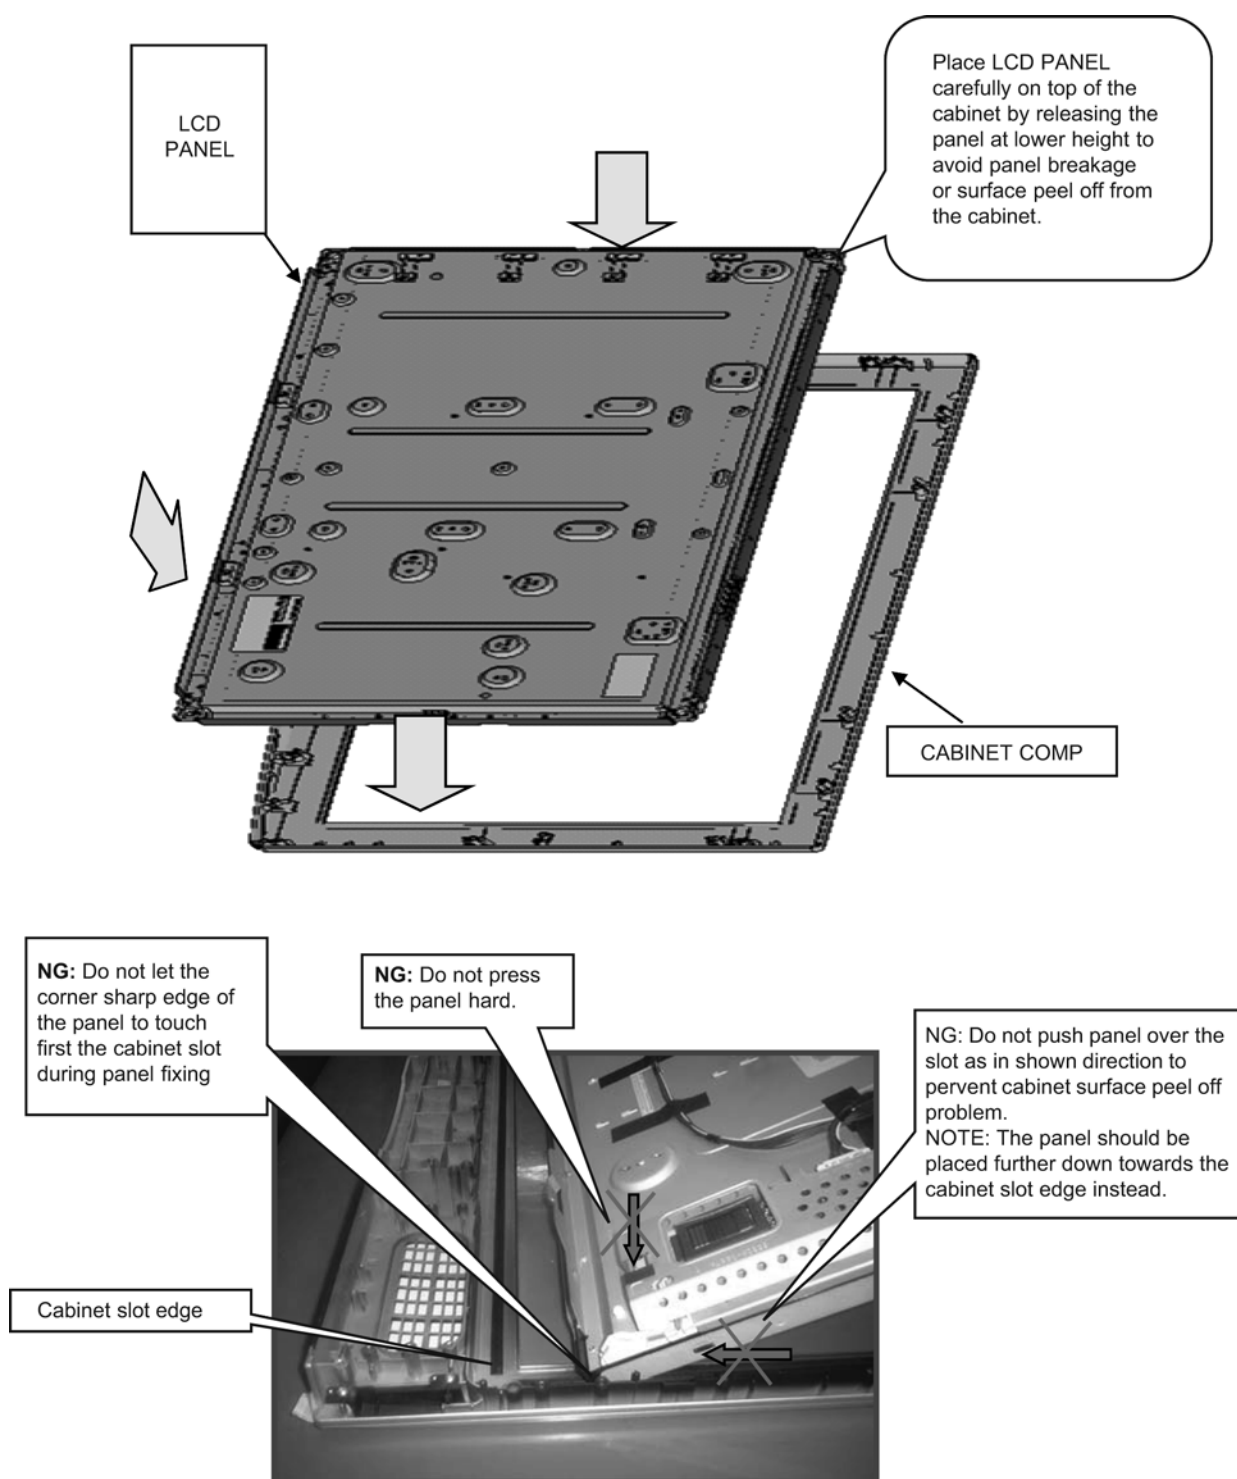


Other general precautions

1. Do not press panel surface to avoid blue spot on the panel display.
2. Do not use hard cloth or rub the surface too hard. This may cause scratches on the surface.
3. Take care not to subject the TV's surface to water or detergent. Any liquid (including pets urine) if enters the product could lead to TV failure.
4. Take care not to subject the surface to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
5. The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch with your fingernail or other hard objects.

7.3. Install AV Bracket to A-Print


Fix SIDE & BOTTOM AV BRACKET to A-Print.

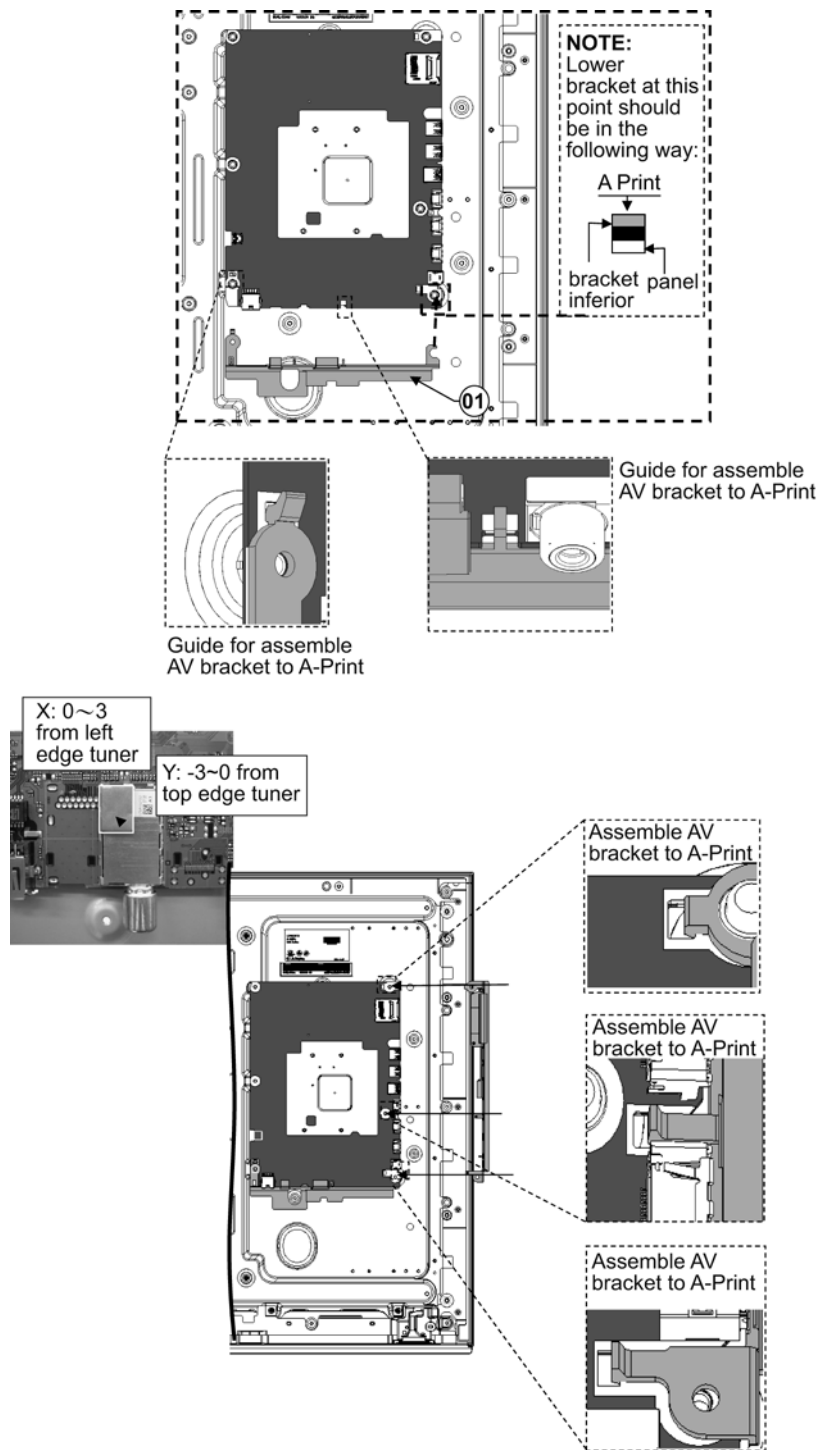


No	Description	Qty	UOM
01	BOTTOM AV BRACKET	1	PC

7.4. Fitting Control Button

1. Insert K-Print into KEY BUTTON BRACKET.
2. Fix SCREW at K-Print to KEY BUTTON BRACKET.
3. Stick FELT to BTM & SIDE AV BRACKET.

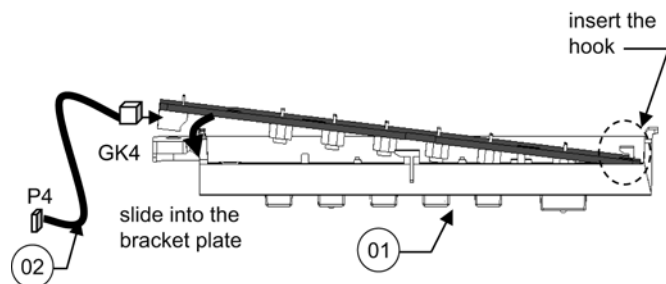

DETAIL A

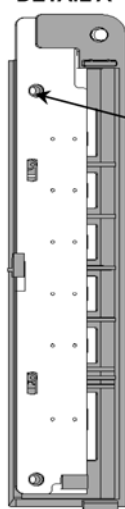


bracket assy with panel plate
as shown below diagram

slide bracket towards
the panel


Torque
[3-6KgfcM]

insert in guide panel

SIDE VIEW

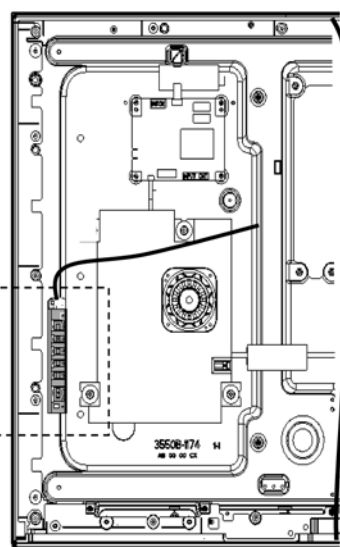


04

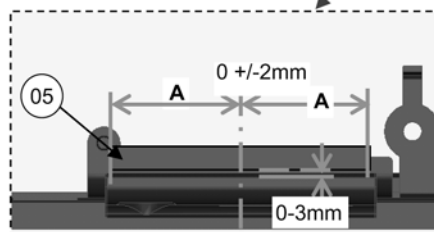

No	Description	Qty	UOM
01	KEY BUTTON BRACKET	1	PC
02	P-LD/GK	1	PC
03	SCREW (KEY)	1	PC
04	SIDE AV BRACKET	1	PC
05	FELT (6*50*T0.55)	1	PC

7.5. Fix Metal Bracket BTM 1


- 1. Fix METAL BRACKET BTM to panel.
- 2. Install SP left & right.
- 3. Fix WIFI METAL to panel.

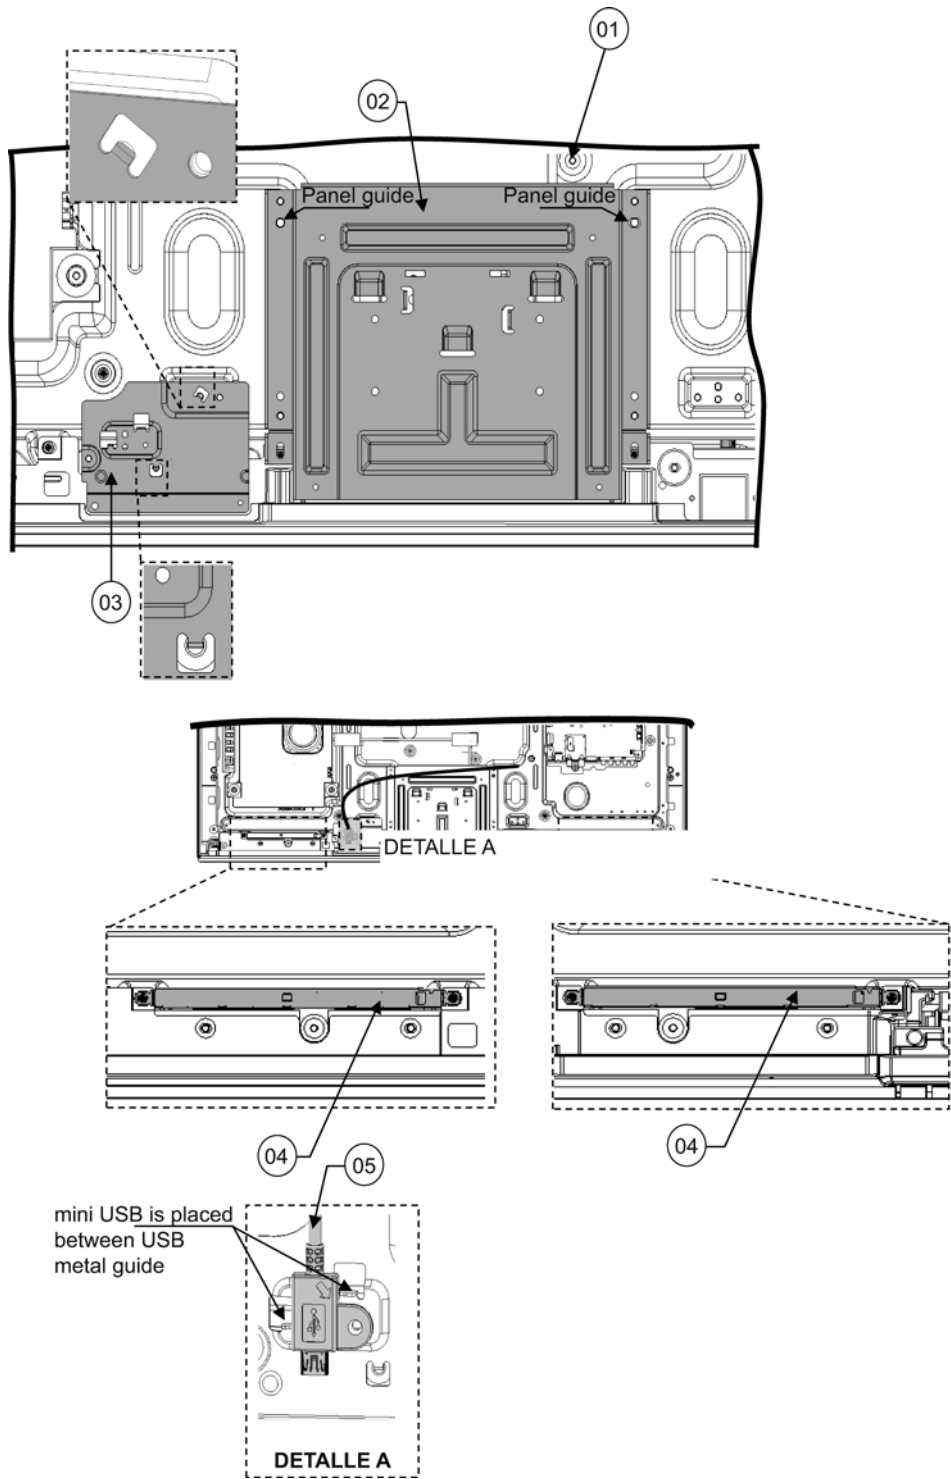

No	Description	Qty	UOM
01	CLAMPER	1	PC
02	METAL_BRACKET_BOTTOM	1	PC
03	WIFI_METAL	1	PC
04	SPEAKER SQ	2	PC
05	WIFI_CABLE	1	PC

7.6. Fix Metal Bracket BTM 2


1. Fix all SCREW follow diagram below.
2. Put STAND METAL & BARCODE LABEL into BAG.
3. Seal the BAG with PAPER TAPE.

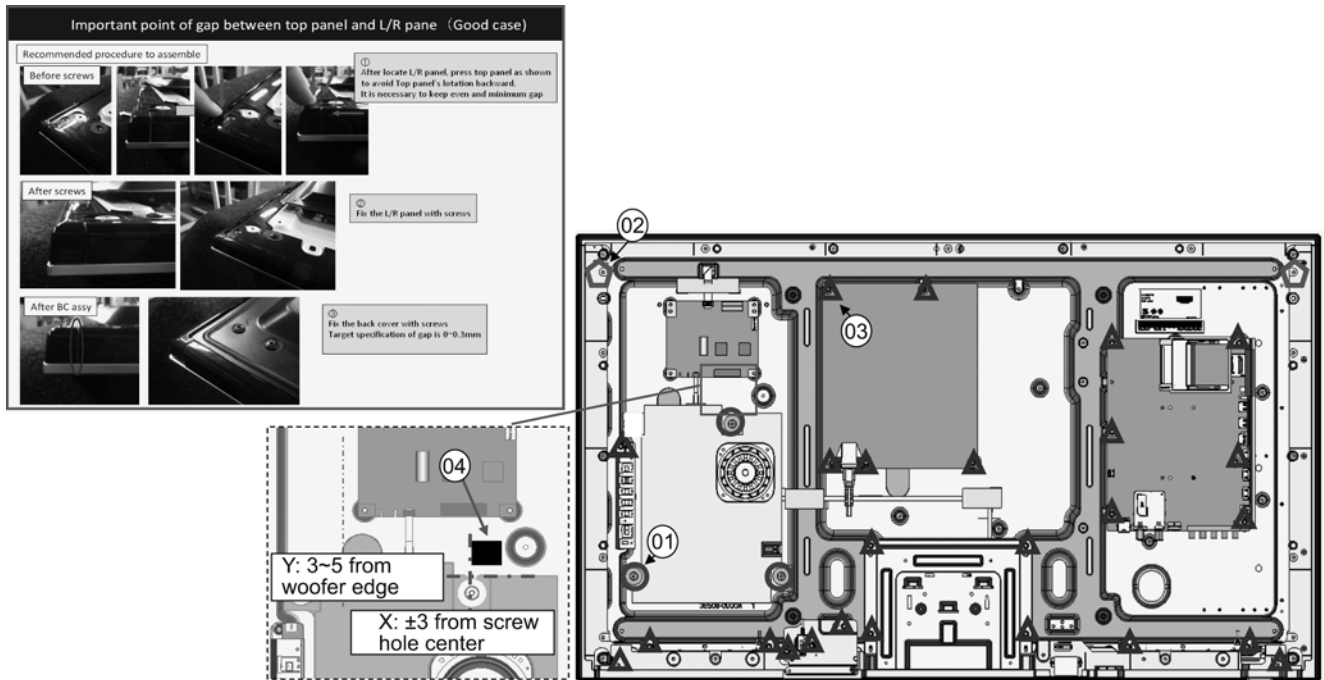

No	Description	Qty	UOM	Remarks
01	SCREW (WOOFER)	3	PC	6 ± 1Kgfcmm
02	SCREW (RP)	2	PC	6 ± 1Kgfcmm
03	SCREW	25	PC	6 ± 1Kgfcmm
04	SPONGE (15*20*T20)	1	PC	

7.7. Woofer & Barrier Installation





- 1. Install WOOFER & BARRIER at panel.
- 2. Stick FELT at AC Inlet.

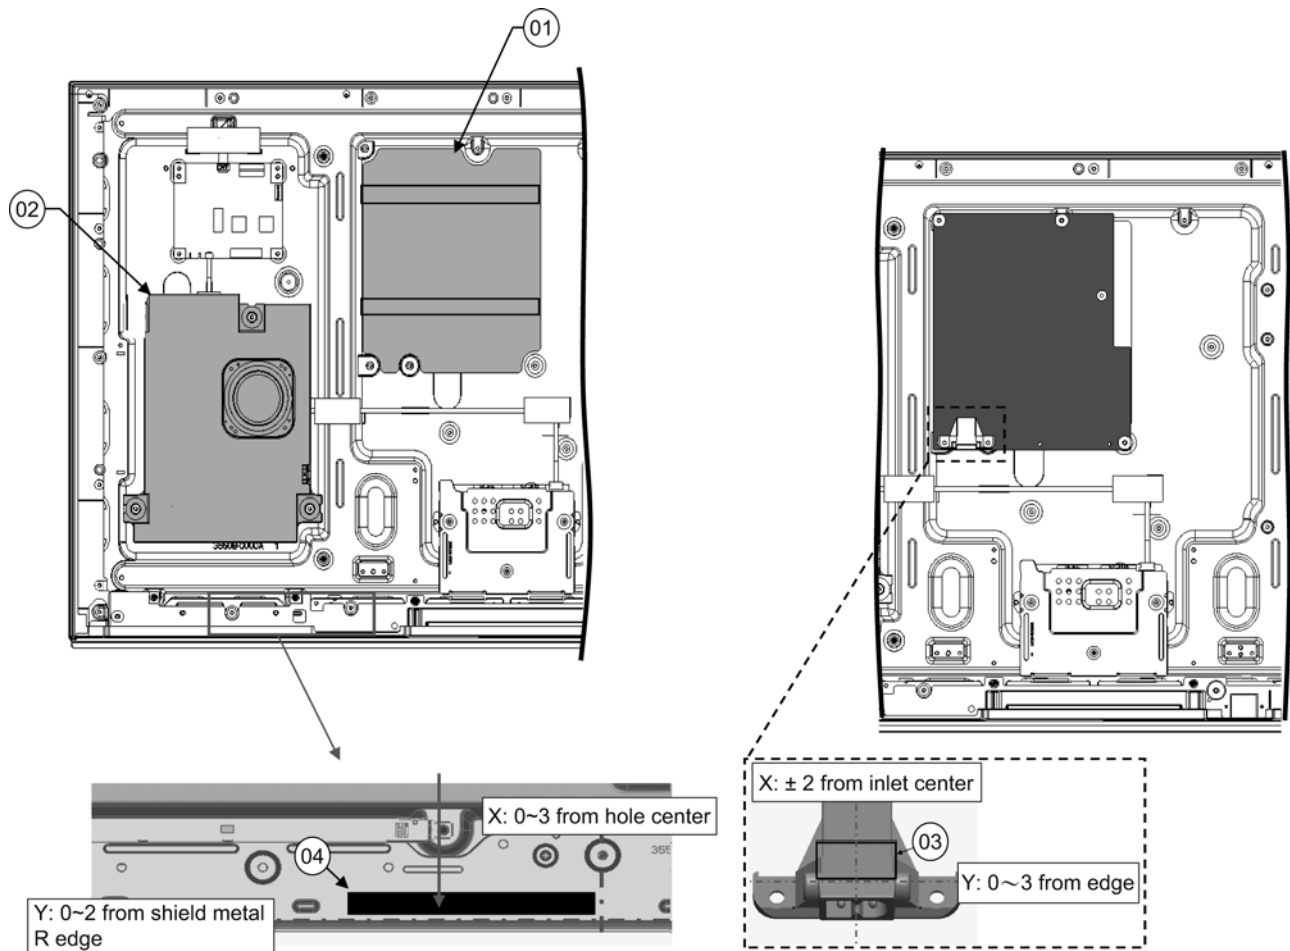

No	Description	Qty	UOM
01	P-PCB_BARRIER	1	PC
02	WOOFER THIN BOX FE	1	PC
03	FELT (10*14*T0.35)	1	PC
04	FELT (10*85*T0.55)	1	PC


7.8. Barrier Sticking

1. Install WIFI DONGLE to B/COVER.
2. Stick KEY BUTTON LABEL to B/COVER.
3. Stick MODEL NAME LABEL to B/COVER.

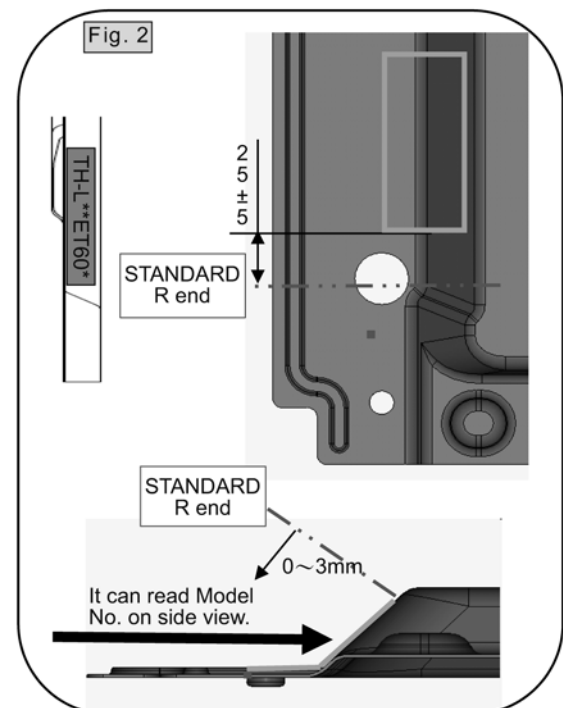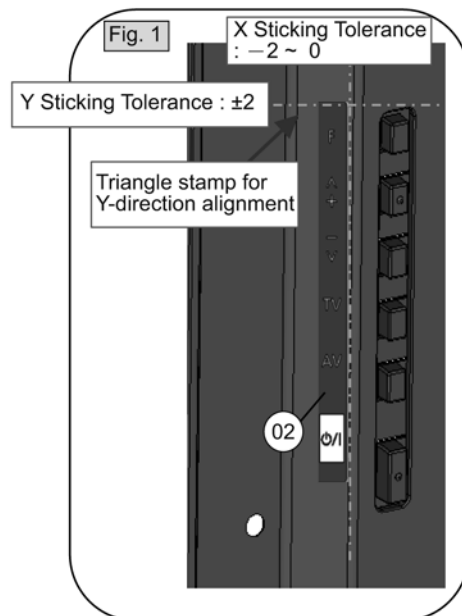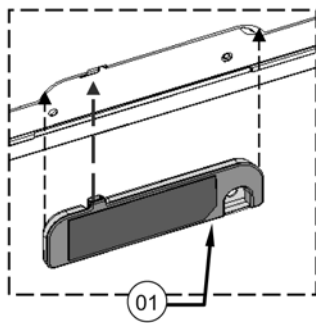
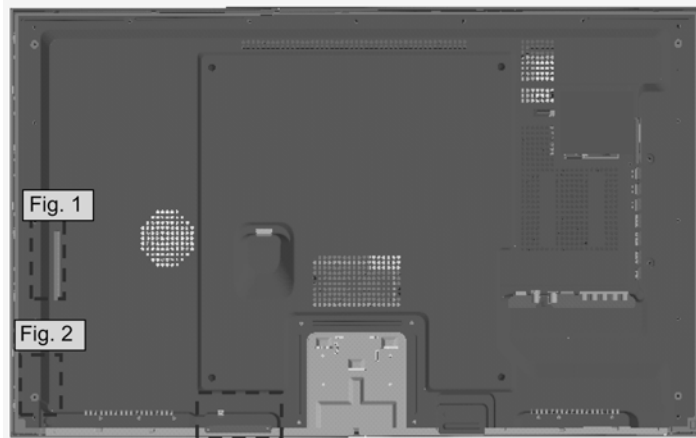


No	Description	Qty	UOM
01	WIFI DONGLE	1	PC
02	KEY BUTTON SHEET	1	PC

7.9. Tightening Screw

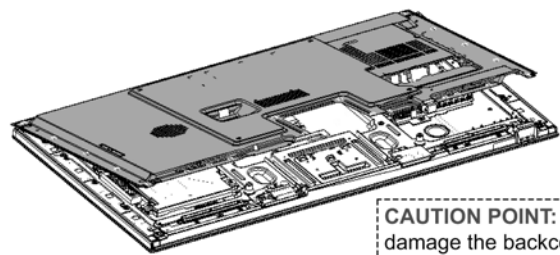

CAUTION POINT: Handling with care & not damage the backcover during assembly.

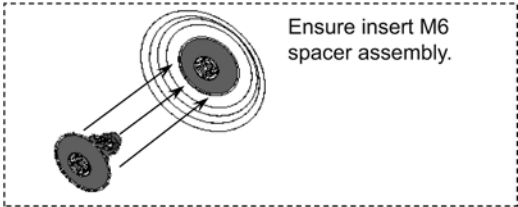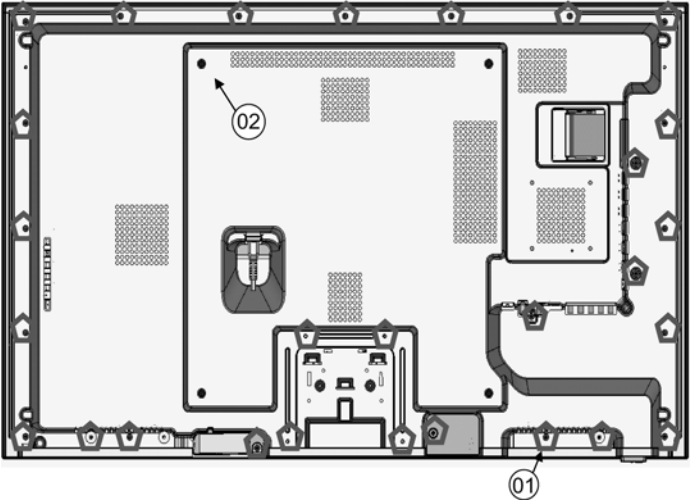

No	Description	Qty	UOM
01	SCREW	28	PC
02	M6 CAP	4	PC

7.10. Handling SPEC

■ Moving the LCD module


The module should be handle by two people and hold on that top and bottom long side by both hands without module warping. Never handle the module with keeping horizontal position when moving the module in order to avoid internal damage and deformation. Never drop or hit the module.

■ About the work table

When tightening a screw, retention structures are required not to deform the LCD module.

■ Moving the TV (Case with a stand)

Hold the specified parts as shown to stand the TV up and move it with two people.

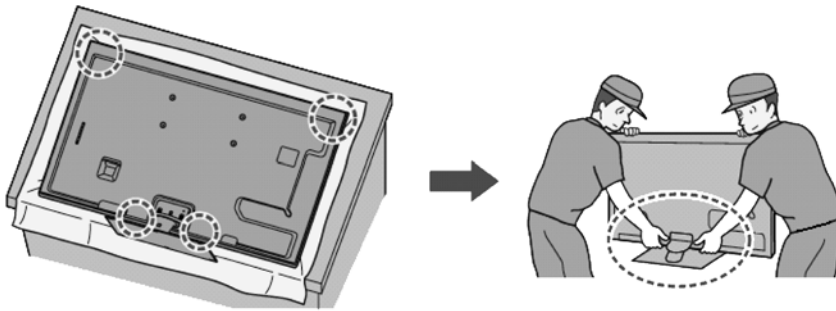

8 Measurements and Adjustments

8.1. Voltage chart of A-board

Set A-Board to a dummy set and check the satisfaction with the specified voltage as following table.

Power Supply Name	Measurement Point	Specification	
PANEL12V	TP4000 / 4001	11.50V - 12.50V	
SUB5V	TP5420	4.95V - 5.40V	
SUB3.3V	TP5400	3.17V - 3.43V	
SUB1.8V	TP8714	1.70V - 1.90V	Only TNPH1038
SUB1.5V	TP8100	1.435V - 1.585V	
SUB1.2V	TP8101	1.140V - 1.260V	
LNB_PWR	TP6702	15.30V - 17.10V	Only JPN_Model
JP_TU_2.5V	TP5705	2.38V - 2.62V	
DMD_1.2/1.1V	TP5702	1.14V - 1.26V	Only JPN_Model
DMD_1.2/1.1V	TP5703	1.14V - 1.26V	Only DTMB_Model

8.2. Voltage chart of P-board


Set P-Board to a dummy load and check the satisfaction with the specified voltage as following table.

Output	Test Point	Specification	
		STBY	Operate
24V	TP7407	<1V	24 ± 1.2V
16V	TP7410	<1V	15.7 ± 0.6V
5VS	TP7501	5.3 ± 0.2 V	5.3 ± 0.2V
PFC	TP7201 or TP7202	<340V	390 ± 15V


*HOT

9 Block Diagram


9.1. Main Block Diagram

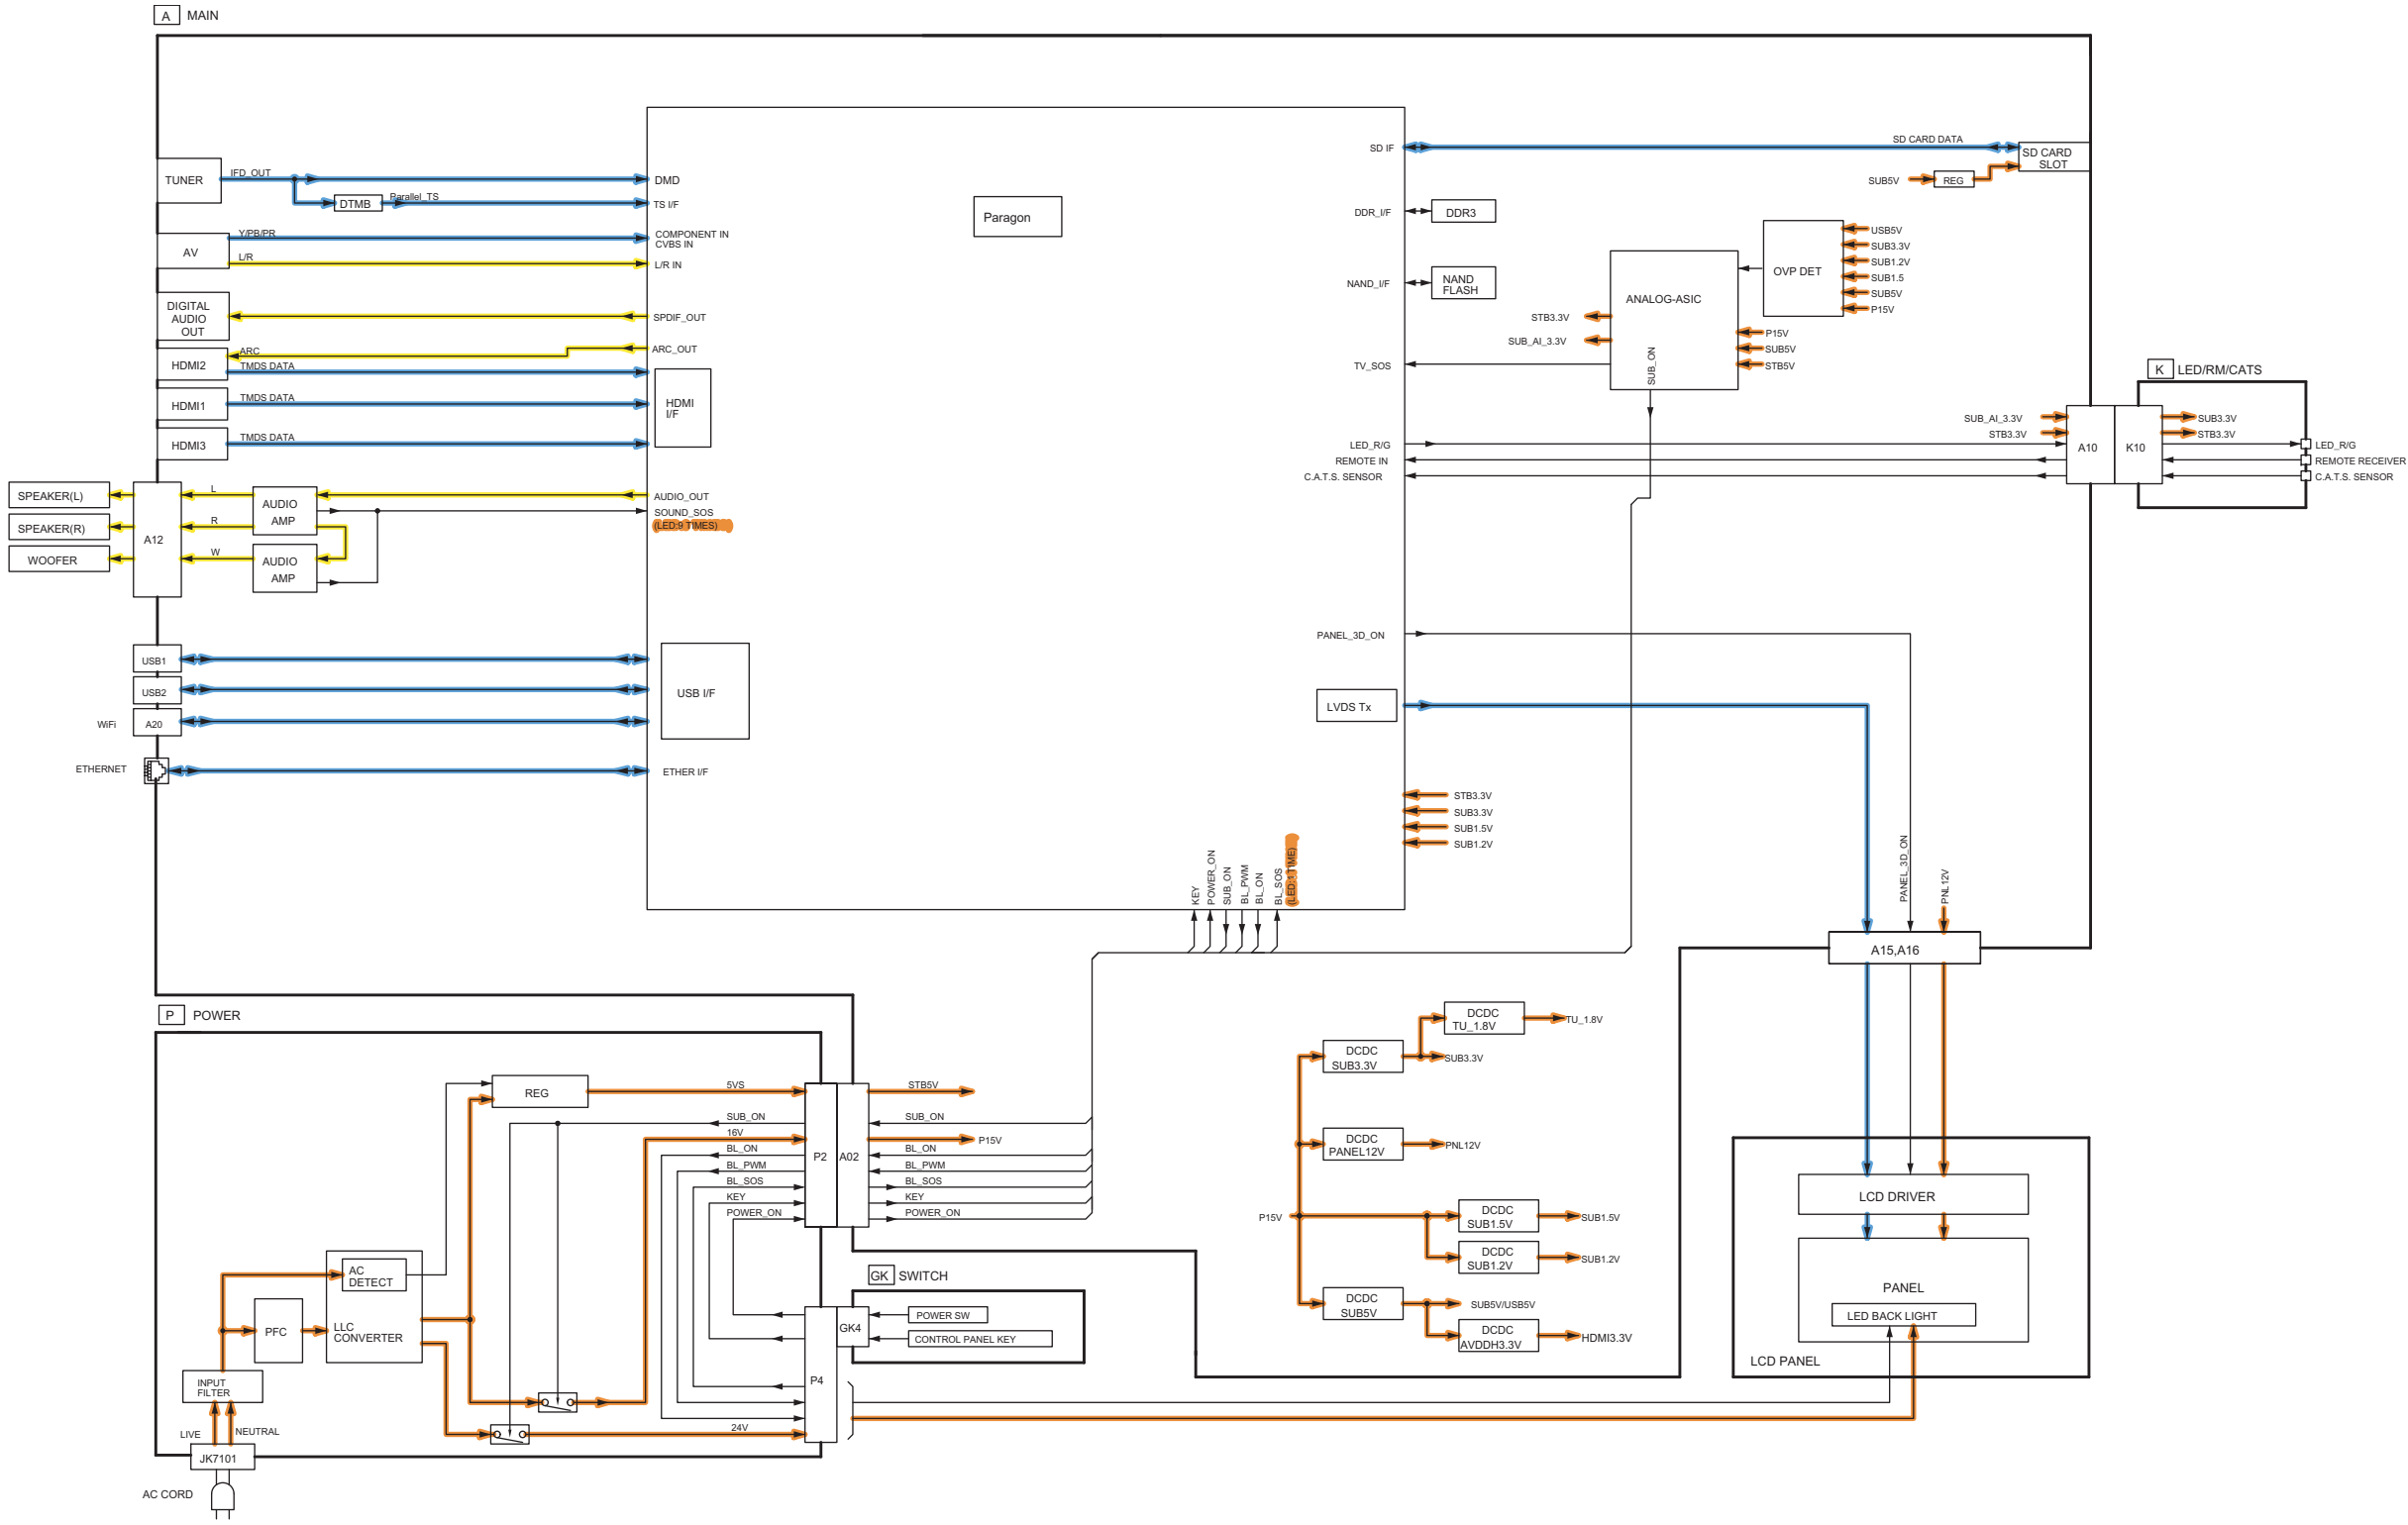

9.2. Detailed Block Diagram (1/2)

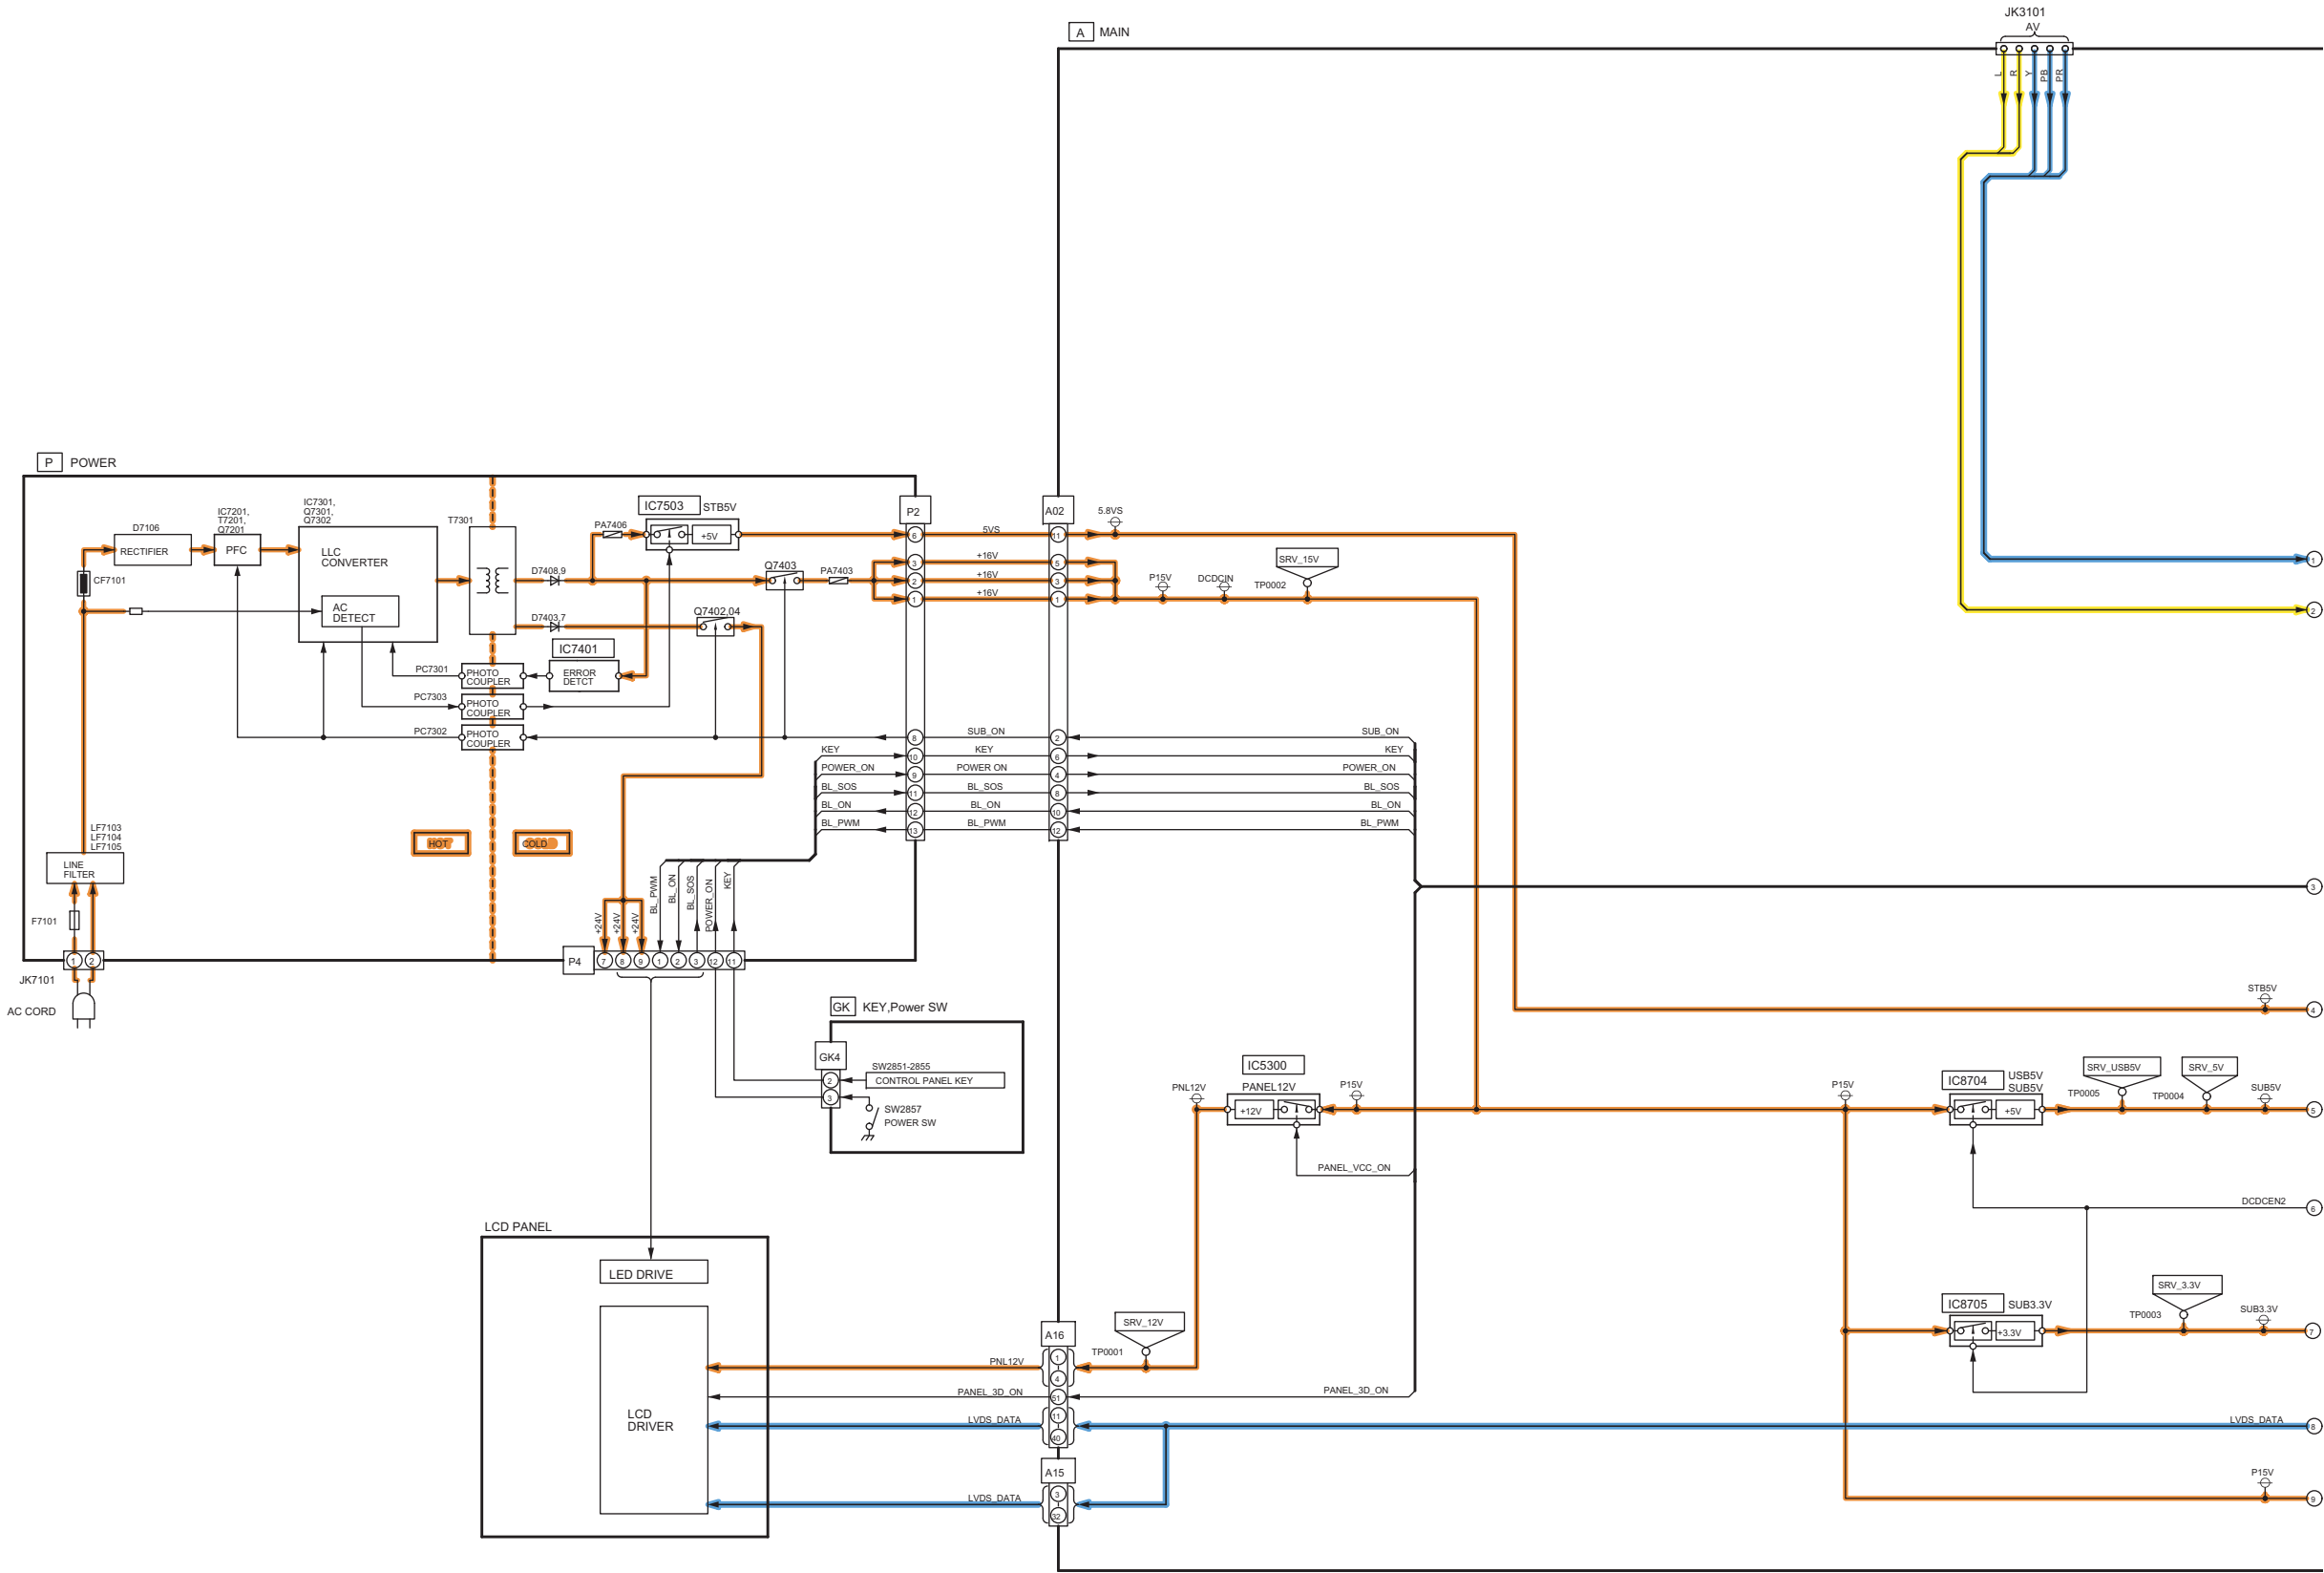


9.3. Detailed Block Diagram (2/2)

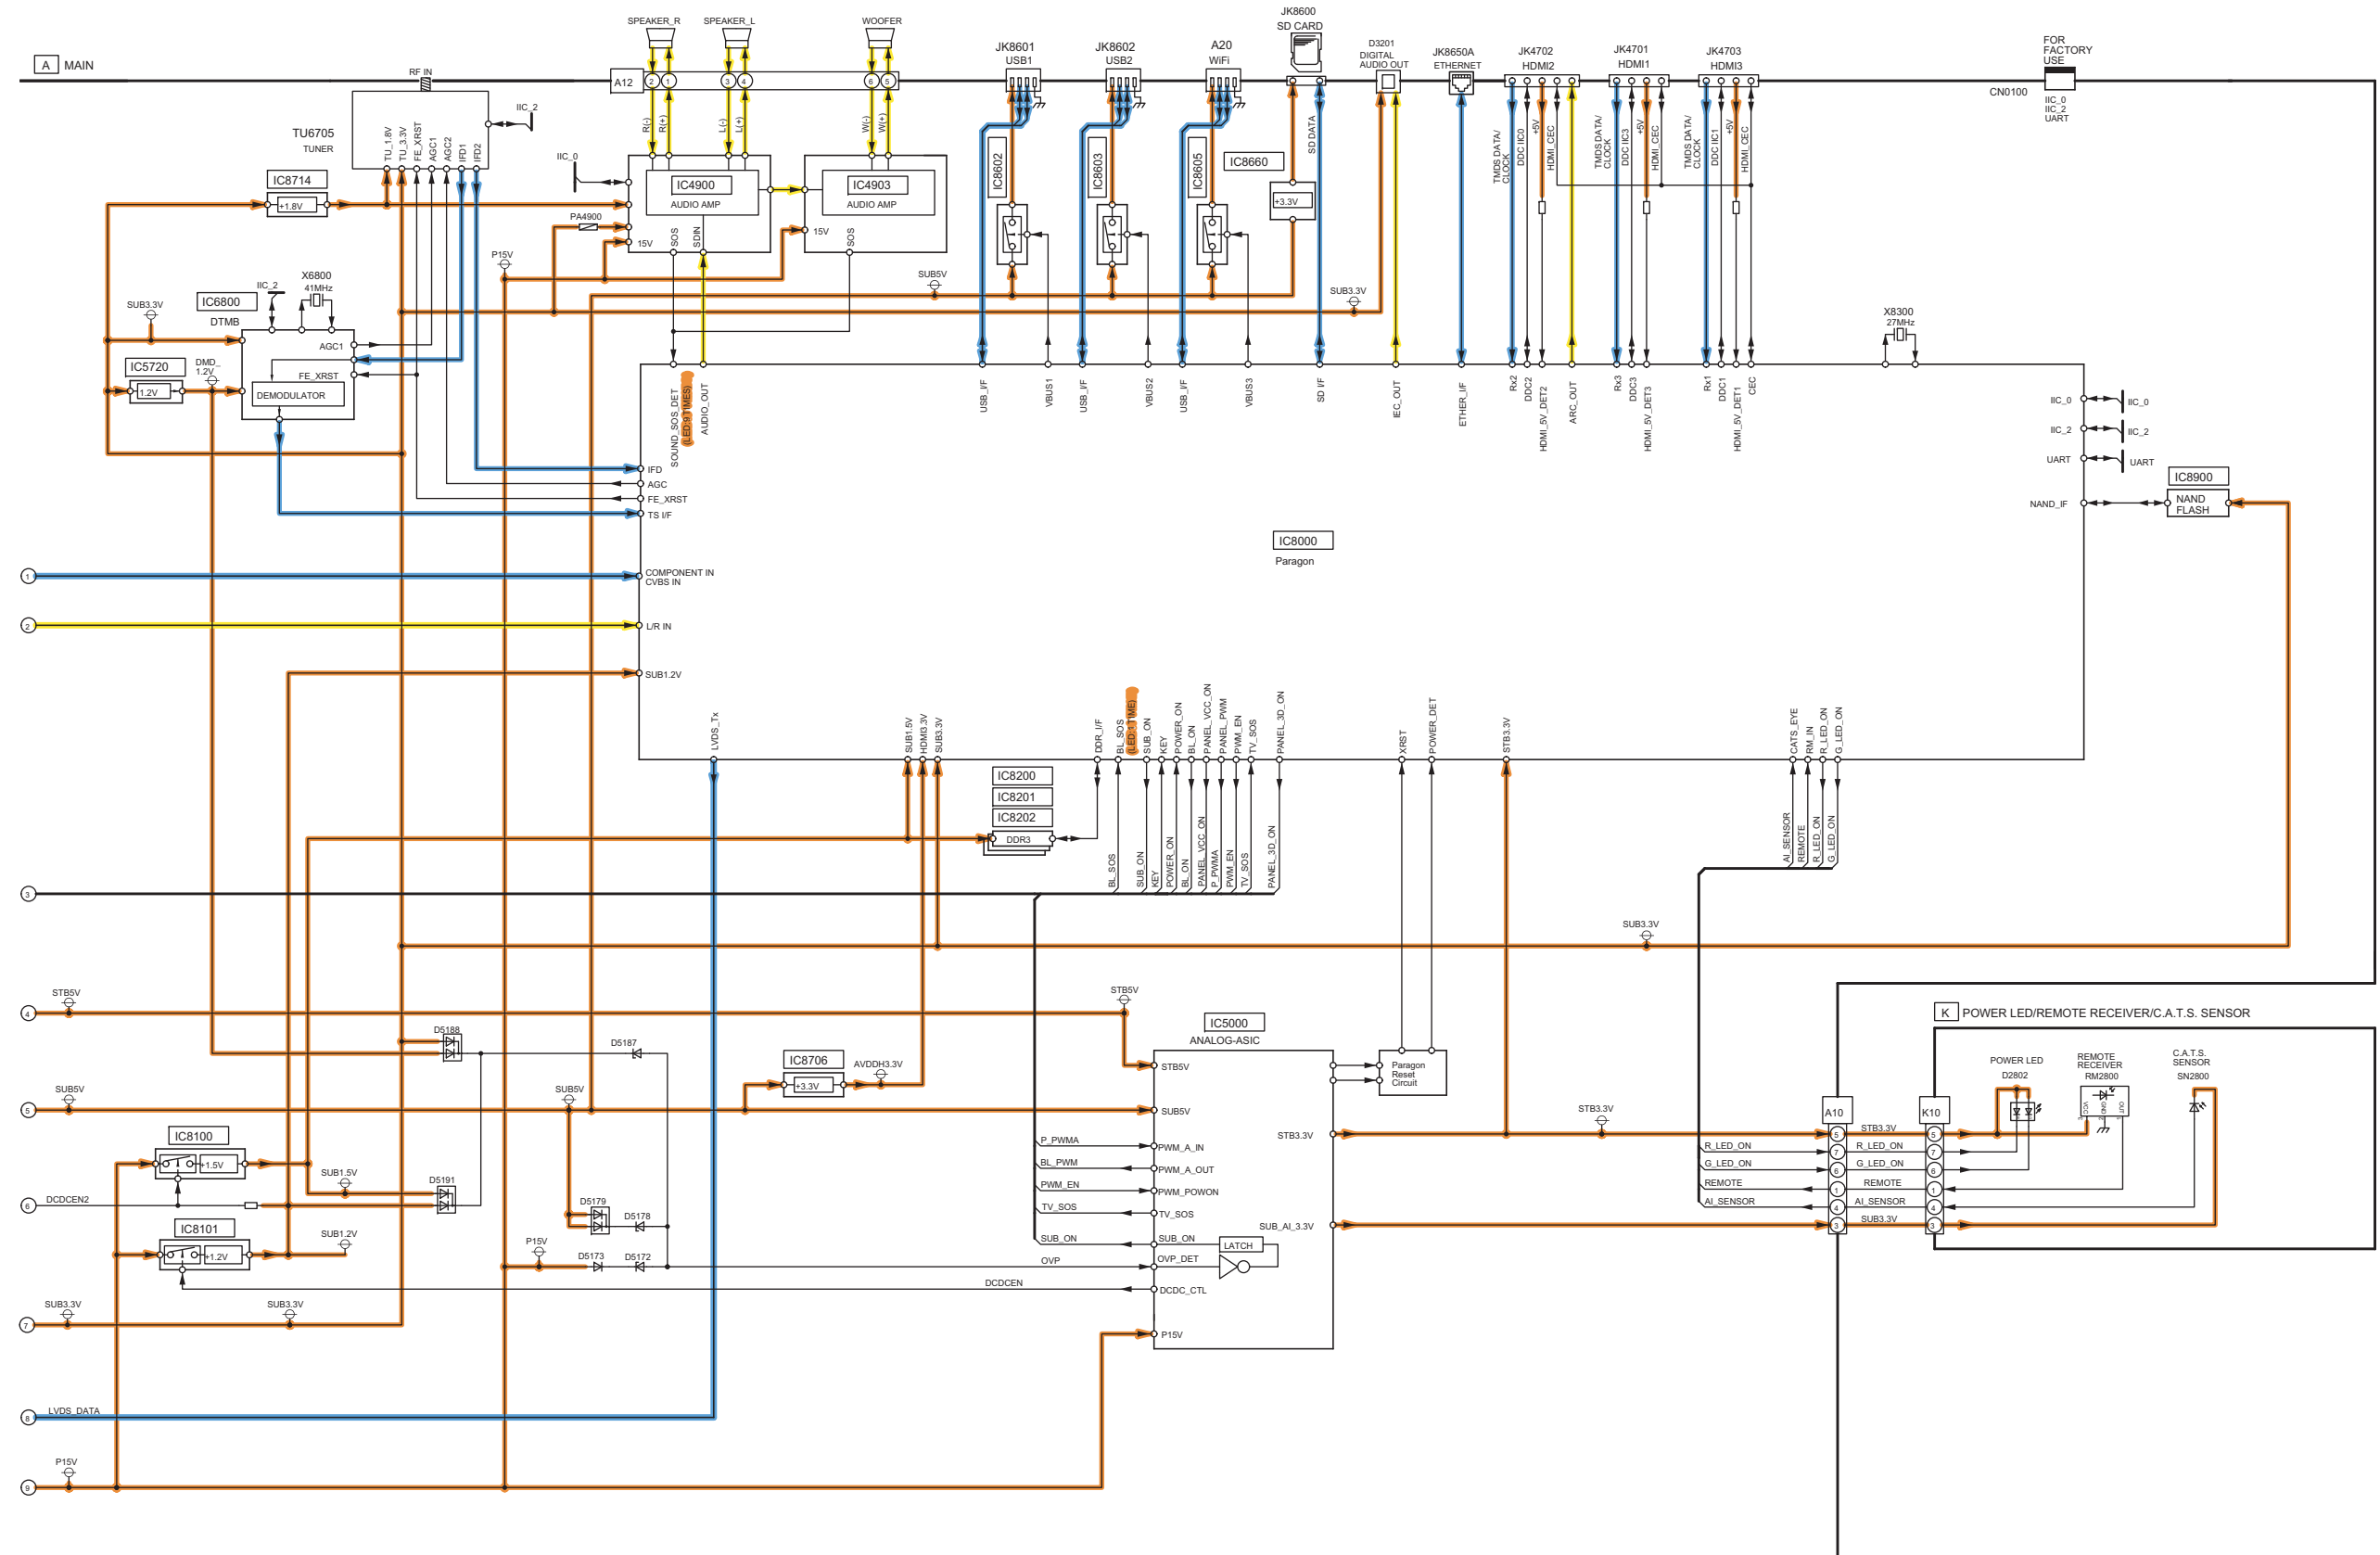

10 Wiring Connection Diagram

10.1. Wire Dressing 1

- 1. Assemble wire dressing according to diagram below.
- 2. Refer next page for detail assemble.


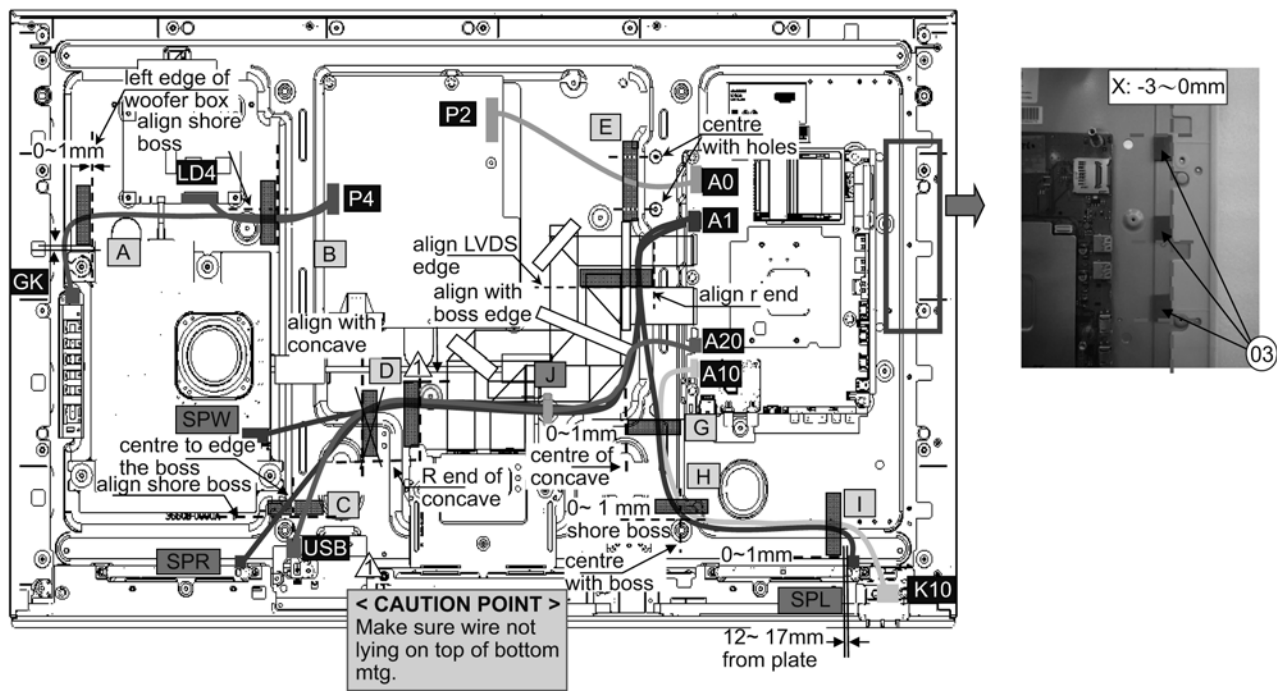


CABLES	PET TAPE								CLAMPERS
	A	B	C	D	E	G	H	I	J
A02 - P2					●				
A10 - K10						●	●	●	
A20 - USB			●	●					●
A12 - SPR			●	●					●
A12 - SPL						●	●	●	
A12 - SPW				●					●
P4 - LD4		●							
P4 - GK4	●	●							

No	Description	Qty	UOM
01	PET TAPE (0.07 × 9)	0.63	MT
02	CLAMPER	1	PC
02	RUBBER HEAT	3	PC

10.2. Wire Dressing 2


CAUTION POINT: All cable bend should be preformed.

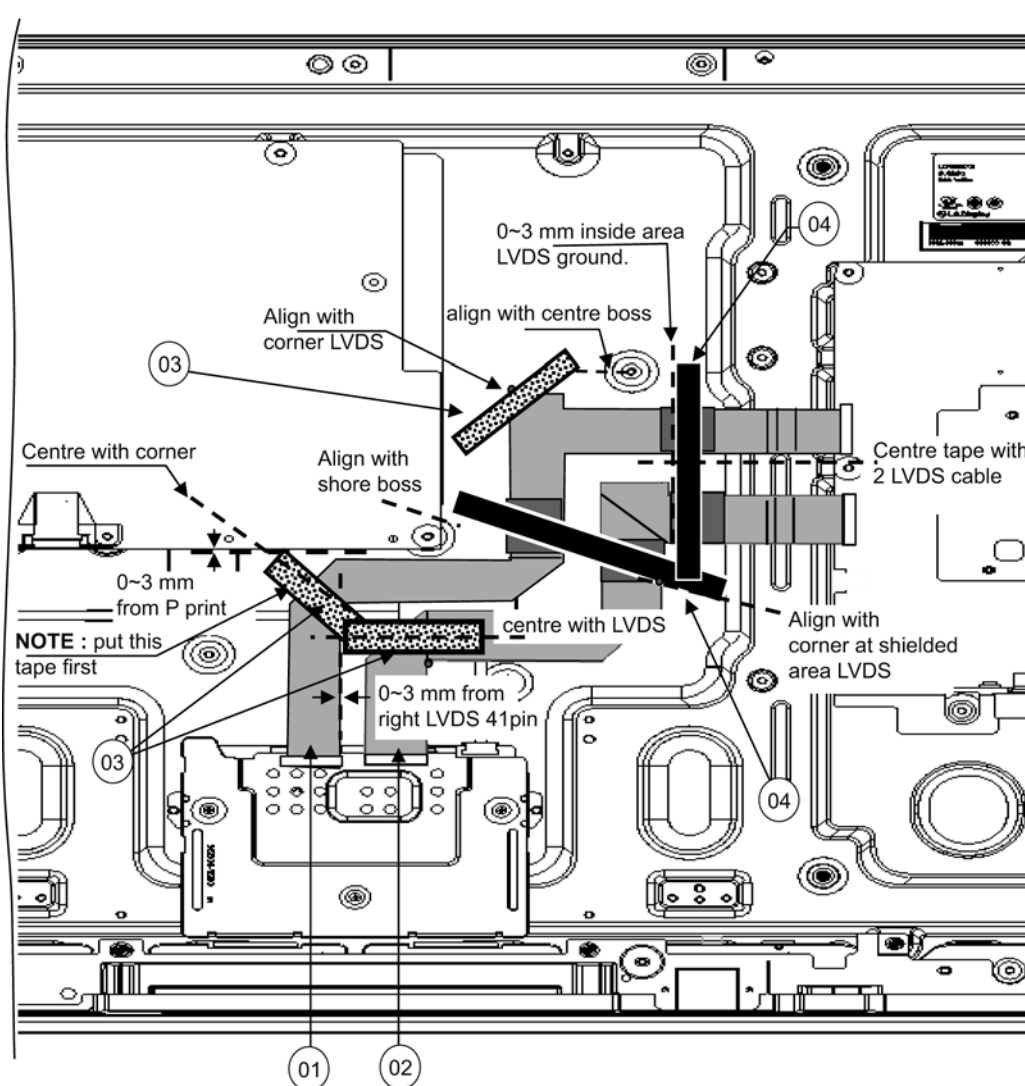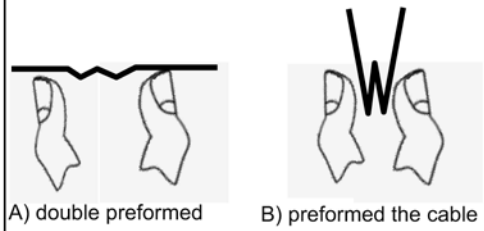


No	Description	Qty	UOM
01	LVDS FFC (41 PIN)	1	PC
02	LVDS FFC (51 PIN)	1	PC
03	PET TAPE (0.07*3)	0.21	MT
04	PET/AL (10 × 120)	2	PC

11 Schematic Diagram


Model No. : TH-L42ET60S TH-L42ET60G A-Board (1/13)



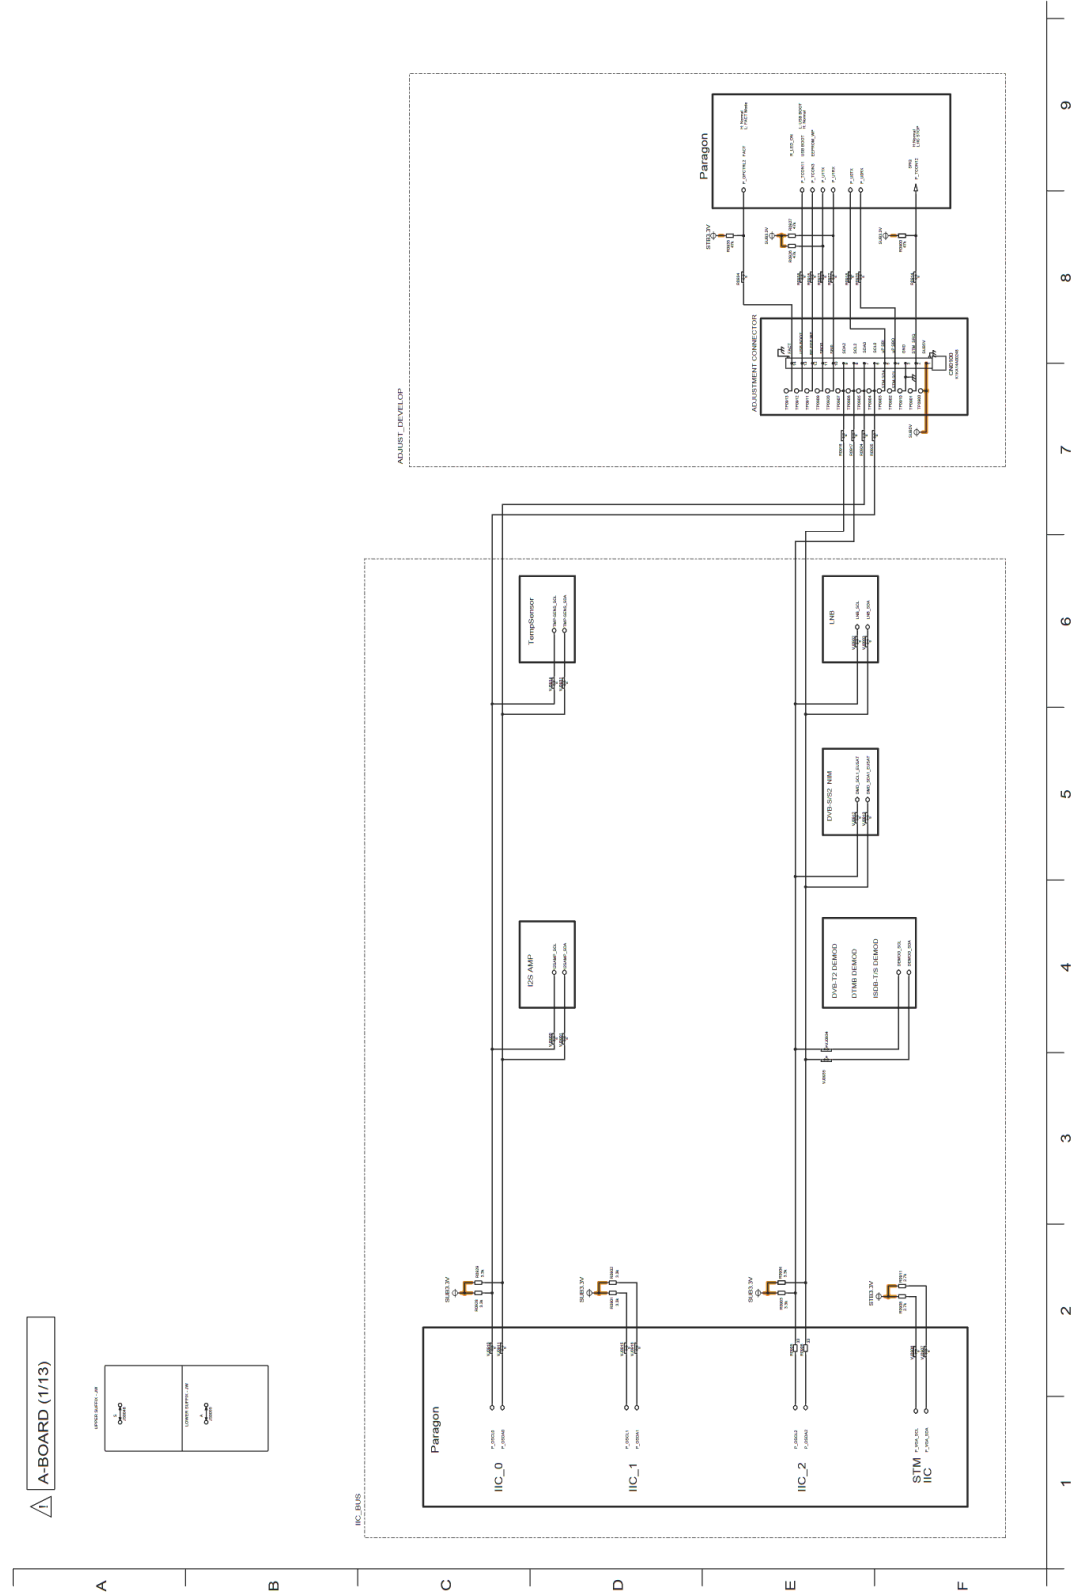


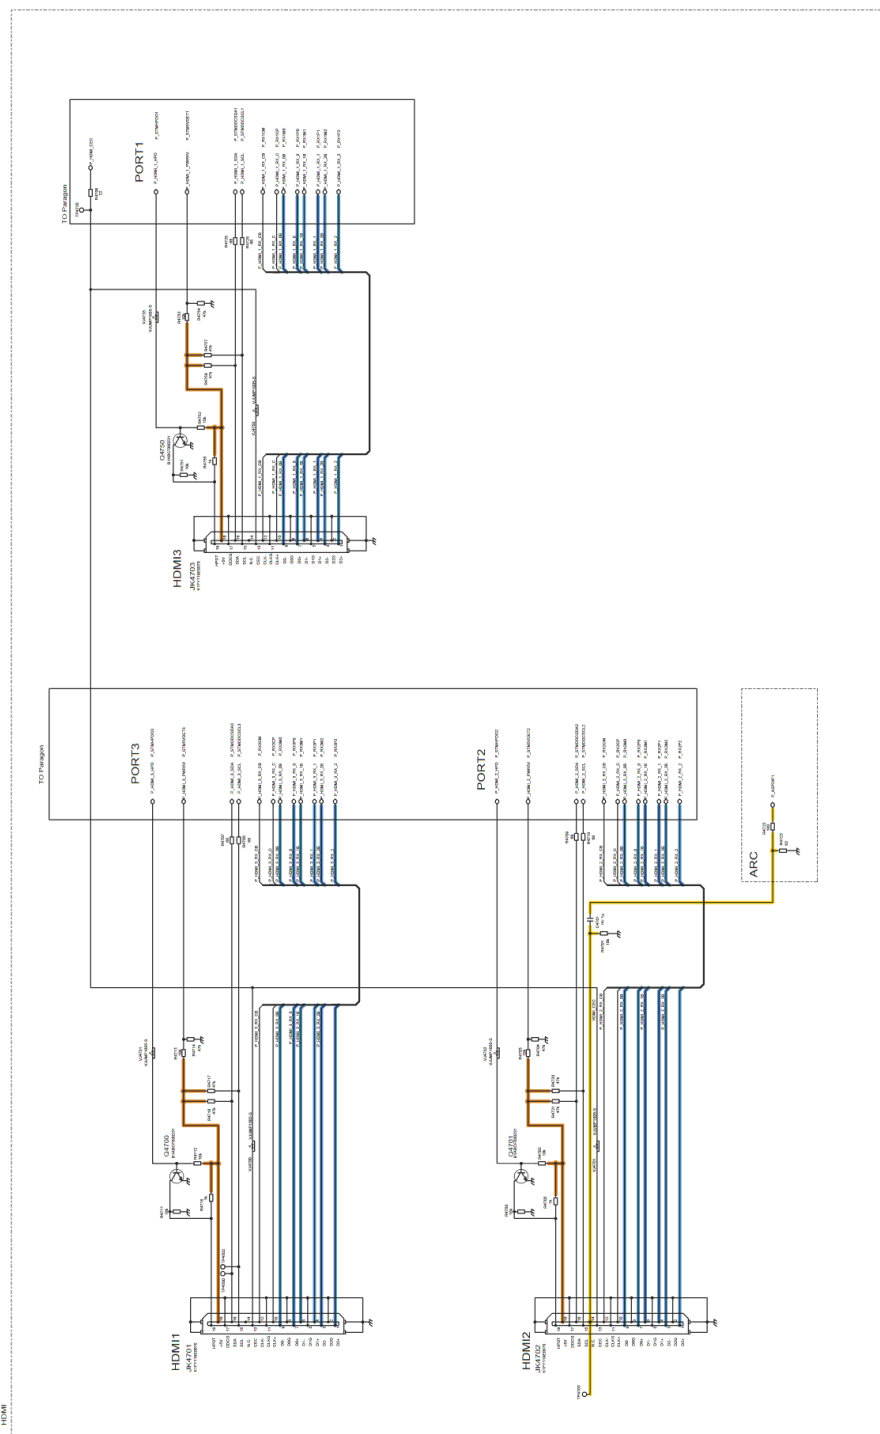

11

10

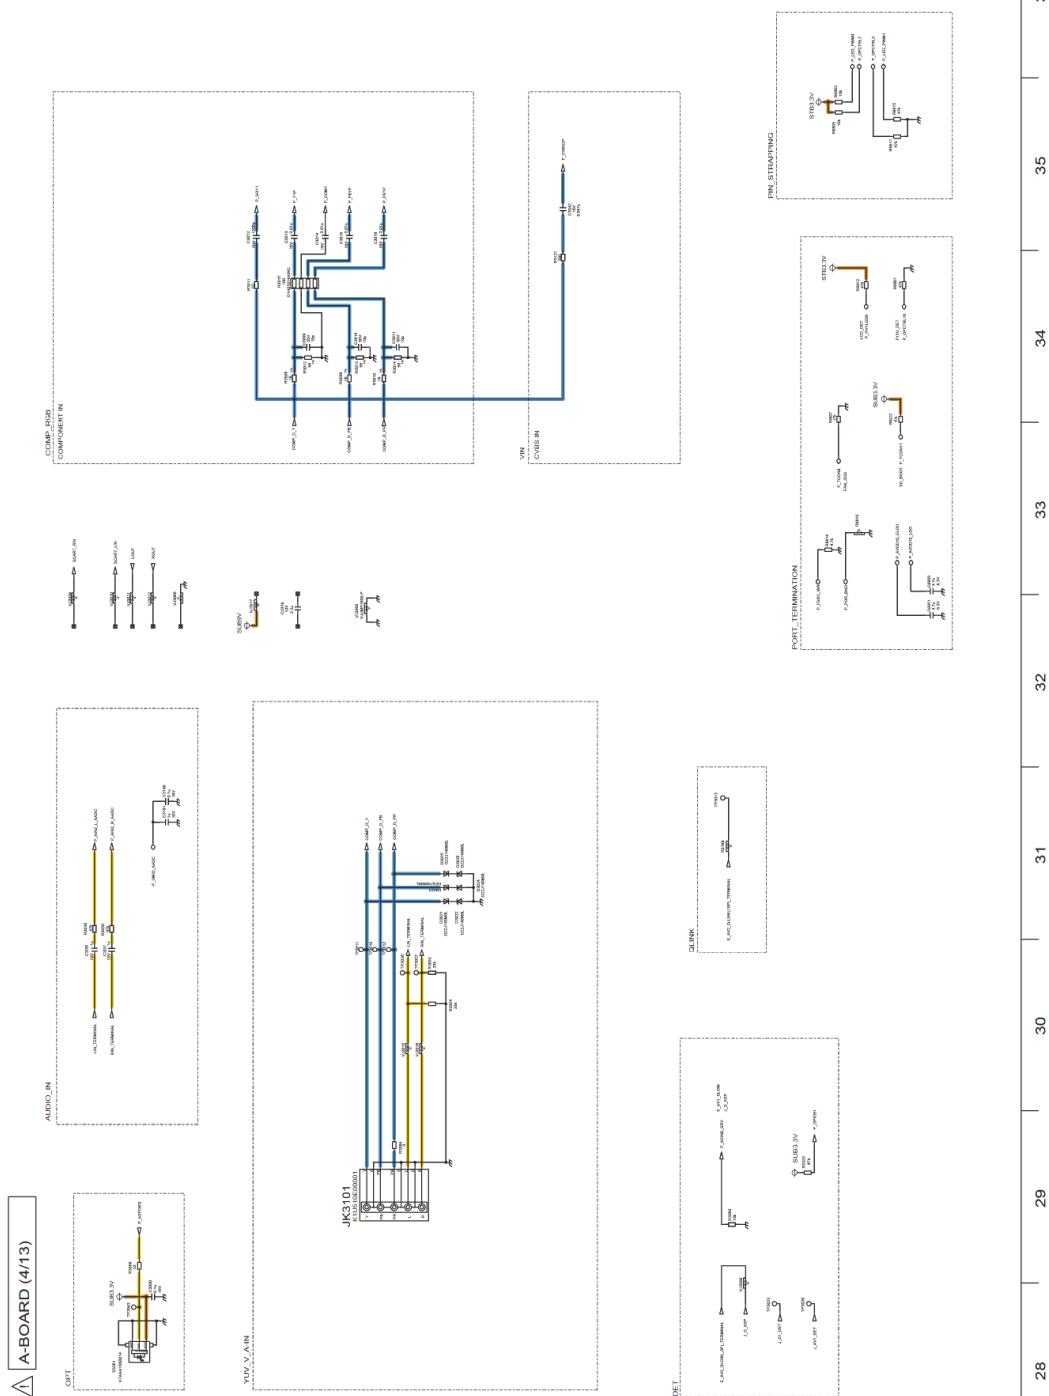

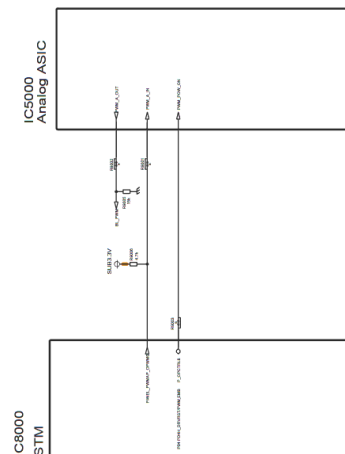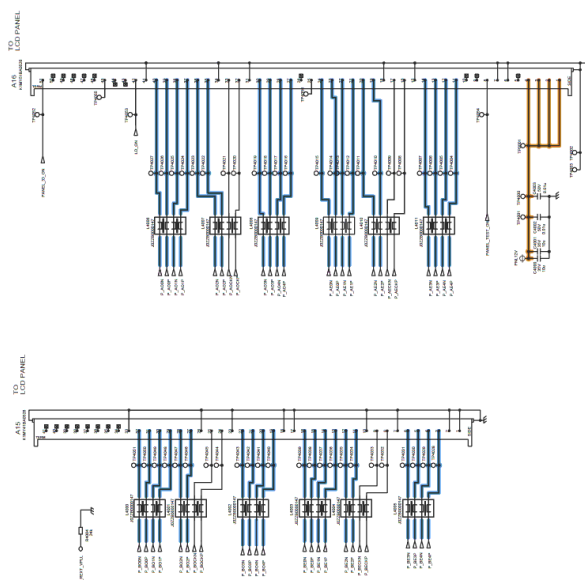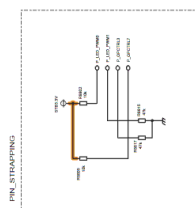


A-BOARD (6/13)


ST50V



PIN1,2V

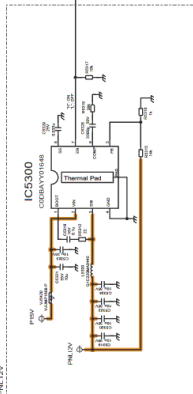


IC5300

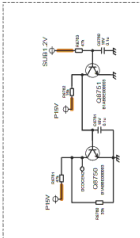


IC5300


ST50V

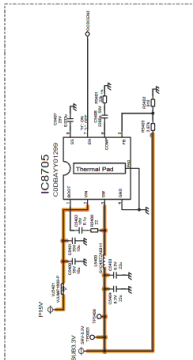

IC8705

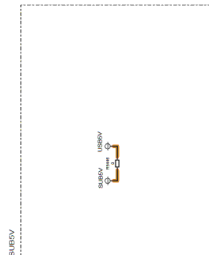


IC8705

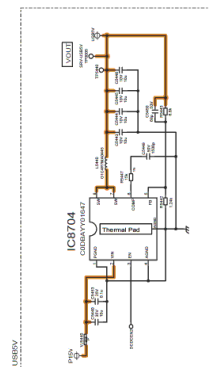


IC8704

to P-PCB

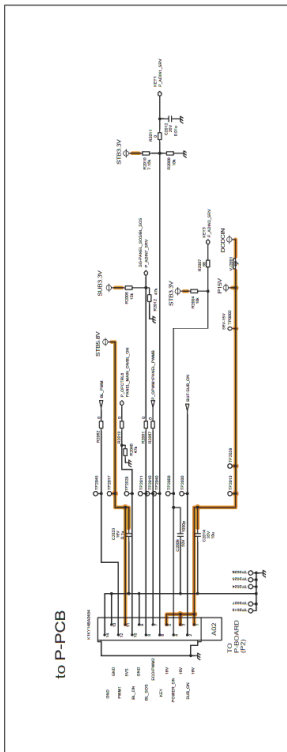

to K-PCB

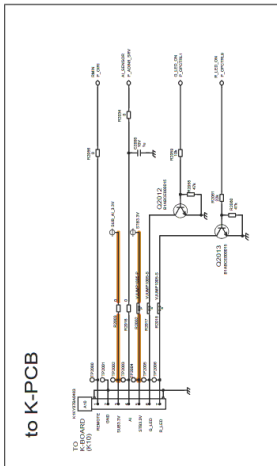

46

47

48

49



50

51


52






53


54

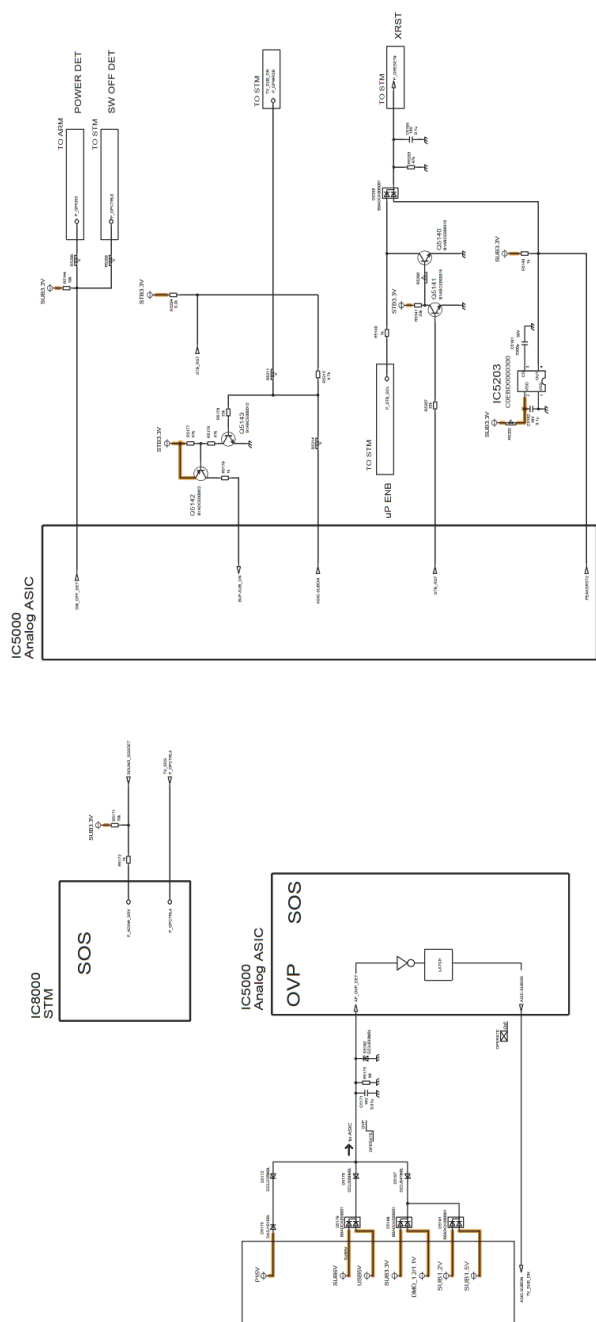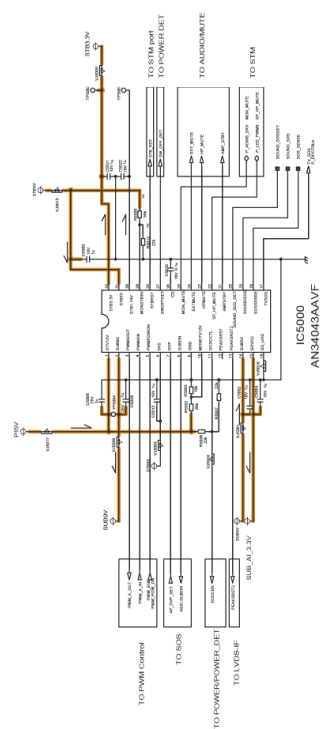


55



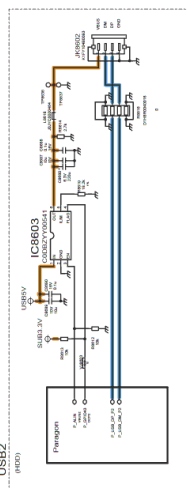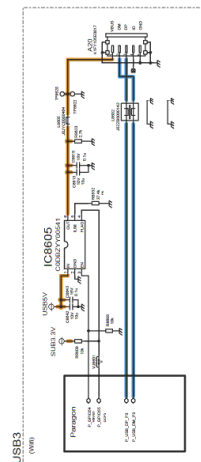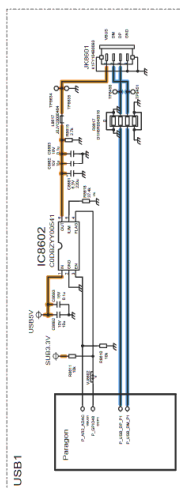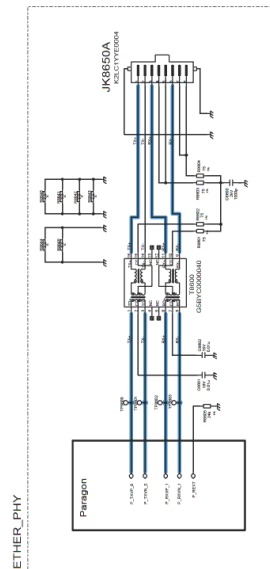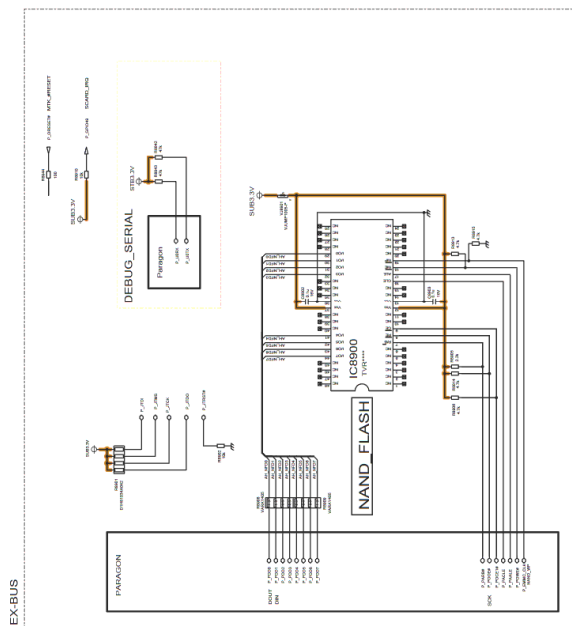





A-BOARD (11/13)

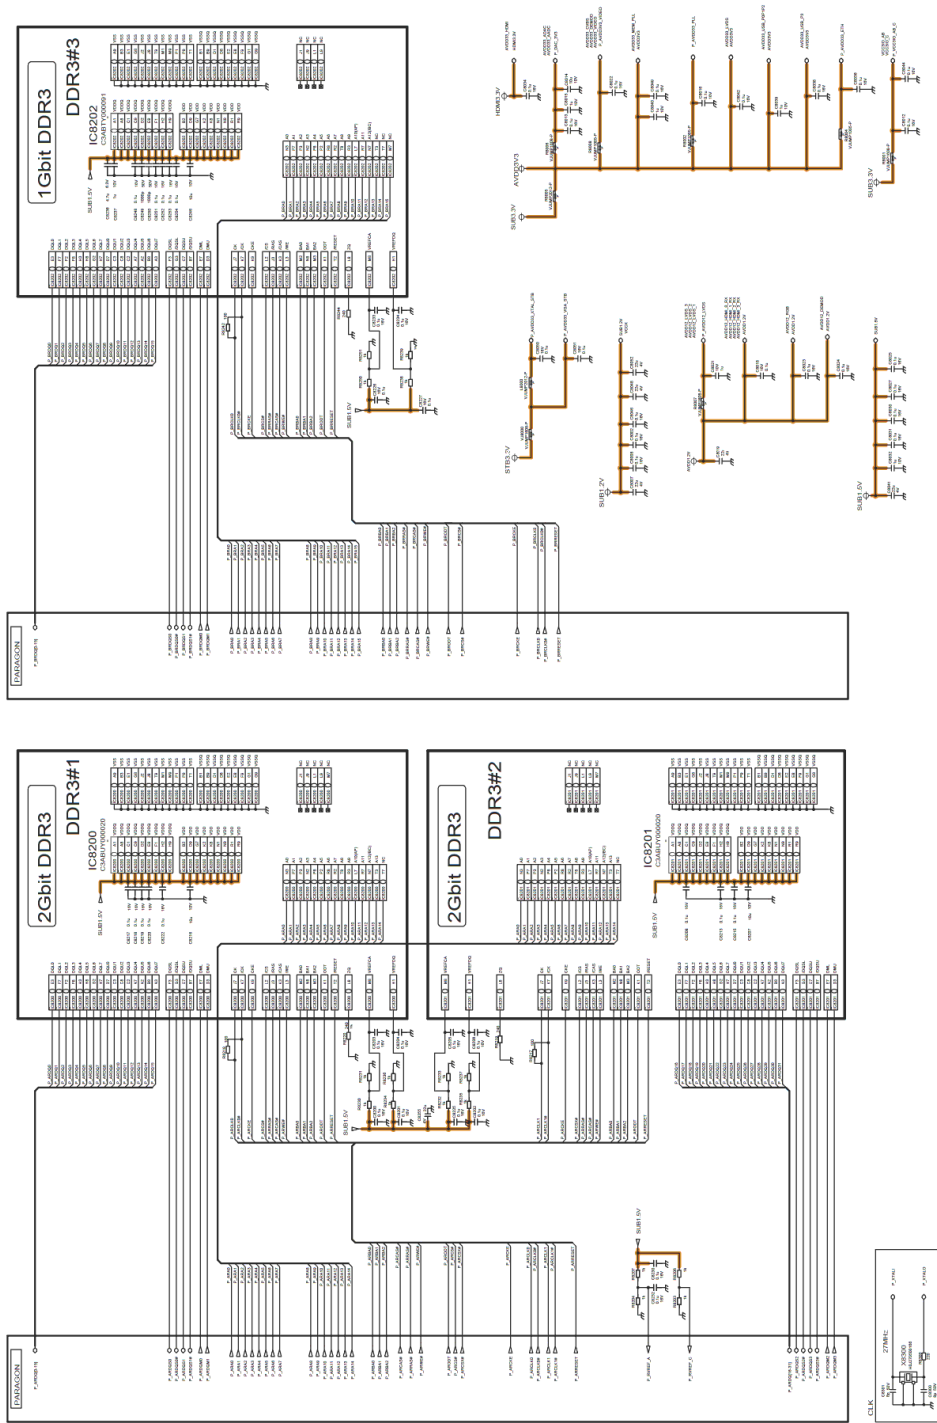


91 92 93 94 95 96 97 98 99

A-BOARD (12/13)

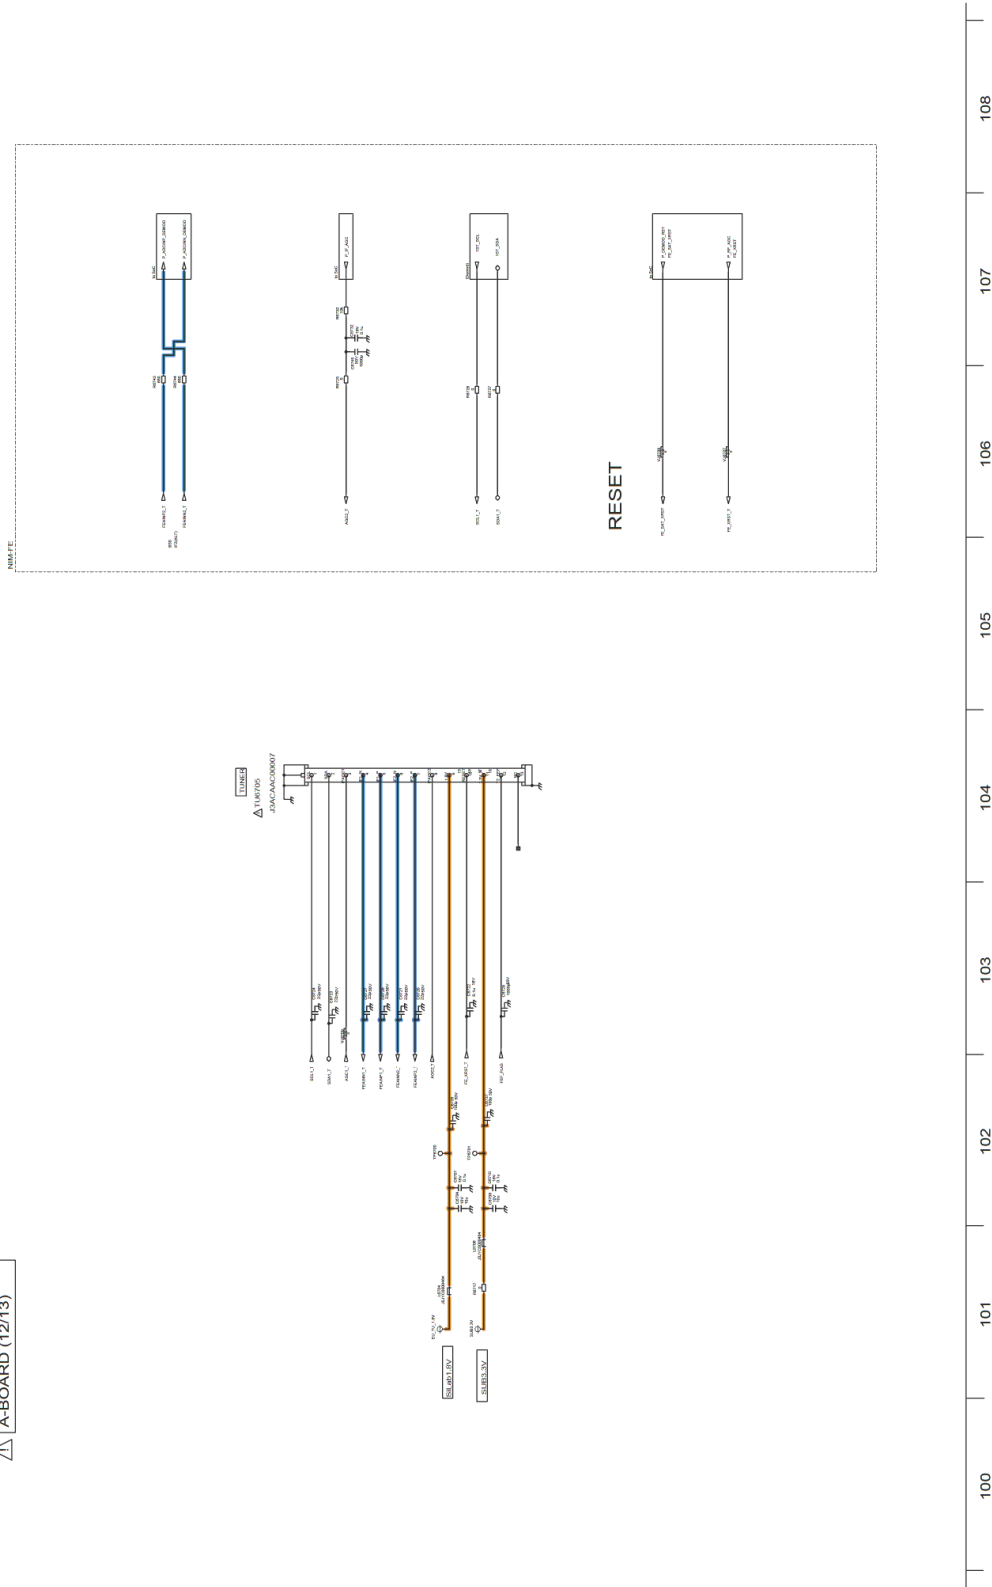

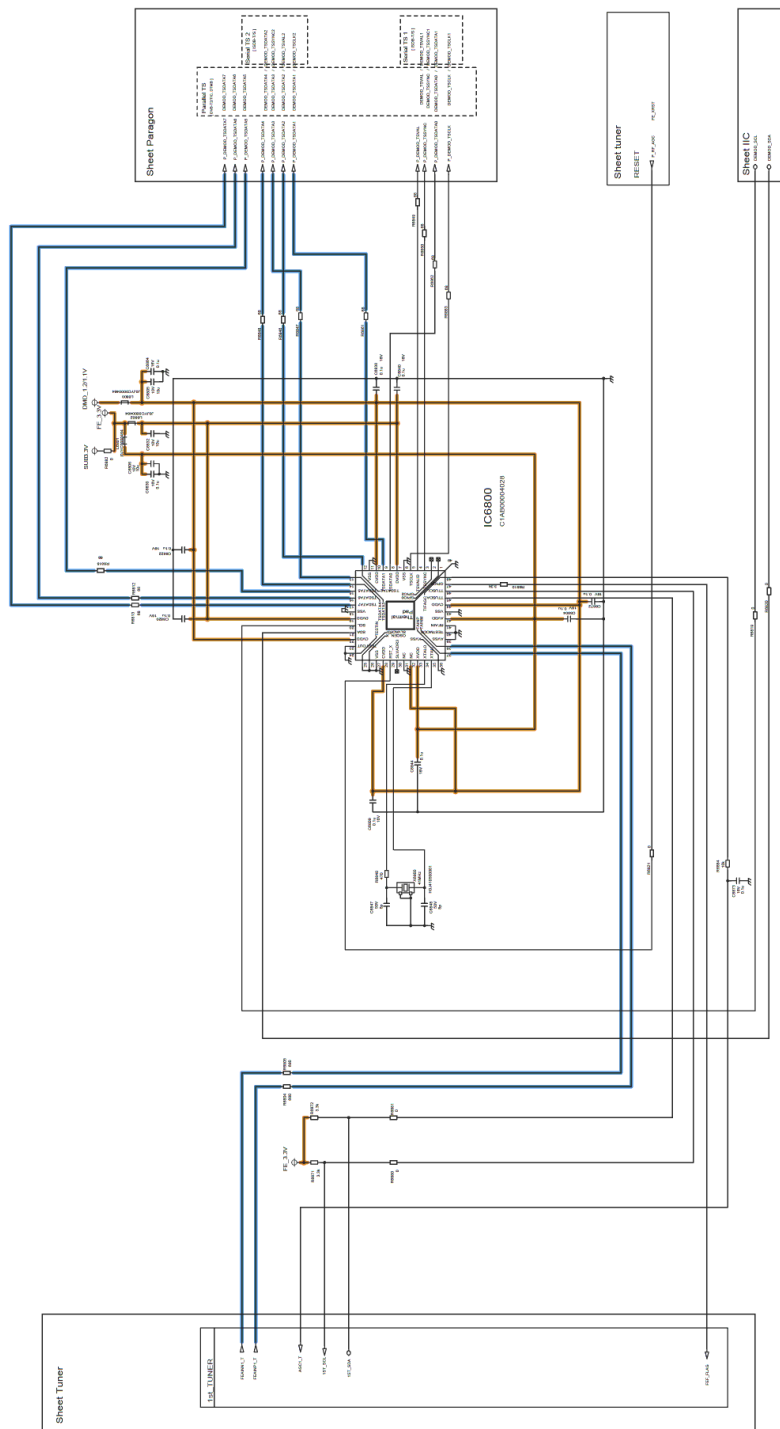

Model No. : TH-L42ET60S TH-L42ET60G GK-Board

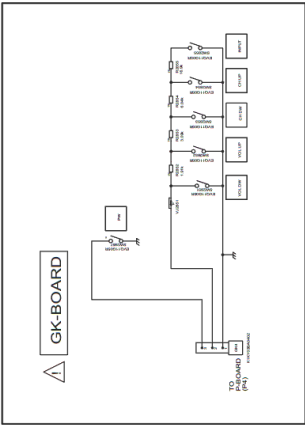

9

8

7

6

5

4

3

2

1

A

B


C

D


E

F


Model No. : TH-L42ET60S TH-L42ET60G K-Board

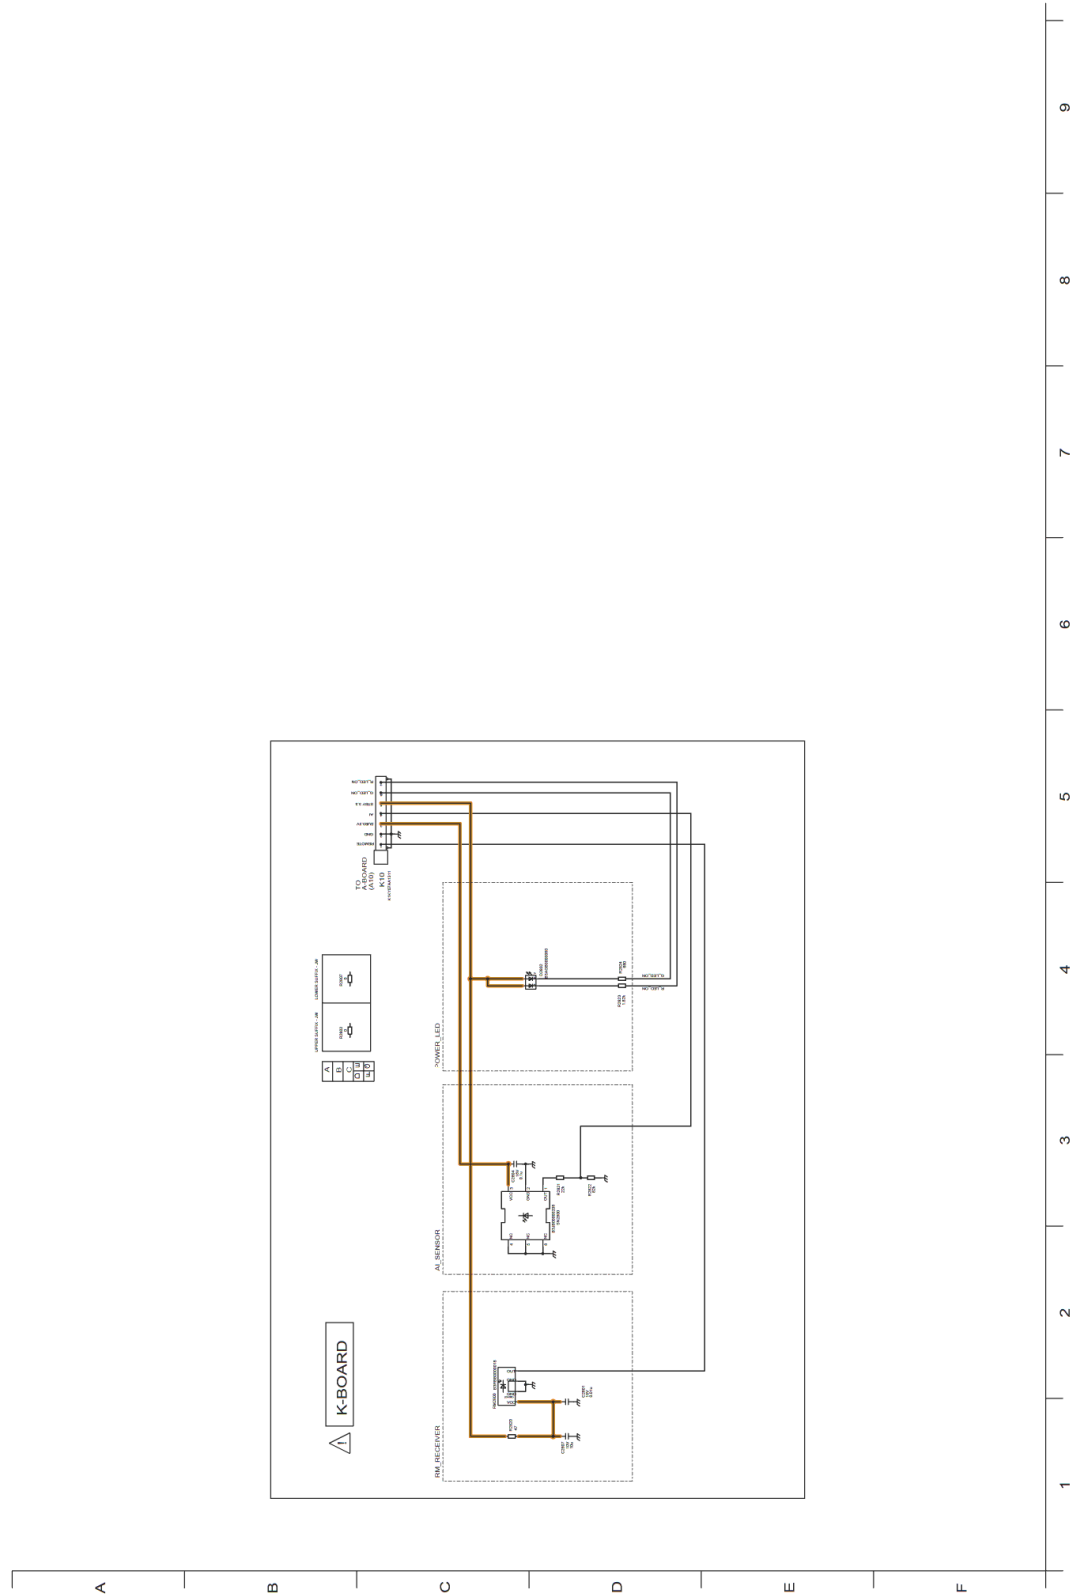

Model No. : TH-L42ET60S TH-L42ET60G P-Board (1/2)

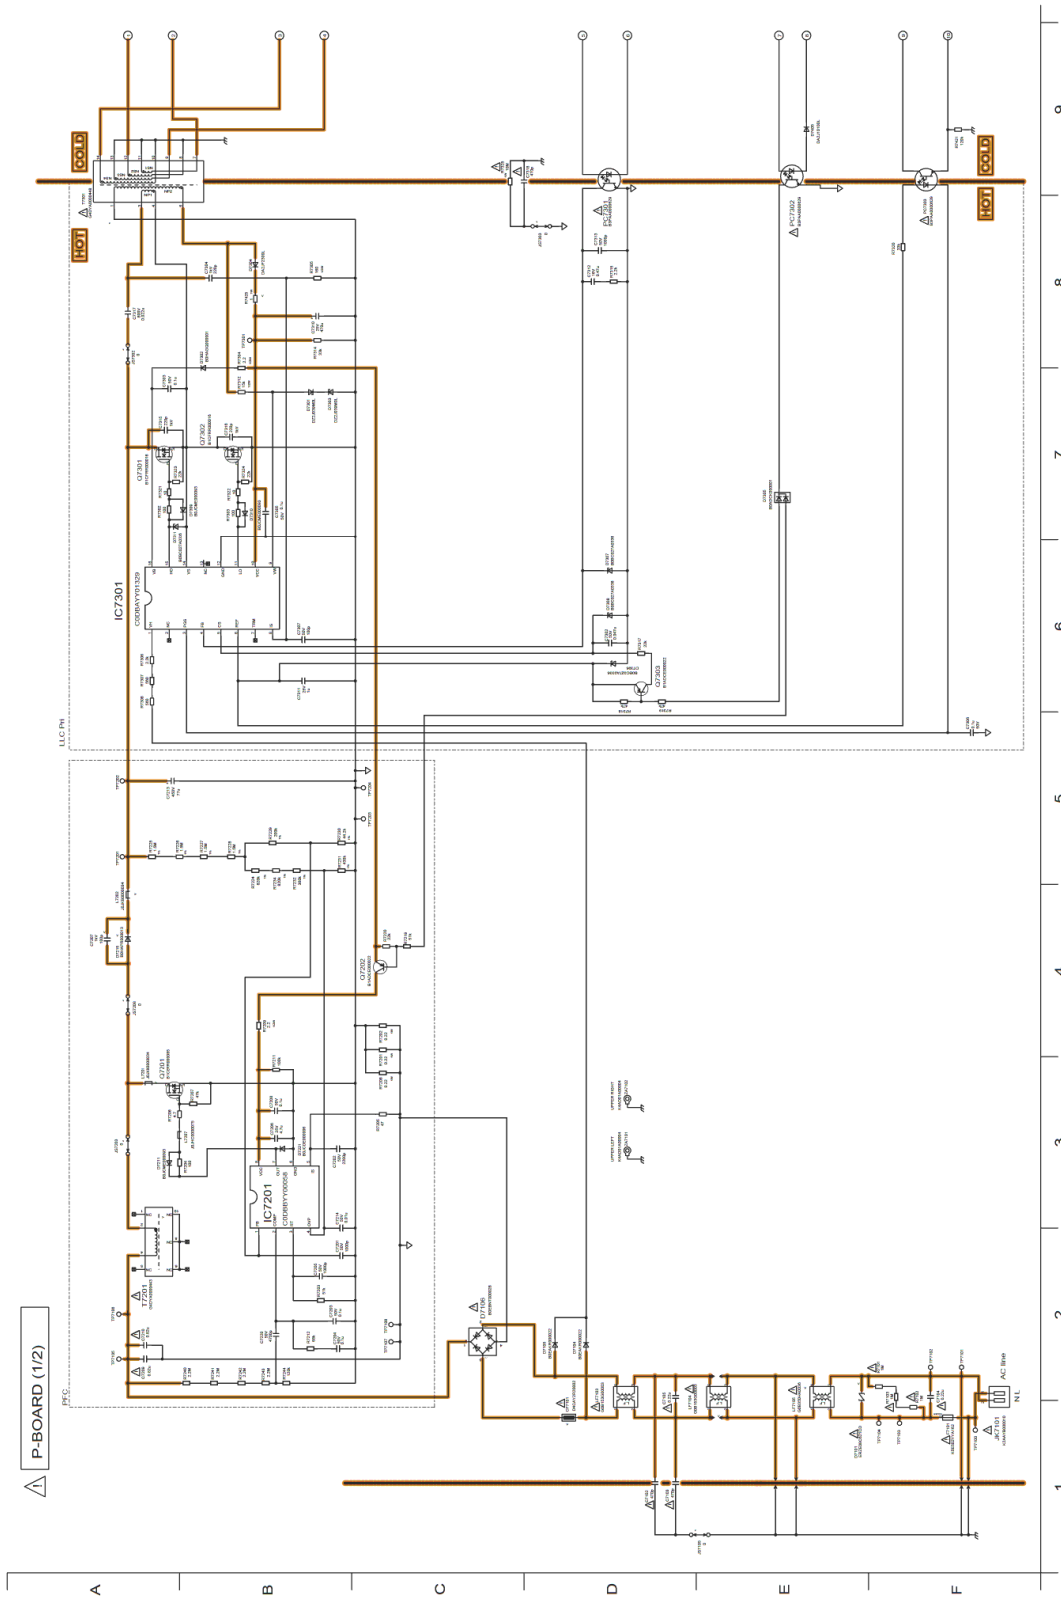

Model No. : TH-L42ET60S TH-L42ET60G P-Board (2/2)

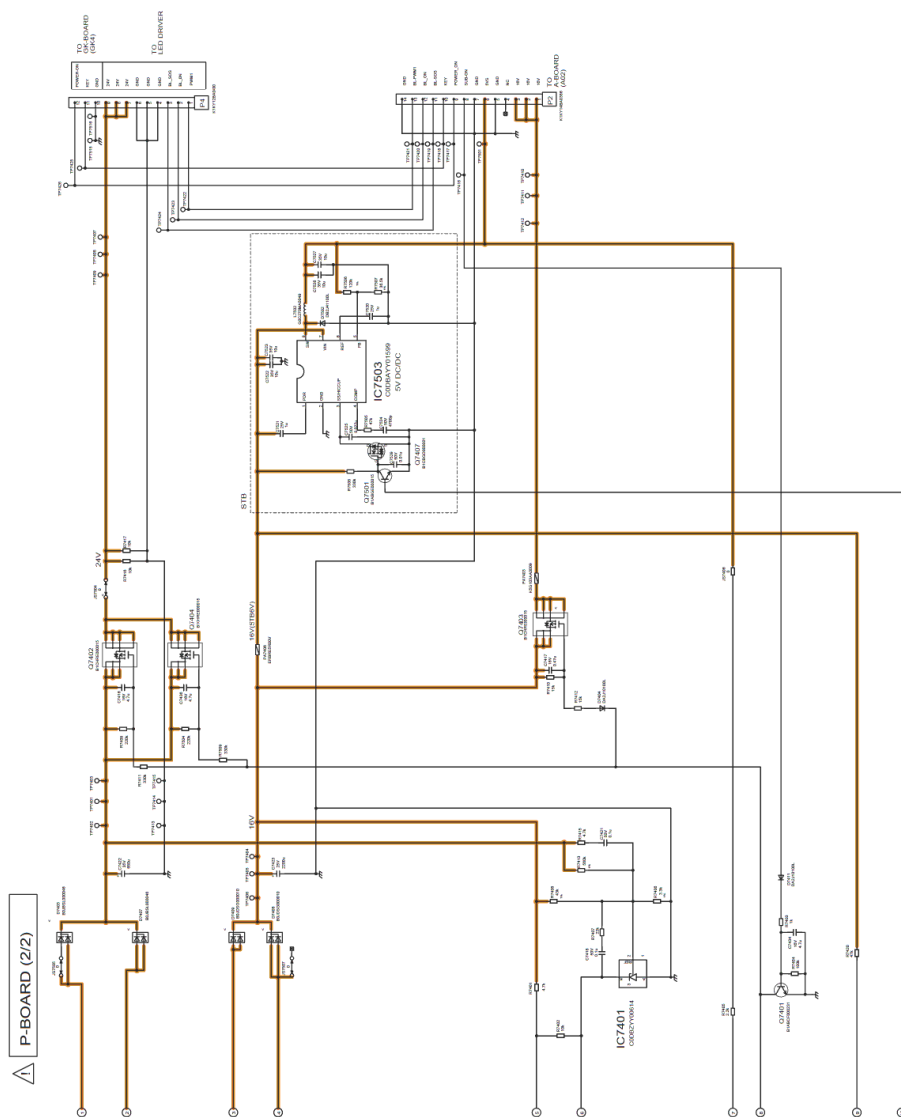

18

17

16

15

14

13


12

11


10


12 Printed Circuit Board


Model No. : TH-L42ET60S TH-L42ET60G A-Board (Top Component Side)

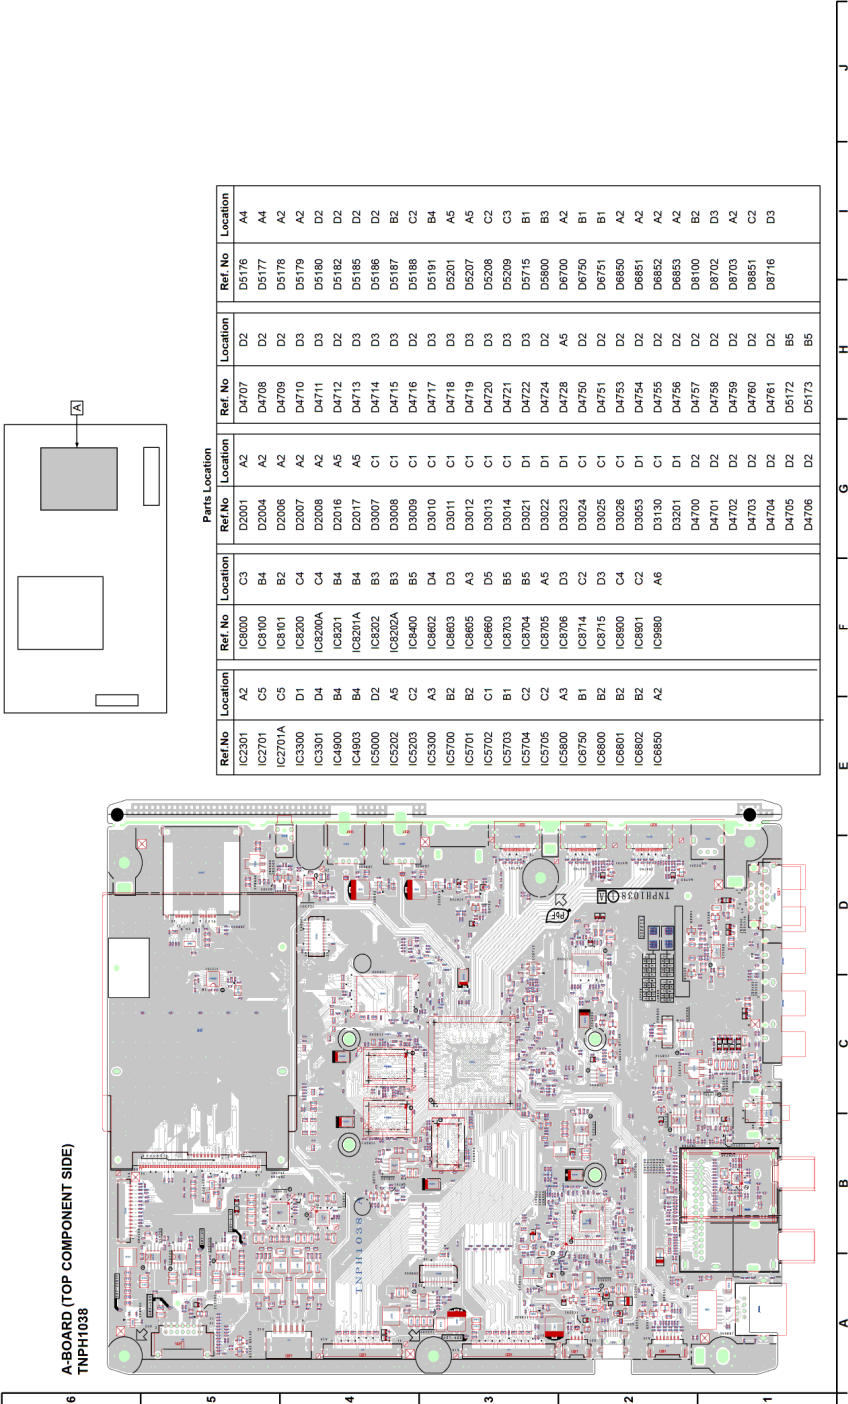


Model No. : TH-L42ET60S TH-L42ET60G A-Board (Bottom Component Side)

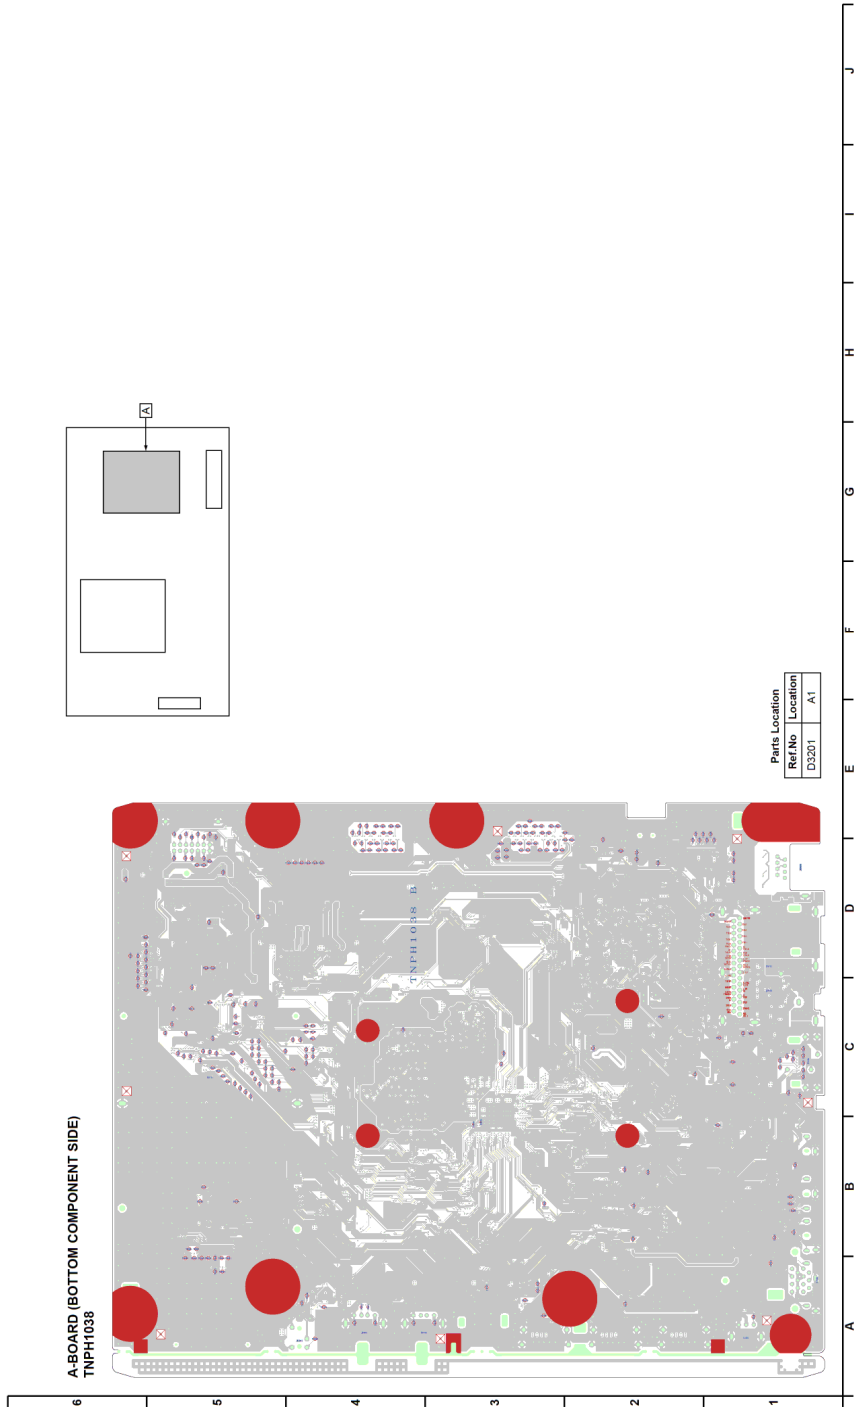

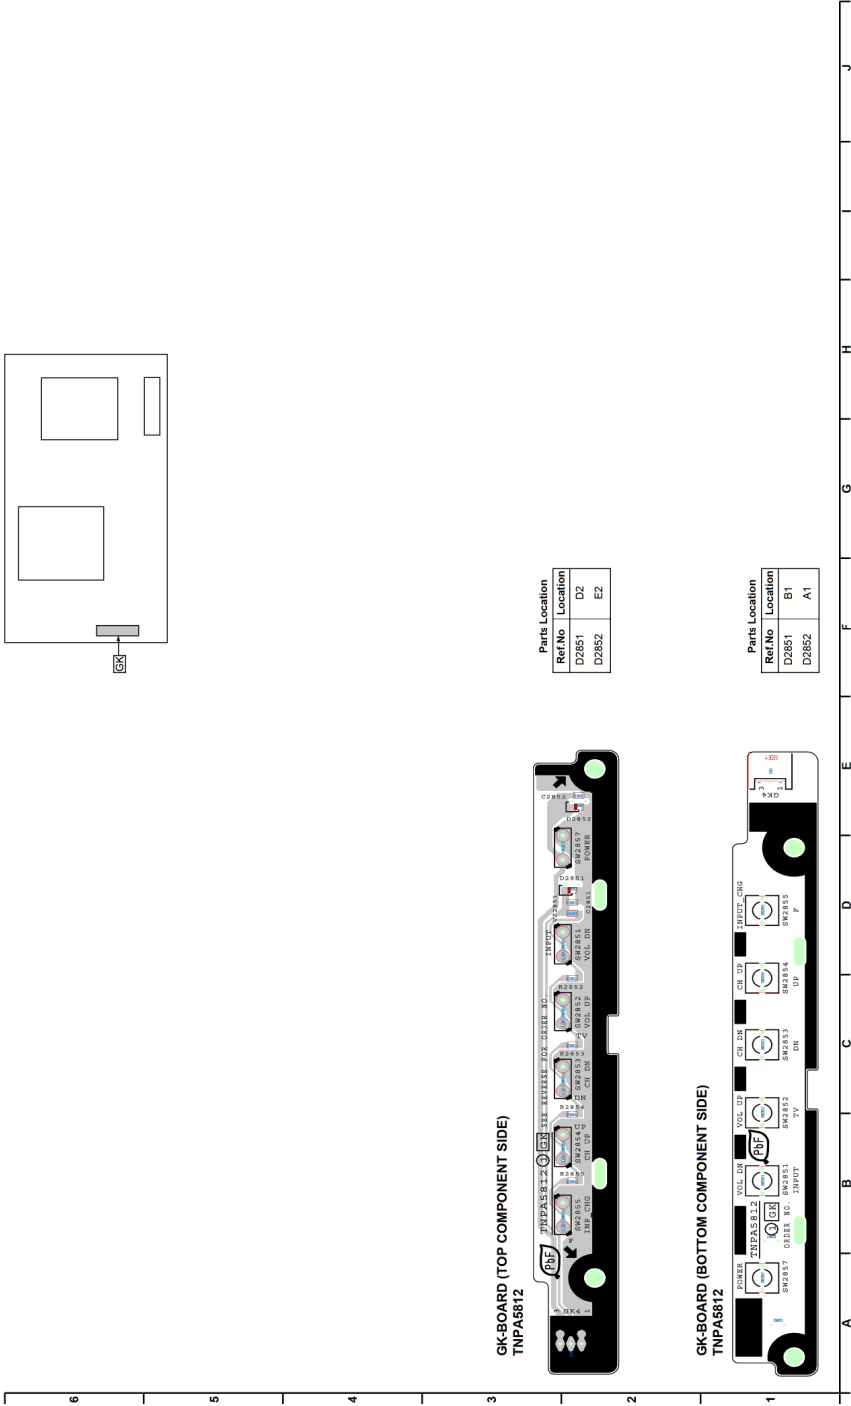


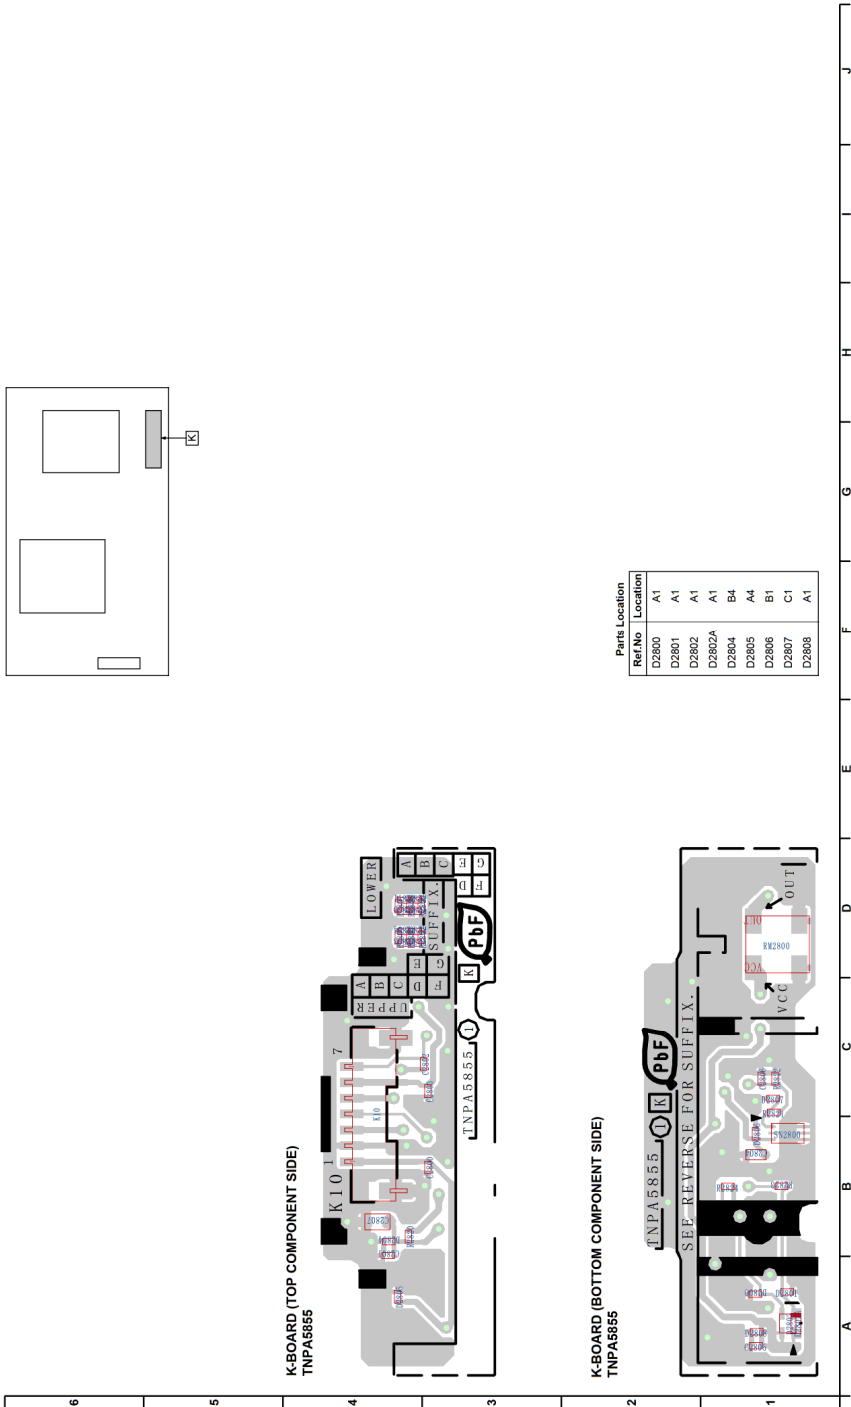

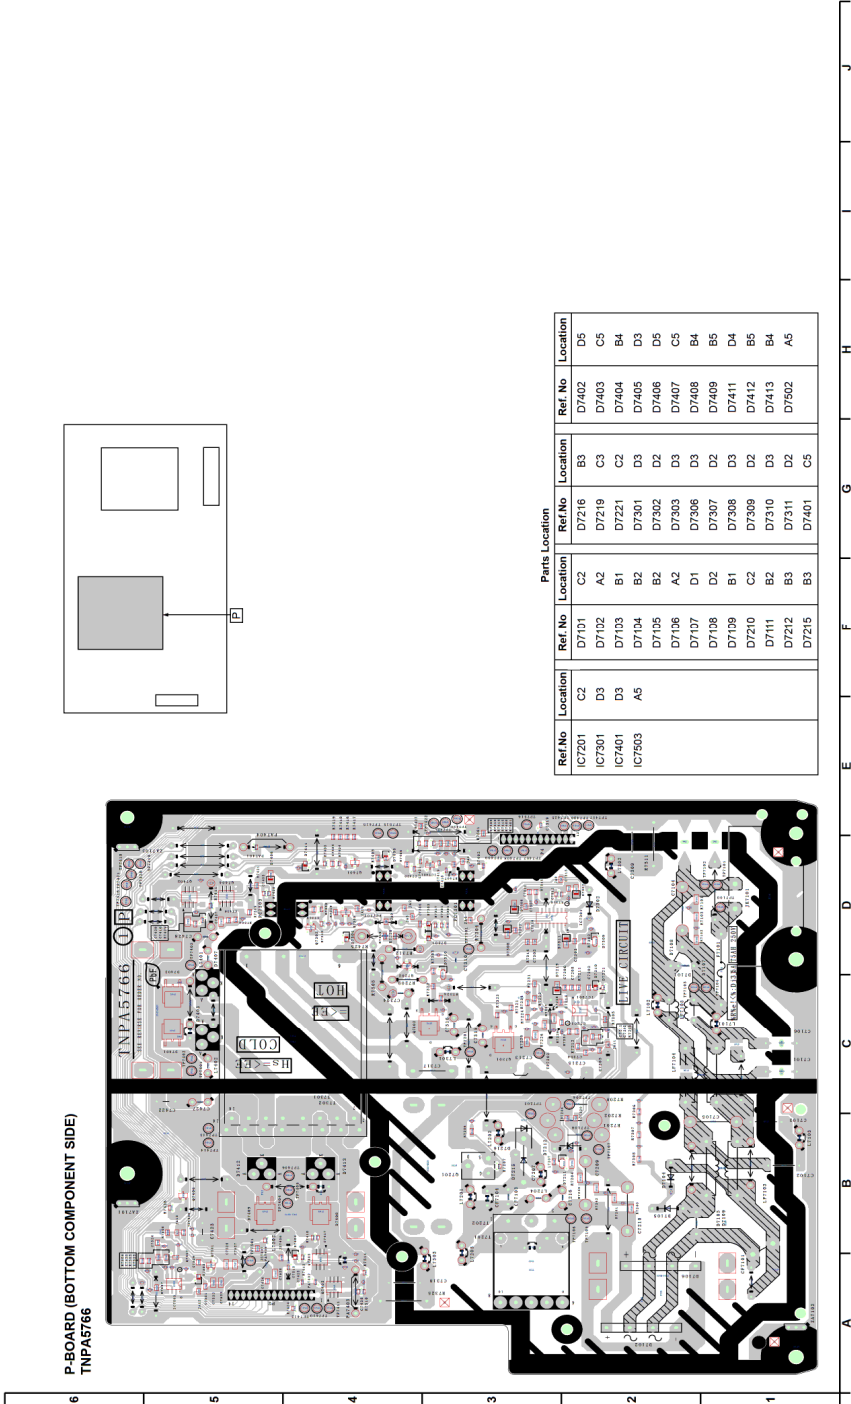

13 Exploded View and Replacement Parts List

Model No. : TH-L42ET60S TH-L42ET60G Parts Location

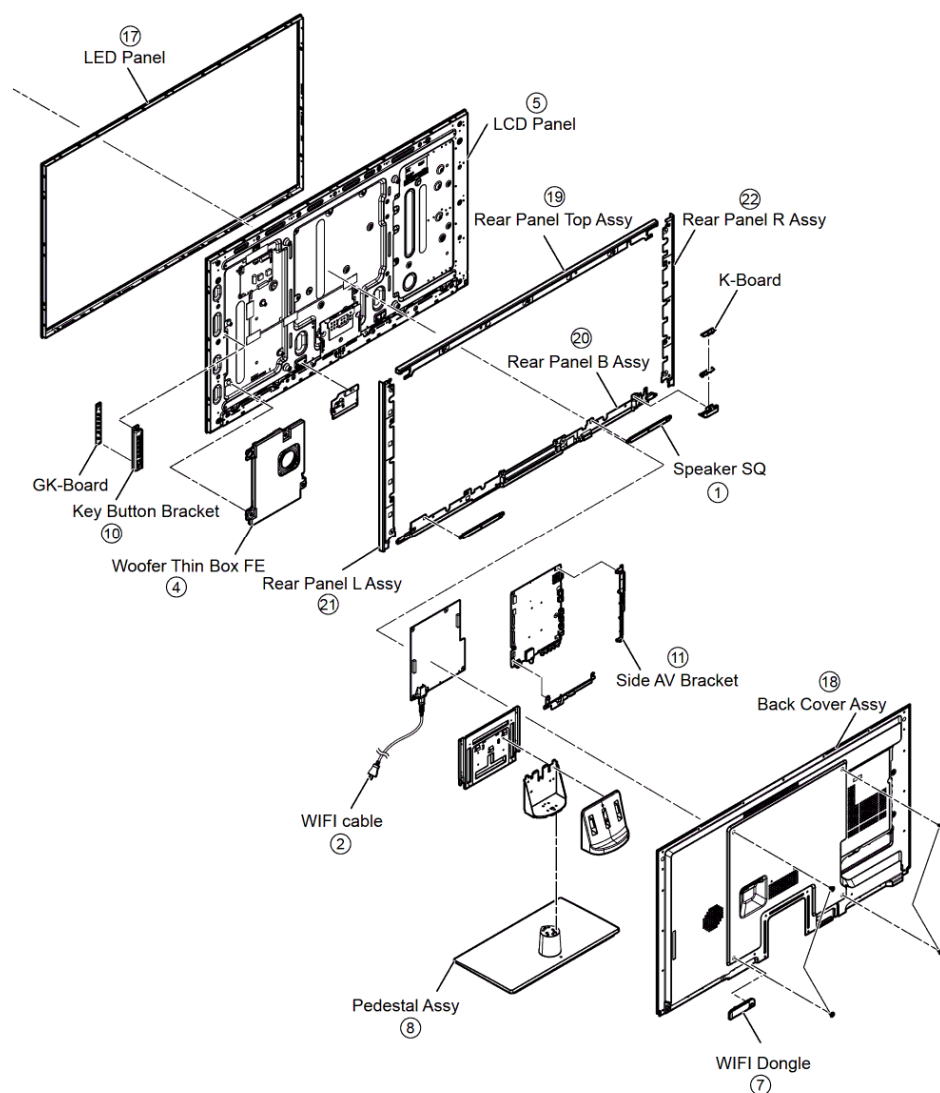


Model No. : TH-L42ET60S TH-L42ET60G Packing Exploded View 1







1. Tape bottom flap of packing case with PP Tape.
2. Fix the bottom cushion into Packing Case.
3. Locate and fix the LCD set at bottom cushion firmly.
4. Locate and fix the Pedestal Ass'y at bottom cushion firmly.

Caution point :

Need to make sure packing case top & bottom isn't **overlap** and **bending**.

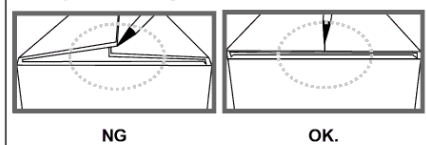






No	Description	Qty	UOM
01	CARTON	1	PC
02	PP TAPE(BTM1.49/TOP1.49)	2.98	MT
03	SET COVER	1	PC
04	CUSHION_FRONT	1	PC
05	BOTTOM CUSHION	1	PC
06	PACKED PEDESTAL ASSY	1	PC
07	FAN_BAG_ASSY	1	PC
08	AC CORD	1	PC
09	STAND_ACC_ASSY	1	PC
10	REMOTE CONTROL	1	PC

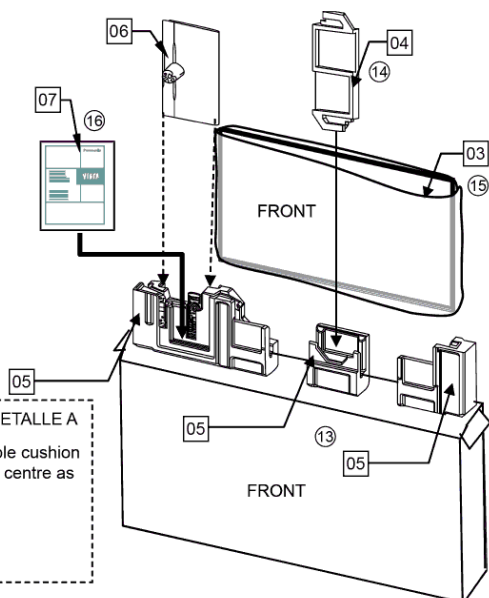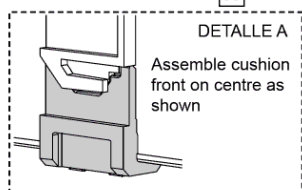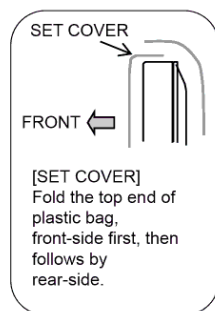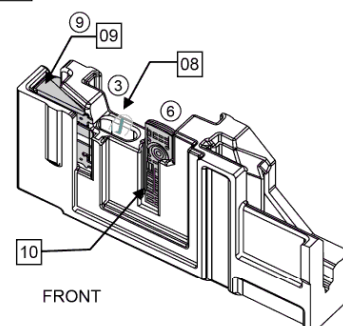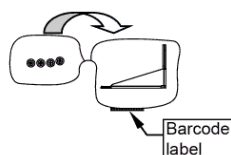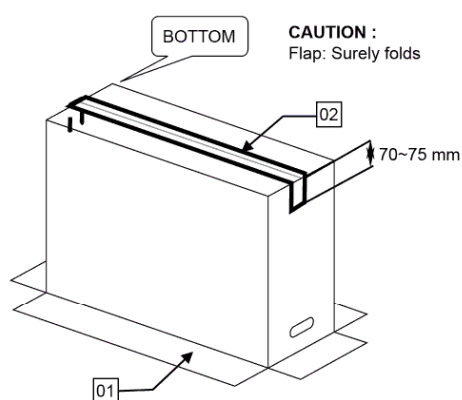

Model No. : TH-L42ET60S TH-L42ET60G Packing Exploded View 2

1. Locate accessories into top & btm cushion accordingly.

No	Description	Qty	UOM
01	BATTERIES	1	PC
02	CUSHION_TOP	1	PC
03	3D GLASSES	2	PC
04	STAND COVER ASSY	1	PC

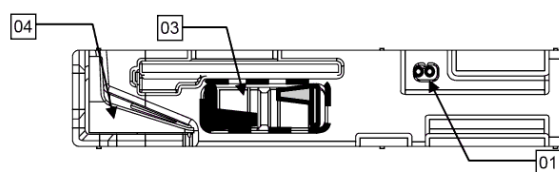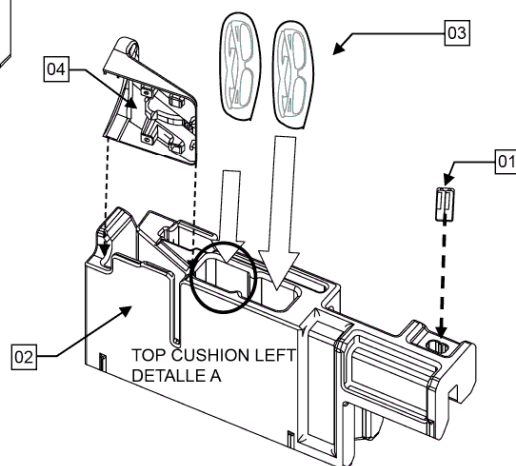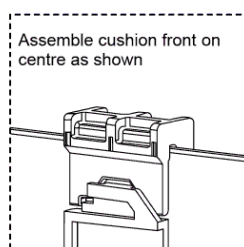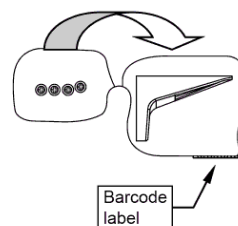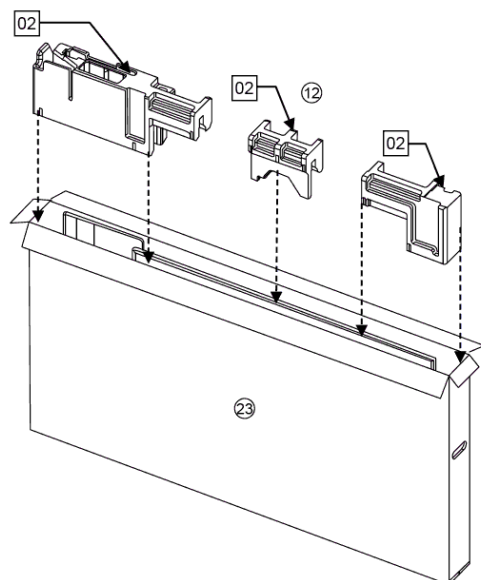

VISTA SUPERIOR

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
CAPACITOR						
		C2000	F1G1A105A047	C 1UF 10V		
		C2009	F1G1H1020008	C 1000PF 50V		
		C2012	F1G1E103A059	C 0.01UF 25V		
		C2014	F1K1V106A010	C 10UF, 25V		
		C2023	F1G1C104A077	C 0.1UF 16V		
		C2801	F1G1C1030008	C 0.01UF 16V		
		C2804	F1H1C104A178	C 0.1UF, 16V		
		C2807	F1J1A106A043	C 10UF, 10V		
		C3000	F1G1C104A077	C 0.1UF 16V		
		C3009	F1G1H100A833	C 10PF 50V		
		C3010	F1G1H100A833	C 10PF 50V		
		C3011	F1G1H100A833	C 10PF 50V		
		C3012	F1G1H152A830	C 1500PF, 50V		
		C3013	F1G1C1030008	C 0.01UF 16V		
		C3014	F1G1C1030008	C 0.01UF 16V		
		C3015	F1G1C1030008	C 0.01UF 16V		
		C3016	F1G1C1030008	C 0.01UF 16V		
		C3036	F1G1A105A047	C 1UF 10V		
		C3037	F1G1A105A047	C 1UF 10V		
		C3042	F1G1A473A069	C0.047UF, 10V		
		C3180	F1G1C104A077	C 0.1UF 16V		
		C3181	F1G1A105A047	C 1UF 10V		
		C3319	F1H1A225A102	C 2.2UF , 10V		
		C4000	F1K1V106A010	C 10UF, 25V		
		C4001	F1K1V106A010	C 10UF, 25V		
		C4002	F1H1H103B047	C 0.01UF, 50V		
		C4003	F1H1H103B047	C 0.01UF, 50V		
		C4701	F1G1A105A047	C 1UF 10V		
		C4901	F1G1C104A077	C 0.1UF 16V		
		C4902	F1G1C104A077	C 0.1UF 16V		
		C4903	F1G1C104A077	C 0.1UF 16V		
		C4904	F1G1C104A077	C 0.1UF 16V		
		C4905	F1G1C104A077	C 0.1UF 16V		
		C4906	F1H1C105A167	C 1UF, 10V		
		C4909	F1J1E105A287	C 1UF, 25V		
		C4910	F1J1E224A272	C 0.22UF, 25V		
		C4914	F1K1V106A010	C 10UF, 25V		
		C4916	F1J1E224A272	C 0.22UF, 25V		
		C4919	F1J1E105A287	C 1UF, 25V		
		C4924	F1J1E224A272	C 0.22UF, 25V		
		C4926	F1K1V106A010	C 10UF, 25V		
		C4928	F1J1E105A287	C 1UF, 25V		
		C4930	F1K1V106A010	C 10UF, 25V		
		C4933	F1J1E224A272	C 0.22UF, 25V		
		C4934	F1J1E105A287	C 1UF, 25V		
		C4937	F1J1E334A272	C 0.33UF, 25V		
		C4938	F1J1E334A272	C 0.33UF, 25V		
		C4951	F1H1C105A167	C 1UF, 10V		
		C4953	F1J1E105A287	C 1UF, 25V		
		C4955	F1J1E105A287	C 1UF, 25V		
		C4957	F1J1E105A287	C 1UF, 25V		
		C4959	F1J1E105A287	C 1UF, 25V		
		C4964	F1H1E104A161	C 0.1UF, 25V		
		C4965	F1H1E104A161	C 0.1UF, 25V		
		C4968	F1J1E224A272	C 0.22UF, 25V		
		C5000	F1G1A105A047	C 1UF 10V		
		C5002	F1G1A105A047	C 1UF 10V		
		C5004	F1G1A105A047	C 1UF 10V		
		C5006	F1J1E105A287	C 1UF, 25V		
		C5012	F1G1A105A047	C 1UF 10V		
		C5020	F1G1C104A077	C 0.1UF 16V		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C5021	F1G1A105A047	C 1UF 10V		
		C5022	F1G1A105A047	C 1UF 10V		
		C5026	F1H1E105A153	C 1UF, 16V		
		C5171	F1G1C1030008	C 0.01UF 16V		
		C5181	F1G1H332A830	C 3300PF, 50V		
		C5182	F1G1C104A077	C 0.1UF 16V		
		C5184	F1G1C104A077	C 0.1UF 16V		
		C5318	F1G1C104A077	C 0.1UF 16V		
		C5319	F1K1V106A010	C 10UF, 25V		
		C5320	F1K1V106A010	C 10UF, 25V		
		C5321	F1K1V106A010	C 10UF, 25V		
		C5322	F1K1V106A010	C 10UF, 25V		
		C5323	F1K1V106A010	C 10UF, 25V		
		C5324	F1K1V106A010	C 10UF, 25V		
		C5328	F1G1H332A830	C 3300PF, 50V		
		C5329	F1G1E333A144	C 0.033UF 25V		
		C5400	F1K1V106A010	C 10UF, 25V		
		C5401	F1K1V106A010	C 10UF, 25V		
		C5402	F1G1C104A077	C 0.1UF 16V		
		C5403	F1J0J2260004	C 22 UF 6.3 V		
		C5404	F1J0J2260004	C 22 UF 6.3 V		
		C5407	F1G1E333A144	C 0.033UF 25V		
		C5408	F1G1H222A830	C 2200PF, 50V		
		C5440	F1K1V106A010	C 10UF, 25V		
		C5443	F1J1A106A087	C 10UF, 10V		
		C5444	F1J1A106A087	C 10UF, 10V		
		C5445	F1J1A106A087	C 10UF, 10V		
		C5446	F1J1A106A087	C 10UF, 10V		
		C5449	F1G1H152A830	C 1500PF, 50V		
		C5450	F1G1H680A834	C 68 pF 50 V		
		C5453	F1G1E104A145	C 0.1UF, 25V		
		C5705	F1K1V106A010	C 10UF, 25V		
		C5706	F1K1V106A010	C 10UF, 25V		
		C5707	F1J0G2260001	C 22 UF 4 V		
		C5708	F1J0G2260001	C 22 UF 4 V		
		C5709	F1G1C104A077	C 0.1UF 16V		
		C5711	F1G1E333A144	C 0.033UF 25V		
		C5713	F1G1H821A830	C 820 pF 50 V		
		C6704	F1J1A106A087	C 10UF, 10V		
		C6707	F1G1C104A077	C 0.1UF 16V		
		C6708	F1J1A106A087	C 10UF, 10V		
		C6710	F1G1C104A077	C 0.1UF 16V		
		C6720	F1G1H220A834	C 22PF, 50V		
		C6721	F1G1H220A834	C 22PF, 50V		
		C6722	F1G1C104A077	C 0.1UF 16V		
		C6723	F1G1H220A834	C 22PF, 50V		
		C6724	F1G1H220A834	C 22PF, 50V		
		C6726	F1G1H220A834	C 22PF, 50V		
		C6727	F1G1H220A834	C 22PF, 50V		
		C6728	F1G1H102A834	C 1000PF 50V		
		C6732	F1G1C104A077	C 0.1UF 16V		
		C6736	F1G1H101A834	C 100PF 50V		
		C6737	F1G1H101A834	C 100PF 50V		
		C6745	F1G1H102A834	C 1000PF 50V		
		C6804	F1G1C104A077	C 0.1UF 16V		
		C6805	F1J1A106A087	C 10UF, 10V		
		C6806	F1J1A106A087	C 10UF, 10V		
		C6809	F1G1C104A077	C 0.1UF 16V		
		C6820	F1G1C104A077	C 0.1UF 16V		
		C6822	F1G1C104A077	C 0.1UF 16V		
		C6830	F1G1C104A077	C 0.1UF 16V		
		C6832	F1J1A106A087	C 10UF, 10V		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C6838	F1G1C104A077	C 0.1UF 16V		
		C6840	F1G1C104A077	C 0.1UF 16V		
		C6844	F1G1C104A077	C 0.1UF 16V		
		C6847	F1G1H8R0A833	C 8PF , 50V		
		C6848	F1G1H8R0A833	C 8PF , 50V		
		C6864	F1G1C104A077	C 0.1UF 16V		
		C6872	F1G1C104A077	C 0.1UF 16V		
		C6873	F1G1C104A077	C 0.1UF 16V		
		C7102	F1AAF471A019	C 470PF , 240V		
		C7103	F1AAF471A019	C 470PF , 240V		
		C7104	F0CAF2240010	C 0.22UF, 240V		
		C7105	F0CAF2240010	C 0.22UF, 240V		
		C7201	F1J1H102A909	C 1000pF, 50V		
		C7202	F1J1H222A911	C 2200pF, 50V		
		C7203	F1J1H104A902	C 0.1UF, 50V		
		C7204	F1J1H104A902	C 0.1UF, 50V		
		C7205	F1J1H102A909	C 1000pF, 50V		
		C7206	F1J1E475A257	C 4.7UF, 25V		
		C7207	F1A3A101A060	C 100PF 1KV		
		C7208	F1J1H104A902	C 0.1UF, 50V		
		C7209	ECWFD2W824KC	C 0.82UF, 240V		
		C7210	ECWFD2W824KC	C 0.82UF, 240V		
		C7213	F2A2W7700001	C 77UF , 240V		
		C7214	F1J1H103A900	C 0.01UF, 50V		
		C7220	F1J1H472A900	C 4700PF, 50V		
		C7302	F1J1H473A900	C 0.047UF, 16V		
		C7303	F1J1H104A902	C 0.1UF, 50V		
		C7304	F1A3A221A060	C 220PF 1KV		
		C7305	F1J1H104A902	C 0.1UF, 50V		
		C7306	F1J1H104A902	C 0.1UF, 50V		
		C7307	F1J1H101A906	C 100PF, 50V		
		C7310	F2A1E4710124	C 470UF, 25V		
		C7311	F1J1E105A287	C 1UF, 25V		
		C7312	F1H1C474A178	C 0.47UF, 16V		
		C7313	F1J1H102A909	C 1000pF, 50V		
		C7315	F1A3A221A060	C 220PF 1KV		
		C7316	F1A3A221A060	C 220PF 1KV		
		C7317	ECWH8223HAC	C 0.022UF, Z, 800V		
		C7318	F1AAF471A019	C 470PF , 240V		
		C7416	F1J1C475A225	C 4.7UF, 10V		
		C7417	F1H1C474A178	C 0.47UF, 16V		
		C7418	F1H1H104B047	C 0.1UF, 50V		
		C7421	F1H1H104B047	C 0.1UF, 50V		
		C7422	F2A1V6810043	C 680UF , 35V		
		C7423	F2A1E222B927	C 2200UF, 25V		
		C7434	F1J1C475A225	C 4.7UF, 10V		
		C7436	F1J1C475A225	C 4.7UF, 10V		
		C7520	F1J1E105A287	C 1UF, 25V		
		C7521	F1J1E105A287	C 1UF, 25V		
		C7522	F1K1V106A010	C 10UF, 25V		
		C7523	F1K1V106A010	C 10UF, 25V		
		C7524	F1J1H472A900	C 4700PF, 50V		
		C7525	F1J1H223A900	C 0.022UF, 50V		
		C7526	F1K1V106A010	C 10UF, 25V		
		C7527	F1K1V106A010	C 10UF, 25V		
		C7529	F1J1H104A902	C 0.1UF, 50V		
		C8002	F1G1C104A077	C 0.1UF 16V		
		C8007	F1J0G2260001	C 22 UF 4 V		
		C8008	F1G1C104A077	C 0.1UF 16V		
		C8012	F1G1C104A077	C 0.1UF 16V		
		C8013	F1G1C104A077	C 0.1UF 16V		
		C8014	F1J1A106A087	C 10UF, 10V		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8015	F1G1A105A047	C 1UF 10V		
		C8016	F1G1C104A077	C 0.1UF 16V		
		C8018	F1G1C104A077	C 0.1UF 16V		
		C8019	F1J0G2260001	C 22 UF 4 V		
		C8021	F1G1A105A047	C 1UF 10V		
		C8022	F1G1C104A077	C 0.1UF 16V		
		C8023	F1G1C104A077	C 0.1UF 16V		
		C8024	F1G1C104A077	C 0.1UF 16V		
		C8025	F1G1C104A077	C 0.1UF 16V		
		C8027	F1G1C104A077	C 0.1UF 16V		
		C8030	F1G1C104A077	C 0.1UF 16V		
		C8031	F1G1C104A077	C 0.1UF 16V		
		C8032	F1G1A105A047	C 1UF 10V		
		C8033	F1H0J4750004	C 4.7UF, 16V		
		C8034	F1G1C104A077	C 0.1UF 16V		
		C8036	F1G1C104A077	C 0.1UF 16V		
		C8038	F1G1C104A077	C 0.1UF 16V		
		C8039	F1G1A105A047	C 1UF 10V		
		C8040	F1G1A105A047	C 1UF 10V		
		C8041	F1J0G2260001	C 22 UF 4 V		
		C8042	F1G1C104A077	C 0.1UF 16V		
		C8044	F1G1C104A077	C 0.1UF 16V		
		C8046	F1G1C104A077	C 0.1UF 16V		
		C8048	F1J0G2260001	C 22 UF 4 V		
		C8049	F1G1C104A077	C 0.1UF 16V		
		C8050	F1G1C104A077	C 0.1UF 16V		
		C8051	F1G1C104A077	C 0.1UF 16V		
		C8052	F1J0G2260001	C 22 UF 4 V		
		C8100	F1K1V106A010	C 10UF, 25V		
		C8102	F1G1C104A077	C 0.1UF 16V		
		C8103	F1G1C473A048	C 0.047UF, 16V		
		C8105	F1G1E332A144	C 3300PF, 25V		
		C8107	F1J0G2260001	C 22 UF 4 V		
		C8108	F1J0G2260001	C 22 UF 4 V		
		C8109	F1H1E105A153	C 1UF, 16V		
		C8110	F1G1C183A146	C 0.018UF, 16V		
		C8111	F1G1C104A077	C 0.1UF 16V		
		C8112	F1K1V106A010	C 10UF, 25V		
		C8114	F1J0G2260001	C 22 UF 4 V		
		C8116	F1J0G2260001	C 22 UF 4 V		
		C8117	F1H1E104A161	C 0.1UF, 25V		
		C8200	F1G1C104A077	C 0.1UF 16V		
		C8201	F1G1C104A077	C 0.1UF 16V		
		C8202	F1G1C104A077	C 0.1UF 16V		
		C8203	F1G1C104A077	C 0.1UF 16V		
		C8204	F1G1C104A077	C 0.1UF 16V		
		C8205	F1G1C104A077	C 0.1UF 16V		
		C8206	F1G1C104A077	C 0.1UF 16V		
		C8207	F1J1A106A087	C 10UF, 10V		
		C8208	F1G1C104A077	C 0.1UF 16V		
		C8213	F1G1C104A077	C 0.1UF 16V		
		C8215	F1G1C104A077	C 0.1UF 16V		
		C8216	F1J1A106A087	C 10UF, 10V		
		C8217	F1G1C104A077	C 0.1UF 16V		
		C8218	F1G1C104A077	C 0.1UF 16V		
		C8219	F1G1C104A077	C 0.1UF 16V		
		C8220	F1G1C104A077	C 0.1UF 16V		
		C8222	F1G1C104A077	C 0.1UF 16V		
		C8225	F1G1C104A077	C 0.1UF 16V		
		C8226	F1G1C104A077	C 0.1UF 16V		
		C8227	F1G1C104A077	C 0.1UF 16V		
		C8230	F1G1C104A077	C 0.1UF 16V		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8232	F1G1C104A077	C 0.1UF 16V		
		C8233	F1G1C104A077	C 0.1UF 16V		
		C8234	F1G1C104A077	C 0.1UF 16V		
		C8236	F1H0J4750004	C 4.7UF, 16V		
		C8237	F1G1A105A047	C 1UF 10		
		C8246	F1J1A106A087	C 10UF, 10V		
		C8248	F1G1C104A077	C 0.1UF 16V		
		C8249	F1G1H1020008	C 1000PF 50V		
		C8250	F1G1H1020008	C 1000PF 50V		
		C8251	F1G1C104A077	C 0.1UF 16V		
		C8252	F1G1C104A077	C 0.1UF 16V		
		C8253	F1G1C104A077	C 0.1UF 16V		
		C8254	F1G1C104A077	C 0.1UF 16V		
		C8255	F1J0G2260001	C 22 UF 4 V		
		C8300	F1G1H8R0A831	C 8 PF, 50V		
		C8301	F1G1H8R0A831	C 8 PF, 50V		
		C8600	F1L3D1020008	C 1000PF 2000V		
		C8601	F1G1C1030008	C 0.01UF 16V		
		C8602	F1G1C1030008	C 0.01UF 16V		
		C8613	F1J1A106A087	C 10UF, 10V		
		C8615	F1G1C104A077	C 0.1UF 16V		
		C8642	F1J1A106A087	C 10UF, 10V		
		C8643	F1G1C104A077	C 0.1UF 16V		
		C8660	F1G1C104A077	C 0.1UF 16V		
		C8661	F1G1C104A077	C 0.1UF 16V		
		C8668	F1G1C104A077	C 0.1UF 16V		
		C8669	F1J1A106A087	C 10UF, 10V		
		C8670	F1J0G2260001	C 22 UF 4 V		
		C8671	F1G1H220A834	C 22PF, 50V		
		C8672	F1J1A106A087	C 10UF, 10V		
		C8673	F1J1A106A087	C 10UF, 10V		
		C8674	F1G1A105A047	C 1UF 10V		
		C8675	F1J1A106A087	C 10UF, 10V		
		C8680	EEH0B0J221UP	E 220UF, 6.3V		
		C8681	EEH0B0J221UP	E 220UF, 6.3V		
		C8682	F1J1A106A087	C 10UF, 10V		
		C8683	F1G1C104A077	C 0.1UF 16V		
		C8687	F1J1A106A087	C 10UF, 10V		
		C8688	F1G1C104A077	C 0.1UF 16V		
		C8689	F1J1A106A087	C 10UF, 10V		
		C8690	F1G1C104A077	C 0.1UF 16V		
		C8692	F1J1A106A087	C 10UF, 10V		
		C8693	F1G1C104A077	C 0.1UF 16V		
		C8757	F1J1A106A087	C 10UF, 10V		
		C8758	F1J1A106A087	C 10UF, 10V		
		C8760	F1G1C104A077	C 0.1UF 16V		
		C8761	F1G1C104A077	C 0.1UF 16V		
		C8764	F1G1A105A047	C 1UF 10V		
		C8765	F1H0J4750004	C 4.7UF, 16V		
		C8850	F1H0J4750004	C 4.7UF, 16V		
		C8851	F1H0J4750004	C 4.7UF, 16V		
		C8902	F1G1C104A077	C 0.1UF 16V		
		C8903	F1G1C104A077	C 0.1UF 16V		
DIODE						
		D2802	B3AGB0000060	LED		
		D3021	DZ2J140M0L	DIODE		
		D3022	DZ2J140M0L	DIODE		
		D3023	DZ2J140M0L	DIODE		
		D3024	DZ2J140M0L	DIODE		
		D3025	DZ2J140M0L	DIODE		
		D3026	DZ2J140M0L	DIODE		
		D3201	K7AAAY000014	DIODE		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		D5172	DZ2J220M0L	DIODE		
		D5173	DA2J10100L	DIODE		
		D5178	DZ2J068M0L	DIODE		
		D5179	B0ADCK000001	DIODE		
		D5180	DZ2J033M0L	DIODE		
		D5187	DZ2J047M0L	DIODE		
		D5188	B0ADCK000001	DIODE		
		D5191	B0ADCK000001	DIODE		
		D5208	B0ADCK000001	DIODE		
		D7101	ERZE08C621CD	SURGE ABSORBER		
		D7104	B0EAKR000022	DIODE		
		D7105	B0EAKR000022	DIODE		
		D7106	B0EBNT000028	DIODE		
		D7211	B0JCME000093	DIODE		
		D7215	B0HAPR000013	DIODE		
		D7221	B0JCDE000006	DIODE		
		D7301	DZ2J039M0L	DIODE		
		D7302	B0HAGQ000001	DIODE		
		D7303	DZ2J039M0L	DIODE		
		D7304	DA2JF2300L	DIODE		
		D7305	B0ADCK000001	DIODE		
		D7306	B0BC027A0336	DIODE		
		D7307	B0BC027A0336	DIODE		
		D7308	B0BC027A0336	DIODE		
		D7309	B0JCME000093	DIODE		
		D7310	B0JCME000093	DIODE		
		D7311	B0BC027A0336	DIODE		
		D7403	B0JBLSL000046	DIODE		
		D7404	DA2J10100L	DIODE		
		D7405	DA2J10100L	DIODE		
		D7407	B0JBLSL000046	DIODE		
		D7408	B0JDSG000010	DIODE		
		D7409	B0JDSG000010	DIODE		
		D7411	DA2J10100L	DIODE		
		D7502	DB2J41100L	DIODE		
		D8716	B0ACGM000001	DIODE		
INTEGRATED CIRCUIT						
		IC4900	C1AB00003800	IC		
		IC4903	C1AB00003984	IC		
		IC5000	AN34043AAVF	IC		
		IC5203	C0EBD0000300	IC		
		IC5300	C0DBAYY01648	IC		
		IC5702	C0DBAYY01656	IC		
		IC6800	C1AB00004028	IC		
		IC7201	C0DBBYY00058	IC		
		IC7301	C0DBAYY01329	IC		
		IC7401	C0DBZYY00614	IC		
		IC7503	C0DBAYY01599	IC		
		IC8000	C1AB00004072	IC		
		IC8100	C0DBAYY01644	IC		
		IC8101	C0DBAYY01692	IC		
		IC8200	C3ABUY000020	IC		
		IC8201	C3ABUY000020	IC		
		IC8202	C3ABTY000091	IC		
		IC8602	C0DBZYY00541	IC		
		IC8603	C0DBZYY00541	IC		
		IC8605	C0DBZYY00541	IC		
		IC8660	C0DBEYY00102	IC		
		IC8704	C0DBAYY01647	IC		
		IC8705	C0DBAYY01299	IC		
		IC8706	C0DBGYY01682	IC		
		IC8714	C0DBEYY00102	IC		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		IC8900	TVRT247AA	ROM IC (C3FBVY000034)		
COIL						
		L4000	J0ZZB0000147	COIL		
		L4001	J0ZZB0000147	COIL		
		L4002	J0ZZB0000147	COIL		
		L4003	J0ZZB0000147	COIL		
		L4004	J0ZZB0000147	COIL		
		L4005	J0ZZB0000147	COIL		
		L4006	J0ZZB0000147	COIL		
		L4007	J0ZZB0000147	COIL		
		L4008	J0ZZB0000147	COIL		
		L4009	J0ZZB0000147	COIL		
		L4010	J0ZZB0000147	COIL		
		L4011	J0ZZB0000147	COIL		
		L4901	G1C100MA0533	COIL		
		L4902	G1C100MA0533	COIL		
		L4903	G1C100MA0533	COIL		
		L4904	G1C100MA0533	COIL		
		L4951	G1C220MA0533	INDUCTOR		
		L4952	G1C220MA0533	INDUCTOR		
		L5300	G1C220MA0445	INDUCTOR		
		L5400	G1C4R7ZA0311	INDUCTOR		
		L5440	G1C4R7MA0445	INDUCTOR		
		L5700	G1C2R2MA0464	INDUCTOR		
		L6704	J0JYC0000464	BEAD CORE		
		L6706	J0JYC0000464	BEAD CORE		
		L6800	J0JYC0000464	BEAD CORE		
		L6801	J0JYC0000464	BEAD CORE		
		L6802	J0JYC0000464	BEAD CORE		
		L7201	J0JKB0000034	EMI FILTER		
		L7202	J0JKB0000034	EMI FILTER		
		L7207	J0JHC0000075	BEAD COIL		
		L7502	G0C270MA0049	INDUCTOR		
		L8100	G1C3R3MA0464	INDUCTOR		
		L8101	G1C1R5ZA0311	COIL		
		L8602	J0ZZB0000142	FILTER		
		L8605	J0JYC0000464	BEAD CORE		
		L8617	J0JYC0000464	BEAD CORE		
		L8618	J0JYC0000464	BEAD CORE		
		L8660	J0JBC0000115	BEAD CORE		
		L8662	J0JHC0000045	COIL		
		L8663	D0GAR00J0005	CHIP RESISTOR		
		L8751	J0JYC0000464	BEAD CORE		
TRANSISTOR						
		Q2012	B1ABCE000015	TRANSISTOR		
		Q2013	B1ABCE000015	TRANSISTOR		
		Q4700	B1ABCF000231	TRANSISTOR		
		Q4701	B1ABCF000231	TRANSISTOR		
		Q4750	B1ABCF000231	TRANSISTOR		
		Q5140	B1ABCE000015	TRANSISTOR		
		Q5141	B1ABCE000015	TRANSISTOR		
		Q5142	B1ADCE000022	TRANSISTOR		
		Q5143	B1ABCE000015	TRANSISTOR		
		Q7201	B1CERR000085	TRANSISTOR		
		Q7202	B1ADCE000022	TRANSISTOR		
		Q7301	B1CFRR000016	TRANSISTOR		
		Q7302	B1CFRR000016	TRANSISTOR		
		Q7303	B1ADCE000022	TRANSISTOR		
		Q7401	B1ABCF000231	TRANSISTOR		
		Q7402	B1CHRE000015	TRANSISTOR		
		Q7403	B1CHRE000015	TRANSISTOR		
		Q7404	B1CHRE000015	TRANSISTOR		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		Q7407	B1CBGD000001	TRANSISTOR		
		Q7501	B1ABGE000015	TRANSISTOR		
		Q8750	B1ABBE000003	TRANSISTOR		
		Q8751	B1ABBE000003	TRANSISTOR		
RESISTORS						
		R0900	D0GA473JA039	M 47KOHM J. 1/10W		
		R0901	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0902	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0903	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0904	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0905	D0GA330JA023	M 33 OHM, J,1/16W		
		R0906	D0GA330JA023	M 33 OHM, J,1/16W		
		R0908	D0GA272JA023	M 2.7KOHM, J,1/16W		
		R0911	D0GA272JA023	M 2.7KOHM, J,1/16W		
		R0926	D0GA473JA039	M 47KOHM J. 1/10W		
		R0927	D0GA473JA039	M 47KOHM J. 1/10W		
		R0928	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0929	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R0935	D0GA473JA039	M 47KOHM J. 1/10W		
		R2003	D0GAR00J0005	M 0 OHM, 1/16W		
		R2004	D0GA103JA039	M 10KOHM,F,1/16W		
		R2007	D0GA680JA023	M 68 OHM, J,1/16W		
		R2008	D0GA153JA023	M 15K OHM J 1/16W		
		R2009	D1BA1002A023	M 10KOHM,F,1/16W		
		R2010	D1BA7151A023	M 7.15KOHM, F 1/16 W		
		R2011	D0GA102JA039	M 1KOHM, J, 1/10W		
		R2012	D0GA473JA039	M 47KOHM J. 1/10W		
		R2013	D0GAR00J0005	M 0 OHM, 1/16W		
		R2016	D0GAR00J0005	M 0 OHM, 1/16W		
		R2034	D0GAR00J0005	M 0 OHM, 1/16W		
		R2040	D0GA473JA039	M 47KOHM J. 1/10W		
		R2051	D0GAR00J0005	M 0 OHM, 1/16W		
		R2056	D0GAR00J0005	M 0 OHM, 1/16W		
		R2058	D0GA473JA039	M 47KOHM J. 1/10W		
		R2059	D0GA103JA039	M 47KOHM J. 1/10W		
		R2060	D0GA473JA039	M 47KOHM J. 1/10W		
		R2061	D0GA223JA023	M 22K OHM J 1/16W		
		R2062	D0GAR00J0005	M 0 OHM, 1/16W		
		R2067	D0GAR00J0005	M 0 OHM, 1/16W		
		R2802	D0GAR00J0005	M 0 OHM, 1/16W		
		R2807	D0GAR00J0005	M 0 OHM, 1/16W		
		R2820	D0GA470JA023	M 47 OHM, J,1/16W		
		R2821	D0GA223JA023	M 22K OHM J 1/16W		
		R2822	D0GA823JA023	M 82KOHM, J,1/16W		
		R2823	D1BA1821A023	M 1.82K, J, 1/16W		
		R2824	D1BA6800A023	M 680OHM, J, 1/16W		
		R2852	D1BD1911A177	M 1.91KOHM, F, 1/16W		
		R2853	D1BD3091A177	M 3.09KOHM, F, 1/16W		
		R2854	D1BD6041A076	M 6.04KOHM, F, 1/16W		
		R2855	D1BD1692A177	M 16.9KOHM, F, 1/16W		
		R3008	D1BD18R0A179	M 18OHM, F, 1/10W		
		R3009	D1BD18R0A179	M 18OHM, F, 1/10W		
		R3010	D1BD18R0A179	M 18OHM, F, 1/10W		
		R3011	D0GA100JA023	M 10 OHM, J,1/16W		
		R3012	D1BD56R0A179	M 56OHM, J, 1/10W		
		R3013	D1BD56R0A179	M 56OHM, J, 1/10W		
		R3014	D1BD56R0A179	M 56OHM, J, 1/10W		
		R3015	D1H81014A042	M 100OHM, J, 1/10W		
		R3038	D0GA473JA039	M 47KOHM J. 1/10W		
		R3053	D0GA333JA023	M 47KOHM J. 1/10W		
		R3054	D0GA333JA023	M 33KOHM,J,1/16W		
		R3056	D0GA473JA039	M 47KOHM J. 1/10W		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R3058	D0GA330JA023	M 33 OHM, J,1/16W		
		R3063	D0GA103JA039	M 10KOHM,F,1/16W		
		R3064	D0GAR00J0005	M 0 OHM, 1/16W		
		R3121	D0GA101JA039	M 100OHM ,J, 1/10W		
		R3325	D0GA473JA039	M 47KOHM J. 1/10W		
		R4004	D0GA243JA023	M 24K OHM J 0.063W		
		R4700	D0GA103JA039	M 10KOHM,F,1/16W		
		R4701	D0GA103JA039	M 10KOHM,F,1/16W		
		R4702	D0GA103JA039	M 10KOHM,F,1/16W		
		R4703	D0GA103JA039	M 10KOHM,F,1/16W		
		R4704	D0GA473JA039	M 47KOHM J. 1/10W		
		R4705	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4706	D0GA220JA023	M22 OHM, J.1/16 W		
		R4707	D0GA680JA023	M 68 OHM, J,1/16W		
		R4708	D0GA680JA023	M 68 OHM, J,1/16W		
		R4709	D0GA680JA023	M 68 OHM, J,1/16W		
		R4710	D0GA680JA023	M 68 OHM, J,1/16W		
		R4711	D0GA103JA039	M 10KOHM,F,1/16W		
		R4712	D0GA103JA039	M 10KOHM,F,1/16W		
		R4713	D0GA103JA039	M 10KOHM,F,1/16W		
		R4714	D0GA473JA039	M 47KOHM J. 1/10W		
		R4715	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4717	D0GA473JA039	M 47KOHM J. 1/10W		
		R4718	D0GA473JA039	M 47KOHM J. 1/10W		
		R4720	D0GA473JA039	M 47KOHM J. 1/10W		
		R4721	D0GA473JA039	M 47KOHM J. 1/10W		
		R4722	D1BA1800A023	M 180OHM ,F, 1/10W		
		R4723	D1BA82R0A023	M 82OHM ,F, 1/10W		
		R4725	D0GA680JA023	M 68 OHM, J,1/16W		
		R4726	D0GA680JA023	M 68 OHM, J,1/16W		
		R4751	D0GA103JA039	M 10KOHM,F,1/16W		
		R4752	D0GA103JA039	M 10KOHM,F,1/16W		
		R4753	D0GA103JA039	M 10KOHM,F,1/16W		
		R4754	D0GA473JA039	M 47KOHM J. 1/10W		
		R4755	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4757	D0GA473JA039	M 47KOHM J. 1/10W		
		R4758	D0GA473JA039	M 47KOHM J. 1/10W		
		R4900	D0GA103JA039	M 10KOHM,F,1/16W		
		R4901	D0GFR00J0005	M 0 OHM,J,1/3W		
		R4902	D1H86804A042	M 68OHM ,F, 1/10W		
		R4903	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4904	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4910	D0GA473JA039	M 47KOHM J. 1/10W		
		R4930	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R4960	D0GA680JA023	M 68 OHM, J,1/16W		
		R4961	D0GA680JA023	M 68 OHM, J,1/16W		
		R4962	D0GA680JA023	M 68 OHM, J,1/16W		
		R4963	D0GA680JA023	M 68 OHM, J,1/16W		
		R5002	D0GA683JA023	M 68KOHM, J,1/16W		
		R5003	D0GA103JA039	M 10KOHM,F,1/16W		
		R5006	D0GA223JA023	M 22K OHM J 1/16W		
		R5007	D0GA223JA023	M 22K OHM J 1/16W		
		R5009	D1BA5602A023	M 56KOHM,F. 1/16 W		
		R5012	D1BA2202A023	M 22KOHM,F. 1/16 W		
		R5140	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5141	D0GA333JA023	M 33KOHM,J,1/16W		
		R5143	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5144	D0GA103JA039	M 10KOHM,F,1/16W		
		R5171	D0GA103JA039	M 10KOHM,F,1/16W		
		R5172	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5175	D0GA680JA023	M 68 OHM, J,1/16W		
		R5176	D0GA333JA023	M 33KOHM,J,1/16W		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R5177	D0GA473JA039	M 47KOHM J. 1/10W		
		R5178	D0GA473JA039	M 47KOHM J. 1/10W		
		R5179	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R5203	D0GA473JA039	M 47KOHM J. 1/10W		
		R5204	D0GA822JA023	M8.2KOHM, J,1/16W		
		R5207	D0GA333JA023	M 33KOHM,J,1/16W		
		R5215	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R5312	D0GA220JA023	M22 OHM, J.1/16 W		
		R5315	D1BA1402A023	M 14KOHM,F. 1/16 W		
		R5316	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R5317	D0GA103JA039	M 10KOHM,F,1/16W		
		R5318	D1BA3902A023	M 39KOHM ,F, 1/10W		
		R5400	D0GA220JA023	M22 OHM, J.1/16 W		
		R5401	D1BA2202A023	M 22KOHM,F. 1/16 W		
		R5402	D0GB911ZA037	M 910 OHM,1/10W		
		R5403	D1BB2871A106	M 2.87 KOHM,F.1/10 W		
		R5442	D1BB1241A196	M 1.24KOHM ,F, 1/10W		
		R5443	D1BB6801A195	M 6.8KOHM ,F, 1/10W		
		R5446	D0GDR00J0004	M 0 OHM, 1/8W		
		R5447	D1BA1502A023	M 15KOHM ,F, 1/10W		
		R5713	D0GA220JA023	M22 OHM, J.1/16 W		
		R5715	D1BA3242A023	M 32.4KOHM ,J, 1/16W		
		R5716	D1BA1502A023	M 15KOHM ,F, 1/10W		
		R5717	D0GA123JA023	M 12K OHM J 1/16W		
		R5736	D0GA103JA039	M 10KOHM,F,1/16W		
		R6717	D0GBR00J0004	M 0 OHM J 1/10W		
		R6725	D0GAR00J0005	M 0 OHM, 1/16W		
		R6726	D0GAR00J0005	M 0 OHM, 1/16W		
		R6727	D0GAR00J0005	M 0 OHM, 1/16W		
		R6730	D0GA103JA039	M 10KOHM,F,1/16W		
		R6743	D0GA681JA023	M680 OHM, J,1/16W		
		R6744	D0GA681JA023	M680 OHM, J,1/16W		
		R6804	D0GA681JA023	M680 OHM, J,1/16W		
		R6805	D0GA681JA023	M680 OHM, J,1/16W		
		R6810	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R6812	D0GA680JA023	M 68 OHM, J,1/16W		
		R6813	D0GA680JA023	M 68 OHM, J,1/16W		
		R6818	D0GA680JA023	M 68 OHM, J,1/16W		
		R6819	D0GAR00J0005	M 0 OHM, 1/16W		
		R6820	D0GAR00J0005	M 0 OHM, 1/16W		
		R6821	D0GAR00J0005	M 0 OHM, 1/16W		
		R6840	D0GA471JA023	M 470OHM, J,1/16W		
		R6846	D0GA680JA023	M 68 OHM, J,1/16W		
		R6847	D0GA680JA023	M 68 OHM, J,1/16W		
		R6848	D0GA680JA023	M 68 OHM, J,1/16W		
		R6849	D0GA680JA023	M 68 OHM, J,1/16W		
		R6850	D0GA680JA023	M 68 OHM, J,1/16W		
		R6861	D0GA680JA023	M 68 OHM, J,1/16W		
		R6862	D0GA680JA023	M 68 OHM, J,1/16W		
		R6863	D0GA680JA023	M 68 OHM, J,1/16W		
		R6871	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R6872	D0GA332JA023	M 3.3KOHM, J,1/16W		
		R6880	D0GAR00J0005	M 0 OHM, 1/16W		
		R6881	D0GAR00J0005	M 0 OHM, 1/16W		
		R6882	D0GBR00J0004	M 0 OHM J 1/10W		
		R6884	D0GA103JA039	M 10KOHM,F,1/16W		
	⚠	R7101	D0GF105JA048	M 1M OHM. 1/4W		
	⚠	R7102	D0GF105JA048	M 1M OHM. 1/4W		
	⚠	R7103	D0GF105JA048	M 1M OHM. 1/4W		
		R7201	ERX1SJR22	M0.22 OHM, J, 1W		
		R7202	ERX1SJR22	M0.22 OHM, J, 1W		
		R7203	D0GB513JA065	M 51KOHM ,J, 1/10W		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7204	D0GF101JA047	M 100 OHM,J,1/3W		
		R7205	D0GD470JA052	M 47 OHM,J,1/8W		
		R7206	D0GD4R7JA059	M 4.7 OHM,J,1/4W		
		R7207	D0GB473JA065	M 47KOHM J. 1/10W		
		R7209	D0AF2R2JA112	C 2.2 OHM, J,1/2W		
		R7211	D0GD104JA052	M 100KOHM,J,1/8W		
		R7212	D0GD683JA052	M 68KOHM,J,1/8W		
		R7219	D0GD513JA052	M 51KOHM,J,1/8W		
		R7220	D0GD223JA052	M 22KOHM,J,1/8W		
		R7224	D1BD8203A066	M 820KOHM,F.1/8W		
		R7225	D1BF1504A073	M 1.5MOHM ,F, 1/16W		
		R7226	D1BF1504A073	M 1.5MOHM ,F, 1/16W		
		R7227	D1BF1504A073	M 1.5MOHM ,F, 1/16W		
		R7228	D1BF1504A073	M 1.5MOHM ,F, 1/16W		
		R7229	D1BD2003A066	M 200KOHM.F.1/8W		
		R7230	D1BD4422A066	M 44.2KOHM,F.1/8W		
		R7231	D1BD4303A066	M 430KOHM,F.1/8W		
		R7232	D1BD3603A066	M 360KOHM,F.1/8W		
		R7234	D1BD8203A066	M 820KOHM,F.1/8W		
		R7240	D0GF225JA048	M 2.2MOHM ,J, 1/10W		
		R7241	D0GF225JA048	M 2.2MOHM ,J, 1/10W		
		R7242	D0GF225JA048	M 2.2MOHM ,J, 1/10W		
		R7243	D0GF225JA048	M 2.2MOHM ,J, 1/10W		
		R7244	D0GD124JA052	M 120KOHM,J,1/8W		
		R7302	D0GD101JA059	M 100 OHM,J,1/4W		
		R7303	D0GD101JA059	M 100 OHM,J,1/4W		
		R7304	D0AF2R2JA112	C 2.2 OHM, J,1/2W		
		R7305	D0AF161JA112	C 160 OHM ,J, 1/2W		
		R7306	D0GD222JA052	M 2.2KOHM,J,1/8W		
		R7307	D0GD561JA052	M 560 OHM,J,1/8W		
		R7308	D0GD561JA052	M 560 OHM,J,1/8W		
		R7312	D0AF153JA112	M 15KOHM ,F, 1/10W		
		R7314	D0GD333JA052	M 33 KOHM,J,1/8W		
		R7315	D0GD222JA052	M 2.2KOHM,J,1/8W		
		R7317	D0GB223JA065	M 22KOHM,J,1/10W		
		R7318	D0GB473JA065	M 47KOHM J. 1/10W		
		R7319	D0GD473JA052	M 47KOHM,J,1/8W		
		R7320	D0GB333JA065	M 33KOHM,J,1/10W		
		R7321	D0GD100JA059	M 10 OHM,J,1/4W		
		R7322	D0GD100JA059	M 10 OHM,J,1/4W		
		R7323	D0GD223JA052	M 22KOHM,J,1/8W		
		R7324	D0GD223JA052	M 22KOHM,J,1/8W		
		R7325	D0B1106JA033	M 10MOHM J 1W		
		R7401	D0GD472JA052	M 4.7KOHM,J,1/8W		
		R7402	D0GB103JA065	M 10K OHM J 1/10W		
		R7403	D0GB102JA065	M 1KOHM,J,1/10W		
		R7404	D0GB104JA065	M 100KOHM J 1/10W		
		R7405	D0GD222JA052	M 2.2KOHM,J,1/8W		
		R7406	D1BD3301A066	M 3.3KOHM,F.1/8W		
		R7407	D0GD223JA052	M 22KOHM,J,1/8W		
		R7408	D1BD4302A180	M 43KOHM ,F, 1/16W		
		R7409	D0GB224JA065	M 220KOHM,J,1/10W		
		R7410	D0GB153JA065	M 15K OHM J 1/10W		
		R7411	D0GB334JA065	M330KOHM ,J, 1/10W		
		R7412	D0GB153JA065	M 15K OHM J 1/10W		
		R7413	D1BD5603A066	M 560KOHM ,J, 1/10W		
		R7415	D0GD472JA052	M 4.7KOHM,J,1/8W		
		R7416	D0GD103JA052	M 10KOHM,J,1/8W		
		R7417	D0GD103JA052	M 10KOHM,J,1/8W		
		R7420	D0GB473JA065	M 47KOHM J. 1/10W		
		R7421	D0GD124JA052	M 120KOHM,J,1/8W		
		R7425	ERX1SJ1R0V	1OHM ,J, 1W		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7504	D0GD224JA052	M 220KOHM,J,1/8W		
		R7505	D0GD473JA052	M 47KOHM,J,1/8W		
		R7506	D1BD1203A076	M 120KOHM,J,1/8W		
		R7507	D1BD3652A177	M 36.5KOHM ,F, 1/16W		
		R7508	D0GD334JA052	M 330KOHM,J,1/8W		
		R7509	D0GD334JA052	M 330KOHM,J,1/8W		
		R8101	D1BA4701A023	M 4.7KOHM,F 1/16 W		
		R8102	D1BB2002A195	M 20KOHM ,F, 1/16W		
		R8103	D1BB1802A195	M 18KHM ,F, 1/10W		
		R8104	D1BB1801A195	M 1.8KOHM, F, 1/16W		
		R8105	D1BB1051A196	M 1.05KOHM ,F, 1/10W		
		R8203	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8204	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8206	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8207	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8217	D0GA101JA039	M 100OHM ,J, 1/10W		
		R8218	D0GA101JA039	M 100OHM ,J, 1/10W		
		R8219	D1BA2400A023	M 240 OHM,F.1/16 W		
		R8220	D1BA2400A023	M 240 OHM,F.1/16 W		
		R8230	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8231	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8232	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8233	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8234	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8235	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8236	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8237	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8238	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8239	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8242	D0GA101JA039	M 100OHM ,J, 1/10W		
		R8244	D1BA2400A023	M 240 OHM,F.1/16 W		
		R8250	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8251	D1BA1001A023	M 1 KOHM,F.1/16 W		
		R8300	D0GA221JA023	M220 OHM, J.1/16 W		
		R8411	D0GA103JA039	M 10KOHM,F,1/16W		
		R8601	D1BA75R0A023	M 75.0 OHM,F.1/16 W		
		R8602	D1BA75R0A023	M 75.0 OHM,F.1/16 W		
		R8603	D1BA75R0A023	M 75.0 OHM,F.1/16 W		
		R8604	D1BA75R0A023	M 75.0 OHM,F.1/16 W		
		R8605	D1BA2402A023	M 24KOHM,F,1/16W		
		R8608	D0GA103JA039	M 10KOHM,F,1/16W		
		R8609	D0GA103JA039	M 10KOHM,F,1/16W		
		R8610	D0GA103JA039	M 10KOHM,F,1/16W		
		R8611	D0GA103JA039	M 10KOHM,F,1/16W		
		R8612	D0GA103JA039	M 10KOHM,F,1/16W		
		R8613	D0GA103JA039	M 10KOHM,F,1/16W		
		R8614	D0GA272JA023	M 2.7KOHM, J.1/16W		
		R8615	D0GA272JA023	M 2.7KOHM, J.1/16W		
		R8616	D1H8R0040016	M 8OHM ,J, 1/16W		
		R8617	D1H8R0040016	M 8OHM ,J, 1/16W		
		R8618	D1BA3742A023	M 37.4 KOHM,F.1/16 W		
		R8619	D1BA1822A023	M 18.2KOHM,F.1/16 W		
		R8623	D0GA272JA023	M 2.7KOHM, J.1/16W		
		R8624	D1BB2000A106	M 200OHM.F.1/8W		
		R8632	D1BA3742A023	M 37.4 KOHM,F.1/16 W		
		R8660	D0GA560JA023	M 56 OHM, J,1/16W		
		R8661	D0GA560JA023	M 56 OHM, J,1/16W		
		R8662	D0GA560JA023	M 56 OHM, J,1/16W		
		R8663	D0GA560JA023	M 56 OHM, J,1/16W		
		R8664	D0GA560JA023	M 56 OHM, J,1/16W		
		R8665	D0GA101JA039	M 100OHM ,J, 1/10W		
		R8666	D1HY1038A012	NETWORK RESISTER		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R8667	D1H85604A042	M 85.6KOHM ,J, 1/16W		
		R8668	D1H85604A042	M 85.6KOHM ,J, 1/16W		
		R8669	D0GA560JA023	M 56 OHM, J,1/16W		
		R8671	D1BB1200A106	M 120OHM,F 1/10W		
		R8760	D0GA333JA023	M 33KOHM,J,1/16W		
		R8761	D0GA473JA039	M 47KOHM J. 1/10W		
		R8762	D0GA153JA023	M 15K OHM J 1/16W		
		R8763	D0GA473JA039	M 47KOHM J. 1/10W		
		R8797	D1BA1200A023	M 120 OHM,F.1/16 W		
		R8798	D1BA56R0A023	M 56 OHM,F.1/16 W		
		R8801	D0GA473JA039	M 47KOHM J. 1/10W		
		R8802	D0GA103JA039	M 10KOHM,F,1/16W		
		R8805	D0GA103JA039	M 10KOHM,F,1/16W		
		R8806	D0GA473JA039	M 47KOHM J. 1/10W		
		R8807	D0GA473JA039	M 47KOHM J. 1/10W		
		R8808	D0GA473JA039	M 47KOHM J. 1/10W		
		R8809	D0GA473JA039	M 47KOHM J. 1/10W		
		R8812	D0GA473JA039	M 47KOHM J. 1/10W		
		R8814	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8815	D0GA473JA039	M 47KOHM J. 1/10W		
		R8817	D0GA473JA039	M 47KOHM J. 1/10W		
		R8818	D0GA473JA039	M 47KOHM J. 1/10W		
		R8819	D0GA473JA039	M 47KOHM J. 1/10W		
		R8823	D0GA473JA039	M 47KOHM J. 1/10W		
		R8854	D0GA102JA039	M 1KOHM ,J, 1/10W		
		R8901	D1H81034A042	NETWORK RESISTER		
		R8902	D0GA103JA039	M 10KOHM,F,1/16W		
		R8905	D0GA222JA023	M 2.2KOHM, J,1/16W		
		R8906	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8910	D0GA103JA039	M 10KOHM,F,1/16W		
		R8913	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8914	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8915	D0GA472JA023	M 4.7KOHM, J,1/16W		
		R8942	D0GA473JA039	M 47KOHM J. 1/10W		
		R8943	D0GA473JA039	M 47KOHM J. 1/10W		
		R8944	D0GA101JA039	M 100OHM ,J, 1/10W		
		R9005	D0GA153JA023	M 15K OHM J 1/16W		
		R9006	D0GA472JA023	M 4.7KOHM, J,1/16W		
TRANSFORMER						
		T7201	G4DYA0000443	TRANSFORMER		
		T7301	G4DYA0000448	TRANSFORMER		
		T8600	G5BYC0000040	TRANSFORMER		
OTHERS						
		A02	K1KY14BA0484	CONNECTOR		
		A10	K1KY07BA0483	CONNECTOR		
		A12	K1KY06BA0387	CONNECTOR		
		A15	K1MY41BA0526	CONNECTOR		
		A16	K1MY51BA0526	CONNECTOR		
		A20	K1FY105E0017	CONNECTOR		
		CF7101	D4CAY2R20002	TERMISTOR		
		F7101	K5E502YYA162	FUSE		
		GK4	K1KY03BA0402	CONNECTOR		
		JA1	D0GDR00J0004	CHIP RESISTOR		
		JA10	D0GDR00J0004	CHIP RESISTOR		
		JA11	D0GDR00J0004	CHIP RESISTOR		
		JA12	D0GDR00J0004	CHIP RESISTOR		
		JA13	D0GDR00J0004	CHIP RESISTOR		
		JA2	D0GDR00J0004	CHIP RESISTOR		
		JA4	D0GDR00J0004	CHIP RESISTOR		
		JA5	D0GDR00J0004	CHIP RESISTOR		
		JA8	D0GDR00J0004	CHIP RESISTOR		
		JA9	D0GDR00J0004	CHIP RESISTOR		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		JK3101	K1U510E00001	TERMINAL		
		JK4701	K1FY119E0070	TERMINAL		
		JK4702	K1FY119E0070	TERMINAL		
		JK4703	K1FY119E0070	TERMINAL		
		JK7101	K2AAYB000010	AC INLET		
		JK8600	K1NA12E00016	CONNECTOR		
		JK8601	K1FY104B0093	USB TERMINAL		
		JK8602	K1FY104B0093	USB TERMINAL		
		JK8650A	K2LC1YYE0004	TERMINAL		
		JS0048	D0GAR00J0005	CHIP RESISTOR		
		JS0055	D0GAR00J0005	CHIP RESISTOR		
		JS7406	D0GDR00J0004	CHIP RESISTOR		
		K10	K1KY07AA1311	CONNECTOR		
		LF7103	G0B153G00003	LINE FILTER		
		LF7104	G0B153G00003	LINE FILTER		
		LF7105	G0B350HA0036	LINE FILTER		
		P2	K1KY14BA0386	CONNECTOR		
		P4	K1KY12BA0400	CONNECTOR		
		PA4900	K5H1022A0031	FUSE		
		PA7403	K5G103AA0009	FUSE		
		PA7406	ERBRE5R00V	FUSE RESISTOR		
		PC7301	B3PAA0000629	PHOTO COUPLER		
		PC7302	B3PAA0000629	PHOTO COUPLER		
		PC7303	B3PAA0000629	PHOTO COUPLER		
		RM2800	B3RBB0000018	PHOTO DETECTOR		
		SN2800	B3JB00000208	IC		
		SW2851	EVQ11G05R	SWITCH		
		SW2852	EVQ11G05R	SWITCH		
		SW2853	EVQ11G05R	SWITCH		
		SW2854	EVQ11G05R	SWITCH		
		SW2855	EVQ11G05R	SWITCH		
		SW2857	EVQ11G05R	SWITCH		
		TU6705	J3ACAAC00007	TUNER		
		X6800	H0J410500001	CRYSTAL		
		X8300	H0J270500166	CRYSTAL RESONATOR		
		ZA7101	K4AD01A00004	RUG TERMINAL		
		ZA7102	K4AD01A00004	RUG TERMINAL		

Model No. : TH-L42ET60S TH-L42ET60G Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
Exploded View						
		1	EAK1H06A	SPEAKER SQ		
		2	K1HY05YY0057	WI FI CABLE		
		3	K2CQ2YY00107	AC CORD		
		4	L0EYAA000024	WOOFER THIN BOX FE		
		5	L5EDDY00463	LCD PANEL		
		6	N2QAYB000831	REMOTE TRANSMITTER		
		7	N5HBZ0000101	WI FI DONGLE		
			TBL5ZX05981	STAND METAL COVER ASSY		
		8	TBL5ZX06111	PEDESTAL ASSY		
		9	TBL5ZX06311	STAND ACC ASSY		
			TBM4GD1751	MODEL NAME PLATE (TH-L42ET60S)		
			TBM4GD2021	MODEL NAME PLATE (TH-L42ET60G)		
		10	TBX5ZA02101	KEY BUTTON BRACKET		
		11	TKP5ZA28101	SIDE AV BRACKET		
		12	TPD4GA04131	TOP CUSHION		
		13	TPD4GA04141	BOTTOM CUSHION		
		14	TPD4GA04151	FRONT CUSHION		
		15	TPE4GH073	SET COVER		
		16	TQZ4GB668	FAN BAG ASSY (TH-L42ET60S)		
			TQZ4GB669	FAN BAG ASSY (TH-L42ET60G)		
			TSCKF0170006	LVDS FFC (41 PIN)		
			TSCKF0170007	LVDS FFC		
		17	TTP5ZA0009	LED PANEL ASSY		
		18	TTU4GA1022	BACK COVER ASSY (TH-L42ET60S)		
			TTU4GA1049	BACK COVER ASSY (TH-L42ET60G)		
		19	TXFKP5Z0055	REAR PANEL T ASSY		
		20	TXFKP5Z0056	REAR PANEL B ASSY		
		21	TXFKP5Z0057	REAR PANEL L ASSY		
		22	TXFKP5Z0058	REAR PANEL R ASSY		
		23	TXFPC01QNUS	PACKING CASE ASSY (TH-L42ET60S)		
			TXFPC01RRUG	PACKING CASE ASSY (TH-L42ET60G)		
			XYN4+F10FNK	PEDESTAL BRAC SCREW		
			XYN5+F18FN	PEDESTAL BRAC SCREW		
Electrical Replacement Part List						
			TXN/K1YDUE	K PRINT		
			TXN/P1QNUS	P PRINT		
			TXNGK1YDUE	GK PRINT		
			TZT/A1RMUK	A PRINT ASSY		