ORDER NO. KM41108483CE

Service Manual

Telephone Equipment

Caller ID Compatible

DECT 6.0

Model No. KX-TG6541BXB
KX-TG6542BXB
KX-TGA652BXB

Expandable Digital Cordless Answering System

B: Black Version
(for Middle Near East and Africa)

KX-TGA652BXB
(Handset)

KX-TG6541BXB
(Base Unit)

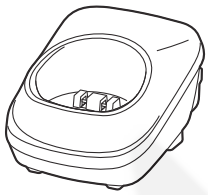

(Charger Unit)

Configuration for each model

Model No	Base Unit	Handset	Charger Unit	Expandable
KX-TG6541	1 (TG6541)	1 (TGA652)		Up to 6
KX-TG6542	1 (TG6541)	2 (TGA652)	1	Up to 6

Panasonic®

© Panasonic System Networks Co., Ltd. 2011
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

IMPORTANT INFORMATION ABOUT LEAD FREE, (PbF), SOLDERING

If lead free solder was used in the manufacture of this product, the printed circuit boards will be marked PbF. Standard leaded, (Pb), solder can be used as usual on boards without the PbF mark.
When this mark does appear, please read and follow the special instructions described in this manual on the use of PbF and how it might be permissible to use Pb solder during service and repair work.

- When you note the serial number, write down all 11 digits. The serial number may be found on the bottom of the unit.
- The illustrations in this Service Manual may vary slightly from the actual product.

A04490

TABLE OF CONTENTS

PAGE

1 Safety Precautions ---- **4**
1.1. For Service Technicians ---- 4
2 Warning ---- **4**
2.1. Battery Caution ---- 4
2.2. About Lead Free Solder (PbF: Pb free) ---- 4
2.3. Discarding of P. C. Board ---- 5
3 Specifications ---- **6**
4 Technical Descriptions ---- **7**
4.1. US-DECT Description ---- 7
4.2. Block Diagram (Base Unit_Main) ---- 9
4.3. Block Diagram (Base Unit_RF Part) ---- 10
4.4. Circuit Operation (Base Unit) ---- 11
4.5. Block Diagram (Handset) ---- 18
4.6. Block Diagram (Handset_RF Part) ---- 19
4.7. Circuit Operation (Handset) ---- 20
4.8. Circuit Operation (Charger Unit) ---- 22
4.9. Signal Route ---- 23
5 Location of Controls and Components ---- **25**
6 Installation Instructions ---- **25**
7 Operating Instructions ---- **25**
8 Test Mode ---- **26**
8.1. Engineering Mode ---- 26
9 Service Mode ---- **30**
9.1. How to Clear User Setting (Handset Only) ---- 30
10 Troubleshooting Guide ---- **31**
10.1. Troubleshooting Flowchart ---- 31
11 Disassembly and Assembly Instructions ---- **45**
11.1. Disassembly Instructions ---- 45
11.2. How to Replace the Handset LCD ---- 49
12 Measurements and Adjustments ---- **50**
12.1. Equipment Required ---- 50
12.2. The Setting Method of JIG ---- 50
12.3. Adjustment Standard (Base Unit) ---- 53
12.4. Adjustment Standard (Charger Unit) ---- 54
12.5. Adjustment Standard (Handset) ---- 55
12.6. Things to Do after Replacing IC or X'tal ---- 56
12.7. Frequency Table ---- 58
13 Miscellaneous ---- **59**
13.1. How to Replace the LLP (Leadless Leadframe Package) IC ---- 59
13.2. Terminal Guide of the ICs, Transistors and Diodes ---- 61
14 Schematic Diagram ---- **62**
14.1. For Schematic Diagram ---- 62
14.2. Schematic Diagram (Base Unit_Main) ---- 64
14.3. Schematic Diagram (Base Unit_Operation) ---- 66
14.4. Schematic Diagram (Handset_Main) ---- 68
14.5. Schematic Diagram (Handset_LED) ---- 70
14.6. Schematic Diagram (Charger Unit) ---- 71
15 Printed Circuit Board ---- **73**
15.1. Circuit Board (Base Unit_Main) ---- 73
15.2. Circuit Board (Base Unit_Operation) ---- 75
15.3. Circuit Board (Handset_Main) ---- 77
15.4. Circuit Board (Handset_LED) ---- 79
15.5. Circuit Board (Charger Unit) ---- 80
16 Exploded View and Replacement Parts List ---- **81**
16.1. Cabinet and Electrical Parts (Base Unit) ---- 81
16.2. Cabinet and Electrical Parts (Handset) ---- 82

PAGE
16.3. Cabinet and Electrical Parts (Charger Unit) ---- 83
16.4. Accessories ---- 84
16.5. Replacement Parts List ---- 85

1 Safety Precautions

1.1. For Service Technicians

- **Repair service shall be provided in accordance with repair technology information such as service manual so as to prevent fires, injury or electric shock, which can be caused by improper repair work**.
  1. When repair services are provided, neither the products nor their parts or members shall be remodeled.
  2. If a lead wire assembly is supplied as a repair part, the lead wire assembly shall be replaced.
  3. FASTON terminals shall be plugged straight in and unplugged straight out.

- **ICs and LSIs are vulnerable to static electricity.**
  When repairing, the following precautions will help prevent recurring malfunctions.
  1. Cover plastic parts boxes with aluminum foil.
  2. Ground the soldering irons.
  3. Use a conductive mat on worktable.
  4. Do not grasp IC or LSI pins with bare fingers.

2 Warning

2.1. Battery Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

2.2. About Lead Free Solder (PbF: Pb free)

Note:

In the information below, Pb, the symbol for lead in the periodic table of elements, will refer to standard solder or solder that contains lead.

We will use PbF solder when discussing the lead free solder used in our manufacturing process which is made from Tin (Sn), Silver (Ag), and Copper (Cu).

This model, and others like it, manufactured using lead free solder will have PbF stamped on the PCB. For service and repair work we suggest using the same type of solder.

Caution

- PbF solder has a melting point that is 50 °F ~ 70 °F (30 °C ~ 40 °C) higher than Pb solder. Please use a soldering iron with temperature control and adjust it to 700 °F ± 20 °F (370 °C ± 10 °C).
- Exercise care while using higher temperature soldering irons.:
  Do not heat the PCB for too long time in order to prevent solder splash or damage to the PCB.
- PbF solder will tend to splash if it is heated much higher than its melting point, approximately 1100 °F (600 °C).
- When applying PbF solder to double layered boards, please check the component side for excess which may flow onto the opposite side (See the figure below).

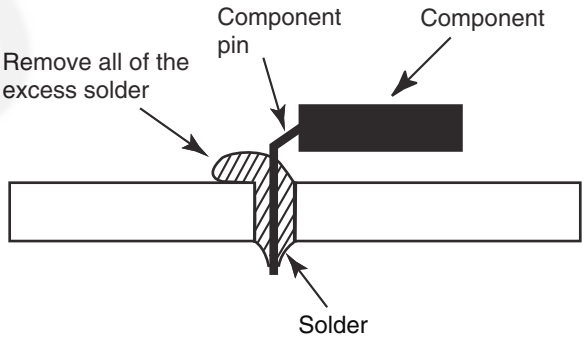

(Slice View)

2.2.1. Suggested PbF Solder

There are several types of PbF solder available commercially. While this product is manufactured using Tin, Silver, and Copper (Sn+Ag+Cu), you can also use Tin and Copper (Sn+Cu), or Tin, Zinc, and Bismuth (Sn+Zn+Bi). Please check the manufacturer's specific instructions for the melting points of their products and any precautions for using their product with other materials.

The following lead free (PbF) solder wire sizes are recommended for service of this product: 0.3 mm, 0.6 mm and 1.0 mm.

0.3 mm X 100 g	0.6 mm X 100 g	1.0 mm X 100 g
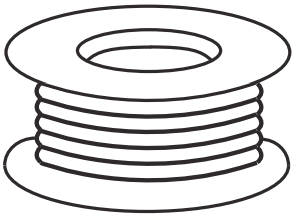	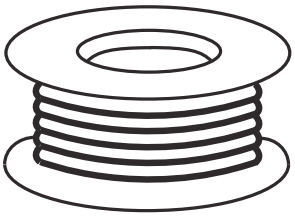	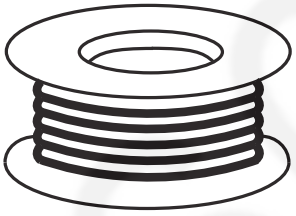

2.3. Discarding of P. C. Board

When discarding P. C. Board, delete all personal information such as telephone directory and caller list or scrap P. C. Board.

A0449860

3 Specifications

■ **Standard:**
DECT (Digital Enhanced Cordless Telecommunications)

■ **Number of channels:**
60 Duplex Channels

■ **Frequency range:**
1.92 GHz to 1.93 GHz

■ **Duplex procedure:**
TDMA (Time Division Multiple Access)

■ **Channel spacing:**
1,728 kHz

■ **Bit rate:**
1,152 kbit/s

■ **Modulation:**
GFSK (Gaussian Frequency Shift Keying)

■ **RF transmission power:**
115 mW (max.)

■ **Voice coding :**
ADPCM 32 kbit/s

	Base Unit	Handset	Charger
Power source	AC Adaptor (PQLV219BXY, 100-240 V AC, 50/60 Hz)	Rechargeable Ni-MH battery AAA (R03) size (1.2 V 550 mAh)	AC Adaptor (PQLV219BXY, 100-240 V AC, 50/60 Hz)
Receiving Method	Super Heterodyne	Super Heterodyne	——
Oscillation Method	PLL synthesizer	PLL synthesizer	——
Detecting Method	Quadrature Discriminator	Quadrature Discriminator	——
Tolerance of OSC Frequency	13.824 MHz ± 55 Hz	13.824 MHz ± 55 Hz	——
Modulation Method	Frequency Modulation	Frequency Modulation	——
ID Code	40 bit	40 bit	——
Ringer Equivalence No. (REN)	0.1B	——	——
Dialing Mode	——	Tone (DTMF)/Pulse	——
Redial	——	Up to 48 digits	——
Speed Dialer	——	Up to 32 digits (Phonebook)	——
Power Consumption	Standby: Approx. 1.1 W Maximum: Approx. 4.4 W	11 days at Standby, 13 hours at Talk	Standby: Approx. 0.1 W, Maximum: Approx. 2.6 W
Operating Conditions	0 °C - 40 °C (32 °F – 104 °F) 20 % – 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F – 104 °F) 20 % – 80 % relative air humidity (dry)	0 °C - 40 °C (32 °F – 104 °F) 20 % – 80 % relative air humidity (dry)
Dimensions (H x W x D)	Approx. 91 mm x 157 mm x 153 mm	Approx. 160 mm x 48 mm x 33 mm	Approx. 52 mm x 72 mm x 85 mm
Mass (Weight)	Approx. 340 g	Approx. 130 g	Approx. 60 g

Note:
• Design and specifications are subject to change without notice.

Note for Service:
• **Operation range:** Up to 300 m outdoors, Up to 50 m indoors, depending on the condition.
• **Analog telephone connection:** Telephone Line
• **Optional headset:** KX-TCA94EX, RP-TCA400, RP-TCA430

A04-360

4 Technical Descriptions

4.1. US-DECT Description

The frequency range of 1.92 GHz-1.93 GHz is used. Transmitting and receiving carrier between base unit and handset is same frequency. Refer to **Frequency Table** (P.58).

4.1.1. TDD Frame Format

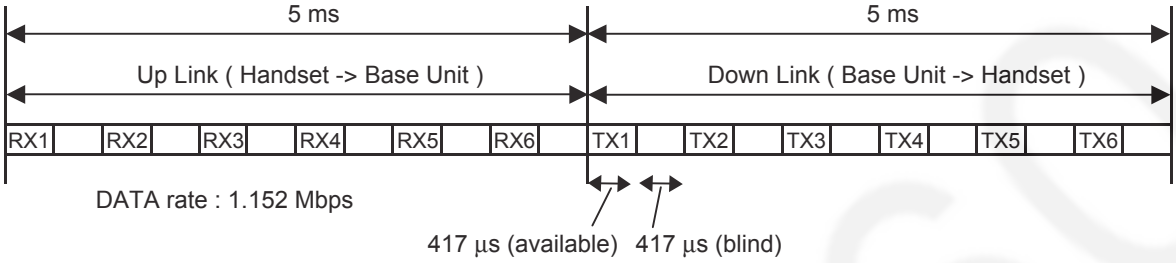

4.1.2. TDMA system

This system is the cycles of 10 ms, and has 6 duplex paths, but maximum duplex communication path is 5 because of dummy bearer use.

In 1 slot 417 μs, the 10 ms of voice data is transmitted.

• **2 - Handsets Link**

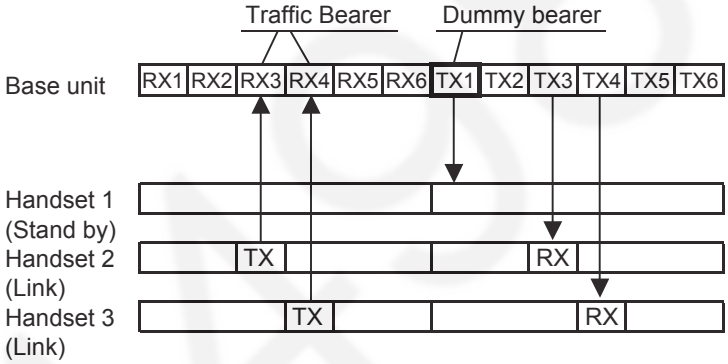

Traffic Bearer

A link is established between base unit and handset.

The state where duplex communication is performed.

Handset doesn't make up duplex in no free RF channels because of interference. (*1)

Dummy Bearer

Base unit sends Dummy-data to the all stand-by state handsets.

Handsets receive that data for synchronization and monitoring request from the base unit.

Base unit doesn't send Dummy bearer in no free RF channels because of interference. (*1)

Note:

(*1) It is a feature under FCC 15 regulation and for interference avoidance.

In the case of checking RF parts, it is better in least interference condition.

4.1.3. Signal Flowchart in the Radio Parts

Reception

A voice signal from TEL line is encoded to digital data "TXDATA" by BBIC (IC501) in a base unit.
Then TXDATA goes to RF PART and it's modulated to 1.9 GHz. The RF signal is amplified and fed to a selected antenna.

As for a handset RF, RF signal is received in one antenna.
BBIC down-converts to 864 kHz IF signal from RX signal and demodulates it to digital data "RXDATA".
BBIC (IC1) converts RXDATA into a voice signal and outputs it to speaker.

Transmission

A voice signal from microphone is encoded to digital data "TXDATA" by BBIC (IC1) in a handset.
Then TXDATA goes to RF PART, and it's modulated to 1.9 GHz. The RF signal is amplified and fed to a antenna.

As for a base unit RF, RF signal is received in two antennas.
BBIC (IC501) compares RF signal levels and selects the antenna to be used. Then BBIC down-converts to 864 kHz IF signal from RX signal in the selected antenna, and demodulates it to digital data "RXDATA".
BBIC (IC501) converts RXDATA into a voice signal and outputs it to TEL line.

A0449860

4.2. Block Diagram (Base Unit_Main)

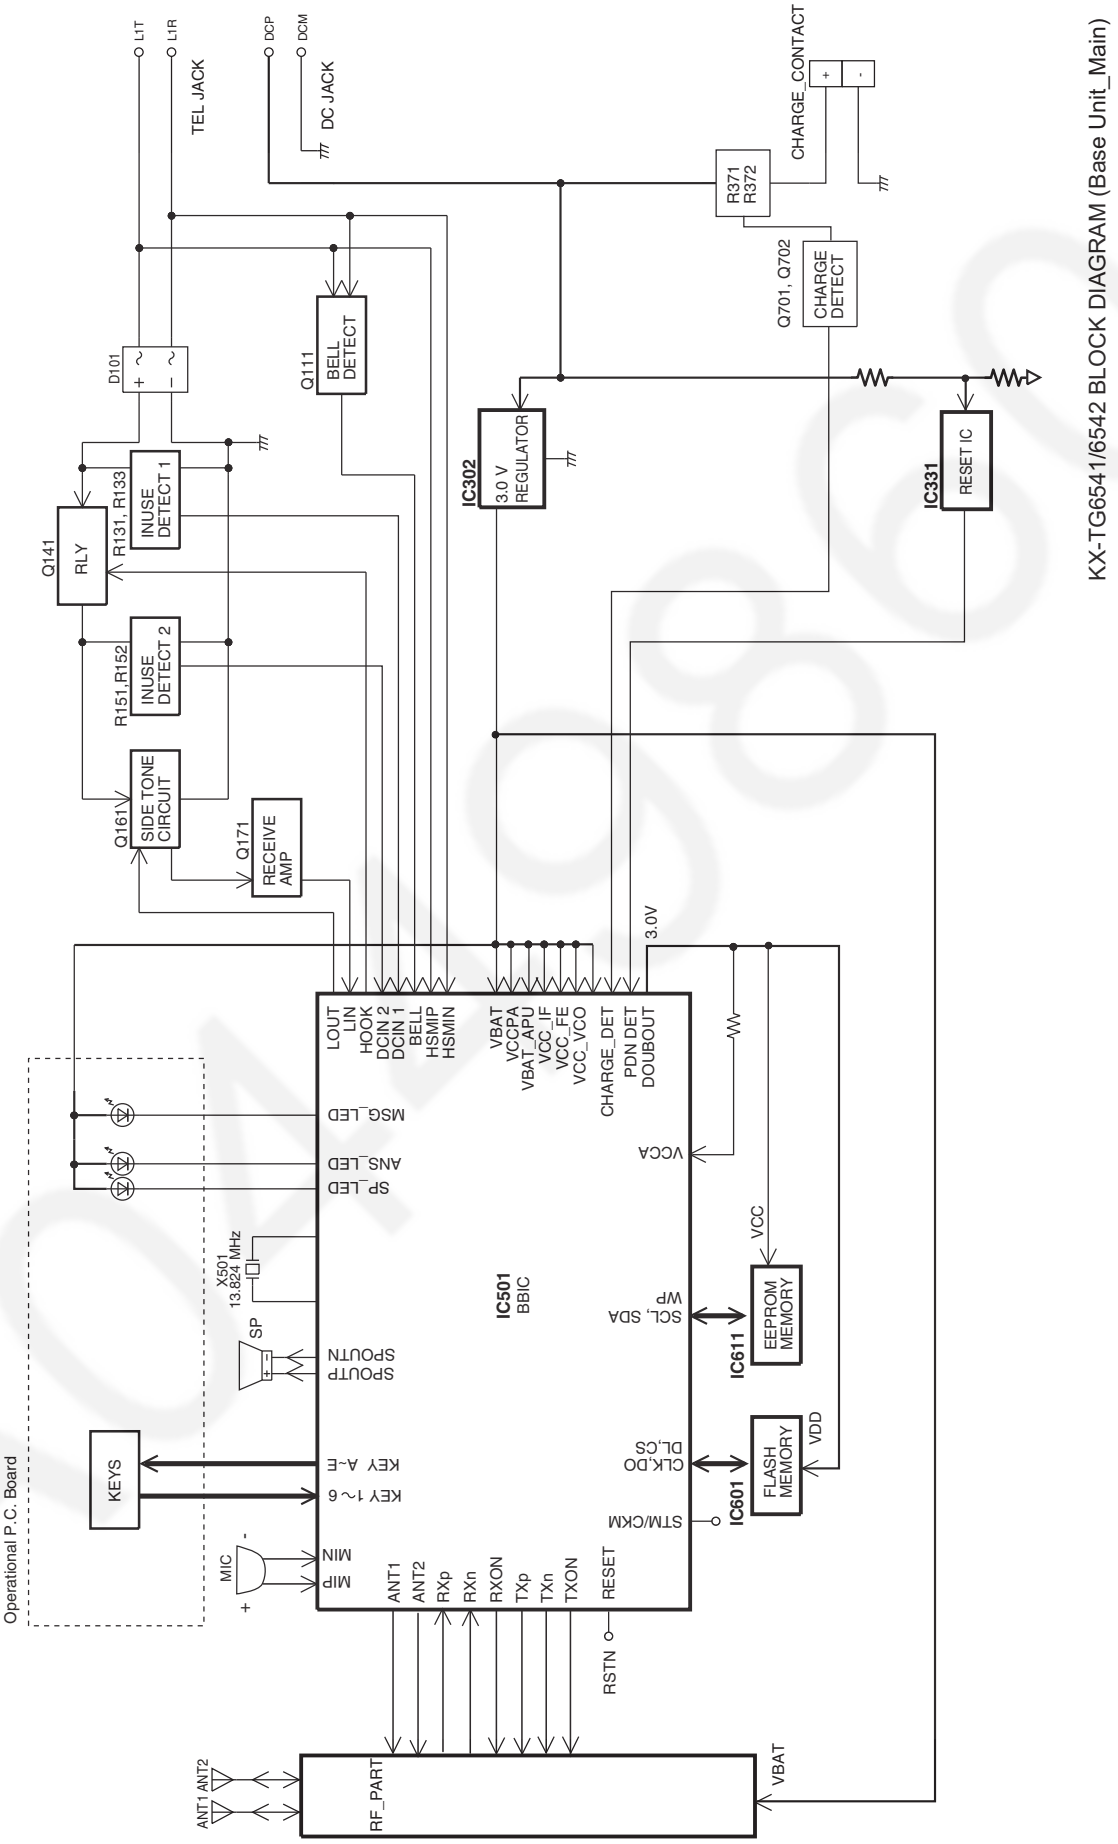

4.3. Block Diagram (Base Unit_RF Part)

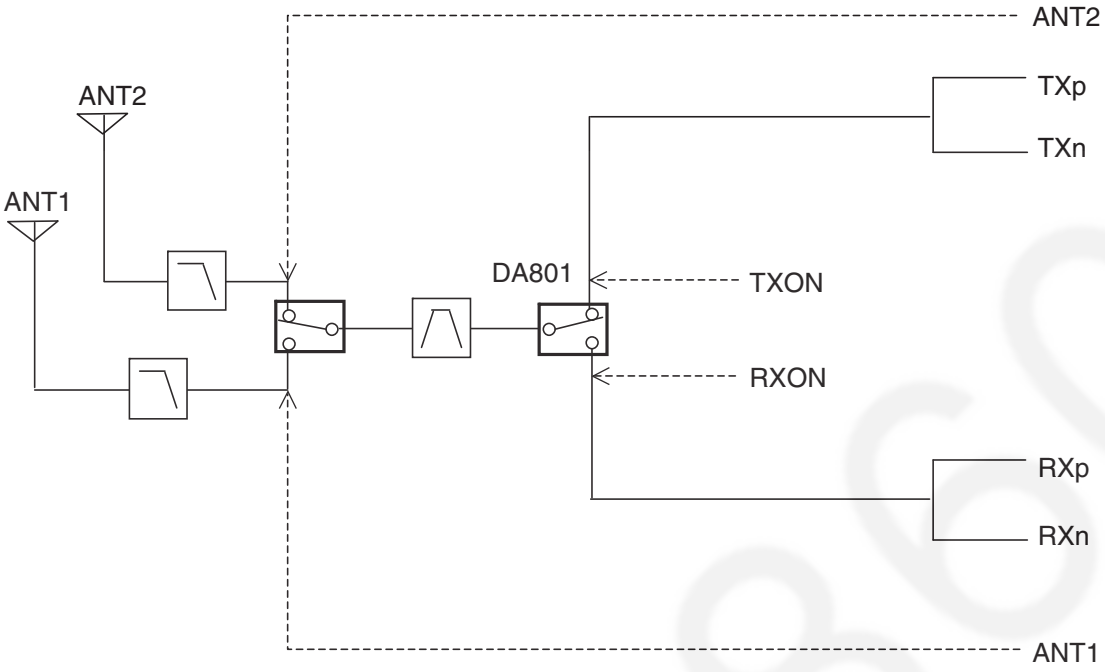

KX-TG6541/6542 BLOCK DIAGRAM (Base Unit_RF Part)

A0449860

4.4. Circuit Operation (Base Unit)

General Description:

(BBIC, Flash Memory, EERROM) is a digital speech/signal processing system that implements all the functions of speech compression, record and playback, and memory management required in a digital telephone answering machine.

The BBIC system is fully controlled by a host processor. The host processor provides activation and control of all that functions as follows.

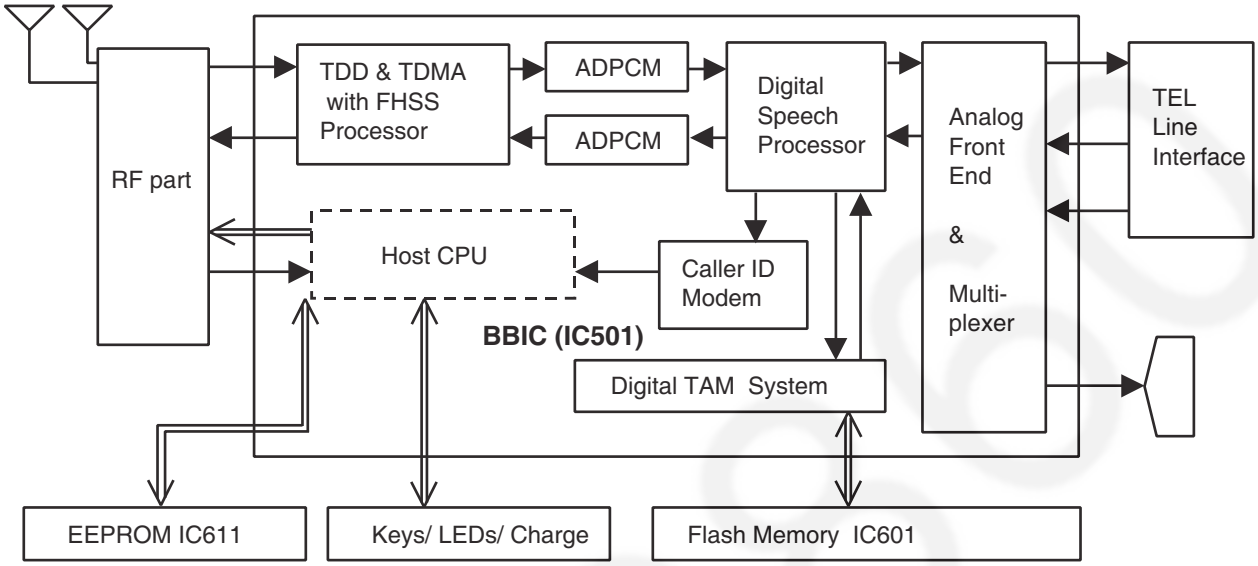

4.4.1. BBIC (Base Band IC: IC501)

- **Voice Message Recording/Play back**
  The BBIC system uses a proprietary speech compression technique to record and store voice message in Flash Memory. An error correction algorithm is used to enable playback of these messages from the Flash Memory.
- **DTMF Generator**
  When the DTMF data from the handset is received, the DTMF signal is output.
- **Synthesized Voice (Pre-recorded message)**
  The BBIC implements synthesized Voice, utilizing the built in speech detector and a Flash Memory, which stored the vocabulary.
- **Caller ID demodulation**
  The BBIC implements monitor and demodulate the FSK/DTMF signals that provide CID information from the Central Office.
- **Digital Switching**
  The voice signal from telephone line is transmitted to the handset or the voice signal from the handset is transmitted to the Telephone line, etc. They are determined by the signal path route operation of voice signal.
- **Block Interface Circuit**
  RF part, LED, Key scan, Speaker, Telephone line.

4.4.2. Flash Memory (IC601)

Following information data is stored.

- **Voice signal**
  ex: Pre-recorded Greeting message, Incoming message

4.4.3. EEPROM (IC611)

Following information data is stored.

- **Settings**
  ex: message numbers, ID code, Flash Time, Tone/Pulse

4.4.4. Power Supply Circuit/Reset Circuit

The power supply voltage from AC adaptor is converted to VBAT (3.0V) in IC302. And +3.0V for peripherals and analog part is insulated from VBAT by Doubler of BBIC.

Circuit Operation:

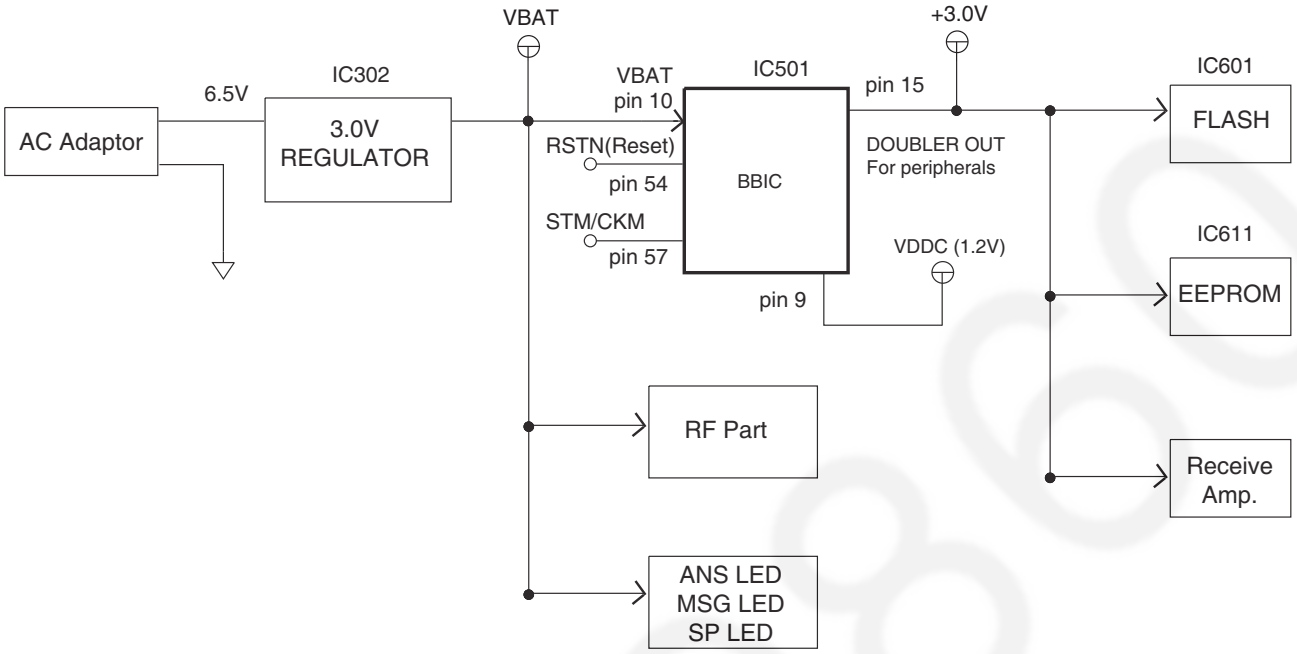

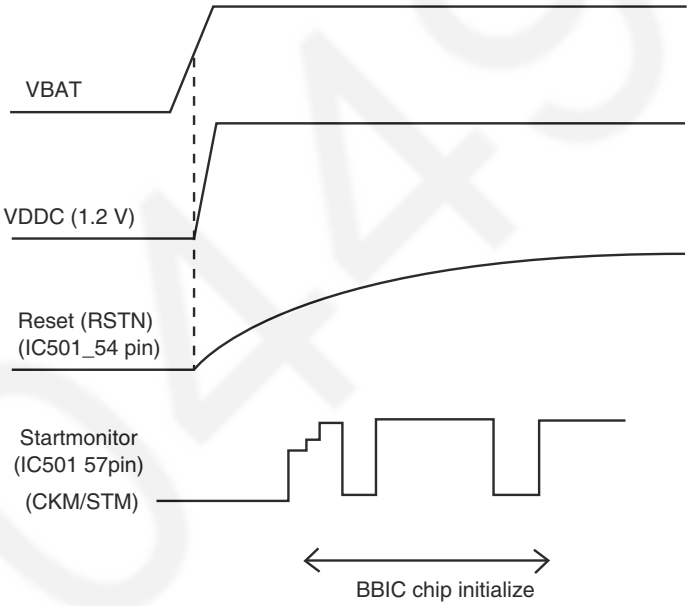

4.4.4.1. Charge Circuit

The voltage from the AC adaptor is supplied to the charge circuits.

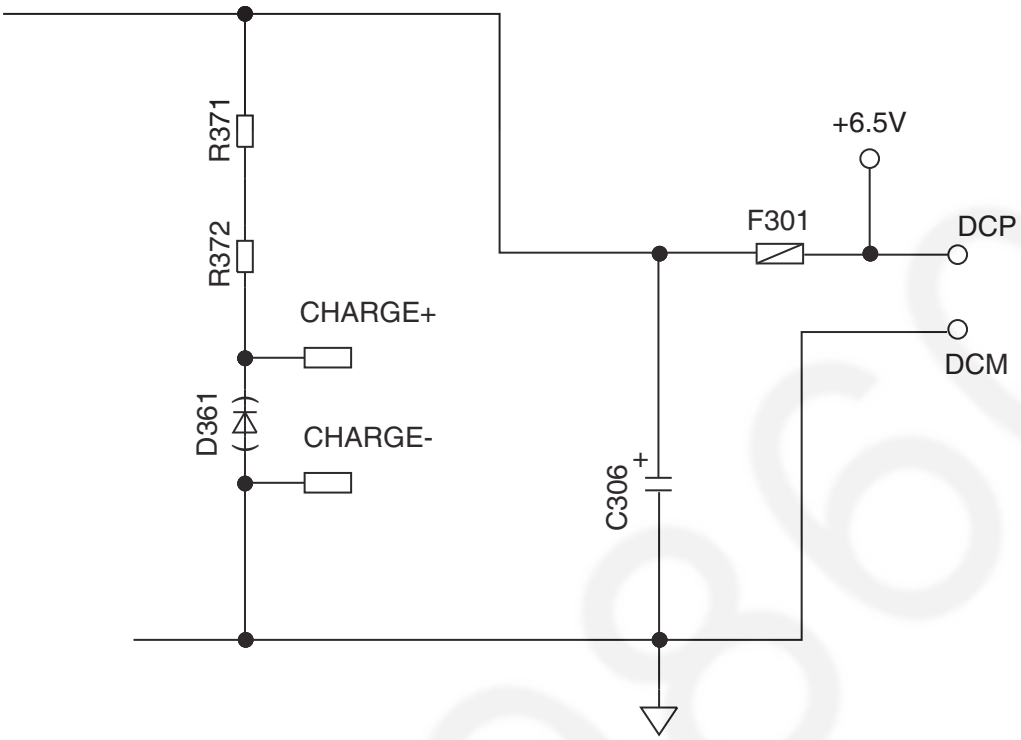

A0449860

4.4.5. Telephone Line Interface

Telephone Line Interface Circuit:

Function

- Bell signal detection
- ON/OFF hook and pulse dial circuit
- Side tone circuit

Bell signal detection and OFF HOOK circuit:

In the idle mode, Q141 is open to cut the DC loop current and decrease the ring load. When ring voltage appears at the Tip (T) and Ring (R) leads (When the telephone rings), the AC ring voltage is transferred as follows:

T → L101 → R111 → C111 → Q111 → BBIC pin 5 [BELL]

When the CPU (BBIC) detects a ring signal, Q141 turns on, thus providing an off-hook condition (active DC current flow through the circuit). Following signal flow is the DC current flow.

T → L101 → D101 → Q141 → Q161 → R163 → R167 → D101 → L102 → P101 → R

ON HOOK Circuit:

Q141 is open, Q141 is connected as to cut the DC loop current and to cut the voice signal. The unit is consequently in an on-hook condition.

Pulse Dial Circuit:

Pin 6 of BBIC turns Q141 ON/OFF to make the pulse dialing.

Side Tone Circuit:

Basically this circuit prevents the TX signal from feeding back to RX signal. As for this unit, TX signal feed back from Q161 is canceled by the canceller circuit of BBIC.

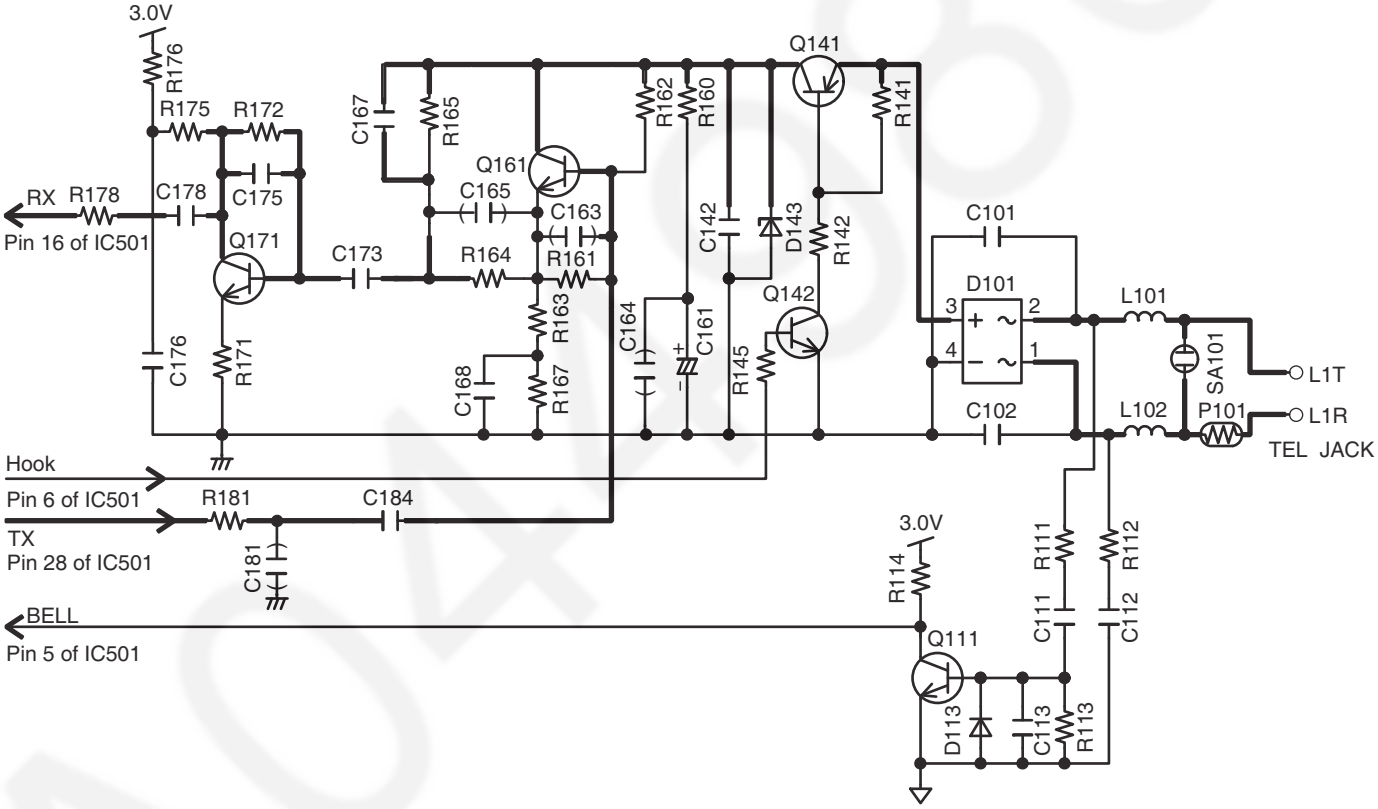

4.4.6. Parallel Connection Detect Circuit/Auto Disconnect Circuit

Function:

In order to disable call waiting and stutter tone functions when using telephones connected in parallel, it is necessary to have a circuit that judges whether a telephone connected in parallel is in use or not. This circuit determines whether the telephone connected in parallel is on hook or off hook by detecting changes in the T/R voltage.

Circuit Operation:

Parallel connection detection when on hook:

When on hook, the voltage is monitored at pin 17 of IC501. There is no parallel connection if the voltage is 0.54 V or higher, while a parallel connection is deemed to exist if the voltage is lower.

Parallel connection detection when off hook:

When off hook, the voltage is monitored at pin 18 of IC501; the presence/absence of a parallel connection is determined by detecting the voltage changes.

If the Auto disconnect function is ON and statuses are Hold, receiving ICM, OGM transmitting, BBIC disconnects the line after detecting parallel connection is off hook.

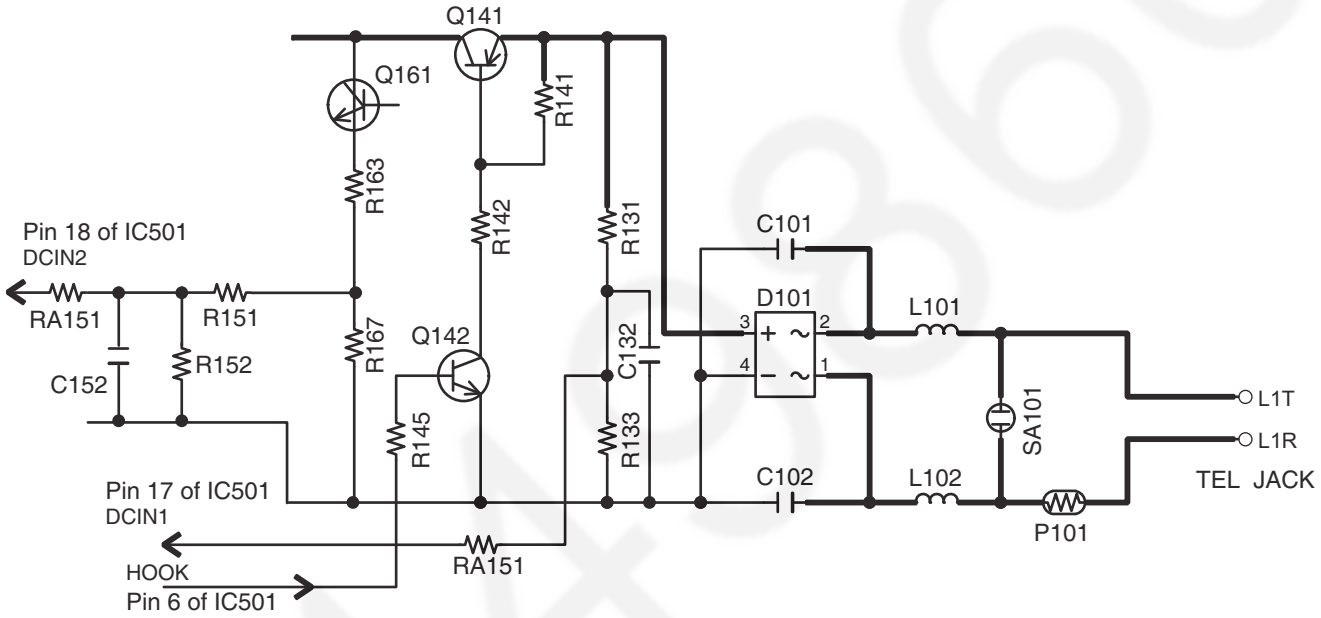

4.4.7. Calling Line Identification (Caller ID)/Call Waiting Caller ID

Function:

Caller ID

The caller ID is a chargeable ID which the user of a telephone circuit obtains by entering a contract with the telephone company to utilize a caller ID service. For this reason, the operation of this circuit assumes that a caller ID service contract has been entered for the circuit being used. The data for the caller ID from the telephone exchange is sent during the interval between the first and second rings of the bell signal. The data from the telephone exchange is a modem signal which is modulated in an FSK (Frequency Shift Keying) * format. Data "1" is a 1200 Hz sine wave, and data "0" is a 2200 Hz sine wave. There are two types of the message format which can be received: i.e. the single message format and plural message format. The plural message format allows to transmit the name and data code information in addition to the time and telephone number data.

*: Also the telephone exchange service provides other formats.

- Single message format

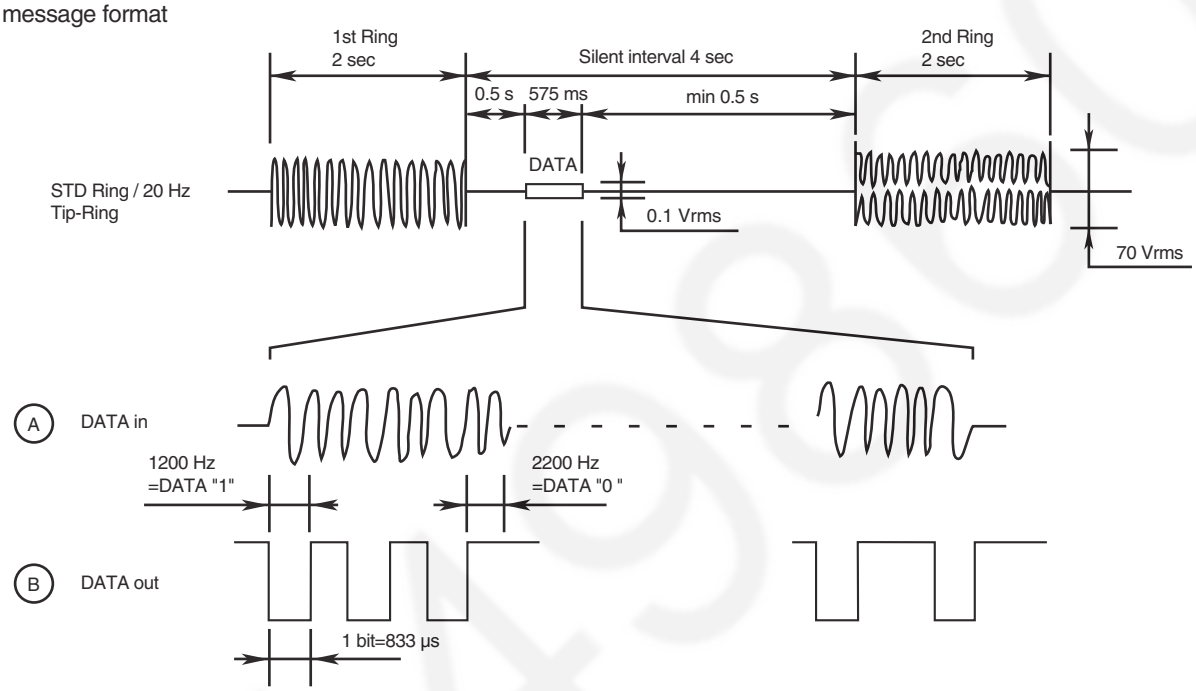

month	day	hour	minute	number
04 –	15 –	16 –	35 –	2013487000

- Plural message format

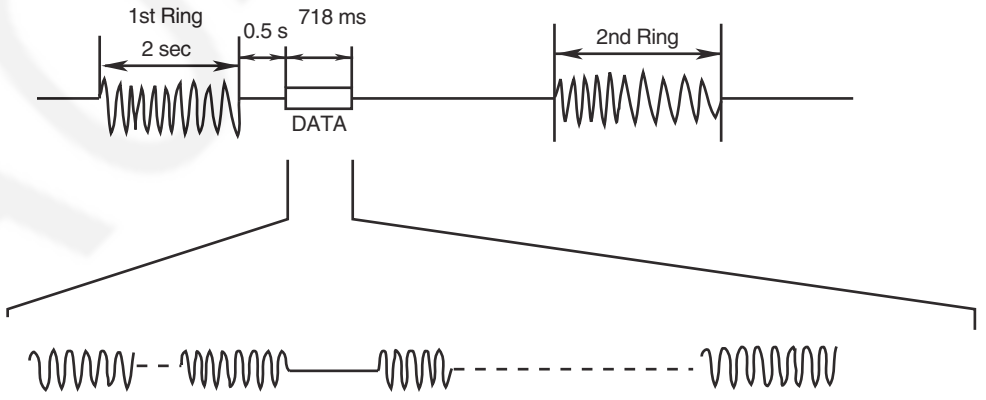

DATA CODE	NAME
201	John Smith

month	day	hour	minute	number
04 –	16 –	16 –	35 –	2013487000

Call Waiting Caller ID

Calling Identity Delivery on Call Waiting (CIDCW) is a CLASS service that allows a customer, while off-hook on an existing call, to receive information about a calling party on a waited call. The transmission of the calling information takes place almost immediately after the customer is alerted to the new call so he/she can use this information to decide whether to take the new call.

Function:

The telephone exchange transmits or receives CAS and ACK signals through each voice RX/TX route. Then FSK data and MARK data pass the following route.

Telephone Line → P101 → L101, L102 → C121, C122 → R121, R122 → IC501 (25, 24).

If the unit deems that a telephone connected in parallel is in use, ACK is not returned even if CAS is received, and the information for the second and subsequent callers is not displayed on the portable handset display.

Call Waiting Format

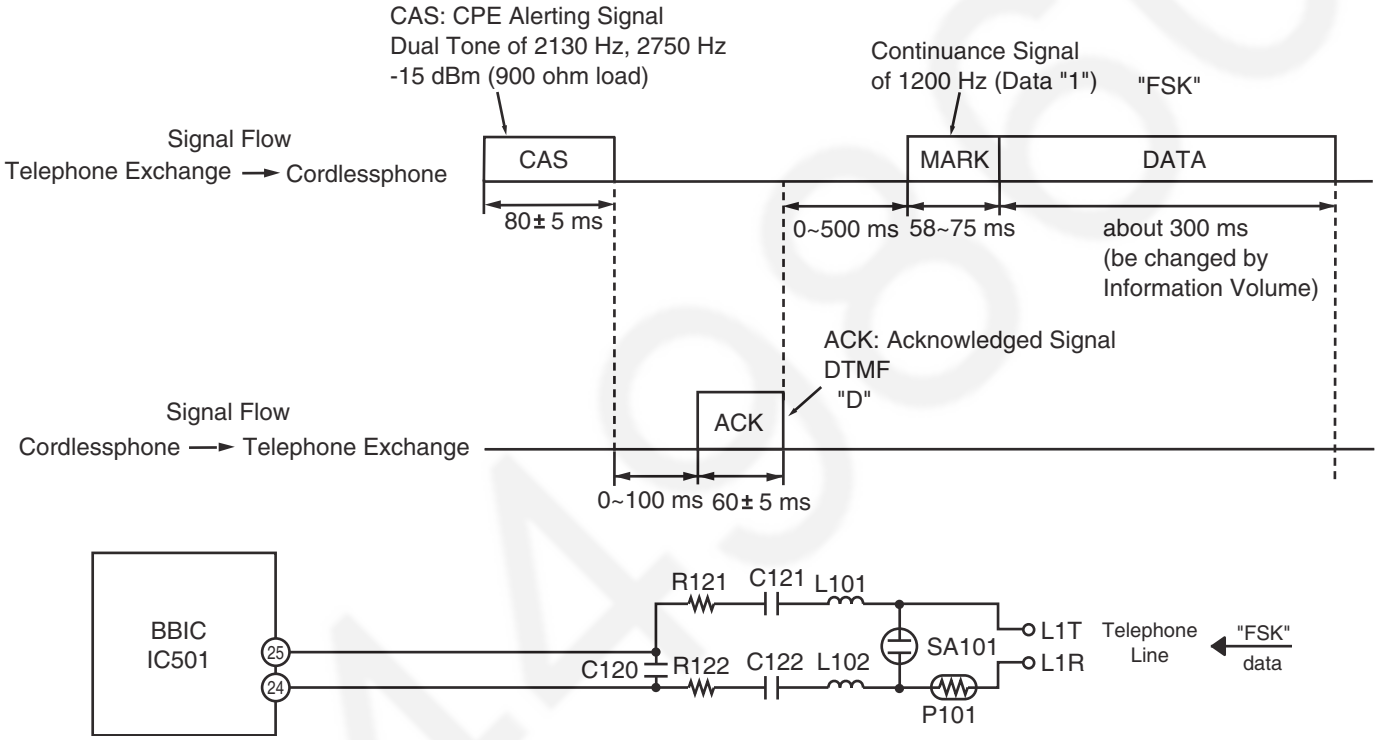

4.5. Block Diagram (Handset)

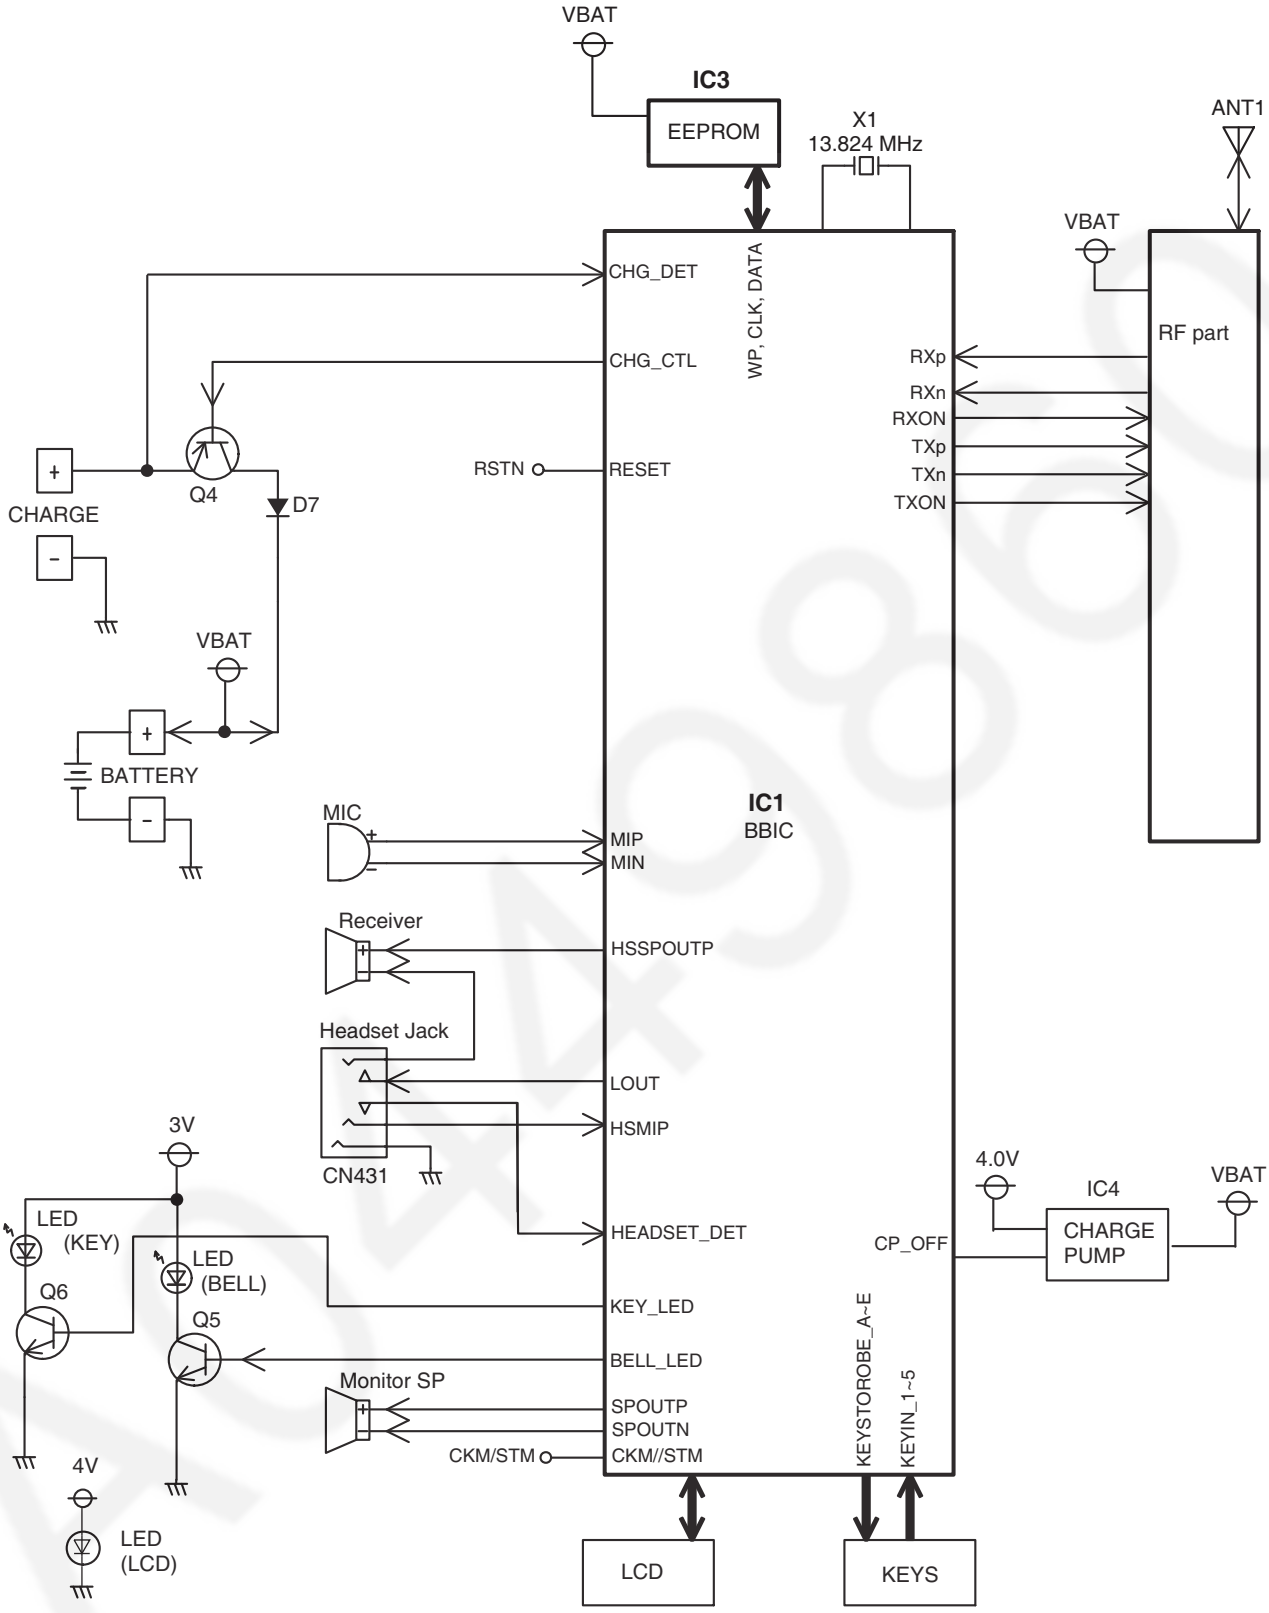

KX-TGA652 BLOCK DIAGRAM (Handset)

4.6. Block Diagram (Handset_RF Part)

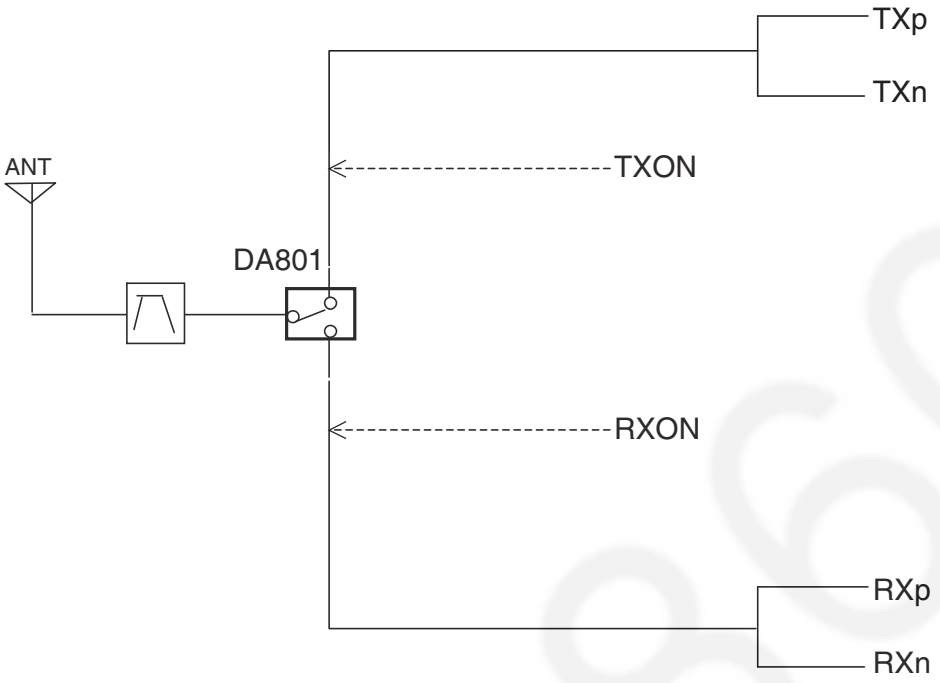

KX-TGA652 BLOCK DIAGRAM (Handset_RF Part)

A0449860

4.7. Circuit Operation (Handset)

4.7.1. Outline

Handset consists of the following ICs as shown in **Block Diagram (Handset)** (P.18).

- DECT BBIC (**B**ase **B**and IC): IC1
  - All data signals (forming/analyzing ACK or CMD signal)
  - All interfaces (ex: Key, Detector Circuit, Charge, EEPROM, LCD)
- EEPROM: IC3
  - Setting data is stored. (e.g. ID, user setting)

4.7.2. Power Supply Circuit/Reset Circuit

Circuit Operation:

When power on the Handset, the voltage is as follows;
BATTERY(2.2 V ~ 2.6 V: BATT+) → F1 → BBC1 (IC1) 10 pin
The Reset signal generates IC1 (54 pin) and 1.8 V.

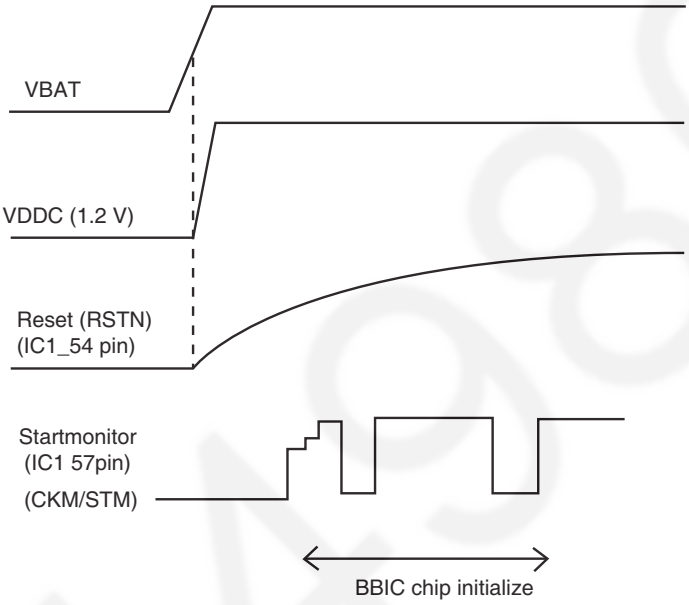

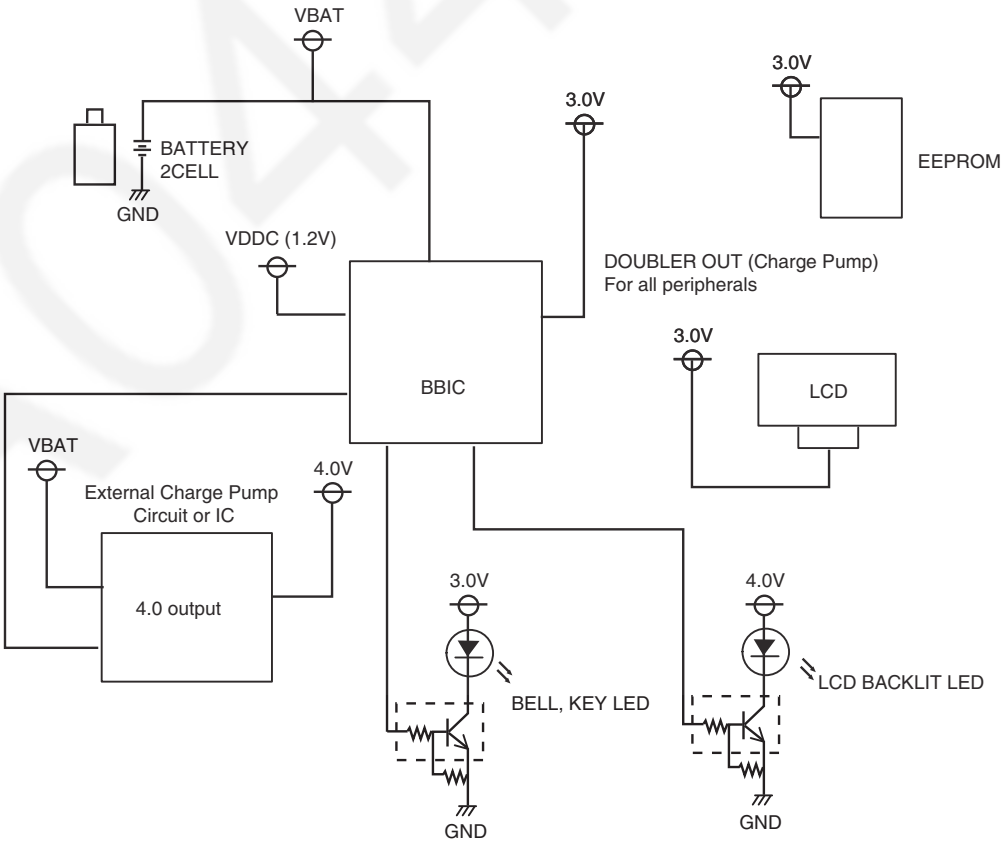

4.7.3. Charge Circuit

Circuit Operation:

When charging the handset on the Base Unit, the charge current is as follows;

DC+(6.5 V) → F301 → R371 → R372 →CHARGE+(Base) → CHARGE+(Handset) → Q4 → D7→ F1 → BATTERY+... Battery... BATTERY- → R45 → GND → CHARGE-(Handset)→ CHARGE-(Base) → GND → DC-(GND)

In this way, the BBIC on Handset detects the fact that the battery is charged.

The charge current is controlled by switching Q9 of Handset.

Refer to Fig.101 in **Power Supply Circuit/Reset Circuit** (P.12).

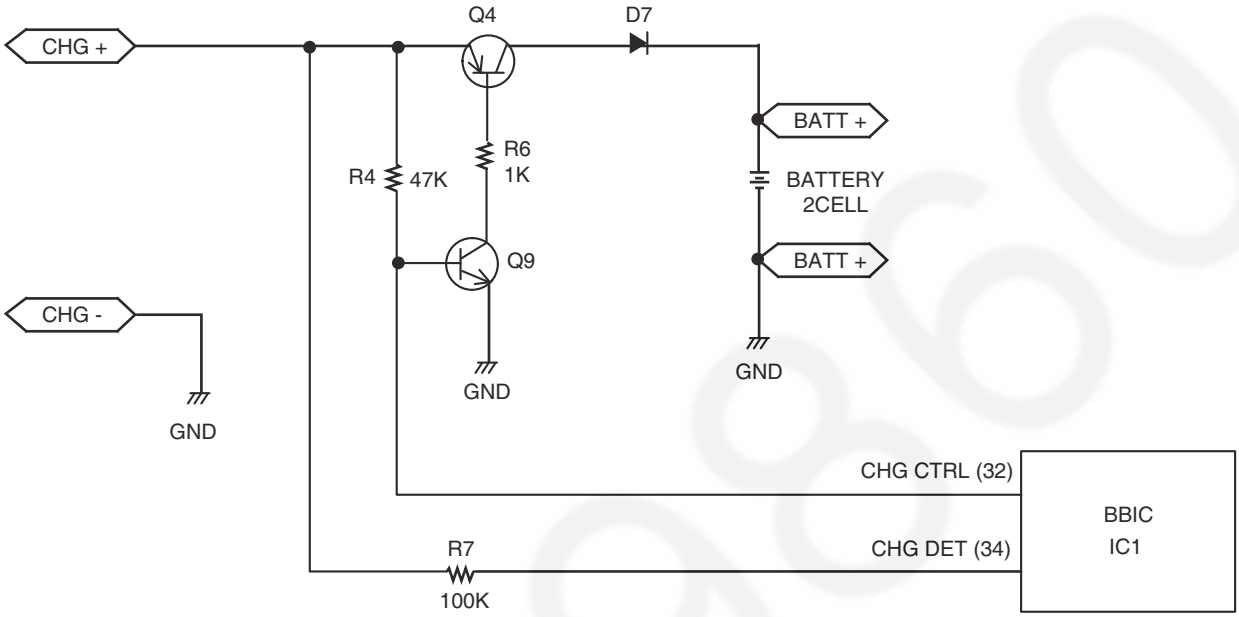

4.7.4. Battery Low/Power Down Detector

Circuit Operation:

"Battery Low" and "Power Down" are detected by BBIC which check the voltage from battery.

The detected voltage is as follows;

- Battery Low

  Battery voltage: V(Batt) ≦ 2.35 V ± 50 mV

  The BBIC detects this level and "▭" starts flashing.

- Power Down

  Battery voltage: V(Batt) ≦ 2.0 V ± 50 mV

  The BBIC detects this level and power down.

4.7.5. Speakerphone

The hands-free loudspeaker at SP+ and SP- is used to generate the ring alarm.

4.8. Circuit Operation (Charger Unit)

Charge control is executed at handset side so that the operation when using charger is also controlled by handset.
Refer to **Circuit Operation (Handset)** (P.20)

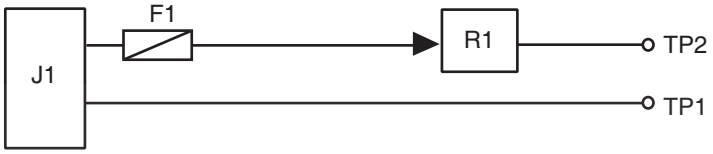

AC Adaptor

The route for this is as follows: DC+pin of J1(+) → F1 → R1 → CHARGE+pad → Handset → CHARGE-pad → DC-pin of J1(-).

A0449860

4.9. Signal Route

SIGNAL ROUTE	IN → ROUTE → OUT
HANDSET TX	HANDSET MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - **<HANDSET_RF_TX_ROUTE>** - ANT. ---
	---ANT. - **<BASE_UNIT_RF_RX_ROUTE>** - IC501(46/47 - 28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)
HANDSET RX	T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 44/45) - **<BASE_UNIT_RF_TX_ROUTE>** - ANT. ---
	--- ANT. - **<HANDSET_RF_RX_ROUTE>** - IC1(28/27) - C86 - L74 - HEADSET_JACK(5 - 4) - R11 - HANDSET SPEAKER
HEADSET TX	HEADSET_JACK(2) - R306 - C14 - R22 - IC1(25) - **<HANDSET_RF_TX_ROUTE>** - ANT. ---
	---ANT. - **<BASE_UNIT_RF_RX_ROUTE>** - IC501(46/47 - 28) - R181 - C184 - Q161- Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)
HEADSET RX	T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 44/45) - **<BASE_UNIT_RF_TX_ROUTE>** - ANT. ---
	--- ANT. - **<HANDSET_RF_RX_ROUTE>** - IC1(28) - C86 - L74 - HEADSET_JACK(5)
HANDSET SP-Phone TX	HANDSET MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - **<HANDSET_RF_TX_ROUTE>** - ANT. ---
	---ANT. - **<BASE_UNIT_RF_RX_ROUTE>** - IC501(46/47 - 28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] -T/R(TEL LINE)
HANDSET SP-Phone RX	T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 -R178 - IC501(16-44/45) - **<BASE_UNIT_RF_TX_ROUTE>** - ANT. ---
	--- ANT. **-<HANDSET_RF_RX_ROUTE>** - IC1(29/31) - Backside SP
BASE SP-Phone TX	MIC - C457/C458 - RA452 - IC501 (23/22 - 28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)
BASE SP-Phone RX	T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 - R178 - IC501 (16 - 29/31) - L474/L476 - SPEAKER
INTERCOM HANDSET TO BASE UNIT	HANDSET MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - **<HANDSET_RF_TX_ROUTE>** - ANT. ---
	--- ANT. - **<BASE_UNIT_RF_RX_ROUTE>** - IC501(46/47 - 29/31) - L474/L476 - SPEAKER
INTERCOM BASE UNIT TO HANDSET	MIC - C457/C458 - RA452 - IC501(23/22 - 44/45) - **<BASE_UNIT_RF_TX_ROUTE>** - ANT. ---
	--- ANT. - **<HANDSET_RF_RX_ROUTE>** - IC1(28/27) - C86 - L74 - HEADSET_JACK(5 - 4) - R11 - HANDSET SPEAKER
GREETING RECORDING	HANDSET MIC - R73/74 - C11/13 - RA4 - IC1(22/23) - **<HANDSET_RF_TX_ROUTE>** - ANT. ---
	---ANT. - **<BASE_UNIT_RF_RX_ROUTE>** - IC501(46/47- 73/74) - IC601
GREETING PLAY TO TEL LINE	IC601 - IC501(73/74 - 28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)
ICM RECORDING	T/R(TEL LINE) - L101/[P101 - L102] - D101 - Q141 - R165 - C173 - Q171 - C178 - R178 - IC501(16 - 73/74) - IC601
ICM PLAY TO SPEAKER	IC601 - IC501(73/74 - 29/31) - L474/L476 - SPEAKER
DTMF SIGNAL TO TEL LINE	IC501(28) - R181 - C184 - Q161 - Q141 - D101 - L101/[L102 - P101] - T/R(TEL LINE)
CALLER ID	T/R(TEL LINE) - L101/[P101 - L102] - C121/C122 - R121/R122 - IC501(24/25)
BELL DETECTION	T/R(TEL LINE) - L101/[P101 - L102] - R111/R112 - C111/C112 - Q111 - IC501(5)

Note:

[ ]: inside of Handset

RF part signal route

SIGNAL ROUTE	IN → ROUTE → OUT
HANDSET RF [TX_ROUTE]	IC1(44/45) - L809 - C812 - DA801 - C895 - ANT
HANDSET RF [RX_ROUTE]	ANT - C895 - DA801 - C826 - IC1(46/47)
BASE UNIT RF [TX_ROUTE]	IC501(44/45) - C812 - L809 - DA801 - C895 - DA802 - C893/C894 - ANT1/ANT2
BASE UNIT RF [RX_ROUTE]	ANT1/ANT2 - C893/C894 - DA802 - C895 - DA801 - C826 - IC501(46/47)

Note:

[ ]: inside of Handset

A0449860

5 Location of Controls and Components

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

6 Installation Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

7 Operating Instructions

Refer to the Operating Instructions.

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

A0449860

8 Test Mode

8.1. Engineering Mode

8.1.1. Base Unit

Important:
Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

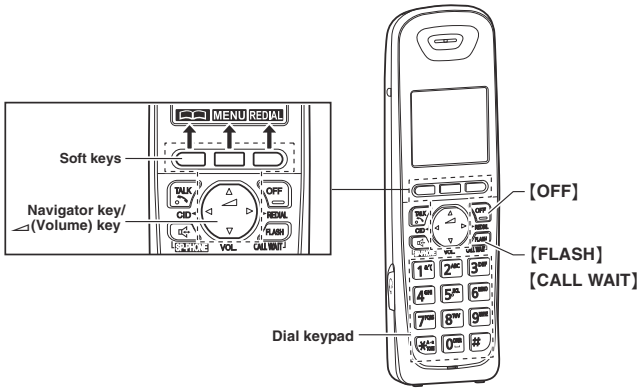

H/S key operation

H/S LCD

1). Press MENU .

2). Select "Initial Setting" using 【▲】or【▼】
then press OK or 【►】.

Select "Set tel line" using 【▲】or【▼】
then press OK or 【►】.

3). Enter "7", "2", "6", "2", "7", "6", "6", "4".
Note: 7262 7664 = PANA SONI
(see letters printed on dial keys)

*

4). Select "Write EEP" using 【▲】or【▼】
then press OK or 【►】.

5). Enter "●", "●", "●", "●" (Address). (*1)

6). Enter "＊", "＊" (New Data). (*1)

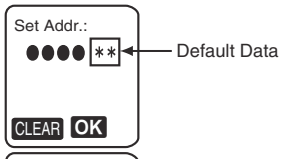

7). Press OK , a long confirmation beep
will be heard.

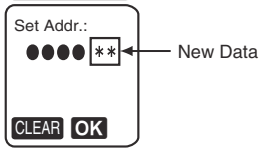

8). Press 【OFF】 to return to standby mode.
After that, turn the base unit power off and then power on.

Note: * To enter "Set dial mode", press OK or 【►】 at " Set tel line".
It is necessary to turn on the power of base unit.

Frequently Used Items (Base Unit)

ex.)

Items	Address	Default Data	New Data		Remarks
Frequency	00 07 / 00 08	00/01	-	-	Use these items in a **READ-ONLY** mode to confirm the contents. Careless rewriting may cause serious damage to the computer system.
ID	00 02 ~ 00 06	Given value	-	-	

Note:

(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex)	Input Keys		Desired Number (hex)	Input Keys
0	0		A	[Flash] + 0
1	1		B	[Flash] + 1
.	.		C	[Flash] + 2
.	.		D	[Flash] + 3
.	.		E	[Flash] + 4
9	9		F	[Flash] + 5

A0449860

8.1.2. Handset

Important:
Make sure the address on LCD is correct when entering new data. Otherwise, you may ruin the unit.

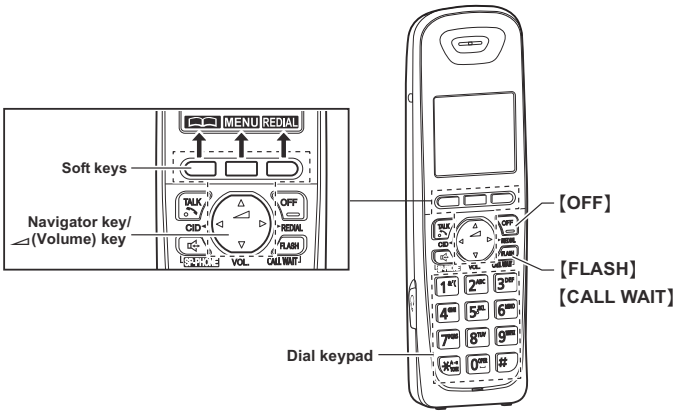

H/S key operation

1). Press MENU .

2). Select "Initial Setting" using【▲】or【▼】
then press OK or【►】.

3). Enter "7", "2", "6", "2", "7", "6", "6", "4".
Note: 7262 7664 = PANA SONI
(see letters printed on dial keys)

4). Select "Write EEP" using【▲】or【▼】
then press OK or【►】.

5). Enter "●", "●", "●", "●" (Address). (*1)

6). Enter "＊", "＊" (New Data). (*1)

7). Press OK , a long confirmation beep will be heard.

8). Press 【OFF】 to return to standby mode.
After that, remove and reinsert the batteries. Press the Power button for about 1 second if the power is not turned on.

H/S LCD

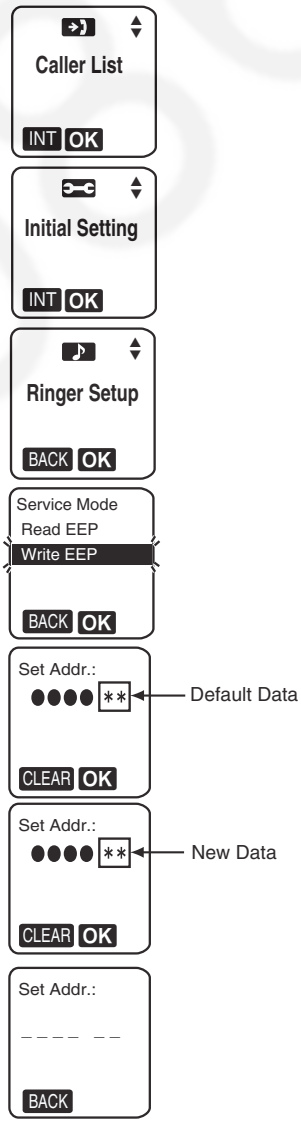

Frequently Used Items (Handset)

ex.)

Items	Address	Default Data	New Data	Possible Adjusted Value MAX (hex)	Possible Adjusted Value MIN (hex)	Remarks
Battery Low	00 11 / 00 12	00 / 00	-	-	-	(*2)
Frequency	00 07 / 00 08	00 / 01	-	-	-	
ID	00 02 ~ 00 06	Given value	-	-	-	

Note:

(*1) When you enter the address or New Data, please refer to the table below.

Desired Number (hex.)	Input Keys	Desired Number (hex.)	Input Keys
0	0	A	[Flash] + 0
1	1	B	[Flash] + 1
.	.	C	[Flash] + 2
.	.	D	[Flash] + 3
.	.	E	[Flash] + 4
9	9	F	[Flash] + 5

(*2) Use these items in a READ-ONLY mode to confirm the contents. Careless rewriting may cause serious damage to the handset.

A0449800

9 Service Mode

9.1. How to Clear User Setting (Handset Only)

Handset

Press 2,5,8,0 simultaneously until a beep sound is heard. Then single handset is initialized.
(The contents of user setting are reset to factory default)
*Usage time is not cleared.

A0449860

10 Troubleshooting Guide

10.1. Troubleshooting Flowchart

FLOW CHART

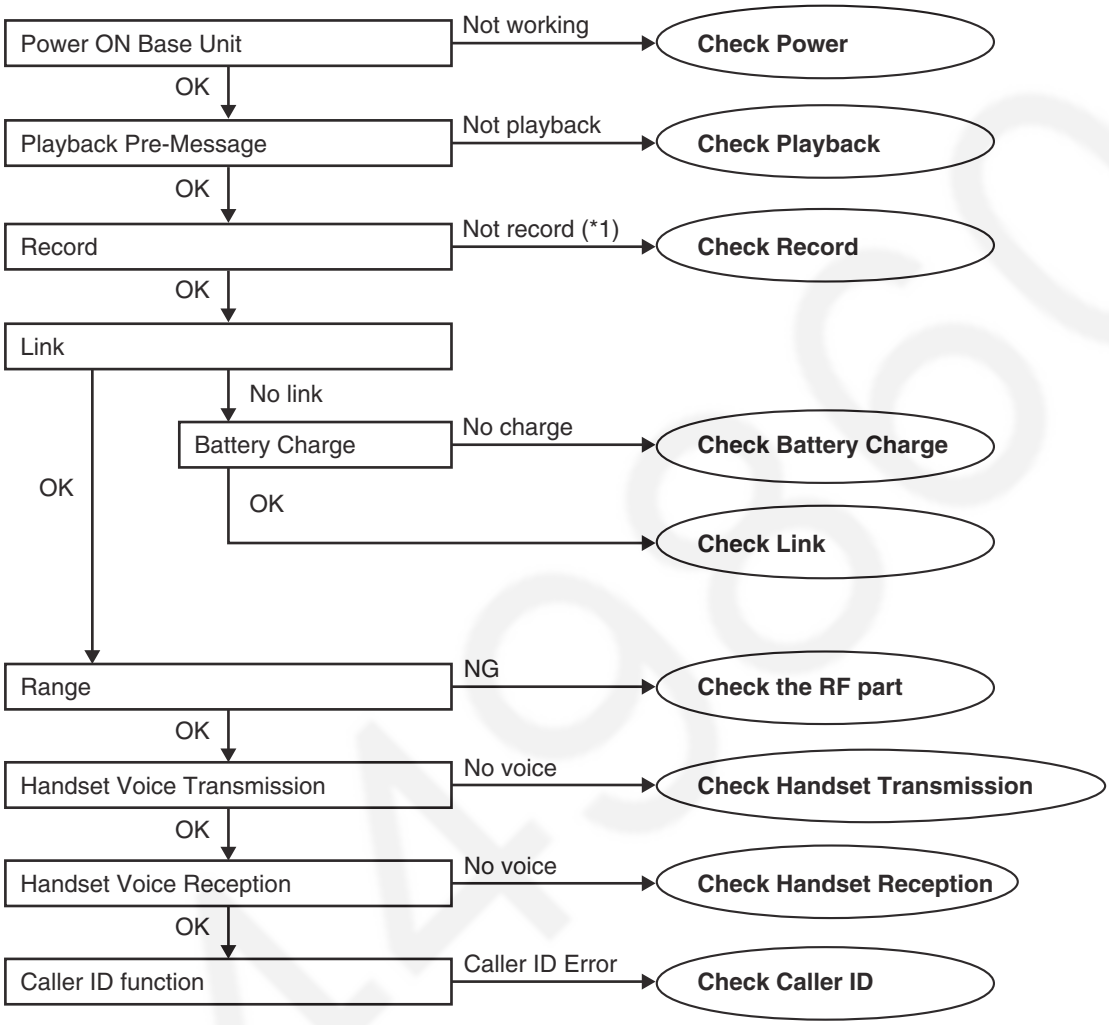

Cross Reference:

Check Power (P.32)
Check Playback (P.36)
Check Record (P.33)
Check Battery Charge (P.36)
Check Link (P.37)
Check the RF part (P.39)
Check Handset Transmission (P.44)
Check Handset Reception (P.44)
Check Caller ID (P.44)

Note:

(*1) When a user claims that the unit disconnects a call right after the greeting message and no incoming messages can be recorded, this symptom can not be reappeared with TEL simulator in the service center. In this case, try to change the Auto disconnect activation time and Vox level.

<How to change the Auto Disconnect activation time and VOX level> (P.34) item (A) and (B).

10.1.1. Check Power

10.1.1.1. Base Unit

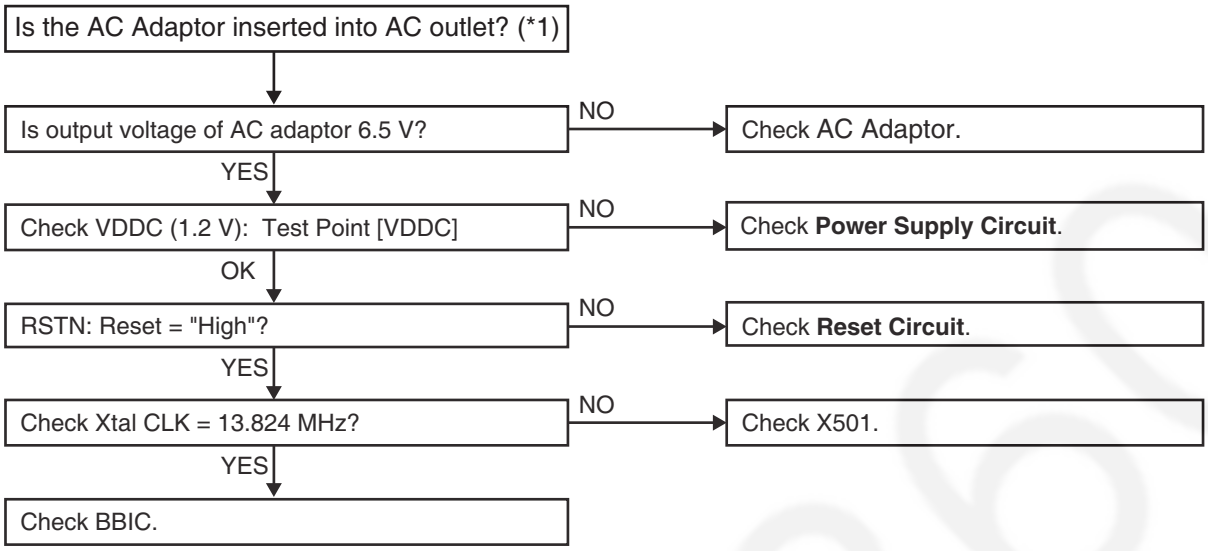

Cross Reference:

Power Supply Circuit/Reset Circuit (P.12)

Note:

BBIC is IC501.

(*1) Refer to **Specifications** (P.6) for part number and supply voltage of AC adaptor.

(*2) Refer to **Circuit Board (Base Unit_Main)** (P.73).

10.1.1.2. Handset

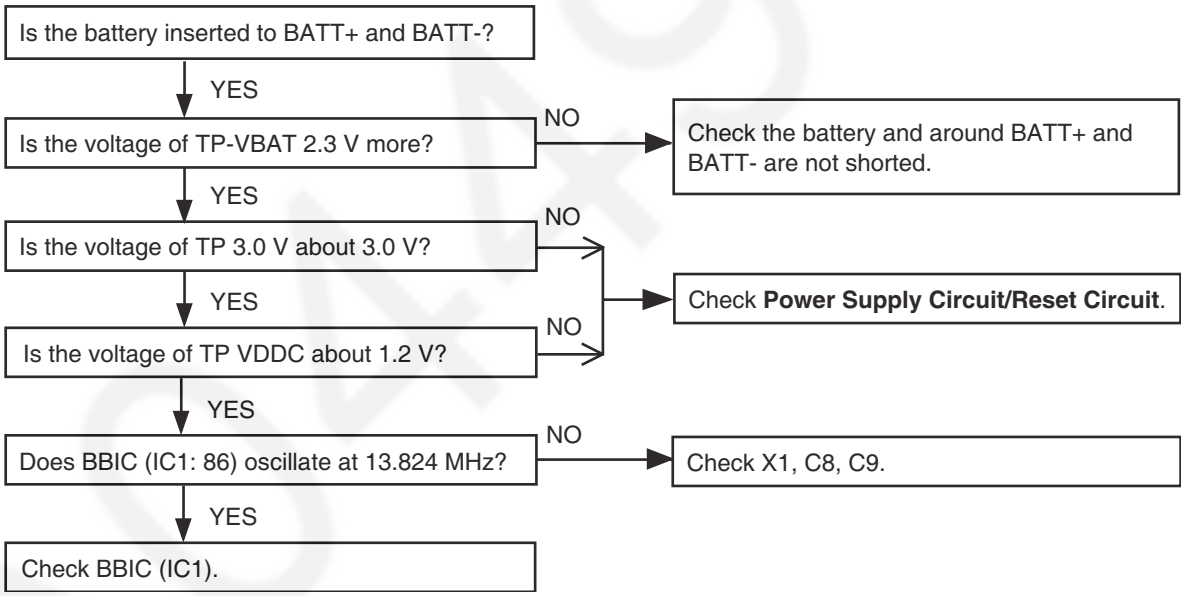

Cross Reference:

Power Supply Circuit/Reset Circuit (P.20)

10.1.2. Check Record

10.1.2.1. Base Unit

Not record Incoming Message

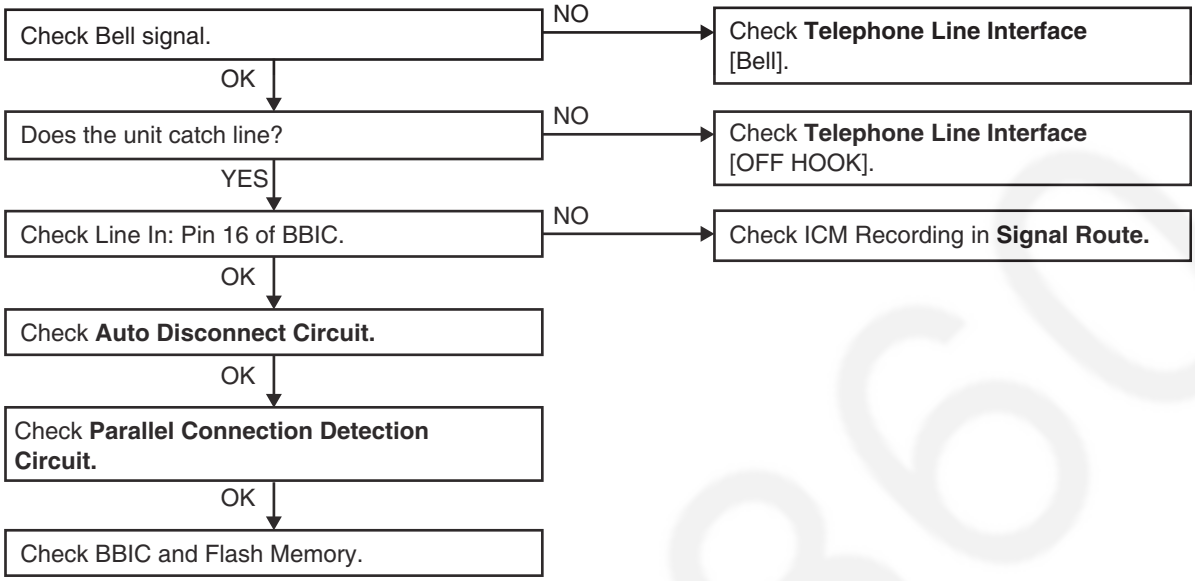

Cross Reference:

Signal Route (P.23)

Telephone Line Interface (P.14)

Parallel Connection Detect Circuit/Auto Disconnect Circuit (P.15)

Note:

Flash Memory is IC601.

BBIC is IC501.

A0449860

<How to change the Auto Disconnect activation time and VOX level>

A) Auto Disconnect activation time:

Some Telephone Company lines (fiber or cable) ON Hook and OFF Hook voltages are lower than conventional lines, which may cause a malfunction of Auto Disconnect detection. To solve this problem, try changing the Auto Disconnect activation through the procedures below.

1) Press "MENU " key at standby Mode and "#" key.

Note: The set must power on and be linked.

2) Press "9", "0", "0", "0"," ∗" .

LCD (H/S)

```
Service ready
:____
BACK
```

3) Press "7","3","1".

```
Service ready
:731_
CLEAR
```

4) Then enter the below last digit;

last digit	"0"	Auto disconnect & CPC : enable(*1) ・・・ [default]
	"1"	Auto disconnect : enable(*1) CPC : disable
	"2"	Auto disconnect & CPC : disable(*2)

Note:

(*1) Both Auto Disconnect and CPC don't detect for the first 2 seconds.

(*2) If the "Disable" is selected, even if the parallel-connected telephone is OFF HOOK, the line isn't disconnected.

5) Back to "standby" mode automatically after step 4).
You can hear beep sound which is a confirmation tone.

B) Vox level:

It makes easier to detect a small voice (caller) by raising the sensitivity of VOX level. Therefore, the recording of TAM is not turned off during a detection.

1) ~ 2) are same as (A).

3) Press "5","1","1".

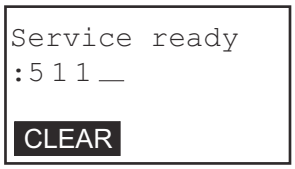

4) Then enter the below last digit;

last digit	"0"	default setting : normal
	"1"	6dB up

5) Back to "standby" mode automatically after step 4).
You can hear beep sound which is a confirmation tone.

A0449860

10.1.3. Check Playback

10.1.3.1. Base Unit

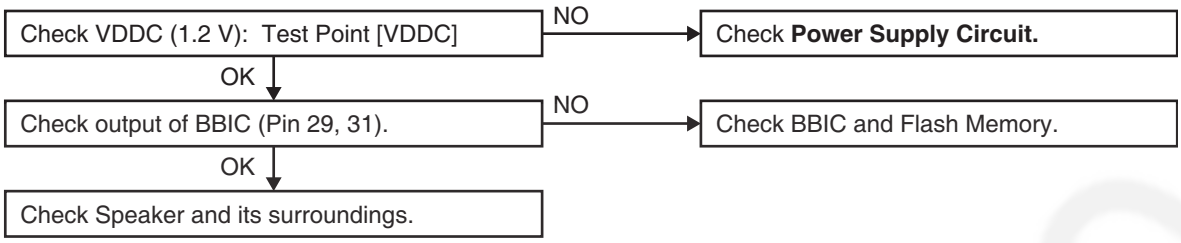

Cross Reference:
Power Supply Circuit/Reset Circuit (P.12)

Note:
Flash Memory is IC601.
BBIC is IC1.
(*1) Refer to **Circuit Board (Base Unit_Main)** (P.73).

10.1.4. Check Battery Charge

10.1.4.1. Base Unit

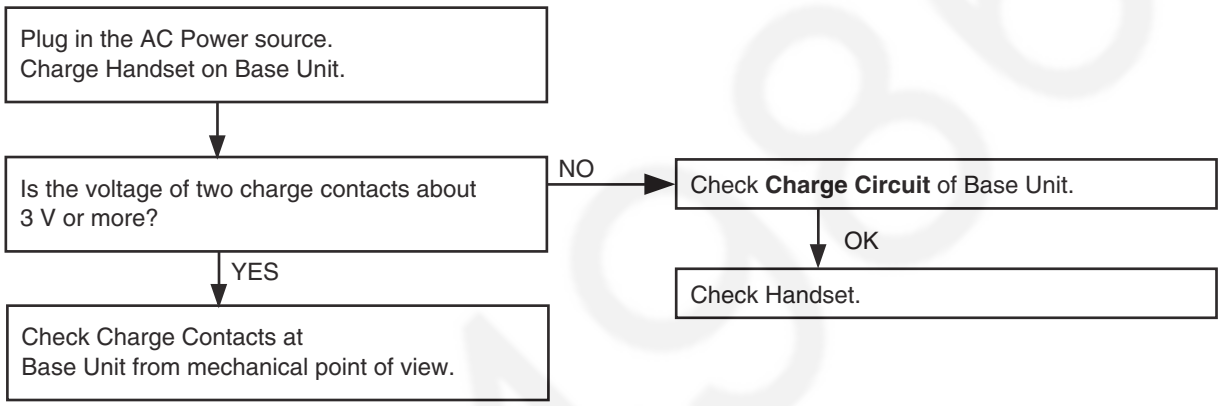

Cross Reference:
Charge Circuit (P.13)

10.1.4.2. Handset

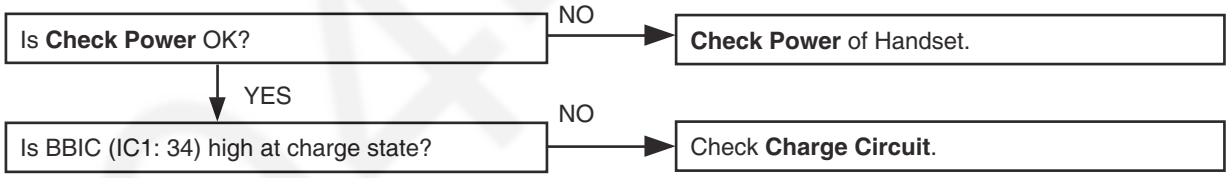

Cross Reference:
Check Power (P.32)
Charge Circuit (P.21)

10.1.4.3. Charger Unit

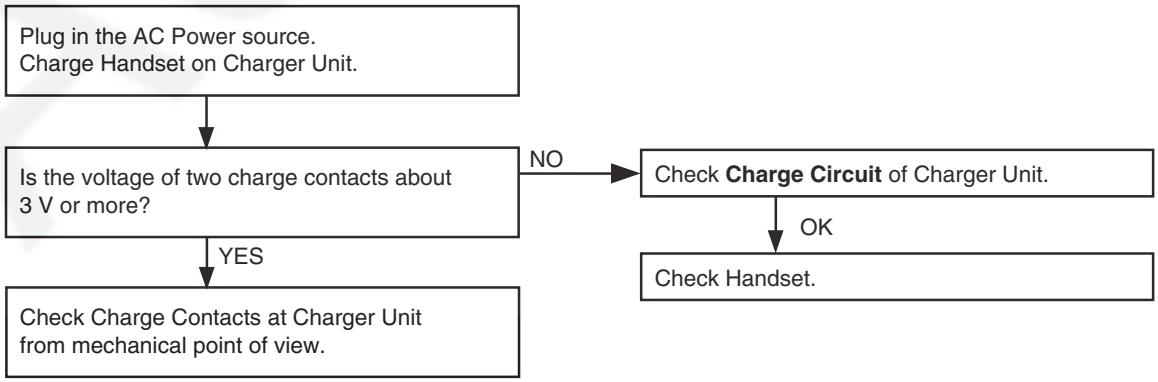

Cross Reference:
Charge Circuit (P.21)

10.1.5. Check Link

10.1.5.1. Base Unit

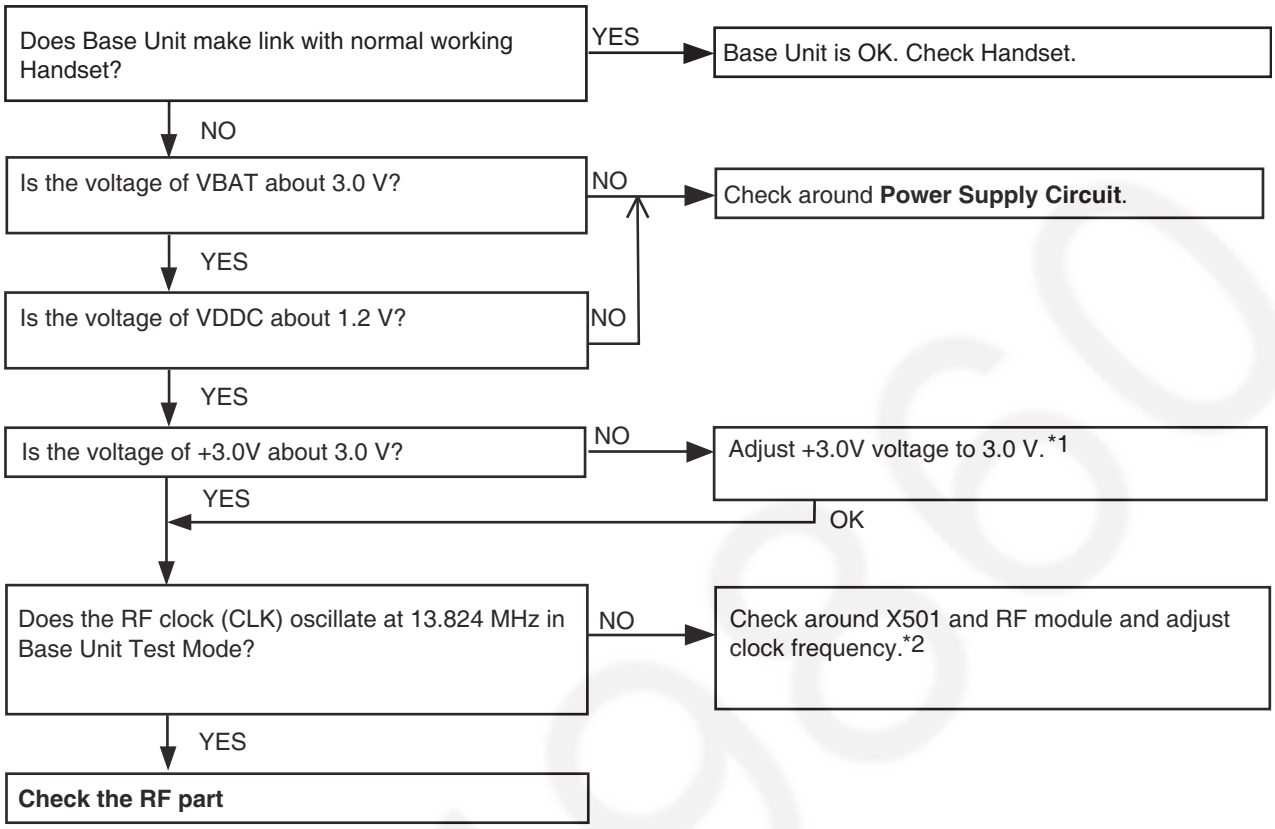

Cross Reference:

Power Supply Circuit/Reset Circuit (P.12)

Check the RF part (P.39)

Note:

*1 How to adjust +3.0V:

Execute the command "VDA"

Refer to **Things to Do after Replacing IC or X'tal** (P.56) for Base Unit.

*2 How to adjust the frequency of X501:

To see the frequency, execute the command “SFR“, then check the TP_CKM (IC501-57pin).

To adjust frequency, send command “SFR ␣○○␣○○“ until the frequency counter becomes13.824 MHZ±55HZ.

10.1.5.2. Handset

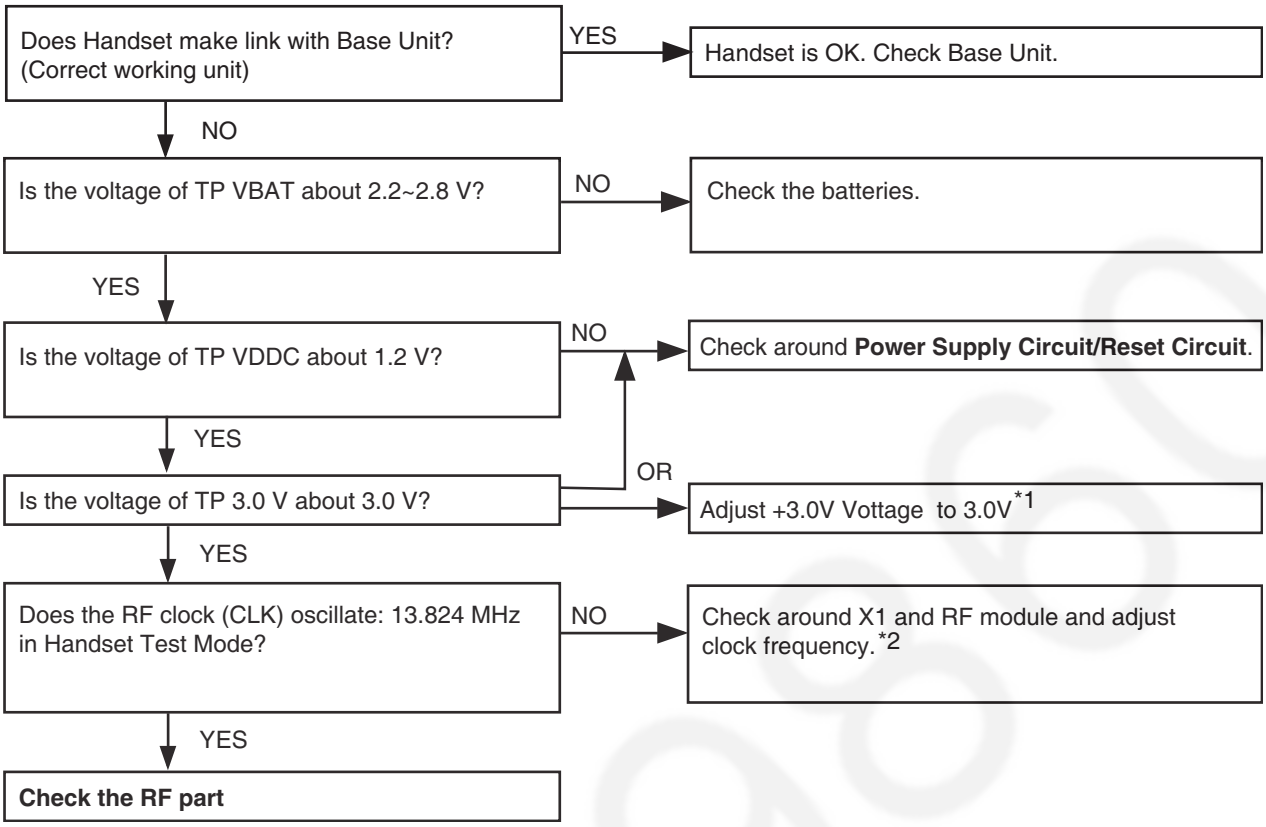

Cross Reference:

Power Supply Circuit/Reset Circuit (P.20)

Check the RF part (P.39)

Note:

*1 How to adjust +3.0V:

Execute the command "VDA"

Refer to **Things to Do after Replacing IC or X'tal** (P.57) for Handset.

*2 How to adjust the frequency of X1:

To see the frequency, execute the command “SFR“, then check the TP_CKM (IC1-57pin).

To adjust frequency, send command “SFR ␣○○␣○○“ until the frequency counter becomes13.824 MHz±55HZ.

10.1.6. Check the RF part

10.1.6.1. Finding out the Defective part

1. Prepare Regular HS(*1) and Regular BU(*2).
2. a. Re-register regular HS (Normal mode) to base unit (to be checked).
   If this operation fails in some ways, the base unit is defective.
   b. Re-register handset (to be checked) to regular BU (Normal mode).
   If this operation fails in some ways, the handset is defective.

After All the Checkings or Repairing

1. Re-register the checked handset to the checked base unit, and Regular HS to Regular BU.

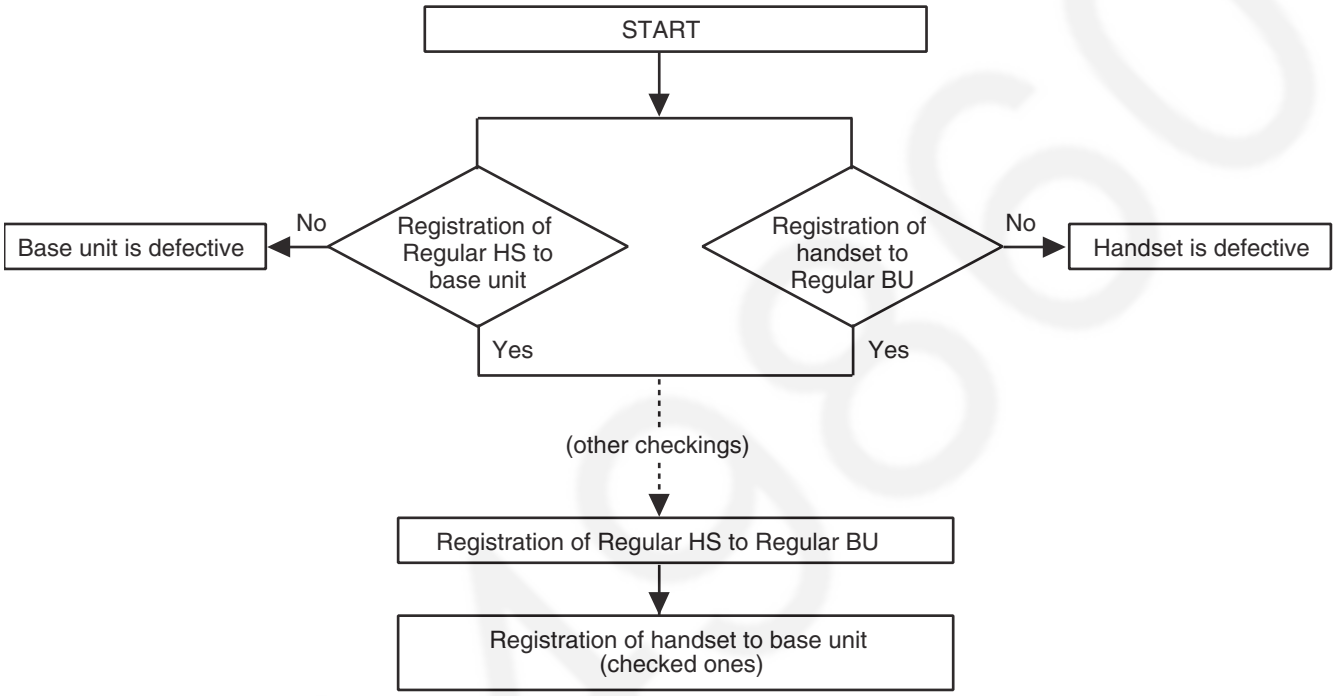

Note:

(*1) HS: Handset

(*2) BU: Base Unit

10.1.6.2. RF Check Flowchart

Each item (1 ~ 6) of RF Check Flowchart corresponds to **Check Table for RF part** (P.41).
Please refer to the each item.

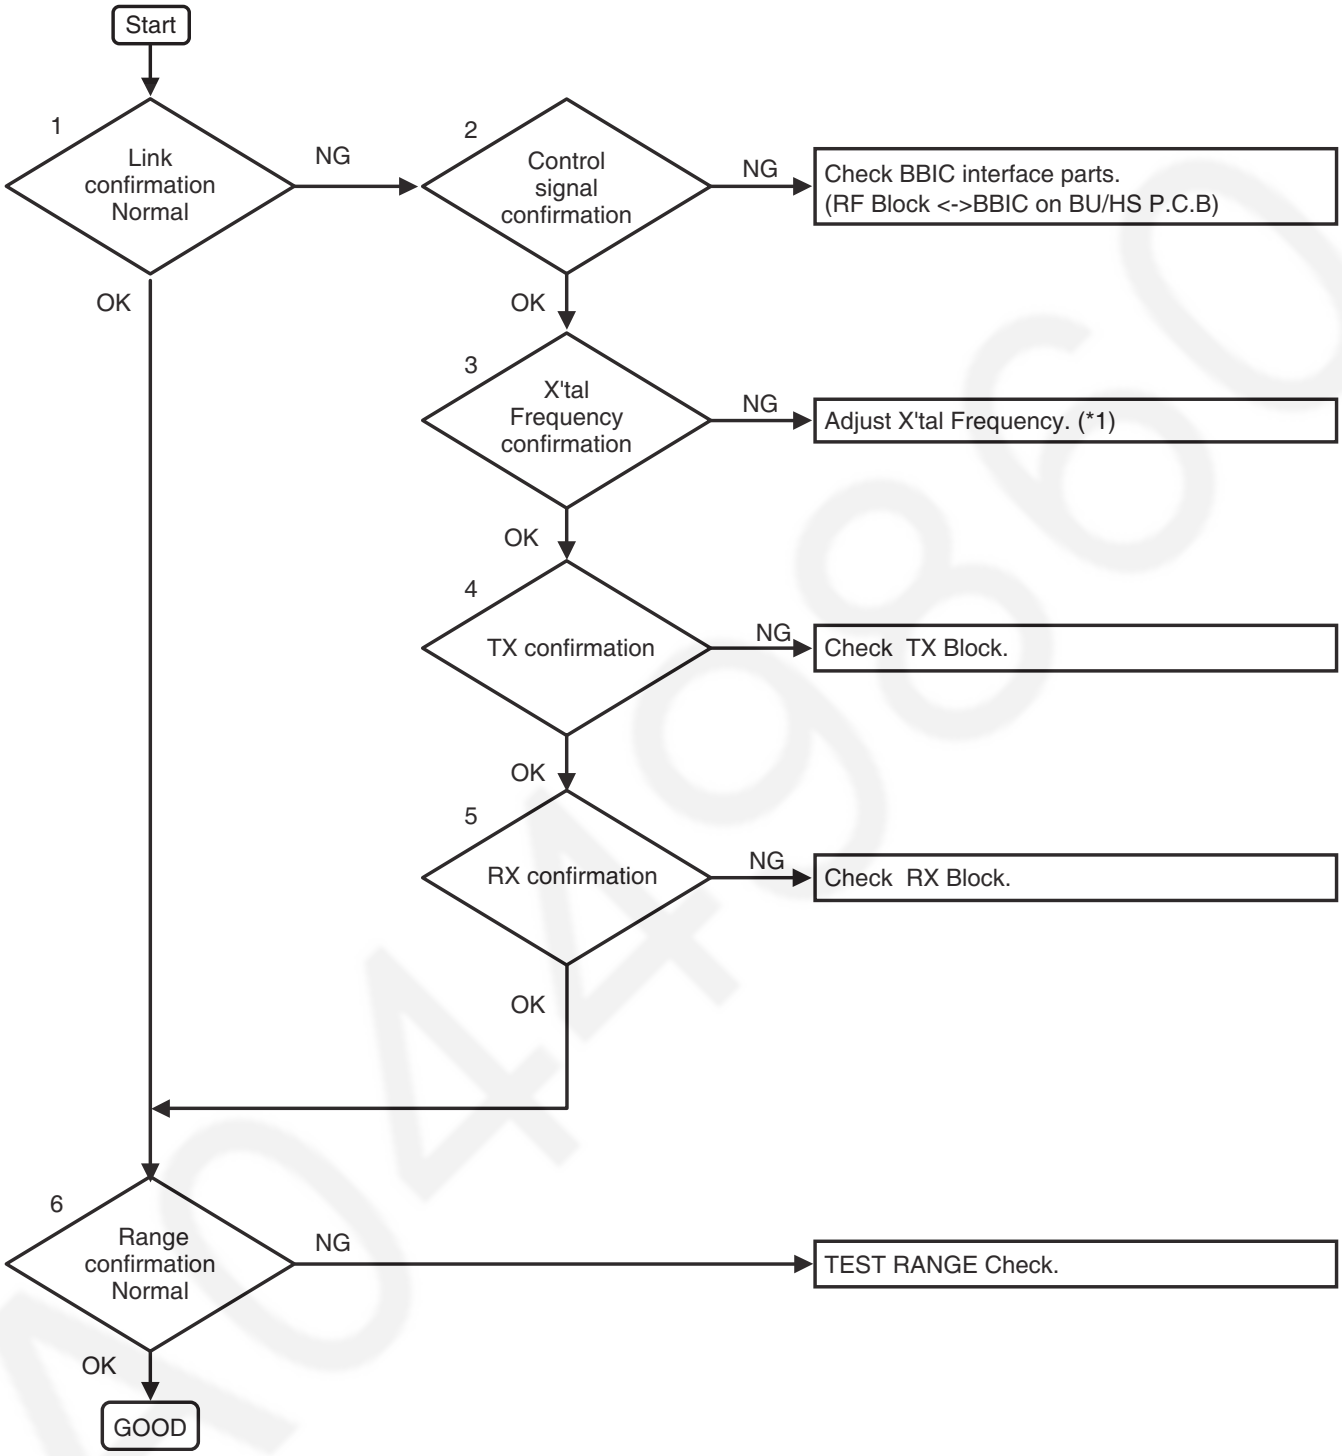

Note:
(*1) Refer to **Check Link** (P.37).

10.1.6.3. Check Table for RF part

No.	Item	BU (Base Unit) Check	HS (Handset) Check
1	Link Confirmation Normal HS, BU Mode [Normal Mode]	1. Register Regular HS to BU (to be checked). 2. Press [Talk] key of the Regular HS to establish link.	1. Register HS (to be checked) to Regular BU. 2. Press [Talk] key of the HS to establish link.
2	X'tal Frequency confirmation HS, BU Mode: [Adjustment]	Check X'tal Frequency. (13.824000 MHz ± 100 Hz)	Check X'tal Frequency. (13.824000 MHz ± 100 Hz)
3	TX confirmation Regular HS (BU) Mode: [Test RX Mode] BU (HS) Mode: [Test TX_Burst Mode]	1. Place Regular HS 15 cm away from a checked BU. 2. Confirm "TXDATA" waveform of BU (*1) and “RXDATA“ waveform of Regular HS by Digital Oscilloscope.	1. Place Regular BU 15 cm away from a checked HS. 2. Confirm "TXDATA" waveform of HS (*2) and "RXDATA" waveform of Regular BU by Digital Oscilloscope.
4	RX confirmation Regular HS (BU) Mode: [Test TX_Burst Mode] BU (HS) Mode: [Test RX Mode]	1. Place Regular HS 15 cm away from a checked BU. 2. Confirm "RXDATA" waveform of BU (*1) and “TXDATA“ waveform of Regular HS by Digital Oscilloscope.	1. Place Regular BU 15 cm away from a checked HS. 2. Confirm "RXDATA" waveform of HS (*2) and "TXDATA" waveform of Regular BU by Digital Oscilloscope.
5	Range Confirmation Normal HS, BU Mode: [Normal Mode]	1. Register Regular HS to BU (to be checked). 2. Press [Talk] key of the Regular HS to establish link. 3. Compare the range of the BU (being checked) with that of the Regular BU.	1. Register HS (to be checked) to Regular BU. 2. Press [Talk] key of the HS to establish link. 3. Compare the range of the HS (being checked) with that of the Regular HS.

Note:

(*1) **Adjustment Standard (Base Unit)** (P.53)

(*2) **Adjustment Standard (Handset)** (P.55)

A04490

10.1.6.4. TEST RANGE Check

Circuit block which range is defective can be found by the following check.

Item	BU (Base Unit) Check	HS (Handset) Check
Range Confirmation TX TEST (TX Power check) HS, BU setting Checked unit: Low TX power (*1) Regular unit: High TX power (*1)	1. Register Regular HS to BU (to be checked). 2. Set TX Power of the BU and the Regular HS according to CHART1. 3. At distance of about 20m between HS and BU, Link OK = TX Power of the BU is OK. No Link = TX Power of the BU is NG.	1. Register HS (to be checked) to Regular BU. 2. Set TX Power of the HS and the Regular BU according to CHART1. 3. At distance of about 20m between HS and BU, Link OK = TX Power of the HS is OK. No Link = TX Power of the HS is NG.
Range Confirmation RX TEST (RX sensitivity check) HS, BU setting Checked unit: High TX power (*1) Regular unit: Low TX power (*1)	1. Register Regular HS to BU (to be checked). 2. Set TX Power of the BU and the Regular HS according to CHART1. 3. At distance of about 20m between HS and BU, Link OK= RX Sensitivity of the BU is OK. No Link = RX Sensitivity of the BU is NG.	1. Register HS (to be checked) to Regular BU. 2. Set TX Power of the Checking HS and the Regular BU according to CHART1. 3. At distance of about 20m between HS and BU, Link OK= RX Sensitivity of the HS is OK. No Link = RX Sensitivity of the HS is NG

CHART1: Setting of TX Power and RX Sensitivity in Range Confirmation TX TEST, RX TEST

	BU (to be checked)	Regular_HS
	TX Power	TX Power
BU (Base Unit) TX Power Check	Low	High
BU (Base Unit) RX Sensitivity Check	High	**Low**

	HS (to be checked)	Regular_BU
	TX Power	TX Power
HS (Handset) TX Power Check	Low	High
HS (Handset) RX Sensitivity Check	High	**Low**

Note:

(*1) Refer to **Commands** (P.52).

10.1.7. Registering a Handset to a Base Unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.

1 **Handset:**
【MENU】 → 【#】【1】【3】【0】

2 **Base unit:**
Press and hold **【LOCATOR】** for 5 seconds until the registration tone sounds.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

3 **Handset:**
Press **【OK】**, then wait until a long beep sounds.

4 **【OFF】**

Note:

- While registering, **"Base in registering"** is displayed on all registered handsets.
- When you purchase an additional handset, refer to the additional handset's installation manual for registration.

10.1.8. Deregistering a Handset

A handset can cancel its own registration (or the registration of another handset) that is stored to the base unit. This allows the handset to end its wireless connection with the system.

1 **【MENU】 → 【#】【1】【3】【1】**
- All handsets registered to the base unit are displayed.

2 **【▼】/【▲】**: Select the handset you want to cancel. → **【SELECT】**

3 **【▼】/【▲】**: **"Yes"** → **【SELECT】**

4 **【OFF】**

10.1.9. Deregistering All Handsets by the Base Unit

Base unit:

1 Press and hold **【LOCATOR/INTERCOM】** again until a long beep sounds.

Important:
When deregistering all handsets by the base unit, the registration information of all handsets in the base unit is erased.
However the registration information in each handset will still remain.

10.1.10. Check Handset Transmission

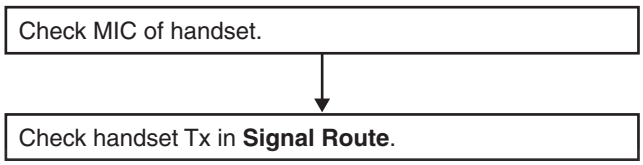

Cross Reference:
Signal Route (P.23)

10.1.11. Check Handset Reception

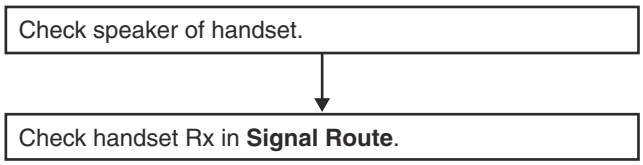

Cross Reference:
Signal Route (P.23)

Note:
When checking the RF part, Refer to **Check the RF part** (P.39).

10.1.12. Check Caller ID

BASE UNIT

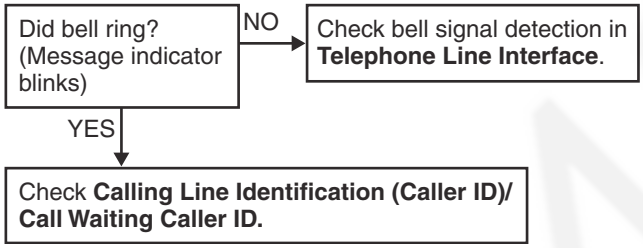

Cross Reference:
Telephone Line Interface (P.14)
Calling Line Identification (Caller ID)/Call Waiting Caller ID (P.16)

Note:
- Make sure the format of the Caller ID service of the Telephone company that the customer subscribes to.
- It is also recommended to confirm that the customer is really a subscriber of the service.

AO4980

11 Disassembly and Assembly Instructions

11.1. Disassembly Instructions

11.1.1. Base Unit

① **Remove the 5 screws to remove the cabinet cover.**

② **Remove the solders.**

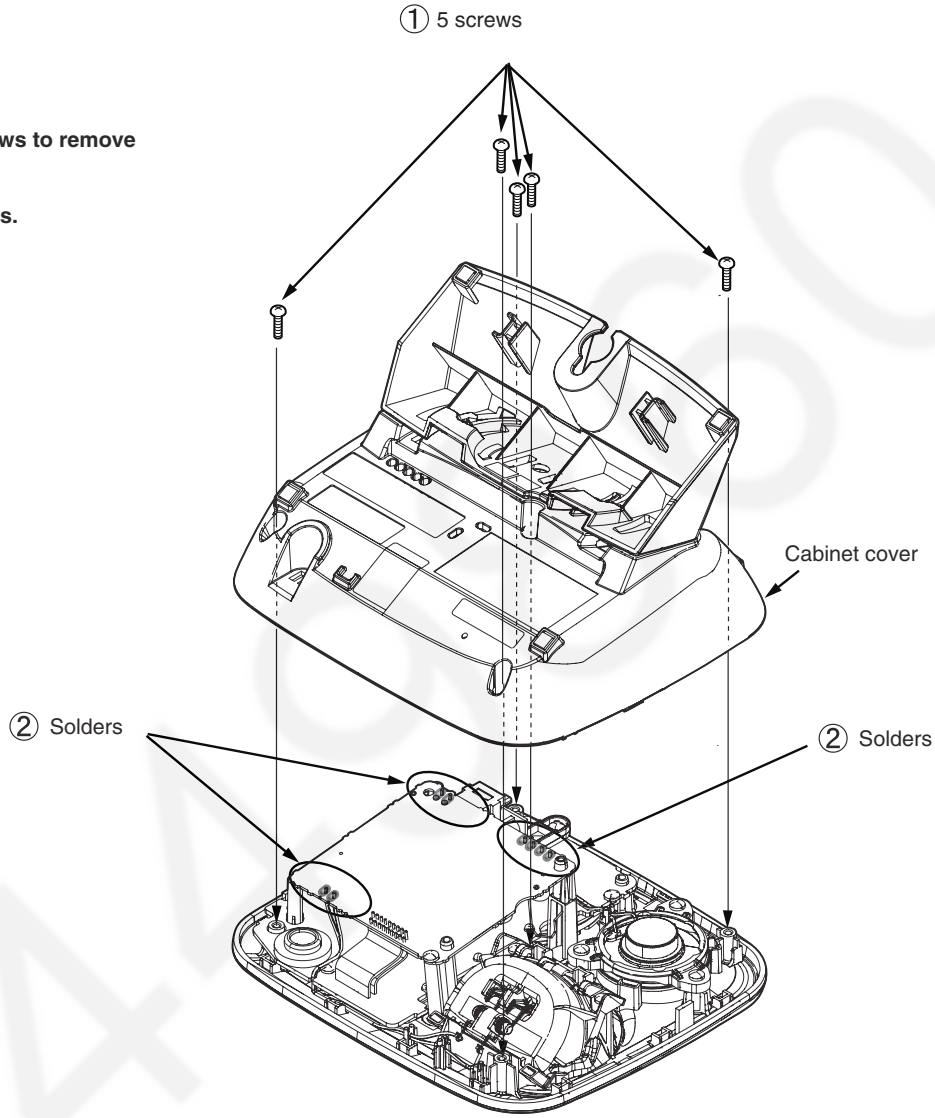

③ **Remove the screw.**

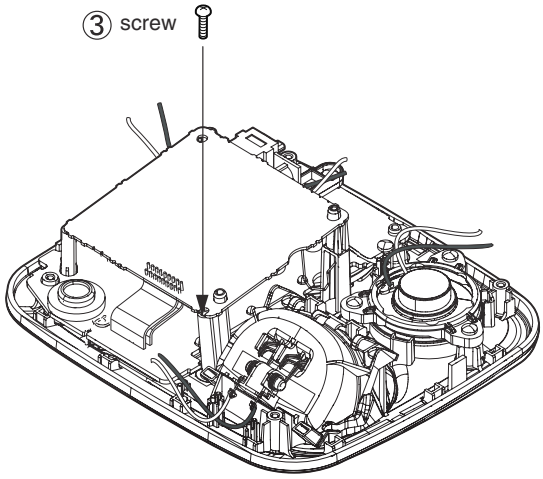

④ **Remove the parallel wire to remove the main P.C. board.**

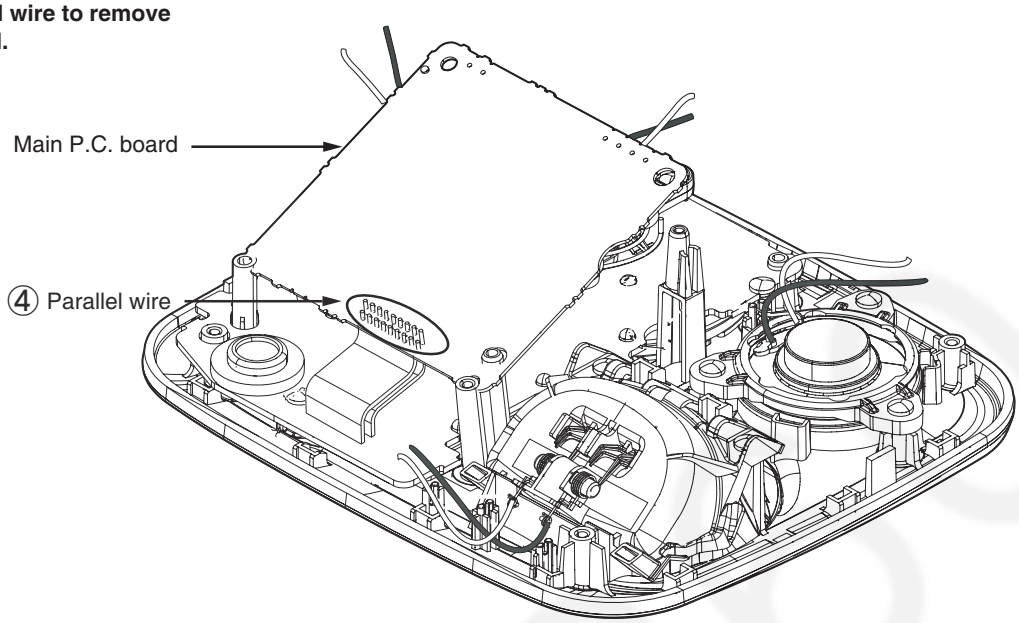

⑤ **Remove the 2 screws to remove the jack holder.**

⑥ **Remove the 4 screws to remove the oprational P.C. board.**

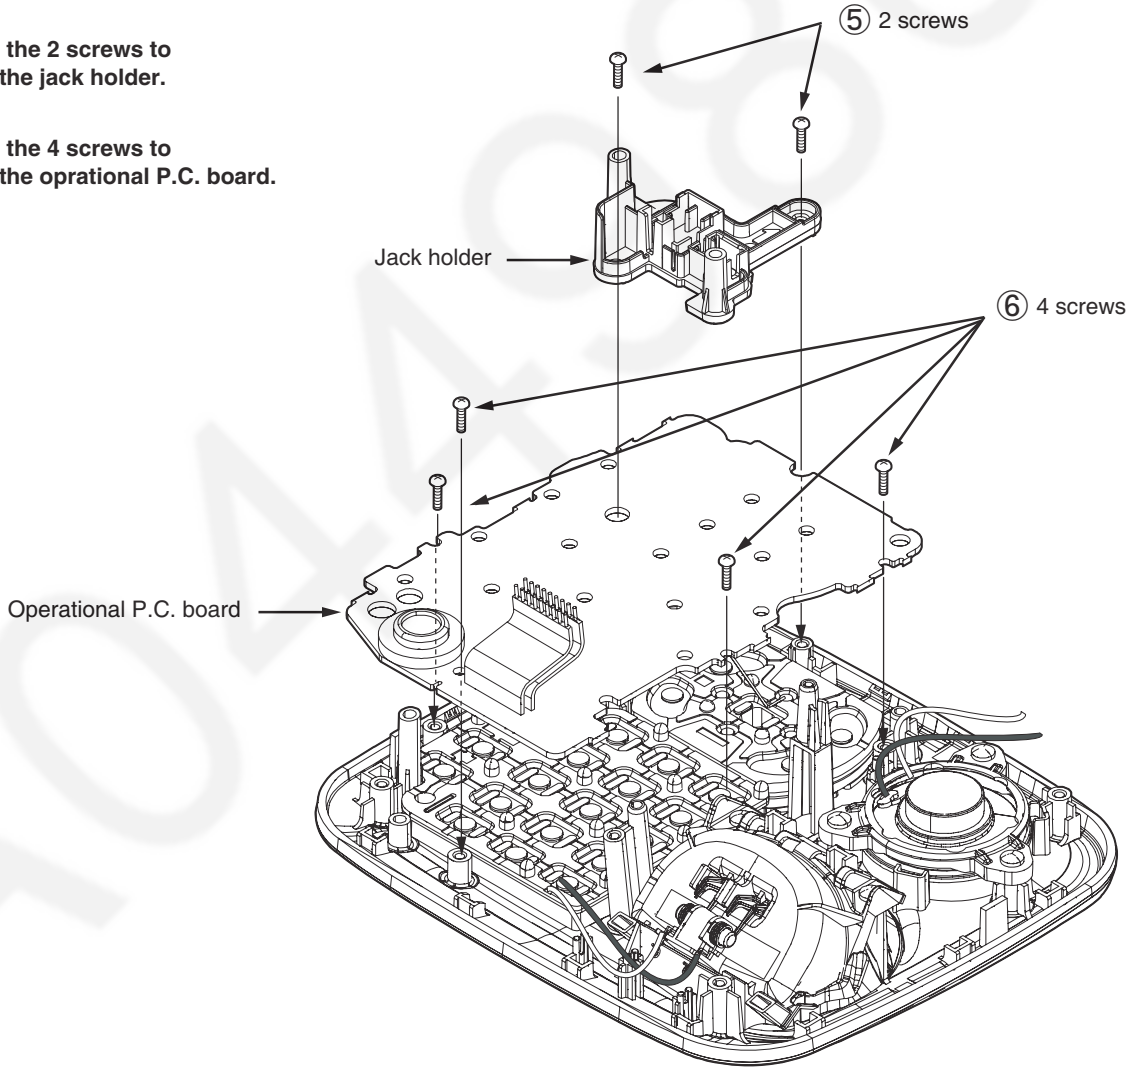

11.1.2. Handset

① **Remove the 2 screws.**

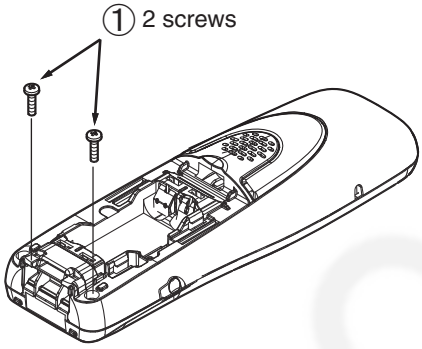

② **Insert a plastic card. (Ex. Used SIM card etc.) between the cabinet body and the cabinet cover, then pull it along the gap to open the cabinet.**

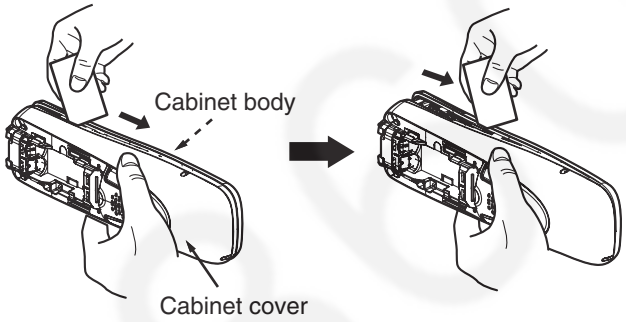

③ **Likewise, open the other side of the cabinet.**

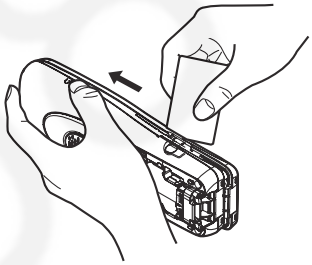

④ **Remove the cabinet cover by pushing it upward.**

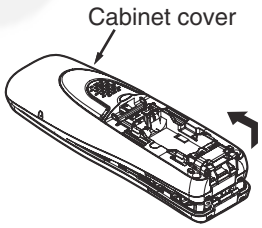

⑤ **Remove the solders and tape.**

⑥ **Remove the 2 screws to remove the 2 charge terminals.**

⑦ **Remove the screw to remove the main P. C. board.**

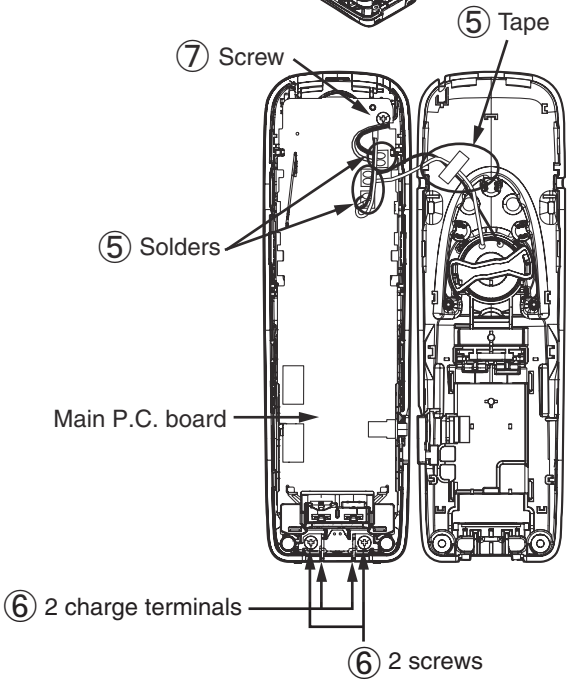

11.1.3. Charger Unit

① **Remove the screw to remove the cabinet cover.**

② **Remove the solders to remove the 2 charge terminals.**

③ **Remove the screw to remove the main P.C. board.**

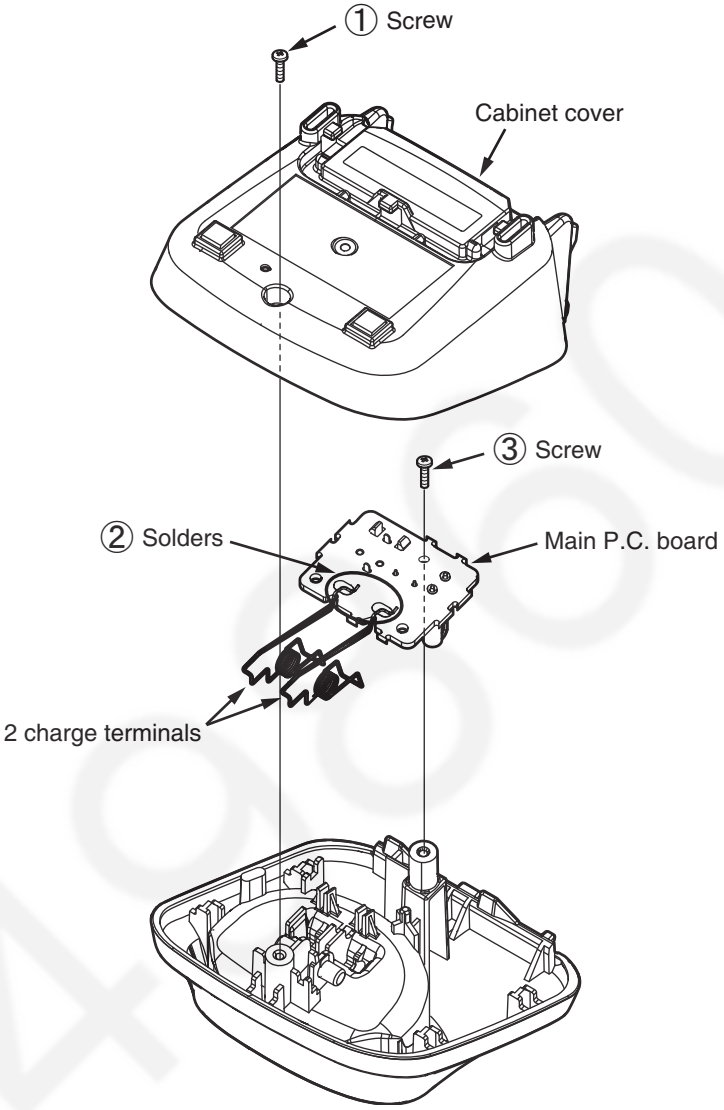

A0440860

11.2. How to Replace the Handset LCD

Note:

The illustrations are simplified in this page.
They may differ from the actual product.

①

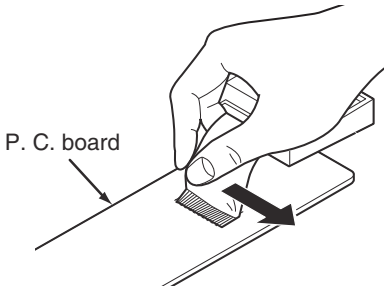

Peel off the FFC (Flexible Flat Cable) from the LCD, in the direction of the arrow. Take care to ensure that the foil on the P.C. board is not damaged.

②

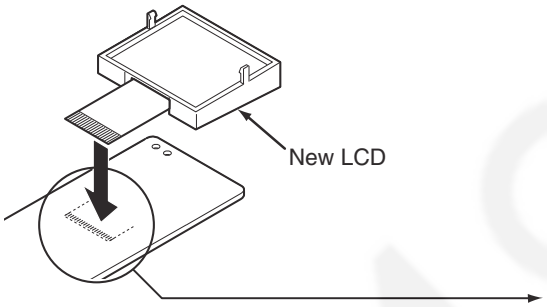

Fit the heatseal of a new LCD.

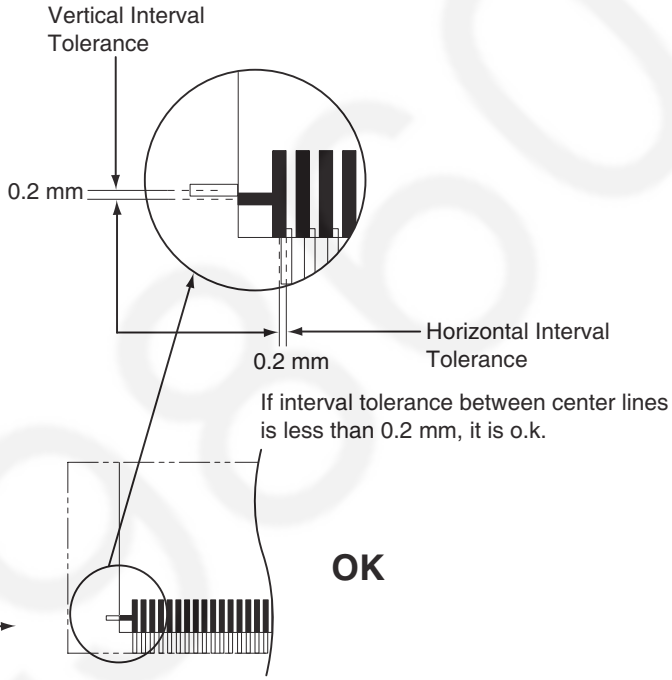

If interval tolerance between center lines is less than 0.2 mm, it is o.k.

OK

③

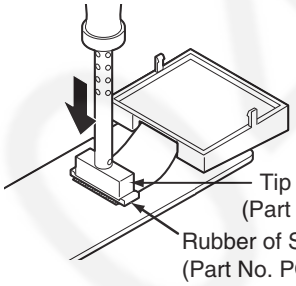

Heatweld with the tip of the soldering iron about 5 to 8 seconds
(in case of 60W soldering iron).

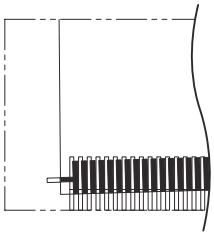

NG

(Inclined)

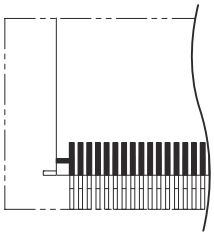

NG

(Vertical interval tolerance is more than 0.2 mm.)

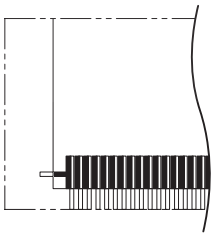

NG

(Horizontal interval tolerance is more than 0.2 mm.)

12 Measurements and Adjustments

This chapter explains the measuring equipment, the JIG connection, and the PC setting method necessary for the measurement in **Troubleshooting Guide** (P.31)

12.1. Equipment Required

- Digital multi-meter (DMM): it must be able to measure voltage and current.
- Oscilloscope.
- Frequency counter: It must be precise enough to measure intervals of 1 Hz (precision; ±4 ppm)
  Hewlett Packard, 53131A is recommended.
- DECT tester: Rohde & Schwarz, CMD 60 is recommended.
  This equipment may be useful in order to precisely adjust like a mass production.

12.2. The Setting Method of JIG

<Preparation>

- Serial JIG cable: PQZZ1CD300E*
- PC which runs in DOS mode
- **Batch file CD-ROM** for setting: PNZZTG6541BX

Note:

*: If you have the JIG Cable for TCD500 series (PQZZ1CD505E), change the following values of resistance. Then you can use it as a JIG Cable for both TCD300 and TCD500 series. (It is an upper compatible JIG Cable.)

Resistor	Old value (kΩ)	New value (kΩ)
R2	22	3.3
R3	22	3.3
R4	22	4.7
R7	4.7	10

12.2.1. Connections (Base Unit)

① Connect the AC adaptor.
② Connect the JIG Cable GND (black).
③ Connect the JIG Cable RX (red) and TX (yellow).

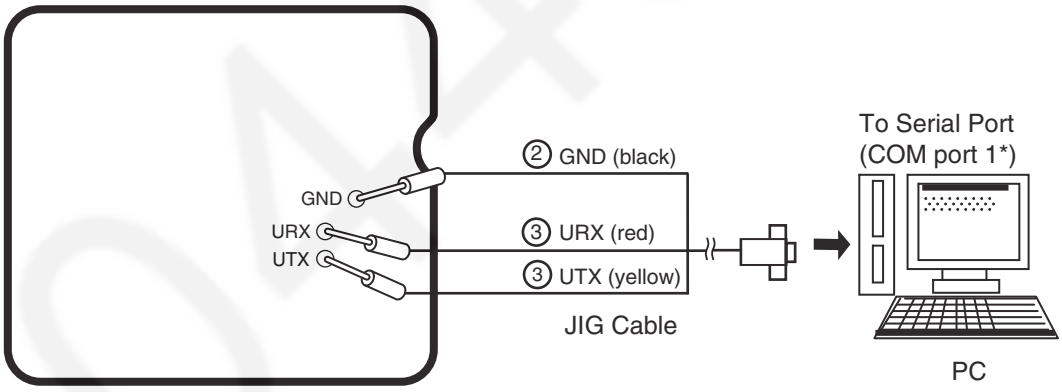

Base unit P. C. board

Note:

*: COM port names may vary depending on what your PC calls it.

12.2.2. Connections (Handset)

①Connect the DC Power or Battery to BATT+ and BATT-.

②Connect the JIG cable GND (black) to GND.

③Connect the JIG cable UTX (yellow) to UTX and URX (red) to URX.

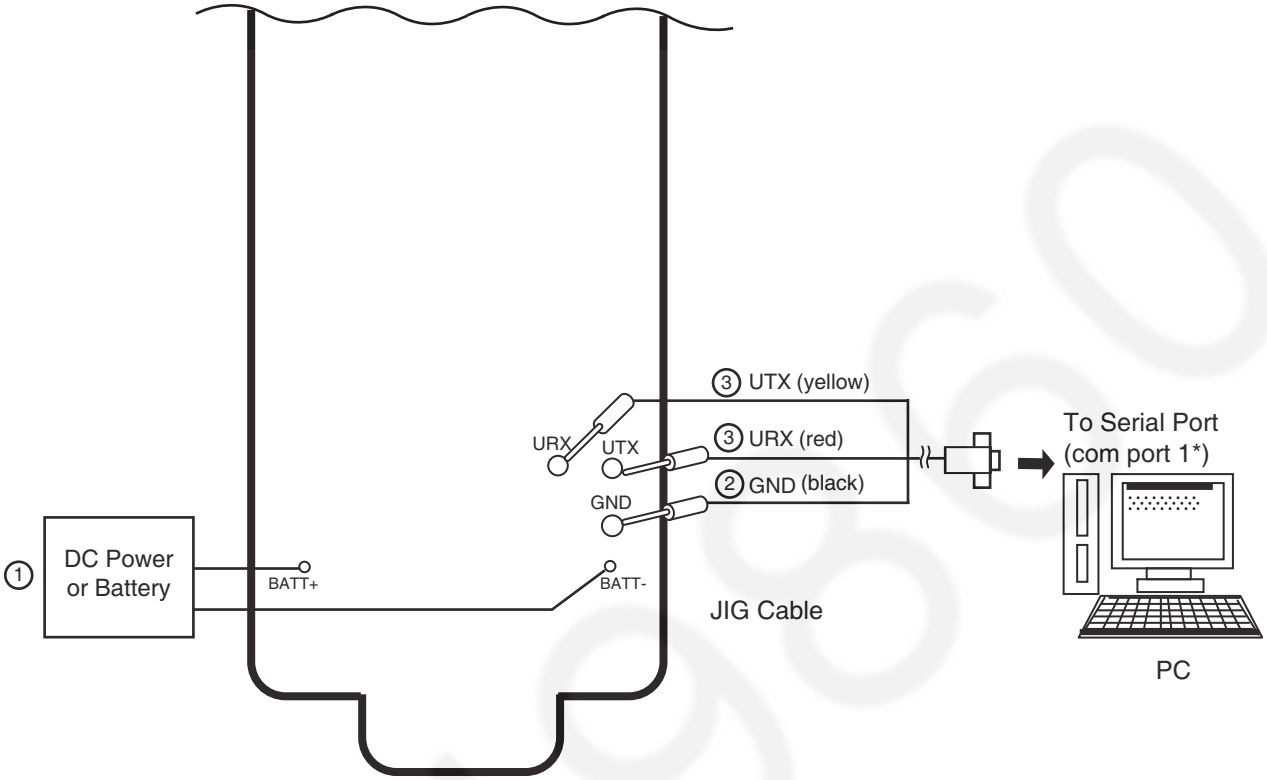

Handset P. C. board

Note:

*: COM port names may vary depending on what your PC calls it.

A04g60

12.2.3. How to install Batch file into P.C.

1. Insert the Batch file CD-ROM into CD-ROM drive and copy PNZZTG**** folder to your PC (example: D drive).

2. Open an MS-DOS mode window.

<Example for Windows>

On your computer, click **[Start]**, select **Programs** (**All Programs** for Windows XP/Windows Server 2003), then click
MS-DOS Prompt. (for Windows 95/Windows 98)
Or
Accessories-MS-DOS Prompt. (for Windows Me)
Or
Command Prompt. (for Windows NT 4.0)
Or
Accessories-Command Prompt.
(for Windows 2000/Windows XP/Windows Server 2003)

3. At the DOS prompt, type "**D:**" (for example) to select the drive, then press the **Enter** key.

4. Type "**CD ¥PNZZTG****"**, then press the **Enter** key.

5. Type "**SET_COM=X**", then press the **Enter** key
(**X**: COM port number used for the serial connection on your PC).

6. Type "**READID**", then press the **Enter** key.
- If any error messages appear, change the port number or check the cable connection.
- If any value appear, go to next step.

7. Type "**DOSKEY**", then press the **Enter** key.

<Example>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
00 52 4F A8 A8
D: ¥PNZZTG****>DOSKEY
D: ¥PNZZTG****>
```

<Example: error happens>

```
C: ¥Documents and Settings>D:
D: ¥>CD ¥PNZZTG****
D: ¥PNZZTG**** >SET_COM=X
D: ¥PNZZTG****>READID
   CreateFile error
ERROR 10: Can't open serial port
D: ¥PNZZTG ****>
```

Note:
- "*****" varies depending on the country or models.

12.2.4. Commands

See the table below for frequently used commands.

Command name	Function	Example
rdeeprom	Read the data of EEPROM	Type "rdeeprom 00 00 FF", and the data from address "00 00" to "FF" is read out.
readid	Read ID (RFPI)	Type "readid", and the registered ID is read out.
writeid	Write ID (RFPI)	Type "writeid 00 18 E0 0E 98", and the ID "0018 E0 0E 98" is written.
hookoff	Off-hook mode on Base	Type "hookoff".
hookon	On-hook mode on Base	Type "hookon".
getchk	Read checksum	Type "getchk".
wreeprom	Write the data of EEPROM	Type "wreeprom 01 23 45". "01 23" is address and "45" is data to be written.

12.3. Adjustment Standard (Base Unit)

When connecting the simulator equipment for checking, please refer to below.

12.3.1. Bottom View

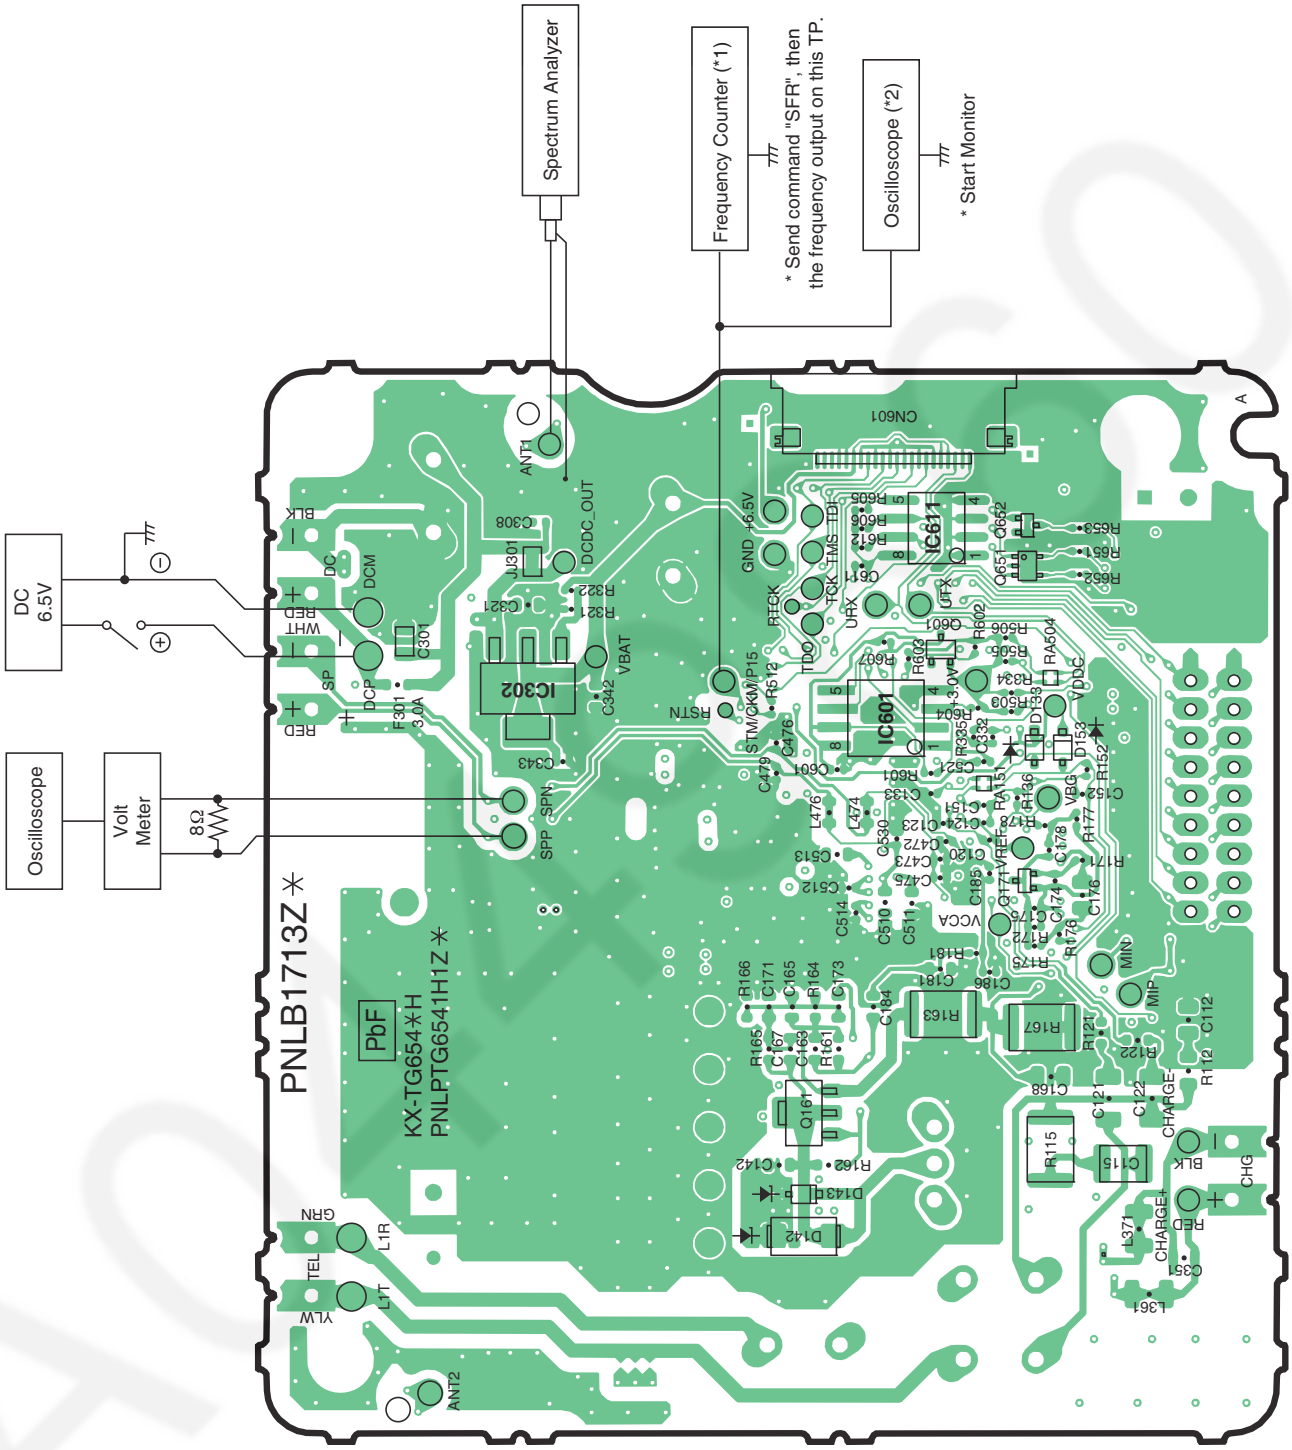

Note:

(*1) is referred to No.2 of Check **Check Table for RF part** (P.41)

(*2) is referred to **Power Supply Circuit/Reset Circuit** (P.12)

12.4. Adjustment Standard (Charger Unit)

When connecting the simulator equipment for checking, please refer to below.

12.4.1. Bottom View

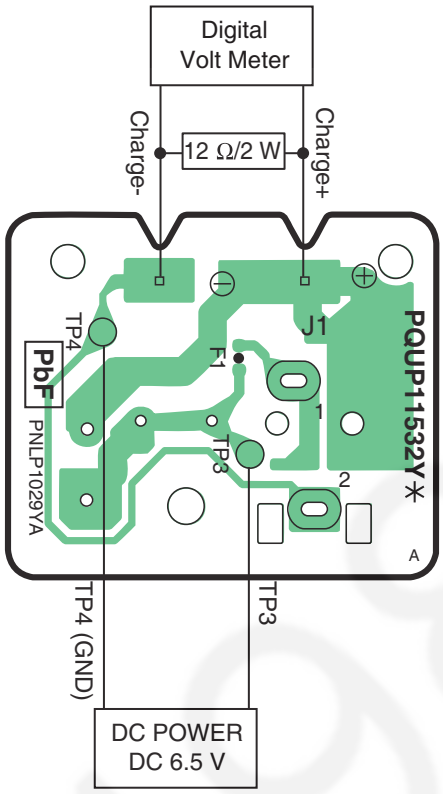

A0449860

12.5. Adjustment Standard (Handset)

When connecting the simulator equipment for checking, please refer to below.

12.5.1. Component View

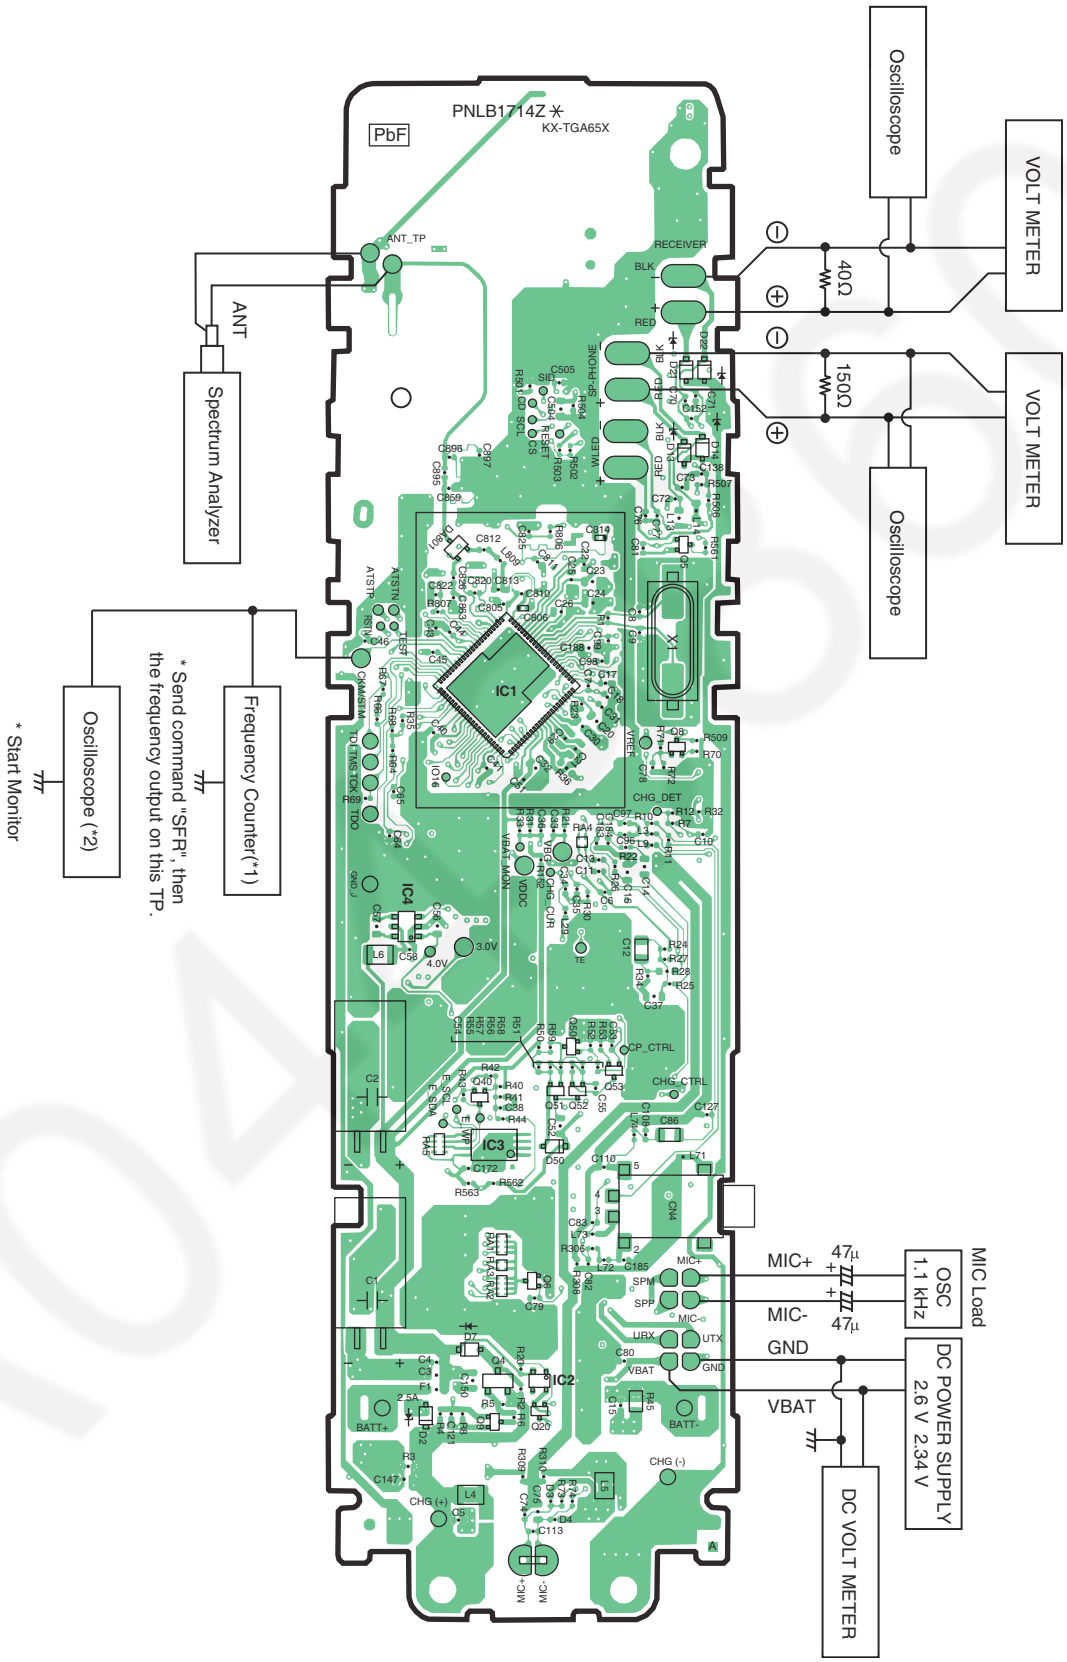

Note:

(*1) is referred to No.2 of Check **Check Table for RF part** (P.41)

(*2) is referred to **Power Supply Circuit/Reset Circuit** (P.20)

12.6. Things to Do after Replacing IC or X'tal

If repairing or replacing EEPROM and X'tal, it is necessary to download the required data such as Programming data or adjustment data, etc. in memory.
The set doesn't operate if it is not executed.

12.6.1. How to download the data

12.6.1.1. Base Unit

First, operate the PC setting according to **The Setting Method of JIG** (P.50).
Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
EEPROM (IC611)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	1) Change the address “0001” of EEPROM to “55” to download the data. 2) Default batch file: Execute the command “default.bat”. 3) Country version batch file: Execute the command “TG6541USWWrevXXX_YYY.bat”. (*1) 4) Clock adjustment
X'tal (X1)	System clock	Clock adjustment data is in EEPROM, adjust the data again after replacing it. 1) Apply 6.5V between DCP ad DCM with DC power. 2) Input Command " sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(13.824 MHz ± 55 Hz). 4) If the frequency is not 13.824 MHz ± 55 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 13.824000 MHz ± 15 Hz.

Note:

(*1) XXX_YYY: revision number, WW: destination code
“XXX_YYY” vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.50).

12.6.1.2. Handset

First, operate the PC setting according to **The Setting Method of JIG** (P.50).
Then download the appropriate data according to the following procedures.

Items		How to download/Required adjustment
EEPROM (IC3)	Adjusted parameter data is stored in memory. (country version batch file, default batch file, etc.)	1) Default batch file: Execute the command “default.bat”. 2) Default batch file (remaining): Execute the command “TGA650USDEFrevXXX_YYY.bat”. (*2) 3) Country version batch file: Execute the command “TGA650USWWrevXXX_YYY.bat”. (*2) 4) Clock adjustment 5) 2.35 V setting and battery low detection
X'tal (X1)	System clock	1) Apply 2.6V between BATT+ and BATT- with DC power. 2) Input Command " sendchar sfr", then you can confirm the current value. 3) Check X'tal Frequency.(13.824 MHz ± 55 Hz). 4) If the frequency is not 13.824 MHz ± 55 Hz, adjust the frequency of CLK executing the command "sendchar sfr xx xx (where xx is the value)" so that the reading of the frequency counter is 13.824000 MHz ± 5 Hz.

Note:

(*2) XXX_YYY: revision number, WW: destination code
“XXX_YYY” vary depending on the country version. You can find them in the batch file, PNZZ- mentioned in **The Setting Method of JIG** (P.50).

A0449BD

12.7. Frequency Table

	Ch. (hex)	TX/RX Frequency (MHz)
Channel 0	00	1928.448
Channel 1	01	1926.720
Channel 2	02	1924.992
Channel 3	03	1923.264
Channel 4	04	1921.536

A0449860

13 Miscellaneous

13.1. How to Replace the LLP (Leadless Leadframe Package) IC

Note:
This description is only applied on the model with Shield case.

13.1.1. Preparation

- PbF (: Pb free) Solder
- Soldering Iron
  Tip Temperature of 700 °F ± 20 °F (370 °C ± 10 °C)
  Note:
  We recommend a 30 to 40 Watt soldering iron. An expert may be able to use a 60 to 80 Watt iron where someone with less experience could overheat and damage the PCB foil.
- Hot Air Desoldering Tool
  Temperature: 608 °F ± 68 °F (320 °C ± 20 °C)

13.1.2. Caution

- To replace the IC efficiently, choose the right sized nozzle of the hot air desoldering tool that matches the IC package.
- Be careful about the temperature of the hot air desoldering tool not to damage the PCB and/or IC.

13.1.3. How to Remove the IC

1. Heat the IC with a hot air desoldering tool through the P.C.Board.

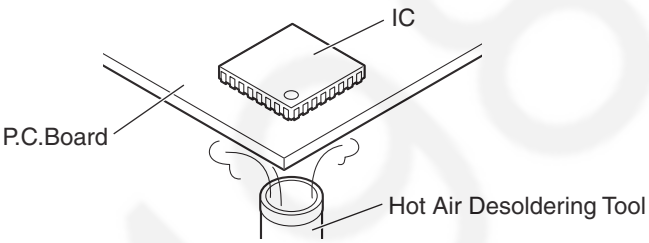

2. Pick up the IC with tweezers, etc. when the solder is melted completely.
   Note:
   - Be careful not to touch the peripheral parts with tweezers, etc. They are unstable.

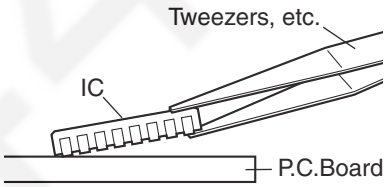

When it is hard to melt the solder completely, heat it with a hot air desoldering tool through the IC besides through the P.C.Board.

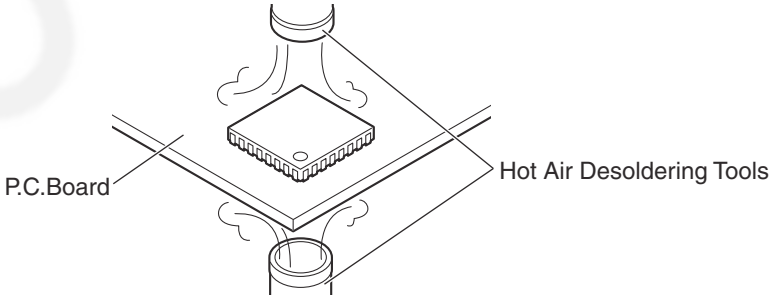

3. After removing the IC, clean the P.C.Board of residual solder.

13.1.4. How to Install the IC

1. Place the solder a little on the land where the radiation GND pad on IC bottom is to be attached.

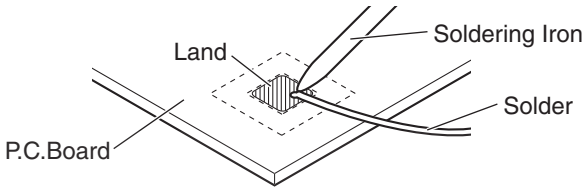

2. Place the solder a little on the land where IC pins are to be attached, then place the IC.
   Note:
   • When placing the IC, the positioning should be done very carefully.

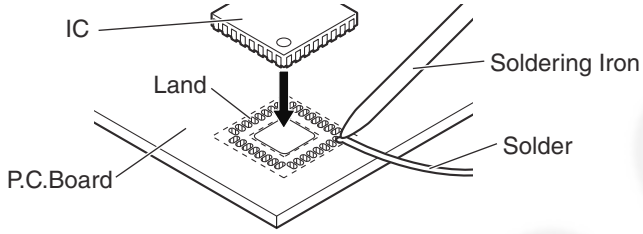

3. Heat the IC with a hot air desoldering tool through the P.C.Board until the solder on IC bottom is melted.
   Note:
   • Be sure to place it precisely, controlling the air volume of the hot air desoldering tool.

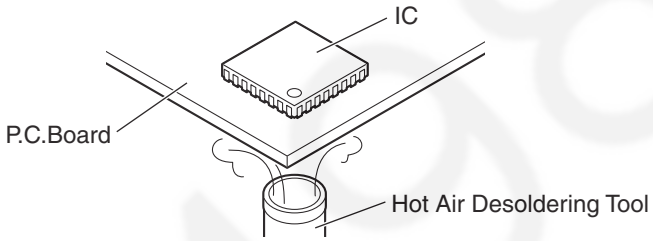

4. After soldering, confirm there are no short and open circuits with visual inspection.

A0449860

13.2. Terminal Guide of the ICs, Transistors and Diodes

13.2.1. Base Unit

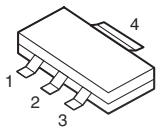

C0CBAYG00016



C0EBE0000124

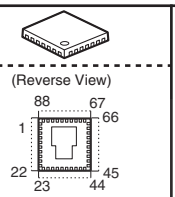

C2HBCY000065



PNWI16541BXH
PNWI26531BXH



B1ACGP000008

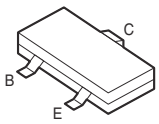

2SC6054JSL, PQVTBF822T7
UN9219J, 2SB1218A
UNR92A2J0L



2SD0874AS



B1GFCFEN0011



PQVDMD5S



MA111,
MANV250GEL
B0ECKM000008
LNJ237W82RA

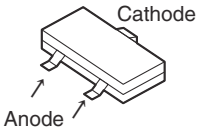

B0DDCD000001

13.2.2. Handset

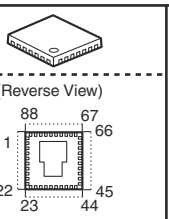

C2HBCY000062



PNWIGA652BXR



C0DBZYY00357



B1ADGE000004
UN9219J
2SC6054JSL



MA2ZD0200L



MA8043M

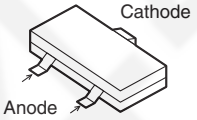

B0DDCD000001

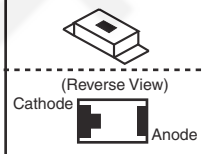

B3ACB0000190

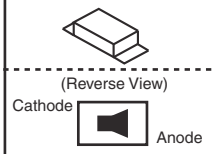

B3ACB0000216

14 Schematic Diagram

14.1. For Schematic Diagram

14.1.1. Base Unit (Schematic Diagram (Base Unit_Main))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

> Important Safety Notice:
> Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacture's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

14.1.2. Handset (Schematic Diagram (Handset_Main))

Notes:

1. DC voltage measurements are taken with an oscilloscope or a tester with a ground.
2. The schematic diagrams may be modified at any time with the development of new technology.

14.1.3. Charger Unit (Schematic Diagram (Charger Unit))

Notes:

1. DC voltage measurements are taken with voltmeter from the negative voltage line.

> Important Safety Notice:
> Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only the manufacture's specified parts.

2. The schematic diagrams may be modified at any time with the development of new technology.

A04S360

Memo

A0449860

14.2. Schematic Diagram (Base Unit_Main)

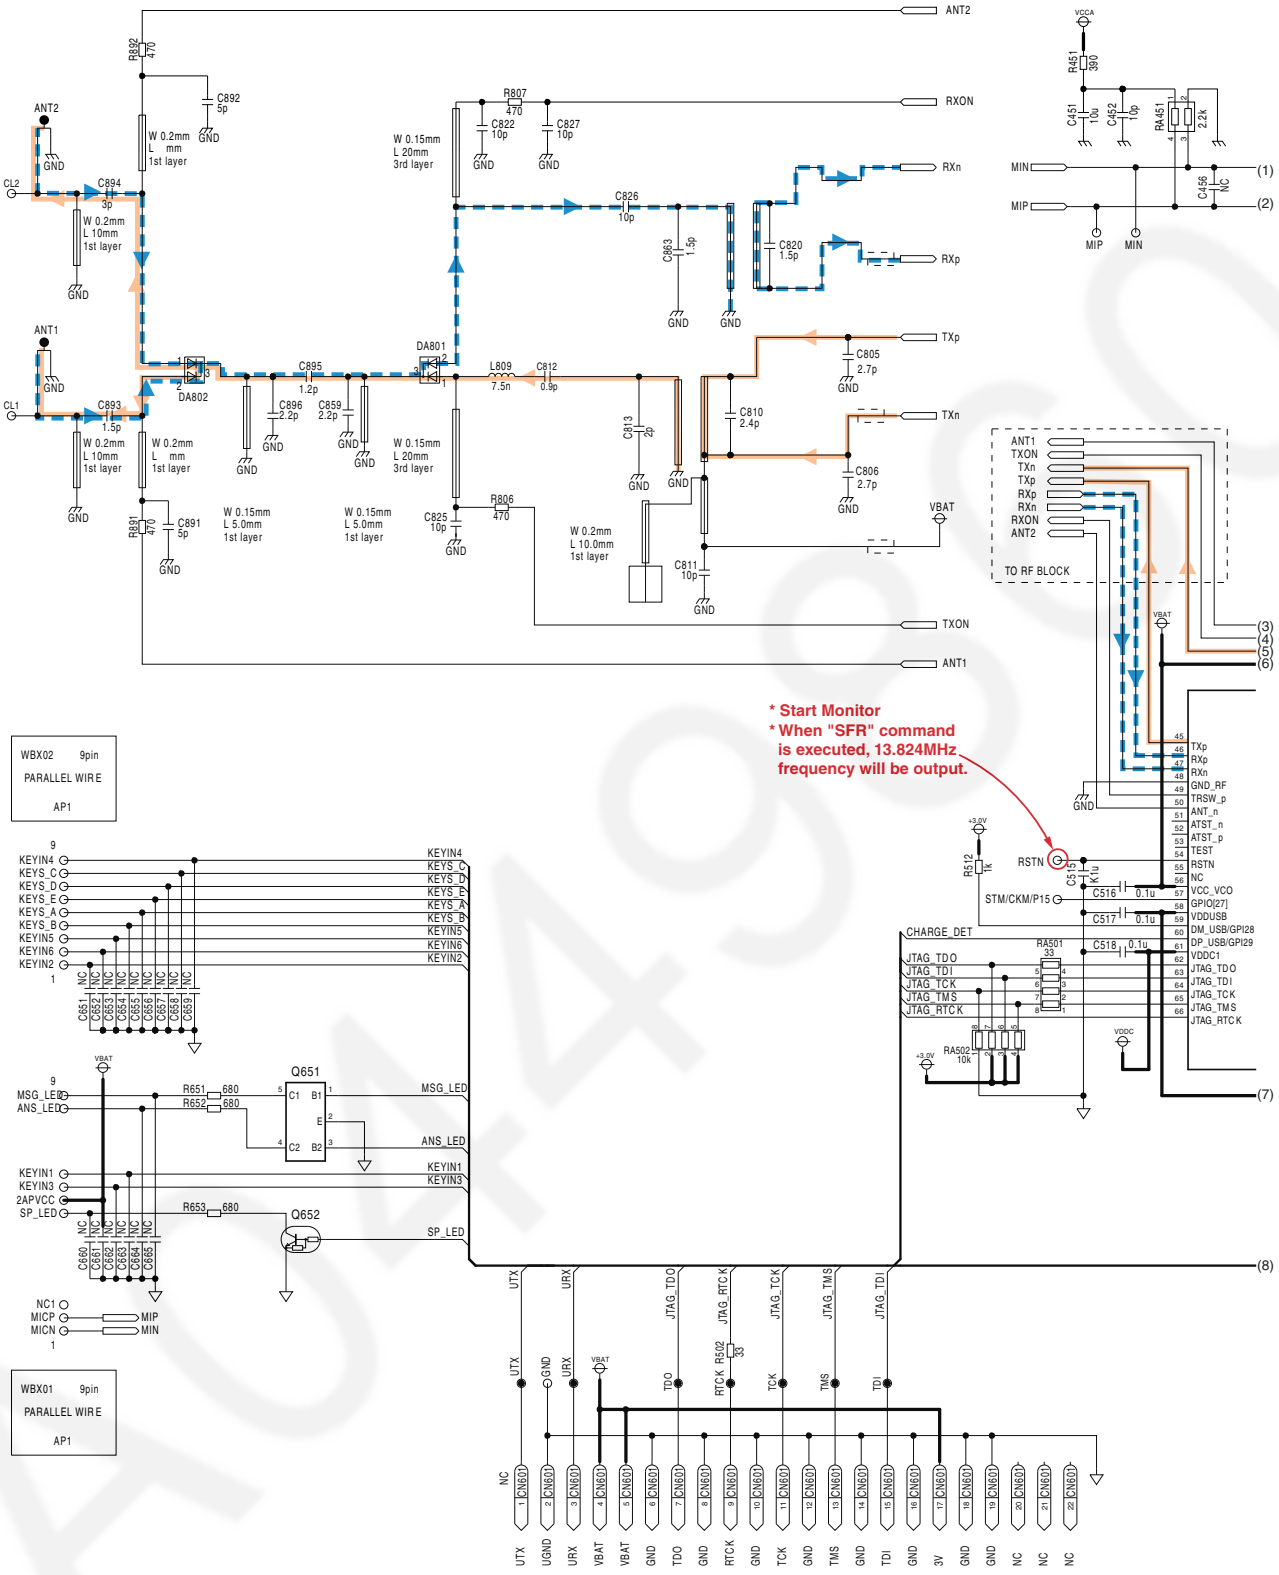

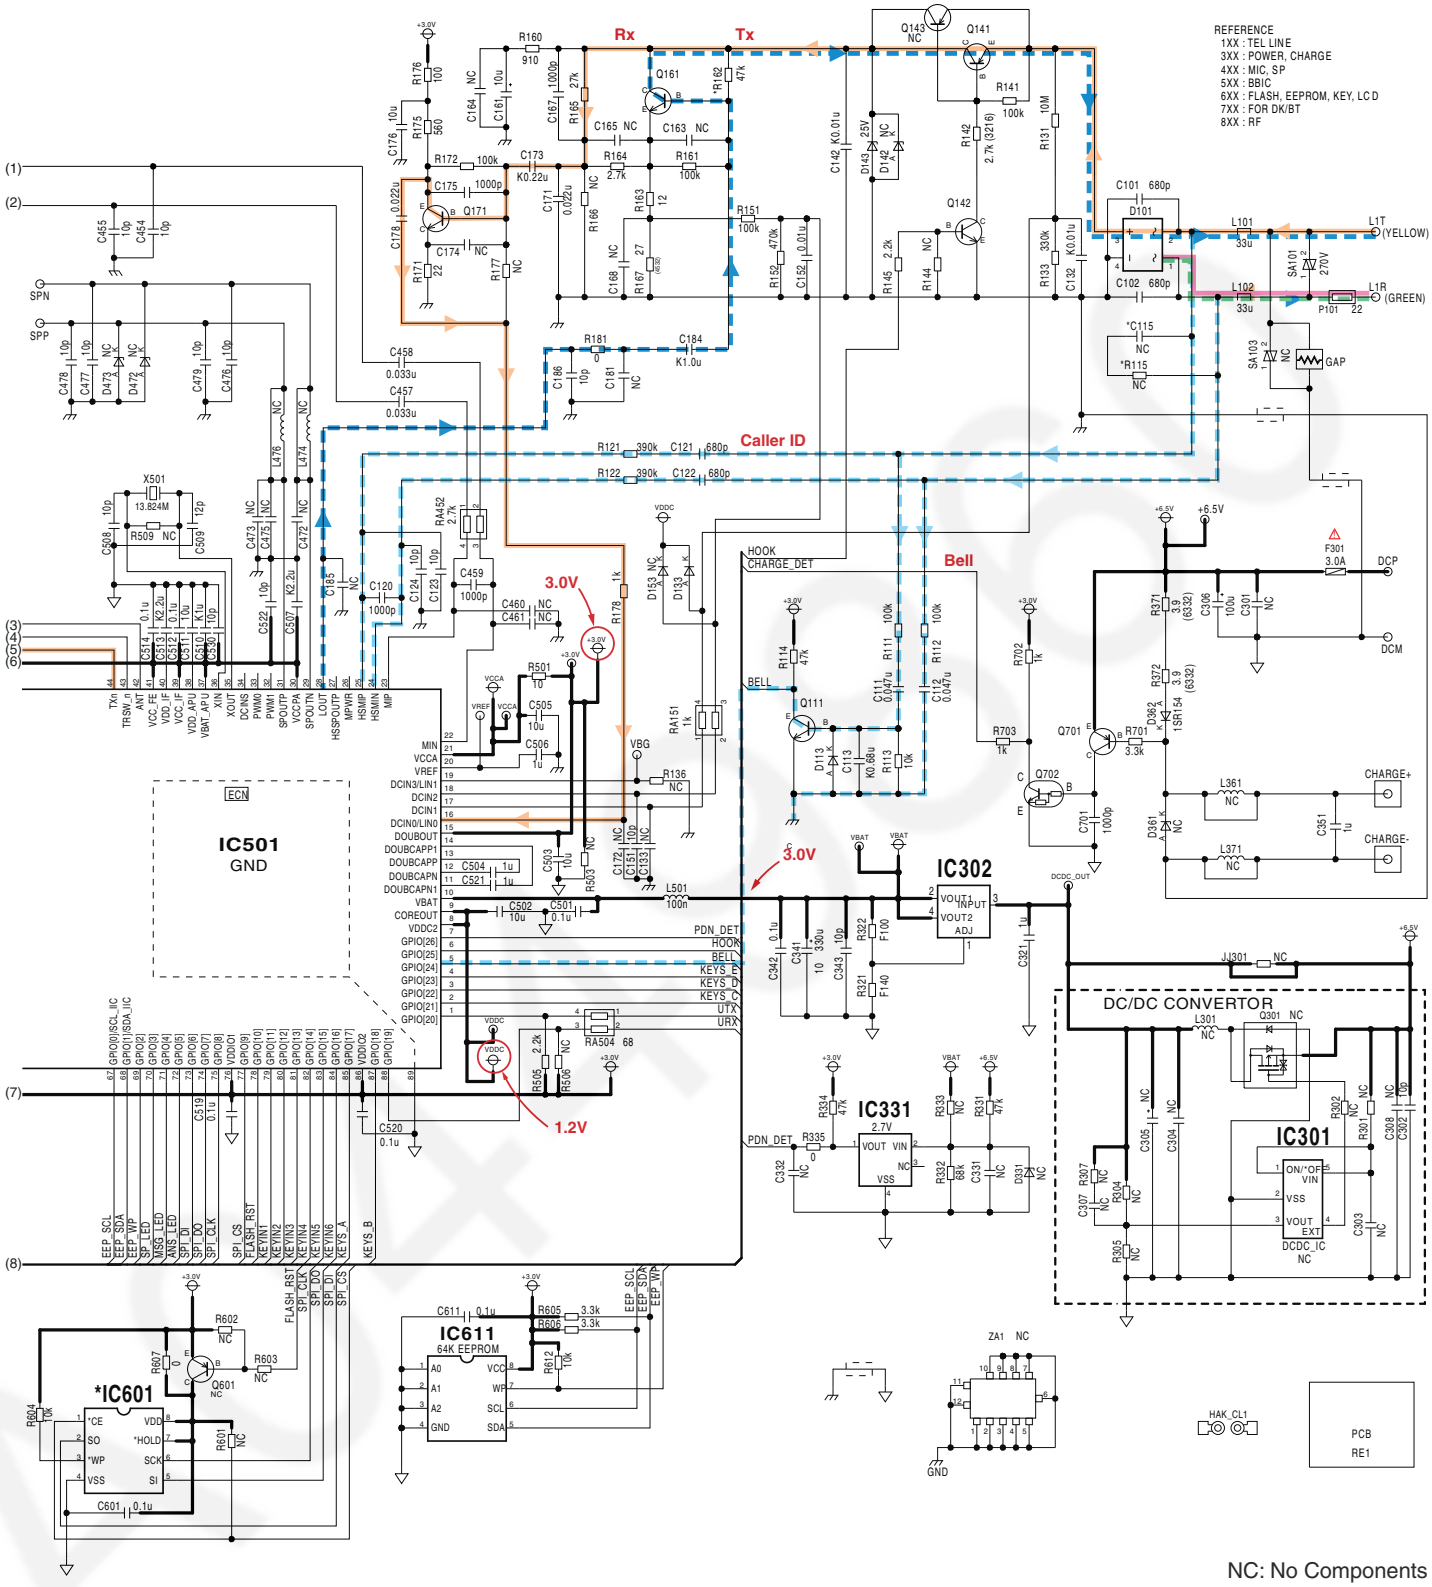

NC: No Components

KX-TG6541/6542BX SCHEMATIC DIAGRAM (Base Unit_Main)

14.3. Schematic Diagram (Base Unit_Operation)

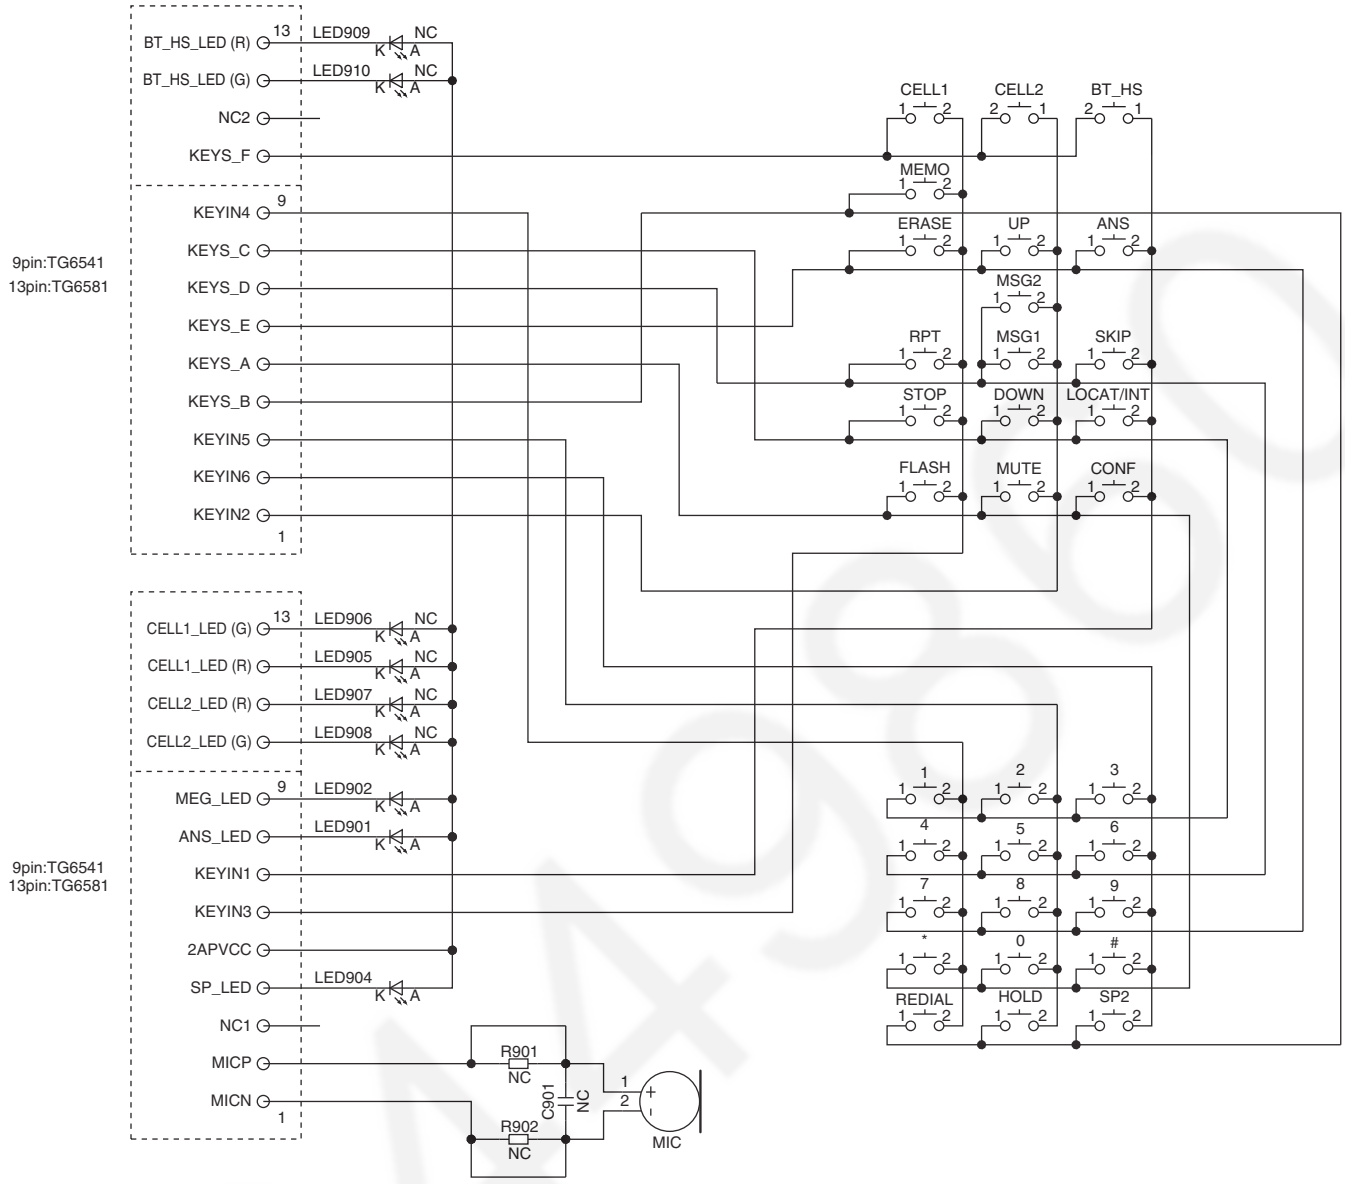

NC: No Components

KX-TG6541/6542 SCHEMATIC DIAGRAM (Base Unit_Operation)

Memo

A0449860

14.4. Schematic Diagram (Handset_Main)

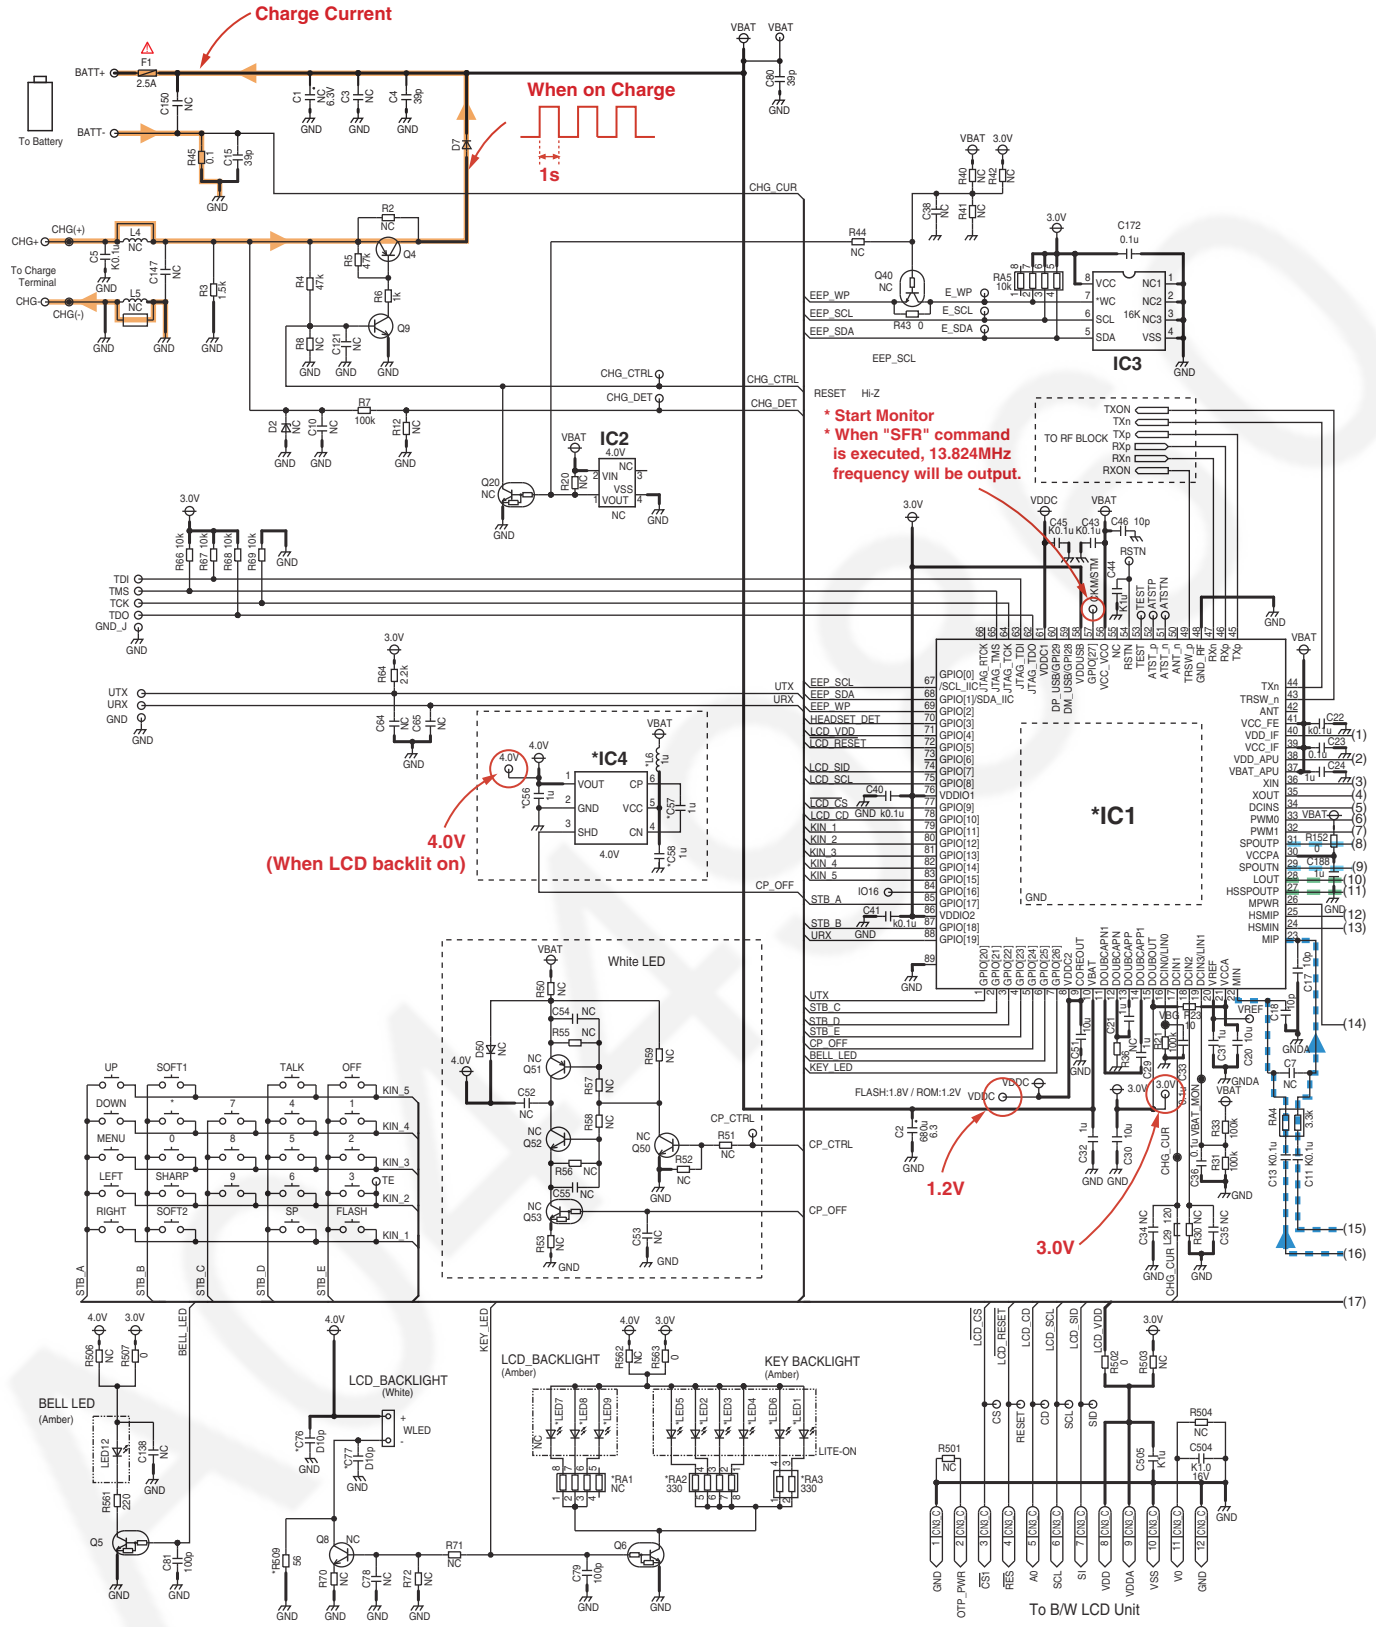

NC: No Components

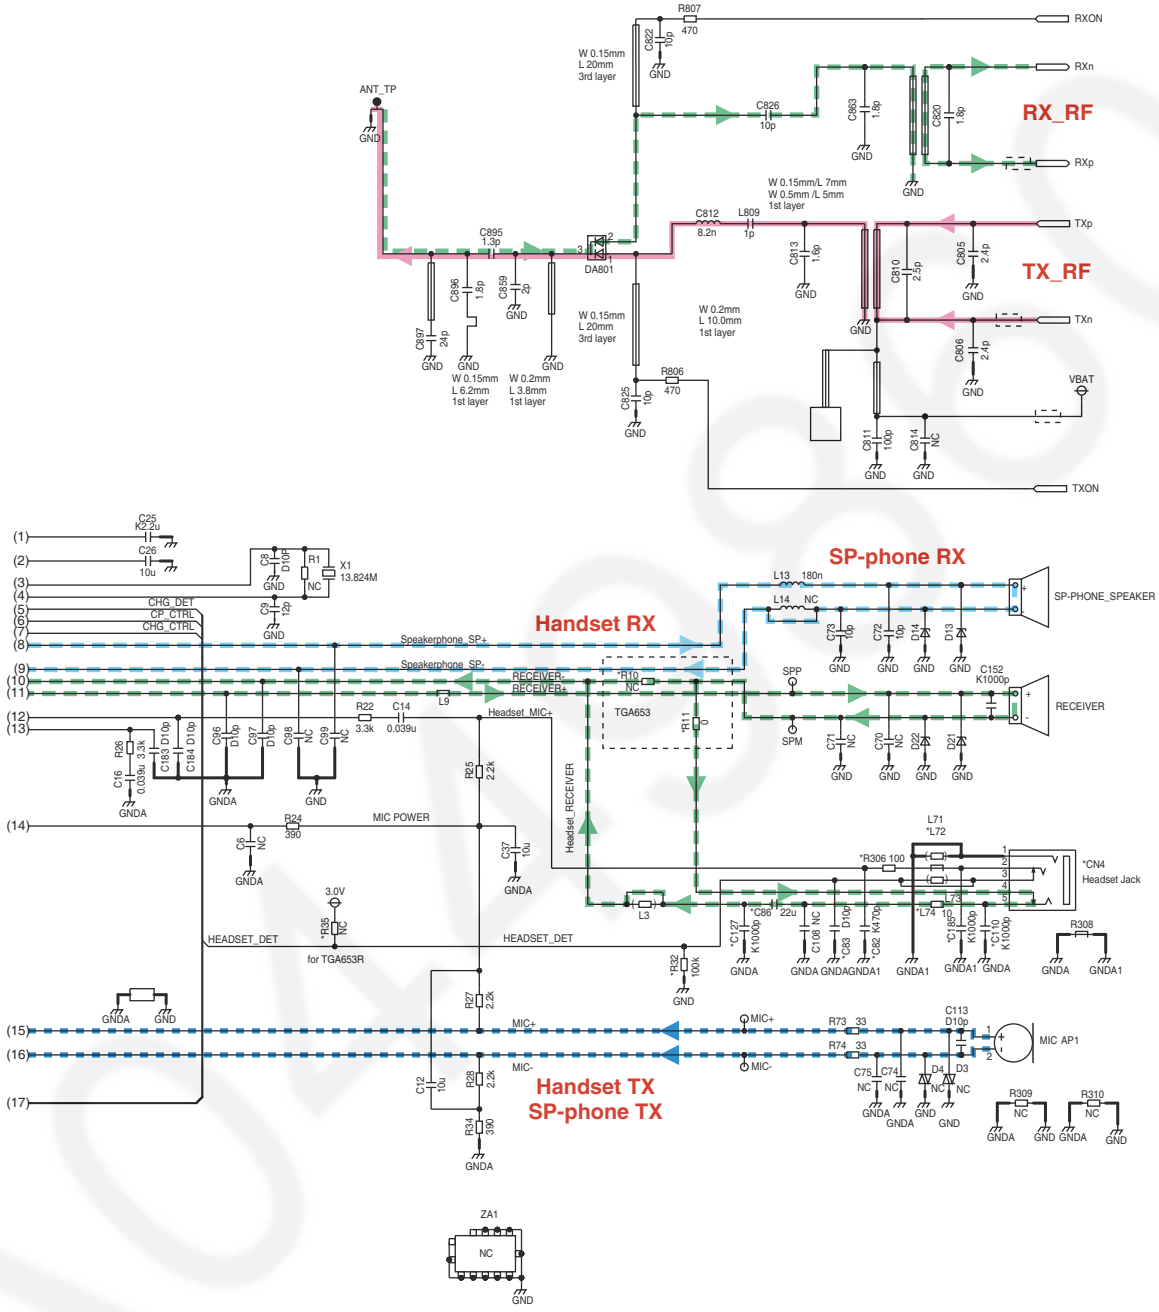

NC: No Components

KX-TGA652 SCHEMATIC DIAGRAM (Handset_Main)

14.5. Schematic Diagram (Handset_LED)

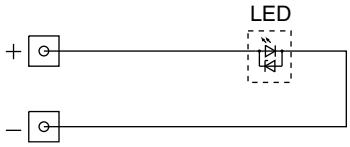

KX-TGA652 SCHEMATIC DIAGRAM (Handset_LED)

A0449860

14.6. Schematic Diagram (Charger Unit)

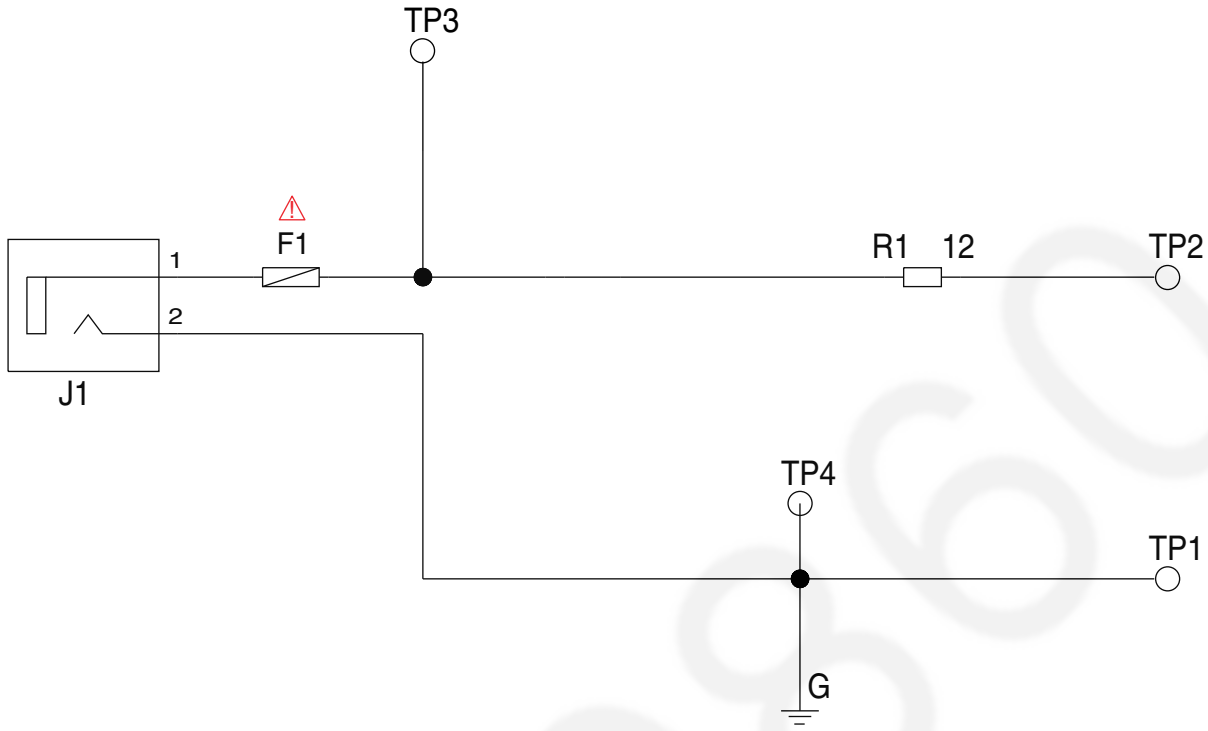

SCHEMATIC DIAGRAM (Charger Unit)

A0449360

Memo

A0449860

15 Printed Circuit Board

15.1. Circuit Board (Base Unit_Main)

15.1.1. Component View

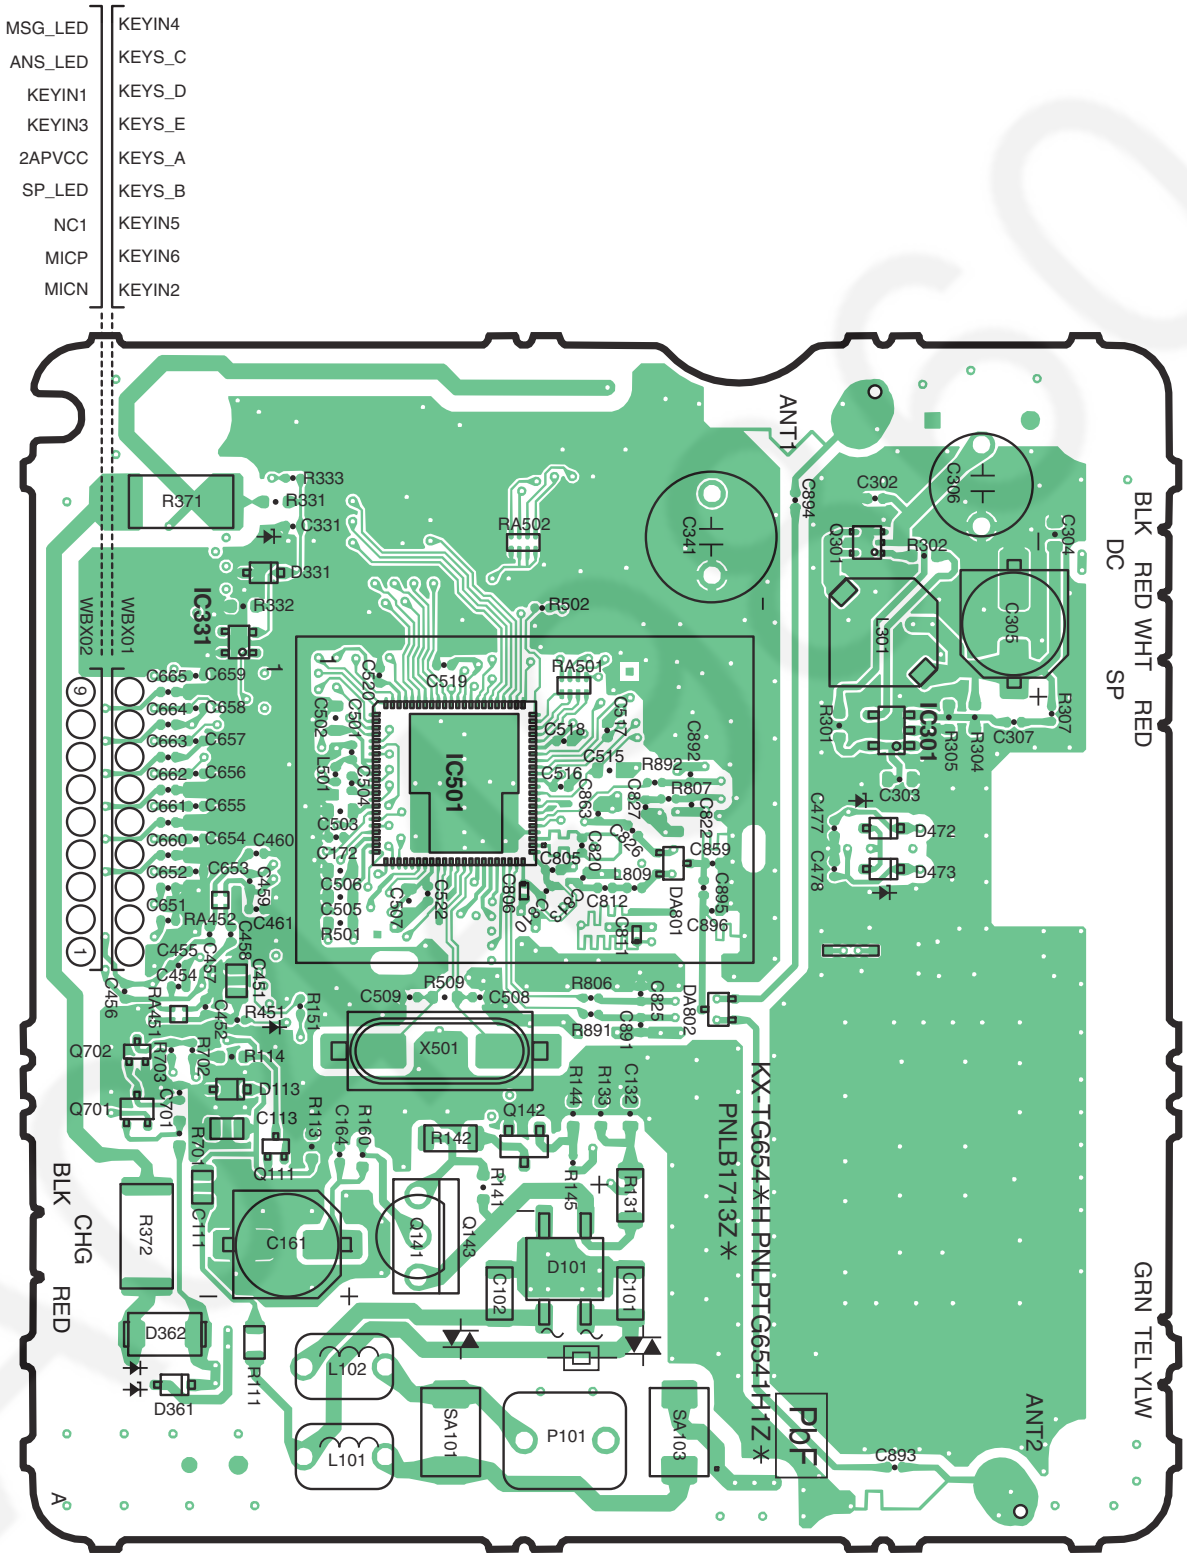

KX-TG6541/6542 CIRCUIT BOARD (Base Unit_Main (Component View))

15.1.2. Bottom View

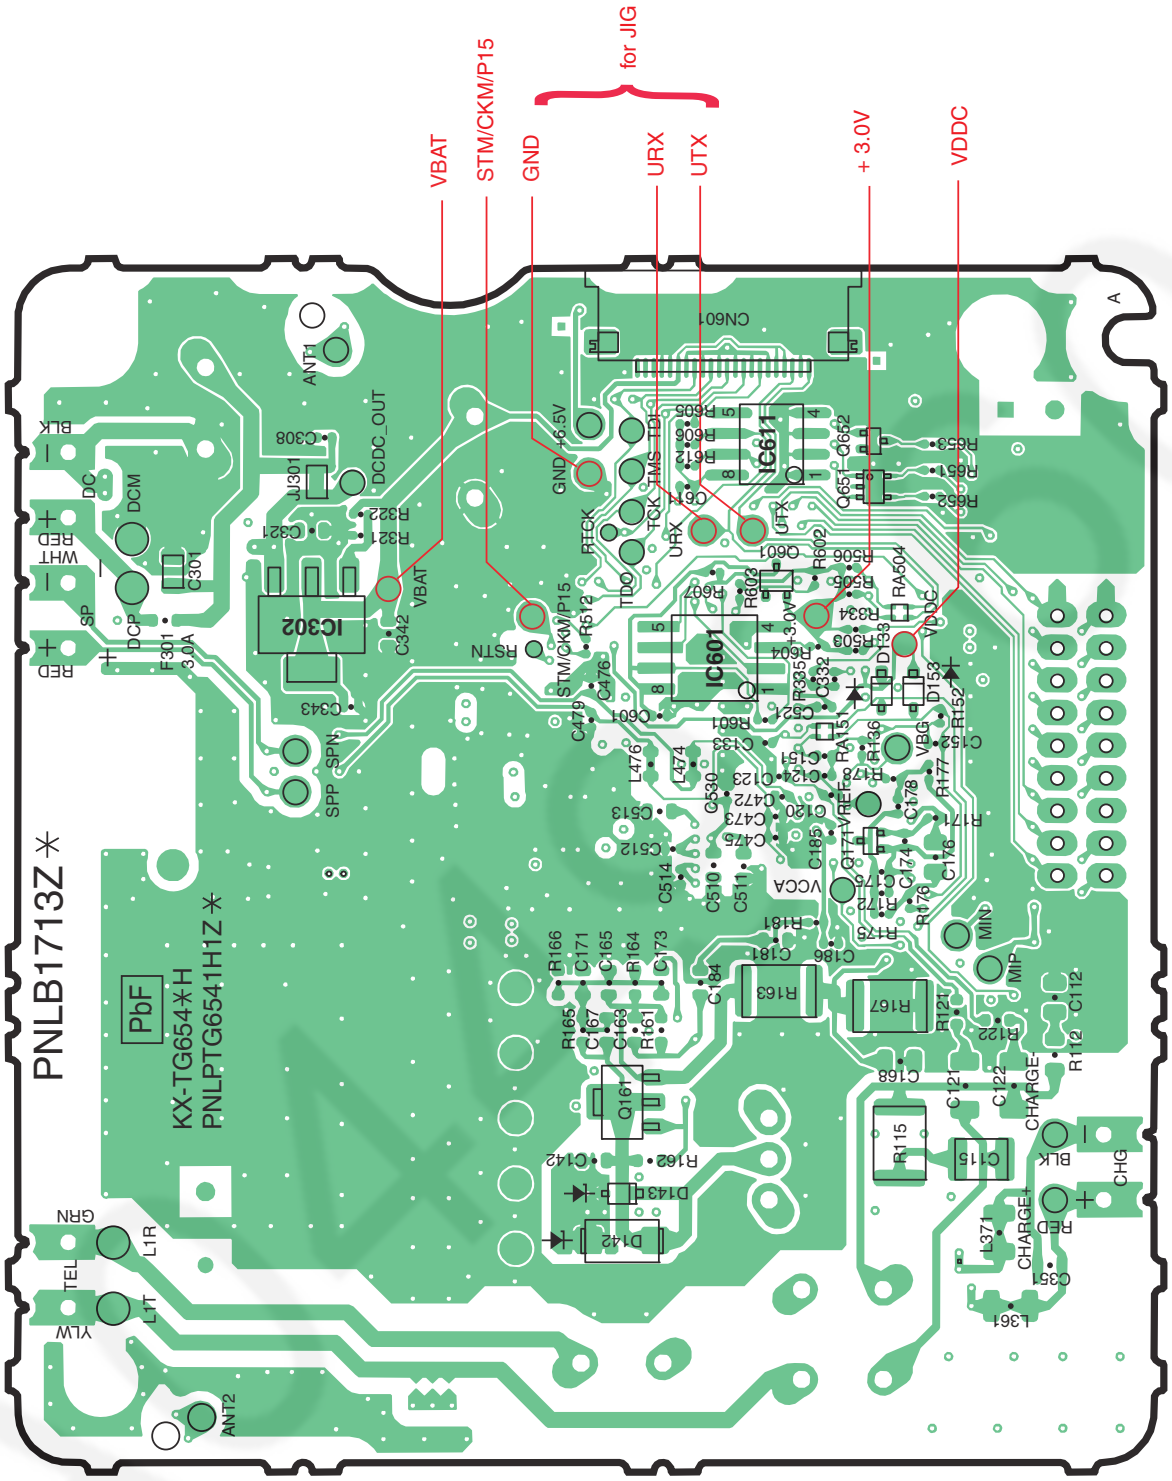

KX-TG6541/6542 CIRCUIT BOARD (Base Unit_Main (Bottom View))

15.2. Circuit Board (Base Unit_Operation)

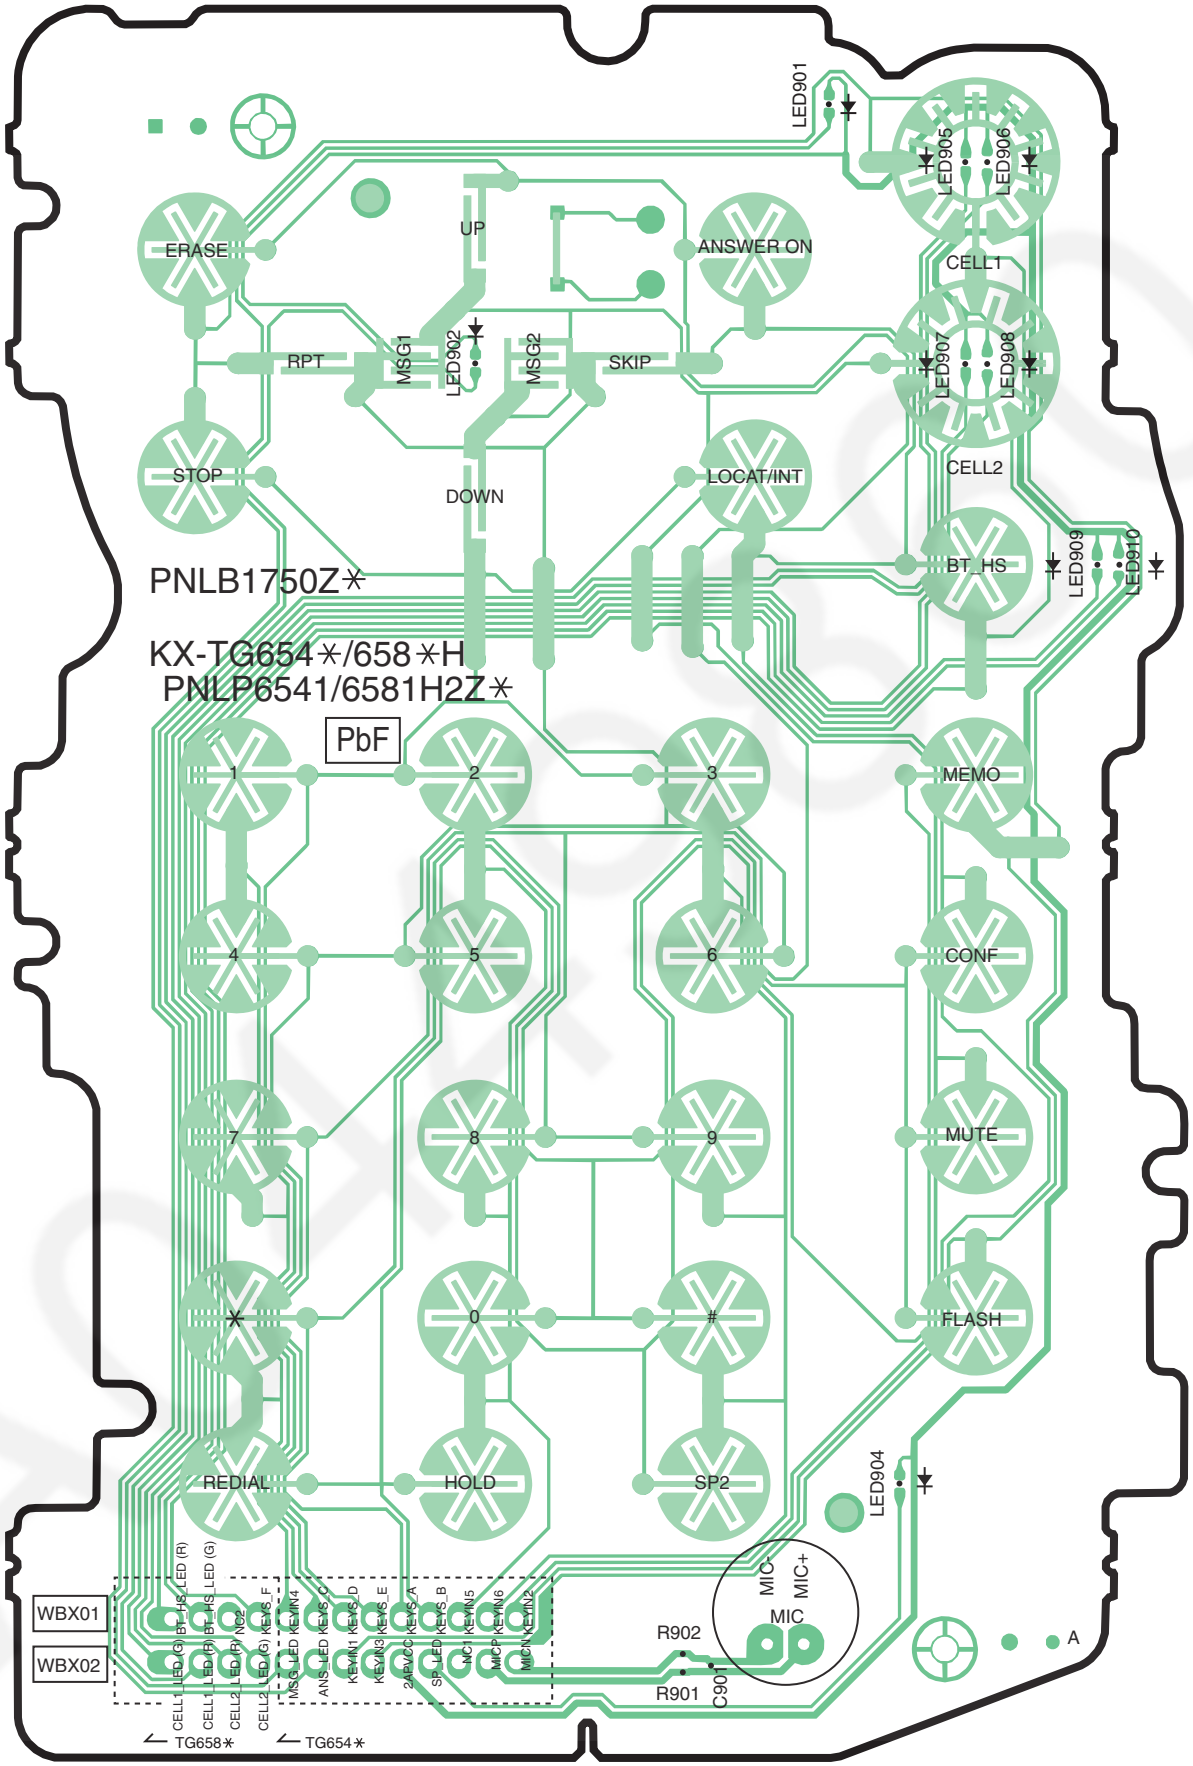

KX-TG6541/6542 CIRCUIT BOARD (Base Unit_Operation (Component View))

Memo

A0449860

15.3. Circuit Board (Handset_Main)

15.3.1. Component View

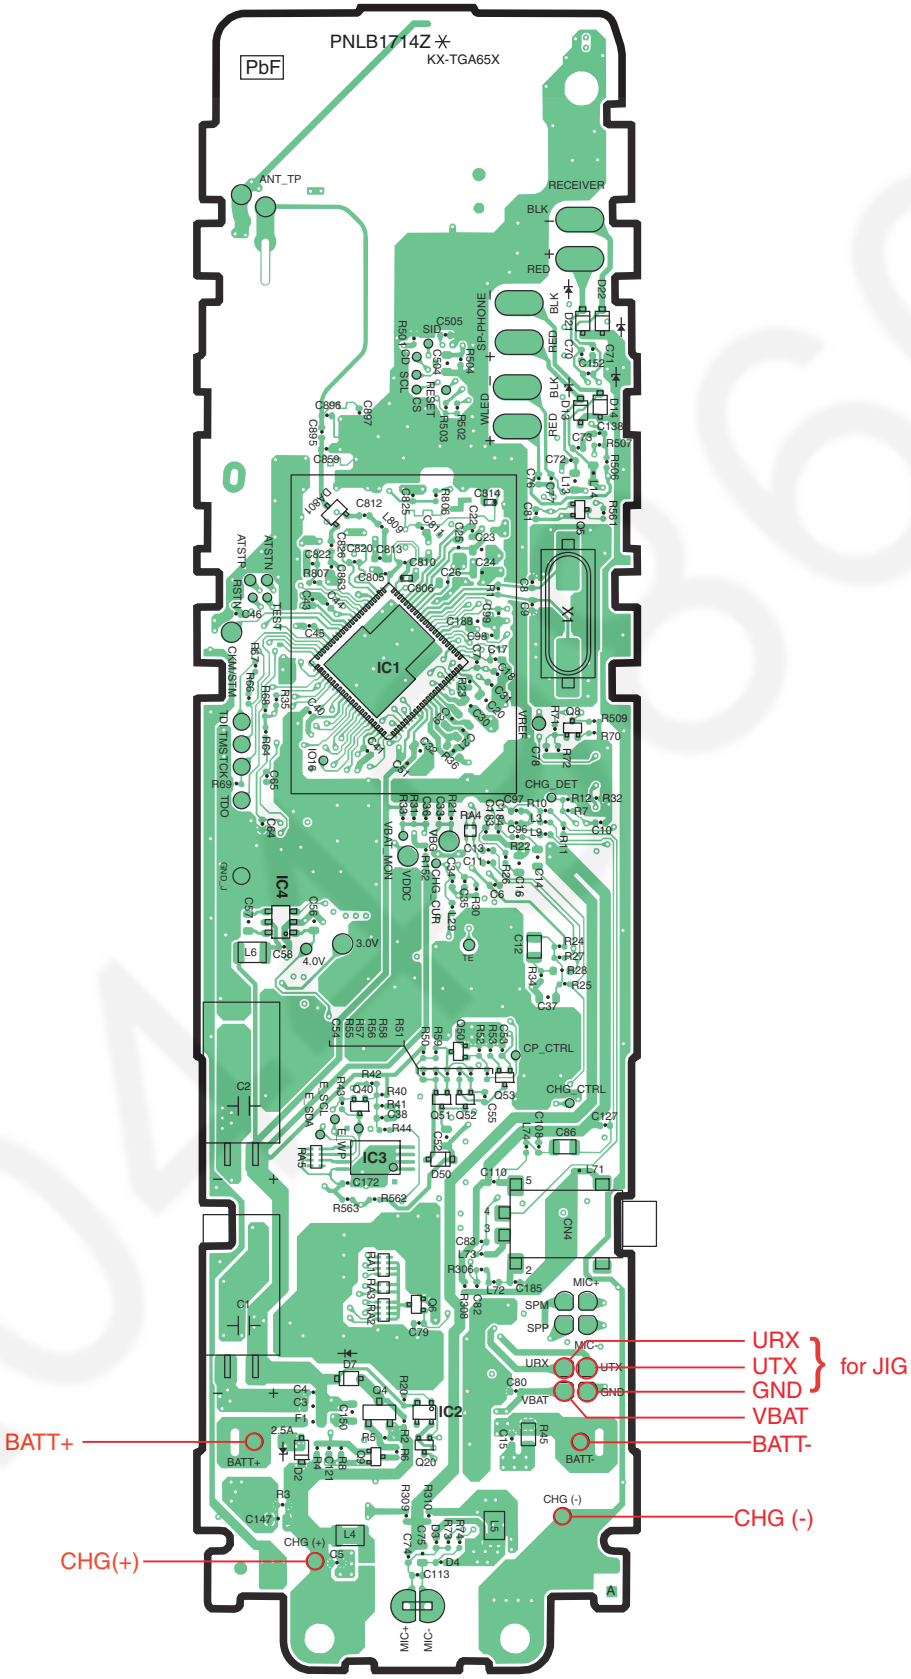

KX-TGA652 CIRCUIT BOARD (Handset_Main (Component View))

15.3.2. Bottom View

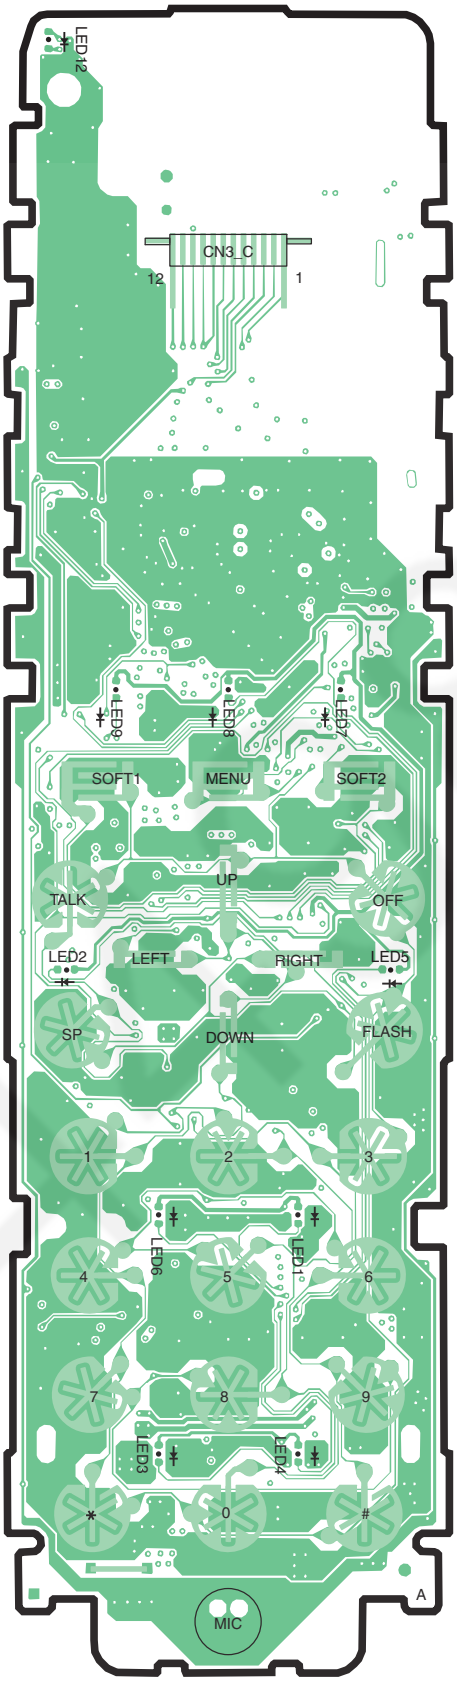

KX-TGA652 CIRCUIT BOARD (Handset_Main (Bottom View))

15.4. Circuit Board (Handset_LED)

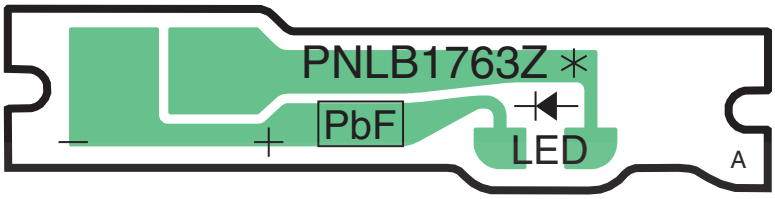

KX-TGA652 CIRCUIT BOARD (Hanset_LED (Bottom View))

A0449860

15.5. Circuit Board (Charger Unit)

15.5.1. Component View

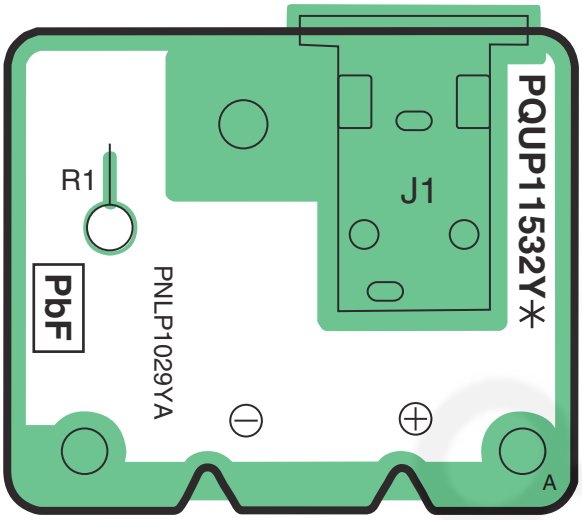

CIRCUIT BOARD (Charger unit (Component View))

15.5.2. Bottom View

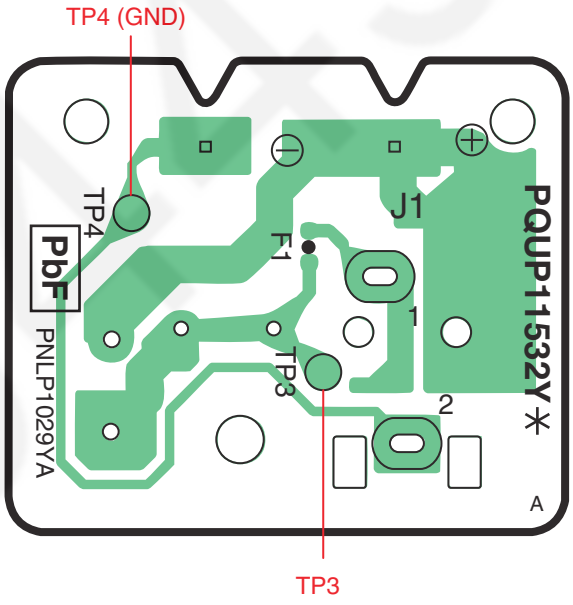

CIRCUIT BOARD (Charger unit (Bottom View))

16 Exploded View and Replacement Parts List

16.1. Cabinet and Electrical Parts (Base Unit)

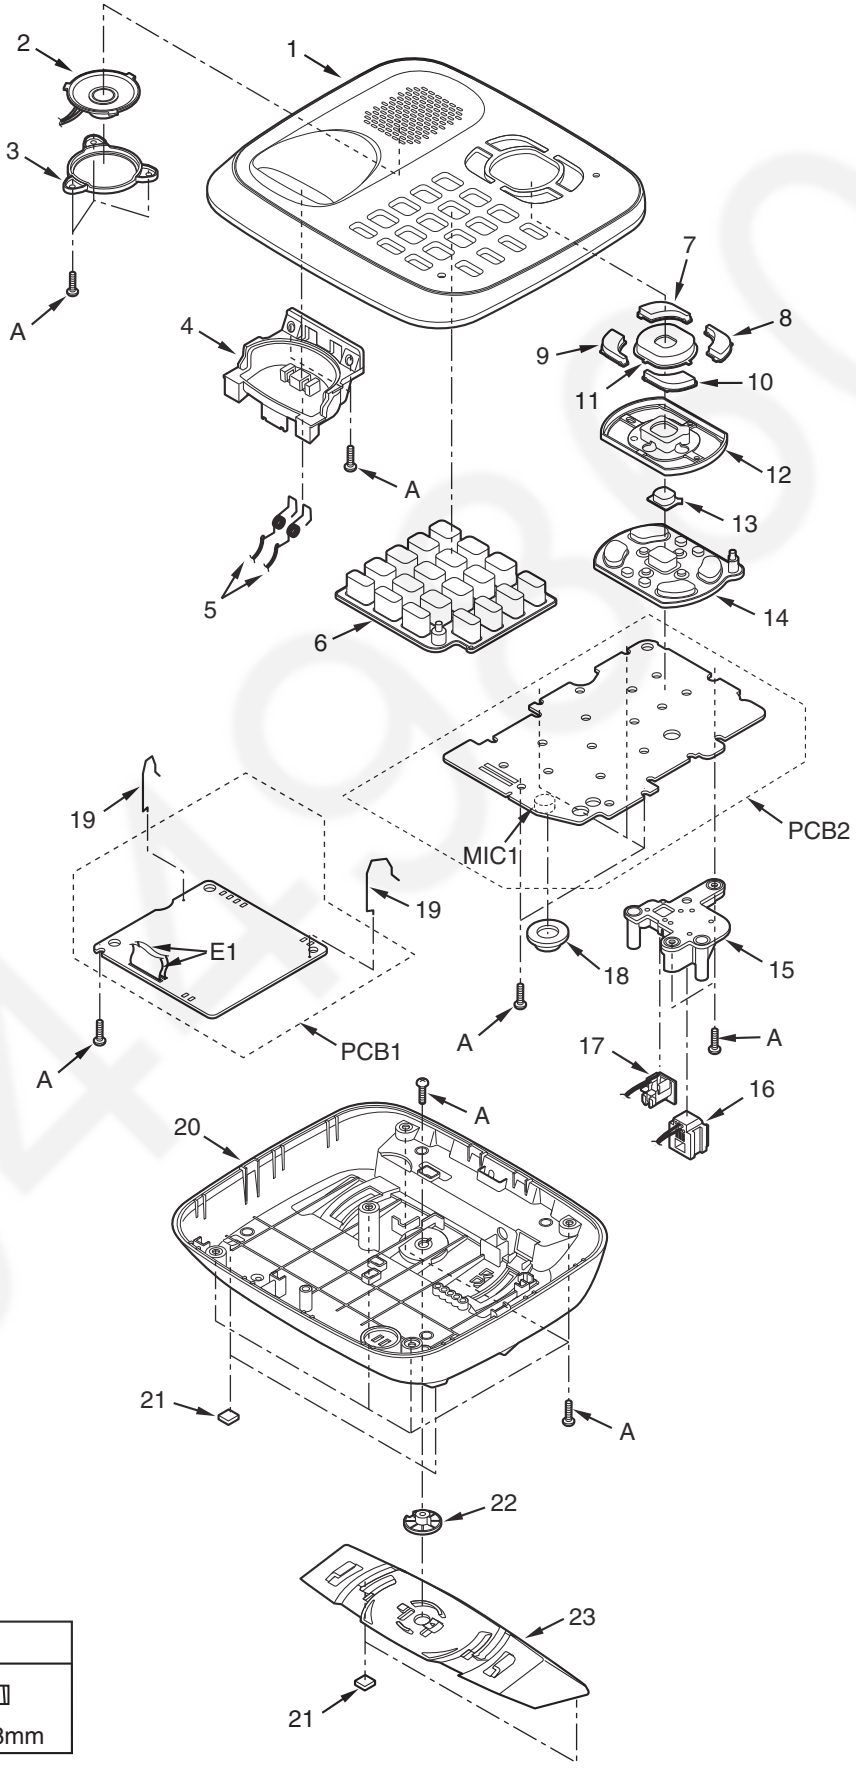

Ref.No.	Figure
A	ϕ2.6 x 8mm

16.2. Cabinet and Electrical Parts (Handset)

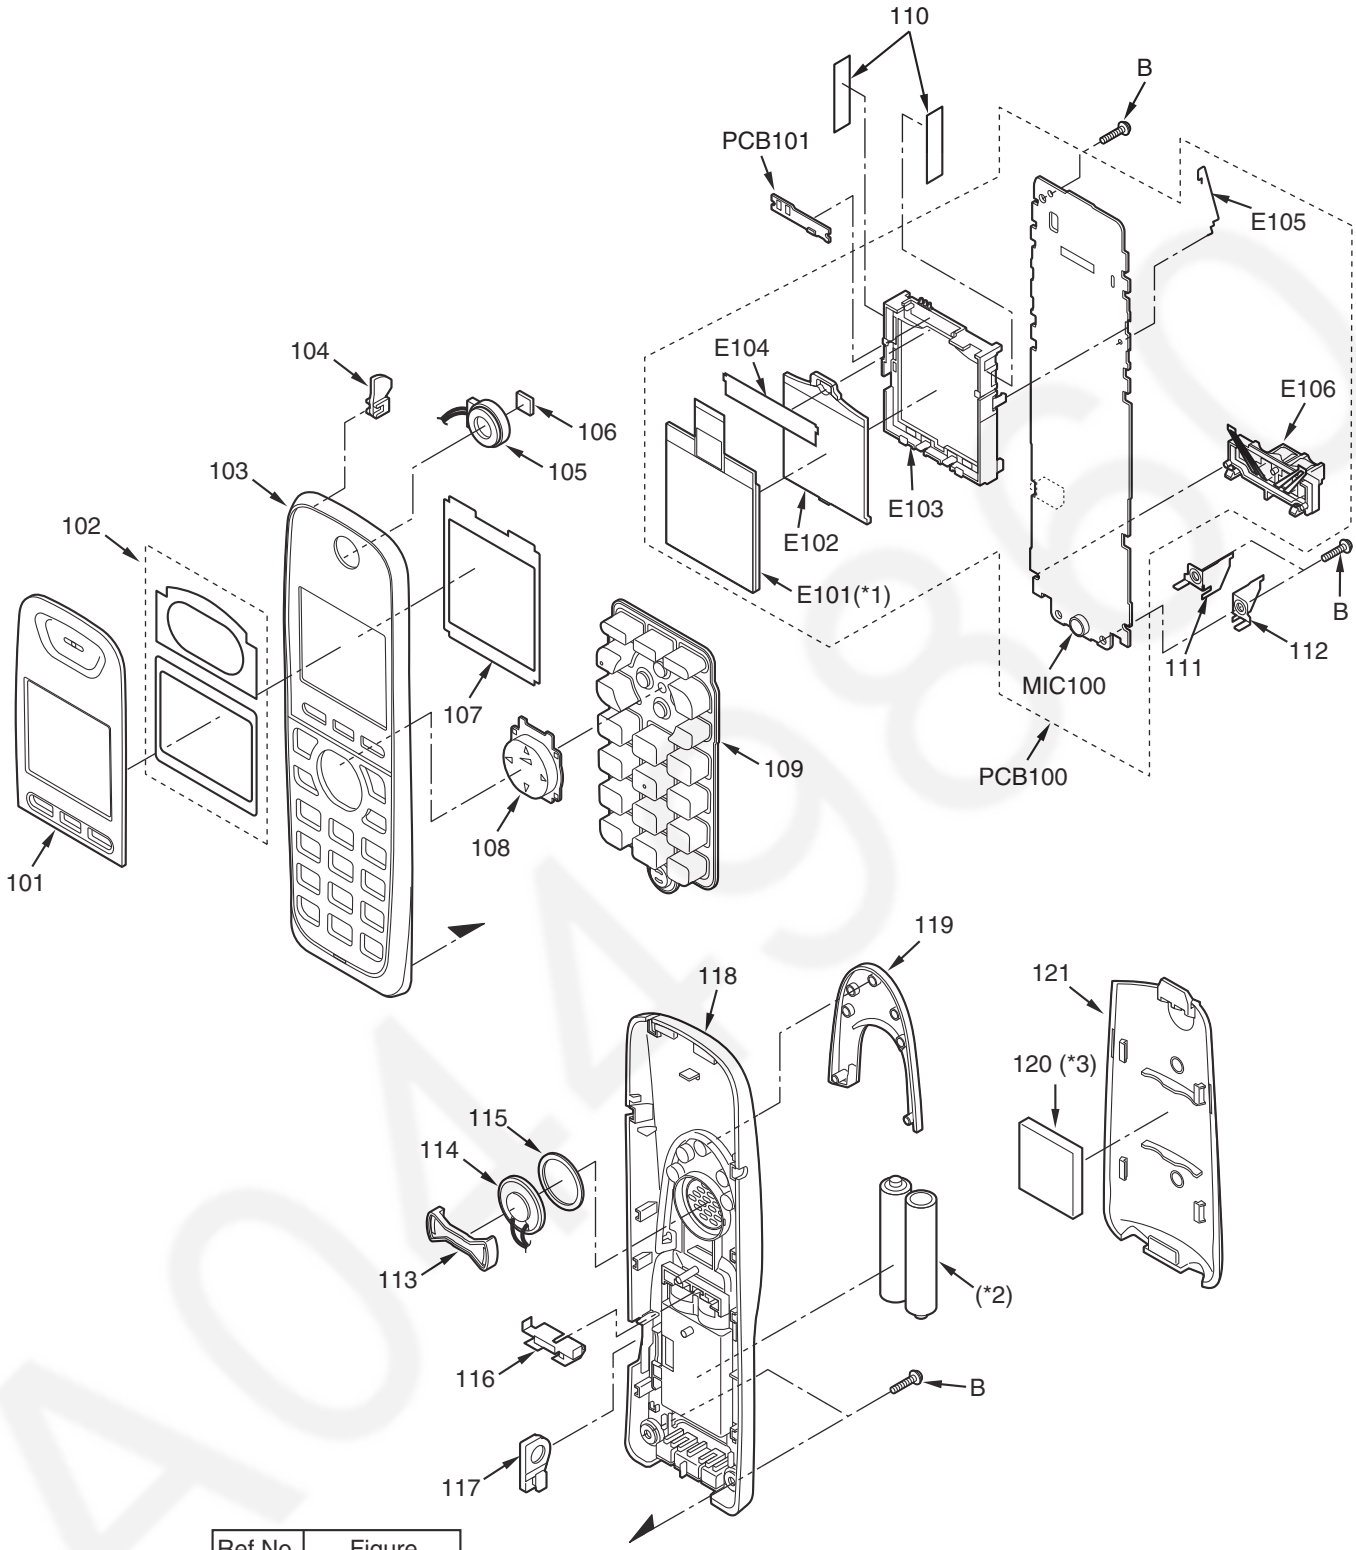

Ref.No.	Figure
B	ϕ2×8 mm

Note:

(*1) This cable is fixed by welding. Refer to **How to Replace the Handset LCD** (P.49).

(*2) The rechargeable Ni-MH battery HHR-4MRT is available through sales route of Panasonic.

(*3) Attach the SPACER (No. 120) to the exact location described above.

16.3. Cabinet and Electrical Parts (Charger Unit)

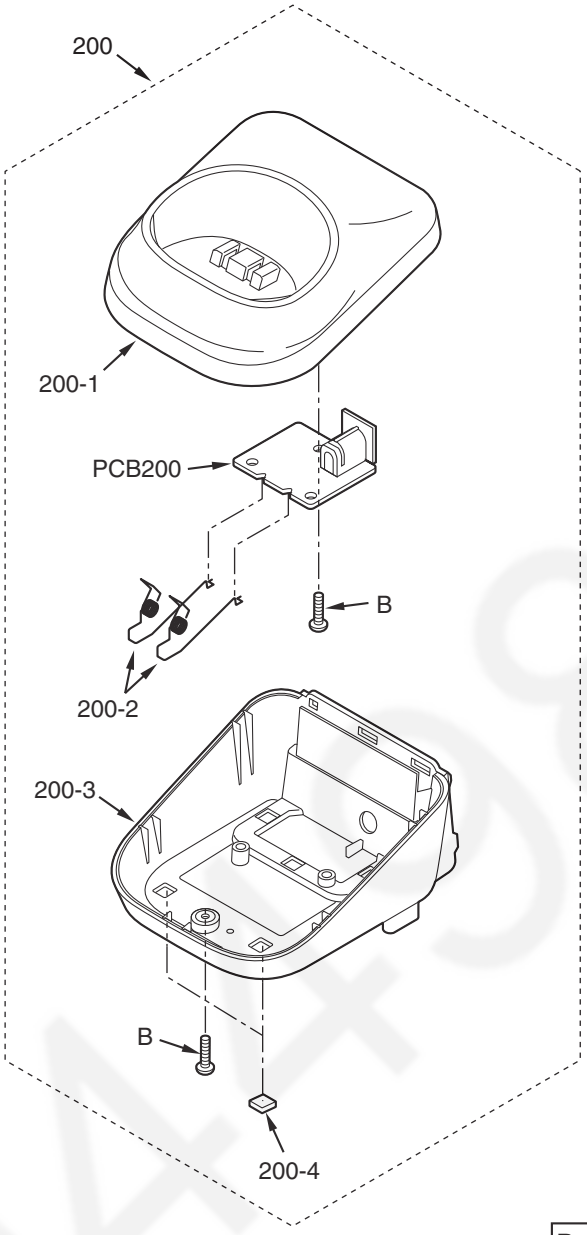

Ref.No.	Figure
B	ϕ2×8 mm

16.4. Accessories

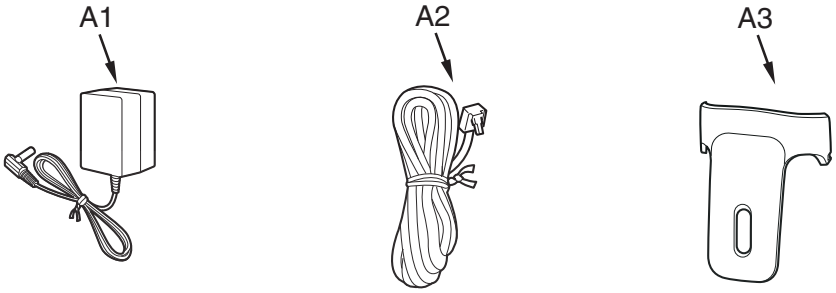

A0449860

16.5. Replacement Parts List

1. RTL (Retention Time Limited)

Note:

The “RTL” marking indicates that its Retention Time is Limited.

When production is discontinued, this item will continue to be available only for a specific period of time.

This period of time depends on the type of item, and the local laws governing parts and product retention. At the end of this period, the item will no longer be available.

2. Important safety notice

Components identified by the ⚠ mark indicates special characteristics important for safety. When replacing any of these components, only use specified manufacture's parts.

3. The S mark means the part is one of some identical parts. For that reason, it may be different from the installed part.
4. ISO code (Example: ABS-94HB) of the remarks column shows quality of the material and a flame resisting grade about plastics.
5. RESISTORS & CAPACITORS

Unless otherwise specified;

All resistors are in ohms (Ω) k=1000Ω, M=1000kΩ

All capacitors are in MICRO FARADS (μF) p=μμF

*Type & Wattage of Resistor

Type

ERC:Solid ERDS:Carbon ERJ:Chip	ERX:Metal Film ERG:Metal Oxide ER0:Metal Film	PQ4R:Chip ERS:Fusible Resistor ERF:Cement Resistor

Wattage

10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W

*Type & Voltage Of Capacitor

Type

ECFD:Semi-Conductor ECQS:Styrol ECUV,PQCUV, ECUE:Chip ECQMS:Mica	ECCD,ECKD,ECBT,F1K,ECUV:Ceramic ECQE,ECQV,ECQG:Polyester ECEA,ECST,EEE:Electlytic ECQP:Polypropylene

Voltage

ECQ Type	ECQG ECQV Type	ECSZ Type	Others	
1H:50V 2A:100V 2E:250V 2H:500V	05:50V 1:100V 2:200V	0F:3.15V 1A:10V 1V:35V 0J:6.3V	0J :6.3V 1A :10V 1C :16V 1E,25:25V	1V :35V 50,1H:50V 1J :16V 2A :100V

16.5.1. Base Unit

16.5.1.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	1	PNKM1137W1	CABINET BODY	PS-HB
	2	L0AA04A00028	SPEAKER	
	3	PQHR11082Z	GUIDE, SPEAKER	POM-HB
	4	PNKE1058Z1	CASE, CHARGE TERMINAL	PS-HB
	5	PNJT1003Z	CHARGE TERMINAL	
	6	PNJK1081Y	BUTTON, DIAL	
	7	PNBC1005Y1	BUTTON, ERASE	ABS-HB
	8	PNBC1004Y1	BUTTON, ANSWER ON	ABS-HB
	9	PNBC1006Y1	BUTTON, STOP	ABS-HB
	10	PNBC1007Y1	BUTTON, LOCATOR	ABS-HB
	11	PNBC1002Z2	BUTTON, NAVIGATOR KEY	ABS-HB
	12	PNHR1001Z	GUIDE, BUTTON	PS-HB
	13	PNBC1001Z3	BUTTON, MESSAGE	AS-HB
	14	PNJK1082Z	KEYBOARD SWITCH	
	15	PNHR1278Z	GUIDE, JACK	PS-HB
	16	PQJJ1T039R	JACK, MODULAR	
	17	K2ECYZ000001	JACK, DC	
	18	PQMG10025W	RUBBER PARTS, MIC	
	19	PNLA1030Z	ANTENNA	
	20	PNKF1104Y1	CABINET COVER	PS-HB
	21	PNHA1013Z	RUBBER PARTS, FOOT CUSHION	
	22	PNHR1249Z	PLASTIC PARTS	POM-HB
	23	PNKL1016Y1	STAND, WALL MOUNT	PS-HB

16.5.1.2. Main P.C. Board Parts

Note:

(*1) When replacing IC611 or X501, make the adjustment using PNZZTG6541BX. Refer to **How to download the data** (P.56) of Things to Do after Replacing IC or X'tal.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB1	PNWP16541BXH	MAIN P.C.BOARD ASS'Y (RTL)	
			(ICs)	
	IC302	C0CBAYG00016	IC	S
	IC331	C0EBE0000124	IC	
	IC501	C2HBCY000065	IC(BBIC)	
	IC601	PNWI26531BXH	IC(FLASH)	
	IC611	PNWI16541BXH	IC(EEPROM) (*1)	
			(TRANSISTORS)	
	Q111	2SC6054JSL	TRANSISTOR(SI)	
	Q141	B1ACGP000008	TRANSISTOR(SI)	
	Q142	PQVTBF822T7	TRANSISTOR(SI)	
	Q161	2SD0874AS	TRANSISTOR(SI)	
	Q171	2SC6054JSL	TRANSISTOR(SI)	
	Q651	B1GFCFEN0011	TRANSISTOR(SI)	S
	Q652	UN9219J	TRANSISTOR(SI)	S
	Q701	2SB1218A	TRANSISTOR(SI)	
	Q702	UNR92A2J0L	TRANSISTOR(SI)	
			(DIODES)	
	D101	PQVDMD5S	DIODE(SI)	
	D113	MA111	DIODE(SI)	S
	D133	MA111	DIODE(SI)	S
	D143	MANV250GEL	DIODE(SI)	
	D362	B0ECKM000008	DIODE(SI)	
	DA801	B0DDCD000001	DIODE(SI)	
	DA802	B0DDCD000001	DIODE(SI)	
			(COILS)	
	L101	PQLQXF330K	COIL	S
	L102	PQLQXF330K	COIL	S
	L501	G1CR10J00010	COIL	S
	L809	G1C7N5JA0044	COIL	
			(RESISTOR ARRAYS)	
	RA151	D1H410220001	RESISTOR ARRAY	
	RA451	D1H422220001	RESISTOR ARRAY	
	RA452	D1H427220001	RESISTOR ARRAY	
	RA501	EXB28V330	RESISTOR ARRAY	
	RA502	EXB28V103	RESISTOR ARRAY	
	RA504	D1H468020001	RESISTOR ARRAY	
			(VARISTOR)	
	SA101	J0LF00000048	VARISTOR (SURGE ABSORBER)	
			(RESISTORS)	
	R111	PQ4R10XJ104	100k	S
	R112	PQ4R10XJ104	100k	S
	R113	ERJ3GEYJ103	10k	
	R114	ERJ3GEYJ473	47k	
	R121	ERJ3GEYJ394	390k	
	R122	ERJ3GEYJ394	390k	
	R131	PQ4R18XJ106	10M	S
	R133	ERJ3GEYJ334	330k	
	R141	ERJ3GEYJ104	100k	
	R142	PQ4R18XJ272	2.7k	S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	R145	ERJ2GEJ222	2.2k	
	R151	ERJ2GEJ104	100k	
	R152	ERJ2GEJ474X	470k	S
	R160	ERJ3GEYJ911	910	
	R161	ERJ3GEYJ104	100k	
	R162	ERJ3GEYJ473	47k	
	R163	ERJ12YJ120	12	
	R164	ERJ3GEYJ272	2.7k	
	R165	ERJ3GEYJ273	27k	
	R167	ERJ12YJ270	27	
	R171	ERJ2GEJ220	22	
	R172	ERJ2GEJ104	100k	
	R175	ERJ2GEJ561	560	
	R176	ERJ2GEJ101	100	
	R178	ERJ2GEJ102	1k	
	R181	ERJ2GE0R00	0	
	R321	ERJ2RKF1400	140	
	R322	ERJ2RKF1000	100	
	R331	ERJ3EKF4702	47k	
	R332	ERJ3EKF6802	68k	
	R334	ERJ2GEJ473	47k	
	R335	ERJ2GE0R00	0	
	R371	ERJ1TYJ3R9U	3.9	
	R372	ERJ1TYJ3R9U	3.9	
	R451	ERJ2GEJ391	390	
	R501	ERJ3GEYJ100	10	
	R502	ERJ2GEJ330	33	
	R505	ERJ2GEJ222	2.2k	
	R512	ERJ2GEJ102	1k	
	R604	ERJ2GEJ103	10k	
	R605	ERJ2GEJ332	3.3k	
	R606	ERJ2GEJ332	3.3k	
	R607	ERJ2GE0R00	0	
	R612	ERJ2GEJ103	10k	
	R651	ERJ2GEJ681	680	
	R652	ERJ2GEJ681	680	
	R653	ERJ2GEJ681	680	
	R701	ERJ3GEYJ332	3.3k	
	R702	ERJ2GEJ102	1k	
	R703	ERJ2GEJ102	1k	
	R806	ERJ2GEJ471	470	
	R807	ERJ2GEJ471	470	
	R891	ERJ2GEJ471	470	
	R892	ERJ2GEJ471	470	
			(CAPACITORS)	
	C101	F1K2H681A008	680p	
	C102	F1K2H681A008	680p	
	C111	F1J2A473A024	0.047	
	C112	F1J2A473A024	0.047	
	C113	PQCUV1A684KB	0.68	
	C120	ECUE1H102KBQ	0.001	
	C121	F1K2H681A008	680p	
	C122	F1K2H681A008	680p	
	C123	ECUE1H100DCQ	10p	
	C124	ECUE1H100DCQ	10p	
	C132	ECUV1H103KBV	0.01	
	C142	ECUV1H103KBV	0.01	
	C151	ECUE1H100DCQ	10p	
	C152	ECUE1C103KBQ	0.01	
	C161	F2G1H1000009	10	
	C167	ECUV1H102KBV	0.001	
	C171	ECUV1C223KBV	0.022	
	C173	ECUV1A224KBV	0.22	
	C175	ECUE1H102KBQ	0.001	
	C176	PQCUV0J106KB	10	
	C178	ECUE1C223KBQ	0.022	
	C184	ECUV1A105KBV	1	
	C186	ECUE1H100DCQ	10p	
	C302	ECUE1H100DCQ	10p	
	C306	F2A1C1010119	100	
	C321	ECUV1A105KBV	1	
	C341	F2A1A3310040	330	
	C342	ECUV1C104KBV	0.1	
	C343	ECUE1H100DCQ	10p	
	C351	ECUV1C105KBV	1	
	C451	PQCUV0J106KB	10	
	C452	ECUE1H100DCQ	10p	
	C454	ECUE1H100DCQ	10p	
	C455	ECUE1H100DCQ	10p	
	C457	ECUE1C333KBQ	0.033	
	C458	ECUE1C333KBQ	0.033	
	C459	ECUE1H102KBQ	0.001	
	C476	ECUE1H100DCQ	10p	
	C477	ECUE1H100DCQ	10p	
	C478	ECUE1H100DCQ	10p	
	C479	ECUE1H100DCQ	10p	
	C501	ECUE1A104KBQ	0.1	
	C502	ECJ1VB0G106M	10	
	C503	ECJ1VB0G106M	10	
	C504	ECUE0J105KBQ	1	
	C505	ECJ1VB0G106M	10	
	C506	ECUV1A105KBV	1	
	C507	ECUV1A225KBV	2.2	
	C508	ECUE1H100DCQ	10p	
	C509	ECUE1H120JCQ	12p	
	C510	ECUV1A105KBV	1	
	C511	ECJ1VB0G106M	10	
	C512	ECUE1A104KBQ	0.1	
	C513	ECUV1A225KBV	2.2	
	C514	ECUE1A104KBQ	0.1	
	C515	ECUV1A105KBV	1	
	C516	ECUE1A104KBQ	0.1	
	C517	ECUE1A104KBQ	0.1	
	C518	ECUE1A104KBQ	0.1	
	C519	ECUE1A104KBQ	0.1	
	C520	ECUE1A104KBQ	0.1	
	C521	ECUE0J105KBQ	1	
	C522	ECUE1H100DCQ	10p	
	C530	ECUE1H100DCQ	10p	
	C601	ECUE1A104KBQ	0.1	
	C611	ECUE1A104KBQ	0.1	
	C701	ECUE1H102KBQ	0.001	
	C805	F1G1H2R7A480	2.7p	
	C806	F1G1H2R7A480	2.7p	
	C810	F1G1H2R4A480	2.4p	
	C811	ECUE1H100DCQ	10p	
	C812	F1G1HR90A480	0.9p	
	C813	F1G1H2R0A480	2p	
	C820	F1G1H1R5A480	1.5p	
	C822	ECUE1H100DCQ	10p	
	C825	ECUE1H100DCQ	10p	
	C826	ECUE1H100DCQ	10p	
	C827	ECUE1H100DCQ	10p	
	C859	F1G1H2R2A480	2.2p	
	C863	F1G1H1R5A480	1.5p	
	C891	F1G1H5R0A480	5p	
	C892	F1G1H5R0A480	5p	
	C893	F1G1H1R5A480	1.5p	
	C894	F1G1H3R0A480	3p	
	C895	F1G1H1R2A480	1.2p	
	C896	F1G1H2R2A480	2.2p	
			(OTHERS)	
	P101	D4DAY220A022	THERMISTOR (POSISTOR)	
⚠	F301	K5H302Y00003	FUSE	
	X501	H0J138500011	CRYSTAL OSCILLATOR (*1)	
	MIC1	L0CBAY000018	MICROPHONE	

16.5.1.3. Operational P.C. Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB2	PNWP2TG6541H	OPERATIONAL P.C.BOARD ASS'Y (RTL)	
			(LEDS)	
	LED901	LNJ237W82RA	LED	S
	LED902	LNJ237W82RA	LED	S

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	LED904	LNJ237W82RA	LED	S

16.5.2. Handset

16.5.2.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	101	PNGP1085Z1	PANEL, LCD	PMMA-HB
	102	PNYE1026Z	TAPE, DOUBLE SIDED	
	103	PNKM1120Z1	CABINET BODY	PS-HB
	104	PNHR1248Z	OPTIC CONDUCTIVE PARTS, LED LENS	PS-HB
	105	L0AD01A00020	RECEIVER	
	106	PQHG10729Z	RUBBER PARTS, RECEIVER	
	107	PNYE1029Z	SPACER, CUSHION LCD	
	108	PNBC1003Y3	BUTTON, VOLUME KEY	ABS-HB
	109	PNJK1071U	KEYBOARD SWITCH	
	110	PNHX1165Z	COVER, LCD	
	111	PNJT1027Y	CHARGE TERMINAL (L)	
	112	PNJT1026Y	CHARGE TERMINAL (R)	
	113	PQHR11315Z	GUIDE, SPEAKER	ABS-HB
	114	L0AA02A00095	SPEAKER	
	115	PQHS10784Y	SPACER, SPEAKER NET	
	116	PQJC10056W	BATTERY TERMINAL	
	117	PNKE1053Z1	COVER, EP CAP	
	118	PNKF1090Y1	CABINET COVER	ABS-HB
	119	PNKE1052Z2	COVER, RUBBER GRIP	
	120	PNHS1079Z	SPACER, BATTERY	
	121	PNKK1038Z1	LID, BATTERY	ABS-HB

16.5.2.2. Main P.C. Board Parts

Note:

(*1) Reconfirm the model No. written on the handset's name plate when replacing PCB100. Because the model No. of the optional handset may differ from the included handset.

(*2) When replacing IC3 or X1, make the adjustment using PNZZTG6541BX. Refer to **Handset** (P.57) of Things to Do after Replacing IC or X'tal.

(*3) When replacing the handset LCD, See **How to Replace the Handset LCD** (P.49).

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB100	PNWPGA652BXR	MAIN P.C.BOARD ASS'Y (RTL) (*1)	
			(ICs)	
	IC1	C2HBCY000062	IC(BBIC)	
	IC3	PNWIGA652BXR	IC(EEPROM)(*2)	
	IC4	C0DBZYY00357	IC	
			(TRANSISTORS)	
	Q4	B1ADGE000004	TRANSISTOR(SI)	
	Q5	UN9219J	TRANSISTOR(SI)	S
	Q6	UN9219J	TRANSISTOR(SI)	S
	Q9	2SC6054JSL	TRANSISTOR(SI)	
			(DIODES)	
	D7	MA2ZD0200L	DIODE(SI)	
	D13	MA8043M	DIODE(SI)	S
	D14	MA8043M	DIODE(SI)	S
	D21	MA8043M	DIODE(SI)	S
	D22	MA8043M	DIODE(SI)	S
	DA801	B0DDCD000001	DIODE(SI)	
			(LEDS)	
	LED1	B3ACB0000190	LED	
	LED2	B3ACB0000190	LED	
	LED3	B3ACB0000190	LED	
	LED4	B3ACB0000190	LED	
	LED5	B3ACB0000190	LED	
	LED6	B3ACB0000190	LED	
	LED12	B3ACB0000216	LED	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
			(COILS)	
	C812	PQLQR4C8N2J	COIL	S
	L6	G1C1R0MA0072	COIL	
	L13	G1CR18J00004	COIL	
			(RESISTOR ARRAYS)	
	RA2	D1H83314A013	RESISTOR ARRAY	S
	RA3	D1H433120001	RESISTOR ARRAY	
	RA4	D1H433220001	RESISTOR ARRAY	
	RA5	EXB28V103	RESISTOR ARRAY	
			(IC FILTERS)	
	L9	J0JCC0000287	IC FILTER	
	L29	J0JDC0000045	IC FILTER	
	L72	J0JCC0000276	IC FILTER	
	R308	J0JCC0000286	IC FILTER	
			(RESISTORS)	
	R3	ERJ2GEJ152	1.5k	
	R4	ERJ2GEJ473	47k	
	R5	ERJ2GEJ473	47k	
	R6	ERJ2GEJ102	1k	
	R7	ERJ2GEJ104	100k	
	R11	ERJ2GE0R00	0	
	R21	ERJ2GEJ104	100k	
	R22	ERJ2GEJ332	3.3k	
	R23	ERJ2GEJ100	10	
	R24	ERJ2GEJ391	390	
	R25	ERJ2GEJ222	2.2k	
	R26	ERJ2GEJ332	3.3k	
	R27	ERJ2GEJ222	2.2k	
	R28	ERJ3GEYJ222	2.2k	
	R31	ERJ2GEJ104	100k	
	R32	ERJ2GEJ104	100k	
	R33	ERJ2GEJ104	100k	
	R34	ERJ2GEJ391	390	
	R43	ERJ2GE0R00	0	
	R45	ERJ6RSJR10V	0.1	
	R64	ERJ2GEJ222	2.2k	
	R66	ERJ2GEJ103	10k	
	R67	ERJ2GEJ103	10k	
	R68	ERJ2GEJ103	10k	
	R69	ERJ2GEJ103	10k	
	R73	ERJ2GEJ330	33	
	R74	ERJ2GEJ330	33	
	R152	ERJ2GE0R00	0	
	R306	ERJ2GEJ101	100	
	R502	ERJ2GE0R00	0	
	R507	ERJ2GE0R00	0	
	R509	ERJ2GEJ560X	56	
	R561	ERJ2GEJ221	220	
	R563	ERJ2GE0R00	0	
	R806	ERJ2GEJ471	470	
	R807	ERJ2GEJ471	470	
	L74	ERJ2GEJ100	10	
			(CAPACITORS)	
	C2	F2A0J6810012	680	
	C4	ECUE1H390JCQ	39p	
	C5	ECUE1A104KBQ	0.1	
	C8	ECUE1H100DCQ	10p	
	C9	ECUE1H120JCQ	12p	
	C11	ECUE1A104KBQ	0.1	
	C12	PQCUV0J106KB	10	
	C13	ECUE1A104KBQ	0.1	
	C14	ECUV1C393KBV	0.039	
	C15	ECUE1H390JCQ	39p	
	C16	ECUV1C393KBV	0.039	
	C17	ECUE1H100DCQ	10p	
	C18	ECUE1H100DCQ	10p	
	C20	ECJ1VB0G106M	10	
	C21	ECUV1A105KBV	1	
	C22	ECUE1A104KBQ	0.1	
	C23	ECUV1C104KBV	0.1	
	C24	ECUV1A105KBV	1	
	C25	ECUV1A225KBV	2.2	
	C26	ECJ1VB0G106M	10	

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	C29	ECUV1A105KBV	1	
	C30	ECJ1VB0G106M	10	
	C31	ECUE0J105KBQ	1	
	C32	ECUV1A105KBV	1	
	C33	ECUE1A104KBQ	0.1	
	C36	ECUE1A104KBQ	0.1	
	C37	ECJ1VB0G106M	10	
	C40	ECUE1A104KBQ	0.1	
	C41	ECUE1A104KBQ	0.1	
	C43	ECUE1A104KBQ	0.1	
	C44	ECUE0J105KBQ	1	
	C45	ECUE1A104KBQ	0.1	
	C46	ECUE1H100DCQ	10p	
	C51	ECJ1VB0G106M	10	
	C56	ECUV1A105KBV	1	
	C57	ECUV1A105KBV	1	
	C58	ECUE0J105KBQ	1	
	C72	ECUE1H100DCQ	10p	
	C73	ECUE1H100DCQ	10p	
	C76	ECUE1H100DCQ	10p	
	C77	ECUE1H100DCQ	10p	
	C79	ECUE1H101JCQ	100p	
	C80	ECUE1H390JCQ	39p	
	C81	ECUE1H101JCQ	100p	
	C82	ECUE1H471KBQ	470p	
	C83	ECUE1H100DCQ	10p	
	C86	F1J0J2260002	22	
	C96	ECUE1H100DCQ	10p	
	C97	ECUE1H100DCQ	10p	
	C110	ECUE1H102KBQ	0.001	
	C113	ECUE1H100DCQ	10p	
	C127	ECUE1H102KBQ	0.001	
	C152	ECUE1H102KBQ	0.001	
	C172	ECUE1A104KBQ	0.1	
	C183	ECUE1H100DCQ	10p	
	C184	ECUE1H100DCQ	10p	
	C185	ECUE1H102KBQ	0.001	
	C188	ECUV1A105KBV	1	
	C504	ECUV1C105KBV	1	
	C505	ECUE0J105KBQ	1	
	C805	F1G1H2R4A480	2.4p	
	C806	F1G1H2R4A480	2.4p	
	C810	F1G1H2R5A480	2.5p	
	C811	ECUE1H101JCQ	100p	
	C813	F1G1H1R6A480	1.6p	
	C820	F1G1H1R8A480	1.8p	
	C822	ECUE1H100DCQ	10p	
	C825	ECUE1H100DCQ	10p	
	C826	ECUE1H100DCQ	10p	
	C859	F1G1H2R0A480	2p	
	C863	F1G1H1R8A480	1.8p	
	C895	F1G1H1R3A480	1.3p	
	C896	F1G1H1R8A480	1.8p	
	C897	F1G1H240A557	24p	
	L809	F1G1H1R0A480	1p	
			(OTHERS)	
	MIC100	L0CBAY000032	MICROPHONE	
	E101	L5DYBYY00001	LIQUID CRYSTAL DISPLAY (*3)	
	E102	PNHR1295Z	TRANSPARENT PLATE, LCD	PMMA-HB
	E103	PNHR1270Z	GUIDE, LCD	ABS-HB
	E104	PNHX1263Z	COVER, LCD	
	E105	PNLA1020Z	ANTENNA	
	E106	PNVE1002Z	BATTERY TERMINAL	ABS-HB
	CN4	K2HD103D0001	JACK	
⚠	F1	K5H252Y00002	FUSE	
	X1	H0J138500003	CRYSTAL OSCILLATOR (*2)	S

16.5.2.3. LED Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB101	PNWP2TGA652R	LED P.C.BOARD ASS'Y (RTL)	
			(LED)	
	LED	B3AFB0000211	LED	

16.5.3. Charger Unit

16.5.3.1. Cabinet and Electrical Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	200	PNLC1010ZB	CHARGER UNIT ASS'Y without NAME PLATE (RTL)	
	200-1	PNKM1130Z1	CABINET BODY	PS-HB
	200-2	PNJT1010Z	CHARGE TERMINAL	
	200-3	PNKF1098Z1	CABINET COVER	PS-HB
	200-4	PQHA10023Z	RUBBER PARTS, FOOT CUSHION	

16.5.3.2. Main P.C. Board Parts

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	PCB200	PNWPTGA641CH	MAIN P.C.BOARD ASS'Y (RTL)	
			(JACK)	
	J1	K2ECYB000001	JACK	S
			(RESISTOR)	
	R1	ERG2SJ120	12	
			(FUSE)	
⚠	F1	K5H302Y00003	FUSE	

16.5.4. Accessories

Note:

You can download and refer to the Operating Instructions (Instruction book) on TSN Server.

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
⚠	A1	PQLV219BXY	AC ADAPTOR	
	A2	PQJA10075Z	CORD, TELEPHONE	
	A3	PNKE1054Z1	HANGER, BELT CLIP	ABS-HB

16.5.5. Screws

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
	A	XTB26+8GFJ	TAPPING SCREW	
	B	XTB2+8GFJ	TAPPING SCREW	

16.5.6. Fixtures and Tools

Note:

(*1) See **Equipment Required** (P.50), and **The Setting Method of JIG** (P.50)

(*2) When replacing the Handset LCD, See **How to Replace the Handset LCD** (P.49)

Safety	Ref. No.	Part No.	Part Name & Description	Remarks
		PQZZ1CD300E	JIG CABLE (*1)	
		PNZZTG6541BX	BATCH FILE CD-ROM (*1)	
		PQZZ430PIR	TIP OF SOLDERING IRON (*2)	
		PQZZ430PRB	RUBBER OF SOLDERING IRON (*2)	

A0449860