


Service Manual

LED TV

Model No. **TH-55CX600S**

Chassis: LA59

Destination: SINGAPORE

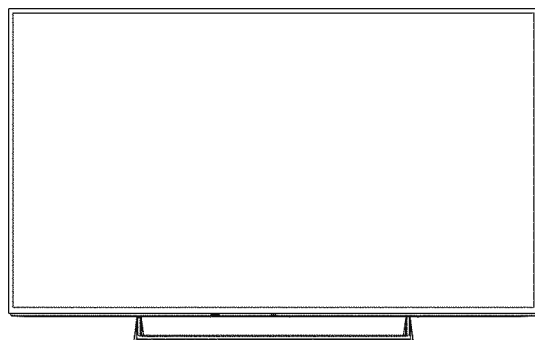

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE		PAGE
1 Safety Precautions -----	3	5.5. System Information -----	11
1.1. General Guidelines-----	3	5.5.1. How to access -----	11
1.1.1. Leakage Current Cold Check-----	3	5.5.2. How to exit -----	11
1.1.2. Leakage Current Hot Check (See Figure		5.6. Hotel mode -----	12
1.)-----	3	5.6.1. Purpose-----	12
2 Warning -----	4	5.6.2. Access command to the Hotel mode setup	
2.1. Prevention of Electrostatic Discharge (ESD)		menu -----	12
to Electrostatically Sensitive (ES) Devices-----	4	5.6.3. To exit the Hotel mode setup menu-----	12
2.2. About lead free solder (PbF)-----	5	5.6.4. Explain the Hotel mode setup menu -----	12
3 Service Navigation -----	6	5.7. Data Copy by USB Memory -----	13
3.1. Service Hint-----	6	5.7.1. Purpose-----	13
4 Specifications -----	7	5.7.2. Preparation-----	13
5 CS Maintenance Menu -----	9	5.7.3. Data copy from TV set to USB Memory -----	14
5.1. How to enter into CS Maintenance Menu -----	9	5.7.4. Data copy from USB Memory to TV set -----	15
5.1.1. Purpose -----	9	6 Troubleshooting Guide -----	16
5.1.2. Key command -----	9	6.1. Check of the IIC bus lines-----	16
5.1.3. How to exit-----	9	6.1.1. How to access -----	16
5.2. Repack -----	9	6.1.2. Self-check indication only -----	16
5.3. EDID Clock-----	10	6.1.3. Self-check indication and forced to factory	
5.4. USB HDD Drive Check-----	10	shipment setting -----	16

6.1.4. Exit	16
6.1.5. Screen display	16
6.2. Power LED Blinking timing chart	17
6.3. Method of detecting SOS	17
6.4. LCD Panel test mode	18
6.5. No Power	18
7 Disassembly and Assembly Instructions	19
7.1. Key Button & Speaker	19
7.2. Vesa & LED Panel	20
7.3. PCB Install	21
7.4. WIFI Installation	22
7.5. Screwing	23
7.6. Fan Bag Assembly	24
7.7. Bottom Carton	25
7.8. Back Cover Installation	26
8 Measurements and Adjustments	27
8.1. Voltage chart of A-board	27
8.2. Voltage chart of P-board	27
9 Block Diagram	28
9.1. Main Block Diagram	28
10 Wiring Connection Diagram	29
10.1. Wire Dressing 1	29
10.2. Wire Dressing 2	30
10.3. Wire Dressing 3	31
11 Schematic Diagram	32
12 Printed Circuit Board	60
13 Exploded View and Replacement Parts List	67

1 Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.
4. When conducting repairs and servicing, do not attempt to modify the equipment, its parts or its materials.
5. When wiring units (with cables, flexible cables or lead wires) are supplied as repair parts and only one wire or some of the wires have been broken or disconnected, do not attempt to repair or re-wire the units. Replace the entire wiring unit instead.
6. When conducting repairs and servicing, do not twist the Faston connectors but plug them straight in or unplug them straight out.

1.1.1. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be 8.5Mohm to 13Mohm. When the exposed metal does not have a return path to the chassis, the reading must be ∞ .

1.1.2. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5kohm, 10 watts resistor, in parallel with a 0.15 μ F capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

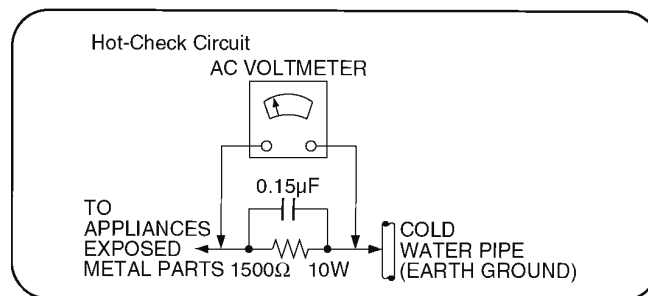


Figure 1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor [chip] components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as [anti-static (ESD protected)] can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise ham less motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol **PbF** stamped on the back of PCB.


Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

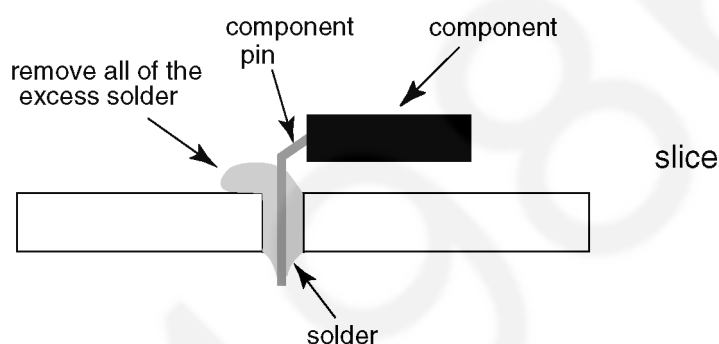

3 Service Navigation

3.1. Service Hint

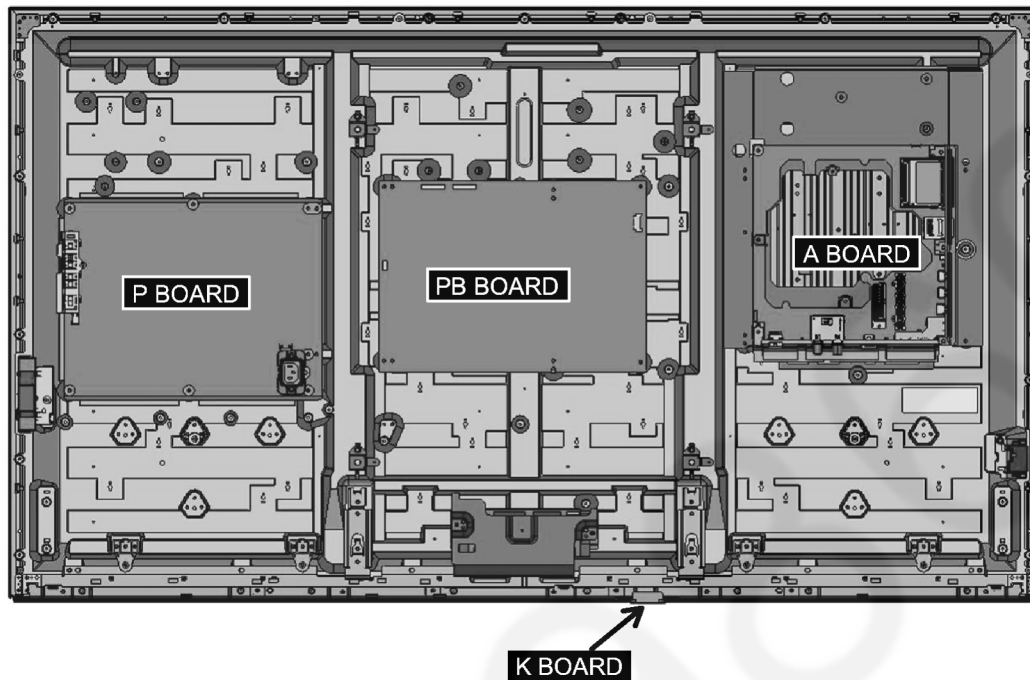

Board Name	Main Device	Remarks
A BOARD	Main(MTK IC)	Repairable
P BOARD	Power Supply / Switch	Repairable
K BOARD	LED/ RM/ CATS	Repairable
PB BOARD	Power Supply / LED Driver	Repairable

4 Specifications

Dimensions (W × H × D)	1 242 mm × 768 mm × 235 mm (With Pedestal) 1 242 mm × 719 mm × 68 mm (TV only)	
Mass	21.5 kg Net (With Pedestal) 19.5 kg Net (TV only)	
Power source	AC 220-240 V, 50 / 60 Hz	
Rated power consumption	231 W	
Standby power consumption	0.50 W	
Visible screen size (diagonal)	139 cm	
Display resolution	3 840 (W) × 2 160 (H)	
Panel	LED backlight Liquid Crystal Display	
Speaker output	20 W (10 W + 10 W)	
Connection terminals		
AV IN (COMPONENT / VIDEO)	VIDEO	RCA PIN Type × 1 1.0 V[p-p] (75 Ω)
	AUDIO L - R	RCA PIN Type × 2 0.5 V[rms]
	Y	1.0 V[p-p] (including synchronisation)
	P_B/C_B, P_R/C_R	±0.35 V[p-p]
HDMI 1 / 2 / 3 input	TYPE A Connectors HDMI1 / 3: 4K, Content Type, Deep Colour, x.v.Colour™ HDMI2: 4K, Content Type, Audio Return Channel, Deep Colour, x.v.Colour™ • This TV supports 'HDAVI Control 5' function.	
ETHERNET	10BASE-T / 100BASE-TX	
USB 1 / 2 / 3	USB1 / 2: DC 5 V, Max. 500 mA [Hi-Speed USB (USB 2.0)] USB3: DC 5 V, Max. 900 mA [SuperSpeed USB (USB 3.0)]	
DIGITAL AUDIO OUT	PCM / Dolby Digital / DTS, Fibre optic	
Receiving systems / Band name	17 SYSTEMS	FUNCTION
	1 PAL B, G, H	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders
	2 PAL I	
	3 PAL D, K	
	4 SECAM B, G	
	5 SECAM D, K	
	6 SECAM K1	
	7 NTSC M (NTSC 3.58 / 4.5 MHz)	
	8 NTSC 4.43 / 5.5 MHz	Playback from Special VCR's or DVD
	9 NTSC 4.43 / 6.0 MHz	
	10 NTSC 4.43 / 6.5 MHz	
	11 NTSC 3.58 / 5.5 MHz	
	12 NTSC 3.58 / 6.0 MHz	
	13 NTSC 3.58 / 6.5 MHz	
	14 SECAM I	
	15 PAL 60 Hz / 5.5 MHz	Playback from Special Disc Players and Special VCR's or DVD
	16 PAL 60 Hz / 6.0 MHz	
	17 PAL 60 Hz / 6.5 MHz	
Receiving channels (Analogue TV)	Digital TV	7 MHz VHF / 8 MHz UHF free-to-air TV broadcast reception
VHF BAND	2 - 12 (PAL / SECAM B, K1) 0 - 12 (PAL B AUST.) 1 - 9 (PAL B N.Z.) 1 - 12 (PAL / SECAM D) 1 - 12 (NTSC M Japan) 2 - 13 (NTSC M USA)	
UHF BAND	21 - 69 (PAL G, H, I / SECAM G, K, K1) 28 - 69 (PAL B AUST.) 13 - 57 (PAL D, K) 13 - 62 (NTSC M Japan) 14 - 69 (NTSC M USA)	
CATV	S1 - S20 (OSCAR) 1 - 125 (USA CATV) C13 - C49 (JAPAN) S21 - S41 (HYPER) Z1 - Z37 (CHINA) 5A, 9A (AUST.)	
Aerial input	VHF / UHF	
Operating Conditions	Temperature	0°C - 40°C
	Humidity	20 % - 80 % RH (non-condensing)

Built-in wireless LAN

Standard compliance and Frequency range*

IEEE802.11a/n

5.15 GHz - 5.35 GHz, 5.47 GHz - 5.85 GHz

IEEE802.11b/g/n

2.400 GHz - 2.4835 GHz

Security

WPA2-PSK (TKIP/AES)

WPA-PSK (TKIP/AES)

WEP (64 bit/128 bit)

*: The frequency and channel differ depending on the country.

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.
- For information about the open source software, refer to [eHELP] (Support > Licence).

5 CS Maintenance Menu

5.1. How to enter into CS Maintenance Menu

5.1.1. Purpose

After exchange parts, check and adjust the contents of adjustment mode.

While pressing [VOLUME (-)] button of the main unit, press [RED] button of the remote control three times within 2 seconds.

Note:

CS Maintenance Menu can not be entered when 3D signal input.

Input 2D signal to enter CS Maintenance Menu.

CS Maintenance Menu	
OPT	
EDIT CLK	
DRV CHECK	

5.1.2. Key command

Press the Cursor key [Up/Down] on the remote control to select the functions.

5.1.3. How to exit

Press the [EXIT] button on the remote control.

5.2. Repack

1. Select [OPT] in CS Maintenance Menu.
2. Press [OK] button or Cursor key [Right] on the remote control.

CS Maintenance Menu	
OPT	7 6 5 4 3 2 1 0
EDIT CLK	OPT1 0 0 0 <u>0</u> 0 1 0 1
DRV CHECK	OPT2 1 1 1 0 1 1 1 0
	OPT3 0 0 0 0 0 0 1
	OPT4 0 0 0 0 0 1 0


row : OPT1
column : 4
0 : Automatic (Default)
1 : Manual

Exit:

Press the [Exit] button or the [Return] button on the remote control.

5.3. EDID Clock


- 1. Select [EDID CLK] in CS Maintenance Menu.
- 2. Press [OK] button or Cursor key [Right] on the remote control.

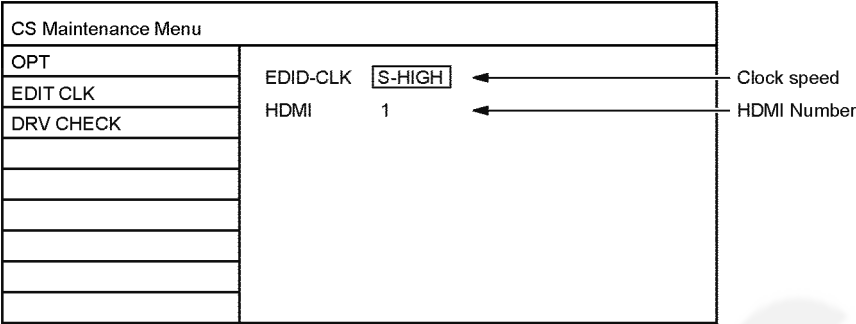

Exit:
Press the [Exit] button or the [Return] button on the remote control.

5.4. USB HDD Drive Check

- 1. Select [DRV CHECK] in CS Maintenance Menu.
- 2. Press [OK] button or Cursor key [Right] on the remote control.

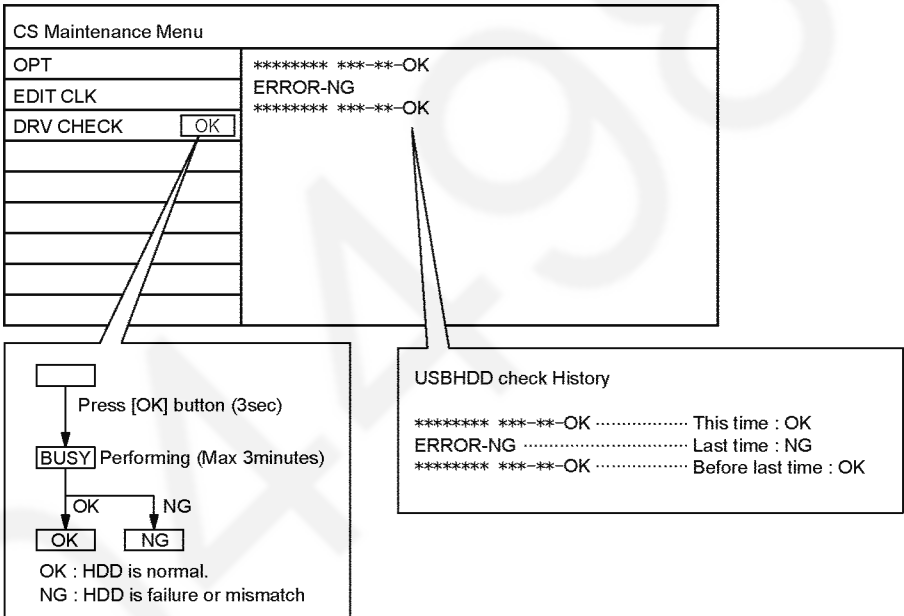



Exit:
Press the [Return] button on the remote control.

5.5. System Information

5.5.1. How to access

1. While pressing [MENU] button on the remote control.
2. To select [?] Help] and then to select [System Information].

Sample only

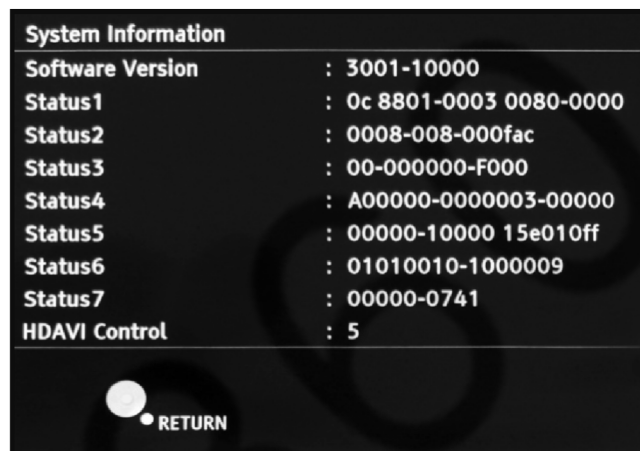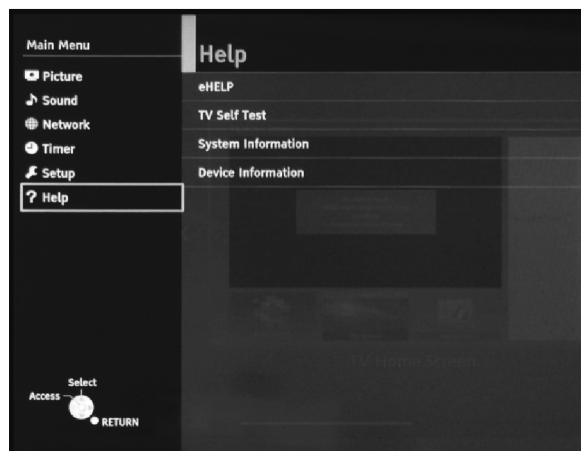

System Information			
SW version	3001-10000-abcde	3001 10000 abcde	Peaks SW GenX Main GenX Sub (optional)
Status1	0c 8801-0003 0080-0000	0c 8801-0003 0080-0000	Outer model ID Inner model ID Panel inch size
Status2	0008-008-000fac	0008 008 000fac	LSI Package LSI Release Model data version
Status3	00-000000-F000	00 00 00 00 F000	Number of bad block in NAND Flash (dec) Peaks reboot counter System crash counter Emergency (SOS) counter Peaks NAND Maker ID
Status4	A00000-0000003-00000	A 00000 0000003 00000	Power-On period (A <= 100hrs, B <= 200hrs, C > 200hrs) Total Power-On time (dec, max is 65535) Power-On timer (dec, max is 1048575) Fixed (always)
Status5	00000-10000 15e010ff	0 0 0 0 0 1 0000 15e010ff	SOS history (latest) SOS history (last time) SOS history (last but one) SOS history (2 nd time after shipping) SOS history (1 st time after shipping) Self-check _0-never selfcheck 1-production selfcheck by "FF" or USCM 2-user selfcheck by pressing "OK" Fixed (always) Panel ID
Status6	01010010-1000009	01010010 1000009	Peaks EEPROM version STM EEPROM version
Status7	00000-0741	00000 0741	STM ROMCOR version AJAX_CE version

5.5.2. How to exit

Press the [RETURN] button on the remote control.

5.6. Hotel mode


5.6.1. Purpose

Restrict a function for hotels.

5.6.2. Access command to the Hotel mode setup menu

In order to display the Hotel mode setup menu, please enter the following command (within 2 seconds).
[TV]: Vol.[Down] + [REMOTE] : AV (3 times)

Then, the Hotel mode setup menu is displayed.

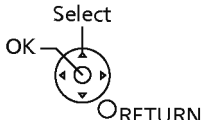Hotel Mode	
Hotel Mode	Off
Initial INPUT	Off
Initial POS	Off
Initial VOL Level	Off
Maximum VOL Level	100
Button Lock	Off
Remote Lock	Off
Private Information	Keep
	

5.6.3. To exit the Hotel mode setup menu

Switch off the power with the [POWER] button on the main unit or the [POWER] button on the remote control.

5.6.4. Explain the Hotel mode setup menu

Item	Function
Hotel Mode	Select hotel mode On/Off
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : Off, Analogue, DVB-C, DVB-T, AV1, AV2, HDMI1, HDMI2, HDMI3 • Off: give priority to a last memory.
Initial POS	Select programme number. Selection : Off/0 to 99 • Off: give priority to a last memory
Initial VOL Level	Adjust the volume when each time power is switched on. Selection/Range : Off/0 to 100 • Off: give priority to a last memory
Maximum VOL Level	Adjust maximum volume. Range : 0 to 100
Button Lock	Select local key conditions. Selection : Off/SETUP/MENU • Off: altogether valid • SETUP: only F-key is invalid (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid (only Volume/Mute can be selected.)
Remote Lock	Select remote control key conditions. Selection : Off/SETUP/MENU • Off: altogether valid • SETUP: only Setup menu is invalid • MENU: Picture/Sound/Setup menu are invalid • VOD: NETFLIX service is invalid
Private Information	Select private information for VIERA Cast is Keep or Reset if Hotel mode is set to [On] when TV power on. Selection : Keep/Reset • Keep: private information for VIERA Cast is keep • Reset: private information for VIERA Cast is reset

5.7. Data Copy by USB Memory


Note:

SD card can not be used for Data Copy.

5.7.1. Purpose


(a) Board replacement (Copy the data when exchanging A-board):

When exchanging A-board, the data in original A-board can be copied to USB Memory and then copy to new A-board.

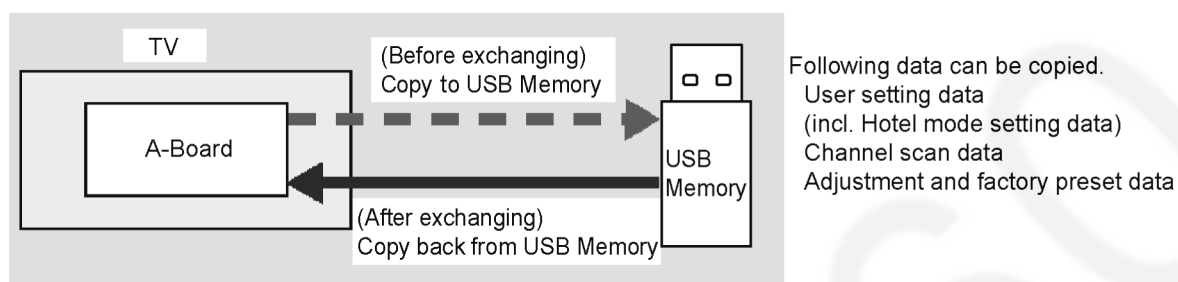

(b) Hotel (Copy the data when installing a number of units in hotel or any facility):

When installing a number of units in hotel or any facility, the data in master TV can be copied to USB Memory and then copy to other TVs.

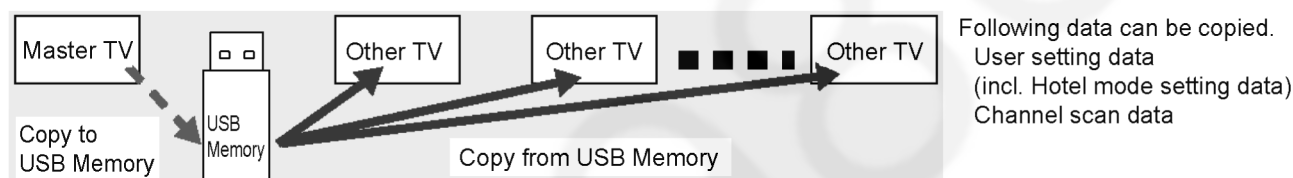

5.7.2. Preparation

Make pwd file as startup file for (a) or (b) in a empty USB Memory.

1. Insert a empty USB Memory to your PC.
2. Right-click a blank area in a USB Memory window, point to New, and then click text document. A new file is created by default (New Text Document.txt).
3. Right-click the new text document that you just created and select rename, and then change the name and extension of the file to the following file name for (a) or (b) and press ENTER.

File name:

- (a) For Board replacement : boardreplace.pwd
- (b) For Hotel : hotel.pwd

Note:

- Please make only one file to prevent the operation error.
- No any other file should not be in USB Memory.


5.7.3. Data copy from TV set to USB Memory

1. Turn on the TV set.
2. Insert USB Memory with a startup file (pwd file) to USB terminal.
On-screen Display will be appeared according to the startup file automatically.
3. Input a following password for (a) or (b) by using remote control.
 - (a) For Board replacement : 2770
 - (b) For Hotel : 4850
 Data will be copied from TV set to USB Memory.
It takes around 2 to 6 minutes maximum for copying.
4. After the completion of copying to USB Memory, remove USB Memory from TV set.
5. Turn off the TV set.

Note:

Following new folder will be created in USB Memory for data from TV set.

- (a) For Board replacement : user_setup
- (b) For Hotel : hotel

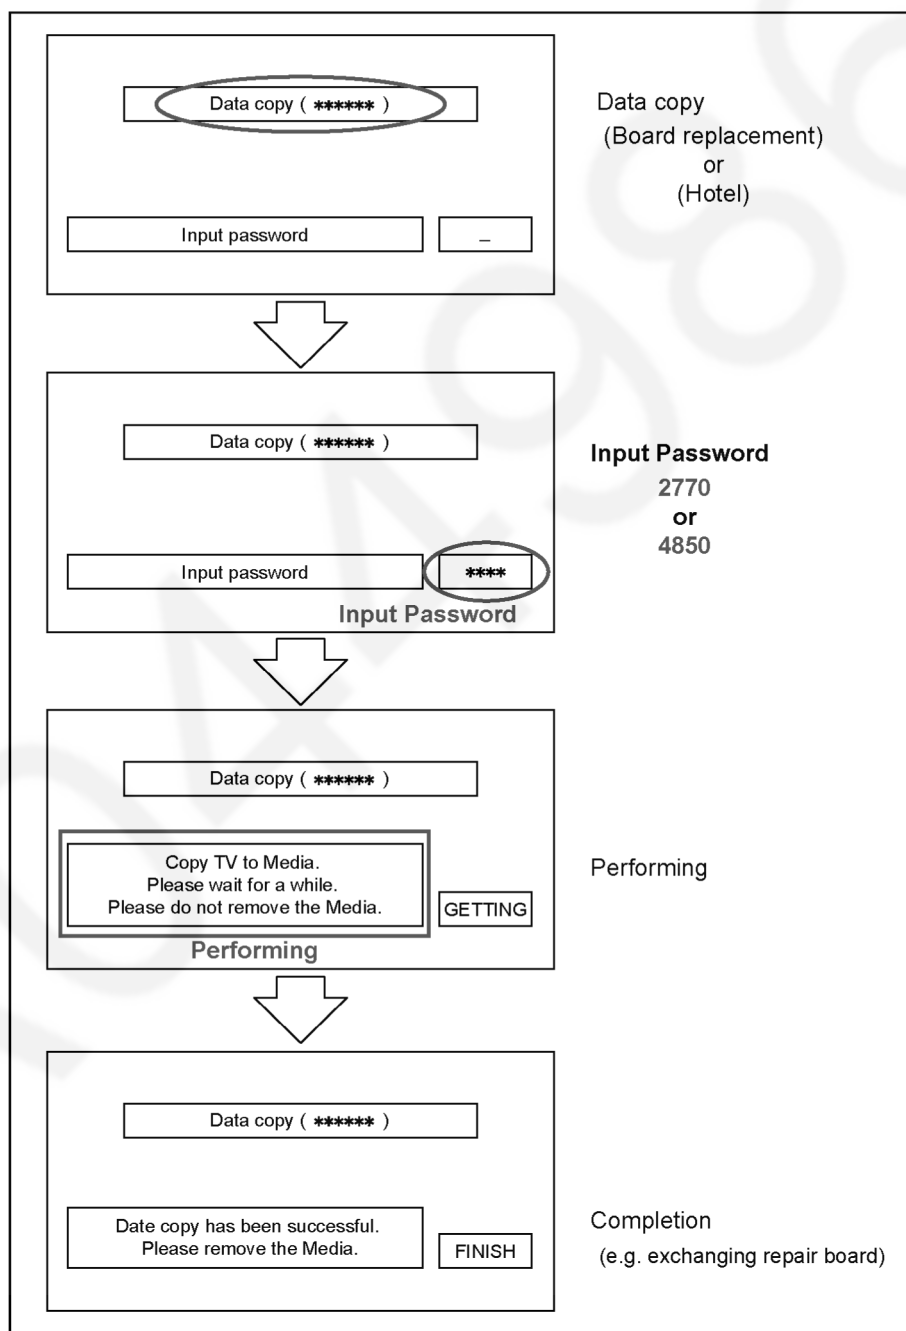


5.7.4. Data copy from USB Memory to TV set

1. Turn on the TV set.
2. Insert USB Memory with Data to USB terminal.
On-screen Display will be appeared according to the Data folder automatically.
3. Input a following password for (a) or (b) by using remote control.
(a) For Board replacement : 2771
(b) For Hotel : 4851
Data will be copied from USB Memory to TV set.
4. After the completion of copying to USB Memory, remove USB Memory from TV set.
(a) For Board replacement : Data will be deleted after copying (Limited one copy).
(b) For Hotel : Data will not be deleted and can be used for other TVs.
5. Turn off the TV set.

Note:

1. Depending on the failure of boards, function of Data copy for board replacement does not work.
2. This function can be effective among the same model numbers.

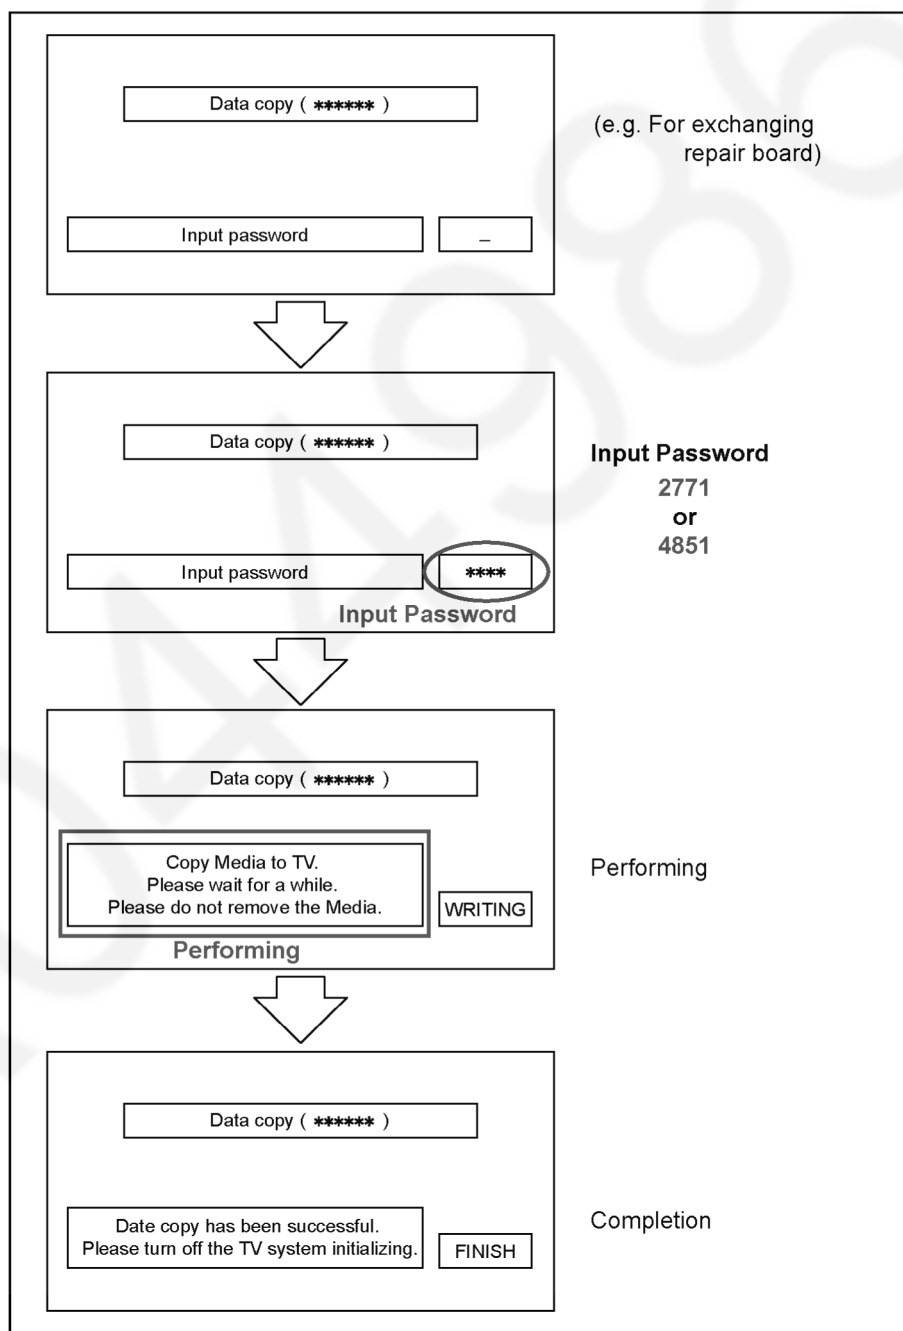

6 Troubleshooting Guide

Use the self-check function to test the unit.

- 1. Checking the IIC bus lines
- 2. Power LED Blinking timing

6.1. Check of the IIC bus lines

6.1.1. How to access

6.1.2. Self-check indication only

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [OK] button on the remote control for more than 3 seconds.

6.1.3. Self-check indication and forced to factory shipment setting

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

6.1.4. Exit

Disconnect the AC cord from wall outlet.

6.1.5. Screen display

Example

55			SELF CHECK COMPLETE		
H14TUN	OK	PEAKS-SOFT	*, ***	MODEL ID	** ***** *****
H38FRC	OK	PEAKS-EEP	**, **, *****		
H07TEMP	OK	LSI-PACKAGE	*, ***		
H17LAN	OK	LSI-RELEASE	*, **		
H00FE	OK	STBY-SOFT	*, **, **		
H00SAT-TU	OK	STBY-EEP	*, **, *****		
H96ID	OK	NVT SOFT	*****		
H97ID2	OK	NVT DATA	*****		
H45BT	OK				
H42WiFi	OK				
H80HDMISW1	OK				

6.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents


When an abnormality has occurred the unit, the protection circuit operates and reset to the stand by mode. At this time, the defective block can be identified by the number of blinks of the Power LED on the front panel of the unit.

Blinking Times	Contents	Check point
1	BL SOS	LCD PANEL P-Board PB-Board
7	SUB 3.3V / 1.0V	P-Board A-Board
9	SOUND SOS	A-Board Speaker
10	NVT SOS	A-Board
13	EMERGENCY SOS	A-Board

6.3. Method of detecting SOS


1. BL_SOS

Detection beginning after one second pass from 'BL_ON'=ON

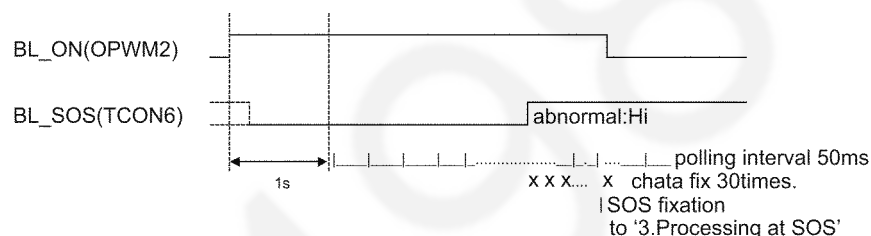


2. TV_SOS

Detection beginning after one second pass from 'AMP_SHUTDOWN'=ON

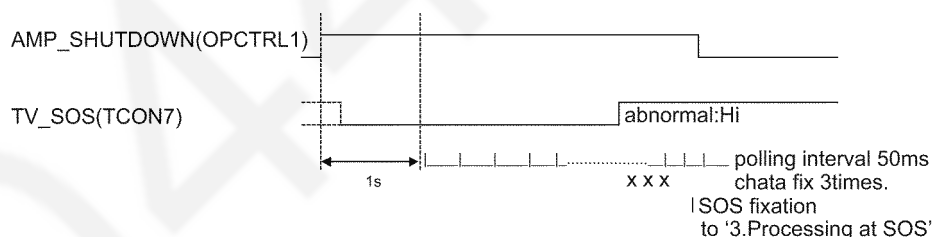

3. SOUND_SOS

Detection beginning 'AMP_SHUTDOWN'=ON

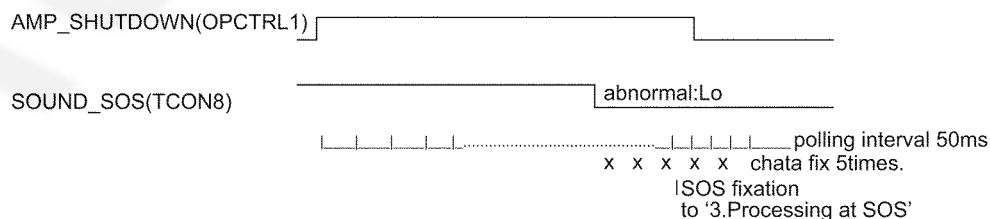

6.4. LCD Panel test mode

Purpose:

To find the possible failure point where in LCD Panel or Printed Circuit Board when the abnormal picture is displayed.

How to Enter:

While pressing [VOLUME (-)] button of the main unit, press [OPTION] button of the remote control three times within 2 seconds.

How to Exit:

Disconnect AC plug from wall outlet.

How to confirm:

If the abnormal picture is displayed, go into LCD Panel test mode to display the several test patterns.

And then, judge by the following method.

Still abnormal picture is displayed: The cause must be in LCD Panel.

Normal picture is displayed: The cause must be in A board.

Remarks:

The test pattern is created by the circuit in LCD Panel.

In LCD Panel test mode, this test pattern is displayed unaffected by signal processing for RF or input signal.


If the normal picture is displayed, LCD Panel must be okay and the cause of failure must be in A board.

6.5. No Power

First check point

There are following 2 states of No Power indication by power LED.


1. No lit
2. Red is lit then turns red blinking a few seconds later. (See 6.2.)

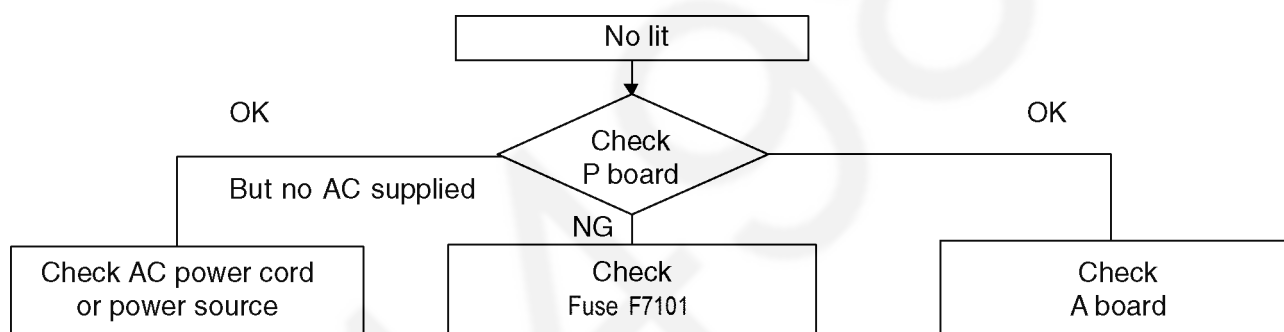

7 Disassembly and Assembly Instructions

7.1. Key Button & Speaker


1. Fix Key button Bracket.
2. Fix speaker bracket & speaker L & R.

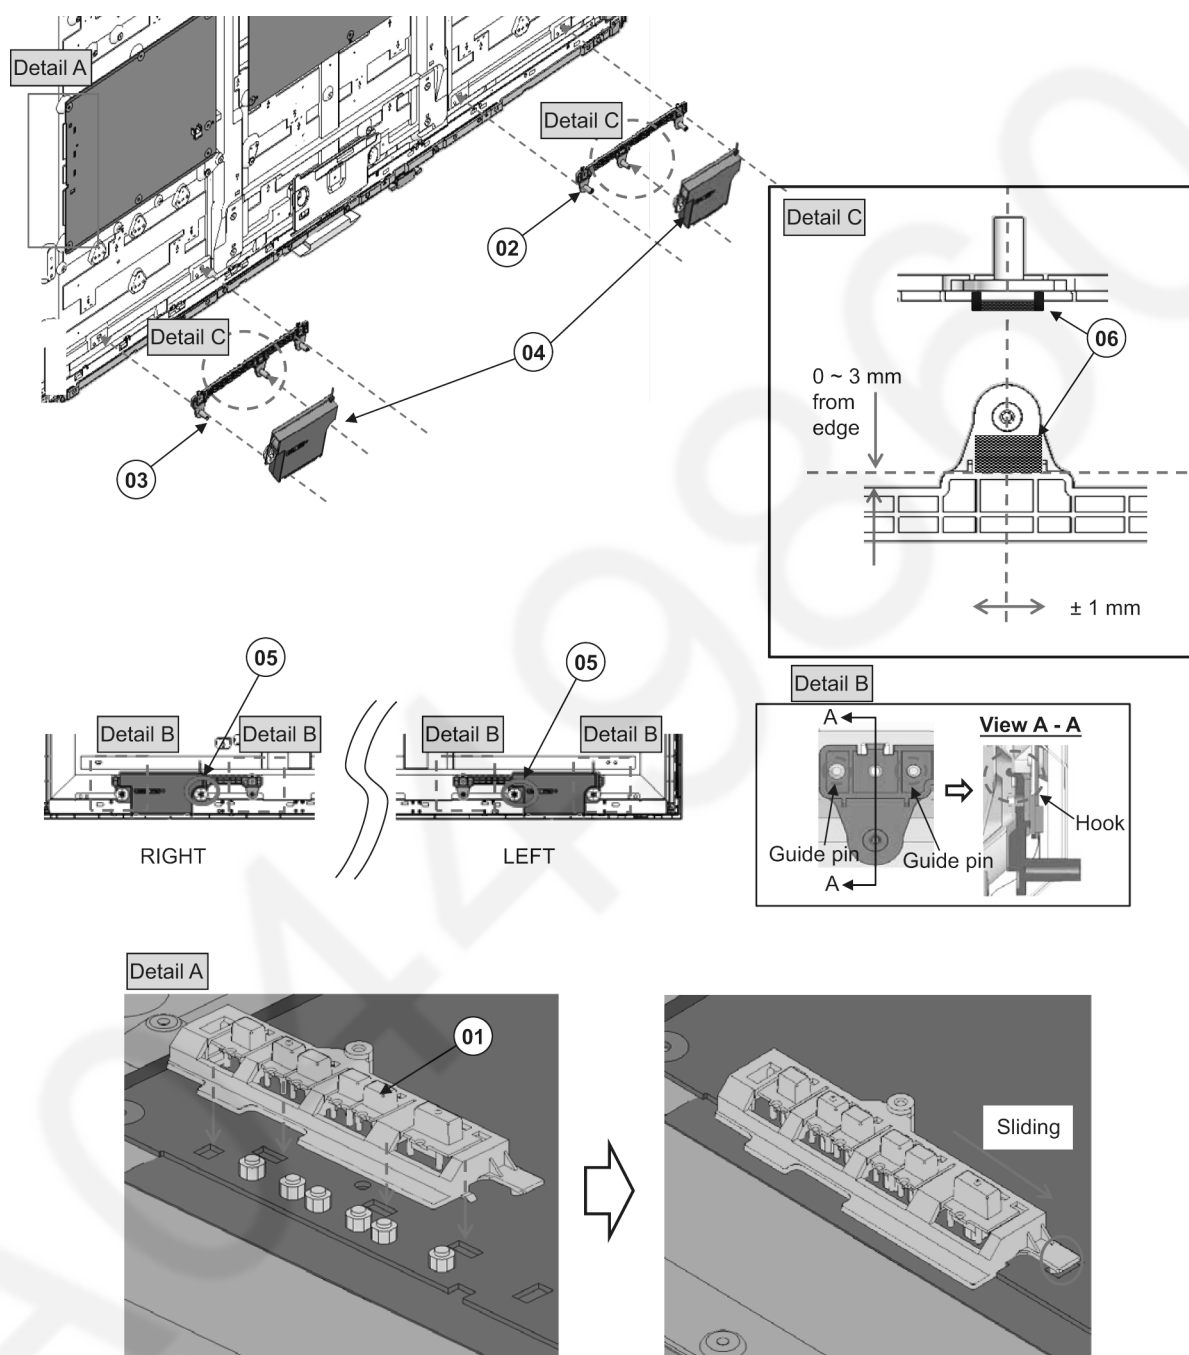

No	Part No	Description	Qty	UOM
01	TBX5ZA03303	KEY_BUTTON_BRACKET	1	PC
02	TKP5ZA53401	SP_BRACKET_LOWER_L	1	PC
03	TKP5ZA56401	SP_BRACKET_LOWER_R	1	PC
04	L0EYAA000086	SPEAKER_L/R	2	PC
05	THTF020J	SCREW (SP2)	2	PC
06	TMK4GA301	FELT (T0.35 × W8 × L25)	2	PC

7.2. Vesa & LED Panel


Fix vesa metal, LED PANEL & Bottom Metal.

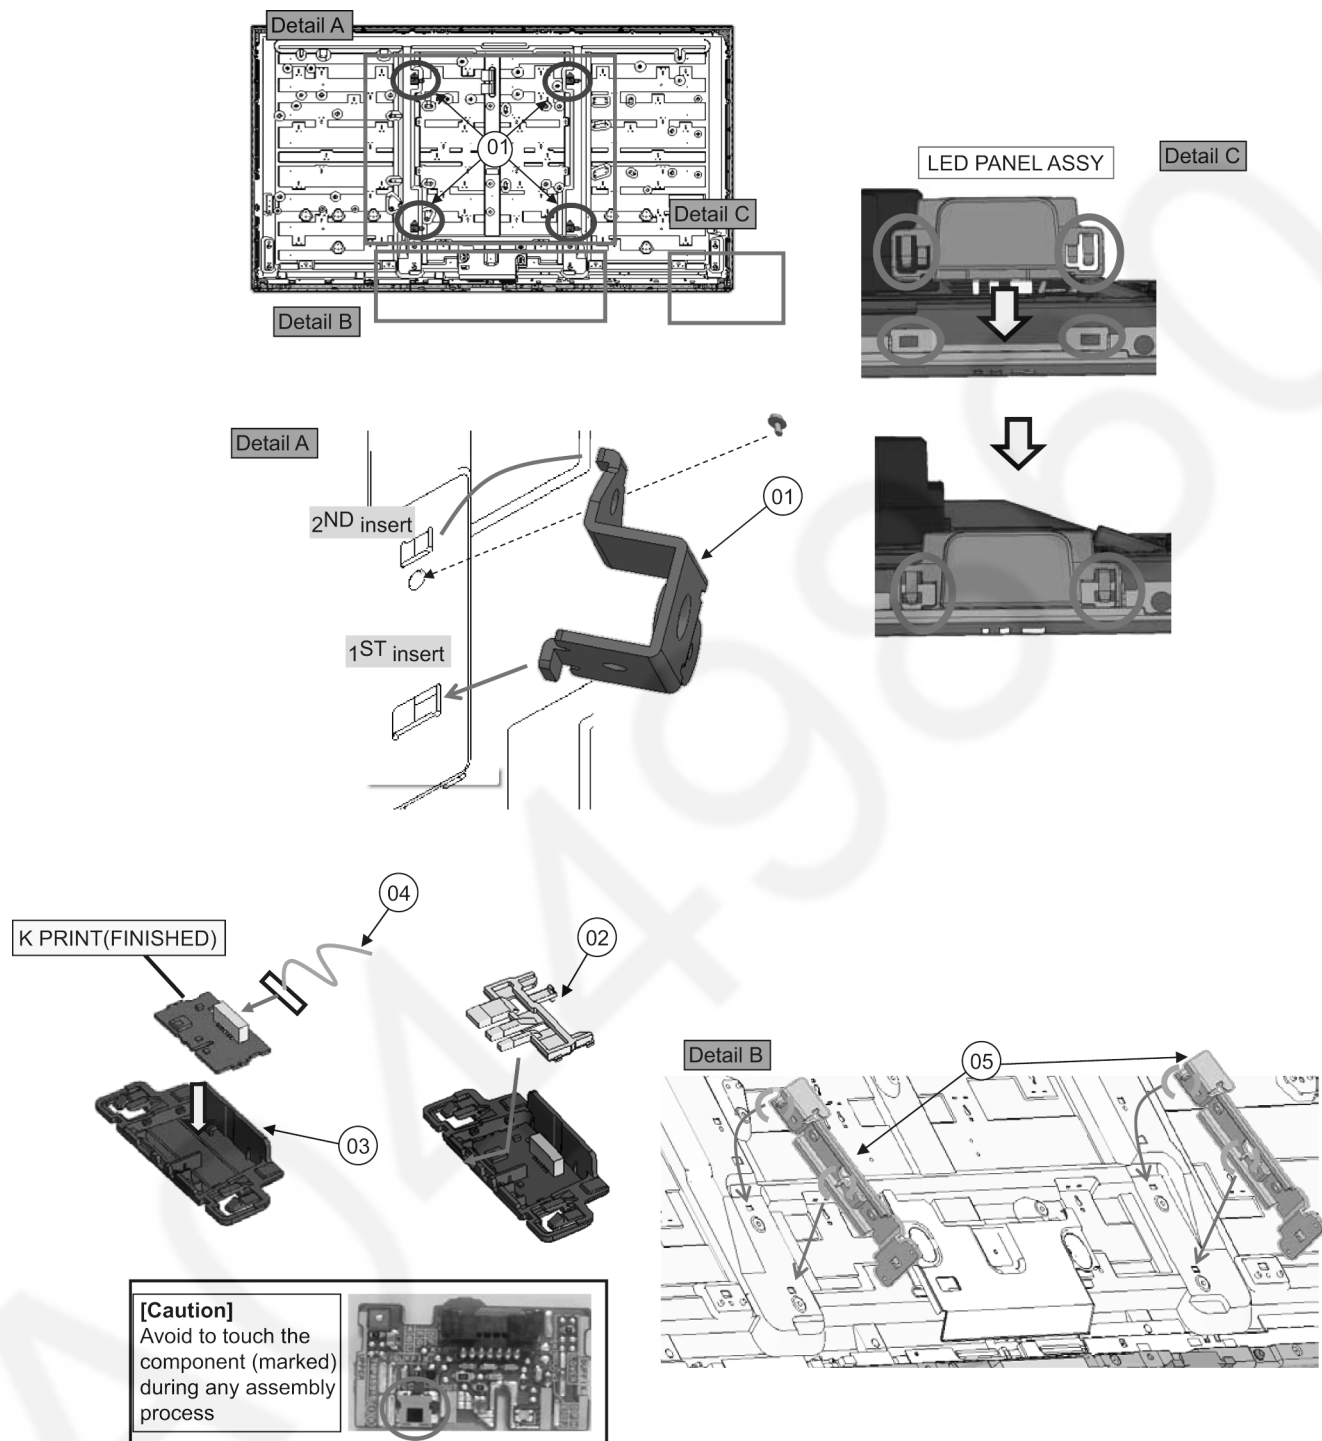

No	Part No	Description	Qty	UOM
01	TUX5ZX0931	VESA_METAL	4	PC
02	TKK5ZC50581	LED_PANEL	1	PC
03	TKP5ZA53601	LED_PANEL_CASE	1	PC
04	TXJA10XAUA	WIRE (A10-K10)	1	PC
05	TUX5ZX1001	BOTTOM_METAL	2	PC

7.3. PCB Install


1. Fix all PCB.
2. Fix Bottom AV Bracket & Side AV Bracket.

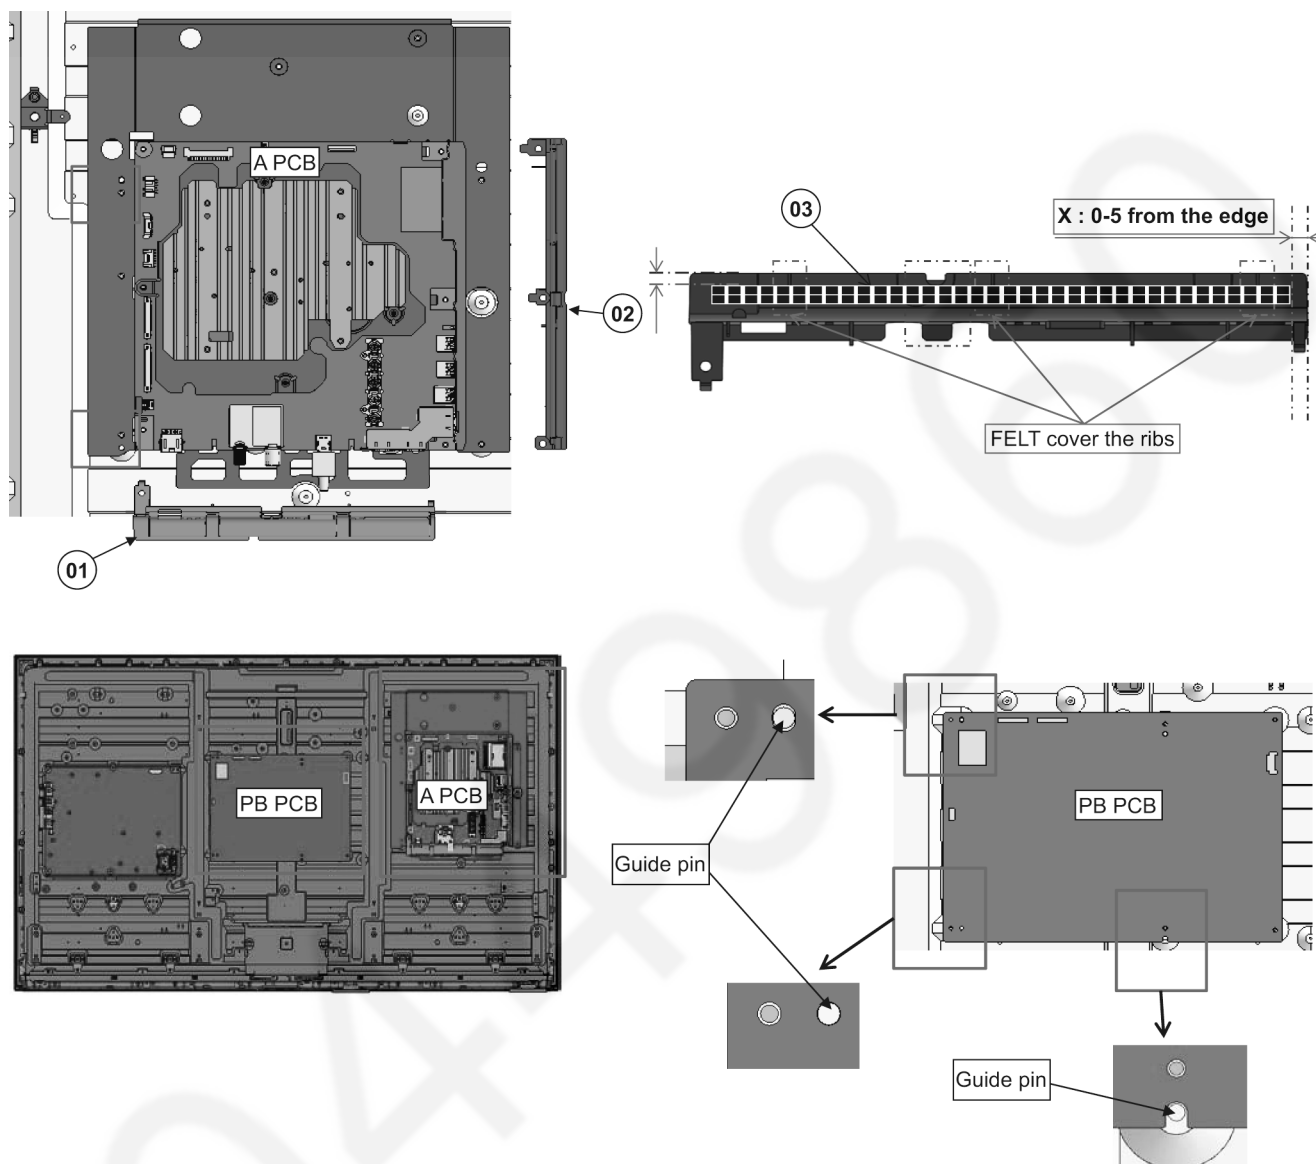

No	Part No	Description	Qty	UOM
01	TKP5ZA52601	BOTTOM_AV_BRACKET	1	PC
02	TKP5ZA42012	SIDE_AV_BRACKET	1	PC
03	TMK4GA362	FELT (T0.45 × W10 × L200)	1	PC

7.4. WIFI Installation


Fix Wifi bracket.

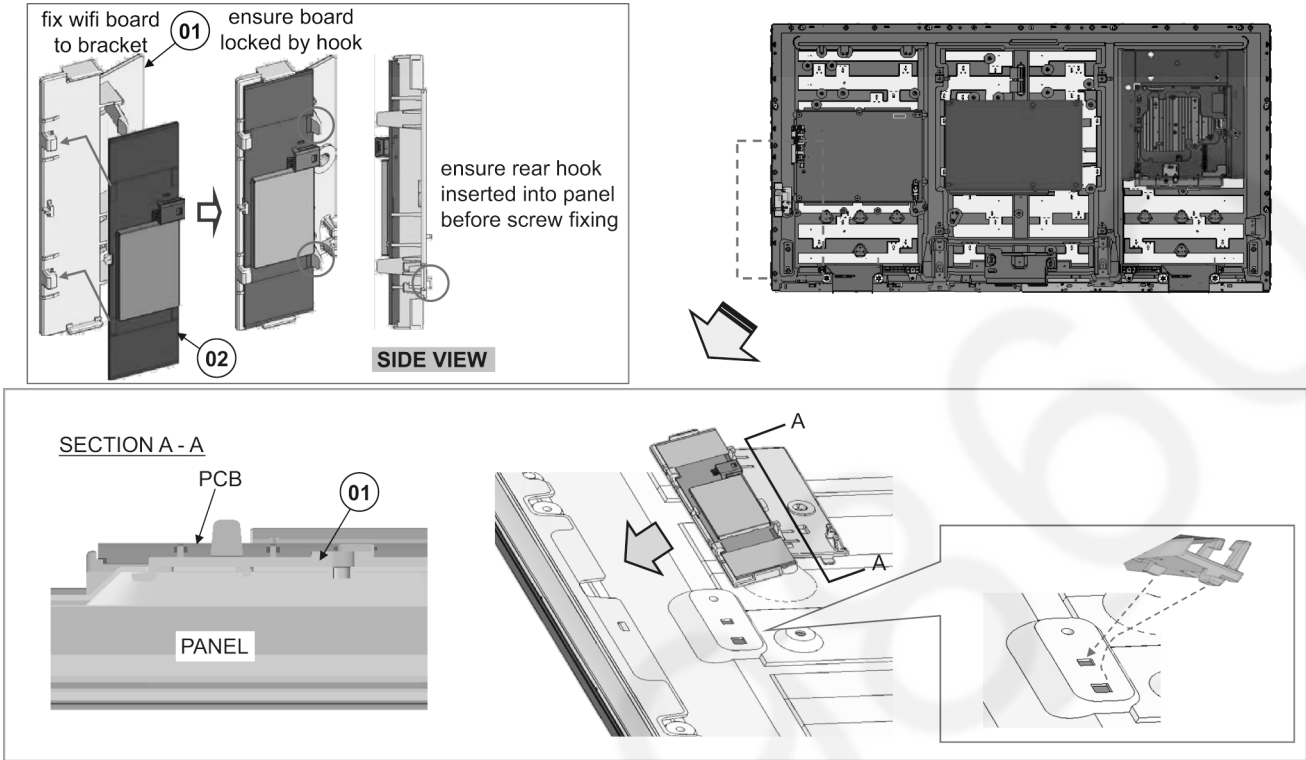

No	Part No	Description	Qty	UOM
01	TKP5ZA52001	WIFI_BRACKET	1	PC
02	N5HBZ0000114	WIFI_MODULE	1	PC

7.5. Screwing

Fix screw follow below specification.

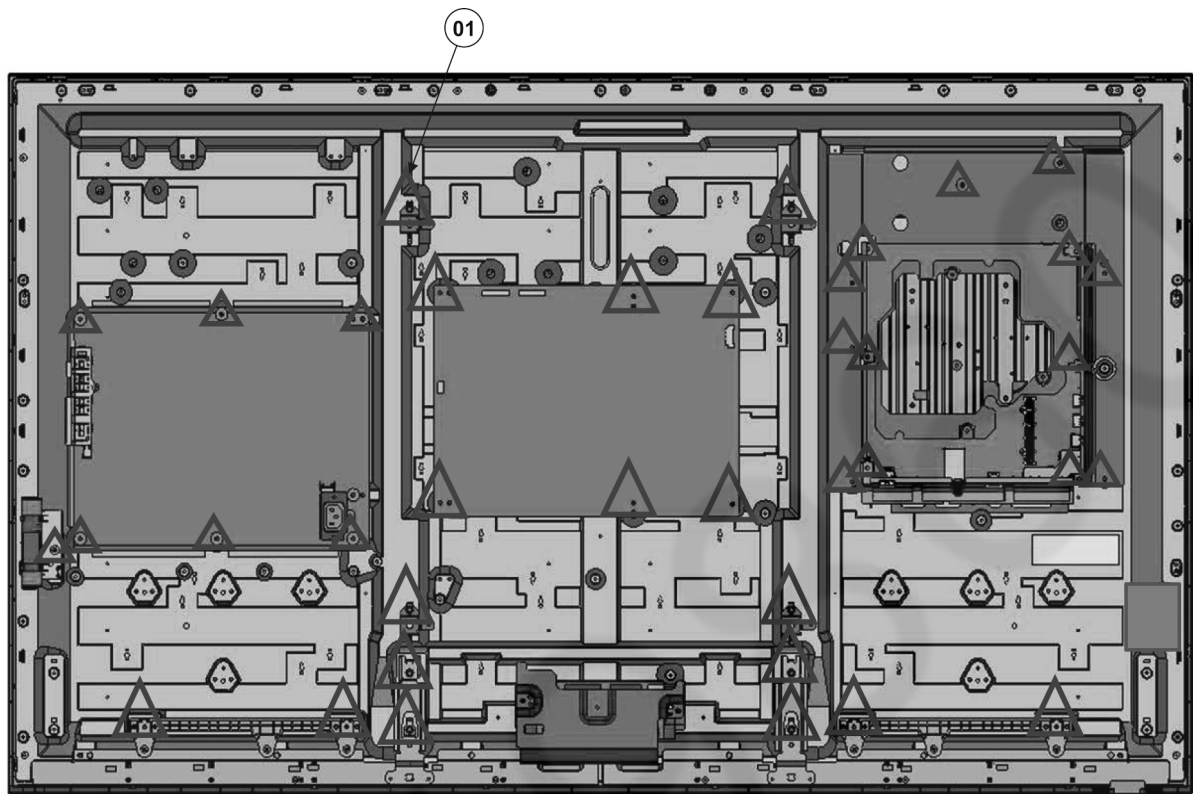


No	Part No	Description	Qty	UOM	Remarks
01	THEJ036J	SC (P6/LP6/A6/WF1/BT1/SP4/VE4/BMT4/HEAT7)	38	PC	6 ± 1kgf.cm

7.6. Fan Bag Assembly

- 1. Insert all part into cover for fan bag.
- 2. Direction and sequence (depend by model - Refer part list for detail).
- 3. Fold cover for fan bag and stick with yellow tape.

[Caution]
Please make sure that Panasonic logo printing at operating manual must in front position.


Note : Depend by model
Refer part list for detail

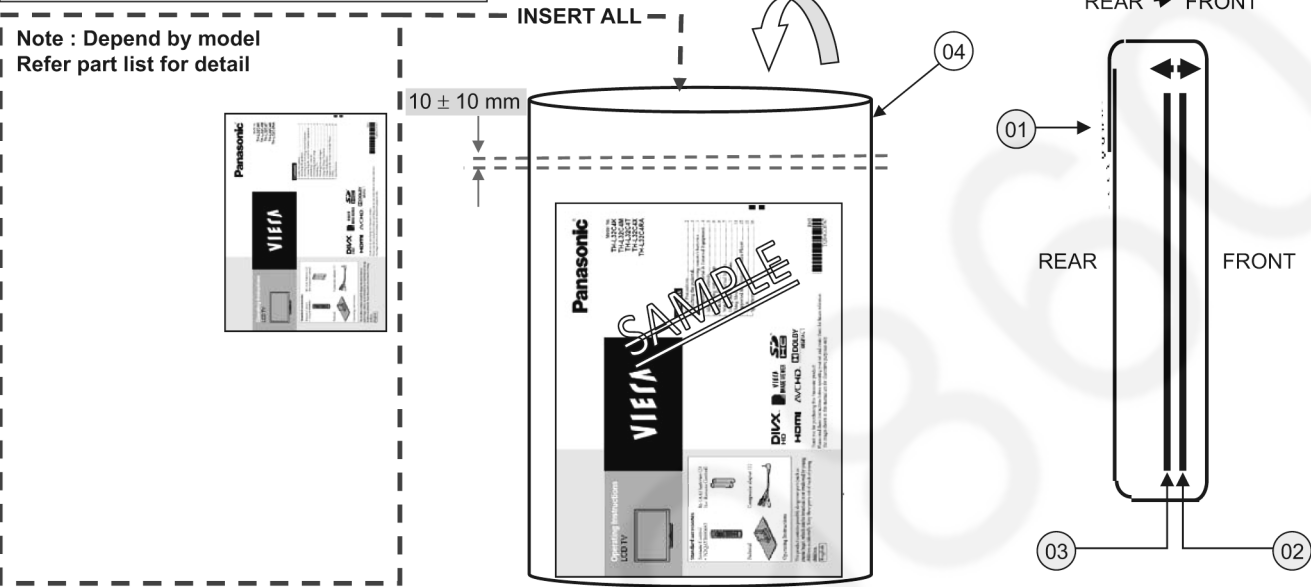

No	Part No	Description	Qty	UOM
01	T5E4G62400	YELLOW TAPE	0.04	MT
02	TQB4GC1329	OIB (EN)	1	PC
03	TQB4GC1337	OIB (ZH_CN)	1	PC
04	XZB20X32A02	BAG	1	PC

7.7. Bottom Carton


Fold bottom carton follow the step.

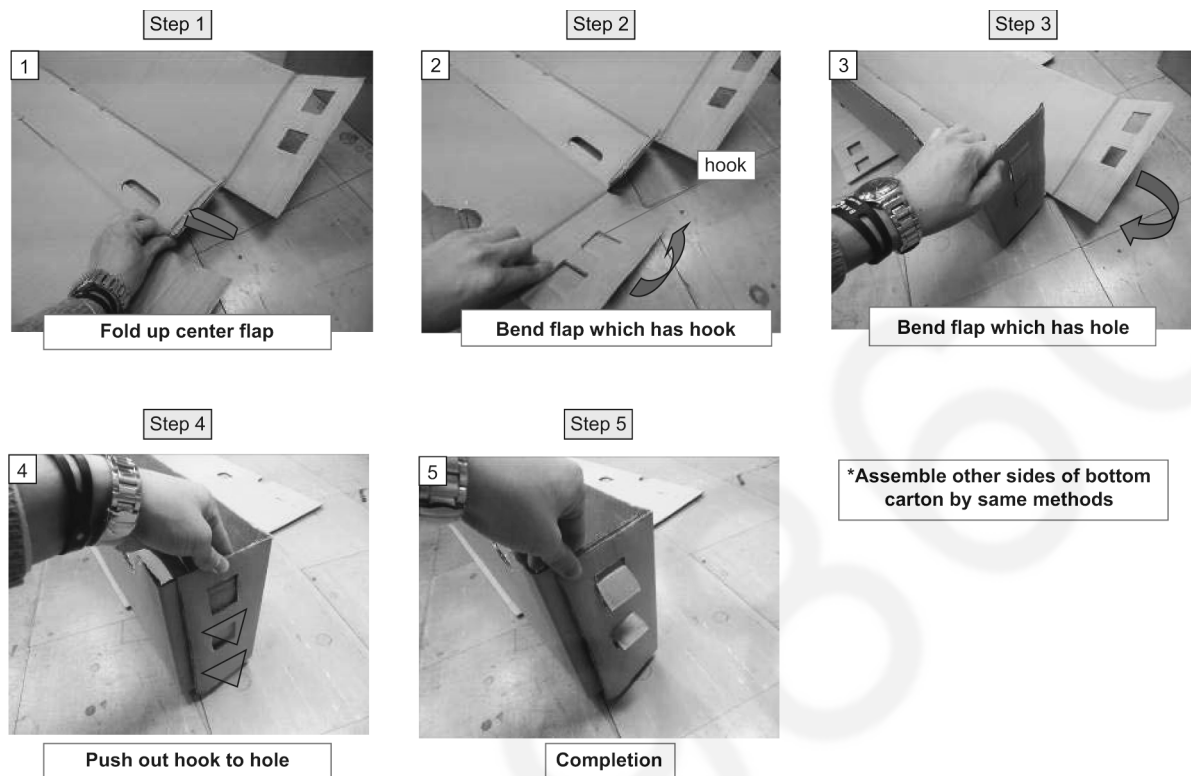

No	Part No	Description	Qty	UOM
01	TPC4GA28201	CARTON_BOTTOM	1	PC

7.8. Back Cover Installation

Install Back cover and fix with screw.

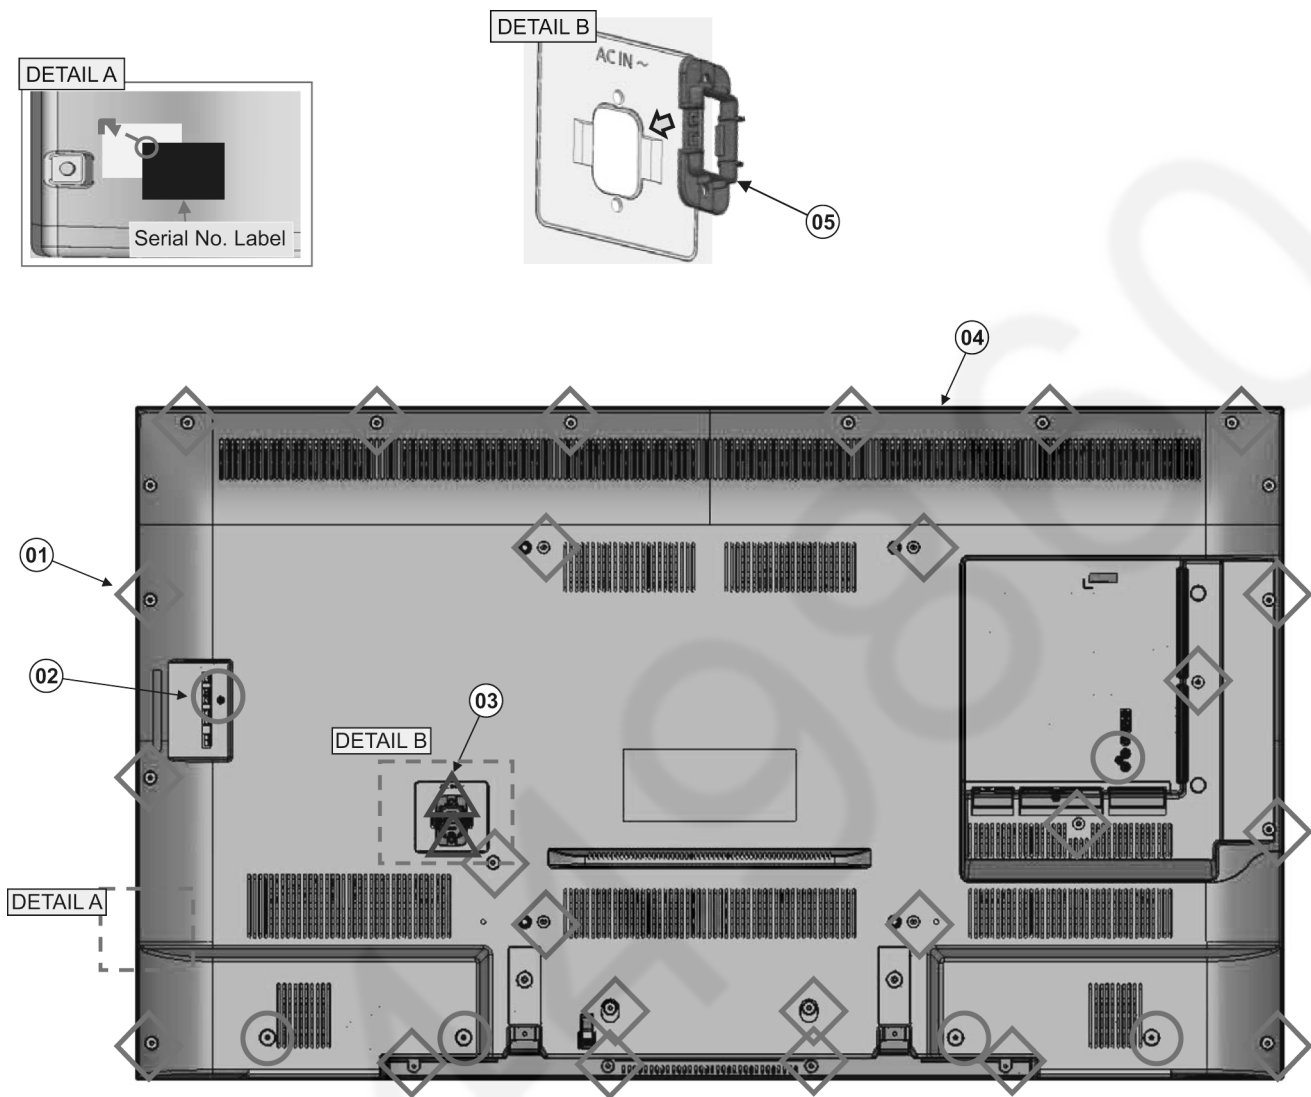

No	Part No	Description	Qty	UOM	Remarks
01	THEC1509	SCREW (BC25)	25	PC	6 ± 1 Kgf.cm
02	THTD037J	SCREW (BC6)	6	PC	6 ± 1 Kgf.cm
03	THEL0239	SCREW (BC2)	2	PC	6 ± 1 Kgf.cm
04	TKU5ZC11601	BACK_COVER	1	PC	
05	TKP5ZA56601	AC_INLET_HOLDER	1	PC	

8 Measurements and Adjustments

8.1. Voltage chart of A-board

Set A-Board to a dummy set and check the satisfaction with the specified voltage as following table.

Checked Name	Test Point	Specification	In/Out	Target Board Suffix
PNL12V	TP5013	12V $\pm$ 1.2V	output	ALL
USB5V	TP5010	5.17V $\pm$ 0.25V	output	ALL
USB1	TP8629	5.0V $\pm$ 0.25V	output	ALL
USB2	TP8655	5.0V $\pm$ 0.25V	output	ALL
USB3	TP8631	5.0V $\pm$ 0.25V	output	ALL
USB-WiFi	TP8648	5.14V $\pm$ 0.20V	output	ALL
SUB3.3V	TP5001	3.39V $\pm$ 0.15V	output	ALL
HDMI3.3V	TP4514	3.35V $\pm$ 0.17V	output	ALL
SUB_AI_3.3V	TP2206	3.3V $\pm$ 0.17V	output	ALL
STB_1.5V	TP8101	1.52V $\pm$ 0.07V	output	ALL
SUB1.0V	TP8100	1.02V $\pm$ 0.05V	output	ALL
AVDD1.0V	TP8102	1.06V $\pm$ 0.05V	output	ALL
NT2.5V	TP9170	2.52V $\pm$ 0.12V	output	ALL
NT1.5V	TP9160	1.52V $\pm$ 0.07V	output	ALL
NT1.1V	TP9150	1.13V $\pm$ 0.06V	output	ALL
HDMI1.1V	TP4503	1.13V $\pm$ 0.06V	output	ALL
WOL3.3V	TP8646	3.3V $\pm$ 0.17V	output	ALL
PHY3.3V	TP8646	3.3V $\pm$ 0.17V	output	ALL
EU_TU_1.8V	TP5704	1.84V $\pm$ 0.1V	output	ALL
LNB_PWR1	TP6702	18V $\pm$ 1.0V	output	Z Only (N.Zealand)
T2_1.1V	TP5705	1.15V $\pm$ 0.11V	output	ALL

8.2. Voltage chart of P-board

Set P-Board to a dummy load and check the satisfaction with the specified voltage as following table.

55/60/65-inch models

Output	Test Point	Specification	
		Step 1	Step 2
16V	TP7410/11/12	<1V	16 $\pm$ 0.6V
5VS	TP7501/02	5.1 $\pm$ 0.2V	5.1 $\pm$ 0.2V
PFC	TP7201/02	<340V	400V $\pm$ 15V

*HOT

40/50-inch models

Output	Test Point	Specification	
		Step 1	Step 2
28V	TP7407/08/09	<1V	27.4 $\pm$ 2V
16V	TP7410/11/12	<1V	15.7 $\pm$ 0.6V
5VS	TP7405/20	5.1 $\pm$ 0.2V	5.1 $\pm$ 0.2V
PFC	TP7201/02	<340V	390V $\pm$ 15V

*HOT


Step 1 Supply to P1 or JK7101 connector in the P-Board. Main power button is OFF.

Step 2 Supply DC 2.5V to TV_SUB_ON TP7416 (55/60/65-inch models), displayed as SWITCH.

Supply DC 2.5V to TV_SUB_ON TP7419 (40/50-inch models), displayed as SWITCH.

9 Block Diagram


9.1. Main Block Diagram

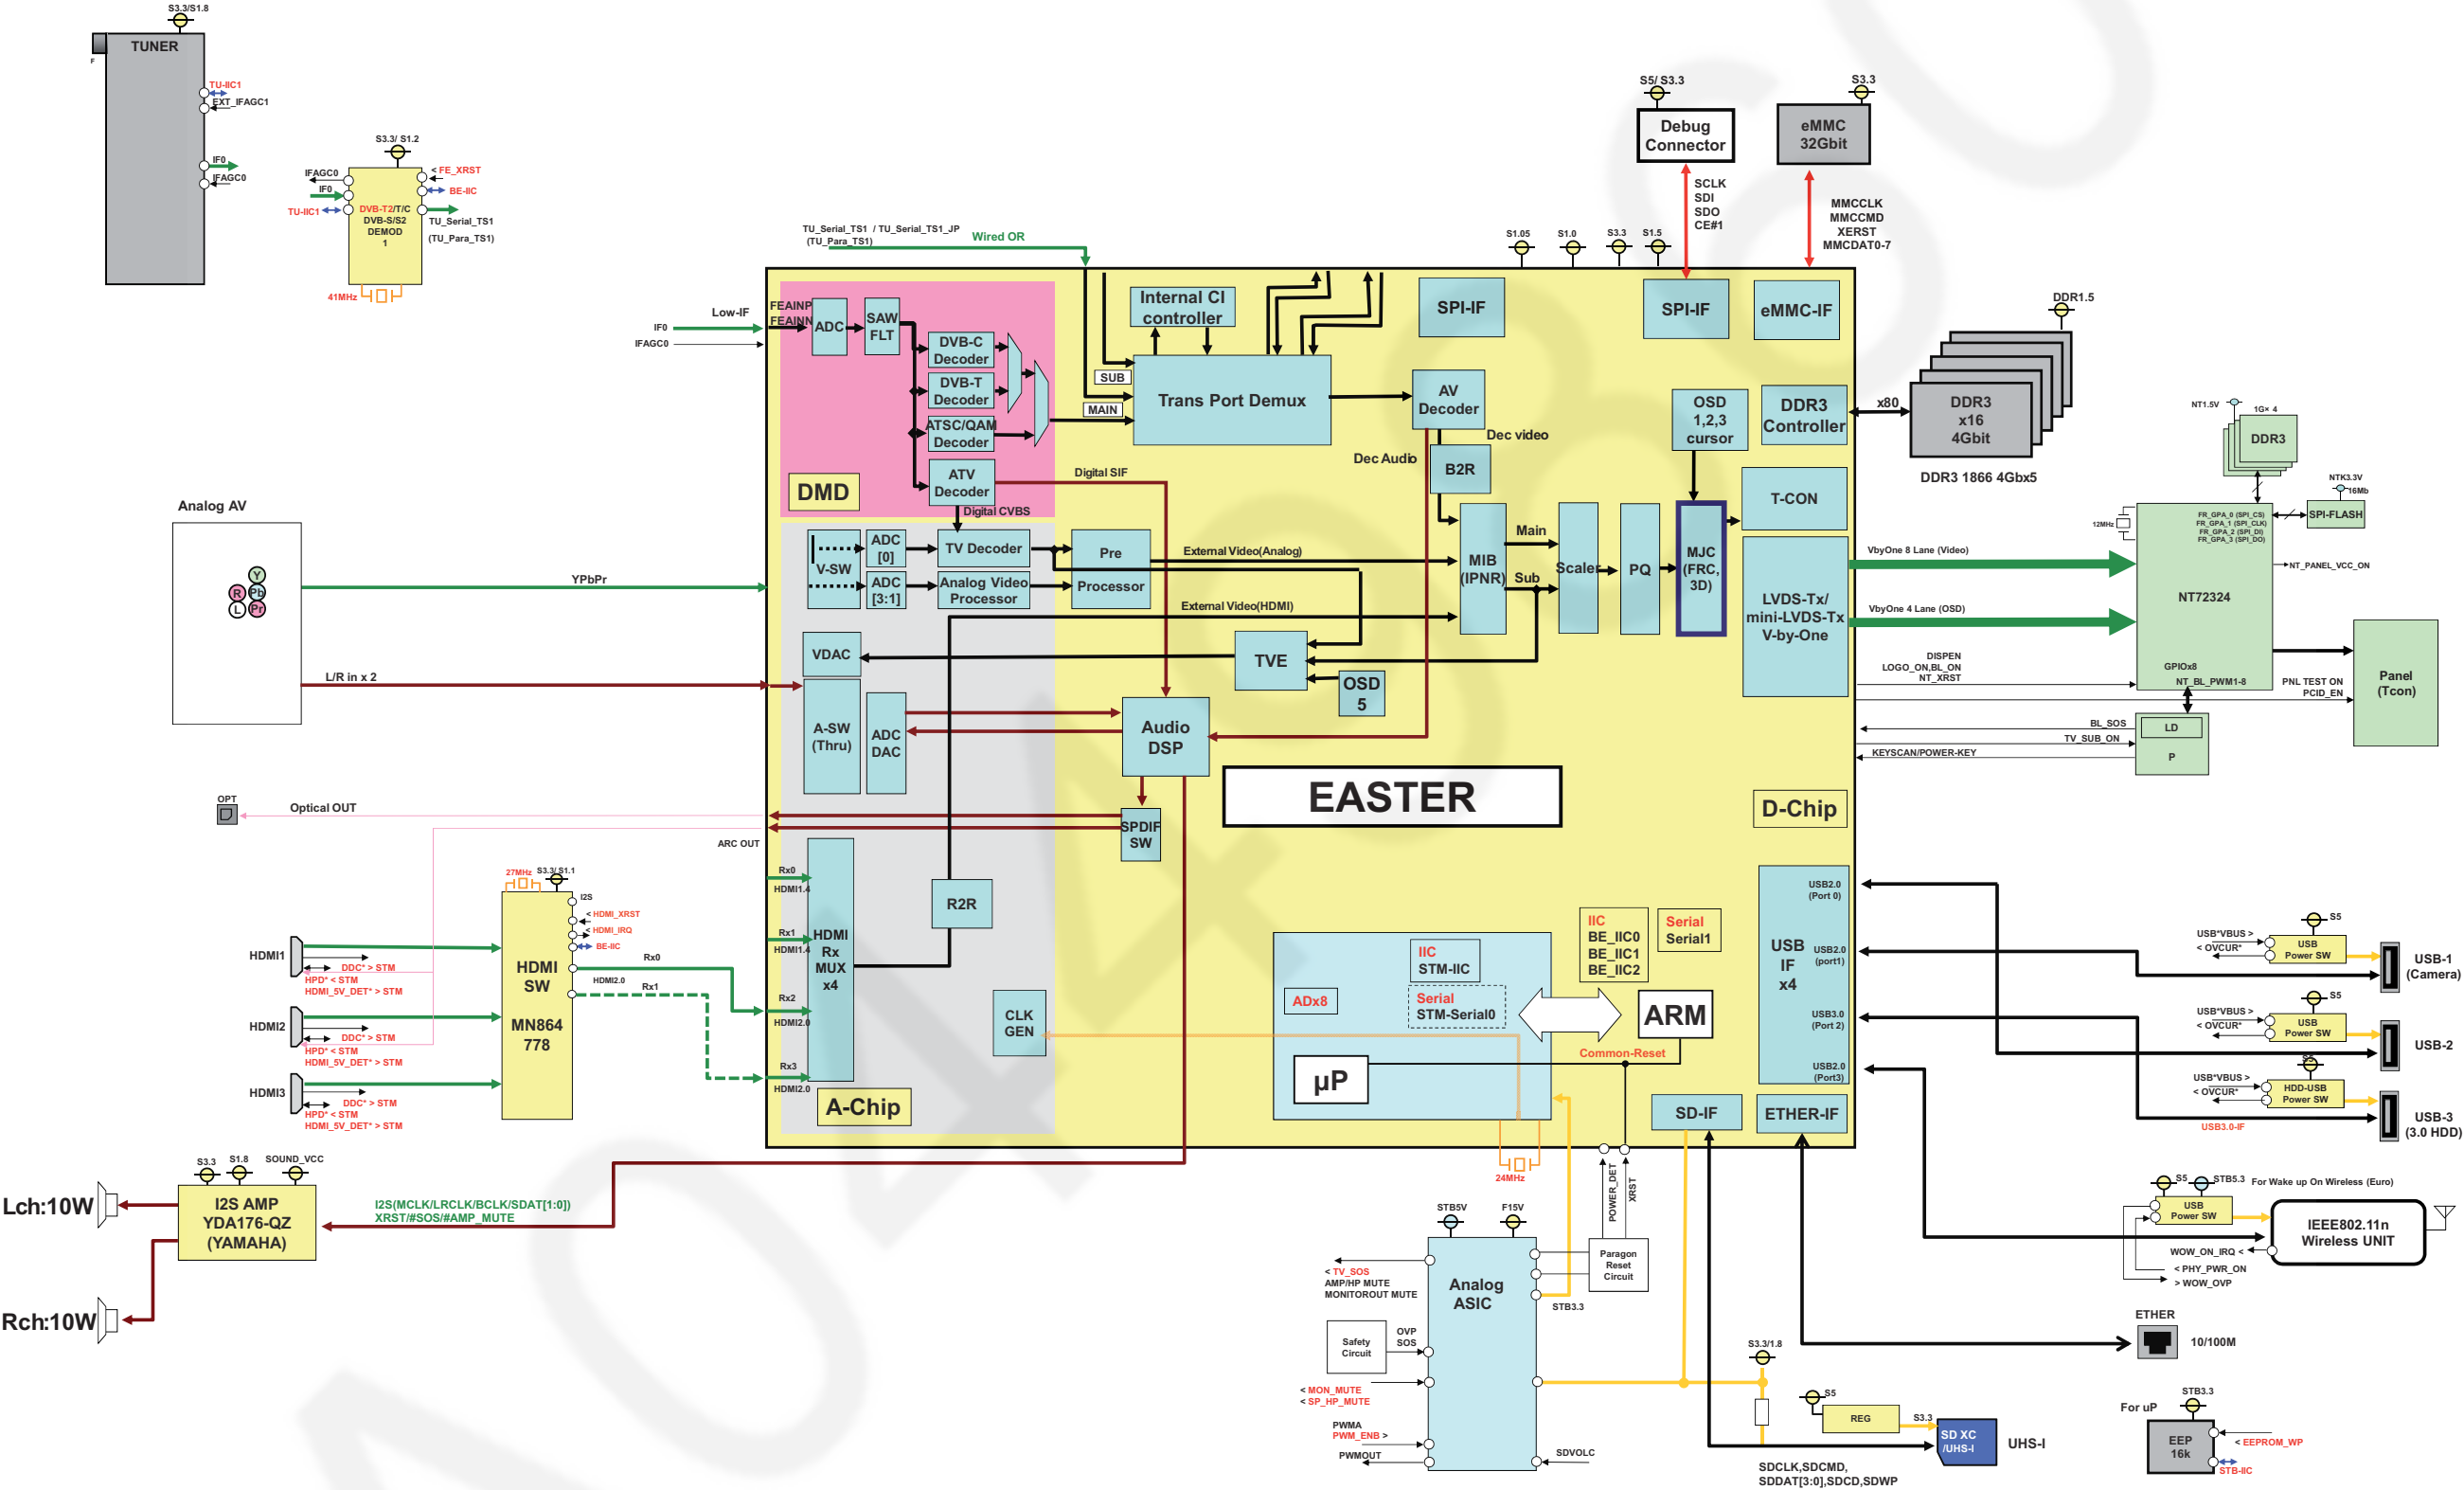

10 Wiring Connection Diagram

10.1. Wire Dressing 1


1. Do wire dressing follow below spec. (stick PET tape as shown).
2. Stick tapes and rub evenly at least twice.

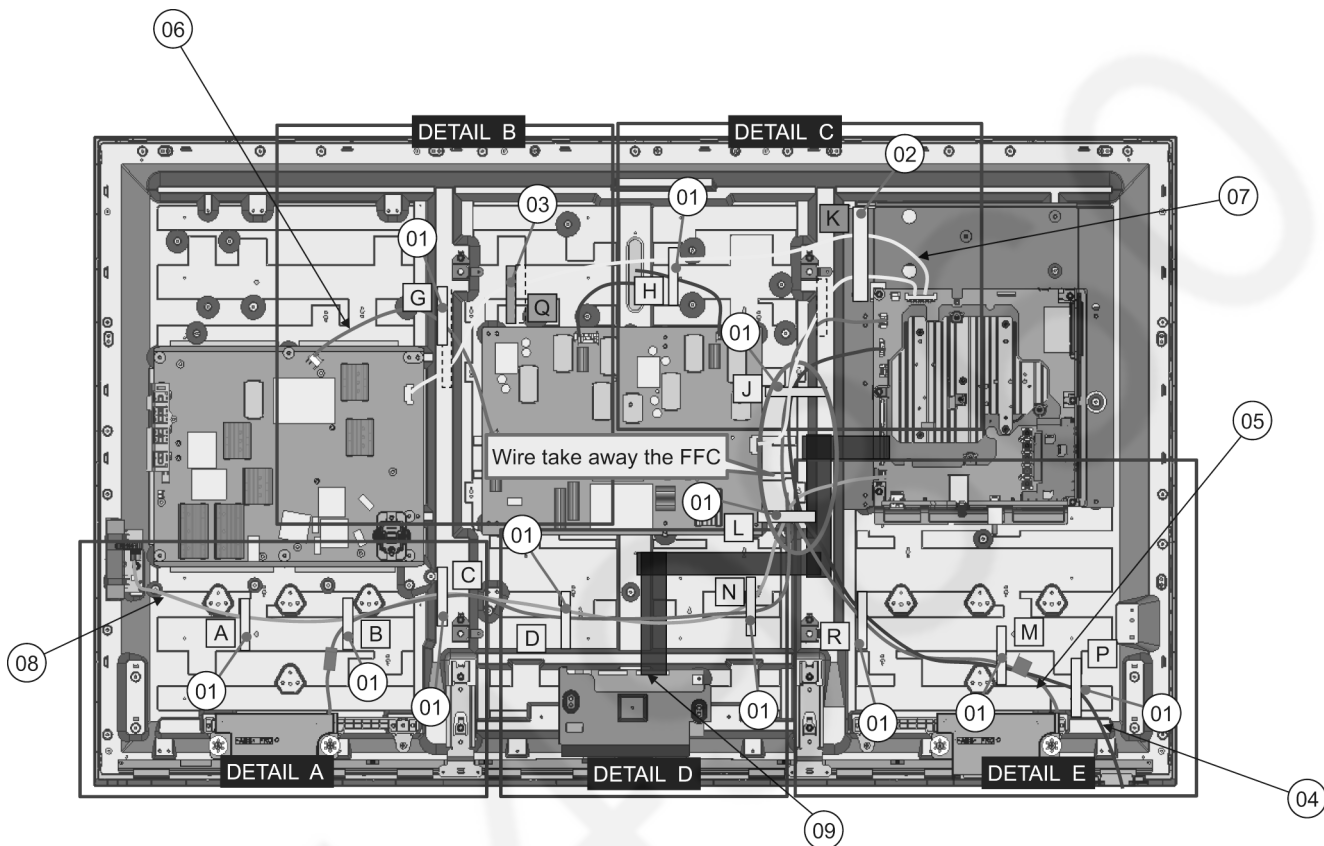


No	Part No	Description	Qty	UOM	Remarks
01	T4FP10050	PET_TAPE	0.72	MT	60mm × 12
02	T4FP1005J	PET_TAPE	0.11	MT	110mm × 1
03	T4FP1005J	PET_TAPE	0.06		60mm × 1
04	TXJA10XAUA	WIRE (A10-K10)	1	PC	
05	TXJA12XAUA	WIRE (A12-SPL/SPR)	1	PC	
06	TXJ/P6RFVE	WIRE (P6-PB6)	1	PC	
07	TXJA02RFVE	WIRE (A02-P2/PB4)	1	PC	
08	K1HY05YY0242	WIFI USB CABLE	1	PC	
09	TSCKF0630046	LVDS FFC (51PIN)	1	PC	

10.2. Wire Dressing 2


DETAIL A

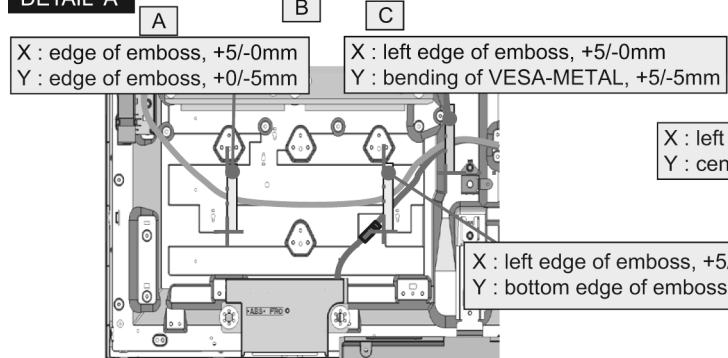

DETAIL B

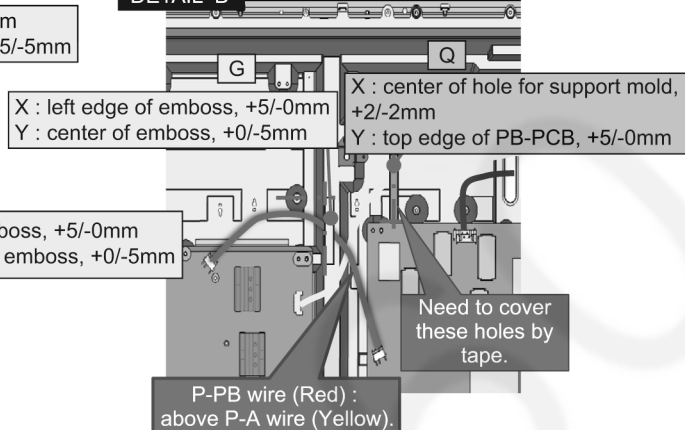

DETAIL C

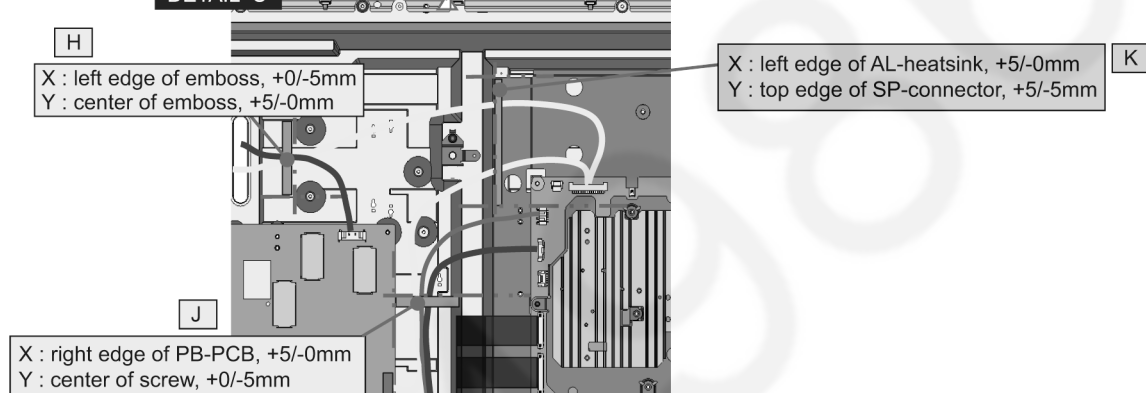


X : left edge of AL-heatsink, +5/-0mm
Y : top edge of SP-connector, +5/-5mm


K

10.3. Wire Dressing 3

DETAIL D

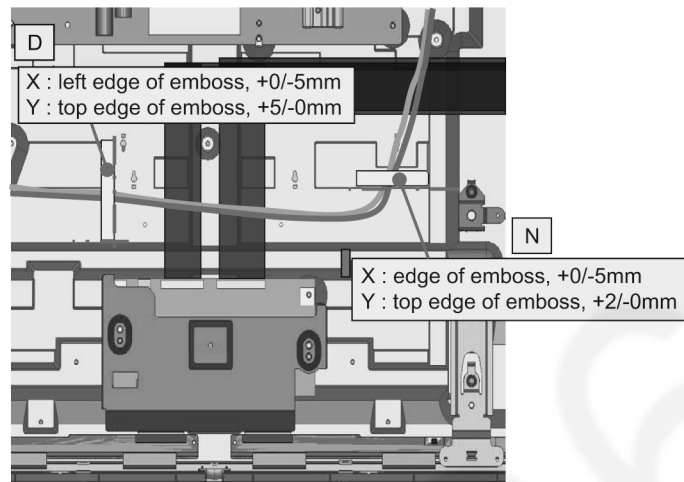



DETAIL E

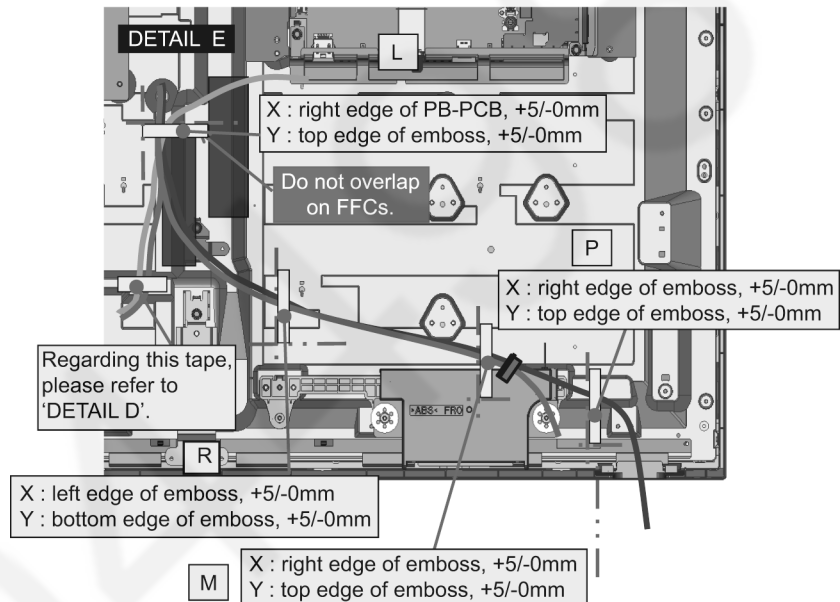



11 Schematic Diagram




Model No. : TH-55CX600S A-Board (1/21)

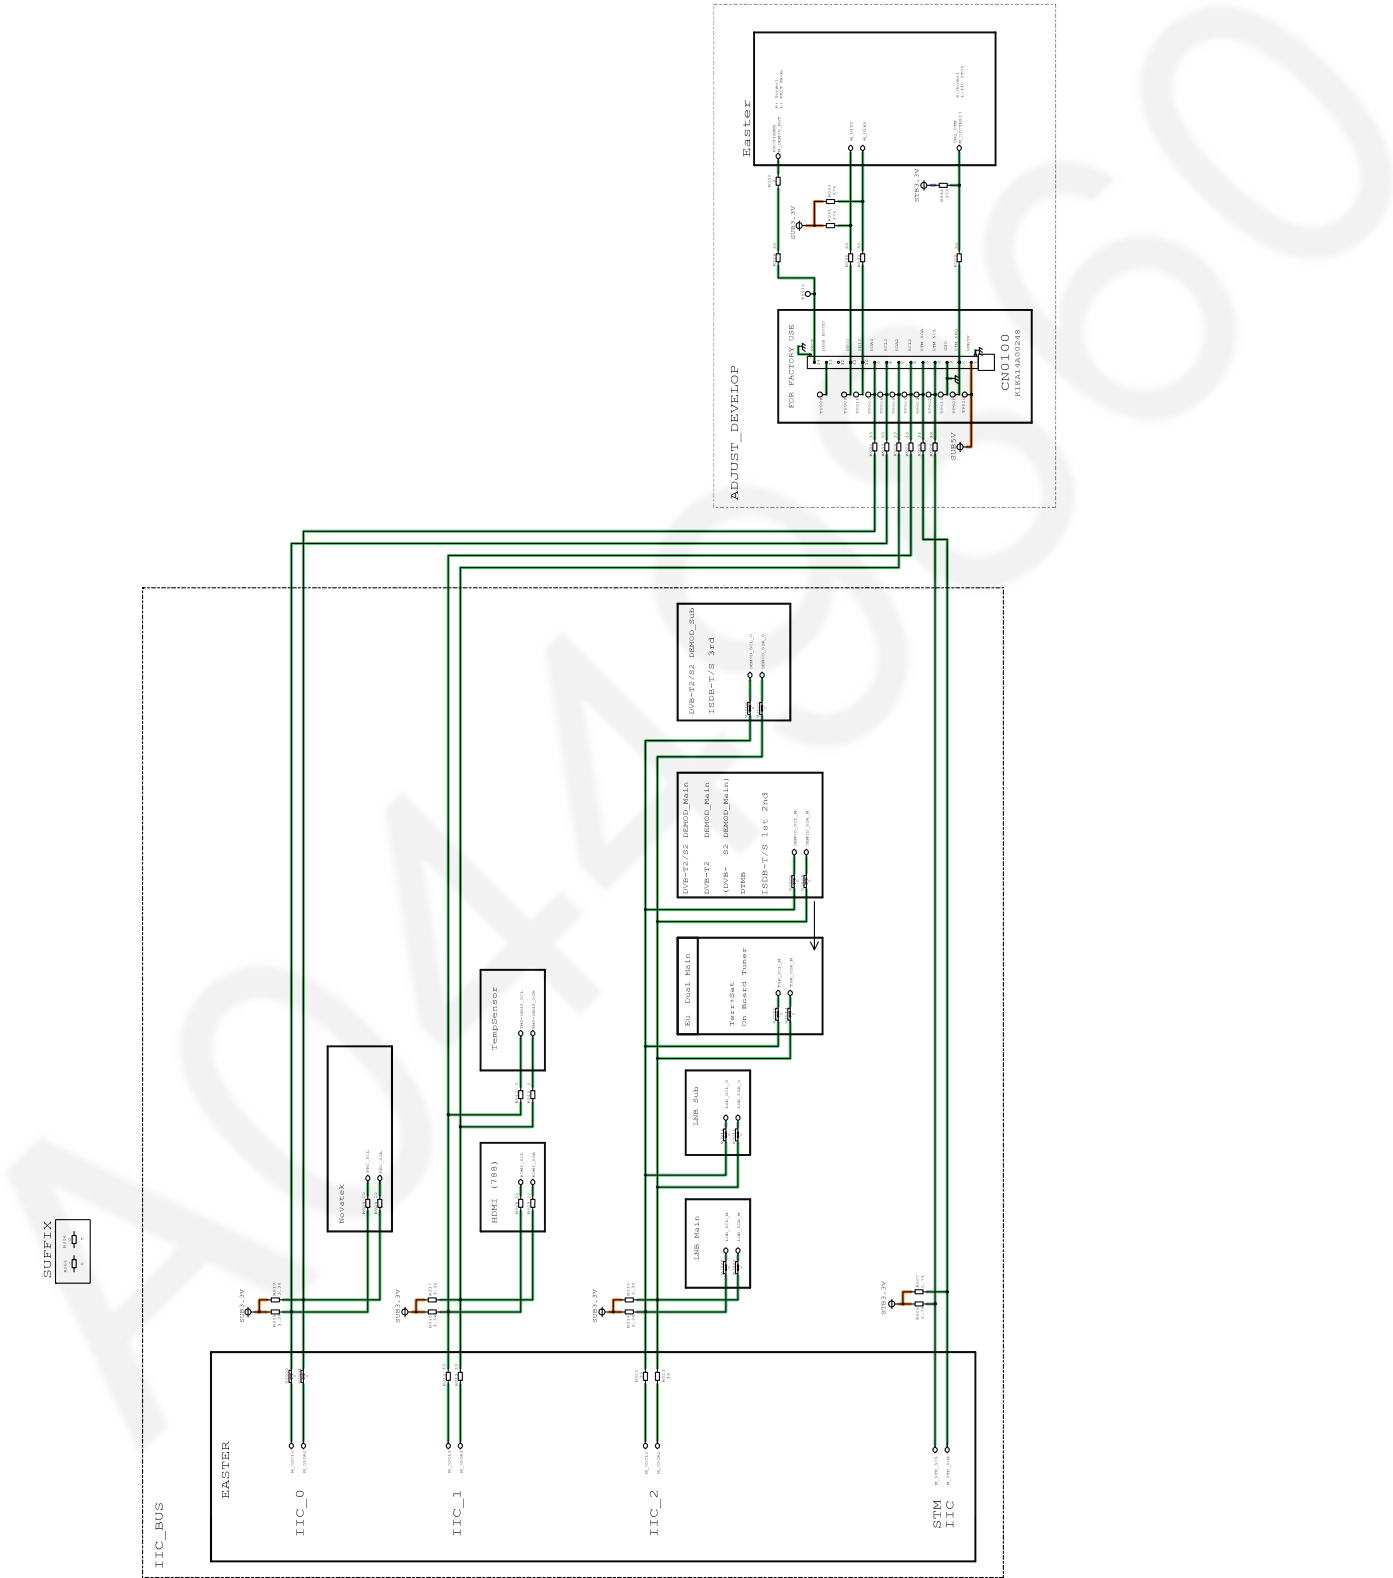



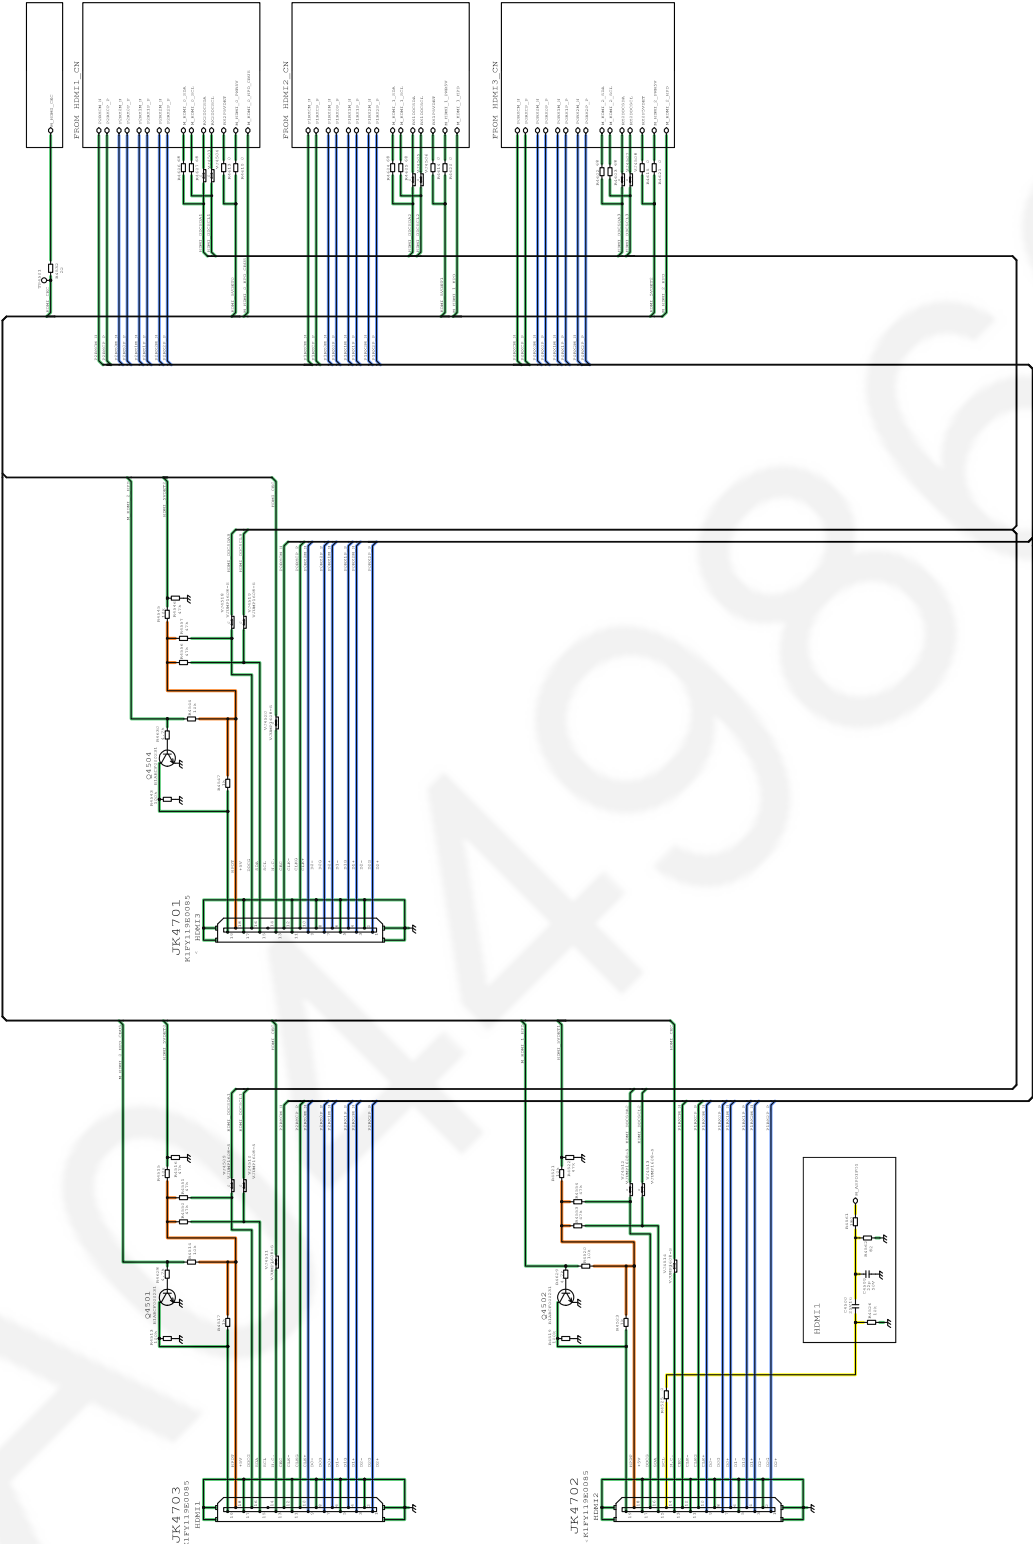


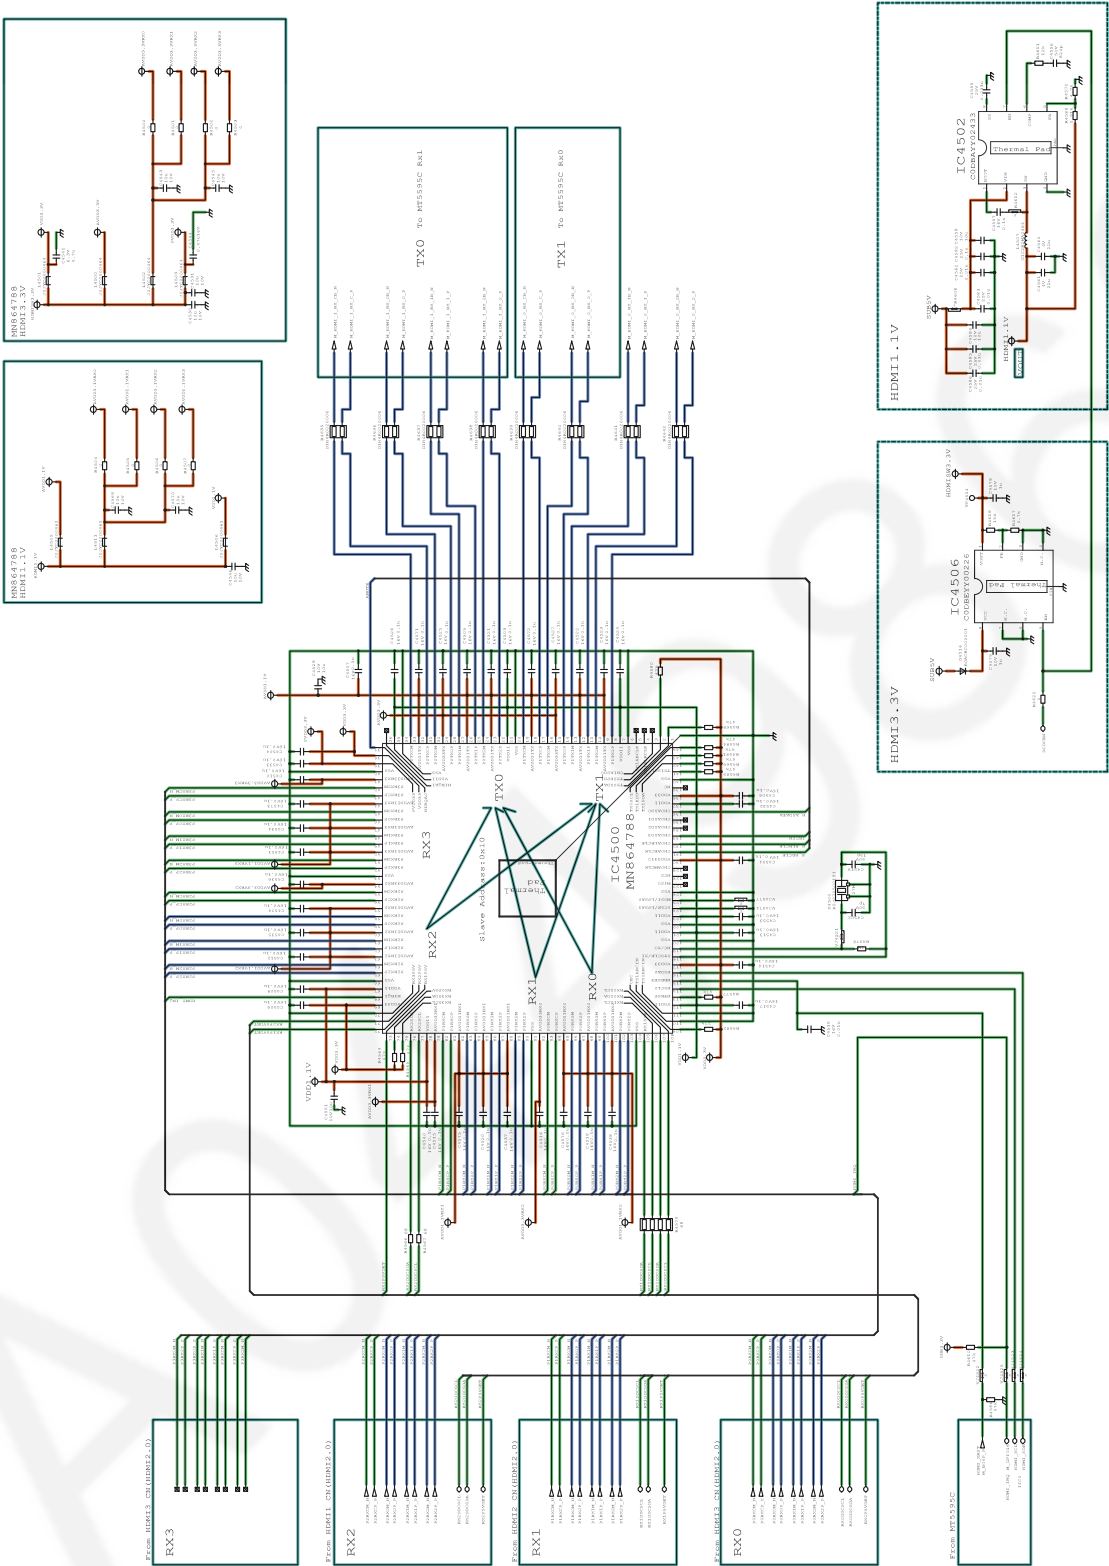


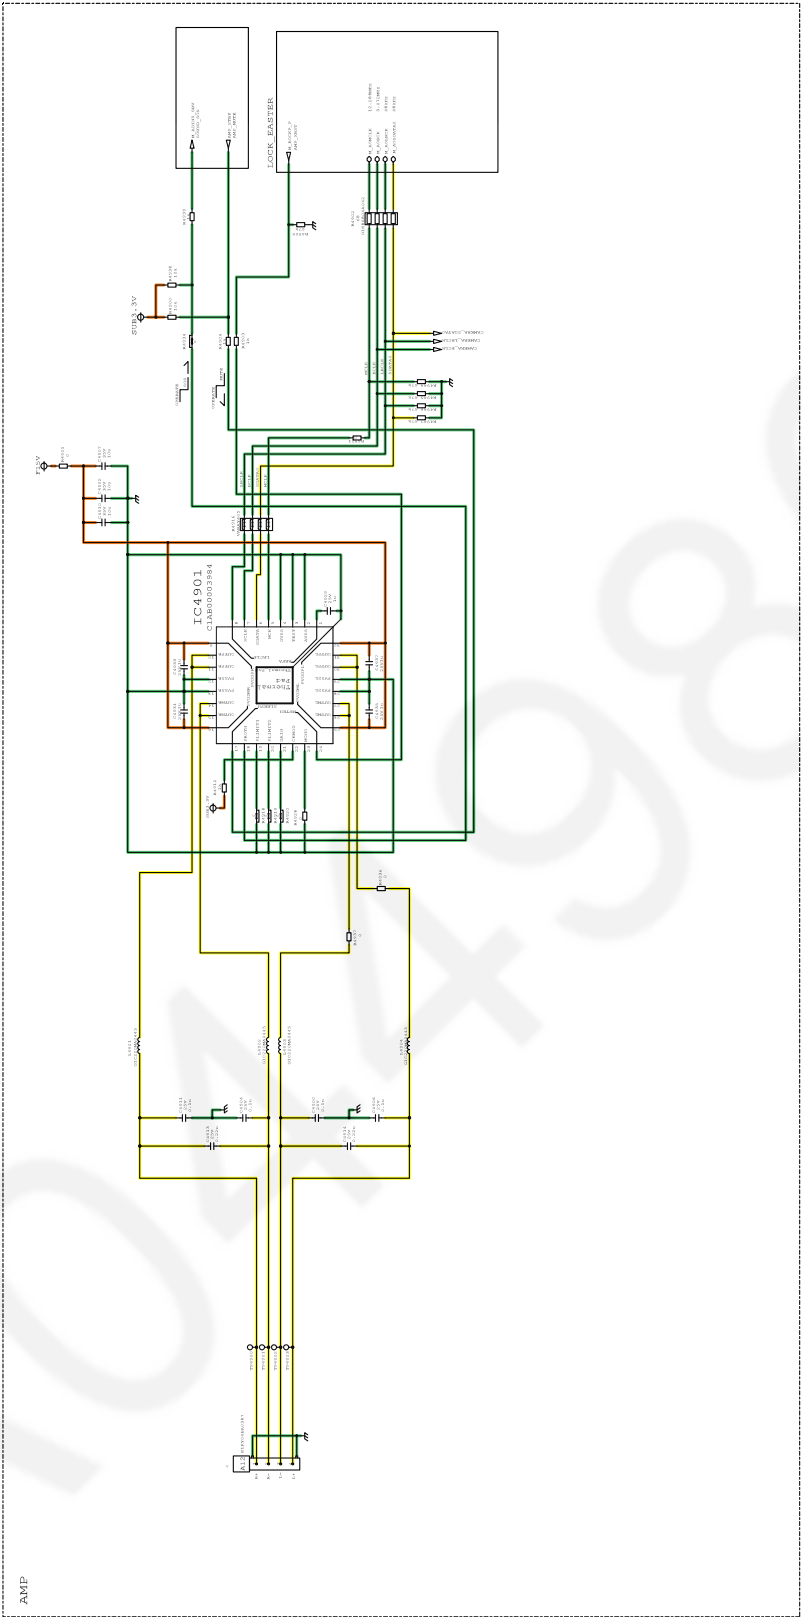


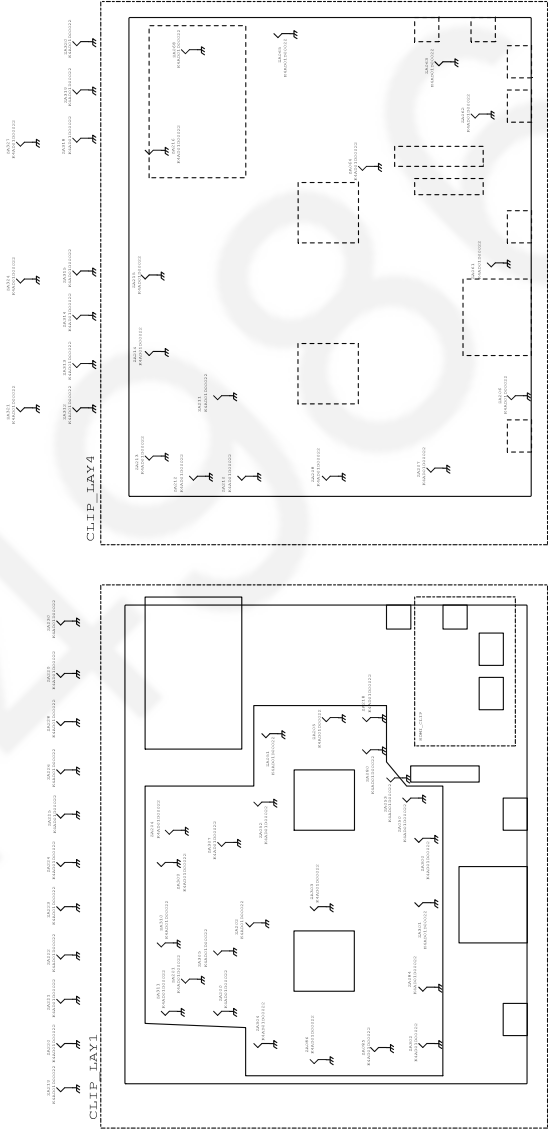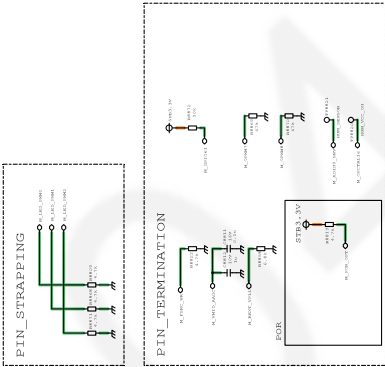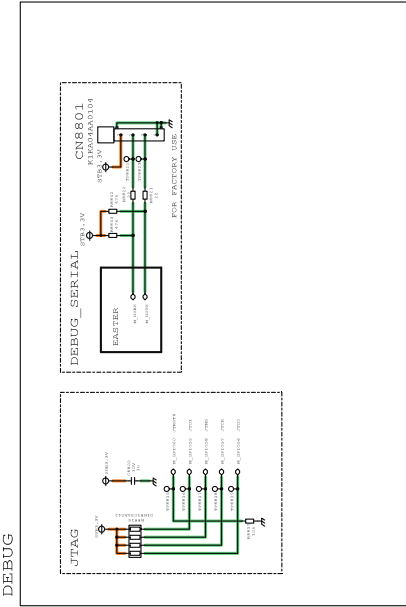

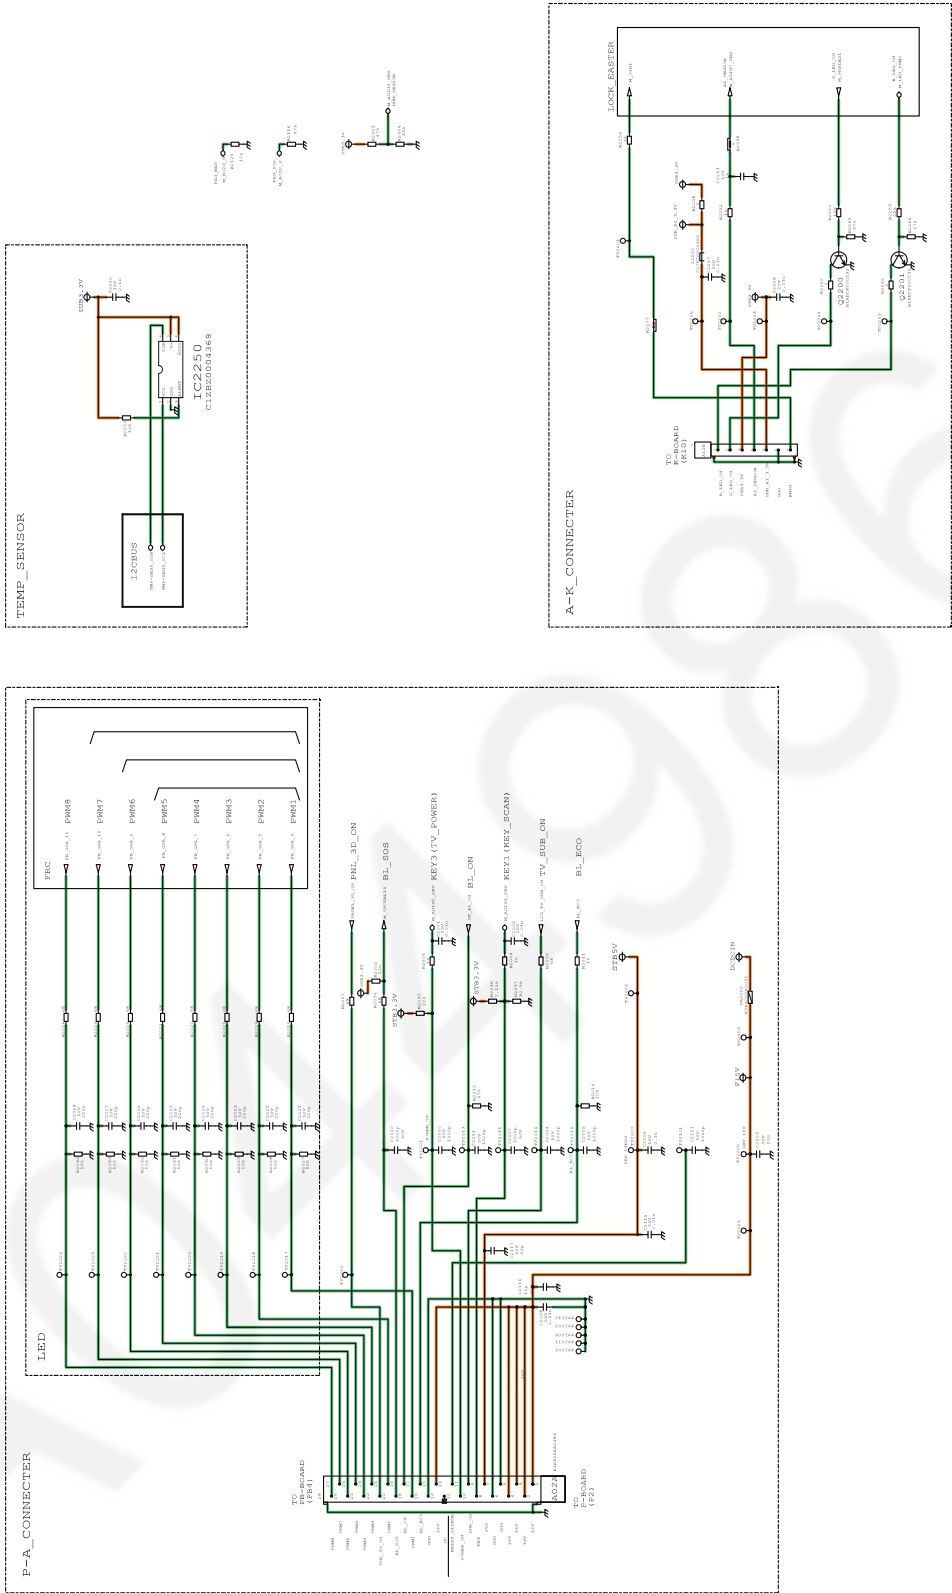


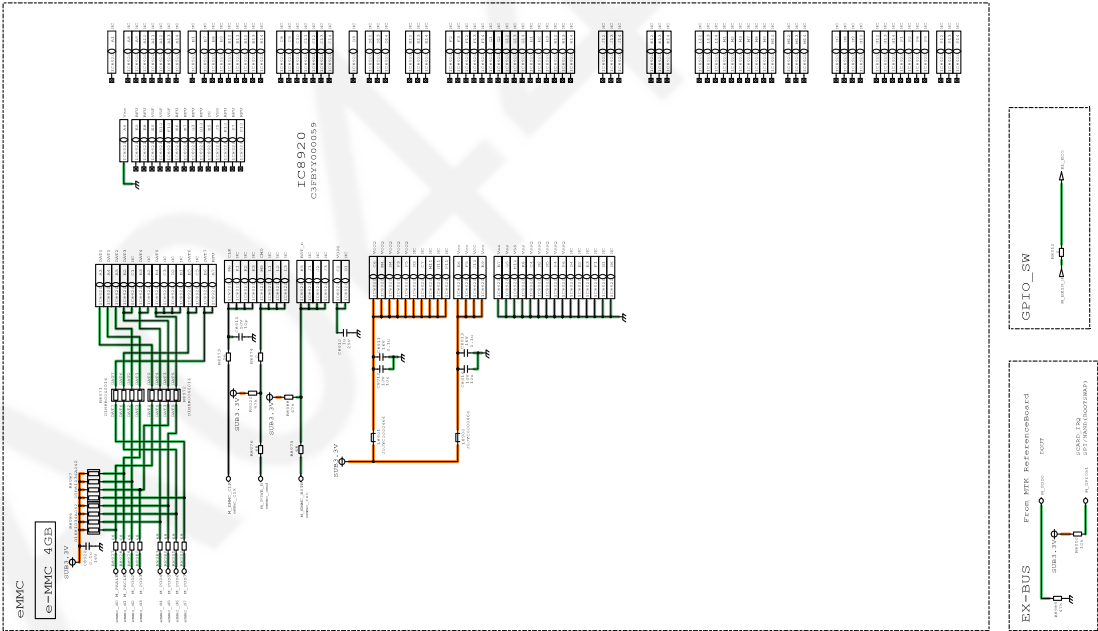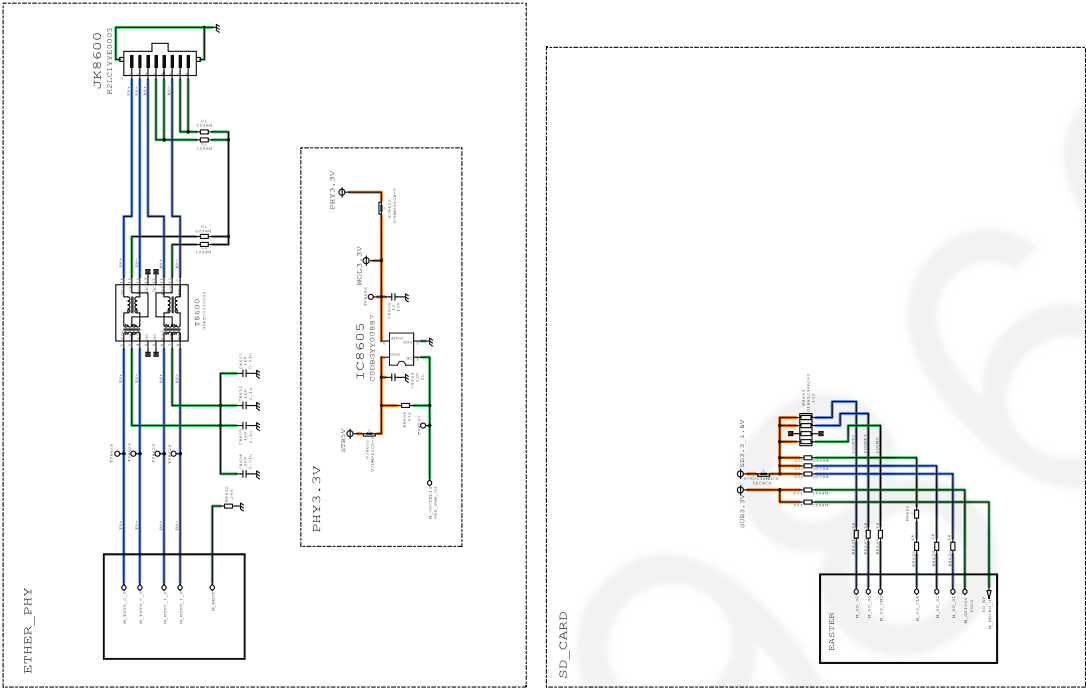



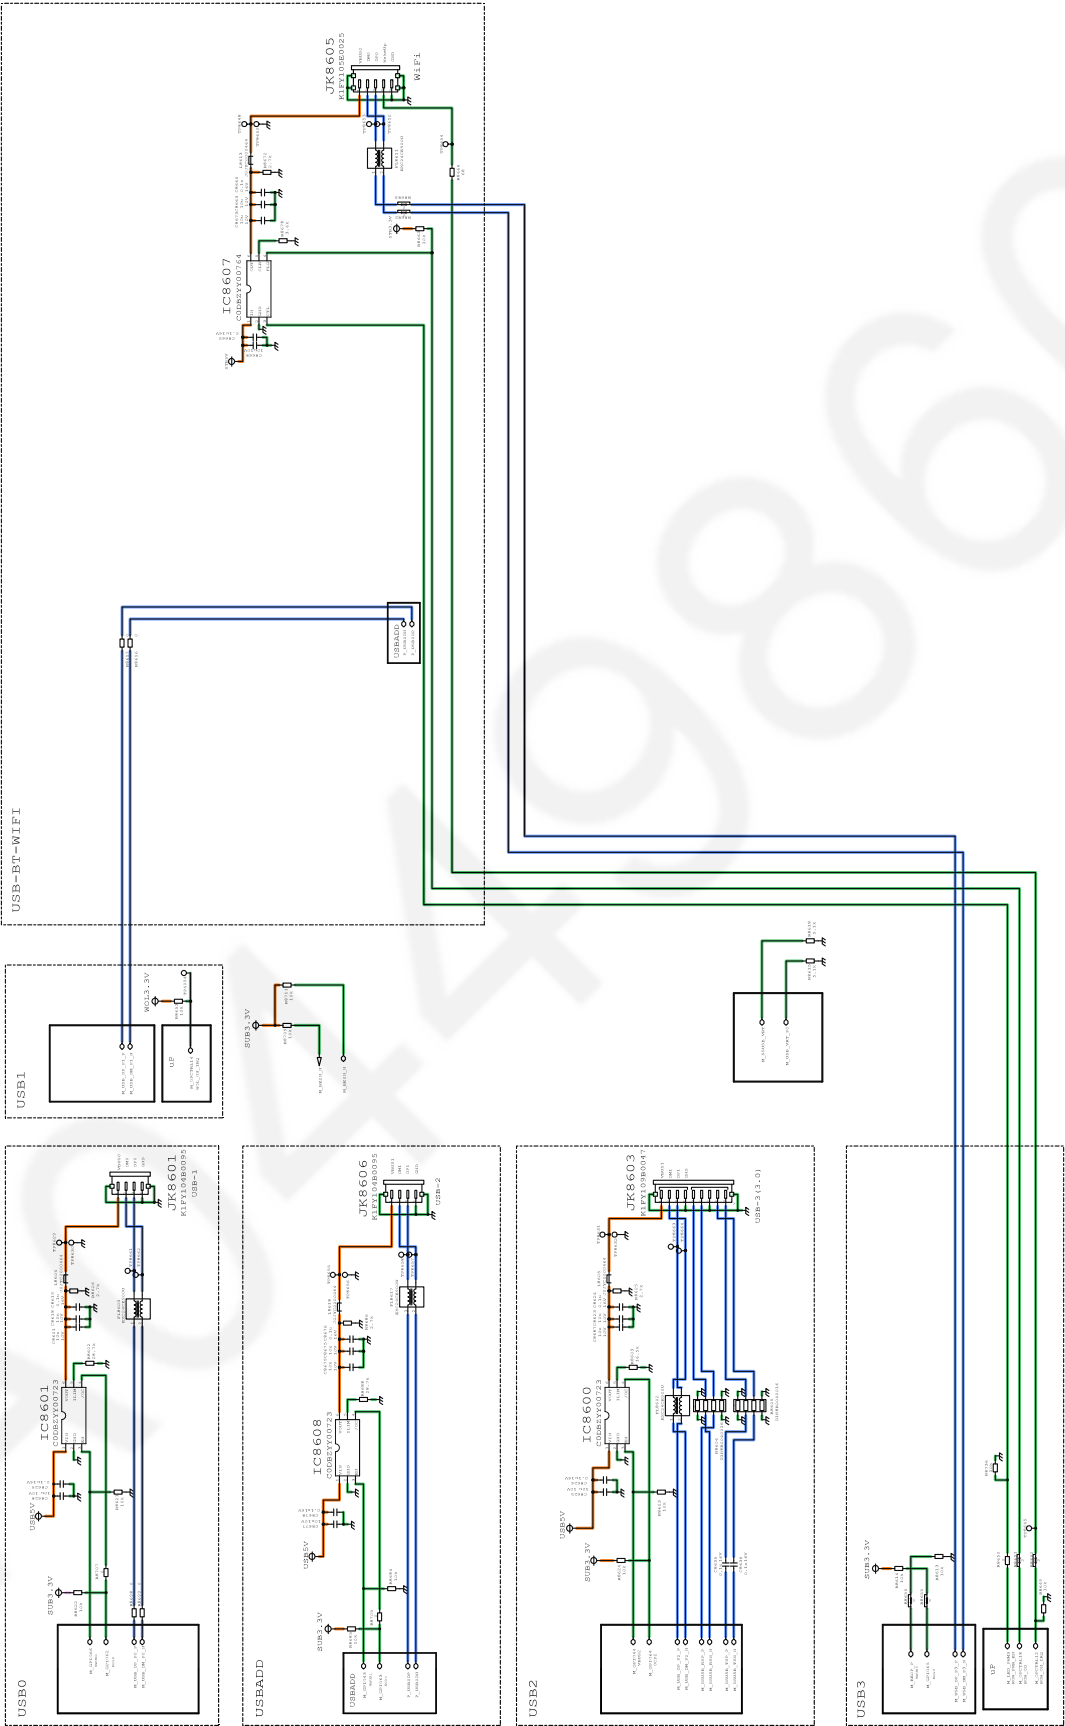


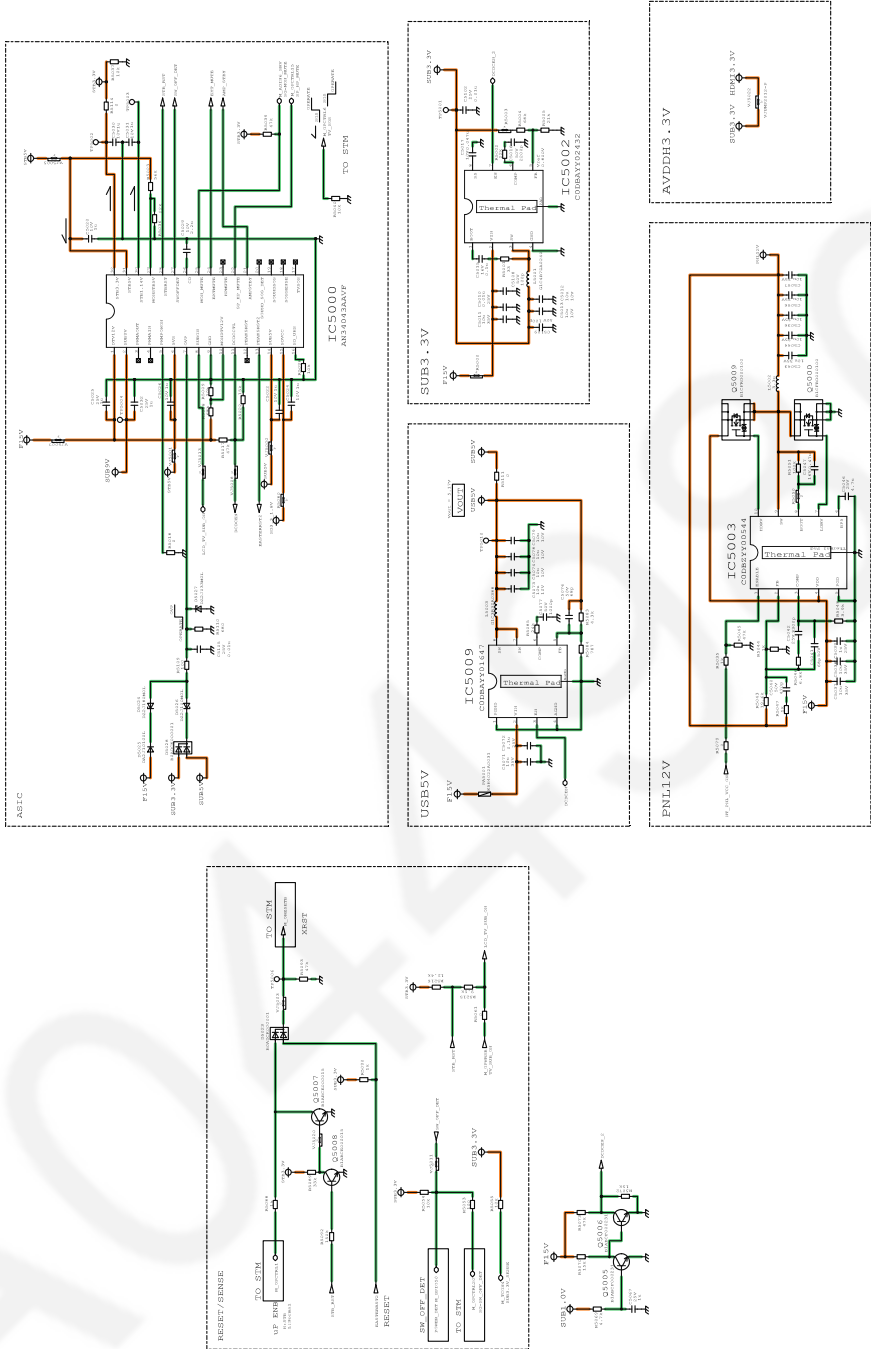





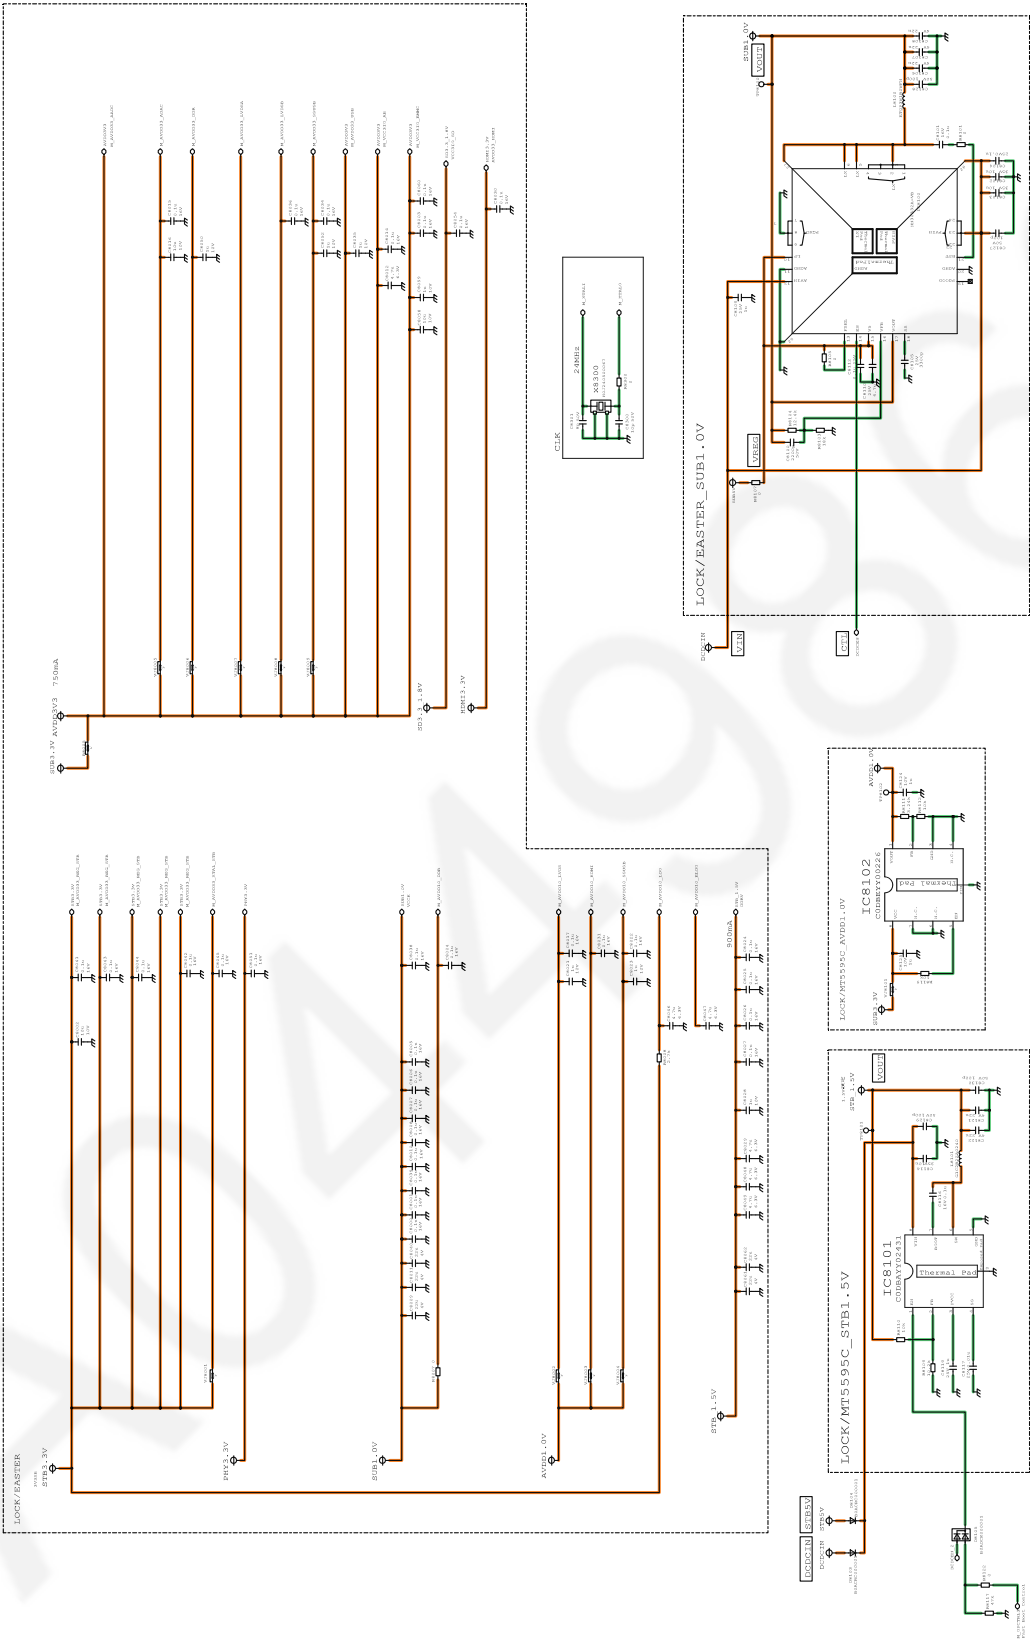


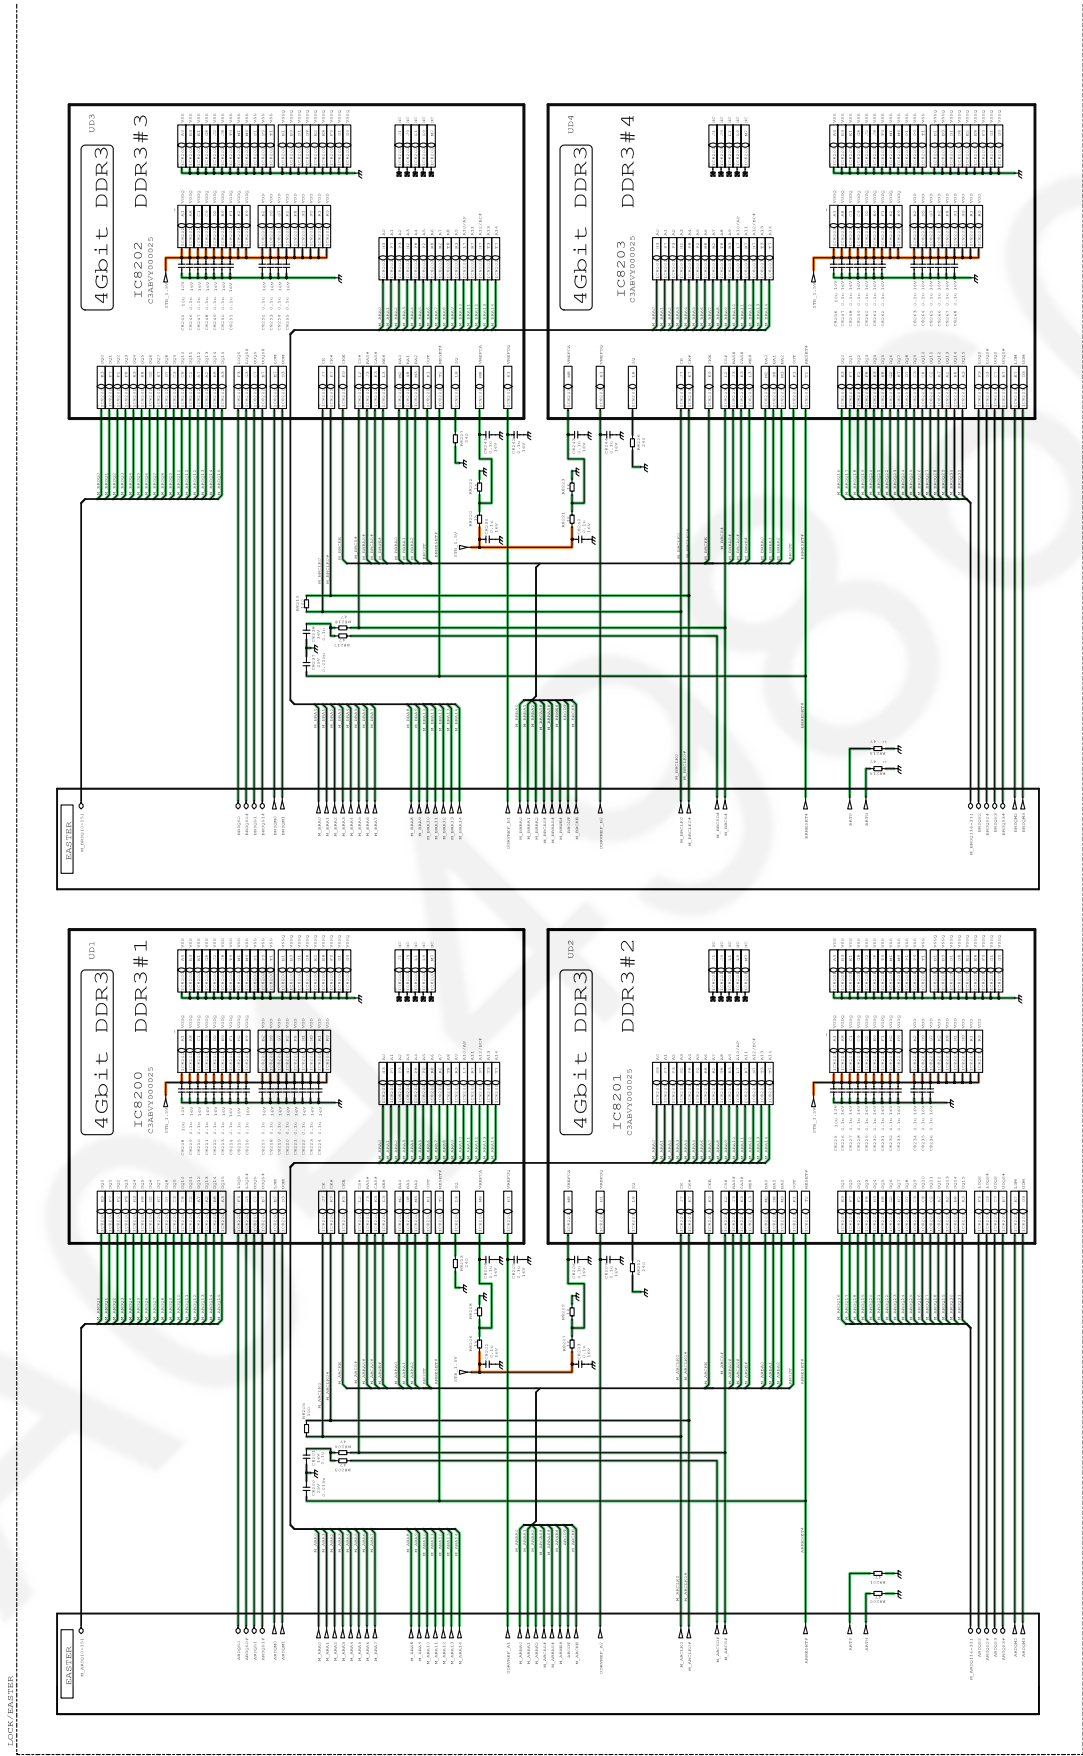


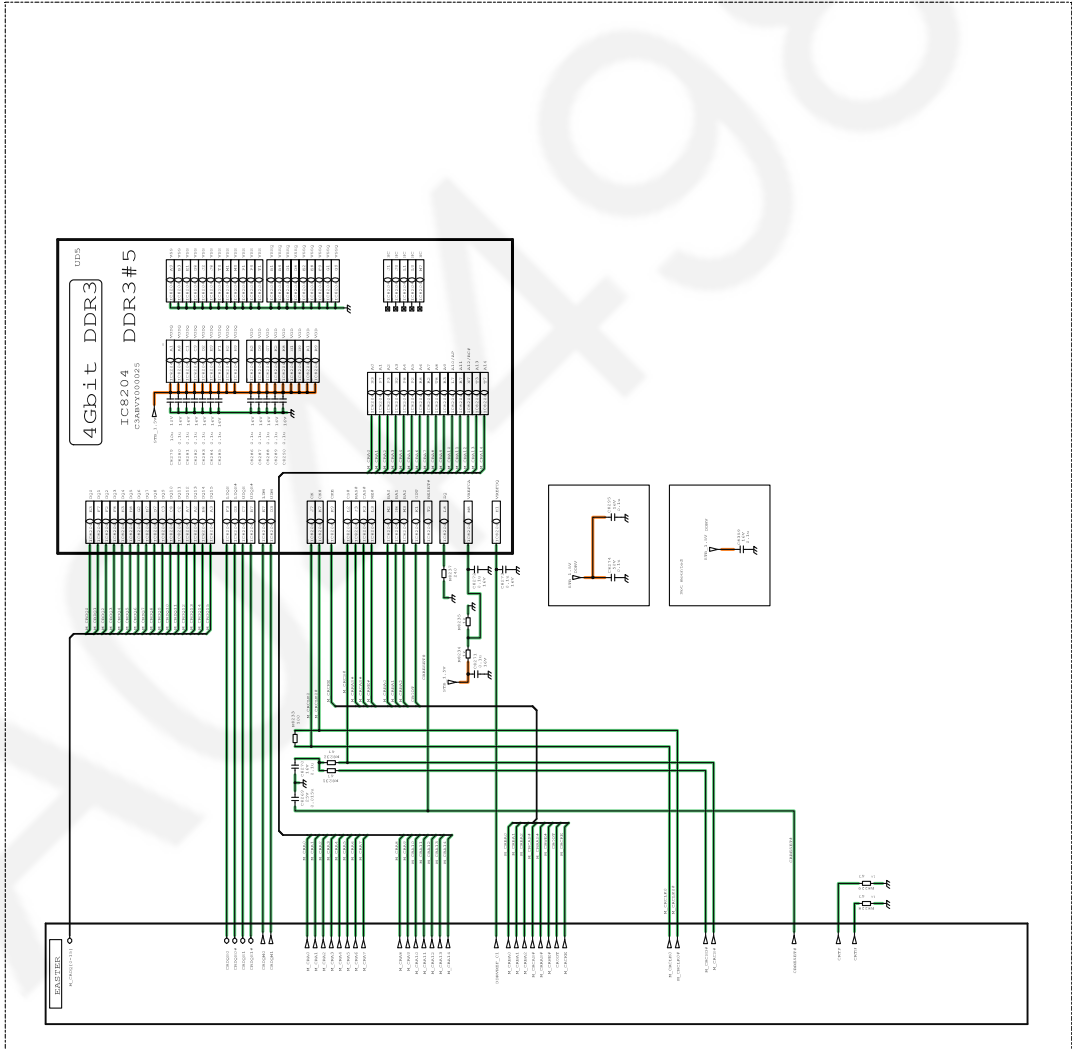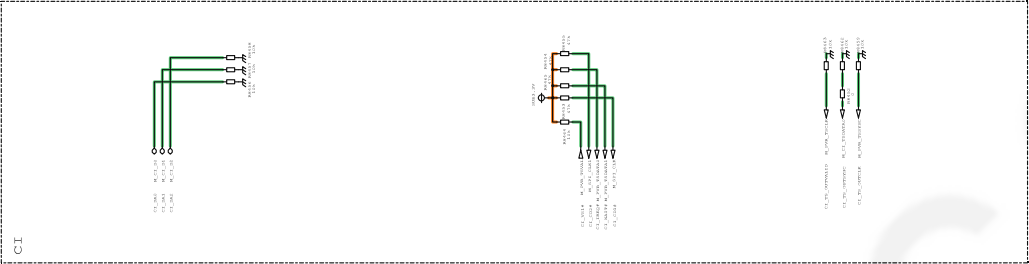


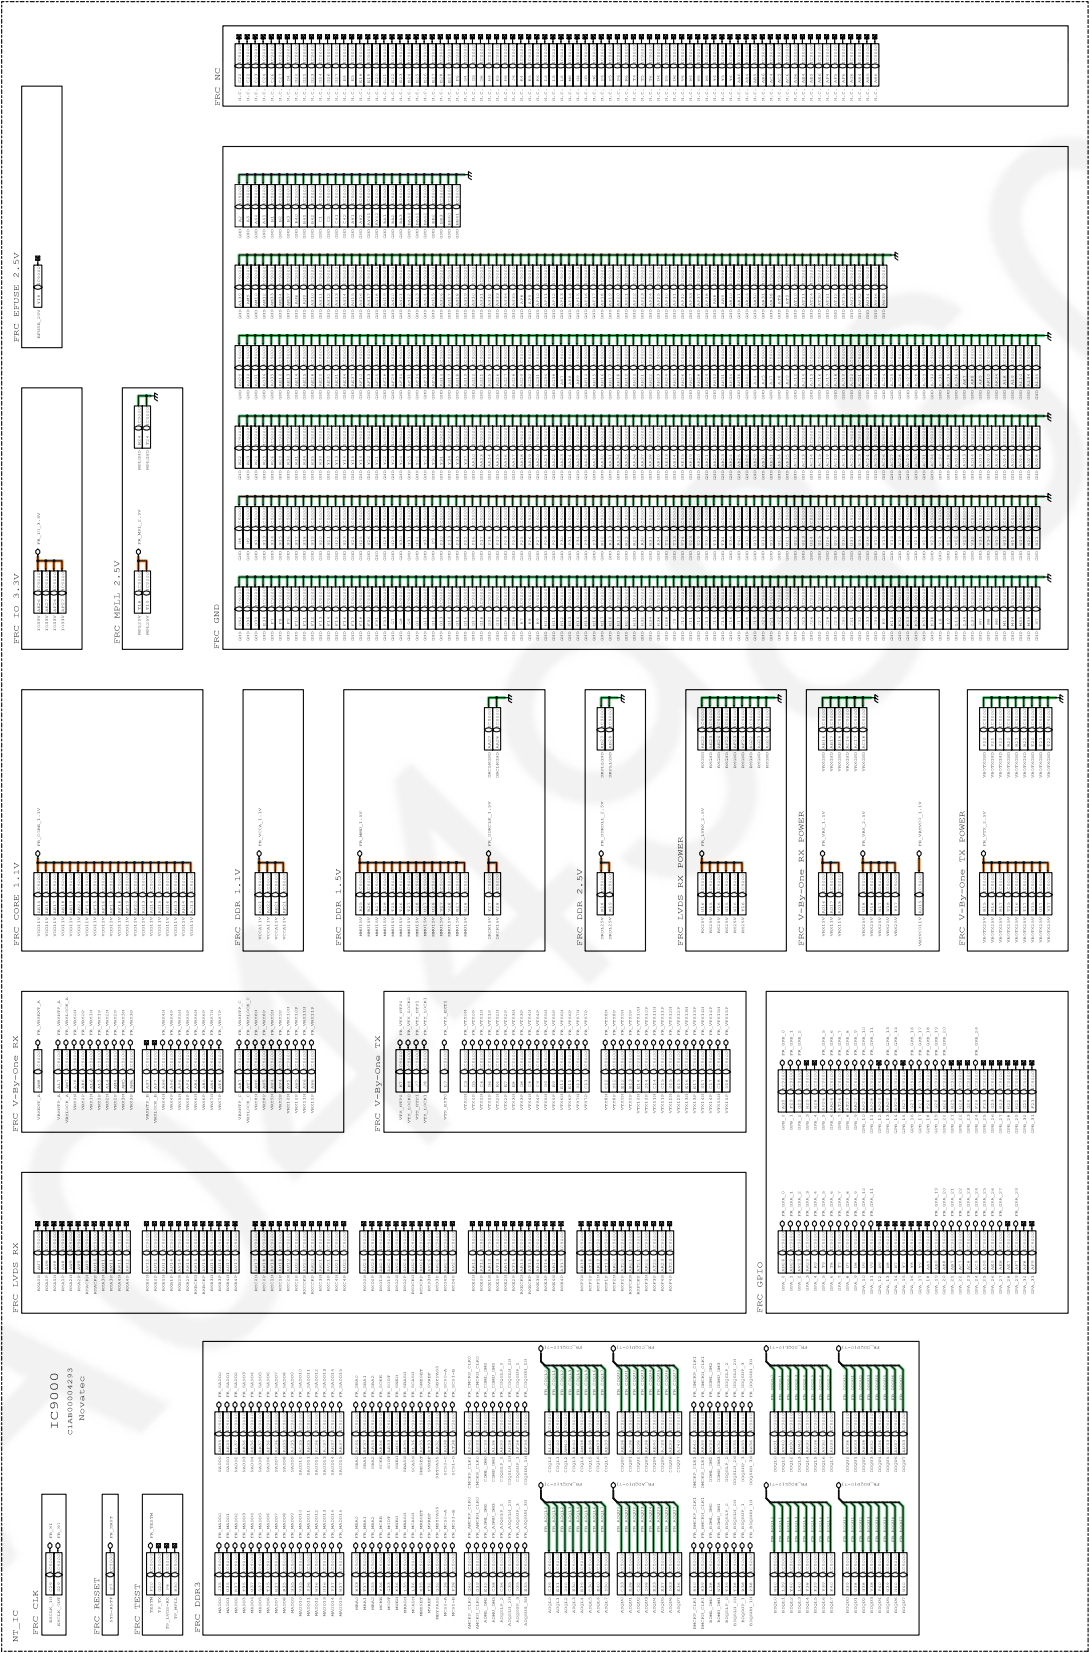


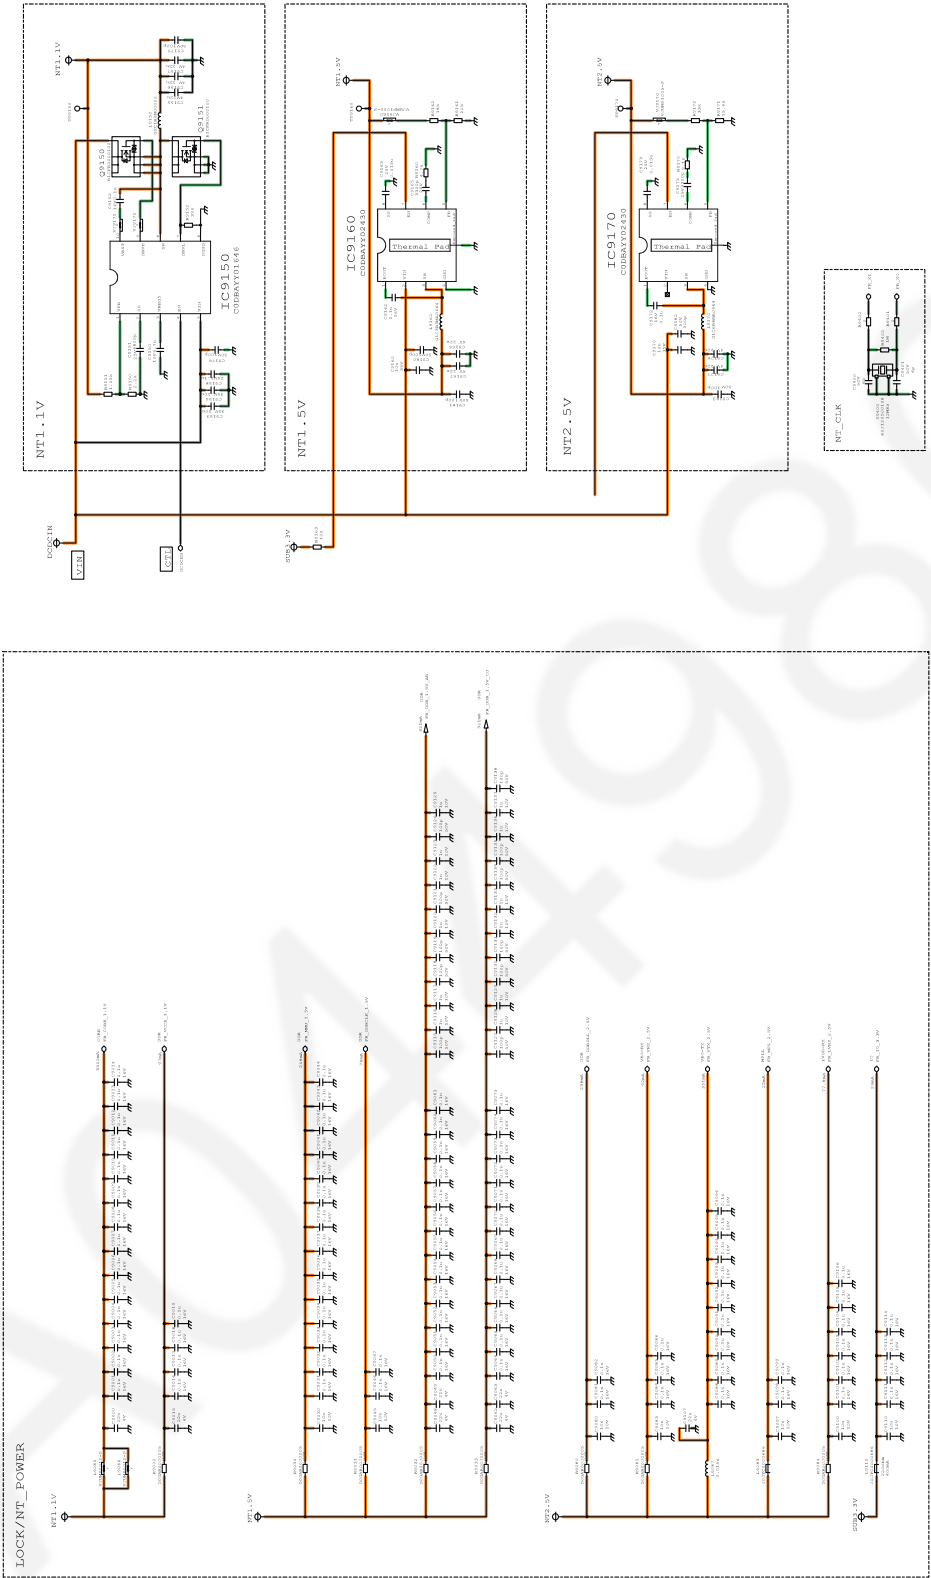


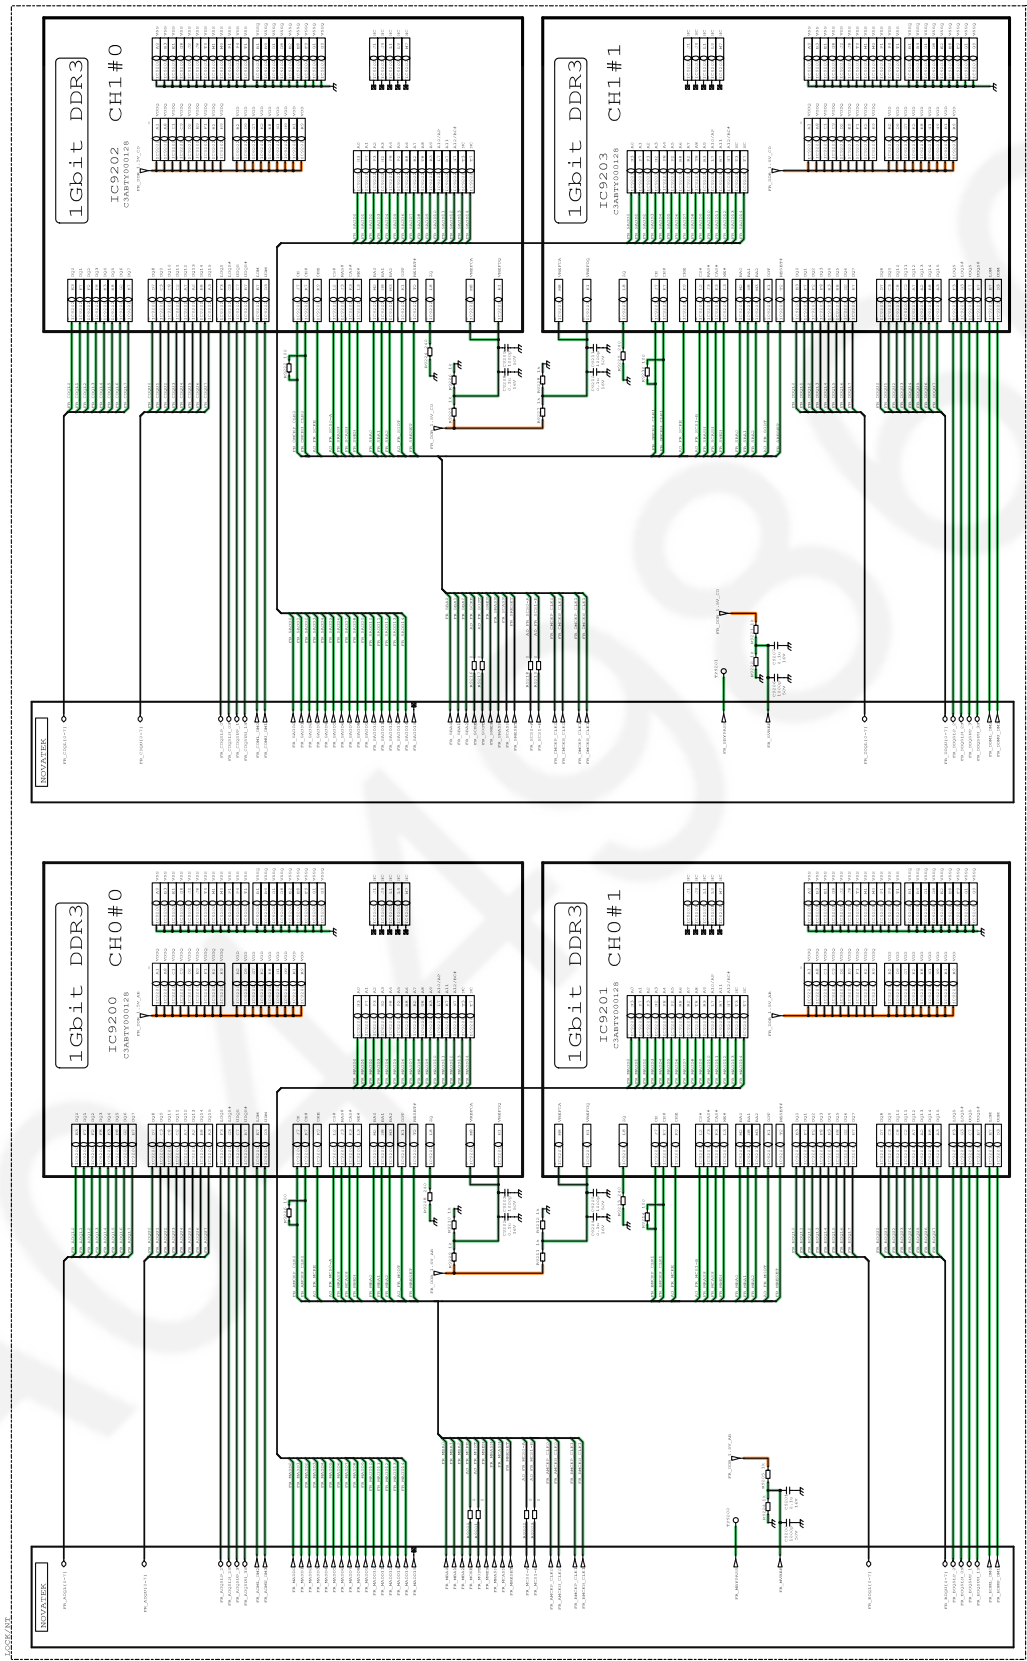

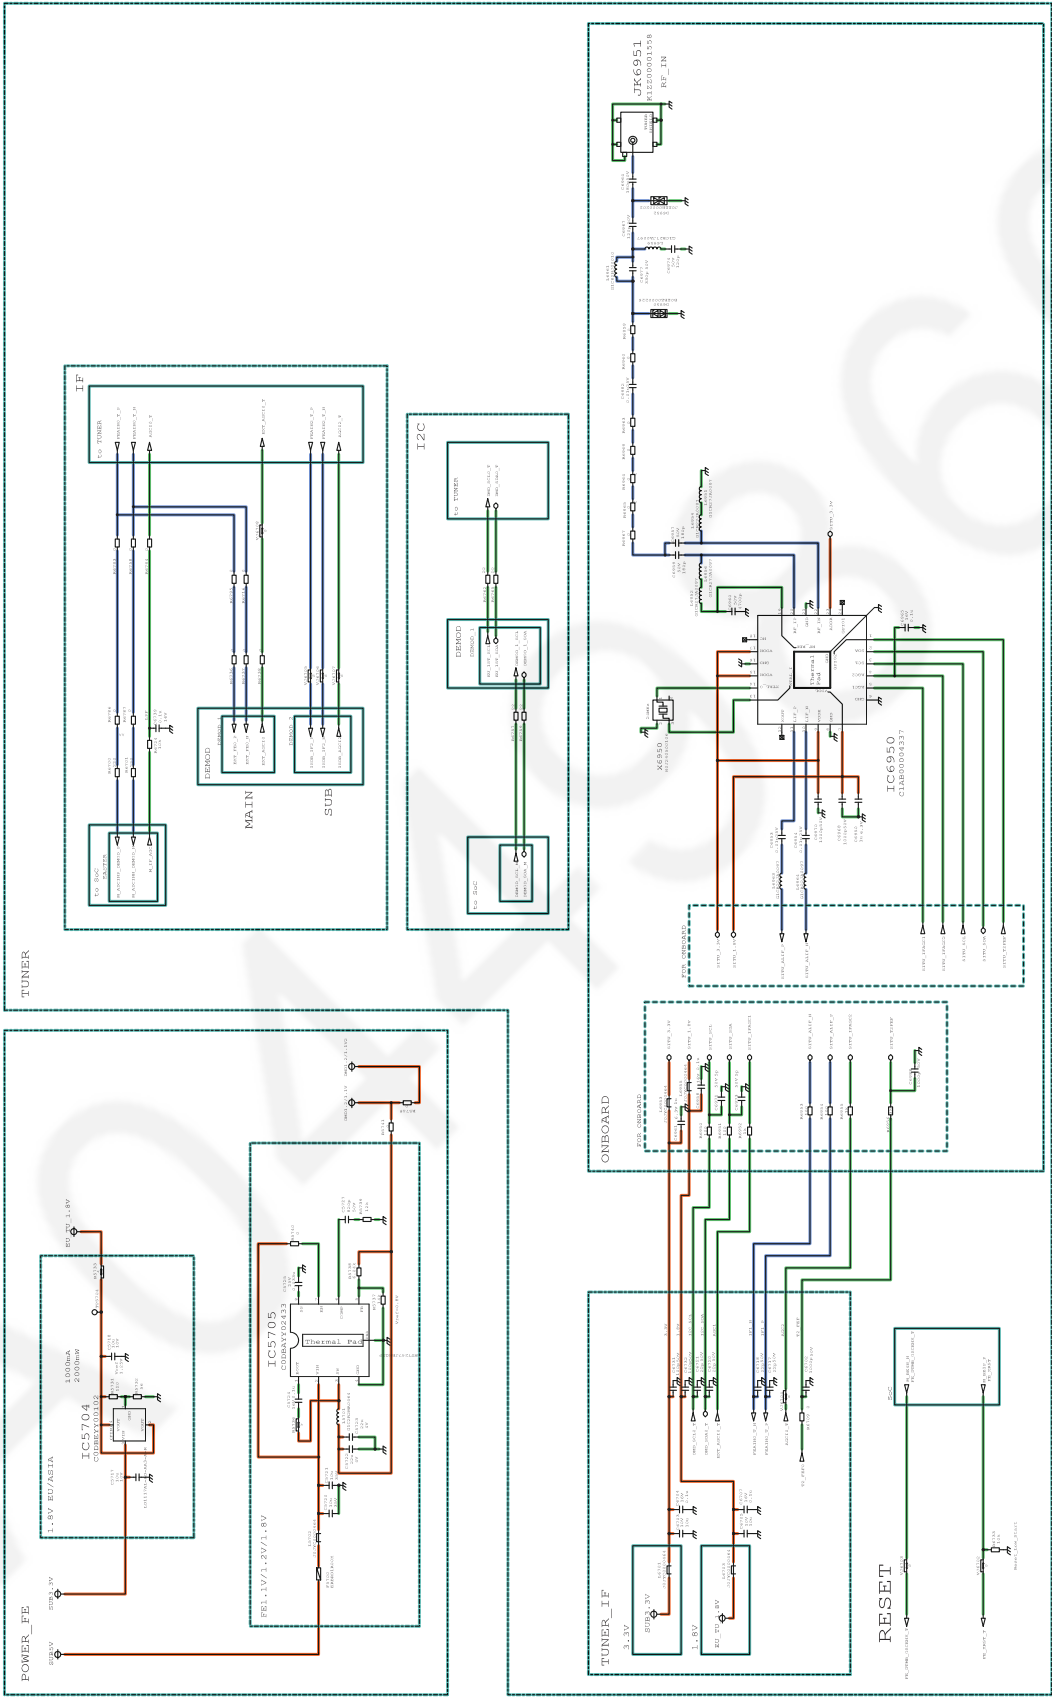

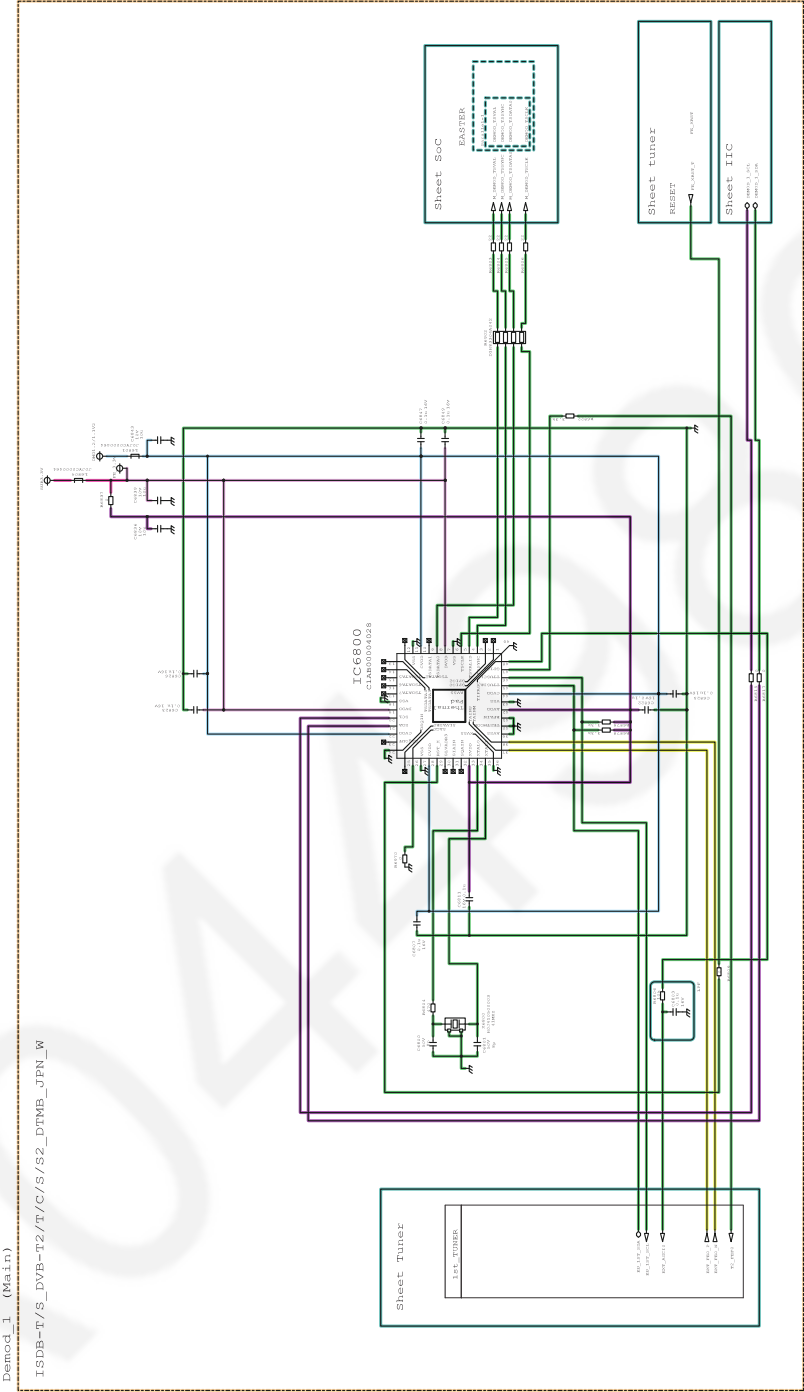

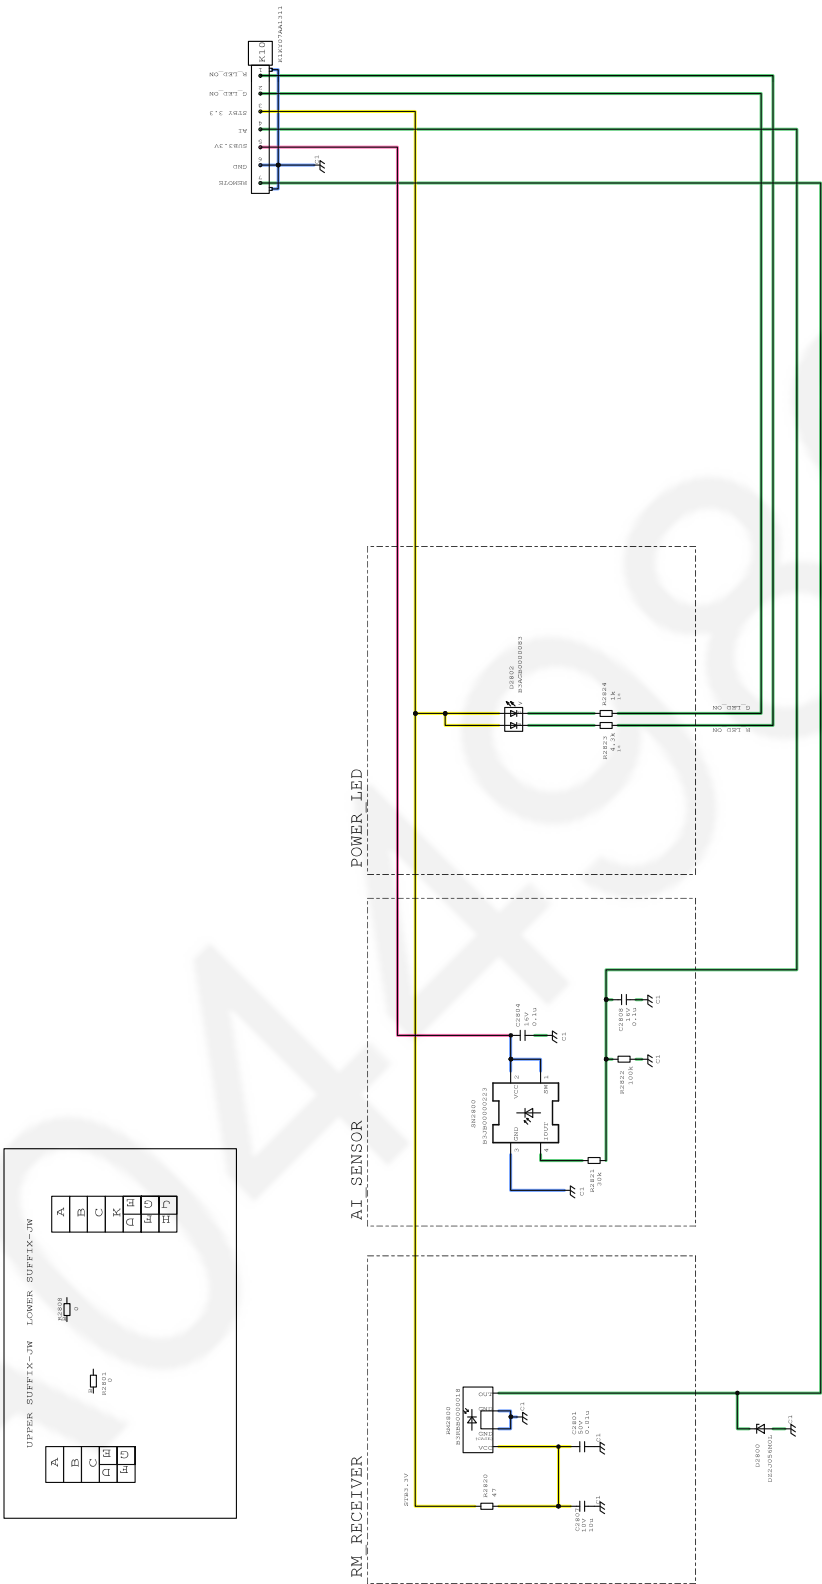


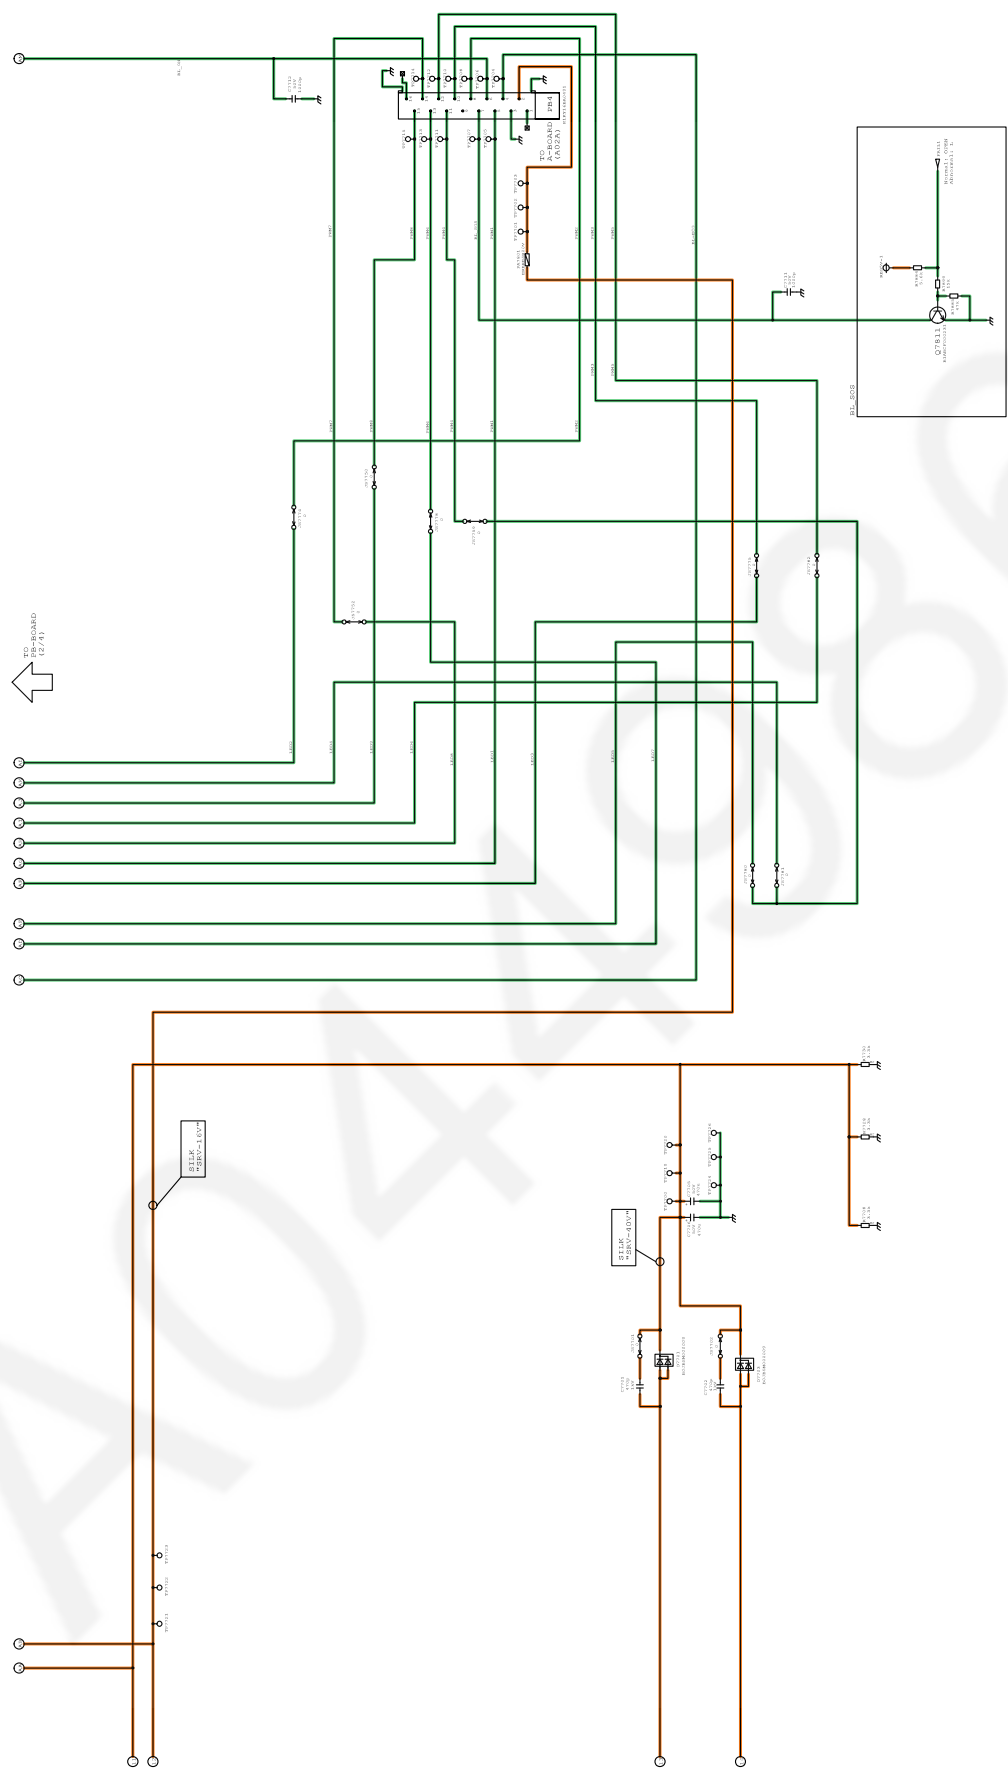


12 Printed Circuit Board


Model No. : TH-55CX600S A-Board (Top Component Side)




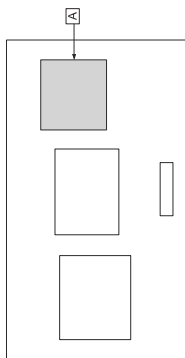


Parts Location					
Ref.No	Location	Ref.No	Location	Ref.No	Location
I02100	C5	D2000	D5	D4515	A1
I02251	E4	D2001	D5	D4516	A2
I03100	B2	D2100	C5	D4517	A2
I03101	A3	D2200	E4	D5023	C1
I04504	A1	D2202	E4	D5027	B1
I04505	A1	D2204	E4	D5000	C2
I04506	A2	D3100	B2	D5701	C1
I05000	B1	D3101	B2		
I05003	D5	D3102	B2		
I05010	C1	D3103	B2		
I05704	C1	D3104	B2		
I05706	C2	D3105	B2		
I05707	C1	D3106	B2		
I06806	D2	D3107	B2		
I08402	A5	D3108	B2		
I08800	A1	D3109	B2		
I08801	A2	D3110	B2		
I08604	A4	D3111	B2		
I08607	E2	D3112	B2		
I08608	A2	D3113	B2		
I08901	B5	D3114	B2		
I08902	C5	D3115	C1		
I08609	C5	D4502	B1		
I09150	D2	D4514	A1		

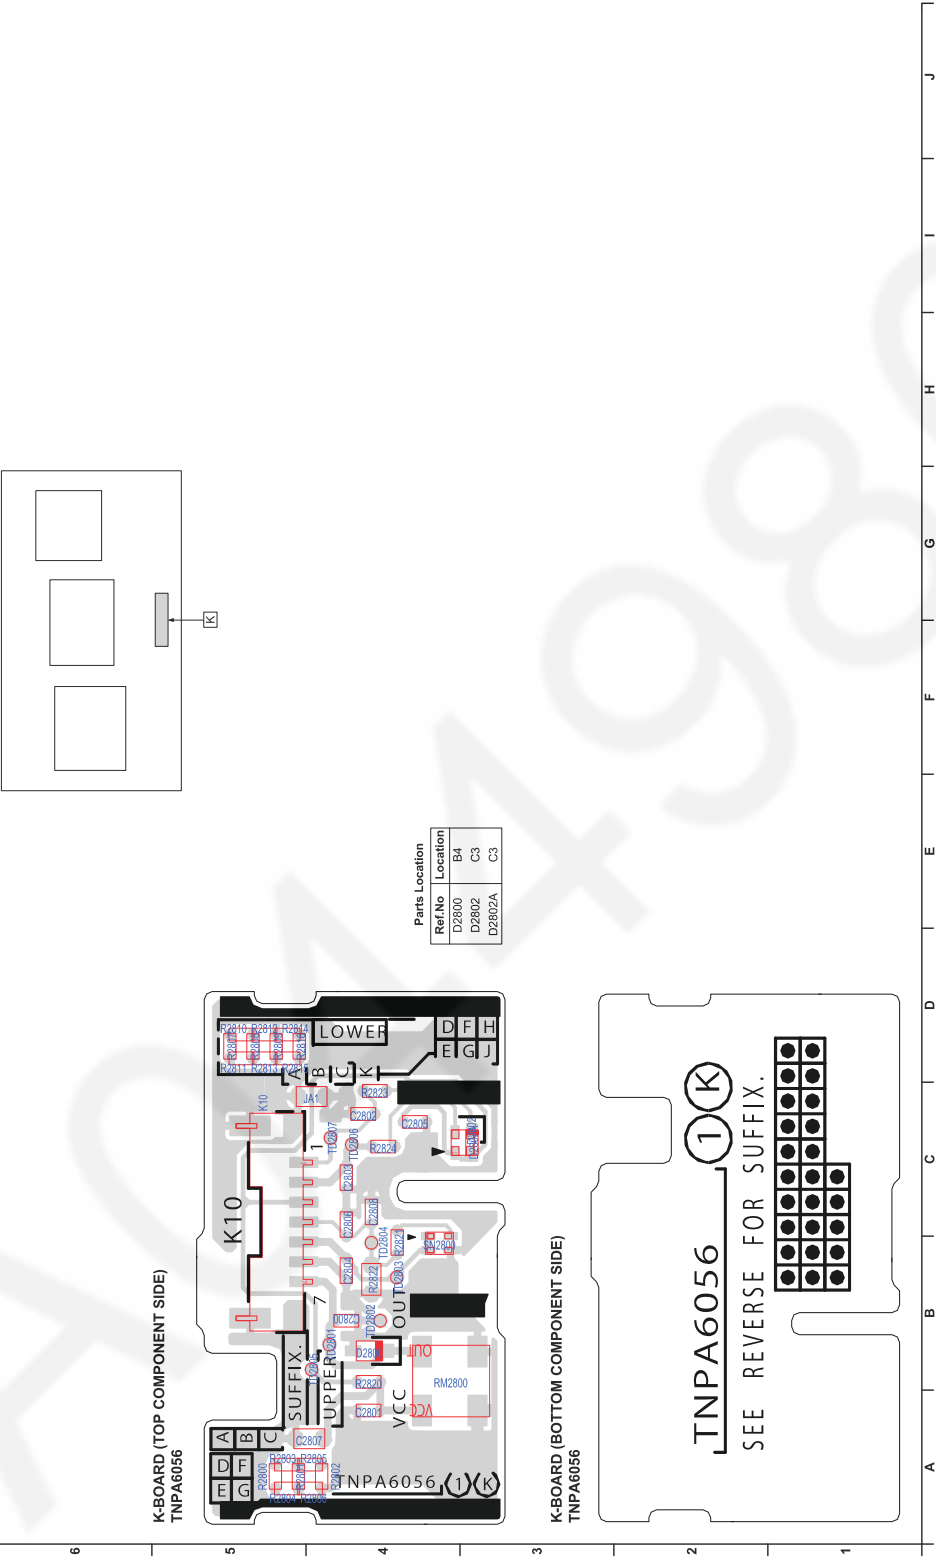

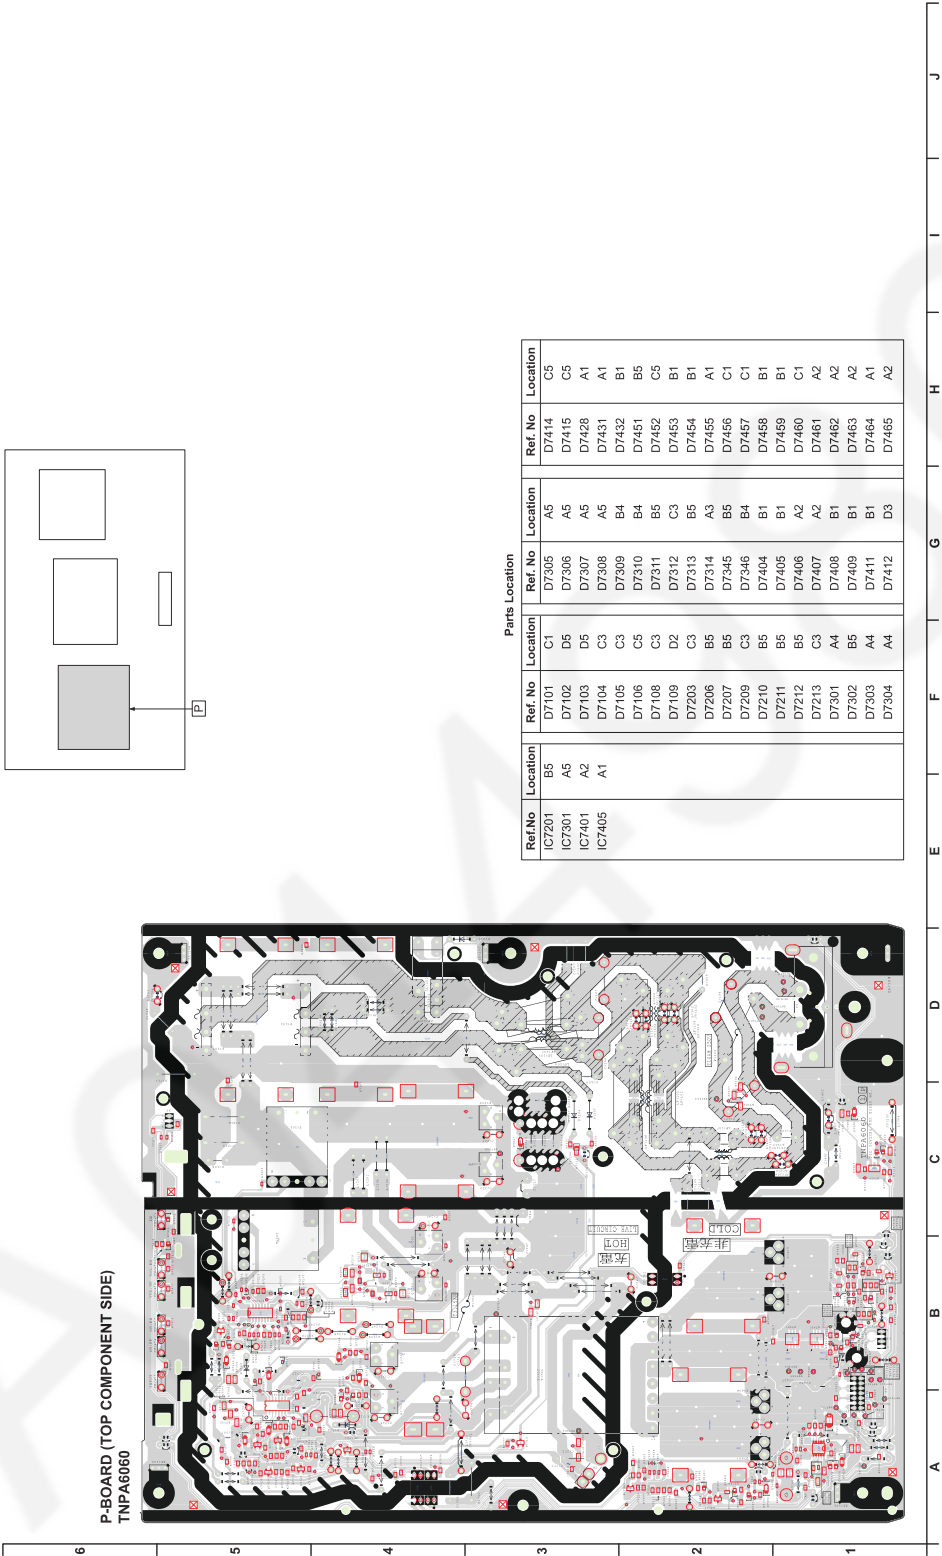


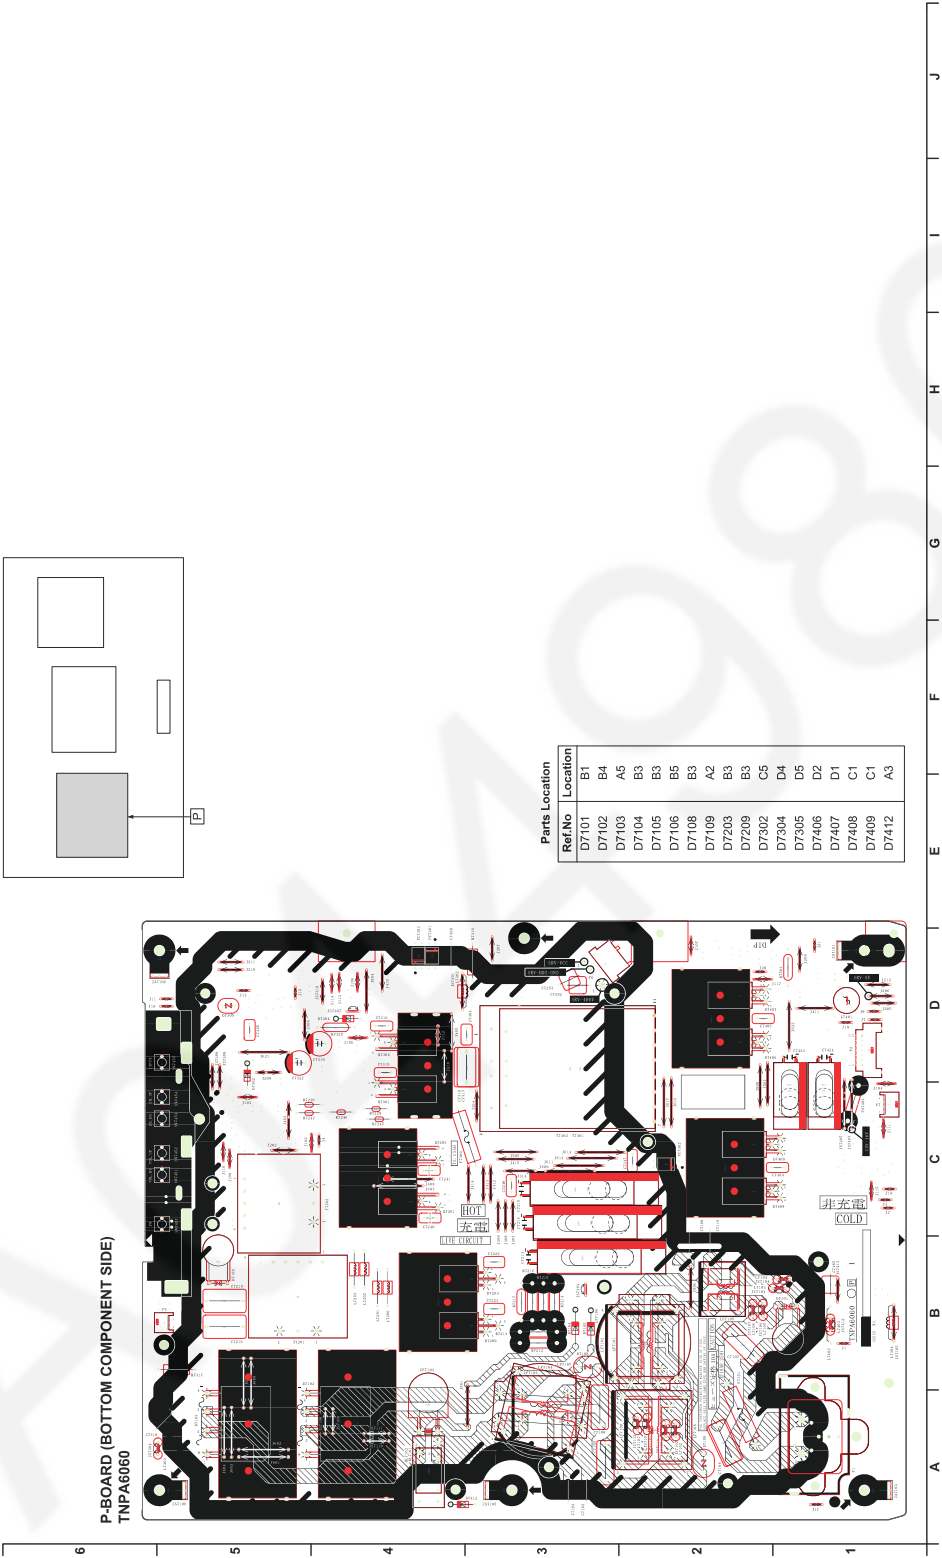

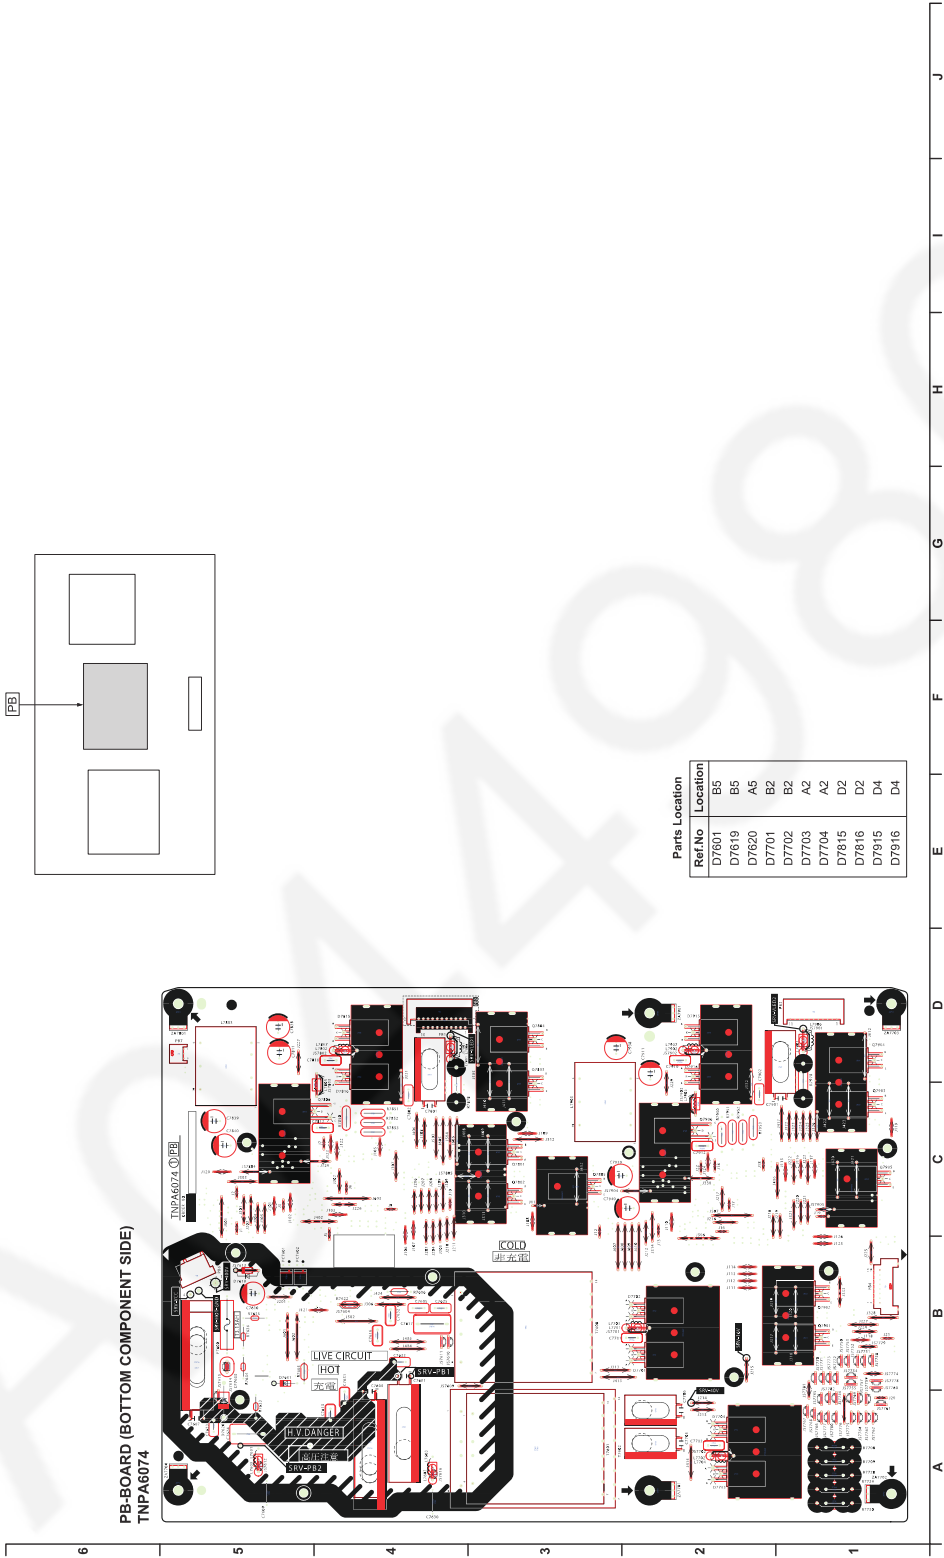


13 Exploded View and Replacement Parts List



Model No. : TH-55CX600S Parts Location

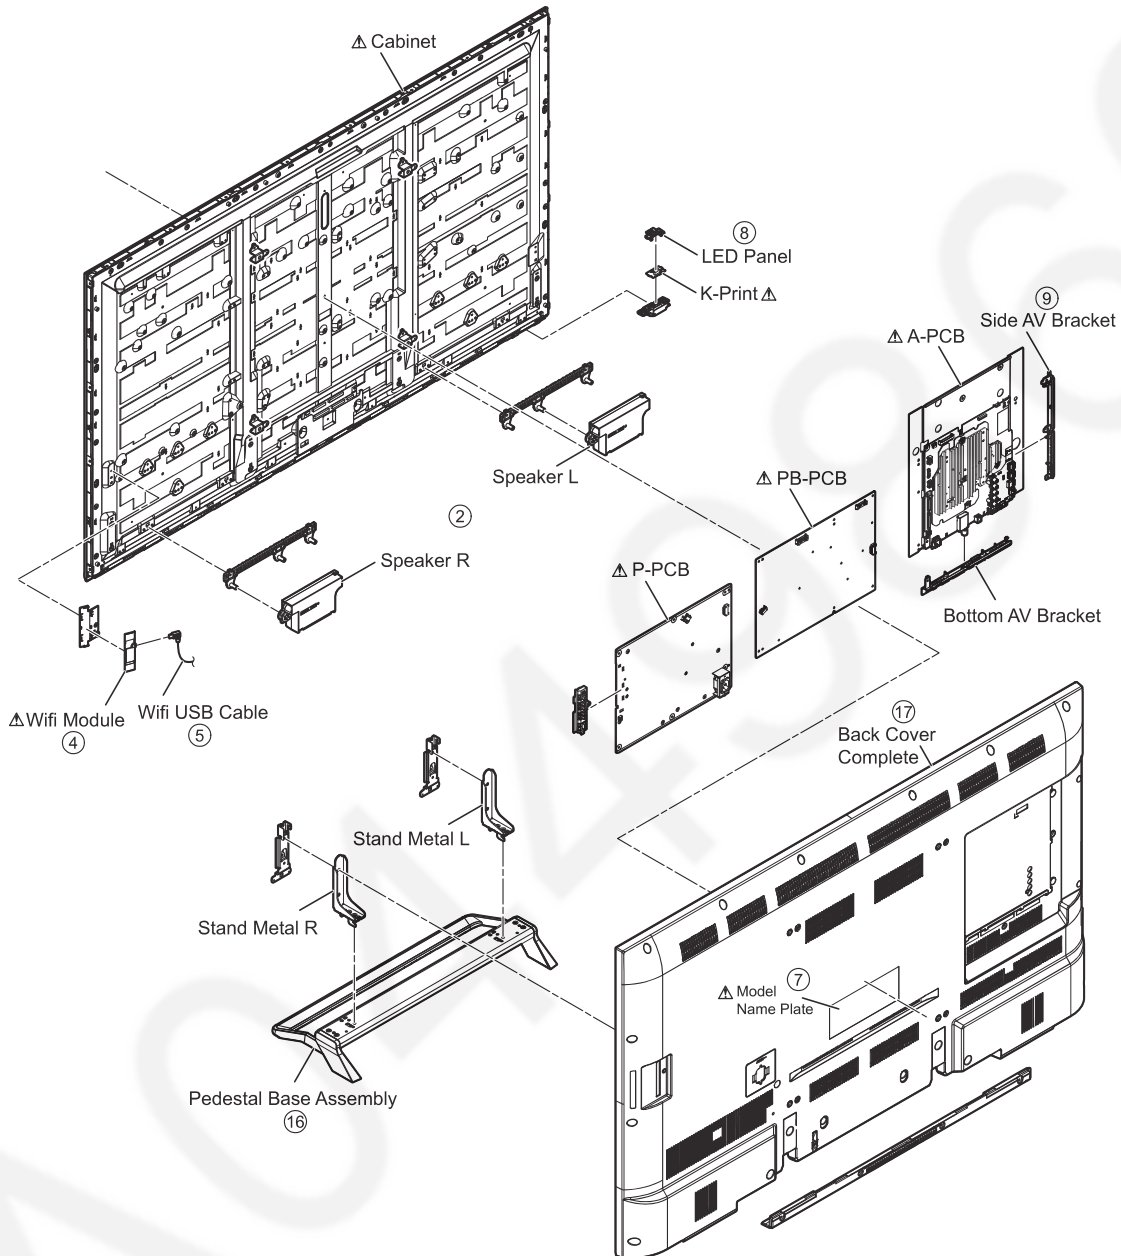





Model No. : TH-55CX600S Packing Exploded View 1

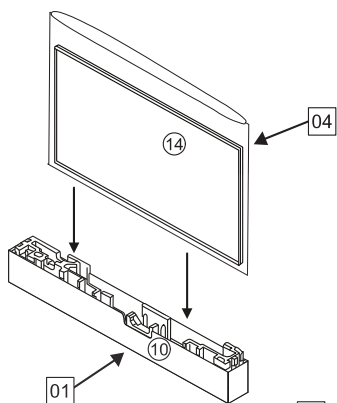


No	Part No	Description	Qty	UOM
01	TPC4GA28201	CARTON_BOTTOM	1	PC
02	TPD4GA06711	CUSHION_BOTTOM	1	PC
03	TPD4GA06701	CUSHION_TOP	1	PC
04	TPE4TH018	SET_BAG	1	PC
05	N2QAYB000934	REMOTE_TRANSMITTER	1	PC
06	TBL5ZX09041	STAND METAL BRACKETS KIT	1	PC
07	TQZ4GB902	FAN BAG ASSY	1	PC
08	K2CT2YY00111	AC_CORD	1	PC
09	R6UWC/2SKD	BATTERY	1	PC
10	TBL5ZX09131	PEDESTAL BASE ASSEMBLY	1	PC
11	TMXX073	AC-CORD_CLAMPER	1	PC
12	TXFMX01WKUH	AC_CORD_COMPLETE	1	PC

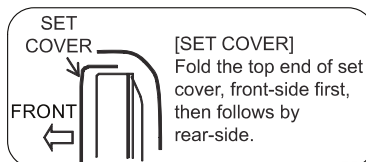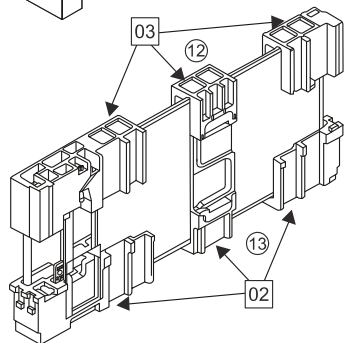

[Caution]
When you place your Metal Stand Assy be careful about the placement of the screws, place it into cushion pocket neatly
* use the illustrations as a reference.

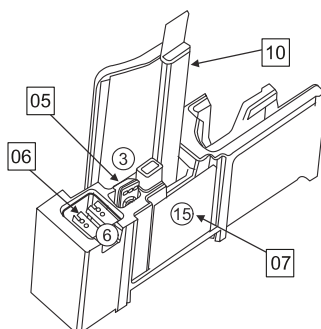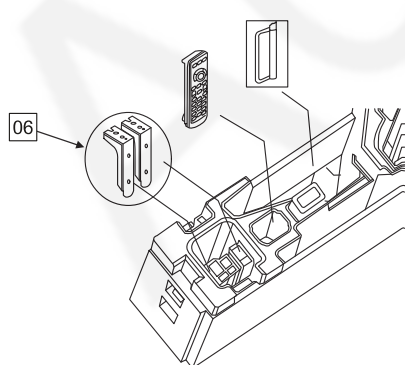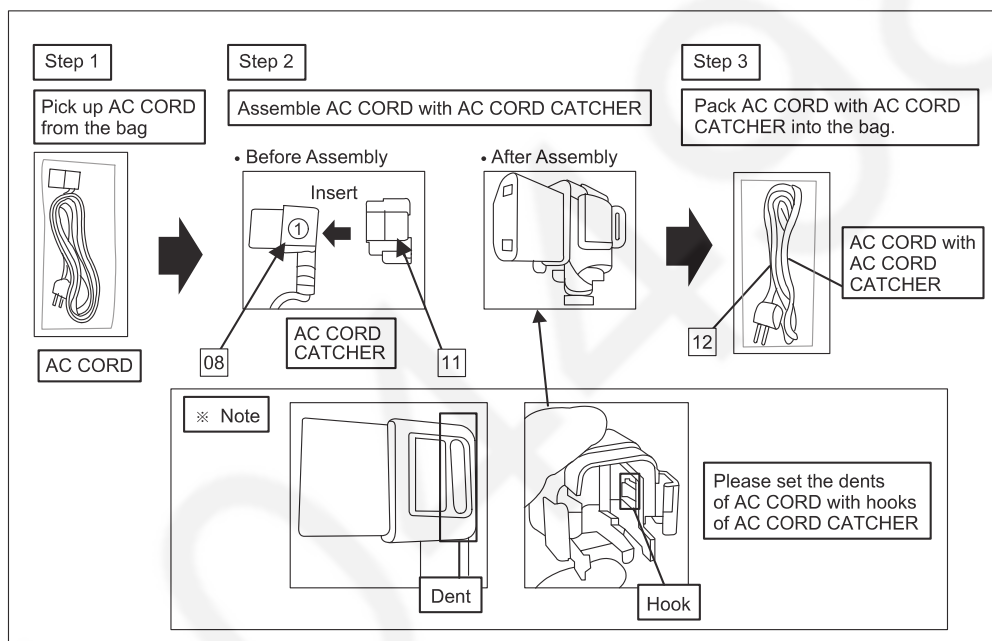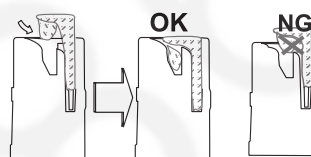


[Note]
Make sure (+ve) side at top position

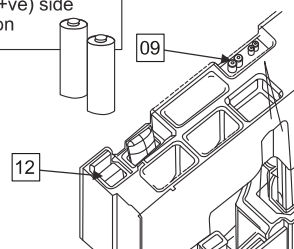

Model No. : TH-55CX600S Packing Exploded View 2

- 1 Tapping top flap packing case.
2. Paste label (rub evenly at least twice).

No	Part No	Description	Qty	UOM
01	TPD4GA05181	CUSHION_FRONT	1	PC
02	TPC4GA28107	CARTON_TOP	1	PC
03	TPDX00033	PC_JOINT	4	PC
04	25EJ28720	PP TAPE (CARTON1.88/CUSHION T0.2/B0.4)	2.08	MT
05	TQF4GK325	CARTON_LABEL	1	PC
06	TXFQD01RDUK	LABEL_COMBINATION	1	PC

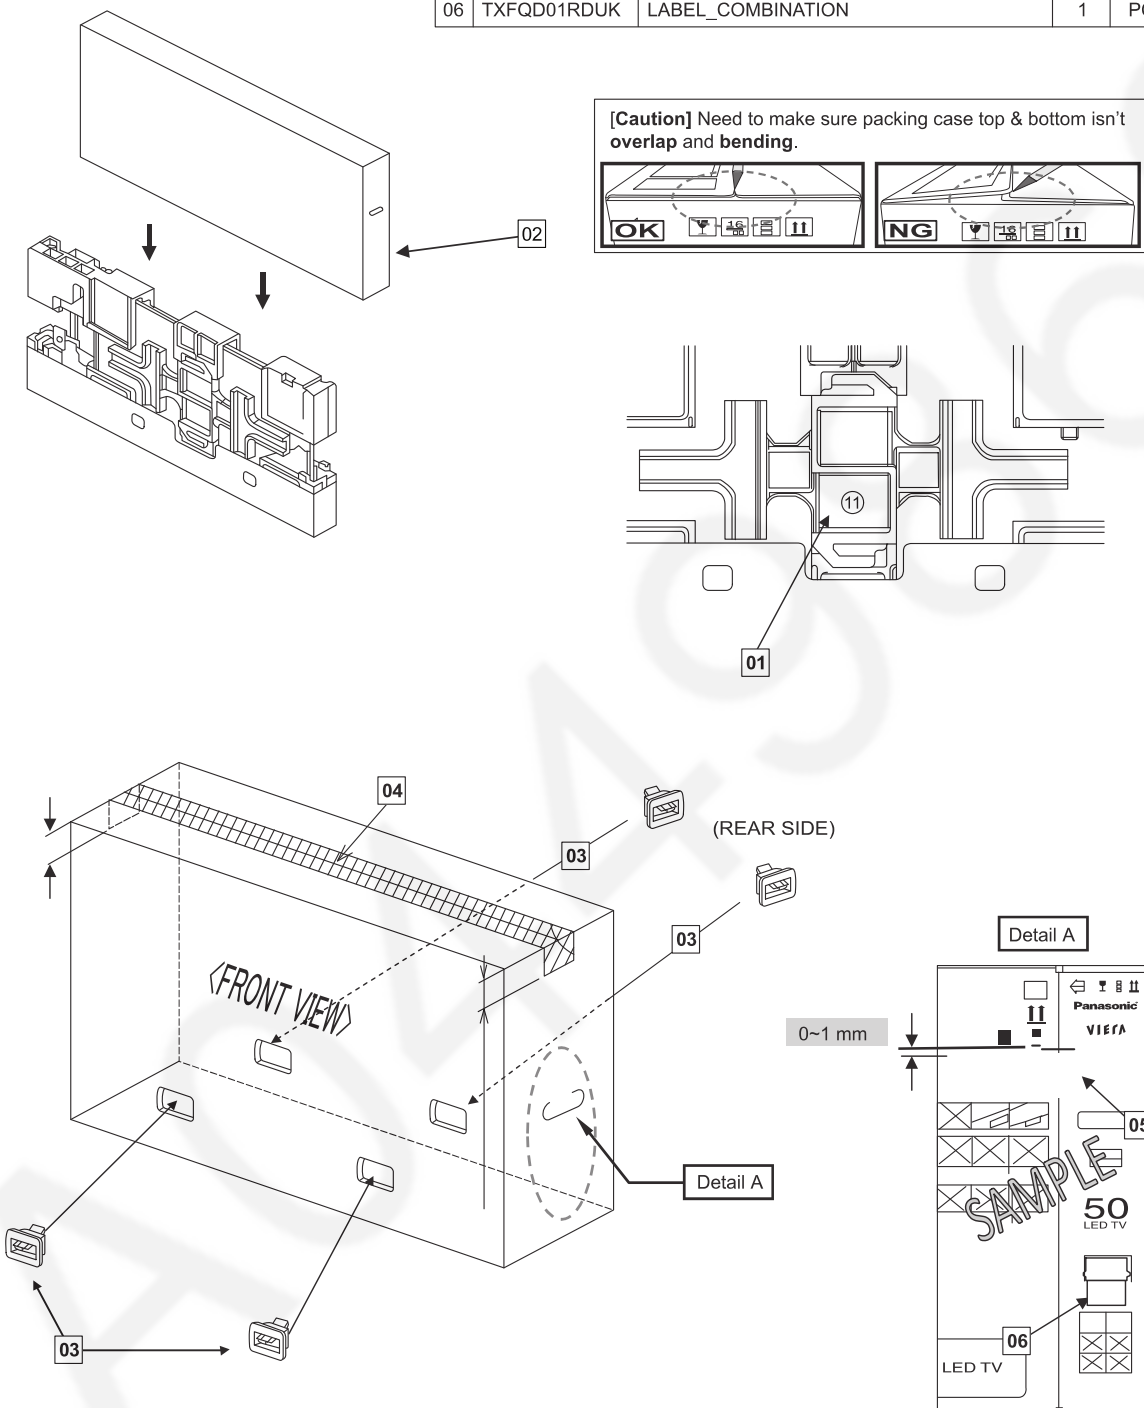

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
CAPACITOR						
		C2000	F1G1H102A946	C 1000PF, 50V		
		C2001	F1G1E103A144	C 0.01UF, 25V		
		C2002	F1G1E103A144	C 0.01UF, 25V		
		C2003	F1K1V106A010	C 10UF, 35V		
		C2004	F1G1H102A946	C 1000PF, 50V		
		C2005	F1G1H102A946	C 1000PF, 50V		
		C2006	F1G1C104A146	C 0.1UF, 16V		
		C2007	F1G1H102A946	C 1000PF, 50V		
		C2008	F1G1E103A144	C 0.01UF, 25V		
		C2010	F1G1H102A946	C 1000PF, 50V		
		C2011	F1G1H102A946	C 1000PF, 50V		
		C2021	F1G1H221A834	C 220PF, 50V		
		C2022	F1G1H221A834	C 220PF, 50V		
		C2023	F1G1H221A834	C 220PF, 50V		
		C2024	F1G1H221A834	C 220PF, 50V		
		C2025	F1G1H221A834	C 220PF, 50V		
		C2026	F1G1H221A834	C 220PF, 50V		
		C2027	F1G1H221A834	C 220PF, 50V		
		C2028	F1G1H221A834	C 220PF, 50V		
		C2111	F1G1H102A946	C 1000PF, 50V		
		C2115	F1G1E103A144	C 0.01UF, 25V		
		C2116	F1G1H100A963	C 10PF, 50V		
		C2117	F1G1H100A963	C 10PF, 50V		
		C2250	F1G1C104A146	C 0.1UF, 16V		
		C2253	F1G1A105A107	C 1UF, 10V		
		C2257	F1G1E103A144	C 0.01UF, 25V		
		C2258	F1G1E103A144	C 0.01UF, 25V		
		C2801	F1H1H103B047	C 0.01UF, 50V		
		C2804	F1H1C104A178	C 0.1UF, 16V		
		C2807	F1J1A106A043	C 10UF, 10V		
		C2808	F1H1C104A178	C 0.1UF, 16V		
		C3100	F1G1C104A146	C 0.1UF, 16V		
		C3109	F1G1H100A963	C 10PF, 50V		
		C3110	F1G1H100A963	C 10PF, 50V		
		C3111	F1G1H100A963	C 10PF, 50V		
		C3112	F1G1H152A946	C 1500PF, 50V		
		C3113	F1G1C103A173	C 0.01UF, 16V		
		C3114	F1G1C103A173	C 0.01UF, 16V		
		C3115	F1G1C103A173	C 0.01UF, 16V		
		C3116	F1G1C103A173	C 0.01UF, 16V		
		C3124	F1G1A105A107	C 1UF, 10V		
		C3125	F1G1A105A107	C 1UF, 10V		
		C3127	F1G1A473A079	C 0.047UF, 10V		
		C3128	F1G1H471A834	C 470PF, 50V		
		C3129	F1G1H471A834	C 470PF, 50V		
		C3163	F1G1H101A948	C 100PF, 50V		
		C3164	F1G1H101A948	C 100PF, 50V		
		C4030	F1G1C104A146	C 0.1UF, 16V		
		C4031	F1G1C104A146	C 0.1UF, 16V		
		C4032	F1G1C104A146	C 0.1UF, 16V		
		C4033	F1G1C104A146	C 0.1UF, 16V		
		C4034	F1G1C104A146	C 0.1UF, 16V		
		C4035	F1G1C104A146	C 0.1UF, 16V		
		C4036	F1G1C104A146	C 0.1UF, 16V		
		C4037	F1G1C104A146	C 0.1UF, 16V		
		C4038	F1G1C104A146	C 0.1UF, 16V		
		C4039	F1G1C104A146	C 0.1UF, 16V		
		C4040	F1G1C104A146	C 0.1UF, 16V		
		C4041	F1G1C104A146	C 0.1UF, 16V		
		C4042	F1G1C104A146	C 0.1UF, 16V		
		C4043	F1G1C104A146	C 0.1UF, 16V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C4044	F1G1C104A146	C 0.1UF, 16V		
		C4045	F1G1C104A146	C 0.1UF, 16V		
		C4050	F1G1C104A146	C 0.1UF, 16V		
		C4051	F1G1C104A146	C 0.1UF, 16V		
		C4052	F1G1C104A146	C 0.1UF, 16V		
		C4053	F1G1C104A146	C 0.1UF, 16V		
		C4054	F1G1C104A146	C 0.1UF, 16V		
		C4055	F1G1C104A146	C 0.1UF, 16V		
		C4056	F1G1C104A146	C 0.1UF, 16V		
		C4057	F1G1C104A146	C 0.1UF, 16V		
		C4058	F1G1C104A146	C 0.1UF, 16V		
		C4059	F1G1C104A146	C 0.1UF, 16V		
		C4060	F1G1C104A146	C 0.1UF, 16V		
		C4061	F1G1C104A146	C 0.1UF, 16V		
		C4062	F1G1C104A146	C 0.1UF, 16V		
		C4063	F1G1C104A146	C 0.1UF, 16V		
		C4064	F1G1C104A146	C 0.1UF, 16V		
		C4065	F1G1C104A146	C 0.1UF, 16V		
		C4069	F1G1H101A948	C 100PF, 50V		
		C4070	F1G1E103A144	C 0.01UF, 25V		
		C4096	F1G1C104A146	C 0.1UF, 16V		
		C4097	F1G1C104A146	C 0.1UF, 16V		
		C4098	F1G1C104A146	C 0.1UF, 16V		
		C4099	F1G1C104A146	C 0.1UF, 16V		
		C4100	F1G1C104A146	C 0.1UF, 16V		
		C4101	F1G1C104A146	C 0.1UF, 16V		
		C4102	F1G1C104A146	C 0.1UF, 16V		
		C4103	F1G1C104A146	C 0.1UF, 16V		
		C4115	F1K1V106A010	C 10UF, 35V		
		C4116	F1G1E103A144	C 0.01UF, 25V		
		C4117	F1G1E103A144	C 0.01UF, 25V		
		C4118	F1G1E103A144	C 0.01UF, 25V		
		C4500	F1H1E105A153	C 1UF, 25V		
		C4502	F1G1H7R0A833	C 7PF, 50V		
		C4503	F1G1C104A146	C 0.1UF, 16V		
		C4504	F1G1C104A146	C 0.1UF, 16V		
		C4505	F1G1C104A146	C 0.1UF, 16V		
		C4506	F1G1C104A146	C 0.1UF, 16V		
		C4507	F1G1C104A146	C 0.1UF, 16V		
		C4508	F1G1C104A146	C 0.1UF, 16V		
		C4509	F1G1C104A146	C 0.1UF, 16V		
		C4510	F1G1C104A146	C 0.1UF, 16V		
		C4511	F1G1C104A146	C 0.1UF, 16V		
		C4512	F1G1C104A146	C 0.1UF, 16V		
		C4513	F1G1C104A146	C 0.1UF, 16V		
		C4514	F1G1C104A146	C 0.1UF, 16V		
		C4515	F1G1C104A146	C 0.1UF, 16V		
		C4516	F1G1C104A146	C 0.1UF, 16V		
		C4517	F1G1C104A146	C 0.1UF, 16V		
		C4518	F1G1C104A146	C 0.1UF, 16V		
		C4519	F1G1H150A834	C 15PF, 50V		
		C4520	F1G1C104A146	C 0.1UF, 16V		
		C4521	F1G1C104A146	C 0.1UF, 16V		
		C4522	F1G1C104A146	C 0.1UF, 16V		
		C4523	F1G1C104A146	C 0.1UF, 16V		
		C4524	F1G1C104A146	C 0.1UF, 16V		
		C4525	F1G1C104A146	C 0.1UF, 16V		
		C4526	F1G1C104A146	C 0.1UF, 16V		
		C4527	F1G1C104A146	C 0.1UF, 16V		
		C4528	F1J1A106A043	C 10UF, 10V		
		C4530	F1J1A106A043	C 10UF, 10V		
		C4531	F1J1A106A043	C 10UF, 10V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C4532	F1G1C104A146	C 0.1UF, 16V		
		C4533	F1G1C104A146	C 0.1UF, 16V		
		C4534	F1G1C104A146	C 0.1UF, 16V		
		C4535	F1G1C104A146	C 0.1UF, 16V		
		C4536	F1G1C104A146	C 0.1UF, 16V		
		C4537	F1G1C104A146	C 0.1UF, 16V		
		C4538	F1G1C104A146	C 0.1UF, 16V		
		C4539	F1G1C1030008	C 0.01UF, 16V		
		C4540	F1G1C104A146	C 0.1UF, 16V		
		C4541	F1H0J4750004	C 4.7UF, 6.3V		
		C4543	F1J1A106A043	C 10UF, 10V		
		C4544	F1H1C474A178	C 0.47UF, 16V		
		C4545	F1J1A106A043	C 10UF, 10V		
		C4546	F1J1A106A043	C 10UF, 10V		
		C4551	F1J1A106A043	C 10UF, 10V		
		C4553	F1G1C104A146	C 0.1UF, 16V		
		C4554	F1G1C104A146	C 0.1UF, 16V		
		C4555	F1G1E333A144	C 0.033UF, 25V		
		C4556	F1G1H821A946	C 820PF, 50V		
		C4557	F1G1C104A146	C 0.1UF, 16V		
		C4558	F1J1A106A043	C 10UF, 10V		
		C4560	F1J0G2260001	C 22UF, 4V		
		C4561	F1J0G2260001	C 22UF, 4V		
		C4562	F1G1E103A144	C 0.01UF, 25V		
		C4569	F1J1A106A043	C 10UF, 10V		
		C4570	F1J1A106A043	C 10UF, 10V		
		C4571	F1G1C104A146	C 0.1UF, 16V		
		C4572	F1G1C104A146	C 0.1UF, 16V		
		C4573	F1G1C104A146	C 0.1UF, 16V		
		C4574	F1G1C104A146	C 0.1UF, 16V		
		C4575	F1G1C104A146	C 0.1UF, 16V		
		C4576	F1G1C104A146	C 0.1UF, 16V		
		C4578	F1G1A105A107	C 1UF, 10V		
		C4579	F1G1A105A107	C 1UF, 10V		
		C4582	F1H1E104A161	C 0.1UF, 25V		
		C4583	F1G1E103A144	C 0.01UF, 25V		
		C4584	F1J1A106A043	C 10UF, 10V		
		C4585	F1G1E103A144	C 0.01UF, 25V		
		C4586	F1G1E103A144	C 0.01UF, 25V		
		C4599	F1G1H220A834	C 22PF, 50V		
		C4900	F1H1E104A161	C 0.1UF, 25V		
		C4902	F1K1V106A010	C 10UF, 35V		
		C4904	F1H1E104A161	C 0.1UF, 25V		
		C4906	F1H1E104A161	C 0.1UF, 25V		
		C4907	F1K1V106A010	C 10UF, 35V		
		C4910	F1K1V106A010	C 10UF, 35V		
		C4911	F1H1E104A161	C 0.1UF, 25V		
		C4913	F1J1E224A272	C 0.22UF, 25V		
		C4914	F1J1E224A272	C 0.22UF, 25V		
		C4929	F1H1E105A153	C 1UF, 25V		
		C4931	F1H1E105A153	C 1UF, 25V		
		C4933	F1H1E105A153	C 1UF, 25V		
		C4935	F1H1E105A153	C 1UF, 25V		
		C4937	F1H1E105A153	C 1UF, 25V		
		C5010	F1G1E103A144	C 0.01UF, 25V		
		C5011	F1K1V106A010	C 10UF, 35V		
		C5012	F1J1A106A043	C 10UF, 10V		
		C5013	F1J1A106A043	C 10UF, 10V		
		C5015	F1G1C104A146	C 0.1UF, 16V		
		C5016	F1G1H222A946	C 2200PF, 50V		
		C5017	F1G1A473A079	C 0.047UF, 10V		
		C5020	F1G1A105A107	C 1UF, 10V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C5022	F1G1A105A107	C 1UF, 10V		
		C5024	F1G1A105A107	C 1UF, 10V		
		C5025	F1H1E105A153	C 1UF, 25V		
		C5026	F1G1A105A107	C 1UF, 10V		
		C5029	F1H1A225A051	C 2.2UF, 10V		
		C5030	F1G1A105A107	C 1UF, 10V		
		C5031	F1G1A105A107	C 1UF, 10V		
		C5032	F1H1E105A153	C 1UF, 25V		
		C5036	F1K1V106A010	C 10UF, 35V		
		C5037	F1K1V106A010	C 10UF, 35V		
		C5038	F1K1V106A010	C 10UF, 35V		
		C5039	F1H1E105A153	C 1UF, 25V		
		C5040	F1G1H471A834	C 470PF, 50V		
		C5041	F1G1H680A948	C 68PF, 50V		
		C5042	F1G1E332A172	C 3300PF, 25V		
		C5043	F1K1V106A010	C 10UF, 35V		
		C5044	F1K1V106A010	C 10UF, 35V		
		C5046	F1J1E475A257	C 4.7UF, 25V		
		C5047	F1H1C474A178	C 0.47UF, 16V		
		C5067	F1H1E105A153	C 1UF, 25V		
		C5071	F1K1V106A010	C 10UF, 35V		
		C5072	F1H1E104A161	C 0.1UF, 25V		
		C5073	F1J1A106A043	C 10UF, 10V		
		C5074	F1J1A106A043	C 10UF, 10V		
		C5076	F1G1H680A948	C 68PF, 50V		
		C5077	F1G1H102A946	C 1000PF, 50V		
		C5078	F1J1A106A043	C 10UF, 10V		
		C5079	F1J1A106A043	C 10UF, 10V		
		C5096	F1K1V106A010	C 10UF, 35V		
		C5097	F1K1V106A010	C 10UF, 35V		
		C5102	F1G1E103A144	C 0.01UF, 25V		
		C5105	F1G1E103A144	C 0.01UF, 25V		
		C5108	F1G1H101A948	C 100PF, 50V		
		C5109	F1G1H101A948	C 100PF, 50V		
		C5717	F1J1A106A043	C 10UF, 10V		
		C5718	F1J1A106A043	C 10UF, 10V		
		C5720	F1K1V106A010	C 10UF, 35V		
		C5721	F1K1V106A010	C 10UF, 35V		
		C5722	F1J0G2260001	C 22UF, 4V		
		C5723	F1J0G2260001	C 22UF, 4V		
		C5724	F1G1C104A146	C 0.1UF, 16V		
		C5725	F1G1E333A144	C 0.033UF, 25V		
		C5727	F1G1H821A946	C 820PF, 50V		
		C6702	F1G1H102A946	C 1000PF, 50V		
		C6703	F1J1A106A043	C 10UF, 10V		
		C6704	F1G1C104A146	C 0.1UF, 16V		
		C6705	F1J1A106A043	C 10UF, 10V		
		C6707	F1G1C104A146	C 0.1UF, 16V		
		C6717	F1G1H220A834	C 22PF, 50V		
		C6718	F1G1H220A834	C 22PF, 50V		
		C6720	F1G1H220A834	C 22PF, 50V		
		C6721	F1G1H220A834	C 22PF, 50V		
		C6731	F1G1H101A948	C 100PF, 50V		
		C6732	F1G1H101A948	C 100PF, 50V		
		C6739	F1G1C104A146	C 0.1UF, 16V		
		C6800	F1G1H8R0A963	C 8PF, 50V		
		C6801	F1G1H8R0A963	C 8PF, 50V		
		C6803	F1G1C104A146	C 0.1UF, 16V		
		C6807	F1G1C104A146	C 0.1UF, 16V		
		C6811	F1G1C104A146	C 0.1UF, 16V		
		C6822	F1G1C104A146	C 0.1UF, 16V		
		C6823	F1G1C104A146	C 0.1UF, 16V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C6825	F1G1C104A146	C 0.1UF, 16V		
		C6826	F1G1C104A146	C 0.1UF, 16V		
		C6836	F1J1A106A043	C 10UF, 10V		
		C6839	F1J1A106A043	C 10UF, 10V		
		C6843	F1J1A106A043	C 10UF, 10V		
		C6847	F1G1C104A146	C 0.1UF, 16V		
		C6849	F1G1C104A146	C 0.1UF, 16V		
		C6950	F1G0J1050007	C 1.0UF, 6.3V		
		C6953	F1G1E103A144	C 0.01UF, 25V		
		C6954	F1G1E103A144	C 0.01UF, 25V		
		C6957	F1G1H181A834	C 180PF, 50V		
		C6958	F1G1C104A146	C 0.1UF, 16V		
		C6959	F1G1H181A834	C 180PF, 50V		
		C6960	F1G1H472A830	C 4700PF, 50V		
		C6961	F1G0J1050007	C 1.0UF, 6.3V		
		C6964	F1H1H181B052	C 470PF, 50V		
		C6965	F1G1C104A146	C 0.1UF, 16V		
		C6967	F1G1H121A834	C 120PF, 50V		
		C6968	F1G1H102A946	C 1000PF, 50V		
		C6970	F1G1H102A946	C 1000PF, 50V		
		C6971	F1G1H5R0A947	C 5PF, 50V		
		C6973	F1G1H5R0A947	C 5PF, 50V		
		C6974	F1G1H121A834	C 120PF, 50V		
		C6977	F1G1H331A946	C 330PF, 50V		
		C6982	F1G1E103A144	C 0.01UF, 25V		
		C6988	F1G1H102A946	C 1000PF, 50V		
		C7102	F1AAF471A019	C 470PF, 240V		
		C7103	F1AAF471A019	C 470PF, 240V		
		C7104	F0CAF3340009	C 0.33UF, 250V		
		C7105	F0CAF2240010	C 0.22UF, 250V		
		C7213	F2A2W6800013	C 68UF, 450V		
		C7214	F2A2W6800013	C 68UF, 450V		
		C7215	F2A2W6800013	C 68UF, 450V		
		C7216	ECWFD2W155KC	C 1.5UF, 450V		
		C7217	F1J1H105A918	C 1UF, 50V		
		C7219	ECWFD2W155KC	C 1.5UF, 450V		
		C7222	F1A3A471A060	C 470PF, 1KV		
		C7223	F1A3A471A060	C 470PF, 1KV		
		C7224	F1J1H103A900	C 0.01UF, 50V		
		C7226	F1H1H181B052	C 470PF, 50V		
		C7227	F1J1E224A272	C 0.22UF, 25V		
		C7228	F1J1E225A178	C 2.2UF, 25V		
		C7231	F1H1H104B047	C 0.1UF, 50V		
		C7232	F1J1H102A909	C 1000PF, 50V		
		C7238	F1J1H105A918	C 1UF, 50V		
		C7239	F1H1H104B047	C 0.1UF, 50V		
		C7240	F1A3A221A060	C 220PF, 1KV		
		C7241	F1A3A221A060	C 220PF, 1KV		
		C7242	F1H1H100B052	C 10PF, 50V		
		C7243	F1H1H100B052	C 10PF, 50V		
		C7249	F1J1H101A906	C 100PF, 50V		
		C7302	F1J1H104A902	C 0.1UF, 50V		
		C7303	F1J1H105A918	C 1UF, 50V		
		C7304	F1A3A221A079	C 220PF, 1KV		
		C7305	F1J1H105A918	C 1UF, 50V		
		C7307	F1J1H101A906	C 100PF, 50V		
		C7309	F1AAF101A019	C 100PF, 240V		
		C7310	F2A1E471C108	C 470UF, 25V		
		C7311	F1J1H105A918	C 1UF, 50V		
		C7312	F1H1C474A178	C 0.47UF, 16V		
		C7313	F1J1H102A909	C 1000PF, 50V		
		C7315	F1A3A221A060	C 220PF, 1KV		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C7316	F1A3A221A060	C 220PF, 1KV		
		C7318	F1AAF471A019	C 470PF, 240V		
		C7319	ECWH8223HAC	C 0.022UF, Z, 800V		
		C7320	F1A3A102A079	C 1000PF, 1KV		
		C7324	F1J1H104A902	C 0.1UF, 50V		
		C7417	F1J1C225A223	C 2.2UF, 16V		
		C7418	F1J1H223A900	C 0.022UF, 50V		
		C7421	F1J1H105A918	C 1UF, 50V		
		C7423	F2AZZ2220001	C 2200UF, 240V		
		C7424	F2AZZ2220001	C 2200UF, 240V		
		C7425	F1H1H104B047	C 0.1UF, 50V		
		C7434	F1J1H104A902	C 0.1UF, 50V		
		C7436	F1H1H104B047	C 0.1UF, 50V		
		C7438	F1J1C225A223	C 2.2UF, 16V		
		C7450	F1J1H104A902	C 0.1UF, 50V		
		C7452	F1J1H104A902	C 0.1UF, 50V		
		C7462	F1K1V106A010	C 10UF, 35V		
		C7463	F1K1V106A010	C 10UF, 35V		
		C7465	F1K1V106A010	C 10UF, 35V		
		C7466	F1K1V106A010	C 10UF, 35V		
		C7467	F1J1H105A918	C 1UF, 50V		
		C7468	F1J1H105A918	C 1UF, 50V		
		C7470	F1J1H105A918	C 1UF, 50V		
		C7472	F1H1H103B047	C 0.01UF, 50V		
		C7476	F1J1H102A909	C 1000PF, 50V		
		C7477	F1J1H472A900	C 4700PF, 50V		
		C7478	F1J1H223A900	C 0.022UF, 50V		
		C7479	F1J1H102A909	C 1000PF, 50V		
		C7484	F1A3A221A079	C 220PF, 1KV		
		C7600	F2A2W6800013	C 68UF, 450V		
		C7601	F2A2W6800013	C 68UF, 450V		
		C7602	F1H1H223B047	C 0.022UF, 50V		
		C7603	F1H1H104B047	C 0.1UF, 50V		
		C7604	F1J1H104A902	C 0.1UF, 50V		
		C7605	F1A3A471A079	C 470PF, 1KV		
		C7606	F1J1H105A918	C 1UF, 50V		
		C7608	F1H1H101B052	C 100PF, 50V		
		C7611	F1H1H102B052	C 1000PF, 50V		
		C7612	F1H1C474A178	C 0.47UF, 16V		
		C7613	F1H1H102B052	C 1000PF, 50V		
		C7614	F1H1H220B052	C 22PF, 50V		
		C7615	F1A3A221A060	C 220PF, 1KV		
		C7616	F1A3A221A060	C 220PF, 1KV		
		C7617	ECWH8333HAC	C 0.033UF, 800V		
		C7621	F1H1H102B052	C 1000PF, 50V		
		C7625	F1A3A471A079	C 470PF, 1KV		
		C7626	F1H1H104B047	C 0.1UF, 50V		
		C7627	F1H1H103B047	C 0.01UF, 50V		
		C7630	F1AAF101A019	C 100PF, 240V		
		C7701	F1A3A471A079	C 470PF, 1KV		
		C7702	F1A3A471A079	C 470PF, 1KV		
		C7705	F2A1H4710108	C 470PF, 50V		
		C7706	F2A1H4710108	C 470PF, 50V		
		C7707	F1H1H104B047	C 0.1UF, 50V		
		C7709	F1H1H104B047	C 0.1UF, 50V		
		C7710	F1H1H105B027	C 1UF, 50V		
		C7711	F1H1H102B052	C 1000PF, 50V		
		C7712	F1H1H102B052	C 1000PF, 50V		
		C7713	F1H1H223B047	C 0.022UF, 50V		
		C7801	F2A2A1010047	C 100UF, 100V		
		C7802	F1A3A102A079	C 1000PF, 1KV		
		C7805	F1H1H103B047	C 0.01UF, 50V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C7806	F1H1H103B047	C 0.01UF, 50V		
		C7807	F1H1H103B047	C 0.01UF, 50V		
		C7808	F1H1H103B047	C 0.01UF, 50V		
		C7810	F1A3A221A079	C 220PF, 1KV		
		C7811	F2A1J1210012	C 120UF, 63V		
		C7813	F1H1H102B052	C 1000PF, 50V		
		C7815	F1J1E105A287	C 1UF, 25V		
		C7816	F1J1E105A287	C 1UF, 25V		
		C7817	F1H1E105A153	C 1UF, 25V		
		C7819	F1H1H103B047	C 0.01UF, 50V		
		C7820	F1H1C224A178	C 0.22UF, 16V		
		C7821	F1H1H103B047	C 0.01UF, 50V		
		C7822	F1H1C224A178	C 0.22UF, 16V		
		C7823	F1H1H102B052	C 1000PF, 50V		
		C7824	F1H1H104B047	C 0.1UF, 50V		
		C7825	F1H1H104B047	C 0.1UF, 50V		
		C7827	F1H1H103B047	C 0.01UF, 50V		
		C7834	F1H1H102B052	C 1000PF, 50V		
		C7835	F1H1H103B047	C 0.01UF, 50V		
		C7836	F1J2E1030004	C 0.01UF, 250V		
		C7837	F1H1H102B052	C 1000PF, 50V		
		C7901	F2A2A1010047	C 100UF, 100V		
		C7902	F1A3A102A079	C 1000PF, 1KV		
		C7905	F1H1H103B047	C 0.01UF, 50V		
		C7906	F1H1H103B047	C 0.01UF, 50V		
		C7907	F1H1H103B047	C 0.01UF, 50V		
		C7908	F1H1H103B047	C 0.01UF, 50V		
		C7909	F1H1H103B047	C 0.01UF, 50V		
		C7910	F1A3A221A079	C 220PF, 1KV		
		C7911	F2A1J1210012	C 120UF, 63V		
		C7913	F1H1H102B052	C 1000PF, 50V		
		C7915	F1J1E105A287	C 1UF, 25V		
		C7916	F1J1E105A287	C 1UF, 25V		
		C7917	F1H1E105A153	C 1UF, 25V		
		C7919	F1H1H103B047	C 0.01UF, 50V		
		C7920	F1H1C224A178	C 0.22UF, 16V		
		C7921	F1H1H103B047	C 0.01UF, 50V		
		C7922	F1H1C224A178	C 0.22UF, 16V		
		C7923	F1H1H102B052	C 1000PF, 50V		
		C7924	F1H1H104B047	C 0.1UF, 50V		
		C7925	F1H1H104B047	C 0.1UF, 50V		
		C7927	F1H1H103B047	C 0.01UF, 50V		
		C7935	F1H1H103B047	C 0.01UF, 50V		
		C7936	F1J2E1030004	C 0.01UF, 250V		
		C7937	F1H1H102B052	C 1000PF, 50V		
		C8000	F1G1C104A146	C 0.1UF, 16V		
		C8001	F1G1C104A146	C 0.1UF, 16V		
		C8002	F1J1A106A043	C 10UF, 10V		
		C8003	F1G1C104A146	C 0.1UF, 16V		
		C8004	F1G1C104A146	C 0.1UF, 16V		
		C8005	F1G1C104A146	C 0.1UF, 16V		
		C8006	F1G1C104A146	C 0.1UF, 16V		
		C8007	F1G1C104A146	C 0.1UF, 16V		
		C8008	F1G1C104A146	C 0.1UF, 16V		
		C8009	F1J0G2260001	C 22UF, 4V		
		C8010	F1G1C104A146	C 0.1UF, 16V		
		C8011	F1J0G2260001	C 22UF, 4V		
		C8012	F1H0J4750004	C 4.7UF, 6.3V		
		C8014	F1G1C104A146	C 0.1UF, 16V		
		C8015	F1G1C104A146	C 0.1UF, 16V		
		C8016	F1J1A106A043	C 10UF, 10V		
		C8017	F1G1C104A146	C 0.1UF, 16V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8021	F1G1A105A107	C 1UF, 10V		
		C8022	F1G1C104A146	C 0.1UF, 16V		
		C8023	F1G1A105A107	C 1UF, 10V		
		C8024	F1G1C104A146	C 0.1UF, 16V		
		C8025	F1G1C104A146	C 0.1UF, 16V		
		C8026	F1G1C104A146	C 0.1UF, 16V		
		C8027	F1G1C104A146	C 0.1UF, 16V		
		C8028	F1G1A105A107	C 1UF, 10V		
		C8029	F1H0J4750004	C 4.7UF, 6.3V		
		C8030	F1G1C104A146	C 0.1UF, 16V		
		C8031	F1G1C104A146	C 0.1UF, 16V		
		C8034	F1G1C104A146	C 0.1UF, 16V		
		C8035	F1G1A105A107	C 1UF, 10V		
		C8036	F1G1C104A146	C 0.1UF, 16V		
		C8038	F1G1C104A146	C 0.1UF, 16V		
		C8039	F1G1C104A146	C 0.1UF, 16V		
		C8040	F1J0G2260001	C 22UF, 4V		
		C8041	F1G1C104A146	C 0.1UF, 16V		
		C8042	F1G1C104A146	C 0.1UF, 16V		
		C8043	F1G1C104A146	C 0.1UF, 16V		
		C8044	F1G1C104A146	C 0.1UF, 16V		
		C8045	F1G1C104A146	C 0.1UF, 16V		
		C8046	F1H0J4750004	C 4.7UF, 6.3V		
		C8047	F1H0J4750004	C 4.7UF, 6.3V		
		C8048	F1H0J4750004	C 4.7UF, 6.3V		
		C8049	F1H0J4750004	C 4.7UF, 6.3V		
		C8050	F1G1A105A107	C 1UF, 10V		
		C8051	F1G1C104A146	C 0.1UF, 16V		
		C8052	F1G1A105A107	C 1UF, 10V		
		C8054	F1G1C104A146	C 0.1UF, 16V		
		C8058	F1J1A106A043	C 10UF, 10V		
		C8059	F1G1A105A107	C 1UF, 10V		
		C8060	F1G1C104A146	C 0.1UF, 16V		
		C8061	F1J0G2260001	C 22UF, 4V		
		C8062	F1J0G2260001	C 22UF, 4V		
		C8100	F1G1H222A946	C 2200PF, 50V		
		C8101	F1G1C104A146	C 0.1UF, 16V		
		C8102	F1K1V106A010	C 10UF, 35V		
		C8103	F1K1V106A010	C 10UF, 35V		
		C8104	F1H1E104A161	C 0.1UF, 25V		
		C8105	F1G1E332A172	C 3300PF, 25V		
		C8106	F1J0G2260001	C 22UF, 4V		
		C8107	F1J0G2260001	C 22UF, 4V		
		C8108	F1J0G2260001	C 22UF, 4V		
		C8109	F1H1E105A153	C 1UF, 25V		
		C8110	F1J1E475A257	C 4.7UF, 25V		
		C8112	F1H1E104A161	C 0.1UF, 25V		
		C8114	F1K1V106A010	C 10UF, 35V		
		C8116	F1G1C104A146	C 0.1UF, 16V		
		C8117	F1G1E103A144	C 0.01UF, 25V		
		C8119	F1H1E105A153	C 1UF, 25V		
		C8121	F1J0G2260001	C 22UF, 4V		
		C8122	F1J0G2260001	C 22UF, 4V		
		C8124	F1G1A105A107	C 1UF, 10V		
		C8125	F1G1A105A107	C 1UF, 10V		
		C8127	F1G1H101A948	C 100PF, 50V		
		C8128	F1G1H101A948	C 100PF, 50V		
		C8129	F1G1H101A948	C 100PF, 50V		
		C8130	F1G1H101A948	C 100PF, 50V		
		C8200	F1G1E153A144	C 0.015UF, 25V		
		C8201	F1G1C104A146	C 0.1UF, 16V		
		C8202	F1G1C104A146	C 0.1UF, 16V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8203	F1G1C104A146	C 0.1UF, 16V		
		C8204	F1G1C104A146	C 0.1UF, 16V		
		C8205	F1G1C104A146	C 0.1UF, 16V		
		C8206	F1G1C104A146	C 0.1UF, 16V		
		C8207	F1G1C104A146	C 0.1UF, 16V		
		C8208	F1J1A106A043	C 10UF, 10V		
		C8209	F1G1C104A146	C 0.1UF, 16V		
		C8210	F1G1C104A146	C 0.1UF, 16V		
		C8211	F1G1C104A146	C 0.1UF, 16V		
		C8212	F1G1C104A146	C 0.1UF, 16V		
		C8213	F1G1C104A146	C 0.1UF, 16V		
		C8214	F1G1C104A146	C 0.1UF, 16V		
		C8215	F1G1C104A146	C 0.1UF, 16V		
		C8216	F1G1C104A146	C 0.1UF, 16V		
		C8217	F1G1C104A146	C 0.1UF, 16V		
		C8218	F1G1C104A146	C 0.1UF, 16V		
		C8219	F1G1C104A146	C 0.1UF, 16V		
		C8220	F1G1C104A146	C 0.1UF, 16V		
		C8221	F1G1C104A146	C 0.1UF, 16V		
		C8222	F1G1C104A146	C 0.1UF, 16V		
		C8223	F1G1C104A146	C 0.1UF, 16V		
		C8224	F1G1C104A146	C 0.1UF, 16V		
		C8225	F1J1A106A043	C 10UF, 10V		
		C8226	F1G1C104A146	C 0.1UF, 16V		
		C8227	F1G1C104A146	C 0.1UF, 16V		
		C8228	F1G1C104A146	C 0.1UF, 16V		
		C8229	F1G1C104A146	C 0.1UF, 16V		
		C8230	F1G1C104A146	C 0.1UF, 16V		
		C8231	F1G1C104A146	C 0.1UF, 16V		
		C8232	F1G1C104A146	C 0.1UF, 16V		
		C8233	F1G1C104A146	C 0.1UF, 16V		
		C8234	F1G1C104A146	C 0.1UF, 16V		
		C8235	F1G1C104A146	C 0.1UF, 16V		
		C8236	F1G1C104A146	C 0.1UF, 16V		
		C8237	F1G1E153A144	C 0.015UF, 25V		
		C8238	F1G1C104A146	C 0.1UF, 16V		
		C8239	F1G1C104A146	C 0.1UF, 16V		
		C8240	F1G1C104A146	C 0.1UF, 16V		
		C8241	F1G1C104A146	C 0.1UF, 16V		
		C8242	F1G1C104A146	C 0.1UF, 16V		
		C8243	F1G1C104A146	C 0.1UF, 16V		
		C8244	F1G1C104A146	C 0.1UF, 16V		
		C8245	F1J1A106A043	C 10UF, 10V		
		C8246	F1G1C104A146	C 0.1UF, 16V		
		C8247	F1G1C104A146	C 0.1UF, 16V		
		C8248	F1G1C104A146	C 0.1UF, 16V		
		C8249	F1G1C104A146	C 0.1UF, 16V		
		C8250	F1G1C104A146	C 0.1UF, 16V		
		C8251	F1G1C104A146	C 0.1UF, 16V		
		C8252	F1G1C104A146	C 0.1UF, 16V		
		C8253	F1G1C104A146	C 0.1UF, 16V		
		C8254	F1G1C104A146	C 0.1UF, 16V		
		C8255	F1G1C104A146	C 0.1UF, 16V		
		C8256	F1J1A106A043	C 10UF, 10V		
		C8257	F1G1C104A146	C 0.1UF, 16V		
		C8258	F1G1C104A146	C 0.1UF, 16V		
		C8259	F1G1C104A146	C 0.1UF, 16V		
		C8260	F1G1C104A146	C 0.1UF, 16V		
		C8261	F1G1C104A146	C 0.1UF, 16V		
		C8262	F1G1C104A146	C 0.1UF, 16V		
		C8263	F1G1C104A146	C 0.1UF, 16V		
		C8264	F1G1C104A146	C 0.1UF, 16V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8265	F1G1C104A146	C 0.1UF, 16V		
		C8266	F1G1C104A146	C 0.1UF, 16V		
		C8267	F1G1C104A146	C 0.1UF, 16V		
		C8268	F1G1C104A146	C 0.1UF, 16V		
		C8269	F1G1E153A144	C 0.015UF, 25V		
		C8270	F1G1C104A146	C 0.1UF, 16V		
		C8271	F1G1C104A146	C 0.1UF, 16V		
		C8272	F1G1C104A146	C 0.1UF, 16V		
		C8273	F1G1C104A146	C 0.1UF, 16V		
		C8274	F1J1H104A902	C 0.1UF, 50V		
		C8279	F1J1A106A043	C 10UF, 10V		
		C8280	F1G1C104A146	C 0.1UF, 16V		
		C8281	F1G1C104A146	C 0.1UF, 16V		
		C8282	F1G1C104A146	C 0.1UF, 16V		
		C8283	F1G1C104A146	C 0.1UF, 16V		
		C8284	F1G1C104A146	C 0.1UF, 16V		
		C8285	F1G1C104A146	C 0.1UF, 16V		
		C8286	F1G1C104A146	C 0.1UF, 16V		
		C8287	F1G1C104A146	C 0.1UF, 16V		
		C8288	F1G1C104A146	C 0.1UF, 16V		
		C8289	F1G1C104A146	C 0.1UF, 16V		
		C8290	F1G1C104A146	C 0.1UF, 16V		
		C8295	F1G1C104A146	C 0.1UF, 16V		
		C8300	F1G1H100A963	C 10PF, 50V		
		C8301	F1G1H8R0A963	C 8PF, 50V		
		C8359	F1G1C104A146	C 0.1UF, 16V		
		C8601	F1J1A106A043	C 10UF, 10V		
		C8607	F1G1C103A173	C 0.01UF, 16V		
		C8608	F1G1C103A173	C 0.01UF, 16V		
		C8609	F1H1C104A178	C 0.1UF, 16V		
		C8610	F1H1C104A178	C 0.1UF, 16V		
		C8618	F1J1A106A043	C 10UF, 10V		
		C8619	F1G1C104A146	C 0.1UF, 16V		
		C8623	F1J1A106A043	C 10UF, 10V		
		C8624	F1G1C104A146	C 0.1UF, 16V		
		C8625	F1J1A106A043	C 10UF, 10V		
		C8626	F1G1C104A146	C 0.1UF, 16V		
		C8628	F1J1A106A043	C 10UF, 10V		
		C8629	F1G1C104A146	C 0.1UF, 16V		
		C8635	F1G1C104A146	C 0.1UF, 16V		
		C8636	F1G1C104A146	C 0.1UF, 16V		
		C8653	F1G1A105A107	C 1UF, 10V		
		C8654	F1G1A105A107	C 1UF, 10V		
		C8663	F1J1A106A043	C 10UF, 10V		
		C8665	F1G1C104A146	C 0.1UF, 16V		
		C8668	F1J1A106A043	C 10UF, 10V		
		C8669	F1G1C104A146	C 0.1UF, 16V		
		C8673	F1J1A106A043	C 10UF, 10V		
		C8675	F1J1A106A043	C 10UF, 10V		
		C8676	F1G1C104A146	C 0.1UF, 16V		
		C8677	F1J1A106A043	C 10UF, 10V		
		C8678	F1G1C104A146	C 0.1UF, 16V		
		C8679	F1J1A106A043	C 10UF, 10V		
		C8687	F1J1A106A043	C 10UF, 10V		
		C8802	F1G1A105A107	C 1UF, 10V		
		C8811	F1G1C104A146	C 0.1UF, 16V		
		C8812	F1G1A105A107	C 1UF, 10V		
		C8910	F1H1E105A153	C 1UF, 25V		
		C8911	F1G1C104A146	C 0.1UF, 16V		
		C8912	F1J1A106A043	C 10UF, 10V		
		C8913	F1G1C104A146	C 0.1UF, 16V		
		C8914	F1J1A106A043	C 10UF, 10V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C8915	F1G1H100A963	C 10PF, 50V		
		C8920	F1G1C104A146	C 0.1UF, 16V		
		C9000	F1J0G2260001	C 22UF, 4V		
		C9001	F1G1C104A146	C 0.1UF, 16V		
		C9002	F1G1C104A146	C 0.1UF, 16V		
		C9003	F1G1C104A146	C 0.1UF, 16V		
		C9004	F1G1C104A146	C 0.1UF, 16V		
		C9005	F1G1C104A146	C 0.1UF, 16V		
		C9006	F1G1C104A146	C 0.1UF, 16V		
		C9007	F1G1C104A146	C 0.1UF, 16V		
		C9008	F1G1C104A146	C 0.1UF, 16V		
		C9009	F1G1C104A146	C 0.1UF, 16V		
		C9010	F1G1C104A146	C 0.1UF, 16V		
		C9011	F1G1C104A146	C 0.1UF, 16V		
		C9012	F1G1C104A146	C 0.1UF, 16V		
		C9013	F1G1C104A146	C 0.1UF, 16V		
		C9014	F1G1C104A146	C 0.1UF, 16V		
		C9015	F1J0G2260001	C 22UF, 4V		
		C9016	F1G1C104A146	C 0.1UF, 16V		
		C9017	F1G1C104A146	C 0.1UF, 16V		
		C9018	F1G1C104A146	C 0.1UF, 16V		
		C9019	F1G1C104A146	C 0.1UF, 16V		
		C9030	F1J1A106A043	C 10UF, 10V		
		C9031	F1G1C104A146	C 0.1UF, 16V		
		C9032	F1G1C104A146	C 0.1UF, 16V		
		C9033	F1G1C104A146	C 0.1UF, 16V		
		C9034	F1G1C104A146	C 0.1UF, 16V		
		C9035	F1G1C104A146	C 0.1UF, 16V		
		C9036	F1G1C104A146	C 0.1UF, 16V		
		C9037	F1G1C104A146	C 0.1UF, 16V		
		C9038	F1G1C104A146	C 0.1UF, 16V		
		C9039	F1G1C104A146	C 0.1UF, 16V		
		C9040	F1G1C104A146	C 0.1UF, 16V		
		C9041	F1G1C104A146	C 0.1UF, 16V		
		C9042	F1G1C104A146	C 0.1UF, 16V		
		C9043	F1G1C104A146	C 0.1UF, 16V		
		C9044	F1G1C104A146	C 0.1UF, 16V		
		C9045	F1J1A106A043	C 10UF, 10V		
		C9046	F1G1C104A146	C 0.1UF, 16V		
		C9047	F1G1C104A146	C 0.1UF, 16V		
		C9048	F1J0G2260001	C 22UF, 4V		
		C9049	F1J0G2260001	C 22UF, 4V		
		C9050	F1G1C104A146	C 0.1UF, 16V		
		C9051	F1G1C104A146	C 0.1UF, 16V		
		C9052	F1G1C104A146	C 0.1UF, 16V		
		C9053	F1G1C104A146	C 0.1UF, 16V		
		C9054	F1G1C104A146	C 0.1UF, 16V		
		C9055	F1G1C104A146	C 0.1UF, 16V		
		C9056	F1G1C104A146	C 0.1UF, 16V		
		C9057	F1G1C104A146	C 0.1UF, 16V		
		C9058	F1G1C104A146	C 0.1UF, 16V		
		C9059	F1G1C104A146	C 0.1UF, 16V		
		C9060	F1G1C104A146	C 0.1UF, 16V		
		C9061	F1G1C104A146	C 0.1UF, 16V		
		C9062	F1J0G2260001	C 22UF, 4V		
		C9063	F1J0G2260001	C 22UF, 4V		
		C9064	F1G1C104A146	C 0.1UF, 16V		
		C9065	F1G1C104A146	C 0.1UF, 16V		
		C9066	F1G1C104A146	C 0.1UF, 16V		
		C9067	F1G1C104A146	C 0.1UF, 16V		
		C9068	F1G1C104A146	C 0.1UF, 16V		
		C9069	F1G1C104A146	C 0.1UF, 16V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C9070	F1G1C104A146	C 0.1UF, 16V		
		C9071	F1G1C104A146	C 0.1UF, 16V		
		C9072	F1G1C104A146	C 0.1UF, 16V		
		C9073	F1G1C104A146	C 0.1UF, 16V		
		C9074	F1G1C104A146	C 0.1UF, 16V		
		C9075	F1G1C104A146	C 0.1UF, 16V		
		C9080	F1J1A106A043	C 10UF, 10V		
		C9081	F1G1C104A146	C 0.1UF, 16V		
		C9082	F1G1C104A146	C 0.1UF, 16V		
		C9083	F1J1A106A043	C 10UF, 10V		
		C9084	F1G1C104A146	C 0.1UF, 16V		
		C9085	F1G1C104A146	C 0.1UF, 16V		
		C9086	F1G1C104A146	C 0.1UF, 16V		
		C9088	F1G1C104A146	C 0.1UF, 16V		
		C9089	F1G1C104A146	C 0.1UF, 16V		
		C9090	F1G1C104A146	C 0.1UF, 16V		
		C9091	F1G1C104A146	C 0.1UF, 16V		
		C9092	F1G1C104A146	C 0.1UF, 16V		
		C9093	F1G1C104A146	C 0.1UF, 16V		
		C9094	F1G1C104A146	C 0.1UF, 16V		
		C9095	F1G1C104A146	C 0.1UF, 16V		
		C9096	F1G1C104A146	C 0.1UF, 16V		
		C9097	F1J1A106A043	C 10UF, 10V		
		C9098	F1G1C104A146	C 0.1UF, 16V		
		C9099	F1G1C104A146	C 0.1UF, 16V		
		C9100	F1J1A106A043	C 10UF, 10V		
		C9101	F1G1C104A146	C 0.1UF, 16V		
		C9102	F1G1C104A146	C 0.1UF, 16V		
		C9103	F1G1C104A146	C 0.1UF, 16V		
		C9104	F1G1C104A146	C 0.1UF, 16V		
		C9105	F1G1C104A146	C 0.1UF, 16V		
		C9106	F1G1C104A146	C 0.1UF, 16V		
		C9107	F1J0G2260001	C 22UF, 4V		
		C9110	F1J1A106A043	C 10UF, 10V		
		C9111	F1G1C104A146	C 0.1UF, 16V		
		C9112	F1G1C104A146	C 0.1UF, 16V		
		C9113	F1G1C104A146	C 0.1UF, 16V		
		C9114	F1G1C104A146	C 0.1UF, 16V		
		C9115	F1G1H101A948	C 100PF, 50V		
		C9116	F1G1A105A107	C 1UF, 10V		
		C9117	F1G1A105A107	C 1UF, 10V		
		C9118	F1G1H101A948	C 100PF, 50V		
		C9119	F1G1H101A948	C 100PF, 50V		
		C9120	F1G1A105A107	C 1UF, 10V		
		C9121	F1G1H101A948	C 100PF, 50V		
		C9122	F1G1A105A107	C 1UF, 10V		
		C9123	F1G1A105A107	C 1UF, 10V		
		C9124	F1G1H101A948	C 100PF, 50V		
		C9125	F1G1A105A107	C 1UF, 10V		
		C9127	F1G1H101A948	C 100PF, 50V		
		C9128	F1G1A105A107	C 1UF, 10V		
		C9129	F1G1A105A107	C 1UF, 10V		
		C9130	F1G1H101A948	C 100PF, 50V		
		C9131	F1G1H101A948	C 100PF, 50V		
		C9132	F1G1A105A107	C 1UF, 10V		
		C9133	F1G1A105A107	C 1UF, 10V		
		C9134	F1G1H101A948	C 100PF, 50V		
		C9135	F1G1H101A948	C 100PF, 50V		
		C9136	F1G1A105A107	C 1UF, 10V		
		C9137	F1G1A105A107	C 1UF, 10V		
		C9138	F1G1H101A948	C 100PF, 50V		
		C9150	F1J1A475A112	C 4.7UF, 10V		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		C9151	F1G1E682A144	C 6800 PF, 25V		
		C9152	F1G1C104A146	C 0.1UF, 16V		
		C9153	F1K1V106A010	C 10UF, 35V		
		C9154	F1K1V106A010	C 10UF, 35V		
		C9155	F1J0G2260001	C 22UF, 4V		
		C9156	F1J0G2260001	C 22UF, 4V		
		C9157	F1J0G2260001	C 22UF, 4V		
		C9158	F1H1E104A161	C 0.1UF, 25V		
		C9160	F1K1V106A010	C 10UF, 35V		
		C9162	F1G1C104A146	C 0.1UF, 16V		
		C9163	F1G1E153A144	C 0.015UF, 25V		
		C9165	F1G1E332A172	C 3300PF, 25V		
		C9166	F1J0G2260001	C 22UF, 4V		
		C9167	F1J0G2260001	C 22UF, 4V		
		C9170	F1K1V106A010	C 10UF, 35V		
		C9172	F1G1C104A146	C 0.1UF, 16V		
		C9173	F1G1E153A144	C 0.015UF, 25V		
		C9175	F1G1E332A172	C 3300PF, 25V		
		C9176	F1J0G2260001	C 22UF, 4V		
		C9177	F1J0G2260001	C 22UF, 4V		
		C9178	F1G1H101A948	C 100PF, 50V		
		C9179	F1G1H101A948	C 100PF, 50V		
		C9180	F1G1H101A948	C 100PF, 50V		
		C9181	F1G1H101A948	C 100PF, 50V		
		C9182	F1G1H101A948	C 100PF, 50V		
		C9183	F1G1H101A948	C 100PF, 50V		
		C9200	F1G1H102A459	C 1000PF, 50V		
		C9201	F1G1C104A146	C 0.1UF, 16V		
		C9202	F1G1C104A146	C 0.1UF, 16V		
		C9203	F1G1H102A459	C 1000PF, 50V		
		C9204	F1G1C104A146	C 0.1UF, 16V		
		C9205	F1G1H102A459	C 1000PF, 50V		
		C9206	F1G1H102A459	C 1000PF, 50V		
		C9207	F1G1C104A146	C 0.1UF, 16V		
		C9208	F1G1C104A146	C 0.1UF, 16V		
		C9209	F1G1H102A459	C 1000PF, 50V		
		C9210	F1G1C104A146	C 0.1UF, 16V		
		C9211	F1G1H102A459	C 1000PF, 50V		
		C9400	F1G1H6R0A832	C 6PF, 50V		
		C9401	F1G1H6R0A832	C 6PF, 50V		
		C9515	F1G1C103A173	C 0.01UF, 16V		
		C9605	F1G1C104A146	C 0.1UF, 16V		
DIODE						
		D2800	DZ2J056M0L	DIODE		
		D2802	B3AGB0000083	LED		
		D3108	DZ2J140M0L	DIODE		
		D3109	DZ2J140M0L	DIODE		
		D3110	DZ2J140M0L	DIODE		
		D3111	DZ2J140M0L	DIODE		
		D3112	DZ2J140M0L	DIODE		
		D3113	DZ2J140M0L	DIODE		
		D3115	K7AAAY000019	CHIP DIODE		
		D4516	B0ACRC000001	DIODE		
		D5023	B0ADCK000001	DIODE		
		D5024	DZ2J180M0L	DIODE		
		D5025	DA2J10100L	DIODE		
		D5026	DZ2J100M0L	DIODE		
		D5027	DZ2J033M0L	DIODE		
		D5028	B0ADCK000001	DIODE		
		D6950	B0ZBZ0000226	DIODE		
		D6952	J0ZZB0000202	DIODE		
		D7101	ERZV10Q621CD	SURGE ABSORBER		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		D7102	B0FBBR000104	DIODE		
		D7103	B0FBBR000104	DIODE		
		D7104	B0AAMT000014	DIODE		
		D7105	B0AAMT000014	DIODE		
		D7108	ERZE08C621CD	SURGE ABSORBER		
		D7203	B0FBCR000057	DIODE		
		D7206	DB2S31000L	DIODE		
		D7207	DB2S31000L	DIODE		
		D7209	B0FBCR000057	DIODE		
		D7210	DZ2J160M0L	DIODE		
		D7211	DA2J10100L	DIODE		
		D7301	DZ2J039M0L	DIODE		
		D7302	B0HAKR000004	DIODE		
		D7303	DZ2J039M0L	DIODE		
		D7304	B0HAGQ000001	DIODE		
		D7305	ERZVA7V511	DIODE		
		D7306	B0BC015A0655	DIODE		
		D7307	B0BC015A0655	DIODE		
		D7308	B0BC015A0655	DIODE		
		D7309	B0JCMG000043	DIODE		
		D7310	B0JCMG000043	DIODE		
		D7313	B0ACCD000008	DIODE		
		D7314	B0ADCK000001	DIODE		
		D7345	B0ACCD000008	DIODE		
		D7346	B0ACCD000008	DIODE		
		D7404	DA2J10100L	DIODE		
		D7405	DA2J10100L	DIODE		
		D7406	B0JBSL000086	DIODE		
		D7407	B0JBSL000086	DIODE		
		D7408	B0JBSL000086	DIODE		
		D7409	B0JBSL000086	DIODE		
		D7411	B0ACCD000008	DIODE		
		D7412	B0HAGQ000001	DIODE		
		D7428	B0BC6R8A0654	DIODE		
		D7431	B0JCPE000051	DIODE		
		D7451	DZ2J068M0L	DIODE		
		D7452	DZ2J068M0L	DIODE		
		D7453	B0ACCD000008	DIODE		
		D7454	B0ACCD000008	DIODE		
		D7458	DA2J10100L	DIODE		
		D7459	DA2J10100L	DIODE		
		D7464	B0JCPE000051	DIODE		
		D7601	B0HAKR000004	DIODE		
		D7604	B0BC015A0655	DIODE		
		D7605	B0BC015A0655	DIODE		
		D7606	B0BC015A0655	DIODE		
		D7607	B0JCMG000043	DIODE		
		D7608	B0JCMG000043	DIODE		
		D7615	B0BC027A0655	DIODE		
		D7616	B0ACCD000008	DIODE		
		D7617	DZ2J270M0L	DIODE		
		D7618	DA2JF2300L	DIODE		
		D7619	B0HAGQ000001	DIODE		
		D7620	B0HAPR000013	DIODE		
		D7621	B0ACCD000008	DIODE		
		D7701	B0JBSM000009	DIODE		
		D7703	B0JBSM000009	DIODE		
		D7816	B0JBSM000009	DIODE		
		D7817	B0ECKM000053	DIODE		
		D7818	B0ACCD000008	DIODE		
		D7819	B0ACCD000008	DIODE		
		D7820	B0ACCD000008	DIODE		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		D7916	B0JBSM000009	DIODE		
		D7917	B0ECKM000053	DIODE		
		D7918	B0ACCD000008	DIODE		
		D7919	B0ACCD000008	DIODE		
		D7920	B0ACCD000008	DIODE		
		D8103	B0ACRC000001	DIODE		
		D8104	B0ACRC000001	DIODE		
		D8105	B0ADCK000001	DIODE		
INTEGRATED CIRCUIT						
		IC2250	C1ZBZ0004368	IC		
		IC4500	MN864788	IC		
		IC4502	C0DBAYY02433	IC		
		IC4506	C0DBEYY00226	IC		
		IC4901	C1AB00003984	IC		
		IC5000	AN34043AAVF	IC		
		IC5002	C0DBAYY02432	IC		
		IC5003	C0DBZYY00544	IC		
		IC5009	C0DBAYY01647	IC		
		IC5704	C0DBEYY00102	IC		
		IC5705	C0DBAYY02433	IC		
		IC6800	C1AB00004028	IC		
		IC6950	C1AB00004337	IC		
		IC7201	C0DBBY000093	IC		
		IC7301	C0DBAYY01329	IC		
		IC7401	C0DBZYY00545	IC		
		IC7405	C0DBAYY02003	IC		
		IC7600	C0DBAYY02209	IC		
		IC7701	C0DBZYY00531	IC		
		IC7801	C0ZBZ0002164	IC		
		IC7802	C0ZBZ0001936	IC		
		IC7901	C0ZBZ0002164	IC		
		IC7902	C0ZBZ0001936	IC		
		IC8000	C1AB00004367	IC		
		IC8100	NN30332A-VB	IC		
		IC8101	C0DBAYY02431	IC		
		IC8102	C0DBEYY00226	IC		
		IC8200	C3ABVY000025	IC		
		IC8201	C3ABVY000025	IC		
		IC8202	C3ABVY000025	IC		
		IC8203	C3ABVY000025	IC		
		IC8204	C3ABVY000025	IC		
		IC8600	C0DBZYY00723	IC		
		IC8601	C0DBZYY00723	IC		
		IC8605	C0DBGYY00887	IC		
		IC8607	C0DBZYY00764	IC		
		IC8608	C0DBZYY00723	IC		
		IC8920	TVRT851AD	ROM VERSION ASSY		
		IC9000	C1AB00004293	IC		
		IC9150	C0DBAYY01646	IC		
		IC9160	C0DBAYY02430	IC		
		IC9170	C0DBAYY02430	IC		
		IC9200	C3ABTY000128	IC		
		IC9201	C3ABTY000128	IC		
		IC9202	C3ABTY000128	IC		
		IC9203	C3ABTY000128	IC		
		IC9600	TVRT905AC	SPI ROM ASSEMBLY		
COIL						
		L2200	J0JYC0000464	BEAD CORE		
		L4500	J0JYC0000464	BEAD CORE		
		L4501	J0JYC0000464	BEAD CORE		
		L4502	J0JYC0000464	BEAD CORE		
		L4503	J0JYC0000464	BEAD CORE		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		L4505	J0JYC0000461	BEAD CORE		
		L4506	J0JYC0000461	BEAD CORE		
		L4507	G1C2R2MA0464	INDUCTOR		
		L4511	J0JYC0000461	BEAD CORE		
		L4901	G1C220MA0445	INDUCTOR		
		L4902	G1C220MA0445	INDUCTOR		
		L4903	G1C220MA0445	INDUCTOR		
		L4904	G1C220MA0445	INDUCTOR		
		L5001	G1C4R7ZA0240	INDUCTOR		
		L5002	ETQP3W3R3WFN	CHOKE COIL		
		L5003	G1C3R3ZA0388	INDUCTOR		
		L5701	G1C2R2MA0464	INDUCTOR		
		L5702	J0JYC0000464	BEAD CORE		
		L6701	J0JYC0000464	BEAD CORE		
		L6703	J0JYC0000464	BEAD CORE		
		L6801	J0JYC0000464	BEAD CORE		
		L6804	J0JYC0000464	BEAD CORE		
		L6951	G1CR27JA0097	COIL		
		L6952	G1CR27JA0097	COIL		
		L6953	J0JYC0000464	BEAD CORE		
		L6954	G1CR27JA0097	COIL		
		L6955	J0JYC0000464	BEAD CORE		
		L6956	G1CR27JA0097	COIL		
		L6959	G1CR27JA0097	COIL		
		L6961	G1C82NJ00010	COIL		
		L6963	G1CR22JA0097	COIL		
		L6964	G1CR22JA0097	COIL		
		L7103	J0JYB0000044	COIL		
		L7104	J0JYB0000044	COIL		
		L7105	J0JYB0000044	COIL		
		L7106	J0JYB0000044	COIL		
		L7200	J0JYA0000035	BEAD CORE		
		L7201	J0JYA0000035	BEAD CORE		
		L7202	J0JYA0000035	BEAD CORE		
		L7203	J0JYA0000035	BEAD CORE		
		L7204	J0JHC0000075	BEAD CORE		
		L7205	J0JHC0000075	BEAD CORE		
		L7304	J0JYA0000035	BEAD CORE		
		L7401	G0C270MA0049	INDUCTOR		
		L7602	J0JYB0000044	COIL		
		L7803	G0C680K00022	INDUCTOR		
		L7804	J0JHC0000075	BEAD CORE		
		L7903	G0C680K00022	INDUCTOR		
		L7904	J0JHC0000075	BEAD CORE		
		L8100	ETQP3W1R0WFN	CHOKE COIL		
		L8101	G1C2R2ZA0240	COIL		
		L8604	J0JYC0000464	BEAD CORE		
		L8605	J0JYC0000464	BEAD CORE		
		L8613	J0JYC0000464	BEAD CORE		
		L8618	J0JYC0000464	BEAD CORE		
		L8900	J0JYC0000464	BEAD CORE		
		L8901	J0JYC0000464	BEAD CORE		
		L9083	J0JYC0000686	BEAD CORE		
		L9087	G1C15NG00006	INDUCTOR		
		L9110	J0JYC0000686	BEAD CORE		
		L9150	G1C1R0M00022	INDUCTOR		
		L9160	G1C3R3MA0464	INDUCTOR		
		L9170	G1C6R8MA0464	INDUCTOR		
TRANSISTOR						
		Q2200	B1ABCF000231	TRANSISTOR		
		Q2201	B1ABCF000231	TRANSISTOR		
		Q4501	B1ABCF000231	TRANSISTOR		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		Q4502	B1ABCF000231	TRANSISTOR		
		Q4504	B1ABCF000231	TRANSISTOR		
		Q5000	B1CFRD000100	TRANSISTOR		
		Q5005	B1ABCF000231	TRANSISTOR		
		Q5006	B1ABCF000231	TRANSISTOR		
		Q5007	B1ABCE000015	TRANSISTOR		
		Q5008	B1ABCE000015	TRANSISTOR		
		Q5009	B1CFRD000100	TRANSISTOR		
		Q7201	B1CERR000111	TRANSISTOR		
		Q7202	B1ADGE000012	TRANSISTOR		
		Q7203	B1CERR000111	TRANSISTOR		
		Q7207	B1HFPPFA00002	TRANSISTOR		
		Q7208	B1HFPPFA00002	TRANSISTOR		
		Q7209	B1ABGE000015	TRANSISTOR		
		Q7301	B1CERR000096	TRANSISTOR		
		Q7302	B1CERR000096	TRANSISTOR		
		Q7303	B1ADCE000022	TRANSISTOR		
		Q7401	B1CFHD000029	TRANSISTOR		
		Q7403	B1DHGE000005	TRANSISTOR		
		Q7405	B1DHGE000005	TRANSISTOR		
		Q7412	B1CFHD000029	TRANSISTOR		
		Q7414	B1CFHD000029	TRANSISTOR		
		Q7416	B1ADCE000022	TRANSISTOR		
		Q7417	B1CFJD000007	TRANSISTOR		
		Q7601	B1CFRR000039	TRANSISTOR		
		Q7602	B1CFRR000039	TRANSISTOR		
		Q7603	B1ABCF000231	TRANSISTOR		
		Q7801	B1ACRL000015	TRANSISTOR		
		Q7802	B1ACRL000015	TRANSISTOR		
		Q7803	B1ACRL000015	TRANSISTOR		
		Q7804	B1ACRL000015	TRANSISTOR		
		Q7806	B1CERM000047	TRANSISTOR		
		Q7808	B1CFJD000007	TRANSISTOR		
		Q7809	B1ABCN000007	TRANSISTOR		
		Q7810	B1ABCF000231	TRANSISTOR		
		Q7811	B1ABCF000231	TRANSISTOR		
		Q7813	B1ABCF000231	TRANSISTOR		
		Q7901	B1ACRL000015	TRANSISTOR		
		Q7902	B1ACRL000015	TRANSISTOR		
		Q7903	B1ACRL000015	TRANSISTOR		
		Q7904	B1ACRL000015	TRANSISTOR		
		Q7905	B1ACRL000015	TRANSISTOR		
		Q7906	B1CERM000047	TRANSISTOR		
		Q7908	B1CFJD000007	TRANSISTOR		
		Q7909	B1ABCN000007	TRANSISTOR		
		Q7910	B1ABCF000231	TRANSISTOR		
		Q9150	B1CFRD000100	TRANSISTOR		
		Q9151	B1CFRD000100	TRANSISTOR		
RESISTORS						
		R066	D0GAR00J0005	M 0 OHM, 1/16W		
		R096	D0GAR00J0005	M 0 OHM, 1/16W		
		R2001	D0GA102JA023	M 1K OHM, J, 1/16W		
		R2002	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2004	D0GA102JA023	M 1K OHM, J, 1/16W		
		R2009	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2011	D0GA102JA023	M 1K OHM, J, 1/16W		
		R2014	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2015	D0GA473JA023	M 47K OHM, J, 1/16W		
		R2016	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2017	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2019	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2020	D0GA680JA023	M 68 OHM, J, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R2021	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2022	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2023	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2024	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2025	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2026	D0GA680JA023	M 68 OHM, J, 1/16W		
		R2027	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2028	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2029	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2030	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2031	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2032	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2033	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2034	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2035	D0GA223JA023	M 22K OHM, J, 1/16W		
		R2036	D1BA7151A023	M 7.15K OHM, F, 1/16 W		
		R2037	D1BA3092A023	M 30.9K OHM, F, 1/16W		
		R2038	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R2116	D0GA473JA023	M 47K OHM, J, 1/16W		
		R2125	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2250	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2252	D0GA102JA023	M 1K OHM, J, 1/16W		
		R2254	D0GA102JA023	M 1K OHM, J, 1/16W		
		R2260	D0GA103JA023	M 10K OHM, J, 1/16W		
		R2261	D0GA473JA023	M 47K OHM, J, 1/16W		
		R2262	D0GAR00J0005	M 0 OHM, 1/16W		
		R2263	D0GA223JA023	M 22K OHM, J, 1/16W		
		R2264	D0GA473JA023	M 47K OHM, J, 1/16W		
		R2265	D0GAR00J0005	M 0 OHM, 1/16W		
		R2403	D0GA473JA023	M 47K OHM, J, 1/16W		
		R2404	D0GA333JA023	M 33K OHM, J, 1/16W		
		R2801	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R2808	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R2820	D0GB470JA065	M 47 OHM, J, 1/10W		
		R2821	D0GB303JA065	M 30K OHM, J, 1/10W		
		R2822	D0GD104JA052	M 100K OHM, J, 1/8W		
		R2823	D1BB4301A073	M 4.3K OHM, J, 1/10W		
		R2824	D1BB1001A073	M 1K OHM, J, 1/10W		
		R3162	D0GAR00J0005	M 0 OHM, 1/16W		
		R3163	D0GAR00J0005	M 0 OHM, 1/16W		
		R3164	D0GAR00J0005	M 0 OHM, 1/16W		
		R3166	D0GA100JA023	M 10 OHM, J, 1/16W		
		R3167	D1BD75R0A066	M 75 OHM, F, 1/8W		
		R3168	D1BD75R0A066	M 75 OHM, F, 1/8W		
		R3169	D1BD75R0A066	M 75 OHM, F, 1/8W		
		R3170	D1H81014A042	M 100 OHM, J, 1/16W		
		R3174	D0GA473JA023	M 47K OHM, J, 1/16W		
		R3178	D0GA473JA023	M 47K OHM, J, 1/16W		
		R3188	D0GA333JA023	M 33K OHM, J, 1/16W		
		R3189	D0GA333JA023	M 33K OHM, J, 1/16W		
		R3191	D0GA473JA023	M 47K OHM, J, 1/16W		
		R3192	D0GA101JA023	M 100 OHM, J, 1/16W		
		R3193	D0GA103JA023	M 10K OHM, J, 1/16W		
		R3194	D0GAR00J0005	M 0 OHM, 1/16W		
		R3196	D0GA101JA023	M 100 OHM, J, 1/16W		
		R4034	D0GA101JA023	M 100 OHM, J, 1/16W		
		R4035	D0GA101JA023	M 100 OHM, J, 1/16W		
		R4046	D0GAR00J0005	M 0 OHM, 1/16W		
		R4047	D0GAR00J0005	M 0 OHM, 1/16W		
		R4050	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4051	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4080	D0GA101JA023	M 100 OHM, J, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R4081	D0GA101JA023	M 100 OHM, J, 1/16W		
		R4082	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R4095	D0GAR00J0005	M 0 OHM, 1/16W		
		R4101	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4102	D0GAR00J0005	M 0 OHM, 1/16W		
		R4105	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R4106	D0GAR00J0005	M 0 OHM, 1/16W		
		R4107	D0GAR00J0005	M 0 OHM, 1/16W		
		R4111	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4112	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4113	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4114	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4116	D0GA220JA023	M 22 OHM, J, 1/16W		
		R4500	D0GAR00J0005	M 0 OHM, 1/16W		
		R4501	D0GAR00J0005	M 0 OHM, 1/16W		
		R4502	D0GAR00J0005	M 0 OHM, 1/16W		
		R4503	D0GAR00J0005	M 0 OHM, 1/16W		
		R4504	D0GAR00J0005	M 0 OHM, 1/16W		
		R4505	D0GAR00J0005	M 0 OHM, 1/16W		
		R4506	D0GAR00J0005	M 0 OHM, 1/16W		
		R4507	D0GAR00J0005	M 0 OHM, 1/16W		
		R4513	D0GA104JA023	M 100K OHM, J, 1/16W		
		R4514	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4515	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4516	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4517	D0GA102JA023	M 1K OHM, J, 1/16W		
		R4519	D0GA104JA023	M 100K OHM, J, 1/16W		
		R4520	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4521	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4522	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4523	D0GA102JA023	M 1K OHM, J, 1/16W		
		R4525	D0GAR00J0005	M 0 OHM, 1/16W		
		R4526	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4532	D0GA220JA023	M 22 OHM, J, 1/16W		
		R4543	D0GA104JA023	M 100K OHM, J, 1/16W		
		R4544	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4545	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4546	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4547	D0GA102JA023	M 1K OHM, J, 1/16W		
		R4550	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4551	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4553	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4554	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4556	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4557	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4561	D1BA1800A023	M 180 OHM, F, 1/16W		
		R4562	D1BA82R0A023	M 82 OHM, F, 1/16W		
		R4564	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4565	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4566	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4567	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4568	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4569	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4572	D1BA4701A023	M 4.7K OHM, F, 1/16W		
		R4577	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4578	D0GA105JA023	M 1M OHM, J, 1/16W		
		R4579	D1H86804A042	M 68 OHM, J, 1/16W		
		R4580	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4581	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4582	D0GA273JA023	M 27K OHM, J, 1/16W		
		R4584	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4585	D0GA473JA023	M 47K OHM, J, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R4586	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4589	D1BA1911A023	M 1.91K OHM, F, 1/16W		
		R4602	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4603	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4604	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4605	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4606	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4607	D0GA680JA023	M 68 OHM, J, 1/16W		
		R4610	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4611	D0GA123JA023	M 12K OHM, J, 1/16W		
		R4613	D0GAR00J0005	M 0 OHM, 1/16W		
		R4614	D0GAR00J0005	M 0 OHM, 1/16W		
		R4615	D0GAR00J0005	M 0 OHM, 1/16W		
		R4617	D1BA4701A023	M 4.7K OHM, F, 1/16W		
		R4618	D1BA1502A023	M 15K OHM, F, 1/16 W		
		R4619	D0GAR00J0005	M 0 OHM, 1/16W		
		R4620	D0GAR00J0005	M 0 OHM, 1/16W		
		R4621	D0GAR00J0005	M 0 OHM, 1/16W		
		R4622	D0GAR00J0005	M 0 OHM, 1/16W		
		R4628	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R4629	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R4630	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R4635	D1H4R0020006	RESISTOR		
		R4636	D1H4R0020006	RESISTOR		
		R4637	D1H4R0020006	RESISTOR		
		R4638	D1H4R0020006	RESISTOR		
		R4639	D1H4R0020006	RESISTOR		
		R4640	D1H4R0020006	RESISTOR		
		R4641	D1H4R0020006	RESISTOR		
		R4642	D1H4R0020006	RESISTOR		
		R4900	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4901	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R4902	D1H86804A042	M 68 OHM, J, 1/16W		
		R4903	D0GA102JA023	M 1K OHM, J, 1/16W		
		R4904	D0GA102JA023	M 1K OHM, J, 1/16W		
		R4906	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4912	D0GA102JA023	M 1K OHM, J, 1/16W		
		R4921	D0GAR00J0005	M 0 OHM, 1/16W		
		R4928	D0GAR00J0005	M 0 OHM, 1/16W		
		R4936	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R4937	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R4938	D0GA103JA023	M 10K OHM, J, 1/16W		
		R4939	D0GA102JA023	M 1K OHM, J, 1/16W		
		R4944	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4945	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4946	D0GA473JA023	M 47K OHM, J, 1/16W		
		R4947	D0GA473JA023	M 47K OHM, J, 1/16W		
		R5001	D0GA330JA023	M 33 OHM, J, 1/16W		
		R5002	D0GA223JA023	M 22K OHM, J, 1/16W		
		R5004	D1BA6802A023	M 68 K OHM, F, 1/16 W		
		R5005	D1BA2102A023	M 21K OHM, F, 1/16W		
		R5008	D0GA683JA023	M 68K OHM, J, 1/16W		
		R5009	D0GA103JA023	M 10K OHM, J, 1/16W		
		R5017	D0GA473JA023	M 47K OHM, J, 1/16W		
		R5018	D0GAR00J0005	M 0 OHM, 1/16W		
		R5022	D0GA153JA023	M 15K OHM, J, 1/16W		
		R5023	D1BA5602A023	M 56K OHM, F, 1/16W		
		R5035	D0GA102JA023	M 1K OHM, J, 1/16W		
		R5036	D1BA2202A023	M 22K OHM, F, 1/16W		
		R5037	D0GA103JA023	M 10K OHM, J, 1/16W		
		R5039	D0GA473JA023	M 47K OHM, J, 1/16W		
		R5040	D0GA103JA023	M 10K OHM, J, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R5043	D1BB1962A073	M 19.6K OHM, F, 1/10 W		
		R5044	D1BB1001A073	M 1K OHM, J, 1/10W		
		R5045	D0GA473JA023	M 47K OHM, J, 1/16W		
		R5046	D0GA682JA023	M 6.8K OHM, J, 1/16W		
		R5047	D0GA102JA023	M 1K OHM, J, 1/16W		
		R5048	D0GA392JA023	M 3.9K OHM, J, 1/16W		
		R5051	D0GA104JA023	M 100K OHM, J, 1/16W		
		R5053	D0GA101JA023	M 100 OHM, J, 1/16W		
		R5054	D0GA103JA023	M 10K OHM, J, 1/16W		
		R5055	D0GA103JA023	M 10K OHM, J, 1/16W		
		R5061	D0GAR00J0005	M 0 OHM, 1/16W		
		R5069	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R5070	D0GA153JA023	M 15K OHM, J, 1/16W		
		R5072	D0GA153JA023	M 15K OHM, J, 1/16W		
		R5073	D0GA473JA023	M 47K OHM, J, 1/16W		
		R5079	D0GAR00J0005	M 0 OHM, 1/16W		
		R5083	D1BB4301A074	M 4.3K OHM, D, 1/10 W		
		R5084	D1BB7870A074	M 787 OHM, D, 1/10 W		
		R5085	D1BA2402A023	M 24K OHM, F, 1/16W		
		R5088	D0GA102JA023	M 1K OHM, J, 1/16W		
		R5089	D0GA333JA023	M 33K OHM, J, 1/16W		
		R5090	D0GA102JA023	M 1K OHM, J, 1/16W		
		R5092	D0GA154JA023	M 150K OHM, J, 1/16W		
		R5093	D0GA473JA023	M 47K OHM, J, 1/16W		
		R5098	D0GA103JA023	M 10K OHM, J, 1/16W		
		R5109	D0GB101JA065	M 100 OHM, J, 1/10W		
		R5110	D0GA681JA023	M 680 OHM, J, 1/16W		
		R5111	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R5114	D0GAR00J0005	M 0 OHM, 1/16W		
		R5215	D1BA9101A023	M 9.1K OHM, F, 1/16 W		
		R5216	D1BA1242A023	M 12.4K OHM, F, 1/16W		
		R5731	D1BA1200A023	M 120 OHM, F, 1/16W		
		R5732	D1BA56R0A023	M 56 OHM, F, 1/16W		
		R5737	D1BA1402A023	M 14K OHM, F, 1/16 W		
		R5738	D1BA6041A023	M 6.04K OHM, F, 1/16 W		
		R5739	D0GA123JA023	M 12K OHM, J, 1/16W		
		R5740	D0GAR00J0005	M 0 OHM, 1/16W		
		R5741	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R5748	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R6700	D0GA221JA023	M 220 OHM, J, 1/16W		
		R6701	D0GA221JA023	M 220 OHM, J, 1/16W		
		R6709	D0GAR00J0005	M 0 OHM, 1/16W		
		R6716	D0GAR00J0005	M 0 OHM, 1/16W		
		R6724	D0GA103JA023	M 10K OHM, J, 1/16W		
		R6733	D0GA103JA023	M 10K OHM, J, 1/16W		
		R6736	D0GAR00J0005	M 0 OHM, 1/16W		
		R6737	D0GAR00J0005	M 0 OHM, 1/16W		
		R6738	D0GAR00J0005	M 0 OHM, 1/16W		
		R6757	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6758	D0GAR00J0005	M 0 OHM, 1/16W		
		R6759	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6762	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6765	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6786	D0GAR00J0005	M 0 OHM, 1/16W		
		R6787	D0GAR00J0005	M 0 OHM, 1/16W		
		R6793	D0GAR00J0005	M 0 OHM, 1/16W		
		R6794	D0GAR00J0005	M 0 OHM, 1/16W		
		R6795	D0GAR00J0005	M 0 OHM, 1/16W		
		R6804	D0GA471JA023	M 470 OHM, J, 1/16W		
		R6806	D0GA103JA023	M 10K OHM, J, 1/16W		
		R6809	D0GAR00J0005	M 0 OHM, 1/16W		
		R6815	D0GAR00J0005	M 0 OHM, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R6817	D0GAR00J0005	M 0 OHM, 1/16W		
		R6822	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R6837	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R6878	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R6879	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R6902	D1H83304A042	M 33 OHM, J, 1/16W		
		R6903	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6904	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6905	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6906	D0GA220JA023	M 22 OHM, J, 1/16W		
		R6950	D0GA101JA023	M 100 OHM, J, 1/16W		
		R6951	D0GA101JA023	M 100 OHM, J, 1/16W		
		R6952	D0GA102JA023	M 1K OHM, J, 1/16W		
		R6953	D0GA101JA023	M 100 OHM, J, 1/16W		
		R6954	D0GA101JA023	M 100 OHM, J, 1/16W		
		R6955	D0GA102JA023	M 1K OHM, J, 1/16W		
		R6956	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R6959	D0GAR00J0005	M 0 OHM, 1/16W		
		R6960	D0GAR00J0005	M 0 OHM, 1/16W		
		R6963	D0GAR00J0005	M 0 OHM, 1/16W		
		R6964	D0GAR00J0005	M 0 OHM, 1/16W		
		R6965	D0GAR00J0005	M 0 OHM, 1/16W		
		R6967	D0GAR00J0005	M 0 OHM, 1/16W		
		R6969	D0GAR00J0005	M 0 OHM, 1/16W		
		R6970	D0GAR00J0005	M 0 OHM, 1/16W		
		R7101	D0GF334JA048	M 330K OHM, J, 1/4W		
		R7102	D0GF334JA048	M 330K OHM, J, 1/4W		
		R7103	D0GF334JA048	M 330K OHM, J, 1/4W		
		R7104	D0GD102JA052	M 1K OHM, J, 1/8W		
		R7105	D0GD102JA052	M 1K OHM, J, 1/8W		
		R7106	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7107	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7212	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7213	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7214	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7215	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7216	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7217	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7219	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7220	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7221	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7222	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7223	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7224	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7227	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7228	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7229	D1AB3004A023	M 3000K OHM, F, 1/4W		
		R7230	D1AB2704A023	M 2700K OHM, F, 1/4W		
		R7232	D1BB3602A073	M 36K OHM, F, 1/10W		
		R7233	D1BB1003A073	M 100K OHM, F, 1/10W		
		R7234	D1BB3301A073	M 3.3KOHM, F, 1/10W		
		R7235	D0GB105JA065	M 1M OHM, J, 1/10W		
		R7236	D1BB2201A073	M 2200 OHM, F, 1/10 W		
		R7237	D0GD2R2JA052	M 2.2 OHM, J, 1/8W		
		R7242	D1BB3602A073	M 36K OHM, F, 1/10W		
		R7245	D1AB1604A023	M 1600K OHM, F, 1/4W		
		R7246	D1AB1604A023	M 1600K OHM, F, 1/4W		
		R7247	D1AB3004A023	M 3000K OHM, F, 1/4W		
		R7250	D0GF221JA047	M 220 OHM, J, 1/3W		
		R7251	D0GF221JA047	M 220 OHM, J, 1/3W		
		R7256	D0GZ100JA020	M 10 OHM, J, 1/2W		
		R7257	D0GZ100JA020	M 10 OHM, J, 1/2W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7258	D1BB1501A073	M 1500 OHM, F, 1/10 W		
		R7259	D0GD103JA052	M 10K OHM, J, 1/8W		
		R7260	D0GD334JA052	M 330K OHM, J, 1/8W		
		R7261	D0GD154JA052	M 150K OHM, J, 1/8W		
		R7264	D0GD223JA052	M 22K OHM, J, 1/8W		
		R7265	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7266	D0GF221JA047	M 220 OHM, J, 1/3W		
		R7267	D0GF221JA047	M 220 OHM, J, 1/3W		
		R7269	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7270	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7302	D0GD391JA059	M 390 OHM, J, 1/4W		
		R7303	D0GD391JA059	M 390 OHM, J, 1/4W		
		R7304	D0GF4R7JA048	M 4.7 OHM, J, 1/4W		
		R7305	D0GF221JA047	M 220 OHM, J, 1/3W		
		R7306	D0GD222JA052	M 2.2K OHM, J, 1/8W		
		R7307	D0GD562JA052	M 5.6K OHM, J, 1/8W		
		R7308	D0GD222JA052	M 2.2K OHM, J, 1/8W		
		R7309	D0GF4R7JA048	M 4.7 OHM, J, 1/4W		
		R7312	D1BD1802A066	M 18K OHM, F, 1/8W		
		R7315	D0GB222JA065	M 2.2K OHM, J, 1/10W		
	⚠	R7317	D0B1106JA033	M 10M OHM, J, 1W		
		R7321	D0GD220JA059	M 22 OHM, J, 1/4W		
		R7322	D0GD220JA059	M 22 OHM, J, 1/4W		
		R7323	D0GD223JA052	M 22K OHM, J, 1/8W		
		R7324	D0GD223JA052	M 22K OHM, J, 1/8W		
		R7325	ERX1SJ1R0V	M 1.0 OHM, J, 1/10W		
		R7328	D0GF391JA048	M 390 OHM, J, 1/4W		
		R7330	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7332	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7333	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7334	D0GD223JA052	M 22K OHM, J, 1/8W		
		R7335	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7351	D1BD6801A066	M 6.8K OHM, F, 1/8W		
		R7353	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7397	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7399	D0GF221JA047	M 220 OHM, J, 1/3W		
		R7401	D0GD472JA052	M 4.7K OHM, J, 1/8W		
		R7402	D0GD103JA052	M 10K OHM, J, 1/8W		
		R7403	D0GD392JA052	M 3.9K OHM, J, 1/8W		
		R7404	D0GD334JA052	M 330K OHM, J, 1/8W		
		R7405	D0GD561JA052	M 560 OHM, J, 1/8W		
		R7406	D1BD3301A066	M 3.3K OHM, F, 1/8W		
		R7407	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7408	D1BD1802A066	M 18K OHM, F, 1/8W		
		R7410	D0GD472JA052	M 4.7K OHM, J, 1/8W		
		R7411	D0GF101JA048	M 100 OHM, J, 1/4W		
		R7412	D0GD224JA052	M 220K OHM, J, 1/8W		
		R7414	D0GD472JA052	M 4.7K OHM, J, 1/8W		
		R7416	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7419	D0GD224JA052	M 220K OHM, J, 1/8W		
		R7420	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7421	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7426	D0GD472JA052	M 4.7K OHM, J, 1/8W		
		R7427	D0GFR00J0005	M 0 OHM, J, 1/3W		
		R7428	D0GD224JA052	M 220K OHM, J, 1/8W		
		R7438	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7440	D0GD334JA052	M 330K OHM, J, 1/8W		
		R7444	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7447	D0GD224JA052	M 220K OHM, J, 1/8W		
		R7448	D0GD154JA052	M 150K OHM, J, 1/8W		
		R7449	D0GD104JA052	M 100K OHM, J, 1/8W		
		R7450	D0GD223JA052	M 22K OHM, J, 1/8W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7452	D1BD1911A066	M 1.91K OHM, F, 1/8W		
		R7453	D1BD3091A066	M 3.09K OHM, F, 1/8W		
		R7454	D1BD6041A066	M 6.04K OHM, F, 1/8W		
		R7455	D1BD1692A066	M 16.9K OHM, F, 1/8W		
		R7467	D0GD100JA052	M 10 OHM, J, 1/8W		
		R7474	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7475	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7486	D1BB1503A073	M 150K OHM, J, 1/10W		
		R7487	D1BB4752A073	M 47.5K OHM, F, 1/10W		
		R7488	D0GD100JA052	M 10 OHM, J, 1/8W		
		R7489	D0GZ6R8JA020	M 6.8 OHM, J, 1/2W		
		R7490	D0GD473JA052	M 47K OHM, J, 1/8W		
		R7504	D0GZ6R8JA020	M 6.8 OHM, J, 1/2W		
		R7602	D1BB5602A073	M 56K OHM, F, 1/10W		
		R7603	D0GF391JA048	M 390 OHM, J, 1/4W		
		R7604	D0GF391JA048	M 390 OHM, J, 1/4W		
		R7605	D0AF2R2JA112	C 2.2 OHM, J, 1/2W		
		R7606	D0AF101JA112	C 100 OHM, J, 1/2W		
		R7611	D0GDR00J0004	M 0 OHM, J, 1/8W		
		R7613	D0GB332JA065	M 3.3K OHM, J, 1/10W		
		R7615	D0GD100JA106	M 10 OHM, J, 1/3W		
		R7616	D0GD100JA106	M 10 OHM, J, 1/3W		
		R7617	D0GD223JA052	M 22K OHM, J, 1/8W		
		R7618	D0GD223JA052	M 22K OHM, J, 1/8W		
		R7622	D0AF391JA112	M 390 OHM, J, 1/2W		
		R7631	D1BD1802A066	M 18K OHM, F, 1/8W		
		R7632	D1BD1741A066	M 1.74K OHM, F, 1/8W		
		R7633	D1AB3004A023	M 3000K OHM, F, 1/4W		
		R7634	D1AB3004A023	M 3000K OHM, F, 1/4W		
		R7635	D1AB3004A023	M 3000K OHM, F, 1/4W		
		R7636	D1AB3004A023	M 3000K OHM, F, 1/4W		
		R7637	D1BB2492A073	M 24.9K OHM, F, 1/10 W		
		R7640	D0GD100JA106	M 10 OHM, J, 1/3W		
		R7644	D0GD100JA106	M 10 OHM, J, 1/3W		
		R7645	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7646	D0GD103JA052	M 10K OHM, J, 1/8W		
		R7647	D0GD103JA052	M 10K OHM, J, 1/8W		
		R7648	D0GB102JA065	M 1K OHM, J, 1/10W		
		R7649	D0GB105JA065	M 1M OHM, J, 1/10W		
		R7650	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7701	D0GD332JA052	M 3.3K OHM, J, 1/8W		
		R7702	D0GB102JA065	M 1K OHM, J, 1/10W		
		R7703	D0GB183JA065	M 18K OHM, J, 1/10W		
		R7704	D1BB1872A073	M 18.7K OHM, F, 1/10 W		
		R7705	D1BB2212A073	M 22.1K OHM, F, 1/10 W		
		R7706	D0GD223JA052	M 22K OHM, J, 1/8W		
		R7707	D1BB2701A073	M 2700 OHM, F, 1/10 W		
		R7708	D0C2332JA140	M 3300 OHM, J, 2W		
		R7728	D0C2332JA140	M 3300 OHM, J, 2W		
		R7730	D0C2332JA140	M 3300 OHM, J, 2W		
		R7732	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7801	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7802	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7803	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7804	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7805	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7806	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7807	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7808	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7809	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7810	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7811	D1BD5R10A066	M 5.1 OHM, F, 1/8W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7812	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7813	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7814	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7815	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7816	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7817	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7818	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7819	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7820	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7826	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7827	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7829	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7830	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7831	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7832	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7834	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7835	D0GB470JA065	M 47 OHM, J, 1/10W		
		R7836	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7837	D0GB2R2JA065	M 2.2 OHM, J, 1/10W		
		R7839	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7842	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7843	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7844	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7845	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7847	D0GD470JA059	M 47 OHM, J, 1/4W		
		R7848	D0GD100JA059	M 10 OHM, J, 1/4W		
		R7849	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7851	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7852	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7853	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7854	D0GB821JA065	M 820 OHM, J, 1/10W		
		R7855	D0GB470JA065	M 47 OHM, J, 1/10W		
		R7857	D0GB470JA065	M 47 OHM, J, 1/10W		
		R7858	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7859	D1BB1603A073	M 160K OHM, J, 1/10W		
		R7860	D1BB9101A073	M 9.1K OHM, D, 1/10 W		
		R7862	D1BB1503A073	M 150K OHM, J, 1/10W		
		R7865	D0GB472JA065	M 4.7K OHM, J, 1/10W		
		R7868	D1BB1503A073	M 150K OHM, J, 1/10W		
		R7869	D1BB3002A073	M 30K OHM, F, 1/10 W		
		R7870	D1BB3301A073	M 3.3KOHM, F, 1/10W		
		R7871	D1BB7501A073	M 7500 OHM, F, 1/10 W		
		R7872	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7875	D1BB2492A073	M 24.9K OHM, F, 1/10 W		
		R7876	D0GB104JA065	M 100K OHM, J, 1/10W		
		R7877	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7878	ERG2SJ472V	M 4.7K OHM, J, 2W		
		R7880	D0GB104JA065	M 100K OHM, J, 1/10W		
		R7882	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7884	D0GB562JA065	M 5.6K OHM, J, 1/10W		
		R7885	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7889	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7890	D0GB104JA065	M 100K OHM, J, 1/10W		
		R7891	D0GB223JA065	M 22K OHM, J, 1/10W		
		R7893	D1BB1403A073	M 140K OHM, F, 1/10W		
		R7894	D0GB153JA065	M 15K OHM, J, 1/10W		
		R7896	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7897	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7898	D0GB153JA065	M 15K OHM, J, 1/10W		
		R7899	D0GB153JA065	M 15K OHM, J, 1/10W		
		R7901	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7902	D1BD5R10A066	M 5.1 OHM, F, 1/8W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7903	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7904	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7905	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7906	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7907	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7908	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7909	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7910	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7911	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7912	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7913	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7914	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7915	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7916	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7917	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7918	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7919	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7920	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7921	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7922	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7923	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7924	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7925	D1BD5R10A066	M 5.1 OHM, F, 1/8W		
		R7926	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7927	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7928	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7929	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7930	D0GB100JA065	M 10 OHM, J, 1/10W		
		R7931	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7932	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7934	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7935	D0GB470JA065	M 47 OHM, J, 1/10W		
		R7936	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7937	D0GB2R2JA065	M 2.2 OHM, J, 1/10W		
		R7938	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7942	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7943	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7944	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7945	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7946	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7947	D0GD470JA059	M 47 OHM, J, 1/4W		
		R7948	D0GD100JA059	M 10 OHM, J, 1/4W		
		R7949	D0GB103JA065	M 10K OHM, J, 1/10W		
		R7951	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7952	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7953	ERX1SJR22V	M 0.22 OHM, J, 1/10W		
		R7954	D0GB821JA065	M 820 OHM, J, 1/10W		
		R7955	D0GB470JA065	M 47 OHM, J, 1/10W		
		R7957	D0GB470JA065	M 47 OHM, J, 1/10W		
		R7958	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7959	D1BB1603A073	M 160K OHM, J, 1/10W		
		R7960	D1BB9101A073	M 9.1K OHM, D, 1/10 W		
		R7962	D1BB1503A073	M 150K OHM, J, 1/10W		
		R7965	D0GB472JA065	M 4.7K OHM, J, 1/10W		
		R7968	D1BB1503A073	M 150K OHM, J, 1/10W		
		R7969	D1BB3002A073	M 30K OHM, F, 1/10 W		
		R7970	D1BB3301A073	M 3.3KOHM, F, 1/10W		
		R7971	D1BB7501A073	M 7500 OHM, F, 1/10 W		
		R7972	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R7975	D1BB2492A073	M 24.9K OHM, F, 1/10 W		
		R7976	D0GB104JA065	M 100K OHM, J, 1/10W		
		R7977	D0GB103JA065	M 10K OHM, J, 1/10W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R7978	ERG2SJ472V	M 4.7K OHM, J, 2W		
		R7980	D0GB104JA065	M 100K OHM, J, 1/10W		
		R7982	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7996	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7997	D0GB473JA065	M 47K OHM, J, 1/10W		
		R7998	D0GB153JA065	M 15K OHM, J, 1/10W		
		R8007	D0GAR00J0005	M 0 OHM, 1/16W		
		R8008	D0GA272JA023	M 2.7K OHM, J, 1/16W		
		R8101	D0GAR00J0005	M 0 OHM, 1/16W		
		R8103	D1BA1802A023	M 18K OHM, F, 1/16W		
		R8104	D1BA1242A023	M 12.4K OHM, F, 1/16W		
		R8105	D0GAR00J0005	M 0 OHM, 1/16W		
		R8107	D0GBR00J0004	M 0 OHM, J, 1/10W		
		R8109	D1BA1022A023	M 10.2K OHM, F, 1/16W		
		R8110	D1BA1002A023	M 10K OHM, F, 1/16W		
		R8111	D1BA3241A023	M 3.24K OHM, F, 1/16W		
		R8112	D1BA1002A023	M 10K OHM, F, 1/16W		
		R8117	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8119	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8122	D0GAR00J0005	M 0 OHM, 1/16W		
		R8200	D1BA47R0A023	M 47 OHM, F, 1/16W		
		R8201	D1BA47R0A023	M 47 OHM, F, 1/16W		
		R8203	D0GA470JA023	M 47 OHM, J, 1/16W		
		R8204	D0GA470JA023	M 47 OHM, J, 1/16W		
		R8205	D0GA101JA023	M 100 OHM, J, 1/16W		
		R8206	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8207	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8208	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8209	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8212	D1BA2400A023	M 240 OHM, F, 1/16W		
		R8213	D1BA2400A023	M 240 OHM, F, 1/16W		
		R8214	D1BA47R0A023	M 47 OHM, F, 1/16W		
		R8215	D1BA47R0A023	M 47 OHM, F, 1/16W		
		R8217	D0GA470JA023	M 47 OHM, J, 1/16W		
		R8218	D0GA470JA023	M 47 OHM, J, 1/16W		
		R8219	D0GA101JA023	M 100 OHM, J, 1/16W		
		R8220	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8221	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8222	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8223	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8226	D1BA2400A023	M 240 OHM, F, 1/16W		
		R8227	D1BA2400A023	M 240 OHM, F, 1/16W		
		R8228	D1BA47R0A023	M 47 OHM, F, 1/16W		
		R8229	D1BA47R0A023	M 47 OHM, F, 1/16W		
		R8231	D0GA470JA023	M 47 OHM, J, 1/16W		
		R8232	D0GA470JA023	M 47 OHM, J, 1/16W		
		R8233	D0GA101JA023	M 100 OHM, J, 1/16W		
		R8234	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8235	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R8237	D1BA2400A023	M 240 OHM, F, 1/16W		
		R8300	D0GAR00J0005	M 0 OHM, 1/16W		
		R8452	D0GAR00J0005	M 0 OHM, 1/16W		
		R8453	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8454	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8455	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8456	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8457	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8458	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8459	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8462	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8463	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8464	D0GA103JA023	M 10K OHM, J, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R8465	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8602	D1BA2872A023	M 28.7K OHM, F, 1/16W		
		R8603	D1BA1652A023	M 16.5K OHM, F, 1/16W		
		R8605	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R8606	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R8607	D1BA75R0A023	M 75.0 OHM, F, 1/16 W		
		R8609	D1BA75R0A023	M 75.0 OHM, F, 1/16 W		
		R8610	D1BA75R0A023	M 75.0 OHM, F, 1/16 W		
		R8611	D1BA75R0A023	M 75.0 OHM, F, 1/16 W		
		R8612	D1BA2402A023	M 24K OHM, F, 1/16W		
		R8613	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8614	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8615	D1BA5101A023	M 5.1K OHM, F, 1/16 W		
		R8616	D0GAR00J0005	M 0 OHM, 1/16W		
		R8617	D0GAR00J0005	M 0 OHM, 1/16W		
		R8618	D1BA5101A023	M 5.1K OHM, F, 1/16 W		
		R8621	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8622	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8623	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8624	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8625	D0GA272JA023	M 2.7K OHM, J, 1/16W		
		R8626	D0GA272JA023	M 2.7K OHM, J, 1/16W		
		R8630	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8631	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8632	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8633	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8634	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8635	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8636	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8638	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8640	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8641	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8642	D0GAR00J0005	M 0 OHM, 1/16W		
		R8643	D1H81034A042	M 10K OHM, J, 1/16W		
		R8648	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8649	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8650	D0GAR00J0005	M 0 OHM, 1/16W		
		R8653	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8656	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8663	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8664	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8672	D0GA272JA023	M 2.7K OHM, J, 1/16W		
		R8678	D1BA3601A023	M 3.6K OHM, F, 1/16W		
		R8684	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8685	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8686	D0GA272JA023	M 2.7K OHM, J, 1/16W		
		R8688	D1BA2872A023	M 28.7K OHM, F, 1/16W		
		R8698	D0GAR00J0005	M 0 OHM, 1/16W		
		R8699	D0GAR00J0005	M 0 OHM, 1/16W		
		R8705	D0GAR00J0005	M 0 OHM, 1/16W		
		R8707	D0GAR00J0005	M 0 OHM, 1/16W		
		R8709	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8711	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8736	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8809	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R8816	D1H81034A042	M 10K OHM, J, 1/16W		
		R8817	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8819	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R8820	D0GA220JA023	M 22 OHM, J, 1/16W		
		R8821	D0GA220JA023	M 22 OHM, J, 1/16W		
		R8822	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R8842	D0GA473JA023	M 47K OHM, J, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R8843	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8858	D0GA682JA023	M 6.8K OHM, J, 1/16W		
		R8868	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R8869	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8870	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8871	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R8872	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8912	D0GAR00J0005	M 0 OHM, 1/16W		
		R8971	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R8972	D1H8R0040016	M 0 OHM, Z, 1/16W		
		R8973	D0GA560JA023	M 56 OHM, J, 1/16W		
		R8974	D0GAR00J0005	M 0 OHM, 1/16W		
		R8975	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8976	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8977	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8978	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8979	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8980	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8981	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8982	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8986	D1H81034A042	M 10K OHM, J, 1/16W		
		R8987	D1H81034A042	M 10K OHM, J, 1/16W		
		R8988	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8989	D0GA473JA023	M 47K OHM, J, 1/16W		
		R8990	D0GA103JA023	M 10K OHM, J, 1/16W		
		R8991	D0GA680JA023	M 68 OHM, J, 1/16W		
		R8992	D0GA680JA023	M 68 OHM, J, 1/16W		
		R9000	D0GAR00J0005	M 0 OHM, 1/16W		
		R9020	D0GA473JA023	M 47K OHM, J, 1/16W		
		R9030	D0GAR00J0005	M 0 OHM, 1/16W		
		R9031	D0GAR00J0005	M 0 OHM, 1/16W		
		R9032	D0GAR00J0005	M 0 OHM, 1/16W		
		R9033	D0GAR00J0005	M 0 OHM, 1/16W		
		R904	D0GA220JA023	M 22 OHM, J, 1/16W		
		R905	D0GA220JA023	M 22 OHM, J, 1/16W		
		R906	D0GA272JA023	M 2.7K OHM, J, 1/16W		
		R907	D0GA272JA023	M 2.7K OHM, J, 1/16W		
		R908	D0GA220JA023	M 22 OHM, J, 1/16W		
		R9080	D0GAR00J0005	M 0 OHM, 1/16W		
		R9081	D0GAR00J0005	M 0 OHM, 1/16W		
		R9084	D0GAR00J0005	M 0 OHM, 1/16W		
		R909	D0GA220JA023	M 22 OHM, J, 1/16W		
		R912	D0GA330JA023	M 33 OHM, J, 1/16W		
		R913	D0GA330JA023	M 33 OHM, J, 1/16W		
		R914	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R915	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R9150	D1BB2201A074	M 2.2K OHM, D, 1/10 W		
		R9151	D1BB1051A074	M 1.05K OHM, D, 1/10 W		
		R9152	D1BA3902A023	M 39K OHM, F, 1/16W		
		R916	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R9160	D1BA4701A023	M 4.7K OHM, F, 1/16W		
		R9161	D1BB2002A074	M 20K OHM, D, 1/10 W		
		R9162	D1BB1802A074	M 18K OHM, D, 1/10 W		
		R9163	D0GA103JA023	M 10K OHM, J, 1/16W		
		R917	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R9170	D1BA9101A023	M 9.1K OHM, F, 1/16 W		
		R9171	D1BB1542A073	M 15.4K OHM, F, 1/10 W		
		R9172	D1BB3302A073	M 33K OHM, J, 1/10W		
		R918	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R919	D0GA332JA023	M 3.3K OHM, J, 1/16W		
		R920	D0GA330JA023	M 33 OHM, J, 1/16W		
		R9200	D0GAR00J0005	M 0 OHM, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R9201	D0GAR00J0005	M 0 OHM, 1/16W		
		R9202	D0GAR00J0005	M 0 OHM, 1/16W		
		R9203	D0GAR00J0005	M 0 OHM, 1/16W		
		R9204	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9205	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9206	D1BA1000A023	M 100 OHM, F, 1/16W		
		R9208	D1BA2400A023	M 240 OHM, F, 1/16W		
		R9209	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R921	D0GA330JA023	M 33 OHM, J, 1/16W		
		R9210	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9211	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9212	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9213	D1BA2400A023	M 240 OHM, F, 1/16W		
		R9214	D1BA1000A023	M 100 OHM, F, 1/16W		
		R9216	D0GAR00J0005	M 0 OHM, 1/16W		
		R9217	D0GAR00J0005	M 0 OHM, 1/16W		
		R9218	D0GAR00J0005	M 0 OHM, 1/16W		
		R9219	D0GAR00J0005	M 0 OHM, 1/16W		
		R9220	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9221	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9222	D1BA1000A023	M 100 OHM, F, 1/16W		
		R9224	D1BA2400A023	M 240 OHM, F, 1/16W		
		R9225	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9226	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9227	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9228	D1BA1001A023	M 1K OHM, F, 1/16 W		
		R9229	D1BA2400A023	M 240 OHM, F, 1/16W		
		R9230	D1BA1000A023	M 100 OHM, F, 1/16W		
		R924	D0GA330JA023	M 33 OHM, J, 1/16W		
		R925	D0GA330JA023	M 33 OHM, J, 1/16W		
		R926	D0GA330JA023	M 33 OHM, J, 1/16W		
		R927	D0GA330JA023	M 33 OHM, J, 1/16W		
		R928	D0GA330JA023	M 33 OHM, J, 1/16W		
		R929	D0GA330JA023	M 33 OHM, J, 1/16W		
		R930	D0GA330JA023	M 33 OHM, J, 1/16W		
		R931	D0GA330JA023	M 33 OHM, J, 1/16W		
		R932	D0GA330JA023	M 33 OHM, J, 1/16W		
		R933	D0GA330JA023	M 33 OHM, J, 1/16W		
		R934	D0GA153JA023	M 15K OHM, J, 1/16W		
		R940	D0GA473JA023	M 47K OHM, J, 1/16W		
		R9400	D0GAR00J0005	M 0 OHM, 1/16W		
		R9401	D0GAR00J0005	M 0 OHM, 1/16W		
		R9402	D0GA105JA023	M 1M OHM, J, 1/16W		
		R941	D0GA473JA023	M 47K OHM, J, 1/16W		
		R942	D0GAR00J0005	M 0 OHM, 1/16W		
		R943	D0GAR00J0005	M 0 OHM, 1/16W		
		R944	D0GA220JA023	M 22 OHM, J, 1/16W		
		R945	D0GA220JA023	M 22 OHM, J, 1/16W		
		R950	D0GAR00J0005	M 0 OHM, 1/16W		
		R9501	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9503	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9505	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9507	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9510	D1BB1202A073	M 12K OHM, F, 1/10W		
		R9511	D1BB1202A073	M 12K OHM, F, 1/10W		
		R9515	D0GAR00J0005	M 0 OHM, 1/16W		
		R9516	D0GA473JA023	M 47K OHM, J, 1/16W		
		R9601	D0GAR00J0005	M 0 OHM, 1/16W		
		R9602	D0GAR00J0005	M 0 OHM, 1/16W		
		R9603	D0GA330JA023	M 33 OHM, J, 1/16W		
		R9604	D0GA330JA023	M 33 OHM, J, 1/16W		
		R9605	D0GA103JA023	M 10K OHM, J, 1/16W		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		R9606	D0GAR00J0005	M 0 OHM, 1/16W		
		R9607	D0GA330JA023	M 33 OHM, J, 1/16W		
		R9609	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R9610	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9611	D0GA101JA023	M 100 OHM, J, 1/16W		
		R9612	D1H86804A042	M 68 OHM, J, 1/16W		
		R9613	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9614	D0GAR00J0005	M 0 OHM, 1/16W		
		R9733	D0GA102JA023	M 1K OHM, J, 1/16W		
		R9735	D0GA473JA023	M 47K OHM, J, 1/16W		
		R9736	D0GA473JA023	M 47K OHM, J, 1/16W		
		R9737	D0GA473JA023	M 47K OHM, J, 1/16W		
		R9738	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9741	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9744	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9750	D0GA102JA023	M 1K OHM, J, 1/16W		
		R9751	D0GA103JA023	M 10K OHM, J, 1/16W		
		R9980	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R9981	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R9985	D0GA472JA023	M 4.7K OHM, J, 1/16W		
		R9986	D0GA472JA023	M 4.7K OHM, J, 1/16W		
TRANSFORMER						
		T7201	G4DYA0000705	TRANSFORMER		
		T7202	G4DYA0000705	TRANSFORMER		
		T7301	G4DYA0000698	TRANSFORMER		
		T7602	G4DYA0000701	TRANSFORMER		
		T8600	G5BYC0000040	TRANSFORMER		
OTHERS						
		A02A	K1KY26BA0484	CONNECTOR		
		A10B	K1KY07BA0483	CONNECTOR		
		A12	K1KY04BA0387	CONNECTOR		
		A16B	K1MY51B00007	CONNECTOR		
		CF7103	D4CAY3R90003	THERMISTOR		
		CF7600	D4CAY4R7A096	THERMISTORS RESISTOR		
		CN0100	K1KA14A00248	CONNECTOR		
		CN8801	K1KA04AA0104	PEAKS SERIAL CONNECTOR		
		CN9300	K1KA07AA0266	CONNECTOR		
		F5700	ERBRD1R00X	FUSE		
		F7101	K5E103YYA163	FUSE		
		F7300	K5E312YYA213	FUSE		
		F7600	K5E312YYA213	FUSE		
		FL8602	EXC24CE900U	NOISE FILTER		
		FL8603	EXC24CE900U	NOISE FILTER		
		FL8611	EXC24CE900U	NOISE FILTER		
		FL8617	EXC24CE900U	NOISE FILTER		
		JA1	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA2	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA3	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA4	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA5	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA7	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA8	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JA9	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JK3101	K1U511D00001	TERMINAL		
		JK4701	K1FY119E0085	CONNECTOR		
		JK4702	K1FY119E0085	CONNECTOR		
		JK4703	K1FY119E0085	CONNECTOR		
		JK6951	K1ZZ00001558	TUNER SHIELD		
		JK8600	K2LC1YYE0005	JACK TERMINAL		
		JK8601	K1FY104B0095	AV TERMINAL		
		JK8603	K1FY109B0047	AV TERMINAL		
		JK8605	K1FY105E0025	CONNECTOR		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		JK8606	K1FY104B0095	AV TERMINAL		
		JS7806	D0GDR00J0004	M 0 OHM, J, 1/8W		
		JS7906	D0GDR00J0004	M 0 OHM, J, 1/8W		
		K10	K1KY07AA1311	CONNECTOR		
	⚠	LF7102	G0B702J00003	LINE FILTER		
	⚠	LF7104	G0B702J00003	LINE FILTER		
	⚠	LF7105	G0BR20J00001	LINE FILTER		
		P1	K2AZYA000006	CONNECTOR		
		P2	K1KY14BA0491	CONNECTOR		
		P6	K1KY03B00006	CONNECTOR		
		PA2000	K5H4022A0031	FUSE		
		PA5001	K5H4022A0031	FUSE		
		PA7406	K5H1022A0031	FUSE		
		PA7801	ERBRE4R00V	FUSE RESISTOR		
		PB1	K1KY10BA0386	CONNECTOR		
		PB3	K1KY11BA0386	CONNECTOR		
		PB4	K1KY16BA0491	CONNECTOR		
		PB6	K1KY03B00006	CONNECTOR		
	⚠	PC7301	B3PAA0000674	PHOTO COUPLER		
	⚠	PC7302	B3PAA0000674	PHOTO COUPLER		
	⚠	PC7303	B3PAA0000707	PHOTO COUPLER		
	⚠	PC7601	B3PAA0000674	PHOTO COUPLER		
	⚠	PC7602	B3PAA0000707	PHOTO COUPLER		
		RL7102	K6BIAYY00100	RELAY LINE		
		RM2800	B3RBB0000018	PHOTO DETECTOR		
		SN2800	B3JB00000223	PHOTO DETECTOR		
		SW7451	EVQ11G05R	SWITCH		
		SW7452	EVQ11G05R	SWITCH		
		SW7453	EVQ11G05R	SWITCH		
		SW7454	EVQ11G05R	SWITCH		
		SW7455	EVQ11G05R	SWITCH		
		SW7457	EVQ11G05R	SWITCH		
		X4500	H0J270500181	CRYSTAL OSSILATOR		
		X6800	H0J410500003	CRYSTAL RESONATORS		
		X6950	H0J240500106	CRYSTAL OSCILLATOR		
		X8300	H0J240500067	CRYSTAL OSCILLATOR		
		X9400	H0J120500108	CRYSTAL RESONATOR		
		ZA050	K4AD01D00022	TERMINAL		
		ZA051	K4AD01D00022	TERMINAL		
		ZA052	K4AD01D00022	TERMINAL		
		ZA053	K4AD01D00022	TERMINAL		
		ZA061	K4AD01D00022	TERMINAL		
		ZA062	K4AD01D00022	TERMINAL		
		ZA063	K4AD01D00022	TERMINAL		
		ZA064	K4AD01D00022	TERMINAL		
		ZA065	K4AD01D00022	TERMINAL		
		ZA068	K4AD01D00022	TERMINAL		
		ZA080	K4AD01D00022	TERMINAL		
		ZA084	K4AD01D00022	TERMINAL		
		ZA085	K4AD01D00022	TERMINAL		
		ZA086	K4AD01D00022	TERMINAL		
		ZA200	K4AD01D00022	TERMINAL		
		ZA201	K4AD01D00022	TERMINAL		
		ZA202	K4AD01D00022	TERMINAL		
		ZA204	K4AD01D00022	TERMINAL		
		ZA205	K4AD01D00022	TERMINAL		
		ZA206	K4AD01D00022	TERMINAL		
		ZA207	K4AD01D00022	TERMINAL		
		ZA208	K4AD01D00022	TERMINAL		
		ZA210	K4AD01D00022	TERMINAL		
		ZA211	K4AD01D00022	TERMINAL		
		ZA212	K4AD01D00022	TERMINAL		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		ZA213	K4AD01D00022	TERMINAL		
		ZA214	K4AD01D00022	TERMINAL		
		ZA215	K4AD01D00022	TERMINAL		
		ZA216	K4AD01D00022	TERMINAL		
		ZA218	K4AD01D00022	TERMINAL		
		ZA219	K4AD01D00022	TERMINAL		
		ZA220	K4AD01D00022	TERMINAL		
		ZA221	K4AD01D00022	TERMINAL		
		ZA222	K4AD01D00022	TERMINAL		
		ZA223	K4AD01D00022	TERMINAL		
		ZA224	K4AD01D00022	TERMINAL		
		ZA225	K4AD01D00022	TERMINAL		
		ZA226	K4AD01D00022	TERMINAL		
		ZA228	K4AD01D00022	TERMINAL		
		ZA229	K4AD01D00022	TERMINAL		
		ZA230	K4AD01D00022	TERMINAL		
		ZA300	K4AD01D00022	TERMINAL		
		ZA301	K4AD01D00022	TERMINAL		
		ZA302	K4AD01D00022	TERMINAL		
		ZA303	K4AD01D00022	TERMINAL		
		ZA304	K4AD01D00022	TERMINAL		
		ZA305	K4AD01D00022	TERMINAL		
		ZA307	K4AD01D00022	TERMINAL		
		ZA309	K4AD01D00022	TERMINAL		
		ZA310	K4AD01D00022	TERMINAL		
		ZA311	K4AD01D00022	TERMINAL		
		ZA312	K4AD01D00022	TERMINAL		
		ZA313	K4AD01D00022	TERMINAL		
		ZA314	K4AD01D00022	TERMINAL		
		ZA315	K4AD01D00022	TERMINAL		
		ZA318	K4AD01D00022	TERMINAL		
		ZA319	K4AD01D00022	TERMINAL		
		ZA320	K4AD01D00022	TERMINAL		
		ZA321	K4AD01D00022	TERMINAL		
		ZA324	K4AD01D00022	TERMINAL		
		ZA327	K4AD01D00022	TERMINAL		
		ZA7101	K4AD01A00004	RUG TERMINAL		
		ZA7104	K4AD01A00004	RUG TERMINAL		
		ZA7105	K4AD01A00004	RUG TERMINAL		
		ZA7106	K4AD01A00004	RUG TERMINAL		
		ZA7701	K4AD01A00004	RUG TERMINAL		
		ZA7704	K4AD01A00004	RUG TERMINAL		
		ZA7801	K4AD01A00004	RUG TERMINAL		
		ZA7901	K4AD01A00004	RUG TERMINAL		

Model No. : TH-55CX600S Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
Exploded View						
		1	K2CT2YY00111	AC CORD		
		2	L0EYAA000086	SPEAKER L/R		
		3	N2QAYB000934	REMOTE TRANSMITTER		
		4	N5HBZ0000114	WIFI MODULE		
		5	K1HY05YY0242	WIFI USB CABLE		
		6	TBL5ZX09041	STAND METAL BRACKETS KIT		Kit Includes All Brackets and Screws
		7	TBM4GD6451	MODEL NAME PLATE		
			TBX5ZA03303	KEY BUTTON BRACKET		
		8	TKK5ZC50581	LED PANEL		
		9	TKP5ZA42012	SIDE AV BRACKET		
		10	TPC4GA28201	CARTON_BOTTOM		
		11	TPD4GA05181	CUSHION_FRONT		
		12	TPD4GA06701	CUSHION TOP		
		13	TPD4GA06711	CUSHION BOTTOM		
		14	TPE4TH018	SET BAG		
		15	TQZ4GB902	FAN BAG ASSY		
			TSCKF0630046	LVDS FFC(51PIN)		
			TXFPC01TPUS	CARTON ASSY		
		16	TZBL5ZX09131	PEDESTAL BASE ASSEMBLY		
			TZLP159TPUS	LCD PANEL ASSEMBLY		
		17	TZTU4GA1519	BACK COVER COMPLETE		
Electrical Replacement Part List						
			TXN/K1WJUZ	K PRINT ASSEMBLY		
			TZRN11BHVU	P PCB ASSEMBLY		
			TZRN12XAUA	PB PCB ASSEMBLY		
			TZT/A1TPUS	A PRINT ASSEMBLY		