

Service Manual

Plasma Television


Model No. **TH-P42UT50D**

TH-P42UT50M

TH-P42UT50P

TH-P42UT50S

TH-P42UT50Z

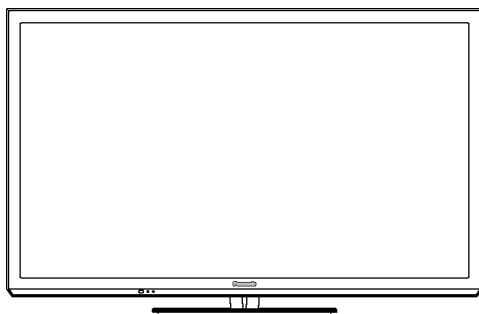

GPF15D-A Chassis

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE
1 Safety Precautions	3
1.1. General Guidelines	3
1.2. Touch-Current Check	3
2 Warning	4
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices	4
2.2. About lead free solder (PbF)	5
3 Service Navigation	6
3.1. PCB Layout	6
3.2. Applicable signals	7
4 Specifications	8
5 Technical Descriptions	10
5.1. Specification of KEY for DTCP-IP, One-to- One, Widevine and Netflix	10
5.2. USB HDD Recording (Z only)	10
5.3. Panel-Type setting	10
6 Service Mode	11
6.1. How to enter into Service Mode	11
6.2. Option - Mirror	13
6.3. Service tool mode	13
6.4. DRV Check - USB HDD Check	14
6.5. Hotel mode	14
6.6. Data Copy by SD Card	15
7 Troubleshooting Guide	18
7.1. Check of the IIC bus lines	18
7.2. Power LED Blinking timing chart	19
7.3. No Power	20
7.4. No Picture	21
7.5. Local screen failure	22
8 Disassembly and Assembly Instructions	23
8.1. Disassembly Flow Chart for the Unit	23
8.2. Disassembly Procedure for the Unit	24
9 Measurements and Adjustments	29
9.1. Adjustment	29
10 Block Diagram	31
10.1. Main Block Diagram	31
10.2. Block (1/4) Diagram	32
10.3. Block (2/4) Diagram	33
10.4. Block (3/4) Diagram	34
10.5. Block (4/4) Diagram	35
11 Wiring Connection Diagram	37
11.1. Caution statement.	37
11.2. Wiring (1)	37
11.3. Wiring (2)	38
11.4. Wiring (3)	39
12 Schematic Diagram	
13 Printed Circuit Board	
14 Exploded View	

1 Safety Precautions

1.1. General Guidelines

1. When conducting repairs and servicing, do not attempt to modify the equipment, its parts or its materials.
2. When wiring units (with cables, flexible cables or lead wires) are supplied as repair parts and only one wire or some of the wires have been broken or disconnected, do not attempt to repair or re-wire the units. Replace the entire wiring unit instead.
3. When conducting repairs and servicing, do not twist the Fasten connectors but plug them straight in or unplug them straight out.
4. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
5. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
6. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Touch-Current Check

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a measuring network for touch currents between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use Leakage Current Tester (Simpson 228 or equivalent) to measure the potential across the measuring network.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reserve the AC plug in the AC outlet and repeat each of the above measure.
6. The potential at any point (TOUCH CURRENT) expressed as voltage U_1 and U_2 , does not exceed the following values:

For a. c.: $U_1 = 35 \text{ V}$ (peak) and $U_2 = 0.35 \text{ V}$ (peak);

For d. c.: $U_1 = 1.0 \text{ V}$,


Note:

The limit value of $U_2 = 0.35 \text{ V}$ (peak) for a. c. and $U_1 = 1.0 \text{ V}$ for d. c. correspond to the values 0.7 mA (peak) a. c. and 2.0 mA d. c.

The limit value $U_1 = 35 \text{ V}$ (peak) for a. c. correspond to the value 70 mA (peak) a. c. for frequencies greater than 100 kHz .

7. In case a measurement is out of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Measuring network for TOUCH CURRENTS

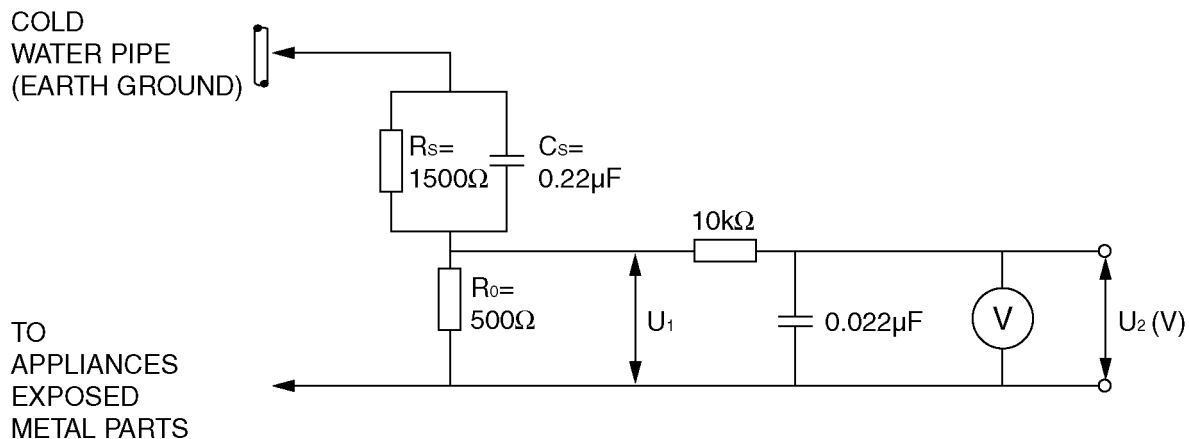

Resistance values in ohms (Ω)

V: Voltmeter or oscilloscope
(r.m.s. or peak reading)

Input resistance: $\geq 1 \text{ M}\Omega$

Input capacitance: $\leq 200 \text{ pF}$

Frequency range: 15 Hz to 1 MHz and d.c. respectively

NOTE - Appropriate measures should be taken to obtain the correct value in case of non-sinusoidal waveforms.

Figure 1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor [chip] components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as [anti-static (ESD protected)] can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise ham less motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. About lead free solder (PbF)

Note: Lead is listed as (Pb) in the periodic table of elements.

In the information below, Pb will refer to Lead solder, and PbF will refer to Lead Free Solder.

The Lead Free Solder used in our manufacturing process and discussed below is (Sn+Ag+Cu).


That is Tin (Sn), Silver (Ag) and Copper (Cu) although other types are available.

This model uses Pb Free solder in it's manufacture due to environmental conservation issues. For service and repair work, we'd suggest the use of Pb free solder as well, although Pb solder may be used.

PCBs manufactured using lead free solder will have the PbF within a leaf Symbol **PbF** stamped on the back of PCB.

Caution

- Pb free solder has a higher melting point than standard solder. Typically the melting point is 50 ~ 70 °F (30~40 °C) higher. Please use a high temperature soldering iron and set it to 700 ± 20 °F (370 ± 10 °C).
- Pb free solder will tend to splash when heated too high (about 1100 °F or 600 °C).
If you must use Pb solder, please completely remove all of the Pb free solder on the pins or solder area before applying Pb solder. If this is not practical, be sure to heat the Pb free solder until it melts, before applying Pb solder.
- After applying PbF solder to double layered boards, please check the component side for excess solder which may flow onto the opposite side. (see figure below)

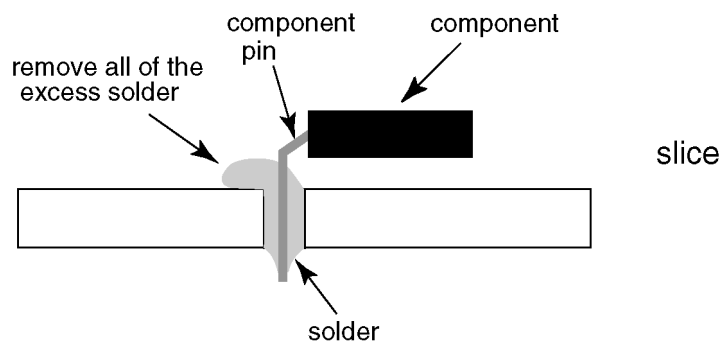


Suggested Pb free solder

There are several kinds of Pb free solder available for purchase. This product uses Sn+Ag+Cu (tin, silver, copper) solder. However, Sn+Cu (tin, copper), Sn+Zn+Bi (tin, zinc, bismuth) solder can also be used.

0.3mm X 100g	0.6mm X 100g	1.0mm X 100g

3 Service Navigation

3.1. PCB Layout

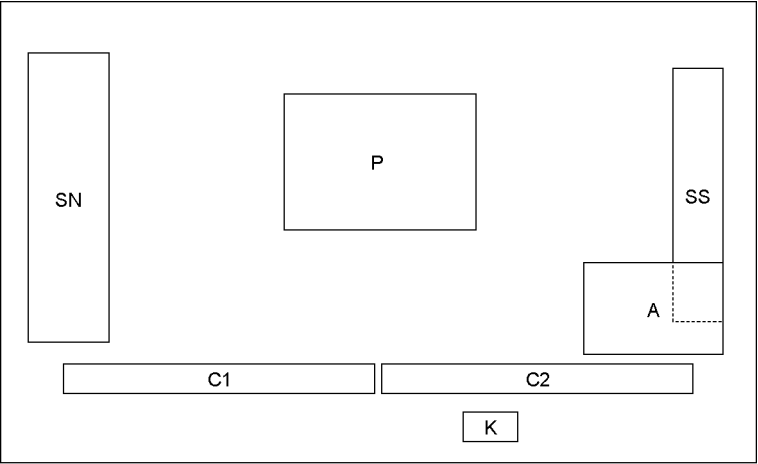

Board Name	Function
P	Power Supply Non serviceable. P-Board should be exchanged for service.
A	Main AV input, processing
K	Remote receiver, Power LED, C.A.T.S sensor
C1	Data Driver (Lower Right)
C2	Data Driver (Lower Left)
SN	Scan Drive
SS	Sustain Drive

3.2. Applicable signals

■ COMPONENT (Y, P_B, P_R) (from AV2 terminal), HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	*	*
625 (576) / 50i, 50p	*	*
750 (720) / 60p, 50p	*	*
1,125 (1,080) / 60i, 50i	*	*
1,125 (1,080) / 60p, 50p, 24p		*

* Mark: Applicable input signal

■ PC (from D-sub 15P)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	59.94
800 × 600 @60 Hz	37.88	60.32
852 × 480 @60 Hz	31.44	59.89
1,024 × 768 @60 Hz	48.36	60.00
1,280 × 1,024 @60 Hz	63.98	60.02
1,280 × 768 @60 Hz	47.70	60.00
1,366 × 768 @60 Hz	48.39	60.04

Applicable input signal for PC is basically compatible to VESA standard timing.

■ PC (from HDMI terminal)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	60.00
1,280 × 720 @60 Hz	45.00	60.00
1,920 × 1,080 @60 Hz	67.50	60.00

Applicable input signal for PC is basically compatible to HDMI standard timing.

Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- PC signal is magnified or compressed for display, so that it may not show fine detail with sufficient clarity.

4 Specifications

Sound

Speaker	(160 mm × 40 mm) × 2, 8Ω
Audio output	20 W (10 W + 10 W)
Headphones	M3 (3.5 mm) stereo mini Jack × 1

Receiving systems / Band name (Z)

PAL B/G	Reception of Off air broadcasts
Digital TV	8 MHz UHF (New Zealand) free-to-air TV broadcast reception
PAL 60 Hz	Playback of NTSC tape from some PAL Video recorders (VCR)
M.NTSC	Playback from M.NTSC Video recorders (VCR)
NTSC	Playback from NTSC Video recorders (VCR)

Receiving systems / Band name (Except Z)

17 Systems	Function	17 Systems	Function
1 PAL B, G, H	Reception of broadcast transmissions and Playback from Video Cassette Tape Recorders	8 NTSC 4.43/5.5 MHz	Playback from Special VCR's or DVD
2 PAL I		9 NTSC 4.43/6.0 MHz	
3 PAL D, K		10 NTSC 4.43/6.5 MHz	
4 SECAM B, G		11 NTSC 3.58/5.5 MHz	
5 SECAM D, K		12 NTSC 3.58/6.0 MHz	
6 SECAM K1		13 NTSC 3.58/6.5 MHz	
7 NTSC M (NTSC 3.58/4.5 MHz)		14 SECAM I	
		15 PAL 60 Hz/5.5 MHz	Playback from Special Disc Players and Special VCR's or DVD
		16 PAL 60 Hz/6.0 MHz	
		17 PAL 60 Hz/6.5 MHz	

Receiving Channels (Except Z)

VHF BAND

2-12 (PAL/SECAM B, K1)	0-12 (PAL B AUST.)
1-9 (PAL B N.Z.)	1-12 (PAL/SECAM D)
1-12 (NTSC M Japan)	2-13 (NTSC M USA)

UHF BAND

21-69 (PAL G, H, I/SECAM G, K, K1)	
28-69 (PAL B AUST.)	13-57 (PAL D, K)
13-62 (NTSC M Japan)	14-69 (NTSC M USA)

CATV

S1-S20 (OSCAR)	1-125 (USA CATV)
C13-C49 (JAPAN)	S21-S41 (HYPER)
Z1-Z37 (CHINA)	5A, 9A (AUST.)

VHF/UHF

Aerial - Rear

Operating Conditions

Temperature:	0 °C - 40 °C (Except Z) 0 °C - 35 °C (Z)
Humidity:	20 % - 80 % RH (non-condensing)

Connection terminals

AV1 IN

AUDIO L - R	RCA PIN Type × 2	0.5 V [rms]
VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)

AUDIO OUT

AUDIO L-R	RCA PIN Type × 2	0.5 V [rms] (high impedance)
------------------	------------------	------------------------------

AV2 IN

AUDIO L - R	RCA PIN Type × 2	0.5 V [rms]
COMPONENT	Y	1.0 V [p-p] (including synchronization)
	P _B /C _B , P _R /C _R	± 0.35 V [p-p]
VIDEO	RCA PIN Type × 1	1.0 V [p-p] (75 Ω)

HDMI 1 / 2 input

TYPE A Connectors

- This TV supports "HDAVI control 5" function.

PC

HIGH-DENSITY D-SUB 15PIN

R,G, B:	0.7 V [p-p] (75 Ω)
HD, VD:	TTL Level 2.0 - 5.0 V [p-p] (high impedance)
• Applicable input signals:	VGA, SVGA, WVGA, XGA SXGA, WXGA (compressed) Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz

Card slot

SD Card slot × 1

ETHERNET

10BASE-T / 100BASE-TX

USB 1 / 2

USB 2.0 TYPE A Connectors DC 5 V, Max. 500 mA

DIGITAL AUDIO OUT

PCM / Dolby Digital / DTS, Fiber optic

Bluetooth wireless technology*1

Standard Compliance

Bluetooth 3.0

Frequency Range

2.402 GHz - 2.480 GHz

*1: Not all the Bluetooth compatible devices are available with this TV.

Power Consumption (Z)	
Power rating	AC 220-240 V, 50 / 60 Hz 1.4 A
Normal (Home) mode	112 W
Standby condition	0.4 W
Power Source (Except Z)	AC 220 - 240 V, 50 / 60 Hz (Except P) AC 110 - 240 V, 50 / 60 Hz (P)
Power Consumption (Except Z)	
Power Rating	285 W
Standby condition	0.4 W
Display panel	
Panel system	Plasma panel
Visible screen size (diagonal)	107 cm / 42 inches
Number of pixels	2,073,600 (1,920 (W) × 1,080 (H)), [5,760 × 1,080 dots]
Dimensions (W × H × D)	1,009 mm × 663 mm × 320 mm (With Pedestal) 1,009 mm × 616 mm × 84 mm (TV only)
Mass	20.5 kg Net (With Pedestal) 17.5 kg Net (TV only)
■ 3D Eyewear (Z)	
Dimensions (W × H × D)	167.7 mm × 42.2 mm × 170.7 mm
Mass	Approx. 31 g
Lens type	Liquid Crystal Shutter
Usage temperature range	0 °C - 40 °C
Battery*	Coin-shaped lithium battery CR2025 Operation time: Approx. 75 hours in continuous use of the battery made by Panasonic
Viewing range*	Within 3.2 m from front surface of the TV
Materials	Main body: Resin Lens section: Liquid crystal glass
Communication system	2.4 GHz band FH-SS (Frequency Hopping Spread Spectrum)
* There are differences in the viewing range of the 3D Eyewear among individuals. • The 3D Eyewear may not operate correctly at the outside of the viewing range.	

Note

- Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.

5 Technical Descriptions

5.1. Specification of KEY for DTCP-IP, One-to-One, Widevine and Netflix

5.1.1. General information:

1. EEPROM (IC8902) for spare parts has the seed of KEY for each.
2. The final KEY data will be generated by Peaks IC (IC8000) when SELF CHECK was done and are stored in both Peaks IC (IC8000) and EEPROM (IC8902).

Four KEY are not generated for all models.

The necessary KEY are only generated and stored depend on the feature of models.

5.1.2. Replacement of ICs:

When Peaks IC (IC8000) is replaced, EEPROM (IC8902) should be also replaced with new one the same time.

When EEPROM (IC8902) is replaced, Peaks IC (IC8000) is not necessary to be replaced the same time.

After the replacement of IC, SELF CHECK should be done to generate the final KEY data.

How to SELF CHECK: While pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

TV will be forced to the factory shipment setting after this SELF CHECK.

5.1.3. Model and Keys:

Model No.	Keys			
	One-to-One (For USB Rec.)	DTCP-IP	Widevine	Netflix
TH-P42UT50D/M/P/S	None	None	Yes	Yes
TH-P42UT50Z	Yes	Yes	Yes	Yes

5.2. USB HDD Recording (Z only)

5.2.1. General information:

Digital TV programmes can be recorded in USB HDD.

A One-to-One key generated in A-board by SELF CHECK binds TV and USB-HDD for communication.

That key is only one key for them. If the key is difference, TV can not access USB-HDD.

Caution:

New key will be generated by following SELF CHECK and previous TV programmes recorded in USB HDD will not be viewed.

SELF CHECK: While pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

5.3. Panel-Type setting

Panel-Type setting is required after exchange the A-board.

A-board for spare parts is common use for different inch size in same series.

Go into Service Mode and confirm/select Panel-Type in OPTION to correct inch size.

6 Service Mode

6.1. How to enter into Service Mode

6.1.1. Purpose


After exchange parts, check and adjust the contents of adjustment mode.

While pressing [VOLUME (-)] button of the main unit, press [i] button of the remote control three times within 2 seconds.

Note:

Service Mode can not be entered when 3D signal input.

Input 2D signal to enter Service Mode.

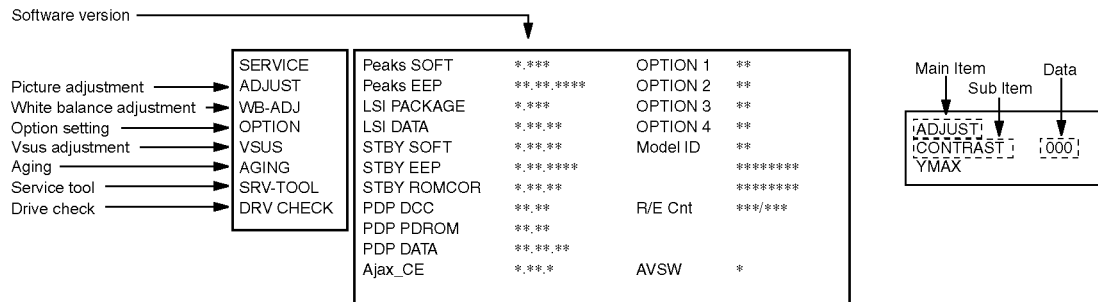

6.1.2. Key command

[1] button...Main items Selection in forward direction

[2] button...Main items Selection in reverse direction

[3] button...Sub items Selection in forward direction

[4] button...Sub items Selection in reverse direction

[RED] button...All Sub items Selection in reverse direction

[GREEN] button...All Sub items Selection in forward direction

[VOL] button...Value of sub items change in forward direction (+), in reverse direction (-)

6.1.3. How to exit

Switch off the power with the [POWER] button on the main unit or the [POWER] button on the remote control.

6.1.4. Contents of adjustment mode

- Value is shown as a hexadecimal number.
- Preset value differs depending on models.
- After entering the adjustment mode, take note of the value in each item before starting adjustment.

Main item	Sub item	Sample Data	Remark
ADJUST	CONTRAST	225	
	COLOR	36	
	TINT	00	
	SUB-BRT	800	
	H-POS	0	
	H-AMP	0	
	V-POS	0	
	V-AMP	0	
WB-ADJ	R-CUT	80	
	G-CUT	80	
	B-CUT	80	
	R-DRV	FF	
	G-DRV	F6	
	B-DRV	B9	
	ALL-CUT	80	
	ALL-DRV	FF	
OPTION	Panel-Type	42FHD	Factory Preset
	Boot	ROM	
	STBY-SET	00	
	EMERGENCY	ON	
	CLK MODE	00	
	CLOCK	000	
	Y/C Delay	0	
	OPT 1	10110000	
	OPT 2	11100110	
	OPT 3	00001001	
	OPT 4	00000000	
	EDID-CLK	MID	
	MIRROR	00 (See Option-Mirror)	
	AMR-SELECT	OFF	
VSUS		LOW	See Vsus selection
AGING	ALL WHITE		Built-in test patterns can be displayed.
	MIDDLE BLUE WITH MAGENTA OUTSIDE FRAME		
	MIDDLE STEP GREEN		
	MIDDLE STEP RED		
	LOW STEP WHITE		
	ALL BLUE		
	ALL GREEN		
	ALL RED		
	WHITE DIAGONAL STRIPE		
	RED DIAGONAL STRIPE		
	GREEN DIAGONAL STRIPE		
	BLUE DIAGONAL STRIPE		
	A-ZONE & B-ZONE		
	1% WINDOW		
	COLOR BAR		
	9 POINTS BRIGHT MEASURE		
	2 DOT OUTSIDE FRAME		
	DOUBLE FIXED 1% WINDOW		
	VERTICAL LINE SCROLL		
	ON/OFF		
	R/G/B/W ROTATION WITH COUNT DISPLAY		
	HALF FIXED ALL WHITE		
	ALL WHITE WITH COUNT DISPLAY		
SRV-TOOL		00	See Service tool mode
DRV CHECK	USBHDD CHECK	00	See DRV Check-USBHDD Check

6.2. Option - Mirror

Picture can be reversed left and right or up and down.

00 : Default (Normal picture is displayed)

01 : Picture is reversed left and right.

02 : Picture is reversed up and down.

00



01



02



Hint : If the defective symptom (e.g. Vertical bar or Horizontal bar) is moved by selection of this mirror, the possible cause is in A-board.

6.3. Service tool mode

6.3.1. How to access

1. Select [SRV-TOOL] in Service Mode.
2. Press [OK] button on the remote control.

SRV-TOOL		
Display of TD2Microcode version →	TD2Microcode:0200b108	
Display of Flash ROM maker code →	Flash ROM : 98 - DC	
Display of SOS History →	PTCT : 00 . 00 . 00 . 00 . 00 .	Time 00000:40 Count 0000001

POWER ON TIME/COUNT
Press [MUTE] button (3 sec)

6.3.2. Display of SOS History

SOS History (Number of LED blinking) indication.

From left side; Last SOS, before Last, three occurrence before, 2nd occurrence after shipment, 1st occurrence after shipment. This indication except 2nd and 1st occurrence after shipment will be cleared by [Self-check indication and forced to factory shipment setting].

6.3.3. POWER ON TIME/COUNT

Note : To display TIME/COUNT menu, highlight position, then press MUTE for 3 sec.

Time : Cumulative power on time, indicated hour : minute by decimal

Count : Number of ON times by decimal


Note : This indication will not be cleared by either of the self-checks or any other command.

6.3.4. Exit

1. Disconnect the AC cord from wall outlet.

6.4. DRV Check - USB HDD Check

1. Select [DRV Check - USBHDD Check] in Service Mode.
2. Press [OK] button on the remote control for more than 3 seconds.

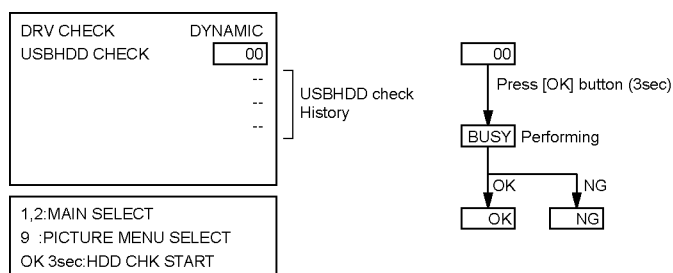

6.5. Hotel mode

1. Purpose
Restrict a function for hotels.
2. Access command to the Hotel mode setup menu
In order to display the Hotel mode setup menu:
While pressing [VOLUME (-)] button of the main unit,
press [AV] button of the remote control three times within
2 seconds.

Then, the Hotel mode setup menu is displayed.

Hotel Mode	
Hotel Mode	Off
Initial INPUT	Off
Initial POS	Off
Initial VOL Level	Off
Maximum VOL Level	100
Button Lock	Off
Remote Lock	Off
Private Information	Keep

Select
Change EXIT
RETURN

3. To exit the Hotel mode setup menu
Disconnect AC power cord from wall outlet.
4. Explain the Hotel mode setup menu


Item	Function
Hotel Mode	Select hotel mode On/Off
Initial INPUT	Select input signal modes. Set the input, when each time power is switched on. Selection : Off,TV,AV1,AV2,PC,HDMI1,HDMI2 • Off: give priority to a last memory.
Initial POS	Select programme number. Selection : Off/0 to 99 • Off: give priority to a last memory
Initial VOL Level	Adjust the volume when each time power is switched on. Selection/Range : Off/0 to 100 • Off: give priority to a last memory
Maximum VOL Level	Adjust maximum volume. Range : 0 to 100
Button Lock	Select local key conditions. Selection : Off/SETUP/MENU/ALL • Off: altogether valid • SETUP: only F-key is invalid (Tuning guide (menu) can not be selected.) • MENU: only F-key is invalid (only Volume/Mute can be selected.) • ALL: altogether invalid.
Remote Lock	Select remote control key conditions. Selection : Off/SETUP/MENU • Off: altogether valid • SETUP: only Setup menu is invalid • MENU: Picture/Sound/Setup menu are invalid
Private Information	Select private information for VIERA Cast is Keep or Reset if Hotel mode is set to [On] when TV power on. Selection : Keep/Reset • Keep: private information for VIERA Cast is keep • Reset: private information for VIERA Cast is reset

6.6. Data Copy by SD Card

6.6.1. Purpose

(a) Board replacement (Copy the data when exchanging A-board):


When exchanging A-board, the data in original A-board can be copied to SD card and then copy to new A-board.

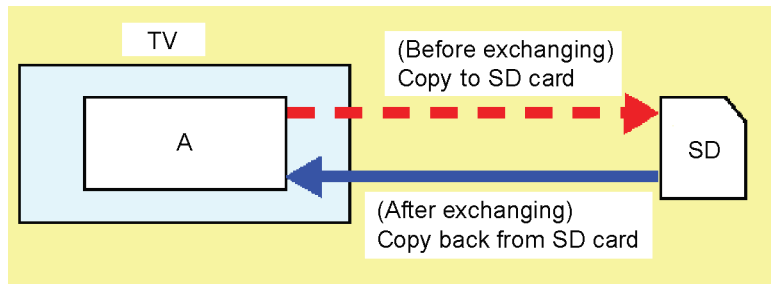

Following data can be copied.
User setting data
(incl. Hotel mode setting data)
Channel scan data
Adjustment and factory preset data

(b) Hotel (Copy the data when installing a number of units in hotel or any facility):

When installing a number of units in hotel or any facility, the data in master TV can be copied to SD card and then copy to other TVs.

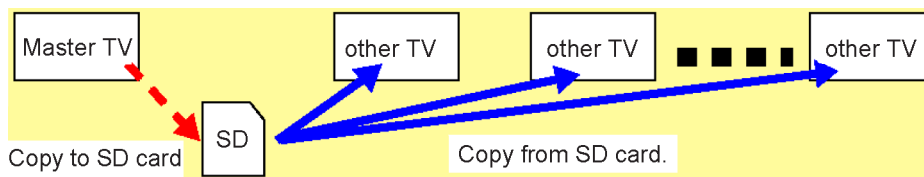

Following data can be copied.
User setting data
(incl. Hotel mode setting data)
Channel scan data

6.6.2. Preparation

Make pwd file as startup file for (a) or (b) in a empty SD card.

1. Insert a empty SD card to your PC.
2. Right-click a blank area in a SD card window, point to New, and then click text document. A new file is created by default (New Text Document.txt).
3. Right-click the new text document that you just created and select rename, and then change the name and extension of the file to the following file name for (a) or (b) and press ENTER.

File name:

- (a) For Board replacement : boardreplace.pwd
- (b) For Hotel : hotel.pwd

Note:

Please make only one file to prevent the operation error.

No any other file should not be in SD card.


6.6.3. Data copy from TV set to SD Card

1. Turn on the TV set.
2. Insert SD card with a startup file (pwd file) to SD slot.
On-screen Display will be appeared according to the startup file automatically.
3. Input a following password for (a) or (b) by using remote control.
(a) For Board replacement : 2770
(b) For Hotel : 4850
Data will be copied from TV set to SD card.
It takes around 2 to 6 minutes maximum for copying.
4. After the completion of copying to SD card, remove SD card from TV set.
5. Turn off the TV set.

Note:

Following new folder will be created in SD card for data from TV set.

- (a) For Board replacement : user_setup
- (b) For Hotel : hotel

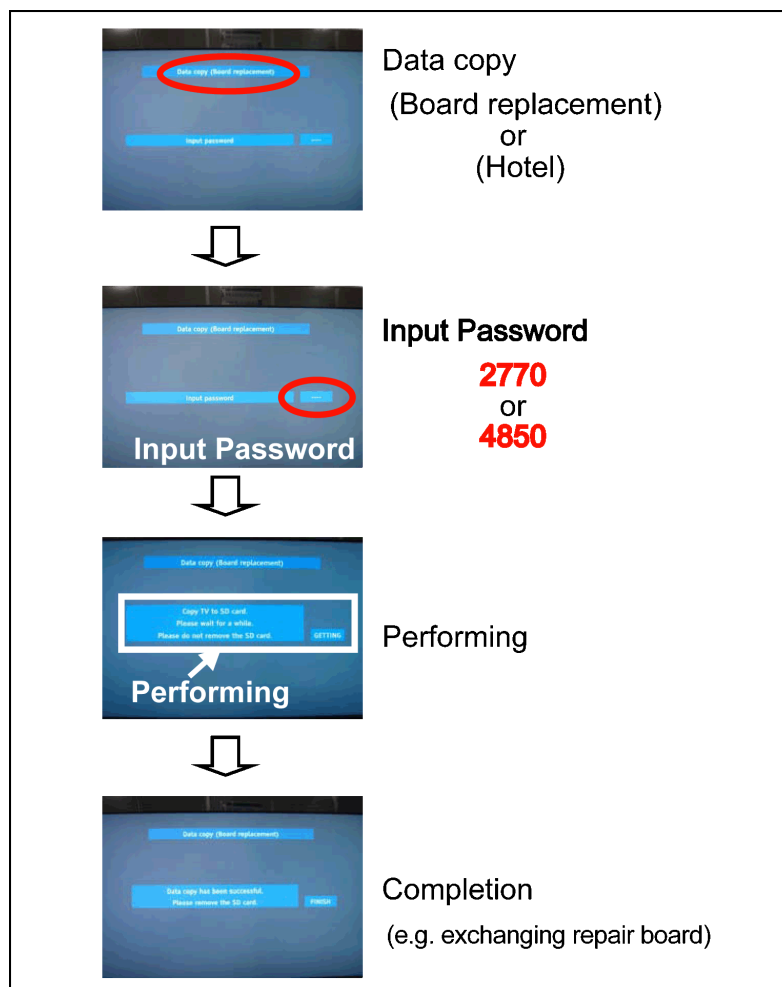


6.6.4. Data copy from SD Card to TV set

1. Turn on the TV set.
2. Insert SD card with Data to SD slot.
On-screen Display will be appeared according to the Data folder automatically.
3. Input a following password for (a) or (b) by using remote control.
(a) For Board replacement : 2771
(b) For Hotel : 4851
Data will be copied from SD card to TV set.
4. After the completion of copying to SD card, remove SD card from TV set.
(a) For Board replacement : Data will be deleted after copying (Limited one copy).
(b) For Hotel : Data will not be deleted and can be used for other TVs.
5. Turn off the TV set.

Note:

1. Depending on the failure of boards, function of Data copy for board replacement does not work.
2. This function can be effective among the same model numbers.

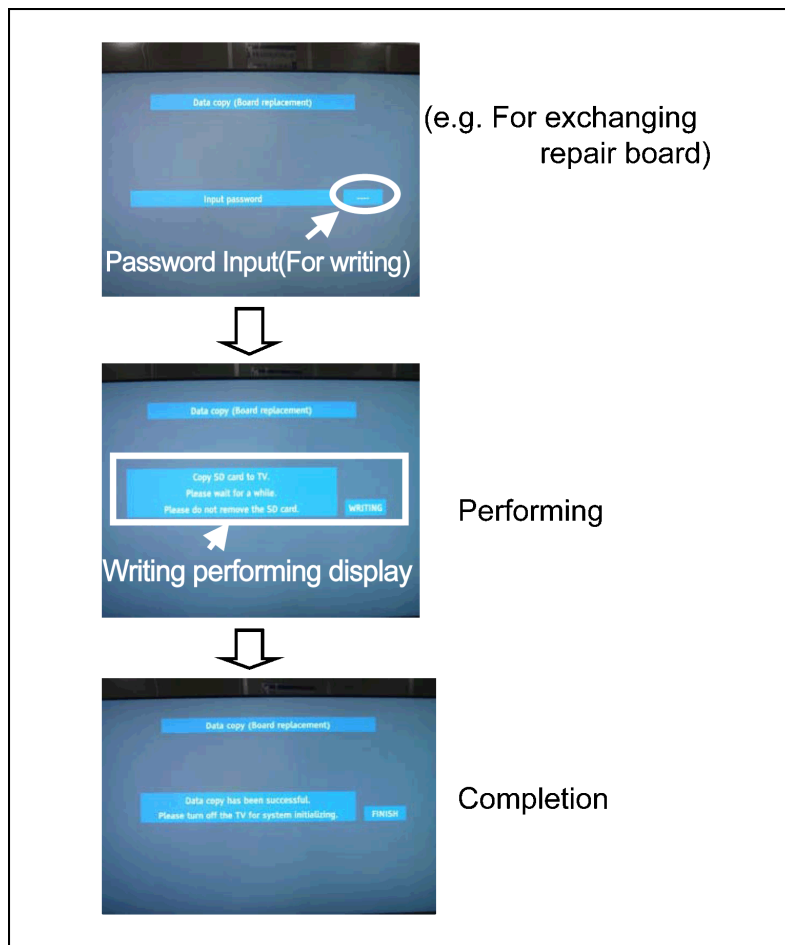

7 Troubleshooting Guide

Use the self-check function to test the unit.

1. Checking the IIC bus lines
2. Power LED Blinking timing

7.1. Check of the IIC bus lines

7.1.1. How to access

7.1.1.1. Self-check indication only:

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [OK] button on the remote control for more than 3 seconds.

7.1.1.2. Self-check indication and forced to factory shipment setting:

Caution:

New key will be generated and previous TV programmes recorded in USB HDD will not be viewed. (See USB HDD Recording) (Z only)

Produce TV reception screen, and while pressing [VOLUME (-)] button on the main unit, press [MENU] button on the remote control for more than 3 seconds.

7.1.2. Screen display

42FHD SET		Panasonic 2012PDP		SELF CHECK COMPLETE SYS SELECT : Asia/M.East	
TUN	OK	PEAKS-SOFT	*****	SUM	*****
STBY	OK	PEAKS-EEP	*****	MODEL ID	*****
MEM1	OK	LSI-PACKAGE	*****		
MEM2	OK	LSI-RELEASE	*****		
PANEL	OK	STBY-SOFT	*****		
TEMP	OK	STBY-EEP	*****		
LAN	OK	STBY-ROMCORR	*****		
ID2	OK	PDP-DCC	*****		
BT	OK	PDP-PDROM	*****		
		PDP-DATA	*****		

7.1.3. Check Point

Confirm the following parts if NG was displayed.

DISPLAY	Check Ref. No.	Description	Check Point
TUN	TU6705	TUNER	A-BOARD
STBY	IC8000	PEAKS-LD4(STM)	A-BOARD
MEM1	IC8902	PEAKS EEPROM	A-BOARD
MEM2	IC8900	NAND FLASH	A-BOARD
PANEL	IC9300	PD6H	A-BOARD
TEMP	IC2001	TEMP SENSOR	A-BOARD
LAN	IC8650	ETHERPHY	A-BOARD
ID2			A-BOARD
BT	IC8000, A50	BLUETOOTH	A-BOARD/BLUETOOTH

7.1.4. Exit

Disconnect the AC cord from wall outlet or switch off the power with [Power] button on the main unit.

7.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abnormality has occurred the unit, the protection circuit operates and reset to the stand by mode. At this time, the defective block can be identified by the number of blinks of the Power LED on the front panel of the unit.


Blinking Times	Contents	Check point
1	Panel information SOS PD Start SOS	-
2	P+15V SOS	A-Board P-Board
3	IROM BOOT PROGRAM SOS	A-Board P-Board
4	Power SOS	P-Board
6	Driver SOS1 (SN Energy recovery circuit) (A-SN FPC DET)	SN-Board A-SN FPC
7	Driver SOS2 (SN Connector DET) (SN Scan and Logic IC)	SN-Board
8	Driver SOS3 (SS FPC DET) (SS Energy recovery circuit)	SS-Board SS FPC
9	Discharge Control SOS	A-Board
10	Sub 3.3V SOS Tuner power SOS BE SOS	A-Board SN-Board SS-Board P-Board
12	Sound SOS	A-Board Speaker Woofer
13	Emergency SOS	A-Board
20	2nd BOOT PROGRAM SOS (Watchdog timer over flow)	A-Board
21	2nd BOOT PROGRAM SOS (System error)	A-Board
22	2nd BOOT PROGRAM SOS (Main system bus freeze)	A-Board
23	2nd BOOT PROGRAM SOS (Accidental interrupt signal)	A-Board
24	2nd BOOT PROGRAM SOS (NAND Flash memory data transfer error finish)	A-Board
25	2nd BOOT PROGRAM SOS (Unsupported NAND Flash memory)	A-Board

7.3. No Power


First check point

There are following 3 states of No Power indication by power LED.


1. No lit
2. Green is lit then turns red blinking a few seconds later. (See Power LED Blinking timing chart)
3. Only red is lit.

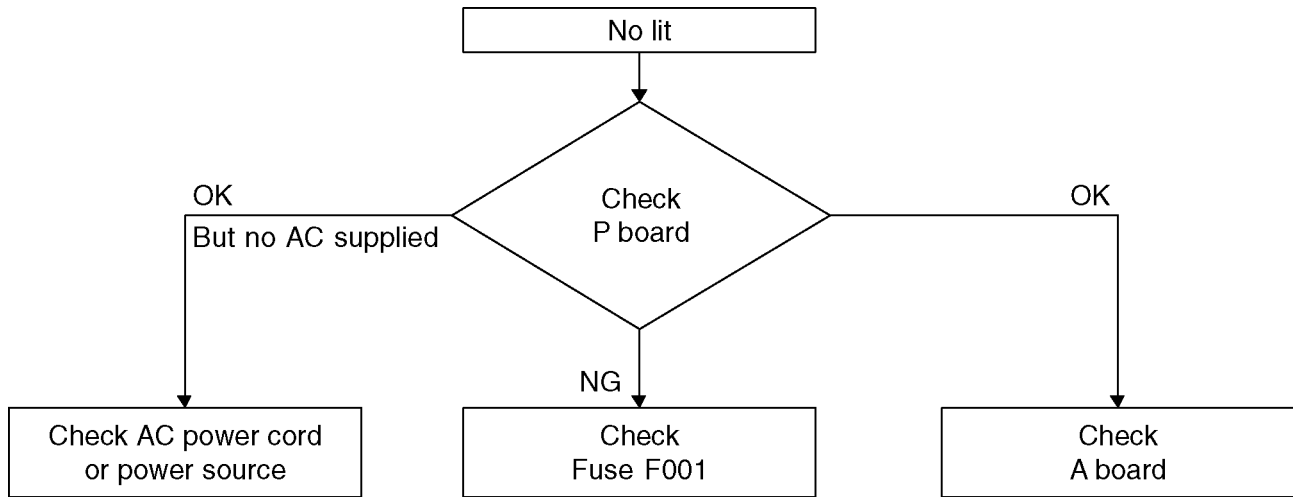

7.4. No Picture

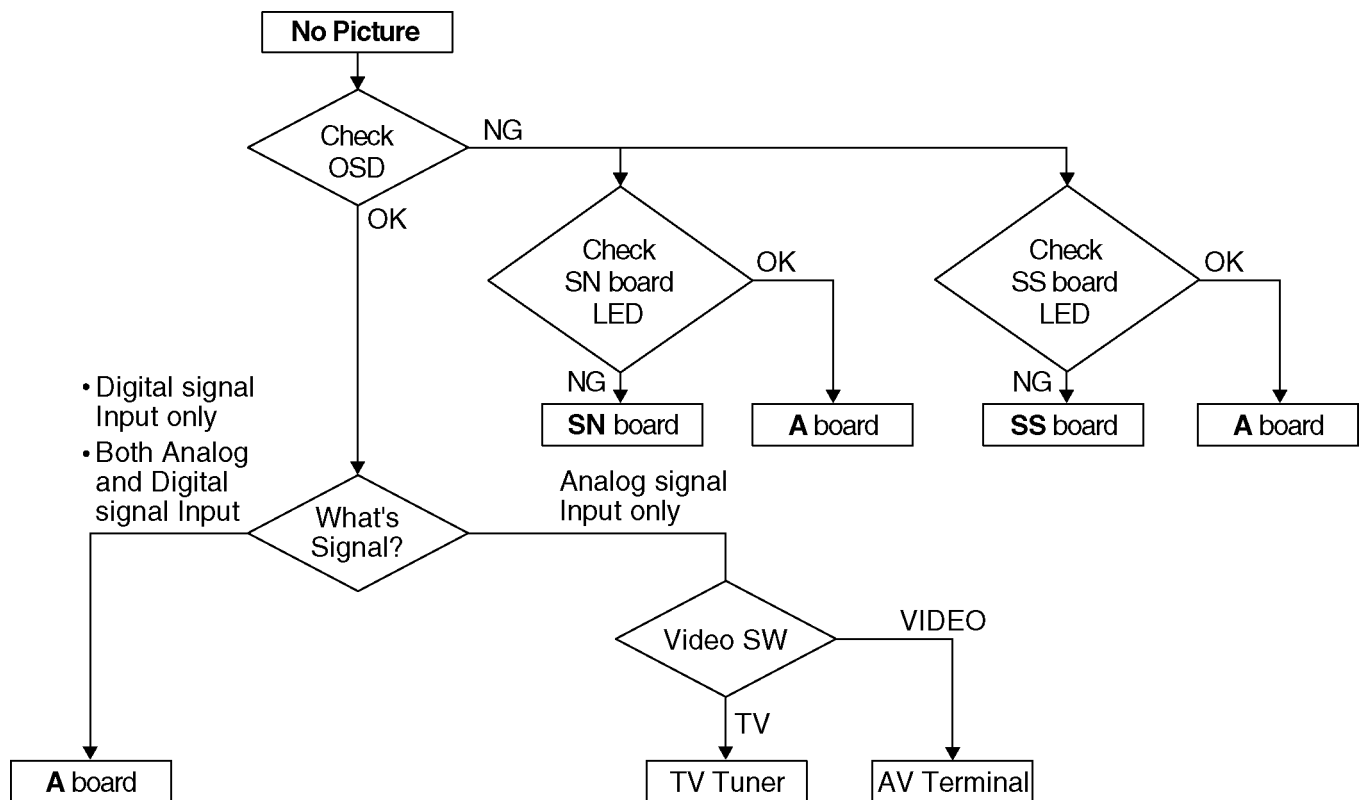

Drive circuits LED indicator

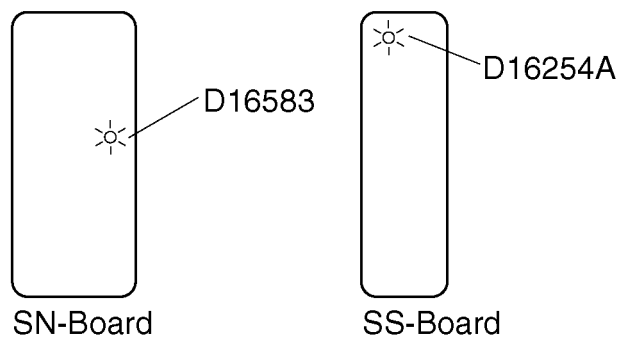

7.5. Local screen failure

Plasma display may have local area failure on the screen. Fig-1 is the possible defect P.C.B. for each local area.

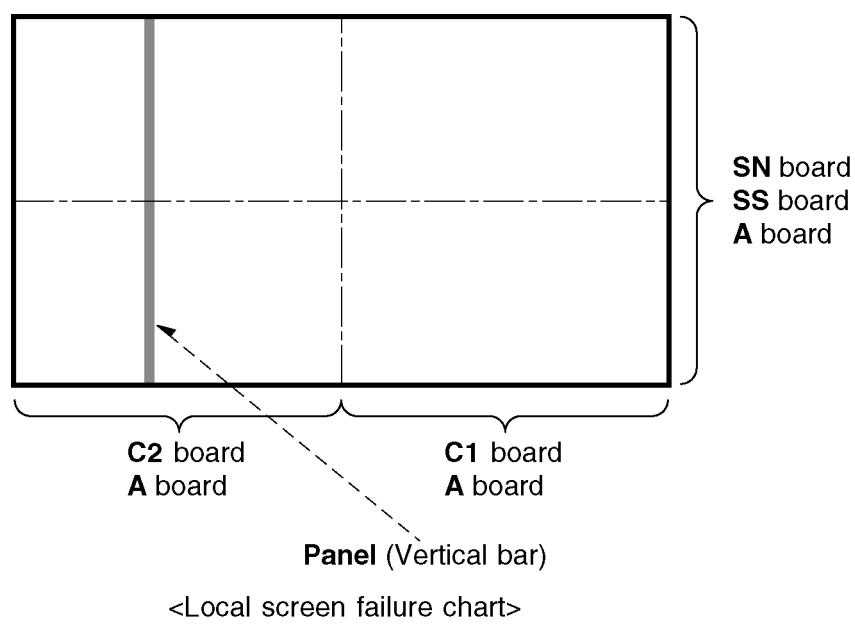



Fig-1

8 Disassembly and Assembly Instructions

8.1. Disassembly Flow Chart for the Unit

This is a disassembly chart.


When assembling, perform this chart conversely.

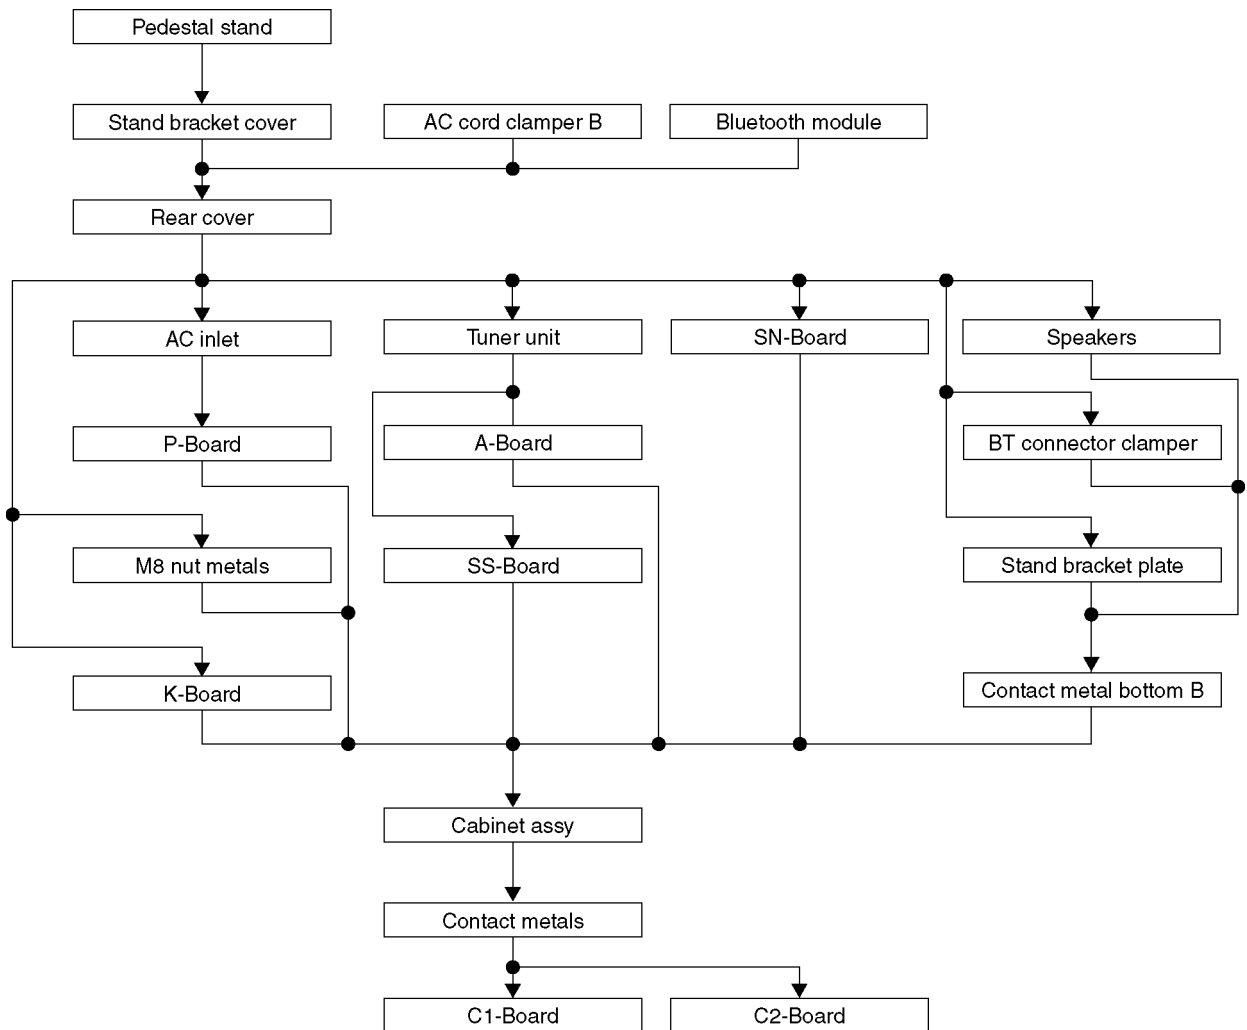

8.2. Disassembly Procedure for the Unit


8.2.1. Remove the Pedestal stand

1. Remove the Plasma panel section from the servicing stand and lay on a flat surface such as a table (covered by a soft cloth) with the Plasma panel surface facing downward.
2. Remove the screws (×4 ➡).
3. Slide the Pedestal stand to the downside and remove the Pedestal stand.

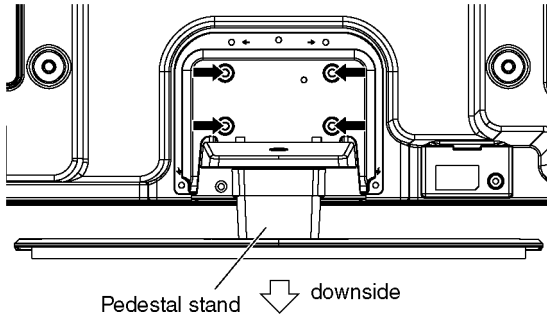


8.2.2. Remove the Stand bracket cover

1. Remove the screws (×4 ➡) and remove the Stand bracket cover.

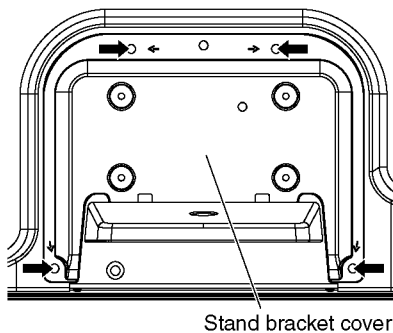


8.2.3. Remove the AC cord clamber B

1. Remove the screws (×2 ➡) and remove the AC cord clamber B.

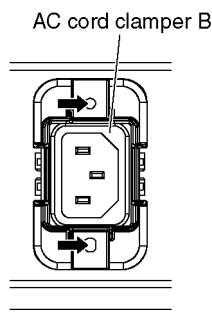


8.2.4. Remove the Bluetooth module

1. Remove the screw (×1 ➡) and remove the Bluetooth module.

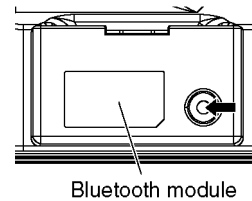

8.2.5. Remove the Rear cover

1. Remove the screws (×12 ➡, ×10 ⇨, ×2 ⇨).
2. Remove the M8 caps (×4 ➡).
3. Remove the Rear cover.

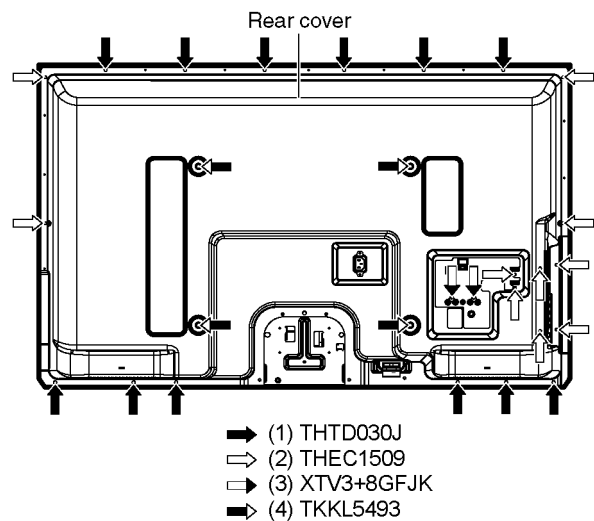


8.2.6. Remove the AC inlet

Caution:

To remove AC inlet wait 1 minute after power was off for discharge from electrolysis capacitors.

1. Disconnect the connector (P9).
2. Remove the screws (×1 ➡, ×1 ⇨) and remove the AC inlet.

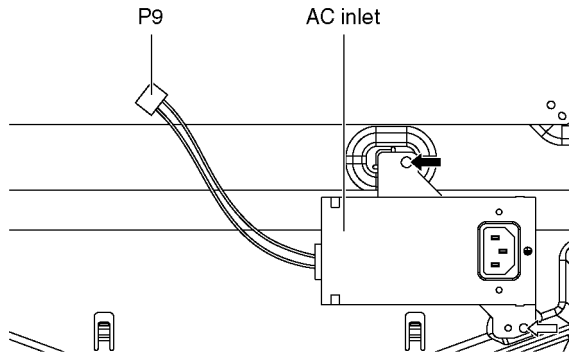


8.2.7. Remove the P-Board

Caution:


To remove P.C.B. wait 1 minute after power was off for discharge from electrolysis capacitors.

1. Unlock the cable clampers and the tapes to free the cables.
2. Disconnect the connectors (P2, P6, P11 and P35).
3. Remove the screws (×5 ➡) and remove the P-Board.

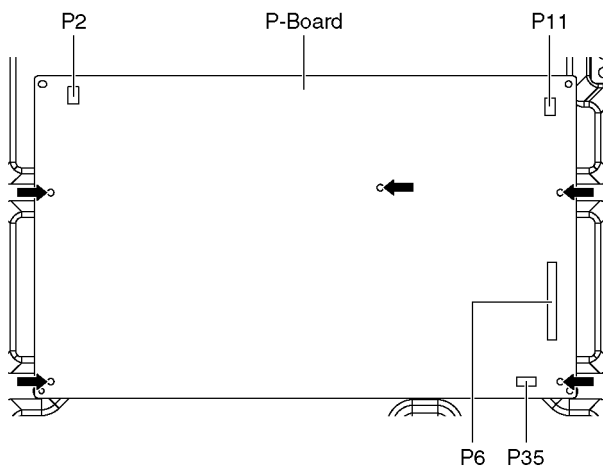


8.2.8. Remove the Tuner unit

1. Unlock the cable clampers and the tapes to free the cables.
2. Disconnect the connectors (A1, A6, A12 and A50).
3. Disconnect the flexible cables (A20, A31, A32 and A33).
4. Remove the screws (×4 ➡) and remove the Tuner unit.

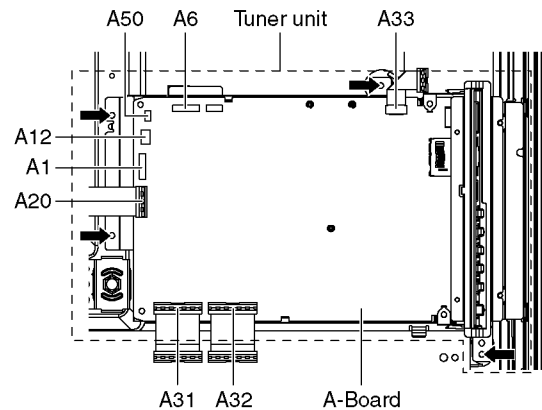


8.2.9. Remove the A-Board

1. Remove the screws (×4 ➡).
2. Remove the claws (×2 ⇨).
3. Remove the Side terminal cover and the Side shield metal.
4. Remove the A-Board.

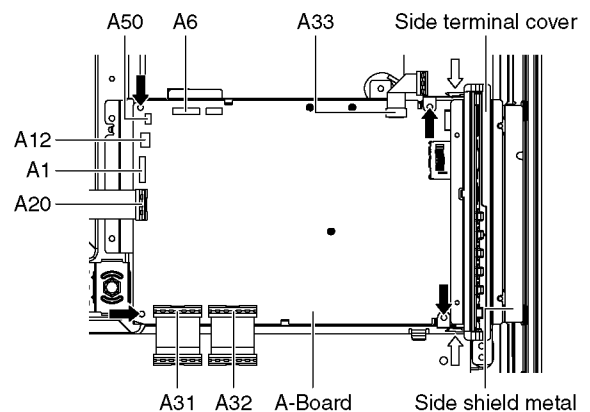


8.2.10. Remove the Speakers

1. Unlock the cable clampers and the tapes to free the cables.
2. Disconnect the Speaker terminal.
3. Remove the screws (×2 ➡ each) and remove the Speakers (L, R).

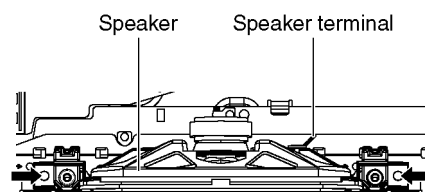


8.2.11. Remove the SN-Board

1. Disconnect the flexible cables (SN21, SN22, SN23, SN24, SN25, SN26, SN27 and SN28) connected to the SN-Board.
2. Disconnect the connector (SN2).
3. Disconnect the flexible cable (SN20).
4. Remove the screws (×6 ➡) and remove the SN-Board.

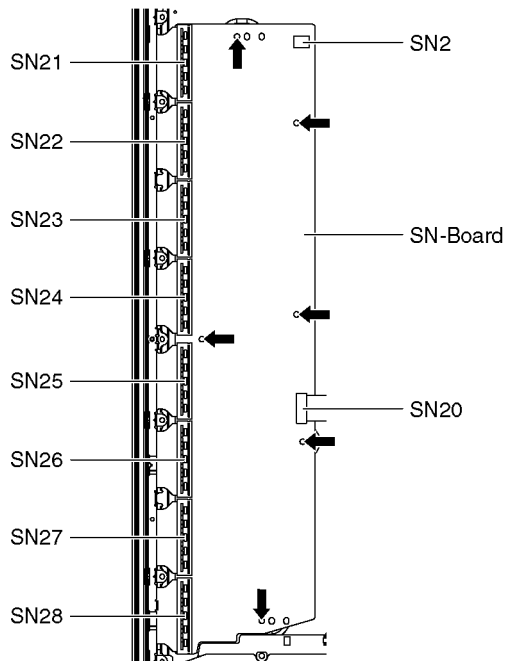


8.2.12. Remove the SS-Board

1. Disconnect the connector (SS11).
2. Disconnect the flexible cable (SS33).
3. Disconnect the flexible cables (SS62, SS64 and SS66).
4. Remove the screws (×4 ➡) and remove the SS-Board.

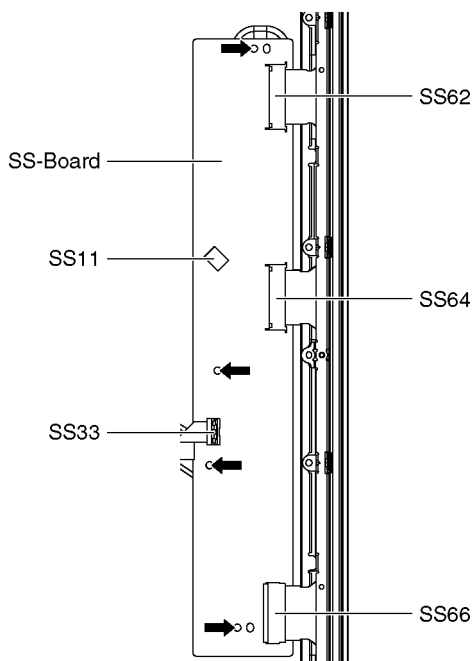


8.2.13. Remove the BT connector clamber

1. Unlock the cable clammers and the tapes to free the cables.
2. Remove the claws (×2 ➡) and remove the BT cable.
3. Disconnect the connector (K1) and remove the A1-K1 cable.
4. Remove the claws (×2 ⇨) and remove the BT connector clamber.

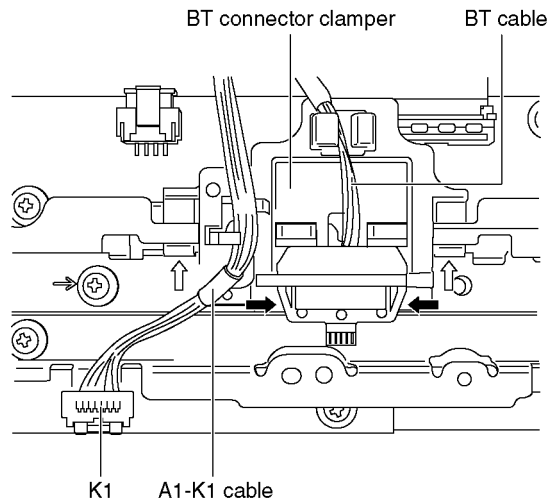


8.2.14. Remove the Stand bracket plate

1. Remove the Stand bracket fastening screws (×4 ➡, ×2 ⇨, ×2 ⇨) and remove the Stand bracket plate.

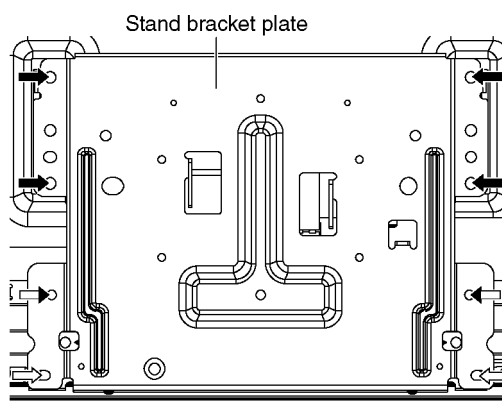


8.2.15. Remove the M8 nut metals

1. Remove the screw (×1 ➡ each) and remove the M8 nut metals.

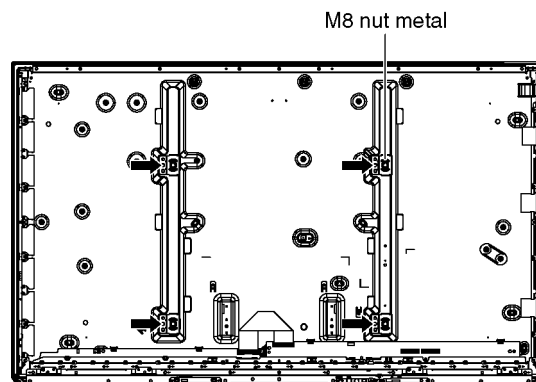


8.2.16. Remove the K-Board

1. Remove the screw (×1 ➡).
2. Disconnect the connector (K1) and remove the K-Board from the LED Panel.

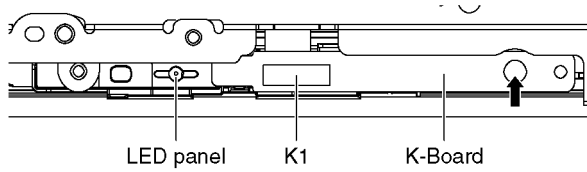


8.2.17. Remove the Contact metal bottom B

1. Remove the screws (×6 ➡, ×1 ⇨).
2. Remove the Contact metal bottom B.

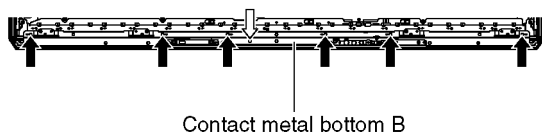


8.2.18. Remove the Cabinet assy from the Plasma panel section


1. Place the Cabinet assy on a flat surface of a table (covered by a soft cloth) and a cushion.

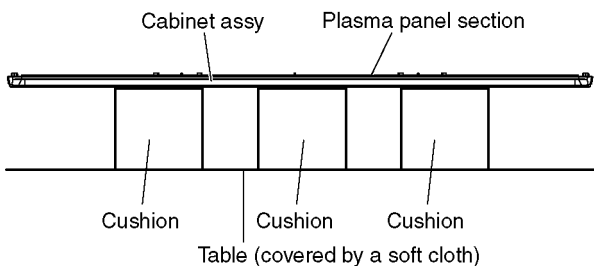

2. Remove the screws (×8 ➡).

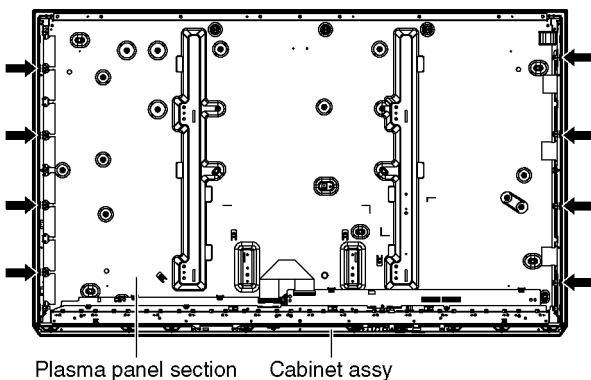


3. Remove the Cabinet assy from the Plasma panel section.

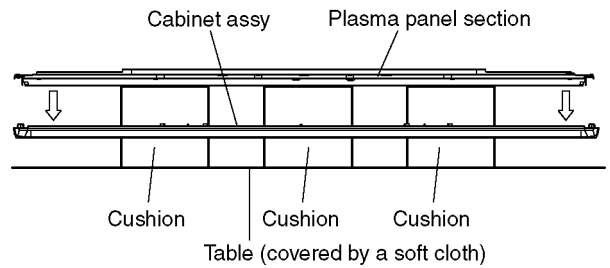


8.2.19. Remove the Contact metals

1. Remove the screws (×6 ➡).
2. Remove the Contact metal side (L, R).
3. Remove the screws (×15 ⇨).
4. Remove the Contact metal bottom A.

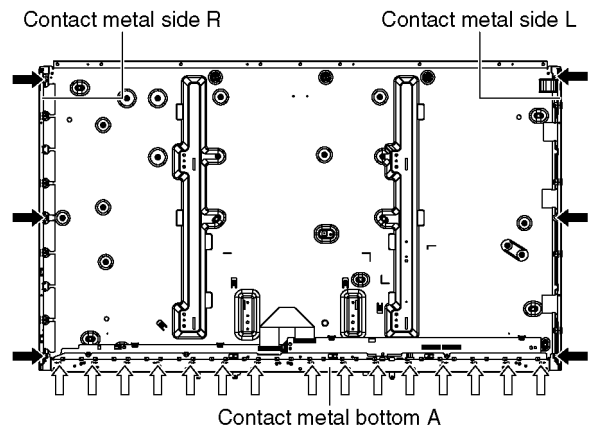


8.2.20. Remove the C1-Board

1. Disconnect the flexible cables (CB1, CB2, CB3, CB4, CB5, CB6 and CB7).
2. Disconnect the flexible cable (C10).
3. Remove the screws (×4 ➡) and remove the C1-Board.

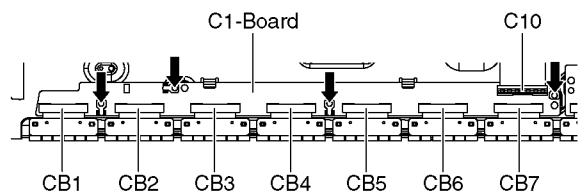

8.2.21. Remove the C2-Board


1. Disconnect the flexible cables (CB8, CB9, CB10, CB11, CB12, CB13, CB14 and CB15).
2. Disconnect the flexible cables (C20, C21 and C22).
3. Disconnect the connector (C25).
4. Remove the screws (×4 ➡) and remove the C2-Board.

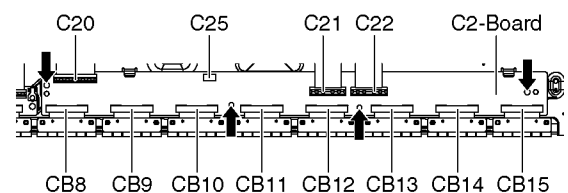

8.2.22. Replace the Plasma panel

Caution:

Place the Plasma panel on a flat surface of a table (covered by a soft cloth) and a cushion.

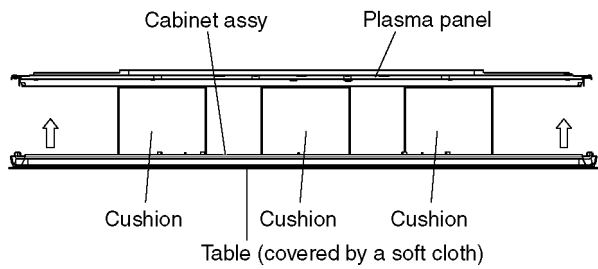

A new Plasma panel itself without Contact metals is fragile. To avoid the damage to new Plasma panel, carry a new Plasma panel taking hold of the Contact metals.

1. Place a carton box packed a new Plasma panel on the flat surface of the work bench.
2. Open a box and without taking a new Plasma panel.
3. Attach the Cabinet assy and each P.C.Board and so on, to the new Plasma panel.

9 Measurements and Adjustments

9.1. Adjustment

9.1.1. Vsus selection

Caution:

When Plasma panel or A-board is replaced, Vsus should be set to LOW or HIGH.


Procedure

1. Go into main item [VSUS] in Service Mode. LOW or HIGH will be displayed.
2. Press [OK] button to go to TEST stage.
White pattern without On-Screen Display will be displayed during TEST and CONF stage. Press [5] button to display the On-Screen Display.
3. Press [VOL (-)] button to set to LOW.
4. In LOW setting
 - a. If no several dead pixel is visible remarkably in white pattern, press [3] button to go to CONF stage.
 - b. If the several dead pixels are visible remarkably in white pattern, Set to HIGH by press [VOL (+)] button. Press [3] button to go to CONF stage if the symptom is improved.
5. Press [OK] button in CONF stage to store LOW or HIGH.
6. Exit Service Mode by pressing [Power] button.

Notes:

Do not overwrite because data is written in Peaks-EEPROM after executing adjustment of V-SUS Voltage.

Vsus selection in Service mode

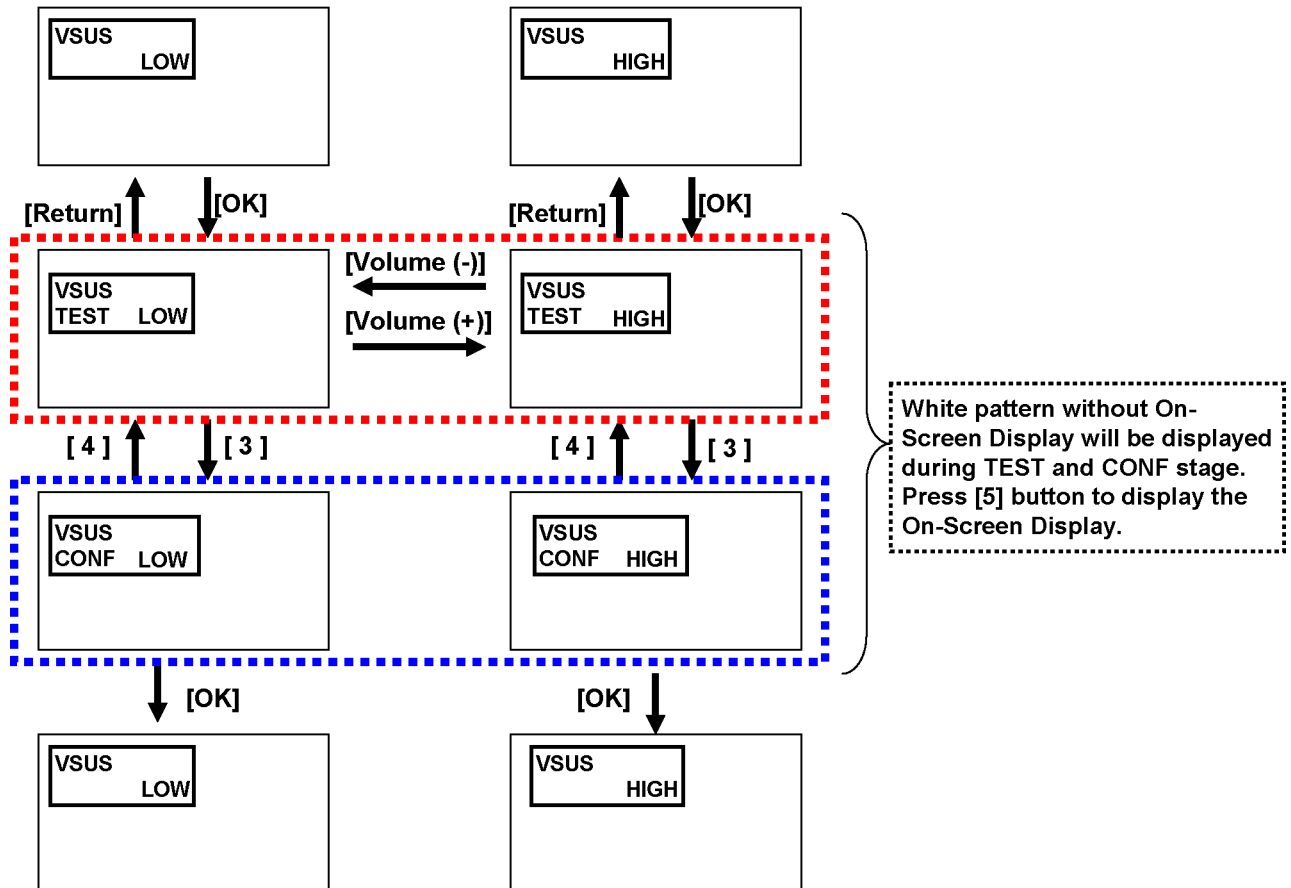


9.1.2. White balance adjustment


Name of measuring instrument	Remarks																										
Color analyzer (Minolta CS-2000 or equivalent)																											
Procedure	Remarks																										
1. Enter the Service mode. 2. Receive the Analog-RF (except for no signal) or set CVBS/YUV/HDMI (no signal is available). 3. Select [WB-ADJ] by using [1] and [2] key in the remote controller. 4. Check that the colour balance and the viewing mode is the values written in table1 and 2. 5. [INNER PATTERN] is displayed by using [5] key by using [5] key in the remote controller. 6. Select [G-CUTOFF] by using the [3] and [4] key in the remote controller, and set the value to [80] by using the volume [+] and [-] key. Also, [B-CUTOFF] and [R-CUTOFF] set to [80] 7. Set [G-DRIVE] value to the initial data (ex. D0). 8. Set the color analyzer and adjust color point to the values written in table1 by using [B-DRIVE] and [R-DRIVE] 9. Increase RGB-DRIVE value so that the maximum drive value of one of R-DRIVE or G-DRIVE or B-DRIVE should become [FF] ([ALL-DRIVE] set to [FF].) Table 1 : White Balance Target value <table><tr><th colspan="2">COOL</th><th colspan="2">NORMAL</th><th colspan="2">WARM</th></tr><tr><th>x</th><th>y</th><th>x</th><th>y</th><th>x</th><th>y</th></tr><tr><td>0.267</td><td>0.269</td><td>0.288</td><td>0.296</td><td>0.313</td><td>0.326</td></tr></table> Table2 : Setting of Viewing Mode <table><tr><th>Colour Balance</th><th>Viewing Mode</th></tr><tr><td>Cool</td><td>Dynamic</td></tr><tr><td>Normal</td><td>Dynamic</td></tr><tr><td>Warm</td><td>Cinema</td></tr></table>	COOL		NORMAL		WARM		x	y	x	y	x	y	0.267	0.269	0.288	0.296	0.313	0.326	Colour Balance	Viewing Mode	Cool	Dynamic	Normal	Dynamic	Warm	Cinema	
COOL		NORMAL		WARM																							
x	y	x	y	x	y																						
0.267	0.269	0.288	0.296	0.313	0.326																						
Colour Balance	Viewing Mode																										
Cool	Dynamic																										
Normal	Dynamic																										
Warm	Cinema																										

10 Block Diagram


10.1. Main Block Diagram

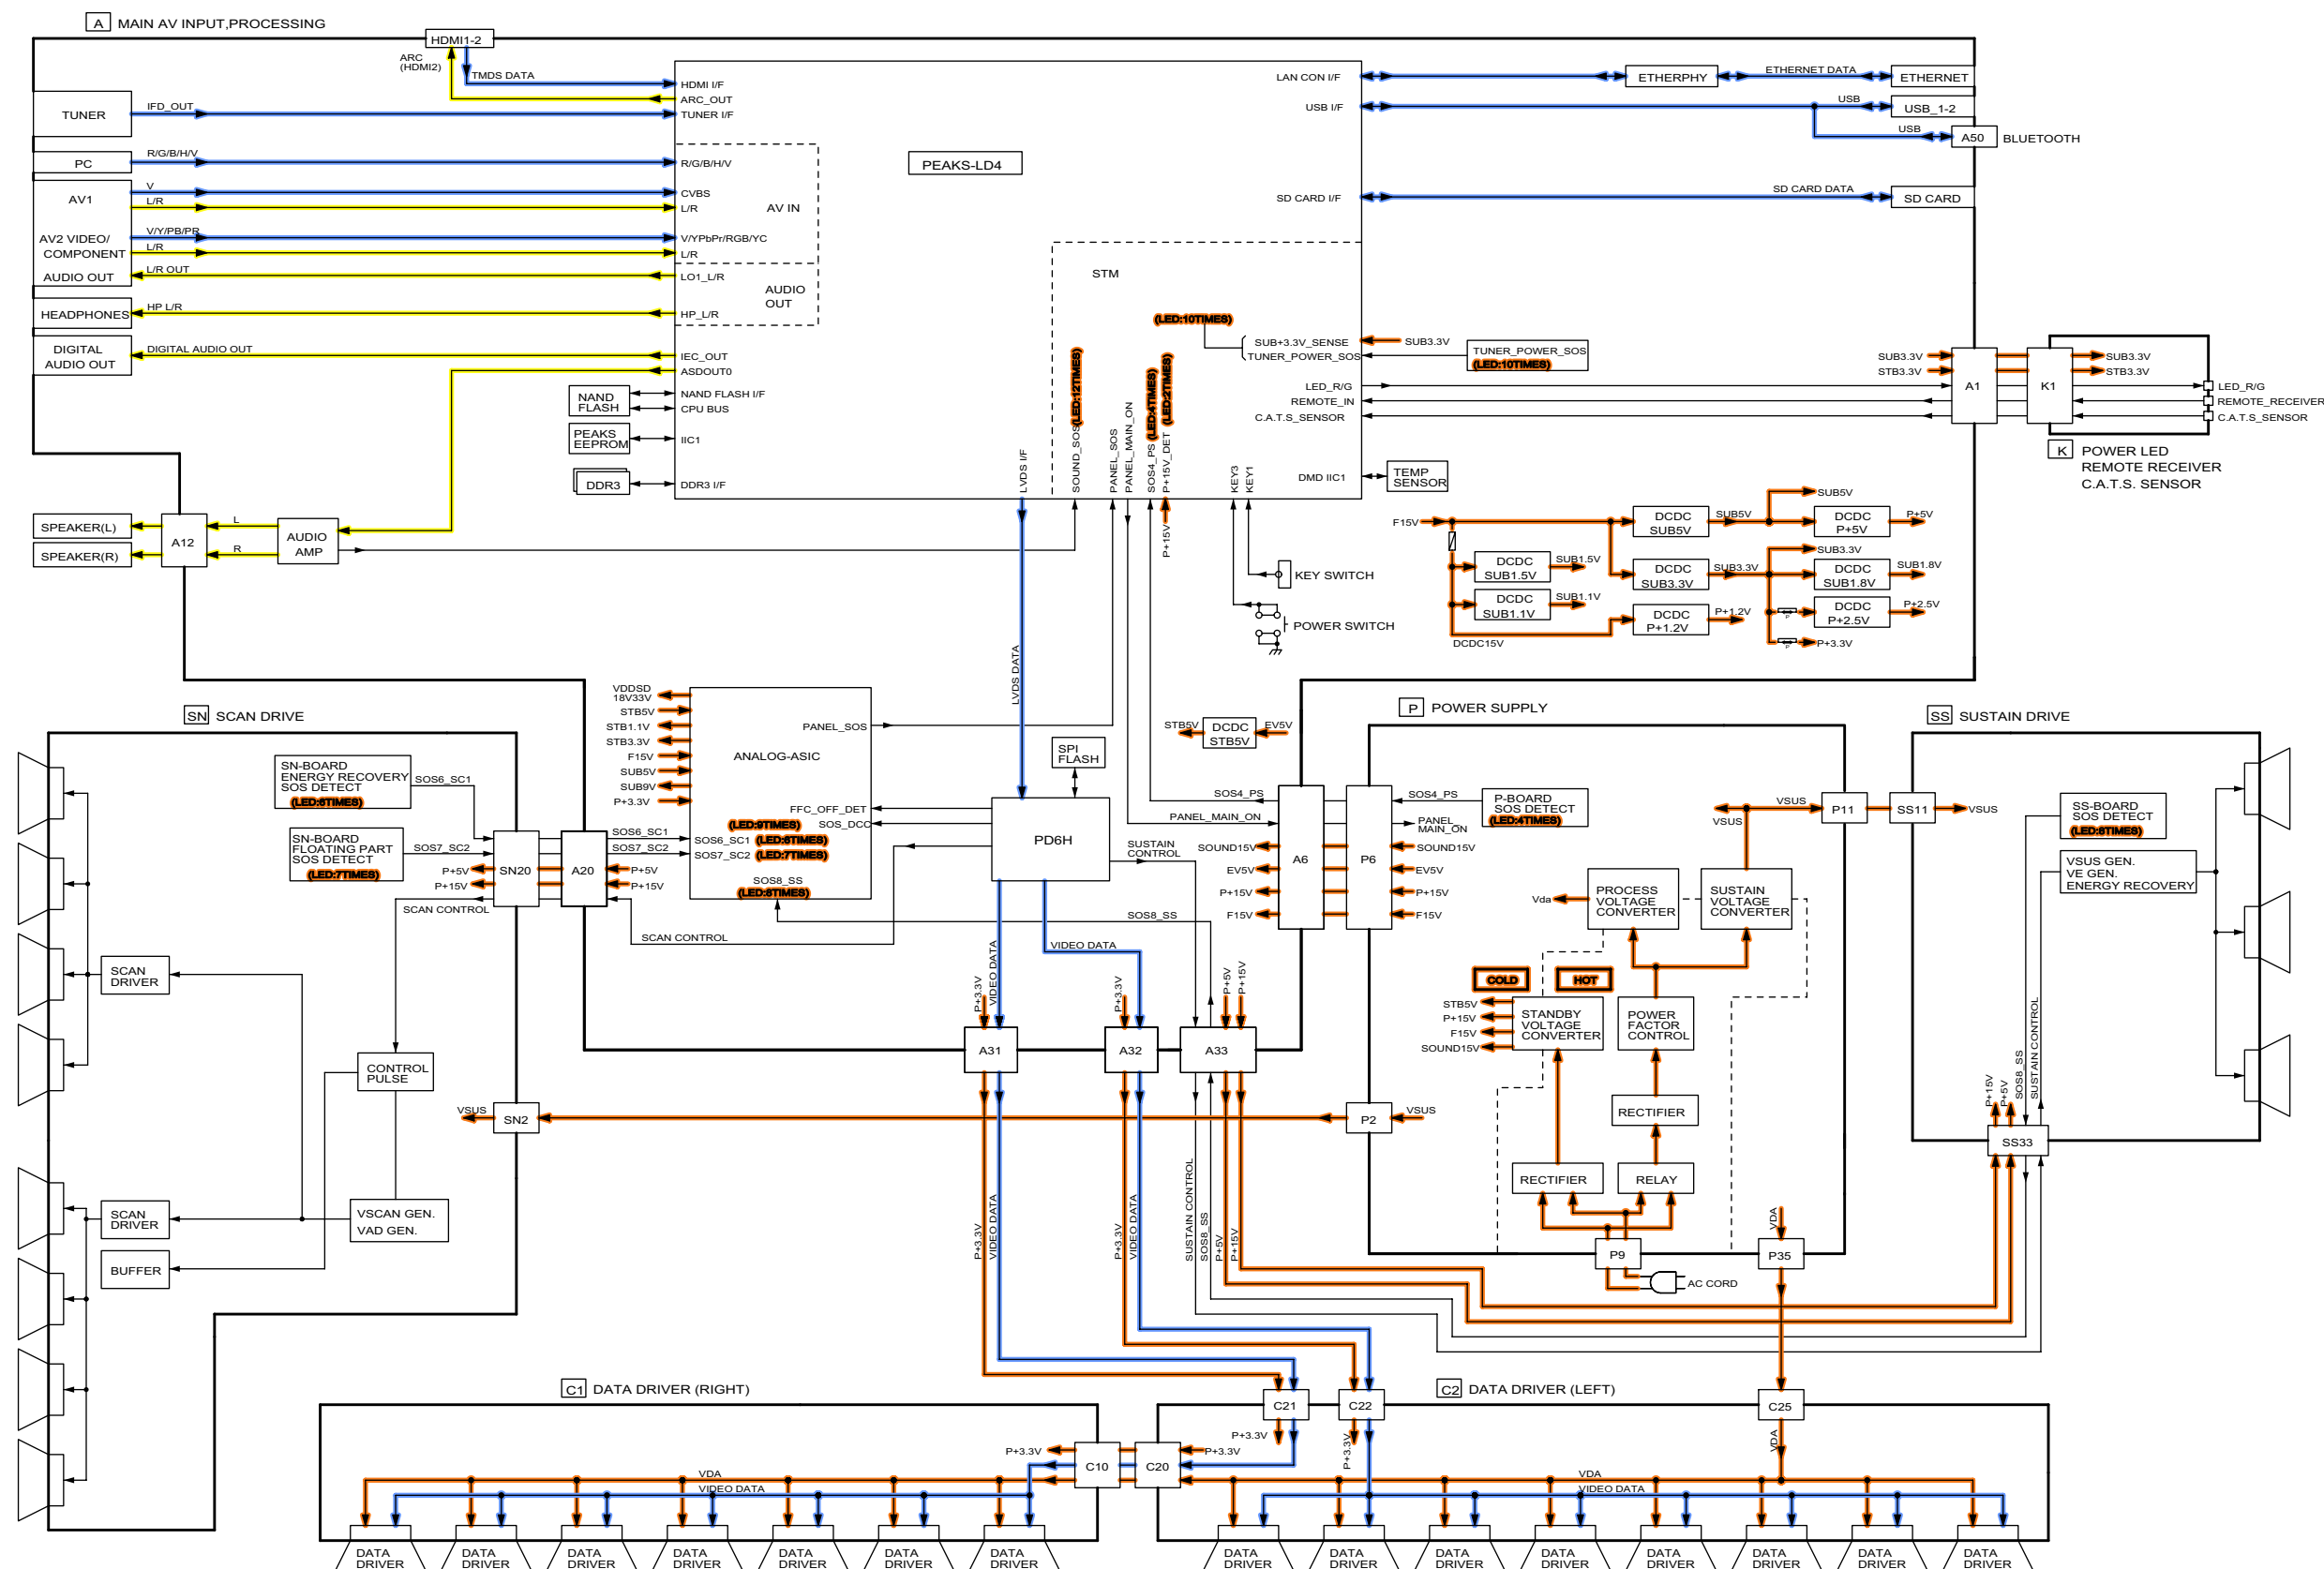


10.2. Block (1/4) Diagram

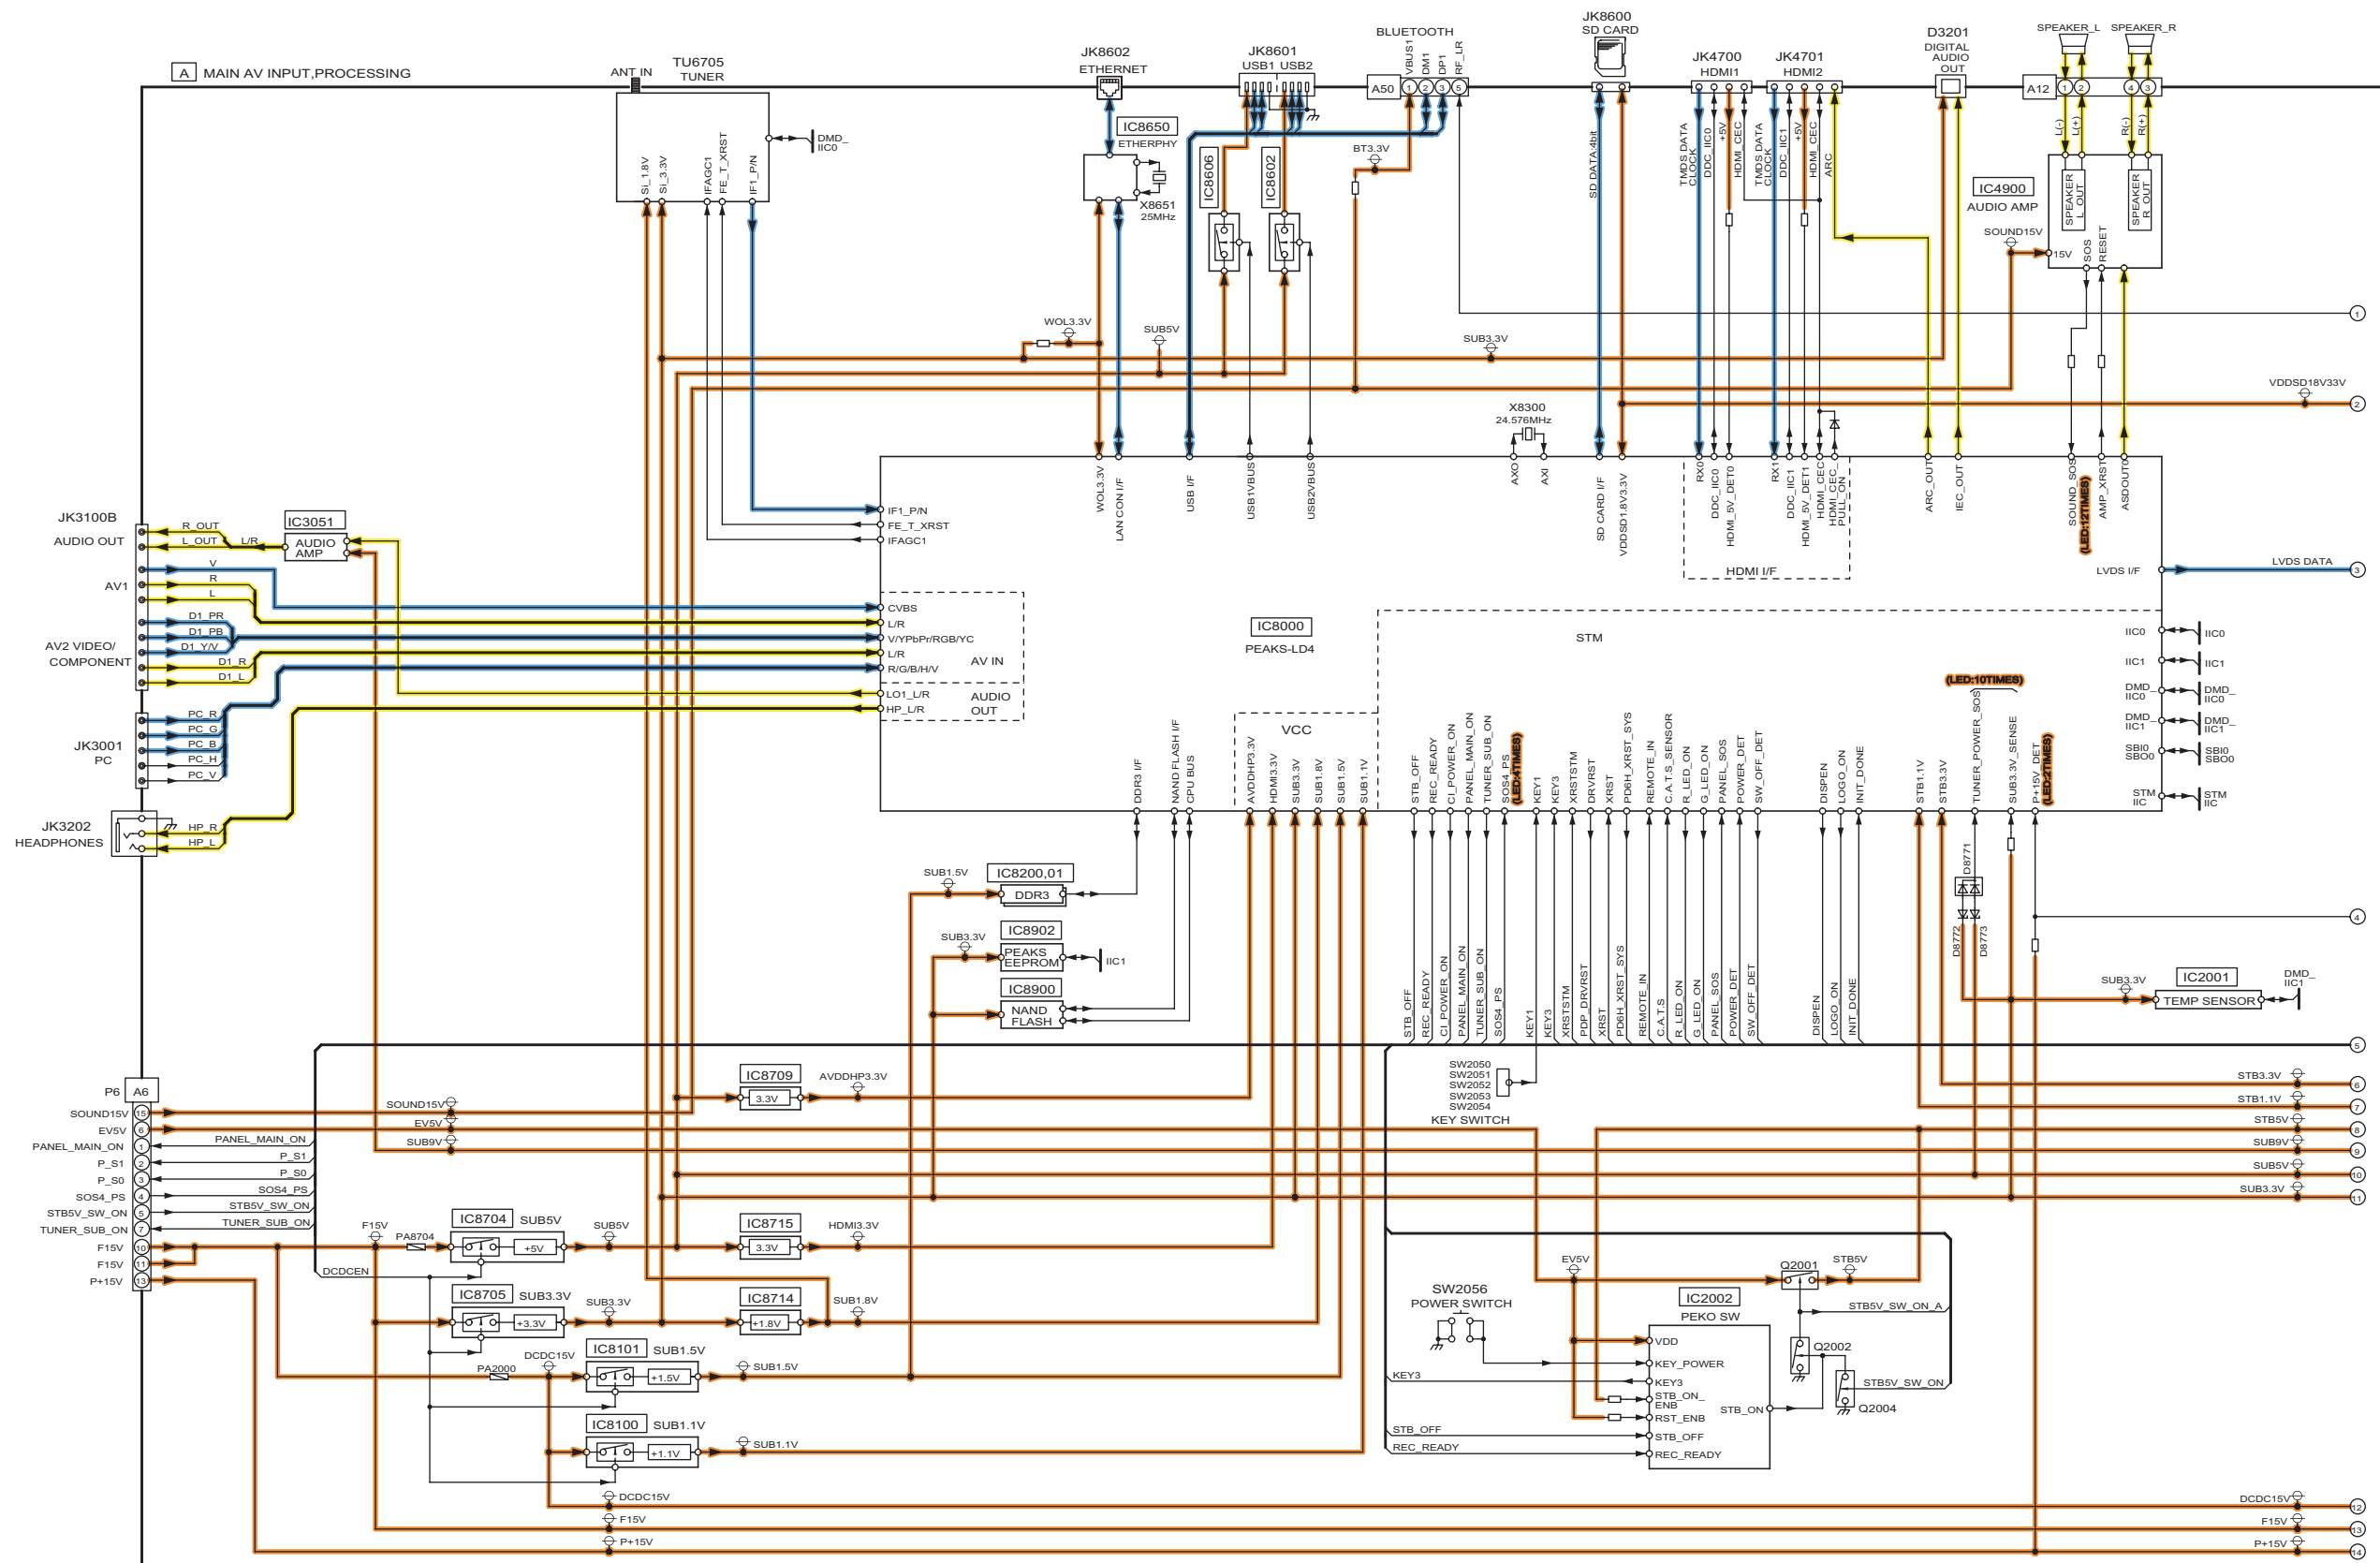


10.3. Block (2/4) Diagram

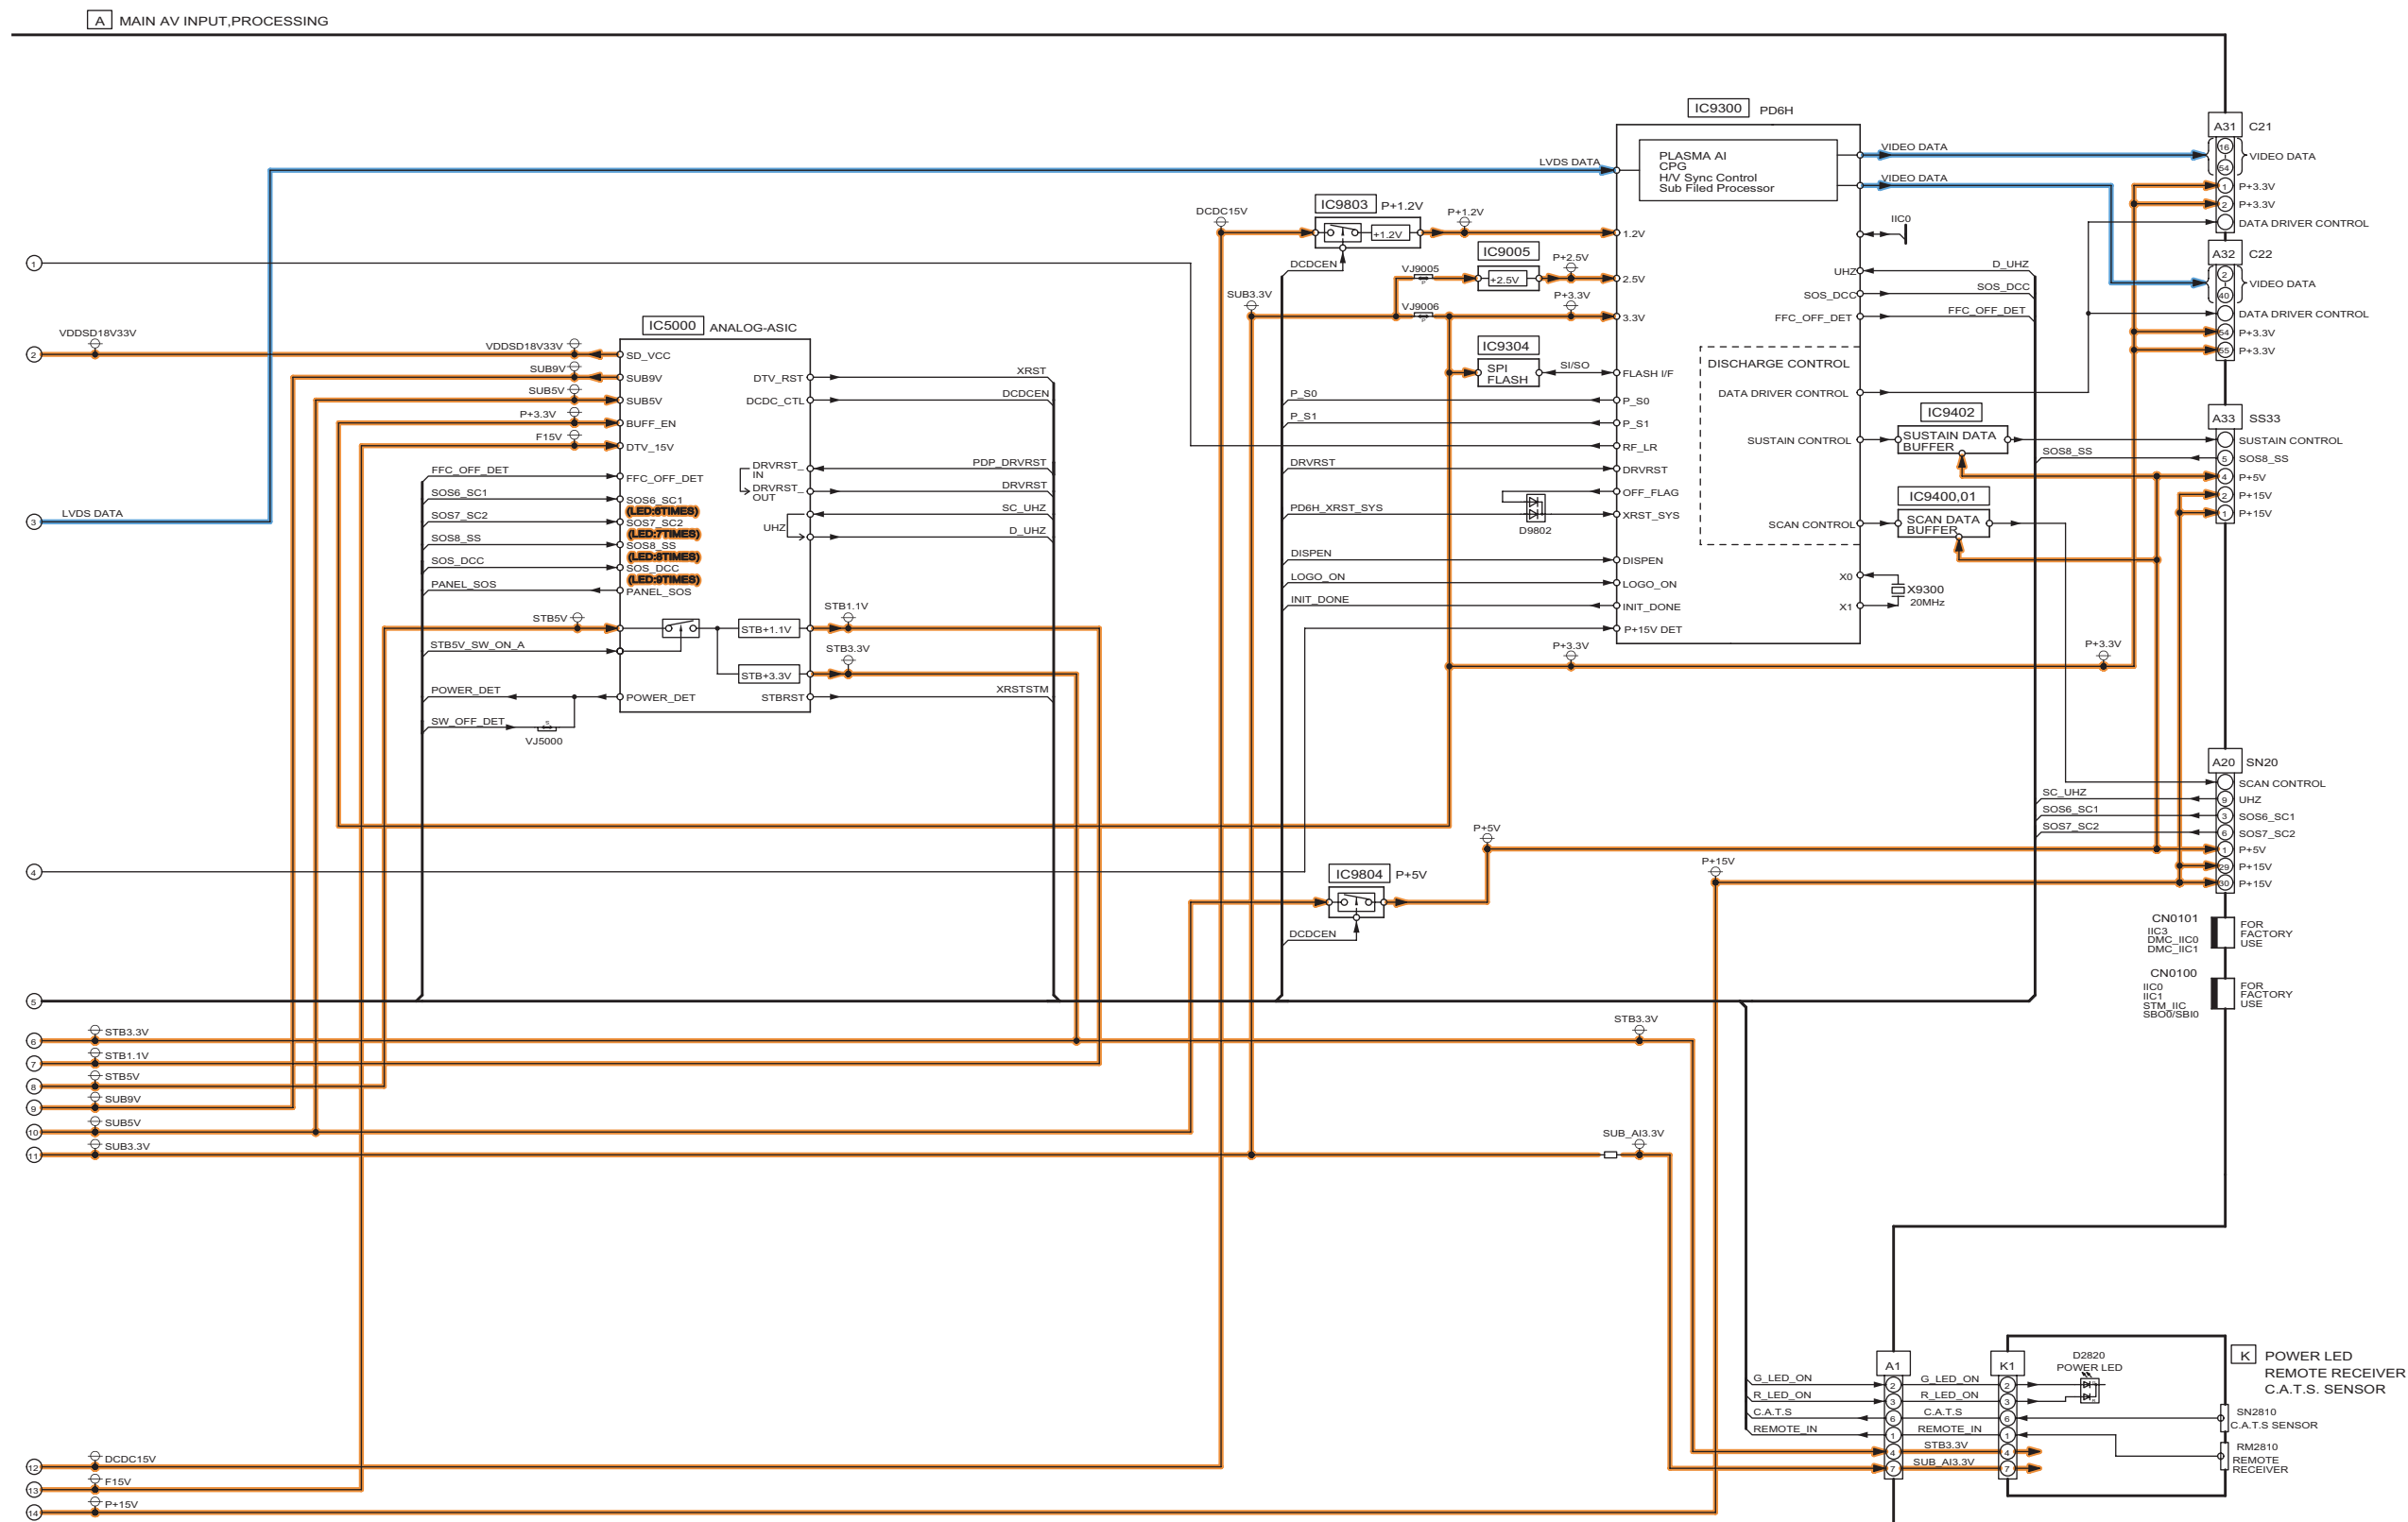

10.4. Block (3/4) Diagram

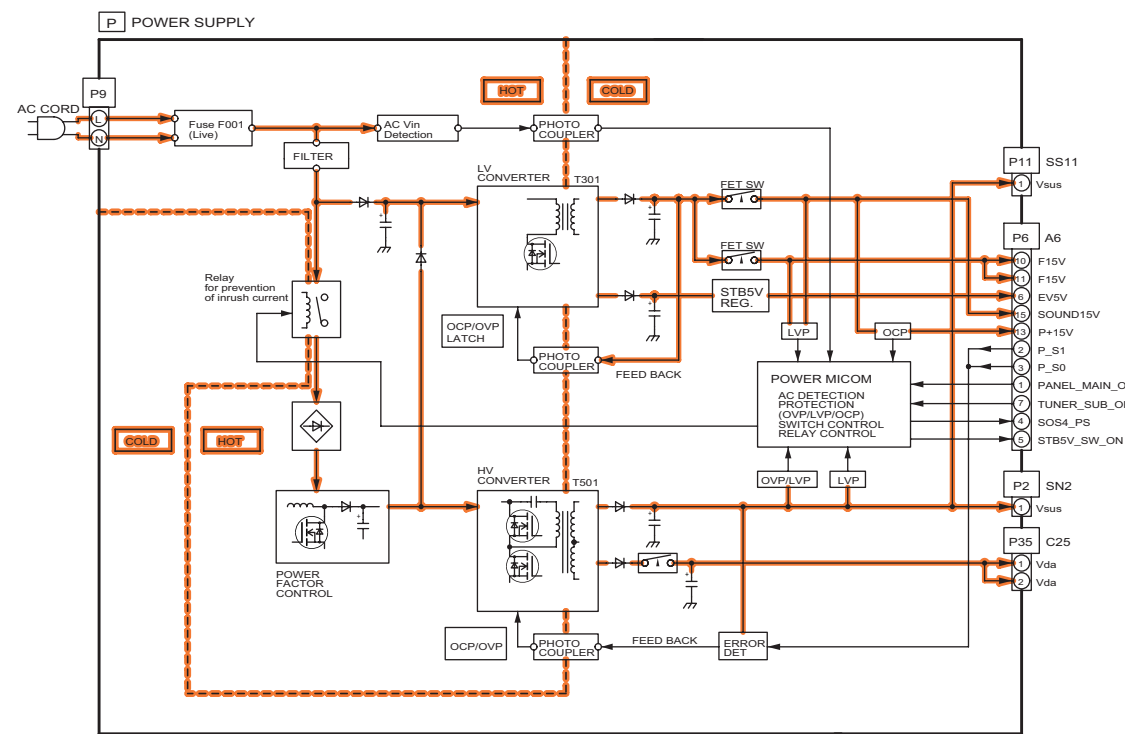

10.5. Block (4/4) Diagram

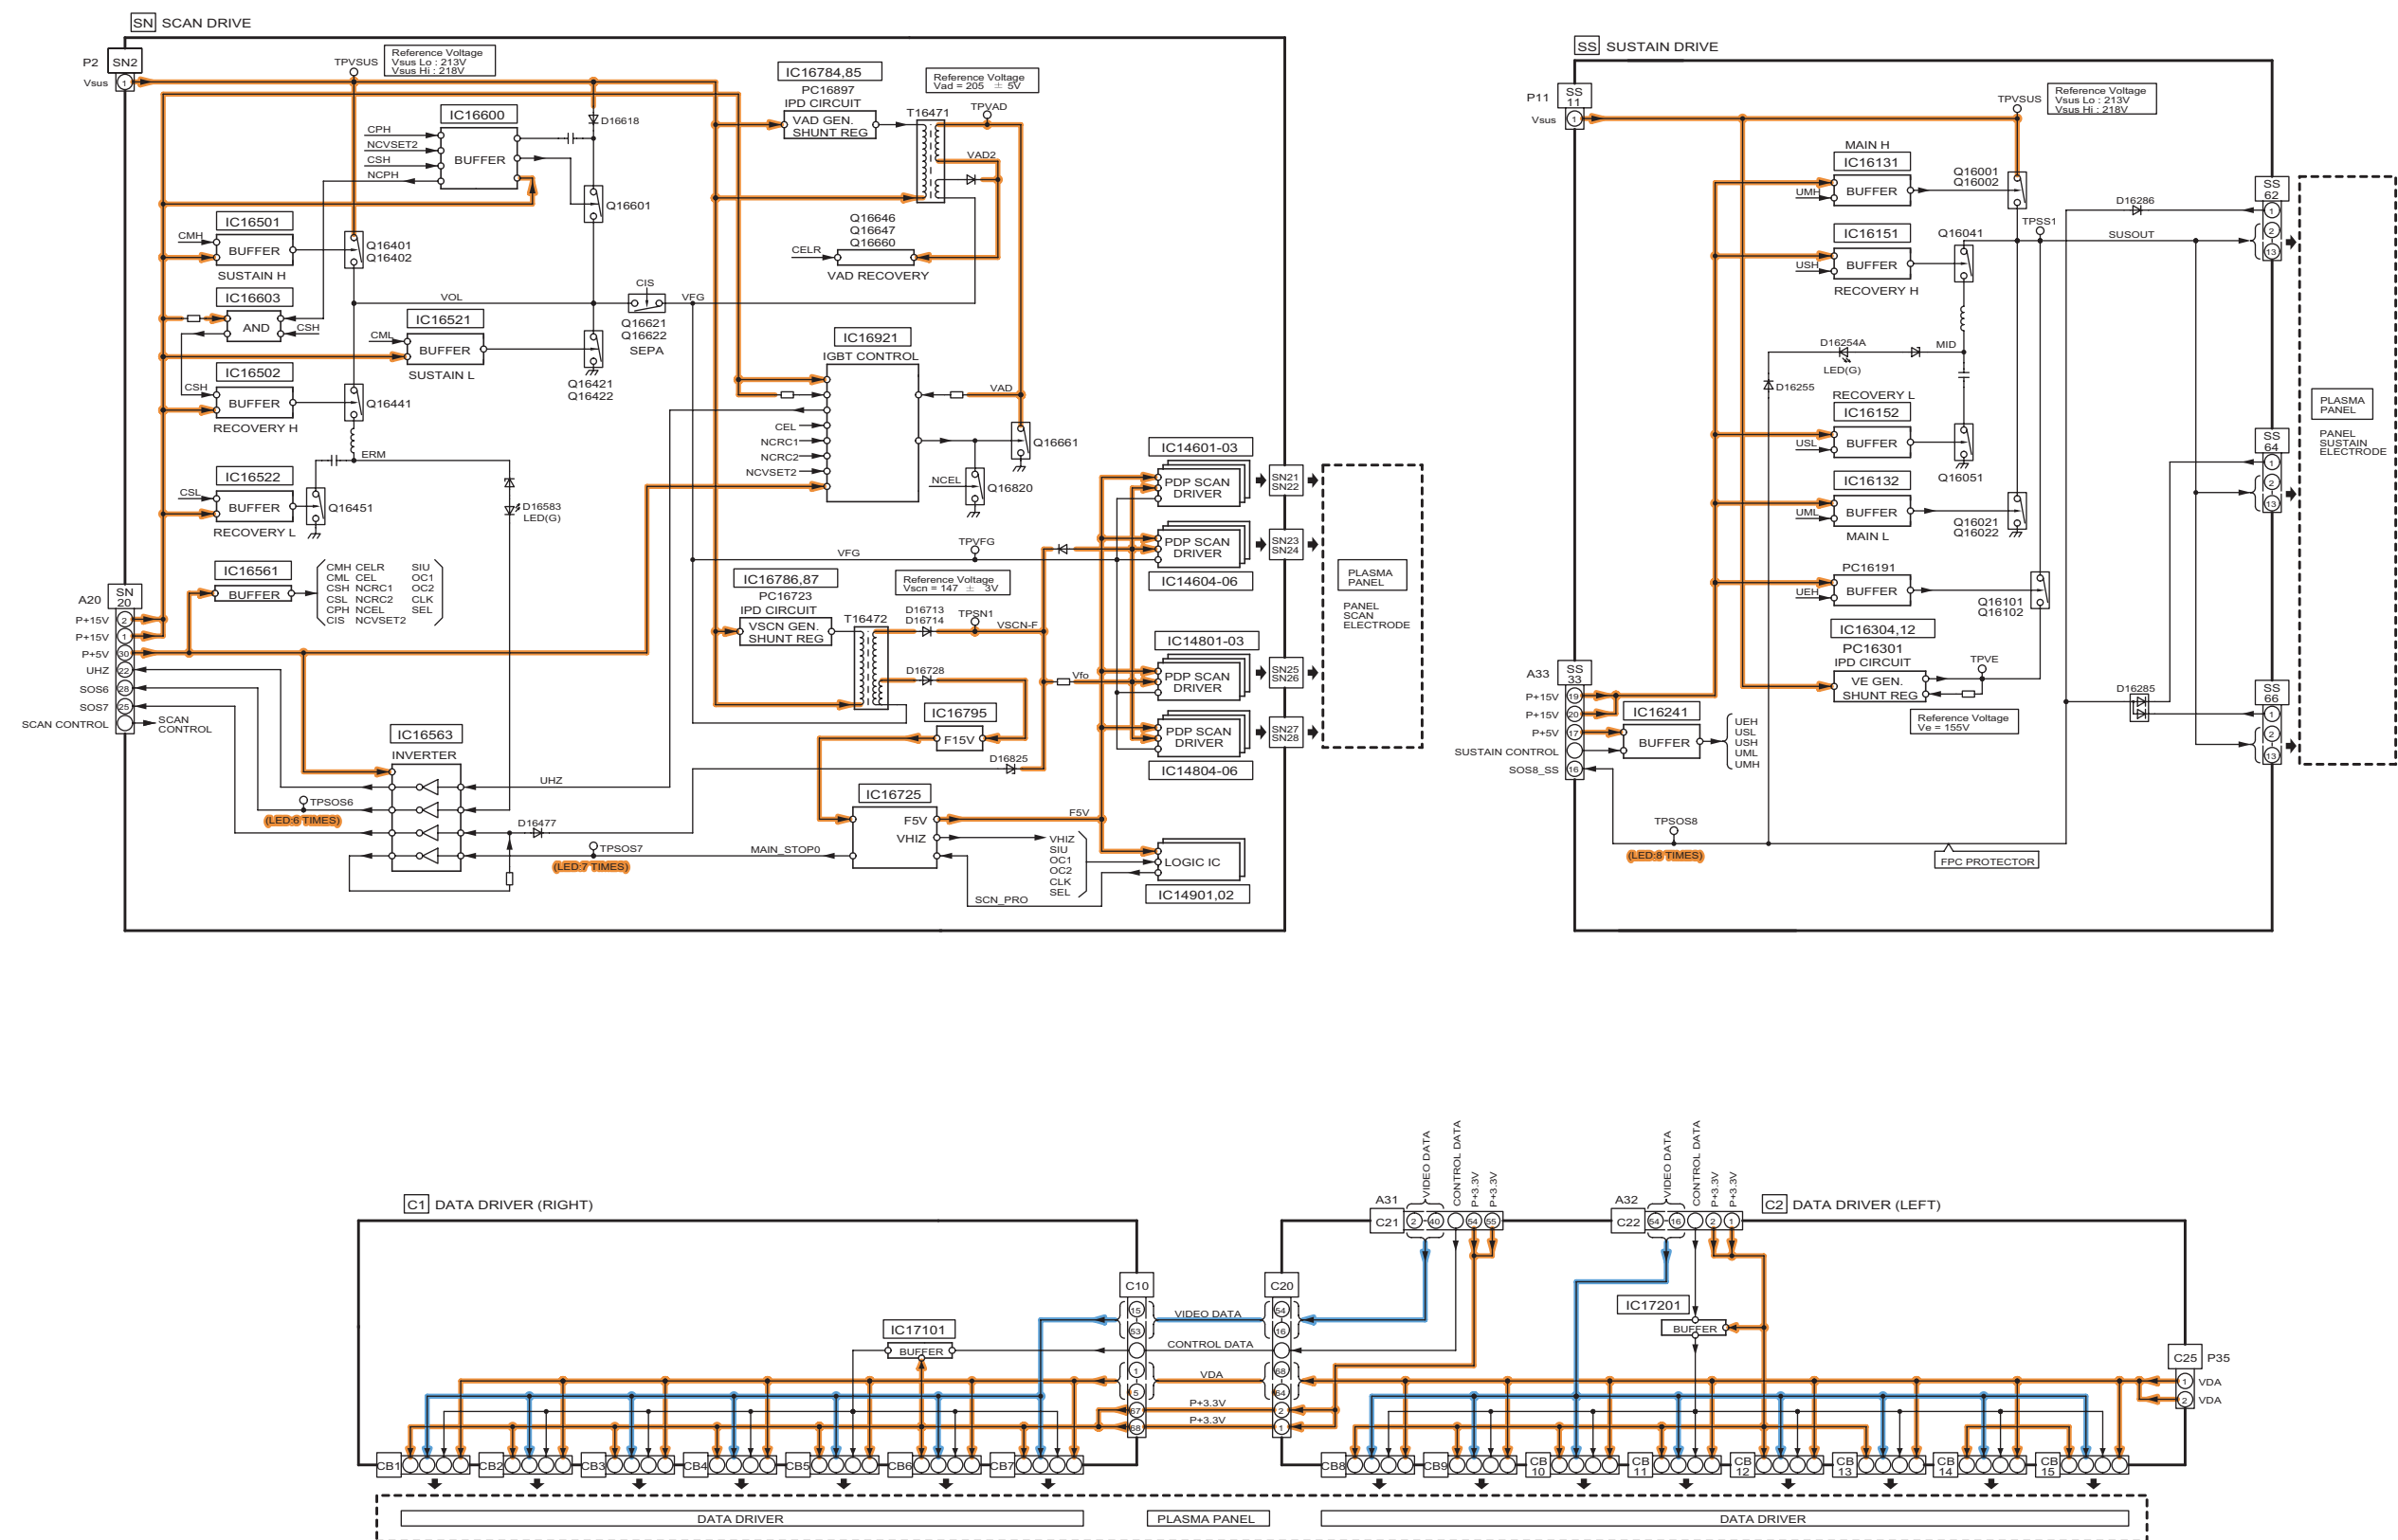

11 Wiring Connection Diagram

11.1. Caution statement.

Caution:

Please confirm that all flexible cables are assembled correctly.
Also make sure that they are locked in the connectors.
Verify by giving the flexible cables a very slight pull.

11.2. Wiring (1)

As Drawing Below:


1. Wire Connector :

- Connector : P6-A6 , P2-SN2 , P11-SS11 , P35-C25

2. Connector Flex :


- Connector : A20-SN20 , A31-C21/A32-C22 , A33-SS33 , C10-C20

— SCRATCH LINE

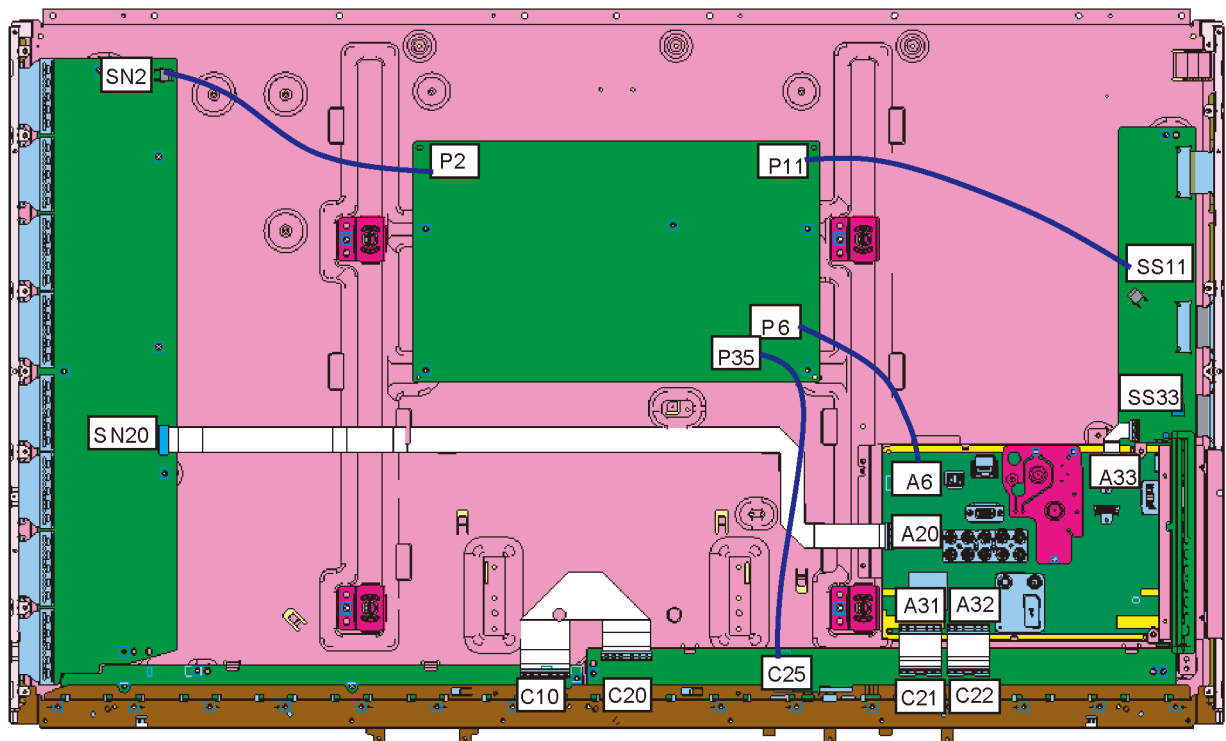

CONNECTOR No. and NAME	
A20	SN20
A31	C21
A32	C22
A33	SS33
A6	P6
P35	C25
C10	C20

11.3. Wiring (2)

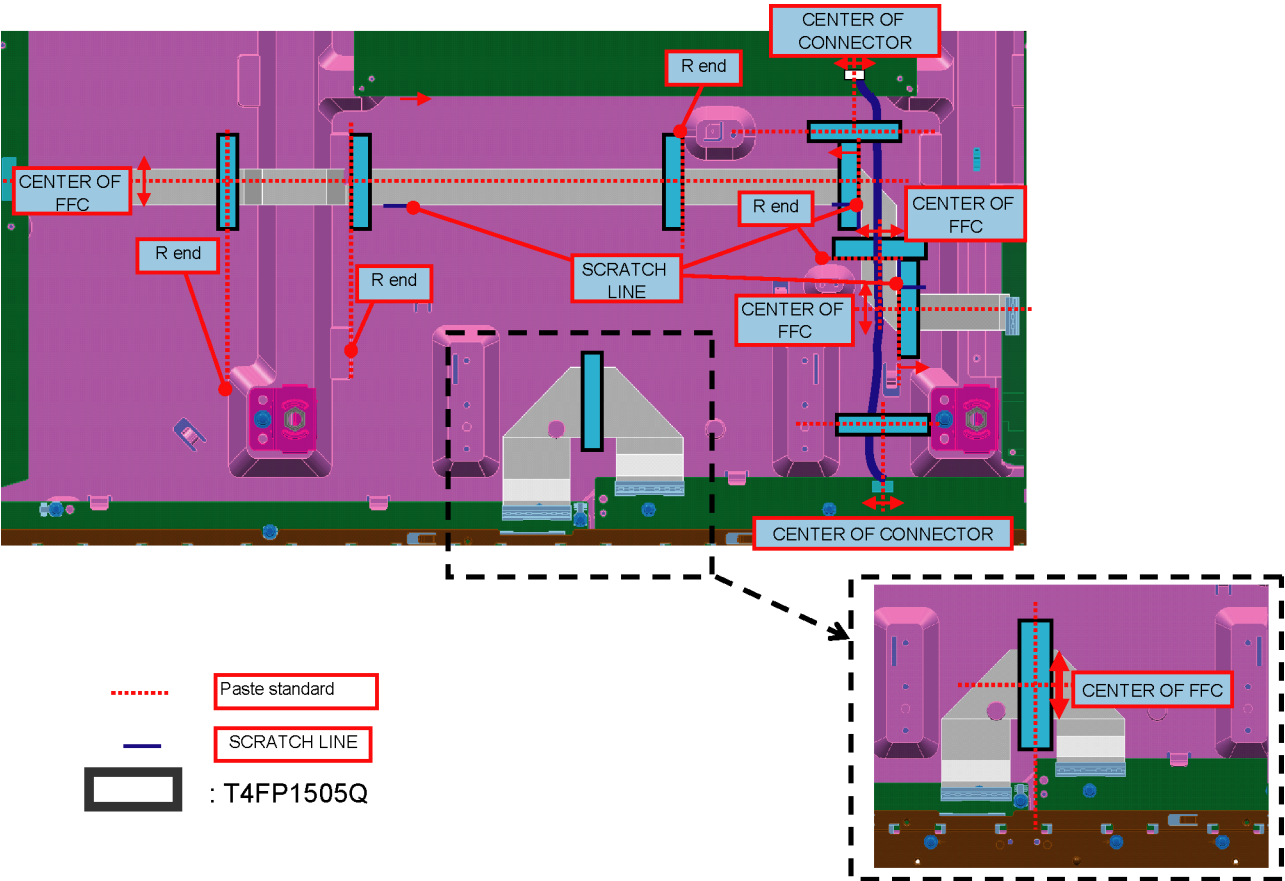


11.4. Wiring (3)

As drawing below :

- 1.Connector each wire.
2. Insert wire to hook of FE-chassis. Show the below.

Tape Specification/ Sticking Target/Scratch

- Scratch line
- Hook for fixing
- - - Paste standard

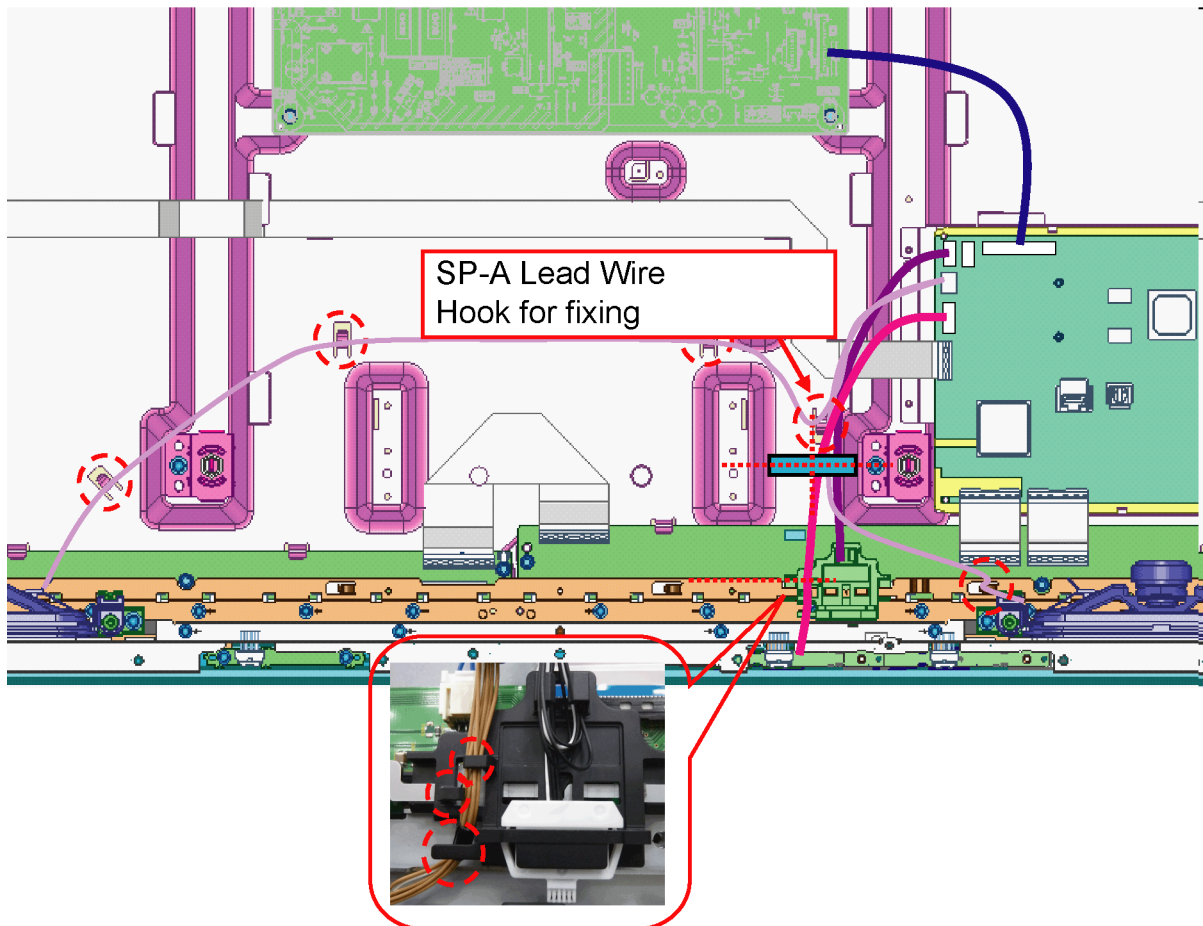

Notes:

1. Resistor
Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).
2. Capacitor
Unit of capacitance is μ F, unless otherwise noted.
3. Coil
Unit of inductance is H, unless otherwise noted.
4. Test Point
 : Test Point position
5. Earth Symbol
 : Chassis Earth (Cold)  : Line Earth (Hot)
6. Voltage Measurement
Voltage is measured by a DC voltmeter.
Conditions of the measurement are the following:
Power Source AC 110-240 V, 50/60Hz (P)
AC 220-240 V, 50/60Hz (Except P)
Receiving Signal Colour Bar signal (RF)
All customer's controls Maximum positions
7. When arrow mark () is found, connection is easily found from the direction of arrow.
8. Indicates the major signal flow. : Video  Audio 
9. This schematic diagram is the latest at the time of printing and subject to change without

Notice: Use the parts number indicated on the Replacement parts List.

Remarks:

1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.
The circuit is defined by HOT and COLD indications in the schematic diagram. Take the following precautions.
All circuits, except the Power Circuit, are cold.
Precautions
 - a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
 - b. Do not short- circuit the hot and cold circuits or a fuse may blow and parts may break.
 - c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously or a fuse may blow.
Connect the earth of instruments to the earth connection of the circuit being measured.
 - d. Make sure to disconnect the power plug before removing the chassis.

Model No. : TH-P42UT50D/M/P/S/Z Replacement Parts List Note

Note: All parts except parts mentioned [PAVCTH] in the Remarks column are supplied by AVC-CSPC.
Parts mentioned [PAVCTH] are supplied by PAVCTH.

Notice: Be sure to make your orders of replacement parts according to this list.

RTL (Retention Time Limited)

Note: The marking (RTL) indicates that the Retention Time is Limited for this item.
After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention.
After the end of this period, the assembly will no longer be available.

Abbreviation of part name and description

1. Resistor

Example:

ERD25TJ104 C 100KOHM, J, 1/4W
 Type Allowance


2. Capacitor

Example:


ECKF1H103ZF C 0.01UF, Z, 50V
 Type Allowance

Type	Allowance
C : Carbon	F : $\pm 1\%$
F : Fuse	G : $\pm 2\%$
M : Metal Oxide	J : $\pm 5\%$
Metal Film	K : $\pm 10\%$
S : Solid	M : $\pm 20\%$
W : Wire Wound	

Type	Allowance
C : Ceramic	C : $\pm 0.25\text{pF}$
E : Electrolytic	D : $\pm 0.5\text{pF}$
P : Polyester	F : $\pm 1\text{pF}$
Polyprop	G : $\pm 3\text{pF}$
lene	J : $\pm 5\text{pF}$
T : Tantalum	K : $\pm 10\text{pF}$
	L : $\pm 15\text{pF}$
	M : $\pm 20\text{pF}$
	P : +100%, -0%
	Z : +80%, -20%

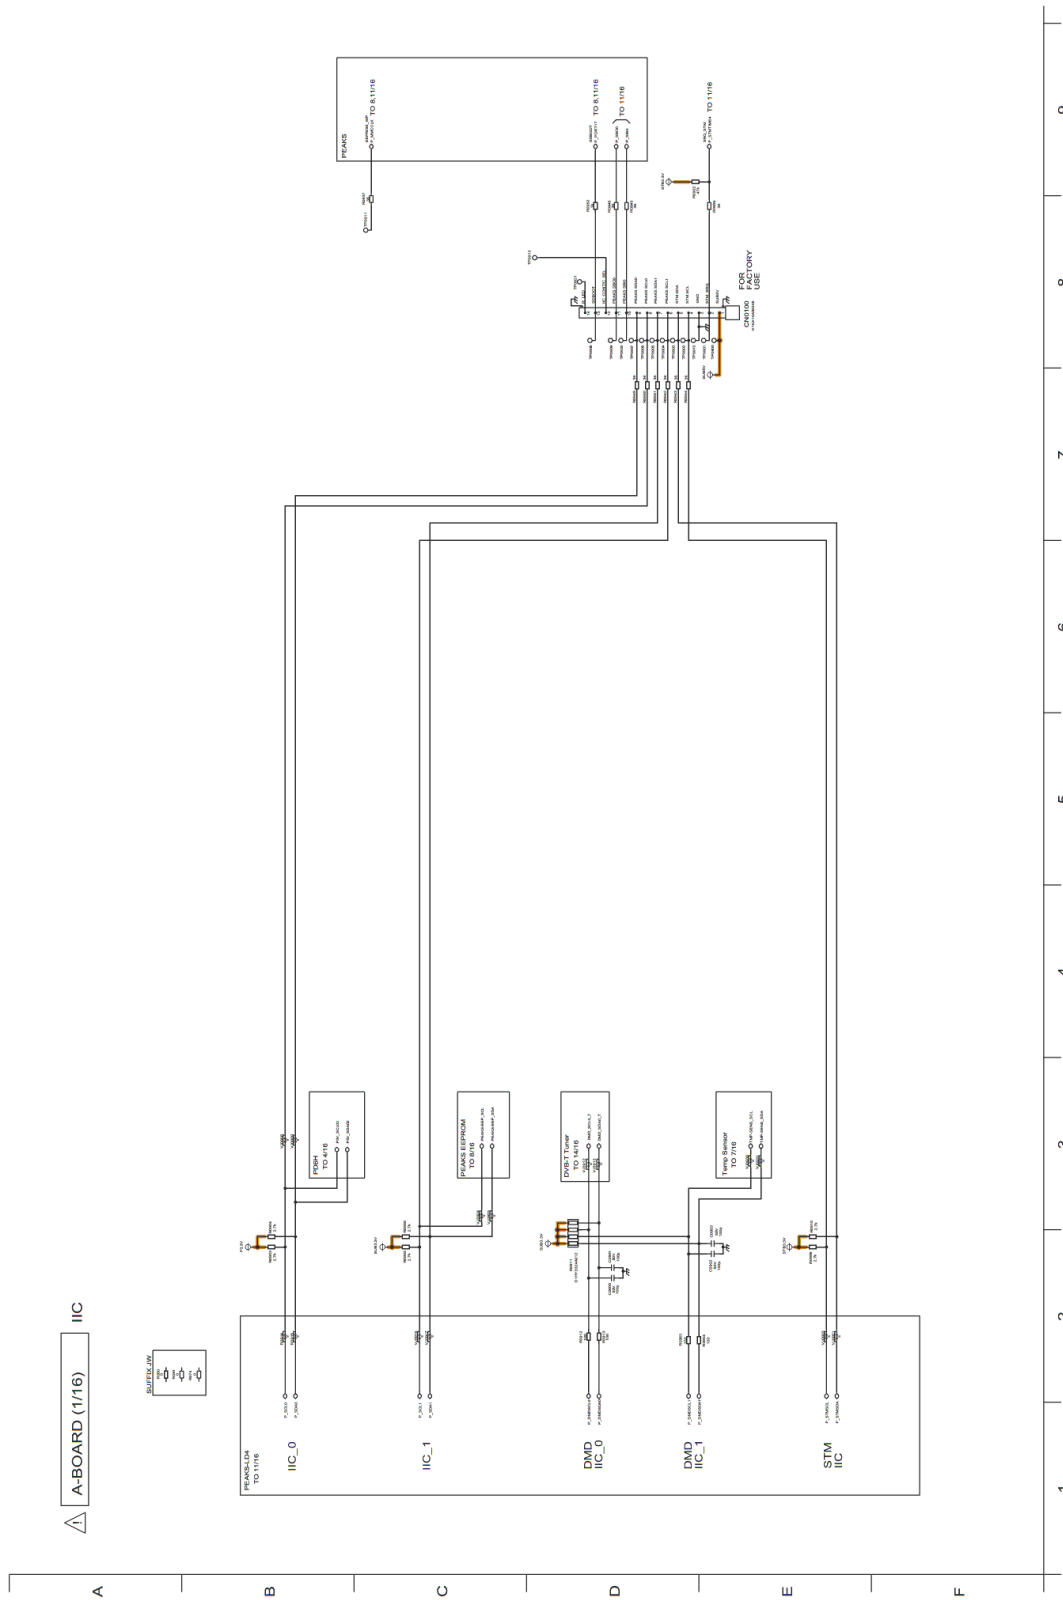



△ A-BOARD (3/16) AUDIO AMP

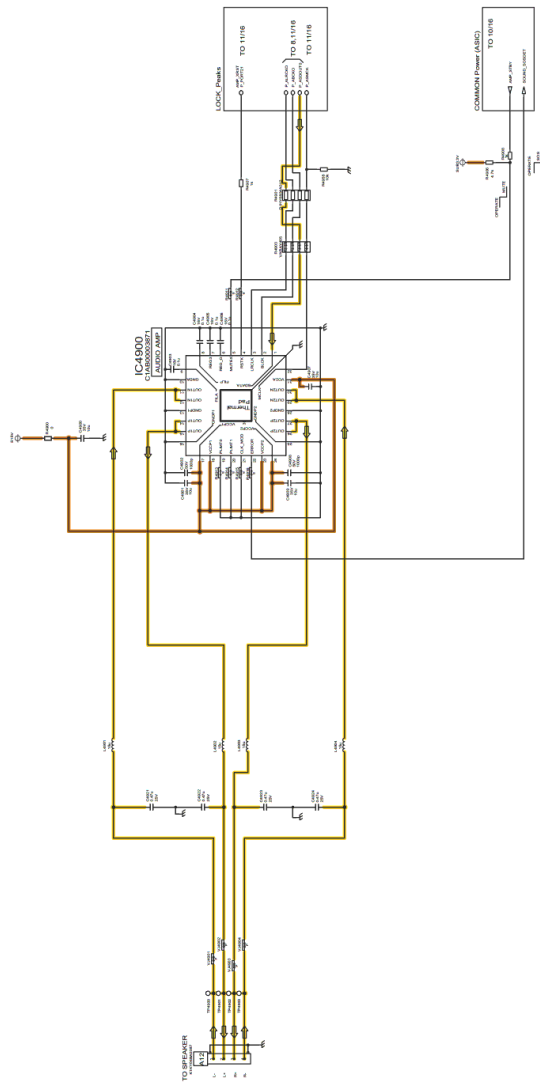


19 20 21 22 23 24 25 26 27


A-BOARD (4/16) PD6H

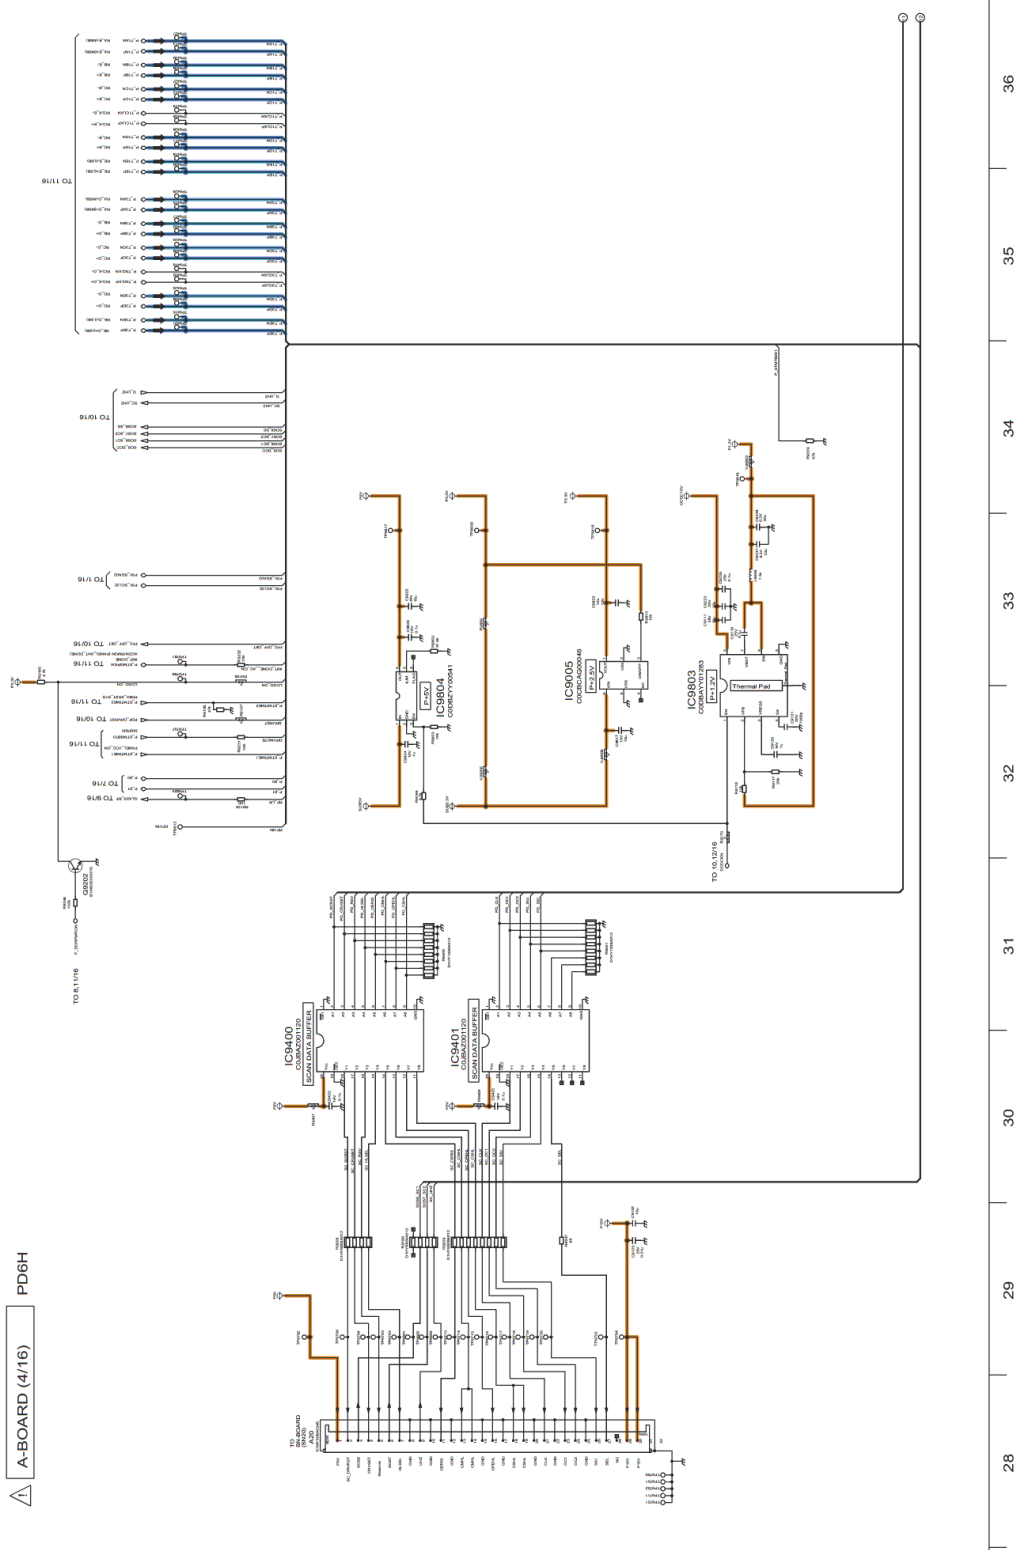

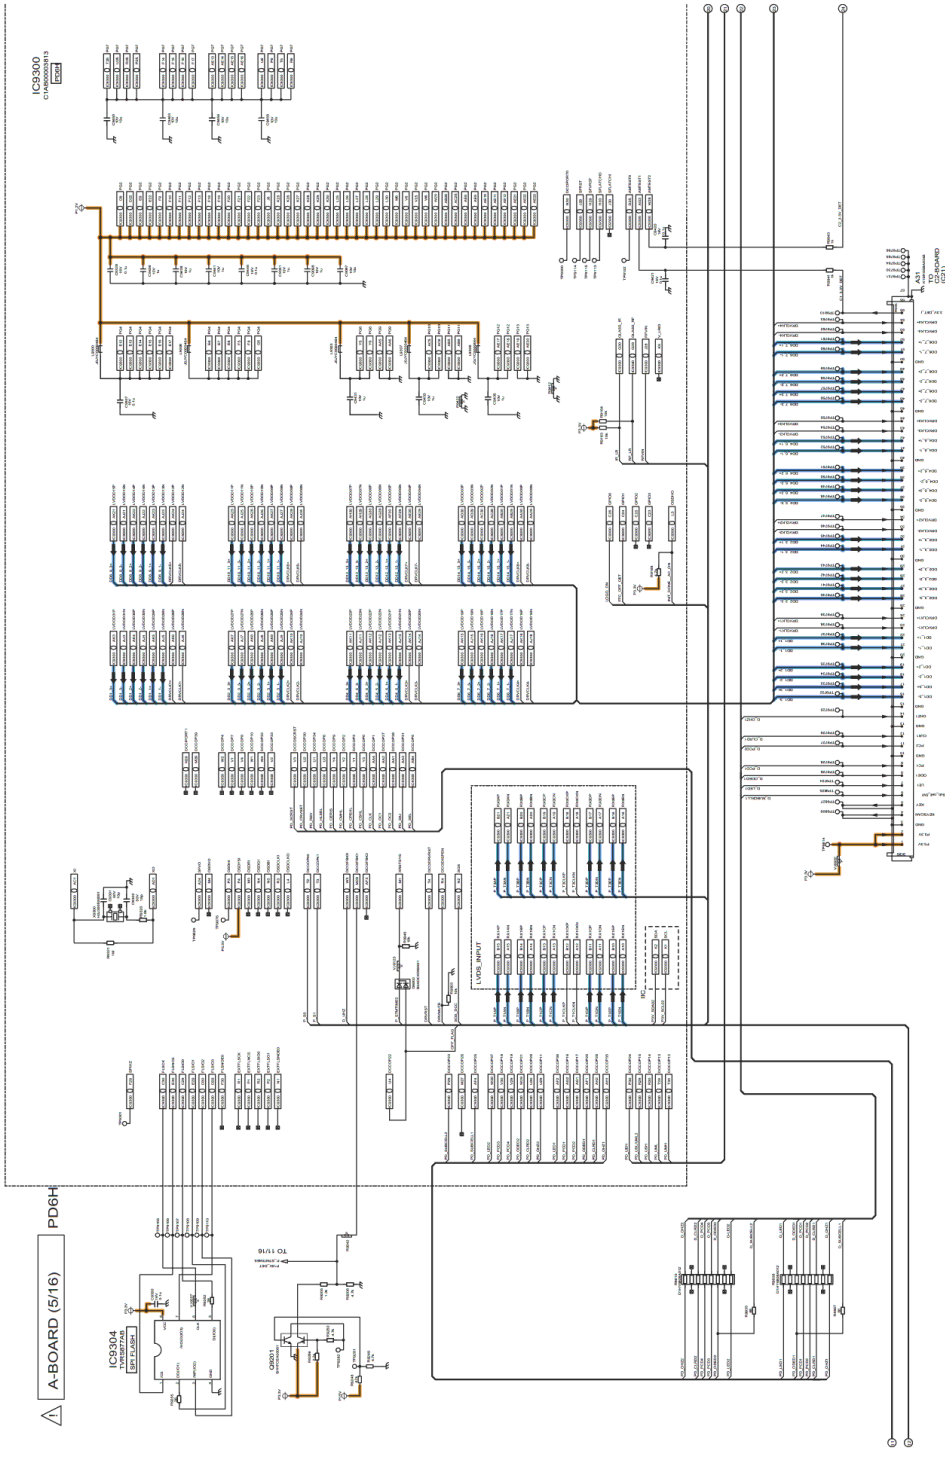

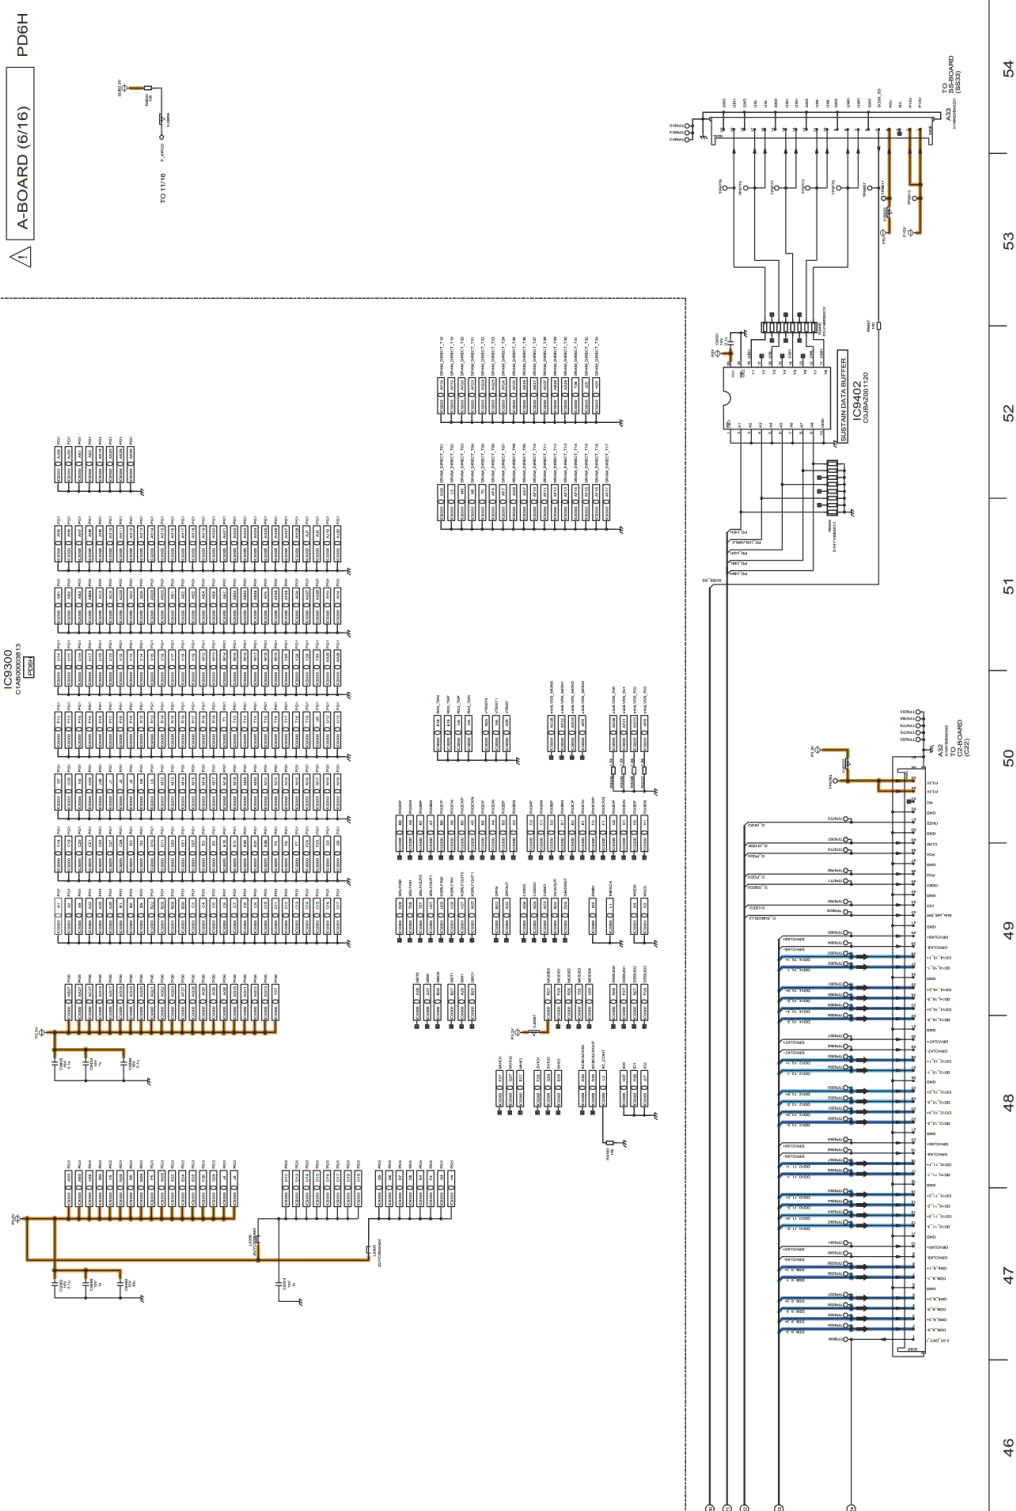

△ A-BOARD (7/16) CONNECTOR

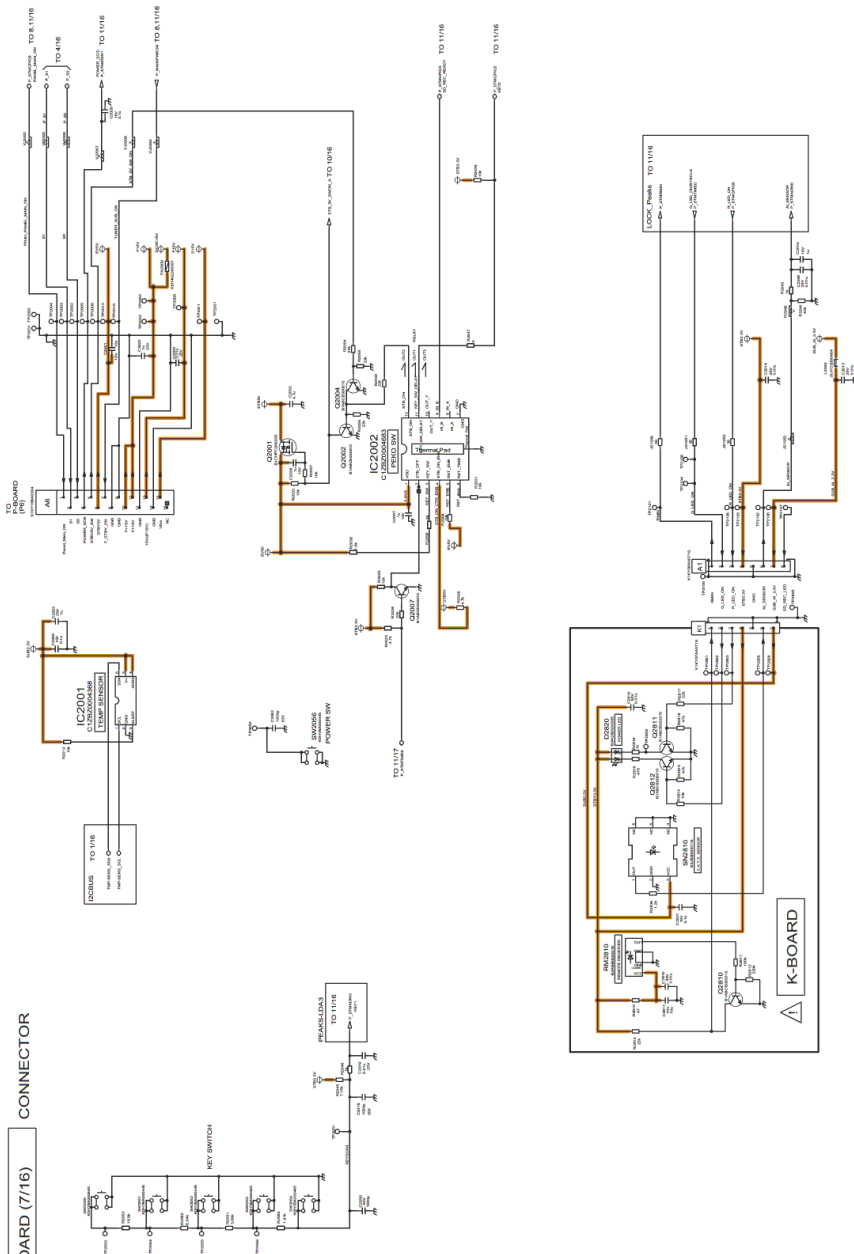

63

62

61

60


59

58


57


56

55

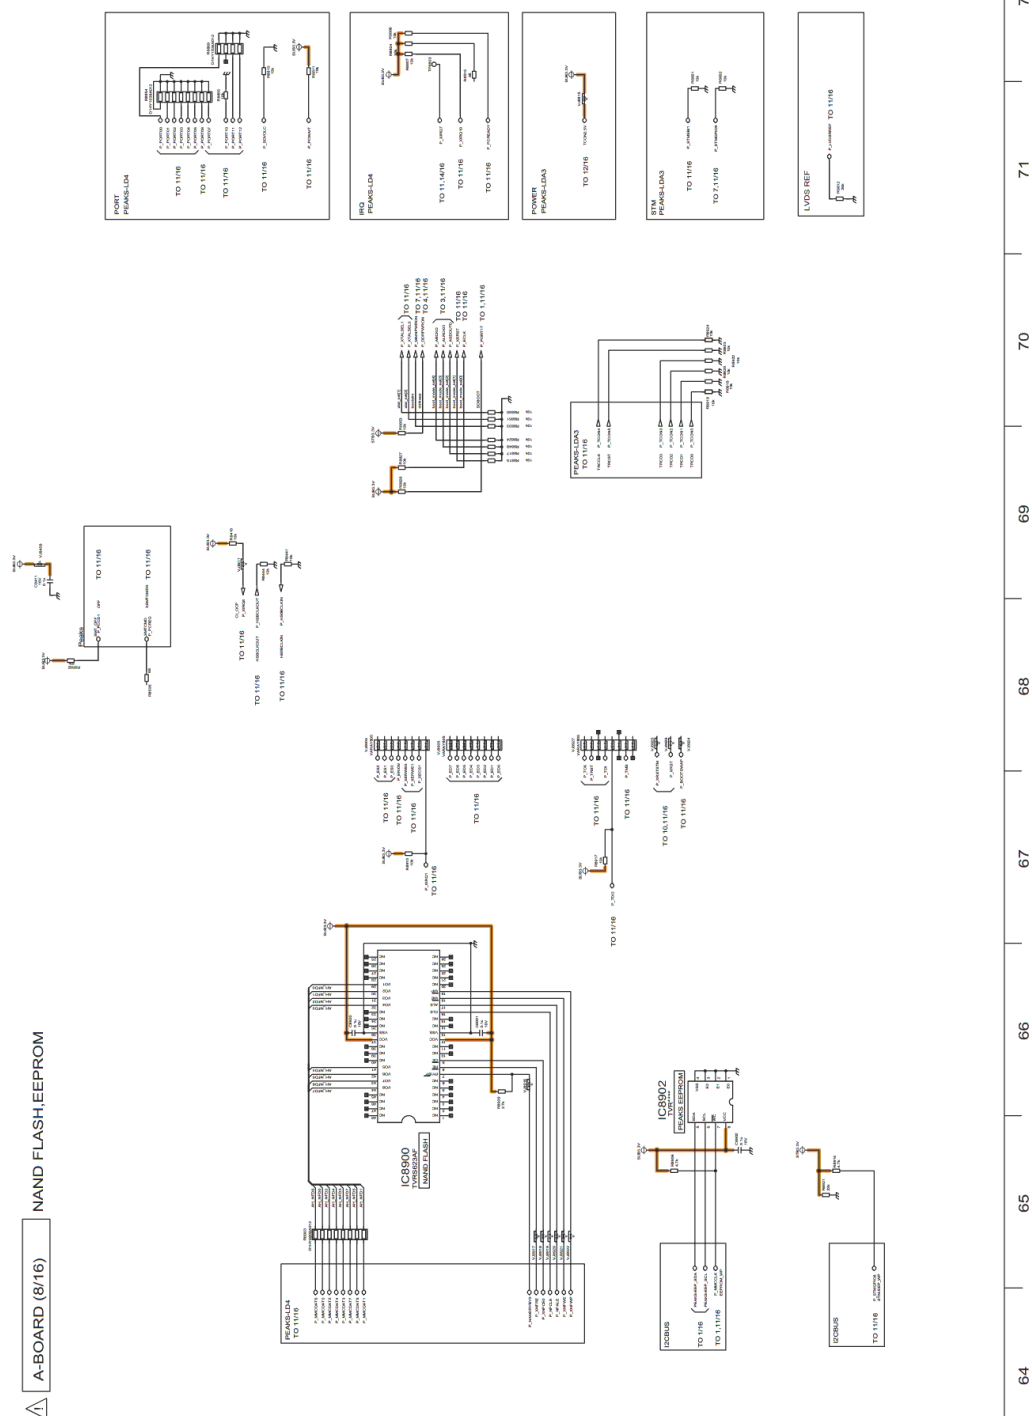


△ A-BOARD (9/16) SD SLOT,ETHERPHY,USB,BLUETOOTH


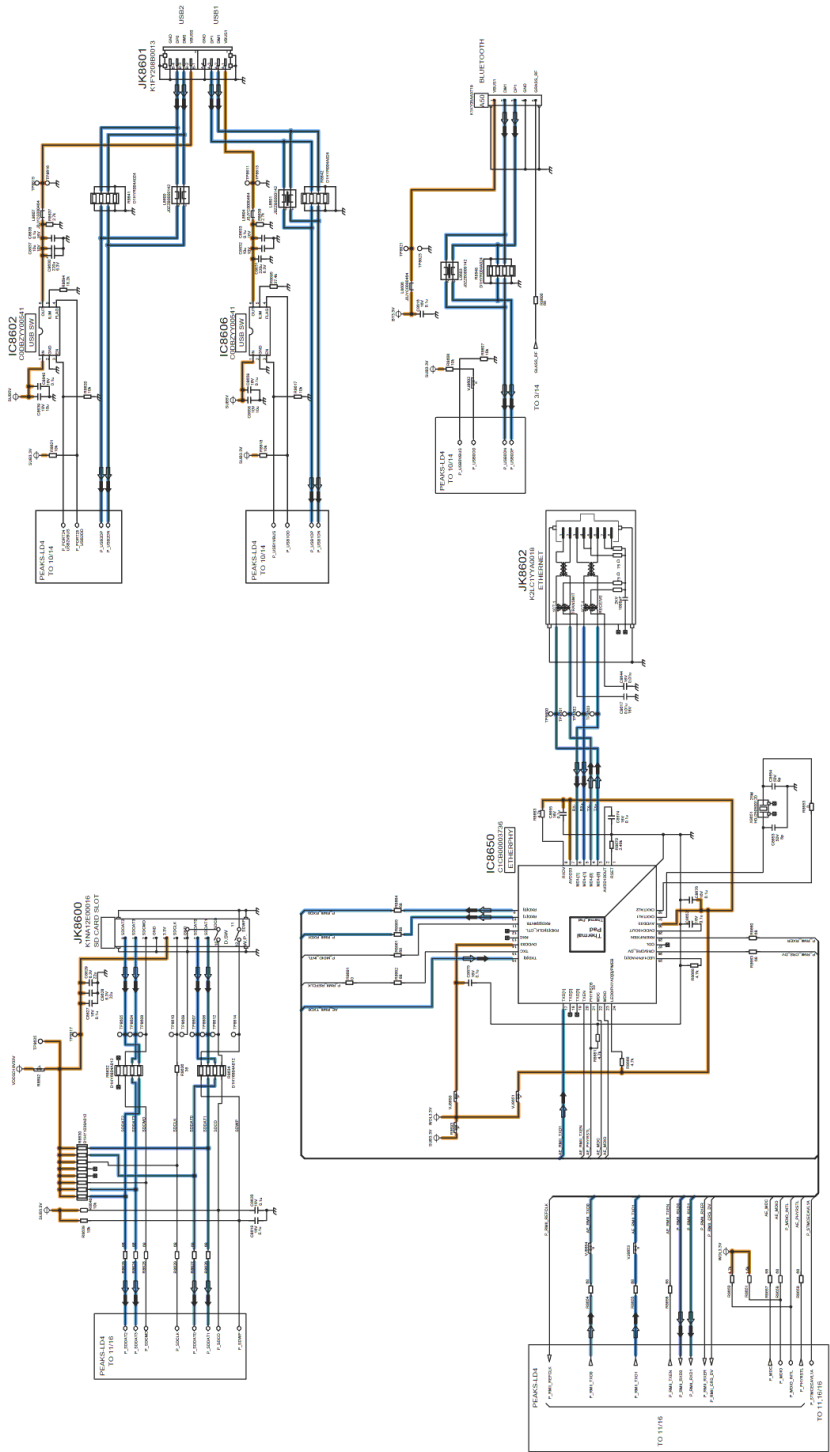


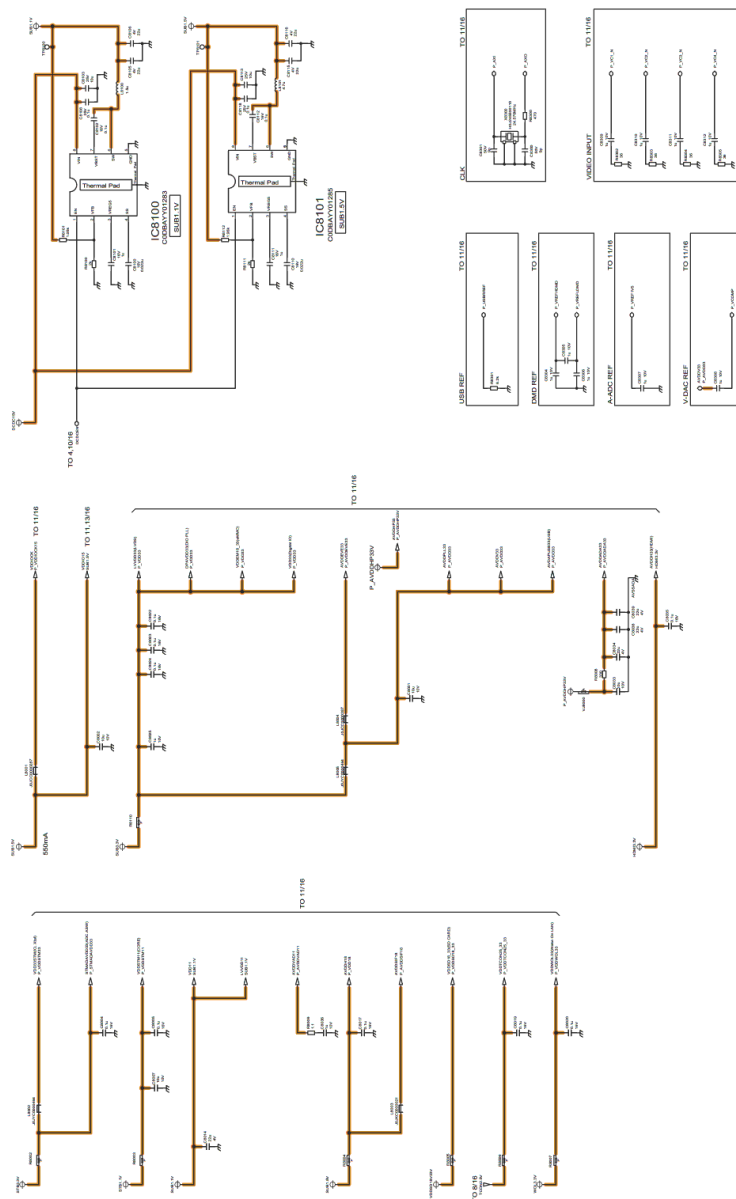


△ A-BOARD (13/16) DDR3

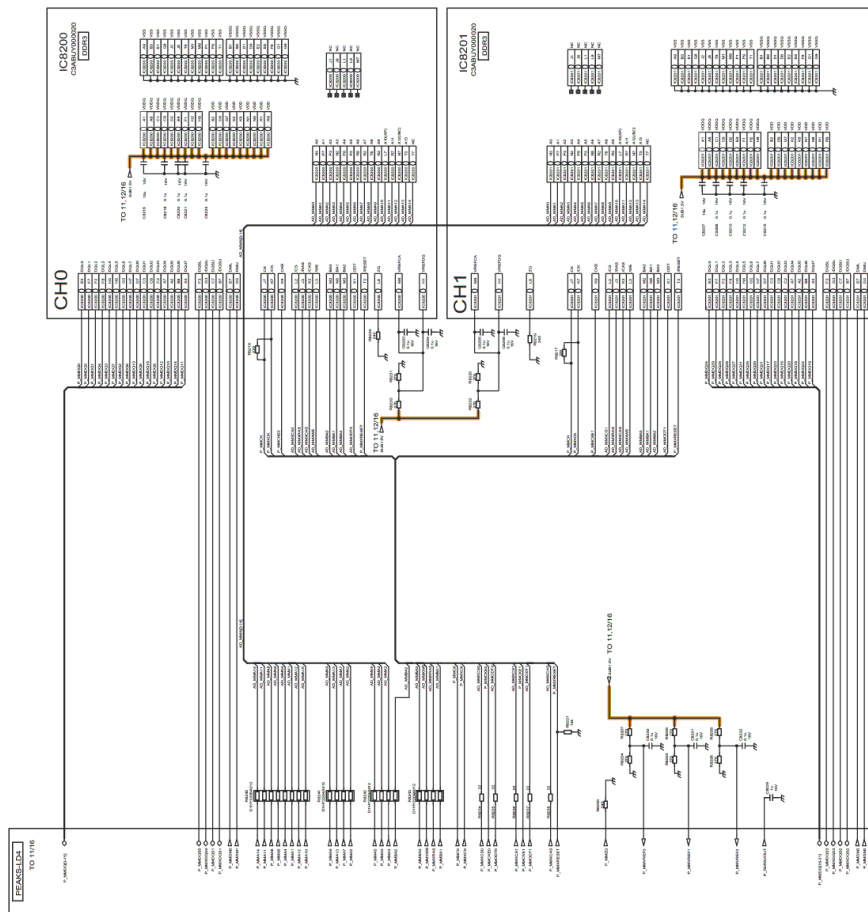



109 110 111 112 113 114 115 116 117

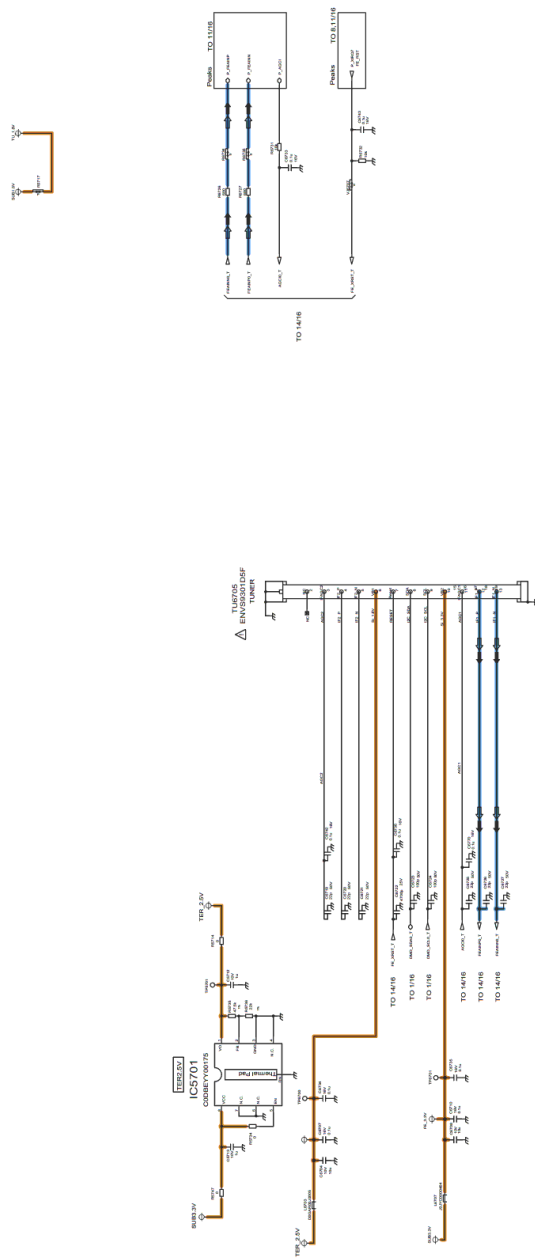


△ A-BOARD (15/16) TERMINAL

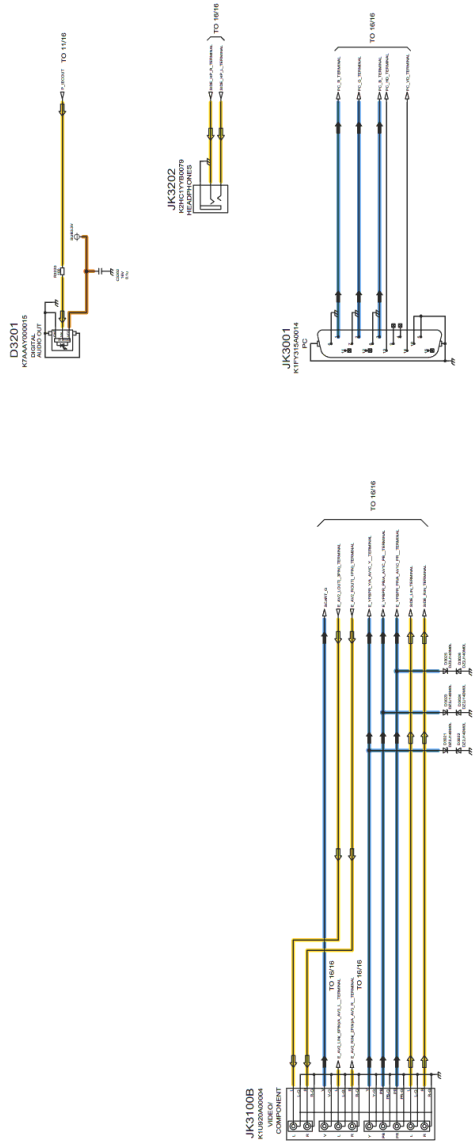


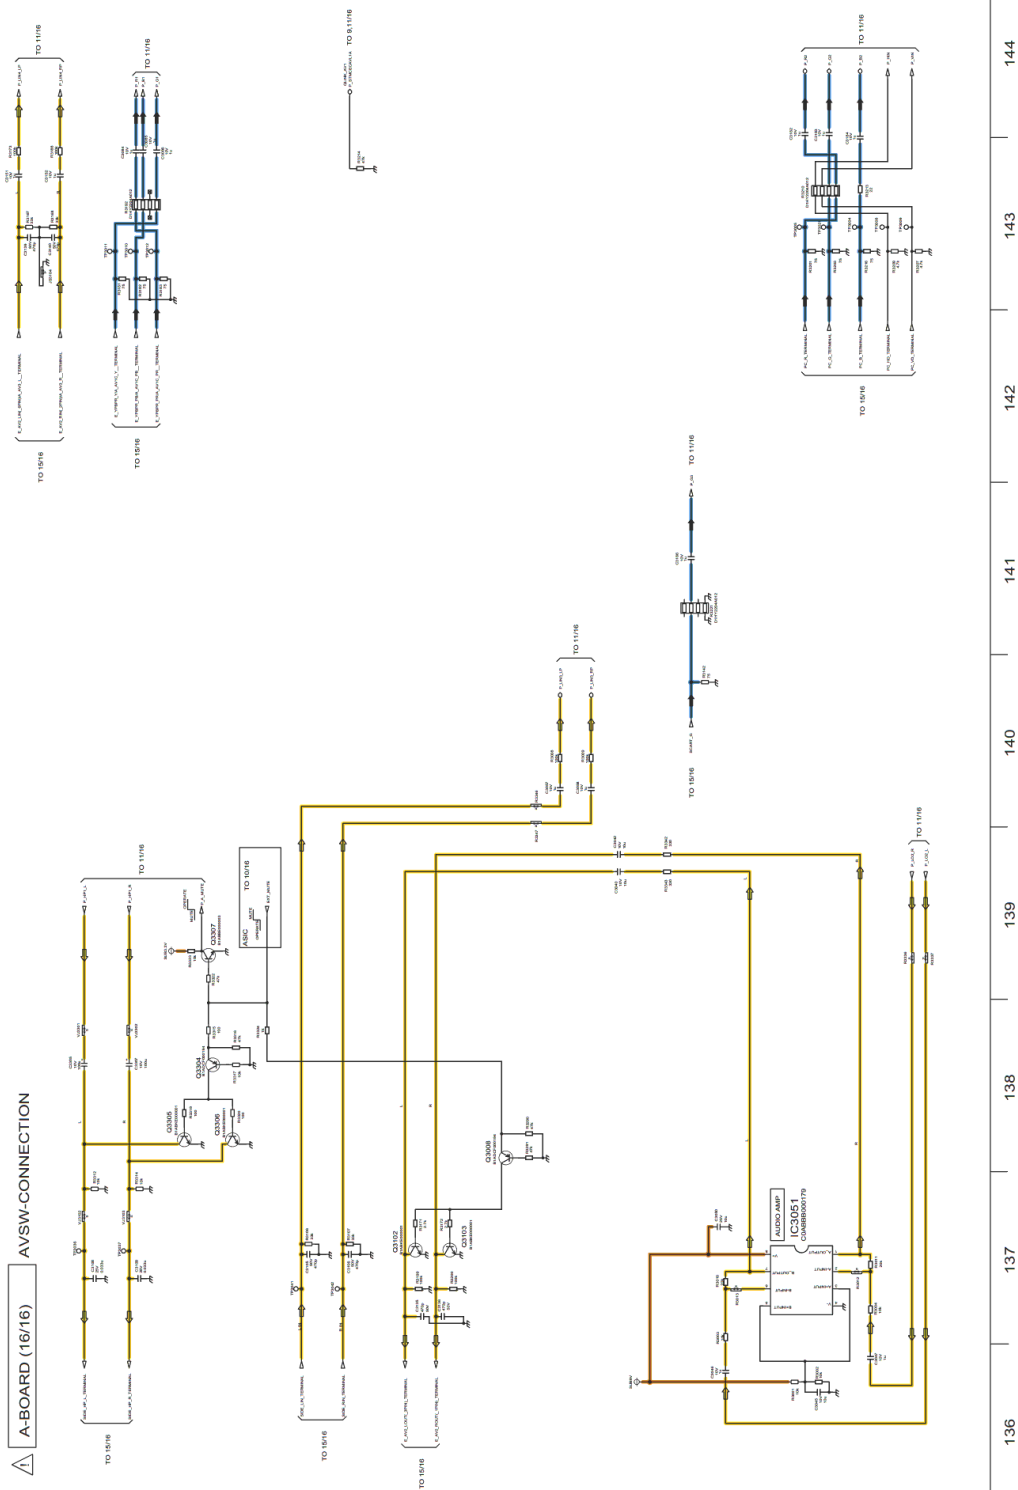

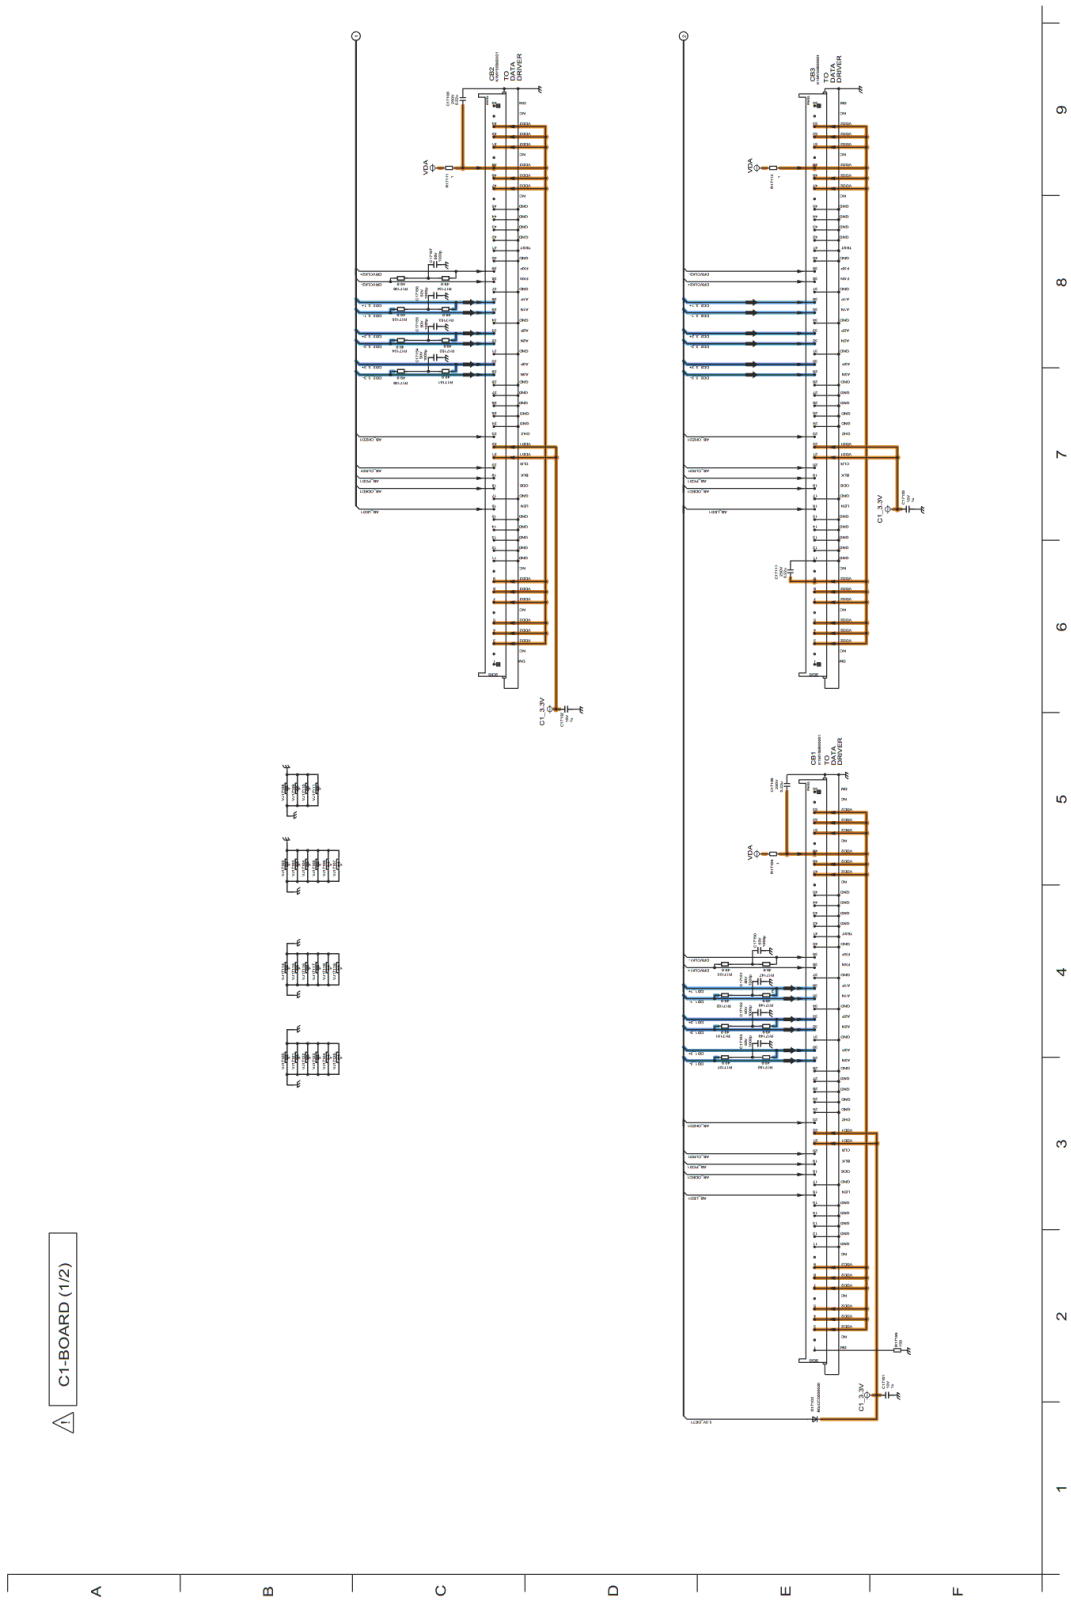



C1-BOARD (2/2)

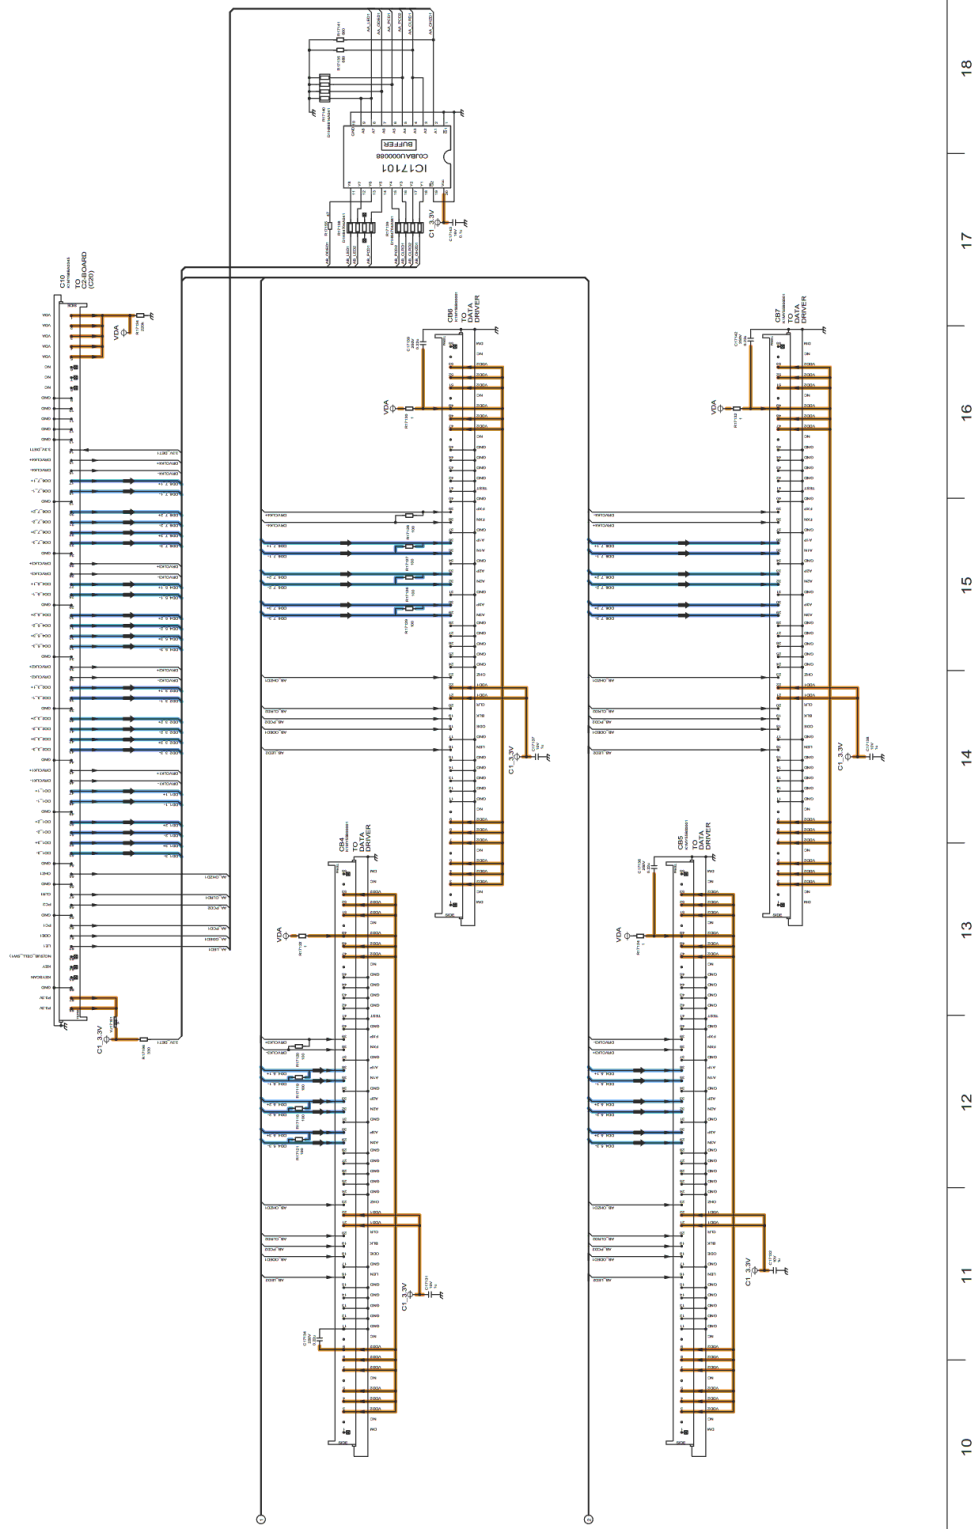


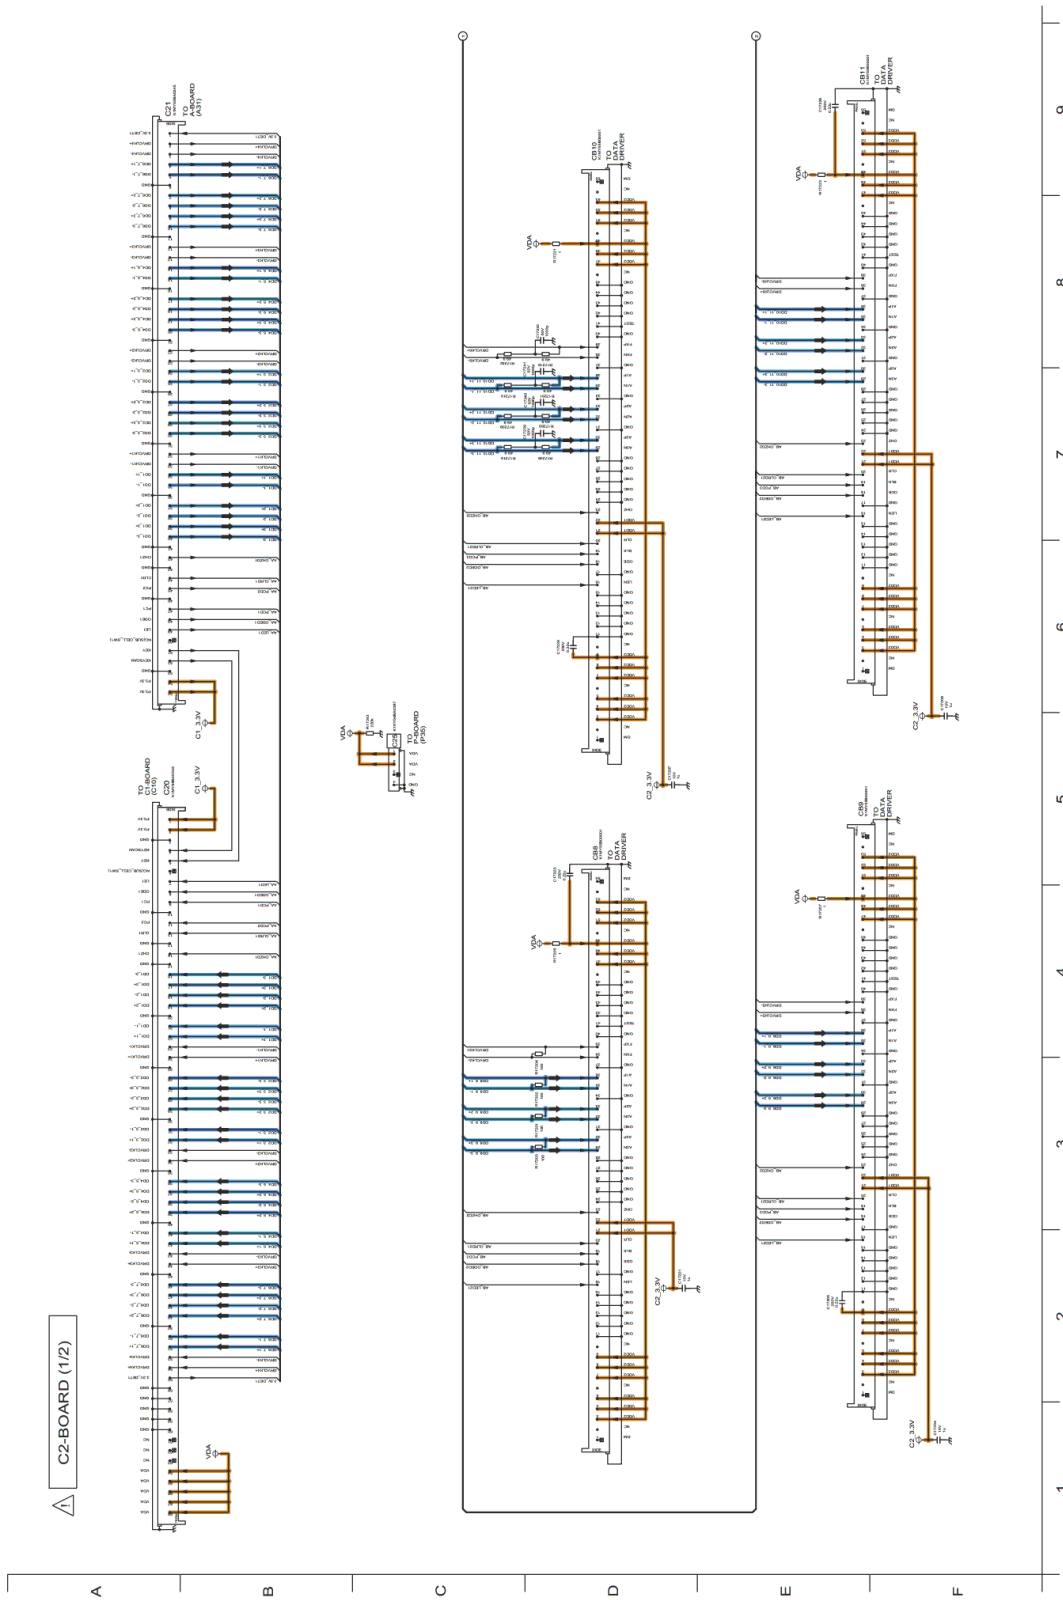



C2-BOARD (2/2)

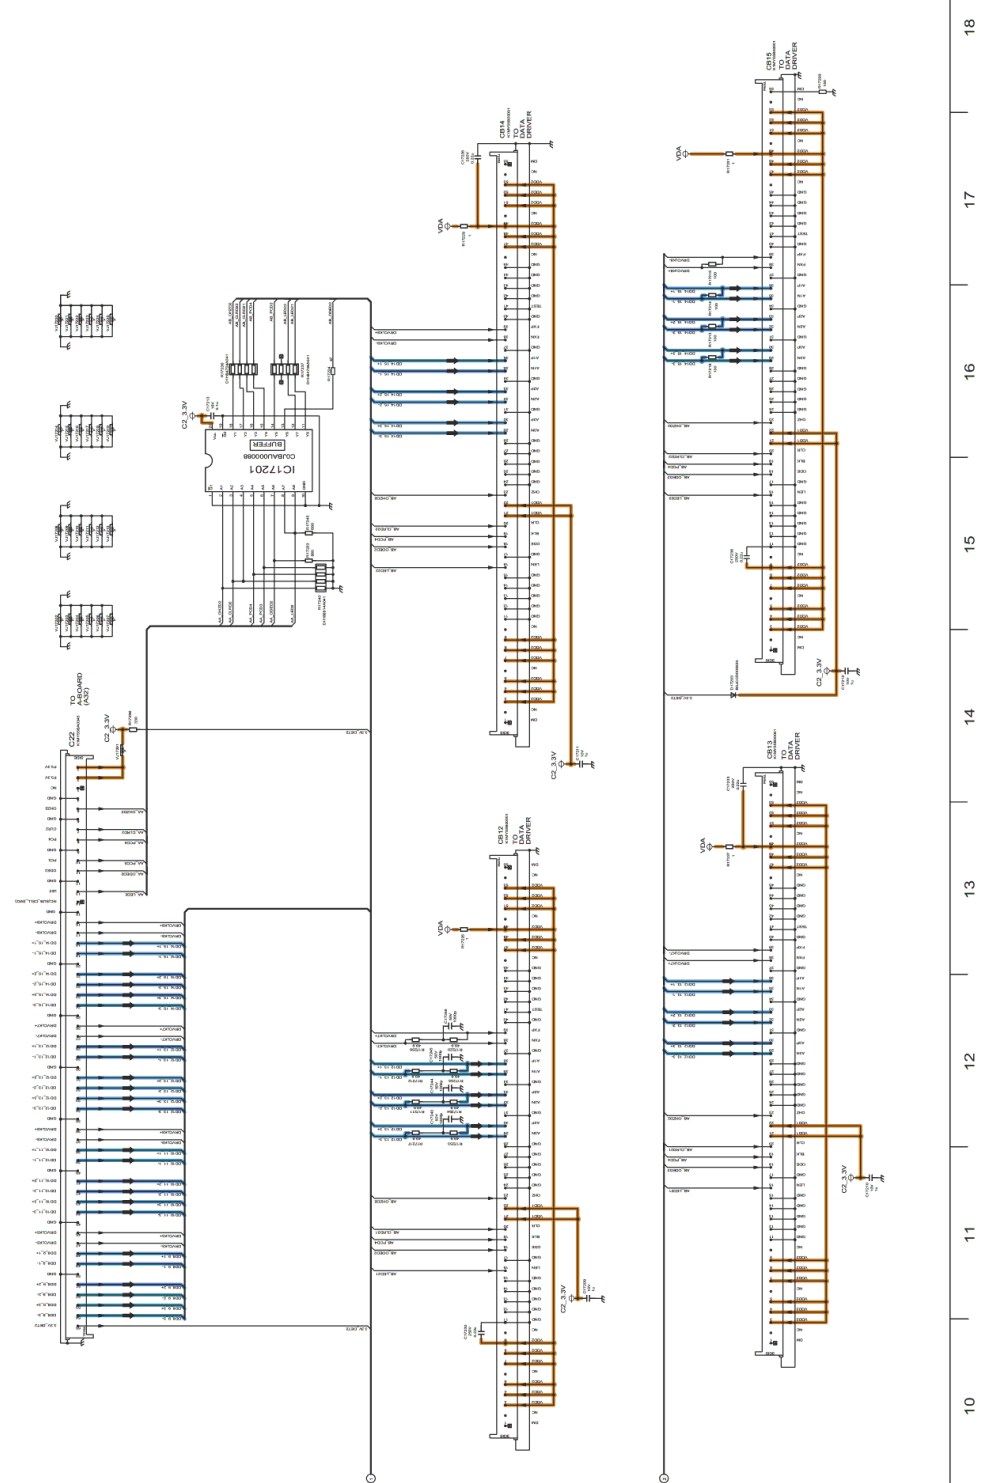


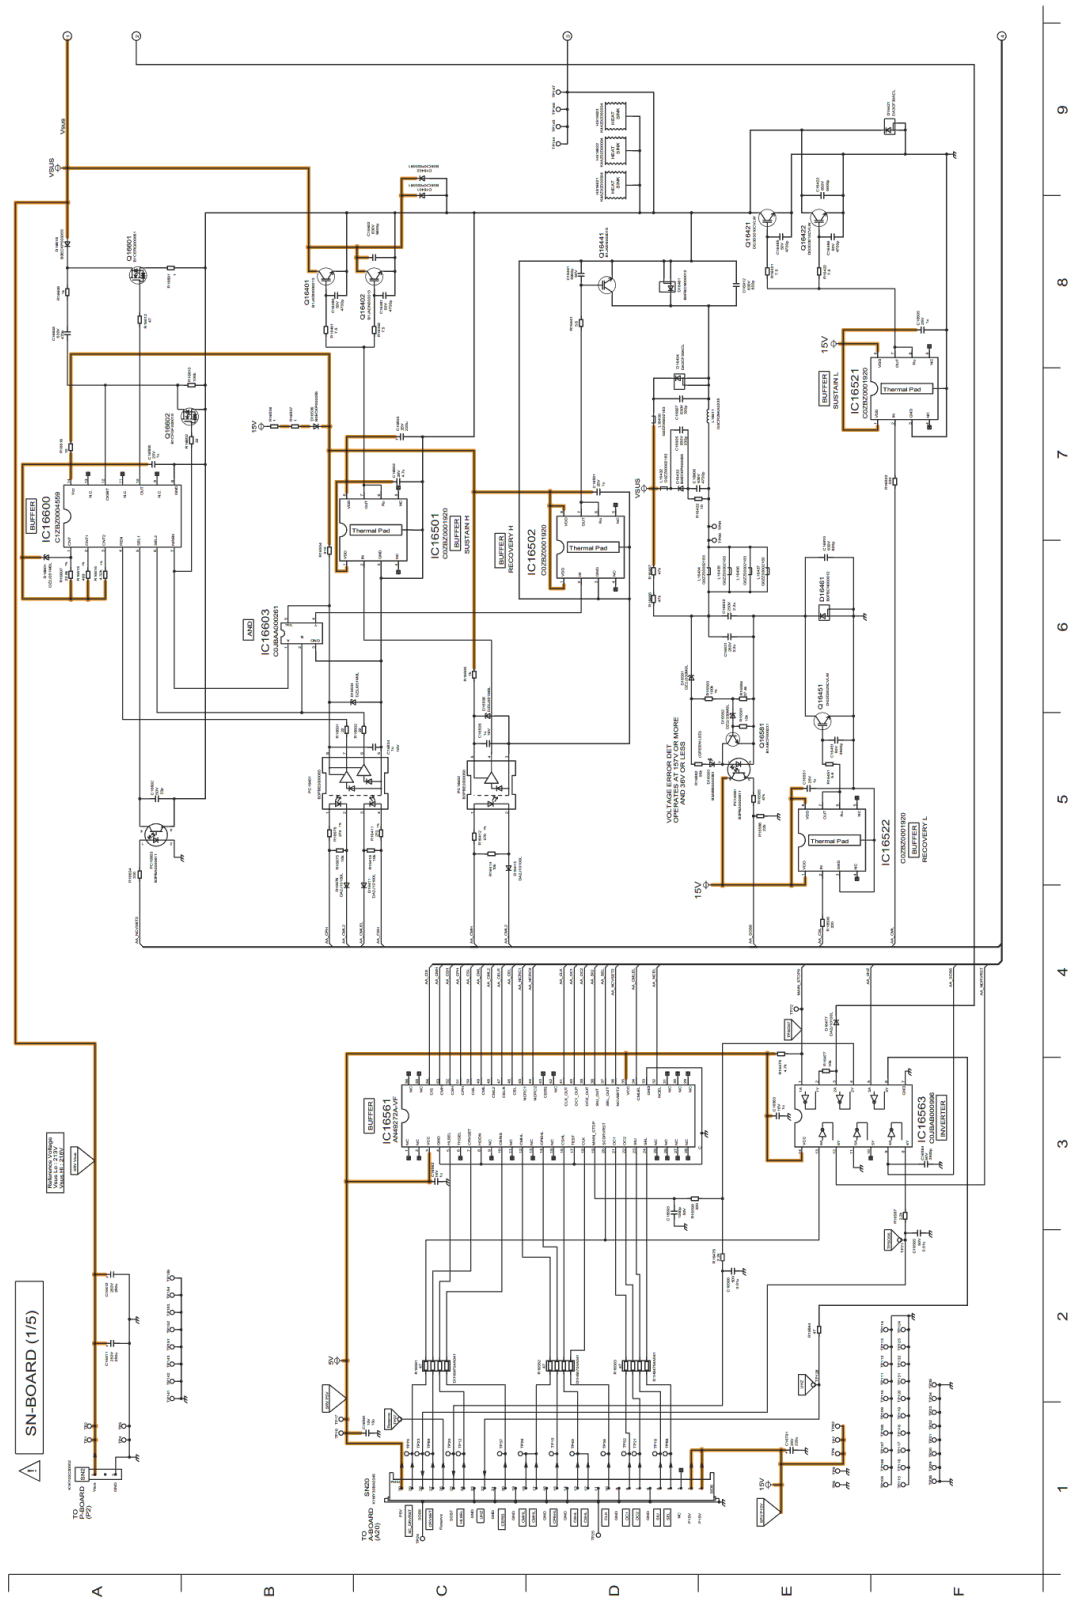


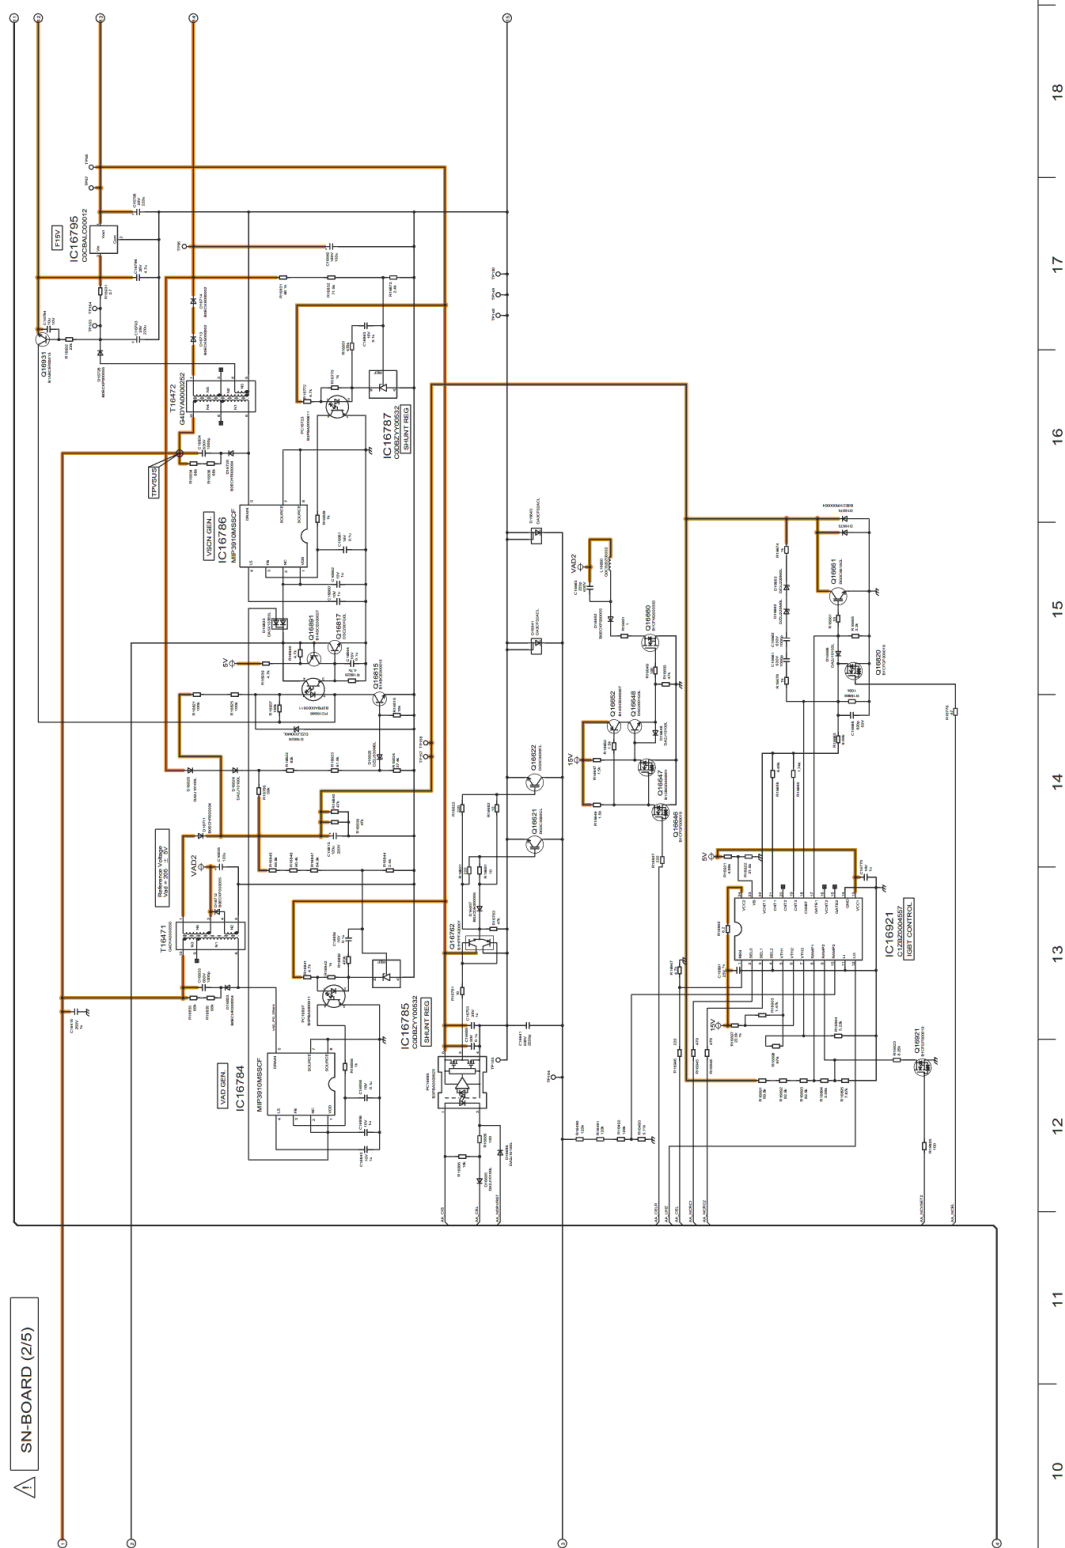

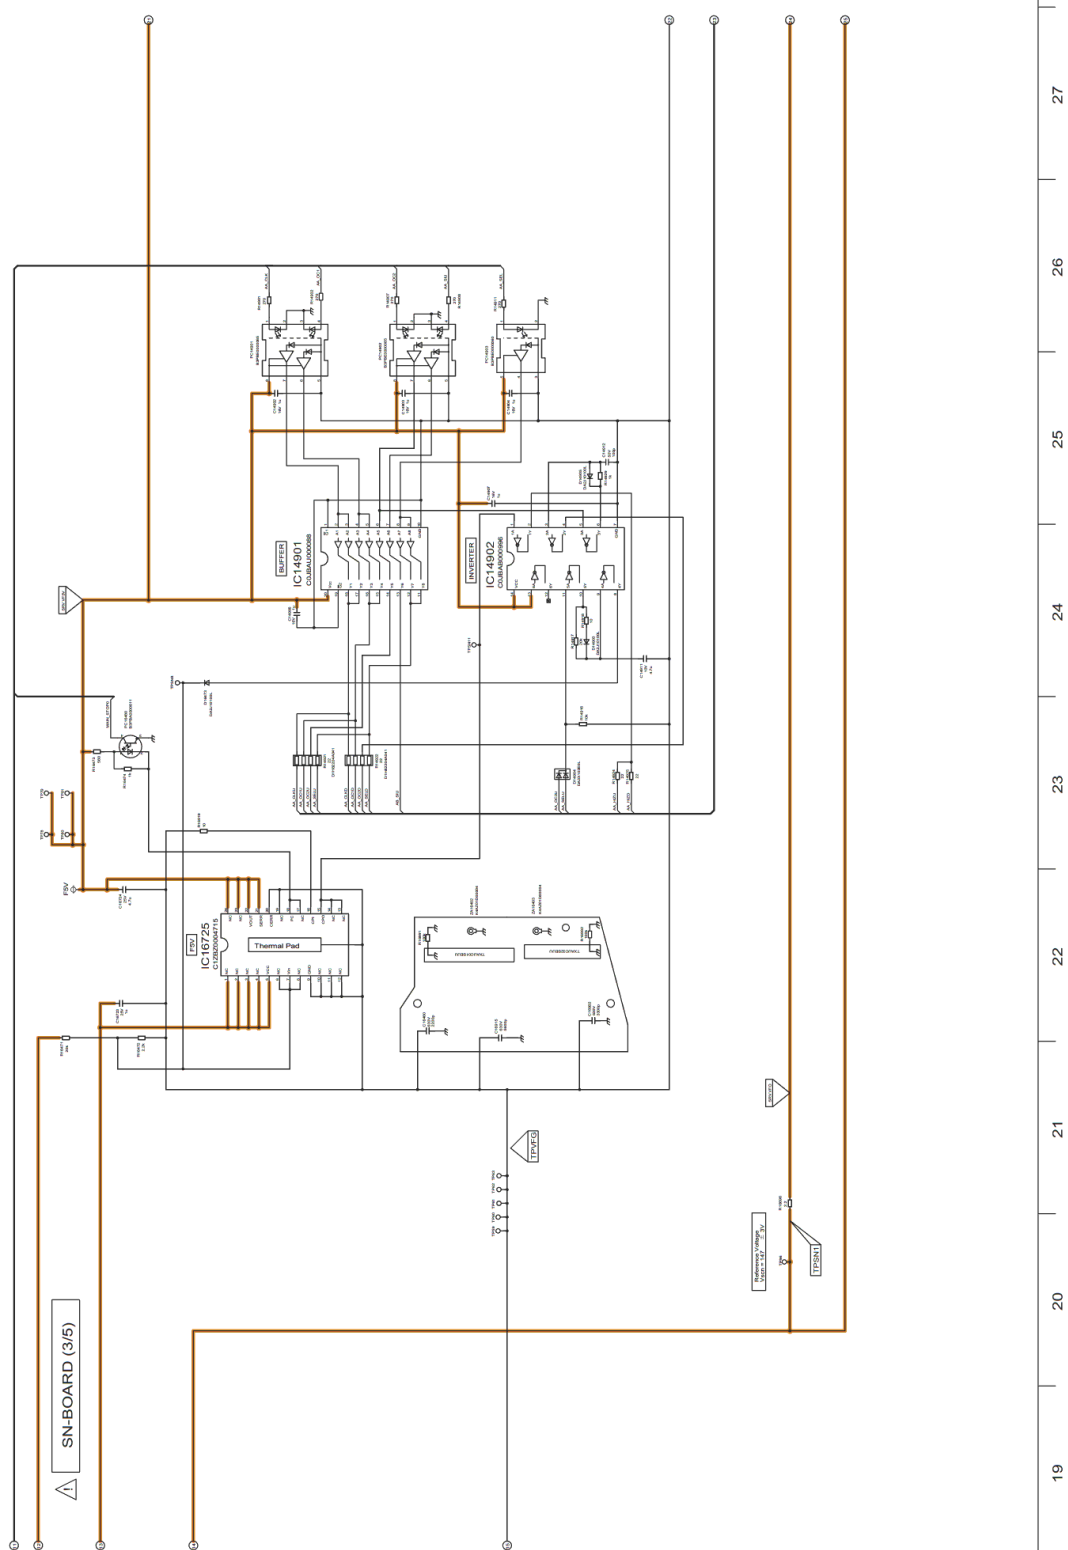


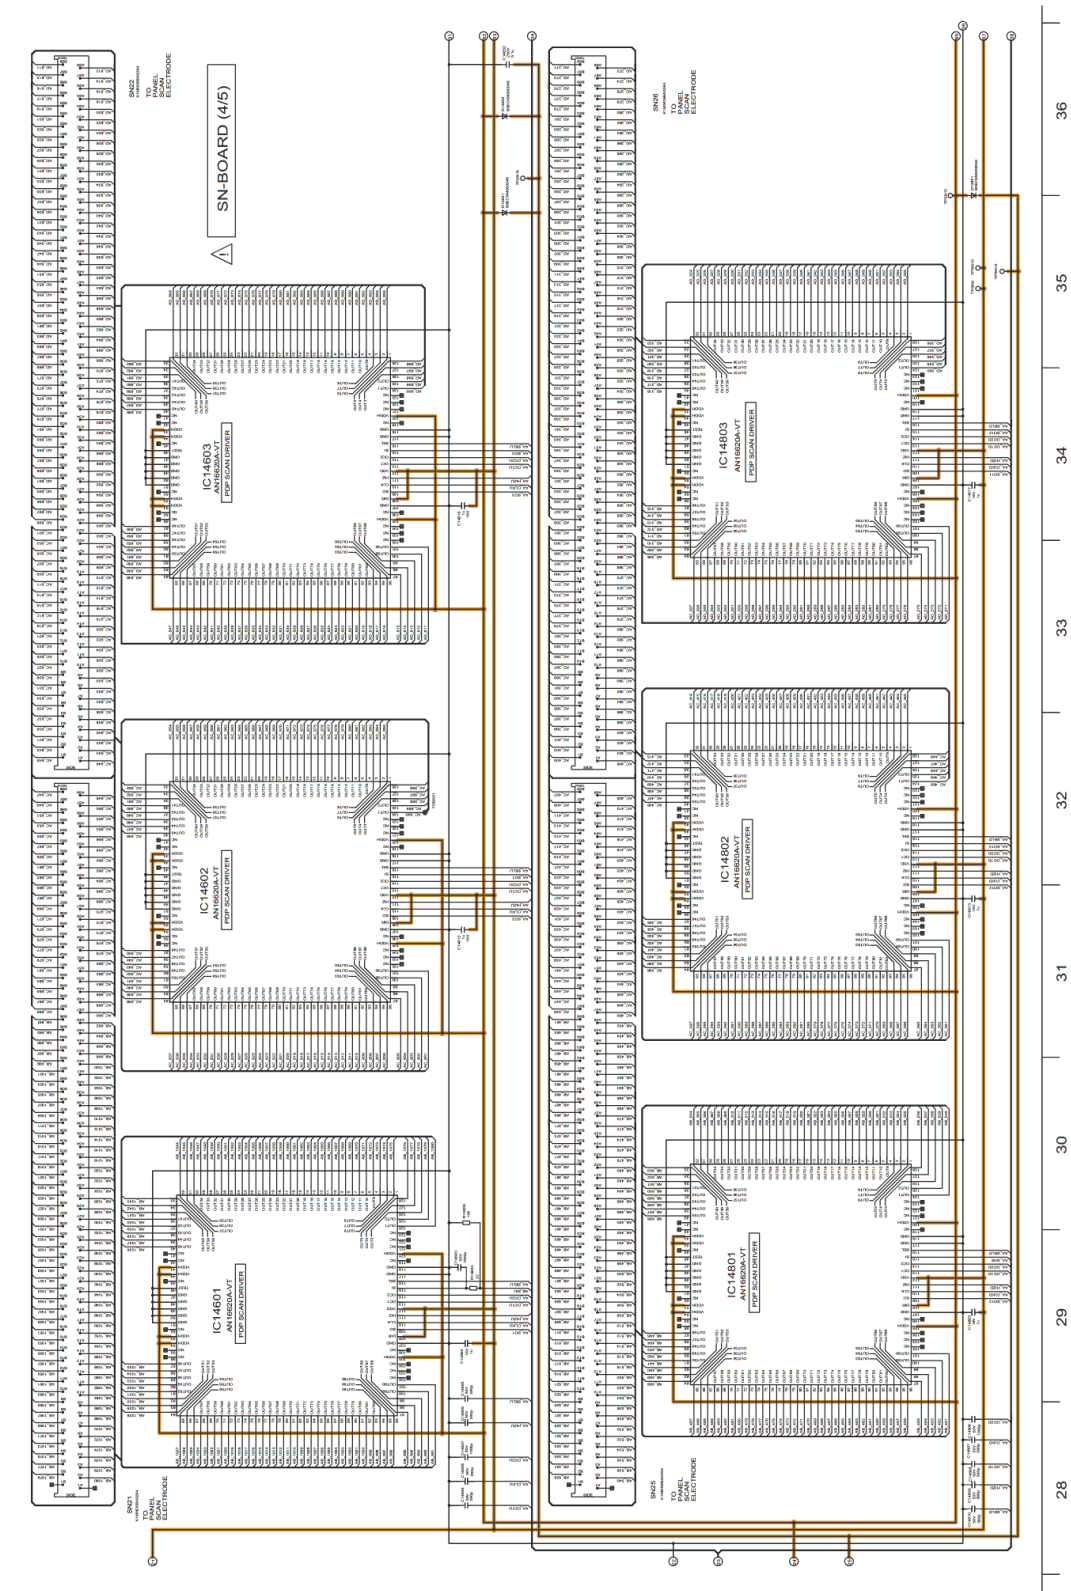


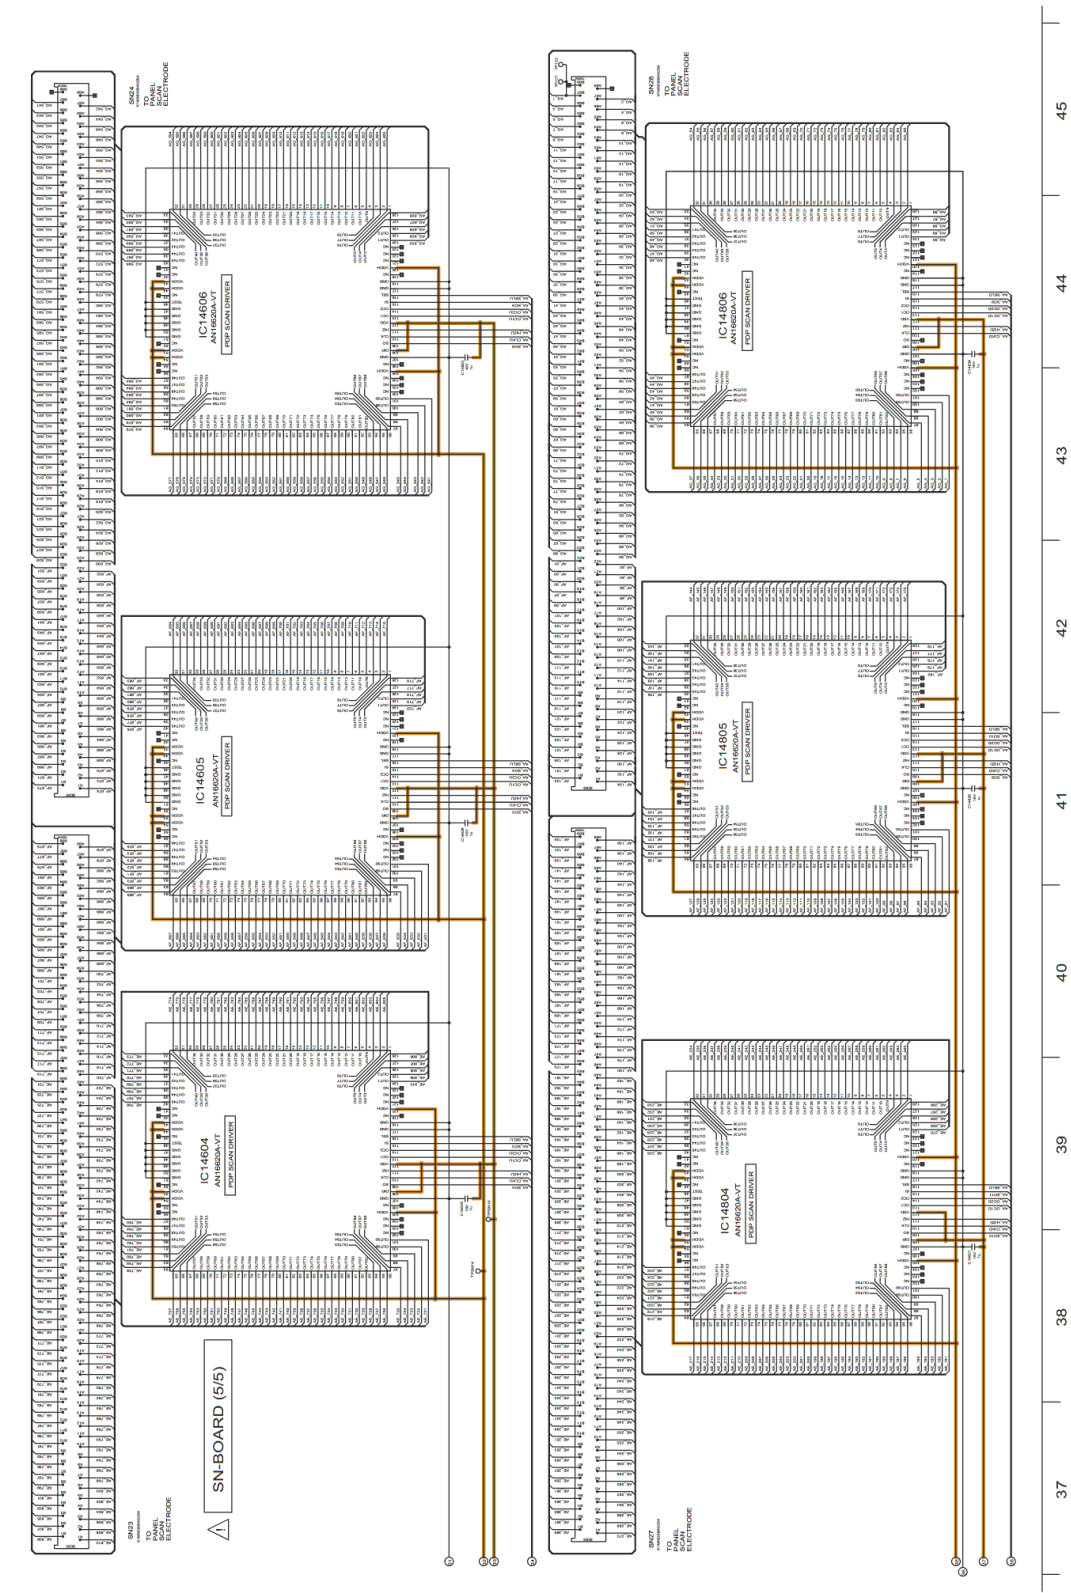


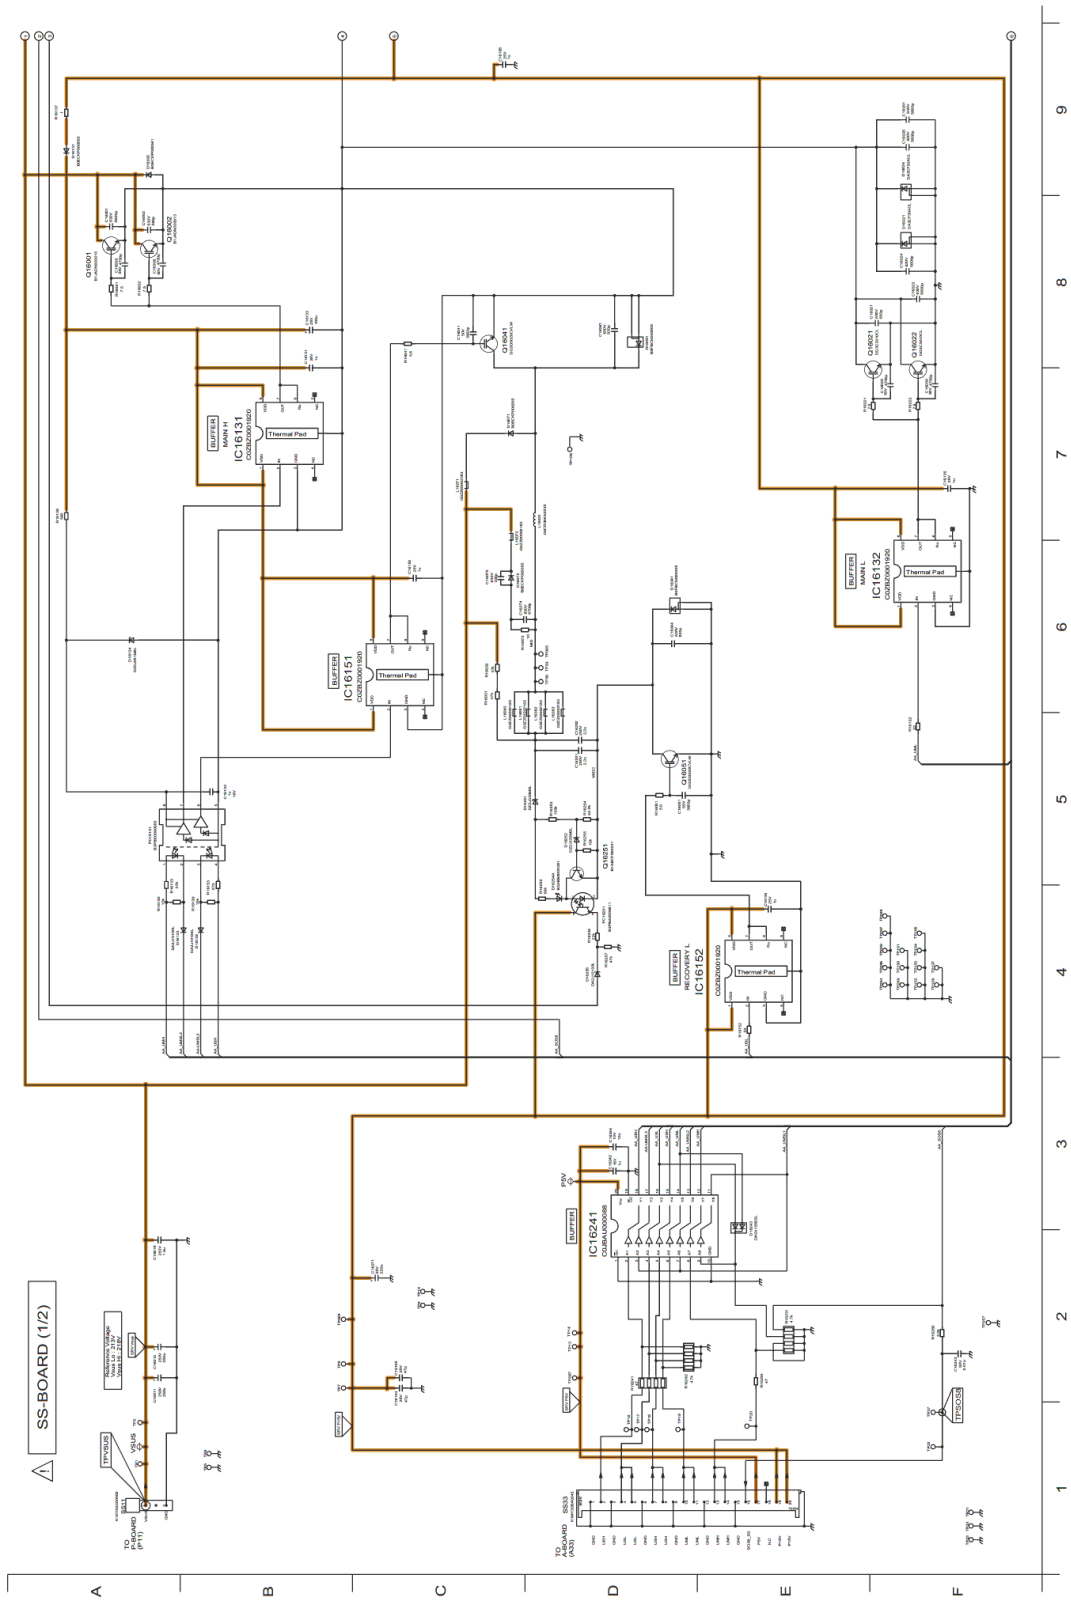



Model No. : TH-P42UT50D/M/P/S/Z SS-Board (2/2)

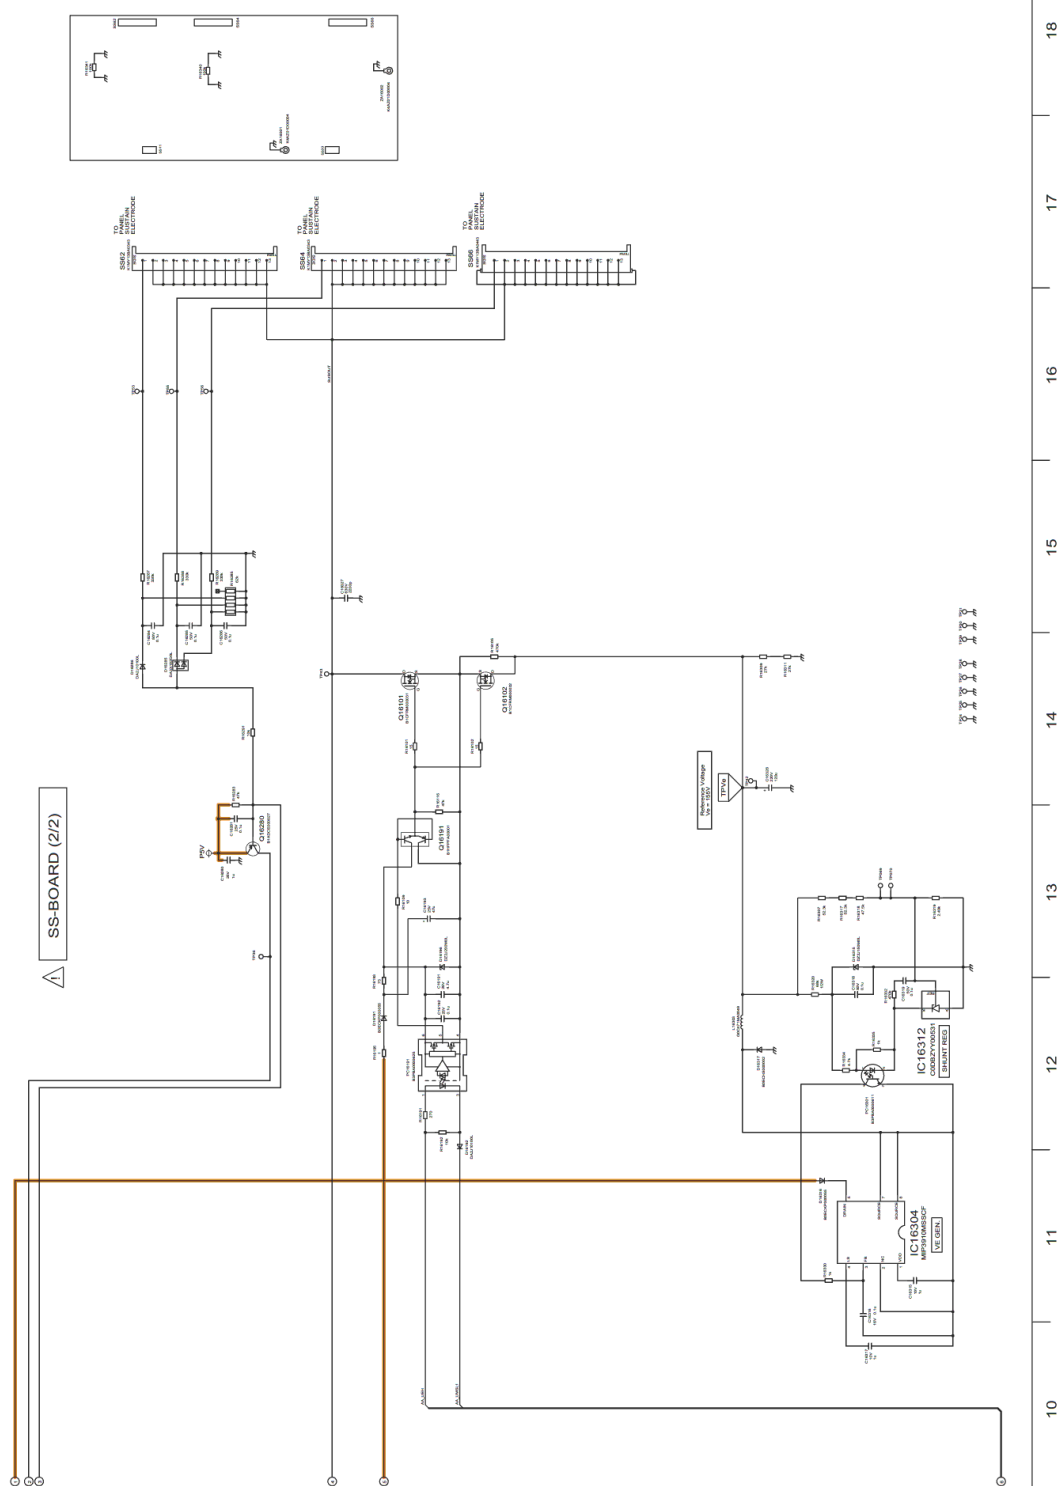


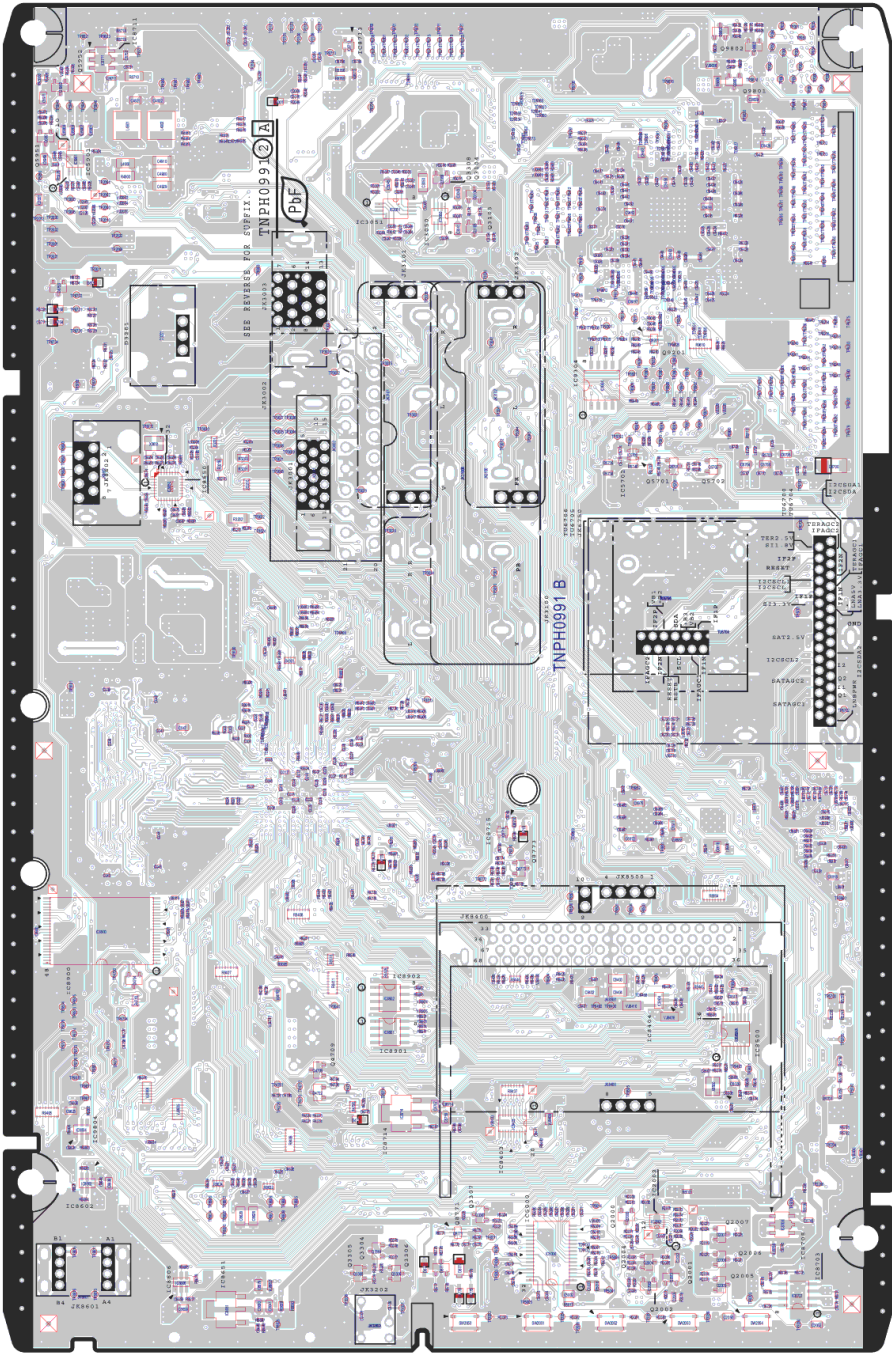


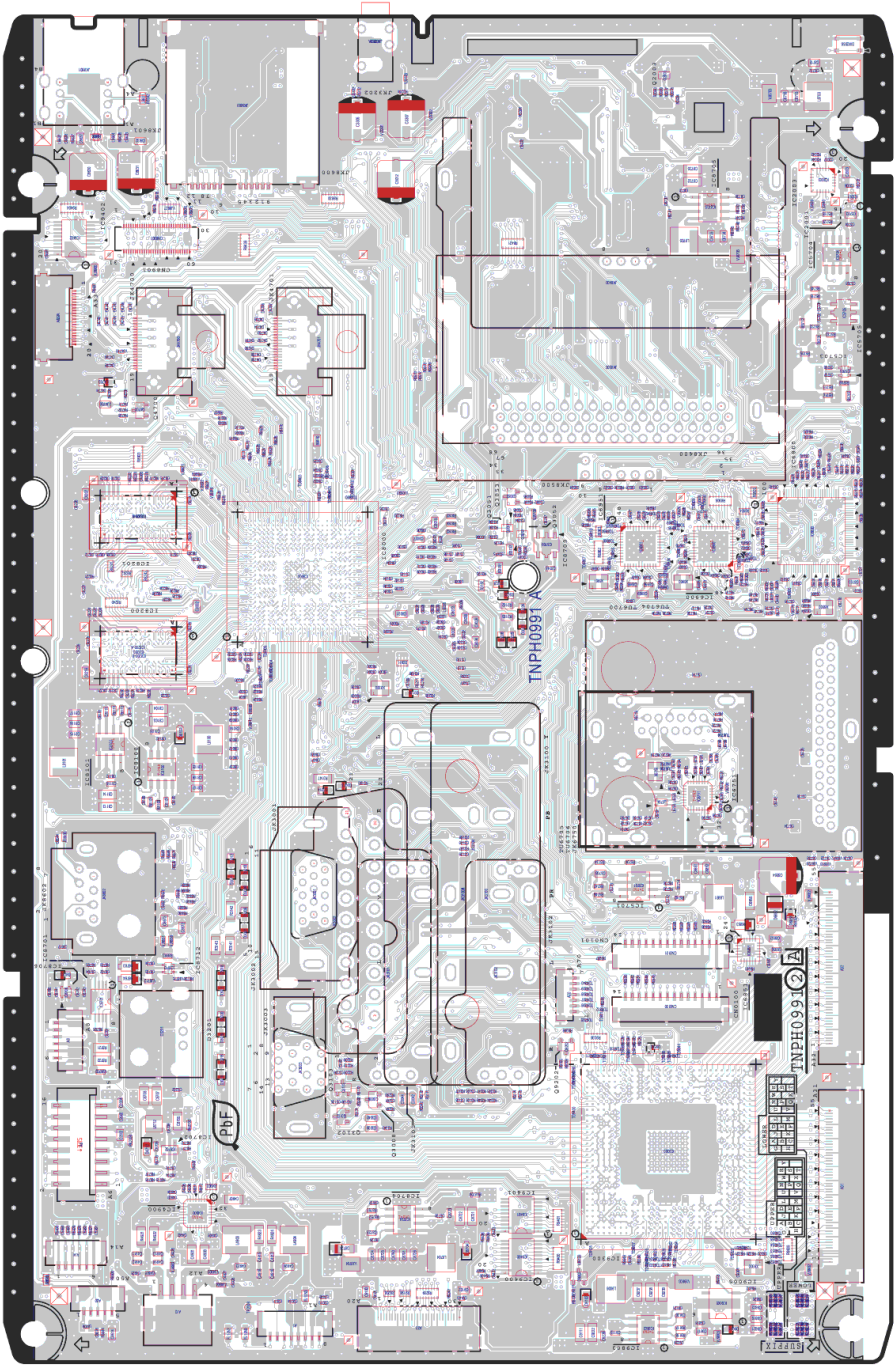


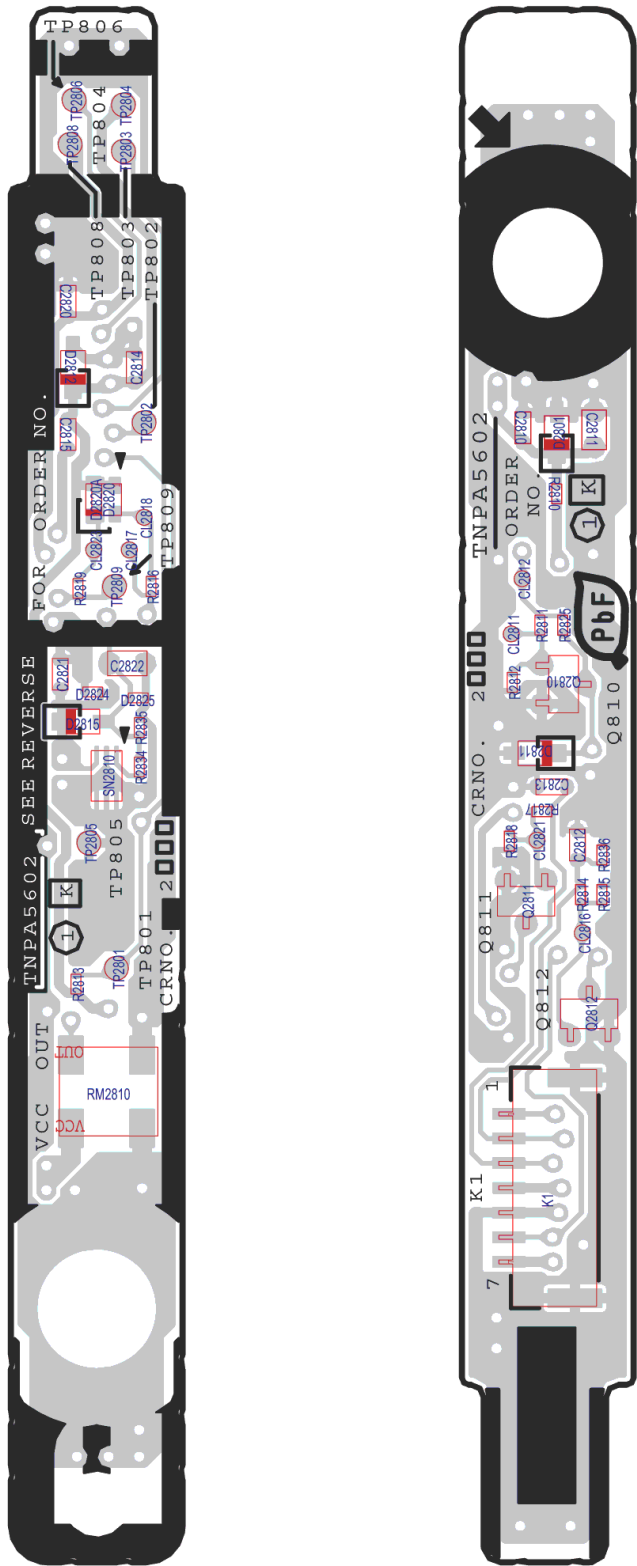


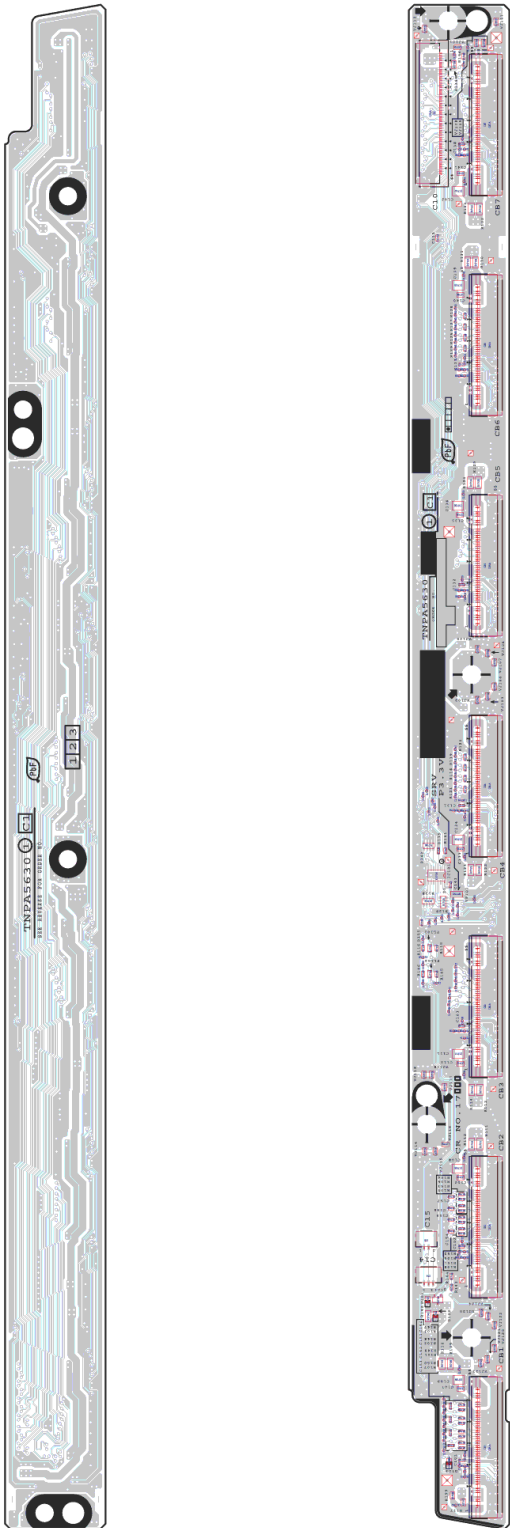

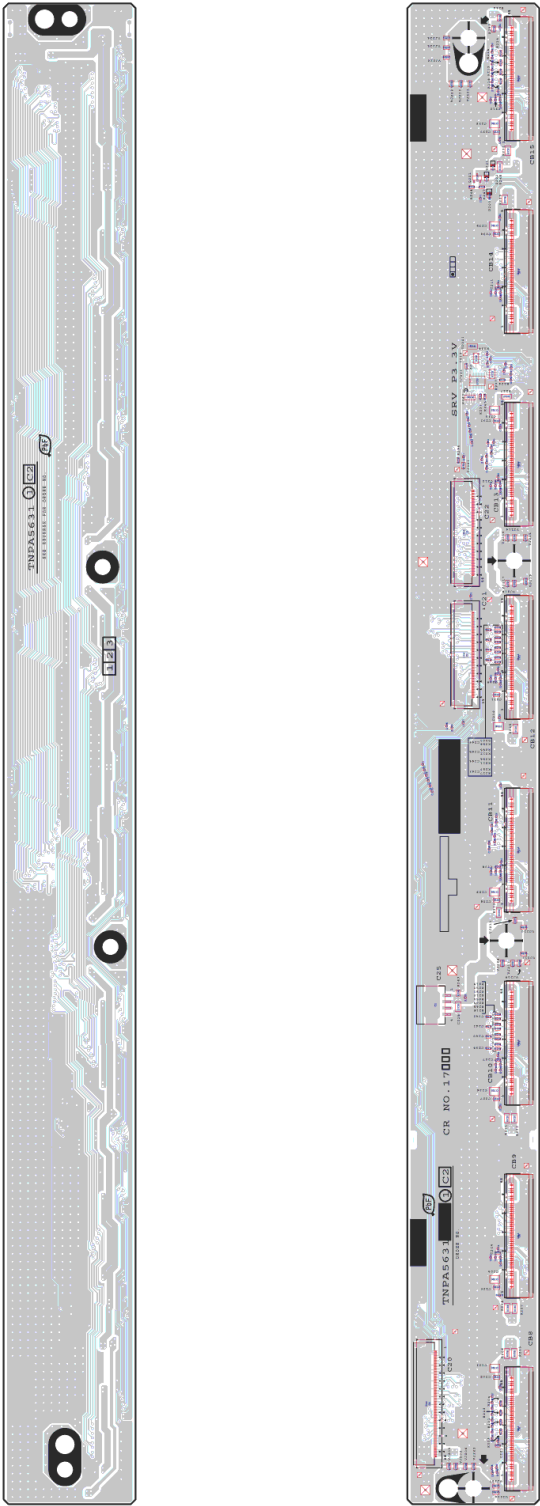

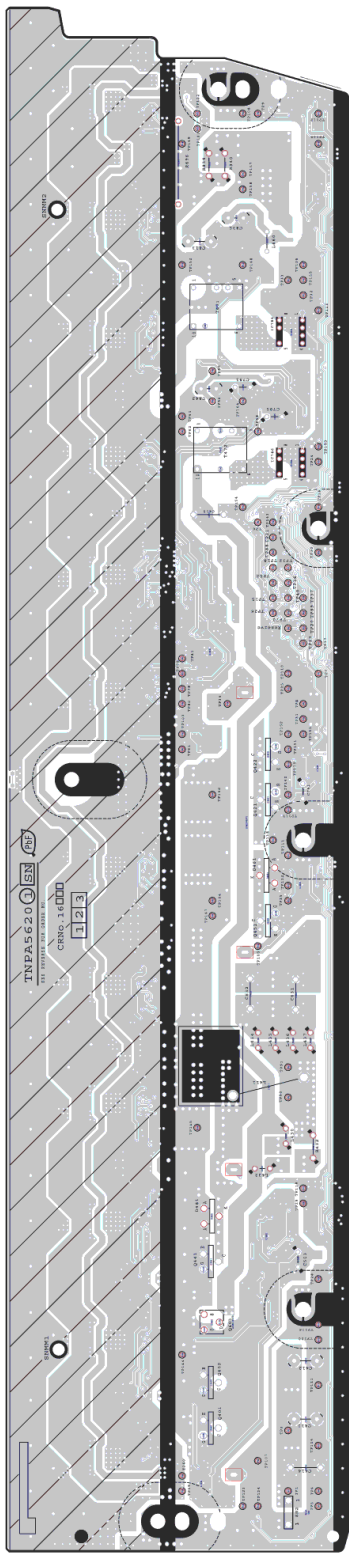

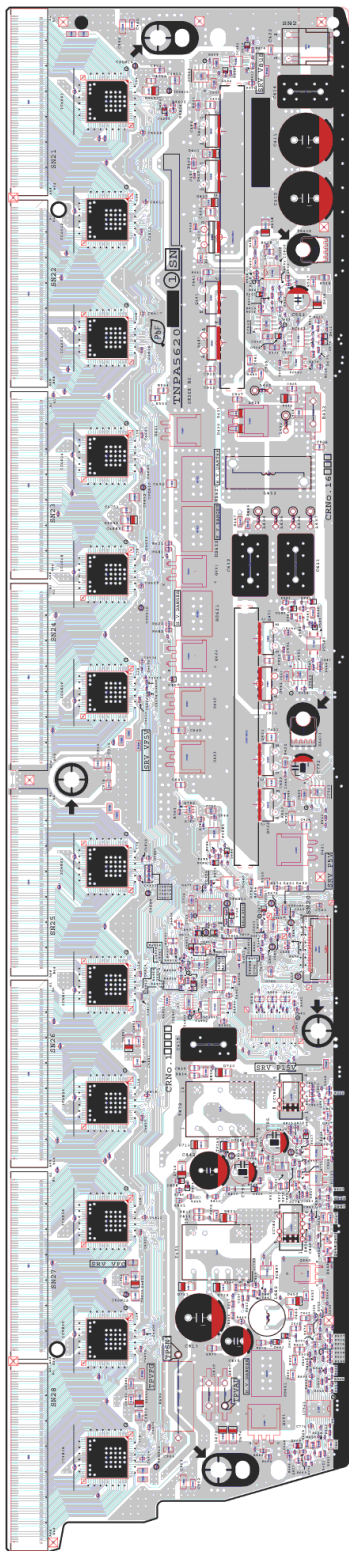

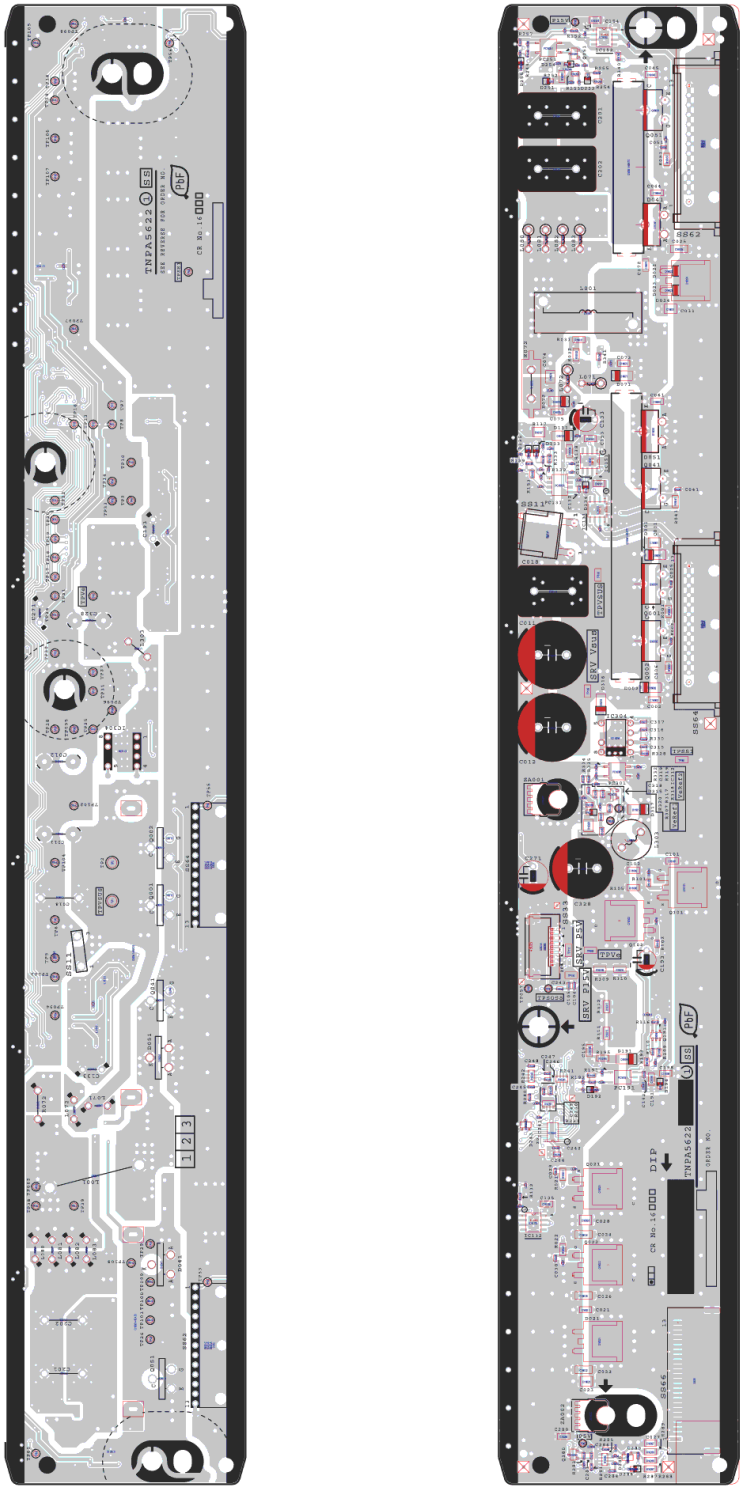

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	PCB	TZTNP01PEUD	A-PRINT COMPLETE	1	(D) (RTL) PAVCTH
	PCB	TZTNP01NKUM	A-PRINT COMPLETE	1	(M) (RTL) PAVCTH
	PCB	TZTNP01NZUP	A-PRINT COMPLETE	1	(P) (RTL) PAVCTH
	PCB	TZTNP01PEUS	A-PRINT COMPLETE	1	(S) (RTL) PAVCTH
	PCB	TZTNP01PCUZ	A-PRINT COMPLETE	1	(Z) (RTL) PAVCTH
	PCB	NOAE5KK00001	POWER SUPPLY UNIT	1	PAVCTH
	PCB	TXNC11SEUU	C1-PRINT COMPLETE	1	(RTL) PAVCTH
	PCB	TXNC21SEUU	C2-PRINT COMPLETE	1	(RTL) PAVCTH
	PCB	TXNSN1SEUU	SN-PRINT COMPLETE	1	(RTL) PAVCTH
	PCB	TXNSS1SEUU	SS-PRINT COMPLETE	1	(RTL) PAVCTH
	PCB	TXN/K1QTUA	K-PRINT COMPLETE	1	(RTL) PAVCTH
	A1	K1KY08AA0719	8P CONNECTOR	1	
	A6	K1KY16BA0394	16P CONNECTOR	1	PAVCTH
	A12	K1KY04BA0387	4P CONNECTOR	1	PAVCTH
	A20	K1MY30BA0345	30P CONNECTOR	1	
	A31	K1MY55BA0345	55P CONNECTOR	1	
	A32	K1MY55BA0345	55P CONNECTOR	1	
	A33	K1MN20BA0231	20P CONNECTOR	1	
	A50	K1KY05AA0719	5P CONNECTOR	1	
	C10	K1MY68BA0345	68P CONNECTOR	1	
	C20	K1MY68BA0345	68P CONNECTOR	1	
	C21	K1MY55BA0345	55P CONNECTOR	1	
	C22	K1MY55BA0345	55P CONNECTOR	1	
	C25	K1KY04BA0387	4P CONNECTOR	1	PAVCTH
	C0902	FI1G1H101A834	C 100PF 50V	1	PAVCTH
	C0903	FI1G1H101A834	C 100PF 50V	1	PAVCTH
	C2000	FI1G1E1030005	C 0.01UF 25V	1	
	C2001	FI1J1A106A087	C 10UF, 10V	1	
	C2002	FI1J1E105A287	C 1UF, 25V	1	PAVCTH
	C2003	FI1J1E105A287	C 1UF, 25V	1	PAVCTH
	C2005	FI1H1H104B047	C 0.1UF, 50V	1	PAVCTH
	C2006	FI1G1C104A077	C 0.1UF 16V	1	
	C2007	FI1G1A105A047	C 1UF 10V	1	
	C2008	FI1G1A105A047	C 1UF 10V	1	
	C2009	FI1G1E1030005	C 0.01UF 25V	1	
	C2010	FI1G1A105A047	C 1UF 10V	1	
	C2013	FI1G1E1030005	C 0.01UF 25V	1	
	C2014	FI1G1E1030005	C 0.01UF 25V	1	
	C2018	FI1G1H1020008	C 1000PF 50V	1	
	C2019	FI1G1E1030005	C 0.01UF 25V	1	
	C2026	FI1G1C104A077	C 0.1UF 16V	1	
	C2032	FI1H0J4750004	C 4.7UF, 16V	1	
	C2050	FI1J1H102A910	C 1000PF, 50V	1	PAVCTH
	C2052	FI1J1H102A910	C 1000PF, 50V	1	PAVCTH
	C2810	FI1H1H103B047	C 0.01UF, 50V	1	PAVCTH
	C2811	FI1J1A106A087	C 10UF, 10V	1	
	C2815	FI1H1H103B047	C 0.01UF, 50V	1	PAVCTH
	C2821	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C3040	FI1J1A106A087	C 10UF, 10V	1	
	C3042	FI1J1A106A087	C 10UF, 10V	1	
	C3045	FI1J1A106A110	C 10UF, 10V	1	PAVCTH
	C3046	FI1G1A105A047	C 1UF 10V	1	
	C3047	FI1G1A105A047	C 1UF 10V	1	
	C3050	FI1K1E106A134	C 10UF, 25V	1	
	C3057	FI1G1A105A047	C 1UF 10V	1	
	C3058	FI1G1A105A047	C 1UF 10V	1	
	C3084	FI1G1A105A047	C 1UF 10V	1	
	C3085	FI1G1A105A047	C 1UF 10V	1	
	C3086	FI1G1A105A047	C 1UF 10V	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C3105	FlG1H471A834	C 470PF, 50V	1	PAVCTH
	C3106	FlG1H471A834	C 470PF, 50V	1	PAVCTH
	C3108	FlG1E333A059	C 0.033UF, 25V	1	PAVCTH
	C3109	FlG1E333A059	C 0.033UF, 25V	1	PAVCTH
	C3135	FlG1H471A834	C 470PF, 50V	1	PAVCTH
	C3136	FlG1H471A834	C 470PF, 50V	1	PAVCTH
	C3139	FlG1H471A834	C 470PF, 50V	1	PAVCTH
	C3140	FlG1H471A834	C 470PF, 50V	1	PAVCTH
	C3151	FlG1A105A047	C 1UF 10V	1	
	C3152	FlG1A105A047	C 1UF 10V	1	
	C3182	FlG1A105A047	C 1UF 10V	1	
	C3183	FlG1A105A047	C 1UF 10V	1	
	C3184	FlG1A105A047	C 1UF 10V	1	
	C3186	FlG1A105A047	C 1UF 10V	1	
	C3202	FlG1C104A077	C 0.1UF 16V	1	
	C3305	F2H1A101A040	C 100UF, 10V	1	
	C3307	F2H1A101A040	C 100UF, 10V	1	
	C4799	FlG1A105A047	C 1UF 10V	1	
	C4900	FlK1V106A010	C 10UF, 25V	1	PAVCTH
	C4901	FlK1V106A010	C 10UF, 25V	1	PAVCTH
	C4902	FlG1H1020008	C 1000PF 50V	1	
	C4903	FlG1C104A077	C 0.1UF 16V	1	
	C4904	FlG1C104A077	C 0.1UF 16V	1	
	C4905	FlG1C104A077	C 0.1UF 16V	1	
	C4906	FlG1C104A077	C 0.1UF 16V	1	
	C4907	FlK1V106A010	C 10UF, 25V	1	PAVCTH
	C4908	FlG1H1020008	C 1000PF 50V	1	
	C4909	FlK1V106A010	C 10UF, 25V	1	PAVCTH
	C4921	FlJ1E474A272	C 4.7UF, 25V	1	PAVCTH
	C4922	FlJ1E474A272	C 4.7UF, 25V	1	PAVCTH
	C4923	FlJ1E474A272	C 4.7UF, 25V	1	PAVCTH
	C4924	FlJ1E474A272	C 4.7UF, 25V	1	PAVCTH
	C5000	FlG1E1030005	C 0.01UF 25V	1	
	C5002	FlJZZ1060001	C 10UF, 20V	1	PAVCTH
	C5003	FlH1C105A145	C 1 uF 16 V	1	
	C5007	FlG1C104A077	C 0.1UF 16V	1	
	C5009	FlG1C104A077	C 0.1UF 16V	1	
	C5011	FlG1C104A077	C 0.1UF 16V	1	
	C5012	EEEB1C101UP	C 100PF, J, 16V	1	
	C5013	FlG1A105A047	C 1UF 10V	1	
	C5014	FlG1A105A047	C 1UF 10V	1	
	C5015	FlG1A105A047	C 1UF 10V	1	
	C5016	FlG1A105A047	C 1UF 10V	1	
	C5017	FlG1A105A047	C 1UF 10V	1	
	C5018	FlG1C104A077	C 0.1UF 16V	1	
	C5020	FlG1E1030005	C 0.01UF 25V	1	
	C5712	FlG1A105A047	C 1UF 10V	1	
	C5713	FlG1A105A047	C 1UF 10V	1	
	C6704	FlJ1A106A087	C 10UF, 10V	1	
	C6705	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C6706	FlG1C104A077	C 0.1UF 16V	1	
	C6707	FlG1C104A077	C 0.1UF 16V	1	
	C6708	FlJ1A106A087	C 10UF, 10V	1	
	C6710	FlG1C104A077	C 0.1UF 16V	1	
	C6719	FlG1H220A834	C 22PF, 50V	1	PAVCTH
	C6720	FlG1H220A834	C 22PF, 50V	1	PAVCTH
	C6721	FlG1H220A834	C 22PF, 50V	1	PAVCTH
	C6722	FlG1E472A144	C 4700pF 25V	1	PAVCTH
	C6723	FlG1H101A834	C 100PF 50V	1	PAVCTH
	C6724	FlG1H101A834	C 100PF 50V	1	PAVCTH
	C6725	FlG1H220A834	C 22PF, 50V	1	PAVCTH
	C6726	FlG1H220A834	C 22PF, 50V	1	PAVCTH

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C6727	FlG1H220A834	C 22PF, 50V	1	PAVCTH
	C6733	FlG1C104A077	C 0.1UF 16V	1	
	C6734	FlG1A105A047	C 1UF 10V	1	
	C6735	FlG1A105A047	C 1UF 10V	1	
	C6736	FlG1C104A077	C 0.1UF 16V	1	
	C6742	FlG1C104A077	C 0.1UF 16V	1	
	C6743	FlG1C104A077	C 0.1UF 16V	1	
	C8002	FlJ1A106A087	C 10UF, 10V	1	
	C8004	FlG1C104A077	C 0.1UF 16V	1	
	C8005	FlG1C104A077	C 0.1UF 16V	1	
	C8007	FlJ1A106A087	C 10UF, 10V	1	
	C8014	FlJ0G2260001	C 22 UF 4 V	1	
	C8017	FlG1C104A077	C 0.1UF 16V	1	
	C8019	FlG1C104A077	C 0.1UF 16V	1	
	C8020	FlG1C104A077	C 0.1UF 16V	1	
	C8022	FlG1C104A077	C 0.1UF 16V	1	
	C8023	FlG1C104A077	C 0.1UF 16V	1	
	C8024	FlG1C104A077	C 0.1UF 16V	1	
	C8025	FlG1A105A047	C 1UF 10V	1	
	C8031	FlJ1A106A087	C 10UF, 10V	1	
	C8033	FlJ1A106A087	C 10UF, 10V	1	
	C8034	FlJ0G2260001	C 22 UF 4 V	1	
	C8035	FlG1C104A077	C 0.1UF 16V	1	
	C8036	FlG1A105A047	C 1UF 10V	1	
	C8038	FlJ0G2260001	C 22 UF 4 V	1	
	C8039	FlJ0G2260001	C 22 UF 4 V	1	
	C8100	FlG1C223A146	C 0.022UF, 16V	1	PAVCTH
	C8101	FlH1C105A145	C 1 uF 16 V	1	
	C8102	FlG1C104A077	C 0.1UF 16V	1	
	C8103	FlK1E106A134	C 10UF, 25V	1	
	C8105	FlJ0G2260001	C 22 UF 4 V	1	
	C8106	FlJ0G2260001	C 22 UF 4 V	1	
	C8108	ECJ1VB1E104K	C 0.1 UF, 25V	1	
	C8110	FlG1C223A146	C 0.022UF, 16V	1	PAVCTH
	C8111	FlH1C105A145	C 1 uF 16 V	1	
	C8112	FlG1C104A077	C 0.1UF 16V	1	
	C8113	FlK1E106A134	C 10UF, 25V	1	
	C8115	FlJ0G2260001	C 22 UF 4 V	1	
	C8116	FlJ0G2260001	C 22 UF 4 V	1	
	C8118	ECJ1VB1E104K	C 0.1 UF, 25V	1	
	C8203	FlG1C104A077	C 0.1UF 16V	1	
	C8204	FlG1C104A077	C 0.1UF 16V	1	
	C8205	FlG1C104A077	C 0.1UF 16V	1	
	C8206	FlG1C104A077	C 0.1UF 16V	1	
	C8207	FlJ1A106A087	C 10UF, 10V	1	
	C8208	FlG1C104A077	C 0.1UF 16V	1	
	C8210	FlG1C104A077	C 0.1UF 16V	1	
	C8212	FlG1C104A077	C 0.1UF 16V	1	
	C8215	FlG1C104A077	C 0.1UF 16V	1	
	C8216	FlJ1A106A087	C 10UF, 10V	1	
	C8218	FlG1C104A077	C 0.1UF 16V	1	
	C8220	FlG1C104A077	C 0.1UF 16V	1	
	C8221	FlG1C104A077	C 0.1UF 16V	1	
	C8224	FlG1C104A077	C 0.1UF 16V	1	
	C8229	FlG1A105A047	C 1UF 10V	1	
	C8230	FlG1C104A077	C 0.1UF 16V	1	
	C8231	FlG1C104A077	C 0.1UF 16V	1	
	C8232	FlG1C104A077	C 0.1UF 16V	1	
	C8300	FlG1H100A833	C 10PF 50V	1	PAVCTH
	C8301	FlG1H100A833	C 10PF 50V	1	PAVCTH
	C8304	FlG1A105A047	C 1UF 10V	1	
	C8305	FlG1A105A047	C 1UF 10V	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C8306	FlG1A105A047	C 1UF 10V	1	
	C8307	FlG1A105A047	C 1UF 10V	1	
	C8308	FlG1A105A047	C 1UF 10V	1	
	C8309	FlG1A105A047	C 1UF 10V	1	
	C8310	FlG1A105A047	C 1UF 10V	1	
	C8311	FlG1A105A047	C 1UF 10V	1	
	C8312	FlG1A105A047	C 1UF 10V	1	
	C8411	FlG1C104A077	C 0.1UF 16V	1	
	C8616	FlG1C104A077	C 0.1UF 16V	1	
	C8617	FlG1C1030008	C 0.01UF 16V	1	
	C8619	FlG1C104A077	C 0.1UF 16V	1	
	C8620	FlG1C104A077	C 0.1UF 16V	1	
	C8627	FlG1C104A077	C 0.1UF 16V	1	
	C8628	FlK0J226A049	C 22UF, 6.3V	1	
	C8629	FlK0J226A049	C 22UF, 6.3V	1	
	C8630	EEEB0J221UP	E 220UF, 6.3V	1	
	C8631	EEEB0J221UP	E 220UF, 6.3V	1	
	C8632	FlJ1A106A087	C 10UF, 10V	1	
	C8633	FlG1C104A077	C 0.1UF 16V	1	
	C8637	FlJ1A106A087	C 10UF, 10V	1	
	C8638	FlG1C104A077	C 0.1UF 16V	1	
	C8639	FlJ1A106A087	C 10UF, 10V	1	
	C8640	FlG1C104A077	C 0.1UF 16V	1	
	C8644	FlG1C1030008	C 0.01UF 16V	1	
	C8652	FlG1C104A077	C 0.1UF 16V	1	
	C8653	FlG1H7R0A833	C 7 PF, 50V	1	PAVCTH
	C8654	FlG1H8R0A831	C 8 PF, 50V	1	PAVCTH
	C8655	FlG1C104A077	C 0.1UF 16V	1	
	C8658	FlJ1A106A087	C 10UF, 10V	1	
	C8659	FlG1C104A077	C 0.1UF 16V	1	
	C8674	FlG1C104A077	C 0.1UF 16V	1	
	C8675	FlG1C104A077	C 0.1UF 16V	1	
	C8676	FlG1C104A077	C 0.1UF 16V	1	
	C8721	FlK1E106A134	C 10UF, 25V	1	
	C8722	FlK1E106A134	C 10UF, 25V	1	
	C8723	ECJ1VB1E104K	C 0.1 UF, 25V	1	
	C8724	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C8725	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C8728	FlH1C105A145	C 1 uF 16 V	1	
	C8729	FlG1E472A086	C 4700pF 25V	1	
	C8730	FlG1C104A077	C 0.1UF 16V	1	
	C8731	FlG1E1030005	C 0.01UF 25V	1	
	C8732	FlK1V106A010	C 10UF, 25V	1	PAVCTH
	C8733	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C8734	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C8737	FlG1C104A077	C 0.1UF 16V	1	
	C8738	FlG1H222A830	C 2200PF, 50V	1	PAVCTH
	C8739	FlG1E1030005	C 0.01UF 25V	1	
	C8747	FlG1A105A047	C 1UF 10V	1	
	C8748	FlH0J4750004	C 4.7UF, 16V	1	
	C8749	FlG1A105A047	C 1UF 10V	1	
	C8750	FlG1A105A047	C 1UF 10V	1	
	C8757	FlJ1A106A087	C 10UF, 10V	1	
	C8758	FlJ1A106A087	C 10UF, 10V	1	
	C8771	FlG1C104A077	C 0.1UF 16V	1	
	C8772	FlG1C104A077	C 0.1UF 16V	1	
	C8773	FlG1C104A077	C 0.1UF 16V	1	
	C8790	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C8791	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C8900	FlG1C104A077	C 0.1UF 16V	1	
	C8901	FlG1C104A077	C 0.1UF 16V	1	
	C8902	FlG1C104A077	C 0.1UF 16V	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C9097	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C9098	FlG1A105A047	C 1UF 10V	1	
	C9102	FlJZZ1060001	C 10UF, 20V	1	PAVCTH
	C9103	FlG1E1030005	C 0.01UF 25V	1	
	C9111	FlK1E106A134	C 10UF, 25V	1	
	C9119	ECJ1VB1E104K	C 0.1 UF, 25V	1	
	C9120	FlH1C105A145	C 1 uF 16 V	1	
	C9121	FlG1H1020008	C 1000PF 50V	1	
	C9222	FlK1E106A134	C 10UF, 25V	1	
	C9235	ECJ1VB1E104K	C 0.1 UF, 25V	1	
	C9237	FlK0J226A049	C 22UF, 6.3V	1	
	C9238	FlK0J226A049	C 22UF, 6.3V	1	
	C9300	FlG1C104A077	C 0.1UF 16V	1	
	C9301	FlG1H180A834	C 18PF, 50V	1	PAVCTH
	C9302	FlG1H180A834	C 18PF, 50V	1	PAVCTH
	C9307	FlG1C104A077	C 0.1UF 16V	1	
	C9328	FlG1C104A077	C 0.1UF 16V	1	
	C9331	FlG1A105A047	C 1UF 10V	1	
	C9362	FlG1C104A077	C 0.1UF 16V	1	
	C9374	FlG1A105A047	C 1UF 10V	1	
	C9390	FlG1C104A077	C 0.1UF 16V	1	
	C9406	FlG1C104A077	C 0.1UF 16V	1	
	C9420	FlG1C104A077	C 0.1UF 16V	1	
	C9421	FlG1C104A077	C 0.1UF 16V	1	
	C9422	FlG1C104A077	C 0.1UF 16V	1	
	C9423	FlG1C104A077	C 0.1UF 16V	1	
	C9424	FlG1A105A047	C 1UF 10V	1	
	C9431	FlG1A105A047	C 1UF 10V	1	
	C9433	FlG1A105A047	C 1UF 10V	1	
	C9435	FlG1A105A047	C 1UF 10V	1	
	C9436	FlG1A105A047	C 1UF 10V	1	
	C9438	FlG1A105A047	C 1UF 10V	1	
	C9441	FlG1A105A047	C 1UF 10V	1	
	C9446	FlG1C104A077	C 0.1UF 16V	1	
	C9450	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C9453	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C9456	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C9458	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C9459	FlG1A105A047	C 1UF 10V	1	
	C9462	FlJ1A106A110	C 10UF, 10V	1	PAVCTH
	C9591	FlG1C104A077	C 0.1UF 16V	1	
	C9817	FlJ1A106A087	C 10UF, 10V	1	
	C9822	FlJ1A106A087	C 10UF, 10V	1	
	C9824	FlG1A105A047	C 1UF 10V	1	
	C9825	FlJ1A106A087	C 10UF, 10V	1	
	C9826	FlG1C104A077	C 0.1UF 16V	1	
	C14602	FlH1C105A145	C 1 uF 16 V	1	
	C14603	FlG1H1020008	C 1000PF 50V	1	
	C14605	FlG1H391A731	C 390PF, 50V	1	
	C14606	FlG1H391A731	C 390PF, 50V	1	
	C14607	FlG1H391A731	C 390PF, 50V	1	
	C14608	FlG1H391A731	C 390PF, 50V	1	
	C14609	FlG1H391A731	C 390PF, 50V	1	
	C14612	FlH1C105A145	C 1 uF 16 V	1	
	C14616	FlH1C105A145	C 1 uF 16 V	1	
	C14620	FlH1C105A145	C 1 uF 16 V	1	
	C14624	FlG1H391A731	C 390PF, 50V	1	
	C14629	FlH1C105A145	C 1 uF 16 V	1	
	C14633	FlH1C105A145	C 1 uF 16 V	1	
	C14652	FlL2E104A028	C 0.10UF, 250V	1	
	C14803	FlH1C105A145	C 1 uF 16 V	1	
	C14806	FlG1H391A731	C 390PF, 50V	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C14807	F1G1H391A731	C 390PF, 50V	1	
	C14808	F1G1H391A731	C 390PF, 50V	1	
	C14809	F1G1H391A731	C 390PF, 50V	1	
	C14810	F1G1H391A731	C 390PF, 50V	1	
	C14813	F1H1C105A145	C 1 uF 16 V	1	
	C14817	F1H1C105A145	C 1 uF 16 V	1	
	C14821	F1H1C105A145	C 1 uF 16 V	1	
	C14825	F1H1C105A145	C 1 uF 16 V	1	
	C14827	F1G1H391A731	C 390PF, 50V	1	
	C14834	F1H1C105A145	C 1 uF 16 V	1	
	C14902	F1H1C105A145	C 1 uF 16 V	1	
	C14903	F1H1C105A145	C 1 uF 16 V	1	
	C14904	F1H1C105A145	C 1 uF 16 V	1	
	C14906	F1H1C105A145	C 1 uF 16 V	1	
	C14907	F1H1C105A145	C 1 uF 16 V	1	
	C14911	F1J1A475A039	C 4.7UF, 10V	1	
	C14912	F1G1H101A565	C 100PF 50V	1	
	C16001	F1L2J562A021	C 5600PF, 630V	1	PAVCTH
	C16002	F1K2J561A042	C 560PF, 630V	1	PAVCTH
	C16005	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16006	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16011	F2A2E251A183	E 250UF, 250V	1	
	C16012	F2A2E251A183	E 250UF, 250V	1	
	C16018	F0C2E155A286	C 1.5UF, 250V	1	PAVCTH
	C16021	F1K2J561A042	C 560PF, 630V	1	PAVCTH
	C16022	F1L2J562A022	C 5600PF, 630V	1	
	C16024	F1L2J562A022	C 5600PF, 630V	1	
	C16025	F1L2J562A022	C 5600PF, 630V	1	
	C16027	F1K2J222A024	C 2200PF, 630V	1	PAVCTH
	C16029	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16030	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16031	F1L2J562A021	C 5600PF, 630V	1	PAVCTH
	C16041	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16044	F1K2J821A043	C 820PF, 630V	1	PAVCTH
	C16051	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16061	F1K2J821A043	C 820PF, 630V	1	PAVCTH
	C16074	F1L2J472A021	C 4700PF, 630V	1	PAVCTH
	C16075	F1K2J331A042	C 330PF, 630V	1	PAVCTH
	C16104	F1H1E470A130	C 47PF, 25V	1	
	C16105	F1H1E470A130	C 47PF, 25V	1	
	C16131	F1K1E105A029	C 1UF, 25V	1	
	C16132	F1H1C105A145	C 1 uF 16 V	1	
	C16133	F2A1E101A089	E 100UF 25V	1	
	C16135	F1K1E105A029	C 1UF, 25V	1	
	C16153	F1K1E105A029	C 1UF, 25V	1	
	C16154	F1K1E105A029	C 1UF, 25V	1	
	C16191	F1K1E475A134	C 4.7UF 25V	1	
	C16192	ECJ1VB1E104K	C 0.1 UF, 25V	1	
	C16193	F2A1E470B725	E 47UF, 25V	1	PAVCTH
	C16195	F1K1E105A029	C 1UF, 25V	1	
	C16201	F0C2E225A306	C 2.2UF, 250V	1	PAVCTH
	C16202	F0C2E225A306	C 2.2UF, 250V	1	PAVCTH
	C16242	F1H1C105A145	C 1 uF 16 V	1	
	C16243	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C16244	F1J1A106A087	C 10UF, 10V	1	
	C16271	F2A1E221B726	E 220UF, 25V	1	PAVCTH
	C16280	F1K1E105A029	C 1UF, 25V	1	
	C16281	ECJ1VB1E104K	C 0.1 UF, 25V	1	
	C16284	F1H1H104A913	C 0.1UF, K , 50V	1	
	C16285	F1H1H104A913	C 0.1UF, K , 50V	1	
	C16286	F1H1H104A913	C 0.1UF, K , 50V	1	
	C16315	ECJ1VB1A105K	C 1UF, 10V	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C16316	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16317	ECJ1VB1A105K	C 1UF, 10V	1	
	C16318	FLJ1H104A717	C 0.1UF, 50V	1	
	C16319	FLJ1H104A717	C 0.1UF, 50V	1	
	C16328	F2A2T1210001	E 120UF, 220V	1	
	C16402	F1L2J562A021	C 5600PF, 630V	1	PAVCTH
	C16411	F2A2E251A183	E 250UF, 250V	1	
	C16412	F2A2E251A183	E 250UF, 250V	1	
	C16415	F0C2E105A286	C 1 UF 250 V	1	PAVCTH
	C16422	F1L2J562A021	C 5600PF, 630V	1	PAVCTH
	C16441	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16451	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16460	F1K2J222A024	C 2200PF, 630V	1	PAVCTH
	C16480	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16481	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16485	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16486	ECJ1VB1H472K	C 4700PF, 50V	1	
	C16502	F1K1E475A134	C 4.7UF 25V	1	
	C16503	F2A1E221B726	E 220UF, 25V	1	PAVCTH
	C16505	F1K1E105A029	C 1UF, 25V	1	
	C16506	F1H1C105A145	C 1 uF 16 V	1	
	C16508	F1K1E105A029	C 1UF, 25V	1	
	C16531	F1K1E105A029	C 1UF, 25V	1	
	C16534	F1H1C105A145	C 1 uF 16 V	1	
	C16551	F1K1E105A029	C 1UF, 25V	1	
	C16561	FLJ1A106A087	C 10UF, 10V	1	
	C16562	F1H1C105A145	C 1 uF 16 V	1	
	C16563	F1H1C105A145	C 1 uF 16 V	1	
	C16565	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C16566	ECJ1VB1H103K	C 0.01UF, 50V	1	
	C16584	ECJ1VB1H392K	C 3900UF, 50V	1	
	C16593	F1H1H102A831	C 1000PF, 50V	1	PAVCTH
	C16602	F1H1H2200008	C 22PF, 50V	1	
	C16603	F1K2J471A042	C 470PF, 630V	1	PAVCTH
	C16631	F0C2E225A306	C 2.2UF, 250V	1	PAVCTH
	C16632	F0C2E225A306	C 2.2UF, 250V	1	PAVCTH
	C16641	F1K2J222A024	C 2200PF, 630V	1	PAVCTH
	C16661	F1K2J1020001	C 1000PF, 630V	1	PAVCTH
	C16662	F1K2J1020001	C 1000PF, 630V	1	PAVCTH
	C16663	F1K2J2210003	C 220PF, 630V	1	PAVCTH
	C16668	F1H1H821A831	C 820 PF, 50V	1	
	C16685	F1H1H104A913	C 0.1UF, K, 50V	1	
	C16723	F1K1E105A029	C 1UF, 25V	1	
	C16724	F1K1E475A134	C 4.7UF 25V	1	
	C16753	F1K1E105A029	C 1UF, 25V	1	
	C16770	F1H1C105A145	C 1 uF 16 V	1	
	C16791	F2A1E221B726	E 220UF, 25V	1	PAVCTH
	C16793	F2A1E221B726	E 220UF, 25V	1	PAVCTH
	C16794	FLJ1A106A087	C 10UF, 10V	1	
	C16795	F2A1E221B726	E 220UF, 25V	1	PAVCTH
	C16796	F1K1E475A134	C 4.7UF 25V	1	
	C16813	F2A2T1210001	E 120UF, 220V	1	
	C16833	F1K2J1020001	C 1000PF, 630V	1	PAVCTH
	C16834	F1K2J1020001	C 1000PF, 630V	1	PAVCTH
	C16835	F2AZZ121A033	E 120UF, 80V	1	PAVCTH
	C16842	F2A2C1010028	E 100UF, 160V	1	
	C16843	ECJ1VB1A105K	C 1UF, 10V	1	
	C16844	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16854	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16856	ECJ1VB1A105K	C 1UF, 10V	1	
	C16858	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16860	ECJ1VB1A105K	C 1UF, 10V	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	C16861	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16862	ECJ1VB1A105K	C 1UF, 10V	1	
	C16863	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C16891	FlK1E105A029	C 1UF, 25V	1	
	C16902	FlK2J332A024	C 3300PF, 630V	1	PAVCTH
	C16905	FlK2J331A042	C 330PF, 630V	1	PAVCTH
	C16907	FlK2J331A042	C 330PF, 630V	1	PAVCTH
	C16908	FlL2J472A021	C 4700PF, 630V	1	PAVCTH
	C16910	FlK2J821A043	C 820PF, 630V	1	PAVCTH
	C16912	FlK2J821A043	C 820PF, 630V	1	PAVCTH
	C16915	FlL2J562A021	C 5600PF, 630V	1	PAVCTH
	C17101	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17102	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17103	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17108	FlL2E224A028	C 0.22UF, 250V	1	
	C17109	FlL2E224A028	C 0.22UF, 250V	1	
	C17111	FlL2E224A028	C 0.22UF, 250V	1	
	C17131	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17132	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17134	FlL2E224A028	C 0.22UF, 250V	1	
	C17136	FlL2E224A028	C 0.22UF, 250V	1	
	C17137	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17138	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17139	FlL2E224A028	C 0.22UF, 250V	1	
	C17142	FlL2E224A028	C 0.22UF, 250V	1	
	C17143	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C17150	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17151	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17152	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17153	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17154	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17155	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17156	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17157	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17201	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17203	FlL2E224A028	C 0.22UF, 250V	1	
	C17204	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17205	FlL2E224A028	C 0.22UF, 250V	1	
	C17207	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17208	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17209	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17210	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17211	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17212	FlH1A105A099	C 1UF, 10V	1	PAVCTH
	C17213	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
	C17226	FlL2E224A028	C 0.22UF, 250V	1	
	C17229	FlL2E224A028	C 0.22UF, 250V	1	
	C17230	FlL2E224A028	C 0.22UF, 250V	1	
	C17233	FlL2E224A028	C 0.22UF, 250V	1	
	C17235	FlL2E224A028	C 0.22UF, 250V	1	
	C17236	FlL2E224A028	C 0.22UF, 250V	1	
	C17239	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17240	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17241	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17242	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17243	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17244	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17245	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	C17246	FlH1H102A831	C 1000PF, 50V	1	PAVCTH
	CB1	K1MY55B00001	55P CONNECTOR	1	
	CB2	K1MY55B00001	55P CONNECTOR	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	CB3	K1MY55B00001	55P CONNECTOR	1	
	CB4	K1MY55B00001	55P CONNECTOR	1	
	CB5	K1MY55B00001	55P CONNECTOR	1	
	CB6	K1MY55B00001	55P CONNECTOR	1	
	CB7	K1MY55B00001	55P CONNECTOR	1	
	CB8	K1MY55B00001	55P CONNECTOR	1	
	CB9	K1MY55B00001	55P CONNECTOR	1	
	CB10	K1MY55B00001	55P CONNECTOR	1	
	CB11	K1MY55B00001	55P CONNECTOR	1	
	CB12	K1MY55B00001	55P CONNECTOR	1	
	CB13	K1MY55B00001	55P CONNECTOR	1	
	CB14	K1MY55B00001	55P CONNECTOR	1	
	CB15	K1MY55B00001	55P CONNECTOR	1	
	CN0100	K1KA14A00248	14P CONNECTOR	1	
	D2820	B3AGB0000065	LED	1	
	D3009	DZ2J140M0L	ZENER DIODE	1	
	D3010	DZ2J140M0L	ZENER DIODE	1	
	D3021	DZ2J140M0L	ZENER DIODE	1	
	D3022	DZ2J140M0L	ZENER DIODE	1	
	D3023	DZ2J140M0L	ZENER DIODE	1	
	D3024	DZ2J140M0L	ZENER DIODE	1	
	D3025	DZ2J140M0L	ZENER DIODE	1	
	D3026	DZ2J140M0L	ZENER DIODE	1	
	D3201	K7AAAY000015	PHOTO LINK	1	PAVCTH
	D4703	DZ2J056M0L	ZENER DIODE	1	
	D4771	DZ2J056M0L	ZENER DIODE	1	
	D4773	B0JCCE000021	DIODE	1	
	D8710	DA2J10100L	DIODE	1	
	D8771	B0ADCK000001	DIODE	1	
	D8772	DZ2J068M0L	ZENER DIODE	1	
	D8773	DZ2J068M0L	ZENER DIODE	1	
	D9802	B0ADCK000001	DIODE	1	
	D14651	B0ECKM000046	DIODE	1	
	D14652	B0ECKM000046	DIODE	1	
	D14661	B0JCDE000006	DIODE	1	
	D14851	B0ECKM000046	DIODE	1	
	D14901	B0JCDE000006	DIODE	1	
	D14903	DA2J10100L	DIODE	1	
	D14904	DA3X103E0L	DIODE	1	PAVCTH
	D14905	DA2J10100L	DIODE	1	
	D14906	B0JCDE000006	DIODE	1	
	D16002	B0ECKP000061	DIODE	1	PAVCTH
	D16021	DA3CF30ACL	ZENER DIODE	1	
	D16024	DA3CF30ACL	ZENER DIODE	1	
	D16041	B0FBCN000005	DIODE	1	
	D16051	B0FBCN000005	DIODE	1	
	D16071	B0ECKP000055	DIODE	1	
	D16072	B0ECKP000055	DIODE	1	
	D16131	B0ECKP000055	DIODE	1	
	D16133	DA2J10100L	DIODE	1	
	D16134	DZ2J051M0L	ZENER DIODE	1	
	D16135	DA2J10100L	DIODE	1	
	D16191	B0ECKP000055	DIODE	1	
	D16192	DA2J10100L	DIODE	1	
	D16196	DZ2J200M0L	ZENER DIODE	1	
	D16243	DA3X103E0L	DIODE	1	PAVCTH
	D16251	DZ2J330M0L	ZENER DIODE	1	
	D16252	DZ2J330M0L	ZENER DIODE	1	
	D16254A	B3ABB0000381	LED	1	PAVCTH
	D16255	DA2J10100L	DIODE	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	D16285	DA3X102D0L	DIODE	1	PAVCTH
	D16286	DA2J10100L	DIODE	1	
	D16315	DZ2J150M0L	ZENER DIODE	1	
	D16316	B0ECKP000055	DIODE	1	
	D16317	B0ECHS000002	DIODE	1	
	D16401	B0ECKP000061	DIODE	1	PAVCTH
	D16402	B0ECKP000061	DIODE	1	PAVCTH
	D16407	B0JCDE000006	DIODE	1	
	D16411	DA2J10100L	DIODE	1	
	D16413	DA2J10100L	DIODE	1	
	D16421	DA3CF30ACL	ZENER DIODE	1	
	D16432	B0ECKP000055	DIODE	1	
	D16434	DA3CF30ACL	ZENER DIODE	1	
	D16461	B0FBCN000005	DIODE	1	
	D16473	DA2J10100L	DIODE	1	
	D16477	DA2J10100L	DIODE	1	
	D16481	B0FBCN000005	DIODE	1	
	D16506	DZ2J051M0L	ZENER DIODE	1	
	D16534	DZ2J051M0L	ZENER DIODE	1	
	D16536	B0ECKP000055	DIODE	1	
	D16581	DZ2J330M0L	ZENER DIODE	1	
	D16582	DZ2J330M0L	ZENER DIODE	1	
	D16583	B3ABB0000381	LED	1	PAVCTH
	D16601	DZ2J051M0L	ZENER DIODE	1	
	D16618	B0ECKP000055	DIODE	1	
	D16641	DA3CF32ACL	ZENER DIODE	1	PAVCTH
	D16643	DA3CF32ACL	ZENER DIODE	1	PAVCTH
	D16648	DA2J10100L	DIODE	1	
	D16652	B0ECKP000055	DIODE	1	
	D16662	DZ2J220M0L	TRANSISTOR	1	
	D16663	DZ2J220M0L	TRANSISTOR	1	
	D16669	DA2J10100L	DIODE	1	
	D16673	B0ECHR000004	DIODE	1	
	D16674	B0ECHR000004	DIODE	1	
	D16676	DA2J10100L	DIODE	1	
	D16685	DA2J10100L	DIODE	1	
	D16686	DA2J10100L	DIODE	1	
	D16711	B0ECHR000004	DIODE	1	
	D16712	B0ECKP000055	DIODE	1	
	D16713	B0ECHS000002	DIODE	1	
	D16714	B0ECHS000002	DIODE	1	
	D16720	B0ECHR000004	DIODE	1	
	D16728	B0ECKP000055	DIODE	1	
	D16823	DA3X103E0L	DIODE	1	PAVCTH
	D16824	DA2J10100L	DIODE	1	
	D16825	DZ2J330M0L	ZENER DIODE	1	
	D16826	DZ2J330M0L	ZENER DIODE	1	
	D16828	DA2J10100L	DIODE	1	
	D16833	B0ECHR000004	DIODE	1	
	D17103	B0JCCD000020	DIODE	1	
	D17203	B0JCCD000020	DIODE	1	
	HS16621	K4AZ02D00004	TERMINAL	1	PAVCTH
	HS16622	K4AZ02D00004	TERMINAL	1	PAVCTH
	HS16623	K4AZ02D00004	TERMINAL	1	PAVCTH
	HS16624	K4AZ02D00004	TERMINAL	1	PAVCTH
	IC2001	C1ZBZ0004368	IC	1	
	IC2002	C1ZBZ0004683	IC	1	PAVCTH
	IC3051	C0ABBE000179	IC	1	PAVCTH
	IC4900	C1AB00003871	IC	1	PAVCTH
	IC5000	AN34044AAVF	IC	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	IC5701	C0DBEYY00175	IC	1	
	IC8000	MN2WS0250E	IC	1	PAVCTH
	IC8100	C0DBAYY01283	IC	1	PAVCTH
	IC8101	C0DBAYY01285	IC	1	PAVCTH
	IC8200	C3ABUY000020	IC	1	PAVCTH
	IC8201	C3ABUY000020	IC	1	PAVCTH
	IC8602	C0DBZYY00541	IC	1	PAVCTH
	IC8606	C0DBZYY00541	IC	1	PAVCTH
	IC8650	C1CB00003736	IC	1	PAVCTH
	IC8704	C0DBAYY01283	IC	1	PAVCTH
	IC8705	C0DBAYY01299	IC	1	PAVCTH
	IC8709	C0DBGYY01682	IC	1	
	IC8714	C0DBEYY00102	IC	1	PAVCTH
	IC8715	C0DBGYY00887	IC	1	
	IC8900	TVRS623AF	IC	1	PAVCTH
	IC8902	TVR***D	IC	1	(D) PAVCTH
	IC8902	TVR***M	IC	1	(M) PAVCTH
	IC8902	TVR***P	IC	1	(P) PAVCTH
	IC8902	TVR***S	IC	1	(S) PAVCTH
	IC8902	TVR***Z	IC	1	(Z) PAVCTH
	IC9005	C0CBCAG00046	IC	1	
	IC9300	C1AB00003813	IC	1	PAVCTH
	IC9304	TVRS877AB	IC	1	PAVCTH
	IC9400	C0JBAZ001120	IC	1	
	IC9401	C0JBAZ001120	IC	1	
	IC9402	C0JBAZ001120	IC	1	
	IC9803	C0DBAYY01283	IC	1	PAVCTH
	IC9804	C0DBZYY00541	IC	1	PAVCTH
	IC14601	AN16620A-VT	IC	1	PAVCTH
	IC14602	AN16620A-VT	IC	1	PAVCTH
	IC14603	AN16620A-VT	IC	1	PAVCTH
	IC14604	AN16620A-VT	IC	1	PAVCTH
	IC14605	AN16620A-VT	IC	1	PAVCTH
	IC14606	AN16620A-VT	IC	1	PAVCTH
	IC14801	AN16620A-VT	IC	1	PAVCTH
	IC14802	AN16620A-VT	IC	1	PAVCTH
	IC14803	AN16620A-VT	IC	1	PAVCTH
	IC14804	AN16620A-VT	IC	1	PAVCTH
	IC14805	AN16620A-VT	IC	1	PAVCTH
	IC14806	AN16620A-VT	IC	1	PAVCTH
	IC14901	C0JBAU000088	IC	1	
	IC14902	C0JBAB000996	IC	1	
	IC16131	C0ZBZ0001920	IC	1	PAVCTH
	IC16132	C0ZBZ0001920	IC	1	PAVCTH
	IC16151	C0ZBZ0001920	IC	1	PAVCTH
	IC16152	C0ZBZ0001920	IC	1	PAVCTH
	IC16241	C0JBAU000088	IC	1	
	IC16304	MIP3910MSSCF	IC	1	
	IC16312	C0DBZYY00531	IC	1	PAVCTH
	IC16501	C0ZBZ0001920	IC	1	PAVCTH
	IC16502	C0ZBZ0001920	IC	1	PAVCTH
	IC16521	C0ZBZ0001920	IC	1	PAVCTH
	IC16522	C0ZBZ0001920	IC	1	PAVCTH
	IC16561	AN49272A-VF	IC	1	PAVCTH
	IC16563	C0JBAB000996	IC	1	
	IC16600	C1ZBZ0004559	IC	1	PAVCTH
	IC16603	C0JBAA000344	IC	1	
	IC16725	C1ZBZ0004715	IC	1	PAVCTH
	IC16784	MIP3910MSSCF	IC	1	
	IC16785	C0DBZYY00532	IC	1	PAVCTH
	IC16786	MIP3910MSSCF	IC	1	
	IC16787	C0DBZYY00532	IC	1	PAVCTH

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	IC16795	C0CBALC00012	IC	1	
	IC16921	C1ZBZ0004557	IC	1	PAVCTH
	IC17101	C0JBAU000088	IC	1	
	IC17201	C0JBAU000088	IC	1	
	JK3001	K1FY315A0014	CONNECTOR	1	PAVCTH
	JK3100B	K1U920A00004	CONNECTOR UNIT	1	PAVCTH
	JK3202	K2HC1YYB0079	JACK	1	PAVCTH
	JK4700	K1FY119D0025	CONNECTOR	1	PAVCTH
	JK4701	K1FY119D0025	CONNECTOR	1	PAVCTH
	JK8600	K1NA12E00016	12P CONNECTOR	1	
	JK8601	K1FY208B0013	CONNECTOR	1	PAVCTH
	JK8602	K2LC1YYA0018	JACK	1	PAVCTH
	JS1050	D0GA360JA023	M 36 OHM, J,1/16W	1	
	JS1051	D0GA360JA023	M 36 OHM, J,1/16W	1	
	JS1052	D0GA360JA023	M 36 OHM, J,1/16W	1	
	K1	K1KY07AA0719	7P CONNECTOR	1	
	L2000	J0JYC0000464	FILTER	1	PAVCTH
	L4901	G1C150MA0533	INDUCTION COIL	1	PAVCTH
	L4902	G1C150MA0533	INDUCTION COIL	1	PAVCTH
	L4903	G1C150MA0533	INDUCTION COIL	1	PAVCTH
	L4904	G1C150MA0533	INDUCTION COIL	1	PAVCTH
	L6703	D0GAR00J0005	M 0 OHM, 1/16W	1	
	L6707	J0JYC0000464	FILTER	1	PAVCTH
	L8001	J0JCC0000287	CHIP INDUCTOR	1	
	L8002	J0JYC0000464	FILTER	1	PAVCTH
	L8003	J0JCC0000021	CHIP INDUCTOR	1	
	L8004	J0JCC0000287	CHIP INDUCTOR	1	
	L8005	J0JYC0000464	FILTER	1	PAVCTH
	L8100	G1C1R5ZA0311	INDUCTION COIL	1	PAVCTH
	L8101	G1C4R7ZA0311	INDUCTION COIL	1	PAVCTH
	L8600	J0ZZB0000142	FILTER	1	(Z)
	L8601	J0ZZB0000142	FILTER	1	(Z)
	L8603	J0ZZB0000142	FILTER	1	(Z)
	L8604	J0JYC0000464	FILTER	1	PAVCTH
	L8606	J0JYC0000464	FILTER	1	PAVCTH
	L8607	J0JYC0000464	FILTER	1	PAVCTH
	L8704	G1C1R5ZA0311	INDUCTION COIL	1	PAVCTH
	L8705	G1C4R7ZA0311	INDUCTION COIL	1	PAVCTH
	L9006	G1C1R5ZA0311	INDUCTION COIL	1	PAVCTH
	L9008	J0JYC0000464	FILTER	1	PAVCTH
	L9300	J0JYC0000464	FILTER	1	PAVCTH
	L9303	J0JYC0000464	FILTER	1	PAVCTH
	L9305	J0JYC0000464	FILTER	1	PAVCTH
	L9306	J0JYC0000464	FILTER	1	PAVCTH
	L9307	J0JYC0000464	FILTER	1	PAVCTH
	L9308	J0JYC0000464	FILTER	1	PAVCTH
	L16001	G0CR30KA0235	PEAKING COIL	1	PAVCTH
	L16071	G0ZZ00002183	PEAKING COIL	1	
	L16072	G0ZZ00002183	PEAKING COIL	1	
	L16080	G0ZZ00002183	PEAKING COIL	1	
	L16081	G0ZZ00002183	PEAKING COIL	1	
	L16082	G0ZZ00002183	PEAKING COIL	1	
	L16083	G0ZZ00002183	PEAKING COIL	1	
	L16303	G0C471MA0049	PEAKING COIL	1	
	L16411	G0CR29KA0235	PEAKING COIL	1	PAVCTH
	L16430	G0ZZ00002183	PEAKING COIL	1	
	L16432	G0ZZ00002183	PEAKING COIL	1	
	L16434	G0ZZ00002183	PEAKING COIL	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	L16435	G0ZZ00002183	PEAKING COIL	1	
	L16436	G0ZZ00002183	PEAKING COIL	1	
	L16437	G0ZZ00002183	PEAKING COIL	1	
	L16660	G0C820Z00002	PEAKING COIL	1	PAVCTH
	PA2000	K5H4022A0031	FUSE	1	
	PA8704	K5H5022A0031	FUSE	1	
	PC14901	B3PBE0000065	IC	1	PAVCTH
	PC14902	B3PBE0000065	IC	1	PAVCTH
	PC14903	B3PBE0000060	IC	1	
	PC16131	B3PBE0000065	IC	1	PAVCTH
	PC16191	B3PBA0000625	IC	1	PAVCTH
	PC16251	B3PBA0000611	IC	1	PAVCTH
	PC16301	B3PBA0000611	IC	1	PAVCTH
	PC16461	B3PBE0000065	IC	1	PAVCTH
	PC16462	B3PBE0000060	IC	1	
	PC16480	B3PBA0000611	IC	1	PAVCTH
	PC16581	B3PBA0000611	IC	1	PAVCTH
	PC16603	B3PBA0000611	IC	1	PAVCTH
	PC16685	B3PBA0000625	IC	1	PAVCTH
	PC16723	B3PBA0000611	IC	1	PAVCTH
	PC16896	B3PBA0000611	IC	1	PAVCTH
	PC16897	B3PBA0000611	IC	1	PAVCTH
	Q2001	B1CHPC000005	FET	1	PAVCTH
	Q2002	B1ABCE000015	TRANSISTOR	1	
	Q2003	B1CBGD000001	FET	1	
	Q2004	B1ABCE000015	TRANSISTOR	1	
	Q2007	B1ABCE000015	TRANSISTOR	1	
	Q2810	B1ABCE000015	TRANSISTOR	1	
	Q2811	B1ABCE000015	TRANSISTOR	1	
	Q2812	B1ABCE000015	TRANSISTOR	1	
	Q3008	B1ADCF000194	TRANSISTOR	1	
	Q3102	B1ABKE000001	TRANSISTOR	1	PAVCTH
	Q3103	B1ABKE000001	TRANSISTOR	1	PAVCTH
	Q3304	B1ADCF000194	TRANSISTOR	1	
	Q3305	B1ABKE000001	TRANSISTOR	1	PAVCTH
	Q3306	B1ABKE000001	TRANSISTOR	1	PAVCTH
	Q3307	B1ABBE000003	TRANSISTOR	1	
	Q4700	B1ABCF000231	TRANSISTOR	1	
	Q4709	B1ABCF000231	TRANSISTOR	1	
	Q8771	B1HFCEA00001	TRANSISTOR	1	
	Q9201	B1HFCEA00001	TRANSISTOR	1	
	Q9202	B1ABCE000015	TRANSISTOR	1	
	Q16001	B1JADN000013	TRANSISTOR	1	PAVCTH
	Q16002	B1JADN000013	TRANSISTOR	1	PAVCTH
	Q16021	DG3C3010CL	TRANSISTOR	1	
	Q16022	DG3C3010CL	TRANSISTOR	1	
	Q16041	DG3D3020CVLW	TRANSISTOR	1	PAVCTH
	Q16051	DG3D3020CVLW	TRANSISTOR	1	PAVCTH
	Q16101	B1CFRM000031	FET	1	PAVCTH
	Q16102	B1CFRM000032	FET	1	PAVCTH
	Q16191	B1HFPPA00001	TRANSISTOR	1	
	Q16251	B1ABCF000231	TRANSISTOR	1	
	Q16280	B1ADCE000027	TRANSISTOR	1	
	Q16401	B1JADN000013	TRANSISTOR	1	PAVCTH
	Q16402	B1JADN000013	TRANSISTOR	1	PAVCTH
	Q16421	DG3D3010CVLW	TRANSISTOR	1	PAVCTH
	Q16422	DG3D3010CVLW	TRANSISTOR	1	PAVCTH
	Q16441	B1JAEN000015	TRANSISTOR	1	
	Q16451	DG3D3020CVLW	TRANSISTOR	1	PAVCTH

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	Q16581	B1ABCF000231	TRANSISTOR	1	
	Q16601	B1CERQ000061	FET	1	
	Q16602	B1CFGF000019	FET	1	PAVCTH
	Q16621	DG3C3020CL	TRANSISTOR	1	
	Q16622	DG3C3020CL	TRANSISTOR	1	
	Q16646	B1CFGF000019	FET	1	PAVCTH
	Q16647	B1CBGD000001	FET	1	
	Q16648	DSC2001Q0L	TRANSISTOR	1	
	Q16652	B1ADCE000027	TRANSISTOR	1	
	Q16660	B1CFNQ000003	FET	1	PAVCTH
	Q16661	DG3C6010CL	TRANSISTOR	1	PAVCTH
	Q16762	B1HFFFA00001	TRANSISTOR	1	
	Q16815	B1ABCE000015	TRANSISTOR	1	
	Q16817	DSC2001Q0L	TRANSISTOR	1	
	Q16820	B1CFGF000019	FET	1	PAVCTH
	Q16891	B1ADCE000027	TRANSISTOR	1	
	Q16921	B1CFGF000019	FET	1	PAVCTH
	Q16931	B1ABCE000015	TRANSISTOR	1	
	R050	D0GAR00J0005	M 0 OHM, 1/16W	1	(Z)
	R061	D0GAR00J0005	M 0 OHM, 1/16W	1	(D) (M) (P) (S)
	R074	D0GAR00J0005	M 0 OHM, 1/16W	1	
	R0902	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R0903	D0GA272JA023	M 2.7KOHM, J,1/16W	1	
	R0904	D0GA272JA023	M 2.7KOHM, J,1/16W	1	
	R0905	D0GA272JA023	M 2.7KOHM, J,1/16W	1	
	R0906	D0GA272JA023	M 2.7KOHM, J,1/16W	1	
	R0909	D0GA272JA023	M 2.7KOHM, J,1/16W	1	
	R0910	D0GA272JA023	M 2.7KOHM, J,1/16W	1	
	R0911	D1HY3324A012	NETWORK RESISTER	1	PAVCTH
	R0912	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R0913	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R0936	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0937	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0941	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0942	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0943	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0944	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0945	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0946	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0949	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0950	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R0952	D0GA102JA023	M1KOHM, J,1/16 W	1	
	R0953	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R0954	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R2001	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R2004	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R2008	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R2012	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R2015	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R2016	D0GA104JA023	M100KOHM, J,1/16 W	1	
	R2017	D0GA102JA023	M1KOHM, J,1/16 W	1	
	R2018	D0GA102JA023	M1KOHM, J,1/16 W	1	
	R2023	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R2024	D0GA223JA023	M 22K OHM J 1/16W	1	
	R2025	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R2033	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R2035	D0GA223JA023	M 22K OHM J 1/16W	1	
	R2036	D0GA223JA023	M 22K OHM J 1/16W	1	
	R2038	D0GA162JA023	M 1.6KOHM, J,1/16W	1	PAVCTH
	R2039	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R2041	D0GA433JA023	M 43KOHM, J,1/16W	1	PAVCTH

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R2042	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R2045	D1BA7151A023	M 7.15KOHM, F 1/16 W	1	PAVCTH
	R2046	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R2047	D0GAR00J0005	M 0 OHM, 1/16W	1	
	R2050	ERJ2RKF1911X	M 1.91KOHM, J. 1/16W	1	PAVCTH
	R2051	ERJ2RKF3091X	M 3.09KOHM, J. 1/16W	1	PAVCTH
	R2052	D1BA6041A023	M 6.04KOHM,F.1/16 W	1	PAVCTH
	R2053	D1BA1692A023	M 16.9KOHM,F.1/16 W	1	PAVCTH
	R2054	D0GA223JA023	M 22K OHM J 1/16W	1	
	R2055	D0GA223JA023	M 22K OHM J 1/16W	1	
	R2057	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R2058	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R2059	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R2060	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R2810	D0GA470JA023	M 47 OHM, J,1/16W	1	
	R2811	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R2812	D0GA224JA023	M 220KOHM J 1/16W	1	
	R2813	D0GA223JA023	M 22K OHM J 1/16W	1	
	R2814	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R2815	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R2816	D0GA471JA023	M 470OHM, J,1/16W	1	
	R2817	D0GA223JA023	M 22K OHM J 1/16W	1	
	R2818	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R2819	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R2834	D0GA122JA023	M 1.2KOHM, J,1/16W	1	
	R3001	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R3002	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R3003	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R3004	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R3008	D1BA1003A023	M 100KOHM,F,1/16W	1	PAVCTH
	R3009	D1BA1003A023	M 100KOHM,F,1/16W	1	PAVCTH
	R3010	D0GA203JA023	M 20K OHM J.1/16W	1	
	R3011	D0GA203JA023	M 20K OHM J.1/16W	1	
	R3106	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3107	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3142	D1BF75R0A073	M 75.0 OHM,F.1/4 W	1	PAVCTH
	R3167	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3168	D0GA333JA023	M 33KOHM,J,1/16W	1	
	R3171	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R3172	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R3173	D1BA1003A023	M 100KOHM,F,1/16W	1	PAVCTH
	R3181	D1BD75R0A066	M 75.0 OHM,F.1/8 W	1	
	R3182	D1BD75R0A066	M 75.0 OHM,F.1/8 W	1	
	R3183	D1BD75R0A066	M 75.0 OHM,F.1/8 W	1	
	R3188	D1BA1003A023	M 100KOHM,F,1/16W	1	PAVCTH
	R3192	D1HY2204A012	NETWORK RESISTER	1	PAVCTH
	R3199	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R3200	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R3201	D1BD75R0A066	M 75.0 OHM,F.1/8 W	1	
	R3203	D1BD75R0A066	M 75.0 OHM,F.1/8 W	1	
	R3207	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R3209	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R3210	D1HY2204A012	NETWORK RESISTER	1	PAVCTH
	R3213	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R3214	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R3216	D1BD75R0A066	M 75.0 OHM,F.1/8 W	1	
	R3220	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R3221	D1HY2204A012	NETWORK RESISTER	1	PAVCTH
	R3290	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R3291	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R3312	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R3314	D0GA103JA023	M10KOHM, J.1/16 W	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R3315	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R3316	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R3317	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R3319	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R3320	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R3322	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R3323	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R3324	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R3342	D0GA331JA023	M 330 OHM, J,1/16W	1	
	R3343	D0GA331JA023	M 330 OHM, J,1/16W	1	
	R4513	D1BA1600A023	M 160 OHM,F.1/16 W	1	PAVCTH
	R4514	D1BA82R0A014	M 82 OHM,F.1/16 W	1	PAVCTH
	R4702	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R4708	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R4709	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R4710	D1HY4734A012	NETWORK RESISTER	1	PAVCTH
	R4711	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4728	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R4748	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4749	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4750	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4751	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R4779	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R4788	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R4794	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R4795	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R4796	D1HY4734A012	NETWORK RESISTER	1	PAVCTH
	R4797	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4798	D0GA273JA023	M 27K OHM J ,1/16W	1	
	R4900	D0GFR00J0005	M 0 OHM,J,1/3W	1	
	R4901	D1HY6804A012	NETWORK RESISTER	1	PAVCTH
	R4906	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R4907	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4908	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R4958	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R5000	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R5001	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R5008	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R5009	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R5010	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R5011	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R5012	D0GA223JA023	M 22K OHM J 1/16W	1	
	R5013	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R5014	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R5714	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R5734	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R5735	D1BA1302A023	M 13KOHM,F,1/16W	1	PAVCTH
	R5736	D1BA1002A023	M 10KOHM,F,1/16W	1	PAVCTH
	R5747	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R5932	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R6703	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R6726	D0GA681JA023	M680 OHM, J,1/16W	1	
	R6727	D0GA681JA023	M680 OHM, J,1/16W	1	
	R6731	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R6732	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8008	D0GA331JA023	M 330 OHM, J,1/16W	1	
	R8009	D0GA1R1JA023	M 1.1OHM, J,1/16W	1	PAVCTH
	R8100	D1BB2001A197	M 2 KOHM,F,1/10 W	1	PAVCTH
	R8101	D1BB1051A087	M 1.05 KOHM,F.1/10 W	1	PAVCTH
	R8111	D1BB2001A197	M 2 KOHM,F.1/10 W	1	PAVCTH
	R8112	D1BB1961A087	M 1.96 KOHM,F.1/10 W	1	PAVCTH
	R8200	D1BA2400A023	M 240 OHM,F.1/16 W	1	PAVCTH

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R8203	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8204	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8205	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8206	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8207	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8208	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8217	D0GA221JA023	M220 OHM, J.1/16 W	1	
	R8218	D0GA221JA023	M220 OHM, J.1/16 W	1	
	R8219	D1BA2400A023	M 240 OHM, F.1/16 W	1	PAVCTH
	R8220	D1BA2400A023	M 240 OHM, F.1/16 W	1	PAVCTH
	R8221	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8230	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8231	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8232	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8233	D1BA2700A023	M 270 OHM, F.1/16 W	1	PAVCTH
	R8234	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R8235	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R8236	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R8237	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R8238	D0GA220JA023	M22 OHM, J.1/16 W	1	
	R8240	D1HY2208A012	NETWORK RESISTER	1	PAVCTH
	R8241	D1HY2204A012	NETWORK RESISTER	1	PAVCTH
	R8242	D1HY2204A012	NETWORK RESISTER	1	PAVCTH
	R8243	D1HY2204A012	NETWORK RESISTER	1	PAVCTH
	R8300	D0GA471JA023	M 470OHM, J,1/16W	1	
	R8301	D1BA6201A023	M 6.2 KOHM, F.1/16 W	1	PAVCTH
	R8302	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R8303	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R8304	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R8305	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R8418	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8441	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8444	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8502	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8506	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8515	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8600	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8607	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8608	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8617	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8618	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8620	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8621	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8624	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8625	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8626	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8627	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8628	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8629	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8630	EXB2HV103JV	M 10 KOHM 1/16 W	1	
	R8632	D1HY6804A012	NETWORK RESISTER	1	PAVCTH
	R8634	D1HY6804A012	NETWORK RESISTER	1	PAVCTH
	R8636	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R8637	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R8638	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R8639	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8640	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8641	D1HYR004A024	NETWORK RESISTER	1	(D) (M) (P) (S) PAVCTH
	R8642	D1HYR004A024	NETWORK RESISTER	1	(D) (M) (P) (S) PAVCTH
	R8648	D1HYR004A024	NETWORK RESISTER	1	(D) (M) (P) (S) PAVCTH
	R8650	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8651	D0GA152JA023	M 1.5KOHM, J,0.063W	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R8653	D0GAR00J0005	M 0 OHM, 1/16W	1	
	R8654	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8655	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8656	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8657	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8658	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8659	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8660	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8661	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8662	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8663	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8664	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8665	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R8666	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8668	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8670	D1BA2491A023	M 2.49KOHM,F,1/16W	1	PAVCTH
	R8681	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8683	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8691	D0GAR00J0005	M 0 OHM, 1/16W	1	
	R8694	D1BA1822A023	M 18.2KOHM,F,1/16 W	1	PAVCTH
	R8695	D1BA3742A023	M 37.4 KOHM,F,1/16 W	1	PAVCTH
	R8705	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8707	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R8718	D0GBR00J0004	M 0 OHM J 1/10W	1	
	R8741	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R8742	D0GA223JA023	M 22K OHM J 1/16W	1	
	R8746	D1BA6802A023	M 68 KOHM,F,1/16 W	1	PAVCTH
	R8747	D1BA2102A023	M 21KOHM,F,1/16W	1	PAVCTH
	R8751	D0GB563ZA038	M 56KOHM, J,1/10W	1	PAVCTH
	R8752	D0GB103ZA038	M 10K OHM J 1/10W	1	PAVCTH
	R8771	D0GA272JA023	M 2.7KOHM, J,1/16W	1	
	R8772	D0GA332JA023	M 3.3KOHM, J,1/16W	1	
	R8773	D0GA102JA023	M1KOHM, J,1/16 W	1	
	R8775	D0GA104JA023	M100KOHM, J,1/16 W	1	
	R8776	D0GA102JA023	M1KOHM, J,1/16 W	1	
	R8777	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8778	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8785	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8787	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8788	D0GA102JA023	M1KOHM, J,1/16 W	1	
	R8792	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8797	D1BA1200A023	M 120 OHM,F,1/16 W	1	PAVCTH
	R8798	D1BA56R0A023	M 56 OHM,F,1/16 W	1	PAVCTH
	R8801	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8802	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8804	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8806	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8807	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8809	D1HY1034A012	NETWORK RESISTER	1	PAVCTH
	R8810	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8811	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8812	D0GA243JA023	M 24K OHM J 0.063W	1	
	R8815	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8817	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8824	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8826	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8827	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8833	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8848	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8850	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8851	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R8853	D0GA103JA023	M10KOHM, J,1/16 W	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R8854	D1HY1038A012	NETWORK RESISTER	1	PAVCTH
	R8855	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8903	D1HY6808A012	NETWORK RESISTER	1	PAVCTH
	R8906	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8909	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R8910	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8914	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R8917	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8918	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8919	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8920	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8921	D0GA223JA023	M 22K OHM J 1/16W	1	
	R8922	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8923	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R8924	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R9039	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R9105	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R9117	D0GB203ZA038	M 20KOHM J 1/10W	1	PAVCTH
	R9118	D0GB123ZA038	M 12KOHM,J.1/10W	1	PAVCTH
	R9126	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R9160	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R9163	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R9164	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R9165	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R9168	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R9198	D1HY6804A012	NETWORK RESISTER	1	PAVCTH
	R9199	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R9205	D0GA122JA023	M 1.2KOHM, J,1/16W	1	
	R9206	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R9208	D1HY6804A012	NETWORK RESISTER	1	PAVCTH
	R9209	D1HY6808A012	NETWORK RESISTER	1	PAVCTH
	R9231	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R9232	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R9246	D0GA104JA023	M100KOHM, J.1/16 W	1	
	R9247	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R9248	D0GA473JA023	M 47KOHM, J,1/16W	1	
	R9249	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R9250	D0GA472JA023	M 4.7KOHM, J,1/16W	1	
	R9252	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R9255	D0GA360JA023	M 36 OHM, J,1/16W	1	
	R9256	D0GA272JA023	M 2.7KOHM, J.1/16W	1	
	R9320	D0GA182JA023	M 1.8KOHM, J,0.063W	1	
	R9321	D0GA105JA023	M 1M OHM, J,1/16W	1	
	R9324	D0GA162JA023	M 1.6KOHM, J,1/16W	1	PAVCTH
	R9325	D0GA162JA023	M 1.6KOHM, J,1/16W	1	PAVCTH
	R9326	D0GA162JA023	M 1.6KOHM, J,1/16W	1	PAVCTH
	R9327	D0GA162JA023	M 1.6KOHM, J,1/16W	1	PAVCTH
	R9400	D1HY1038A012	NETWORK RESISTER	1	PAVCTH
	R9401	D1HY1038A012	NETWORK RESISTER	1	PAVCTH
	R9404	D1HY1038A012	NETWORK RESISTER	1	PAVCTH
	R9405	D1HY6808A012	NETWORK RESISTER	1	PAVCTH
	R9503	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R9608	D1HY2208A012	NETWORK RESISTER	1	PAVCTH
	R9610	D1HY2208A012	NETWORK RESISTER	1	PAVCTH
	R9802	D1BA3742A023	M 37.4 KOHM,F.1/16 W	1	PAVCTH
	R9803	F1G1A105A047	C 1UF 10V	1	
	R9813	D0GA103JA023	M10KOHM, J.1/16 W	1	
	R9907	D0GA101JA023	M 100 OHM, J,1/16W	1	
	R9935	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R9937	D0GA680JA023	M 68 OHM, J,1/16W	1	
	R9941	D0GA102JA023	M1KOHM, J.1/16 W	1	
	R9943	D0GA102JA023	M1KOHM, J.1/16 W	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R9946	D0GA103JA023	M10KOHM, J,1/16 W	1	
	R14604	D0GD220JA052	M 22 OHM, J,1/8W	1	
	R14605	D0GB103JA065	M 10K OHM J 1/10W	1	
	R14681	D0GB470JA065	M 47 OHM, J,1/10W	1	
	R14805	D0GB101JA065	M 100 OHM, J,1/10W	1	
	R14901	D0GD271JA052	M 270 OHM, J,1/8W	1	
	R14902	D0GD271JA052	M 270 OHM, J,1/8W	1	
	R14907	D0GD271JA052	M 270 OHM, J,1/8W	1	
	R14908	D0GD271JA052	M 270 OHM, J,1/8W	1	
	R14911	D0GD271JA052	M 270 OHM, J,1/8W	1	
	R14916	D0GB103JA065	M 10K OHM J 1/10W	1	
	R14917	D0GD203JA052	M 20KOHM, J,1/8W	1	
	R14918	D0GD100JA052	M 10 OHM, J,1/8W	1	
	R14921	D1H82204A041	NETWORK RESISTER	1	PAVCTH
	R14922	D1H82204A041	NETWORK RESISTER	1	PAVCTH
	R14924	D0GB220JA065	M 22 OHM J 1/10W	1	
	R14925	D0GB220JA065	M 22 OHM J 1/10W	1	
	R14929	D0GD102JA052	M 1.0KOHM, J,1/8W	1	
	R14931	D0GB100JA065	M 10 OHM J 1/10W	1	
	R14933	D0GB220JA065	M 22 OHM J 1/10W	1	
	R14934	D0GB680JA065	M 560 OHM, J,1/10W	1	PAVCTH
	R16001	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16002	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16021	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16022	D0GF7R5JA047	M 7.5 OHM, J, 1/3W	1	
	R16031	D0GF473JA048	M 47KOHM, J,1/3W	1	
	R16032	D0GF473JA048	M 47KOHM, J,1/3W	1	
	R16041	D0GF5R6JA047	M 5.6 OHM, J, 1/3W	1	
	R16051	D0GF5R6JA047	M 5.6 OHM, J, 1/3W	1	
	R16072	D0D2100JA038	W 100 OHM, 2W	1	PAVCTH
	R16101	D0GD150JA059	M 15 OHM, J,1/4W	1	
	R16102	D0GD150JA059	M 15 OHM, J,1/4W	1	
	R16105	D0GF474JA048	M 470KOHM, J,1/3W	1	
	R16109	D0GD100JA059	M 10 OHM, J,1/4W	1	
	R16116	D0GB473JA065	M 47KOHM J. 1/10W	1	
	R16130	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16132	D0GB220JA065	M 22 OHM J 1/10W	1	
	R16133	D1BD2700A066	M 270KOHM, F,1/8W	1	PAVCTH
	R16137	D0GZ1R0JA020	M 1 OHM, J,1/2W	1	
	R16138	D0GF911JA048	M 910 OHM, J,1/4W	1	PAVCTH
	R16139	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16152	D0GB220JA065	M 22 OHM J 1/10W	1	
	R16153	D1BD2700A066	M 270KOHM, F,1/8W	1	PAVCTH
	R16191	D1BD2700A066	M 270KOHM, F,1/8W	1	PAVCTH
	R16192	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16193	D0GD750JA052	M 75 OHM, J,1/8W	1	
	R16195	D0GF1R0JA047	M 1 OHM, J,1/3W	1	
	R16230	D0GD470JA052	M 47 OHM, J,1/8W	1	
	R16231	D1H84724A041	NETWORK RESISTER	1	PAVCTH
	R16241	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R16242	D1H84724A041	NETWORK RESISTER	1	PAVCTH
	R16244	D0GB223JA065	M 22KOHM, J,1/10W	1	
	R16252	D0GF563JA048	M 56 KOHM, J,1/3W	1	
	R16253	D1BD1003A066	M 100KOHM, F,1/8 W	1	
	R16254	D1BD4422A066	M 44.2KOHM, F,1/8W	1	PAVCTH
	R16255	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16257	D0GB473JA065	M 47KOHM J. 1/10W	1	
	R16280	D0GB222JA065	M 2.2KOHM, J,1/10W	1	
	R16283	D0GB473JA065	M 47KOHM J. 1/10W	1	
	R16285	D1H86234A041	NETWORK RESISTER	1	PAVCTH
	R16287	D0GF334JA047	M 330KOHMJ,1/3W	1	
	R16288	D0GF334JA047	M 330KOHMJ,1/3W	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R16289	D0GF334JA047	M 330KOHMJ,1/3W	1	
	R16291	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16307	D1BD5232A147	M 52.3KOHM,F.1/8W	1	PAVCTH
	R16309	D0GF273JA054	M 27 KOHM. 1/2W	1	PAVCTH
	R16311	D0GF273JA054	M 27 KOHM. 1/2W	1	PAVCTH
	R16317	D1BD5232A147	M 52.3KOHM,F.1/8W	1	PAVCTH
	R16318	D1BD4752A147	M47.5KOHM,D.1/10W	1	PAVCTH
	R16319	D1BD2491A147	M 2.49KOHM,F.1/8W	1	PAVCTH
	R16320	ERJ14YJ683	M 68KOHM, J. 1/4W	1	
	R16330	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16332	D0GB474JA065	M 470KOHM,J,1/10W	1	
	R16334	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16335	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16340	D0GD104JA052	M 100KOHM,J,1/8W	1	
	R16341	D0GD104JA052	M 100KOHM,J,1/8W	1	
	R16401	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16402	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16411	D1BD2700A066	M 270KOHM,F.1/8W	1	PAVCTH
	R16412	D1BD2700A066	M 270KOHM,F.1/8W	1	PAVCTH
	R16414	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16416	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16421	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16422	D0GF7R5JA047	M 7.5 OHM,J, 1/3W	1	
	R16432	D0D2100JA038	W 100 OHM,2W	1	PAVCTH
	R16441	D0GF5R6JA047	M 5.6 OHM,J, 1/3W	1	
	R16451	D0GF5R6JA047	M 5.6 OHM,J, 1/3W	1	
	R16466	D0GF473JA048	M 47KOHM,J,1/3W	1	
	R16467	D0GF473JA048	M 47KOHM,J,1/3W	1	
	R16471	D0GB203JA065	M 20KOHM J 1/10W	1	
	R16472	D0GB222JA065	M 2.2KOHM,J,1/10W	1	
	R16473	D0GD561JA052	M 560 OHM,J,1/8W	1	
	R16474	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16475	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16476	D0GB222JA065	M 2.2KOHM,J,1/10W	1	
	R16477	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16490	D1BD1203A147	M 120KOHM,F.1/8 W	1	PAVCTH
	R16491	D1BD1203A147	M 120KOHM,F.1/8 W	1	PAVCTH
	R16492	D1BD1203A147	M 120KOHM,F.1/8 W	1	PAVCTH
	R16493	D1BD5111A147	M 5.11KOHM,F.1/8W	1	PAVCTH
	R16501	D0GB220JA065	M 22 OHM J 1/10W	1	
	R16502	D0GB220JA065	M 22 OHM J 1/10W	1	
	R16505	D0GF102JA048	M 1.0 KOHM,J,1/3W	1	
	R16508	D0GB221JA065	M 220 OHM J 1/10W	1	
	R16522	D0GB221JA065	M 220 OHM J 1/10W	1	
	R16534	D0GF911JA048	M 910 OHM,J,1/4W	1	PAVCTH
	R16536	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R16537	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R16561	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R16562	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R16563	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R16564	D0GB470JA065	M 47 OHM,J,1/10W	1	
	R16581	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16582	D0GF563JA048	M 56 KOHM,J,1/3W	1	
	R16583	D1BD1003A066	M 100KOHM,F.1/8 W	1	
	R16584	D1BD3742A066	M 37.4KOHM,F.1/8W	1	PAVCTH
	R16585	D0GB473JA065	M 47KOHM J. 1/10W	1	
	R16587	D0GB222JA065	M 2.2KOHM,J,1/10W	1	
	R16588	D0GB223JA065	M 22KOHM,J,1/10W	1	
	R16590	D0GB221JA065	M 220 OHM J 1/10W	1	
	R16601	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R16602	D0GB220JA065	M 22 OHM J 1/10W	1	
	R16604	D0GD331JA052	M 330 OHM,J,1/8W	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R16607	D1BB2262A073	M 22.6KOHM,F.1/10W	1	PAVCTH
	R16609	D0GF102JA047	M 1.0 KOHM,J,1/3W	1	
	R16610	D0GB104JA065	M 100KOHM J 1/10W	1	
	R16612	D0GD470JA059	M 47 OHM,J,1/4W	1	
	R16615	D1BB4990A073	M 499 OHM,F.1/10W	1	PAVCTH
	R16616	D1BB4321A073	M 4.32KOHM,F.1/10W	1	PAVCTH
	R16618	D0GB100JA065	M 10 OHM J 1/10W	1	
	R16621	D0GD561JA052	M 560 OHM,J,1/8W	1	
	R16622	D0GD561JA052	M 560 OHM,J,1/8W	1	
	R16646	D0GF152JA048	M 1.5 KOHM,J,1/4W	1	PAVCTH
	R16647	D0GF152JA048	M 1.5 KOHM,J,1/4W	1	PAVCTH
	R16649	D0GD101JA059	M 100 OHM,J,1/4W	1	
	R16650	D0GB473JA065	M 47KOHM J. 1/10W	1	
	R16651	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R16652	D0GF152JA048	M 1.5 KOHM,J,1/4W	1	PAVCTH
	R16658	D1BD6491A147	M 6.49KOHM,F.1/8W	1	PAVCTH
	R16660	D1BD1741A066	M17.4KOHM,F.1/8W	1	
	R16661	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16663	D1BD9091A147	M 9.09KOHM,F.1/8W	1	PAVCTH
	R16665	D0GD222JA052	M 2.2KOHM,J,1/8W	1	
	R16666	D1BB1003A074	M 100 KOHM,F.1/10 W	1	PAVCTH
	R16674	D0GF102JA047	M 1.0 KOHM,J,1/3W	1	
	R16675	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16676	D1BD2700A066	M 270KOHM,F.1/8W	1	PAVCTH
	R16678	D0GF102JA047	M 1.0 KOHM,J,1/3W	1	
	R16681	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16682	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16685	D1BD1500A066	M 150 OHM,F.1/8 W	1	PAVCTH
	R16686	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16696	D0D52R2KA005	W 2.2 OHM,K,5W	1	
	R16761	D0GD100JA059	M 10 OHM,J,1/4W	1	
	R16763	D0GB473JA065	M 47KOHM J. 1/10W	1	
	R16772	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16773	D0GD102JA052	M 1.0KOHM,J,1/8W	1	
	R16776	D0GD470JA052	M 47 OHM,J,1/8W	1	
	R16786	D1BD5902A066	M 59 KOHM,F.1/8W	1	PAVCTH
	R16815	D0GB103JA065	M 10K OHM J 1/10W	1	
	R16821	D0GD104JA052	M 100KOHM,J,1/8W	1	
	R16822	D1BD8202A066	M 750KOHM,F.1/8W	1	PAVCTH
	R16823	D1BD6192A066	M 61.9KOHM,F.1/8W	1	PAVCTH
	R16824	D1BD3742A066	M 37.4KOHM,F.1/8W	1	PAVCTH
	R16825	D0GD104JA052	M 100KOHM,J,1/8W	1	
	R16826	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16829	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16831	D1BD6812A147	M 68.1KOHM,F.1/8W	1	PAVCTH
	R16832	D1BD7152A147	M 71.5KOHM,F.1/8W	1	PAVCTH
	R16833	D0GF683JA048	M 68 KOHM,J,1/4W	1	PAVCTH
	R16834	D0GF683JA048	M 68 KOHM,J,1/4W	1	PAVCTH
	R16835	D0GF683JA048	M 68 KOHM,J,1/4W	1	PAVCTH
	R16836	D0GF683JA048	M 68 KOHM,J,1/4W	1	PAVCTH
	R16839	ERG2FJS473D	M 47KOHM, J, 2W	1	
	R16840	ERG2FJS473D	M 47KOHM, J, 2W	1	
	R16841	D0GB472JA065	M 4.7KOHM, J,1/10W	1	
	R16842	D0GD102JA052	M 1.0KOHM,J,1/8W	1	
	R16844	ERA6YEB242	M 2.4KOHM, B 1/10W	1	
	R16845	D1BD6982A147	M69.8KOHM,D.1/10W	1	PAVCTH
	R16846	D1BD6042A147	M60.4KOHM,D.1/10W	1	PAVCTH
	R16847	D1BD6492A147	M 64.9KOHM,F.1/8W	1	PAVCTH
	R16851	D0GB474JA065	M 470KOHM,J,1/10W	1	
	R16852	D0GB474JA065	M 470KOHM,J,1/10W	1	
	R16856	D0GB102JA065	M 1KOHM,J,1/10W	1	
	R16873	ERA6YEB242	M 2.4KOHM, B 1/10W	1	

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R16891	D1BF6982A098	M 69.8 KOHM, F.1/4W	1	PAVCTH
	R16892	D1BF8252A098	M 82.5 KOHM, F.1/4W	1	PAVCTH
	R16893	D1BF8252A098	M 82.5 KOHM, F.1/4W	1	PAVCTH
	R16894	D1BB3091A074	M 3.09KOHM, F.1/10W	1	PAVCTH
	R16895	D1BB7871A074	M 7.87 KOHM, F.1/10W	1	PAVCTH
	R16897	D1BB2262A073	M 22.6KOHM, F.1/10W	1	PAVCTH
	R16898	D1BB9760A073	M 976 OHM, F.1/10W	1	PAVCTH
	R16902	D0GB6R2JA065	M 6.2 OHM J 1/10W	1	
	R16903	D1BB1471A073	M 1.47 KOHM, F.1/10 W	1	PAVCTH
	R16904	D1BB5231A073	M 5.23 KOHM, F.1/10W	1	PAVCTH
	R16919	D0GB100JA065	M 10 OHM J 1/10W	1	
	R16920	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R16921	D1BB4991A073	M 4.99 KOHM, F.1/10W	1	PAVCTH
	R16922	D1BB2152A073	M 21.5 KOHM, F.1/10 W	1	PAVCTH
	R16923	D1BB8251A073	M 8.25 KOHM, F.1/10W	1	PAVCTH
	R16927	D0GB221JA065	M 220 OHM J 1/10W	1	
	R16931	D1BF2R70A073	M 2.7 OHM, F.1/8W	1	PAVCTH
	R16932	D0GD223JA052	M 22KOHM, J, 1/8W	1	
	R16937	D0GB184JA065	M 180KOHM J 1/10W	1	
	R16939	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16940	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16945	D0GB471JA065	M 470 OHM, J, 1/10W	1	
	R16946	D0GB221JA065	M 220 OHM J 1/10W	1	
	R16947	D0GB472JA065	M 4.7KOHM, J, 1/10W	1	
	R16948	D0GB471JA065	M 470 OHM, J, 1/10W	1	
	R16991	D0GD104JA052	M 100KOHM, J, 1/8W	1	
	R16992	D0GD104JA052	M 100KOHM, J, 1/8W	1	
	R17101	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17102	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17103	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17104	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17105	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17106	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17107	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17108	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17109	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R17111	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R17113	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R17118	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17119	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17120	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17121	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17122	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R17124	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R17126	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17127	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17128	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17129	D0GB101JA065	M 100 OHM, J, 1/10W	1	
	R17130	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R17132	D0GF1R0JA047	M 1 OHM, J, 1/3W	1	
	R17134	D0GD224JA052	M 220KOHM, J, 1/8W	1	
	R17135	D0GB681JA065	M 680 OHM, J, 1/10W	1	
	R17138	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R17139	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R17140	D1H86814A041	NETWORK RESISTER	1	PAVCTH
	R17141	D0GB681JA065	M 680 OHM, J, 1/10W	1	
	R17147	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17148	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17149	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17150	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17151	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH
	R17152	D1BB49R9A073	M 49.9 OHM, F.1/10W	1	PAVCTH



Model No. : TH-P42UT50D/M/P/S/Z Parts List


Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	R17153	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17154	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17155	D0GB470JA065	M 47 OHM,J,1/10W	1	
	R17196	D0GB331JA065	M330 OHM J 1/10W	1	
	R17199	D0GD151JA059	M 150 OHM,J,1/4W	1	
	R17201	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17202	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17203	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17204	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17205	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17207	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17209	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17210	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17211	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17212	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17213	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17214	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17215	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17216	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17217	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17218	D0GB101JA065	M 100 OHM,J,1/10W	1	
	R17219	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17220	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17221	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17223	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17224	D0GB470JA065	M 47 OHM,J,1/10W	1	
	R17225	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17227	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17229	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17231	D0GF1R0JA047	M 1 OHM,J,1/3W	1	
	R17233	D0GB681JA065	M 680 OHM,J,1/10W	1	
	R17236	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R17237	D1H84704A041	NETWORK RESISTER	1	PAVCTH
	R17240	D1H86814A041	NETWORK RESISTER	1	PAVCTH
	R17243	D0GD224JA052	M 220KOHM,J,1/8W	1	
	R17245	D0GB681JA065	M 680 OHM,J,1/10W	1	
	R17249	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17250	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17251	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17252	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17253	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17254	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17255	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17256	D1BB49R9A073	M 49.9 OHM,F.1/10W	1	PAVCTH
	R17296	D0GB331JA065	M330 OHM J 1/10W	1	
	R17299	D0GD151JA059	M 150 OHM,J,1/4W	1	
	RM2810	B3RBB0000018	REMOTE SENSOR	1	
	SN2	K1KY02C00002	2P CONNECTOR	1	PAVCTH
	SN20	K1MY30BA0345	30P CONNECTOR	1	
	SN21	K1MND6BA0264	6P CONNECTOR	1	
	SN22	K1MND6BA0264	6P CONNECTOR	1	
	SN23	K1MND6BA0264	6P CONNECTOR	1	
	SN24	K1MND6BA0264	6P CONNECTOR	1	
	SN25	K1MND6BA0264	6P CONNECTOR	1	
	SN26	K1MND6BA0264	6P CONNECTOR	1	
	SN27	K1MND6BA0264	6P CONNECTOR	1	
	SN28	K1MND6BA0264	6P CONNECTOR	1	
	SN2810	B3JB00000116	IC	1	
	SS11	K1KY02C00002	2P CONNECTOR	1	PAVCTH




Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	SS33	K1MY20BA0345	20P CONNECTOR	1	
	SS62	K1MY13BA0343	13P CONNECTOR	1	
	SS64	K1MY13BA0343	13P CONNECTOR	1	
	SS66	K1MY13BA0443	13P CONNECTOR	1	
	SW2050	K0H1BA000445	SWITCH	1	
	SW2051	K0H1BA000445	SWITCH	1	
	SW2052	K0H1BA000445	SWITCH	1	
	SW2053	K0H1BA000445	SWITCH	1	
	SW2054	K0H1BA000445	SWITCH	1	
	SW2056	K0H1BA000445	SWITCH	1	
	T16471	G4DYA0000358	SWITCHING TRANS	1	PAVCTH
	T16472	G4DYA0000252	SWITCHING TRANS	1	
	TU6705	ENV59301D5F	TUNER	1	PAVCTH
	X8300	H0J245500110	CRYSTAL	1	
	X8651	H0J250500120	CRYSTAL	1	PAVCTH
	X9300	H0J200500091	CRYSTAL	1	
	ZA16001	K4AZ01D00004	TERMINAL	1	
	ZA16002	K4AZ01D00004	TERMINAL	1	
	ZA16402	K4AZ01D00004	TERMINAL	1	
	ZA16403	K4AZ01D00004	TERMINAL	1	


Model No. : TH-P42UT50D/M/P/S/Z Exploded View 1

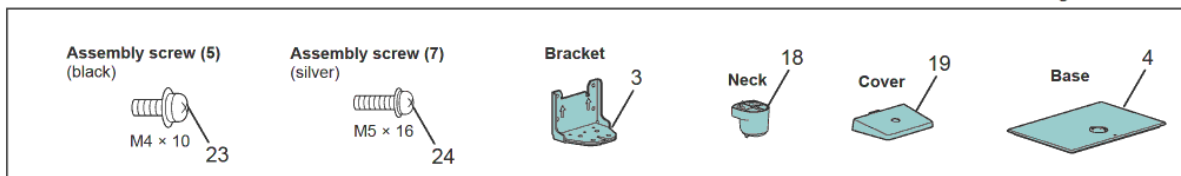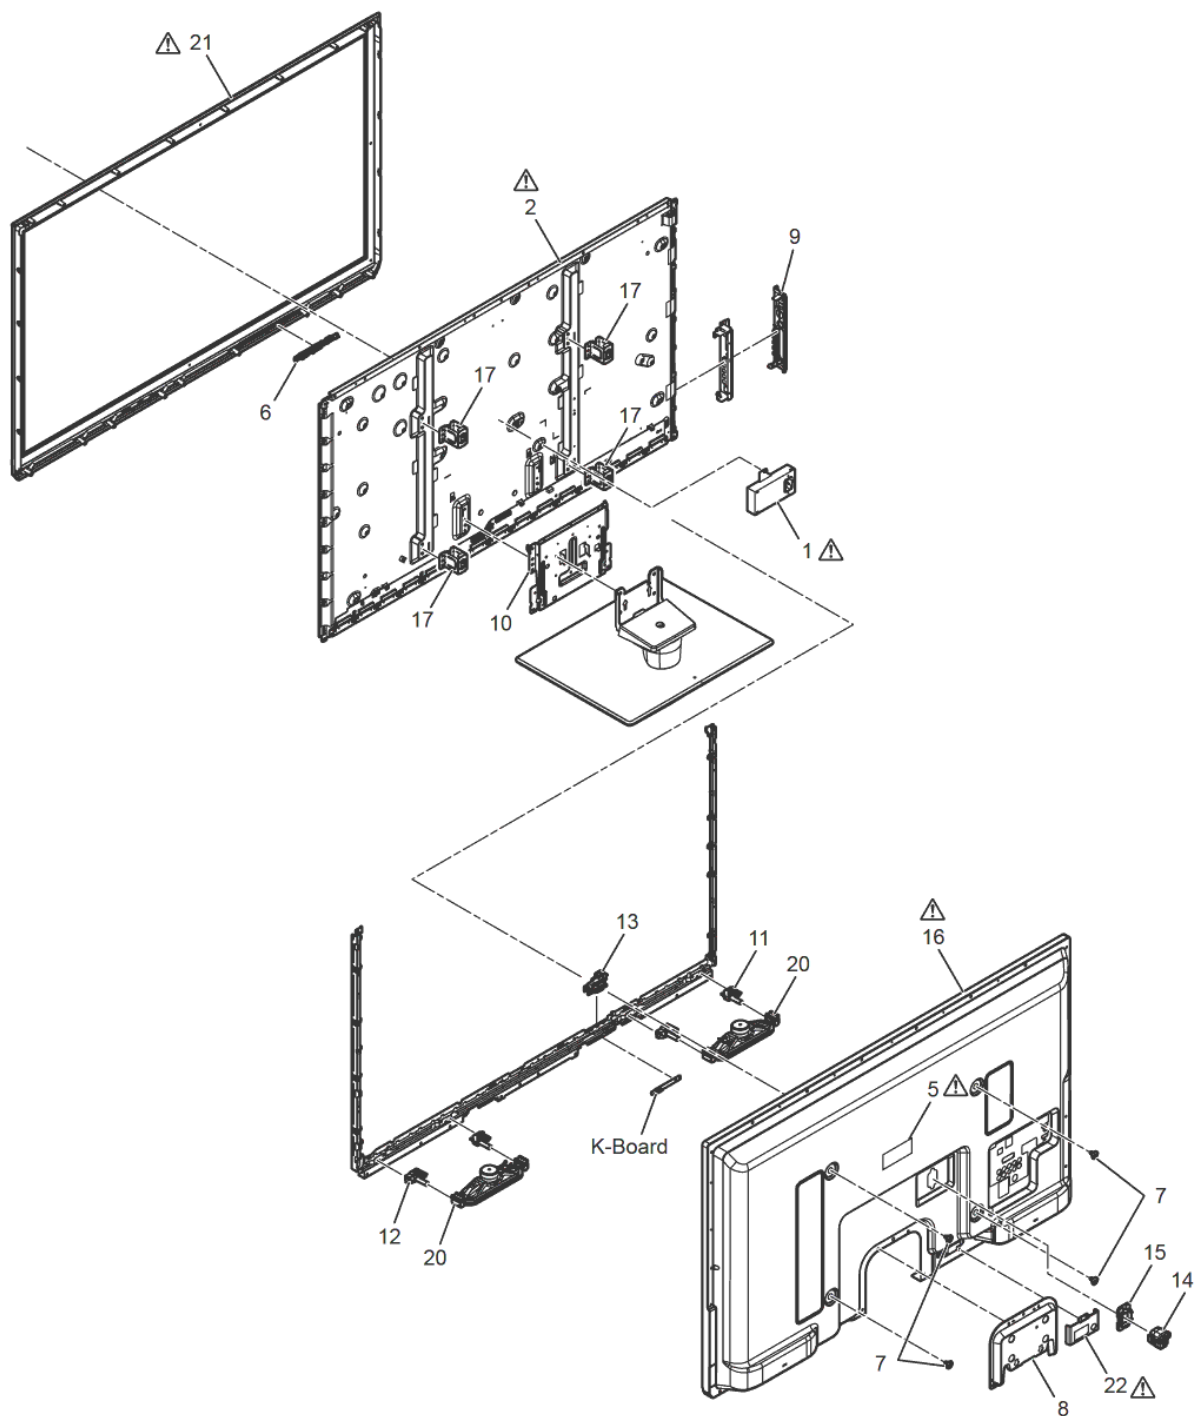

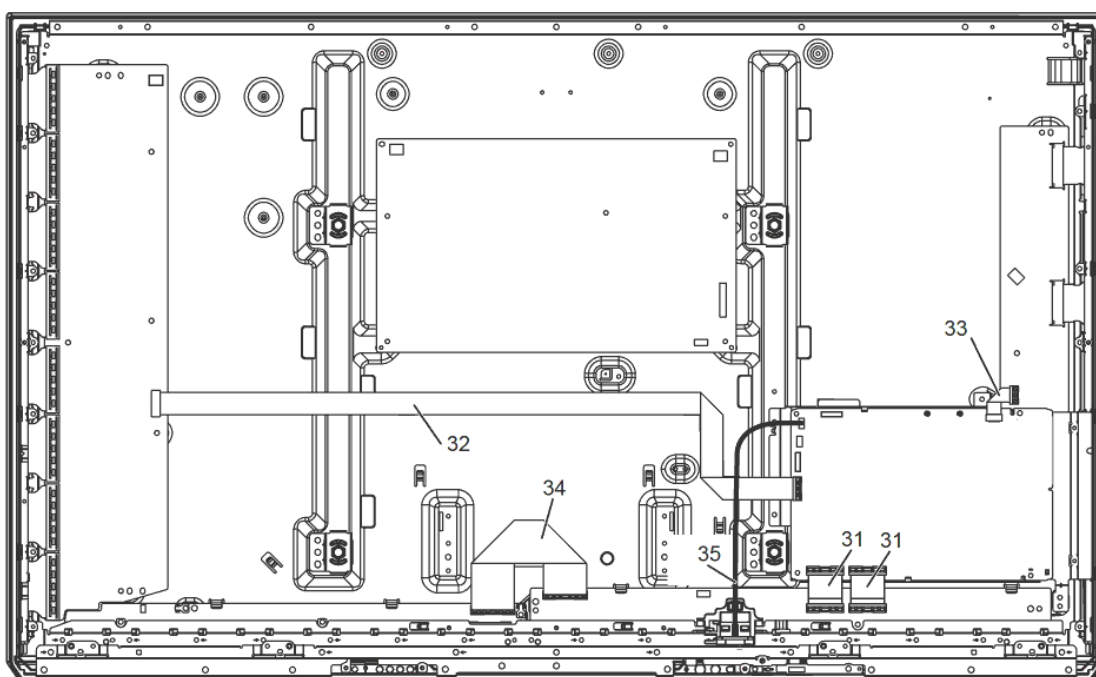


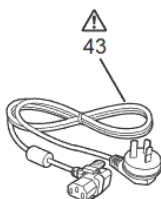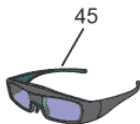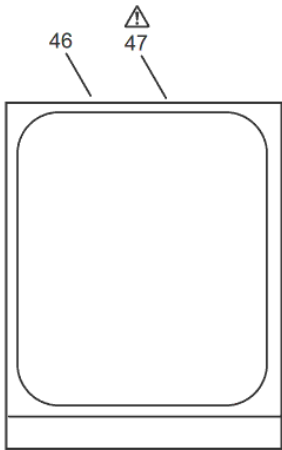


A/Z series

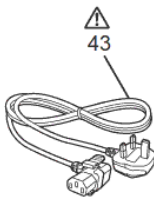

M/P/S series

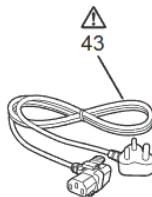

D series

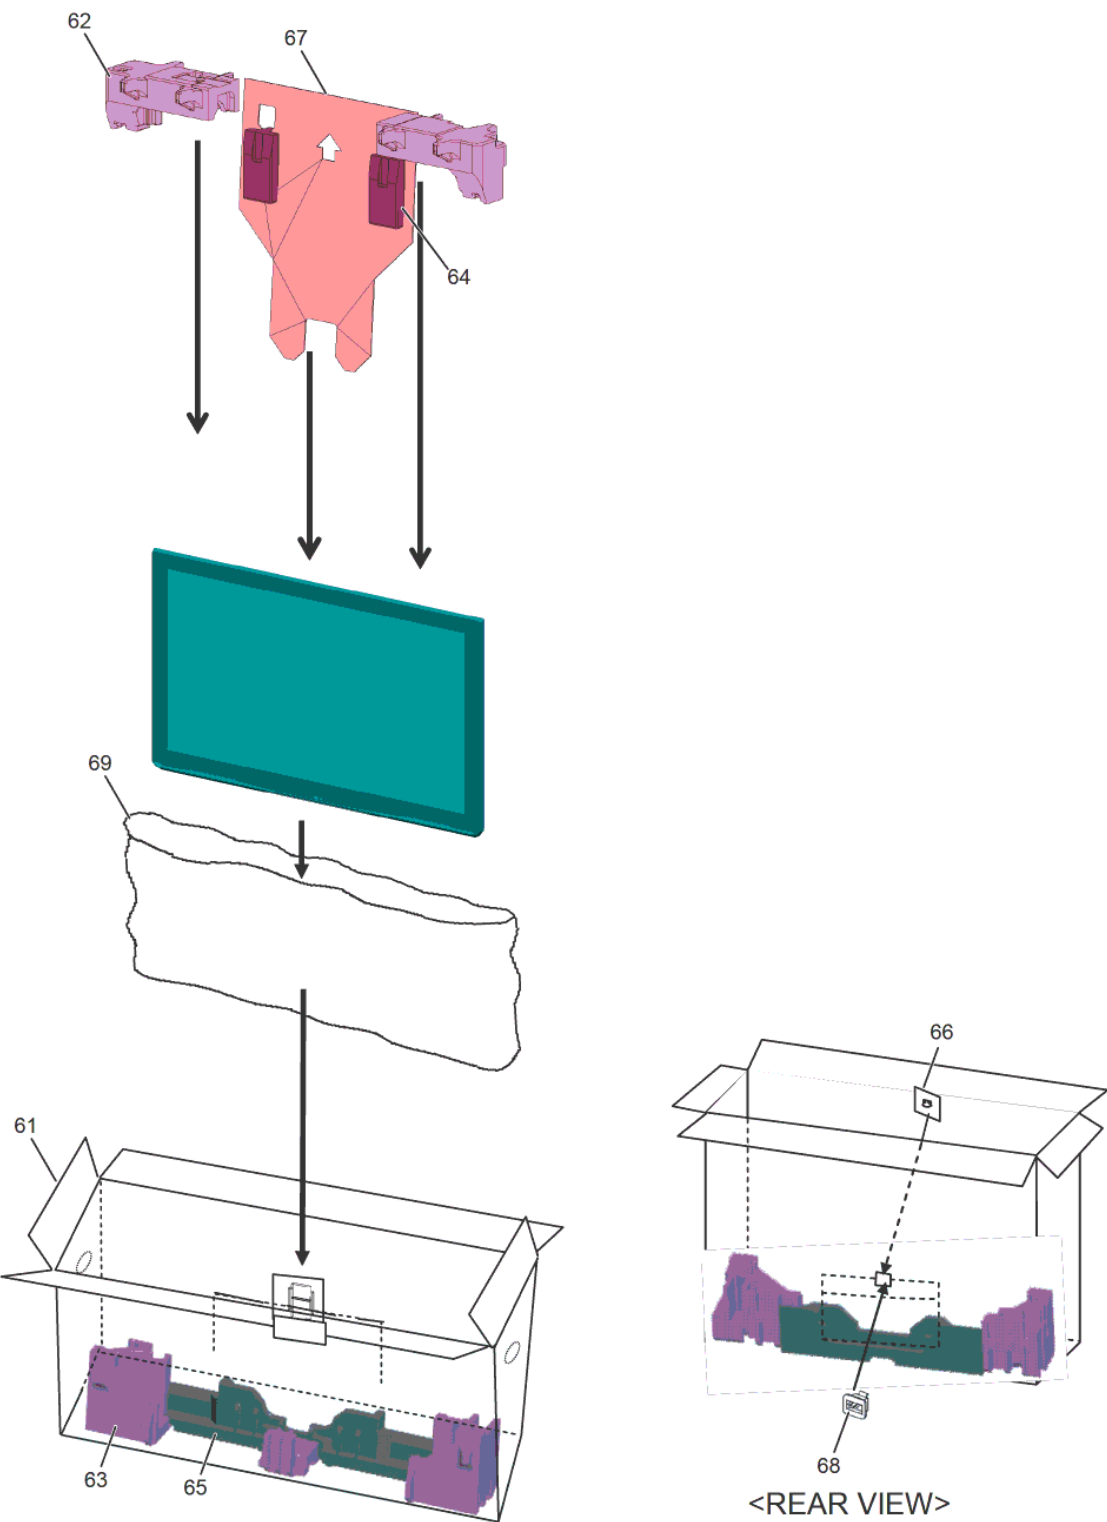

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	41	J0KG00000011	FERRITE CORE	1	(Z)
	42	J0KG00000146	FERRITE CORE PACK FOR LAN CABLE	1	(Z)
	48	J0KG00000014	(FERRITE CORE FOR RF CABLE)	1	(Z) PAVCTH
	49	J0KG00000036	(FERRITE CORE FOR USB CABLE)	2	(Z) PAVCTH
⚠	1	K2AHYH000052	AC-INLET WITH CABLE	1	PAVCTH
⚠	43	K2CT3YY00061	AC_CORD	1	(M) (S) PAVCTH
⚠	43	K2CT3YY00062	AC_CORD	1	(P) PAVCTH
⚠	43	K2CZ3YY00042	AC_CORD	1	(D) PAVCTH
⚠	43	K2CK3YY00065	AC_CORD	1	(Z) PAVCTH
	2	MD42F15C9T	PLASMA DISPLAY PANEL	1	PAVCTH
	44	N2QAYB000747	REMOTE CONTROL	1	(S) (Z) PAVCTH
	44	N2QAYB000750	REMOTE CONTROL	1	(D) (M) (P) PAVCTH
	45	N5ZZ00000250	3D EYEWEAR	1	(Z) PAVCTH
		T4FP1505Q	TAPE	1	PAVCTH
	3	TBL5ZA3246	STAND METAL	1	PAVCTH
	4	TBL5ZX0415	PEDESTAL STAND	1	PAVCTH
⚠	5	TBM4TC3491	NAME PLATE	1	(M) PAVCTH
⚠	5	TBM4TC3501	NAME PLATE	1	(S) PAVCTH
⚠	5	TBM4TC3551	NAME PLATE	1	(D) PAVCTH
⚠	5	TBM4TC3561	NAME PLATE	1	(P) PAVCTH
⚠	5	TBM4TC3471	NAME PLATE	1	(Z) PAVCTH
		TBM4TU0861	SIDE TERMINAL SHEET	1	PAVCTH
		THEC141J	SCREW(CAB:8)	8	
		THEC1509	SCREW(BC:4 HDMI:2 TU_SH:4 PEDE_CO:4 BT:1	15	chap.8.2.5.(2)
		THEJ036J	SCREW(K:1 CONT_A-B:6 STA_BRA:2)	9	
		THEL0239	SCREW(AC_CODE:2)	2	
		THEL052Z	SCREW	4	
		THTD030J	SCREW(BC-CAB:12 STA_BRA:2 CAB-CONT:1)	15	chap.8.2.5.(1)
	6	TKK5ZC50251	LED PANEL	1	PAVCTH
	7	TKKL5493	M8 CAP	4	chap.8.2.5.(4)
	8	TKP5ZA12801	STAND BRACKET COVER	1	PAVCTH
	9	TKP5ZA23401	SIDE TERMINAL COVER	1	PAVCTH
	10	TXFKZ01QTUA	STAND BRACKET PLATE	1	PAVCTH
		TMKK496	RUBBER(IC8000)	1	PAVCTH
		TMKK498	RUBBER(IC9300)	1	PAVCTH
		TMKK503	RUBBER(L24*W19*T9 SN:2 SS:1)	3	PAVCTH
		TMME415	SPACER	3	PAVCTH
	11	TMW4TX001	SP BRACKET L	2	
	12	TMW4TX002	SP BRACKET R	2	
	13	TMX5ZJ0021	BT CONNECTOR CLAMPER	1	PAVCTH
	14	TMXX073	AC CORD CLAMPER A	1	PAVCTH
	15	TMXX074	AC CORD CLAMPER B	1	PAVCTH
	61	TPC4TA10401	CARTON BOX	1	PAVCTH
	62	TPD4TA01411	TOP CUSHION	1	(D) (M) (P) PAVCTH
	63	TPD4TA01421	BOTTOM CUSHION	1	(D) (M) (P) PAVCTH
	61	TPD4TA01431	TOP CUSHION	1	(S) (Z) PAVCTH
	62	TPD4TA01441	BOTTOM CUSHION	1	(S) (Z) PAVCTH
	64	TPD4TA02281	REAR CUSHION	2	PAVCTH
	65	TPD4TA02301	PEDESTAL CUSHION	1	PAVCTH
	66	TPD4TF0021	JOINT PAD	1	PAVCTH
		TPD4TF00431	PEDESTAL NECK PAD	1	PAVCTH
	67	TPD4TF00791	REAR CUSHION PAD	1	PAVCTH
	68	TPDX0016-1	JOINT FOR PEDESTAL	1	
		TPE4TB011	BAG (STAND ACCESSORY NECK)	1	PAVCTH
		TPE4TB012	BAG (STAND METAL)	1	PAVCTH
		TPE4TB013	BAG (STAND METAL COVER)	1	PAVCTH
	69	TPE4TH001	SET BAG	1	
	46	TPE4TP001	BAG (INSTRUCTION BOOK)	1	PAVCTH
		TPE4TP002	BAG FOR AC CORD	1	PAVCTH
		TPE4TP002	(BAG FOR FERRITE CORE)	1	(Z) PAVCTH
		TPE5ZB023	BAG (PEDESTAL STAND)	1	PAVCTH

Model No. : TH-P42UT50D/M/P/S/Z Parts List

Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
	47	TQB4TC0198-1	INSTRUCTION BOOK(ENGLISH)	1	(S) PAVCTH
	47	TQB4TC0199-1	INSTRUCTION BOOK(S-CHINESE)	1	(S) PAVCTH
	47	TQB4TC0201-1	INSTRUCTION BOOK(ENGLISH)	1	(D) (M) (P) PAVCTH
	47	TQB4TC0205-1	INSTRUCTION BOOK(ARABIC)	1	(M) (P) PAVCTH
	47	TQB4TC0197-1	INSTRUCTION BOOK(ENGLISH)	1	(Z) PAVCTH
		TQD4T19015	FLYER FOR PEDESTAL	1	PAVCTH
	31	TSCKE0090003	CABLE (A31-C21) / (A32-C22)	2	PAVCTH
	32	TSCKZ0010015	CABLE (A20-SN20)	1	PAVCTH
	33	TSCKZ0010018	CABLE (A33-SS33)	1	PAVCTH
	34	TSCLE0010003	CABLE (C10-C20)	1	PAVCTH
	16	TTU4TA0351	REAR COVER	1	(M) PAVCTH
	16	TTU4TA0352	REAR COVER	1	(S) PAVCTH
	16	TTU4TA0357	REAR COVER	1	(D) PAVCTH
	16	TTU4TA0358	REAR COVER	1	(P) PAVCTH
	16	TTU4TA0349	REAR COVER	1	(Z) PAVCTH
	17	TUX5ZA0131	M8 NUT METAL	4	PAVCTH
	18	TXFBL5Z0080	STAND ACCESSORY NECK ASSY	1	PAVCTH
	19	TXFBL5Z0082	STAND ACCESSORY COVER ASSY	1	PAVCTH
	20	TXFEA01QTUA	SPEAKER L/R ASSY	2	PAVCTH
		TXFKL01MSUA	TIP-PREVENTION PARTS ASSY	1	(Z) PAVCTH
	21	TXFKY5Z0338	CABINET ASSY	1	PAVCTH
		TXFQZ02NKUM	CARTON LABEL ASSY	1	(M) PAVCTH
		TXFQZ02NZUP	CARTON LABEL ASSY	1	(P) PAVCTH
		TXFQZ02PEUD	CARTON LABEL ASSY	1	(D) PAVCTH
		TXFQZ02PEUS	CARTON LABEL ASSY	1	(S) PAVCTH
		TXFQZ02PCUZ	CARTON LABEL ASSY	1	(Z) PAVCTH
		TXJA12SEUU	SPEAKER LEAD (A12-SPR/SPL)	1	PAVCTH
	35	TXJA50SEUU	WIRE (BT-A50)	1	PAVCTH
	22	TXNBT1NGUM	BLUETOOTH ASSY	1	(D) (P) (S) PAVCTH
	22	TXNBT1NMUM	BLUETOOTH ASSY	1	(M) PAVCTH
	22	TXNBT1PAUZ	BLUETOOTH ASSY	1	(Z) PAVCTH
		XTV3+8GFJK	SCREW	2	chap.8.2.5. (3)
		XYN3+J10FJ	SCREW	5	
		XYN4+E6FJ	SCREW (INLET:1)	1	
	23	XYN4+F10FNK	SCREW M4X10	5	PAVCTH
		XYN4+F8FJ	SCREW (M8_MTL:4)	4	
	24	XYN5+F16FN	SCREW M5X16	7	PAVCTH