


Service Manual

Digital Camera

LUMIX

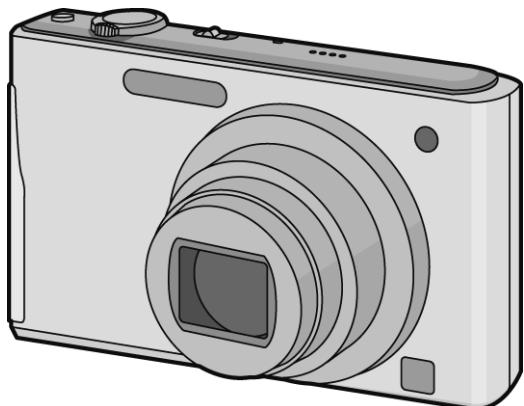

Model No. **DMC-FS37EB**

DMC-FS37EE

DMC-FS37EG

DMC-FS37EP

DMC-FH27P

DMC-FH27PC

DMC-FH27PR

DMC-FH27PU

DMC-FH27GA

DMC-FH27GC

DMC-FH27GF

DMC-FH27GK

DMC-FH27GN

Vol. 1

Colour

[DMC-FS37]

(S).....Silver Type

(K).....Black Type

(R).....Red Type (only EE/EG)

[DMC-FH27]

(S).....Silver Type (except PC/PR)

(K).....Black Type

(R).....Red Type (except PR/PU)

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic®

© Panasonic Corporation 2011 Unauthorized copying and distribution is a violation of law.

TABLE OF CONTENTS

	PAGE
1 Safety Precautions -----	3
1.1. General Guidelines -----	3
1.2. Leakage Current Cold Check -----	3
1.3. Leakage Current Hot Check (See Figure 1.)-----	3
1.4. How to Discharge the E.Capacitor on Flash Top P.C.B.-----	4
2 Warning -----	5
2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices -----	5
2.2. How to Recycle the Lithium Ion Battery (U.S. Only)-----	5
2.3. Caution for AC Cord(For EB/GC) -----	6
2.4. How to Replace the Lithium Battery-----	7
3 Service Navigation-----	8
3.1. Introduction -----	8
3.2. General Description About Lead Free Solder (PbF) -----	8
3.3. Important Notice 1:(Other than U.S.A. and Canadian Market)-----	8
3.4. How to Define the Model Suffix (NTSC or PAL model)-----	9
4 Specifications -----	13
5 Location of Controls and Components -----	14
6 Service Mode -----	18
6.1. Error Code Memory Function -----	18
7 Service Fixture & Tools -----	21
7.1. Service Fixture and Tools -----	21
7.2. When Replacing the Main P.C.B. -----	22
7.3. Service Position -----	22
8 Disassembly and Assembly Instructions -----	23
8.1. Disassembly Flow Chart-----	23
8.2. PCB Location-----	23
8.3. Disassembly Procedure -----	24
8.4. Lens Disassembly Procedure-----	29
8.5. Assembly Procedure for the Lens -----	34
8.6. Removal of the CCD Unit -----	39
8.7. Removal of the Focus Motor -----	39
8.8. The Application of Grease Method -----	40
9 Measurements and Adjustments -----	40
9.1. Introduction -----	40
9.2. Before Disassembling the unit -----	41
9.3. Details of Electrical Adjustment-----	43
9.4. After Adjustment-----	47
10 Maintenance -----	48
10.1. Cleaning Lens and LCD Panel -----	48

1 Safety Precautions

1.1. General Guidelines

1. IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by

⚠ in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent X-RADIATION, shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

2. An Isolation Transformer should always be used during the servicing of AC Adaptor whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect AC Adaptor from being damaged by accidental shorting that may occur during servicing.
3. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
5. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1\text{ M}\Omega$ and $5.2\text{ M}\Omega$. When the exposed metal does not have a return path to the chassis, the reading must be infinity.

1.3. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5\text{ k}\Omega$, 10 W resistor, in parallel with a $0.15\text{ }\mu\text{F}$ capacitor, between each exposed metallic part on the set and a good earth ground, as shown in Figure 1.
3. Use an AC voltmeter, with $1\text{ k}\Omega/\text{V}$ or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 V RMS . A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed $1/2\text{ mA}$. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Hot-Check Circuit



Figure. 1

1.4. How to Discharge the E.Capacitor on Flash Top P.C.B.

CAUTION:

1. Be sure to discharge the E.capacitor on FLASH TOP P.C.B..
2. Be careful of the high voltage circuit on FLASH TOP P.C.B. when servicing.

[Discharging Procedure]

1. Refer to the disassemble procedure and remove the necessary parts/unit.
2. Install the insulation tube onto the lead part of resistor (ERG5SJ102:1kΩ /5W).
(An equivalent type of resistor may be used.)
3. Place a resistor between both terminals of E.capacitor on the FLASH Top P.C.B. for approx. 5 seconds.
4. After discharging, confirm that the E.capacitor voltage is lower than 10V using a voltmeter.

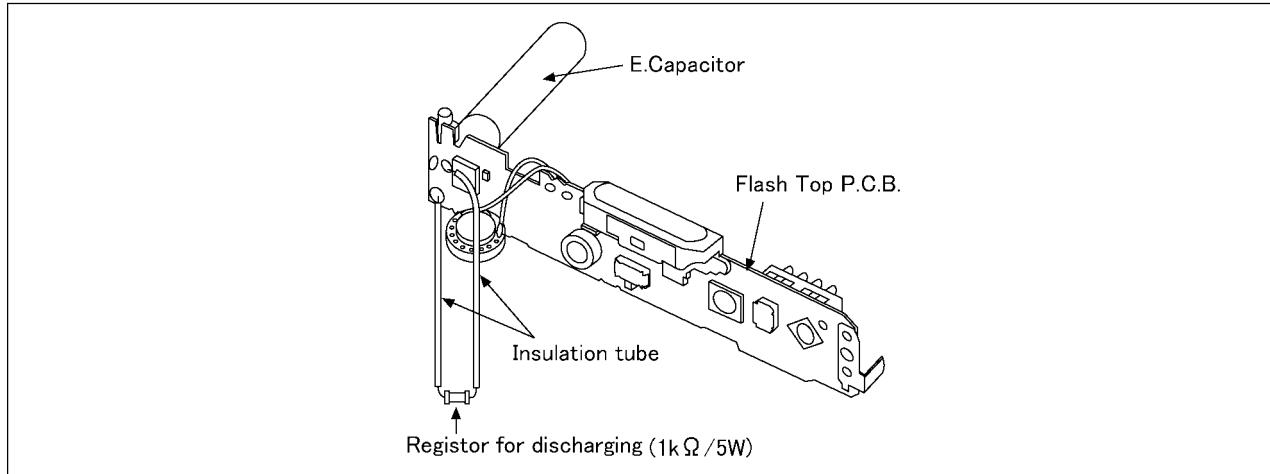


Fig. F1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices.

Examples of typical ES devices are CCD image sensor, IC (integrated circuits) and some field-effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an antistatic solder removal device. Some solder removal devices not classified as "antistatic (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION :

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. How to Recycle the Lithium Ion Battery (U.S. Only)

ENGLISH



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

FRANÇAIS



L'appareil que vous vous êtes procuré est alimenté par une batterie au lithium-ion recyclable. Pour des renseignements sur le recyclage de la batterie, veuillez composer le 1-800-8-BATTERY.

2.3. Caution for AC Cord (For EB/GC)

2.3.1. Information for Your Safety

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

WARNING

To reduce the risk of fire or shock hazard, do not expose this equipment to rain or moisture.

CAUTION

To reduce the risk of fire or shock hazard and annoying interference, use the recommended accessories only.

FOR YOUR SAFETY

DO NOT REMOVE THE OUTER COVER

To prevent electric shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

2.3.2. Caution for AC Mains Lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three-pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amperes and it is approved by ASTA or BSI to BS1362

Check for the ASTA mark or the BSI mark on the body of the fuse.



If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

If the fitted moulded plug is unsuitable for the socket outlet in your home then the fuse should be removed and the plug cut off and disposed of safely.

There is a danger of severe electrical shock if the cut off plug is inserted into any 13-ampere socket.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

2.3.2.1. Important

The wires in this mains lead are coloured in accordance with the following code:

Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.


The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol.




2.3.2.2. Before Use

Remove the Connector Cover as follows.

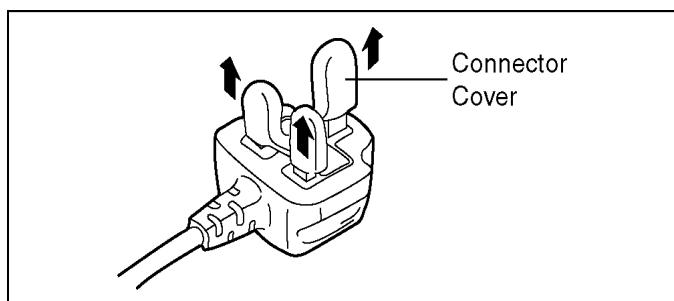


2.3.2.3. How to Replace the Fuse

1. Remove the Fuse Cover with a screwdriver.

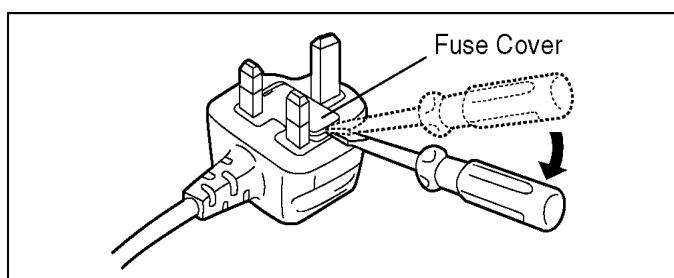

2. Replace the fuse and attach the Fuse cover.

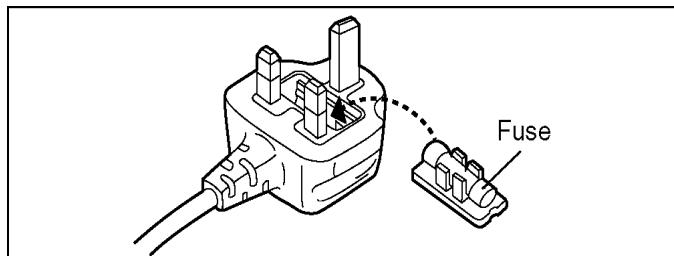


2.4. How to Replace the Lithium Battery

2.4.1. Replacement Procedure

1. Remove the MAIN P.C.B.. (Refer to Disassembly Procedures.)
2. Unsolder the each soldering point of electric lead terminal for Lithium battery (Ref. No. "B9101" at component side of MAIN P.C.B.) and remove the Lithium battery together with electric lead terminal. Then replace it into new one.

NOTE:

The Type No. ML421 includes electric lead terminals.

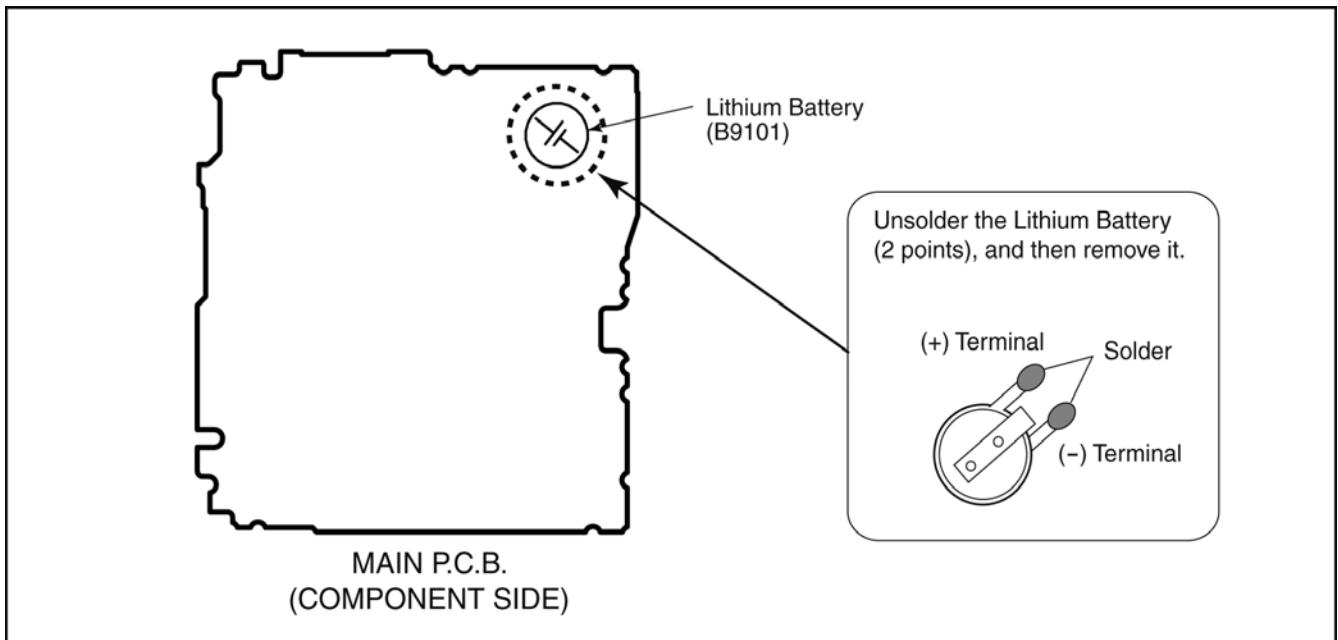

NOTE:

This Lithium battery is a critical component.

(Type No.: ML421 **Manufactured by Energy Company, Panasonic Corporation.**)

It must never be subjected to excessive heat or discharge.

It must therefore only be fitted in requirement designed specifically for its use.

Replacement batteries must be of same type and manufacture.

They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.

Do not attempt to re-charge the old battery or re-use it for any other purpose.

It should be disposed of in waste products destined for burial rather than incineration.

(For English)

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

(For German)

ACHTUNG

Explosionsgefahr bei falschem Anbringen der Batterie. Ersetzen Sie nur mit einem äquivalentem vom Hersteller empfohlenem Typ.

Behandeln Sie gebrauchte Batterien nach den Anweisungen des Herstellers.

(For French)

MISE EN GARDE

Une batterie de remplacement inappropriée peut exploser. Ne remplacez qu'avec une batterie identique ou d'un type recommandé par le fabricant. L'élimination des batteries usées doit être faite conformément aux instructions du manufacturier.

NOTE:

Above caution is applicable for a battery pack which is for DMC-FS37, FH27 series, as well.

3 Service Navigation

3.1. Introduction

This service manual contains technical information, which allow service personnel's to understand and service this model.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, the information will be followed by service manual to be controlled with original service manual.

3.2. General Description About Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.

The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30°C (86°F) more than that of the normal solder.

Distinction of P.C.B. Lead Free Solder being used

The letter of "PbF" is printed either foil side or components side on the P.C.B. using the lead free solder.(See right figure)

PbF

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.
(Definition: The letter of "PbF" is printed on the P.C.B. using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the P.C.B. cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30°C (662±86°F).

Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.

RFKZ03D01KS-----(0.3mm 100g Reel)

RFKZ06D01KS-----(0.6mm 100g Reel)

RFKZ10D01KS-----(1.0mm 100g Reel)

Note

* Ingredient: tin (Sn) 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

3.3. Important Notice 1:(Other than U.S.A. and Canadian Market)

1. The service manual does not contain the following information because of issues servicing to component level without necessary equipment/facilities.
 - a. Schematic diagram, Block Diagram and P.C.B. layout of MAIN P.C.B. and SUB P.C.B..
 - b. Parts list for individual parts for MAIN P.C.B. and SUB P.C.B..

When a part replacement is required for repairing MAIN P.C.B. and/or SUB P.C.B., replace as an assembled parts. (MAIN P.C.B./SUB P.C.B.)

2. The following category is/are recycle module part. please send it/them to Central Repair Center.

- MAIN P.C.B. (VEP56126D): Excluding replacement of Lithium Battery
- SUB P.C.B. (VEP59095A)

3.4. How to Define the Model Suffix (NTSC or PAL model)

There are six kinds of DMC-FS37 and FH27, regardless of the colours.

- a) DMC-FH27P/PC
- b) DMC-FS37EB/EG/EP
- c) DMC-FS37EE
- d) DMC-FH27GK
- e) DMC-FH27GN
- f) DMC-FH27PR/PU/GA/GC/GF

What is the difference is that the "INITIAL SETTINGS" data which is stored in Flash-ROM mounted on MAIN P.C.B..

3.4.1. Defining methods:

To define the model suffix to be serviced, refer to the nameplate which is put on the bottom side of the Unit.

a) DMC-FH27P/PC

The nameplate for these models show the following Safety registration mark.



b) DMC-FS37EB/EG/EP

The nameplate for these models show the following Safety registration mark.



c) DMC-FS37EE

The nameplate for this model shows the following Safety registration mark.



d) DMC-FH27GK

The nameplate for this model shows the following Safety registration mark.



e) DMC-FH27GN

The nameplate for this model shows the following Safety registration mark.



f) DMC-FH27PR/PU/GA/GC/GF

The nameplate for these models do not show any above Safety registration mark.

NOTE:

After replacing the MAIN P.C.B., be sure to achieve adjustment.

The service software is available at "TSN Website". To download, click on "Support Information from NWBG/VDBG-AVC".

3.4.2. INITIAL SETTINGS:

After replacing the MAIN P.C.B., be sure to perform the initial settings after achieving the adjustment by ordering the following procedure in accordance with model suffix of the unit.

1. IMPORTANT NOTICE:

Before proceeding Initial settings, be sure to read the following CAUTIONS.

CAUTION 1:(INITIAL SETTINGS)

---AFTER REPLACING THE MAIN P.C.B. ---

- *.The model suffix can be chosen **JUST ONE TIME**.
- *.Once one of the model suffix has been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

CAUTION 2:(Stored picture image data in the unit)

This unit employs "Built-in Memory" for picture image data recording. (Approx. 70 MB)

After proceeding "INITIAL SETTINGS", the picture image data stored in the unit is erased.

2. PROCEDURES:

- Precautions: Read the above "CAUTION 1" and "CAUTION 2", carefully.

- Preparation:

- Attach the Battery or AC Adaptor with a DC coupler to the unit.
(Since this unit has built-in memory, it can be performed without inserting SD memory card.)

1. Turn the Power on.
2. Select with the touch panel in order to [REC] mode and [NORMAL PICTURE] mode.
3. Turn the Power off.

(If the unit is other than [NORMAL PICTURE] mode, it does not display the initial settings menu.)

- **Step 1. The temporary cancellation of "INITIAL SETTINGS":**

While pressing "W side of [ZOOM LEVER]", [SHUTTER BUTTON] and touch the screen (Any position of the screen is acceptable) simultaneously, turn the power on.

- **Step 2. The cancellation of "INITIAL SETTINGS":**

1. Select with the touch panel to [PLAYBACK] mode.
2. Version display in the playback menu, touch near the center of screen, while [SHUTTER BUTTON] is pressed halfway.
3. Turn the power off.

The LCD displays the "!" mark before the unit powers down.



- **Step 3. Turn the Power on:**

Turn the Power on.

- **Step 4. Display the INITIAL SETTING:**


Display "Clock Set" screen, and then move the [ZOOM LEVER] to "T" side, turn the power off.

The "INITIAL SETTINGS" menu is displayed.

There are two kinds of "INITIAL SETTINGS" menu form as follows:


[CASE 1. After replacing MAIN P.C.B.]

When MAIN P.C.B. has just been replaced, all of the model suffix is displayed as follows. (Six pages in total)

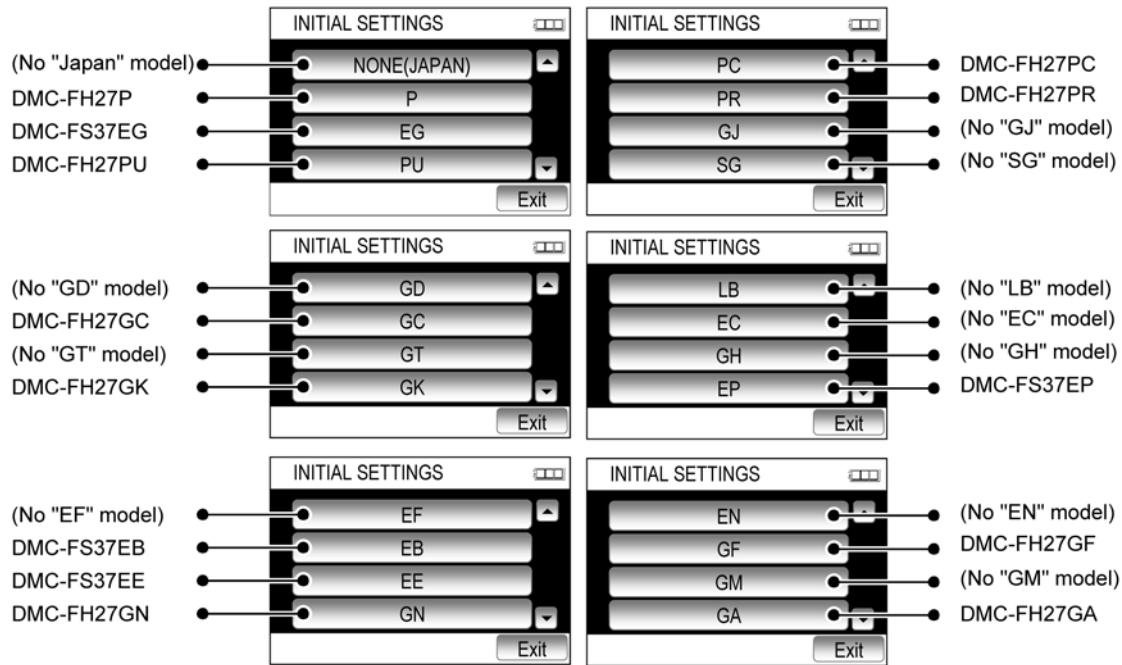

[CASE 2. Other than "After replacing MAIN P.C.B."]

<Other than "EG/EB/PR/EP" models>

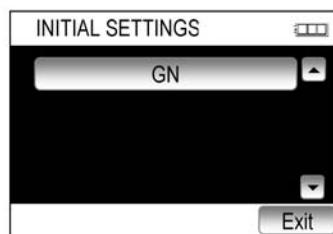

<Only "EG/EB/PR/EP" models>



• **Step 5. Choose the model suffix in "INITIAL SETTINGS": (Refer to "CAUTION 1")**

[Caution: After replacing MAIN P.C.B.]

The model suffix can be chosen, JUST ONE TIME.


Once one of the model suffix have been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

Therefore, select the area carefully.

Select the area with touch panel.

• **Step 6. Set the model suffix in “INITIAL SETTINGS”:**

- The only set area is displayed, and then press the “[End] of Cursor buttons” after confirmation.
(The unit is powered off automatically.)

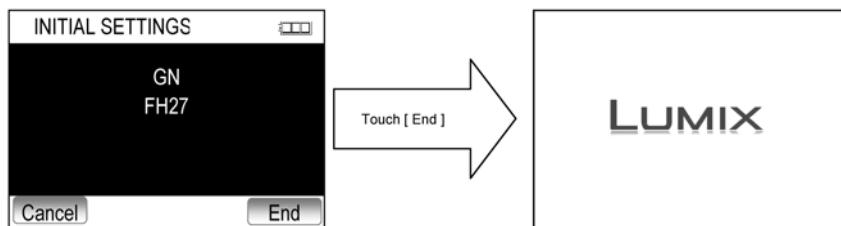

• **Step 7. CONFIRMATION:**

Confirm the display of “PLEASE SET THE CLOCK” in concerned language when the unit is turned on again.

When the unit is connected to PC with USB cable, it is detected as removable media.

(When the “GK” model suffix is selected, the display shows “PLEASE SET THE CLOCK” in Chinese.)

1) As for your reference, major default setting condition is as shown in the following table.

• **Default setting (After “INITIAL SETTINGS”)**

	MODEL	VIDEO OUTPUT	LANGUAGE	DATE	REMARKS
a)	DMC-FH27P	NTSC	English	Month/Date/Year	
b)	DMC-FS37EG	PAL	English	Date/Month/Year	
c)	DMC-FH27PU	NTSC	Spanish	Month/Date/Year	
d)	DMC-FH27GC	PAL	English	Date/Month/Year	
e)	DMC-FH27GK	PAL	Chinese (simplified)	Year/Month/Date	
f)	DMC-FS37EB	PAL	English	Date/Month/Year	
g)	DMC-FS37EE	PAL	Russian	Date/Month/Year	
h)	DMC-FH27GN	PAL	English	Date/Month/Year	
i)	DMC-FH27PC	NTSC	English	Month/Date/Year	
j)	DMC-FH27PR	PAL	Spanish	Date/Month/Year	
k)	DMC-FS37EP	PAL	English	Date/Month/Year	
l)	DMC-FH27GF	PAL	English	Date/Month/Year	
m)	DMC-FH27GA	PAL	English	Date/Month/Year	

4 Specifications

Digital Camera:

Information for your safety

Power Source:	DC 5.1 V
Power Consumption:	1.2 W (When recording) 0.7 W (When playing back)
Camera effective pixels	16,100,000 pixels
Image sensor	1/2.33" CCD, total pixel number 16,600,000 pixels, Primary color filter
Lens	Optical 8×zoom, f=5 mm to 40 mm (35 mm film camera equivalent: 28 mm to 224 mm)/F3.3 (Wide) to F5.9 (Tele)
Digital zoom	Max. 4×
Extended optical zoom	Max. 18× (When set to 3,000,000 pixels [3M] or less)
Focus range	Normal 50 cm (1.64 feet) (Wide)/2 m (6.56 feet) (Tele) to ∞
	Macro/ 5 cm (0.17 feet) (Wide)/1 m (3.28 feet) Intelligent auto/ Motion picture
	Scene Mode There may be differences in the above settings.
Shutter system	Electronic shutter+Mechanical shutter
Burst recording	
Burst speed	Approx. 1.7 pictures/second
Number of recordable pictures	Depends on the remaining capacity of the built-in memory/card.
Hi-speed burst	
Burst speed	Approx. 4 pictures/second [3M (4:3), 2.5M (3:2) or 2M (16:9) is selected as the picture size.]
Number of recordable pictures	When using the built-in memory: Approx. 15 pictures (immediately after formatting) When using a Card: Max. 100 pictures (differs depending on the type of Card and the recording conditions)
Shutter speed	8 seconds to 1/1600th of a second [Starry Sky] Mode: 15 seconds, 30 seconds, 60 seconds
Exposure (AE)	Program AE Exposure compensation (1/3 EV Step, -2 EV to +2 EV)
Metering mode	Multiple

LCD monitor	3.0" TFT LCD (3:2) (Approx. 230,000 dots) (field of view ratio about 100%) Touch panel
Flash range	Approx. 60 cm (1.97 feet) to 5.8 m (19.0 feet) (Wide, [ISO] is set)
Microphone	Monaural
Speaker	Monaural
Recording media	Built-in Memory (Approx. 70 MB)/SD Memory Card/SDHC Memory Card/SDXC Memory Card
Recording file format	
Still Picture	JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard)/DPOF corresponding
Motion pictures	"QuickTime Motion JPEG" (motion pictures with audio)
Interface	
Digital	"USB 2.0" (High Speed)
Analog video/ audio	[for NTSC areas] NTSC [for PAL areas] NTSC/PAL Composite (Switched by menu), Audio line output (monaural)
Terminal	
[AV OUT/ DIGITAL]	Dedicated jack (8 pin)
Dimensions (excluding the projecting parts)	Approx. 99.2 mm (W)×56.5 mm (H)×27.7 mm (D) [3.9"(W)×2.2"(H)×1.1"(D)]
Mass (weight)	Approx. 159 g/0.35 lb (with card and battery) Approx. 142 g/0.31 lb (excluding card and battery)
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity	10%RH to 80%RH

Battery Charger:

Information for your safety

Input:	AC～110 V to 240 V, 50/60 Hz, 0.2 A
Output:	DC---4.2 V, 0.43 A

Battery Pack (lithium-ion):

Information for your safety

Voltage/capacity:	3.6 V/660 mAh
--------------------------	---------------


NOTE:(Only for "EB/EG/EP" models)

- Data from the PC can not be written to the camera using the USB connection cable.


Motion pictures
(Only "EB/EG/EP" models:
• Motion pictures can be recorded continuously for up to 15 minutes.
(Except "EB/EG/EP" models:
• Motion picture recorded continuously in [MOTION JPEG] or [HIGH SPEED MOVIE] in Scene Mode is up to 2 GB. Only the maximum recordable time for 2 GB is displayed on the screen.

5 Location of Controls and Components


- 1 Flash
- 2 Lens
- 3 Self-timer indicator
AF Assist Lamp

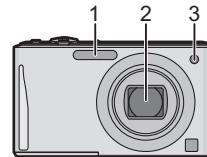


- 4 Touch panel/LCD monitor

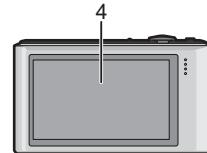


- 5 Strap eyelet
 - Be sure to attach the strap when using the camera to ensure that you will not drop it.
- 6 Lens barrel
- 7 [AV OUT/DIGITAL] socket

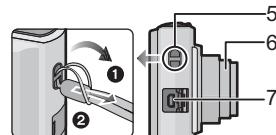

- 8 Camera ON/OFF switch
- 9 Zoom lever
- 10 Speaker
- 11 Microphone
- 12 Shutter button
- 13 [E.ZOOM] button

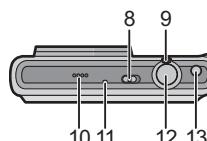

- 14 Tripod receptacle
- 15 Card/Battery door
- 16 DC coupler cover
 - When using an AC adaptor, ensure that the Panasonic DC coupler (optional) and AC adaptor (optional) are used.
 - Always use a genuine Panasonic AC adaptor (optional).
 - It is recommended to use a fully charged battery or AC adaptor (optional) and DC coupler (optional) when recording motion pictures.
 - If while recording motion pictures using the AC adaptor and the power supply is cut off due to a power outage or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.

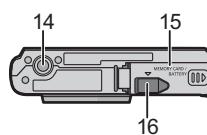

How to Use the Touch Panel

This touch panel is a type that detects pressure.

Touch the screen	Drag
<p>To touch and release the touch panel.</p> 	<p>A movement without releasing the touch panel.</p> 

Use this to perform tasks such as selecting icons or images displayed on the touch panel.

- It may not operate properly when multiple icons are touched simultaneously, so try to touch the center of the icon.

This is used when performing tasks such as moving to the next image by dragging horizontally, or changing the range of the displayed image. This can also be used to perform tasks such as switching the screen by operating the slide bar.

Note

- If you use a commercially available liquid crystal protection sheet, please follow the instructions that accompany the sheet. (Some liquid crystal protection sheets may impair visibility or operability.)
- Apply a little extra pressure when touching if you have a commercially available protection sheet affixed or if you feel it is not responding well.
- Touch panel will not operate properly when the hand holding this unit is pressing on the touch panel.
- Do not press using anything with a sharp tip or anything hard, except for the supplied stylus pen.
- Do not operate with your fingernails.
- Wipe the LCD monitor with dry soft cloth when it gets dirty with finger prints and others.
- Do not scratch or press the LCD monitor too hard.



■About the Stylus pen

It is easier to use the stylus pen (supplied) for detailed operation or if it is hard to operate with your fingers.

- Do not place it where small children can reach.
- Do not place the stylus pen on the LCD monitor when storing. LCD monitor may break when the stylus pen is pressed strongly against the LCD monitor.



Selecting the [Rec] Mode

1 Touch [].



2 Touch the mode icon.



■ List of [Rec] Modes

IA Intelligent Auto Mode

The subjects are recorded using settings automatically selected by the camera.

Normal Picture Mode

The subjects are recorded using your own settings.

MS My Scene Mode

Pictures are taken using previously registered recording scenes.

Scene Mode

This allows you to take pictures that match the scene being recorded.

Motion Picture Mode

This mode allows you to record motion pictures with audio.

Note

- When the mode has been switched from [Playback] Mode to [Rec] Mode, the previously set [Rec] Mode will be set.

[Rec] Mode: 

Taking pictures with your favorite settings (Normal Picture Mode)

The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in the [Rec] menu.

1 Touch [].

2 Touch [].

3 Aim the AF area at the point you want to focus on.

4 Press the shutter button halfway to focus and then press it fully to take the picture.

- (A) ISO sensitivity
- (B) Aperture value
- (C) Shutter speed

- Aperture value and shutter speed is displayed in red when correct exposure is not achieved. (Exclude when using a flash)



Taking pictures using the Touch Shutter function

Just by touching the subject to focus, it will focus on the subject and take the picture automatically.

1

Touch .

- Icon will change to , and taking a picture with the Touch Shutter function becomes possible.



2

Touch the subject you wish to focus on, and then take a picture.

- AF area with same function as in AF Mode is displayed at the position you touch, and a picture is taken when it is focused. (It cannot be set to edge of the screen)

3

Touch to cancel the Touch Shutter function.

Motion Picture Mode

1

Touch .


2

Touch .

3

Press the shutter button halfway to focus and then press it fully to start recording.

- (A) Available recording time
- (B) Elapsed recording time
- After pressing the shutter button fully, release it straight away.
- The focus and zoom are fixed to the setting when recording starts (the first frame).

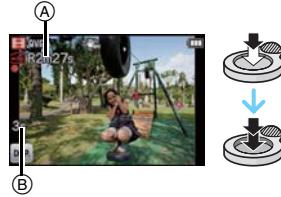

4

Press the shutter button fully to stop recording.

6 Service Mode

6.1. Error Code Memory Function

1. General description

This unit is equipped with history of error code memory function, and can be memorized 16 error codes in sequence from the latest. When the error is occurred more than 16, the oldest error is overwritten in sequence.

The error code is not memorized when the power supply is shut down forcibly (i.e., when the unit is powered on by the battery, the battery is pulled out) The error code is memorized to FLASH-ROM when the unit has just before powered off.

2. How to display

The error code can be displayed by ordering the following procedure:

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

NOTE:

*Since this unit has built-in memory, it can be performed without inserting SD memory card.

• Step 1. The temporary cancellation of "INITIAL SETTINGS":


While pressing "W side of [ZOOM LEVER]", [SHUTTER BUTTON] and touch the screen (Any position of the screen is acceptable) simultaneously, turn the power on.

• Step 2. Execute the error code display mode:

Display [Version Disp.] screen in the state of Step 1, and then move the [ZOOM LEVER] to "W" side.

The display is changed as shown below when the moving to W side.

Version Disp. → Error code display → Operation history display → Version Disp. →

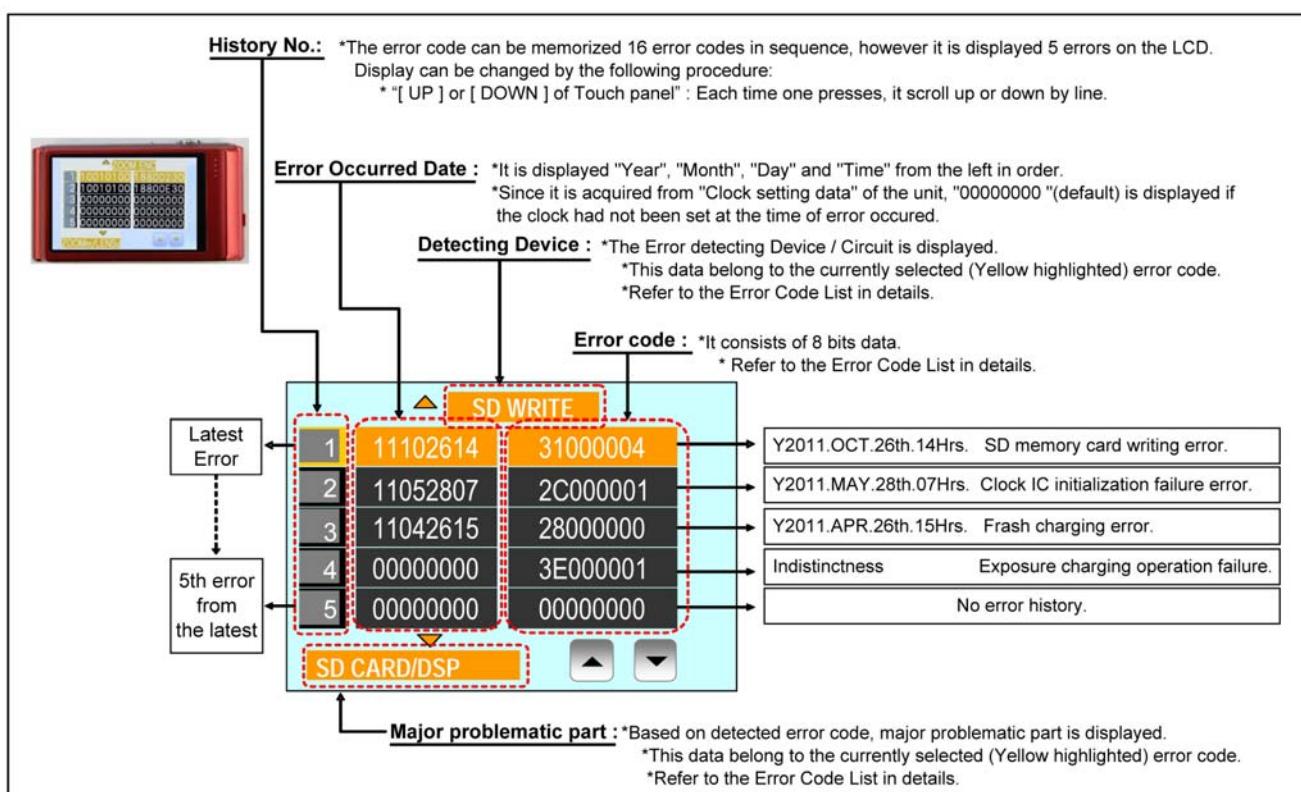

Example of Error Code Display

• 3. Error Code List

The error code consists of 8 bits data and it shows the following information.

Attribute	Main item	Sub item	Error code		Contents (Upper line) Problematic Part & Check point (Lower line)	Error Indication		
			High 4 bits	Low 4 bits		Detecting device	Problematic Part/Circuit	
LENS	Lens drive	OIS	18*0	1000	PSD (X) error. Hall element (X axis) position detect error in OIS unit. OIS Unit	OIS X	LENSu NG	
				2000	PSD (Y) error. Hall element (Y axis) position detect error in OIS unit. OIS Unit	OIS Y		
				3000	GYRO (X) error. Gyro (IC7101: X axis) detect error on Sub P.C.B.. IC7101 (Gyro element) or IC6001 (VENUS 6)	GYRO X	GYRO NG	
				4000	GYRO (Y) error. Gyro (IC7101: Y axis) detect error on Sub P.C.B.. IC7101 (Gyro element) or IC6001 (VENUS 6)	GYRO Y		
				5000	MREF error (Reference voltage error). IC9101 (SYSTEM) or IC6001 (VENUS 6)	OIS REF	LENSd/DSP NG	
				6000	Drive voltage (X) error. LENS Unit, LENS flex breaks, IC6001 (VENUS 6) AD value error, etc.	OISX REF	LENSu/LENS FPC	
				7000	Drive voltage (Y) error. LENS Unit, LENS flex breaks, IC6001 (VENUS 6) AD value error, etc.	OISY REF		
				0710	Collapsible barrel Low detect error (Collapsible barrel encoder always detects Low.) Mechanical lock, FP9002-(2) signal line or IC6001 (VENUS 6)	ZOOM L	ZOOMm/LENSu	
				0720	Collapsible barrel High detect error (Collapsible barrel encoder always detects High.) Mechanical lock, FP9002-(2) signal line or IC6001 (VENUS 6)	ZOOM H		
				0730	Zoom motor sensor error. Mechanical lock, FP9002-(32), (35) signal line or IC6001 (VENUS 6)	ZOOM ENC		
		Focus		0740	Zoom motor sensor error. (During monitor mode.) Mechanical lock, FP9002-(32), (35) signal line or IC6001 (VENUS 6)		LENS FPC/DSP	
				0750	Zoom motor sensor error. (During monitor mode with slow speed.) Mechanical lock, FP9002-(32), (35) signal line or IC6001 (VENUS 6)			
				0701	HP Low detect error (Focus encoder always detects High, and not becomes Low) Mechanical lock, FP9002-(2) signal line or IC6001 (VENUS 6)	FOCUS L		
				0702	HP High detect error (Focus encoder always detects Low, and not becomes High) Mechanical lock, FP9002-(2) signal line or IC6001 (VENUS 6)	FOCUS H		
		Lens	18*1	0000	Power ON time out error. Lens drive system	LENS DRV	LENSu	
				0000	Power OFF time out error. Lens drive system			
	Adj. History	OIS	19*0	2000	OIS adj. Yaw direction amplitude error (small)	OIS ADJ	OIS ADJ	
				3000	OIS adj. Pitch direction amplitude error (small)			
				4000	OIS adj. Yaw direction amplitude error (large)			
				5000	OIS adj. Pitch direction amplitude error (large)			
				6000	OIS adj. MREF error			
				7000	OIS adj. time out error			
				8000	OIS adj. Yaw direction off set error			
				9000	OIS adj. Pitch direction off set error			
				A000	OIS adj. Yaw direction gain error			
				B000	OIS adj. Pitch direction gain error			
				C000	OIS adj. Yaw direction position sensor error			
				D000	OIS adj. Pitch direction position sensor error			
				E000	OIS adj. other error			
HARD	VENUS A/D	Flash	28*0	0000	Flash charging error. IC6001-(AC16) signal line or Flash charging circuit	STRB CHG	STRB PCB/FPC	
	FLASH ROM (EEPRO MArea)	FLASH ROM (EEPRO M Area)	2B*0	0001	EEPROM read error. IC6002 (FLASH ROM)	FROM RE	FROM	
				0002	EEPROM write error. IC6002 (FLASH ROM)	FROM WR	FROM	
				0005	Firmware vierung up error Replace the firmware file in the SD memory card.	(No indication)	(No indication)	
				0008	SDRAM error			
				0009	SDRAM Mounting defective			
	SYSTEM	RTC	2C*0	0001	SYSTEM IC initialize failure error Communication between IC6001 (VENUS 6) and IC9101 (SYSTEM)	SYS INIT	MAIN PCB	
SOFT	CPU	Reset	30*0	0001	NMI reset Non Mask-able Interrupt (3000001-30000007 are caused by factors)	NMI RST	MAIN PCB	
				0007				
	Card	Card	31*0	0001	Card logic error SD memory card data line or IC6001 (VENUS 6)	SD CARD	SD CARD/DSP	
				0002	Card physical error SD memory card data line or IC6001 (VENUS 6)			
				0004	Write error SD memory card data line or IC6001 (VENUS 6)			
				0005	Format error	SD WRITE		
						INMEMORY	FROM	
	CPU, ASIC hard	Stop	38*0	0001	Camera task finish process time out. Communication between Lens system and IC6001 (VENUS 6)	LENS COM	LENSu/DSP	
				0002	Camera task invalid code error. IC6001 (VENUS 6)	DSP	DSP	
				0100	File time out error in recording motion image IC6001 (VENUS 6)			
				0200	File data cue send error in recording motion image IC6001 (VENUS 6)			
				0300	Single or burst recording brake time out.			
				0008	USB work area partitioning failure USB dynamic memory securing failure when connecting	(No indication)	(No indication)	
				0009	FLASH ROM processing early period of camera during movement.			
	Operation	Zoom	3B*0	0000	Imperfect zoom lens processing Zoom lens	INIT	(No indication)	
				0000	Software error (0-7bit : command, 8-15bit : status)	ZOOM	ZOOMm/LENSu	
				35*1	0000 Though record preprocessing is necessary, it is not called.	DSP	DSP	
				35*2	0000 Though record preprocessing is necessary, it is not completed.			
						(No indication)	(No indication)	

Important notice about "Error Code List"

1) About "*" indication:

The third digit from the left is different as follows.

- In case of 0 (example: 18001000)

When the third digit from the left shows "0", this error occurred under the condition of INITIAL SETTINGS has been completed.

It means that this error is occurred basically at user side.

- In case of 8 (example: 18801000)

When the third digit from the left shows "8", this error occurred under the condition of INITIAL SETTINGS has been released.

(Example; Factory assembling-line before unit shipment, Service mode etc.)

It means that this error is occurred at service side.

2) About "?" indication: ("18*0 0?01" to "18*0 0?50"):

The third digit from the right shows one of the hexadecimal ("0" to "F") character.

• 4. How to exit from Error Code display mode:

Simply, turn the power off. (Since Error code display mode is executed under the condition of temporary cancellation of "INITIAL SETTINGS", it wake up with normal condition when turn off the power.)







NOTE:

The error code can not be initialized.

7 Service Fixture & Tools

7.1. Service Fixture and Tools

The following Service Fixture and tools are used for checking and servicing this unit.

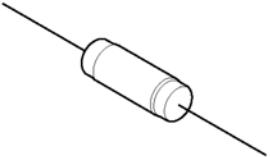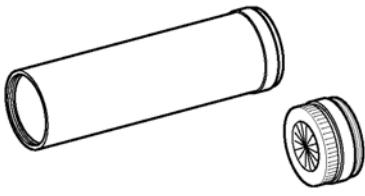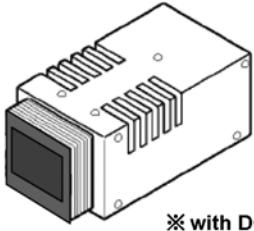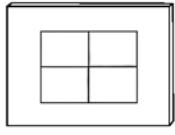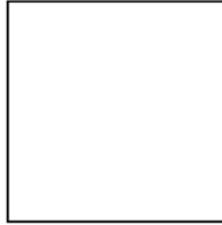Resistor for Discharging ERG5SJ102	Infinity Lens (with Focus Chart) VFK1164TCM02	LIGHT BOX RFKZ0523
 An equivalent type of Resistor may be used.	 * VFK1164TCM03 can be used. * RFKZ0422 can be used.	 ※ with DC Cable * VFK1164TDVLB can be used.
TR Chart RFKZ0443	Lens Cleaning Kit (BK) VFK1900BK	Grease (for lens) RFKZ0472
	 * Only supplied as 10 set/box.	
ND FILTER VFK1164ND15	TOUCH PEN VGQ0C14	
	 VYQ4370 can be used.	

7.2. When Replacing the Main P.C.B.

After replacing the MAIN P.C.B., be sure to achieve adjustment.


The adjustment instruction is available at "software download" on the "Support Information from NWBG/VDBG-AVC" web-site in "TSN system", together with Maintenance software.

7.3. Service Position

This Service Position is used for checking and replacing parts. Use the following Extension cables for servicing.

Table S1 Extension Cable List

No.	Parts No.	Connection	Form
1	RFKZ0581	FP9001 (MAIN) - CCD UNIT	47PIN 0.3FFC
2	RFKZ0416	FP9002 (MAIN) - LENS UNIT	41PIN 0.3FFC
3	RFKZ0416	FP9003 (MAIN) - LCD UNIT	41PIN 0.3FFC
4	RFKZ0418	PP9001 (MAIN) - PS8001 (FLASH TOP)	30PIN B to B
5	RFKZ0553	PS9001 (MAIN) - PP9502 (SUB)	16PIN B to B

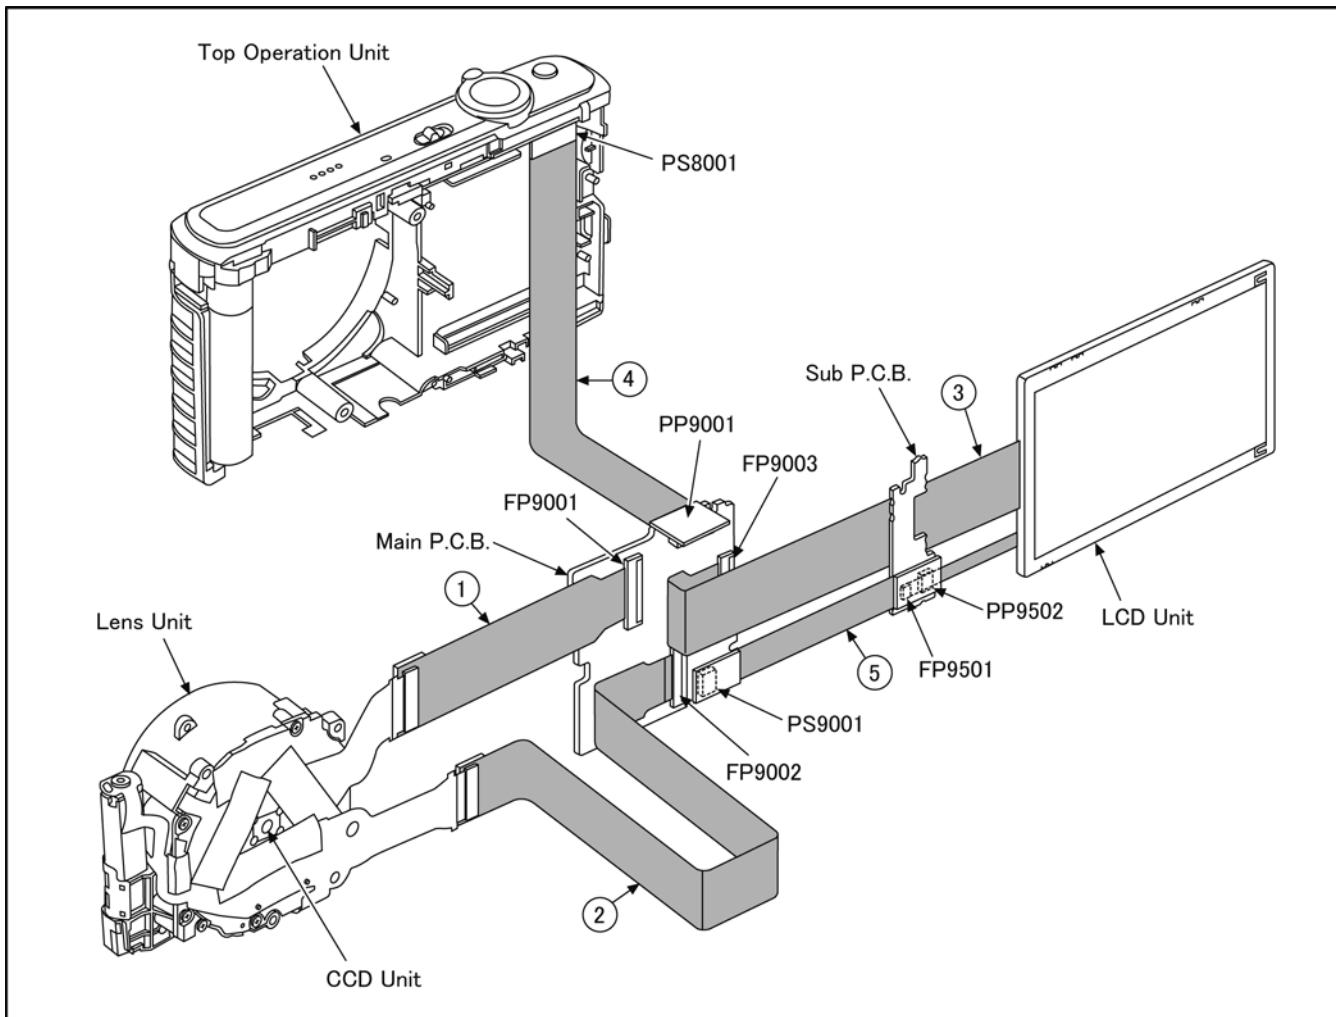

CAUTION-1. (When servicing FLASH TOP P.C.B.)

1. Be sure to discharge the E.capacitor on FLASH TOP P.C.B..

Refer to "HOW TO DISCHARGE THE E.CAPACITOR ON FLASH TOP P.C.B.".

The E.capacitor voltage is not lowered soon even if the AC Cord is unplugged or the battery is removed.


2. Be careful of the high voltage circuit on FLASH TOP P.C.B..
3. DO NOT allow other parts to touch the high voltage circuit on FLASH TOP P.C.B..

8 Disassembly and Assembly Instructions


8.1. Disassembly Flow Chart

This is a disassembling chart.

When assembling, perform this chart conversely.

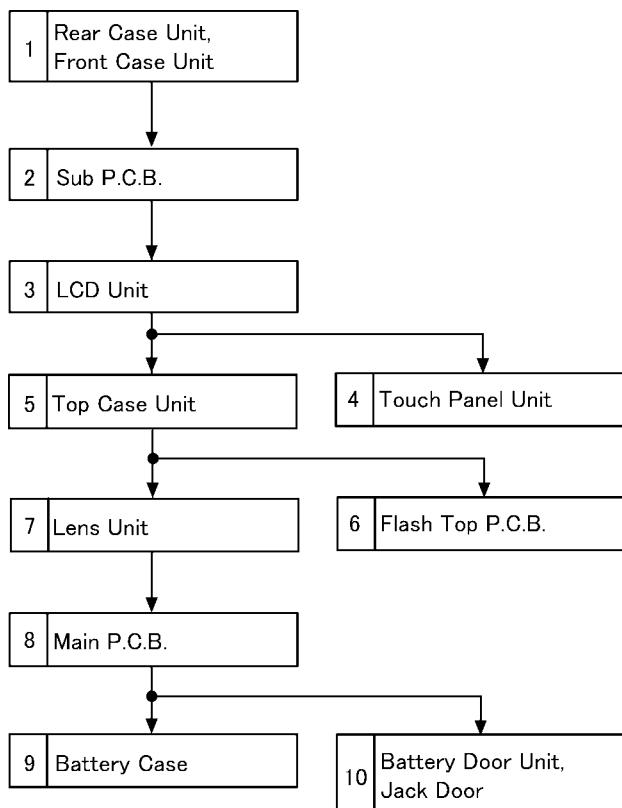

8.2. PCB Location

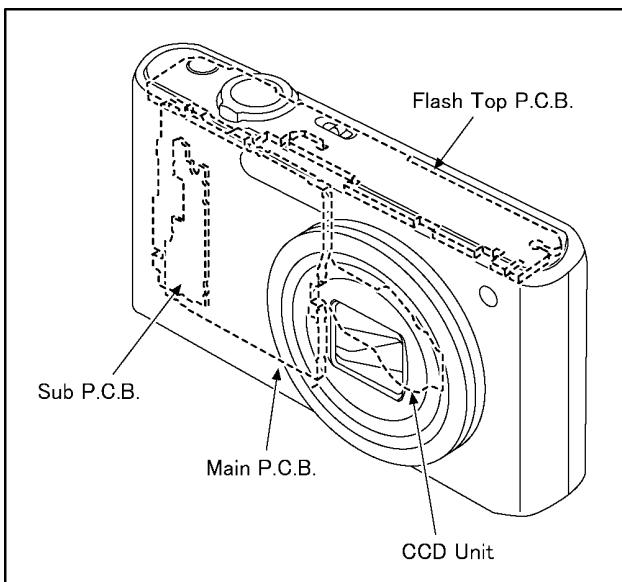

8.3. Disassembly Procedure


No.	Item	Fig	Removal
1	Rear Case Unit Front Case Unit	(Fig. D1)	Card
			Battery
			6 Screws (A)
			3 Screws (B)
		(Fig. D2)	2 Locking tabs
			Rear Case Unit
			2 Locking tabs
			Front Case Unit
2	Sub P.C.B.	(Fig. D3)	3 Screws (C)
			Frame Plate
			Tripod Fixing Plate
			FP9501(Connector)
			PP9502(Connector)
			2 Locking tabs
			Sub P.C.B.
3	LCD Unit	(Fig. D4)	FP9003(Flex) LCD Unit
4	Touch Panel Unit	(Fig. D5)	LCD Unit Touch Panel Unit
5	Top Case Unit	(Fig. D6)	PS8001(Connector) Top Case Unit
6	Flash Top P.C.B.	(Fig. D7)	2 Locking tabs AF Panel Light 2 Screws (D) 3 Locking tabs Flash Top P.C.B. 2 Locking tabs Speaker Mic Damper Power Knob Base Power Knob EZ Button Top Ornament Unit
			NOTE: (When installing)
			(Fig. D8)
			DPR Sheet
			FP9001(Flex)
			FP9002(Flex)
			Lens Unit
			1 Screw (E)
			1 Locking tab
			Main P.C.B.
			1 Locking tab
			Battery Out Spring
			Battery Case
10	Battery Door Unit Jack Door	(Fig. D12)	Battery Door Shaft
			Battery Door Unit
			Jack Door Shaft
			Jack Door

8.3.1. Removal of the Rear Case Unit and Front Case Unit

NOTE:


When servicing and reassembling, remove the card and battery from the unit.

- Card • Screw(A) × 6
- Battery • Screw(B) × 3

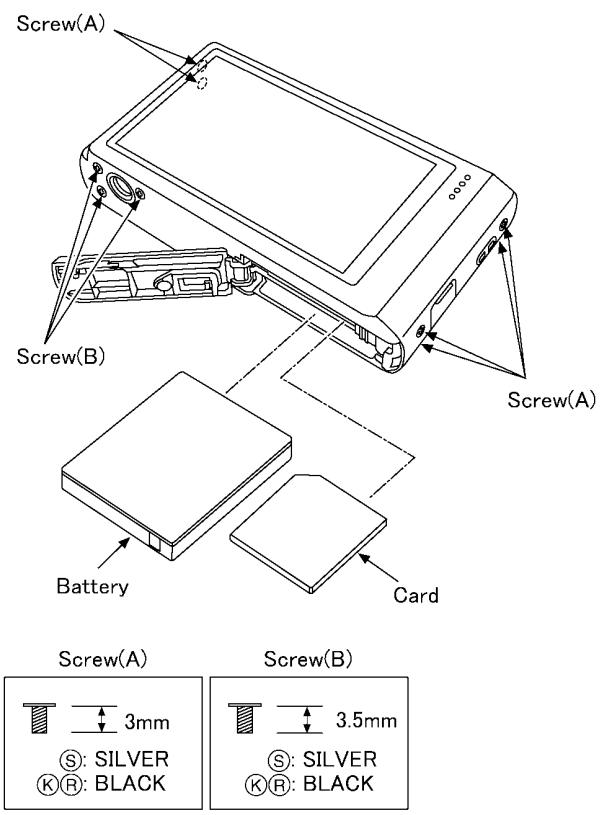


(Fig. D1)

8.3.2. Removal of the Sub P.C.B.

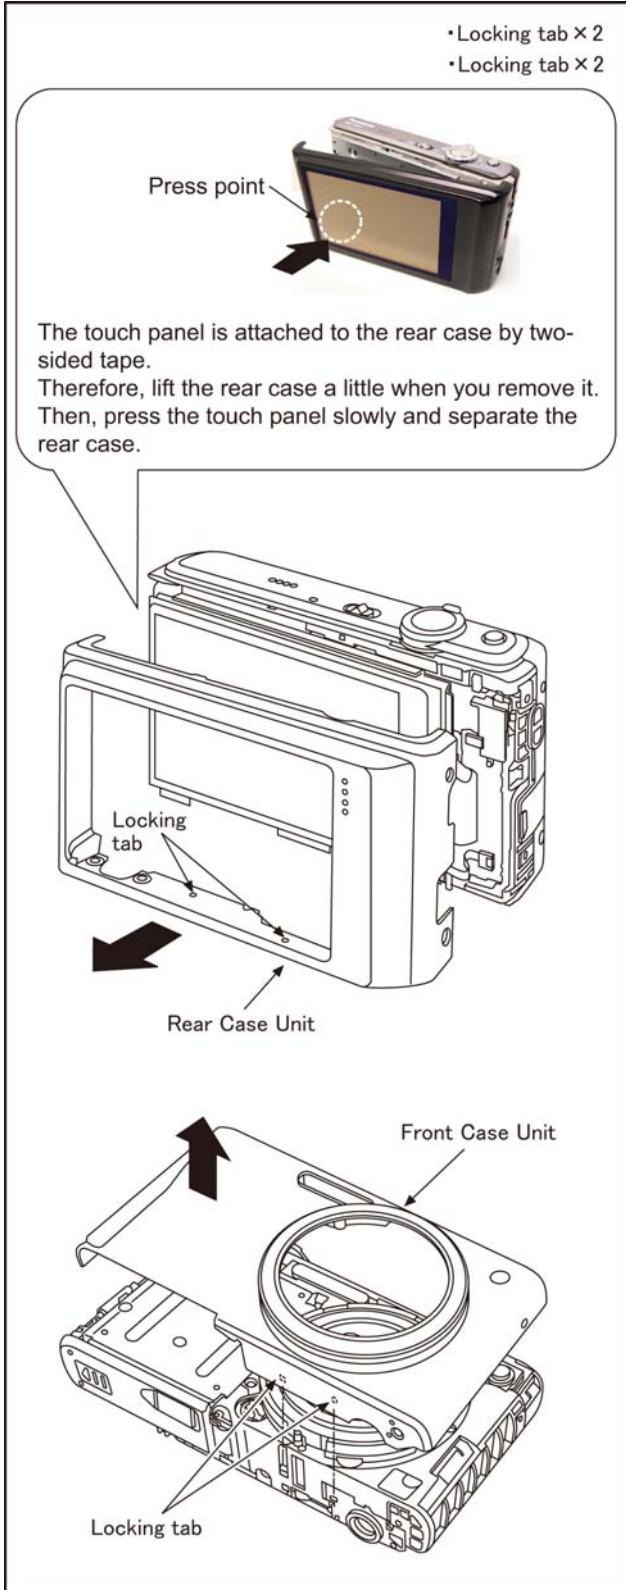


(Fig. D2)

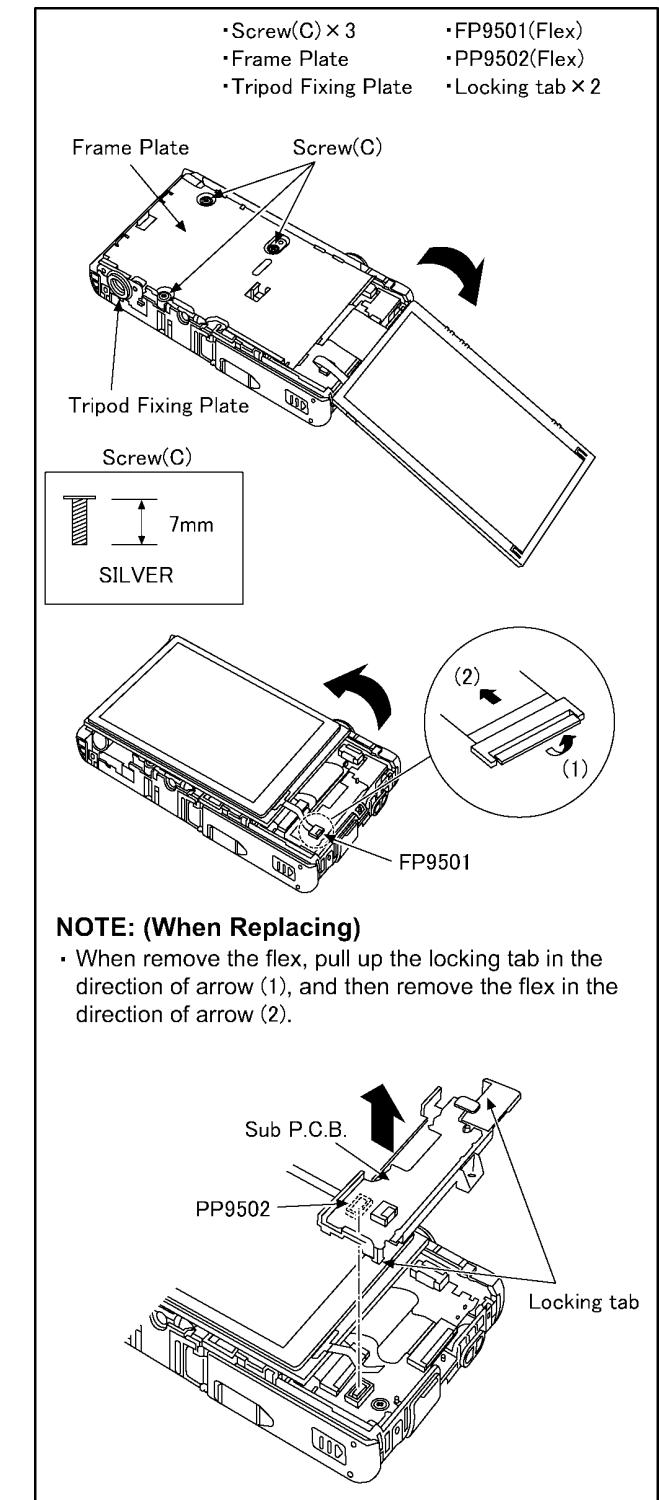


(Fig. D3)

8.3.3. Removal of the LCD Unit

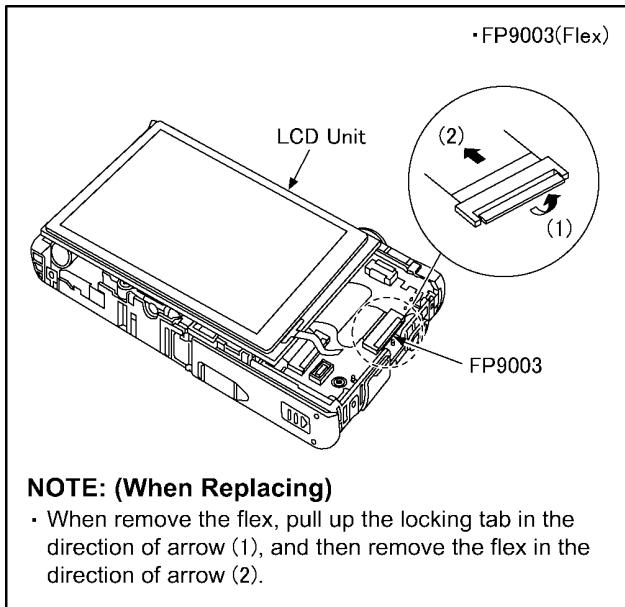


(Fig. D4)

8.3.4. How to Remove Touch Panel Unit

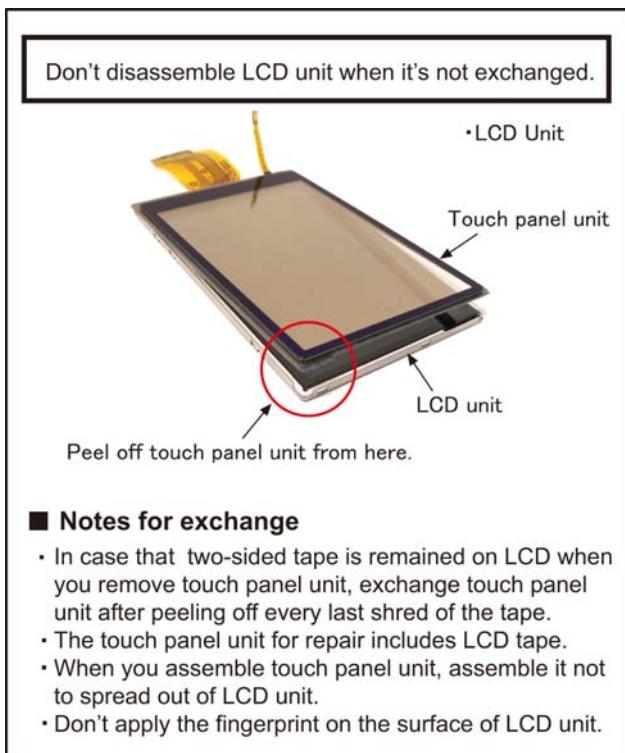


(Fig. D5)

8.3.5. Removal of the Top Case Unit

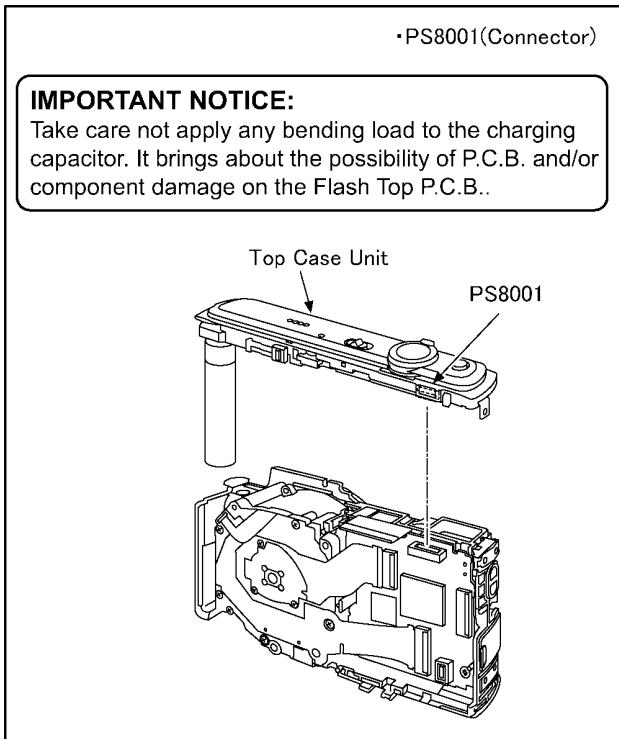

(Fig. D6)


8.3.6. Removal of the Flash Top P.C.B.

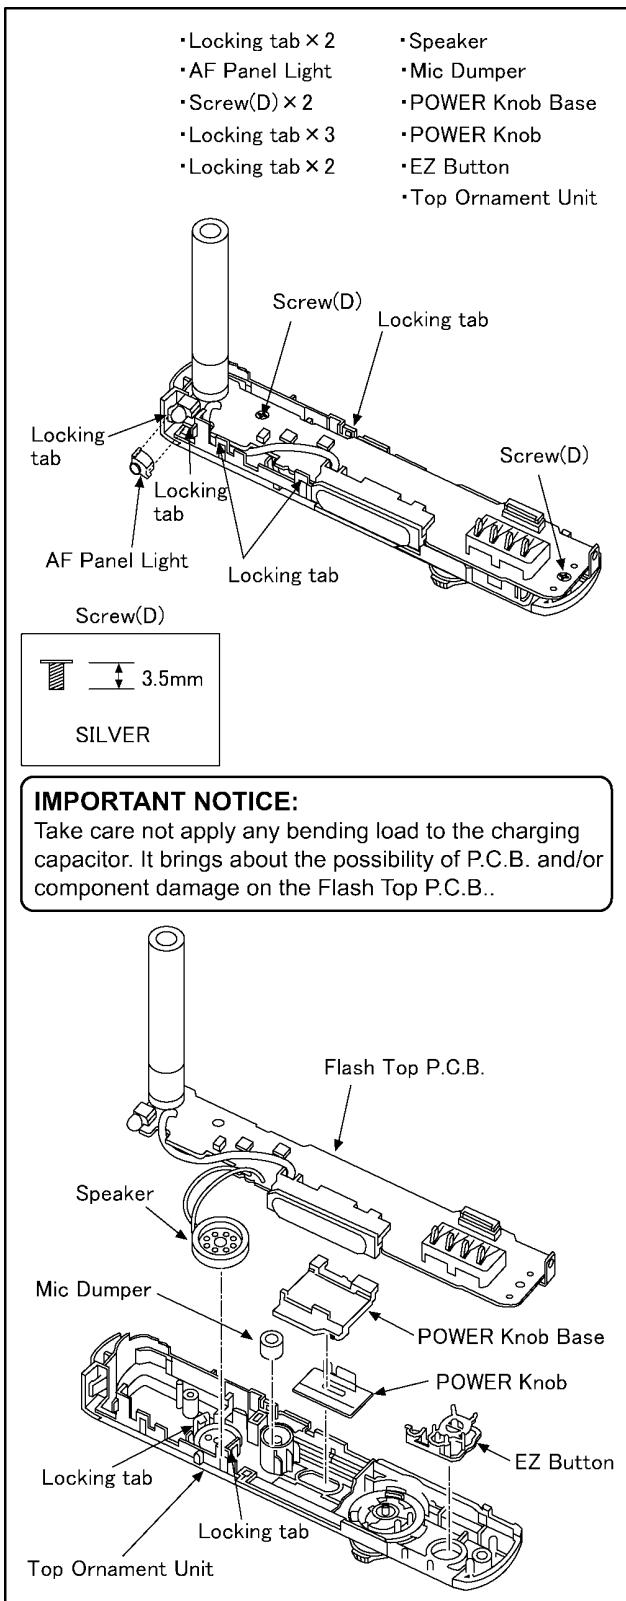

(Fig. D7)

IMPORTANT NOTICE:

Take care not apply any bending load to the charging capacitor. It brings about the possibility of P.C.B. and/or component damage on the Flash Top P.C.B..

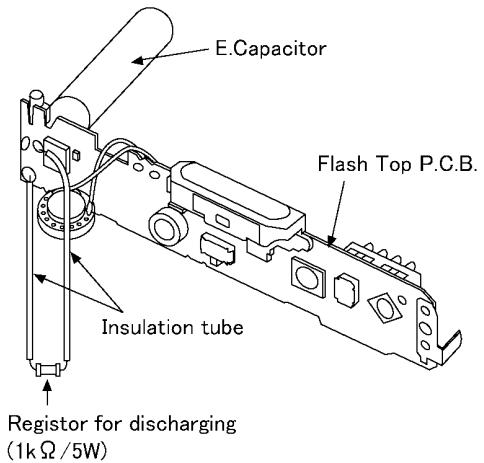


CAUTION

Be sure to discharge the E.Capacitor on Flash Top P.C.B. before disassembling.

1. Remove the Flash Top P.C.B..
2. Put the insulation tube on the lead part of resistor (ERG5SJ102: 1kΩ/5W).
3. Put the resistor between both terminals of E.Capacitor unit for approx. 5 seconds.


NOTE:(When Installing)

- Align the convex of power switch and power knob.

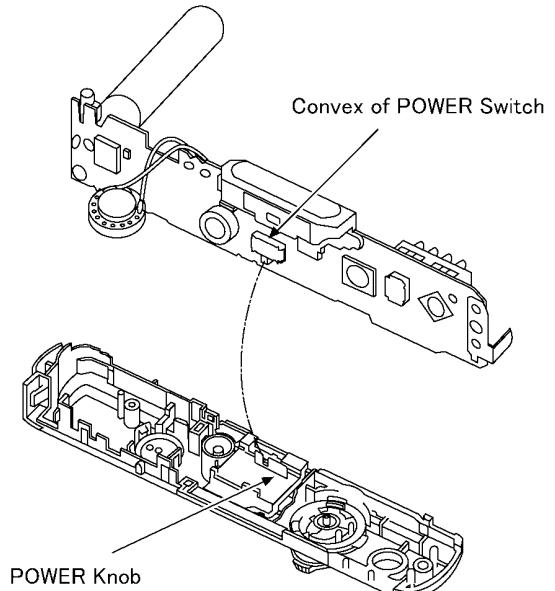


(Fig. D8)

8.3.7. Removal of the Lens Unit

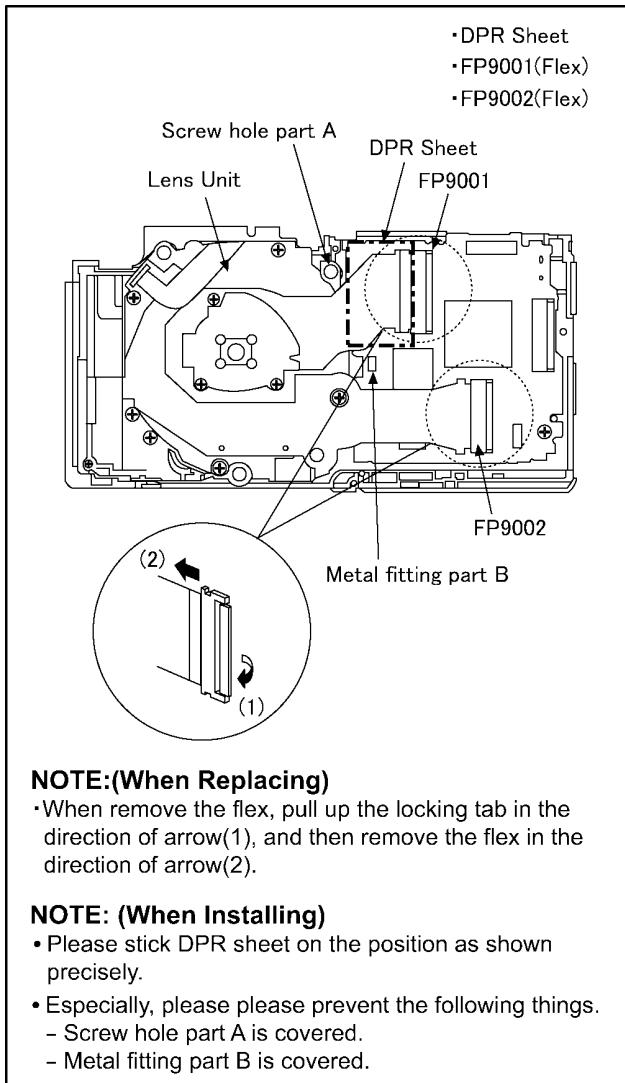


(Fig. D9)

8.3.8. Removal of the Main P.C.B.

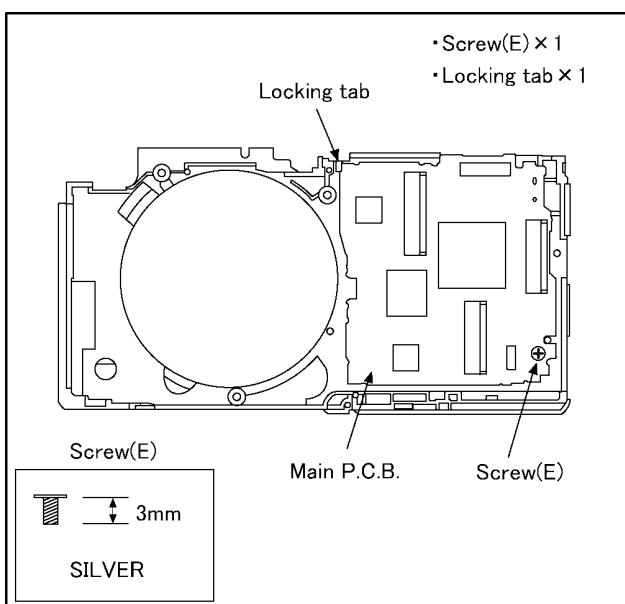


(Fig. D10)

8.3.9. Removal of the Battery Case

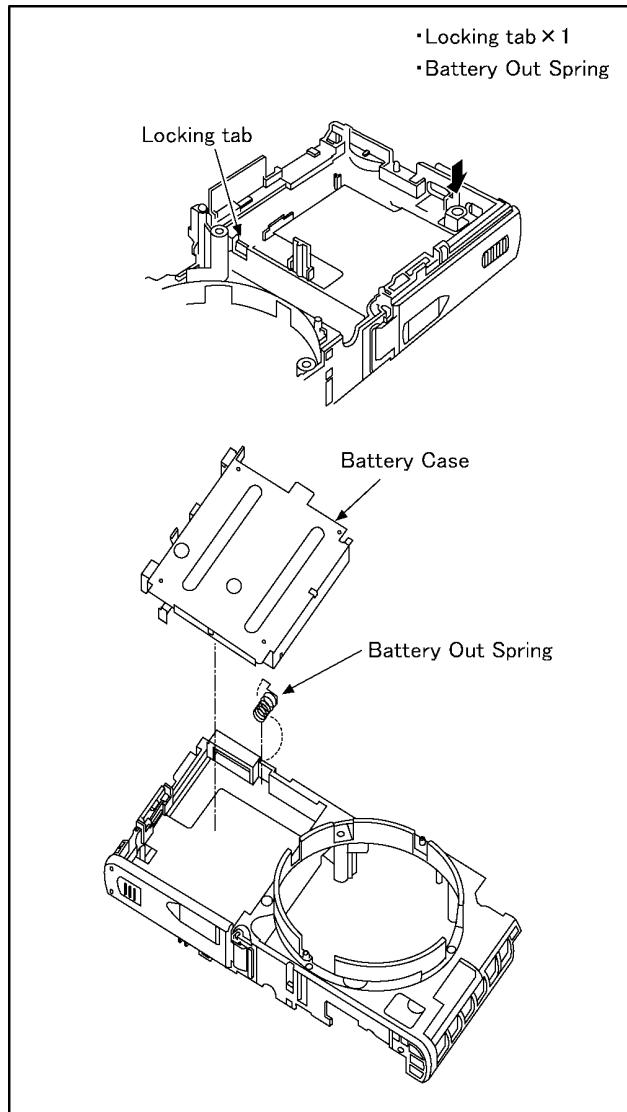

(Fig. D11)

8.3.10. Removal of the Battery Door Unit and Jack Door

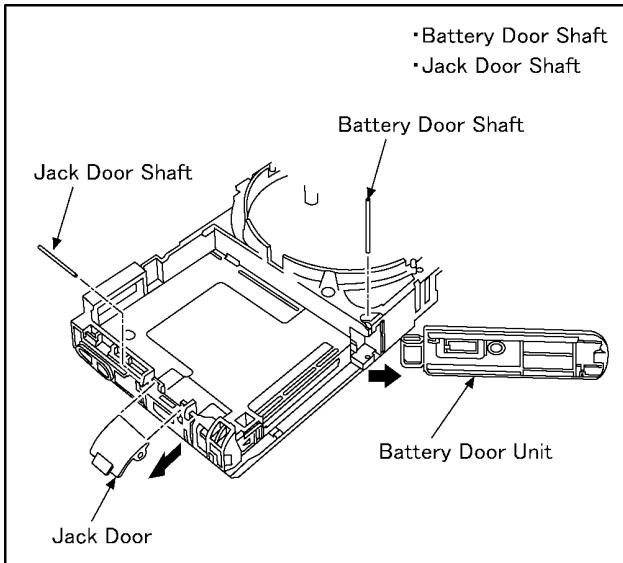

(Fig. D12)

NOTE: (When Installing)

Make sure to confirm the following points when installing.

- The Screw is tightened enough.
- Installing conditions are fine. (No distortion, no abnormal space.)
- No dust and/or dirt on Lens surfaces.
- LCD image is fine. (No dust and dirt on it, and no gradient images.)

8.4. Lens Disassembly Procedure



Precaution:

1. Do not remove the CCD when disassembling or re-assembling the lens in order to maintain it clean. When remove it, refer to item "8.6.".
2. Keep dust or dirt away from the lens.
3. To remove dirt or dust from the lens, blow with dry air.
4. Do not touch the lens surface.
5. Apply grease (RFKZ0472) as shown on "THE APPLICATION OF GREASE METHOD" in the figure.
6. Apply a light coat of grease using an object similar to a toothpick.
7. The drive frame unit and penetration cam frame should be replaced as a unit.

8.4.1. Removal of the Zoom Motor and Lens FPC Unit

1. Remove the 3 tapes.
2. Unscrew the 2 screws (A).
3. Remove the zoom motor to the direction of arrow (1).
4. Unscrew the 1 screw (B).
5. Remove the photo sensor.
6. Remove the 13 solders (A).
7. Remove the 3 solders (B).
8. Remove the 5 locks.


- Tape x 3
- Screw(A) x 2
- Screw(B) x 1
- Photo Sensor
- Solder(A) (13 points)
- Solder(B) (3 points)
- Lock x 5

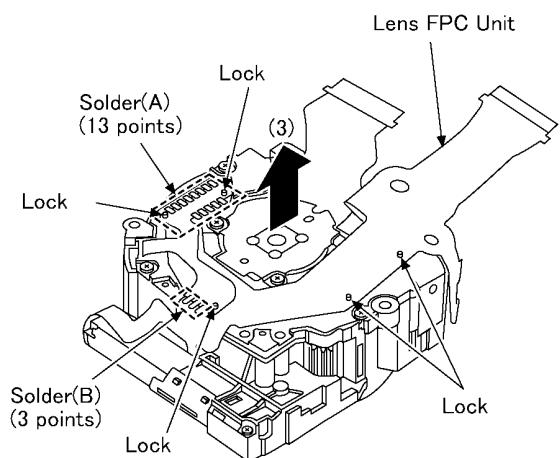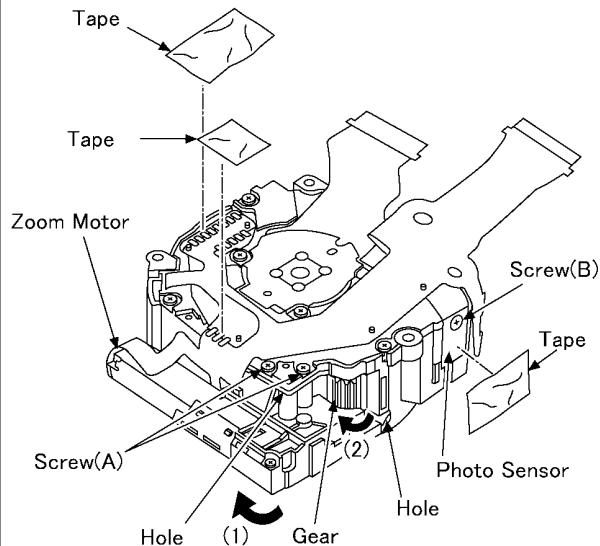


NOTE: (When Installing)

- Turn the gear of fixed frame unit in the direction of arrow (2), and then confirm the lens shutter is closed.
- Align the convex of fixed frame unit and hole of zoom motor, and then install them.

Screw(A)

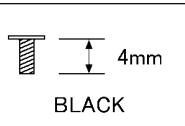


Screw(B)

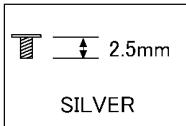

9. Remove the 4 solders (C).

10. Remove the lens FPC unit to the direction of arrow (3).

- Solder(C) (4 points)

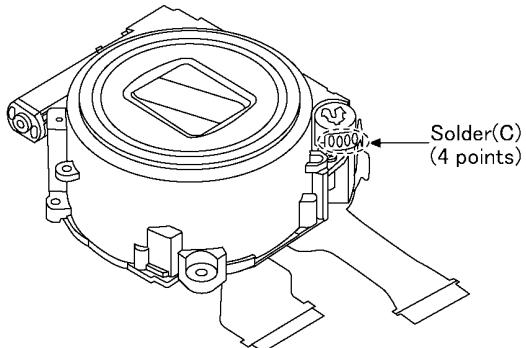


NOTE: (When Replacing)

- Take care not to damage the flex.

8.4.2. Removal of the Master Flange Unit

1. Unscrew the 4 screws (C).

- Screw(C) x 4

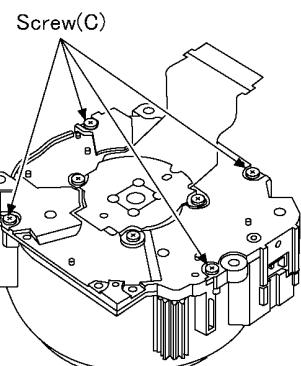


Screw(C)

4mm

BLACK

2. Remove the master flange unit.

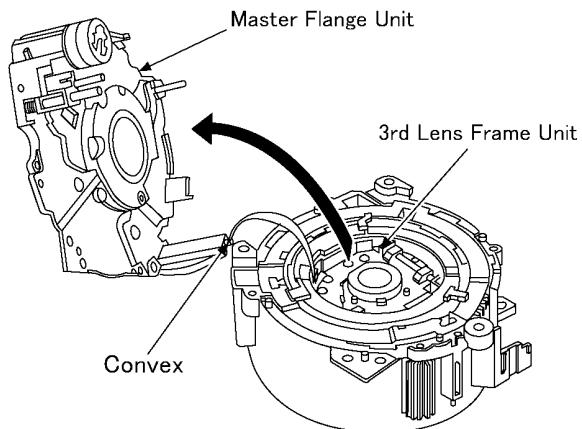

NOTE:(When Replacing)

- Remove the flex of 3rd lens frame unit from convex of the master flange unit.
- Take care not to damage the flex.

NOTE:(When Installing)


- Refer to "THE APPLICATION OF GREASE METHOD" when installing the master flange unit.

8.4.3. Removal of the 1st Lens Frame Unit/2nd Lens Frame Unit/Both Sides Cam Frame/2nd 3rd Direct Frame/3rd Lens Frame Unit

1. Push the both sides cam frame from the lens front side in the direction of arrow, and then remove the unit of 1st lens frame unit/2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit from the fixed frame unit/drive frame unit/penetration cam frame/1st direct frame unit.

■ CAUTION

- The "Drive/Penetration Frame Unit" should be replaced as a unit.
- Do not replace/exchange only single part, individually.

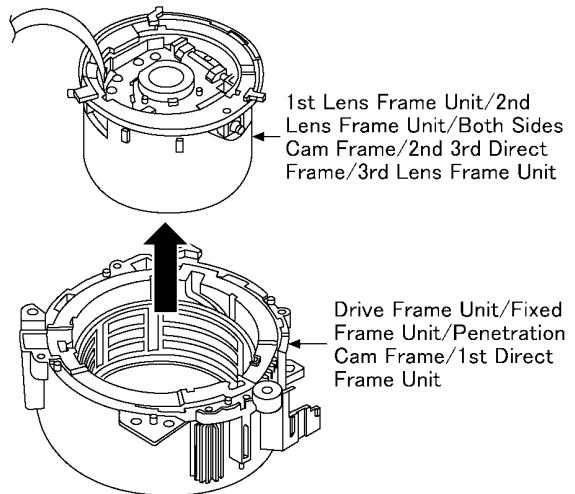


NOTE: (When Replacing)

- Take care not to damage the flex.
- When lift the 1st lens frame unit/2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit, take care not to put fingerprint of the lens.

8.4.4. Removal of the 2nd Lens Frame Unit/Both Sides Cam Frame/2nd 3rd Direct Frame/3rd Lens Frame Unit

1. Turn the 2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit in the direction of the arrow (1) fully, and then remove them in the direction of the arrow (2).

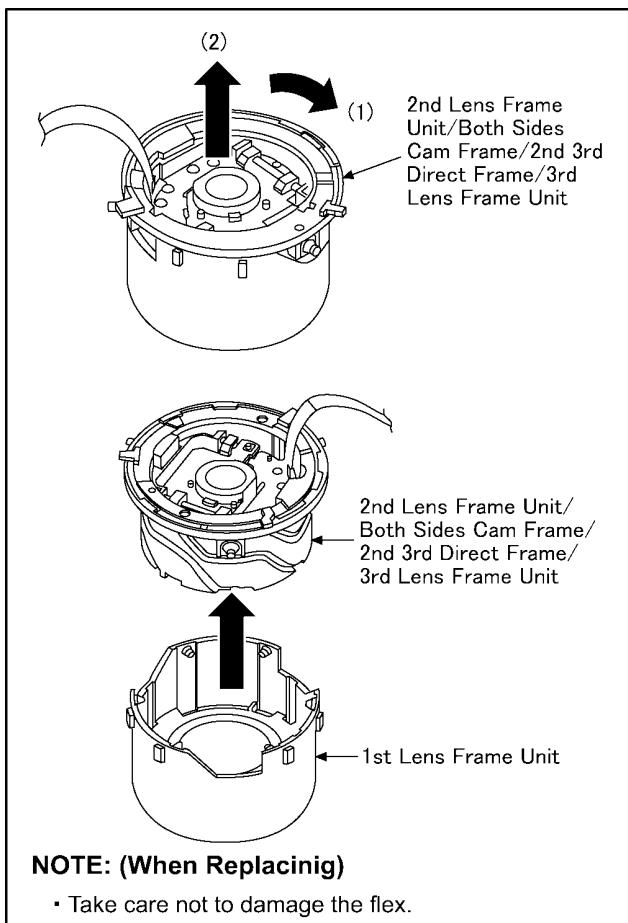


NOTE: (When Replacing)

- Take care not to damage the flex.


8.4.5. Removal of the 2nd 3rd Direct Frame

1. Remove the 2nd 3rd direct frame in the direction of the arrow.

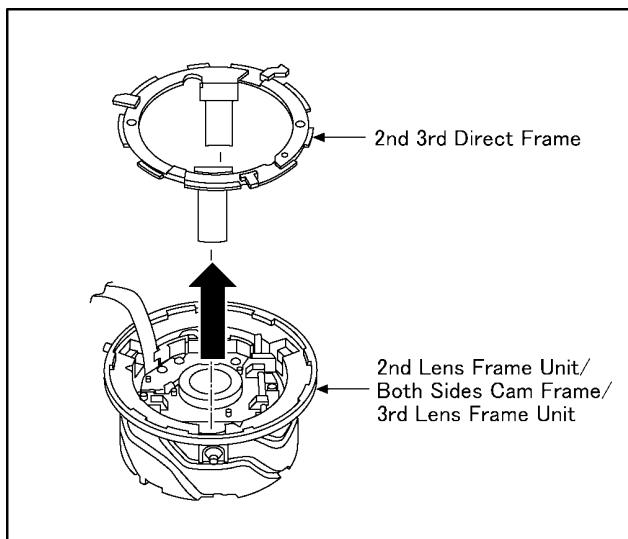

8.4.6. Removal of the 3rd Lens Frame Unit

1. Remove the 3rd lens frame unit in the direction of the arrow.

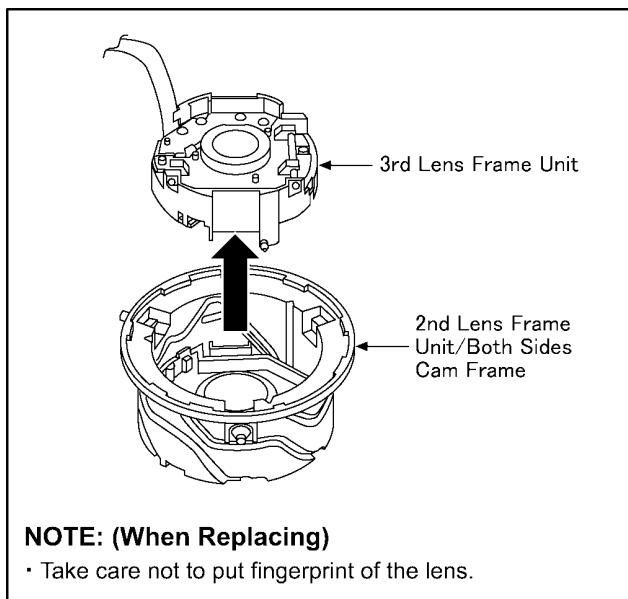


NOTE: (When Replacing)

- Take care not to put fingerprint of the lens.

8.4.7. Removal of the 2nd Lens Frame Unit

1. Turn the 2nd lens frame unit in the direction of the arrow (1) fully, and then remove it in the direction of the arrow (2).

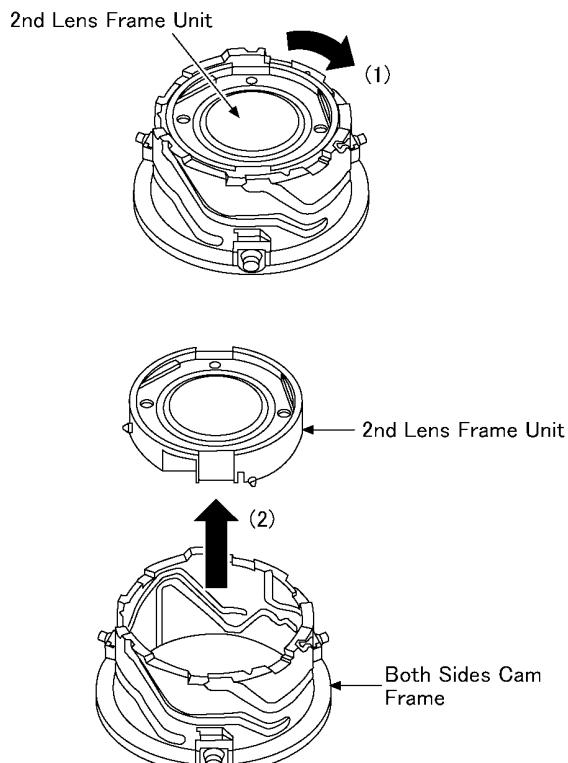

NOTE: (When Replacing)


- Take care not to put fingerprint of the lens.

8.4.8. Removal of the 1st Direct Frame Unit

1. Remove the 1st direct frame unit in the direction of the arrow.

■ CAUTION

- The "Drive/Penetration Frame Unit" should be replaced as a unit.
- Do not replace/exchange only single part, individually.

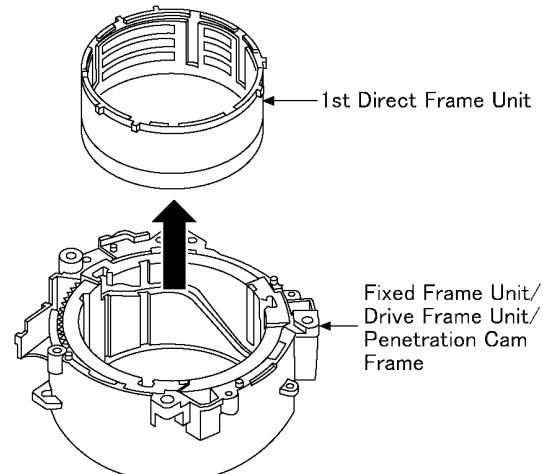


8.4.9. Removal of the Drive/Penetration Frame Unit

1. Remove the drive/penetration frame unit in the direction of the arrow.

■ CAUTION

- The "Drive/Penetration Frame Unit" should be replaced as a unit.
- Do not replace/exchange only single part, individually.

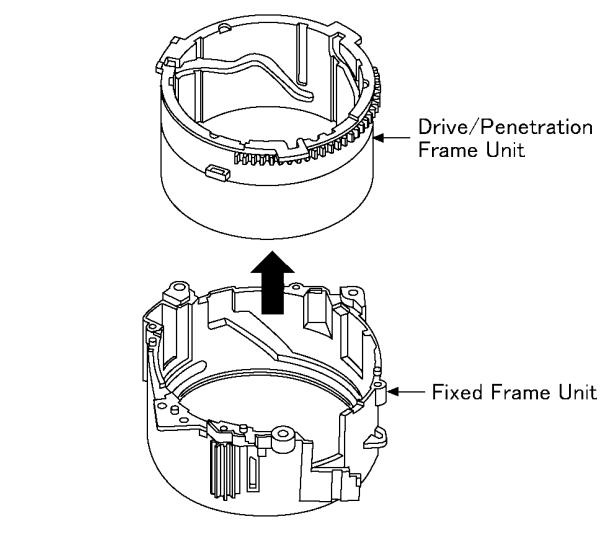


8.5. Assembly Procedure for the Lens

8.5.1. Phase alignment of the Penetration Cam Frame and Drive Frame Unit


1. Insert the shading sheet to drive frame unit.
(When insert the shading sheet, so that the luster side facing to subject side.)
2. Set the projection part(most wide) of penetration cam frame at the upper left and the gear part of drive frame unit at the lower right, and then install the penetration cam frame to drive frame unit.

Set the projection part(most wide) at the upper left.

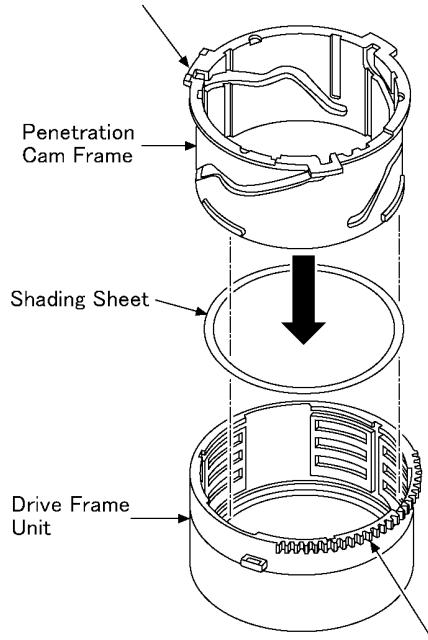


Set the gear part at the lower right.

- Align the phase of the groove of penetration cam frame and the groove of drive frame unit (3 points).

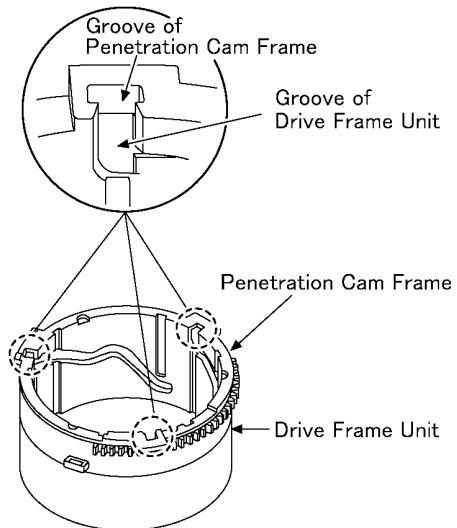

8.5.2. Phase alignment of the Drive/Penetration Frame Unit and Fixed Frame Unit

1. Align the projection part(most wide) of drive/penetration frame unit and the flex insert part of fixed frame unit.
2. Align the convex part of drive/penetration frame unit and the groove of fixed frame unit, and then install the drive/penetration frame unit to fixed frame unit.

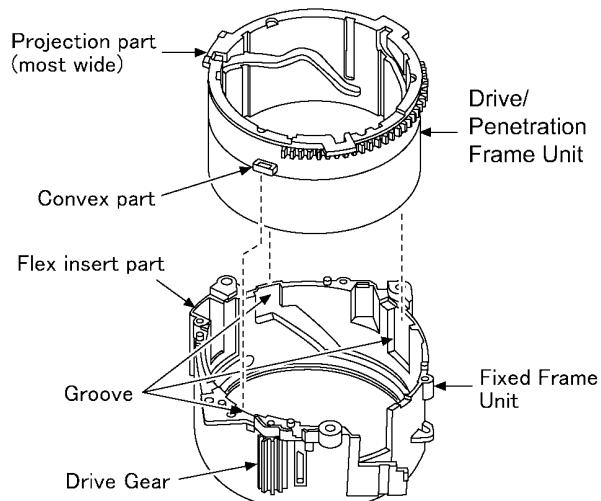


NOTE: (When Installing)

- With aligning the phase of the drive/penetration frame unit and the fixed frame unit, confirm the gear of drive frame unit is engaged with the gear of fixed frame unit firmly.

8.5.3. Phase alignment of the 2nd Lens Frame Unit and Both Sides Cam Frame

1. Set the No. mark of 2nd lens frame unit at the upper side and the concave part(most large) of both sides cam frame at the left.
2. Align the convex of 2nd lens frame unit and the groove of both sides cam frame, and then install the 2nd lens frame unit to both sides cam frame.

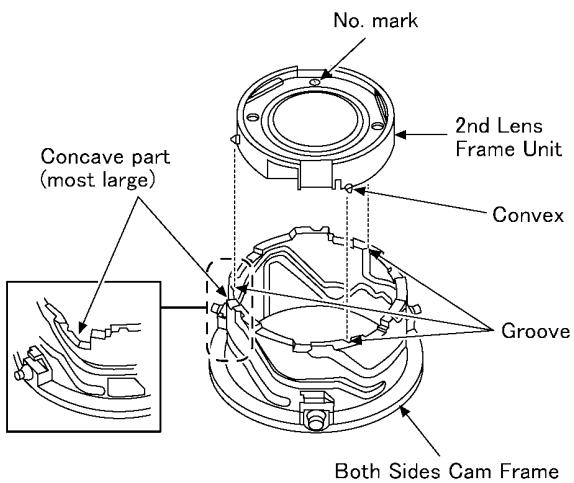


NOTE: (When Installing)

- Take care not to put fingerprint of the lens.

8.5.4. Phase alignment of the 3rd Lens Frame Unit and 2nd Lens Frame Unit/Both Sides Cam Frame

1. Set the concave part(flex side) of 3rd lens frame unit at the upper side and the concave(most large) of 2nd lens frame unit/both sides cam frame at the right.
2. Align the convex of 3rd lens frame unit and the groove of 2nd lens frame unit/both sides cam frame, and then install the 3rd lens frame unit to 2nd lens frame unit/both sides cam frame.

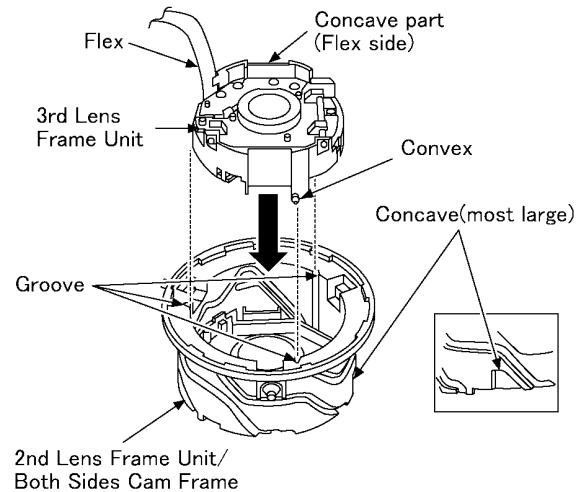


NOTE: (When Installing)

- Take care not to put fingerprint of the lens.
- Take care not to damage the flex.

8.5.5. Phase alignment of the 2nd 3rd Direct Frame and 2nd Lens Frame Unit/Both Sides Cam Frame/3rd Lens Frame Unit

- Align the projection part(curved) of 2nd 3rd direct frame and the concave part(flex side) of 2nd lens frame unit/both sides cam frame/3rd lens frame unit, and then install the 2nd 3rd direct frame to 2nd lens frame unit/both sides cam frame/3rd lens frame unit.

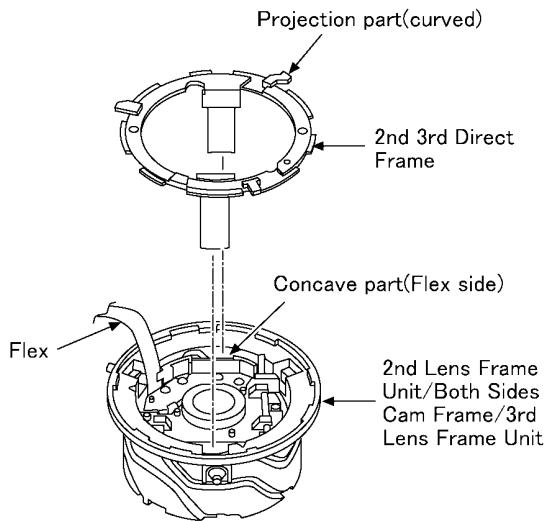


NOTE: (When Installing)


- Take care not to put fingerprint of the lens.

8.5.6. Phase alignment of the 2nd Lens Frame Unit/Both Sides Cam Frame/2nd 3rd Direct Frame/3rd Lens Frame Unit and 1st Lens Frame Unit


- Set the flex part of 2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit at the upper side.

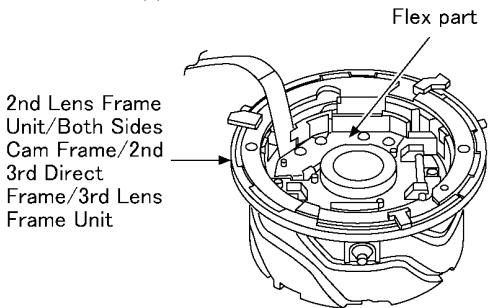


- Rotate the 2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit in a clockwise direction approx. 110 degrees.

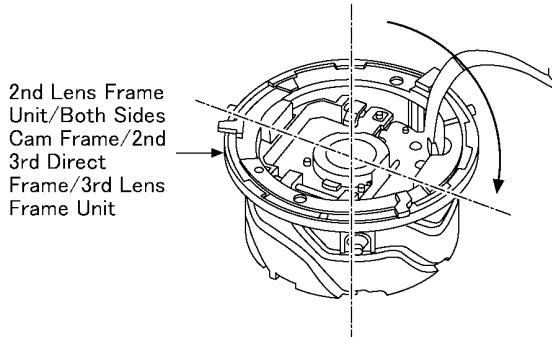

- Set the "LEICA" character on the front side of 1st lens frame unit at the upper side.
- Align the groove of 2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit and the convex of 1st lens frame unit, and then install the 2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit to 1st lens frame unit. (The 2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit rotates in a counterclockwise direction while installing.)

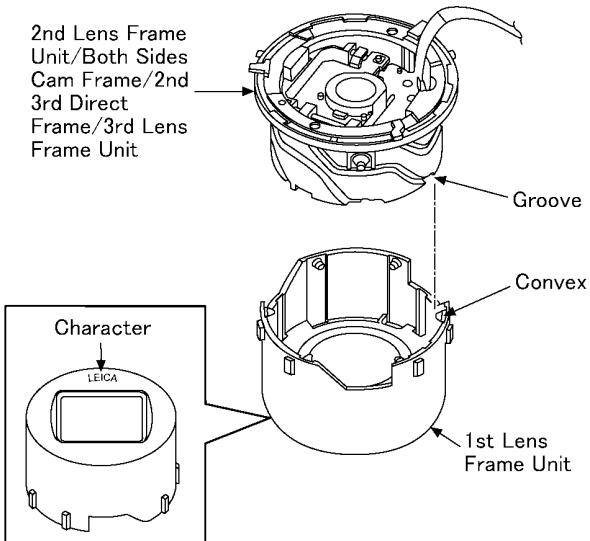

- The flex part of 2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit is seen at the upper side when install is finished.

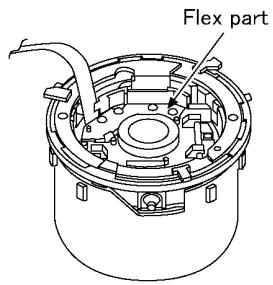


NOTE: (When Installing)

- Take care not to put fingerprint of the lens.
- Take care not to damage the flex.

8.5.7. Phase alignment of the 1st Lens Frame Unit/2nd Lens Frame Unit/Both Sides Cam Frame/2nd 3rd Direct Frame/3rd Lens Frame Unit and 1st Direct Frame Unit

- Set the flex part of 1st lens frame unit/2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit at the upper side and the projection part(most wide) of 1st direct frame unit at the upper left side.


- Align the convex part of 1st lens frame unit/2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit and the groove of 1st direct frame unit, and then install the 1st lens frame unit/2nd lens frame unit/both sides cam frame/2nd 3rd direct frame/3rd lens frame unit to 1st direct frame unit.

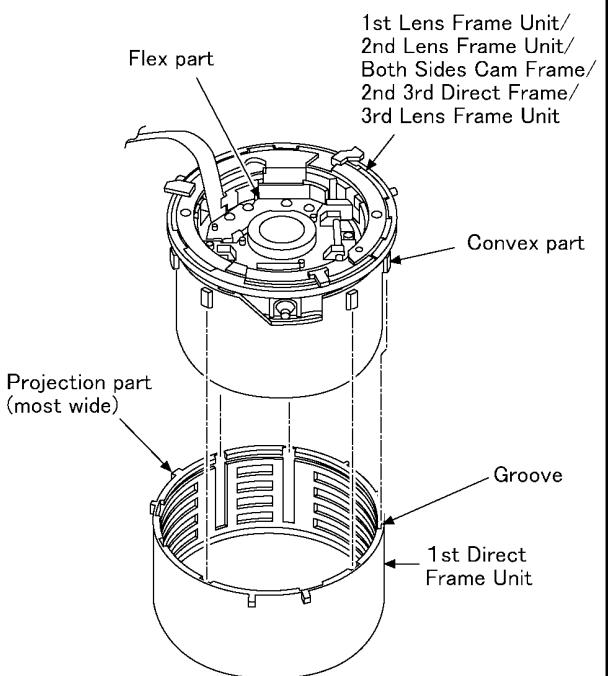


NOTE: (When Installing)

- Take care not to put fingerprint of the lens.
- Take care not to damage the flex.

8.5.8. Phase alignment of the 1st Direct Frame Unit/1st Lens Frame Unit/2nd Lens Frame Unit/Both Sides Cam Frame/2nd 3rd Direct Frame/3rd Lens Frame Unit and Fixed Frame Unit/Drive Frame Unit/Penetration Cam Frame

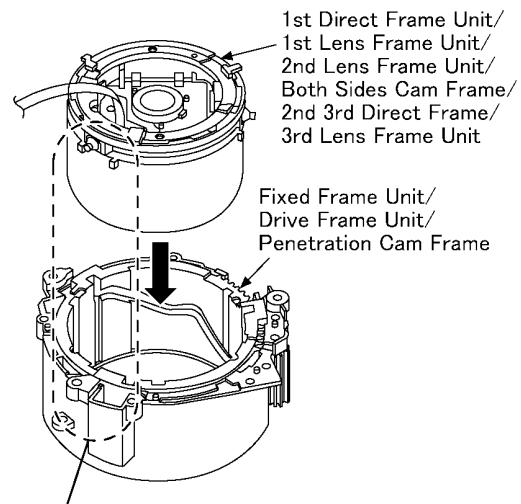


- Insert the convex(1), convex(2) and convex(3) to grooves(a,b,c) in order.

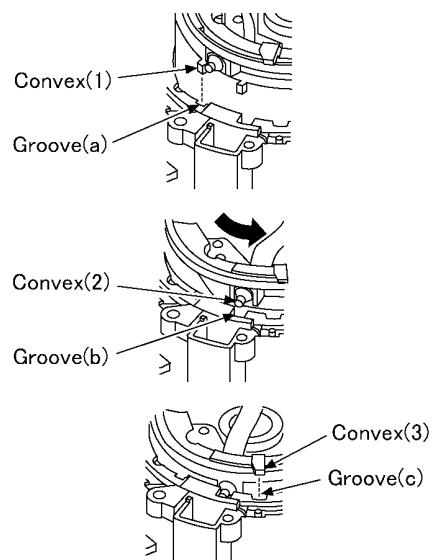


FRONT VIEW

- Install the 1st lens frame unit so that the "LEICA" character may become the position of the figure below.

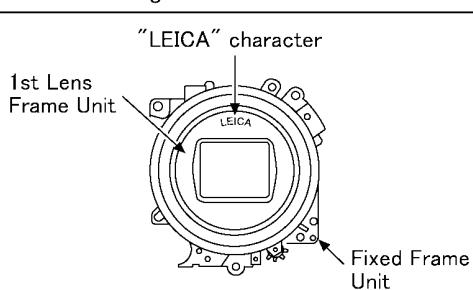


8.5.9. Install of the Master Flange Unit

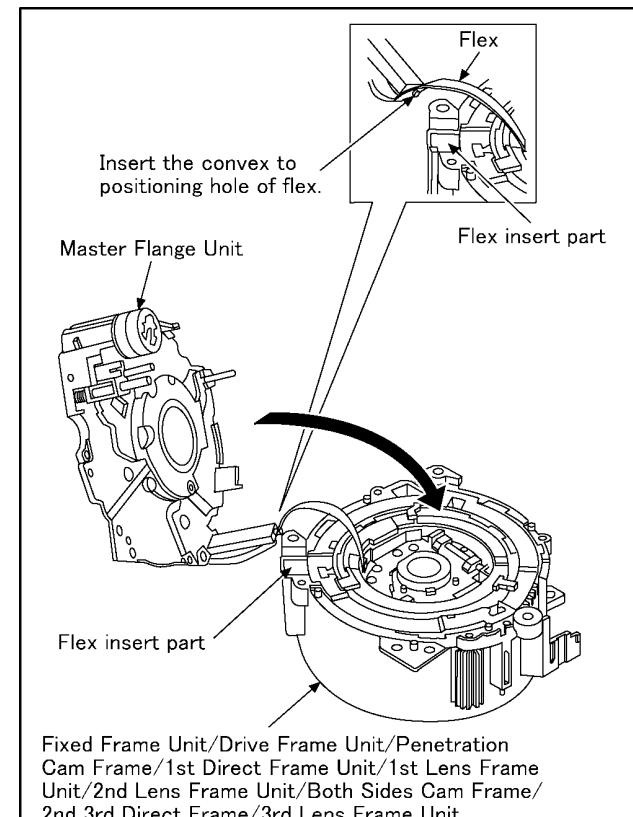

Fixed Frame Unit/Drive Frame Unit/Penetration Cam Frame/1st Direct Frame Unit/1st Lens Frame Unit/2nd Lens Frame Unit/Both Sides Cam Frame/2nd 3rd Direct Frame/3rd Lens Frame Unit



NOTE: (When Installing)

- Take care not to damage the flex.
- Refer to "THE APPLICATION OF GREASE METHOD" when installing the master flange unit.

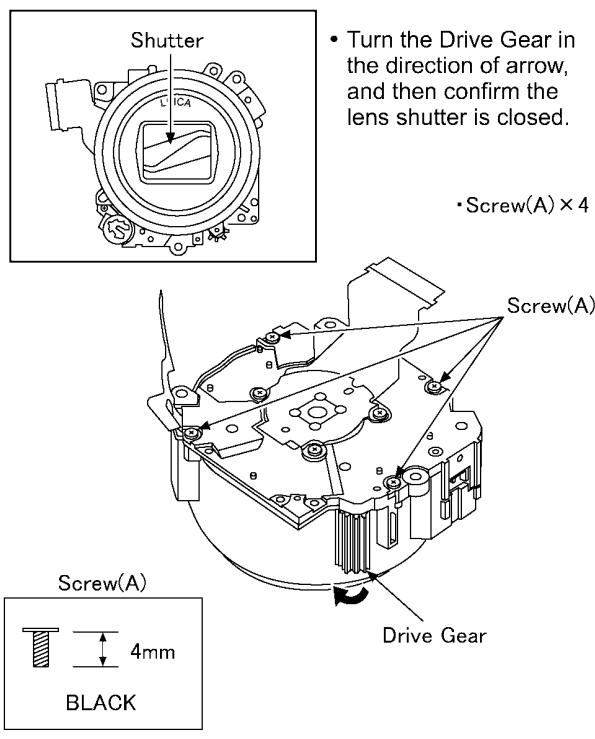


8.5.10. Install of the Lens FPC Unit and Zoom Motor

- Lock × 5
- Solder(A)(13 points)
- Solder(B)(3 points)
- Solder(C)(4 points)
- Photo Sensor
- Screw(C) × 2
- Tape × 3
- Screw(B) × 1

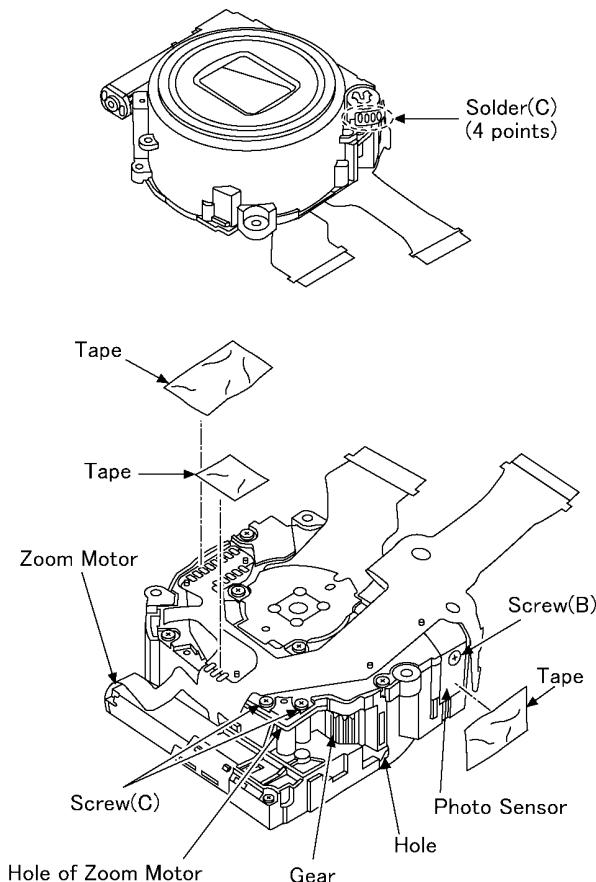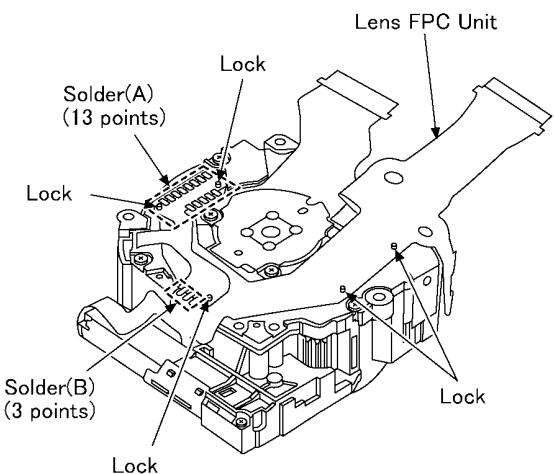


NOTE: (When Installing)

- Align the convex of fixed frame unit and hole of zoom motor, and then install them.

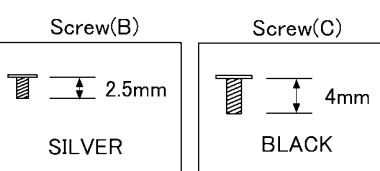


8.6. Removal of the CCD Unit

To prevent the CCD unit from catching the dust and dirt, do not remove the CCD unit except for replacing.

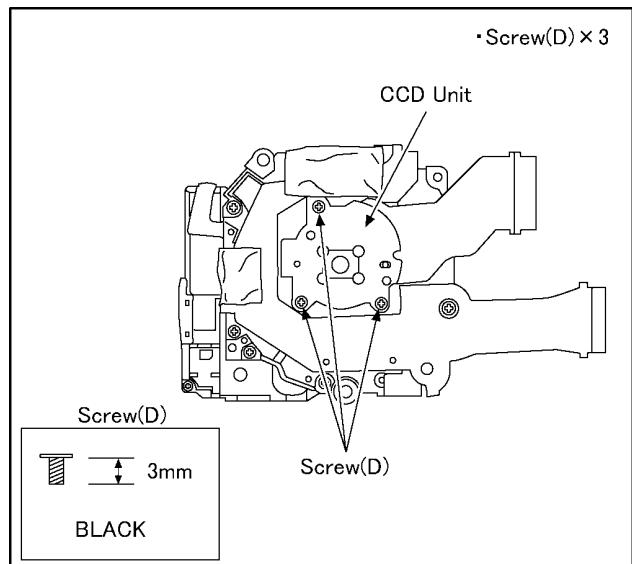

8.7. Removal of the Focus Motor

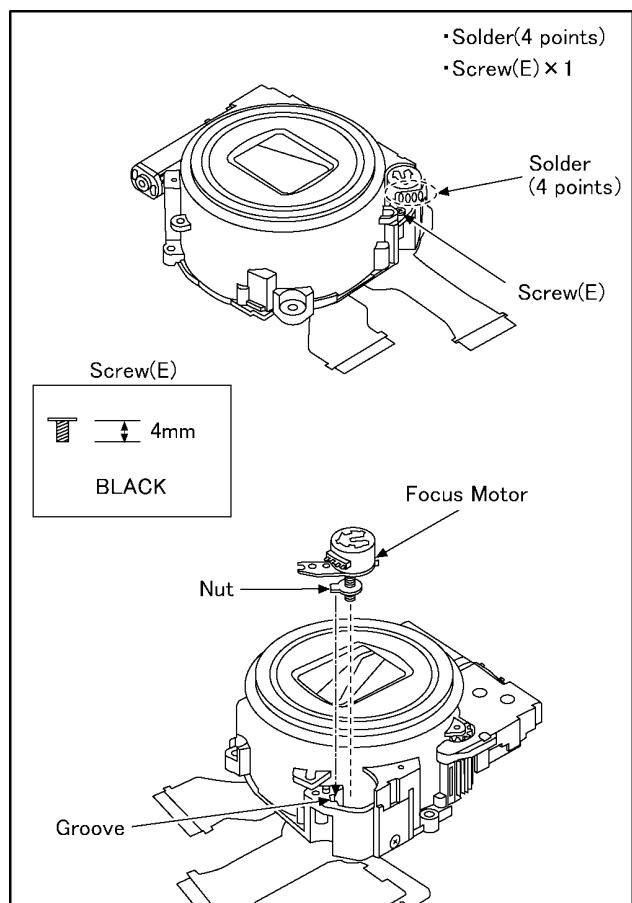

NOTE: (When Installing)

- Align the nut of focus motor to the groove, and then install them.
- Refer to "THE APPLICATION OF GREASE METHOD" when installing the focus motor.


8.8. The Application of Grease Method

The grease application parts of lens unit are as follows.

Apply grease additionally in the specified position if necessary.

When the grease is applied, use a toothpick and apply thinly.

- Focus motor (lead screw)/Fasten groove of nut/Guide pole
 - Grease: RFKZ0472
 - Amount of application: 2 - 4 mg
- Positioning pole
 - Grease: RFKZ0472
 - Amount of application: 1 - 2 mg

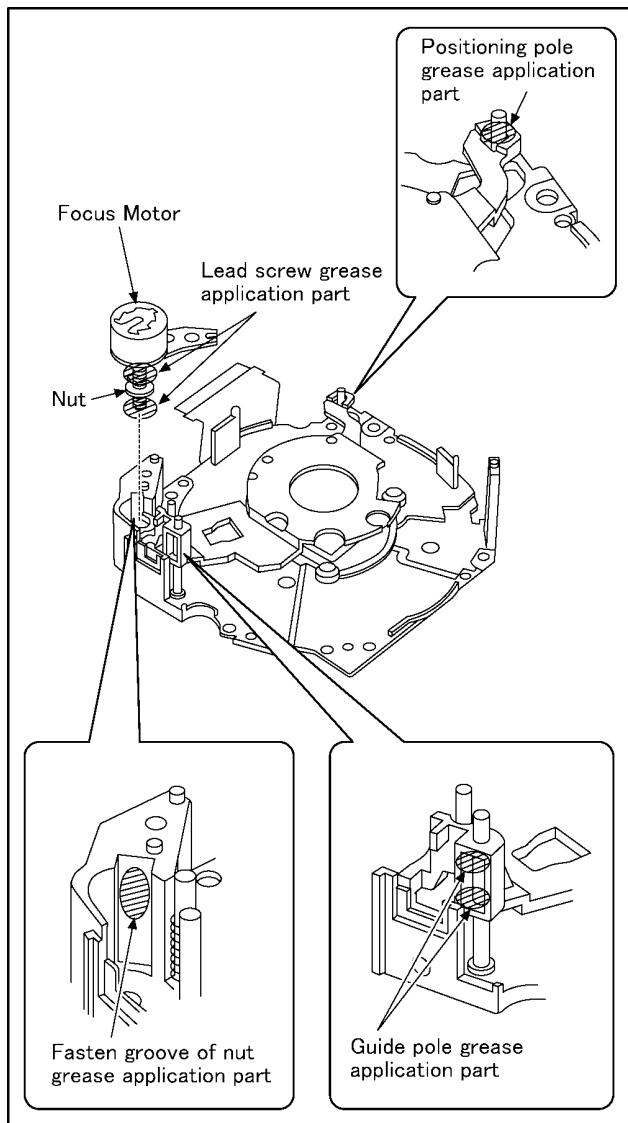

9 Measurements and Adjustments

9.1. Introduction

When servicing this unit, make sure to perform the adjustments necessary based on the part(s) replaced.

Before disassembling the unit, it is recommended to back up the camera data stored in flash-rom as a data file.

IMPORTANT NOTICE (After replacing the MAIN P.C.B.)

After replacing the MAIN P.C.B., it is necessary to use the "DIAS" software to allow the release of adjustment flag(s).

The Adjustment software "DIAS" is available at "TSN Website". To download, click on "Support Information from NWBG/VDBG-AVC".

*DIAS (DSC Integrated Assist Software)

9.2. Before Disassembling the unit

9.2.1. Initial Setting Release

The cameras specification are initially set in accordance with model suffix (such as EB, EG, GK, GC, and so on.). Unless the initial setting is not released, an automatic alignment software in the camera is not able to be executed when the alignment is carried out.

Note:

The initial setting should be again done after completing the alignment. Otherwise, the camera may not work properly. Therefore as a warning, the camera display a warning symbol “ ! ” on the LCD monitor every time the camera is turned off. Refer to the procedure described in “3.4.2 INITIAL SETTINGS” for details.

[How to Release the camera initial setting]

Preparation:

- Attach the Battery or AC Adaptor with a DC coupler to the unit.

(Since this unit has built-in memory, it can be performed without inserting SD memory card.)

1. Turn the Power on.
2. Select with the touch panel in order to [REC] mode and [NORMAL PICTURE] mode.
3. Turn the Power off. (If the unit is other than [NORMAL PICTURE] mode, it does not display the initial settings menu.)

Step 1. Temporary cancellation of “INITIAL SETTINGS”:

While pressing "W side of [ZOOM LEVER]", [SHUTTER BUTTON] and touch the screen (Any position of the screen is acceptable) simultaneously, turn the power on.

Step 2. Cancellation of “INITIAL SETTINGS”:

1. Select with the touch panel to [PLAYBACK] mode.
2. Version display in the playback menu, touch near the center of screen, while [SHUTTER BUTTON] is pressed halfway.
3. Turn the power off.

The LCD displays the “ ! ” mark before the unit powers down.



9.2.2. Flash-Rom Data Backup

When trouble occurs, it is recommended to backup the Flash-rom data before disassembling the unit.

There are two kinds of Flash-rom data backup methods:

[ROM_BACKUP (Method of Non-PC backup)]

1. Insert the SD-card into the camera.
2. Set the camera to "Temporary cancellation of the initial settings".
3. Select the "SETUP" menu.

From the "SETUP" menu, select "ROM BACKUP".

NOTE:

This item is not listed on the customer's "SETUP" menu.

4. When this "ROM_BACKUP" item is selected, the following submenus are displayed.

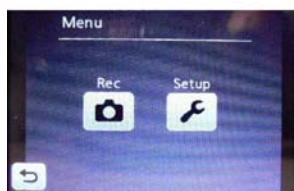


Fig.2-1

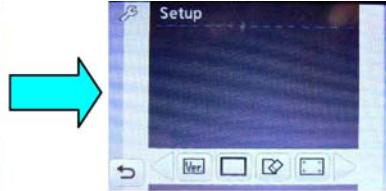


Fig.2-2



Fig.2-3


Item	Function	Details
DSC → SD	Save all the DSC's Flash-rom data to SD-CARD	*DSC's Flash-rom data is saved to the SD-CARD as a data file by the same format as the TATSUJIN software for the previous models. (DATA BACKUP) -File location: ROOT DIRECTORY in SD-CARD. -File Name: 1) User Setup Information data: <Model Number>U.txt [Example: DMC-FX66 : "FX66U.txt"] 2) Optical Adjustment data: <Model Number>F.txt [Example: DMC-FX66 : "FX66F.txt"] *If the concerned file already exists, "OVERWRITE?" message is displayed.
SDALL→ DSC (ID CHECK)	Write the all data to DSC's Flash-rom from SD-CARD	*The backup data being stored in the SD card is transferred to DSC unit. *ID CHECK: When the model ID is different, data is not transferred.
SDALL→ DSC (FORCE)	Write the all data to DSC's Flash-rom from SD-CARD	*FORCE: Even if the model ID is different, data is transferred. *If the main PCB is replaced, select "SDALL → DSC (FORCE)".
SDUSER→DSC (FORCE)	Only "User setup information" is written from the saved file in the SD-CARD to DSC's Flash-rom.	*Only the user's "setup" setting condition is transferred to DSC unit. *FORCE: Even if the model ID is different, the data is transferred.
!→LUMIX	Shipping set without initializing "User setup information"	*Initial setting is executed without initializing the user's set up setting condition. * The initial setting must be perform while the Self-timer LED is blinking. * The picture data stored in the built-in memory of the DSC is not erased, with this operation.

[DSC Integrated Assist Software (Method of Using PC)]

Same as TATSUJIN software for previous models.

9.2.3. Light Box

If using VFK1164TDVLB Light Box, remove the lens connection ring by loosening three hexagon screws.

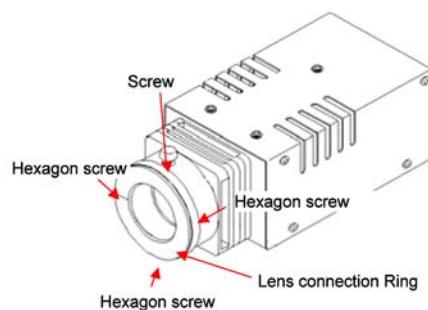

9.3. Details of Electrical Adjustment

9.3.1. How to execute the Electrical Adjustment

It is not necessary to connect the camera to a PC to perform adjustments.

“Flag reset operation” and “Initial setting operation” are required when carrying out the alignment, follow the procedure below.

9.3.1.1. Startup Electrical Adjustment mode

1. Release the initial settings.
2. Insert a recordable SD card.
(Without a SD card, the automatic adjustment can not executed.)
3. Procedure to set the camera into adjustment mode:
 - a. Turn the Power on.
 - b. Select with the touch panel in order to [REC] mode and [NORMAL PICTURE] mode.
 - c. Turn the Power off.
 - d. Move the [ZOOM LEVER] to “W” side and turn the power on simultaneously.LCD monitor displays “SERVICE MODE” (Fig. 3-1), and then start the automatic adjustment software.

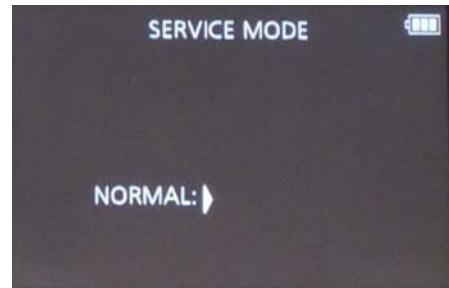


Fig.3-1

9.3.1.2. Status Adjustment Flag Setting

Reset (Not yet adjusted) the status flag condition.

1. Move the [ZOOM LEVER] to “W” side.
2. While display the screen, select the “T” or “W” side of [ZOOM LEVER] to adjustment item (Flagged items), and then press the [SHUTTER BUTTON].

NOTE:

The selected item's flag has been changed from “F (green)” to “0 (yellow)”.

*Flag conditions:

F (green)

means that the alignment has been completed and the status flag condition is set. In this case, the flag condition should be reset, if you try to carry out the automatic alignment.

0 (yellow)

means that the alignment has been not “completed” and the status flag condition is “reset”. In this case, automatic alignment is available.

- In case of setting the status flag into set condition again without completion of the alignment, the status flag should be SET by using PC, or UNDO by using ROM BACKUP function.



Fig.3-2

9.3.1.3. Execute Adjustment

(In case of “OIS Adjustment”)

1. Perform step “9.3.1.1.” to “9.3.1.2.”, to reset the OIS flag status “F” (Set) to “0” (Reset)
2. Reselect “EXIT” with [ZOOM LEVER] in the preceding paragraph, and then press the [SHUTTER BUTTON]. (Refer to Fig.3-3)
3. Press the [SHUTTER BUTTON]. The adjustment will start automatically.



Fig.3-3

4. When the adjustment is completed successfully, adjustment report menu appears with Green OK on the LCD monitor. (Refer to Fig.3-4)

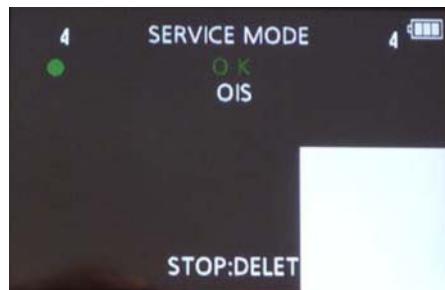


Fig.3-4

9.3.1.4. Attention point during Adjustment

1. Step “9.3.1.3.” procedure shows OIS adjustment as an example. To perform the adjustment, refer to the “9.3.2. Adjustment Specifications” table which shows key point for each adjustment.
2. Do not move the light box, the camera or the chart while adjusting. If one of these is moved accidentally, start the adjustment again.
3. Do not press any buttons/keys until the default menu (Fig.3-5) is displayed on the LCD monitor. Otherwise, adjustment data may not be stored properly.
4. If the adjustment is interrupted accidentally, the alignment data may not be properly saved in the Flash-rom.

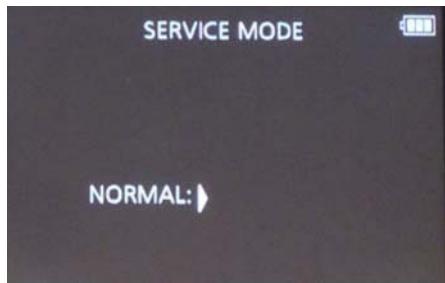


Fig.3-5

9.3.1.5. Finalizing the Adjustment

1. Several adjustment flags can be reset (“F” into “0”) at the same time. In this case, when the adjustment has been completed, the screen will change showing the adjustment for the next item until all reset items are completed. Also, when the shutter button is pressed, the screen jump to the next adjustment item.
2. To cancel the adjustment mode while in the process of performing the adjustment, follow this procedures.
(1) Move the [ZOOM LEVER] to “W” side.

NOTE:

- If adjustment is cancelled with above procedure, adjustment is not completed. Make sure to adjust it later.
- Adjustment software “DIAS” is able to control the status of the adjustment flags.

9.3.2. Adjustment Specifications

The following matrix table shows the relation between the replaced part and the Necessary Adjustment.

When a part is replaced, make sure to perform the necessary adjustment(s) in the order indicated.

The table below shows all the information necessary to perform each adjustment.

Adjustment order	Adjustment Item	FLAG	Purpose	Replacing Parts							JIG/TOOLS	SET UP	How to Operate	
				MAIN PCB	VENUS (IC6001)	MCP (IC6002)	Lens Parts (except CCD)	CCD Unit	T PANEL DRIVER	T PANEL	GYRO (IC7101)			
1	Touch Panel Control	TPC	Touch Panel Inspection	O	O	O	-	-	O	O	-	•TOUCH PEN VGQ0C14 (VGQ4370)	NONE	1)Touches sequentially + mark with the touch pen on the display. 2)If OK is displayed, it is adjustment completion.
2	Venus Zoom	PZM	Venus Zoom Inspection	O	O	O	-	-	-	-	-	NONE	NONE	1)Press Shutter Button 2)After displaying "PZM", press Shutter Button again. 3)After completed, the "OK" message appears.
3	OIS sensor	OIS	OIS sensor output level adjustment	O	O	O	O	O	-	-	-	NONE	NONE	1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" message appears.
4	Backfocus / GYRO	BF	To have the focus tracking curve be appropriate shape and GYRO sensor adjustment	O	O	O	O	O	O	-	-	•COLLIMATOR (VFK1164TCM02 or VFK1164TCM03 or RFKZ0422)	1)Set the camera in front of collimator so that the distance between collimator and camera becomes about 4 cm as shown in Fig.A. 【NOTE】 Please note that "NG" might happen while auto adjusting. - Do not put the black colored stuff at the back side of collimator near hunching chart to get some certain brightness. - Make sure the hunting chart has no dust and dirty condition. - Not connect the USB cable at this stage.	1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" message appears.
5	Monitor Linearity	MLN	Monitor Linearity adjustment	O	O	O	O	O	-	-	-	•LIGHT BOX RFKZ0523 (VFK1164TDVLB)	1)Set the camera in front of LIGHTBOX so that the distance between collimator and camera becomes about 4 cm as shown in Fig.B.	1)Press Shutter Button 2)After completed, the "OK" message appears.
6	Shutter	SHT	Shutter speed adjustment	O	O	O	O	O	-	-	-	•LIGHT BOX RFKZ0523 (VFK1164TDVLB) •TR CHART (RFKZ0443)	1)Insert the TR chart into the slot of LIGHTBOX. 2)Set the camera in front of LIGHTBOX so that the distance between LIGHTBOX and camera becomes about 15 cm as shown in Fig.B. 3)Set the camera angle so that the color chart is displayed on the LCD monitor fully. 【NOTE】 - Since the lens position is automatically set into certain position after executing auto adjustment, confirm the angle after stopping the lens zoom position. - It is no problem even though the chart on the LCD monitor slightly cut at the corner. - It is no problem even though the focusing slightly becomes out of focusing condition. - Not connect the USB cable at this stage.	1)Press Shutter Button 2)After completed, the "OK" message appears.
7	ISO	ISO	ISO sensitivity adjustment	O	O	O	O	O	-	-	-		1)Press Shutter Button 2)After completed, the "OK" message appears.	
8	High brightness coloration	LIN	High brightness coloration adjustment	O	O	O	O	O	-	-	-		1)Press Shutter Button 2)After completed, the "OK" message appears.	
9	White Balance	WBL	White balance adjustment under various color temperature	O	O	O	O	O	-	-	-	1)Press Shutter Button 2)After completed, the "OK" message appears.	1)Press Shutter Button 2)After completed, the "OK" message appears.	
10	CCD Missing Pixels (White)	WK1	Compensation of CCD Missing Pixels (White)	O	O	O	O	O	O	-	-	NONE	NONE	
11	Color reproduction inspection and Microphone check	COL	Color reproduction inspection and Microphone check	O	O	O	O	O	-	-	-	NONE	NONE	1)Press Shutter Button 2)After completed, the "OK" message appears.
		BKI	Do not use "BKI" adjustment flag for this unit. Use "BK2" adjustment flag, instead. (In case of mostDSC models, the adjustment flag for CCD Missing Pixels is "BKI". But, in this model, "BK2" the adjustment flag for CCD Missing Pixels.)											

Adjustment order	Adjustment Item	FLAG	Purpose	Replacing Parts							JIG/TOOLS	SET UP	How to Operate	
				MAIN PCB	VENUS (IC8001)	MCP (IC6002)	Lens Parts (except CCD)	CCD Unit	T PANEL DRIVER	T PANEL	GYRO (IC7101)			
12	CCD Missing Pixels (Black)	BK2	Compensation of CCD Missing Pixels (Black)	○	○	○	○	○	※1	—	—	•LIGHT BOX RFK20523 (VFK1164TDVLB) •ND FILTER (VFK1164ND15)	<p>1) Prepare the LIGHTBOX (RFK20523). (The LIGHTBOX "VFK1164TDVLB" can be used if the front hood of VFK1164TDVLB is removed.) 2) Set the ND Filter (VFK1164ND15) to the LIGHTBOX. 3) Set the LIGHTBOX and Camera unit so that distance becomes about 4 cm.</p> <p>NOTE: Do not use "BK1" adjustment flag for this unit. Use "BK2" adjustment flag, instead.</p>	<p>1) Press Shutter Button. (The lens starts zooming and stops automatically, then green ● mark is displayed on LCD). 2) Aim the LIGHTBOX so that the entire LCD screen becomes fully "white". (No dark area). 3) Press Shutter Button. (The <BK1 adjustment 1> is executed, and then green ● mark is displayed on LCD). 4) Press Shutter Button. (The lens starts zooming and stops automatically, then green ● mark is displayed on LCD). 5) Press Shutter Button. (The <BK1 adjustment 2> is executed, and then green ● mark is displayed on LCD). 6) Press Shutter Button. (The lens starts zooming and stops automatically, then green ● mark is displayed on LCD). 7) Press Shutter Button. (The <BK1 adjustment 3> is executed, and then green ● mark is displayed on LCD). 8) Press Shutter Button. ("OK" mark is displayed on LCD when the adjustment has been completed successfully.).</p>

※1: Execute the adjustment when remove the CCD unit and replace the CCD unit.

※2: The pixel that always lights while shaded is called a white wound.

※3: The pixel that does not light while complete exposed is called a black wound.

*This unit does not have the LCD adjustment of the camera (LCD flicker adjustment etc.).




※Touch panel adjustment screen

Touch with the touch pen + mark on the upper side of the left.

To similar, touch with the touch pen + mark sequentially lower side of the left, lower side of the right, upper side of the right and center.

If OK is displayed, it is adjustment completion.

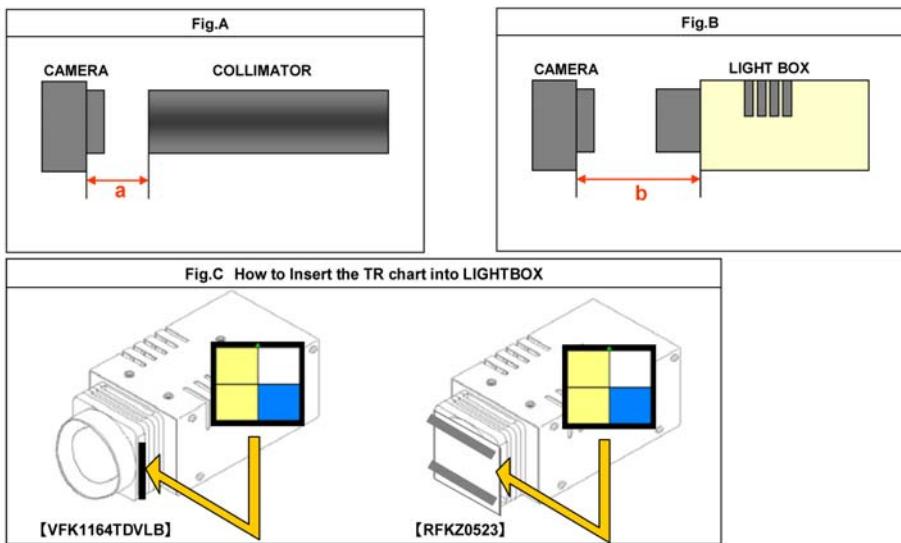

■IMPORTANT NOTICE (After replacing the MAIN P.C.B.)

After replacing the MAIN P.C.B., make sure to perform the "INITIAL SETTINGS" first, then release the "INITIAL SETTINGS" in order to proceed the electrical adjustment.

NOTE:

- 1). If electrical adjustment or data re-writing is executed before "INITIAL SETTINGS", suffix code list is never displayed, and it cannot be chosen suitable suffix code.
- 2). Never remove the battery during initial setting in process.

9.4. After Adjustment

9.4.1. Initial Setting

Since the initial setting has been released to execute the built-in adjustment software, it should be set up again before shipping the camera to the customer.

Refer to the procedure described in "3.4.2. INITIAL SETTINGS" for details.

[IMPORTANT]

1. The initial setting should be done again after completing the alignment. Otherwise, the camera will not work properly. Therefore as a warning, the camera display a warning symbol "!" on the LCD monitor every time the camera is turned off.
2. Confirm that status of all adjustment flag show "F". Even if one of the adjustment flag shows "0", initial setting programmed is never executed.
3. Adjustment software "DIAS" is able to control the status of the adjustment flags. The Adjustment software "DIAS" is available at "TSN Website", therefore, access to "TSN Website" at "Support Information from NWBG/VDBG-AVC".

10 Maintenance

10.1. Cleaning Lens and LCD Panel

Do not touch the surface of lens and LCD Panel with your hand.

When cleaning the lens, use air-Blower to blow off the dust.

When cleaning the LCD Panel, dampen the lens cleaning paper with lens cleaner, and the gently wipe the its surface.

Note:

The Lens Cleaning KIT ; VFK1900BK (Only supplied as 10 set/Box) is available as Service Aid.

Service Manual

Diagrams and Replacement Parts List

Digital Camera

Model No.

DMC-FS37EB	DMC-FH27PU
DMC-FS37EE	DMC-FH27GA
DMC-FS37EG	DMC-FH27GC
DMC-FS37EP	DMC-FH27GF
DMC-FH27P	DMC-FH27GK
DMC-FH27PC	DMC-FH27GN
DMC-FH27PR	

Vol. 1	
Colour	
[DMC-FS37]	[DMC-FH27]
(S).....Silver Type	(S).....Silver Type (except PC/PR)
(K).....Black Type	(K).....Black Type
(R).....Red Type (only EE/EG)	(R).....Red Type (except PR/PU)

Table of contents


S1. About Indication of The Schematic Diagram	S-1	S6. Replacement Parts List	S-15
S1.1. Important Safety Notice.....	S-1	S7. Exploded View	S-20
S2. Voltage Chart	S-2	S7.1. Frame and Casing Section.....	S-20
S2.1. Flash Top P.C.B.....	S-2	S7.2. Packing Parts and Accessories Section (1)	S-21
S3. Block Diagram.....	S-3	S7.3. Packing Parts and Accessories Section (2)	S-22
S3.1. Overall Block Diagram	S-3		
S4. Schematic Diagram.....	S-4		
S4.1. Interconnection Diagram.....	S-4		
S4.2. Flash Top Schematic Diagram	S-5		
S4.3. CCD Flex Schematic Diagram	S-6		
S4.4. Lens Flex Schematic Diagram	S-7		
S5. Print Circuit Board	S-8		
S5.1. Flash Top P.C.B.....	S-8		
S5.2. CCD Flex P.C.B.....	S-12		
S5.3. Lens Flex P.C.B.....	S-13		

S1. About Indication of The Schematic Diagram

S1.1. Important Safety Notice

COMPONENTS IDENTIFIED WITH THE MARK  HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS USE ONLY THE SAME TYPE.

- 1.Although reference number of the parts is indicated on the P.C.B. drawing and/or schematic diagrams, it is NOT mounted on the P.C.B. when it is displayed with "\$" mark.
- 2.It is only the "Test Round" and no terminal (Pin) is available on the P.C.B. when the TP (Test Point) indicated as "●" mark.
- 3.The voltage being indicated on the schematic diagram is measured in "Standard-Playback" mode when there is no specify mode is mentioned.
- 4.Although the voltage and waveform available on here is measured with standard frame, it may be differ from actual measurement due to modification of circuit and so on.
- 5.The voltage being indicated here may be include observational-error (deviation) due to internal-resistance and/or reactance of equipment. Therefore, handle the value indicated on here as reference.
- 6.Use the parts number indicated on the Replacement Parts List .
- 7.Indication on Schematic diagrams:

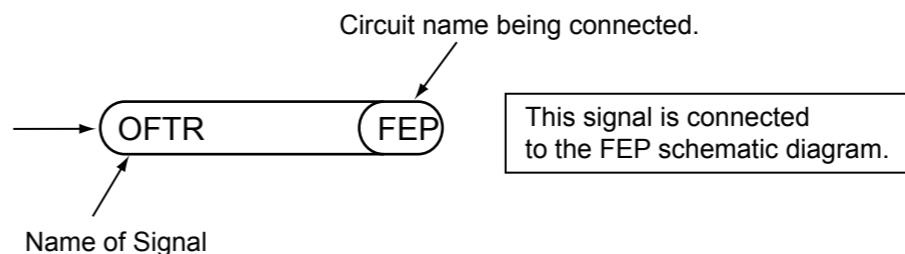

S2. Voltage Chart


Note) Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

S2.1. Flash Top P.C.B.

REF No.	PIN No.	POWER ON
IC8100	1	0
IC8100	2	0
IC8100	3	0
IC8100	4	0
IC8100	5	3.4
IC8100	6	0
IC8100	7	0
IC8100	8	0
IC8100	9	3.1
IC8100	10	3.9


S3. Block Diagram

S3.1. Overall Block Diagram

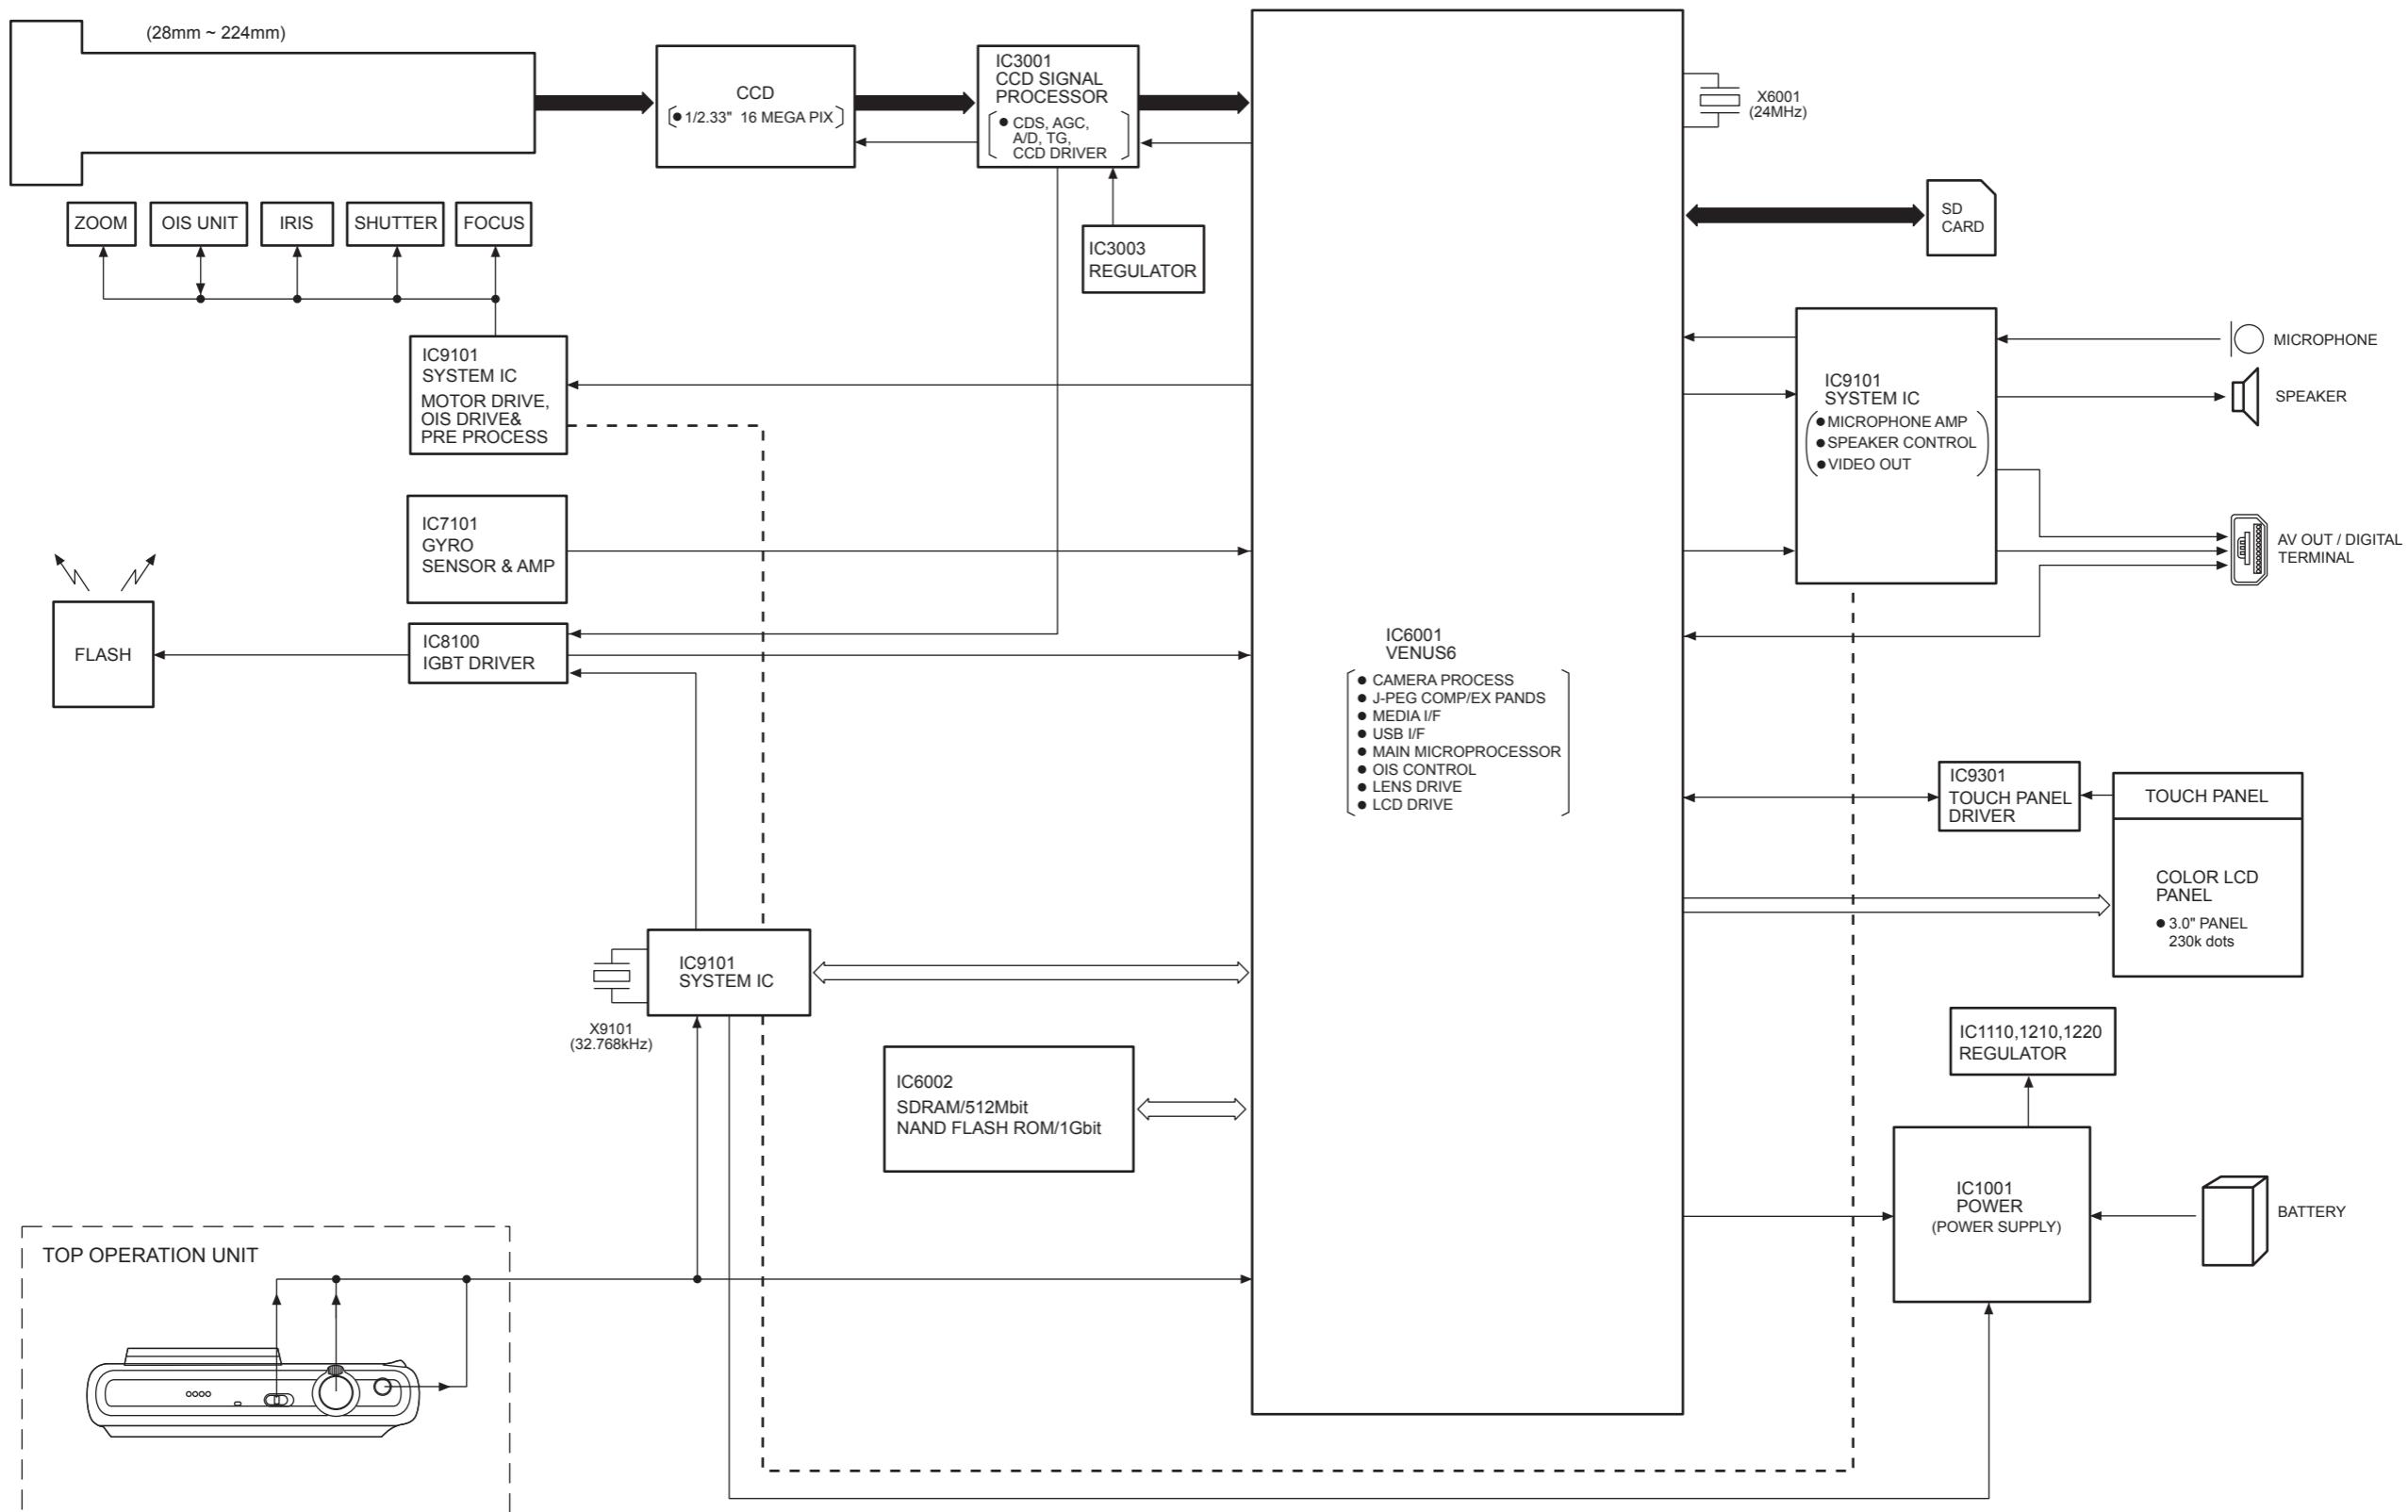


S4. Schematic Diagram


S4.1. Interconnection Diagram

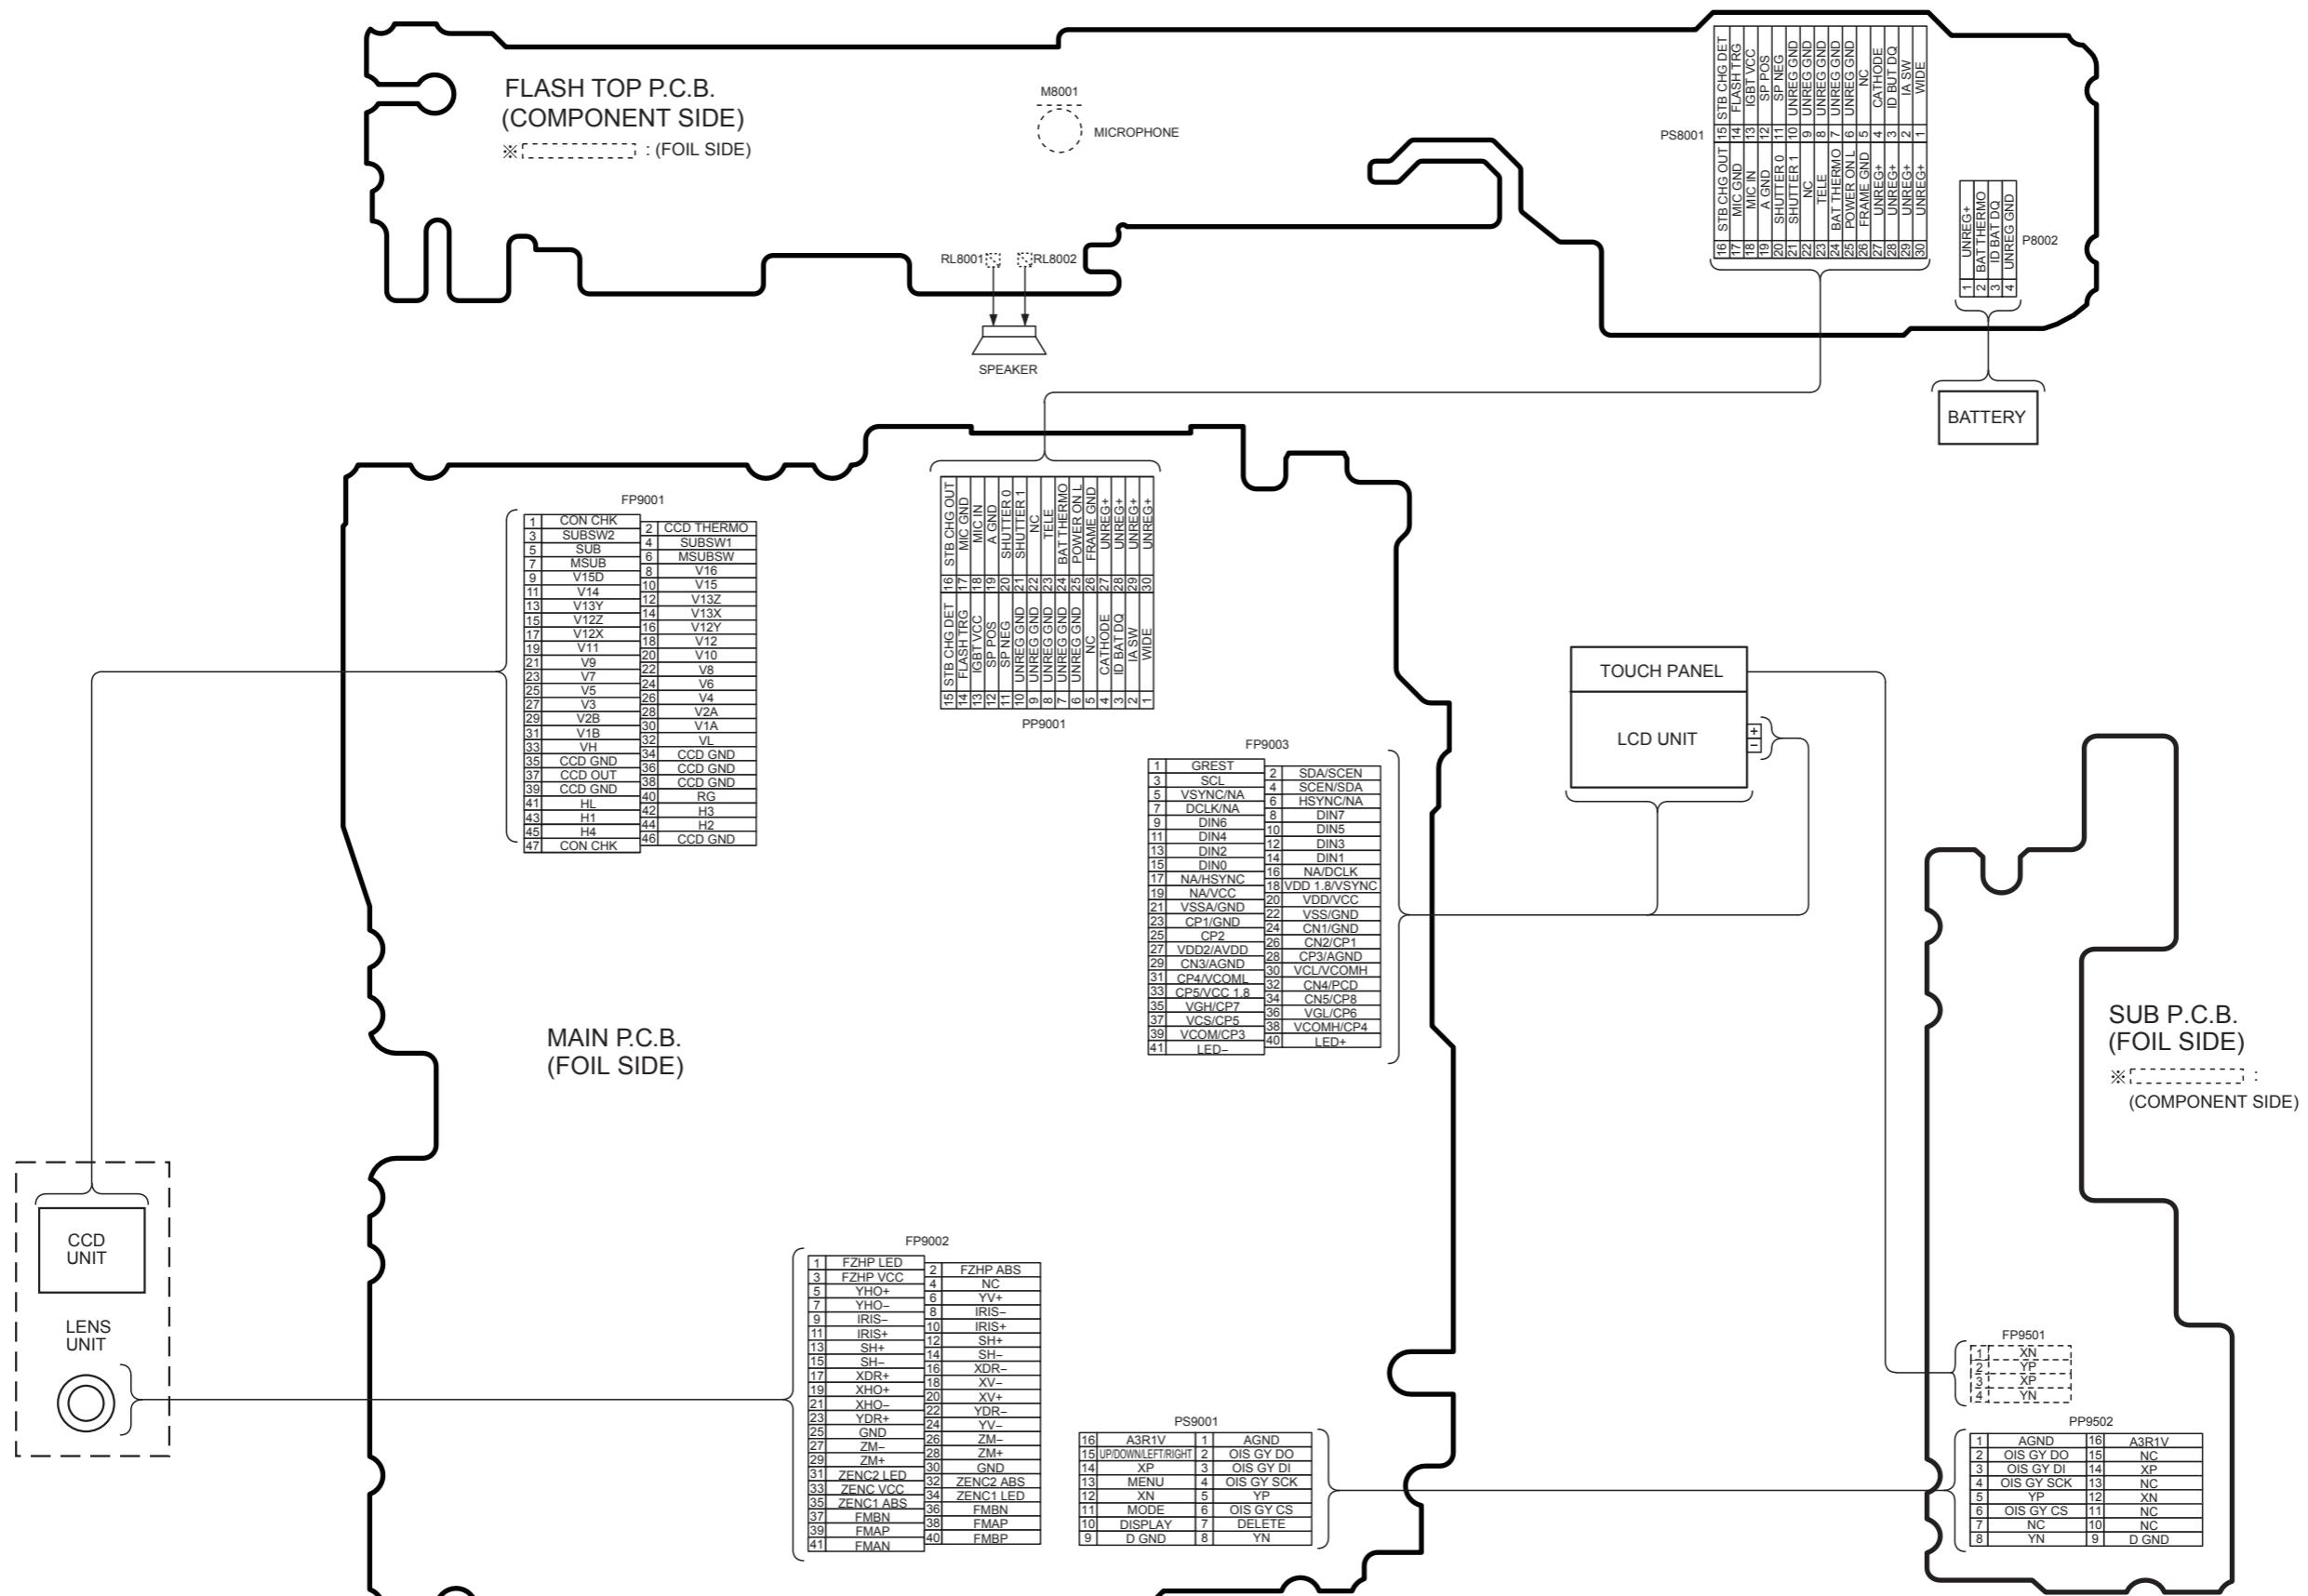


S4.2. Flash Top Schematic Diagram

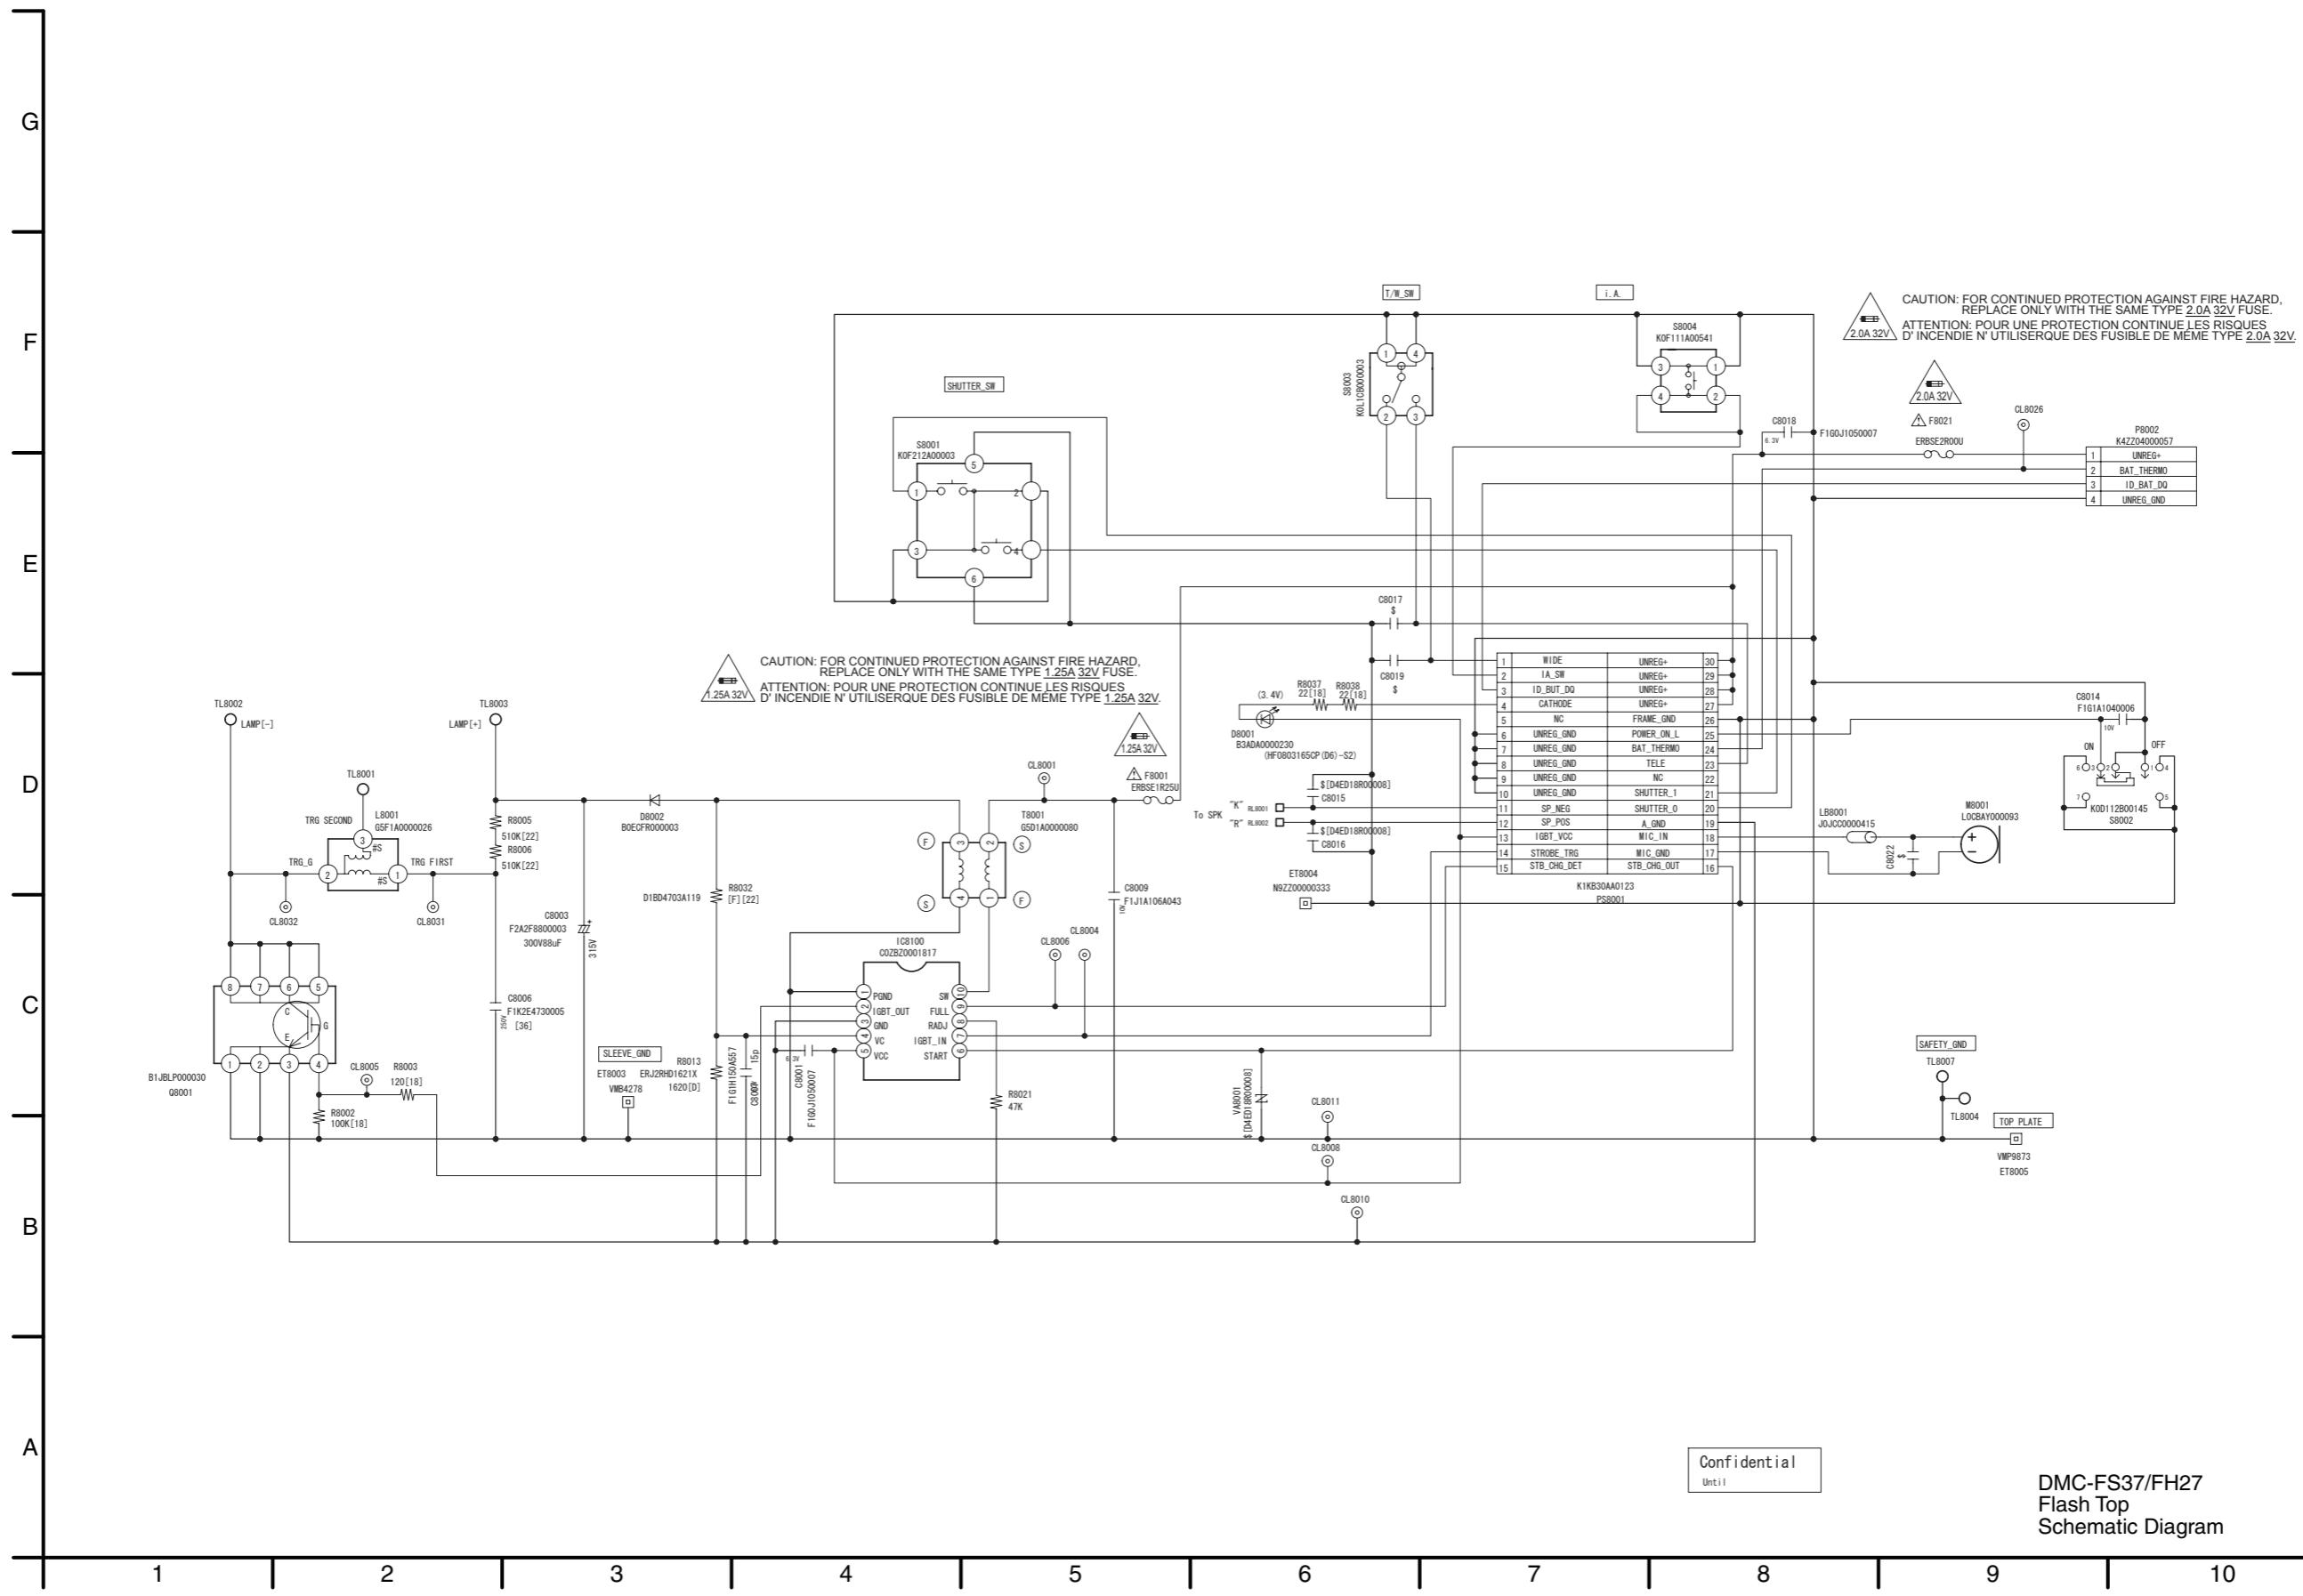

S4.3. CCD Flex Schematic Diagram

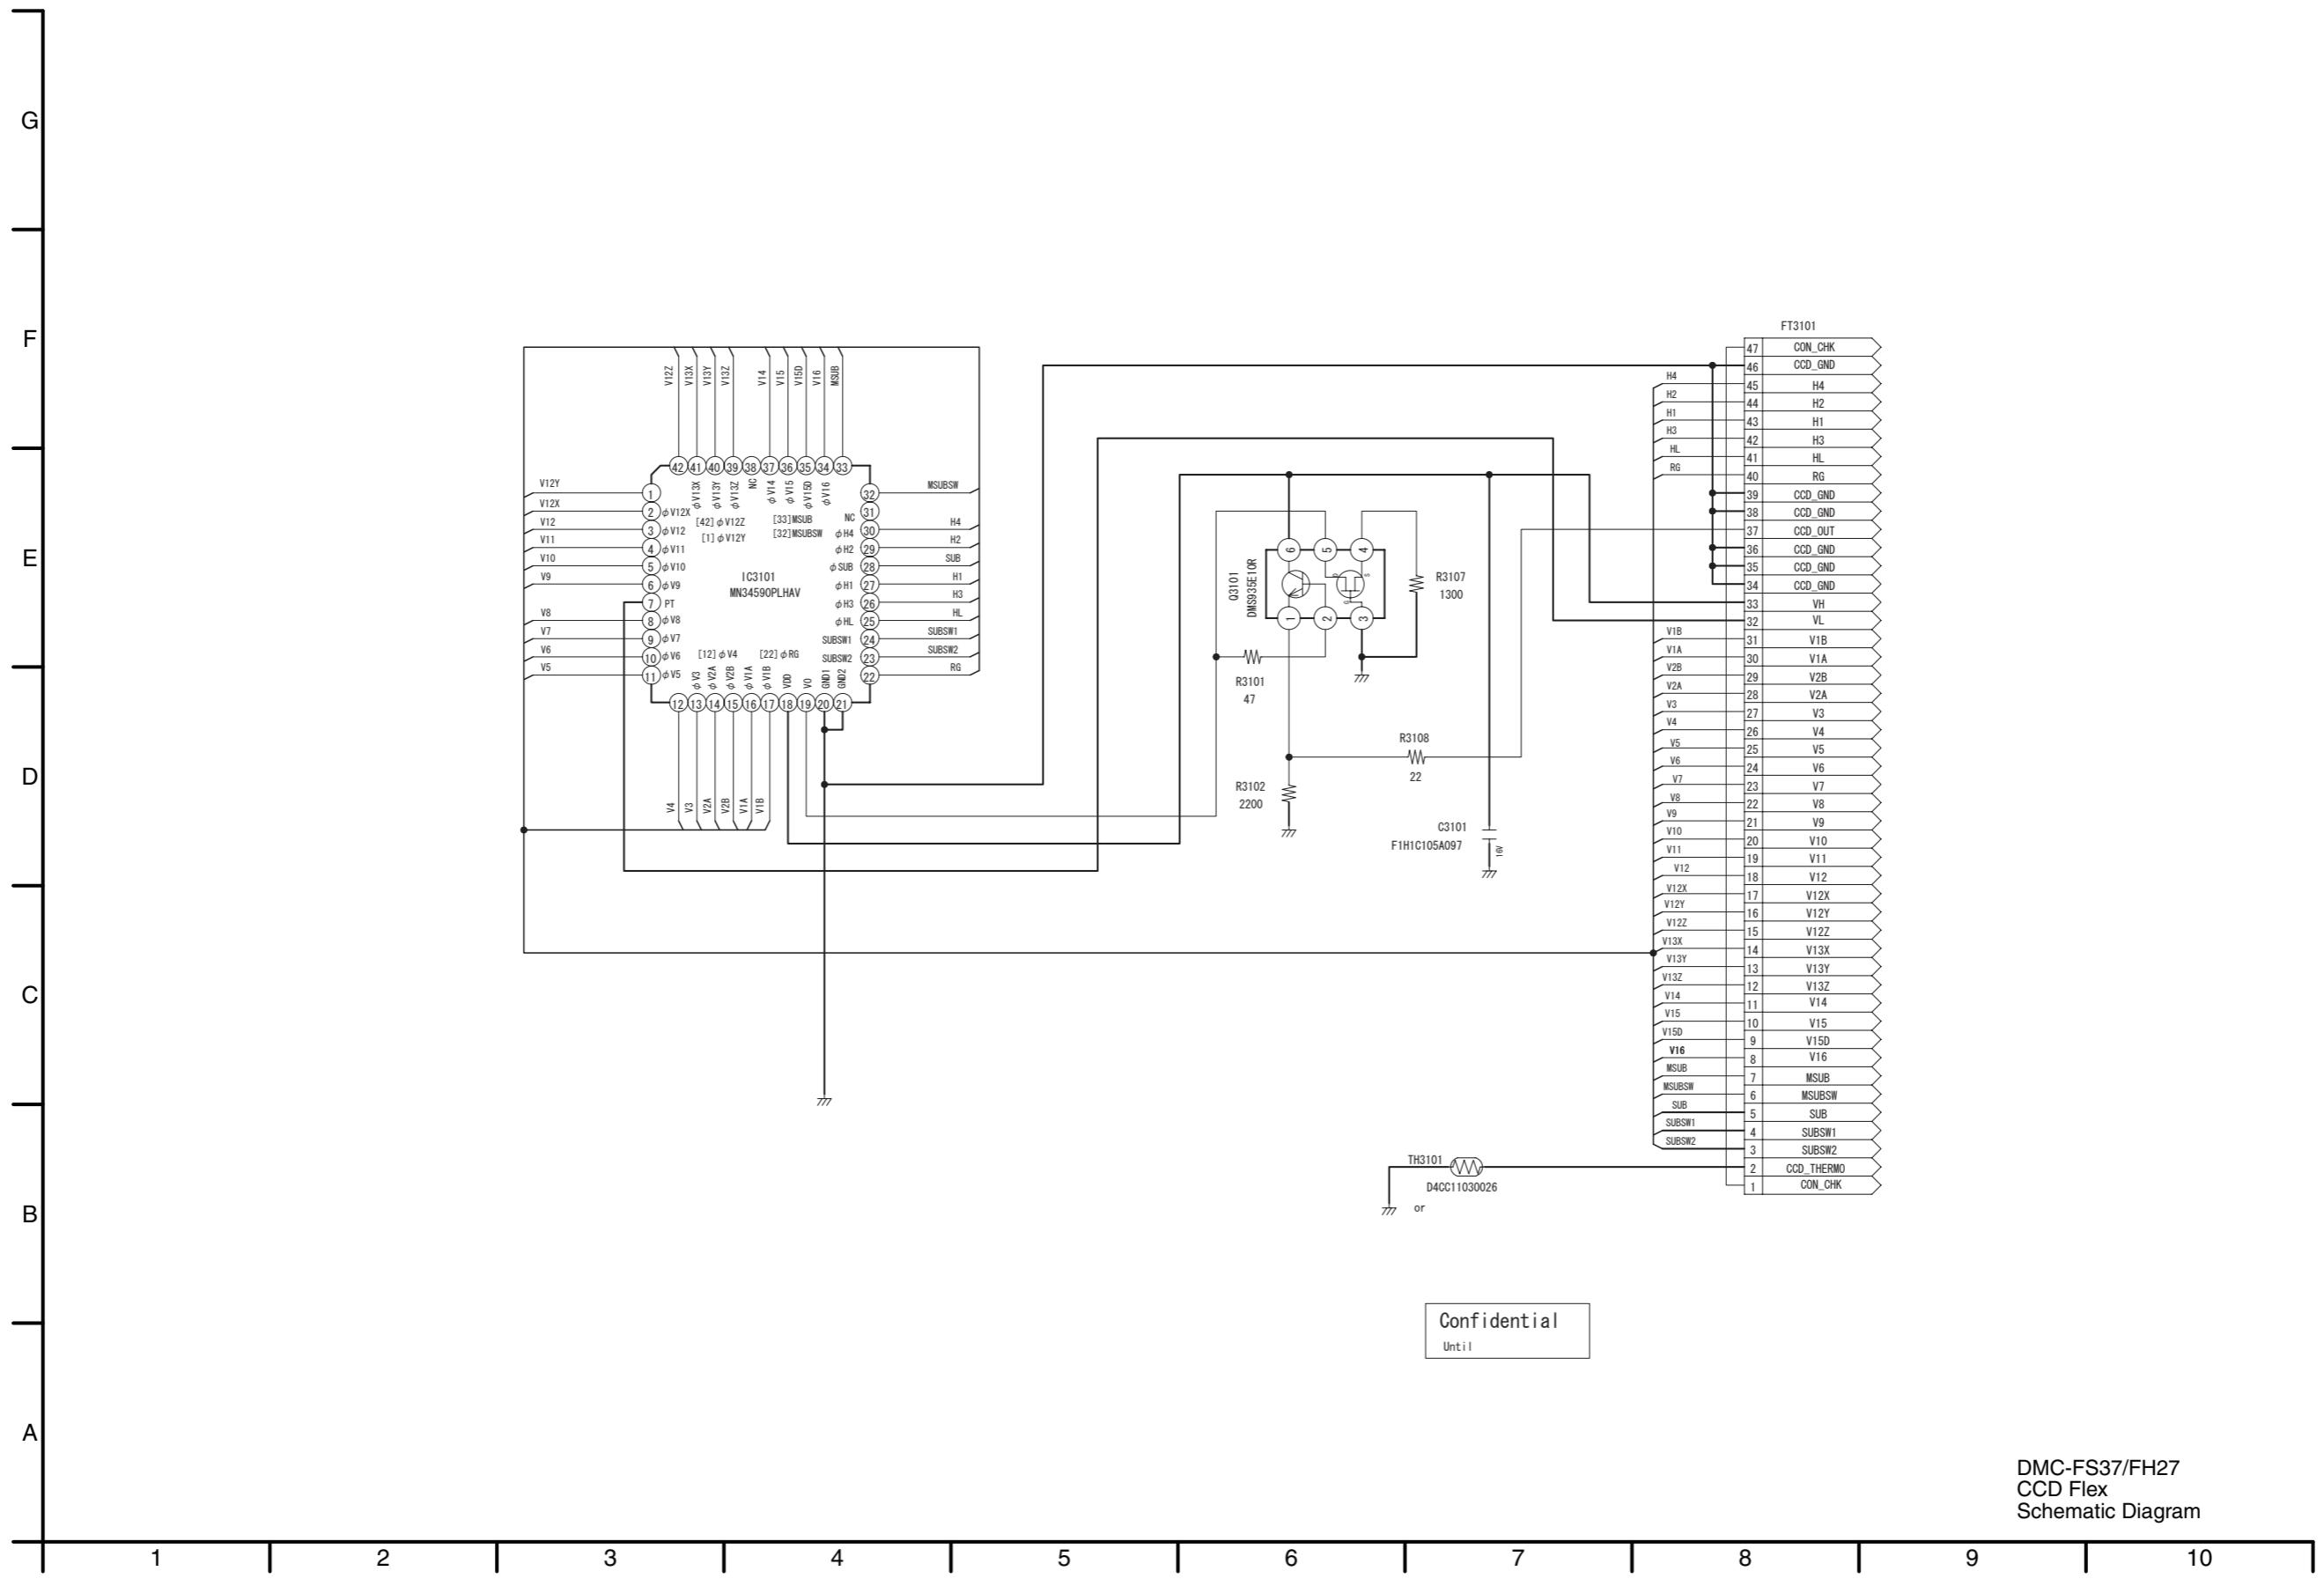


S4.4. Lens Flex Schematic Diagram

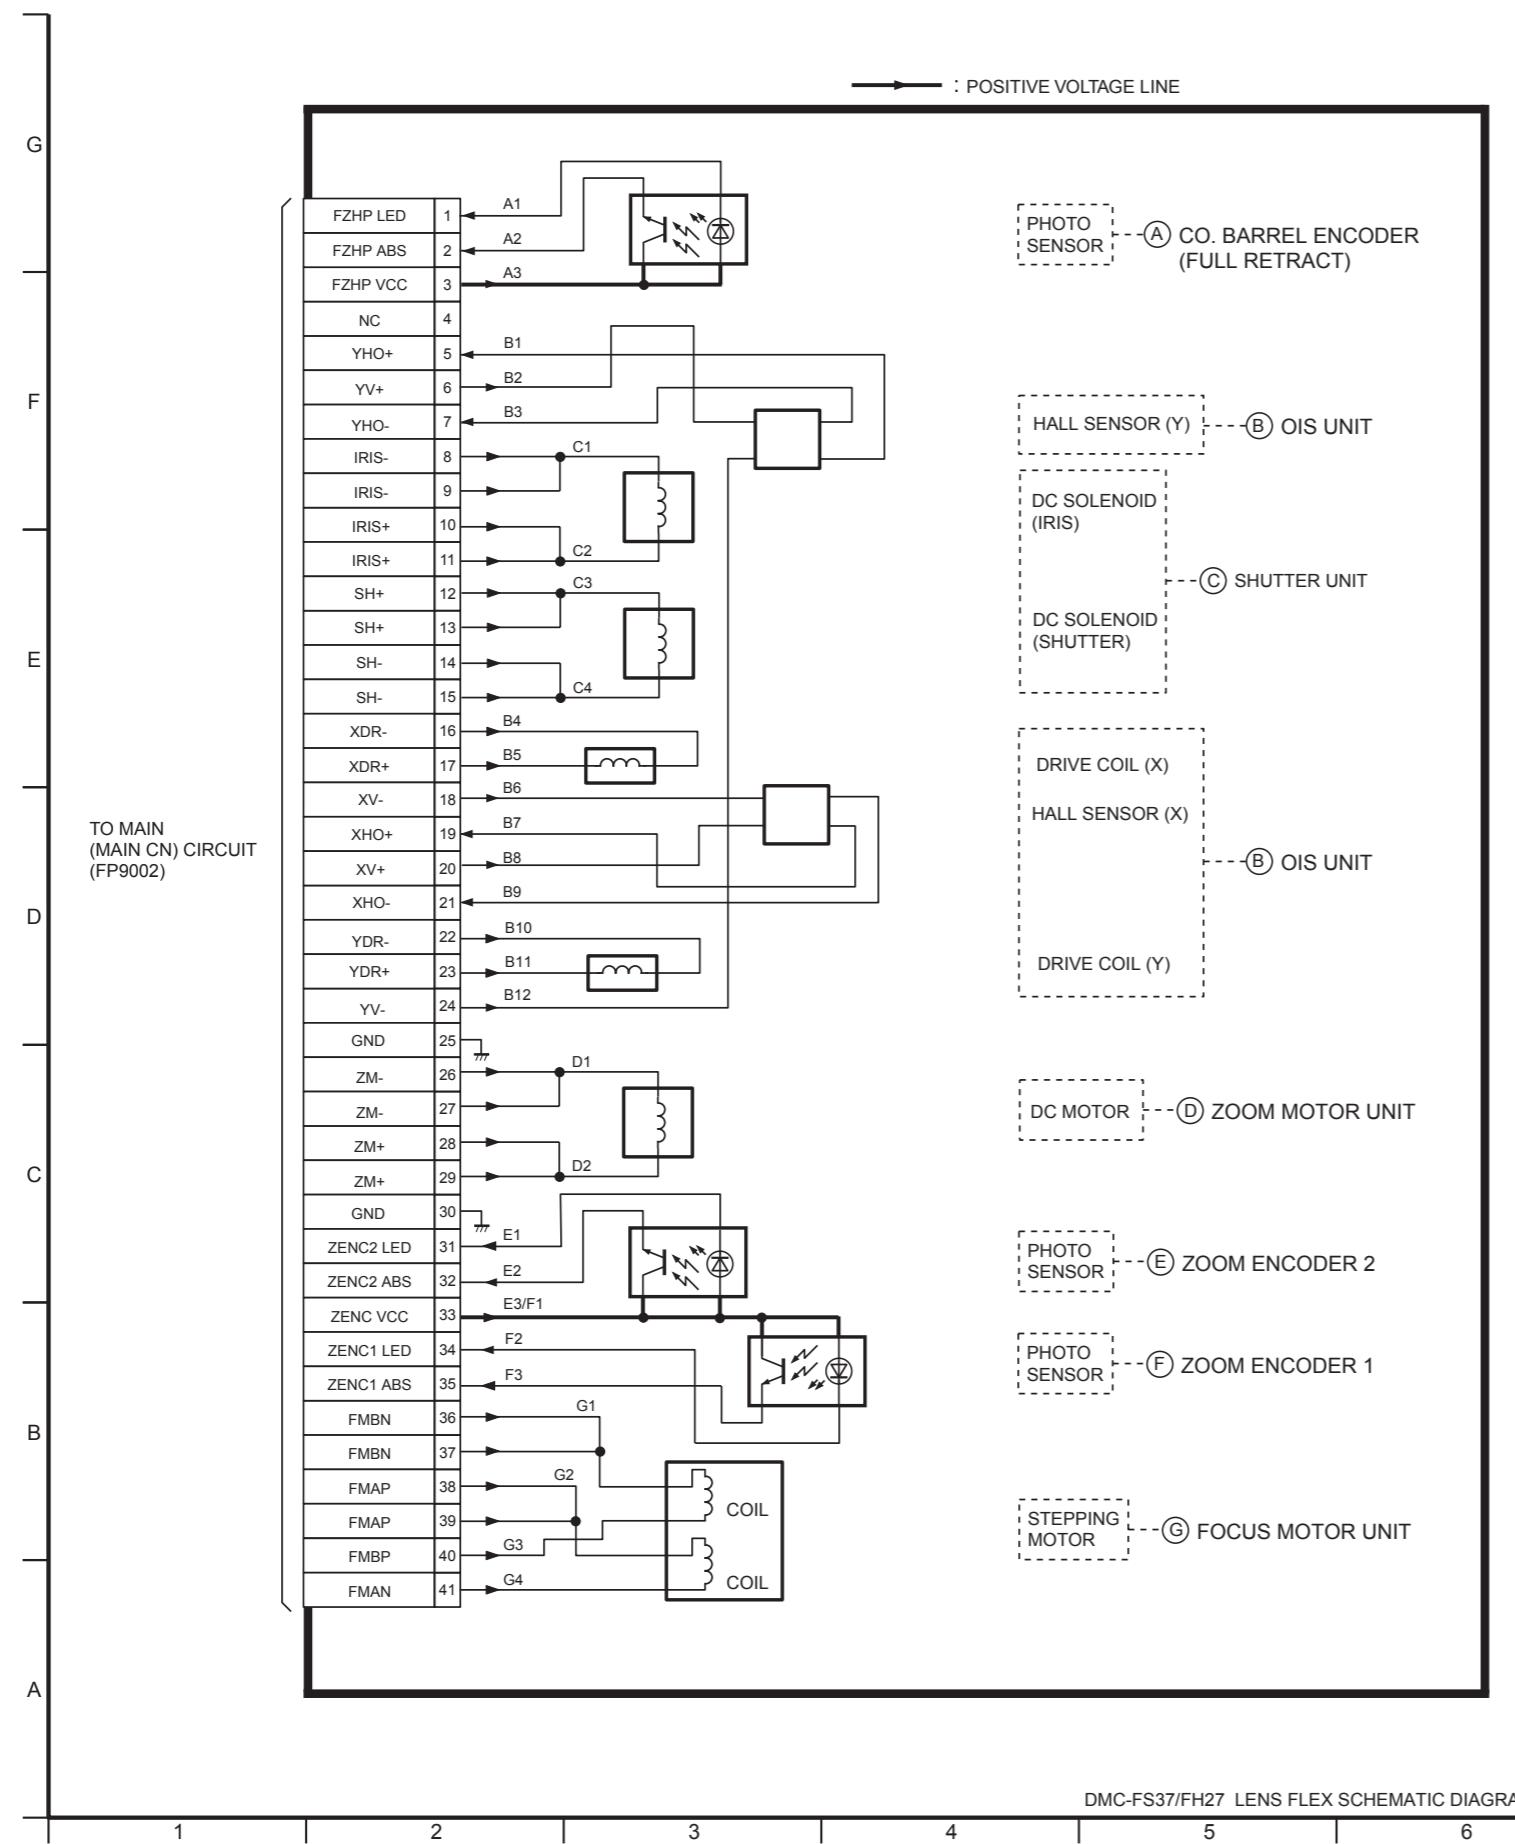


S5. Print Circuit Board

S5.1. Flash Top P.C.B.

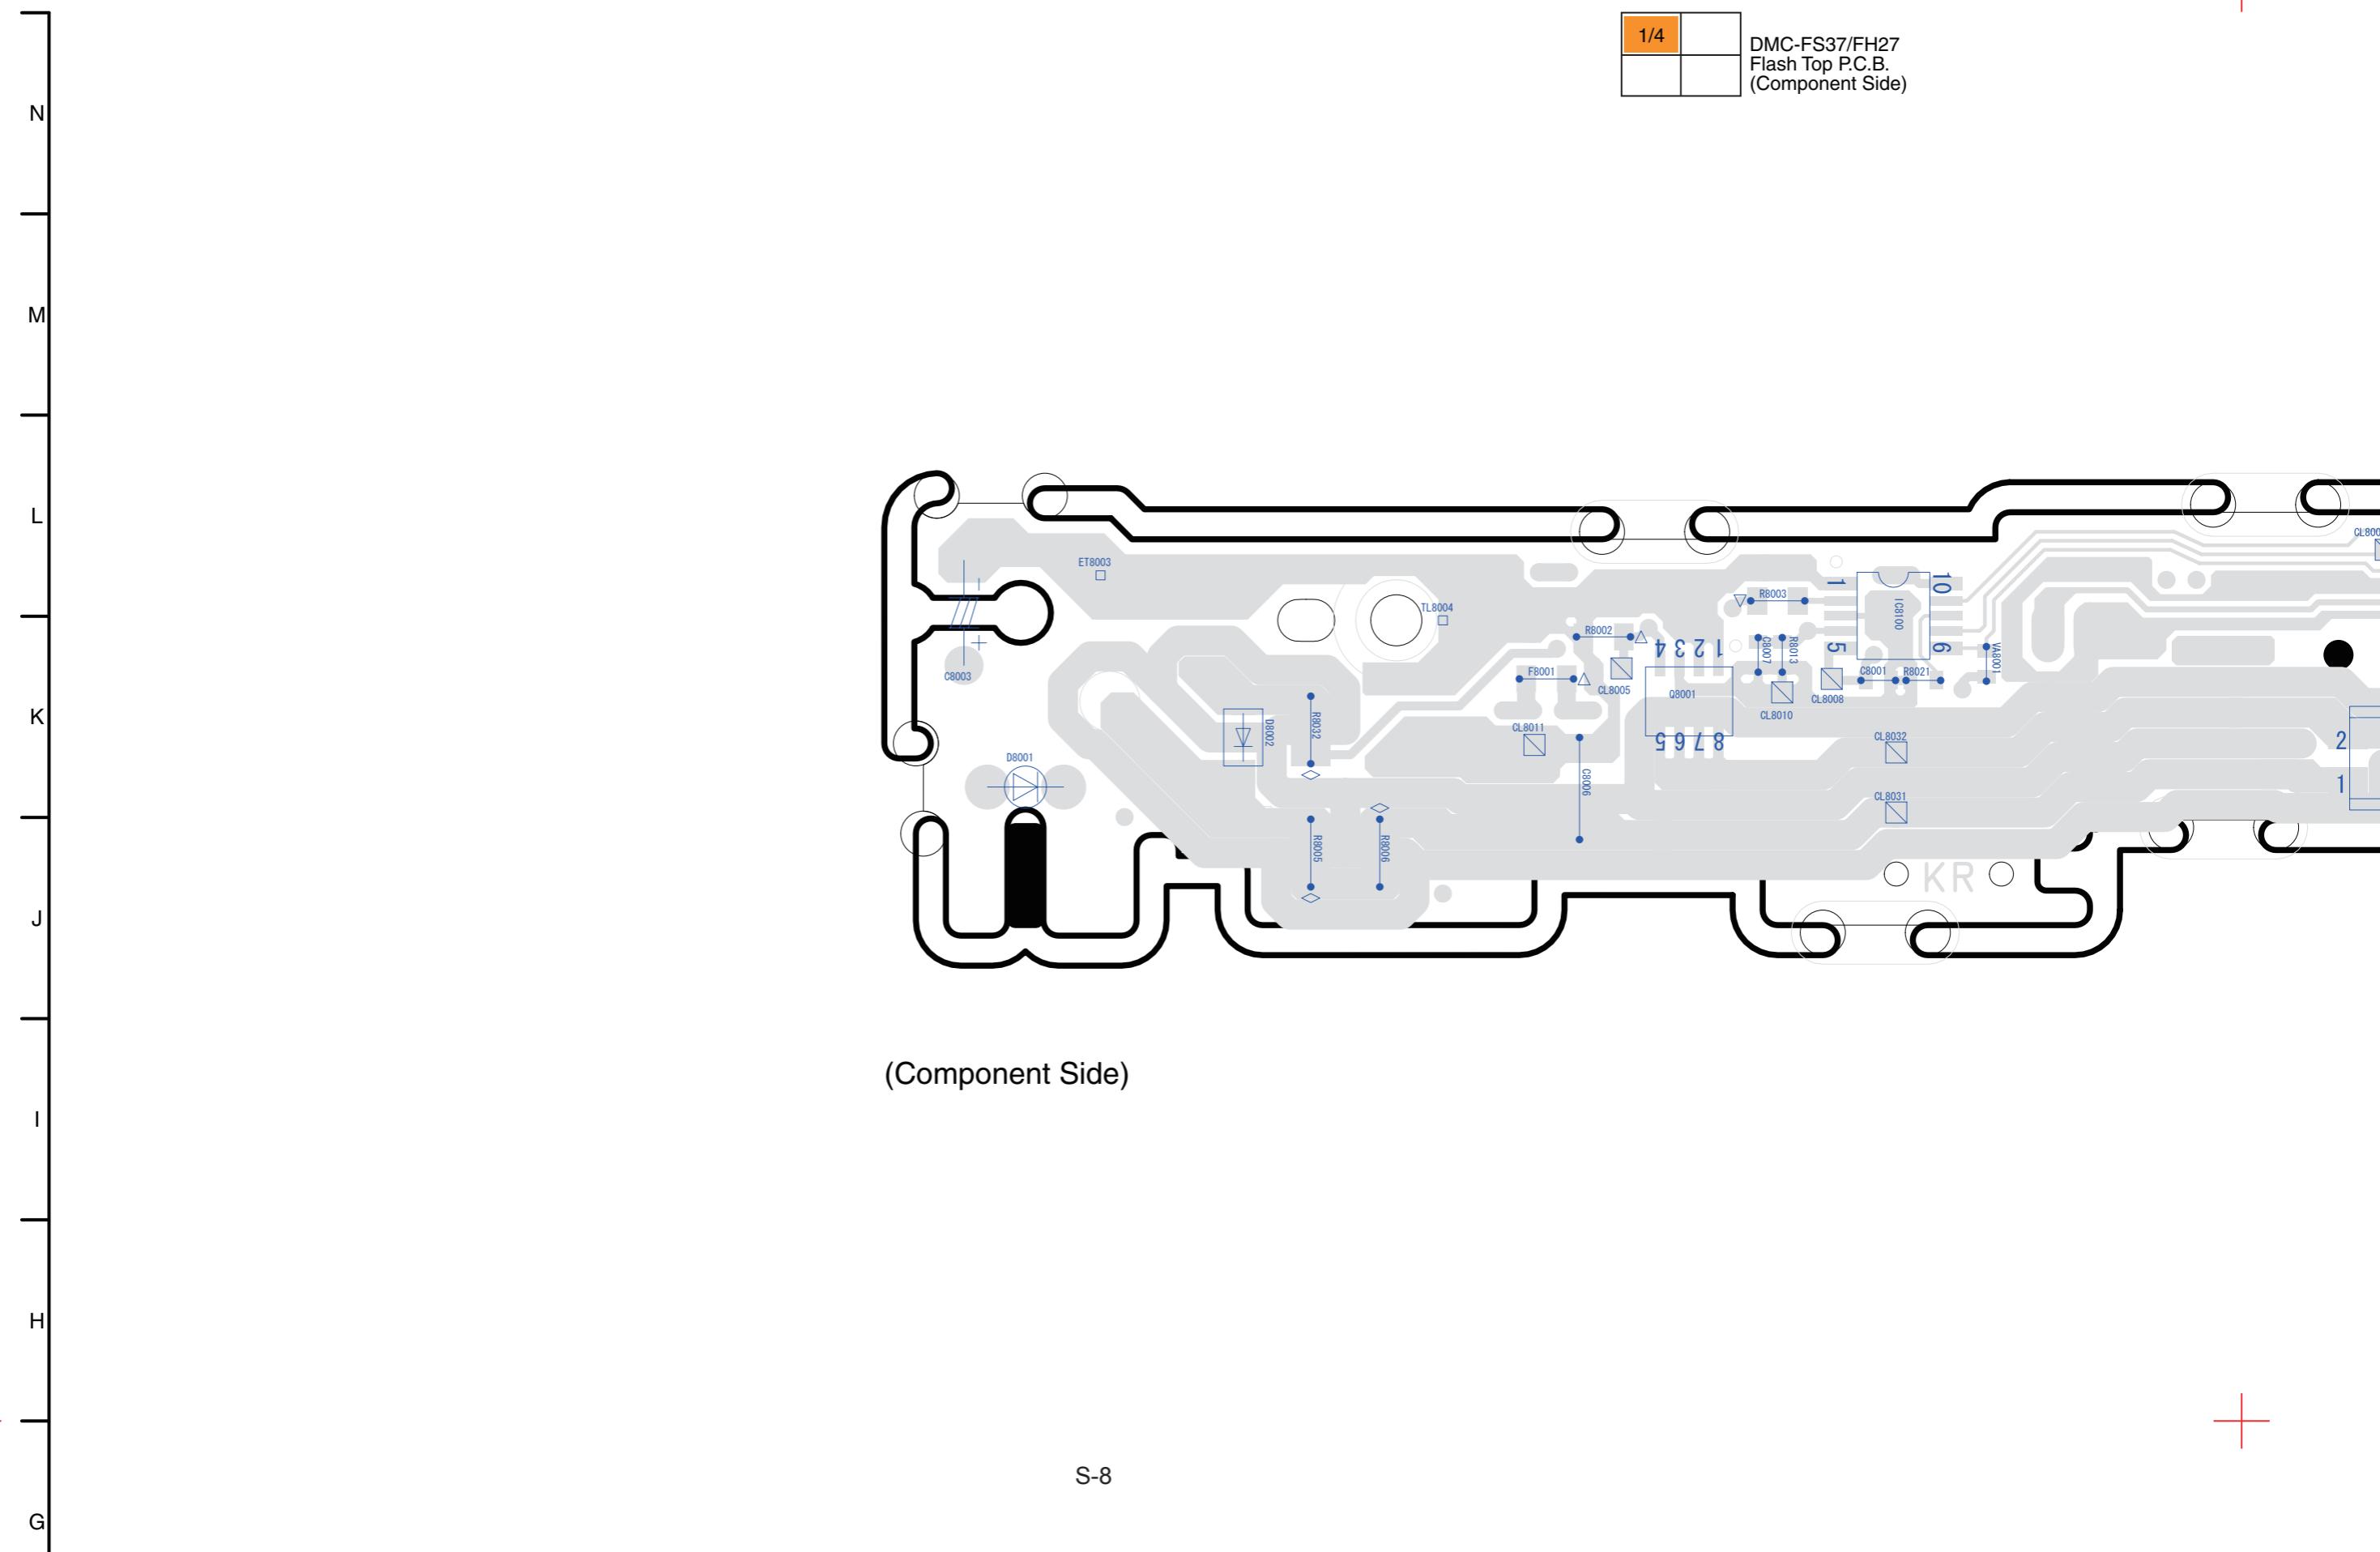


+

	2/4
	DMC-FS37/FH27
	Flash Top P.C.B.
	(Component Side)

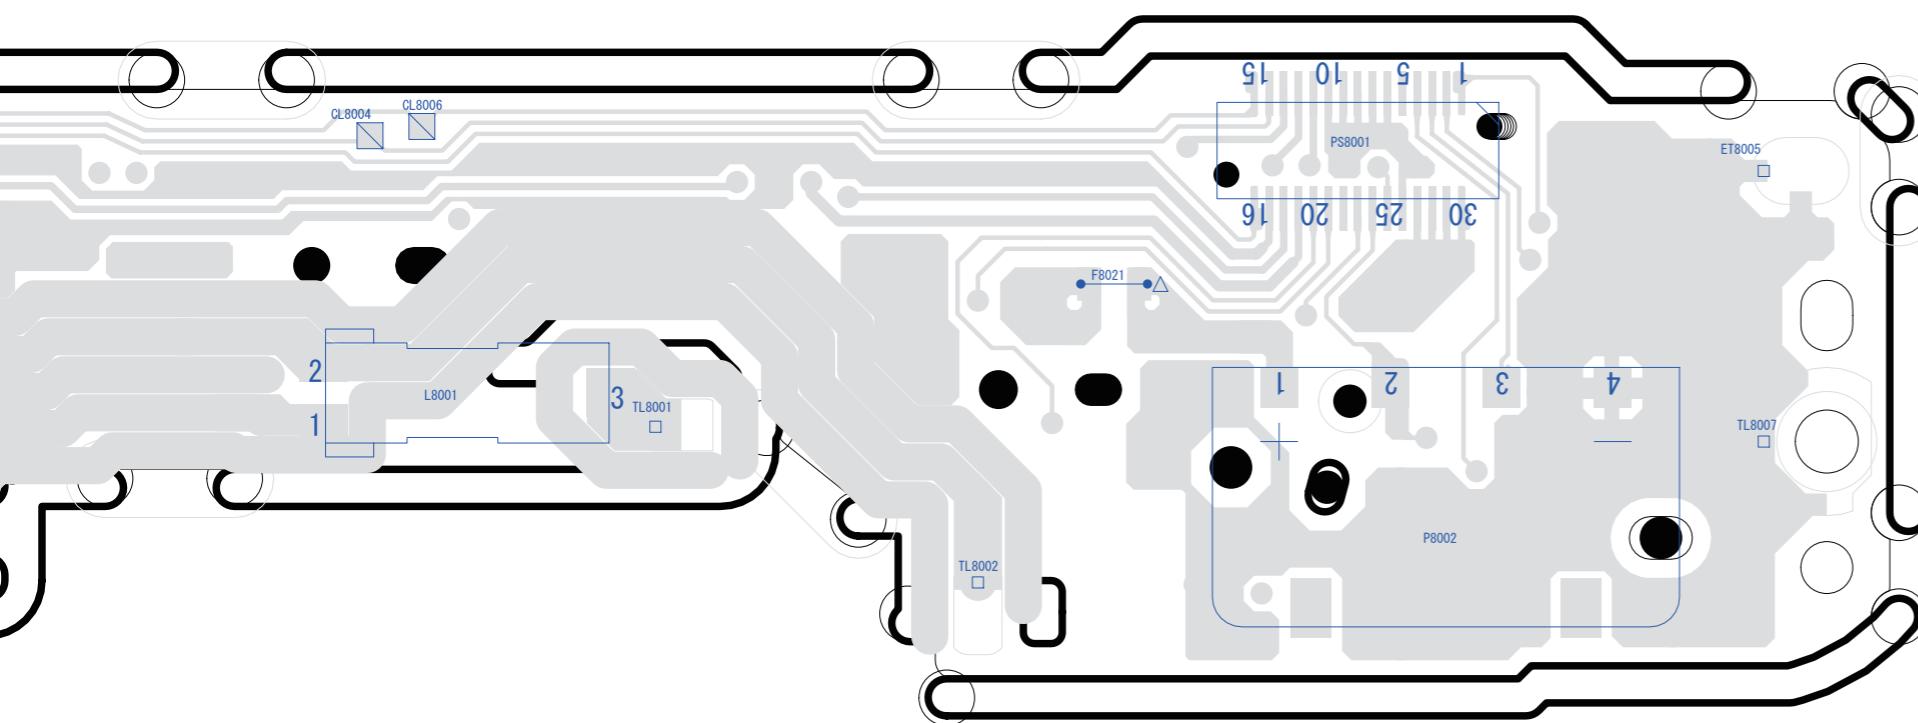


+

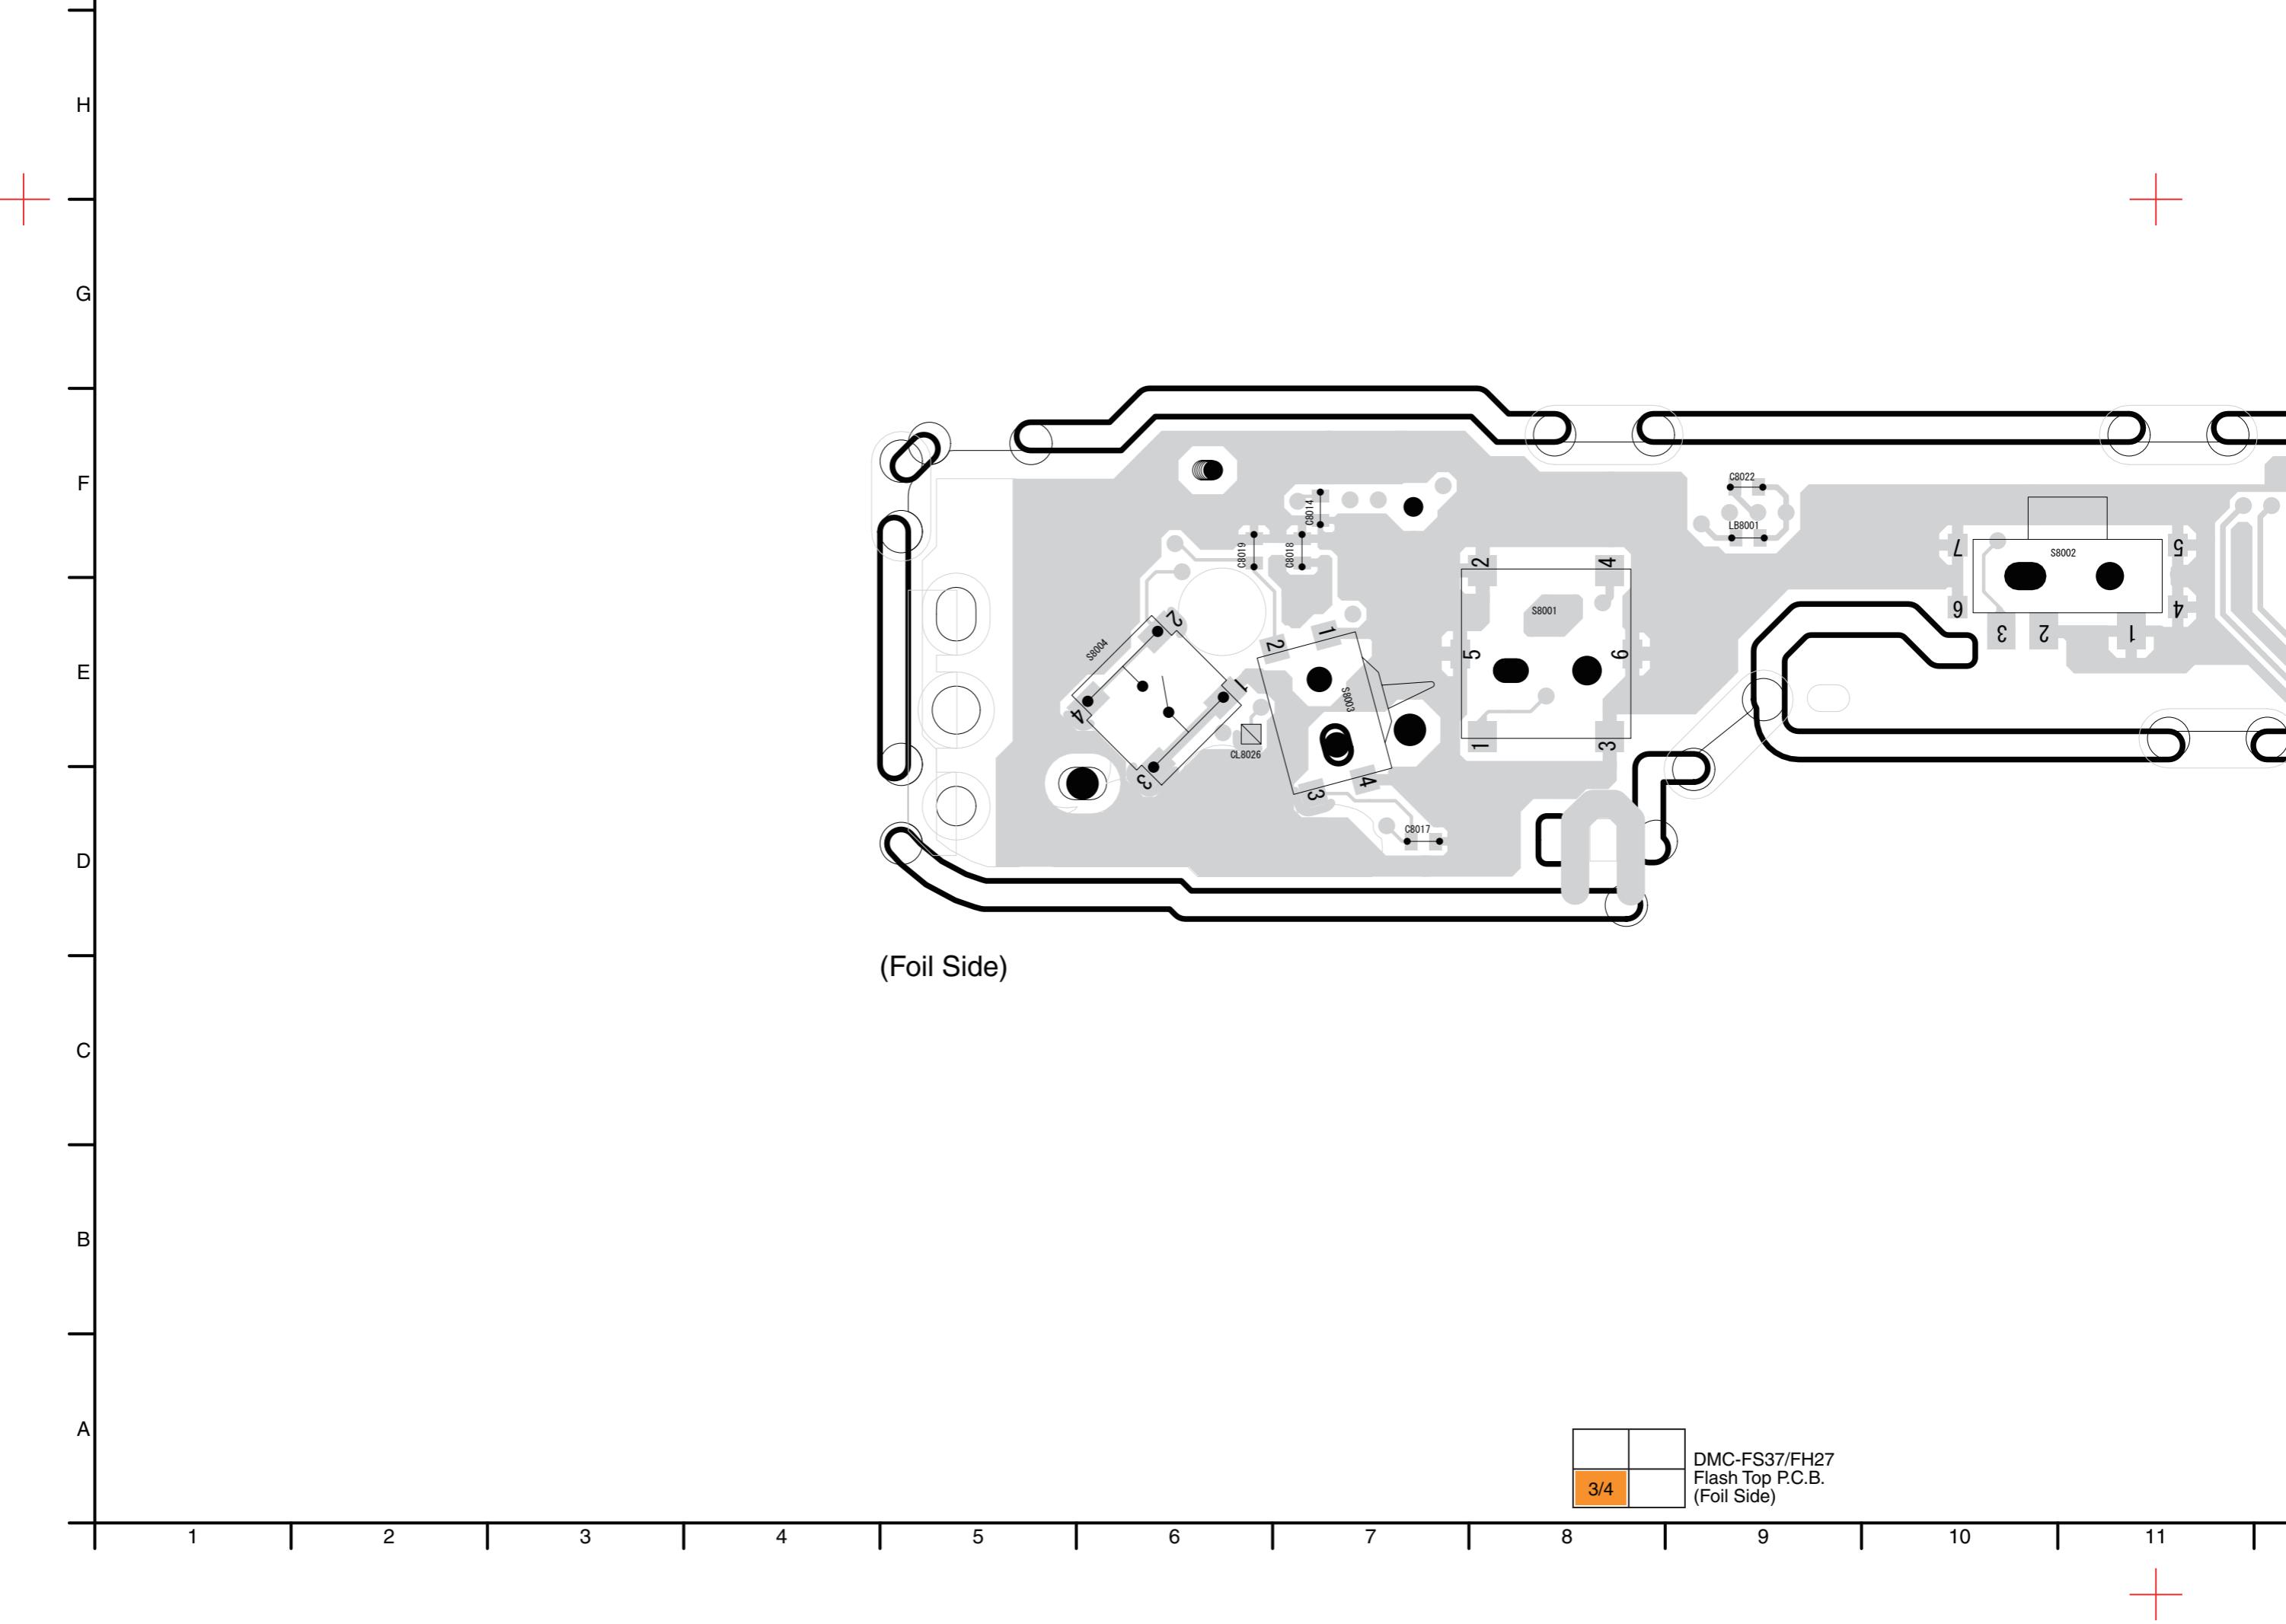


(Foil Side)

DMC-FS37/FH27
Flash Top P.C.B.
(Foil Side)

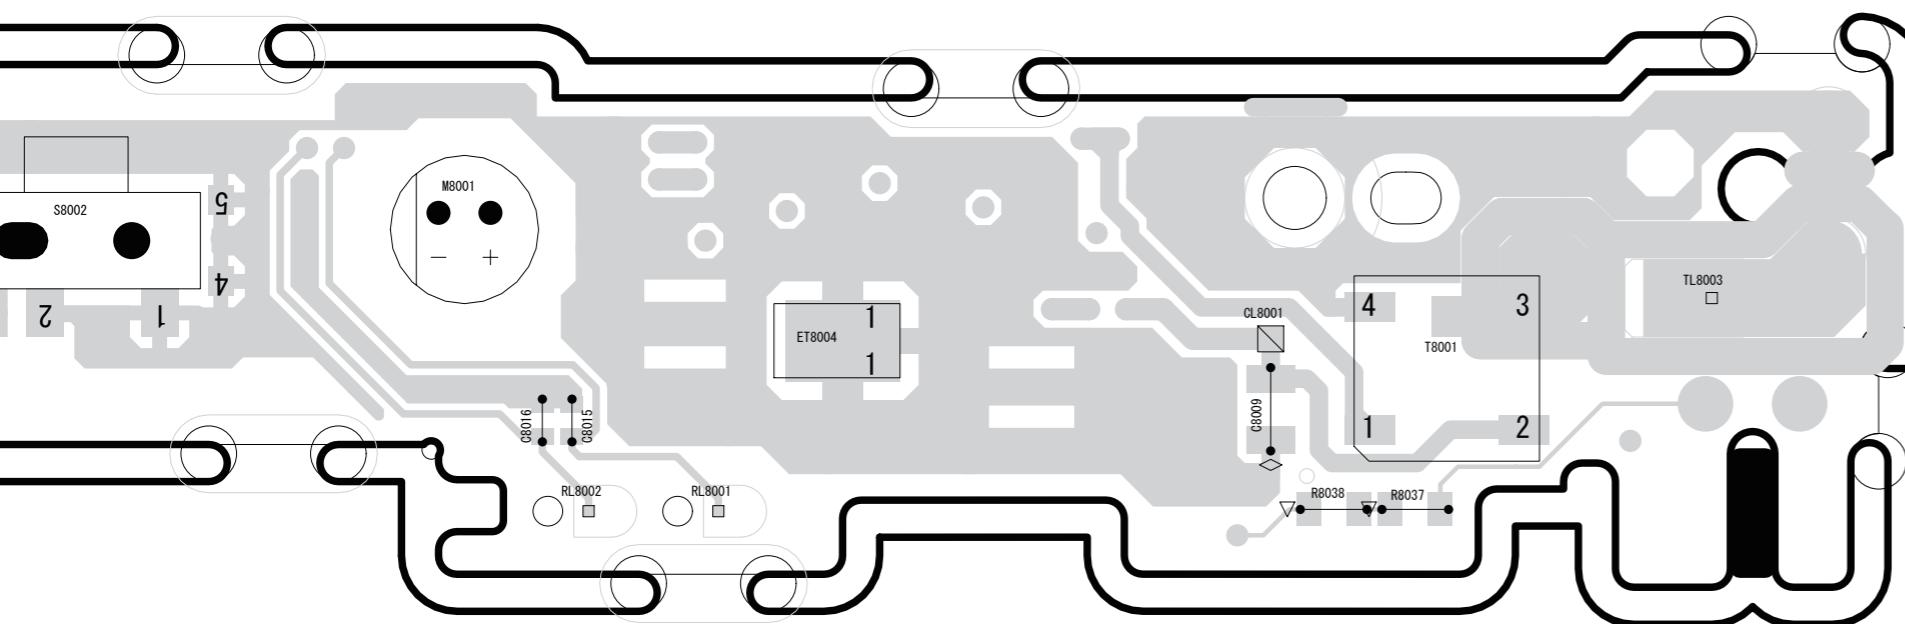


DMC-FS37/FH27
Flash Top P.C.B.
(Foil Side)




11 12 13 14 15 16 17 18 19 20 21



S5.2. CCD Flex P.C.B.

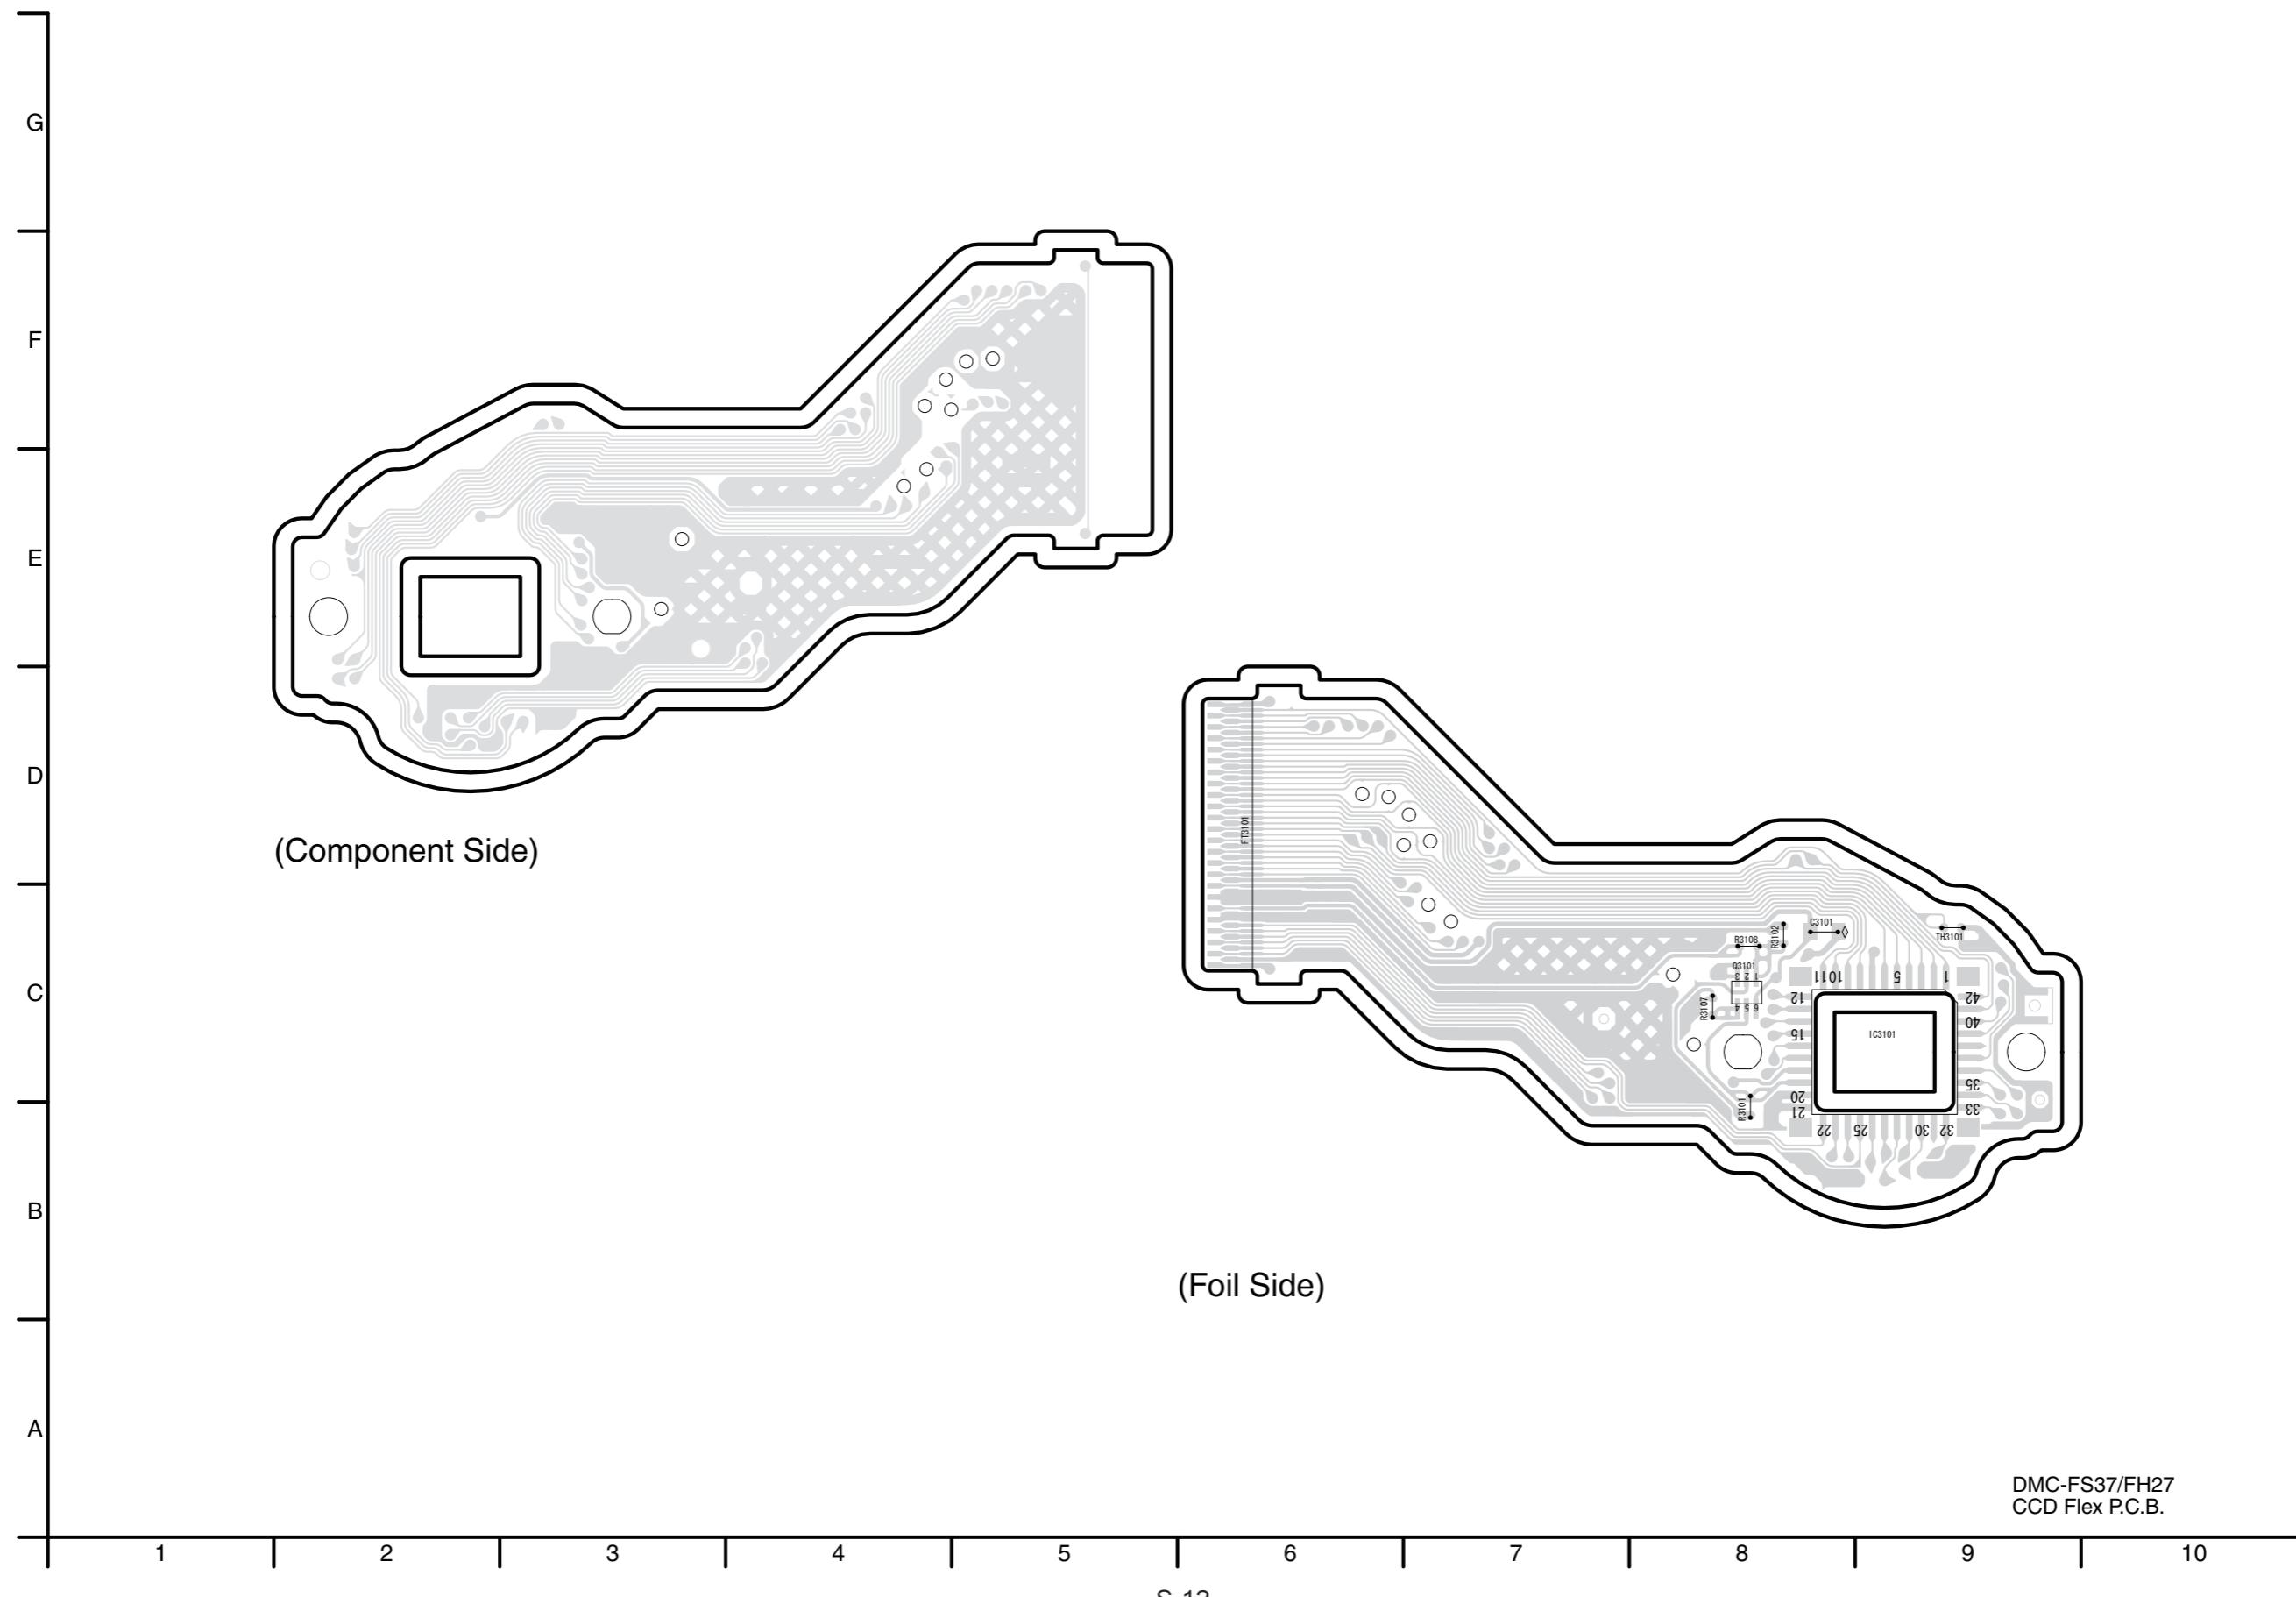

S5.3. Lens Flex P.C.B.

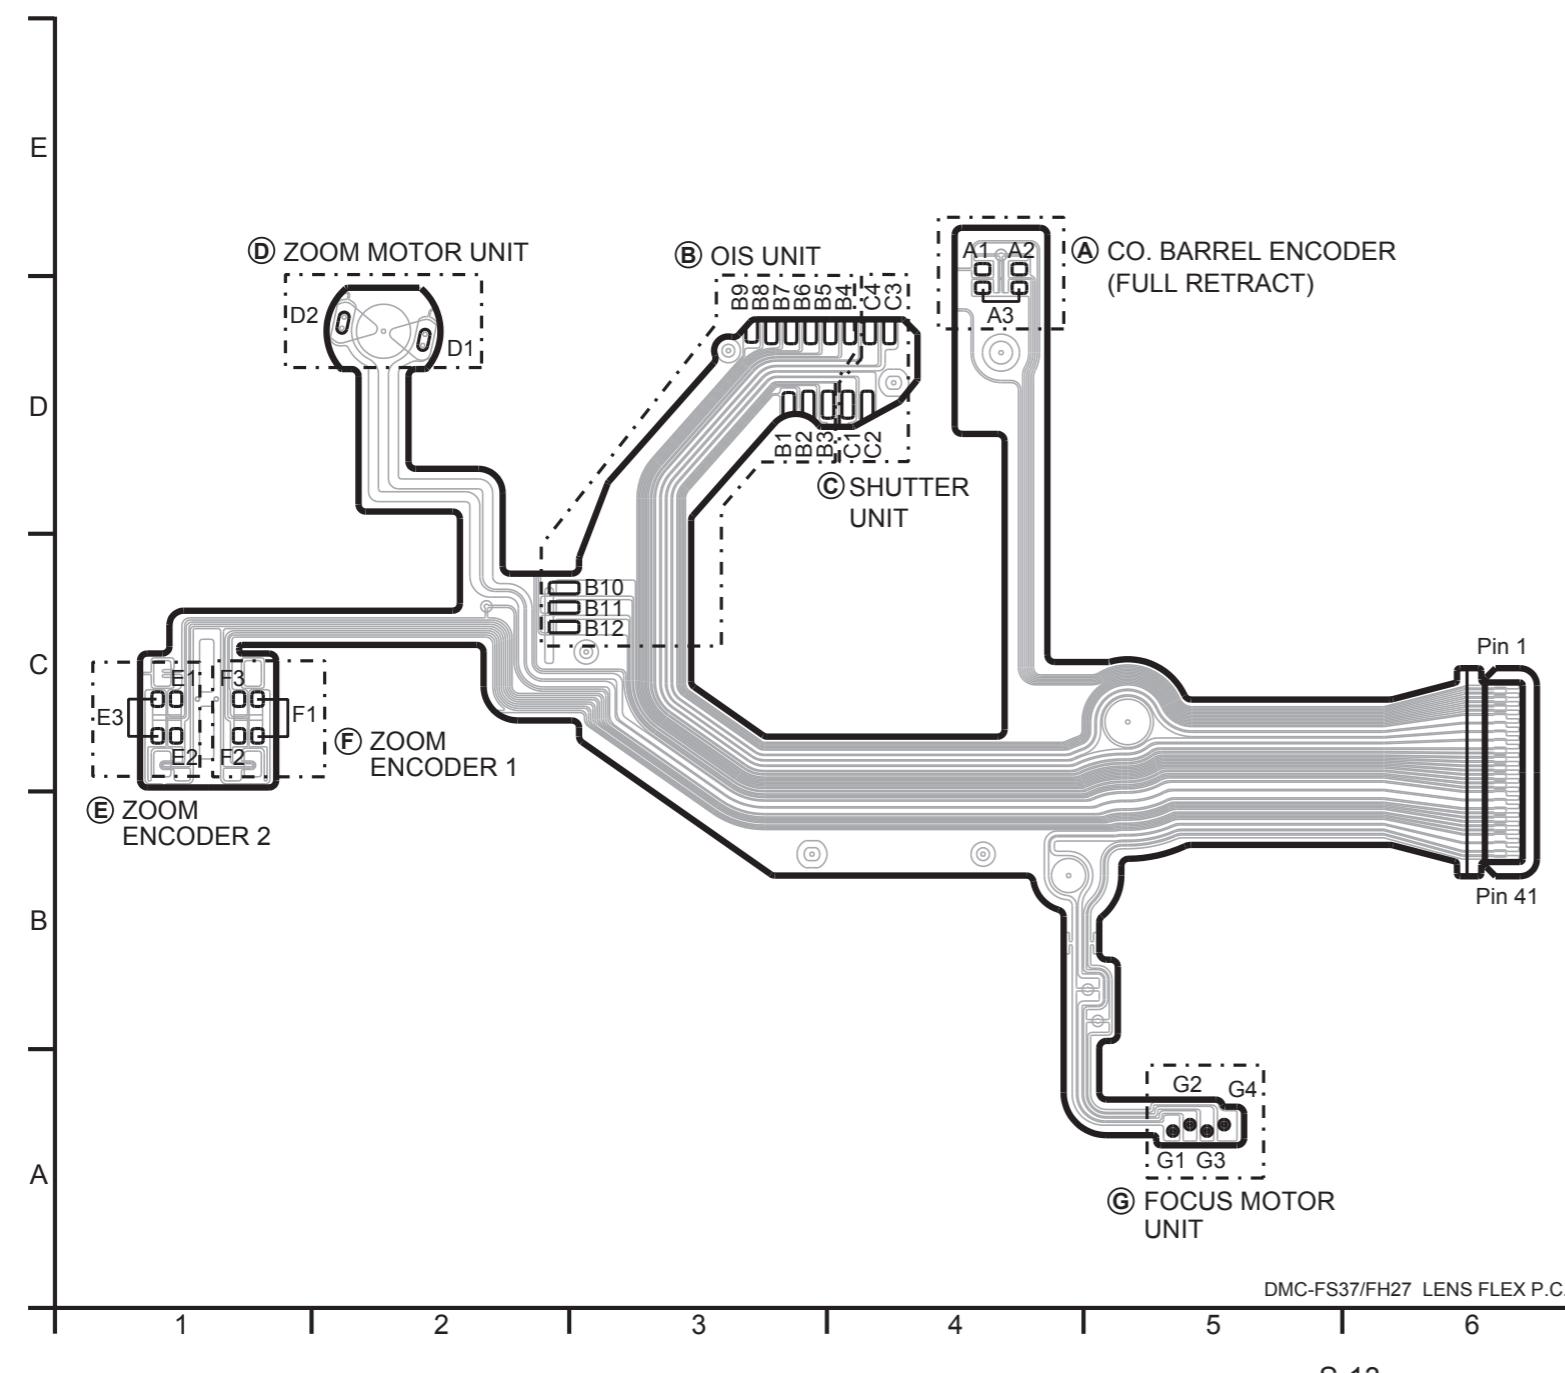

S6. Replacement Parts List

Note:

1. * Be sure to make your orders of replacement parts according to this list.
2. **IMPORTANT SAFETY NOTICE**
Components identified with the mark  have the special characteristics for safety.
When replacing any of these components, use only the same type.
3. Unless otherwise specified,
All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICRO-FARADS (uf), P=uuF.
4. The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.
5. Supply of CD-ROM, in accordance with license protection, is allowable as replacement parts only for customers who accidentally damaged or lost their own.

E.S.D. standards for Electrostatically Sensitive Devices, refer to PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES section.

Definition of Parts supplier:

1. Parts marked with [ENERGY] in the remarks column are supplied from Panasonic Corporation Energy Company.
2. Parts marked with [SPC] in the remarks column are supplied from AVC-CSC-SPC. Others are supplied from PAVCSG.

DMC-FS37EG-S vol.1


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
1	VEP56126D	MAIN P.C.B.	1	(RTL) E.S.D.	100	VXW1229	LENS UNIT (W/O CCD)	1	[SPC]
2	VEP58149A	FLASH TOP P.C.B.	1	(RTL) E.S.D.	102	VEK0R36	CCD UNIT	1	[SPC] E.S.D.
3	VEP59095A	SUB P.C.B.	1	(RTL) E.S.D.	103	L6DA8DFC0002	ZOOM MOTOR	1	[SPC]
4	ML-421S/DN	BATTERY	1	(B9101) [ENERGY]	104	VEK0P74	LENS FPC UNIT	1	[SPC]
5	VGQ0R78	PCB SPACER	1		104-1	B3NBA0000011	PHOTO SENSOR	1	[SPC]
6	VGQ0S76	DPR SHEET	1		104-2	B3NBA0000011	PHOTO SENSOR	1	[SPC]
7	VGQ0V76	DPR SHEET	1		104-3	B3NBA0000011	PHOTO SENSOR	1	[SPC]
8	VYK4599	REAR CASE	1	(-S)	105	VDW1958	BOTH SIDES CAM FRAME	1	[SPC]
8	VYK4T01	REAR CASE	1	(-K)	106	VDW1962	2ND 3RD DIRECT FRAME	1	[SPC]
8	VYK4T00	REAR CASE	1	(-R)	107	VXP3556	1ST LENS FRAME UNIT	1	[SPC]
9	VMP9874	FRAME PLATE	1		108	VXP3579	1ST DIRECT FRAME UNIT	1	[SPC]
10	B3ADA0000230	AF LED	1	E.S.D. (D8001)	109	VXP3349	2ND LENS FRAME UNIT	1	[SPC]
11	F2A2F8800003	E.CAPACITOR	1	(C8003)	110	VXP3350	3RD LENS FRAME UNIT	1	[SPC]
12	L0AA01A00098	SPEAKER	1		111	VXQ2071	FIX FRAME UNIT	1	[SPC]
13	LOCBAY000093	MICROPHONE UNIT	1	(M8001)	112	VXQ2072	MASTER FLANGE UNIT	1	[SPC]
14	VEK0R28	FLASH UNIT	1		112-1	L6HA64NC0020	FOCUS MOTOR UNIT	1	[SPC]
15	VGL1290	AF PANEL LIGHT	1		112-2	VMB4333	FOCUS SPRING	1	[SPC]
16	VMB4278	EARTH SPRING	1	(ET8003)	112-3	VXP3358	4TH LENS FRAME UNIT	1	[SPC]
17	VMP9873	TOP PLATE	1	(ET8005)	113	VXP3560	DRIVE/PENETRAION FRAME UNIT	1	[SPC]
18	VMT2136	MIC DUMPER	1		114	VZT0938	TAPE A	1	[SPC]
19	VMT2137	IRIS DUMPER	1		115	VZT0938	TAPE A	1	[SPC]
20	VYK4P48	TOP CASE UNIT	1	EG,EP,EB,EE	116	VZT0939	TAPE B	1	[SPC]
20	VYK4P47	TOP CASE UNIT	1	P,PC,PU,PR,GC,GF,GA,GK,GN					
20-1	VGQ0J75	POWER KNOB BASE	1						
20-2	VGU0H46	POWER KNOB	1						
20-3	VGU0H66	EZ BUTTON	1						
21	VYK4N61	FRONT CASE UNIT	1	EG-S,EP-S,EB-S,EE-S,PU-S, GC-S,GF-S,GA-S,GK-S,GN-S	B1	VHD2081	SCREW	1	(-S)
21	VYK4N31	FRONT CASE UNIT	1	EG-K,EP-K,EB-K,EE-K,PC-K, PU-K,PR-K,GC-K,GF-K, GA-K,GK-K,GN-K	B1	VHD2082	SCREW	1	(-K,-R)
21	VYK4N32	FRONT CASE UNIT	1	EG-R,EE-R,PC-R,GC-R,GF-R, GA-R,GK-R,GN-R	B2	VHD2081	SCREW	1	(-S)
21	VYK4N55	FRONT CASE UNIT	1	P-S	B2	VHD2082	SCREW	1	(-K,-R)
21	VYK4N51	FRONT CASE UNIT	1	P-K	B3	VHD2081	SCREW	1	(-S)
21	VYK4N52	FRONT CASE UNIT	1	P-R	B3	VHD2082	SCREW	1	(-K,-R)
21-1	VGK3718	LENS RING	1		B4	VHD2194	SCREW	1	(-S)
22	VYK5C64	BATTERY DOOR UNIT	1	(-S)	B4	VHD2195	SCREW	1	(-K,-R)
22	VYK5C60	BATTERY DOOR UNIT	1	(-K)	B5	VHD2194	SCREW	1	(-S)
22	VYK5C61	BATTERY DOOR UNIT	1	(-R)	B5	VHD2195	SCREW	1	(-K,-R)
23	VGQ0M78	BATTERY LOCK KNOB	1		B6	VHD2194	SCREW	1	(-S)
24	VKF4930	JACK DOOR	1	(-S)	B6	VHD2195	SCREW	1	(-K,-R)
24	VKF4925	JACK DOOR	1	(-K)	B7	VHD2194	SCREW	1	(-S)
24	VKF4926	JACK DOOR	1	(-R)	B7	VHD2195	SCREW	1	(-K,-R)
25	VMB4152	BATTERY LOCK SPRING	1		B8	VHD2194	SCREW	1	(-S)
26	VMB4337	BATTERY OUT SPRING	1		B8	VHD2195	SCREW	1	(-K,-R)
27	VMP9240	TRIPOD	1		B9	VHD2194	SCREW	1	(-S)
28	VMP0A12	FRAME	1		B9	VHD2195	SCREW	1	(-K,-R)
29	VMP9872	BATTERY CASE	1		B10	VHD1998	SCREW	1	
30	VMS7863	BATTERY DOOR SHAFT	1		B11	VHD1998	SCREW	1	
31	VMS7863	JACK DOOR SHAFT	1		B12	VHD1909	SCREW	1	
32	VYK4P64	LCD UNIT	1		B13	VHD1909	SCREW	1	
32-1	VYP9324	TOUCH PANEL UNIT	1		B14	VHD1909	SCREW	1	
					B15	VHD2004	SCREW	1	
					B16	XQN16+BJ7FN	SCREW	1	
					B17	XQN16+BJ7FN	SCREW	1	
					B18	XQN16+BJ7FN	SCREW	1	
					B101	VHD1871	SCREW	1	[SPC]
					B102	VHD1871	SCREW	1	[SPC]
					B103	VHD2011	SCREW	1	[SPC]
					B104	VHD2296	SCREW	1	[SPC]
					B105	VHD2296	SCREW	1	[SPC]
					B106	VHD2296	SCREW	1	[SPC]
					B107	VHD2296	SCREW	1	[SPC]
					B108	VHD2296	SCREW	1	[SPC]
					B109	VHD2296	SCREW	1	[SPC]
					B110	VHD2296	SCREW	1	[SPC]
					B111	VHD2296	SCREW	1	[SPC]

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
300	VPF1372-A	CAMERA BAG	1	EXCEPT P,PC,PU
▲ 301	DE-A92AA/SX	BATTERY CHARGER	1	EG,EP,EB,EE,GN
▲ 301	DE-A92DA/SX	BATTERY CHARGER	1	PR
▲ 301	DE-A92BA/SX	BATTERY CHARGER	1	FH27GC,GF,GA,GN
▲ 302	----	BATTERY	1	EXCEPT P,PC,PU
304	K1HY08YY0019	USB CABLE W/PLUG	1	EXCEPT P,PC,PU
305	K1HY08YY0020	AV CABLE W/PLUG	1	EXCEPT P,PC,PU
306	VFC4297-B	HAND STRAP	1	EXCEPT P,PC,PU
307	VG00C14	TOUCH PEN	1	EXCEPT P,PC,PU
308	VPF1378	BAG, POLYETHYLENE	1	EXCEPT P,PC,PU
▲ 311	VFF0732-S	CD-ROM	1	EG,EP,EB
		(SOFT/INSTRUCTION BOOK)		[SPC] See "Notes"
▲ 311	VFF0733-S	CD-ROM	1	EE
		(SOFT/INSTRUCTION BOOK)		[SPC] See "Notes"
▲ 311	VFF0734-S	CD-ROM	1	GC,GF,GA,GN
		(SOFT/INSTRUCTION BOOK)		[SPC] See "Notes"
▲ 311	VFF0735-S	CD-ROM	1	GK
		(SOFT/INSTRUCTION BOOK)		[SPC] See "Notes"
▲ 311	VFF0731-S	CD-ROM	1	PR
		(SOFT/INSTRUCTION BOOK)		[SPC] See "Notes"
312	VQC8062	O/I SOFTWARE	1	FH27GC,GF,GA
		(ENGLISH/		
		CHINESE(TRADITIONAL)/		
		ARABIC/PERSIAN)		
312	VQC8064	O/I SOFTWARE	1	FH27GK
		(CHINESE(SIMPLIFIED))		
312	VQC8061	O/I SOFTWARE	1	FS37EE
		(RUSSIAN/UKRAINIAN)		
312	VQC8060	O/I SOFTWARE	1	FS37EB, FH27GN
		(ENGLISH)		
312	VQC8057	O/I SOFTWARE	1	FS37EG
		(GERMAN/FRENCH/ITALIAN/		
		DUTCH/SPANISH/		
		PORTUGUESE/TURKISH)		
312	VQC8058	O/I SOFTWARE	1	FS37EP
		(FINNISH/SWEDISH/DANISH/		
		POLISH/CZECH/HUNGARIAN)		
312	VQC8056	O/I SOFTWARE	1	FH27PR
		(SPANISH/PORTUGUESE)		
▲ 313	VQT3M10	BASIC O/I	1	GA
		(VIETNAMESE)		
▲ 313	VQT3D78	BASIC O/I	1	EG
		(GERMAN/FRENCH)		
▲ 313	VQT3D79	BASIC O/I	1	EG
		(ITALIAN/DUTCH)		
▲ 313	VQT3D80	BASIC O/I	1	EG
		(SPANISH/PORTUGUESE)		
▲ 313	VQT3D81	BASIC O/I	1	EG
		(TURKISH)		
▲ 313	VQT3D82	BASIC O/I	1	EP
		(SWEDISH/DANISH)		
▲ 313	VQT3D83	BASIC O/I	1	EP
		(POLISH/CZECH)		
▲ 313	VQT3D84	BASIC O/I	1	EP
		(HUNGARIAN/FINNISH)		
▲ 313	VQT3D86	BASIC O/I	1	EB
		(ENGLISH)		
▲ 313	VQT3D87	BASIC O/I	1	EE
		(RUSSIAN/UKRAINIAN)		
▲ 313	VQT3D77	BASIC O/I	1	PR
		(SPANISH)		
▲ 313	VQT3D88	BASIC O/I	1	GC,GF,GA
		(ENGLISH/		
		CHINESE(TRADITIONAL))		
▲ 313	VQT3D89	BASIC O/I	1	GC,GF
		(ARABIC/PERSIAN)		
▲ 313	VQT3D90	BASIC O/I	1	GK
		(CHINESE(SIMPLIFIED))		
▲ 313	VQT3D91	BASIC O/I	1	GN
		(ENGLISH)		
314	VPK4656	PACKING CASE	1	EG-S,EP-S,EB-S,EE-S
314	VPK4662	PACKING CASE	1	G-K,EP-K,EB-K,EE-K
314	VPK4668	PACKING CASE	1	EG-R,EE-R
314	VPK4663	PACKING CASE	1	PR-K,GC-K,GA-K,GN-K
314	VPK4657	PACKING CASE	1	GC-S,GA-S,GN-S
314	VPK4669	PACKING CASE	1	GC-R,GA-R,GN-R


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
314	VPK4658	PACKING CASE	1	GF-S
314	VPK4664	PACKING CASE	1	GF-K
314	VPK4670	PACKING CASE	1	GF-R
314	VPK4659	PACKING CASE	1	GK-S
314	VPK4665	PACKING CASE	1	GK-K
314	VPK4671	PACKING CASE	1	GK-R
315	VPN7240	CUSHION	1	EXCEPT P,PC,PU
▲ 319	K2CT3YY00034	AC CORD	1	EB,GC
▲ 320	K2CQ2YY00082	AC CORD	1	EG,EP,EE,GF,GA
▲ 321	K2CJ2YY00052	AC CORD	1	GN
▲ 322	K2CA2YY00130	AC CORD	1	GK
▲ 323	K2CJ2YY00053	AC CORD	1	PR

S7. Exploded View

S7.1. Frame and Casing Section

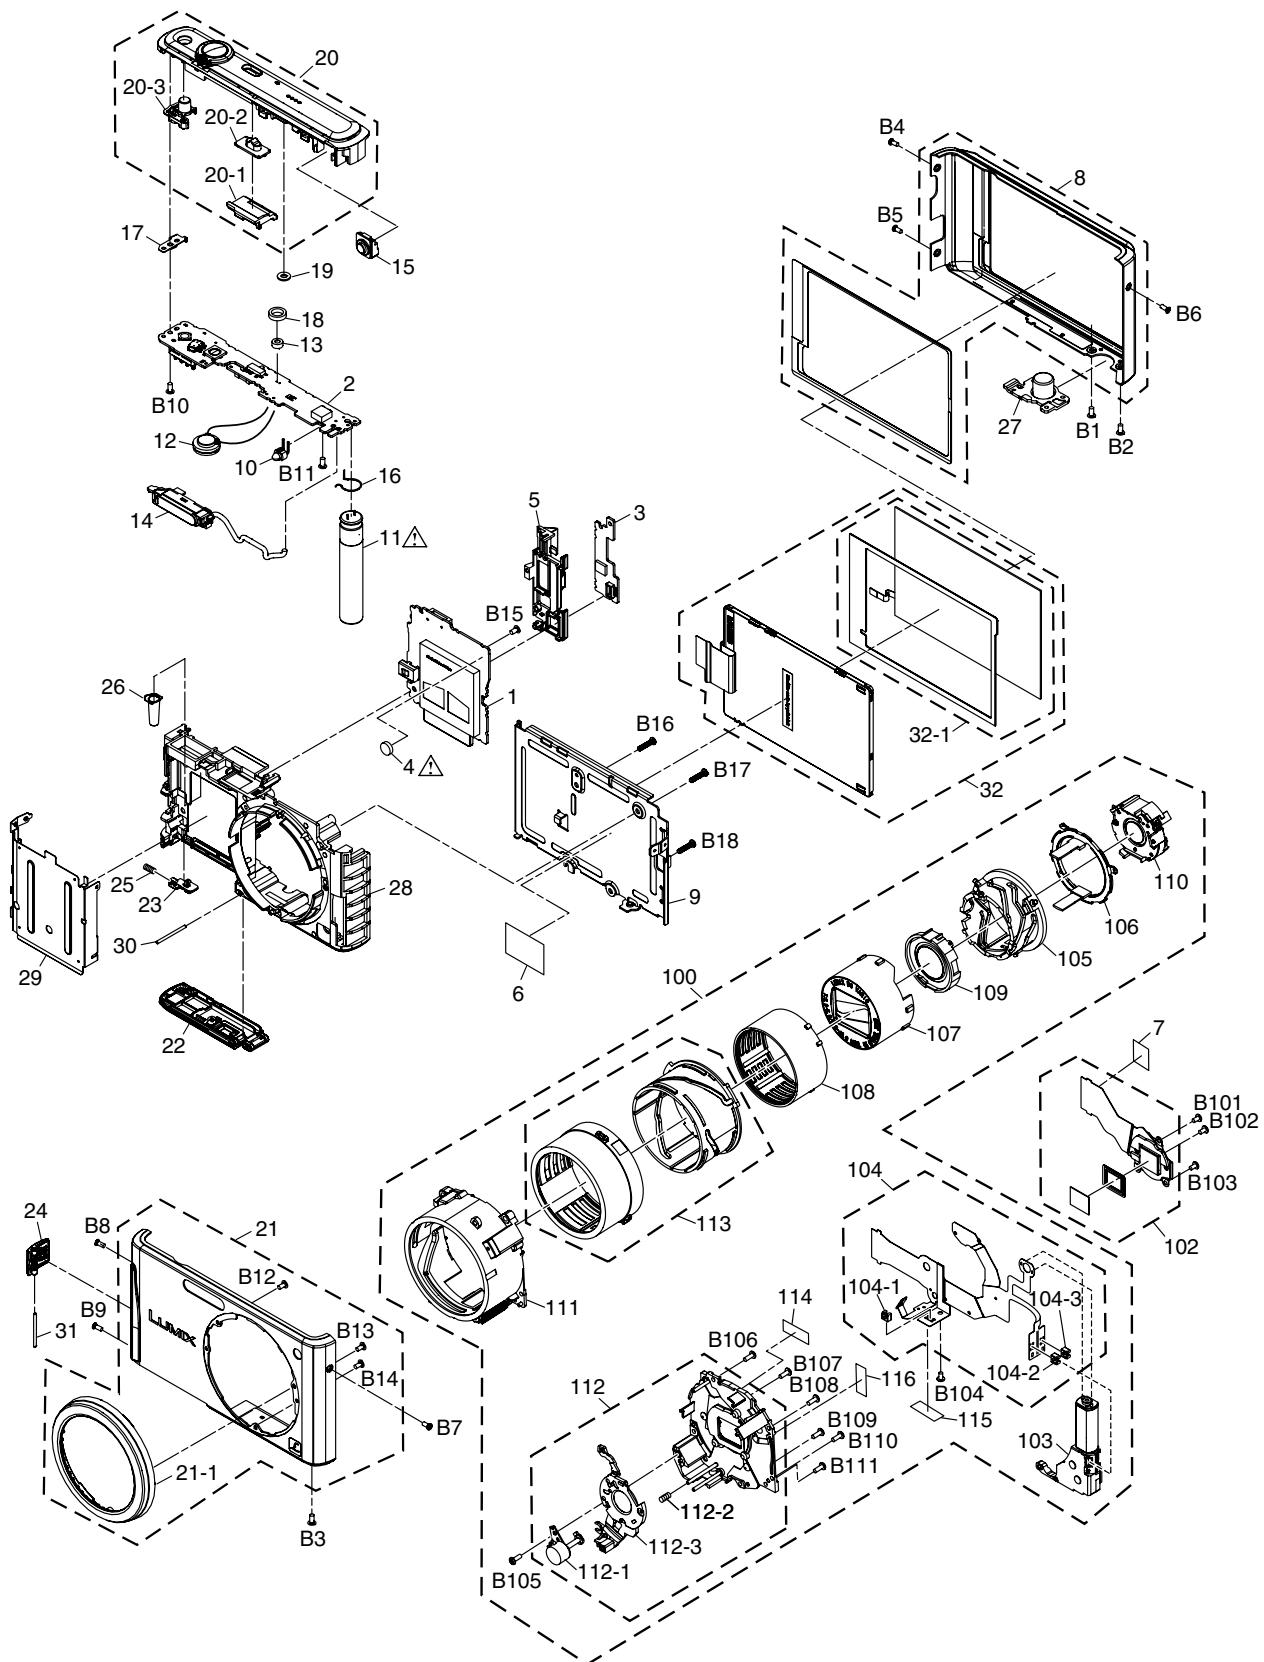

S7.2. Packing Parts and Accessories Section (1)

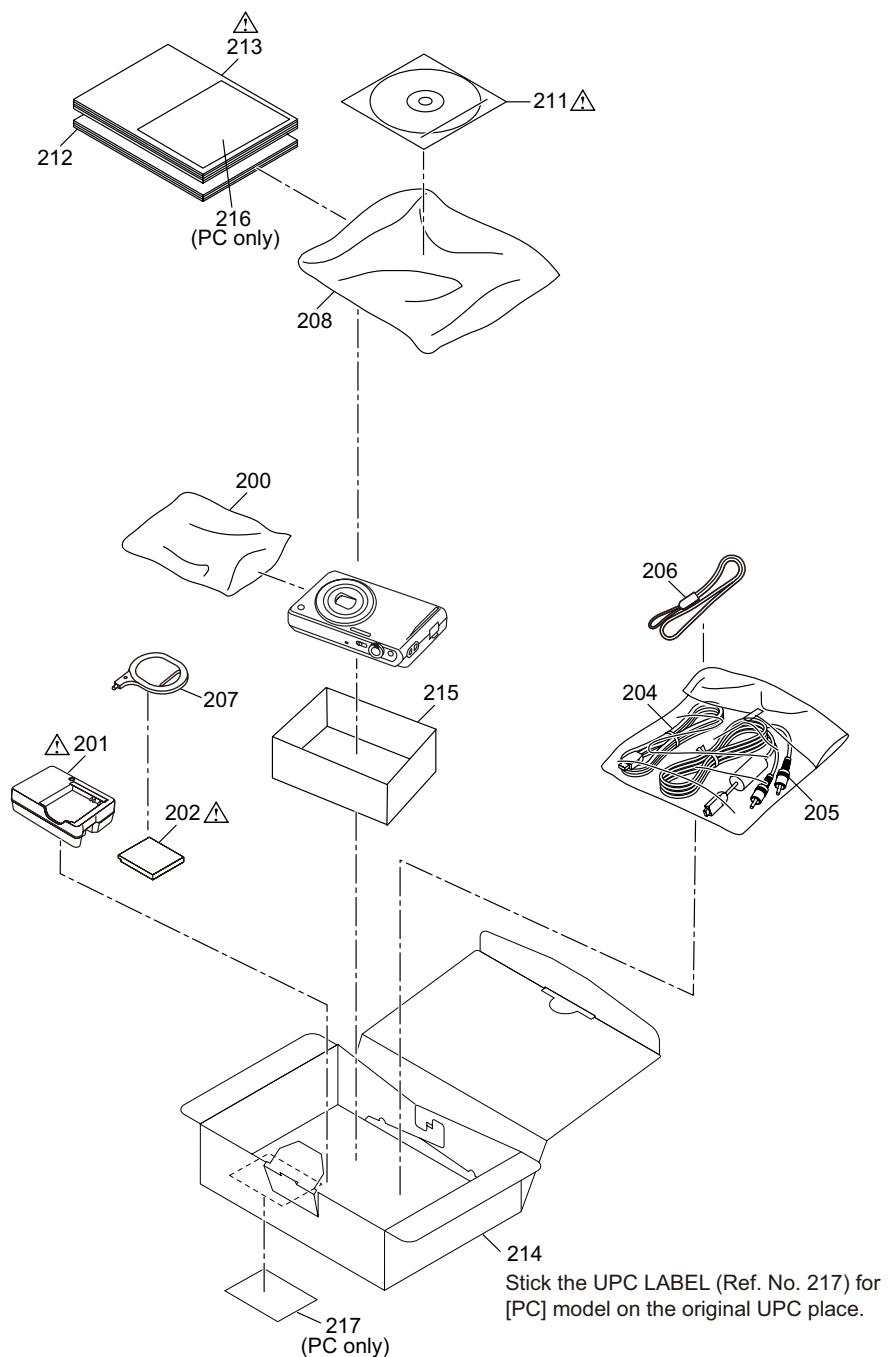

S7.3. Packing Parts and Accessories Section (2)

