


Service Manual

Digital Camera

LUMIX  HDMI

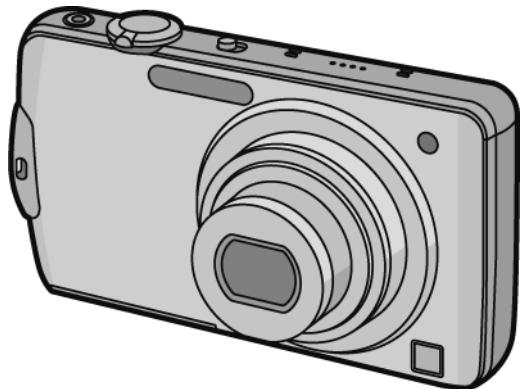

Model No. **DMC-FX700P**
DMC-FX700PC
DMC-FX700PU
DMC-FX700EB
DMC-FX700EE
DMC-FX700EF
DMC-FX700EG
DMC-FX700EP
DMC-FX700GC
DMC-FX700GD
DMC-FX700GH
DMC-FX700GK
DMC-FX700GN
DMC-FX700GT
DMC-FX700SG

Vol. 1

Colour

- (S).....Silver Type (only P/PC/GC/GH/GK/SG)
- (K).....Black Type
- (N).....Gold Type (only GC/GD/GK/GT/SG)
- (W).....White Type (only GC/GD/GH/GT/SG)

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic®

© Panasonic Corporation 2010 Unauthorized copying and distribution is a violation of law.

TABLE OF CONTENTS

| | PAGE |
|---|-----------|
| 1 Safety Precautions ----- | 3 |
| 1.1. General Guidelines ----- | 3 |
| 1.2. Leakage Current Cold Check ----- | 3 |
| 1.3. Leakage Current Hot Check (See Figure 1.)----- | 3 |
| 1.4. How to Discharge the E.Capacitor on Flash Top P.C.B.----- | 4 |
| 2 Warning ----- | 5 |
| 2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices ----- | 5 |
| 2.2. How to Recycle the Lithium Ion Battery (U.S. Only)----- | 5 |
| 2.3. Caution for AC Cord(For EB/GC/GH)----- | 6 |
| 2.4. How to Replace the Lithium Battery----- | 7 |
| 3 Service Navigation----- | 8 |
| 3.1. Introduction ----- | 8 |
| 3.2. About lens block ----- | 8 |
| 3.3. General Description About Lead Free Solder (PbF) ----- | 8 |
| 3.4. Important Notice 1:(Other than U.S.A. and Canadian Market)----- | 8 |
| 3.5. How to Define the Model Suffix (NTSC or PAL model)----- | 9 |
| 4 Specifications ----- | 13 |
| 5 Location of Controls and Components ----- | 14 |
| 6 Service Mode ----- | 17 |
| 6.1. Error Code Memory Function ----- | 17 |
| 6.2. ICS (Indication of additional Camera Settings when picture was taken) function ----- | 19 |
| 7 Service Fixture & Tools ----- | 21 |
| 7.1. Service Fixture and Tools ----- | 21 |
| 7.2. When Replacing the Main P.C.B. ----- | 22 |
| 7.3. Service Position ----- | 22 |
| 8 Disassembly and Assembly Instructions----- | 23 |
| 8.1. Disassembly Flow Chart----- | 23 |
| 8.2. P.C.B. Location ----- | 23 |
| 8.3. Disassembly Procedure ----- | 24 |
| 8.4. Lens Disassembly Procedure----- | 30 |
| 8.5. Assembly Procedure for the Lens ----- | 33 |
| 8.6. Removal of the MOS Sensor Unit ----- | 37 |
| 8.7. Removal of the Focus Motor ----- | 38 |
| 8.8. The Application of Grease Method ----- | 38 |
| 9 Measurements and Adjustments ----- | 39 |
| 9.1. Introduction ----- | 39 |
| 9.2. Before Disassembling the unit ----- | 39 |
| 9.3. Details of Electrical Adjustment----- | 41 |
| 9.4. After Adjustment----- | 45 |
| 10 Maintenance ----- | 46 |
| 10.1. Cleaning Lens and LCD Panel ----- | 46 |

1 Safety Precautions

1.1. General Guidelines

1. IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by

⚠ in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent X-RADIATION, shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

2. An Isolation Transformer should always be used during the servicing of AC Adaptor whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect AC Adaptor from being damaged by accidental shorting that may occur during servicing.
3. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
5. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Leakage Current Cold Check

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between $1\text{ M}\Omega$ and $5.2\text{ M}\Omega$. When the exposed metal does not have a return path to the chassis, the reading must be infinity.

1.3. Leakage Current Hot Check (See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a $1.5\text{ k}\Omega$, 10 W resistor, in parallel with a $0.15\text{ }\mu\text{F}$ capacitor, between each exposed metallic part on the set and a good earth ground, as shown in Figure 1.
3. Use an AC voltmeter, with $1\text{ k}\Omega/\text{V}$ or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 V RMS . A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed $1/2\text{ mA}$. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Hot-Check Circuit



Figure. 1

1.4. How to Discharge the E.Capacitor on Flash Top P.C.B.

CAUTION:

1. Be sure to discharge the E.capacitor on FLASH TOP P.C.B..
2. Be careful of the high voltage circuit on FLASH TOP P.C.B. when servicing.

[Discharging Procedure]

1. Refer to the disassemble procedure and remove the necessary parts/unit.
2. Install the insulation tube onto the lead part of resistor (ERG5SJ102:1kΩ /5W).
(an equivalent type of resistor may be used.)
3. Place a resistor between both terminals of E.capacitor on the FLASH TOP P.C.B. for approx. 5 seconds.
4. After discharging, confirm that the E.capacitor voltage is lower than 10V using a voltmeter.

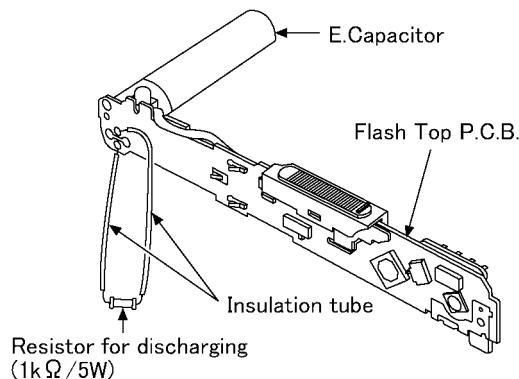


Fig. F1

2 Warning

2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices.

Examples of typical ES devices are IC (integrated circuits) and some field-effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an antistatic solder removal device. Some solder removal devices not classified as "antistatic (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION :

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

2.2. How to Recycle the Lithium Ion Battery (U.S. Only)

ENGLISH



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

FRANÇAIS



L'appareil que vous vous êtes procuré est alimenté par une batterie au lithium-ion recyclable. Pour des renseignements sur le recyclage de la batterie, veuillez composer le 1-800-8-BATTERY.

2.3. Caution for AC Cord (For EB/GC/GH)

2.3.1. Information for Your Safety

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

WARNING

To reduce the risk of fire or shock hazard, do not expose this equipment to rain or moisture.

CAUTION

To reduce the risk of fire or shock hazard and annoying interference, use the recommended accessories only.

FOR YOUR SAFETY

DO NOT REMOVE THE OUTER COVER

To prevent electric shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

2.3.2. Caution for AC Mains Lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three-pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amperes and it is approved by ASTA or BSI to BS1362

Check for the ASTA mark or the BSI mark on the body of the fuse.



If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

If the fitted moulded plug is unsuitable for the socket outlet in your home then the fuse should be removed and the plug cut off and disposed of safely.

There is a danger of severe electrical shock if the cut off plug is inserted into any 13-ampere socket.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

2.3.2.1. Important

The wires in this mains lead are coloured in accordance with the following code:

| | |
|-------|---------|
| Blue | Neutral |
| Brown | Live |

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.


The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol.




2.3.2.2. Before Use

Remove the Connector Cover as follows.

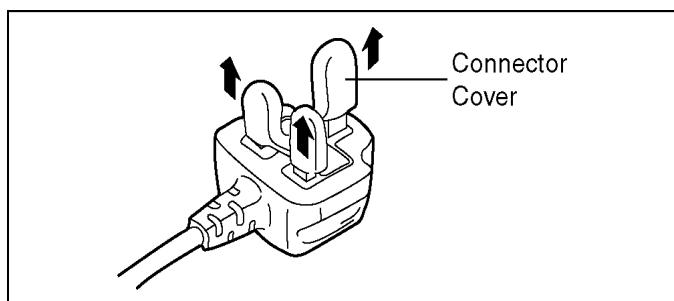


2.3.2.3. How to Replace the Fuse

1. Remove the Fuse Cover with a screwdriver.

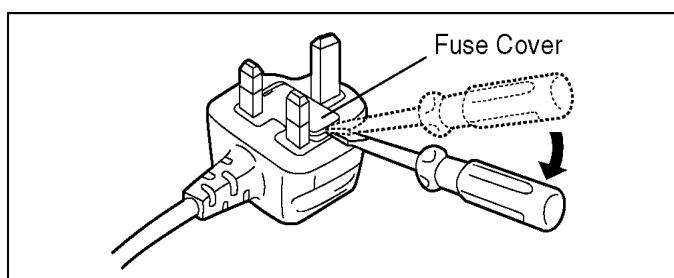


2. Replace the fuse and attach the Fuse cover.

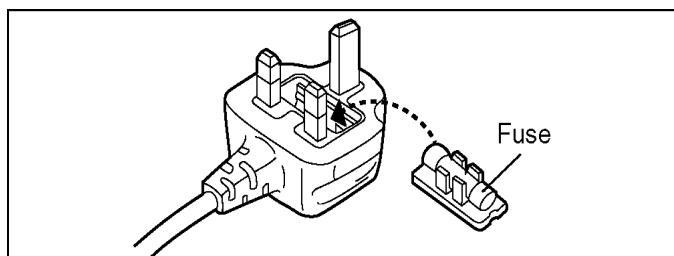

2.4. How to Replace the Lithium Battery

2.4.1. Replacement Procedure

1. Remove the MAIN P.C.B.. (Refer to Disassembly Procedures.)
2. Remove the Lithium battery (Ref. No. "B9101" at component side of MAIN P.C.B.) and then replace it into new one.

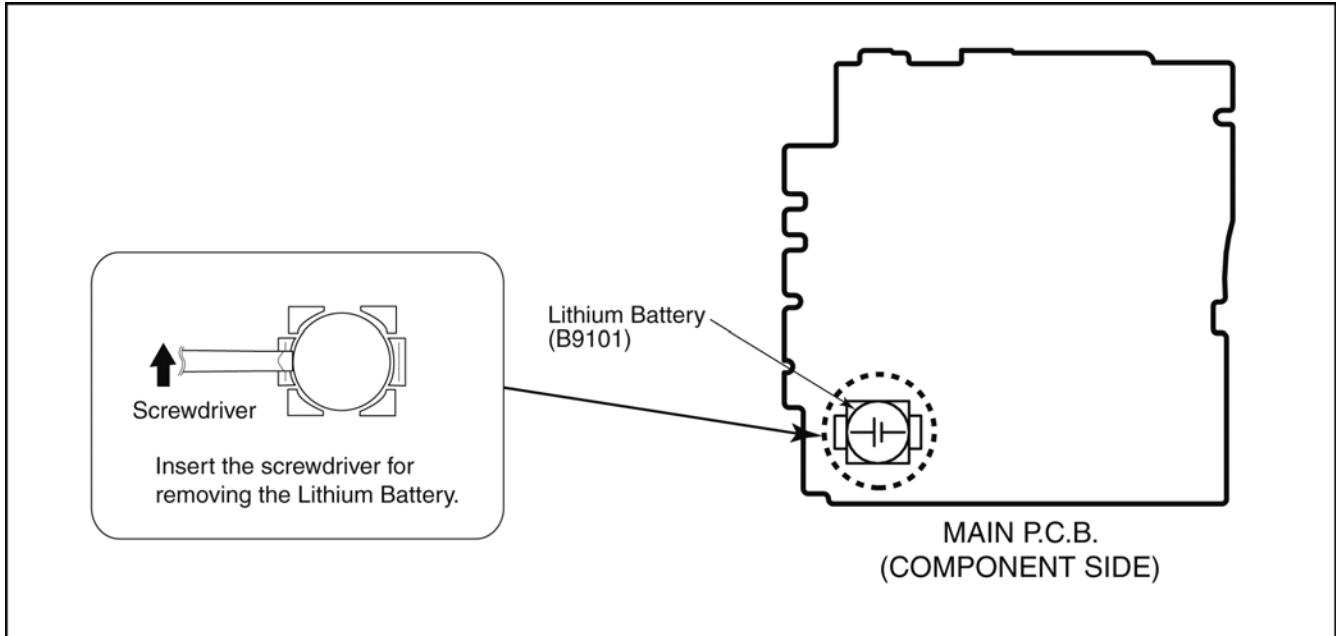

NOTE:

This Lithium battery is a critical component.

(Type No.: ML421 **Manufactured by Energy Company, Panasonic Corporation.**)

It must never be subjected to excessive heat or discharge.

It must therefore only be fitted in requirement designed specifically for its use.

Replacement batteries must be of same type and manufacture.

They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.

Do not attempt to re-charge the old battery or re-use it for any other purpose.

It should be disposed of in waste products destined for burial rather than incineration.

(For English)

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

(For German)

ACHTUNG

Explosionsgefahr bei falschem Anbringen der Batterie. Ersetzen Sie nur mit einem äquivalentem vom Hersteller empfohlenem Typ.

Behandeln Sie gebrauchte Batterien nach den Anweisungen des Herstellers.

(For French)

MISE EN GARDE

Une batterie de remplacement inappropriée peut exploser. Ne remplacez qu'avec une batterie identique ou d'un type recommandé par le fabricant. L'élimination des batteries usées doit être faite conformément aux instructions du manufacturier.

NOTE:

Above caution is applicable for a battery pack which is for DMC-FX700 series, as well.

3 Service Navigation

3.1. Introduction

This service manual contains technical information, which allow service personnel's to understand and service this model.

Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, the information will be followed by service manual to be controlled with original service manual.

3.2. About lens block

- The image sensor (MOS SENSOR) unit which are connected to the lens unit with 3 screws. These screws are locked with the screw locking glue, after performing the Optical tilt adjustment.

During servicing, if one of MOS SENSOR fixing screws are loosened, the Optical tilt adjustment must be performed.

(About the Optical tilt adjustment, refer to the "9.3.2 Adjustment Specifications" for details.)

3.3. General Description About Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.

The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30°C (86°F) more than that of the normal solder.

Distinction of P.C.B. Lead Free Solder being used

| | |
|--|-----|
| The letter of "PbF" is printed either foil side or components side on the P.C.B. using the lead free solder.(See right figure) | PbF |
|--|-----|

Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.
(Definition: The letter of "PbF" is printed on the P.C.B. using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the P.C.B. cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30°C (662±86°F).

Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.

RFKZ03D01KS-----(0.3mm 100g Reel)

RFKZ06D01KS-----(0.6mm 100g Reel)

RFKZ10D01KS-----(1.0mm 100g Reel)

Note

* Ingredient: tin (Sn) 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

3.4. Important Notice 1:(Other than U.S.A. and Canadian Market)

1. The service manual does not contain the following information because of issues servicing to component level without necessary equipment/facilities.
 - a. Schematic diagram, Block Diagram and P.C.B. layout of MAIN P.C.B..
 - b. Parts list for individual parts for MAIN P.C.B..

When a part replacement is required for repairing MAIN P.C.B., replace as an assembled parts. (MAIN P.C.B.)

2. The following category is/are recycle module part. please send it/them to Central Repair Center.

- MAIN P.C.B. (VEP56109A: P/PC/PU/EE/GC/GD/GH/GK/GN/GT/SG): Excluding replacement of Lithium Battery.
- MAIN P.C.B. (VEP56109B: EG/EF/EB/EP): Excluding replacement of Lithium Battery.

3.5. How to Define the Model Suffix (NTSC or PAL model)

There are nine kinds of DMC-FX700, regardless of the colours.

- a) DMC-FX700 (Japan domestic model), DMC-FX700SG
- b) DMC-FX700P/PC
- c) DMC-FX700EB/EF/EG/EP
- d) DMC-FX700EE
- e) DMC-FX700GT
- f) DMC-FX700GK
- g) DMC-FX700GD
- h) DMC-FX700GN
- i) DMC-FX700PU/GC/GH

What is the difference is that the "INITIAL SETTINGS" data which is stored in Flash-ROM mounted on MAIN P.C.B..

3.5.1. Defining methods:

To define the model suffix to be serviced, refer to the nameplate which is put on the bottom side of the Unit.

a) DMC-FX700 (Japan domestic model), DMC-FX700SG

The nameplate for these models show the following Safety registration mark.



b) DMC-FX700P/PC

The nameplate for these models show the following Safety registration mark.



c) DMC-FX700EB/EF/EG/EP

The nameplate for these models show the following Safety registration mark.



d) DMC-FX700EE

The nameplate for this model show the following Safety registration mark.



e) DMC-FX700GT

The nameplate for this model show the following Safety registration mark.



f) DMC-FX700GK

The nameplate for this model show the following Safety registration mark.



g) DMC-FX700GD

The nameplate for this model show the following Safety registration mark.



h) DMC-FX700GN

The nameplate for this model show the following Safety registration mark.



i) DMC-FX700PU/GC/GH

The nameplate for these models do not show any above Safety registration mark.

NOTE:

After replacing the MAIN P.C.B., be sure to achieve adjustment.

The service software is available at "TSN Website". To download, click on "Support Information from NWBG/VDBG-AVC".

3.5.2. INITIAL SETTINGS:

After replacing the MAIN P.C.B., be sure to perform the initial settings after achieving the adjustment by ordering the following procedure in accordance with model suffix of the unit.

1. IMPORTANT NOTICE:

Before proceeding Initial settings, be sure to read the following CAUTIONS.

CAUTION 1:(INITIAL SETTINGS)

---AFTER REPLACING THE MAIN P.C.B. and/or FLASH-ROM ---

[Except "EG, EF, EB and EP" models : (VEP56109A is used as a Main P.C.B.)]

*.The model suffix can be chosen JUST ONE TIME.

(Effective model suffix : " P/PU/GD/GC/GT/GK/EE/GN/PC/SG/GH and NONE (JAPAN)")

*.Once one of the model suffix has been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

[Only for "EG, EF, EB and EP" models : (VEP56109B is used as a Main P.C.B.)]

*.From the beginning, only "EG, EF, EB and EP" are displayed as model suffix lists, and these are displayed from the second times as well.

CAUTION 2:(Stored picture image data in the unit)

This unit employs "Built-in Memory" for picture image data recording.(Approx.40MB)

After proceeding "INITIAL SETTINGS", the picture image data stored in the unit is erased.

2. PROCEDURES:

• Precautions: Read the above "CAUTION 1" and "CAUTION 2", carefully.

• Preparation:

- Attach the Battery or AC Adaptor with a DC coupler to the unit.

(Since this unit has built-in memory, it can be performed without inserting SD memory card.)

1. Turn the Power on.

2. Press the [MODE] button, and then touch the [P] (Program AE mode) on the touch panel.

3. Turn the Power off.

(If the unit is other than [P] (Program AE mode), it does not display the initial settings menu.)

• **Step 1. The temporary cancellation of "INITIAL SETTINGS":**

Set the [REC]/[PLAYBACK] selector switch to "[REC] (Camera mark)".

While keep pressing "[WIDE] of Zoom lever" and [MODE] button simultaneously, turn the Power on.

• **Step 2. The cancellation of "INITIAL SETTINGS":**

Set the [REC]/[PLAYBACK] selector switch to "[PLAYBACK]".

Press "[WIDE] of Zoom lever" and [MODE] button simultaneously, then turn the Power off.

• **Step 3. Turn the Power on:**

Set the [REC]/[PLAYBACK] selector switch to "[REC] (Camera mark)", and then turn the Power on.

• **Step 4. Display the INITIAL SETTING:**

While keep pressing "[WIDE] of Zoom lever" and [MODE] button simultaneously, turn the Power off.


The "INITIAL SETTINGS" menu is displayed.

There are two kinds of "INITIAL SETTINGS" menu form as follows:

[CASE 1. After replacing MAIN P.C.B.]


[Except "EG, EF, EB and EP" models: (VEP56109A is used as a Main P.C.B.]

When MAIN P.C.B. has just been replaced, all of the model suffix is displayed as follows. (Four pages in total)

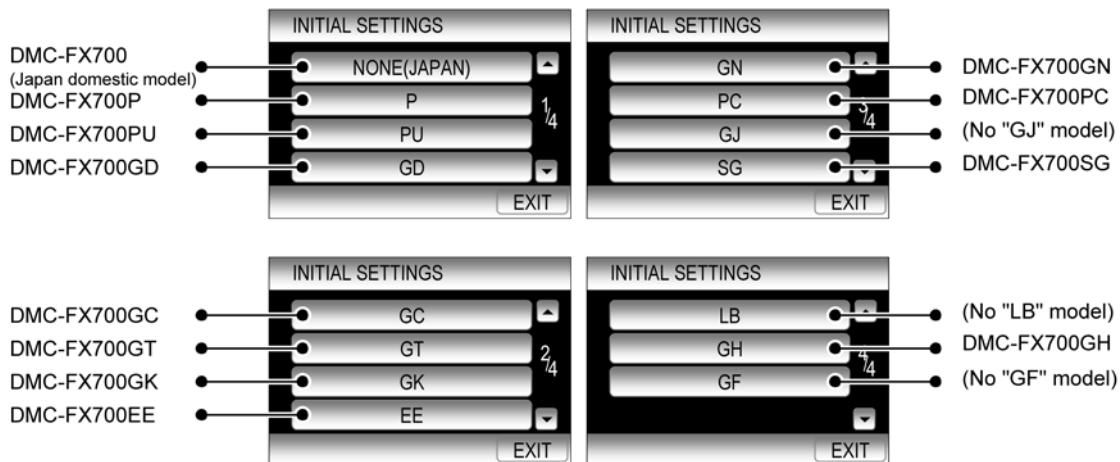


[Only "EG, EF, EB and EP" models: (VEP56109B is used as a Main P.C.B.]

When MAIN P.C.B. has just been replaced, only 7 model suffix are displayed as follows. (Two pages in total)

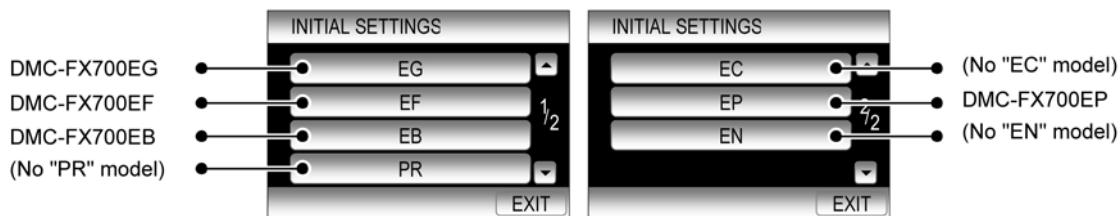

[CASE 2. Other than "After replacing MAIN P.C.B."]

<Other than "EG/EF/EB/EP" models>

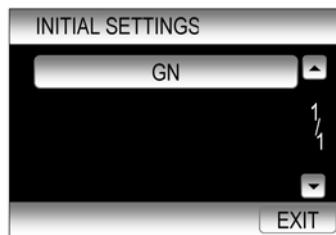

<Only "EG/EF/EB/EP" models>



• **Step 5. Choose the model suffix in "INITIAL SETTINGS": (Refer to "CAUTION 1")**

[Caution: After replacing MAIN P.C.B.]

The model suffix can be chosen, **JUST ONE TIME**.


Once one of the model suffixes have been chosen, the model suffix lists will not be displayed, thus, it can not be changed.

Therefore, select the area carefully.

Select the area with touch the [UP] / [DOWN] on the touch panel.

• **Step 6. Set the model suffix in "INITIAL SETTINGS":**

- The only set area is displayed, and then touch the [END] on the touch panel after confirmation.
(The unit is powered off automatically.)

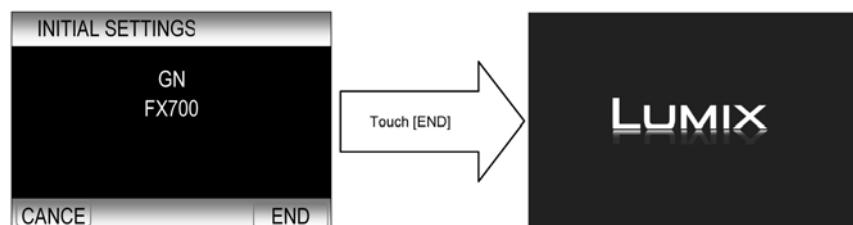

• **Step 7. CONFIRMATION:**

Confirm the display of “PLEASE SET THE CLOCK” in concerned language when the unit is turned on again.

When the unit is connected to PC with USB cable, it is detected as removable media.

(When the “GT” or “GK” model suffix is selected, the display shows “PLEASE SET THE CLOCK” in Chinese.)

1) As for your reference, major default setting condition is as shown in the following table.

• **Default setting (After “INITIAL SETTINGS”)**


| | MODEL | VIDEO OUTPUT | LANGUAGE | DATE | REMARKS |
|----|----------------------------------|--------------|-----------------------|-----------------|---------|
| a) | DMC-FX700 (Japan domestic model) | NTSC | Japanese | Year/Month/Date | |
| b) | DMC-FX700P | NTSC | English | Month/Date/Year | |
| c) | DMC-FX700PU | NTSC | English | Month/Date/Year | |
| d) | DMC-FX700GD | NTSC | Korean | Year/Month/Date | |
| e) | DMC-FX700GC | PAL | English | Date/Month/Year | |
| f) | DMC-FX700GT | NTSC | Chinese (traditional) | Year/Month/Date | |
| g) | DMC-FX700GK | PAL | Chinese (simplified) | Year/Month/Date | |
| h) | DMC-FX700EE | PAL | Russian | Date/Month/Year | |
| i) | DMC-FX700GN | PAL | English | Date/Month/Year | |
| j) | DMC-FX700PC | NTSC | English | Month/Date/Year | |
| k) | DMC-FX700SG | PAL | English | Date/Month/Year | |
| l) | DMC-FX7000GH | PAL | English | Date/Month/Year | |
| m) | DMC-FX700EG | PAL | English | Date/Month/Year | |
| n) | DMC-FX700EF | PAL | French | Date/Month/Year | |
| o) | DMC-FX700EB | PAL | English | Date/Month/Year | |
| p) | DMC-FX700EP | PAL | English | Date/Month/Year | |

4 Specifications


| | | | |
|---|--|--|--|
| Digital Camera: | Information for your safety | Recording media: | Built-in Memory (Approx. 40 MB)/SD Memory Card/SDHC Memory Card/SDXC Memory Card |
| Power Source: | DC 5.1 V | Recording file format | JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard)/DPOF corresponding |
| Power Consumption: | 1.4 W (When recording) 1.0 W (When playing back) | Still Picture: | JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard)+"QuickTime" |
| Camera effective pixels: | 14,100,000 pixels | Motion pictures with audio: | AVCHD/QuickTime Motion JPEG |
| Image sensor: | 1/2.33" MOS sensor, total pixel number 15,100,000 pixels, Primary color filter | Interface | "USB 2.0" (High Speed) |
| Lens: | Optical 5×zoom, f=4.3 mm to 21.5 mm (35 mm film camera equivalent: 24 mm to 120 mm)/F2.2 (Wide) to F5.9 (Tele) | Digital: | [for NTSC areas] NTSC Audio line output (monaural) |
| Digital zoom: | Max. 4× | Analog video/audio: | [for PAL areas] NTSC/PAL Composite (Switched by menu) Audio line output (monaural) |
| Extended optical zoom: | Max. 10.5× (When set to 3,000,000 pixels [3M] or less) | Terminal | |
| Focus range: | Normal: 50 cm (1.64 feet) (Wide)/1 m (3.28 feet) (Tele) to ∞ Macro/Intelligent Auto: 3 cm (0.10 feet) (Wide)/1 m (3.28 feet) (Tele) to ∞ | [AV OUT/DIGITAL]: | Dedicated jack (8 pin) |
| | Scene Mode: There may be differences in the above settings. | [HDMI]: | MiniHDMI TypeC |
| Shutter system: | Electronic shutter + Mechanical shutter | Dimensions: | Approx. 103.5 mm (W)×55.8 mm (H)×24.5 mm (D) [4.08" (W)×2.20"(H)×0.97" (D)] (excluding the projecting parts) |
| Burst recording | Burst speed (Burst number/maximum recordable pixels) | Mass (weight): | Approx. 176 g/0.39 lb (with card and battery) Approx. 155 g/0.34 lb (excluding card and battery) |
| For mechanical shutter: | 2 frames/sec (Max. 100 frames/14 M), 5 frames/sec (Max. 100 frames/14 M), 10 frames/sec (Max. 15 frames/14 M) | Operating temperature: | 0 °C to 40 °C (32 °F to 104 °F) |
| For electronic shutter: | 40 frames/sec (Max. 50 frames/5 M), 60 frames/sec (Max. 60 frames/3.5 M) | Operating humidity: | 10%RH to 80%RH |
| During motion picture recording: | 2 frames/sec (Max. 40 frames/3.5 M), 5 frames/sec (Max. 40 frames/3.5 M), 10 frames/sec (Max. 40 frames/3.5 M) | Battery Charger: | Information for your safety |
| Minimum illuminance: | Approx. 6 lx (when i-low light is used) | Input: | 110 V to 240 V ~ 50/60 Hz, 0.2 A |
| Shutter speed: | 60 seconds to 1/2000th of a second [STARRY SKY] Mode: 15 seconds, 30 seconds, 60 seconds | Output: | 4.2 V --- 0.65 A |
| Exposure (AE): | Program AE (P)/Aperture-Priority AE (A)/Shutter-Priority AE (S)/Manual Exposure (M) Exposure compensation (1/3 EV Step, -2 EV to +2 EV) | Equipment mobility: | Movable |
| Metering mode: | Multiple/Center weighted/Spot | Battery Pack (lithium-ion): | Information for your safety |
| LCD monitor: | 3.0" TFT LCD (3:2) (Approx. 230,000 dots) (field of view ratio about 100%) Touch panel | Voltage/capacity: | 3.6 V/940 mAh |
| Flash: | Flash range: [ISO AUTO] Approx. 60 cm (1.97 feet) to 7.4 m (24.2 feet) (Wide) | NOTE:(Only for "EB/EF/EG/EP" models) | |
| Microphone: | Stereo | | • Data from the PC can not be written to the camera using the USB connection cable. |
| Speaker: | Monaural | Motion pictures (Only "EB/EF/EG/EP" models): | • Motion pictures can be recorded continuously for up to 29 minutes 59 seconds. |
| | | (Except "EB/EF/EG/EP" models): | • Motion picture recorded continuously in [MOTION JPEG] or [HIGH SPEED MOVIE] in Scene Mode is up to 2 GB. Only the maximum recordable time for 2 GB is displayed on the screen. |

5 Location of Controls and Components


- 1 Flash
- 2 Lens
- 3 Self-timer indicator
- 4 AF Assist Lamp
- 4 Hand strap eyelet
 - Be sure to attach the hand strap when using the camera to ensure that you will not drop it.

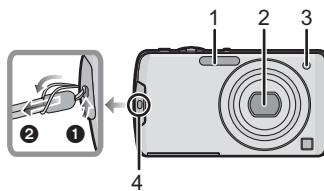


- 5 Touch panel/LCD monitor
- 6 [REC]/[PLAYBACK] selector switch
- 7 [MODE] button
- 8 [MENU] button

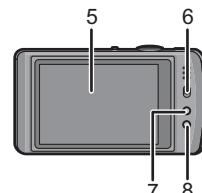


- 9 Speaker
- 10 Camera ON/OFF switch
- 11 Zoom lever
- 12 Motion picture button
- 13 Microphone
- 14 Shutter button

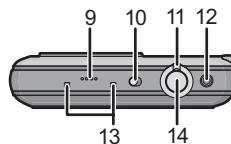

- 15 Lens barrel
- 16 [HDMI] socket
- 17 [AV OUT/DIGITAL] socket

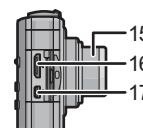

- 18 Tripod receptacle
 - When you use a tripod, make sure the tripod is stable when the camera is attached to it.
- 19 Card/Battery door
- 20 Release lever
- 21 DC coupler cover
 - When using an AC adaptor, ensure that the Panasonic DC coupler and AC adaptor are used.
 - Always use a genuine Panasonic AC adaptor (optional).
 - We recommend you use a battery with sufficient battery power or the AC adaptor when recording motion pictures.
 - If while recording motion pictures using the AC adaptor and the power supply is cut off due to a power outage or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.

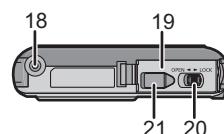

How to Use the Touch Panel


This touch panel is a type that detects pressure. Operation or settings are performed by directly touching the icons displayed on the LCD monitor (touch panel) or by moving while touching the touch panel (dragging) using your fingers or the supplied stylus pen.

| Touch the screen | Drag |
|---|---|
| To touch and release the touch panel.  Use this to perform tasks such as selecting icons or images displayed on the touch panel. You can make settings by touching the items displayed on the screen. You can exit without saving the settings by touching [CANCEL]. <ul style="list-style-type: none">• It may not operate properly when multiple icons are touched simultaneously, so try to touch the center of the icon. | A movement without releasing the touch panel.  This is used when performing tasks such as moving to the next image by dragging horizontally, or changing the range of the displayed image. This can also be used to perform tasks such as switching the screen by operating the slide bar. <ul style="list-style-type: none">• If you select wrong icon, you can drag to different icon, and select that icon by releasing your finger. |

Mode switching

Selecting the [REC] Mode

- 1 Turn the camera on.
Ⓐ [REC]/[PLAYBACK] selector switch
Ⓑ [MODE] button
- 2 Slide the [REC]/[PLAYBACK] selector switch to [CAMERA], and then press [MODE].
- 3 Touch the mode.

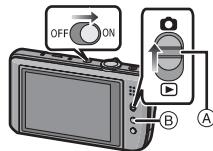

■ List of [REC] Modes

IA [INTELLIGENT AUTO]

The subjects are recorded using settings automatically selected by the camera.

P [PROGRAM AE]

The subjects are recorded using your own settings.

A [APERTURE PRIORITY]

The shutter speed is automatically determined by the aperture value you set.

S [SHUTTER PRIORITY]

The aperture value is automatically determined by the shutter speed you set.

M [MANUAL EXPOSURE]

The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.

SCN [SCENE MODE]

This allows you to take pictures that match the scene being recorded.

About the Battery

- The camera has a function for distinguishing batteries which can be used safely. The dedicated battery supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. (Batteries which do not support this function cannot be used). Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.

6 Service Mode

6.1. Error Code Memory Function

1. General description

This unit is equipped with history of error code memory function, and can be memorized 16 error codes in sequence from the latest. When the error is occurred more than 16, the oldest error is overwritten in sequence.

The error code is not memorized when the power supply is shut down forcibly (i.e., when the unit is powered on by the battery, the battery is pulled out) The error code is memorized to FLASH-ROM when the unit has just before powered off.

2. How to display

The error code can be displayed by ordering the following procedure:

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

NOTE:

*Since this unit has built-in memory, it can be performed without inserting SD memory card.

*Press the [MODE] button, and then touch the [P] (Program AE mode) on the touch panel.

• Step 1. The temporary cancellation of “INITIAL SETTINGS”:

Set the [REC]/[PLAYBACK] selector switch to “[REC] (Camera mark)”.


While keep pressing “[WIDE] of Zoom lever” and [MODE] button simultaneously, turn the Power on.

• Step 2. Execute the error code display mode:

Press the [MOTION PICTURE] button, [MODE] button and [MENU] button simultaneously.

The display is changed as shown below when the above buttons are pressed simultaneously.

Normal display → Error code display → Operation history display → Normal display →

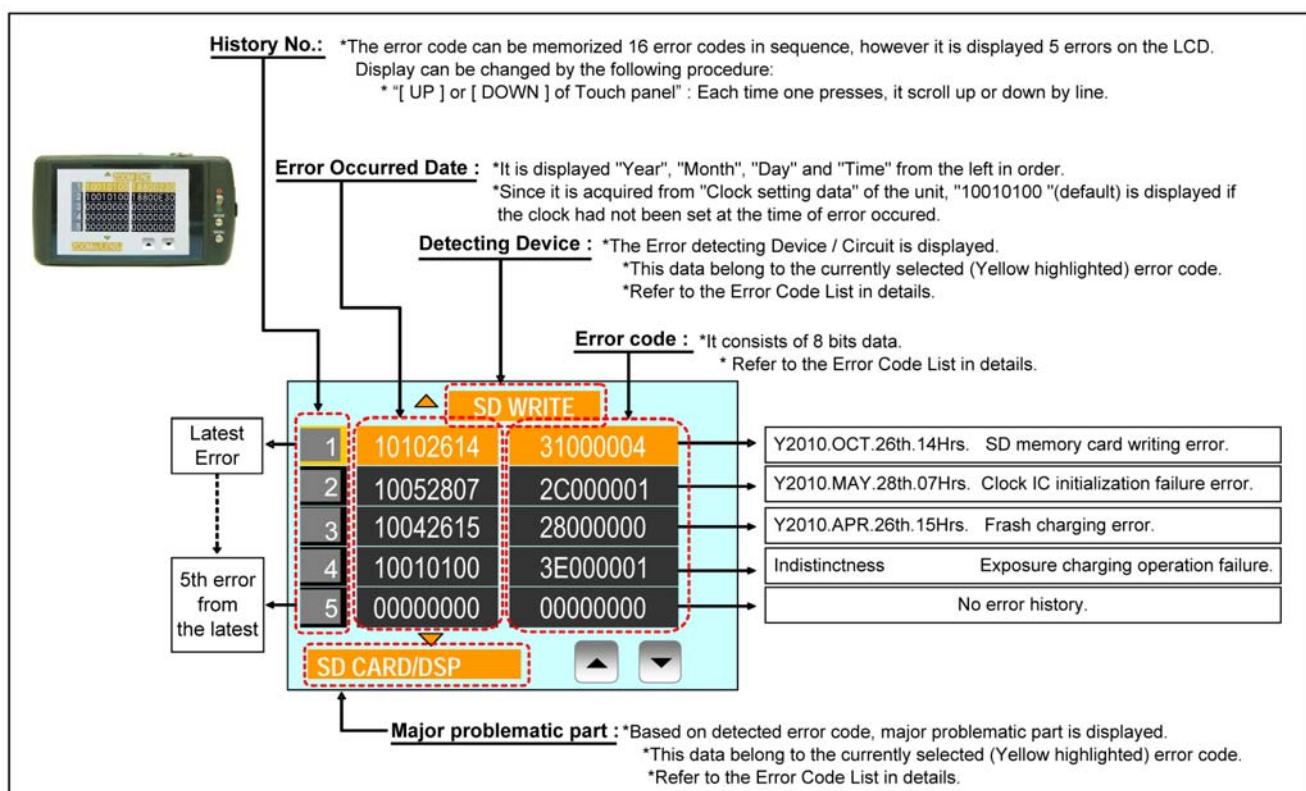

Example of Error Code Display

• 3. Error Code List

The error code consists of 8 bits data and it shows the following information.

| Attribute | Main item | Sub item | Error code | | Contents (Upper line) Problematic Part & Check point (Lower line) | Error Indication | | | |
|--------------|----------------|-------------|-------------|------------|---|------------------|--------------------------|--|--|
| | | | High 4 bits | Low 4 bits | | Detecting device | Problematic Part/Circuit | | |
| LENS | Lens drive | OIS | 18*0 | 1000 | PSD (X) error. Hall element (X axis) position detect error in OIS unit. OIS Unit | OIS X | LENSu NG | | |
| | | | | 2000 | PSD (Y) error. Hall element (Y axis) position detect error in OIS unit. OIS Unit | OIS Y | | | |
| | | | | 3000 | GYRO (X) error. Gyro (IC7301: X axis) detect error on Flash Top P.C.B.. IC7301 (Gyro element) or IC6001 (VENUS FHD) | GYRO X | GYRO NG | | |
| | | | | 4000 | GYRO (Y) error. Gyro (IC7201: Y axis) detect error on Sub Operation FPC P.C.B.. IC7201 (Gyro element) or IC6001 (VENUS FHD) | GYRO Y | | | |
| | | | | 5000 | MREF error (Reference voltage error). IC9101 (SYSTEM) or IC6001 (VENUS FHD) | OIS REF | LENSSd/DSP NG | | |
| | | | | 6000 | Drive voltage (X) error. LENS Unit, LENS flex breaks, IC6001 (VENUS FHD) AD value error, etc. | OISX REF | LENSu/LENS FPC | | |
| | | | | 7000 | Drive voltage (Y) error. LENS Unit, LENS flex breaks, IC6001 (VENUS FHD) AD value error, etc. | OISY REF | | | |
| | | | | 0?10 | Collapsible barrel Low detect error (Collapsible barrel encoder always detects Low.) Mechanical lock, FP9005-(45) signal line or IC6001 (VENUS FHD) | ZOOM L | ZOOMm/LENSu | | |
| | | Zoom | | 0?20 | Collapsible barrel High detect error (Collapsible barrel encoder always detects High.) Mechanical lock, FP9005-(45) signal line or IC6001 (VENUS FHD) | ZOOM H | | | |
| | | | | 0?30 | Zoom motor sensor error. Mechanical lock, FP9005-(26), (29) signal line or IC6001 (VENUS FHD) | ZOOM ENC | | | |
| | | | | 0?40 | Zoom motor sensor error. (During monitor mode.) Mechanical lock, FP9005-(26), (29) signal line or IC6001 (VENUS FHD) | | | | |
| | | | | 0?50 | Zoom motor sensor error. (During monitor mode with slow speed.) Mechanical lock, FP9005-(26), (29) signal line or IC6001 (VENUS FHD) | | | | |
| | | | | 0?01 | HP High detect error (Focus encoder always detects High, and not becomes Low) Mechanical lock, FP9005-(45) signal line or IC6001 (VENUS FHD) | FOCUS L | LENS FPC/DSP | | |
| | | | | 0?02 | HP Low detect error (Focus encoder always detects Low, and not becomes High) Mechanical lock, FP9005-(45) signal line or IC6001 (VENUS FHD) | FOCUS H | | | |
| | | Focus | 18*1 | 18*1 | Power ON time out error. Lens drive system | LENS DRV | LENSu | | |
| | | | | 18*2 | Power OFF time out error. Lens drive system | | | | |
| Adj. History | Adj. History | OIS | 19*0 | 2000 | OIS adj. Yaw direction amplitude error (small) | OIS ADJ | OIS ADJ | | |
| | | | | 3000 | OIS adj. Pitch direction amplitude error (small) | | | | |
| | | | | 4000 | OIS adj. Yaw direction amplitude error (large) | | | | |
| | | | | 5000 | OIS adj. Pitch direction amplitude error (large) | | | | |
| | | | | 6000 | OIS adj. MREF error | | | | |
| | | | | 7000 | OIS adj. time out error | | | | |
| | | | | 8000 | OIS adj. Yaw direction off set error | | | | |
| | | | | 9000 | OIS adj. Pitch direction off set error | | | | |
| | | | | A000 | OIS adj. Yaw direction gain error | | | | |
| | | | | B000 | OIS adj. Pitch direction gain error | | | | |
| | | | | C000 | OIS adj. Yaw direction position sensor error | | | | |
| | | | | D000 | OIS adj. Pitch direction position sensor error | | | | |
| | | | | E000 | OIS adj. other error | | | | |
| HARD | VENUS A/D | Flash | 28*0 | 0000 | Flash charging error. IC6001-(C14) signal line or Flash charging circuit | STRB CHG | STRB PCB/FPC | | |
| | | | | 0001 | EEPROM read error IC6001 (VENUS FHD) | FROM RE | FROM | | |
| | | | | 0002 | EEPROM write error IC6001 (VENUS FHD) | FROM WR | FROM | | |
| | | | | 0005 | Firmware vension up error Replace the firmware file in the SD memory card. | (No indication) | (No indication) | | |
| | | | | 0008 | SDRAM error | | | | |
| | | | | 0009 | SDRAM Mounting defective | | | | |
| | SYSTEM | RTC | 2C*0 | 0001 | SYSTEM IC initialize failure error Communication between IC6001 (VENUS FHD) and IC9101 (SYSTEM) | SYS INIT | MAIN PCB | | |
| | | | | 0002 | RTC IC initialize failure error Communication between IC6001 (VENUS FHD) and IC9101 (SYSTEM) | RTC INIT | MAIN PCB | | |
| SOFT | CPU | Reset | 30*0 | 0001 | NMI reset Non Mask-able Interrupt (30000001-30000007 are caused by factors) | NMI RST | MAIN PCB | | |
| | | | | 0007 | | | | | |
| | Card | Card | 31*0 | 0001 | Card logic error | SD CARD | SD CARD/DSP | | |
| | | | | 0002 | SD memory card data line or IC6001 (VENUS FHD) | | | | |
| | | | | 0004 | Card physical error | | | | |
| | | | | 0005 | SD memory card data line or IC6001 (VENUS FHD) | SD WRITE | | | |
| | | | | 39*0 | Write error | | | | |
| | CPU, ASIC hard | Stop | 38*0 | 0005 | SD memory card data line or IC6001 (VENUS FHD) | INMEMORY | FROM | | |
| | | | | 0001 | Format error | | | | |
| | | | | 0002 | Camera task finish process time out. Communication between Lens system and IC6001 (VENUS FHD) | LENS COM | LENSu/DSP | | |
| | | | | 0100 | Communication between Lens system and IC6001 (VENUS FHD) | | | | |
| | | | | 0200 | File time out error in recording motion image IC6001 (VENUS FHD) | DSP | DSP | | |
| | | | | 0300 | File data cue send error in recording motion image IC6001 (VENUS FHD) | | | | |
| | | | | 0300 | Single or burst recording brake time out. | | | | |
| | Memory area | Memory area | 3A*0 | 0008 | USB work area partitioning failure USB dynamic memory securing failure when connecting | (No indication) | (No indication) | | |
| | | | | 0FFF | | | | | |
| | | | | 3B*0 | FLASHROM processing early period of camera during movement. | INIT | (No indication) | | |
| | | | | 3C*0 | Imperfect zoom lens processing Zoom lens | ZOOM | ZOOMm/LENSu | | |
| | Operation | Zoom | 35*0 | 0000 | Software error (0-7bit : command, 8-15bit : status) | DSP | DSP | | |
| | | | | 0001 | Though record preprocessing is necessary, it is not called. | | | | |
| | | | | 0002 | Though record preprocessing is necessary, it is not completed. | | | | |

Important notice about "Error Code List"

1) About "*" indication:

The third digit from the left is different as follows.

- In case of 0 (example: 18001000)

When the third digit from the left shows "0", this error occurred under the condition of INITIAL SETTINGS has been completed.

It means that this error is occurred basically at user side.

- In case of 8 (example: 18801000)

When the third digit from the left shows "8", this error occurred under the condition of INITIAL SETTINGS has been released.

(Example; Factory assembling-line before unit shipment, Service mode etc.)

It means that this error is occurred at service side.

2) About "?" indication: ("18*0 0?01" to "18*0 0?50"):

The third digit from the right shows one of the hexadecimal ("0" to "F") character.

• 4. How to exit from Error Code display mode:

Simply, turn the power off. (Since Error code display mode is executed under the condition of temporary cancellation of "INITIAL SETTINGS", it wake up with normal condition when turn off the power.)

NOTE:

The error code can not be initialized.

6.2. ICS (Indication of additional Camera Settings when picture was taken) function

1. General description

This unit is equipped with ICS (ICS: Indication of additional Camera Settings when picture was taken) function by playing back the concerned picture on the LCD display.

(This function is achieved by utilizing "maker note" data stored in Exif data area of recorded picture file.)

To proceed failure diagnosis, use this ICS function together with "displaying the recorded picture with picture information" function.

NOTE:

- The ICS function operates with a picture which is only taken with the same model. (It may not be displayed when the picture was taken with other model.)
- Since Exif data is not available after the picture is edited by PC, the ICS function may not be activated.

2. How to display

The ICS data is displayed by ordering the following procedure:

• Preparation:

1. Attach the Battery or AC Adaptor with a DC coupler to the unit.

NOTE:

Press the [MODE] button, and then touch the [P] (Program AE mode) on the touch panel.

• Step 1. The temporary cancellation of "INITIAL SETTINGS":

Set the [REC]/[PLAYBACK] selector switch to "[REC] (Camera mark)".

While keep pressing "[WIDE] of Zoom lever" and [MODE] button simultaneously, turn the Power on.

• Step 2. Execute the ICS display mode:

Set the [REC]/[PLAYBACK] selector switch to [PLAYBACK].


Select the concerned picture.

Press the [MOTION PICTURE] button, [MODE] button and [MENU] button simultaneously.

Press the [MODE] button, 3 times.

The display condition is changed as shown below when the [MODE] button is pressed.

Code display → Code + Picture display (1) → Code + Picture display (2) → ICS display → Code display

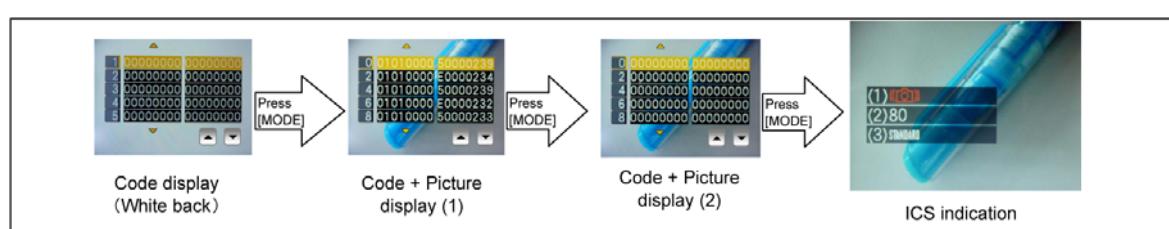

3. How to read

(1). Jitter alert was displayed or not:

This part shows that the "Jitter alert" mark was displayed or not when the picture has just before been taken.

- +With "Jitter alert" mark : The "Jitter alert" mark was displayed.
- +Without "Jitter alert" mark: The "Jitter alert" mark was not displayed.


[About "Jitter alert" mark]

Due to lacking the enough light amount etc, shooting condition prone to make a "hand jitter", the "Jitter alert" mark is displayed.

[Reference Guide]

(Applicable settings : Normal picture mode, ISO100, WIDE edge, Flash OFF)

- +The "Jitter alert" mark is displayed when the shutter speed is 1/15th and below.

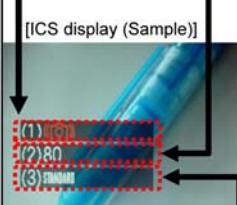

(2). ISO Sensitivity Setting condition:

This part shows that the "ISO Sensitivity" setting condition when the picture had been taken.

(Note: The [i ISO] is displayed when the "Intelligent ISO" was selected.)

For instance, when the recorded picture information shows [ISO100], it can be confirmed the ISO setting condition : [AUTO], [INTELLIGENT ISO] or [ISO 100](Fixed: set by user).

[Point for Confirmation]

*The symptom is "Picture with "hand jitter". Subject is not clearly stopped." in darker scene, does the picture was taken with lower ISO setting mode?

*The symptom is "Noisy picture. Rough picture image" in brighter scene, does the picture was taken with higher ISO setting mode?

(3). Color mode Setting condition:

This part shows that the "Color mode" setting condition when the picture had been taken.

[Point for Confirmation]

*The symptom is "Color is strange. The picture is bluish (Yellowish)", does the picture was taken with [SEPIA] / [COOL] / [WARM] settings?

NOTE: As for the symptom related with the color, confirm the picture information which is displayed in normal playback screen as well.

(In normal playback screen, the setting condition of "White balance" and "WB Adjustment" can be confirmed.)

Normal playback screen
(Recorded picture with information)



*In playback mode, the picture information is displayed when pressing the [MODE] button.
(It can be confirmed at user as well.)

*Use this indication together with ICS function

[Reference Guide : Settings "When taking picture"]

<ISO SENSITIVITY>

*This allows the sensitivity to light (ISO sensitivity) to be set. Setting to a higher figure enables pictures to be taken even in dark places without the resulting pictures coming out dark.

*In this unit, it can be set one of the [AUTO], [i ISO], [100], [200], [400], [800] and [1600] in "Normal shooting" mode.

*When setting to [AUTO], the ISO sensitivity is automatically adjusted to a maximum of [ISO400] according to the brightness.

(It can be adjusted to a maximum of [ISO1600] when using the flash.)

*When setting to [iISO], ISO sensitivity will adjust automatically depending on brightness within the maximum setting of [ISO1600].

*The ISO sensitivity will be set to [AUTO] when recording motion pictures. Also, [ISO LIMIT SET] will not work.

*The higher the value set for the ISO sensitivity, the more the jitter is reduced but the greater the amount of picture noise.

*Depending on the brightness and how fast the subject is moving, jitter may not be avoided even if [iISO] is selected.

*Movements may not be detected when a moving subject is small, when a moving subject is at the edge of the screen or when a subject moved at the very moment when the shutter button was pressed fully.

*The setting is fixed to [iISO] in the following cases.

-In [SPORTS], [BABY1]/[BABY2], [PET] and [FLASH BURST] in Scene Mode

*You cannot select [iISO] in Shutter-Priority AE Mode and Manual Exposure Mode.

*If picture noise becomes a problem, we recommend that you take pictures after lowering the ISO sensitivity level, increasing the setting for [NOISE REDUCTION] under [PICT. ADJ.], or lowering the setting for each of the items other than [NOISE REDUCTION].

| ISO sensitivity | 100 | 1600 |
|----------------------------------|--|-----------------|
| Recording location (recommended) | When it is light (outdoors) | When it is dark |
| Shutter speed | Slow | Fast |
| Noise | Less | Increased |
| ISO sensitivity | Settings | |
| AUTO | The ISO sensitivity is automatically adjusted according to the brightness. | |
| [iISO] (Intelligent) | The ISO sensitivity is adjusted according to the movement of the subject and the brightness. | |
| 100/200/400/800/1600 | The ISO sensitivity is fixed to various settings. | |







4. How to exit:

Simply, turn the power off. (Since ICS function is executed under the condition of temporary cancellation of "INITIAL SETTINGS", it wake up with normal condition when turn off the power.)

7 Service Fixture & Tools

7.1. Service Fixture and Tools

The following Service Fixture and tools are used for checking and servicing this unit.
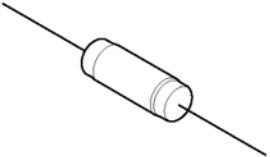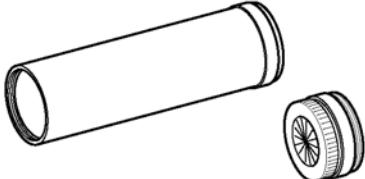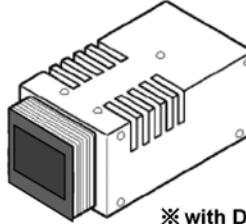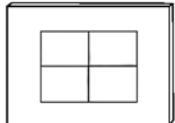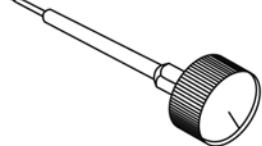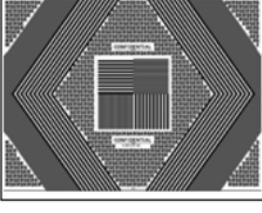
| | | |
|--|--|---|
| Resistor for Discharging ERG5SJ102 | Infinity Lens (with Focus Chart) VFK1164TCM02 | LIGHT BOX RFKZ0523 |
|  An equivalent type of Resistor may be used. |  * VFK1164TCM03 can be used. * RFKZ0422 can be used. |  ※ with DC Cable * VFK1164TDVLB can be used. |
| TR Chart RFKZ0443 | Lens Cleaning Kit (BK) VFK1900BK | Grease (for lens) RFKZ0472 |
|  |  * Only supplied as 10 set/box. |  |
| Screw locking glue RFKZ0573 | Driver (for optical axis adjustment) RFKZ0569 | Optical axis adjustment chart RFKZ0570 |
|  |  |  |
| Camera stand RFKZ033J | Torque Driver RFKZ0542 | |
|  |  | |

7.2. When Replacing the Main P.C.B.

After replacing the MAIN P.C.B., be sure to achieve adjustment.


The service software is available at "TSN Website". To download, click on "Support Information from NWBG/VDBG-AVC".

7.3. Service Position

This Service Position is used for checking and replacing parts. Use the following Extension cables for servicing.

Table S1 Extension Cable List

| No. | Parts No. | Connection | Form |
|-----|-----------|--|---------------|
| 1 | RFKZ0477 | FP9005 (MAIN) - LENS UNIT | 45PIN 0.3 FFC |
| 2 | VFK1951 | FP9004 (MAIN) - LCD UNIT | 39PIN 0.3 FFC |
| 3 | RFKZ0545 | PP9001 (MAIN) - PS8001 (FLASH TOP) | 34PIN B to B |
| 4 | VFK1974 | FP9501 (SUB OPERATION FPC UNIT) - LCD UNIT | 4PIN 0.5 FFC |

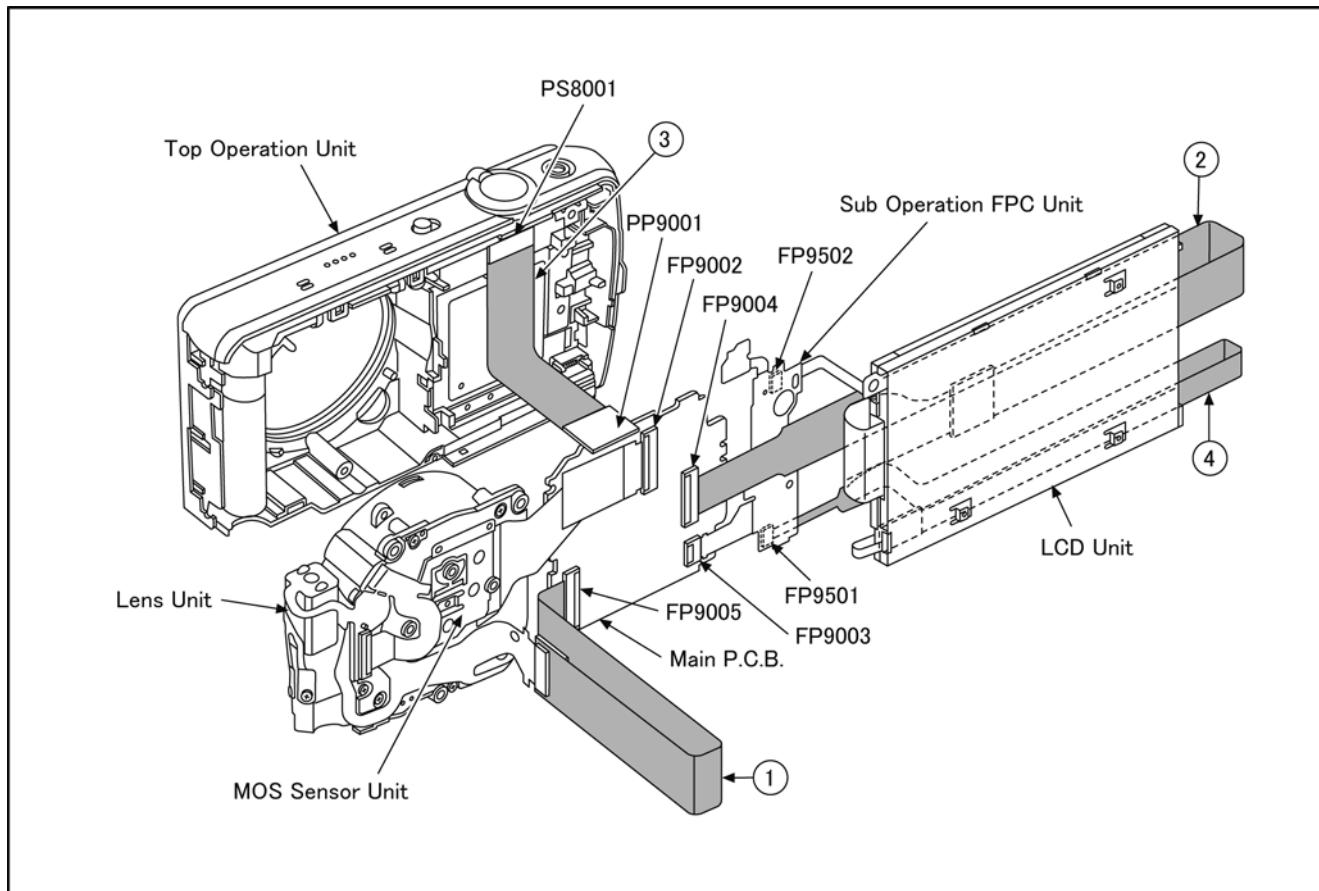

CAUTION-1. (When servicing FLASH TOP P.C.B.)

1. Be sure to discharge the E.capacitor on FLASH TOP P.C.B..

Refer to "HOW TO DISCHARGE THE E.CAPACITOR ON FLASH TOP P.C.B.".

The E.capacitor voltage is not lowered soon even if the AC Cord is unplugged or the battery is removed.


2. Be careful of the high voltage circuit on FLASH TOP P.C.B..
3. DO NOT allow other parts to touch the high voltage circuit on FLASH TOP P.C.B..

8 Disassembly and Assembly Instructions


8.1. Disassembly Flow Chart

This is a disassembling chart.

When assembling, perform this chart conversely.

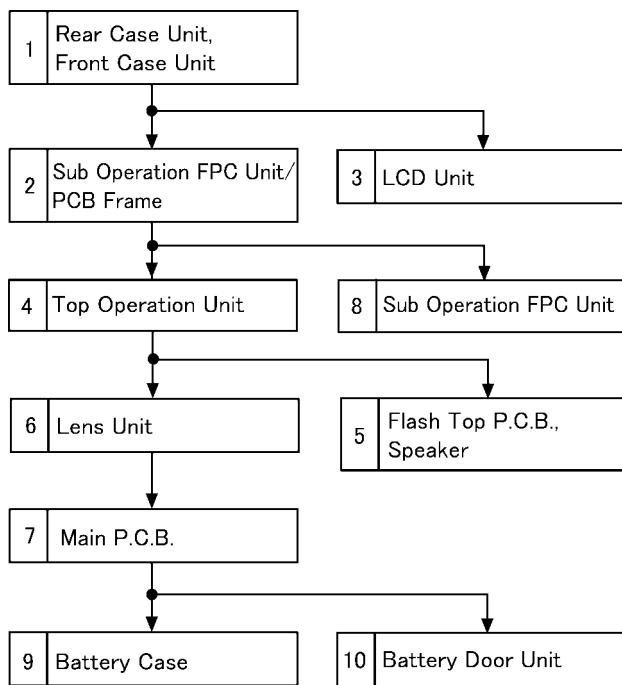

8.2. P.C.B. Location

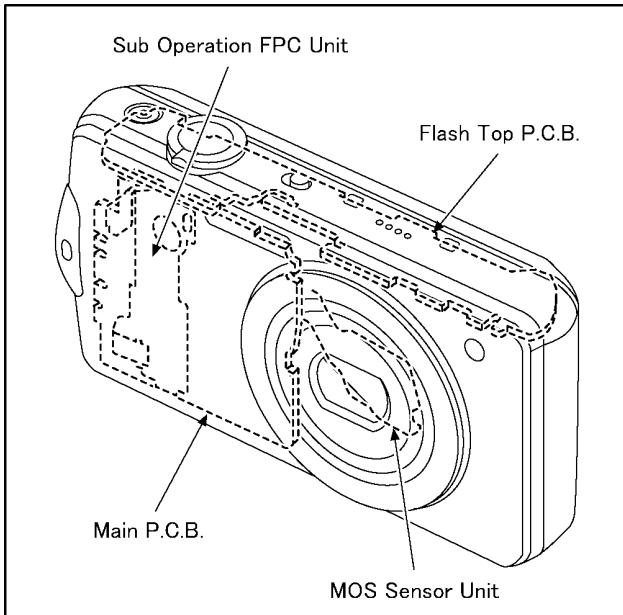


8.3. Disassembly Procedure

| No. | Item | Fig | Removal |
|-----|-----------------------------------|-----------|---|
| 1 | Rear Case Unit Front Case Unit | (Fig. D1) | Card Battery 6 Screws (A) Side Ornament R |
| | | | 2 Locking tabs 2 Hanging parts Rear Case Unit |
| | | | 1 Locking tab Front Case Unit |
| | | | FP9501(Flex) FP9502(Flex) 2 Locking tabs 3 Ribs FP9003(Flex) |
| | | | Sub Operation FPC Unit/PCB Frame |
| | | (Fig. D4) | 1 Screw (B) 3 Hanging parts FP9004(Flex) LCD Unit |
| | | | 3 Screws (C) Frame Plate Unit Tripod PS8001(Connector) Side Ornament L Top Operation Unit |
| | | | 2 Locking tabs AF Panel Light FP8001(Flex) 2 Screws (D) 3 Locking tabs MIC Unit Power Knob Guide Power Knob Flash Top P.C.B. Speaker |
| | | | Discharge of the capacitor NOTE: (When Installing) |
| | | | FP9002(Flex) FP9005(Flex) Lens Unit |
| 7 | Main P.C.B. | (Fig. D9) | 1 Screw (E) Sheet 1 Locking tab Main P.C.B. |
| 8 | Sub Operation FPC Unit | | 4 Locking tabs REC/PLAYBACK Selector Knob 2 Pins 4 Projection parts Sub Operation FPC Unit |
| 9 | Battery Case | | 2 Ribs Strap Holder 3 Locking tabs Battery Out Spring Battery Case |
| 10 | Battery Door Unit | | Battery Door Shaft Battery Door Spring Battery Door Unit |

8.3.1. Removal of the Rear Case Unit and Front Case Unit


NOTE:
When servicing and reassembling, remove the card and battery from the unit.

• Card • Screw(A) × 6
• Battery • Side Ornament R

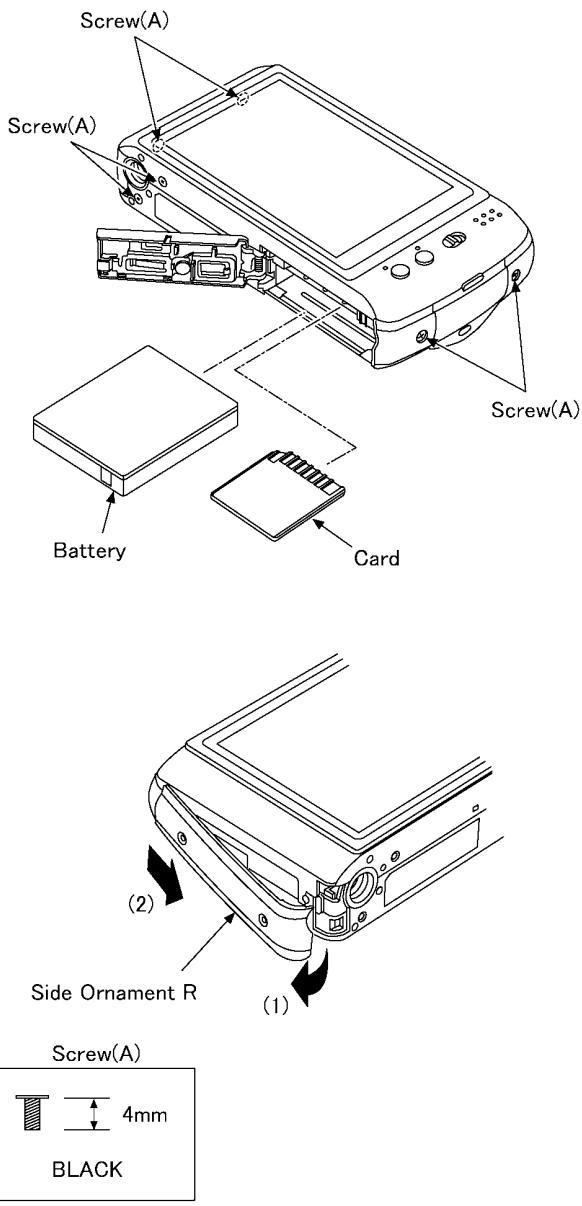


(Fig. D1)

8.3.2. Removal of the Sub Operation FPC Unit/PCB Frame

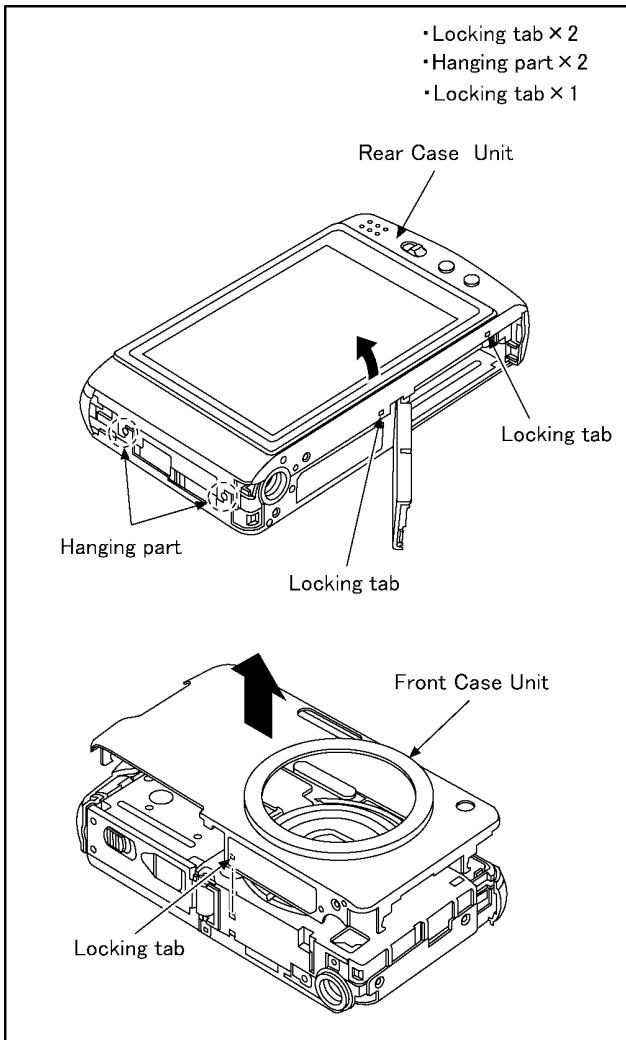


(Fig. D2)

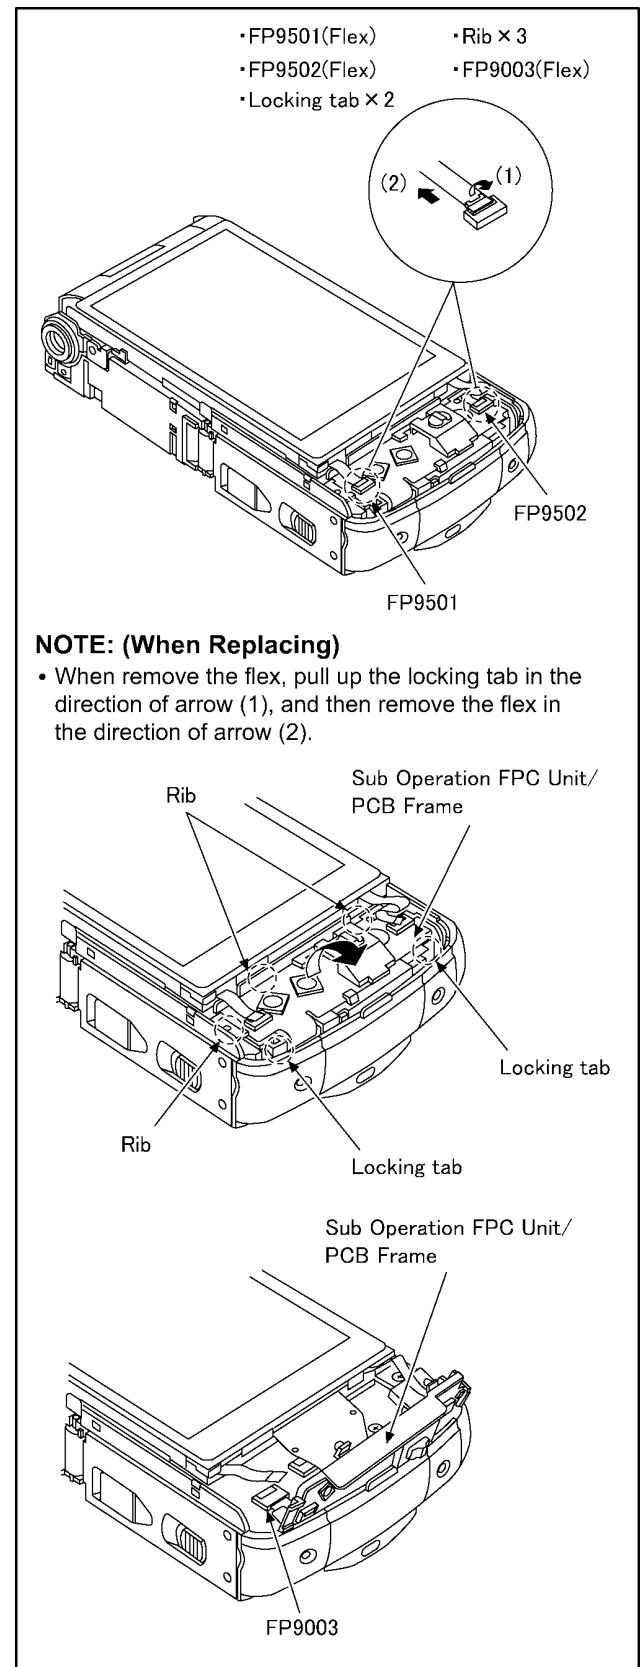


(Fig. D3)

8.3.3. Removal of the LCD Unit

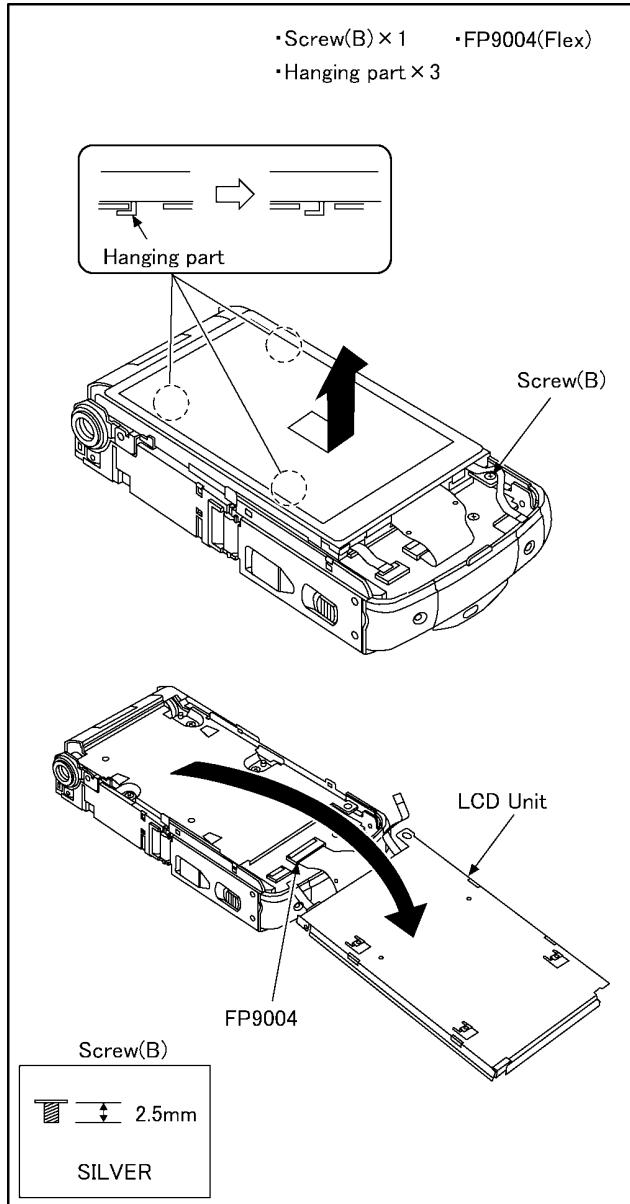

(Fig. D4)

8.3.4. Removal of the Top Operation Unit

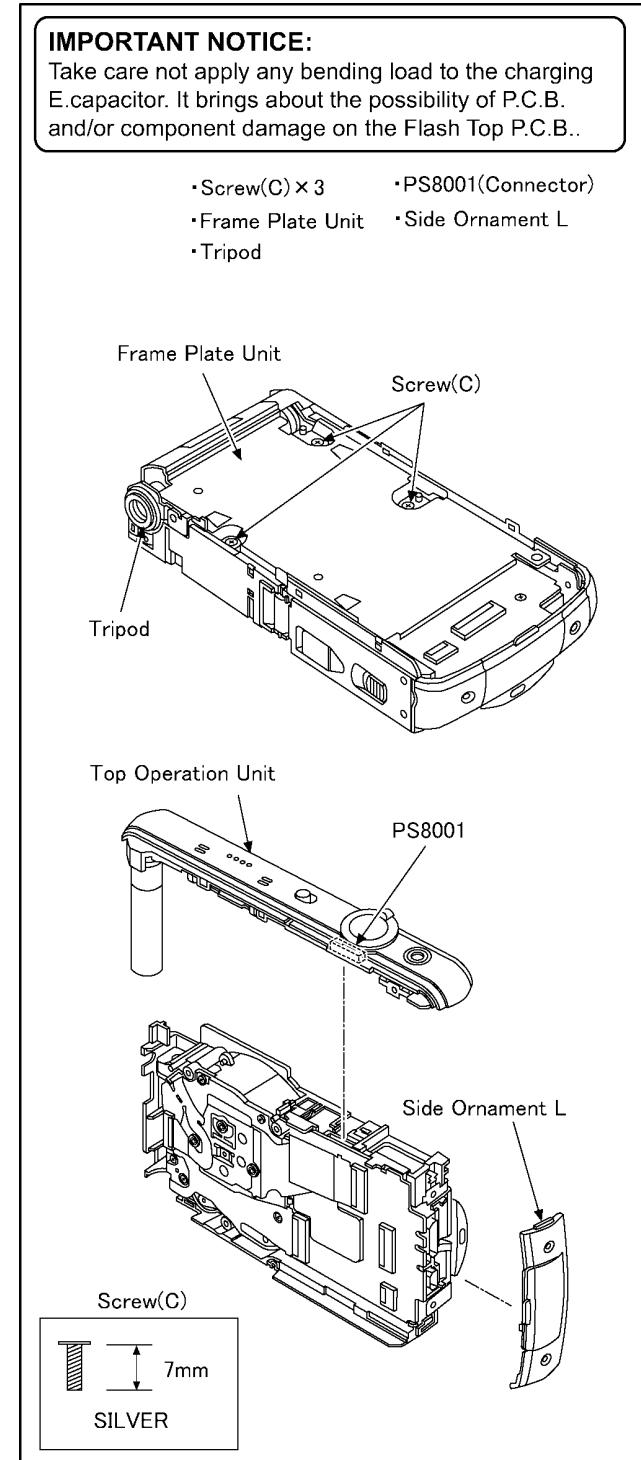




(Fig. D5)

8.3.5. Removal of the Flash Top P.C.B. and Speaker

IMPORTANT NOTICE:

Take care not apply any bending load to the charging E.capacitor. It brings about the possibility of P.C.B. and/or component damage on the Flash Top P.C.B..


- Locking tab × 2
- Screw(D) × 2
- Power Knob Guide
- AF Panel Light
- Locking tab × 3
- Power Knob
- FP8001(Flex)
- MIC Unit

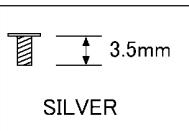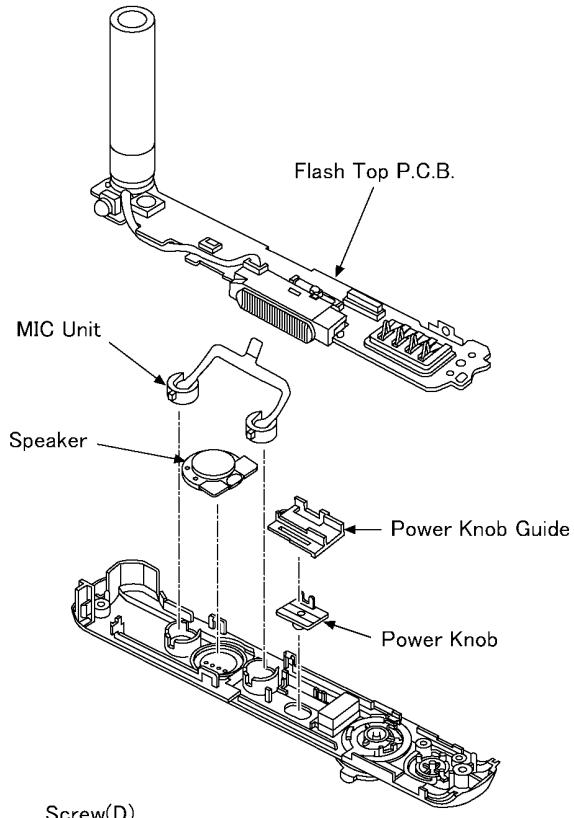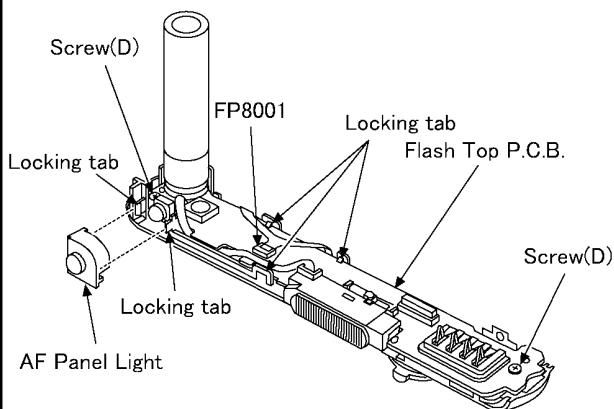

(Fig. D6)

IMPORTANT NOTICE:

Take care not apply any bending load to the charging E.capacitor. It brings about the possibility of P.C.B. and/or component damage on the Flash Top P.C.B..

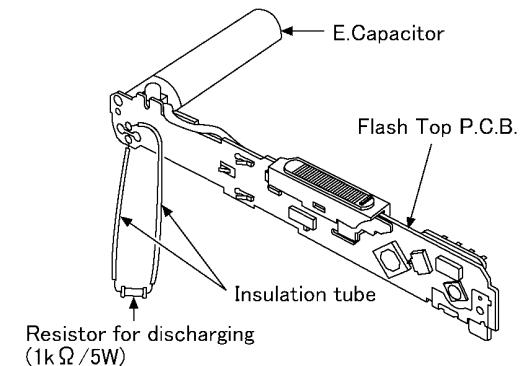


CAUTION

Be sure to discharge the E.capacitor on Flash Top P.C.B. before disassembling.

1. Remove the Flash Top P.C.B..
2. Put the insulation tube on the lead part of resistor (ERG5SJ102: 1kΩ/5W).
3. Put the resistor between both terminals of E.capacitor unit for approx. 5 seconds.


NOTE: (When Installing)

- Align the convex of power switch and the groove of power knob.

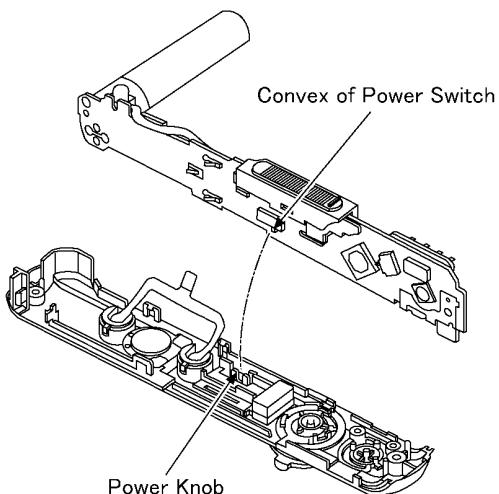


(Fig. D7)

8.3.6. Removal of the Lens Unit

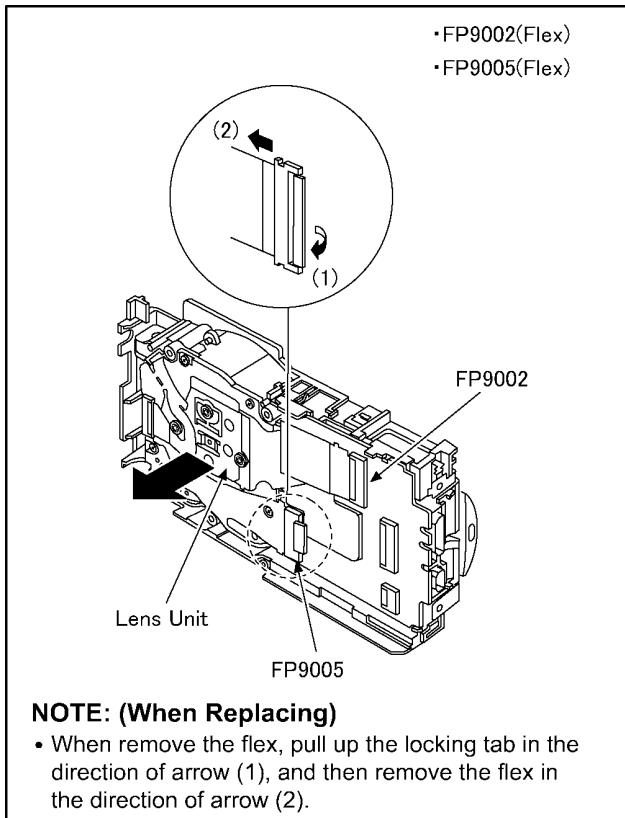


(Fig. D8)

8.3.7. Removal of the Main P.C.B.

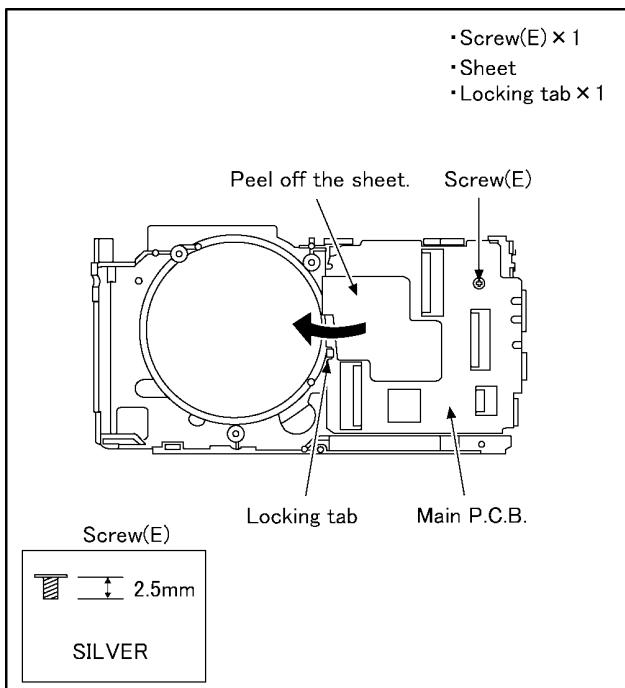


(Fig. D9)

8.3.8. Removal of the Sub Operation FPC Unit

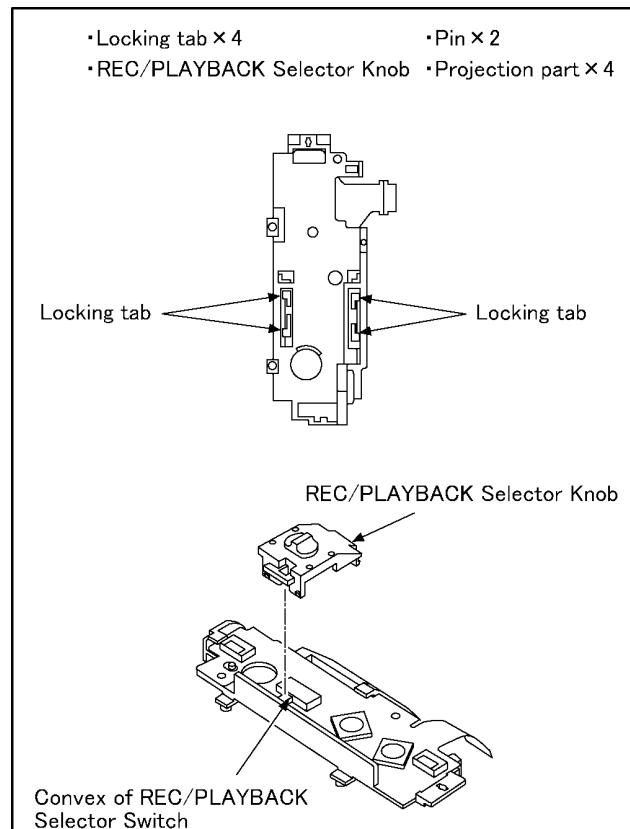

NOTE: (When Installing)

- Align the convex of REC/PLAYBACK selector switch and the groove of REC/PLAYBACK selector knob.

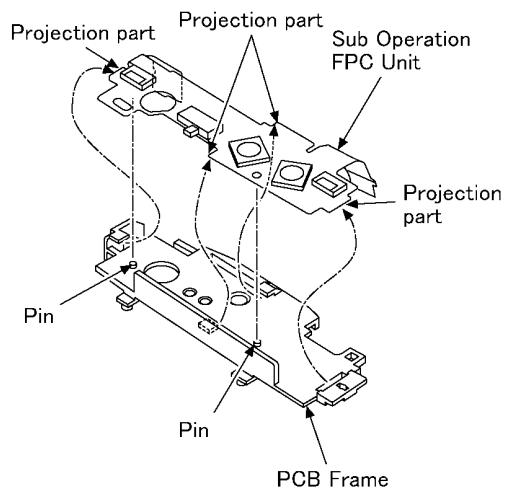


NOTE: (When Replacing)


- Take care not to damage the flex.

(Fig. D10)

8.3.9. Removal of the Battery Case

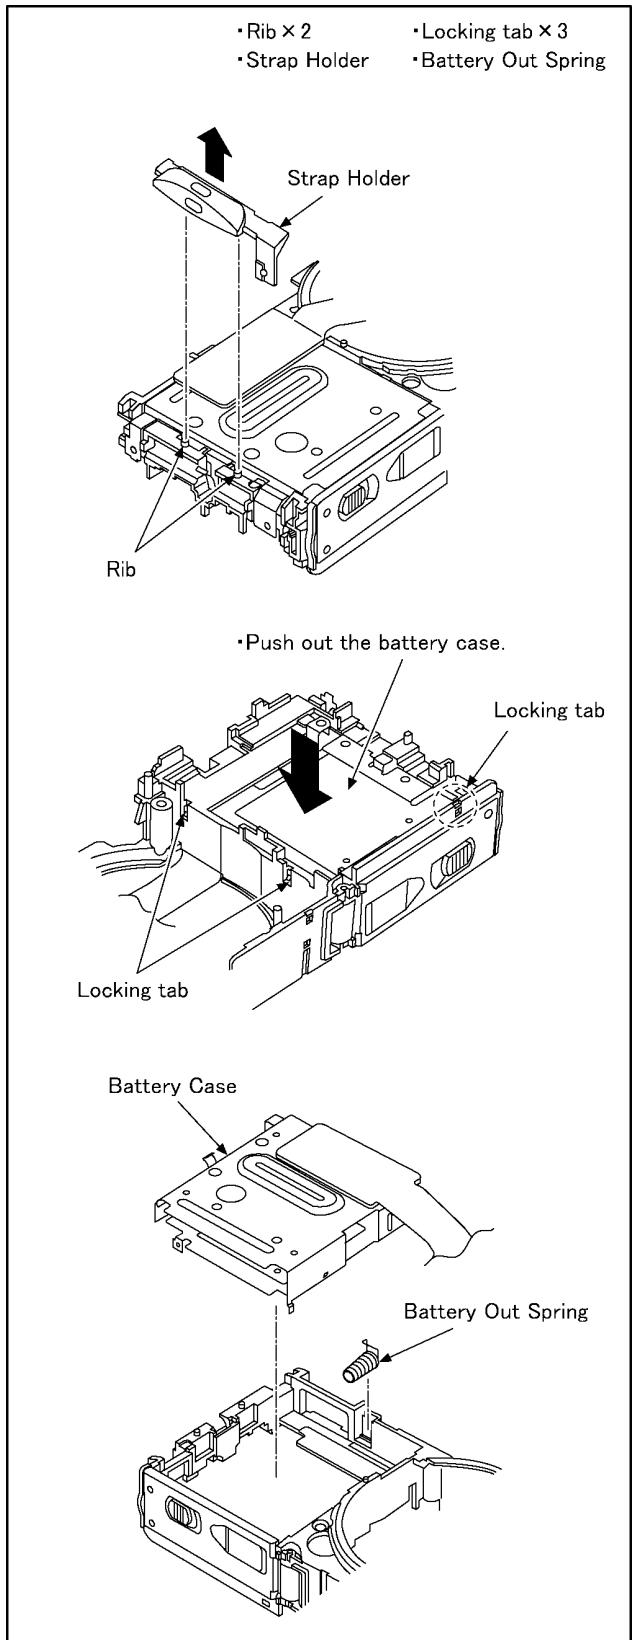

8.3.10. Removal of the Battery Door Unit

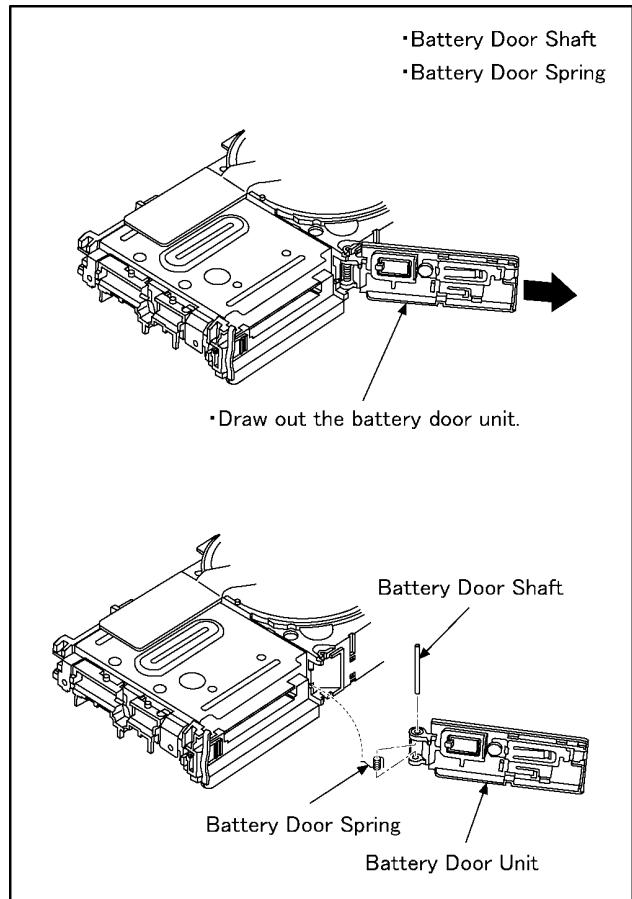

(Fig. D12)

NOTE: (When Installing)

Make sure to confirm the following points when installing:

- The Screw is tightened enough.
- Installing conditions are fine. (No distortion, no abnormal space.)
- No dust and/or dirt on Lens surfaces.
- LCD image is fine. (No dust and dirt on it, and no gradient images.)

(Fig. D11)


8.4. Lens Disassembly Procedure

Precaution:

1. Do not remove the MOS sensor unit when disassembling or re-assembling the lens in order to maintain it clean. The screw fitting the MOS sensor unit to the master flange unit is fixed by the screw locking glue with the adjustment of the installation angle of the MOS sensor unit against the lens (optical tilt adjustment) finished. When remove it, refer to item "8.6.".
2. Keep dust or dirt away from the lens. To remove dirt or dust from the lens, blow with dry air.
3. Do not touch the lens surface.
4. Use lens cleaning KIT (VFK1900BK).
5. Apply grease (RFKZ0472) as shown on "THE APPLICATION OF GREASE METHOD" in the figure.
6. The fixed frame unit, drive frame unit, penetration cam frame unit, cam frame unit and direct frame should be replaced as a unit.


8.4.1. Removal of the Zoom Motor and Lens FPC P.C.B. Unit

1. Remove the Connector.
2. Remove the 1 lock (A).
3. Remove the 7 solders (A).
4. Unscrew the 2 screws (A).
5. Remove the zoom motor to the direction of arrow (1).
6. Remove the lock (A) and lock (B).
7. Unscrew the 1 screw (B).
8. Remove the photo sensor.
9. Remove the 4 solders (B).
10. Remove the lens FPC P.C.B. unit to the direction of arrow (2).

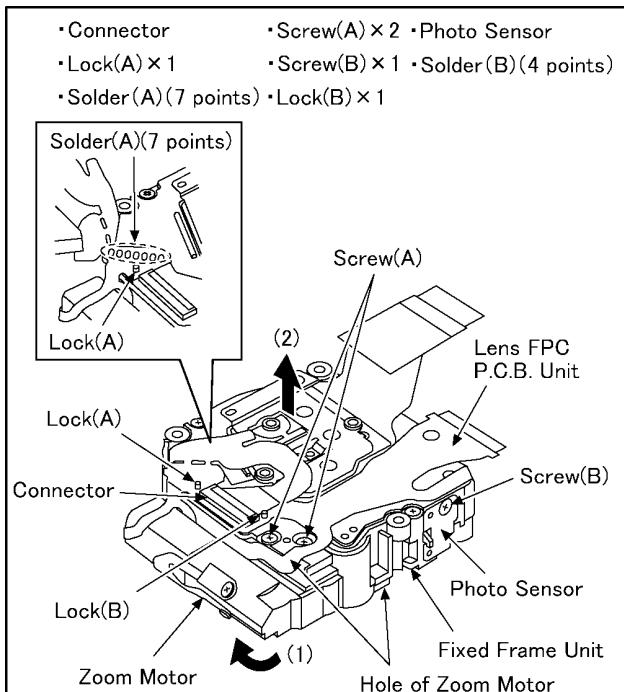


NOTE: (When Installing)

- Align the convex of fixed frame unit and hole of zoom motor, and then install them.

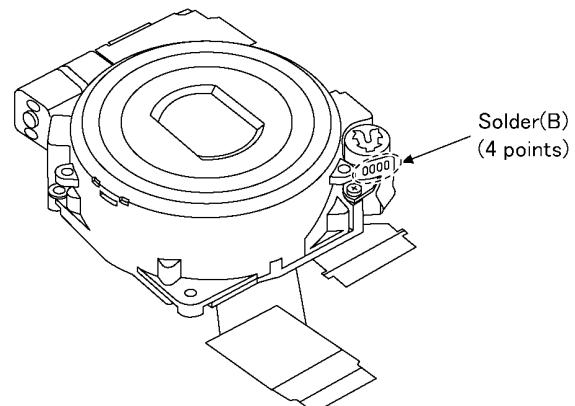


NOTE: (When Replacing)

- Take care not to damage the flex.

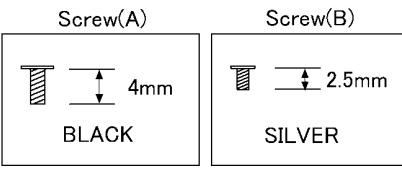

8.4.2. Removal of the Master Flange Unit

1. Unscrew the 4 screws (C).
2. Remove the master flange unit.

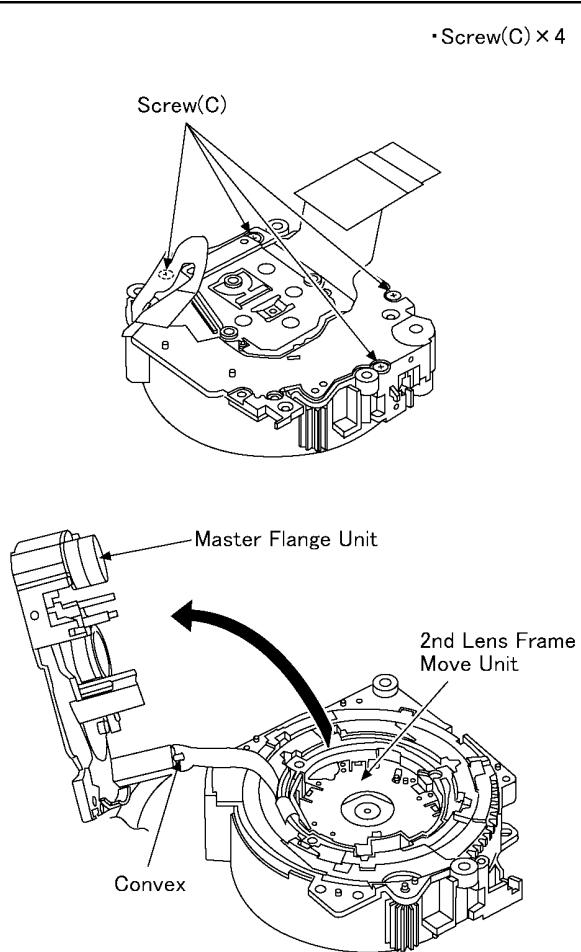


NOTE: (When Replacing)

- Remove the flex of 2nd lens frame move unit from convex of the master flange unit.
- Take care not to damage the flex.

NOTE: (When Installing)

- Refer to "THE APPLICATION OF GREASE METHOD" when installing the master flange unit.

Screw(C)

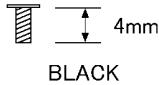


8.4.3. Removal of the Cam Frame Unit/ Direct Frame/1st Lens Frame Unit/ 2nd Lens Frame Move Unit

1. Push the cam frame unit from the lens front side in the direction of arrow, and then remove the unit of cam frame unit/direct frame/1st lens frame unit/2nd lens frame move unit from the fixed frame unit/drive frame unit/penetration cam frame unit.

■ CAUTION

- Fixed Frame Unit/Drive Frame Unit/Penetration Cam Frame Unit/Cam Frame Unit/Direct Frame cannot exchange single part because of original performance maintenance.
- Necessary unit exchange by using the repair parts (Fixed/Drive/Cam Frame Unit).

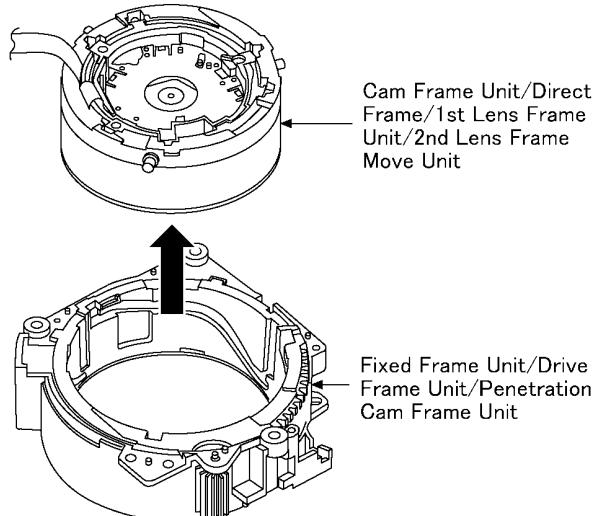

NOTE: (When Replacing)


- Take care not to damage the flex.
- When lift the cam frame unit/direct frame/1st lens frame unit/2nd lens frame move unit, take care not to put fingerprint of the lens.

8.4.4. Removal of the Direct Frame/1st Lens Frame Unit/2nd Lens Frame Move Unit

1. Push the 1st lens frame unit from the lens front side in the direction of arrow, and then remove the unit of direct frame/1st lens frame unit/2nd lens frame move unit from the cam frame unit.

■ CAUTION

- Fixed Frame Unit/Drive Frame Unit/Penetration Cam Frame Unit/Cam Frame Unit/Direct Frame cannot exchange single part because of original performance maintenance.
Necessary unit exchange by using the repair parts (Fixed/Drive/Cam Frame Unit).

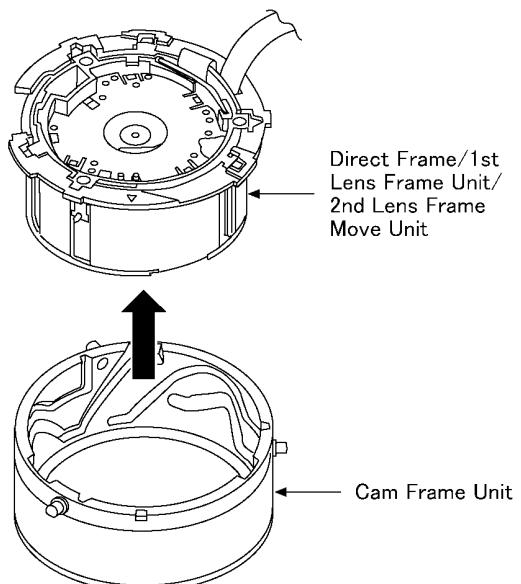

NOTE: (When Replacing)


- Take care not to damage the flex.
- When lift the direct frame/1st lens frame unit/2nd lens frame move unit, take care not to put fingerprint of the lens.

8.4.5. Removal of the 1st Lens Frame Unit/2nd Lens Frame Move Unit

1. Detach the shutter flex from 2 convexes of direct frame and pull it up.
2. Push the 1st lens frame unit from the lens front side in the direction of arrow, and then remove the unit of 1st lens frame unit/2nd lens frame move unit from the direct frame.


■ CAUTION

- Fixed Frame Unit/Drive Frame Unit/Penetration Cam Frame Unit/Cam Frame Unit/Direct Frame cannot exchange single part because of original performance maintenance.
Necessary unit exchange by using the repair parts (Fixed/Drive/Cam Frame Unit).

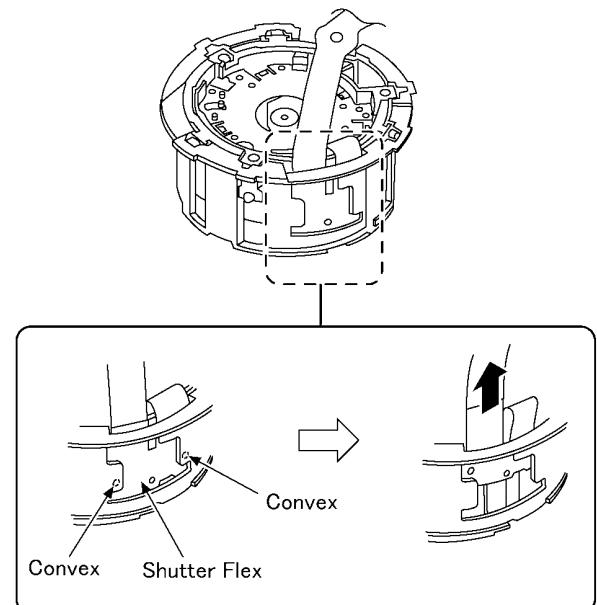

NOTE: (When Replacing)

- Take care not to damage the convex part.

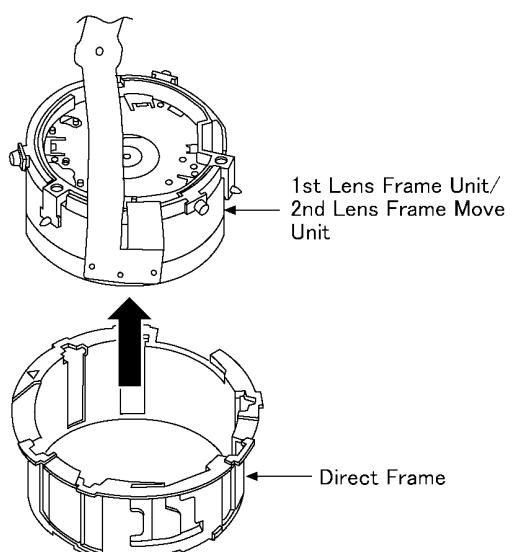


NOTE: (When Replacing)

- Take care not to damage the flex.
- When lift the 1st lens frame unit/2nd lens frame move unit, take care not to put fingerprint of the lens.

8.4.6. Removal of the 2nd Lens Frame Move Unit


1. Remove the 2nd Lens frame move unit in the direction of the arrow.

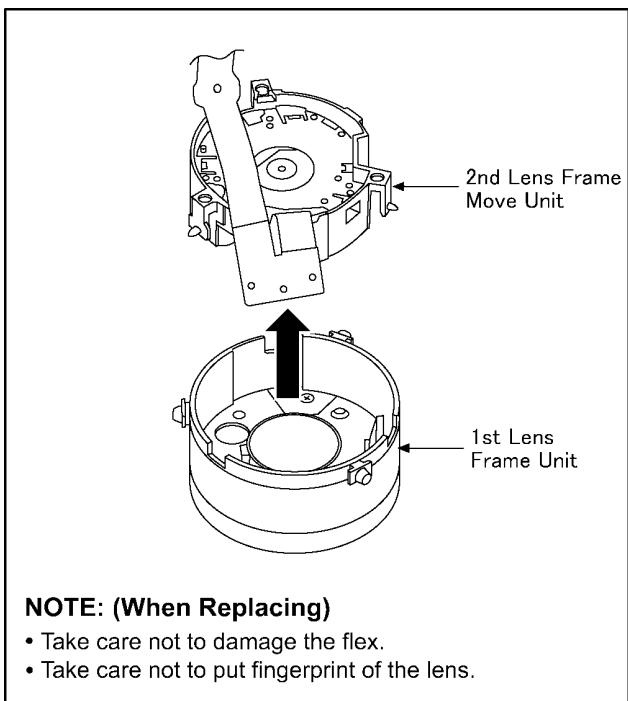


8.5. Assembly Procedure for the Lens

8.5.1. Phase alignment of the Drive Frame Unit and Penetration Cam Frame Unit

- Insert the shading sheet to drive frame unit.
(When insert the shading sheet, so that the luster side facing to subject side.)
- Align the Δ mark of penetration cam frame unit and the convex of drive frame unit, and then install the penetration cam frame unit to drive frame unit.

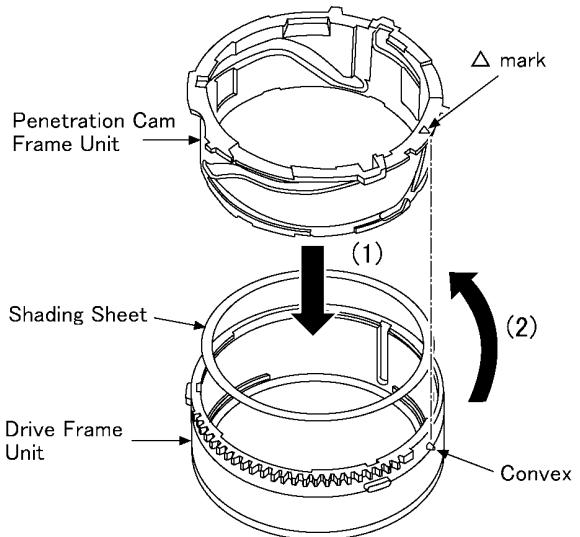


- Turn the penetration cam frame unit in the direction of arrow (2) to align the phase of the groove of penetration cam frame unit and the groove of drive frame unit (3 points).

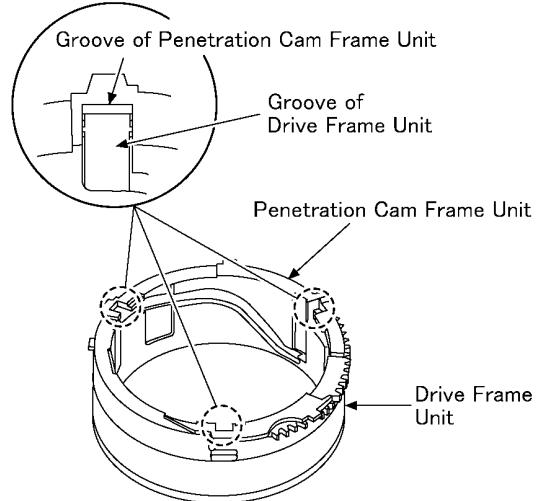

8.5.2. Phase alignment of the Drive Frame Unit/Penetration Cam Frame Unit and Fixed Frame Unit

- Align the Δ mark of penetration cam frame unit (the convex of drive frame unit) and the groove (small) of fixed frame unit, and then install the drive frame unit/penetration cam frame unit to fixed frame unit.

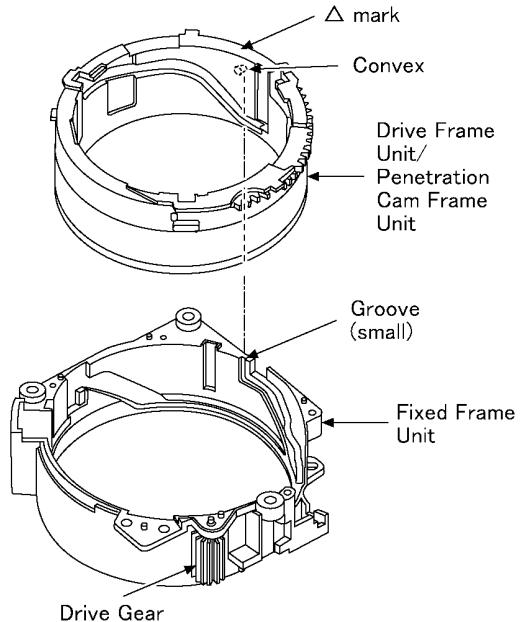


NOTE: (When Installing)

- With aligning the phase of the drive frame unit/penetration cam frame unit and the fixed frame unit, confirm the gear of drive frame unit is engaged with the gear of fixed frame unit firmly.

8.5.3. Install of the 2nd Lens Frame Move Unit

- Align the concave part of 2nd lens frame move unit and the barrier lever of 1st lens frame unit, and then install the 2nd lens frame move unit to 1st lens frame unit.

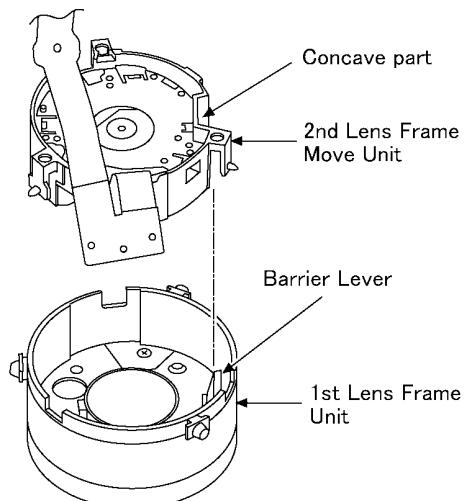


NOTE: (When Installing)


- Take care not to put fingerprint of the lens.

8.5.4. Install of the 1st Lens Frame Unit/2nd Lens Frame Move Unit

- Align the shutter flex of 1st lens frame unit/2nd lens frame move unit and the shutter flex part of direct frame and then install the 1st lens frame unit/2nd lens frame move unit to direct frame.

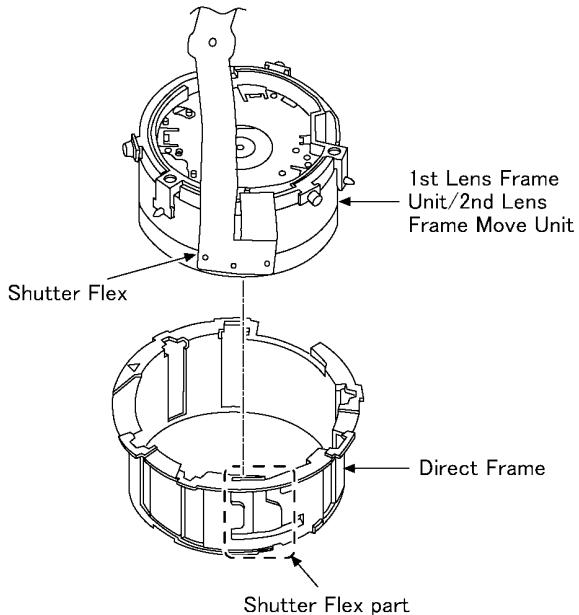

- Install the shutter flex to the direct frame and then insert the convex of direct frame to hole of shutter flex. (Confirm the shutter flex snaps.)

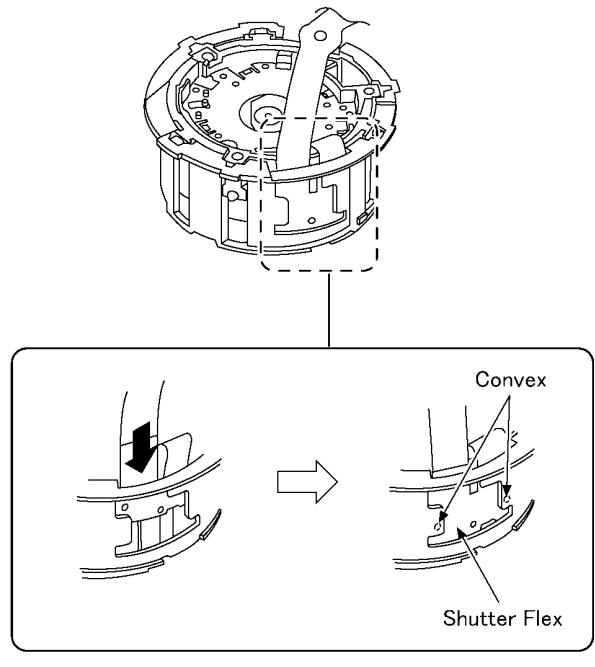


NOTE: (When Installing)

- Take care not to damage the flex.
- Take care not to damage the convex part.
- Take care not to put fingerprint of the lens.

8.5.5. Phase alignment of the Direct Frame/1st Lens Frame Unit/2nd Lens Frame Move Unit and Cam Frame Unit

- Align the Δ mark of direct frame/1st lens frame unit/2nd lens frame move unit and the concave part of cam frame unit and then install the direct frame/1st lens frame unit/2nd lens frame move unit to cam frame unit.

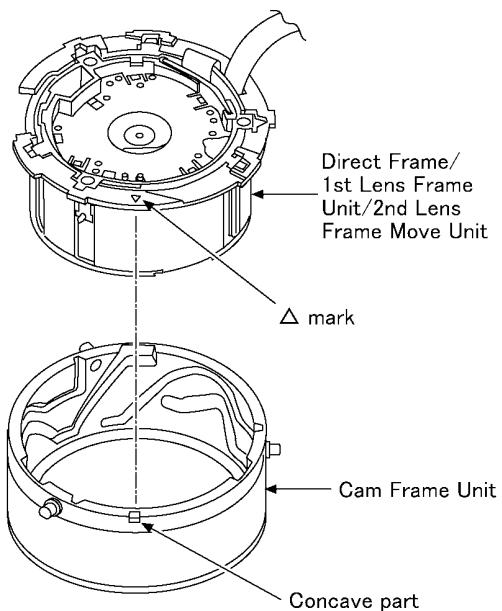


NOTE: (When Installing)

- Take care not to put fingerprint of the lens.

8.5.6. Phase alignment of the Cam Frame Unit/Direct Frame/1st Lens Frame Unit/2nd Lens Frame Move Unit and Fixed Frame Unit/Drive Frame Unit/Penetration Cam Frame Unit

- Align the Δ mark of cam frame unit/direct frame/1st lens frame unit/2nd lens frame move unit and the Δ mark of fixed frame unit/drive frame unit/penetration cam frame unit and then install the cam frame unit/direct frame/1st lens frame unit/2nd lens frame move unit to fixed frame unit/drive frame unit/penetration cam frame unit.

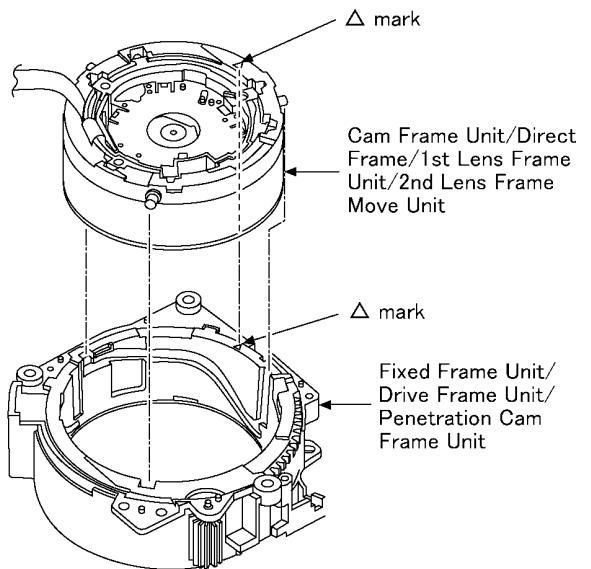


NOTE: (When Installing)


- Take care not to put fingerprint of the lens.

FRONT VIEW


- Install the 1st lens frame unit so that the "LEICA" character may become the position of the figure below.

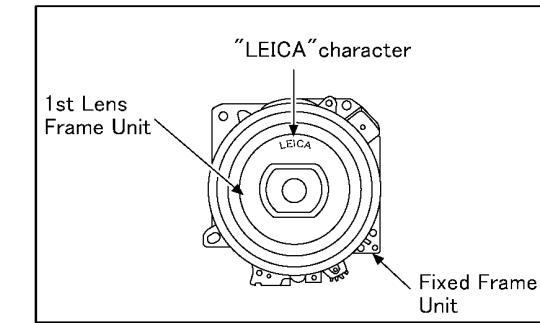

8.5.7. Install of the Master Flange Unit

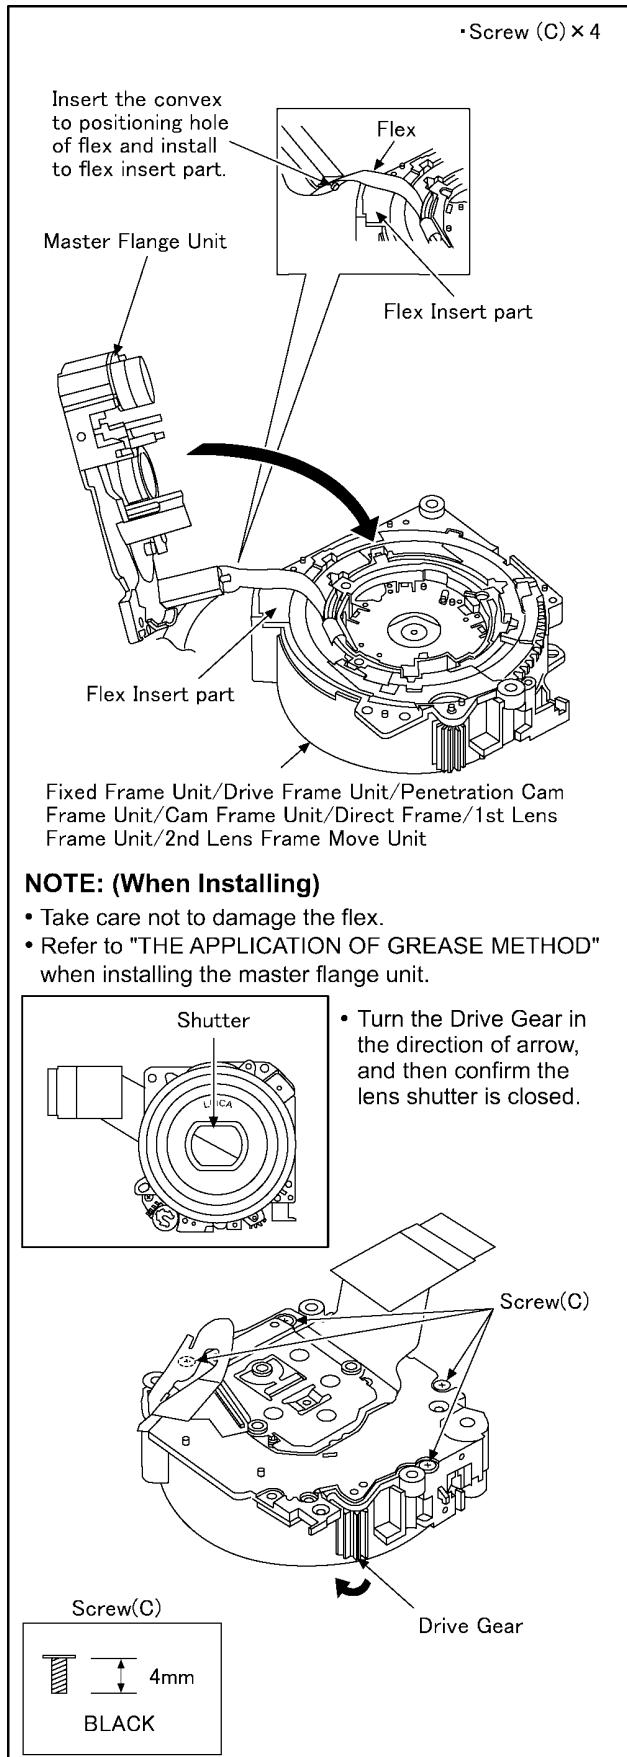

8.5.8. Install of the Lens FPC P.C.B. Unit and Zoom Motor

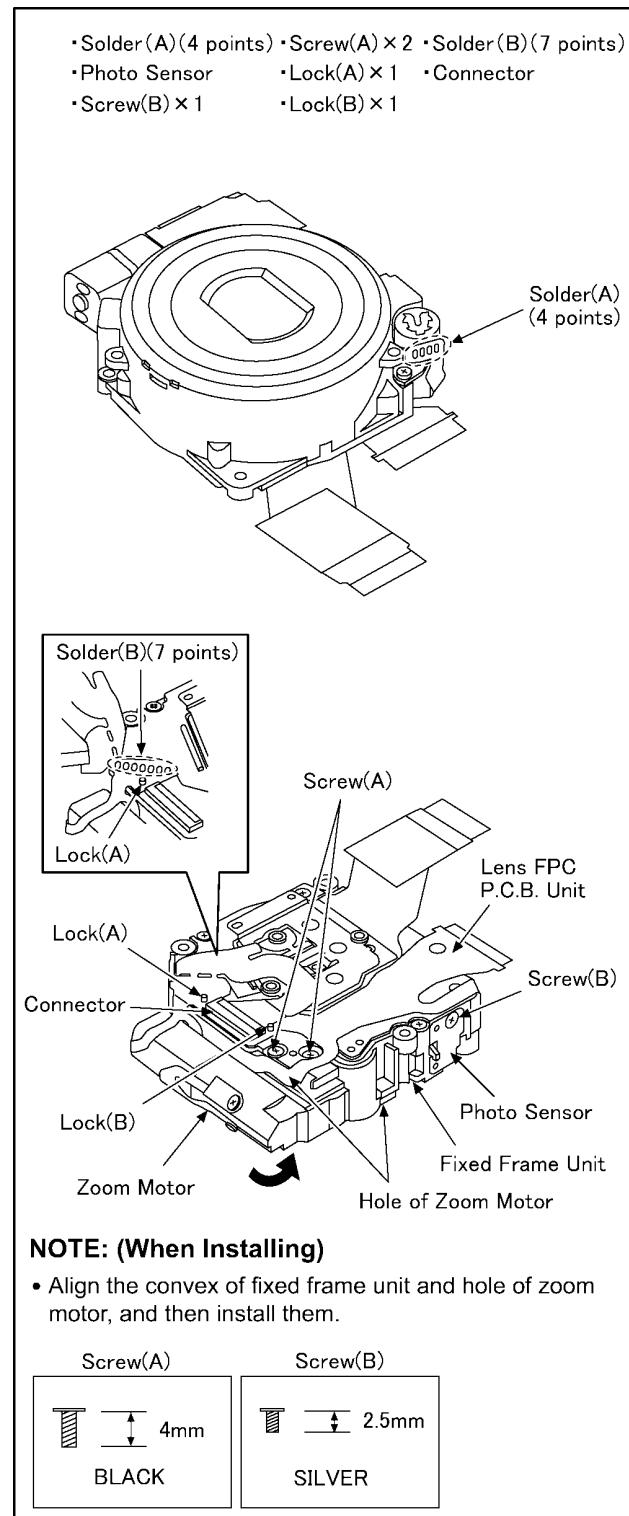

8.6. Removal of the MOS Sensor Unit

When remove the MOS sensor unit once (the screw(D) is loosened even a little), the optical tilt adjustment is required.

When loosen the screw(D), necessary the optical tilt adjustment at the end of assembling. (Refer to item "9.3.2.")

To prevent the MOS sensor unit from catching the dust and dirt, do not remove the MOS sensor unit except for replacing.


■ CAUTION

- The screw(D) is fixed by the screw locking glue with the optical tilt adjustment finished. When remove the MOS sensor unit, wipe the screw locking glue away carefully.
- Don't reuse the screw(D) that the screw locking glue adheres to keep dust or dirt away from the MOS sensor unit.

(When installing, take new screw(D).)

• Screw(D) × 3

MOS Sensor Unit

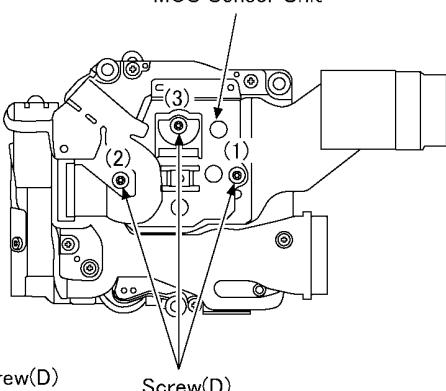

Screw(D)



SILVER
Special Screw
(T4 Torx type)

- Screws(1)(2) are for adjustment, screw(3) is for fix.

MOS Sensor Unit

Adjustment Spring Adjustment Spring



NOTE: (When Installing)

- Take new screw.
(Don't reuse the screw that the screw locking glue adheres.)
- Tighten the 3 special screws according to the following.
 - Set the bit of adjustment driver(RFKZ0569) to the torque driver(RFKZ0542).
 - [Screw order]: (3)→(1)→(2).
 - [Screw torque]: $7\pm2\text{ N}\cdot\text{cm}$.
- Be sure to execute the optical tilt adjustment with the screw (1) and (2).
- After the adjustment is finished, apply the screw locking glue as shown in the figure below.

- Apply the screw locking glue thinly on the head of screw to the sheet metal with a toothpick.
- Don't apply the screw locking glue where it is applied before disassembling.


(Example)

This is the case where the screw locking glue is applied to inside of the slash area.

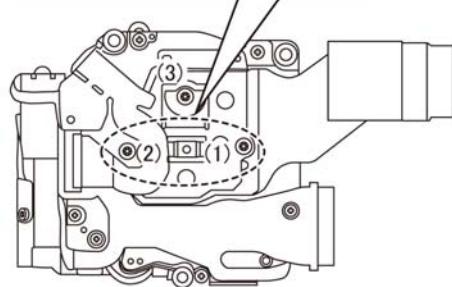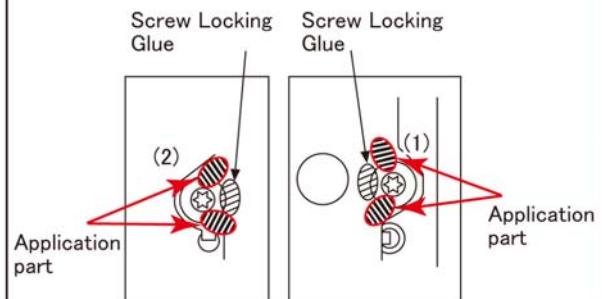

8.7. Removal of the Focus Motor

- Screw (E) × 1
- Solder (4 points)
- Photo Sensor
- Screw (F) × 1

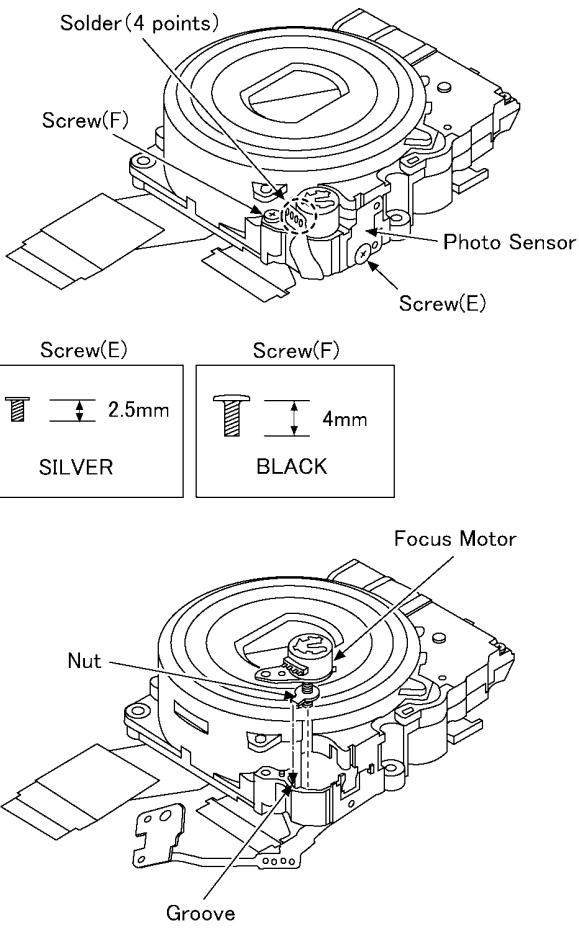

NOTE: (When Installing)


- Align the nut of focus motor to the groove, and then install them.
- Refer to "THE APPLICATION OF GREASE METHOD" when installing the focus motor.

8.8. The Application of Grease Method

The grease application parts of lens unit are as follows.
Apply grease additionally in the specified position if necessary.

When the grease is applied, use a toothpick and apply thinly.

- Focus motor (lead screw)/Fasten groove of nut/Guide pole
 - Grease: RFKZ0472
 - Amount of application: 2 - 4 mg
- Resin pin
 - Grease: RFKZ0472
 - Amount of application: 1 - 2 mg

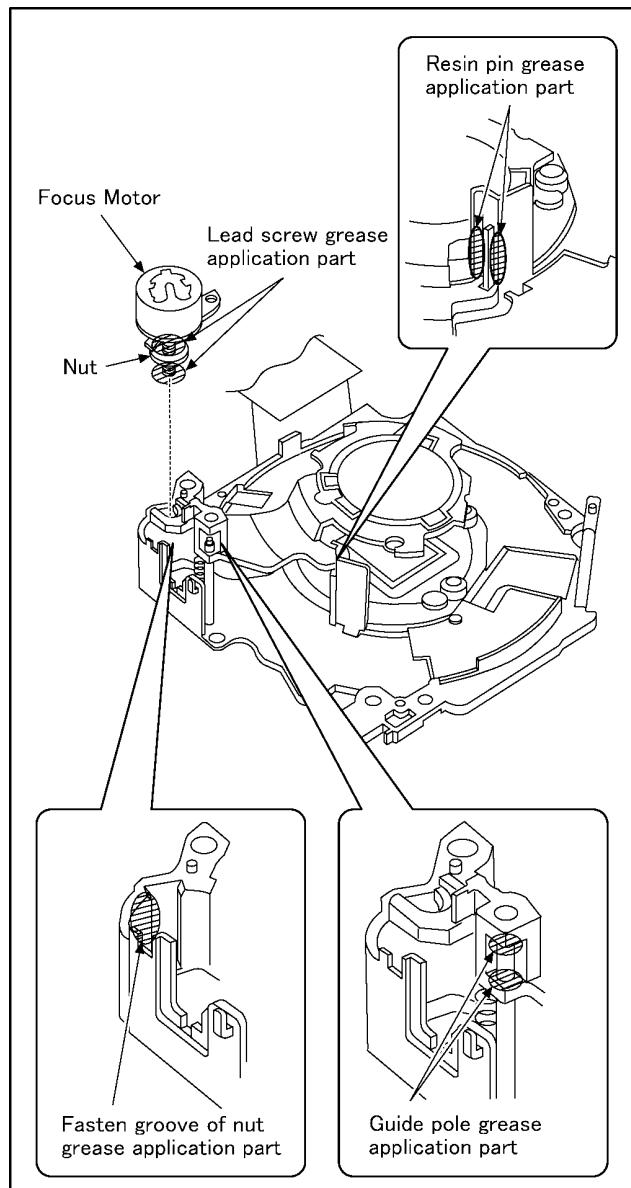

9 Measurements and Adjustments

9.1. Introduction

When servicing this unit, make sure to perform the adjustments necessary based on the part(s) replaced.

Before disassembling the unit, it is recommended to back up the camera data stored in flash-rom as a data file.

IMPORTANT NOTICE (After replacing the MAIN P.C.B.)

After replacing the MAIN P.C.B., it is necessary to use the “DIAS” software to allow the release of adjustment flag(s).

The Adjustment software “DIAS” is available at “TSN Website”. To download, click on “Support Information from NWBG/VDBG-
AVC”.

*DIAS (DSC Integrated Assist Software)

NOTE: (When replacing the Lens unit, Master flange unit and MOS SENSOR unit)

- When the MOS SENSOR unit is unavoidably removed for Lens unit, Master flange unit and MOS SENSOR unit replaced, an optical tilt adjustment is necessary after parts are exchanged.
- The adjustment software (DSC_Tilt) is necessary to execute an optical tilt adjustment.
- The adjustment software “DSC_Tilt” is available at “TSN Website”, therefore, access to “TSN Website” at “Support Information from NWBG/VDBG-
AVC”.

9.2. Before Disassembling the unit

9.2.1. Initial Setting Release

The cameras specification are initially set in accordance with model suffix (such as EB, EG, GK, GC, and so on.).

Unless the initial setting is not released, an automatic alignment software in the camera is not able to be executed when the alignment is carried out.

Note:

The initial setting should be again done after completing the alignment. Otherwise, the camera may not work properly.

Therefore as a warning, the camera display a warning symbol “! ” on the LCD monitor every time the camera is turned off.

Refer to the procedure described in “3.5.2 INITIAL SETTINGS” for details.

[How to Release the camera initial setting]

Preparation:

- Attach the Battery or AC Adaptor with a DC coupler to the unit.

(Since this unit has built-in memory, it can be performed without inserting SD memory card.)

1. Turn the Power on.
2. Press the [MODE] button, and then touch the [P] (Program AE mode) on the touch panel.
3. Turn the Power off.

(If the unit is other than [P] (Program AE mode) it does not display the initial settings menu.)

Step 1. Temporary cancellation of “INITIAL SETTINGS”:

Set the [REC]/[PLAYBACK] selector switch to “[REC] (Camera mark)”.

While keep pressing “[WIDE] of Zoom lever” and [MODE] button simultaneously, turn the Power on.

Step 2. Cancellation of “INITIAL SETTINGS”:

Set the [REC]/[PLAYBACK] selector switch to “[PLAYBACK]”.

Press “[WIDE] of Zoom lever” and [MODE] button simultaneously. (The camera will beep after this.)

Turn the Power off. (The warning symbol “! ” is displayed on the LCD monitor.)

9.2.2. Flash-Rom Data Backup

When trouble occurs, it is recommended to backup the Flash-rom data before disassembling the unit.

There are two kinds of Flash-rom data backup methods:

[ROM_BACKUP (Method of Non-PC backup)]

1. Insert the SD-card into the camera.
2. Set the camera to "Temporary cancellation of the initial settings".
3. Select the "SETUP" menu.

From the "SETUP" menu, select "ROM BACKUP".

NOTE:

This item is not listed on the customer's "SETUP" menu.

4. When this "ROM_BACKUP" item is selected, the following submenus are displayed.

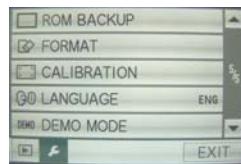


Fig.2-1



Fig.2-2


| Item | Function | Details |
|-----------------------|---|---|
| DSC → SD | Save all the DSC's Flash-rom data to SD-CARD | <p>*DSC's Flash-rom data is saved to the SD-CARD as a data file by the same format as the TATSUJIN software for the previous models. (DATA BACKUP)</p> <p>-File location: ROOT DIRECTORY in SD-CARD</p> <p>-File Name:</p> <p>1) User Setup Information data: <Model Number>U.txt [Example: DMC-FX66 : "FX66U.txt"]</p> <p>2) Optical Adjustment data: <Model Number>F.txt [Example: DMC-FX66 : "FX66F.txt"]</p> <p>*If the concerned file already exists, "OVERWRITE?" message is displayed.</p> |
| SDALL→ DSC (ID CHECK) | Write the all data to DSC's Flash-rom from SD-CARD | <p>*The backup data being stored in the SD card is transferred to DSC unit.</p> <p>*ID CHECK: When the model ID is different, data is not transferred.</p> |
| SDALL→ DSC (FORCE) | Write the all data to DSC's Flash-rom from SD-CARD | <p>*FORCE: Even if the model ID is different, data is transferred.</p> <p>※If the main PCB is replaced, select "SDALL → DSC (FORCE)".</p> |
| SDUSER→DSC (FORCE) | Only "User setup information" is written from the saved file in the SD-CARD to DSC's Flash-rom. | <p>*Only the user's "setup" setting condition is transferred to DSC unit.</p> <p>*FORCE: Even if the model ID is different, the data is transferred.</p> |
| !→LUMIX | Shipping set without initializing "User setup information" | <p>*Initial setting is executed without initializing the user's set up setting condition.</p> <p>※ The initial setting must be perform while the Self-timer LED is blinking.</p> <p>※ The picture data stored in the built-in memory of the DSC is not erased, with this operation.</p> |

[DSC Integrated Assist Software (Method of Using PC)]

Same as TATSUJIN software for previous models.

9.2.3. Light Box

If using VFK1164TDVLB Light Box, remove the lens connection ring by loosing three hexagon screws.

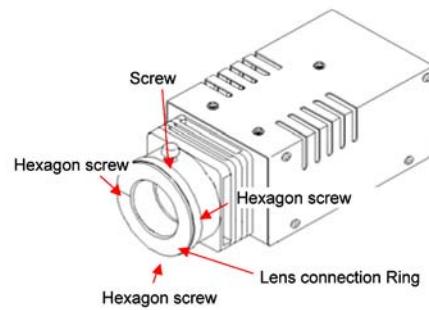

9.3. Details of Electrical Adjustment

9.3.1. How to execute the Electrical Adjustment

It is not necessary to connect the camera to a PC to perform adjustments.

“Flag reset operation” and “Initial setting operation” are required when carrying out the alignment, follow the procedure below.

9.3.1.1. Startup Electrical Adjustment mode

1. Release the initial settings.
2. Insert a recordable SD card.
(Without a SD card, the automatic adjustment can not executed.)
3. Procedure to set the camera into adjustment mode:
 - a. Turn the Power on.
 - b. Press the [MODE] button, and then touch the [P] (Program AE mode) on the touch panel.
 - c. Turn the Power off.
 - d. Turn the Power on pressing [MENU] and [MODE] simultaneously.
LCD monitor displays “SERVICE MODE”.(Refer to Fig. 3-1)

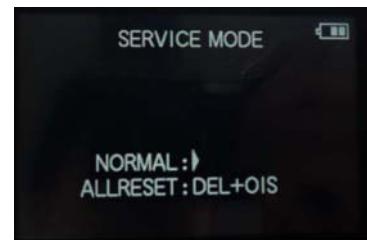


Fig.3-1

9.3.1.2. Status Adjustment Flag Setting

Reset (Not yet adjusted) the status flag condition.

1. After pressing the [MODE] button, the LCD monitor displays the Flag status screen (Refer to Fig.3-2)
2. Select item by pressing the Zoom lever. (Gray cursor is moved accordingly.)
3. Press the [MENU] button.

NOTE:

The selected item's flag has been changed from “F (green)” to “0 (yellow)”.

*Flag conditions:

F (green)

means that the alignment has been completed and the status flag condition is set. In this case, the flag condition should be reset, if you try to carry out the automatic alignment.

0 (yellow)

means that the alignment has been not “completed” and the status flag condition is “reset”. In this case, automatic alignment is available.

| | | | | |
|-------|-------|-------|-------|-------|
| MVR F | MLNF | WKI F | BK2 F | PWKF |
| TPC F | SHT F | COL F | --- | SHD F |
| KEY F | ISO F | BKI F | --- | COL F |
| MVP F | LIN F | DUT F | --- | BKI F |
| PZM F | WBLF | RES F | --- | DUT F |
| OIS F | STB F | ZOM F | --- | RES F |
| BF F | LED F | RS2 F | --- | STB F |
| IRS F | CLK F | PWK F | RESET | LED F |

[Flag display (less than farm Ver.1.06)]

| | | | |
|-------|-------|-------|-------|
| MVR F | MLNF | WKI F | PWKF |
| TPC F | SHT F | SHD F | BK2 F |
| KEY F | ISO F | COL F | --- |
| MVP F | LIN F | BKI F | --- |
| PZM F | WBLF | DUT F | --- |
| OIS F | STB F | RES F | --- |
| BF F | LED F | ZOM F | --- |
| IRS F | CLK F | RS2 F | RESET |

[Flag display (farm Ver.1.06 or more)]

Fig.3-2

- In case of setting the status flag into set condition again without completion of the alignment, the status flag should be SET by using PC, or UNDO by using ROM BACKUP function.

9.3.1.3. Execute Adjustment

(In case of “OIS Adjustment”)

1. Perform step “9.3.1.1.” to “9.3.1.2.”, to reset the OIS flag status “F” (Set) to “0” (Reset)
2. Press [MODE] button after Flag reset.
OIS Adjustment screen is displayed on the LCD panel.
(Refer to Fig.3-3)
3. Press the [Shutter] button. The adjustment will start automatically.
4. When the adjustment is completed successfully, adjustment report menu appears with Green OK on the LCD monitor. (Refer to Fig.3-4)



Fig.3-3

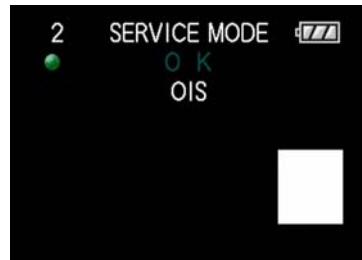


Fig.3-4

9.3.1.4. Attention point during Adjustment

1. Step “9.3.1.3.” procedure shows OIS adjustment as an example. To perform the adjustment, refer to the “9.3.2. Adjustment Specifications” table which shows key point for each adjustment.
2. Do not move the light box, the camera or the chart while adjusting. If one of these is moved accidentally, start the adjustment again.
3. Do not press any buttons/keys until the default menu (Fig.3-5) is displayed on the LCD monitor. Otherwise, adjustment data may not be stored properly.
4. If the adjustment is interrupted accidentally, the alignment data may not be properly saved in the Flash-rom.

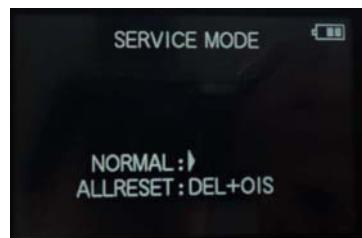


Fig.3-5

9.3.1.5. Finalizing the Adjustment

1. Several adjustment flags can be reset (“F” into “0”) at the same time. In this case, when the adjustment has been completed, the screen will change showing the adjustment for the next item until all reset items are completed.
Also, when the shutter button is pressed, the screen jump to the next adjustment item.
2. To cancel the adjustment mode while in the process of performing the adjustment, follow this procedures.
(1) Press [MENU] button.
NOTE:
 - If adjustment is cancelled with above procedure, adjustment is not completed. Make sure to adjust it later.
 - Adjustment software “DIAS” is able to control the status of the adjustment flags.

9.3.2. Adjustment Specifications

The following matrix table shows the relation between the replaced part and the Necessary Adjustment.

When a part is replaced, make sure to perform the necessary adjustment(s) in the order indicated.

The table below shows all the information necessary to perform each adjustment.

| Adjustment order | Adjustment Item | FLAG | Purpose | Replacing Parts | | | | | | JIG/TOOLS | SET UP | How to Operate | | |
|------------------|--|------|--|-----------------|---------------|---------------------------------------|-----------------|----------------|---------|-----------|---|---|---|--|
| | | | | MAIN PCB | VENUS(IC6001) | Lens Parts (except for MOS SENSOR) | MOS SENSOR Unit | T.PANEL DRIVER | T.PANEL | | | | | |
| 1 | Optical Tilt Adjustment | | Adjustment of image sensor installation angle to lens | — | — | O | O | — | — | — | Please execute the adjustment by using optical tilt adjustment software "DSC_Tilt" for DMC-FX700. The adjustment software "DSC_Tilt" is available at "TSN Website", therefore, access to "TSN Website" at "Support Information from NWBG/VDBG-AVC". | | | |
| 2 | Touch Panel Control | TPC | Touch Panel Inspection | O | O | — | — | O | O | — | Touch Pen | NONE | 1)Touches sequentially + mark with the touch pen on the display. 2)If OK is displayed, it is adjustment completion. | |
| 3 | Venus Zoom | PZM | Venus Zoom Inspection | O | O | — | — | — | — | — | NONE | NONE | 1)Press Shutter Button 2)After displaying "PZM", press Shutter Button again. 3)After completed, the "OK" menu appears. | |
| 4 | OIS sensor | OIS | OIS sensor output level adjustment | O | O | O | — | — | — | — | NONE | NONE | 1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" menu appears. | |
| 5 | Backfocus / GYRO | BF | To have the focus tracking curve be appropriate shape and GYRO sensor adjustment | O | O | O | O | ※1 | — | — | O | •COLLIMATOR (VFK1164TCM02 or VFK1164TCM03 or RFKZ0422) | 1)Set the camera in front of collimator so that the distance from collimator to camera becomes about 3 cm as shown in Fig.A. 【NOTE】 Please notice ! "NG" might happen while auto adjusting. - Do not put the black colored stuff at the back side of collimator near hunching chart to get some certain brightness. - Make sure the hunching chart has no dust and dirty condition. - Not connect the USB cable at this stage. | 1)Press Shutter Button (Do not apply any shock and vibration for the camera while adjusting) 2)After completed, the "OK" menu appears. |
| 6 | Iris | IRS | Iris adjustment | O | O | O | O | — | — | — | •LIGHT BOX RFKZ0523 (VFK1164TDVLB) | 1)Set the camera in front of LIGHTBOX so that the distance from collimator to camera becomes about 7.5 cm as shown in Fig.B. | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 7 | Monitor Linearity | MLN | Monitor Linearity adjustment | O | O | O | O | — | — | — | •LIGHT BOX RFKZ0523 (VFK1164TDVLB) | 1)Set the camera in front of LIGHTBOX so that the distance from collimator to camera becomes about 7.5 cm as shown in Fig.B. | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 8 | Shutter | SHT | Shutter speed adjustment | O | O | O | O | — | — | — | •LIGHT BOX RFKZ0523 (VFK1164TDVLB) | 1)Insert the TR chart into the slot of LIGHTBOX. 2)Set the camera in front of LIGHTBOX so that the distance from LIGHTBOX to camera becomes about 12 cm as shown in Fig.B. 3)Set the camera angle so that the color chart is displayed on the LCD monitor fully. 【NOTE】 - Since the lens position is automatically set into certain position after executing auto adjustment, confirm the angle after stopping the lens zoom position. - It is no problem even though the chart on to the LCD monitor slightly cut at the corner. - It is no problem even though the focusing slightly becomes out of focusing condition. - Not connect the USB cable at this stage. | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 9 | ISO | ISO | ISO sensitivity adjustment | O | O | O | O | — | — | — | •LIGHT BOX RFKZ0523 (VFK1164TDVLB) | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 10 | High brightness coloration | LIN | High brightness coloration adjustment | O | O | O | O | — | — | — | •TR CHART (RFKZ0443) | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 11 | White Balance | WBL | White balance adjustment under various color temperature | O | O | O | O | — | — | — | •TR CHART (RFKZ0443) | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 12 | MOS Missing Pixels (White)※2 | WKL | Compensation of MOS Missing Pixels (White) | O | O | — | O | ※1 | — | — | NONE | NONE | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 13 | Color reproduction inspection and Microphone check | COL | Color reproduction inspection and Microphone check | O | O | O | O | — | — | — | NONE | NONE | 1)Press Shutter Button 2)After completed, the "OK" menu appears. | |
| 14 | | BKI | Do not use "BKI" adjustment flag for this unit. Use "BK2" adjustment flag, instead. (In case of mostDSC models, the adjustment flag for MOS Missing Pixels is "BKI". But, in this model, "BK2" the adjustment flag for MOS Missing Pixels.) | | | | | | | | | | | |

| Adjustment order | Adjustment Item | FLAG | Purpose | MAIN PCB VENUS(IC601) | Replacing Parts | | | | | JIG/TOOLS | SET UP | How to Operate |
|------------------|---------------------------------|------|--|--------------------------|---------------------------------------|-----------------|----------------|---------|---------|--|--|--|
| | | | | | Lens Parts (except for MOS SENSOR) | MOS SENSOR Unit | T PANEL DRIVER | T PANEL | GYRO IC | | | |
| 15 | MOS Missing Pixels (Black)※3 | BK2 | Compensation of MOS Missing Pixels (Black) | ○ ○ | — | ○ ※1 | — | — | — | •LIGHT BOX RFKZ0523 (VFK1164TDVLB) | 1) Prepare the LIGHTBOX (RFKZ0523). (The LIGHTBOX "VFK1164TDVLB" can be used if the front hood of VFK1164TDVLB is removed.) 2) Set the ND Filter (VFK1164ND15) to the LIGHTBOX. 3) Set the LIGHTBOX and Camera unit so that distance becomes about 4 cm. [NOTE] Do not use "BK1" adjustment flag for this unit. Use "BK2" adjustment flag, instead. | 1)Press Shutter Button (The lens starts zooming and stops automatically, then green ●mark is displayed on LCD). 2)Press Shutter Button (The "BK1 adjustment 1> is executed, and then green ●mark is displayed on LCD). 3)Press Shutter Button (The lens starts zooming and stops automatically, then green ●mark is displayed on LCD). 4)Press Shutter Button (The "BK1 adjustment 2> is executed, and then green ●mark is displayed on LCD). 5)Press Shutter Button (The lens starts zooming and stops automatically, then green ●mark is displayed on LCD). 6)Press Shutter Button (The "BK1 adjustment 3> is executed, and then green ●mark is displayed on LCD). 7)Press Shutter Button (OK mark is displayed on LCD when the adjustment has been completed successfully.). |

※1: Execute the adjustment when remove the MOS SENSOR unit and replace the MOS SENSOR unit.

※2: The pixel that always lights while shaded is called a white wound.

※3: The pixel that does not light while complete exposed is called a black wound.

*This unit does not have the LCD adjustment of the camera (LCD flicker adjustment etc.).



※Touch panel adjustment screen

Touch with the touch pen + mark on the upper side of the left.

To similar, touch with the touch pen + mark sequentially lower side of the left, lower side of the right, upper side of the right and center.

If OK is displayed, it is adjustment completion.



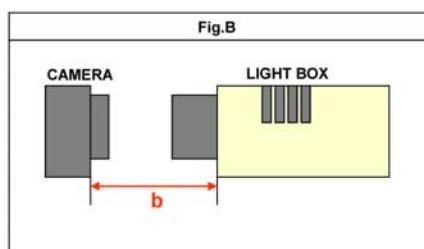


Fig.C How to Insert the TR chart into LIGHTBOX

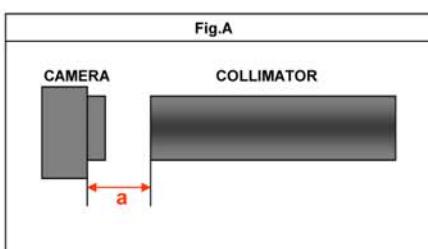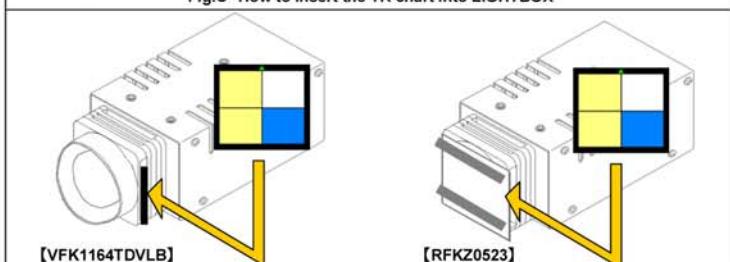

■IMPORTANT NOTICE (After replacing the MAIN P.C.B.)

After replacing the MAIN P.C.B., make sure to perform the "INITIAL SETTINGS" first, then release the "INITIAL SETTINGS" in order to proceed the electrical adjustment.

NOTE:

1. If electrical adjustment or data re-writing is executed before "INITIAL SETTINGS", suffix code list is never displayed, and it cannot be chosen suitable suffix code.
2. Never remove the battery during initial setting in process.

9.4. After Adjustment

9.4.1. Initial Setting

Since the initial setting has been released to execute the built-in adjustment software, it should be set up again before shipping the camera to the customer.

Refer to the procedure described in “3.5.2. INITIAL SETTINGS” for details.

[IMPORTANT]

1. The initial setting should be done again after completing the alignment. Otherwise, the camera will not work properly.
Therefore as a warning, the camera display a warning symbol “ ! ” on the LCD monitor every time the camera is turned off.
2. Confirm that status of all adjustment flag show “F”. Even if one of the adjustment flag shows “0”, initial setting programmed is never executed.
3. Adjustment software “DIAS” is able to control the status of the adjustment flags.
The Adjustment software “DIAS” and “DSC_TILT” are available at “TSN Website”, therefore, access to “TSN Website” at “Support Information from NWBG/VDBG-AVC”.

10 Maintenance

10.1. Cleaning Lens and LCD Panel

Do not touch the surface of lens and LCD Panel with your hand.

When cleaning the lens, use air-Blower to blow off the dust.

When cleaning the LCD Panel, dampen the lens cleaning paper with lens cleaner, and the gently wipe the its surface.

Note:

The Lens Cleaning KIT ; VFK1900BK (Only supplied as 10 set/Box) is available as Service Aid.

Service Manual

Diagrams and Replacement Parts List

Digital Camera

Model No.

| | |
|-------------|-------------|
| DMC-FX700P | DMC-FX700GC |
| DMC-FX700PC | DMC-FX700GD |
| DMC-FX700PU | DMC-FX700GH |
| DMC-FX700EB | DMC-FX700GK |
| DMC-FX700EE | DMC-FX700GN |
| DMC-FX700EF | DMC-FX700GT |
| DMC-FX700EG | DMC-FX700SG |
| DMC-FX700EP | |

Vol. 1

Colour

(S).....Silver Type (only P/PC/GC/GH/GK/SG)
(K).....Black Type
(N).....Gold Type (only GC/GD/GK/GT/SG)
(W).....White Type (only GC/GD/GH/GT/SG)

Table of contents


| | | | |
|---|------|---|------|
| S1. About Indication of The Schematic Diagram | S-1 | S6. Replacement Parts List | S-15 |
| S1.1. Important Safety Notice..... | S-1 | S7. Exploded View | S-20 |
| S2. Voltage Chart | S-2 | S7.1. Frame and Casing Section..... | S-20 |
| S2.1. Sub Operation Flex P.C.B..... | S-2 | S7.2. Packing Parts and Accessories Section (1) | S-21 |
| S2.2. Flash Top P.C.B..... | S-2 | S7.3. Packing Parts and Accessories Section (2) | S-22 |
| S3. Block Diagram..... | S-3 | | |
| S3.1. Overall Block Diagram | S-3 | | |
| S4. Schematic Diagram..... | S-4 | | |
| S4.1. Interconnection Diagram..... | S-4 | | |
| S4.2. Sub Operation Schematic Diagram..... | S-5 | | |
| S4.3. Flash Top Schematic Diagram | S-6 | | |
| S4.4. Lens Flex Schematic Diagram | S-7 | | |
| S5. Print Circuit Board | S-8 | | |
| S5.1. Sub Operation Flex P.C.B..... | S-8 | | |
| S5.2. Flash Top P.C.B..... | S-10 | | |
| S5.3. Lens Flex P.C.B..... | S-14 | | |

S1. About Indication of The Schematic Diagram

S1.1. Important Safety Notice

COMPONENTS IDENTIFIED WITH THE MARK  HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS USE ONLY THE SAME TYPE.

- 1.Although reference number of the parts is indicated on the P.C.B. drawing and/or schematic diagrams, it is NOT mounted on the P.C.B. when it is displayed with "\$" mark.
- 2.It is only the "Test Round" and no terminal (Pin) is available on the P.C.B. when the TP (Test Point) indicated as "●" mark.
- 3.The voltage being indicated on the schematic diagram is measured in "Standard-Playback" mode when there is no specify mode is mentioned.
- 4.Although the voltage and waveform available on here is measured with standard frame, it may be differ from actual measurement due to modification of circuit and so on.
- 5.The voltage being indicated here may be include observational-error (deviation) due to internal-resistance and/or reactance of equipment. Therefore, handle the value indicated on here as reference.
- 6.Use the parts number indicated on the Replacement Parts List .
- 7.Indication on Schematic diagrams:

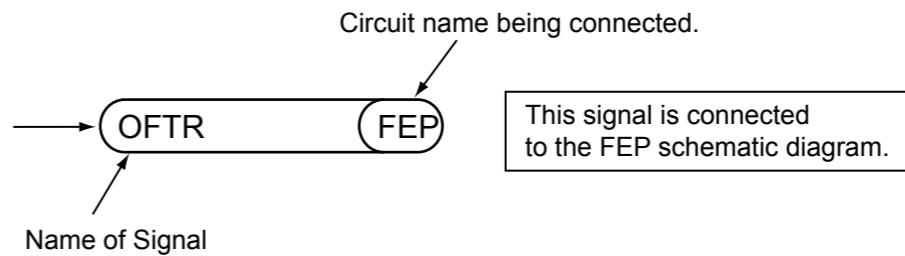

S2. Voltage Chart

Note) Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.

S2.1. Sub Operation Flex P.C.B.


| REF No. | PIN No. | POWER ON |
|---------|---------|----------|
| IC7201 | 1 | - |
| IC7201 | 2 | - |
| IC7201 | 3 | - |
| IC7201 | 4 | 0 |
| IC7201 | 5 | 1.4 |
| IC7201 | 6 | 1.3 |
| IC7201 | 7 | 0 |
| IC7201 | 8 | 3.1 |

S2.2. Flash Top P.C.B.

| REF No. | PIN No. | POWER ON |
|---------|---------|----------|
| IC8100 | 1 | 0 |
| IC8100 | 2 | 0 |
| IC8100 | 3 | 0 |
| IC8100 | 4 | 0 |
| IC8100 | 5 | 3.6 |
| IC8100 | 6 | 0 |
| IC8100 | 7 | 0 |
| IC8100 | 8 | 0 |
| IC8100 | 9 | 3.1 |
| IC8100 | 10 | 4.0 |


S3. Block Diagram

S3.1. Overall Block Diagram

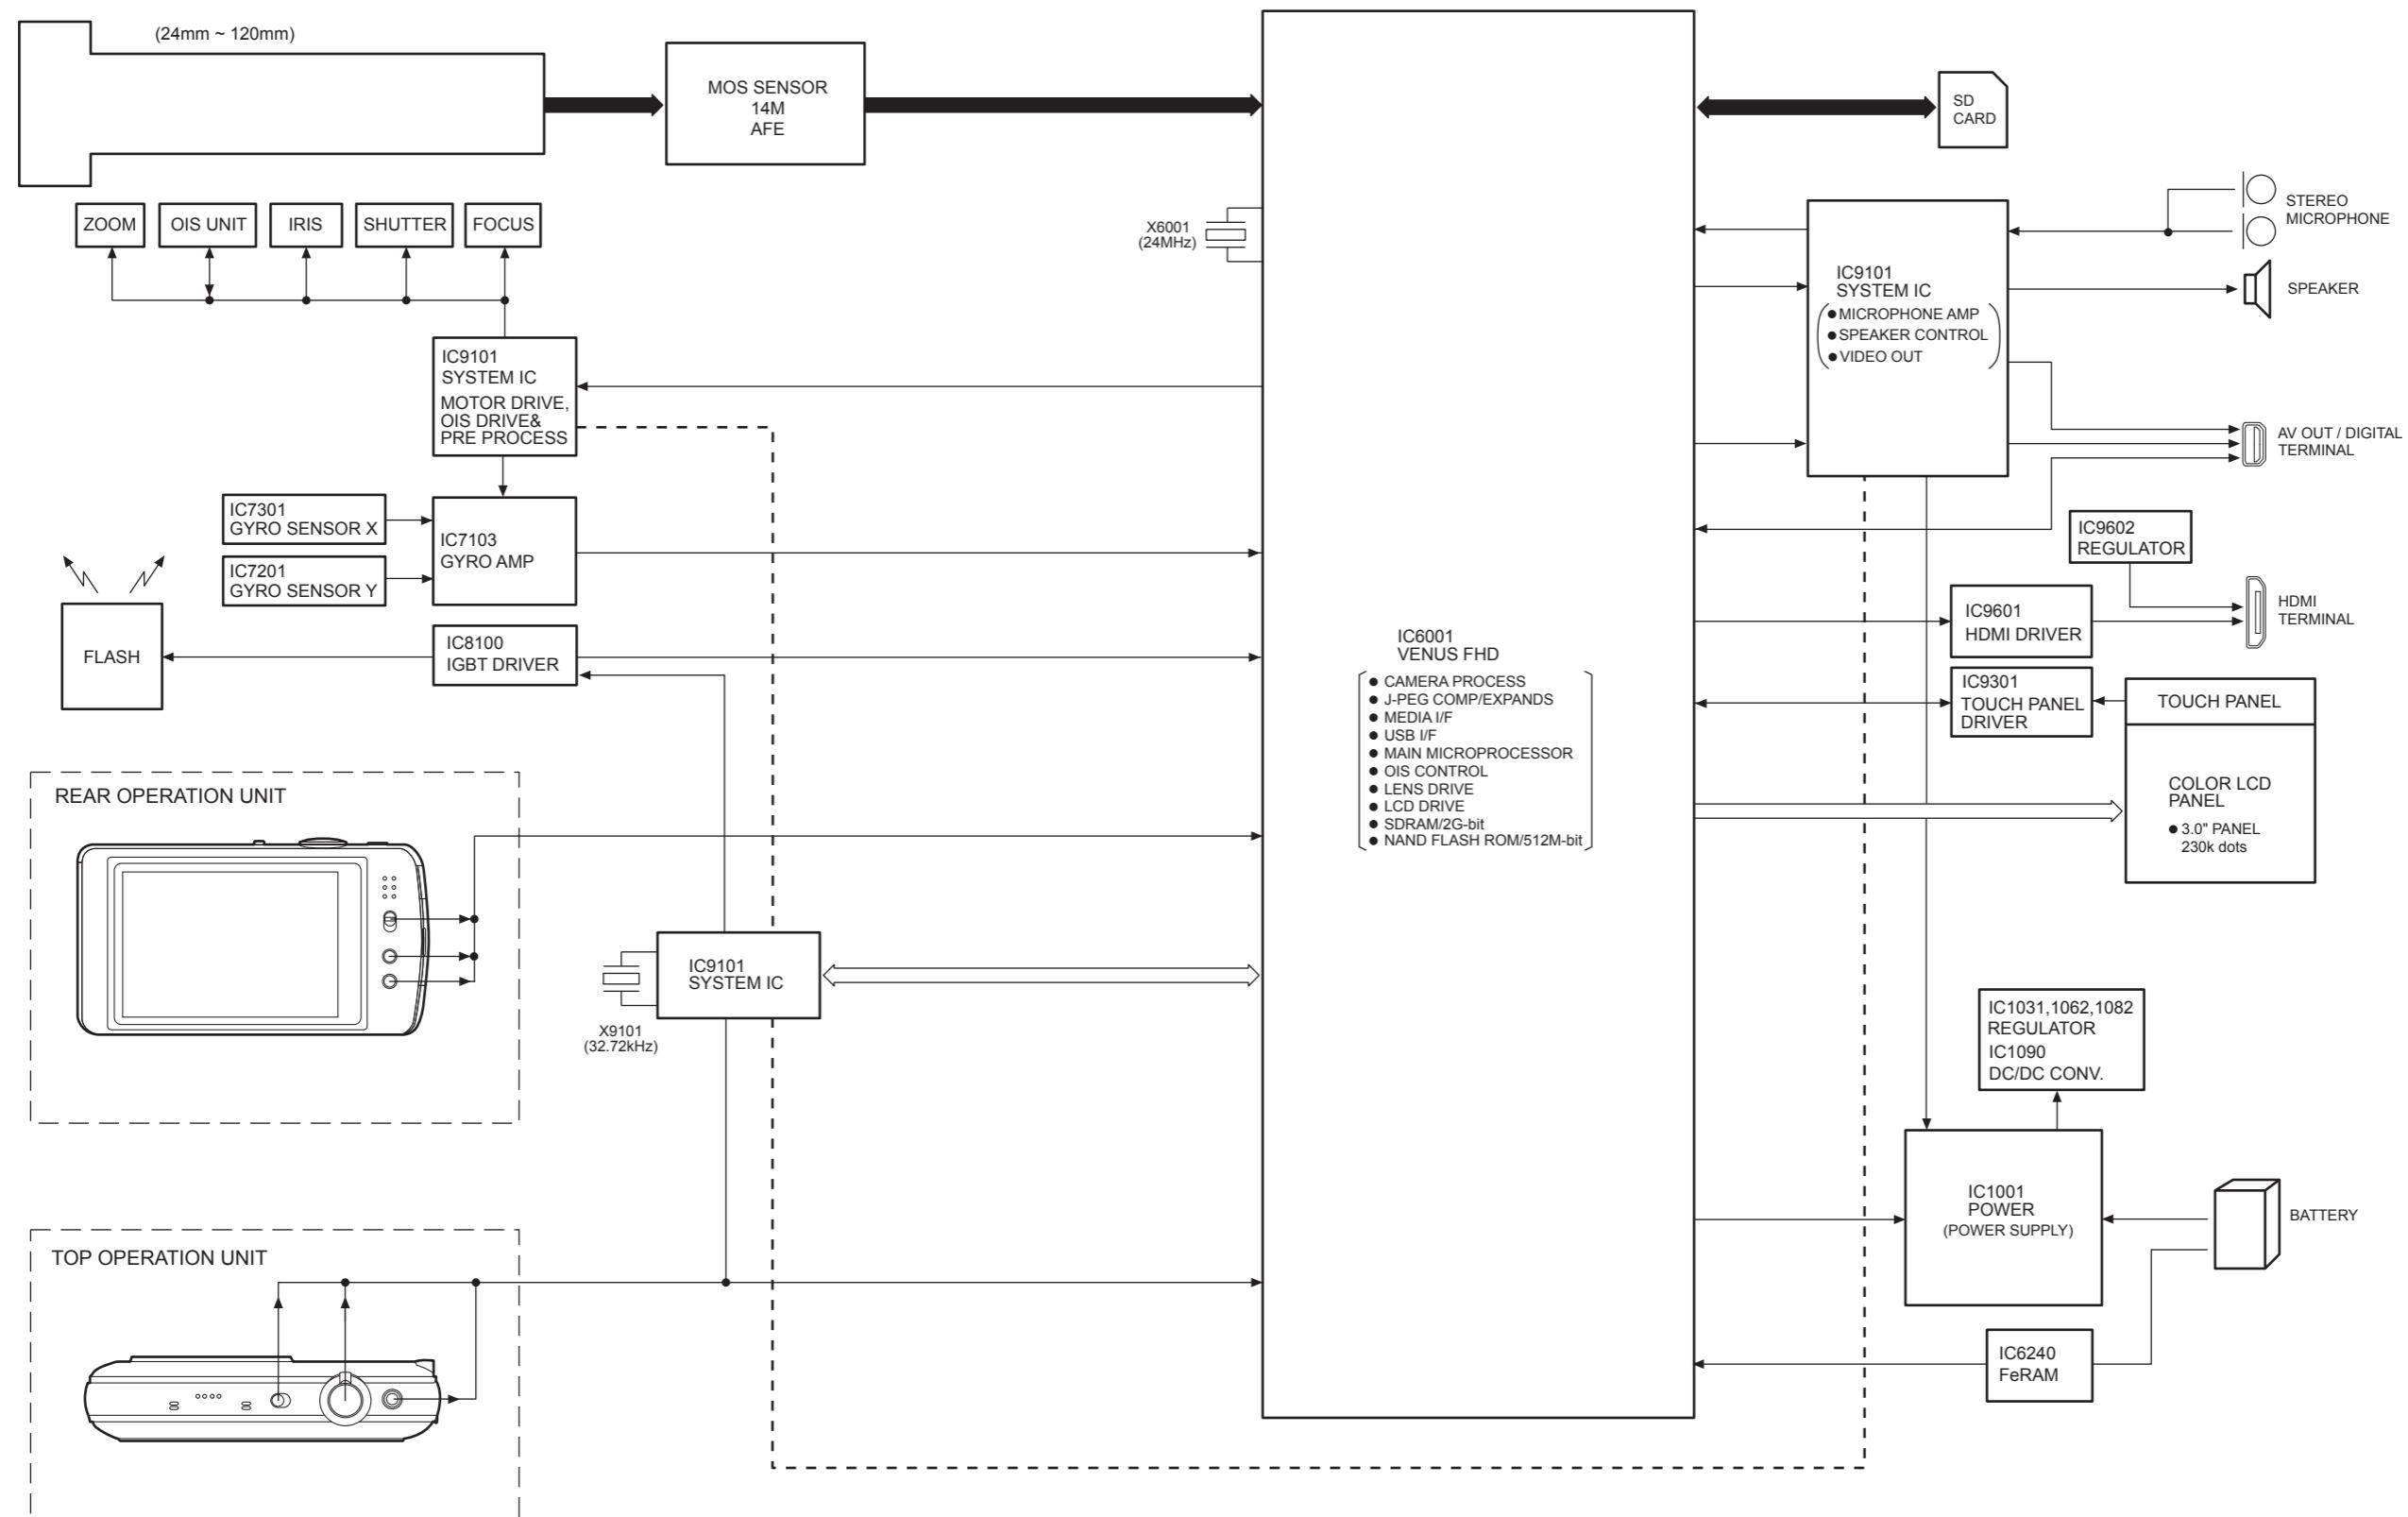


S4. Schematic Diagram


S4.1. Interconnection Diagram

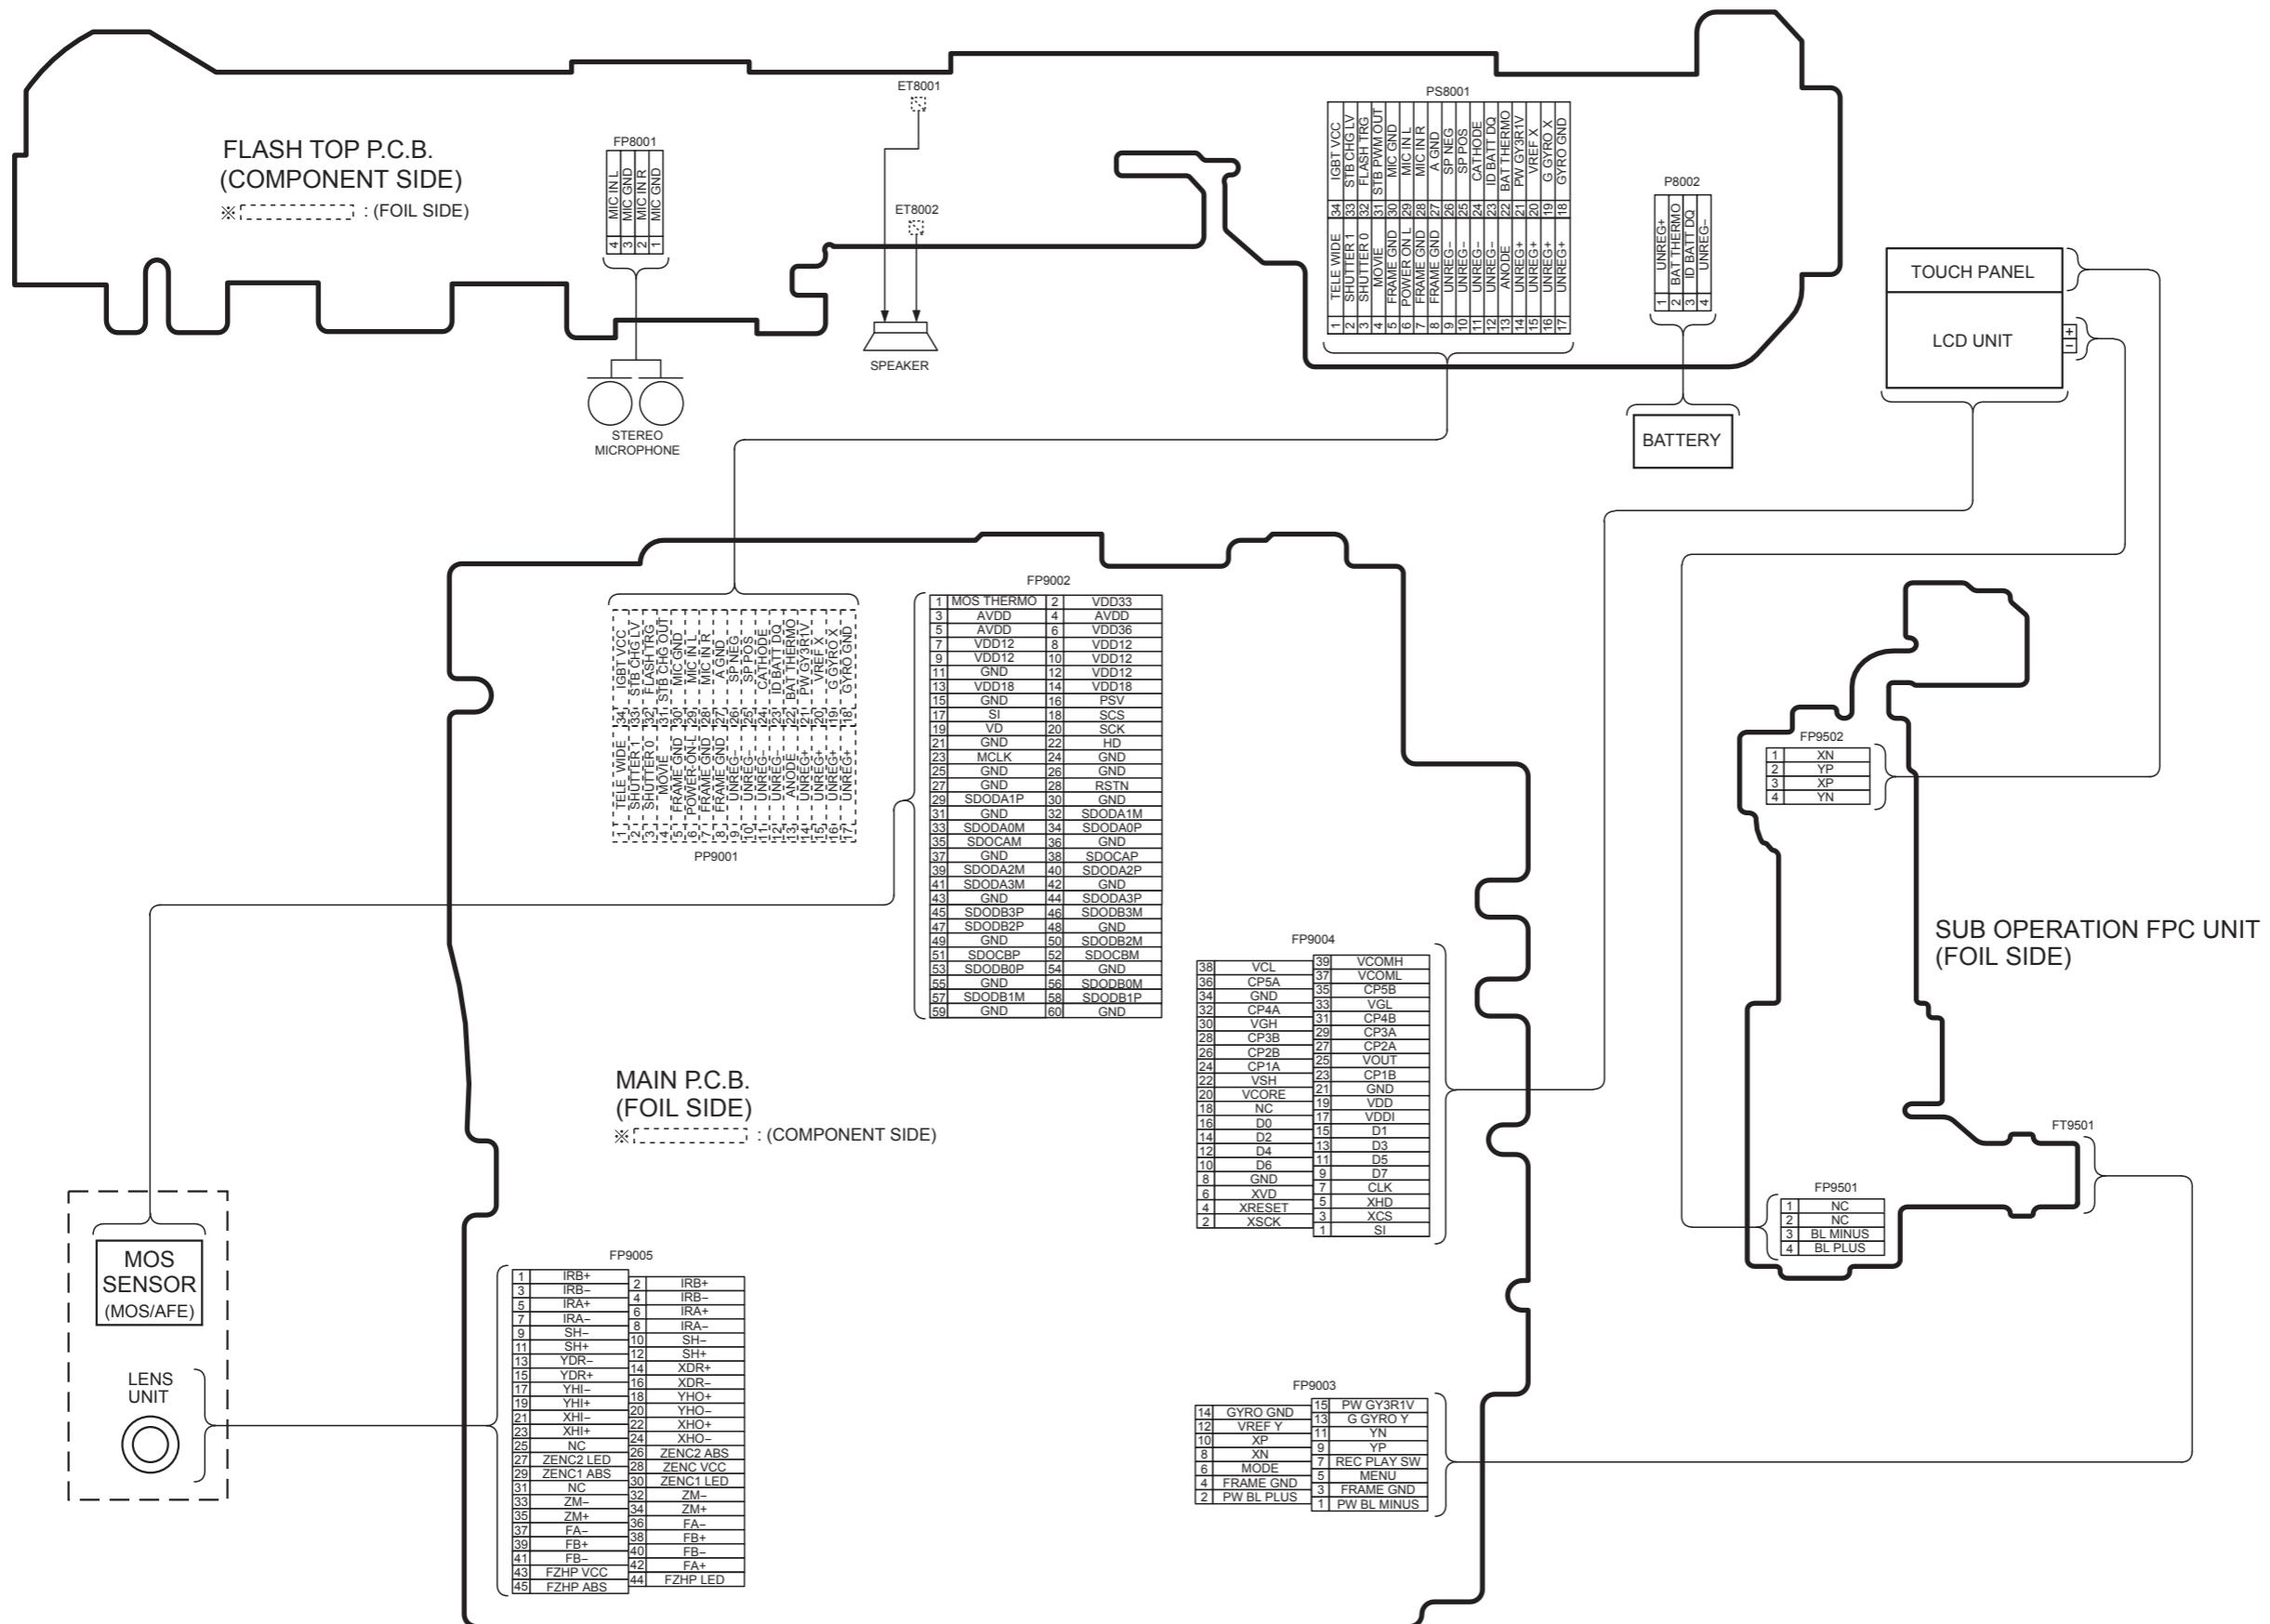


S4.2. Sub Operation Schematic Diagram

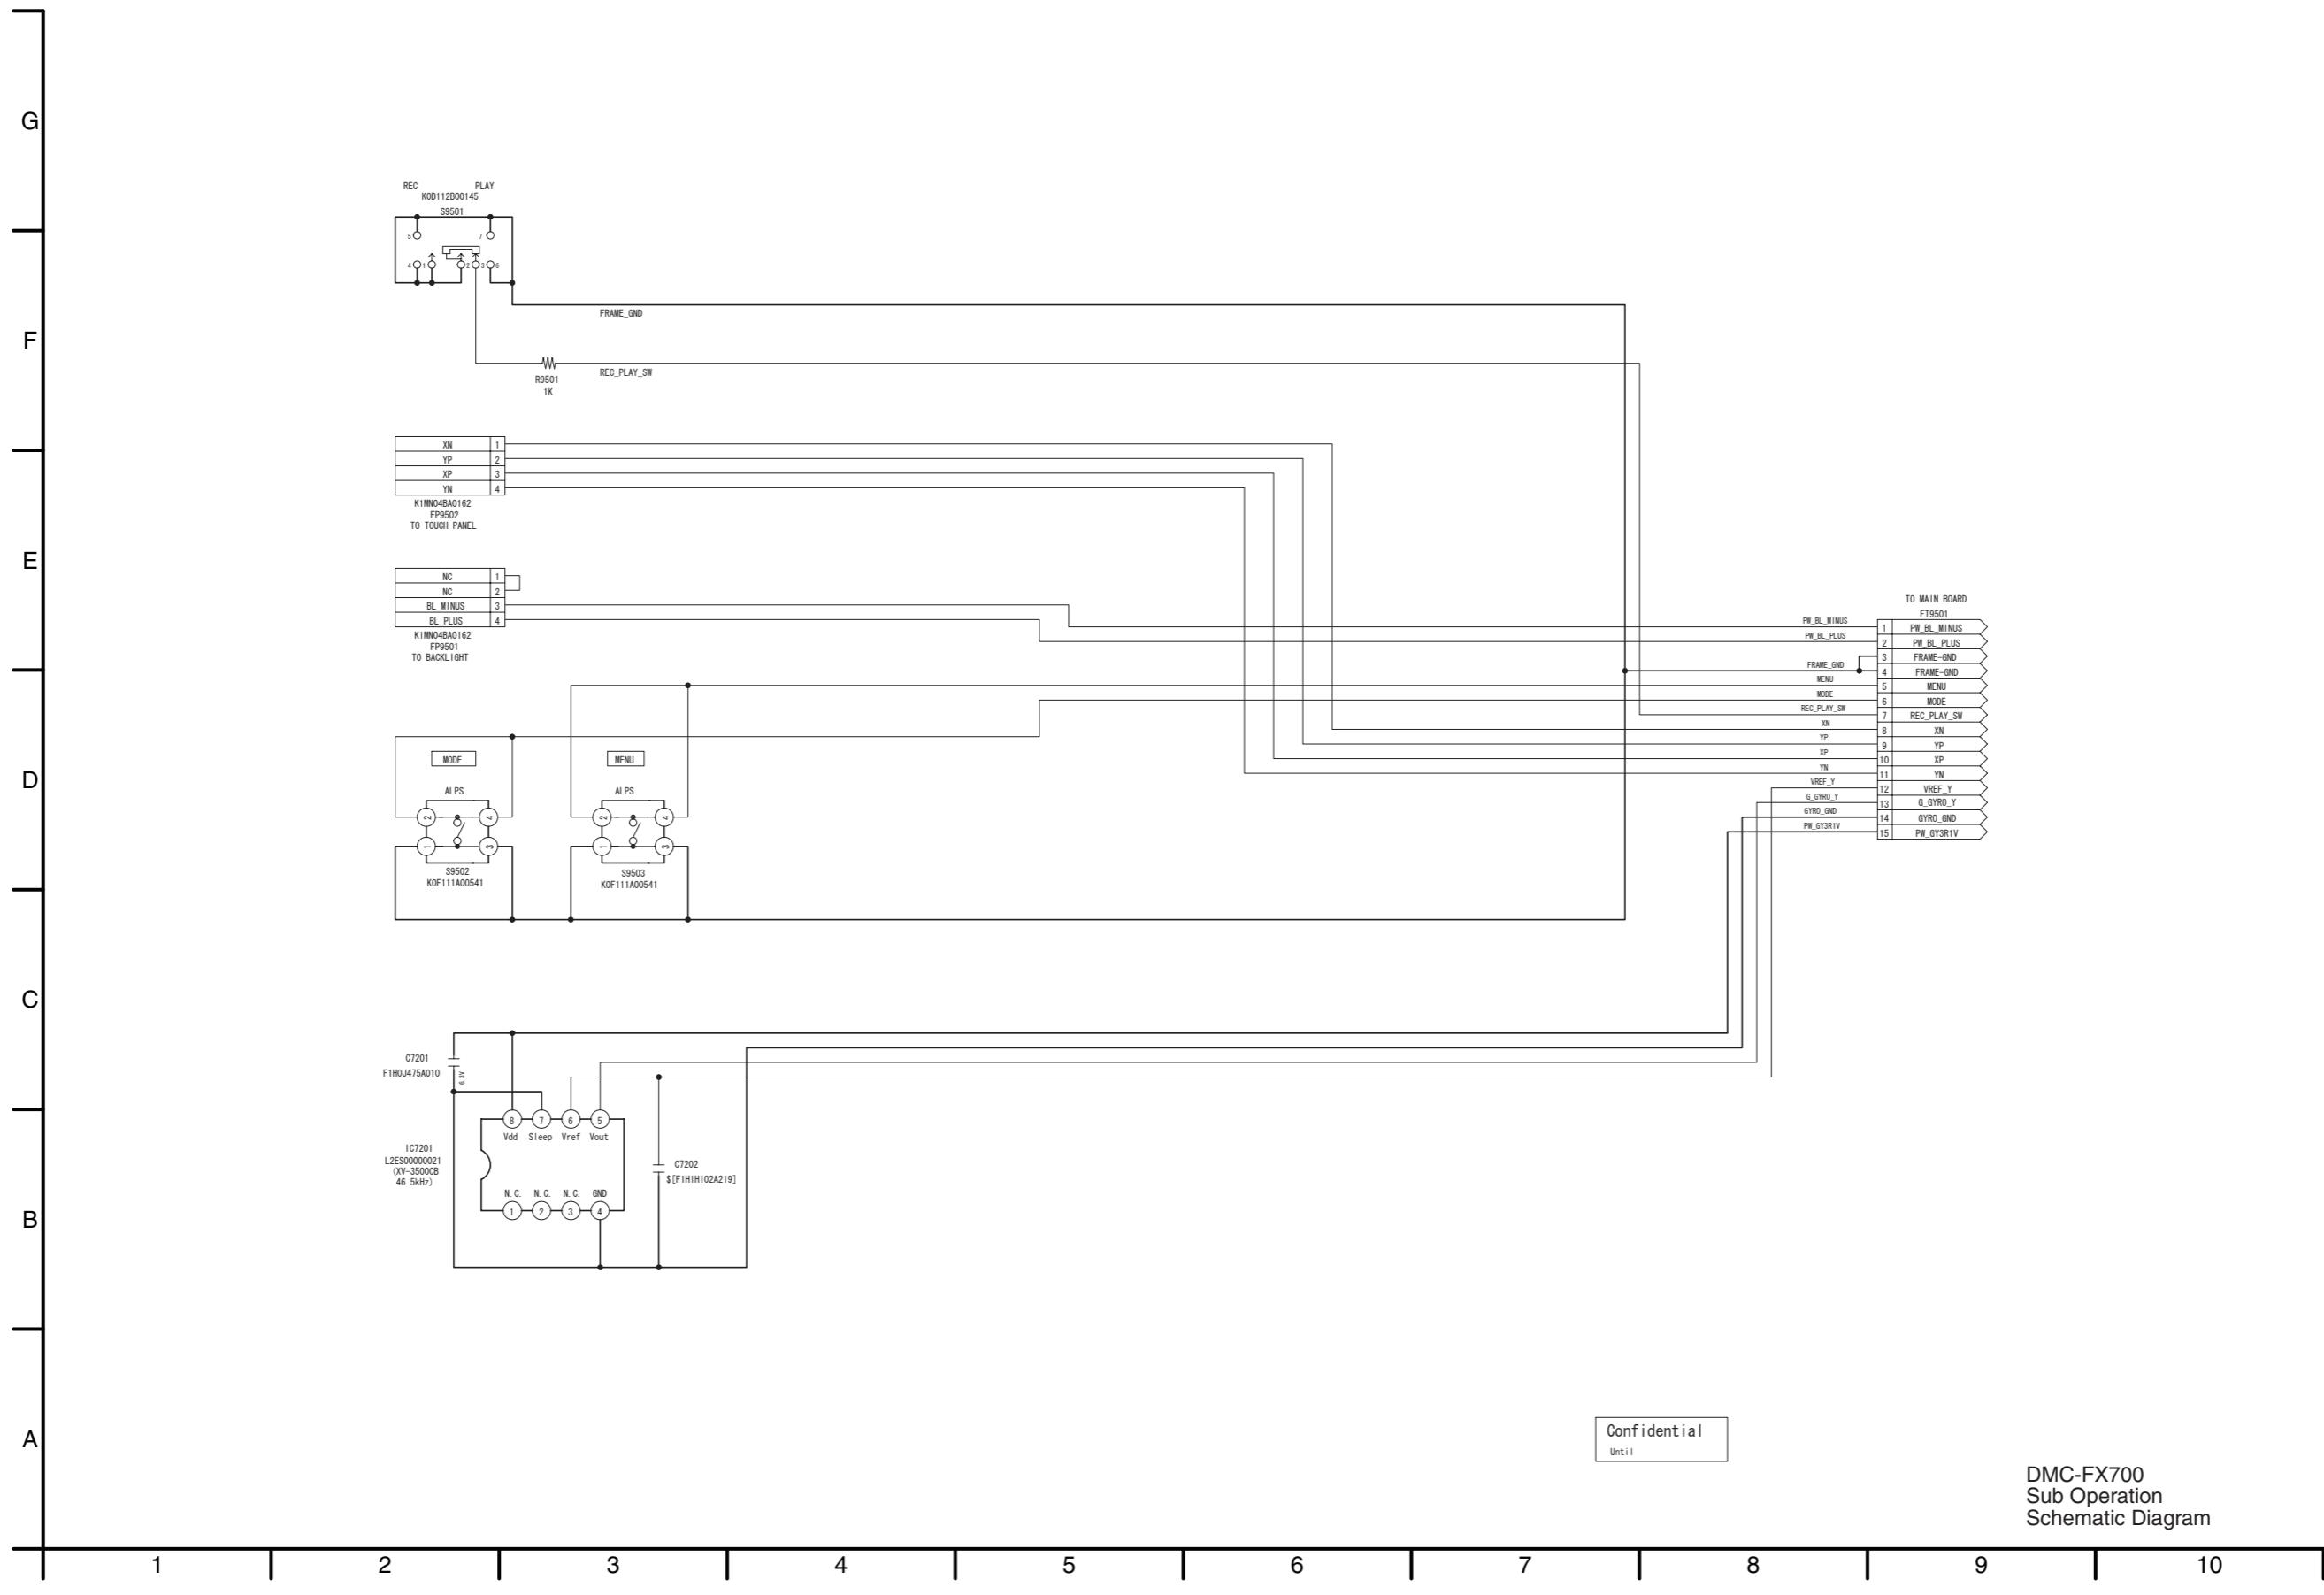

S4.3. Flash Top Schematic Diagram

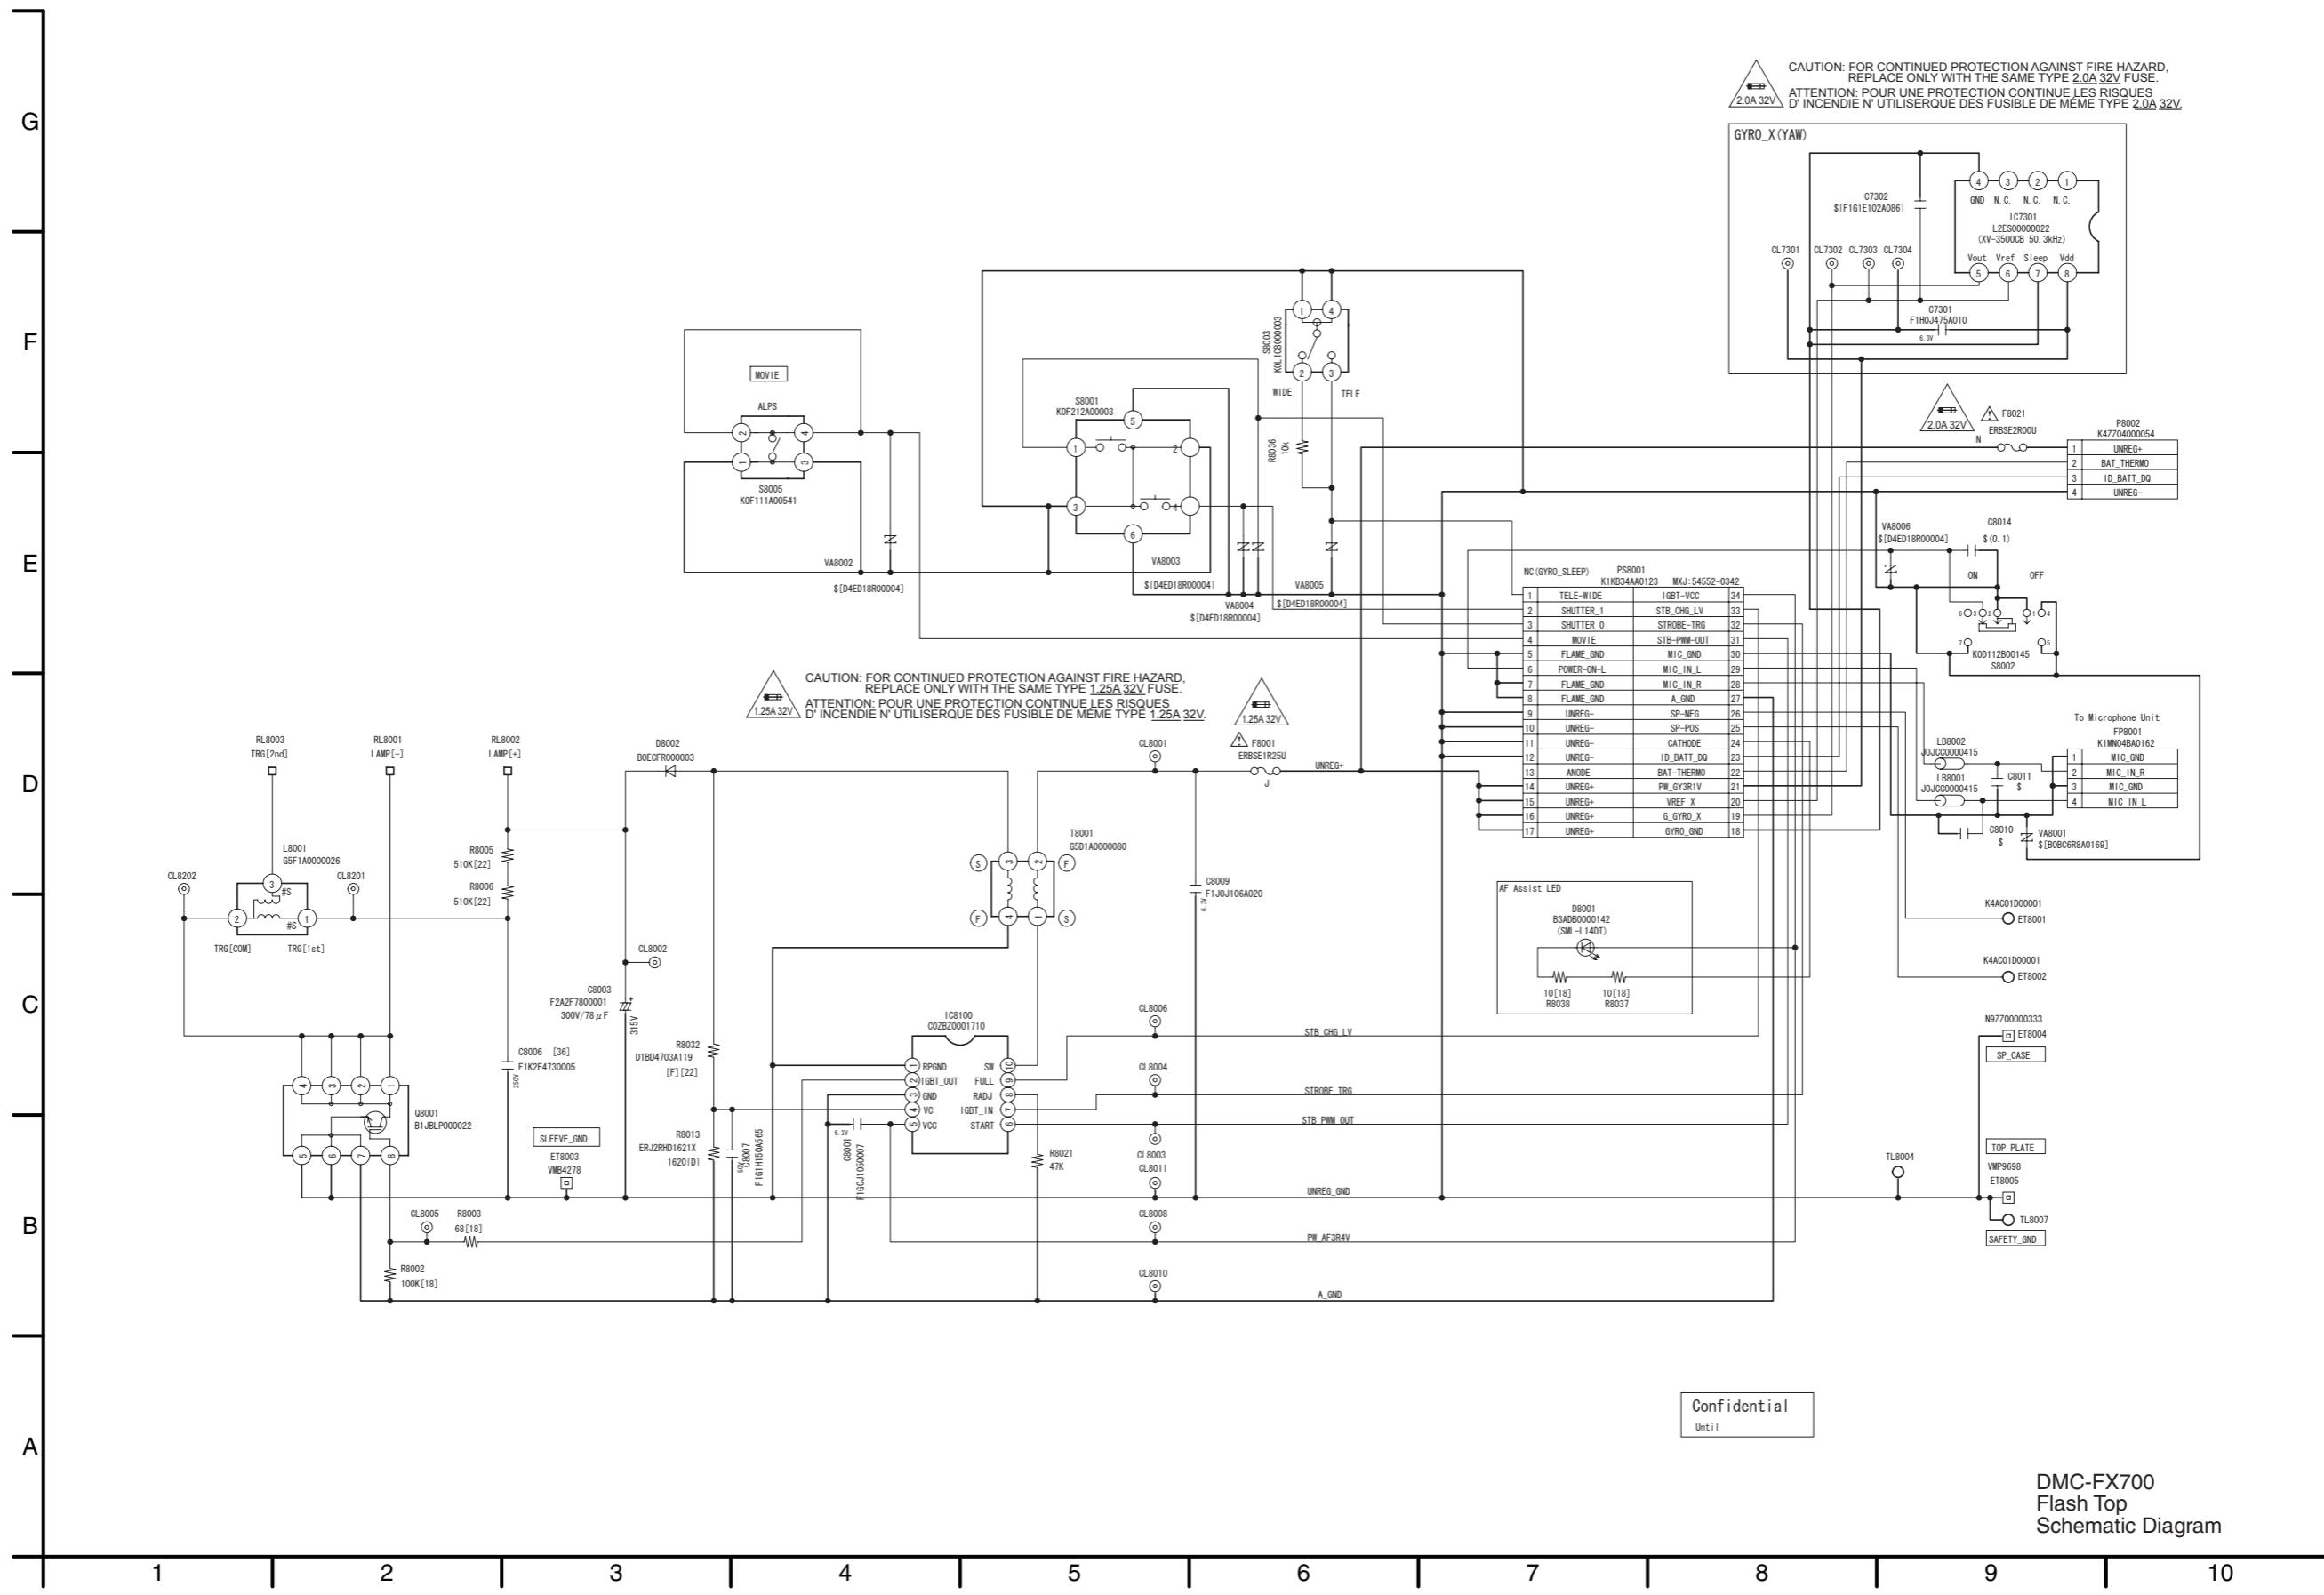


S4.4. Lens Flex Schematic Diagram

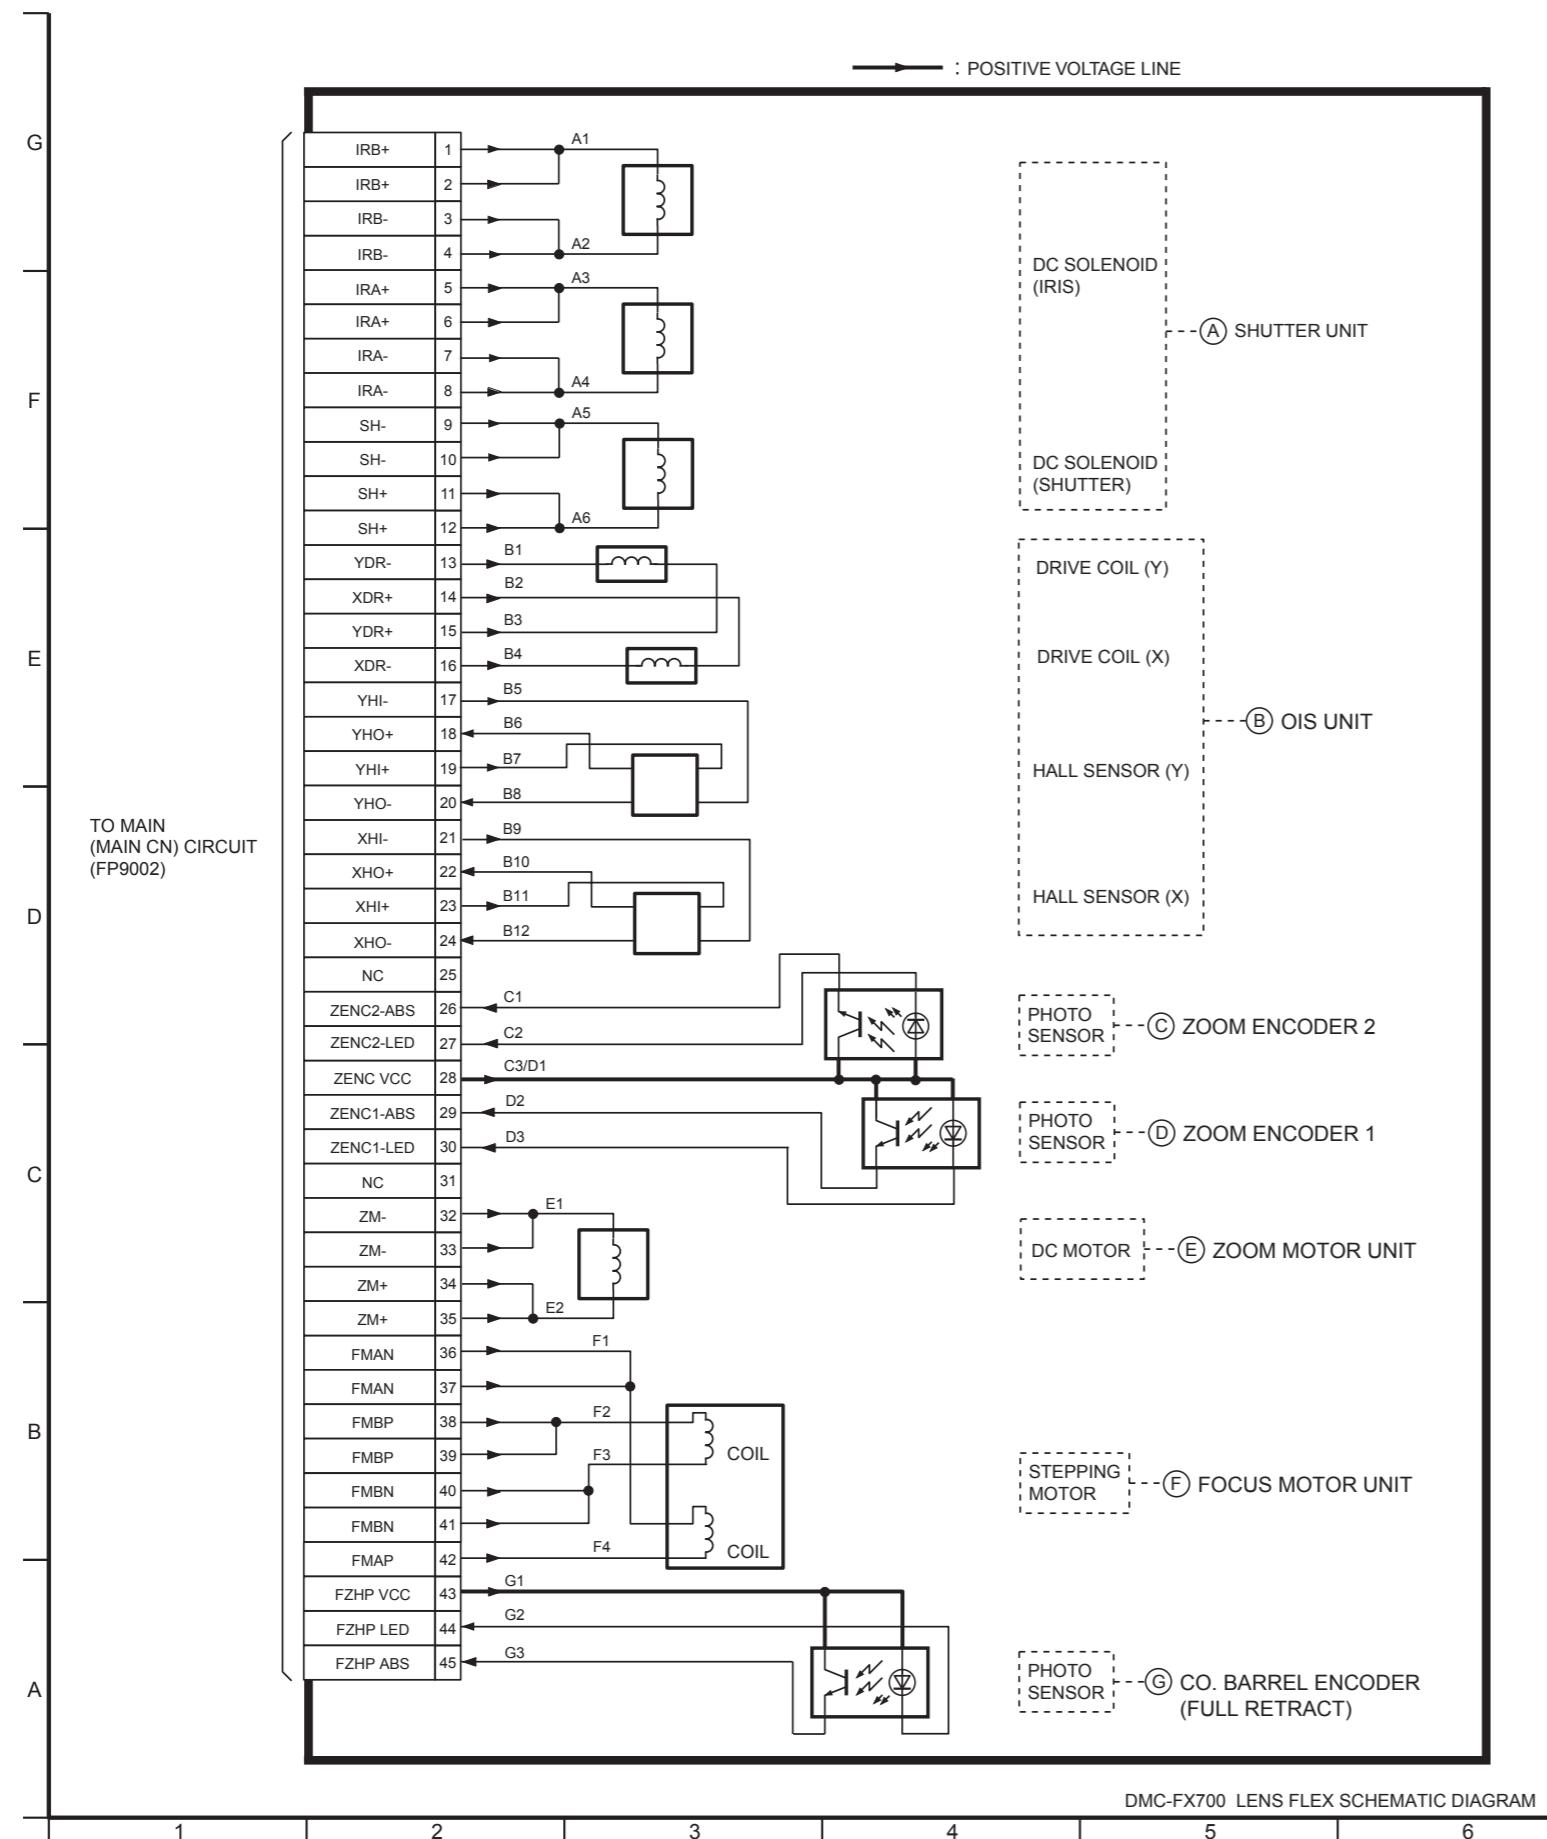


S5. Print Circuit Board



S5.1. Sub Operation Flex P.C.B.

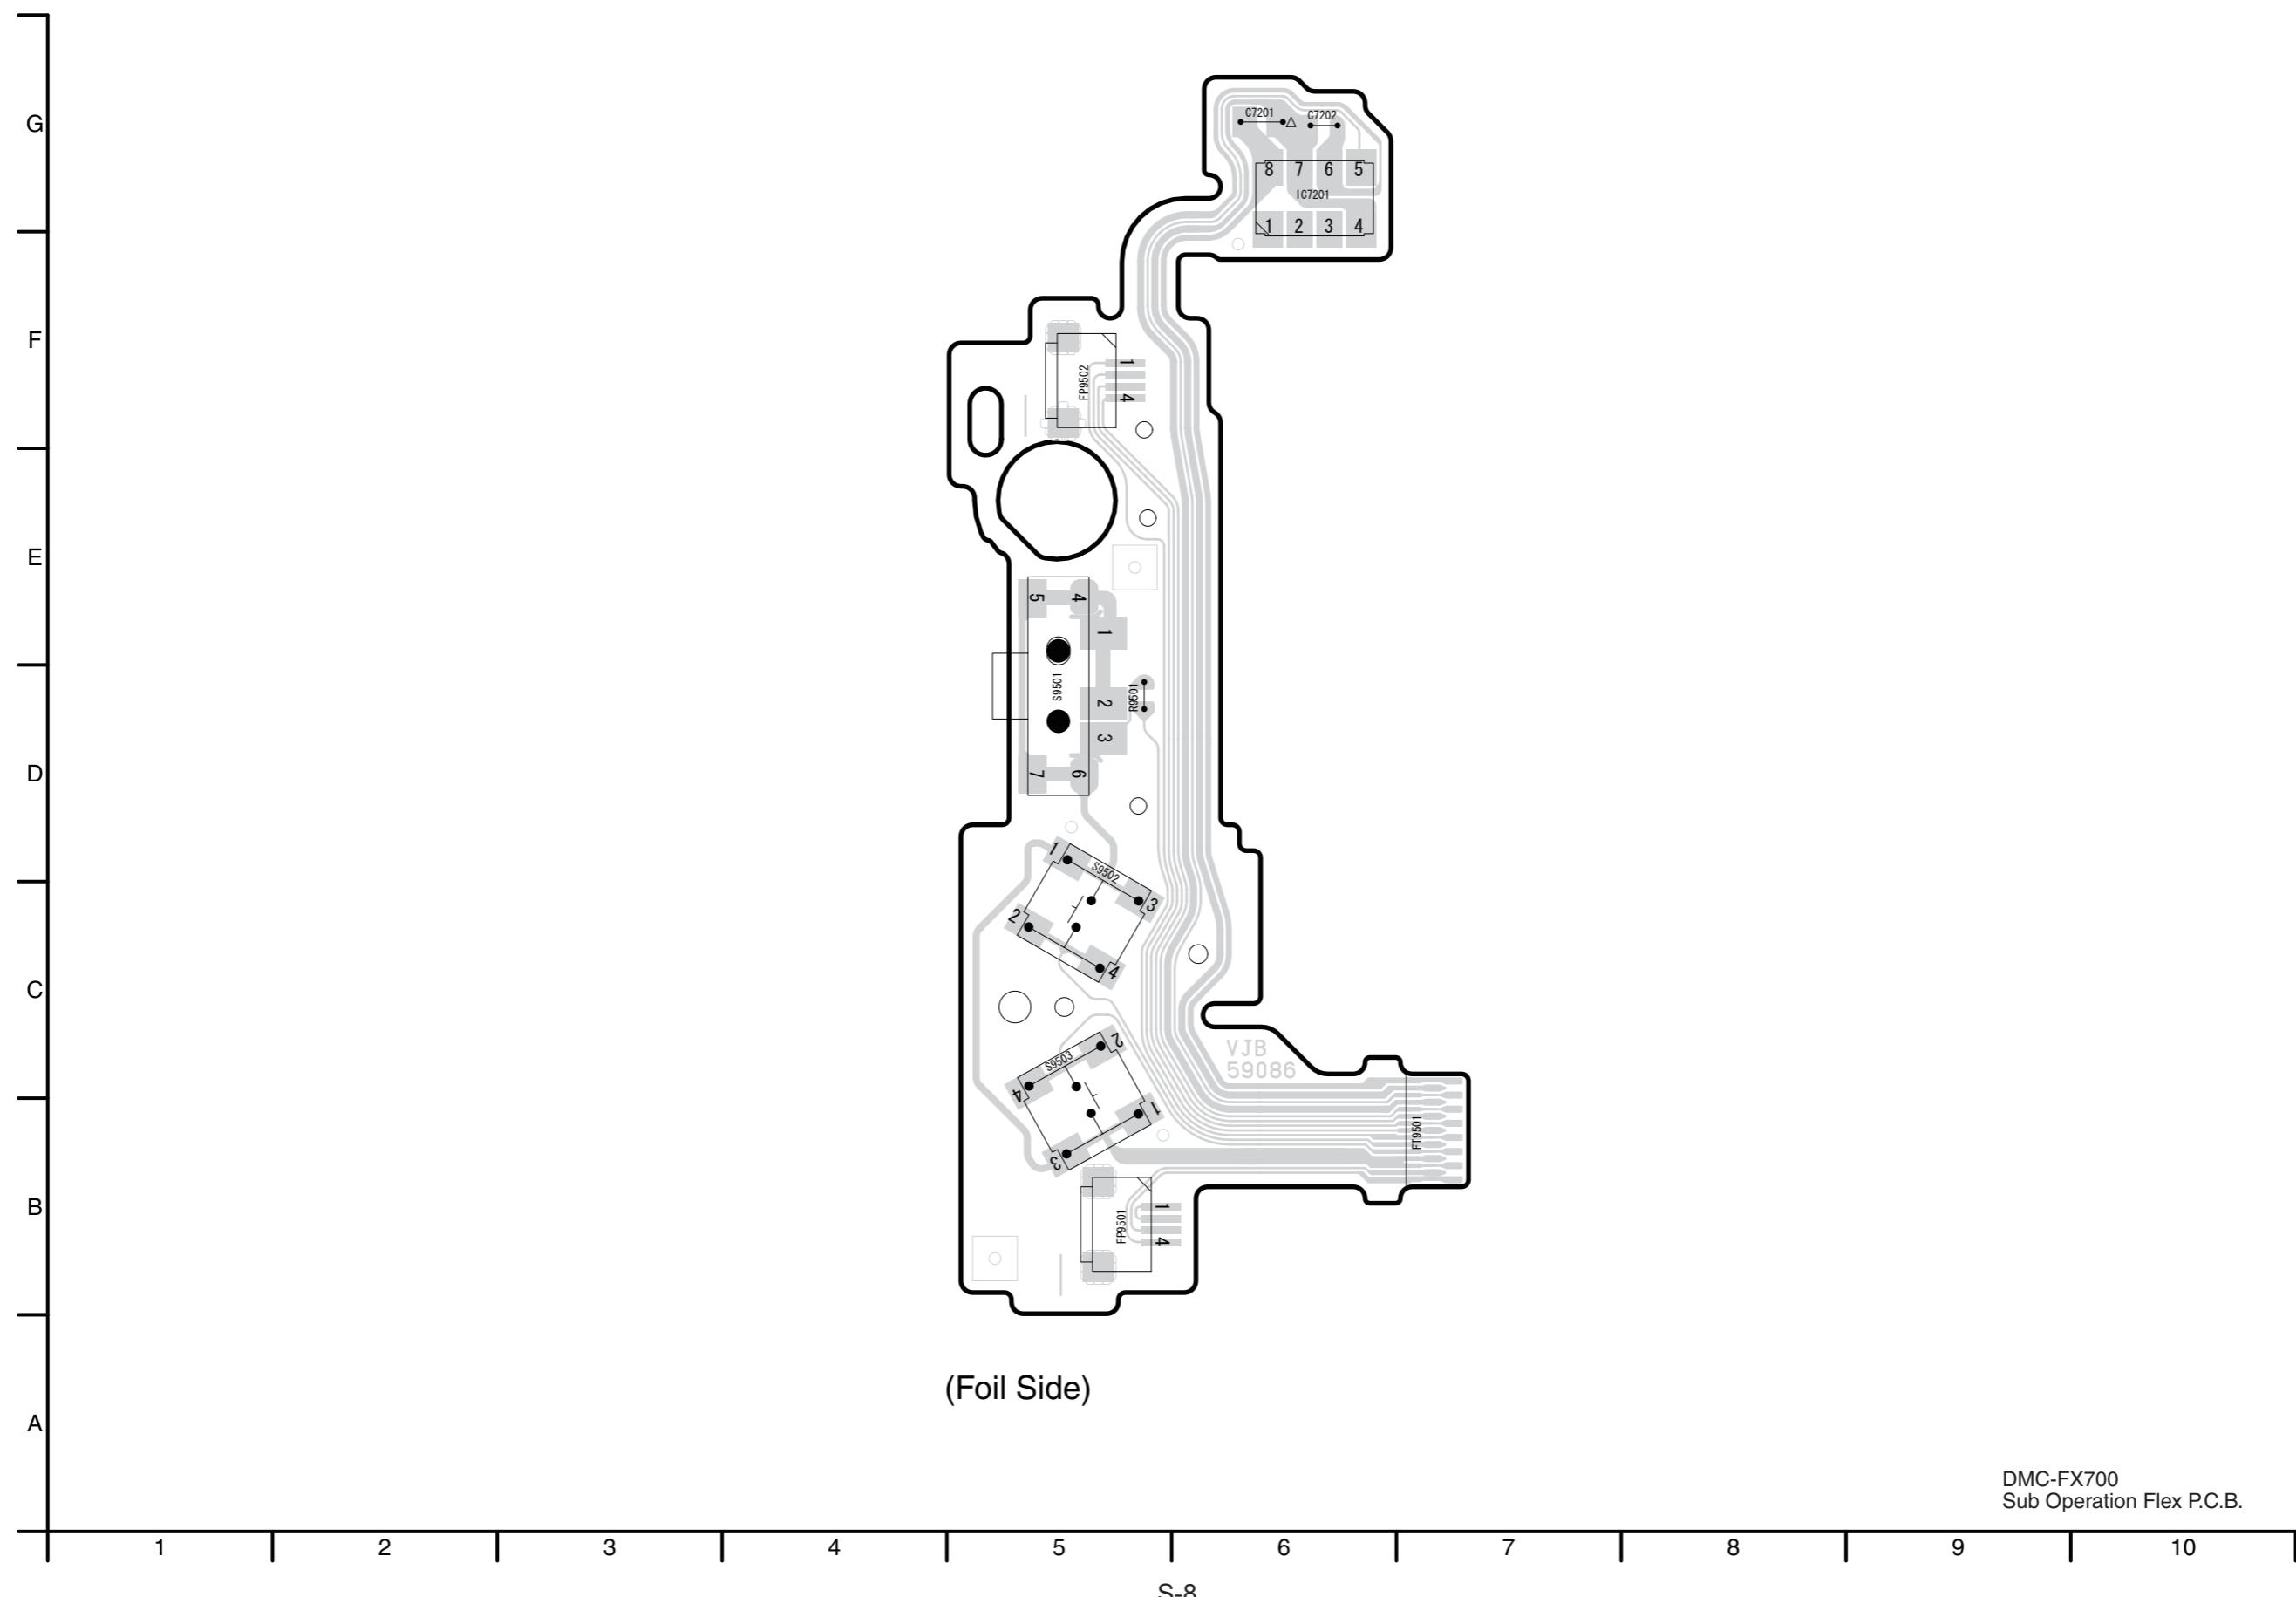

S5.2. Flash Top P.C.B.

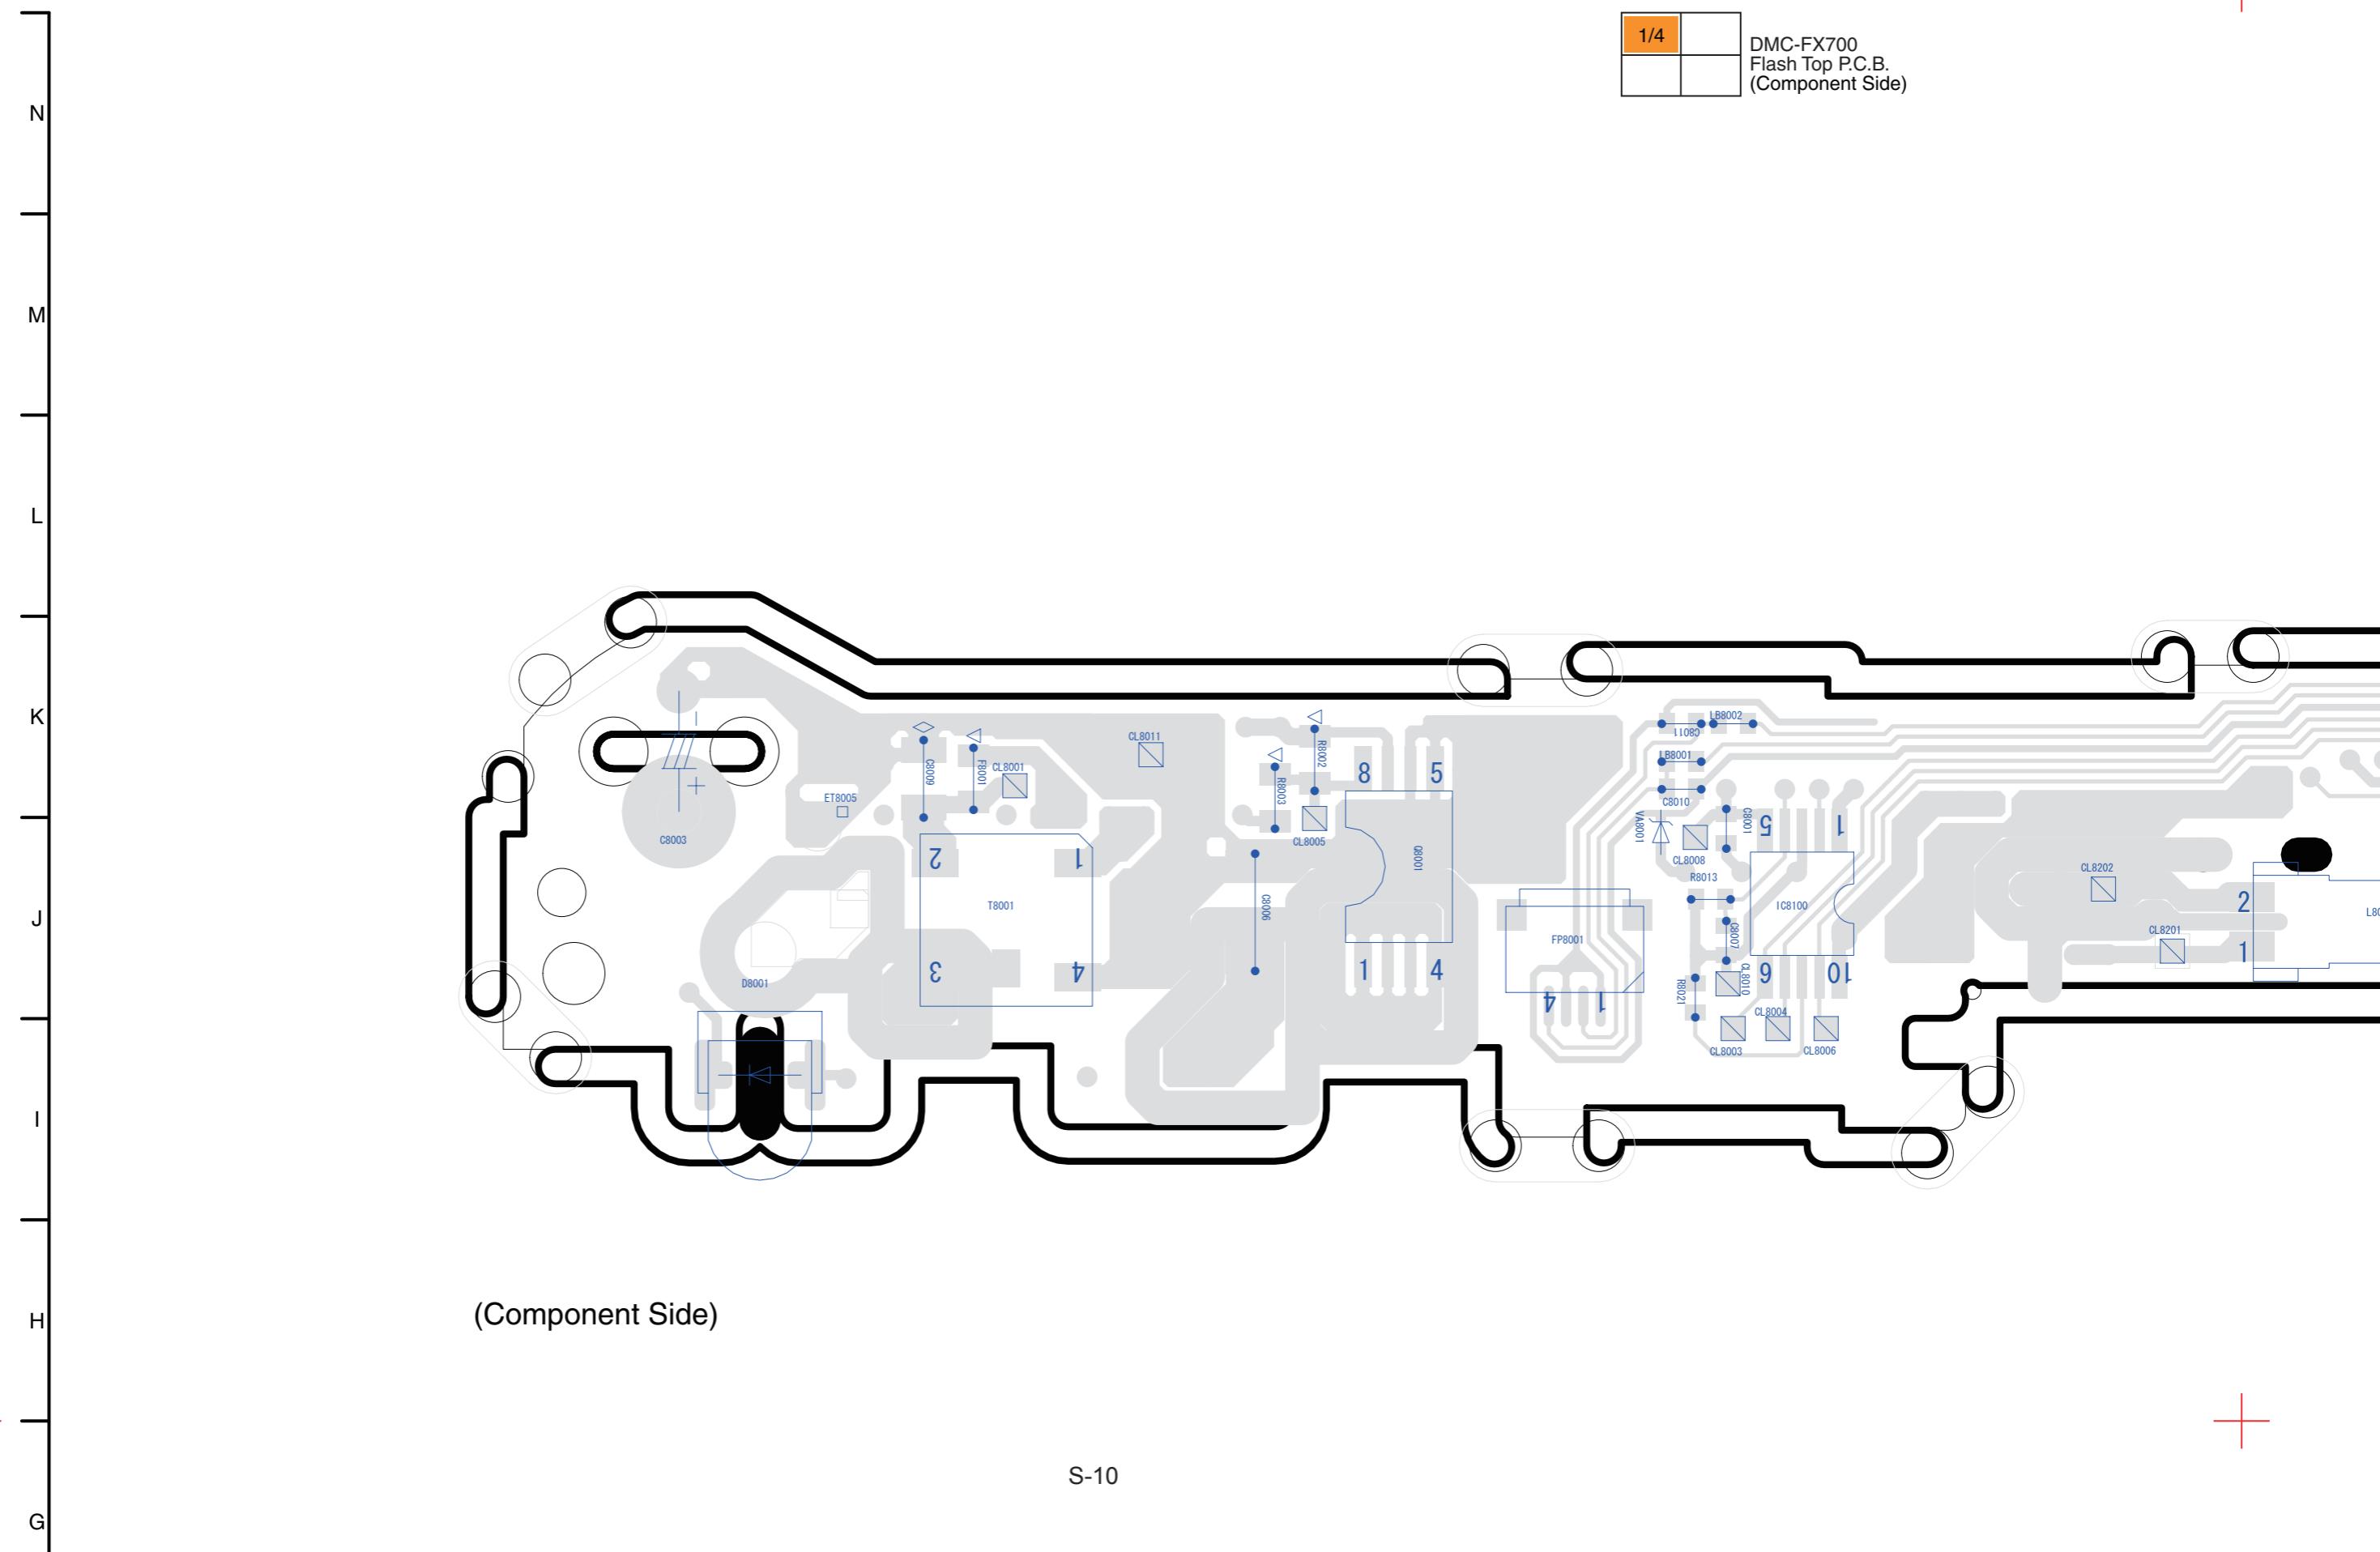


+

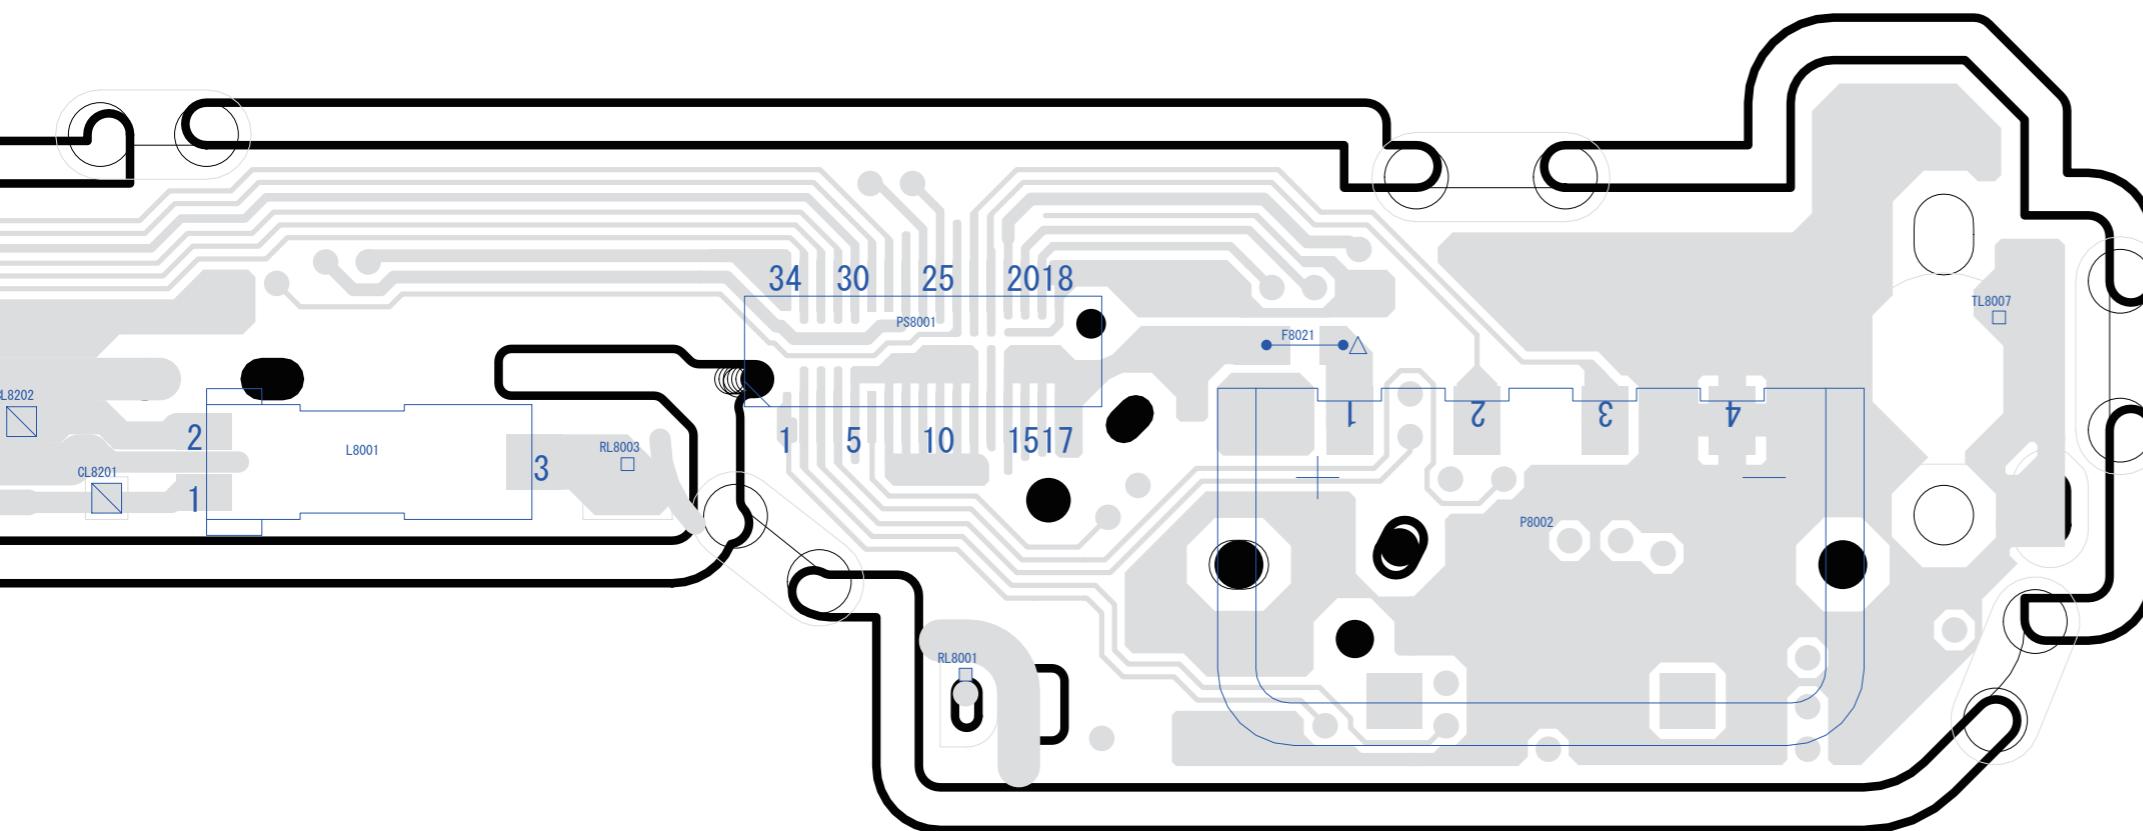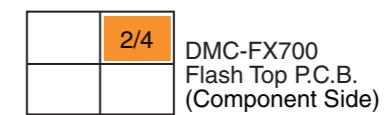


+

+


(Component Side)

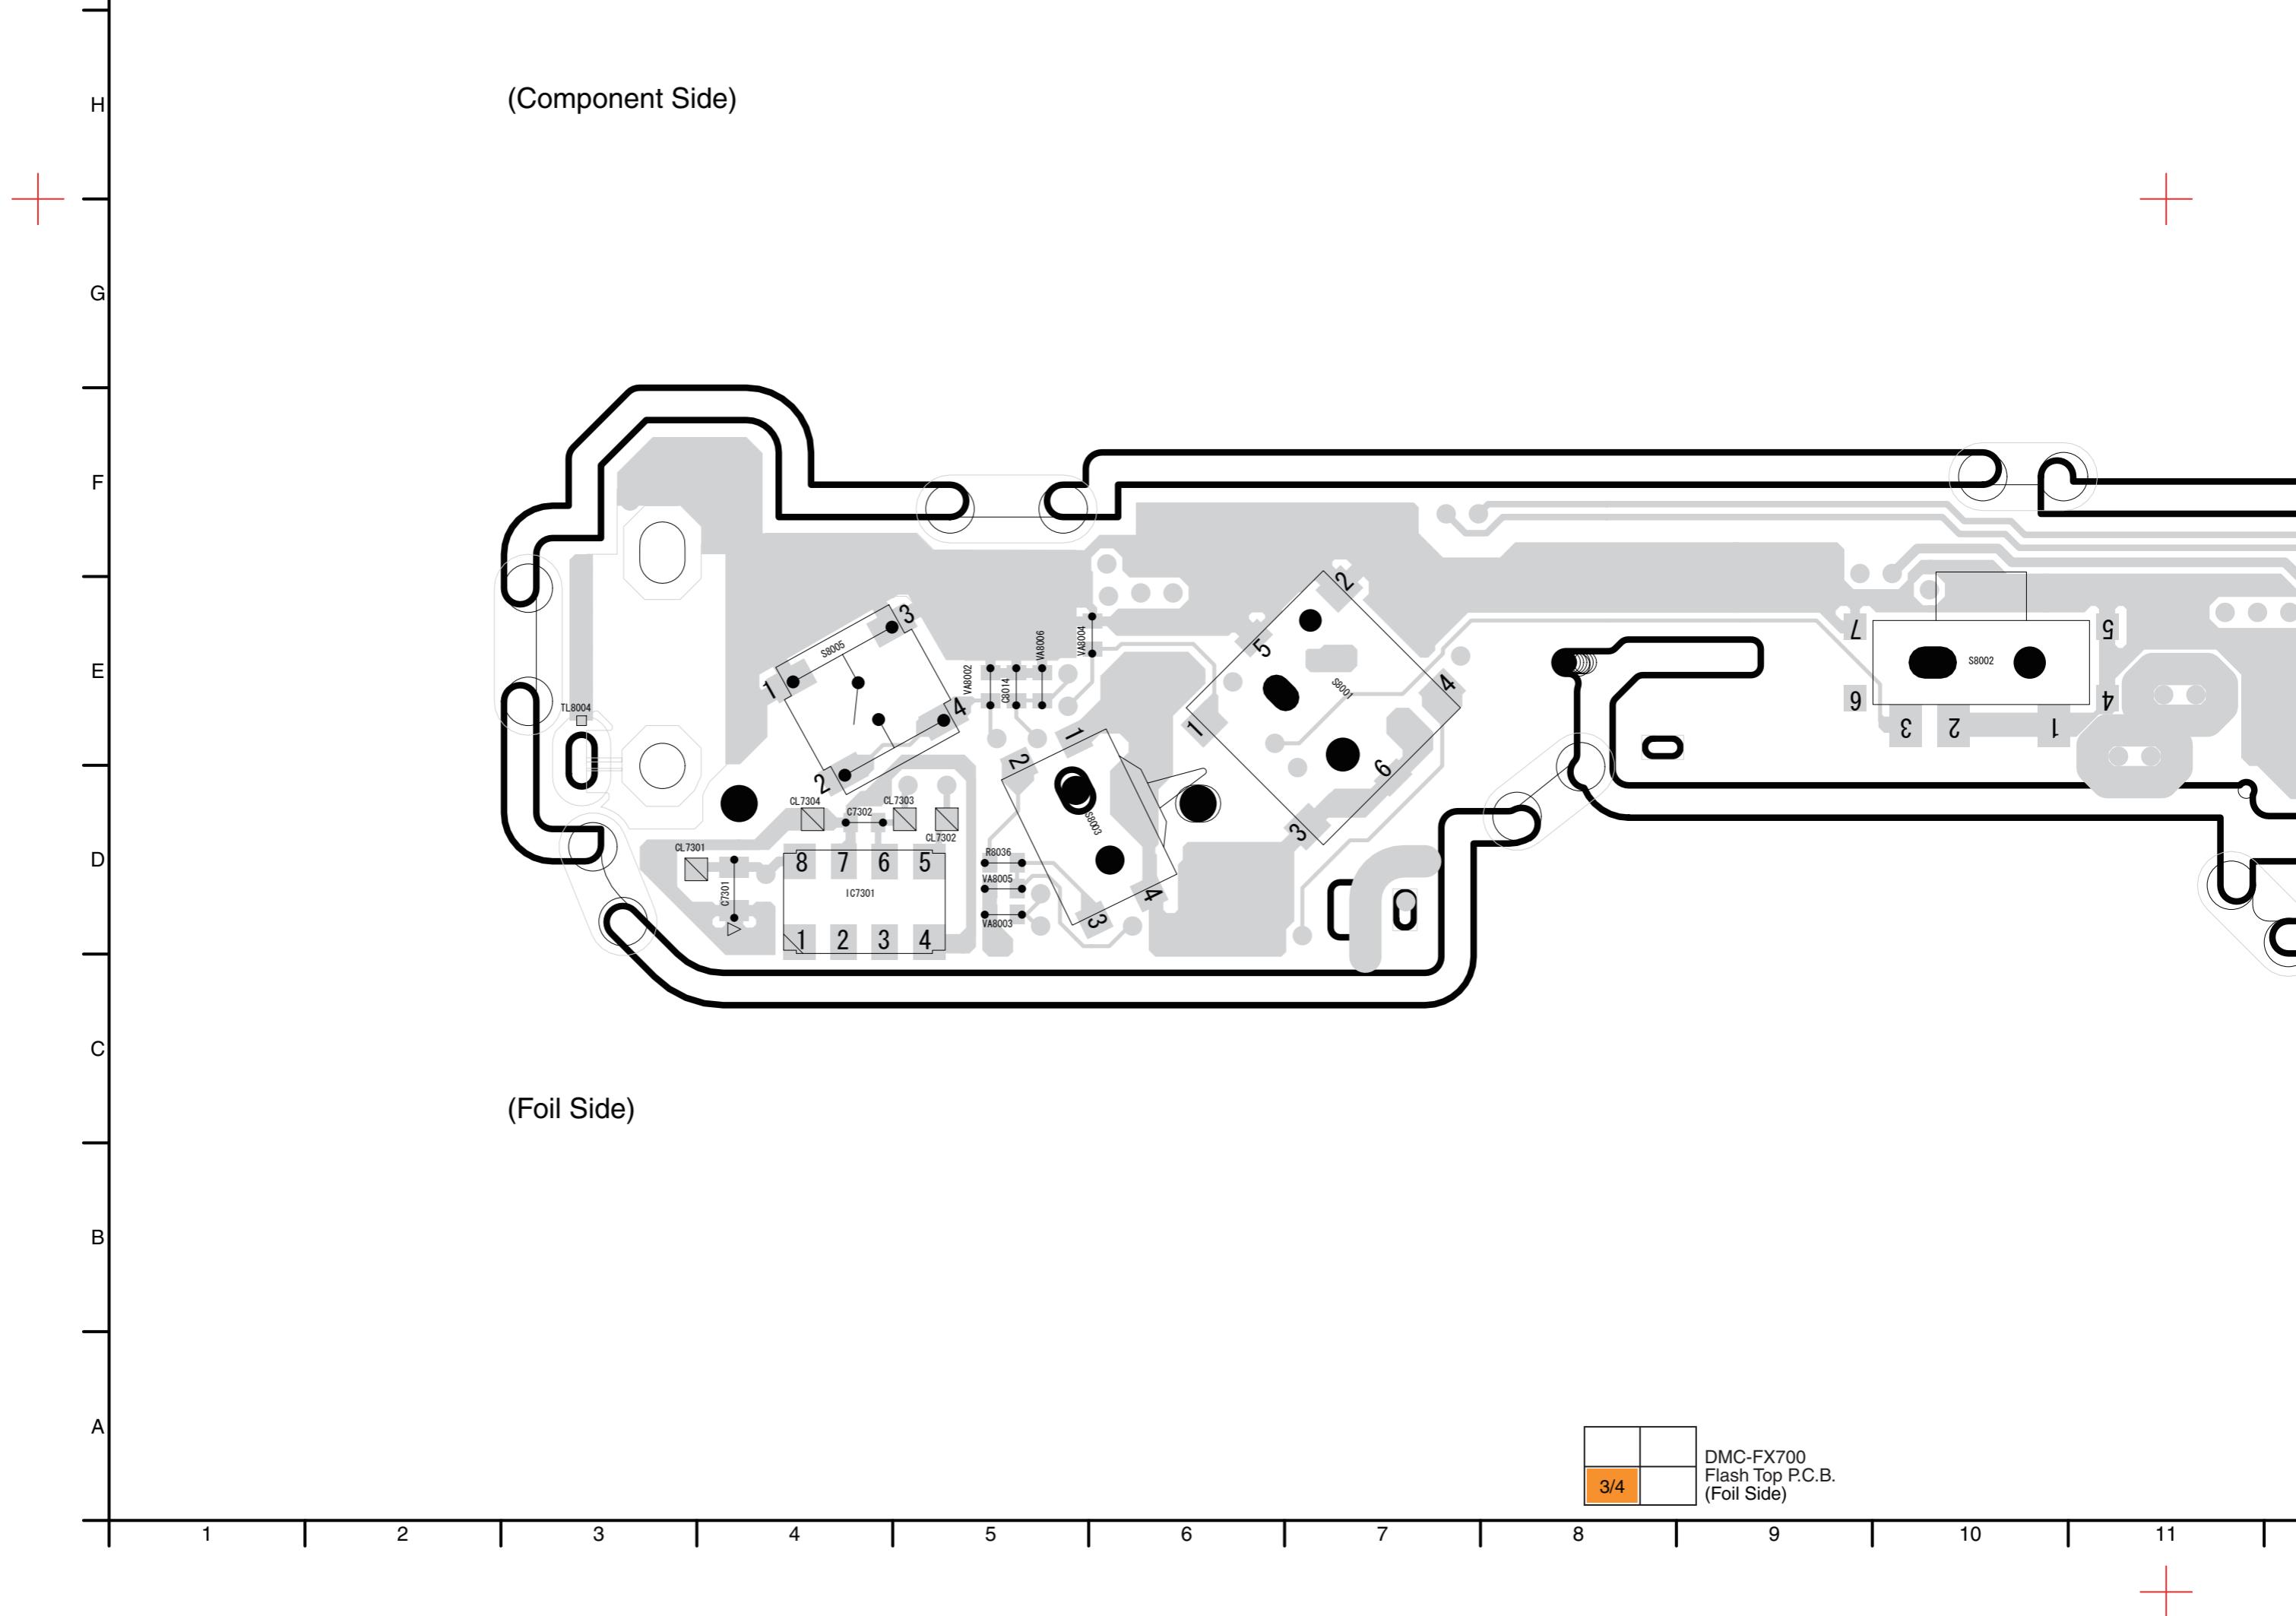

DMC-FX700
Flash Top P.C.B.
(Foil Side)

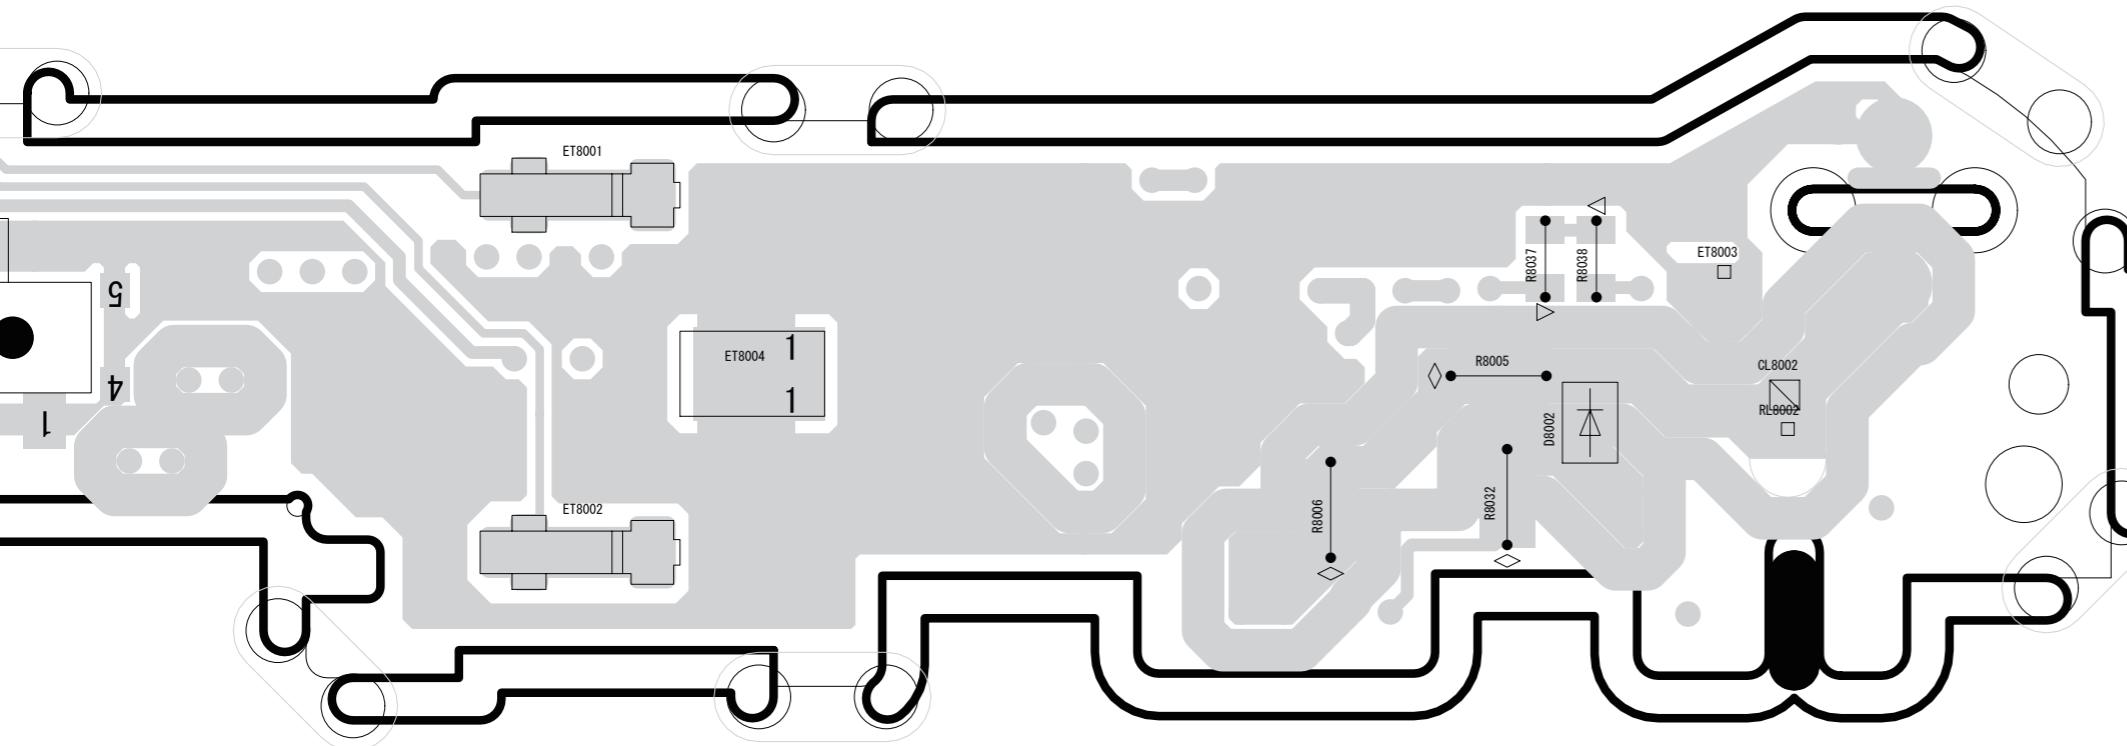


DMC-FX700
Flash Top P.C.B.
(Foil Side)

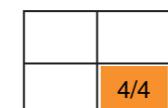

11 12 13 14 15 16 17 18 19 20 21



S5.3. Lens Flex P.C.B.

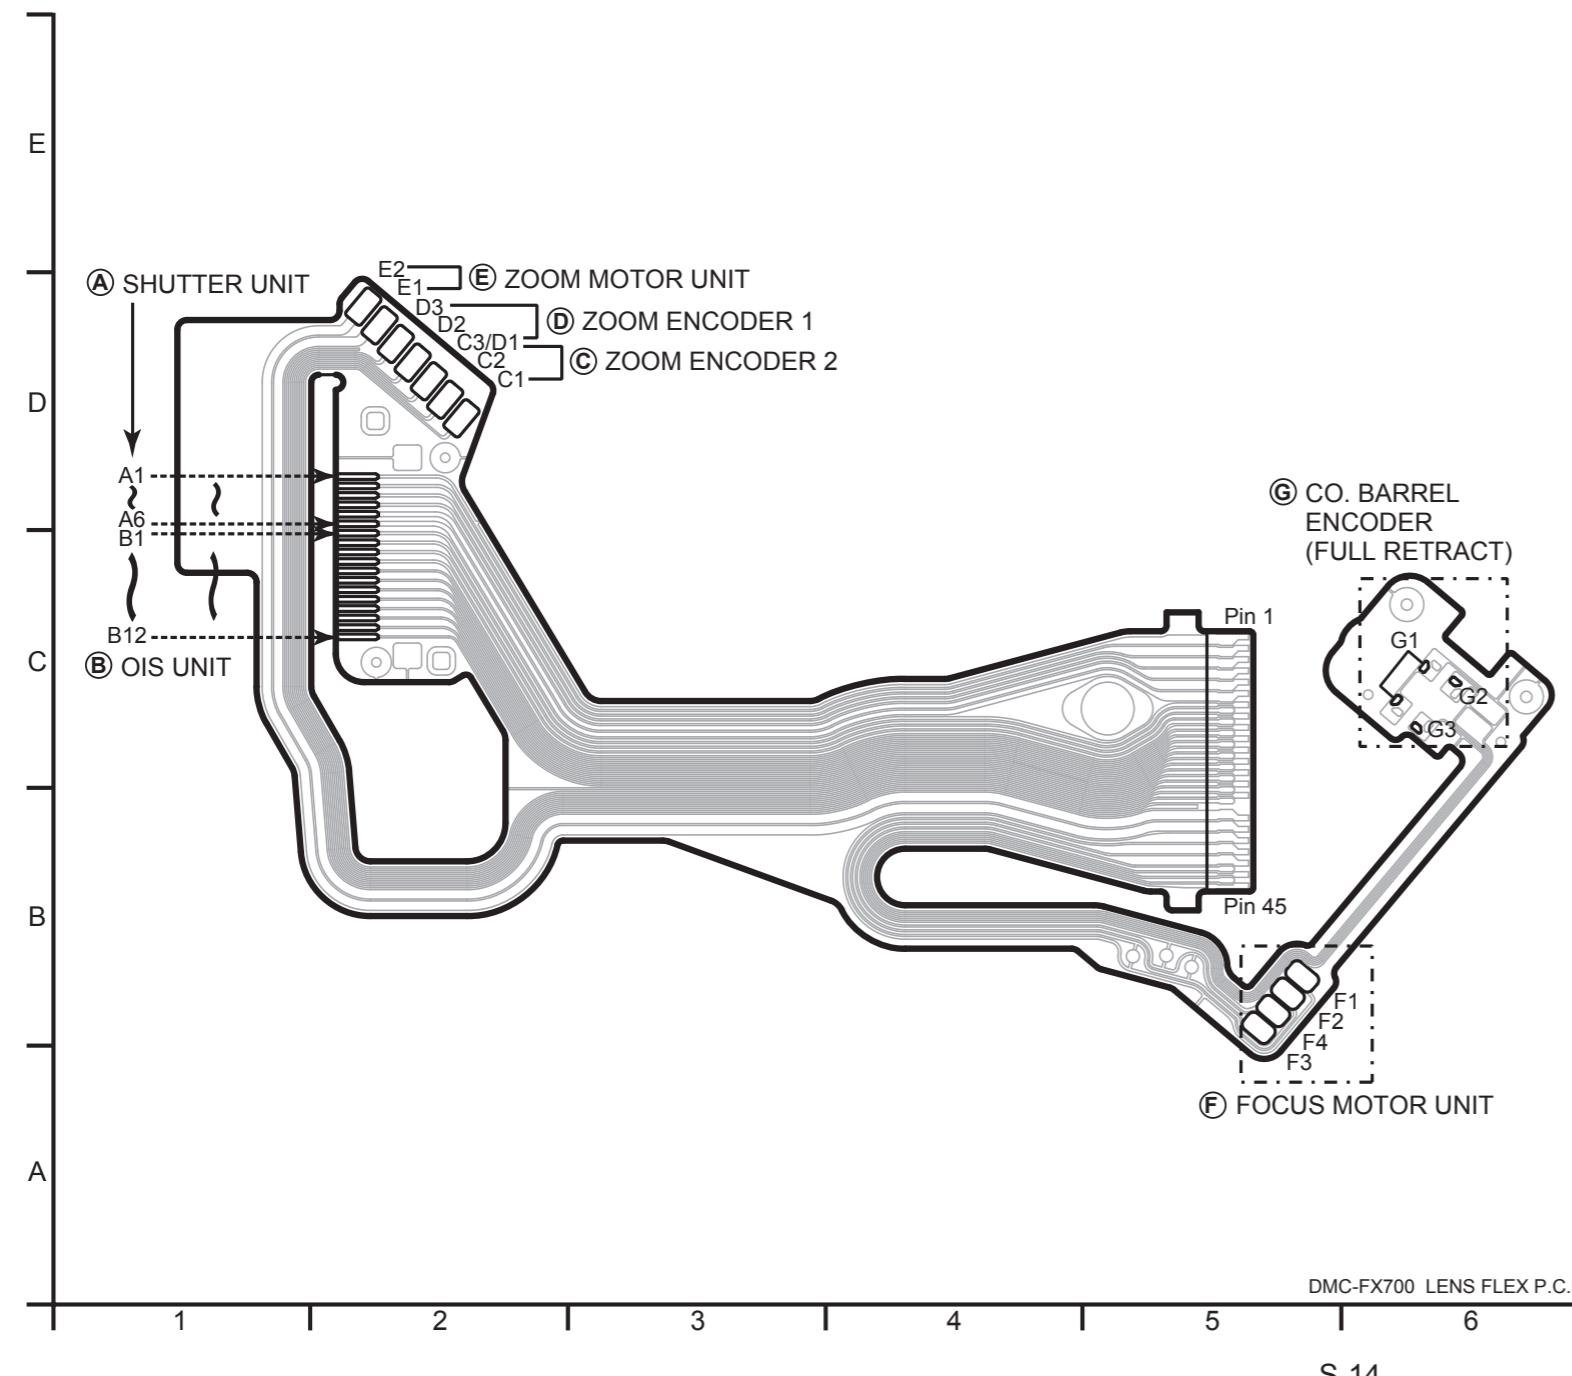

S6. Replacement Parts List

Note:

1. * Be sure to make your orders of replacement parts according to this list.
2. **IMPORTANT SAFETY NOTICE**
Components identified with the mark  have the special characteristics for safety.
When replacing any of these components, use only the same type.
3. Unless otherwise specified,
All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICRO-FARADS (uf), P=uuF.
4. The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.
5. Supply of CD-ROM, in accordance with license protection, is allowable as replacement parts only for customers who accidentally damaged or lost their own.

E.S.D. standards for Electrostatically Sensitive Devices, refer to PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES section.

Definition of Parts supplier:

1. Parts marked with [ENERGY] in the remarks column are supplied from Panasonic Corporation Energy Company.
2. Parts marked with [PAVCSG] in the remarks column are supplied from PAVCSG.
Others are supplied from AVC-CSC-SPC.

| Ref.No. | Part No. | Part Name & Description | Pcs | Remarks |
|---------|--------------|--------------------------|-----|--|
| ## | VEP56109B | MAIN P.C.B. | 1 | (RTL) E.S.D. EG,EP,EF,EB |
| ## | VEP56109A | MAIN P.C.B. | 1 | (RTL) E.S.D. EE,P,PC,PU, GC,GH,SG,GT,GK,GN,GD |
| ## | VEP59086A | SUB OPERATION FPC UNIT | 1 | (RTL) E.S.D. |
| ## | VEP58124A | FLASH TOP P.C.B. | 1 | (RTL) [PAVCSG] E.S.D. |
| | | | | |
| | | | | |
| ## | VEP59086A | SUB OPERATION FPC UNIT | | (RTL) E.S.D. |
| C7201 | F1H0J475A010 | C.CAPACITOR CH 6.3V 4.7U | 1 | |
| | | | | |
| FP9501 | K1MN04BA0162 | CONNECTOR 4P | 1 | |
| FP9502 | K1MN04BA0162 | CONNECTOR 4P | 1 | |
| IC7201 | L2ES00000021 | IC | 1 | E.S.D. |
| R9501 | ERJ2GEJ102X | M.RESISTOR CH 1/16W 1K | 1 | |
| S9501 | K0D112B00145 | SWITCH | 1 | |
| S9502 | K0F111A00541 | SWITCH | 1 | |
| S9503 | K0F111A00541 | SWITCH | 1 | |
| | | | | |
| ## | VEP58124A | FLASH TOP P.C.B. | | (RTL) [PAVCSG] E.S.D. |
| C7301 | F1H0J475A010 | C.CAPACITOR CH 6.3V 4.7U | 1 | [PAVCSG] |
| C8001 | F1G0J1050007 | C.CAPACITOR CH 6.3V 1U | 1 | [PAVCSG] |
| C8006 | F1K2E4730005 | C.CAPACITOR 250V 0.047U | 1 | [PAVCSG] |
| C8007 | F1G1H150A565 | C.CAPACITOR CH 50V 15 | 1 | [PAVCSG] |
| C8009 | F1J0J106A020 | C.CAPACITOR CH 6.3V 10U | 1 | [PAVCSG] |
| | | | | |
| D8001 | B3ADB0000142 | DIODE | 1 | [PAVCSG] E.S.D. |
| D8002 | B0ECFR000003 | DIODE | 1 | [PAVCSG] E.S.D. |
| | | | | |
| ET8001 | K4AC01D00001 | EARTH SPRING | 1 | [PAVCSG] |
| ET8002 | K4AC01D00001 | EARTH SPRING | 1 | [PAVCSG] |
| ET8004 | N9ZZ00000333 | EARTH SPRING | 1 | [PAVCSG] |
| △ F8001 | ERBSE1R25U | FUSE 32V 1.25A | 1 | [PAVCSG] |
| △ F8021 | ERBSE2R00U | FUSE 32V 2.0A | 1 | [PAVCSG] |
| | | | | |
| FP8001 | K1MN04BA0162 | CONNECTOR 4P | 1 | [PAVCSG] |
| IC7301 | L2ES00000022 | IC | 1 | [PAVCSG] E.S.D. |
| IC8100 | C02BZ0001710 | IC | 1 | [PAVCSG] E.S.D. |
| | | | | |
| L8001 | G5F1A0000026 | CHIP INDUCTOR | 1 | [PAVCSG] |
| | | | | |
| LB8001 | J0JCC0000415 | FILTER | 1 | [PAVCSG] |
| LB8002 | J0JCC0000415 | FILTER | 1 | [PAVCSG] |
| | | | | |
| P8002 | K4ZZ04000054 | CONNECTOR 4P | 1 | [PAVCSG] |
| | | | | |
| PS8001 | K1KB34AA0123 | CONNECTOR 34P | 1 | [PAVCSG] |
| | | | | |
| Q8001 | B1JBLP000022 | TRANSISTOR | 1 | [PAVCSG] E.S.D. |
| | | | | |
| R8002 | ERJ3GEYJ104V | M.RESISTOR CH 1/10W 100K | 1 | [PAVCSG] |
| R8003 | ERJ3GEYJ680V | M.RESISTOR CH 1/10W 68 | 1 | [PAVCSG] |
| R8005 | ERJ6GEYJ514V | M.RESISTOR CH 1/10W 514K | 1 | [PAVCSG] |
| R8006 | ERJ6GEYJ514V | M.RESISTOR CH 1/10W 514K | 1 | [PAVCSG] |
| R8013 | ERJ2RHD1621X | M.RESISTOR CH 1/16W 1620 | 1 | [PAVCSG] |
| R8021 | ERJ2GEJ473X | M.RESISTOR CH 1/16W 47K | 1 | [PAVCSG] |
| R8032 | D1BD4703A119 | RESISTOR | 1 | [PAVCSG] |
| R8036 | ERJ2GEJ103X | M.RESISTOR CH 1/10W 10K | 1 | [PAVCSG] |
| R8037 | ERJ3GEYJ100V | M.RESISTOR CH 1/10W 10 | 1 | [PAVCSG] |
| R8038 | ERJ3GEYJ100V | M.RESISTOR CH 1/10W 10 | 1 | [PAVCSG] |
| | | | | |
| S8001 | K0F212A00005 | SWITCH | 1 | [PAVCSG] |
| S8002 | K0D112B00145 | SWITCH | 1 | [PAVCSG] |
| S8003 | K0L1CB000003 | SWITCH | 1 | [PAVCSG] |
| S8005 | K0F111A00541 | SWITCH | 1 | [PAVCSG] |
| | | | | |
| T8001 | G5D1A0000080 | TRANSFORMER | 1 | [PAVCSG] |


| Ref.No. | Part No. | Part Name & Description | Pcs | Remarks | Ref.No. | Part No. | Part Name & Description | Pcs | Remarks |
|---------|--------------|----------------------------|-----|--|---------|--------------|-------------------------|-----|---------|
| 1 | VGK3649 | SIDE ORNAMENT (R) | 1 | [PAVCSG] | B52 | VHD2240 | SCREW | 1 | |
| 2 | YVK4F74 | FRONT CASE UNIT | 1 | PCS,GCS,GHS,SGS,GKS [PAVCSG] | B53 | VHD2240 | SCREW | 1 | |
| 2 | YVK4F75 | FRONT CASE UNIT | 1 | P-S [PAVCSG] | B54 | VHD2240 | SCREW | 1 | |
| 2 | YVK4F76 | FRONT CASE UNIT | 1 | EGK,EPK,EFK,EBK,EEK,PCK, PUK,GCK,GHK,SGK,GTK,GKK, GNK,GDK [PAVCSG] | B55 | VHD2240 | SCREW | 1 | |
| 2 | YVK4F77 | FRONT CASE UNIT | 1 | P-K [PAVCSG] | B56 | VHD2240 | SCREW | 1 | |
| 2 | YVK4F78 | FRONT CASE UNIT | 1 | (-N) [PAVCSG] | B57 | VHD2240 | SCREW | 1 | |
| 2 | YVK4F79 | FRONT CASE UNIT | 1 | (-W) [PAVCSG] | B58 | XQN16+BJ7FJK | SCREW | 1 | |
| 3 | YVK4G39 | REAR CASE UNIT | 1 | [PAVCSG] | B59 | XQN16+BJ7FJK | SCREW | 1 | |
| 3-1 | VGU0G27 | MENU BUTTON | 1 | [PAVCSG] | B60 | XQN16+BJ7FJK | SCREW | 1 | |
| 4 | YVK4G30 | BATTERY DOOR UNIT | 1 | (-S) [PAVCSG] | B101 | VHD2244 | SCREW | 1 | |
| 4 | YVK4G31 | BATTERY DOOR UNIT | 1 | (-K) [PAVCSG] | B102 | VHD2244 | SCREW | 1 | |
| 4 | YVK4G32 | BATTERY DOOR UNIT | 1 | (-N) [PAVCSG] | B103 | VHD2244 | SCREW | 1 | |
| 4 | YVK4G33 | BATTERY DOOR UNIT | 1 | (-W) [PAVCSG] | B105 | VHD2011 | SCREW | 1 | |
| 4-1 | VMB4143 | BATTERY DOOR SPRING | 1 | [PAVCSG] | B106 | XQN14+BJ4FNK | SCREW | 1 | |
| 4-2 | VMS7863 | BATTERY DOOR SHAFT | 1 | [PAVCSG] | B107 | XQN14+BJ4FNK | SCREW | 1 | |
| 5 | YVK4G48 | FRAME UNIT | 1 | [PAVCSG] | B108 | XQN14+BJ4FNK | SCREW | 1 | |
| 5-1 | VGQ0M78 | BATTERY LOCK KNOB | 1 | [PAVCSG] | B109 | XQN14+BJ4FNK | SCREW | 1 | |
| 5-2 | VKH0454 | STRAP HOLDER | 1 | [PAVCSG] | B110 | XQN14+BJ4FNK | SCREW | 1 | |
| 5-3 | VMB4152 | BATTERY LOCK SPRING | 1 | [PAVCSG] | B111 | XQN14+BJ4FNK | SCREW | 1 | |
| 5-4 | VMB4337 | BATTERY OUT SPRING | 1 | [PAVCSG] | B112 | XQN14+BJ4FNK | SCREW | 1 | |
| 12 | L0AA01A00032 | SPEAKER | 1 | [PAVCSG] | | | | | |
| 13 | VGL1290 | AF PANEL LIGHT | 1 | [PAVCSG] | | | | | |
| 14 | VGQ0Q92 | TOP CUSHION A | 1 | [PAVCSG] | | | | | |
| 15 | VGQ0Q93 | TOP CUSHION B | 1 | [PAVCSG] | | | | | |
| 16 | YVK4F73 | TOP CASE UNIT | 1 | [PAVCSG] | | | | | |
| 18 | WM-G10DT653 | MIC UNIT | 1 | [PAVCSG] | | | | | |
| ▲ 19 | F2A2F7800001 | E.CAPACITOR | 1 | [PAVCSG] (C8003) | | | | | |
| 20 | VEK0Q50 | FLASH UNIT | 1 | [PAVCSG] | | | | | |
| 21 | VEP58124A | FLASH TOP P.C.B. | 1 | (RTL) [PAVCSG] E.S.D. | | | | | |
| 22 | VMB4278 | EARTH SPRING | 1 | [PAVCSG] (ET8003) | | | | | |
| 23 | VMP9698 | TOP PLATE | 1 | [PAVCSG] (ET8005) | | | | | |
| 25 | YVK4G46 | FRAME PLATE ASSY | 1 | [PAVCSG] | | | | | |
| 28 | VGQ0R79 | FRAME PLATE SHEET | 1 | [PAVCSG] | | | | | |
| 30 | VGK3648 | SIDE ORNAMENT (L) | 1 | [PAVCSG] | | | | | |
| 31 | VKF4721 | JACK DOOR | 1 | [PAVCSG] | | | | | |
| 32 | VMS8049-A | JACK DOOR SHAFT | 1 | [PAVCSG] | | | | | |
| 33 | VGQ0R13 | CUSHION A | 1 | [PAVCSG] | | | | | |
| 34 | VGQ0R67 | CONDENSER SHEET | 1 | [PAVCSG] | | | | | |
| ▲ 50 | ML-421S/ZTK | BUTTON BATTERY | 1 | [ENERGY] (B9101) | | | | | |
| 51 | VEP56109B | MAIN P.C.B. | 1 | (RTL) E.S.D. EG,EP,EF,EB | | | | | |
| 51 | VEP56109A | MAIN P.C.B. | 1 | (RTL) E.S.D. EE,P,PC,PU, GC,GH,SG,GT,GK,GN,GD | | | | | |
| 52 | VEP59086A | SUB OPERATION FPC UNIT | 1 | (RTL) E.S.D. | | | | | |
| 53 | VGQ0N13 | PCB FRAME | 1 | | | | | | |
| 54 | VGU0G28 | REC/PLAYBACK SELECTOR KNOB | 1 | | | | | | |
| 55 | YVK4E33 | LCD UNIT | 1 | | | | | | |
| 55-1 | YVK4K16 | TOUCH PANEL UNIT | 1 | | | | | | |
| 56 | VGQ0Q97 | DPR SHEET A | 1 | | | | | | |
| 57 | VGQ0R20 | GRAPHITE SHEET | 1 | | | | | | |
| 58 | VMP9697 | TRIPOD | 1 | | | | | | |
| 60 | VGQ0L26 | DPR SHEET B | 1 | | | | | | |
| 61 | VGQ0R74 | LCD SHEET | 1 | | | | | | |
| 100 | VXW1194 | LENS UNIT (W/O MOS) | 1 | | | | | | |
| 102 | VEK0Q97 | MOS UNIT | 1 | | | | | | |
| 103 | L6DAYYYD0001 | ZOOM MOTOR | 1 | | | | | | |
| 104 | VEK0Q55 | LENS FPC P.C.B. UNIT | 1 | | | | | | |
| 104-1 | B3NBA0000018 | PHOTO SENSOR | 1 | | | | | | |
| 105 | VXP3520 | 1ST LENS FRAME UNIT | 1 | | | | | | |
| 106 | VXP3466 | 2ND LENS FRAME UNIT | 1 | | | | | | |
| 107 | VXP3471 | FIXED/DRIVE/CAM FRAME UNIT | 1 | | | | | | |
| 108 | VXQ1938 | MASTER FLANGE UNIT | 1 | | | | | | |
| 108-1 | L6HA64NC0022 | FOCUS MOTOR UNIT | 1 | | | | | | |
| 108-2 | VMB4308 | FOCUS SPRING | 1 | | | | | | |
| 108-3 | VXP3477 | 3RD LENS FRAME UNIT | 1 | | | | | | |
| 109 | VMB4399 | ADJUSTMENT SPRING | 1 | | | | | | |
| 110 | VMB4399 | ADJUSTMENT SPRING | 1 | | | | | | |
| | | | | | | | | | |
| B1 | VHD1998 | SCREW | 1 | [PAVCSG] | | | | | |
| B2 | VHD1998 | SCREW | 1 | [PAVCSG] | | | | | |
| B50 | VHD2102 | SCREW | 1 | | | | | | |
| B51 | VHD2102 | SCREW | 1 | | | | | | |

| Ref.No. | Part No. | Part Name & Description | Pcs | Remarks |
|---------|--------------|-------------------------|-----|--|
| 300 | VPF1317 | CAMERA BAG | 1 | EXCEPT P,PC,PU |
| △ 301 | DE-A60AA | BATTERY CHARGER | 1 | EG,EP,EF,EB,GN |
| △ 301 | DE-A60BB | BATTERY CHARGER | 1 | EE,GC,GH,GK,GD |
| △ 301 | DE-A60EA | BATTERY CHARGER | 1 | SG |
| △ 301 | DE-A60CA | BATTERY CHARGER | 1 | GT |
| △ 302 | ---- | BATTERY | 1 | EXCEPT P,PC,PU |
| 304 | K1HA08AD0002 | USB CABLE W/PLUG | 1 | EXCEPT P,PC,PU |
| 305 | K1HA08CD0028 | AV CABLE W/PLUG | 1 | EXCEPT P,PC,PU |
| 306 | VFC4297 | HAND STRAP | 1 | EXCEPT P,PC,PU |
| △ 307 | VFF0688-S | CD-ROM | 1 | EG,EP,EF,EB (SOFTWARE/INSTRUCTION BOOK) See "Notes" |
| △ 307 | VFF0689-S | CD-ROM | 1 | EE,SG (SOFTWARE/INSTRUCTION BOOK) See "Notes" |
| △ 307 | VFF0690-S | CD-ROM | 1 | GC,GH,GN (SOFTWARE/INSTRUCTION BOOK) See "Notes" |
| △ 307 | VFF0691-S | CD-ROM | 1 | GT,GD (SOFTWARE/INSTRUCTION BOOK) See "Notes" |
| △ 307 | VFF0692-S | CD-ROM | 1 | GK (SOFTWARE/INSTRUCTION BOOK) See "Notes" |
| 308 | VGQ0D56 | BATTERY PROTECTION CASE | 1 | EXCEPT P,PC,PU |
| 310 | VPF1230 | BAG, POLYETHYLENE | 1 | EXCEPT P,PC,PU |
| 311 | VQC7743 | O/I SOFTWARE | 1 | EG (GERMAN/FRENCH/ITALIAN/ DUTCH/SPANISH/PORTUGUESE/ TURKISH) |
| 311 | VQC7744 | O/I SOFTWARE | 1 | EP (FINNISH/SWEDISH/DANISH/ POLISH/CZECH/HUNGARIAN) |
| 311 | VQC7745 | O/I SOFTWARE | 1 | EF (FRENCH) |
| 311 | VQC7746 | O/I SOFTWARE | 1 | EB,GN (ENGLISH) |
| 311 | VQC7747 | O/I SOFTWARE | 1 | EE (RUSSIAN/UKRAINIAN) |
| 311 | VQC7748 | O/I SOFTWARE | 1 | GC,GH,SG (ENGLISH/ CHINESE(TRADITIONAL)/ ARABIC/PERSIAN) |
| 311 | VQC7749 | O/I SOFTWARE | 1 | GT (CHINESE(TRADITIONAL)) |
| 311 | VQC7750 | O/I SOFTWARE | 1 | GK (CHINESE(SIMPLIFIED)) |
| 311 | VQC7751 | O/I SOFTWARE | 1 | GD (KOREAN) |
| △ 313 | VQT2X86 | SIMPLIFIED O/I | 1 | EG (GERMAN/FRENCH) |
| △ 313 | VQT2X87 | SIMPLIFIED O/I | 1 | EG (ITALIAN/DUTCH) |
| △ 313 | VQT2X88 | SIMPLIFIED O/I | 1 | EG (SPANISH/PORTUGUESE) |
| △ 313 | VQT2X89 | SIMPLIFIED O/I | 1 | EG (TURKISH) |
| △ 313 | VQT2X90 | SIMPLIFIED O/I | 1 | EP (SWEDISH/DANISH) |
| △ 313 | VQT2X91 | SIMPLIFIED O/I | 1 | EP (POLISH/CZECH) |
| △ 313 | VQT2X92 | SIMPLIFIED O/I | 1 | EP (HUNGARIAN/FINNISH) |
| △ 313 | VQT2X93 | SIMPLIFIED O/I | 1 | EF (FRENCH) |
| △ 313 | VQT2X94 | SIMPLIFIED O/I | 1 | EB (ENGLISH) |
| △ 313 | VQT2X95 | SIMPLIFIED O/I | 1 | EE (RUSSIAN/UKRAINIAN) |
| △ 313 | VQT2X96 | SIMPLIFIED O/I | 1 | GC,GH,SG (ENGLISH/ CHINESE(TRADITIONAL)) |
| △ 313 | VQT2X97 | SIMPLIFIED O/I | 1 | GC (ARABIC/PERSIAN) |
| △ 313 | VQT2X98 | SIMPLIFIED O/I | 1 | GT (CHINESE(TRADITIONAL)) |
| △ 313 | VQT2X99 | SIMPLIFIED O/I | 1 | GK (CHINESE(SIMPLIFIED)) |
| △ 313 | VQT2Y00 | SIMPLIFIED O/I | 1 | GN (ENGLISH) |


| Ref.No. | Part No. | Part Name & Description | Pcs | Remarks |
|---------|--------------|-------------------------|-----|---|
| △ 313 | VQT2Y01 | INSTRUCTION BOOK | 1 | GD (KOREAN) |
| 314 | VPK4564 | PACKING CASE | 1 | EGK,EPK,EFK,EBK,EKK,GCK, GHK,SGK,GNK, |
| 314 | VPK4564 | PACKING CASE | 1 | GTK,GDK Please use the attached Ref. No.317 (NTSC LABEL). |
| 314 | VPK4560 | PACKING CASE | 1 | GCS,GHS,SGS |
| 314 | VPK4567 | PACKING CASE | 1 | GCN,SGN |
| 314 | VPK4567 | PACKING CASE | 1 | GTN,GDN Please use the attached Ref. No.317 (NTSC LABEL). |
| 314 | VPK4570 | PACKING CASE | 1 | GCW,GHW,SGW |
| 314 | VPK4570 | PACKING CASE | 1 | GTW,GDW Please use the attached Ref. No.317 (NTSC LABEL). |
| 314 | VPK4561 | PACKING CASE | 1 | GKS |
| 314 | VPK4565 | PACKING CASE | 1 | GKK |
| 314 | VPK4568 | PACKING CASE | 1 | GKN |
| 315 | VPN7130 | CUSHION | 1 | EXCEPT P,PC,PU |
| 317 | VQL1Z22 | NTSC LABEL | 1 | GT,GD |
| 318 | VGQ0C14 | TOUCH PEN | 1 | EXCEPT P,PC,PU |
| △ 319 | K2CT39A00002 | AC CORD W/PLUG | 1 | EB,GC,GH |
| △ 320 | K2CQ29A00002 | AC CORD W/PLUG | 1 | EG,EP,EF,EE,GC |
| △ 320 | K2CR29A00001 | AC CORD W/PLUG | 1 | GD |
| △ 321 | K2CJ29A00002 | AC CORD W/PLUG | 1 | GN |
| △ 322 | K2CA29A00023 | AC CORD W/PLUG | 1 | SG |
| △ 322 | K2CA29A00021 | AC CORD W/PLUG | 1 | GT |
| △ 322 | K2CA2YY00070 | AC CORD W/PLUG | 1 | GK |
| 324 | VQL2C68-1 | OPERATING LABEL | 1 | GT |
| 325 | VPN7138 | PAD | 1 | EXCEPT P,PC,PU |
| 326 | VPN7156 | PAD | 1 | EXCEPT P,PC,PU |

S7. Exploded View

S7.1. Frame and Casing Section

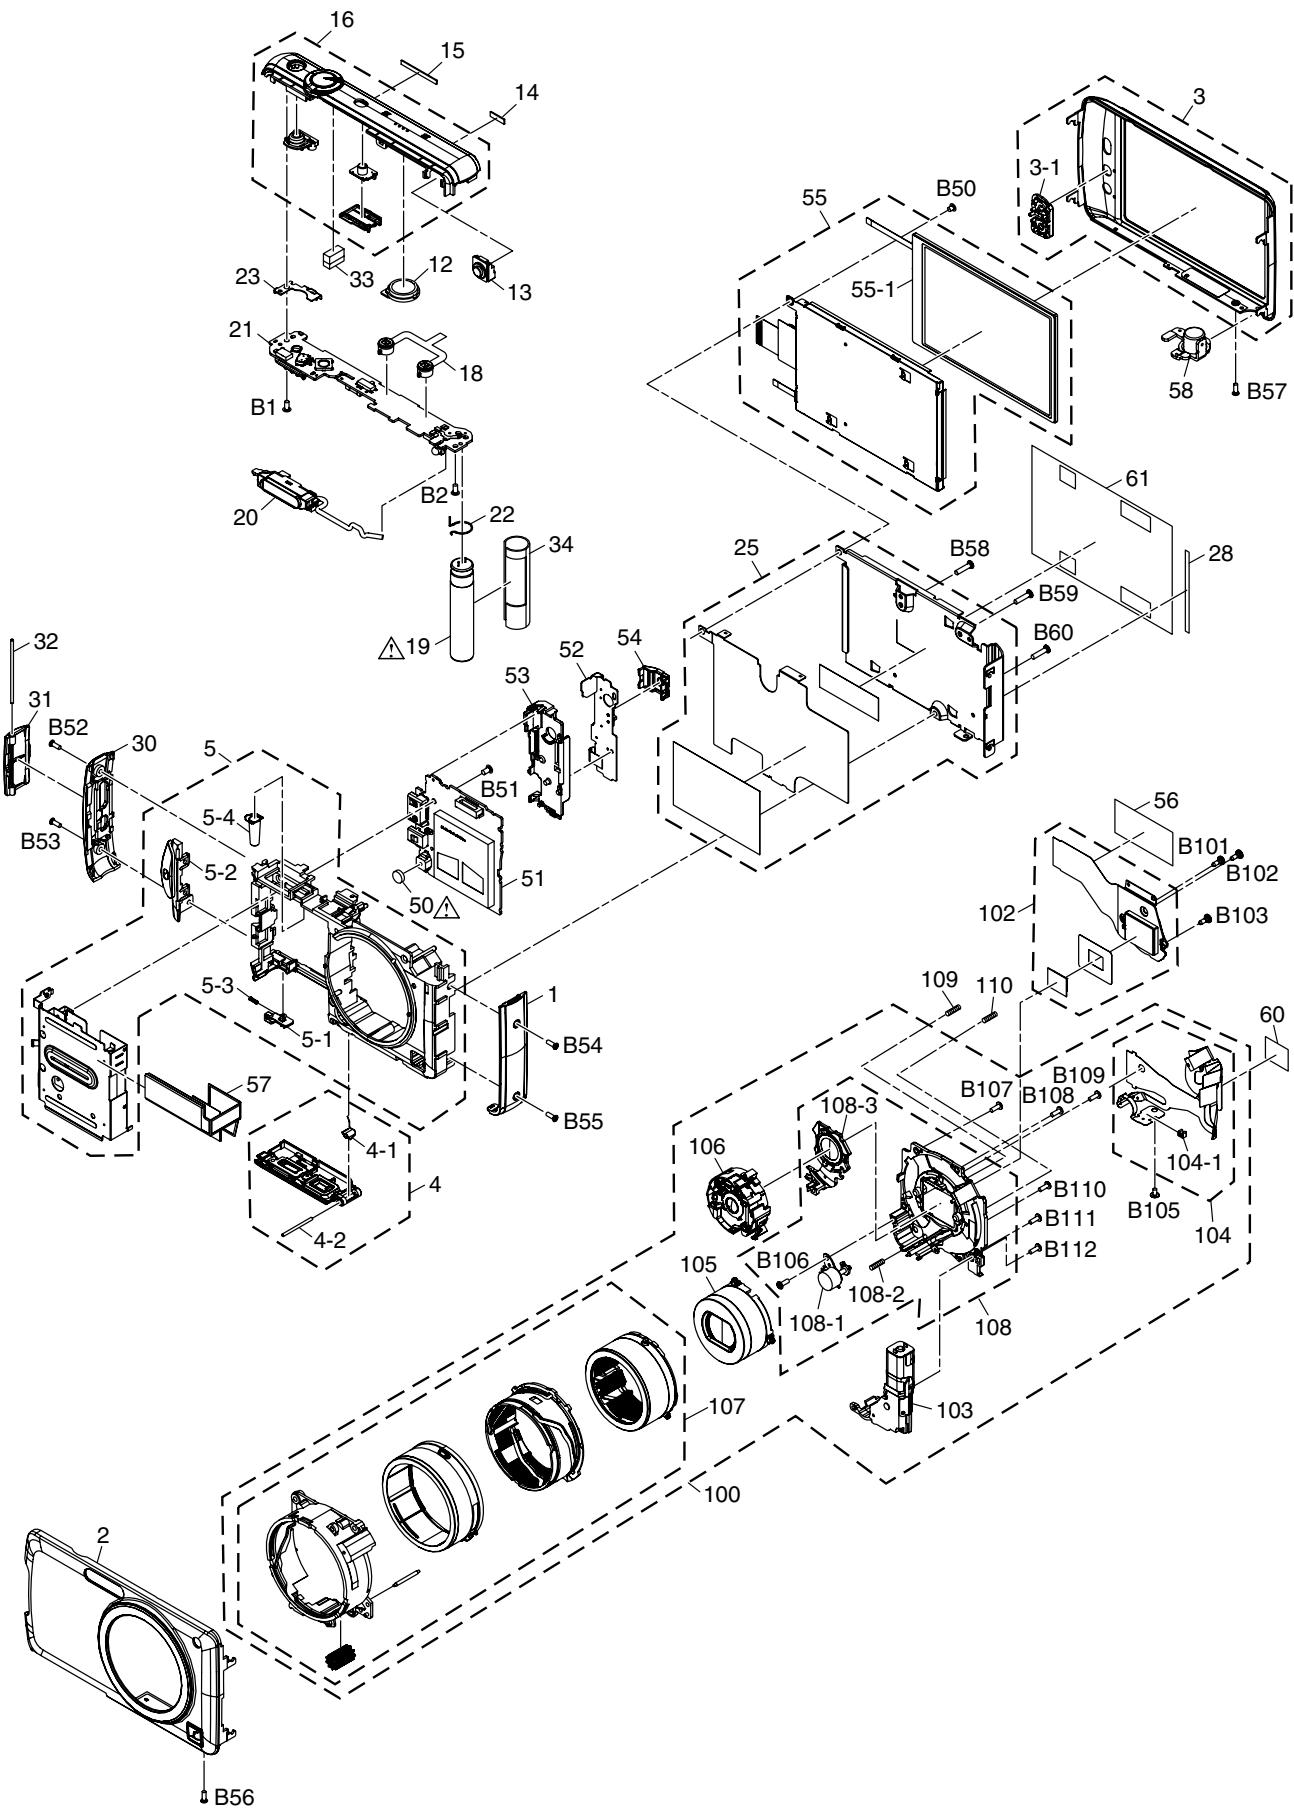

S7.2. Packing Parts and Accessories Section (1)

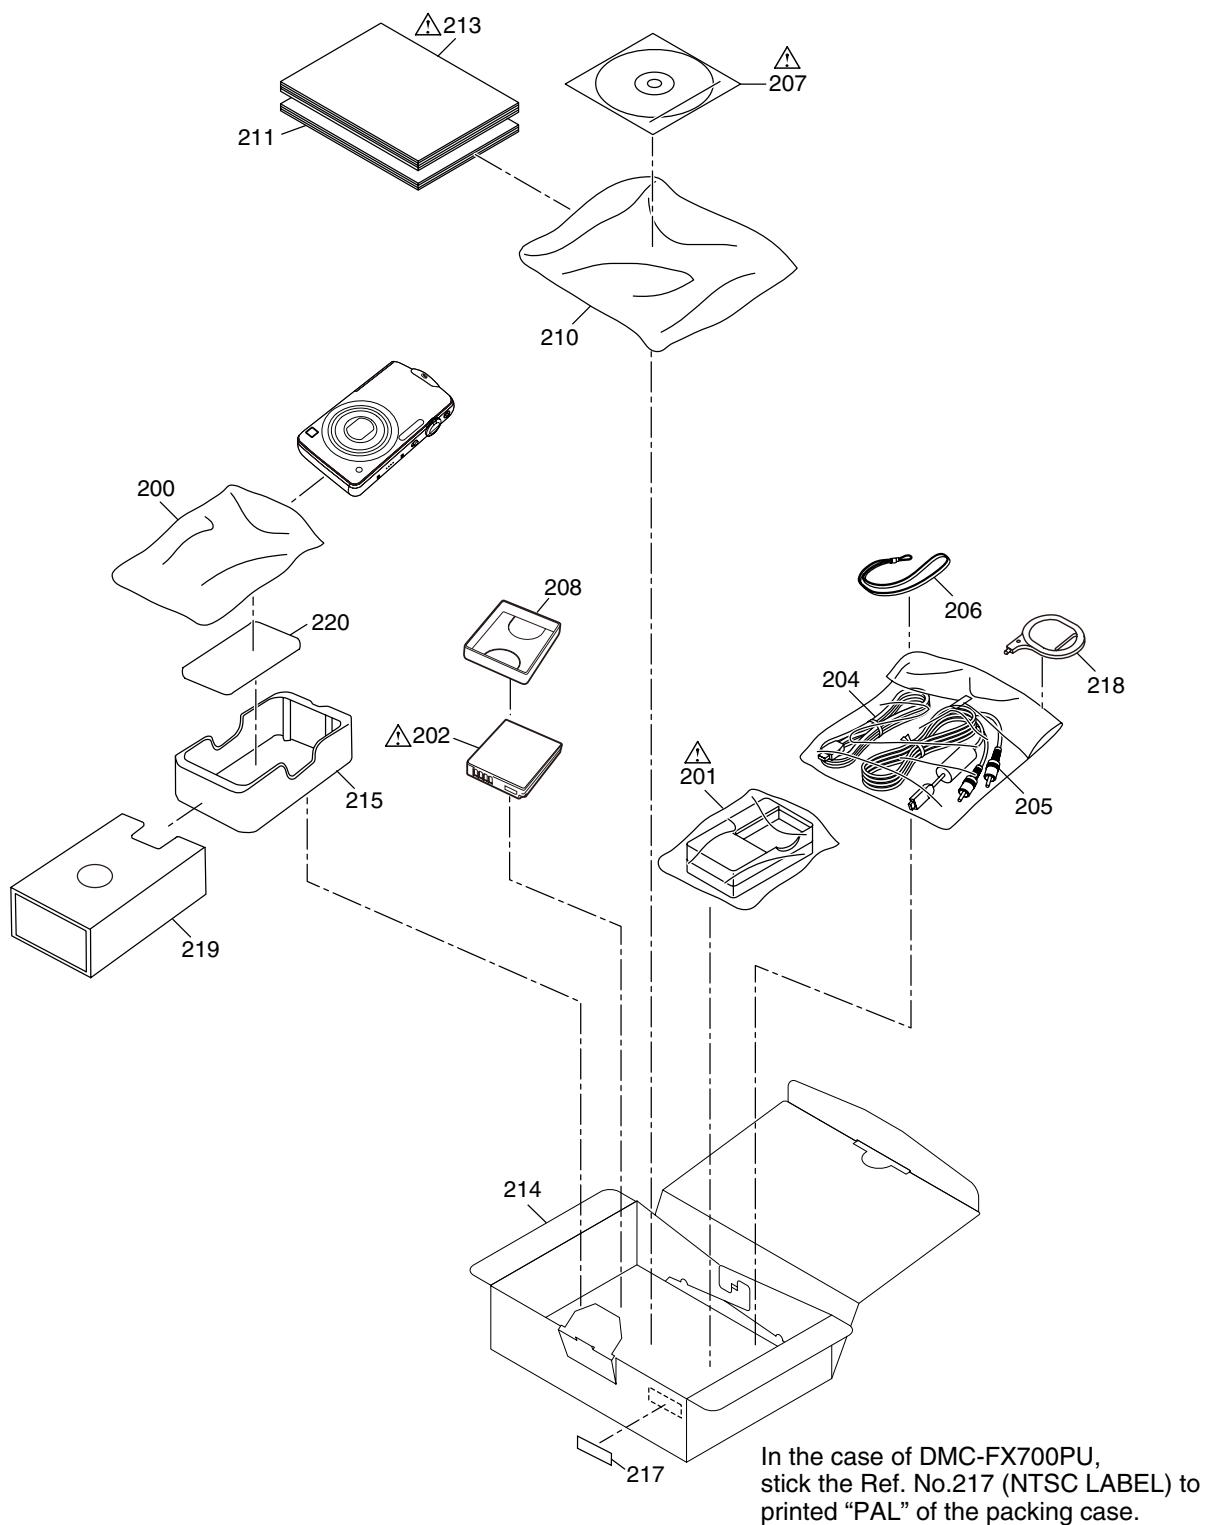

S7.3. Packing Parts and Accessories Section (2)

