


# Service Manual

DVD Stereo System

Model No. **SA-VK480EE**

Product Color: (K)...Black Type

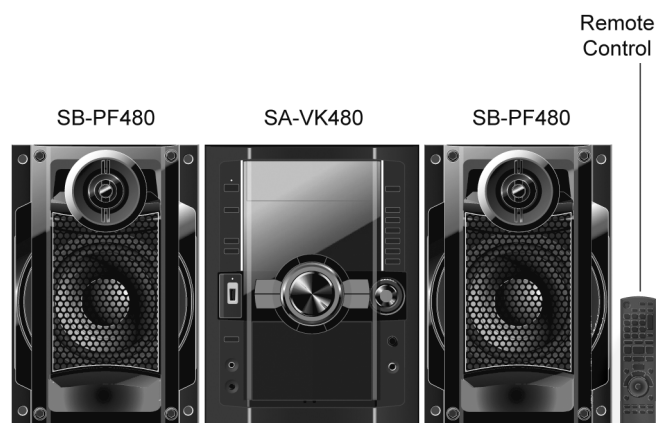

Please file and use this service manual together with the service manual for CR14D, Order No. PSG0905054AE

## ⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

## IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

## TABLE OF CONTENTS

|                                                                                                  | PAGE     |                                                    | PAGE      |
|--------------------------------------------------------------------------------------------------|----------|----------------------------------------------------|-----------|
| <b>1 Safety Precautions</b> -----                                                                | <b>3</b> | 2.4. Handling Precautions for Traverse Unit -----  | 8         |
| 1.1. GENERAL GUIDELINES-----                                                                     | 3        | <b>3 Service Navigation</b> -----                  | <b>10</b> |
| 1.2. Before Repair and Adjustment-----                                                           | 3        | 3.1. Service Information-----                      | 10        |
| 1.3. Protection Circuitry-----                                                                   | 3        | <b>4 Specifications</b> -----                      | <b>11</b> |
| 1.4. Safety Parts Information-----                                                               | 4        | <b>5 Location of Controls and Components</b> ----- | <b>13</b> |
| <b>2 Warning</b> -----                                                                           | <b>5</b> | 5.1. Main Unit Key Button Operation-----           | 13        |
| 2.1. Prevention of Electrostatic Discharge (ESD)<br>to Electrostatic Sensitive (ES) Devices----- | 5        | 5.2. Remote Control Key Button Operation-----      | 14        |
| 2.2. Precaution of Laser Diode-----                                                              | 6        | 5.3. Disc Information-----                         | 15        |
| 2.3. Service caution based on Legal restrictions-----                                            | 7        | 5.4. Using the Music Port-----                     | 17        |
|                                                                                                  |          | 5.5. DivX VOD Content-----                         | 18        |

**Panasonic®**

© Panasonic Corporation 2009. All rights reserved.  
Unauthorized copying and distribution is a violation  
of law.

|                                                                                                                                         |           |                                                                    |            |
|-----------------------------------------------------------------------------------------------------------------------------------------|-----------|--------------------------------------------------------------------|------------|
| 5.6. USB - Play and Recording-----                                                                                                      | 19        | 12.2. Tape Speed Adjustment-----                                   | 90         |
| <b>6 Self-Diagnosis and Special Mode Setting -----</b>                                                                                  | <b>21</b> | 12.3. Bias Voltage Check -----                                     | 91         |
| 6.1. Service Mode Summary Table-----                                                                                                    | 21        | 12.4. Bias Frequency Check -----                                   | 91         |
| 6.2. Doctor Mode Table-----                                                                                                             | 23        | <b>13 Voltage &amp; Waveform Chart -----</b>                       | <b>92</b>  |
| 6.3. Self-Diagnosis Mode Table -----                                                                                                    | 24        | 13.1. DVD Module P.C.B. (1/3) -----                                | 92         |
| 6.4. Service Mode Table (For DVD)-----                                                                                                  | 25        | 13.2. DVD Module P.C.B. (2/3) -----                                | 93         |
| 6.5. DVD Self Diagnostic Function-Error Code-----                                                                                       | 33        | 13.3. DVD Module P.C.B. (3/3) -----                                | 94         |
| 6.6. Sales Demonstration Lock Function -----                                                                                            | 37        | 13.4. Main P.C.B. (1/3)-----                                       | 95         |
| <b>7 Troubleshooting Guide-----</b>                                                                                                     | <b>38</b> | 13.5. Main P.C.B. (2/3)-----                                       | 96         |
| 7.1. Troubleshooting Guide for F61 and/or F76-----                                                                                      | 38        | 13.6. Main P.C.B. (3/3)-----                                       | 97         |
| 7.2. Basic Troubleshooting Guide for Traverse<br>Unit (DVD Module P.C.B.)-----                                                          | 44        | 13.7. Panel P.C.B.-----                                            | 97         |
| <b>8 Service Fixture &amp; Tools -----</b>                                                                                              | <b>45</b> | 13.8. Deck P.C.B. -----                                            | 98         |
| 8.1. Service Tools and Equipment -----                                                                                                  | 45        | 13.9. Deck Mechanism P.C.B. -----                                  | 98         |
| <b>9 Disassembly and Assembly Instructions -----</b>                                                                                    | <b>46</b> | 13.10. D-Amp P.C.B. -----                                          | 98         |
| 9.1. Disassembly flow chart -----                                                                                                       | 48        | 13.11. SMPS P.C.B. -----                                           | 99         |
| 9.2. Main Components and P.C.B. Location -----                                                                                          | 49        | 13.12. Volume P.C.B. -----                                         | 99         |
| 9.3. Disassembly of Top Cabinet-----                                                                                                    | 50        | 13.13. Mic P.C.B.-----                                             | 99         |
| 9.4. Disassembly of DVD Mechanism Unit<br>(CR14D)-----                                                                                  | 51        | 13.14. Waveform Table (1/3)-----                                   | 100        |
| 9.5. Disassembly of DVD Module P.C.B.-----                                                                                              | 53        | 13.15. Waveform Table (2/3)-----                                   | 101        |
| 9.6. Disassembly of Rear Panel-----                                                                                                     | 53        | 13.16. Waveform Table (3/3)-----                                   | 102        |
| 9.7. Disassembly of Front Panel Assembly -----                                                                                          | 54        | <b>14 Illustration of ICs, Transistor and Diode-----</b>           | <b>103</b> |
| 9.8. Disassembly of Mic P.C.B. -----                                                                                                    | 55        | <b>15 Block Diagram -----</b>                                      | <b>105</b> |
| 9.9. Disassembly of Panel P.C.B., Volume P.C.B.<br>& Remote Sensor P.C.B. , Side Bar (L) LED<br>P.C.B. and Side Bar (R) LED P.C.B.----- | 56        | 15.1. DVD (Audio)-----                                             | 105        |
| 9.10. Disassembly of USB P.C.B. -----                                                                                                   | 58        | 15.2. DVD (Servo) -----                                            | 106        |
| 9.11. Disassembly of Music Port P.C.B. -----                                                                                            | 59        | 15.3. System Control -----                                         | 107        |
| 9.12. Disassembly of CD Lid-----                                                                                                        | 59        | 15.4. Audio-----                                                   | 108        |
| 9.13. Disassembly of Deck Mechanism Unit -----                                                                                          | 60        | 15.5. Video-----                                                   | 109        |
| 9.14. Disassembly of Deck P.C.B.-----                                                                                                   | 61        | 15.6. Deck-----                                                    | 110        |
| 9.15. Disassembly of Deck Mechanism P.C.B.-----                                                                                         | 61        | 15.7. D-Amp-----                                                   | 111        |
| 9.16. Disassembly of Deck Mechanism-----                                                                                                | 62        | 15.8. Power-----                                                   | 112        |
| 9.17. Disassembly of Cassette Lid-----                                                                                                  | 71        | <b>16 Wiring Connection Diagram -----</b>                          | <b>113</b> |
| 9.18. Rectification for Tape Jam Problem -----                                                                                          | 71        | <b>17 Schematic Diagram Notes -----</b>                            | <b>115</b> |
| 9.19. Disassembly of D-Amp P.C.B. -----                                                                                                 | 71        | <b>18 Schematic Diagram -----</b>                                  | <b>117</b> |
| 9.20. Replacement of Audio Digital Power Amp IC<br>(IC5000) -----                                                                       | 73        | 18.1. DVD Module Circuit -----                                     | 117        |
| 9.21. Disassembly of Main P.C.B. -----                                                                                                  | 74        | 18.2. Main Circuit-----                                            | 121        |
| 9.22. Disassembly of SMPS P.C.B. -----                                                                                                  | 74        | 18.3. Panel, Side Bar (L) Led & Side Bar (R) Led<br>Circuit-----   | 127        |
| 9.23. Replacement of Switching Regulator IC<br>(IC5701) -----                                                                           | 75        | 18.4. Volume, Music Port, Remote Sensor & Mic<br>Circuit-----      | 128        |
| 9.24. Replacement of Rectifier Diode (D5702)-----                                                                                       | 76        | 18.5. Deck Circuit -----                                           | 129        |
| 9.25. Replacement of Regulator Diode (D5801)-----                                                                                       | 78        | 18.6. D-Amp Circuit-----                                           | 130        |
| 9.26. Replacement of Regulator Diode (D5802)-----                                                                                       | 78        | 18.7. SMPS Circuit-----                                            | 132        |
| 9.27. Replacement of Regulator Diode (D5803)-----                                                                                       | 79        | 18.8. USB, Deck Mechanism & AC Inlet Circuit-----                  | 134        |
| 9.28. Disassembly of AC Inlet P.C.B. -----                                                                                              | 80        | <b>19 Printed Circuit Board-----</b>                               | <b>135</b> |
| <b>10 Disassembling and Assembling of Traverse Unit----</b>                                                                             | <b>82</b> | 19.1. DVD Module P.C.B. -----                                      | 135        |
| 10.1. Disassembly Procedures-----                                                                                                       | 82        | 19.2. Main P.C.B. -----                                            | 136        |
| 10.2. Assembly Procedures-----                                                                                                          | 83        | 19.3. Panel, Side Bar (L) Led & Side Bar (R) Led<br>P.C.B. -----   | 137        |
| <b>11 Service Positions -----</b>                                                                                                       | <b>84</b> | 19.4. Volume, Music Port, Remote Sensor, Mic &<br>USB P.C.B. ----- | 138        |
| 11.1. Checking and Repairing of Main P.C.B. -----                                                                                       | 84        | 19.5. Deck, Deck Mechanism & AC Inlet P.C.B. -----                 | 139        |
| 11.2. Checking and Repairing Panel P.C.B., Deck<br>P.C.B., Volume P.C.B., Music Port P.C.B. and<br>Mic P.C.B. -----                     | 84        | 19.6. D-Amp P.C.B. -----                                           | 140        |
| 11.3. Checking and Repairing of D-Amp P.C.B. -----                                                                                      | 87        | 19.7. SMPS P.C.B. -----                                            | 141        |
| 11.4. Checking and Repairing of AC Inlet P.C.B. &<br>SMPS P.C.B. -----                                                                  | 88        | <b>20 Terminal Function of ICs -----</b>                           | <b>143</b> |
| <b>12 Measurements and Adjustments -----</b>                                                                                            | <b>90</b> | 20.1. IC2801 (RFKWMVK480GC): IC<br>Microprocessor-----             | 143        |
| 12.1. Cassette Deck -----                                                                                                               | 90        | 20.2. IC6601(C0HBB0000057): IC FL Driver -----                     | 143        |
|                                                                                                                                         |           | <b>21 Exploded View and Replacement Parts List-----</b>            | <b>145</b> |
|                                                                                                                                         |           | 21.1. Exploded View and Mechanical Replacement<br>Part List -----  | 145        |
|                                                                                                                                         |           | 21.2. Electrical Replacement Part List-----                        | 151        |

# 1 Safety Precautions

## 1.1. GENERAL GUIDELINES

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, carry out the following leakage current checks to prevent the customer from being exposed to shock hazards.

### 1.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between  $1M\Omega$  and  $5.2M\Omega$ .

When the exposed metal does not have a return path to the chassis, the reading must be  $\infty$

### 1.1.2. LEAKAGE CURRENT HOT CHECK

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a  $1.5k\Omega$ , 10 watts resistor, in parallel with a  $0.15\mu F$  capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

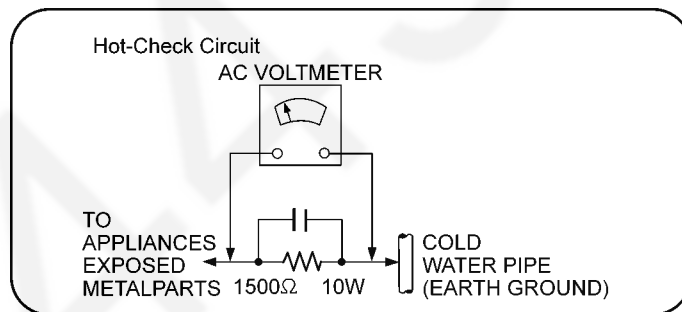


Figure 1

## 1.2. Before Repair and Adjustment

Disconnect AC power to discharge unit AC Capacitors as such (C5700, C5701, C5703, C5704, C5705, C5706, C5707) through a  $10\Omega$ , 10 W resistor to ground.

### Caution:

DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.

After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 220V~240V, 50 Hz at power on (in FM Tuner, no signal at volume minimum) should be ~ 500 mA.

### 1.2.1. Caution for fuse replacement

#### CAUTION:

- i) Replace with the same type fuse:  
(Manufacturer: LITTELFUSE, INC, Type: 215, F1, T5AH, 250V)

## 1.3. Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are

"shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

**Note:**

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

## 1.4. Safety Parts Information

**Safety Parts List:**

There are special components used in this equipment which are important for safety.

These parts are marked by  in the Schematic Diagrams & Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

| Safety                                                                              | Ref. No. | Part No.     | Part Name & Description    | Remarks |
|-------------------------------------------------------------------------------------|----------|--------------|----------------------------|---------|
|    | 15       | RGRX0070L-D1 | REAR PANEL                 |         |
|    | 62       | REXX0684-1   | BLACK WIRE (AC INLET-SMPS) |         |
|    | 63       | REXX0685-1   | RED WIRE (AC INLET-SMPS)   |         |
|    | 69       | RKMX0144A-K  | TOP CABINET                |         |
|    | 340      | RD-DDTX004-V | TRAVERSE ASS'Y             | (RTL)   |
|    | A2       | K2CQ2CA00007 | AC CORD                    |         |
|    | A3       | RQTX0280-R   | O/I BOOK (Ru/Ur)           |         |
|    | PCB12    | REPX0751A    | SMPS P.C.B                 | (RTL)   |
|    | PCB13    | REPX0751A    | AC INLET P.C.B             | (RTL)   |
|    | DZ5701   | ERZV10V511CS | ZENER                      |         |
|    | L5701    | ELF15N035AN  | LINE FILTER                |         |
|   | L5703    | ELF21N015A   | LINE FILTER                |         |
|  | T2900    | G4D1A0000117 | SWITCHING TRANSFORMER      |         |
|  | T5701    | ETS42BN1A6AD | MAIN TRANSFORMER           |         |
|  | T5751    | ETS19AB256AG | BACKUP TRANSFORMER         |         |
|  | PC5701   | B3PBA0000402 | PHOTO COUPLER              |         |
|  | PC5702   | B3PBA0000402 | PHOTO COUPLER              |         |
|  | PC5720   | B3PBA0000402 | PHOTO COUPLER              |         |
|  | PC5799   | B3PBA0000402 | PHOTO COUPLER              |         |
|  | F1       | K5D502BNA005 | FUSE                       |         |
|  | FP2901   | K5G401A00008 | FUSE PROTECTOR             |         |
|  | TH5001   | D4CC11040013 | THERMISTOR                 |         |
|  | TH5701   | D4CAC8R00002 | THERMISTOR                 |         |
|  | TH5860   | D4CC11040013 | THERMISTOR                 |         |
|  | P5701    | K2AA2B000017 | AC INLET                   |         |
|  | C5700    | F1BAF1020020 | 1000pF                     |         |
|  | C5701    | F0CAF334A087 | 0.33uF                     |         |
|  | C5703    | F0C2H1040001 | 0.1uF 500V                 |         |
|  | C5704    | F1BAF1020020 | 1000pF                     |         |
|  | C5705    | F1BAF1020020 | 1000pF                     |         |
|  | C5706    | F1BAF1020020 | 1000pF                     |         |
|  | C5707    | F1BAF1020020 | 1000pF                     |         |

## 2 Warning

### 2.1. Prevention of Electrostatic Discharge (ESD) to Electrostatic Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

**Caution:**

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

## 2.2. Precaution of Laser Diode

### CAUTION:

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

### Caution:


This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pickup lens.

Wavelength: 655nm (DVD) / 785 nm (CD)

Maximum output radiation power from pickup: 100  $\mu$ W/VDE

Laser radiation from the pickup unit is safety level, but be sure the followings:

1. Do not disassemble the pickup unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pickup lens for a long time.

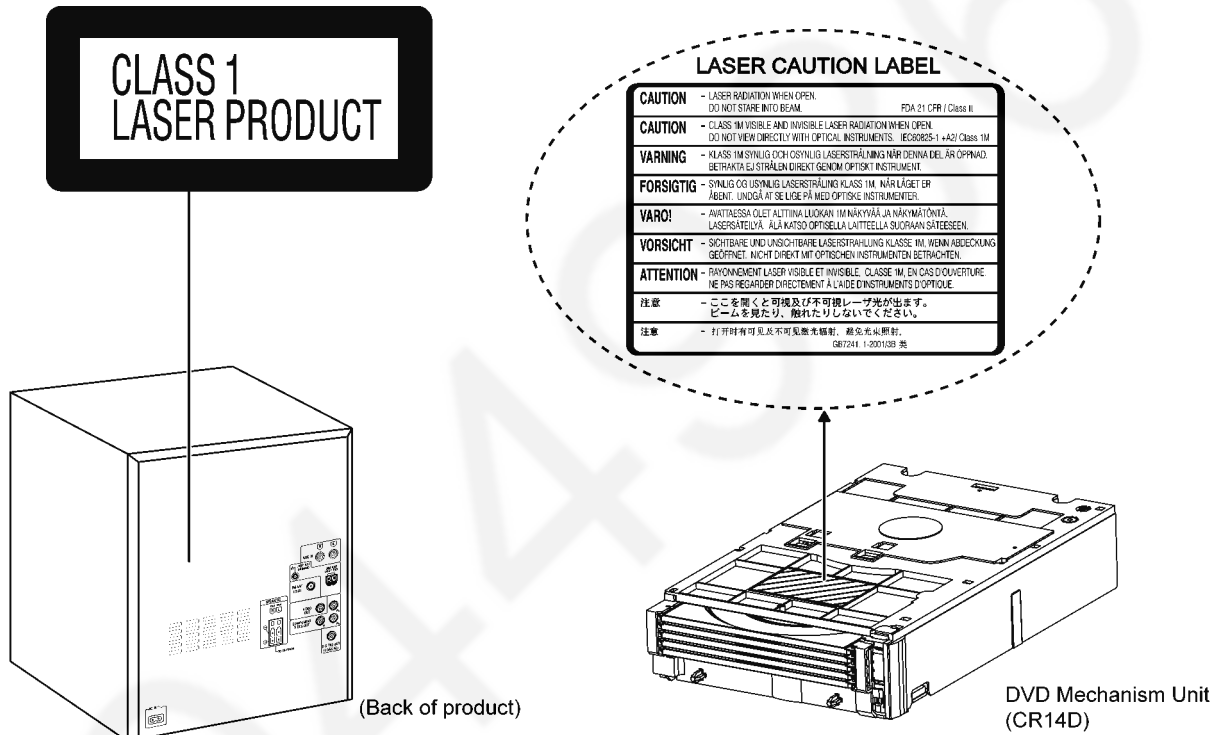

## 2.3. Service caution based on Legal restrictions

### 2.3.1. General description about Lead Free Solder (PbF)

The lead free solder has been used in the mounting process of all electrical components on the printed circuit boards used for this equipment in considering the globally environmental conservation.

The normal solder is the alloy of tin (Sn) and lead (Pb). On the other hand, the lead free solder is the alloy mainly consists of tin (Sn), silver (Ag) and Copper (Cu), and the melting point of the lead free solder is higher approx.30 degrees C (86°F) more than that of the normal solder.

#### Definition of PCB Lead Free Solder being used

The letter of "PbF" is printed either foil side or components side on the PCB using the lead free solder.

(See right figure)

PbF

#### Service caution for repair work using Lead Free Solder (PbF)

- The lead free solder has to be used when repairing the equipment for which the lead free solder is used.  
(Definition: The letter of "PbF" is printed on the PCB using the lead free solder.)
- To put lead free solder, it should be well molten and mixed with the original lead free solder.
- Remove the remaining lead free solder on the PCB cleanly for soldering of the new IC.
- Since the melting point of the lead free solder is higher than that of the normal lead solder, it takes the longer time to melt the lead free solder.
- Use the soldering iron (more than 70W) equipped with the temperature control after setting the temperature at 350±30 degrees C (662±86°F).

#### Recommended Lead Free Solder (Service Parts Route.)

- The following 3 types of lead free solder are available through the service parts route.  
RFKZ03D01K----- (0.3mm 100g Reel)  
RFKZ06D01K----- (0.6mm 100g Reel)  
RFKZ10D01K----- (1.0mm 100g Reel)

#### Note

- \* Ingredient: tin (Sn), 96.5%, silver (Ag) 3.0%, Copper (Cu) 0.5%, Cobalt (Co) / Germanium (Ge) 0.1 to 0.3%

## 2.4. Handling Precautions for Traverse Unit

The laser diode in the optical pickup unit may break down due to static electricity of clothes or human body. Special care must be taken avoid caution to electrostatic breakdown when servicing and handling the laser diode in the traverse unit.

### 2.4.1. Cautions to Be Taken in Handling the Optical Pickup Unit

The laser diode in the optical pickup unit may be damaged due to electrostatic discharge generating from clothes or human body. Special care must be taken avoid caution to electrostatic discharge damage when servicing the laser diode.

1. Do not give a considerable shock to the optical pickup unit as it has an extremely high-precise structure.
2. To prevent the laser diode from the electrostatic discharge damage, the flexible cable of the optical pickup unit removed should be short-circuited with a short pin or a clip.
3. The flexible cable may be cut off if an excessive force is applied to it. Use caution when handling the flexible cable.
4. The antistatic FPC is connected to the new optical pickup unit. After replacing the optical pickup unit and connecting the flexible cable, cut off the antistatic FPC.

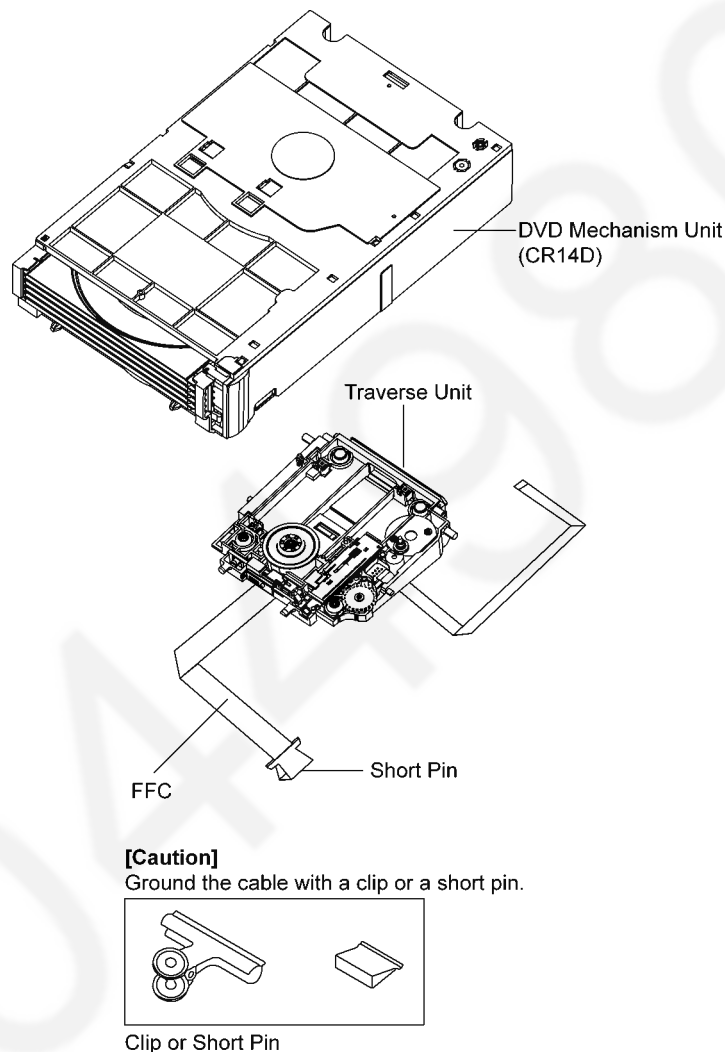


Figure 1

### 2.4.2. Grounding for electrostatic breakdown prevention

Some devices such as the DVD player use the optical pickup (laser diode) and the optical pickup will be damaged by static electricity in the working environment. Proceed servicing works under the working environment where grounding works is completed.

#### 2.4.2.1. Worktable grounding

1. Put a conductive material (sheet) or iron sheet on the area where the optical pickup is placed, and ground the sheet.

#### 2.4.2.2. Human body grounding

1. Use the anti-static wrist strap to discharge the static electricity form your body.

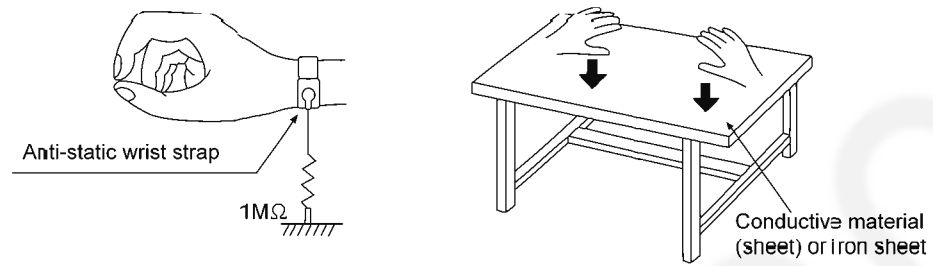


Figure 2

## 3 Service Navigation

### 3.1. Service Information

This service manual contains technical information which will allow service personnel's to understand and service this model. Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, this information will be followed by supplement service manual to be filed with original service manual.

- **DVD Mechanism unit (CR14D):**

1) This model uses DVD Mechanism Unit (CR14D).

- **Micro-processor & EEPROM IC:**

1) The following components are supplied as an assembled part.

- Micro-processor IC, IC2801 (RFKWMVK480GC)
- EEPROM IC, IC2802 (RFKWEVK480GC)
- EEPROM IC, IC8611 (RFKBX0681D-C)

- **Speaker system:**

1) For information, please refer to original service manual, SB-PF480GC-K (PSG0905025CE)

## 4 Specifications

### ■ AMPLIFIER SECTION

RMS Output Power Stereo mode:

Front Ch

125 W per channel (3  $\Omega$ ), 1 kHz, 10% THD

Total RMS Stereo mode power 250 W

### ■ FM/AM TUNER, TERMINALS SECTION

Preset station

FM 30 stations

AM 15 stations

Frequency Modulation (FM)

Frequency range 87.50 to 108.00 MHz (50 kHz step)

Antenna terminals 75  $\Omega$  (unbalanced)

Amplitude Modulation (AM)

Frequency range 522 to 1629 kHz (9 kHz step)

Digital audio output

Coaxial digital output Pin jack

Music Port (Front) jack

Sensitivity 200 mV, 4.7 k $\Omega$

Terminal Stereo, 3.5 mm jack

Phone jack

Terminal Stereo, 3.5 mm jack

Mic jack

Sensitivity 0.7 mV, 1.2 k $\Omega$

Terminal Mono, 6.3 mm jack (1 system)

AUX

Terminal RCA jack

### ■ CASSETTE DECK SECTION

Type Auto reverse

Track system 4-Track, 2 Channel

Heads

Record/playback Solid permalloy head

Erase Double gap ferrite head

Motor DC servo motor

Recording system AC bias 100 kHz

Erasing system AC erase 100 kHz

Tape speed 4.8 cm/s

Overall frequency response (+3, -6 dB) at DECK OUT

Normal 35 Hz to 14 kHz

S/N ratio 50 dB (A-Weighted)

Wow and flutter 0.18 % (WRMS)

Fast forward and rewind time Approx. 120 seconds with

C-60 cassette tape

### ■ VIDEO SECTION

Video system PAL625/50, PAL525/60, NTSC

Composite video output

Output level 1 Vp-p (75  $\Omega$ )

Terminal Pin jack (1 system)

Component video output

Y output level 1 Vp-p (75  $\Omega$ )

P<sub>B</sub> output level 0.7 Vp-p (75  $\Omega$ )

P<sub>R</sub> output level 0.7 Vp-p (75  $\Omega$ )

Terminal output level

Pin jack (Y: green, P<sub>B</sub>: blue, P<sub>R</sub>: red) (1 system)

### ■ USB SECTION

USB Port

USB standard

USB 2.0 full speed

Media file format support MP3 (\*.mp3)

WMA (\*.wma)

JPEG (\*.jpg) (\*.jpeg)

DivX (\*.divx, \*.avi)

MPEG4 (\*.asf)

USB device file system FAT12, FAT16, FAT 32

USB Port power Max. 500 mA

Bit rate up to 4 Mbps (DivX)

USB Recording

Bit Rate 128 kbps

USB recording speed 1x

Recording file format MP3 (\*.mp3)

### ■ DISC SECTION

Disc played [8 cm or 12 cm]

(1) DVD (DVD-Video, DivX<sup>\*6,\*7</sup>)

(2) DVD-RAM (DVD-VR, JPEG<sup>\*4,\*7</sup>, MP3<sup>\*2,\*7</sup>, MPEG4<sup>\*5,\*7</sup>, DivX<sup>\*6,\*7</sup>)

(3) DVD-R (DVD-Video, DVD-VR, JPEG<sup>\*4,\*7</sup>, MP3<sup>\*2,\*7</sup>, MPEG4<sup>\*5,\*7</sup>, DivX<sup>\*6,\*7</sup>)

(4) DVD-R DL (DVD-Video, DVD-VR)

(5) DVD-RW (DVD-Video, DVD-VR, JPEG<sup>\*4,\*7</sup>, MP3<sup>\*2,\*7</sup>, MPEG4<sup>\*5,\*7</sup>, DivX<sup>\*6,\*7</sup>)

(6) +R/ +RW (Video)

(7) +R DL (Video)

(8) CD,CD-R/RW (CD-DA, Video CD, SVCD<sup>\*1</sup>, MP3<sup>\*2,\*7</sup>, WMA<sup>\*3,\*7</sup>, JPEG<sup>\*4,\*7</sup>, MPEG4<sup>\*5,\*7</sup>, DivX<sup>\*6,\*7</sup>)

<sup>\*1</sup> Conforming to IEC62107

<sup>\*2</sup> MPEG-1 Layer 3, MPEG-2 Layer 3

<sup>\*3</sup> Windows Media Audio Ver 9.0 L3

Not compatible with Multiple Bit Rate (MBR)

<sup>\*4</sup> Exif Ver 2.1 JPEG Baseline files

Picture resolution: between 160 x 120 and 6144 x 4096 pixels (Sub sampling is 4:0:0, 4:2:0, 4:2:2 or 4:4:4). Extremely long and narrow pictures may not be displayed.

<sup>\*5</sup> MPEG4 data recorded with the Panasonic SD multi cameras or DVD video recorders. Conforming to SD VIDEO specifications (ASF standard)/ MPEG4 (Simple Profile) video system/ G.726 audio system.

<sup>\*6</sup> Plays DivX<sup>®</sup> video.

<sup>\*7</sup> The total combined maximum number of recognizable audio, picture and video contents and groups: 4000 audio, picture and video contents and 255 groups (excluding root folder).

Pick up

Wavelength

CD 785 nm

DVD 655 nm

Laser Power CLASS 1

Audio output (Disc)

Number of channels 2 channel (FL, FR)

### ■ GENERAL

Power supply

AC 220 V to 240 V, 50 Hz

Power consumption

65 W

Power consumption in standby mode:

0.4 W (approx.)

Dimensions (W x H x D) 250 mm x 331 mm x 317 mm

Mass 4.7 kg

Operating temperature range +0 to +40°C

Operating humidity range 35 to 80% RH (no condensation)

### ■ SYSTEM

|                |                            |
|----------------|----------------------------|
| System         | SC-VK480EE-K               |
| Main unit      | SA-VK480EE-K               |
| Speaker system | SB-PF480GC-K <sup>*1</sup> |

Refer to their respective original service manuals for <sup>\*1</sup>.

### Notes:

- Specifications are subject to changes without notice. Mass and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

This product is licensed under the MPEG-4 Visual patent portfolio license for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or (ii) decoding MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 Video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132; and 5,583,936.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS 2.0 + Digital Out are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

Plays DivX® video  
DivX® is a registered trademark of DivX, Inc., and is used under license.

# 5 Location of Controls and Components

## 5.1. Main Unit Key Button Operation

### 1 AC supply indicator (AC IN)

This indicator lights when the unit is connected to the AC mains supply.

### 2 Standby/on switch (⏻/⏻)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

### 3 [● REC, USB]

### 4 Using surround effect

### 5 Adjusting subwoofer level

### 6 USB port


### 7 Deck [⏮, OPEN]

### 8 MUSIC PORT jack

### 9 Headphone jack

Reduce the volume level and connect the headphones. Headphones plug type: 3.5 mm stereo (not included).

Avoid listening for prolonged periods of time to prevent hearing damage. Excessive sound pressure from earphones and headphones can cause hearing loss.

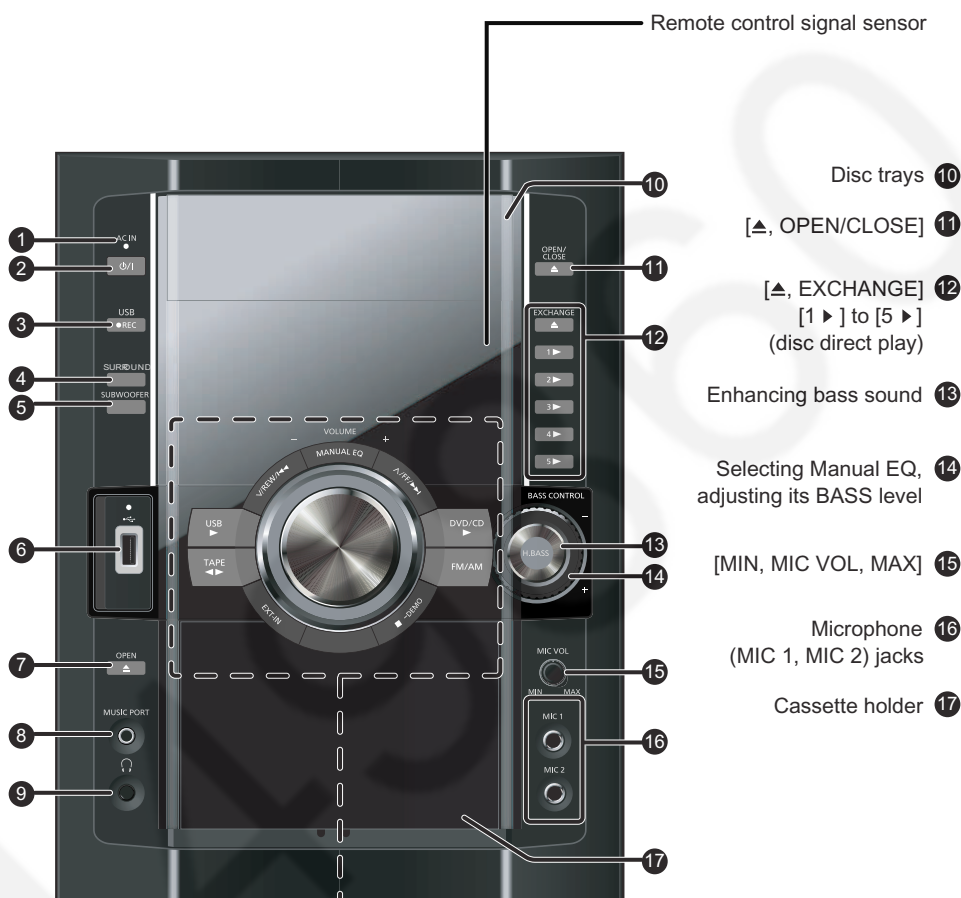


18 24 Skip, rewind, fast forward, Tape Program Sensor, sound quality adjustment, time adjustment

19 USB selector and playback

20 Tape playback and direction

21 MUSIC PORT/AUX selection

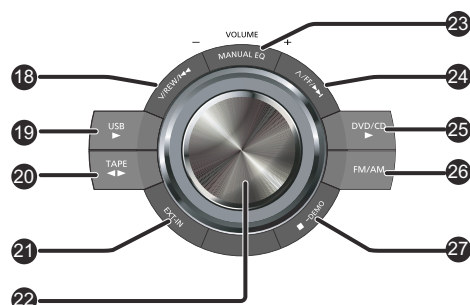

[- VOLUME +] 22

[MANUAL EQ] 23


DVD/CD selector and playback 25

FM/AM selection 26

Stop, DEMO function 27

## 5.2. Remote Control Key Button Operation

- 1 Turn the unit on/off
- 2 Show disc information/Select a disc  
Play loaded discs in order
- 3 Select channels and title numbers etc./Enter numbers
- 4 Random play, Program play  
Tape: Reverse mode selection  
Radio: Band mode selection
- 5 Source select  
[▶, USB] selector and playback  
[◀▶, TAPE] Tape playback and direction  
**EXT-IN, FM/AM:**  
FM/AM selection  
MUSIC PORT/AUX selection
- 6 Basic operations for play
- 7 Select surround sound effects
- 8 Show START menu
- 9 Show a disc top menu or program list
- 10 Show a disc menu or playlist
- 11 Tape and USB recording functions
- 12 Change the player settings
- 13 Repeat play  
Dim the display panel

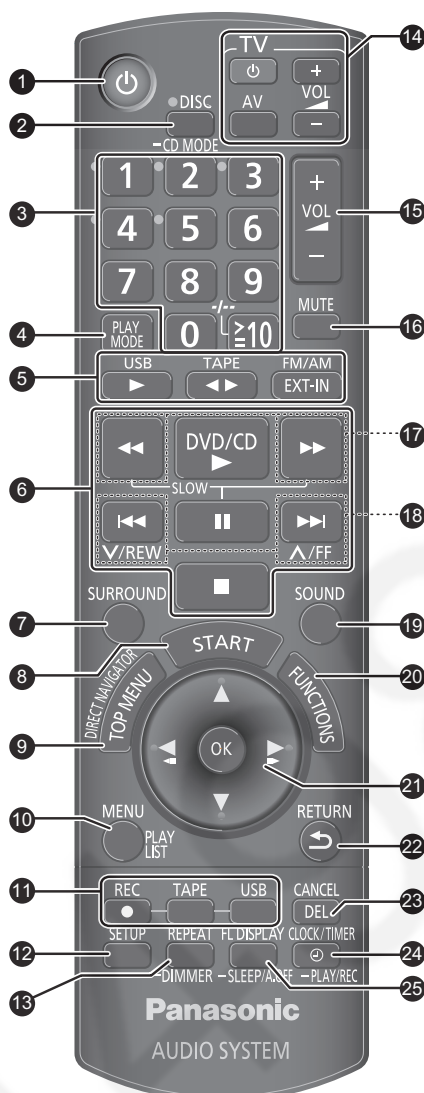

- TV operations 14**  
(Aim the remote control to a Panasonic TV and press the button. Only works with some models)  
[⏻]: turn the TV on/off  
[AV]: change the TV's video input mode  
[+, -, VOL]: adjust the TV volume
- Adjust the volume of the main unit 15
- Mute the sound 16
- Slow motion, search, tuning 17
- Skip, rewind, fast forward, Tape 18  
Program Sensor, sound quality adjustment, preset channel selection, time adjustment
- Select sound mode 19
- Show on-screen menu 20
- Frame-by-frame/Select or register 21  
menu items
- Return to previous screen 22
- Cancel an item 23  
Deleting an item
- Clock and timer setting 24  
PLAY/REC timer on/off
- Changes the unit's display 25  
Sleep timer, Auto off operation setting

## 5.3. Disc Information

### 5.3.1. Disc Playability (Media)

#### • Commercial discs

| Disc      | Logo                                                                              | Indicated in these instructions by | Remarks                                                             |
|-----------|-----------------------------------------------------------------------------------|------------------------------------|---------------------------------------------------------------------|
| DVD-Video |  | <b>DVD-V</b>                       | High quality movie and music discs.                                 |
| Video CD  |  | <b>VCD</b>                         | Music discs with video.<br>Including SVCD (Conforming to IEC62107). |
| CD        |  | <b>CD</b>                          | Music discs.                                                        |

#### • Recorded discs (O: Playable, -: Not playable)

| Disc                  | Logo                                                                                | Recorded on a DVD video recorder, etc. |                            | Recorded on a personal computer, etc. |            |             |                            |                           | Finalizing <sup>*8</sup> |
|-----------------------|-------------------------------------------------------------------------------------|----------------------------------------|----------------------------|---------------------------------------|------------|-------------|----------------------------|---------------------------|--------------------------|
|                       |                                                                                     | <b>DVD-VR</b> <sup>*2</sup>            | <b>DVD-V</b> <sup>*4</sup> | <b>WMA</b>                            | <b>MP3</b> | <b>JPEG</b> | <b>MPEG4</b> <sup>*6</sup> | <b>DivX</b> <sup>*7</sup> |                          |
| DVD-RAM               |    | O                                      | -                          | -                                     | O          | O           | O                          | O                         | Not necessary            |
| DVD-R/RW              |    | O                                      | O                          | -                                     | O          | O           | O                          | O                         | Necessary                |
| DVD-R DL              |  | O <sup>*3</sup>                        | O                          | -                                     | -          | -           | -                          | -                         | Necessary                |
| + R/+ RW              | -                                                                                   | -                                      | (O) <sup>*5</sup>          | -                                     | -          | -           | -                          | -                         | Necessary                |
| + R DL                | -                                                                                   | -                                      | (O) <sup>*5</sup>          | -                                     | -          | -           | -                          | -                         | Necessary                |
| CD-R/RW <sup>*1</sup> | -                                                                                   | -                                      | -                          | O                                     | O          | O           | O                          | O                         | Necessary <sup>*9</sup>  |

• It may not be possible to play all the above-mentioned discs in some cases due to the type of disc, the condition of the recording, the recording method, or how the files were created (→ 5.3.2 Tips for Making Data Disc)

<sup>\*1</sup> This unit can play CD-R/RW recorded with CD-DA or Video CD format.

<sup>\*2</sup> Discs recorded on DVD video recorders or DVD video cameras, etc. using Version 1.1 of the Video Recording Format (a unified video recording standard).

<sup>\*3</sup> Discs recorded on DVD video recorders or DVD video cameras using Version 1.2 of the Video Recording Format (a unified video recording standard).

<sup>\*4</sup> Discs recorded on DVD video recorders or DVD video cameras using DVD-Video Format.

<sup>\*5</sup> Recorded using a format different from DVD-Video Format, therefore, some functions cannot be used.

<sup>\*6</sup> MPEG4 data recorded with the Panasonic SD multi cameras or DVD video recorders [conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile) video system/G.726 audio system].

<sup>\*7</sup> Functions added with DivX Ultra are not supported.

<sup>\*8</sup> A process that allows play on compatible equipment. To play a disc that is displayed as "Necessary" on this unit, the disc must first be finalized on the device it was recorded on.

<sup>\*9</sup> Closing the session will also work.

#### Note about using a DualDisc

The digital audio content side of a DualDisc does not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so playback may not be possible.

#### • Video systems

- This unit can play PAL and NTSC, but your television must match the system used on the disc.
- PAL discs cannot be correctly viewed on an NTSC television.
- This unit can convert NTSC signals to PAL 60 for viewing on a PAL television.

#### • Discs that cannot be played

Blu-ray, HD DVD, AVCHD discs, DVD-RW version 1.0, DVD-Audio, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridges, 2.6-GB and 5.2-GB DVD-RAM, and Chaoji VCD available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

### 5.3.2. Tips for Making Data Disc

- When there are more than eight groups, the eighth group onwards will be displayed on one vertical line in the menu screen.
- There may be differences in the display order on the menu screen and computer screen.
- This unit cannot play files recorded using packet write.

#### DVD-RAM

- Discs must conform to UDF 2.0.

#### DVD-R/RW

- Discs must conform to UDF bridge (UDF 1.02/ISO9660).
- This unit does not support multi-session. Only the default session is played.

#### CD-R/RW

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit supports multi-session but if there are many sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.

#### Naming folders and files


Files are treated as contents and folders are treated as groups on this unit.

At the time of recording, prefix folder and file names. This should be with numbers that have an equal number of digits, and should be done in the order you want to play them (this may not work at times). Files must have the extension (→ below).

**WMA** (Extension: ".WMA" or ".wma")

- Compatible compression rate: between 48 kbps and 320 kbps.
- You cannot play WMA files that are copy-protected.
- This unit does not support Multiple Bit Rate (MBR).

Example: **MP3**

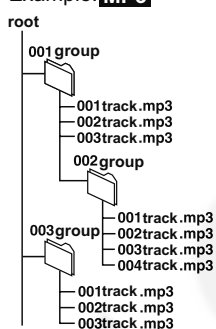

**MP3** (Extension: ".MP3" or ".mp3")

- This unit does not support ID3 tags.
- Sampling frequency and compression rate:
  - DVD-RAM, DVD-R/RW: 11.02, 12, 22.05, 24 kHz (8 to 160 kbps), 44.1 and 48 kHz (32 to 320 kbps)
  - CD-R/RW: 8, 11.02, 12, 16, 22.05, 24 kHz (8 to 160 kbps), 32, 44.1 and 48 kHz (32 to 320 kbps)

**JPEG** (Extension: ".JPG", ".jpg", ".JPEG" or ".jpeg")

- JPEG files taken on a digital camera that conform to DCF Standard (Design rule for Camera File system) Version 1.0 are displayed. Files that have been altered, edited or saved with computer picture editing software may not be displayed.
- This unit cannot display moving pictures, MOTION JPEG and other such formats, and still pictures other than JPEG (Example: TIFF), or play pictures with attached audio.

**MPEG4** (Extension: ".ASF" or ".asf")

- You can play MPEG4 data [conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile) video system/G.726 audio system] recorded with Panasonic SD multi cameras or DVD video recorders with this unit.
- The recording date may differ from that of the actual date.

**DivX** (Extension: ".DIVX", ".divx", ".AVI" or ".avi")


- You can play all versions of DivX® video (including DivX®6) [DivX video system/MP3, Dolby Digital or MPEG audio system] with standard playback of DivX® media files. Functions added with DivX Ultra are not supported.
- DivX files greater than 2 GB or have no index may not be played properly on this unit.
- This unit supports all resolutions up to maximum of 720 x 480 (NTSC)/720 x 576 (PAL).
- You can select up to eight types of audio and subtitles on this unit.

## 5.4. Using the Music Port

You can playback sound from portable audio equipment. Sound from the speaker may be distorted if the portable audio equipment's equalizer (if any) is turned on. Turn it off before you plug into the MUSIC PORT jack.

### Preparation

Reduce the volume of the unit and portable audio equipment before connecting or disconnecting.

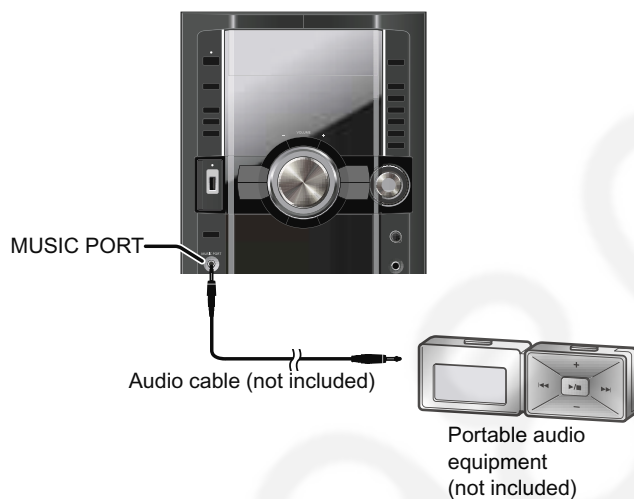

### 1 Connect the portable audio equipment.

Plug type: Ø3.5 mm stereo

### 2 Press [EXT-IN] to select MUSIC PORT .

Every time you press the button:

→ FM → AM → MUSIC PORT → AUX →

### 3 For listening : Proceed to step 4.

**For recording :** Press [● REC, TAPE] on the main unit to start recording.

Press [● REC, USB] on the main unit to start recording.

### 4 Playback the portable audio equipment.


(For details, refer to the external unit's instruction manual.)

## 5.5. DivX VOD Content

This DivX® Certified device must be registered in order to play DivX Video-on-Demand (VOD) content.

First generate the DivX VOD registration code for your device and submit it during the registration process. [Important: DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to registered DivX Certified devices. If you try to play DivX VOD content not authorized for your device, the message Authorization Error will be displayed and your content will not play.] Learn more at [www.divx.com/vod](http://www.divx.com/vod).

### Display the unit's registration code

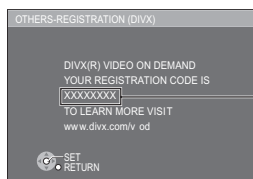

8 alphanumeric characters

- We recommend that you make a note of this code for future reference.
- After playing DivX VOD content for the first time, another registration code is then displayed in "REGISTRATION (DIVX)". Do not use this registration code to purchase DivX VOD content. If you use this code to purchase DivX VOD content, and then play the content on this unit, you will no longer be able to play any content that you purchased using the previous code.
- If you purchase DivX VOD content using a registration code different from this unit's code, you will not be able to play this content. ("AUTHORIZATION ERROR" is displayed.)

### Regarding DivX content that can only be played a set number of times

Some DivX VOD content can only be played a set number of times. When you play this content, the remaining number of plays is displayed. You cannot play this content when the number of remaining plays is zero. ("RENTED MOVIE EXPIRED" or "RENTAL EXPIRED" is displayed.)

When playing this content

- The number of remaining plays is reduced by one if
  - you press [⏮] or press [SETUP].
  - you press [■]. [Press [⏸] (pause) to pause play.]
  - you press [⏮, ⏭] (skip) or [⏮, ⏭] (search) etc. and arrive at another content or the start of the content being played.
- The "RESUME" function.

## 5.6. USB - Play and Recording



### Play

The USB connectivity enables you to connect and play tracks or files from USB mass storage class devices.

Typically, USB memory devices. (Bulk only transfer)


#### Preparation

Before connecting any USB mass storage device to the unit, ensure that the data stored therein has been backed up.

It is not recommended to use a USB extension cable.

The USB device is not recognised by this unit.

#### 1 Connect the USB mass storage device (not included).

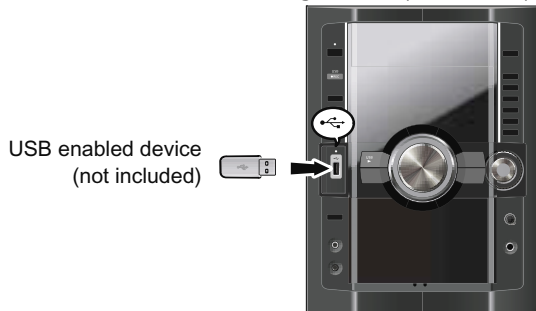

#### 2 Press [▶, USB] to begin playback.

#### 3 Press [MENU] to display the USB menu.

#### 4 Press [▲, ▼] and then [OK] to select the desired item.

For other operating functions, they are similar as those described in "DISC OPERATIONS".

#### • Compatible Devices

Devices which are defined as USB mass storage class:

- USB devices that support bulk only transfer.
- USB devices that support USB 2.0 full speed.

#### • Supported Formats

|                | File name           | File extension |
|----------------|---------------------|----------------|
| Still pictures | JPG <sup>*1</sup>   | .jpg .jpeg     |
| Music          | MP3 WMA             | .mp3 .wma      |
| Video          | MPEG4 <sup>*2</sup> | .asf           |

<sup>\*1</sup> It may not be possible to play all the files due to the condition on how they were created.

<sup>\*2</sup> For Panasonic D-Snap/DIGA

#### Note

|                               |      |
|-------------------------------|------|
| Maximum number of folders     | 255  |
| Maximum number of files       | 4000 |
| Maximum length of folder name | 28   |
| Maximum length of file name   | 28   |

- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or which require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. [Only FAT 12/16/32 (File Allocation Table 12/16/32) file system is supported].
- Depending on the sector size, some files may not work.
- It will not operate with Janus enabled MTP (Media Transfer Protocol) devices.
- Only one memory card will be selected when connecting a multi-port USB card reader. Typically the first memory card inserted.




### Recording

You can record sound or music tracks from the disc, radio, tape and other music sources to a USB mass storage device.

#### Note

- This function does not work during any "RANDOM" and "REPEAT" mode selection.
- A new folder is created each time you perform a recording. Depending on the USB's memory, the folder's sequence may change once the recording has completed.
- All tracks are recorded to .mp3 format.
- Do not remove the device or plug out the AC mains lead while recording, data could be lost.
- Voice mixing with CD from microphone cannot be recorded.
- Recording indicator blinks while recording in progress.

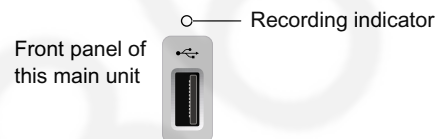

#### Recording of MP3 tracks

#### 1 Connect the USB mass storage device.

#### 2 Insert the disc(s) you want to record.

#### 3 Press [DVD/CD ▶] and then [■] twice.

- If the disc contains mixed media.
- Recording specific disc(s) or tracks

#### 4 Press and hold [●, REC] followed by [USB] (main unit: [● REC, USB]) to start recording.

- "READING" (blinking) → "DISCXXX" → "REC" (blinking) will be displayed.
- "PGM" is displayed if recording in Program mode.
- Folder and file created will be named "DISCXXX", "TRKXXXXX" respectively.

#### 5 Press [■] to stop recording.

"WRITING" is displayed for a few seconds.

#### Note

- MP3 file needs to be selected before recording can begin. All files in the current folder will be recorded.
- Non-MP3 files will be skipped.
- Files in subfolder will be ignored.
- No sound is output during recording. "MUTE" will be displayed if volume is adjusted.

### Recording from audio disc (CDDA)

- 1 Connect the USB mass storage device
- 2 Insert the disc(s) you want to record.
- 3 Press [DVD/CD ►] and then [■] twice.  
Recording specific disc(s) or tracks
- 4 Press and hold [●, REC] followed by [USB] (main unit: [● REC, USB]) to start recording.
  - "READING" (blinking) - "DISCXXX" - "elapsed time" will be displayed.
  - "PGM" is displayed if recording in Program mode.
  - Folder and file created will be named "DISCXXX", "TRKXXXXX" respectively.
- 5 Press [■] to stop recording.  
"WRITING" is displayed for a few seconds.

#### Note

- Recording is prohibited for disc encoded with copyright protection, "COPYRIGHT PROTECTED" will be displayed.
- When CD MODE is selected;
  - Select an audio disc, otherwise recording will not start.
  - Program mode is not applicable.
  - Non audio discs will be ignored.

### Recording from other sources

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Tape</b>       | <ol style="list-style-type: none"> <li>1 Connect the USB mass storage device</li> <li>2 Insert tape into the deck.</li> <li>3 Search the desired position and then [■]<br/>Use TPS function for faster search<br/>( - Cassette tapes — Play and Recording, page 24)</li> <li>4 Press and hold [●, REC] followed by [USB] (main unit: [● REC, USB]) to start recording.<br/>"↔" automatically changes to "→" when you start recording.</li> <li>5 Press [■] to stop recording.<br/>"WRITING" is displayed for a few seconds.</li> </ol> |
| <b>Radio</b>      | Tune to the required station.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Music Port</b> | - Using the Music Port                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>AUX</b>        | - Using an external unit                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

#### Note

This unit will analyse the USB device before recording.  
"READING" will blink on FL display.

### Track Divide

This function allows you to divide between tracks. You can choose;

- AUTO 5M, track is automatically divided every 5 minutes.
- MANUAL, press [OK] during recording to activate track divide. If the track is not divided manually, every 60 minutes, track will be divided automatically.

- 1 Select "FM", "AM", "MUSIC PORT", "AUX" or "TAPE" selector and press [SETUP]. "TRDIVIDE" will be displayed at FL display.
- 2 Press [▲, ▼] to choose between "AUTO 5M" or "MANUAL". "AUTO 5M" is default setting.
- 3 Press [OK] to activate at any time of recording.
  - Recording track by track from tape.
  - Skip unnecessary noise by making new track.


#### Note

If you press [OK] while using AUTO 5M mode during recording, the 5 minutes counts will be reset.

### Erasing the recorded items

This function allows you to erase unwanted tracks quickly and easily.


- 1 Press [►, USB] and then [■] twice.
- 2 Press [▲, ▼] to select.
- 3 Press [DEL] and a confirmation page will appear.

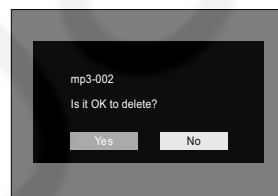

- 4 Press [◀, ▶] to choose "Yes" or "No" then press [OK].  
File will be deleted if you choose "Yes" and "DELETING" will blink on the FL display.

### Erasing items in order (Playback Menu)

While "PLAYBACK MENU" is displayed

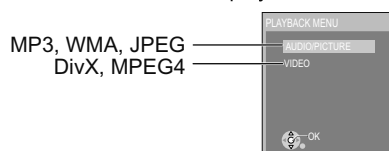

- 1 Press [▲, ▼] to select "AUDIO/PICTURE" or "VIDEO" and press [OK]. When either one is selected, other file will become invisible and cannot be deleted.
- 2 Press [DEL] to delete.
- 3 Repeat step 2 until all files are deleted.
- 4 Re-insert the device to continue.  
"RE-INSERT USB DEVICE" will be displayed.

#### Note

- "USB WRITE PROTECTED" is displayed if the device is locked.
- Folders containing subfolders or unsupported files cannot be deleted.

## 6 Self-Diagnosis and Special Mode Setting

This unit is equipped with features of self-diagnosis & special mode setting for checking the function & reliability.

**Special Note:** Checking of the reliability (ageing) & changer operation must be carry out to ensure good working condition in unit.

### 6.1. Service Mode Summary Table

#### 6.1.1. Doctor Mode Summary Table

| Main unit buttons | Remote control unit buttons                         | Application             | Note                                                                  |
|-------------------|-----------------------------------------------------|-------------------------|-----------------------------------------------------------------------|
| [■-DEMO]          | [4], [7]                                            | Enter into doctor mode. | (Refer to the section "6.2. Doctor Mode Table" for more information.) |
| (In Doctor Mode)  | [●DISC] or [0133] (For Special Remote Control only) | Changer check           |                                                                       |

#### 6.1.2. Self-Diagnosis Mode Summary Table

| Main buttons                     | Remote control unit buttons | Application                         | Note                                                                              |
|----------------------------------|-----------------------------|-------------------------------------|-----------------------------------------------------------------------------------|
| [STOP] + [∧/FF/▶▶]               | -                           | Entering into self-diagnostic mode. | (Refer to the section "6.3.1. Self-Diagnosis Mode Table 1" for more information.) |
| (In self-diagnostic mode) + [1▶] | -                           | Servicing the mechanism unit.       |                                                                                   |
| (In self-diagnostic mode) + [2▶] | -                           | Servicing the traverse unit.        |                                                                                   |
| In Self-diagnosis mode           | [2]                         | Reliability 2 (Cycle)               | (Refer to the section "6.3.2. Self-Diagnosis Mode Table 2" for more information.) |
|                                  | [3]                         | Reliability 3 (Combi)               |                                                                                   |

#### 6.1.3. Service Mode Summary Table (For DVD)

The service modes can be activated by pressing various button combination on the main unit and remote control unit.

Below is the summary for the various modes for checking:

| Main buttons | Remote control unit buttons | Application                                                                                                                                                                            | Note                                                                       |
|--------------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| [STOP]       | [0]                         | Error code display.                                                                                                                                                                    | (Refer to the section "6.4.1. Service Mode Table 1" for more information.) |
|              | [5]                         | Jitter checking.                                                                                                                                                                       |                                                                            |
|              | [PAUSE]                     | Initial setting of laser drive current.                                                                                                                                                |                                                                            |
|              | [FUNCTIONS]                 | DVD laser drive current check.                                                                                                                                                         | (Refer to the section "6.4.2. Service Mode Table 2" for more information.) |
|              | [3]                         | CD laser drive current check.                                                                                                                                                          |                                                                            |
|              | [6]                         | Region display and mode.                                                                                                                                                               | (Refer to the section "6.4.3. Service Mode Table 3" for more information.) |
|              | [7]                         | Micro-processor firmware version check.                                                                                                                                                |                                                                            |
|              | ≥10                         | Initialization of the player (factory setting is restored).<br>Used after replacement of Micro-processor (DV5 LSI) IC, FLASH ROM IC (IC8651), EEPROM IC (IC8611) and DVD Module P.C.B. |                                                                            |
|              | [8]                         | DVD Module P.C.B. firmware version check.                                                                                                                                              | (Refer to the section "6.4.4. Service Mode Table 4" for more information.) |
|              | [DISC]                      | CPPM/CPRM keys check.                                                                                                                                                                  |                                                                            |
|              | [ENTER]                     | DVD Module P.C.B. reset.                                                                                                                                                               |                                                                            |
|              | ▲                           | Timer 1 check.                                                                                                                                                                         | (Refer to the section "6.4.5. Service Mode Table 5" for more information.) |
|              | ▼                           | Timer 1 reset.                                                                                                                                                                         |                                                                            |
|              | ▶                           | Timer 2 check.                                                                                                                                                                         |                                                                            |
|              | ◀                           | Timer 2 reset.                                                                                                                                                                         |                                                                            |

**Note:**



An error code will be canceled if a power supply is turned OFF.

\*1: CPPM is the copy guard function beforehand written in the disk for protection of copyrights.

\*2: CEC is the consumer electronic control used for high-level user control of HDMI-connected devices.


\*3: HDCP is the specification developed to control digital audio & video contents transmission for DVI or HDMI connections.

## 6.2. Doctor Mode Table


| Item             |                                                                                                                                                                                                                                                                     | FL Display                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Key Operation                                                                                                                                                                                                              |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name        | Description                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Front Key                                                                                                                                                                                                                  |
| Doctor Mode      | <p>To enter into Doctor Mode for checking of variuos items and displaying EEPROM and firmware version.</p> <p>Note: The micro-processor version as shown is an example. It will be revise when there is an update.</p> <p>FL Display sequence:<br/>Display 1→2.</p> | <p>(Display 1)</p>  <p>1. The check Sum of EPPROM and firmware version will be display.<br/> * ROM correction.<br/> * Firmware Version No:</p> <p>checksum: (Condition 1):</p>  <p>If there is no EEPROM Correction.</p> <p>checksum: (Condition 2):</p>  <p>If the EEPROM version matches, checksum [YYYY] is displayed.</p> <p>checksum: (Condition 3):</p>  <p>If the version of the EEPROM does not match or not working properly [NG] is displayed</p> | <p>In CD Mode:</p> <p>1. Press [■-DEMO] button on main unit follow by [4] and [7] on remote control.</p> <p>To exist, press [ok] button on remote control or press [⏻/I, POWER] button on main unit or remote control.</p> |
| CR14D Inspection | To check the function operation of mechanism unit                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <p>In Doctor mode:</p> <p>1. Press [●DISC] button on remote control.<br/> OR [0133] on Special Remote Control.</p> <p>To exist, press any key</p>                                                                          |

## 6.3. Self-Diagnosis Mode Table

### 6.3.1. Self-Diagnosis Mode Table 1

| Item                 |                                                                                                                                                                                                                                                                           | FL Display                                                                         | Key Operation                                                                                                                                                                                                             |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name            | Description                                                                                                                                                                                                                                                               |                                                                                    | Front Key                                                                                                                                                                                                                 |
| Self-Diagnostic Mode | To enter into self-diagnostic checking for CR14D mechanism.                                                                                                                                                                                                               |  | In DVD/CD mode (ensure no disc is inserted):<br>Press and hold [STOP] button for five seconds, followed by [△/FF/▶▶] button on the main unit.<br><br>To exit, press [⏻/AC IN] button on main unit or remote control unit. |
| Service Mode 1       | To unlock the mechanism unit for service.<br><br>In this mode, the disassembly of CR14D can be carry out. (Refer to original service manual for CR14D)<br>1. All trays are set to "STOCK" position.<br>2. Mechanism set to tray 1.<br>3. Cam gear set to "HOME" position. |  | In self-diagnostic mode, press [1] button on main unit.<br><br>To exit, power off the main unit<br><br>Press [EXCHANGE] on main unit for error code.                                                                      |
| Service Mode 2       | To unlock the traverse unit for service.<br><br>In this mode, traverse unit can be disassembled. (Refer to original service manual for CR14D)<br>1. Tray 5 set to "Play" position.<br>2. Mechanism set to tray 5.<br>3. Cam gear set to "HOME" position.                  |  | In self-diagnostic mode, press [2] button on main unit.<br><br>To exit, power off the main unit<br><br>Press [EXCHANGE] on main unit for error code.                                                                      |

### 6.3.2. Self-Diagnosis Mode Table 2

| Item                                         |                                                       | FL Display                                                                                                                                                                                                                                                                              | Key Operation                                                                                                                                   |
|----------------------------------------------|-------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name                                    | Description                                           |                                                                                                                                                                                                                                                                                         | Front Key                                                                                                                                       |
| Reliability<br>2<br>(Traverse Cycle<br>Test) | To determine playability operation.                   | <p>Display 1</p>  <p>Display 2</p>  <p>The counter will increment by one. When reach 99999 will change to 00000</p> | <p>In self-diagnostic mode, press [2] button on remote control.</p> <p>To exit, press [⏻/I] button on the main unit or remote control unit.</p> |
| Reliability<br>3<br>(Combi Cycle<br>Test)    | The combine test for both load & traverse cycle test. | <p>Display 1</p>  <p>Display 2</p>  <p>The counter will increment by one. When reach 99999 will change to 00000</p> | <p>In self-diagnostic mode, press [3] button on remote control.</p> <p>To exit, press [⏻/I] button on the main unit or remote control unit.</p> |





### 6.4. Service Mode Table (For DVD)

By pressing various button combinations on the main unit and remote control unit, you can activate the various service modes for checking.



**Special Note:**

- Due to the limitations of the no. characters that can be shown on the FL Display, the “FL Display” button on the remote control unit can be used to show the two display pages. (Display 1 / Display 2).
- Refer to Section 5.2 for the section on “Remote Control Key Buttons Operations”.




### 6.4.1. Service Mode Table 1

| Item                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | FL Display                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Key Operation                                                                                                                                                                                                                                                                |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name                              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Front Key                                                                                                                                                                                                                                                                    |
| Jitter check                           | <p>Jitter check.<br/>Jitter rate is measured and displayed. Measurement is repeatedly done in the cycle of one second. Read error counter starts from zero upon mode setting.<br/>When target block data failed to be read out, the counter advances by one increment. When the failure is caused by minor error, it may be corrected when retried to enable successful reading.<br/>In this case, the counter advances by one. When the error persists even after retry, the counter may jump by two or more.</p> <p>FL Display sequence:<br/>Display 1→2.</p> | <p>(Display 1)</p>  <p>Jitter Check Mode      Jitter Rate</p> <p>Jitter rate is shown in decimal notation to one place of decimal.<br/>Focus drive value is shown in hexadecimal notation.</p> <p>(Display 2)</p>  <p>Lead Error Counter      Focus Drive Value</p>                                                                               | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [5] button on the remote control unit. Press [STOP] button to exit.</p> <p>Press [FL Display] on remote control unit for next page (FL Display).</p>                                                    |
| Error code display                     | <p>Error code check<br/>The latest error code stored in the EEPROM IC is displayed.</p> <p>Note: Refer to "Section 8.4 DVD Self Diagnostic Function-Error Code" for more detailed information on the error codes.</p>                                                                                                                                                                                                                                                                                                                                           |  <p>U / H / F</p> <p>Error code (play_err) is expressed in the following convention.<br/>Error code = 0 x DAXX is expressed: → DVDnn U12<br/>Error code = 0 x DBXX is expressed: → DVDnn H12<br/>Error code = 0 x DXXX is expressed: → DVDnn F123<br/>Error code = 0 x 0000 is expressed: → DVDnn F---<br/>* "xx" denotes the error code</p>                                                                                        | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [0] button on the remote control unit. * With pointing of cursor up and down on display. Cancelled automatically 5 seconds later.<br/>To exit, press [POWER] button on main unit or remote control.</p> |
| Initial setting of laser drive current | <p>Initial setting of laser drive current.<br/>Initial current value for the DVD laser and CD laser is separately saved in the EEPROM IC.</p> <p>FL Display sequence:<br/>Display 1→2.</p>                                                                                                                                                                                                                                                                                                                                                                      | <p>(Display 1)</p>  <p>Laser Current Measurement Mode</p> <p>The value denotes the current in decimal notation.</p> <p>(Display 2)</p>  <p>CD Laser      DVD Laser      Identify as LDO mode</p> <p>The above example shows the initial current is XXXmA and YYYmA for CD laser and DVD laser respectively when the laser is switched on.</p> | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [PAUSE] button on the remote control unit. Cancelled automatically 5 seconds later.</p> <p>Press [FL Display] on remote control unit for next page (FL Display) on values of laser drive current.</p>   |

## 6.4.2. Service Mode Table 2

| Item                                |                                                                                                                                                                                                                                                                                                                                 | FL Display                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Key Operation                                                                                                                                                                                                                                                                |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name                           | Description                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Front Key                                                                                                                                                                                                                                                                    |
| DVD laser drive current measurement | <p>DVD laser drive current measurement. DVD laser drive current is measured and the result is displayed together with the initial value stored in the EEPROM IC.</p> <p>After the measurement, DVD laser emission is kept on. It is turned off when POWER key is switched off.</p> <p>FL Display sequence:<br/>Display 1→2.</p> | <p>(Display 1)</p>  <p>↑<br/>DVD laser current measurement mode</p> <p>The value denotes the current in decimal notation.</p> <p>(Display 2)</p>  <p>↑                      ↑                      ↑<br/>DVD Laser Initial Value      DVD Laser Value      Identify as LDD mode</p> <p>The above example shows the initial current is XXXmA and the measured value is YYYmA.</p> | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [FUNCTIONS] button on the remote control unit. Cancelled automatically 5 seconds later.</p> <p>Press [FL Display] on remote control unit for next page (FL Display) on values of dvd drive current.</p> |
| CD laser drive current measurement  | <p>CD laser drive current measurement. CD laser drive current is measured and the result is displayed together with the initial value stored in the EEPROM IC.</p> <p>After the measurement, CD laser emission is kept on. It is turned off when POWER key is switched off.</p> <p>FL Display sequence:<br/>Display 1→2.</p>    | <p>(Display 1)</p>  <p>↑<br/>CD Laser Current Measurement Mode</p> <p>The value denotes the current in decimal notation.</p> <p>(Display 2)</p>  <p>↑                      ↑<br/>CD Laser Initial Value      CD Laser Value</p> <p>The above example shows the initial current is XXXmA and the measured value is YYYmA.</p>                                                   | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [3] button on the remote control unit. Cancelled automatically 5 seconds later.</p> <p>Press [FL Display] on remote control unit for next page. (FL Display)</p>                                        |

### 6.4.3. Service Mode Table 3

| Item                                                                |                                                                                                                                                                                                                                                                                     | FL Display                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Key Operation                                                                                                                                                                                                                                |
|---------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name                                                           | Description                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Front Key                                                                                                                                                                                                                                    |
| Micro-processor firmware version display & EEPROM checksum display. | <p>Micro-processor firmware version display &amp; EEPROM checksum display. EEPROM checksum is only available due to existence of EEPROM IC.</p> <p>Note: Condition 1/2/3 shows the state of EEPROM IC. It is indicated in Display 2.</p> <p>FL Display sequence: Display 1→2→3.</p> | <p>(Display 1)</p>  <p>(Display 2)</p>  <p>↑ Opecon Version      ↑ EEPROM Checksum (If applicable, refer below.)</p> <p>(Condition1)</p>  <p>If the version of the EEPROM does not match, [NG] is displayed.</p> <p>(Condition 2)</p>  <p>(a) If there is NO EEPROM header string OR<br/>(b) If there is no EEPROM (no data is received by Micro-processor), [NO] is displayed.</p> <p>(Condition 3)</p>  <p>If the EEPROM version matches, checksum [YYYY] is displayed.</p> <p>(Display 3)</p>  | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [7] button on the remote control unit. Cancelled automatically 5 seconds later.</p> <p>Press [FL Display] button on remote control unit for next page. (FL Display)</p> |
| Initialization mode                                                 | <p>Initialization.</p> <p>User settings are cancelled and player is initialized to factory setting. It is necessary when after replacement of Micro-processor (DV5 LSI) IC, FLASH ROM IC (IC8651), EEPROM IC (IC8611) &amp; DVD Module P.C.B.</p>                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [≥10] button on the remote control unit. Cancelled automatically 5 seconds later.</p>                                                                                   |
| Region display                                                      | <p>Region code display, TV broadcasting system &amp; the model no. information.</p> <p>Note: Refer to Fig. 8.1 for "Video Design Information".</p>                                                                                                                                  |  <p>↑ ↑ ↑ ↑ ↑ Model No. Information</p> <p>↑ N: NTSC / 6: PAL60</p> <p>↑ N: no PAL / P: PAL</p> <p>↑ Region No.: 0-8</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [6] button on the remote control unit. Cancelled automatically 5 seconds later.</p>                                                                                     |

| Model Series   | Country Region                                      | Region Code | TV Broadcasting System | Product                 |                          |             |                                                                     |
|----------------|-----------------------------------------------------|-------------|------------------------|-------------------------|--------------------------|-------------|---------------------------------------------------------------------|
|                |                                                     |             |                        | Signal System (Default) | Region Display (Default) | OSD Default | OSD Menu Language                                                   |
| P, PC, PX      | USA, Canada, PX                                     | 1           | NTSC                   | NTSC (*A)               | 1PN                      | English     | English, Spanish, Canadian, French                                  |
| (S)            | Japan                                               | 2           | NTSC                   | NTSC (*A)               | 2PN                      | Japanese    | Japanese, English                                                   |
| EP             | Europe                                              | 2           | PAL                    | PAL (*C)                | 2P6                      | English     | English, French, German, Spanish, Polish, Russian, Czech, Hungarian |
| EB, EG         | Europe                                              | 2           | PAL                    | PAL (*C)                | 2P6                      | English     | English, French, German, Italian, Spanish, Polish, Swedish, Dutch   |
| GC, GS         | Middle East                                         | 2           | PAL                    | PAL (*C)                | 2P6                      | English     | English, French, German, Spanish, Polish, Russian, Czech, Hungarian |
| GA, GD, GT, GJ | Hong Kong, South East Asia, Thailand, Korea, Taiwan | 3           | PAL NTSC               | NTSC (*B)               | 3PN                      | English     | English, Traditional Chinese                                        |
| GN             | New Zealand, Australia                              | 4           | PAL                    | PAL (*C)                | 4P6                      | English     | English, French, German, Italian, Spanish, Polish, Swedish, Dutch   |
| PN, PH, PU, PR | Central/South/Latin America                         | 4           | NTSC                   | NTSC (*D)               | 4PN                      | English     | English, Spanish, French, Brazilian Portuguese                      |
| EE             | CIS                                                 | 5           | SECAM                  | PAL (*C)                | 5P6                      | English     | English, French, German, Spanish, Polish, Russian, Czech, Hungarian |
| GK             | China                                               | 6           | PAL                    | NTSC (*B)               | 6PN                      | English     | English, Simplified Chinese                                         |

NTSC (\*A)

| Source       | Output           |
|--------------|------------------|
| Screen Saver | NTSC             |
| NTSC disc    | NTSC             |
| PAL disc     | PAL (DVD-V)      |
|              | NTSC (DVD-A/VCD) |

NTSC (\*B)

| Source       | Output         |
|--------------|----------------|
| Screen Saver | NTSC           |
| NTSC disc    | NTSC (default) |
|              | PAL60          |
| PAL disc     | PAL            |

PAL (\*C)

| Source       | Output          |
|--------------|-----------------|
| Screen Saver | PAL             |
| NTSC disc    | PAL60 (default) |
|              | NTSC            |
| PAL disc     | PAL             |

NTSC (\*D)

| Source       | Output |
|--------------|--------|
| Screen Saver | NTSC   |
| NTSC disc    | NTSC   |
| PAL disc     | NTSC   |

Explanation of Display

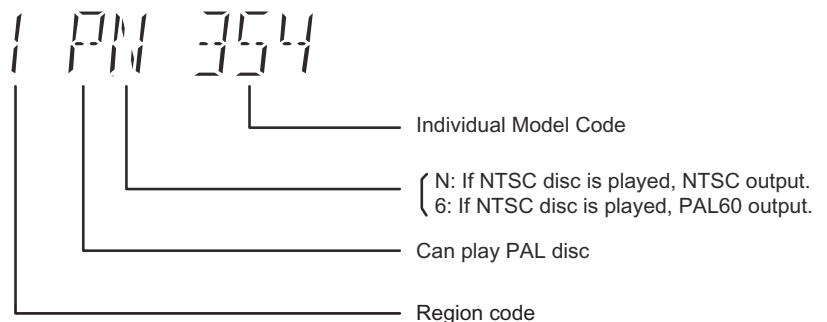



Figure 1 Video Design Information

#### 6.4.4. Service Mode Table 4

|                                            | Item                                                                                                                                                                                                                                             | FL Display | Key Operation                                                                                                                                                                    |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name                                  | Description                                                                                                                                                                                                                                      |            | Front Key                                                                                                                                                                        |
| DVD Module P.C.B. firmware version display | <p>DVD Module P.C.B. firmware version is displayed on the FL Display. The firmware version can be updated using recovery disc.</p> <p>Note: It is necessary to check for firmware version before carrying out the version up using the disc.</p> |            | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [8] button on the remote control unit. Cancelled automatically 5 seconds later.</p>                         |
| CPPM/CRM Keys Check                        | <p>CPPM/CRM refers to the Content Protection for Recordable Media and Pre-Recorded Media. It displays the existence of the keys as "1" or "0".</p> <p>OK: Existing of keys.<br/>NG: Non existing of keys.</p>                                    |            | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [DISC] button on the remote control unit. Cancelled automatically 5 seconds later.</p>                      |
| DVD Module P.C.B. Reset                    | <p>To reset DVD Module P.C.B. This process is used when the DVD Module P.C.B. or FLASH ROM IC is replaced with a new one.</p>                                                                                                                    |            | <p>While in initialization mode, press &amp; hold [STOP] button on the main unit, follow by [OK] button on the remote control unit. Cancelled automatically 5 seconds later.</p> |

## 6.4.5. Service Mode Table 5

|               | Item                                                                                                                                           | FL Display                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Key Operation                                                                                                                                                                                                              |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode Name     | Description                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Front Key                                                                                                                                                                                                                  |
| Timer 1 check | <p>Timer 1 check<br/>Laser operation timer is measured separately for DVD laser and CD laser.</p> <p>FL Display sequence:<br/>Display 1→2.</p> | <p>(Display 1)</p>  <p>DVD laser usage time</p> <p>Shown to the above is DVD laser usage time, and to the below is CD laser usage time.<br/>Time is shown in 4 digits of decimal notation in a unit of 10 hours.<br/>"0000" will follow "9999". (DVD laser)</p> <p>(Display 2)</p>  <p>CD laser usage time</p> <p>Time is shown in 4 digits of decimal notation in a unit of 10 hours.<br/>"0000" will follow "9999". (CD laser)</p> | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [▲] button on the remote control unit.<br/>Cancelled automatically 5 seconds later.</p> <p>Press [FL Display] button for next page of FL Display.</p> |
| Timer 1 reset | <p>Timer 1 reset<br/>Laser operation timer of both DVD laser and CD laser is reset all at once.</p>                                            |  <p>Time is shown in 4 digits of decimal notation in a unit of 10 hours.<br/>It will clear to "0000" upon reset.</p>                                                                                                                                                                                                                                                                                                                                                                                                   | <p>While displaying Timer 1 data, press [STOP] button on the main unit, and [▼] button on the remote control unit.<br/>Cancelled automatically 5 seconds later</p>                                                         |
| Timer 2 check | <p>Timer 2 check<br/>Spindle motor operation timer</p>                                                                                         |  <p>Time is shown in 5 digits of decimal notation in a unit of 1 hour.<br/>"00000" will follow "99999".</p>                                                                                                                                                                                                                                                                                                                                                                                                          | <p>In STOP (no disc) mode, press [STOP] button on the main unit, and [▶] button on the remote control unit.<br/>Cancelled automatically 5 seconds later.</p>                                                               |
| Timer 2 reset | <p>Timer 2 reset<br/>Spindle motor operation timer</p>                                                                                         |  <p>Time is shown in 5 digits of decimal notation in a unit of 1 hour.<br/>It will be cleared to "00000" upon activating this.</p>                                                                                                                                                                                                                                                                                                                                                                                   | <p>While displaying Timer 2 data, press [STOP] button on the main unit, and [◀] button on the remote control unit.<br/>Cancelled automatically 5 seconds later.</p>                                                        |

6.4.6. Optical Pick-up Self-Diagnosis

The optical pickup self-diagnosis function and tilt adjustment check function have been included in this unit. When repairing, use the following procedure for effective self-diagnosis and tilt adjustment. Be sure to use the self-diagnosis function before replacing the optical pickup when "NO DISC" is displayed. As a guideline, you should replace the optical pickup when the value of the laser drive current is more than the specified value.

**Note:**  
Press the power button to turn on the power, and check the value within three minutes before the unit warms up. (Otherwise, the result will be incorrect.)

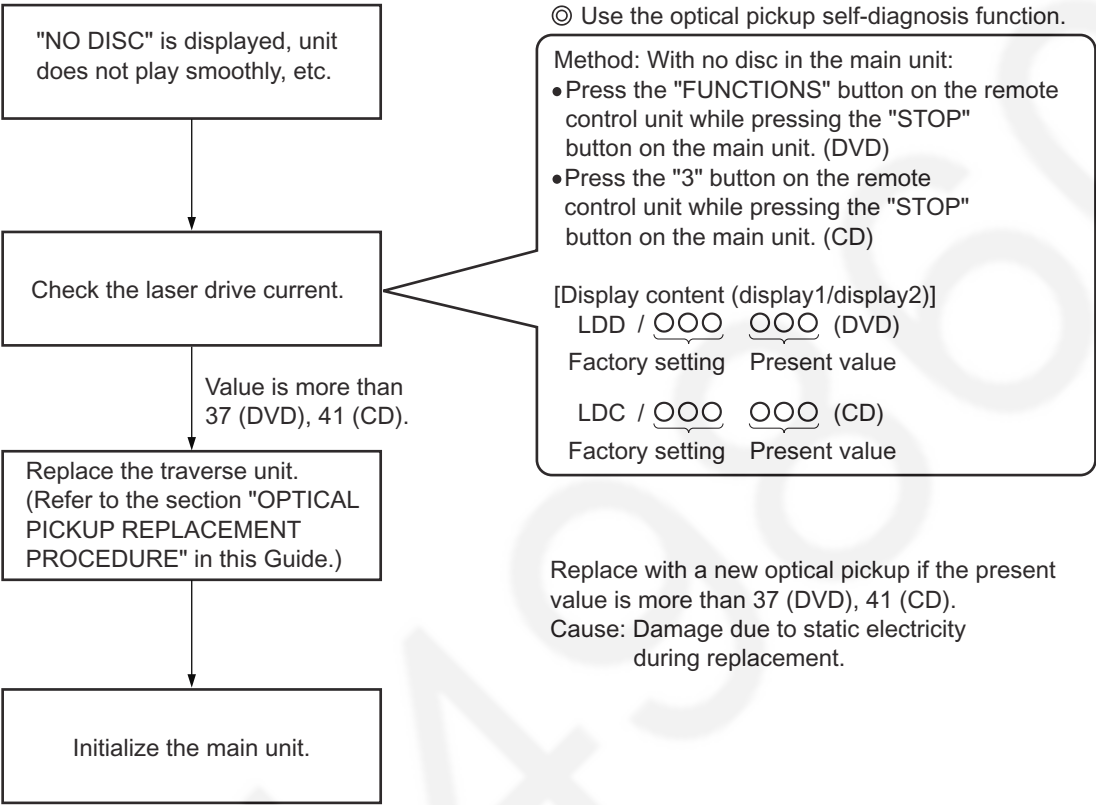





Figure 2

## 6.5. DVD Self Diagnostic Function-Error Code

### 6.5.1. DVD Module Error Code Table

| Error Code | Diagnosis Contents                                                   | Description of error                                                                                                                                                                             | Automatic FL Display                                                                 | Remarks                                     |
|------------|----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------|
| U702       | HDMI/DVI I2C communication error                                     | The communication error of I2C when connecting it with HDMI/DVI. For instance, when EDID information to which information on the TV set side has been described cannot be read, it is generated. |    | Press [ ■STOP] on main unit for next error. |
| U703       | HDMI/DVI attestation error                                           | When attestation (HDCP) with the TV side fails when connecting it with HDMI/DVI, it is generated.                                                                                                |    | Press [ ■STOP] on main unit for next error. |
| U704       | HDMI/DVI SRM Riborcerar                                              | It is generated at the equipment to which the TV set is Riborced when connecting it with HDMI/DVI.                                                                                               |    | Press [ ■STOP] on main unit for next error. |
| U705       | HDMI/DVI SRM disk falsification check error                          | It is generated at the time of it is time when illegal the SRM data of the reproducing disk (verify error), when connecting it with HDMI/DVI.                                                    |    | Press [ ■STOP] on main unit for next error. |
| F740       | HDMI device key                                                      | I2C error when writing HDMI Key device into transmitter.                                                                                                                                         |   | Press [ ■STOP] on main unit for next error. |
| F893       | FLASH ROM IC data falsification error                                | Firmware error, DV5.0 LSI IC (IC8651) error.                                                                                                                                                     |  | Press [ ■STOP] on main unit for next error. |
| F894       | EEPROM IC abnormality error                                          | When failing in the access to EEPROM IC located in the DVD Module P.C.B. (IC8611).                                                                                                               |  | Press [ ■STOP] on main unit for next error. |
| F895       | Language area abnormal                                               | Firmware version agreement check for factory preset setting failure prevention.                                                                                                                  |  | Press [ ■STOP] on main unit for next error. |
| F897       | Initialization error                                                 | Incomplete initialization after writing of new firmware (Factory preset setting failure prevention)                                                                                              |  | Press [ ■STOP] on main unit for next error. |
| F899       | The communication specification disagreement between micro-processor | Unsuitable combination of number of system com and panel com used. (Frimware)                                                                                                                    |  | Press [ ■STOP] on main unit for next error. |



## 6.5.2. DVD Mechanism Unit (CR14D) Error Code Table

| Error Code | Diagnosis Contents                       | Description of error                                                                                                                                       | Automatic FL Display | Remarks                                                                                                      |
|------------|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|--------------------------------------------------------------------------------------------------------------|
| H01        | Tray loading error                       | The tray opening and closing is abnormal. CLOSE and OPEN of the tray cannot be carried out properly. Loading motor error, DV5 LSI IC (IC8001) error.       |                      | Press [ ■ STOP] on main unit for next error. (OPEN time: OPEN→CLOSE→OPEN→H01 at CLOSE: CLOSE→OPEN→CLOSE→H01) |
| H02        | Spindle servo error                      | The spindle servo/motor is abnormal. The FG pulse is abnormal. CLV servo error.                                                                            |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| H03        | Traverse servo error                     | The traverse is abnormal. (Traverse servo, DV5 LSI IC (IC8001), TRV motor error.)                                                                          |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| H04        | Tracking servo error                     | Tracking coil NG (OPU unit abnormal), DV5 LSI IC (IC8001) error.                                                                                           |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| H05        | Seek time out error                      | It is not possible to access the disc. TOC cannot read. Abnormal disc etc. Pickup abnormal or disk is dirty. (TRV motor error, DV5 LSI IC (IC8001) error.) |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| H07        | Driver IC thermal shut down              | The spindle motor is abnormal. (short between brushes)                                                                                                     |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| H15        | Disc tray open detection switch failure  | The disc tray cannot be opened & it closes spontaneously.                                                                                                  |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| H16        | Disc tray close detection switch failure | The disc tray cannot be closed & it opens spontaneously.                                                                                                   |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| U11        | Focus servo error                        | Focus coil, FE signal error.                                                                                                                               |                      | Press [ ■ STOP] on main unit for next error. (Unfinalized DVD-R is likely to become U11.)                    |
| U15        | Unfinalized DVD-R                        |                                                                                                                                                            |                      |                                                                                                              |
| F500       | DSC error                                | DV5 LSI IC (IC8001) stops in the occurrence of servo error (startup, focus error, etc)                                                                     |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| F506       | Invalid media                            | Disc is flipped over, TOC unreadable, incompatible disc.                                                                                                   |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| F620       | OPU unit abnormality temperature         | Laser protection at high temperature.                                                                                                                      |                      | Press [ ■ STOP] on main unit for next error.                                                                 |
| F621       | OPU unit circuitry temperature           | Laser protection at circuit failure.                                                                                                                       |                      | Press [ ■ STOP] on main unit for next error.                                                                 |

### 6.5.3. Power Supply & Digital Amplifier Error Code Table

| Error Code | Diagnosis Contents                                                  | Description of error                                                                                                                                                                                                                                             | Automatic FL Display                                                               | Remarks                                       |
|------------|---------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-----------------------------------------------|
| F61        | The abnormalities in an output or power supply circuit of POWER AMP | In normal operation, when DCDET2 goes to "L" (Low) (Not during POWER OFF condition), F61 appears on FLDisplay for 1 second and PCONT goes to "L" (Low). This is due to speaker output has DC voltage or fan is not working.                                      |  | Press [ ■ STOP ] on main unit for next error. |
| F76        | Abnormality in the output voltage of stabilized power supply        | In normal operation when DCDET1 is detected "L" (Low) for two consecutive times, F76 is displayed on FL for 1 second and after that PCONT will be turned to "L" (Low). This is due to any of the DC voltages (+9V, +7V, -7V, +5V, +5.3V etc.) C22 not available. |  | Press [ ■ STOP ] on main unit for next error. |

### 6.5.4. USB Error Code Table

| Error Code | Diagnosis Contents                          | Description of error                                                                                                                                                                                                   | Automatic FL Display                                                                 | Remarks                                       |
|------------|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|-----------------------------------------------|
| F650       | USB device: Devices other than mass storage | Devices other than the mass storage class are connected.                                                                                                                                                               |   | Press [ ■ STOP ] on main unit for next error. |
| F651       | USB device: Non-Full Speed Device           | The device that the transfer rate did not correspond to Full Speed was connected.                                                                                                                                      |  | Press [ ■ STOP ] on main unit for next error. |
| F652       | USB device: Interface NG                    | The device in the interface (subclass) outside correspondence was connected. (correspondence interface)<br>001b: Reduced Block Commands (RBC)<br>010b: SFF-8020i. MMC-2 (ATAPI)<br>110b: SCSI transparent command set. |  | Press [ ■ STOP ] on main unit for next error. |
| F655       | USB device: Overcurrent detection           | The overcurrent of 500mA or more was detected in VDD USB, and the USB device driver function was intercepted. (To intercept the current.)                                                                              |  | Press [ ■ STOP ] on main unit for next error. |

### 6.5.5. DVD Changer Mechanism Unit (CR14D) Error Code Table

| Error Code | Diagnosis Contents                     | Description of error                                                                             | Automatic FL Display | Remarks                                                                       |
|------------|----------------------------------------|--------------------------------------------------------------------------------------------------|----------------------|-------------------------------------------------------------------------------|
| LOAD       | Load operation faulty                  | The load operation cannot complete when time out occurs.                                         | LOAD                 | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |
| UNLD       | Unload operation faulty                | The unload operation cannot complete when time out occurs.                                       | UNLD                 | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |
| UP         | Exchange open operation faulty         | The exchange open operation cannot complete when time out occurs.                                | UP                   | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |
| DOWN       | Down operation faulty                  | The down operation cannot complete when time out occurs.                                         | DOWN                 | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |
| OPEN       | Open operation faulty                  | The open operation cannot complete when time out occurs.                                         | OPEN                 | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |
| CLOSE      | Close operation faulty                 | The open operation cannot complete when time out occurs.                                         | CLOSE                | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |
| MODEL      | Mode change to updown operation faulty | The mode change to updown operation cannot complete when time out occurs. It changes to up/down. | MODEL                | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |

| Error Code | Diagnosis Contents                         | Description of error                                                          | Automatic FL Display | Remarks                                                                       |
|------------|--------------------------------------------|-------------------------------------------------------------------------------|----------------------|-------------------------------------------------------------------------------|
| MODEH      | Mode change to horizontal operation faulty | The mode change to horizontal operation cannot complete when time out occurs. | MODEH                | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |
| INITIALIZE | Initialize operation faulty                | The initialize operation cannot complete.                                     | INIT                 | For DVD Mechanism unit (CR14D). Press [EXCHANGE] on main unit for next error. |

## 6.5.6. Deck Mechanism Error Code Table

| Error Code | Diagnosis Contents                          | Description of Error                                                                                                                                                                | Automatic FL Display | Remarks                                                                  |
|------------|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|--------------------------------------------------------------------------|
| H01        | Mode SW, plunger and capstan motor abnormal | Normal operation during mecha transition, MODE SW abnormal is memorized. The content of abnormality can be confirmed in the abnormal detection mode explained in the later section. | H01                  | For deck mechanism unit.<br>Press [STOP, ■] on main unit for next error. |
| H02        | Rec INH SW abnormal                         | The content of abnormality can be confirmed in the abnormal detection mode explained in the later section.                                                                          | H02                  | For deck mechanism unit.<br>Press [STOP, ■] on main unit for next error. |
| H03        | HALF SW abnormal                            |                                                                                                                                                                                     | H03                  | For deck mechanism unit.<br>Press [STOP, ■] on main unit for next error. |
| F01        | Reel pulse abnormal                         |                                                                                                                                                                                     | F01                  | For deck mechanism unit.<br>Press [STOP, ■] on main unit for next error. |

## 6.6. Sales Demonstration Lock Function

This function prevents discs from being lost when the unit is used for sales demonstrations by disabling the disc eject function. "LOCKED" is displayed on the unit, and ordinary operation is disabled.

### 6.6.1. Setting

#### • Prohibiting removal of disc

1. Select the DVD/CD function.
2. At POWER ON condition, press and hold down the ■ button and the power button on the main unit for at least three seconds. (The message, "LOCKED" appears when the function is activated.)

#### Note:

OPEN/CLOSE ▲ button is invalid and the main unit displays "LOCKED" while the lock function mode is entered.

#### • Prohibiting operation of selector and disc

1. Select the DVD/CD function.
2. At POWER ON condition, press and hold down the ► button and the power button on the main unit for at least three seconds. (The message, "LOCKED" appears when the function is activated.)

#### Note:

The following buttons are invalid and the main unit displays "LOCKED" while the lock function mode is entered.

|                        |                                                                                                                |
|------------------------|----------------------------------------------------------------------------------------------------------------|
| Main unit              | ▲OPEN/CLOSE, ■/-TUNE MODE/-FM MODE, SELECTOR, ◀◀/◀◀/∨, ∧/▶▶/▶▶                                                 |
| Remote controller unit | iPod/USB, FM/EXT-IN, NUMERIC KEYS 0~9, ≥10, ◀◀, ▶▶, ◀◀, ▶▶, ■,   , RETURN, FUNCTIONS, FL DISPLAY/SLEEP, MUTING |

### 6.6.2. Cancellation

The lock can be cancelled by the same procedure as used in setting. ("UNLOCKED" is displayed on cancellation. Disconnecting the power cable from power outlet does not cancel the lock.)

## 7 Troubleshooting Guide

### 7.1. Troubleshooting Guide for F61 and/or F76

This section illustrates the checking procedures when upon detecting the error of “F61” and/or “F76” after power up of the unit. It is for purpose of troubleshooting and checking in SMPS, D-Amp & Main P.C.B.

#### 7.1.1. Block Diagram

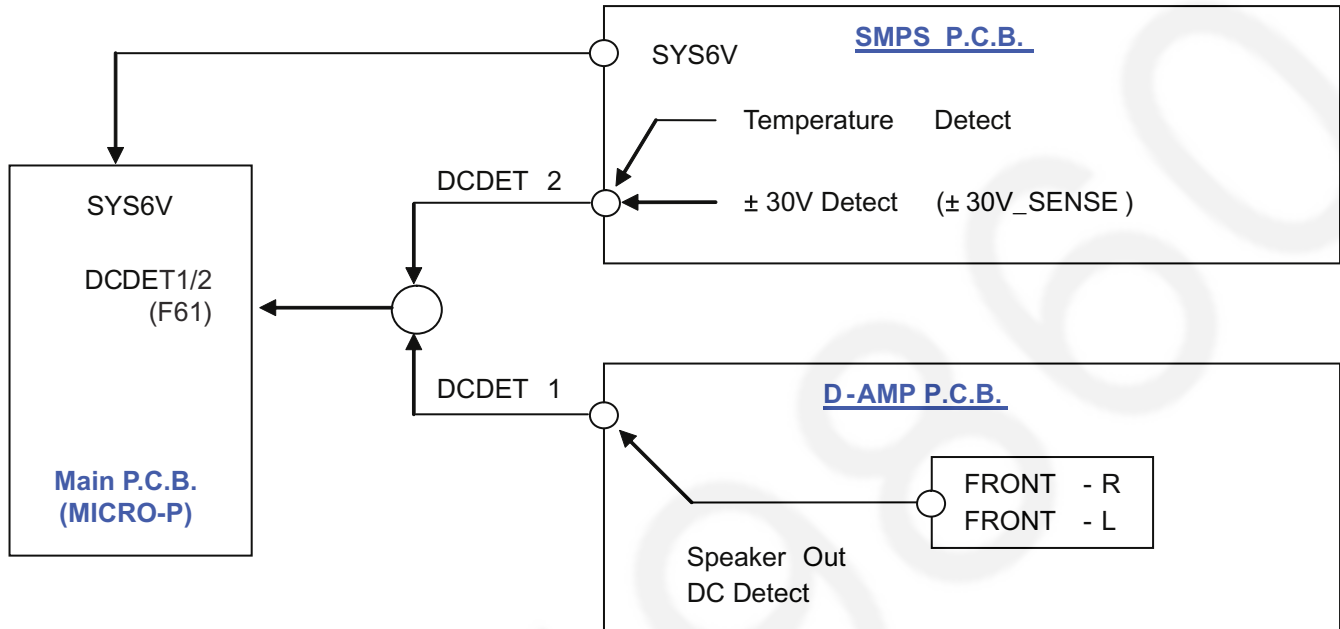


Figure 1

## 7.1.2. Troubleshooting Guide

| Symptom                                                                  | Checking Items                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Repair Items                                                                                                                                                                                                                                                                                                     | Remarks                                                                                  |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| FL display blinking with abnormal segment when power ON the set or "F61" | <p>Check the soldering of the SMPS P.C.B.</p> <ul style="list-style-type: none"> <li>Is there any solder crack at area (Q5860,Q5861, Q5862,TH5860)</li> <li>Check all the supply line <math>\pm 30V</math></li> <li>Is there any solderability at area of feedback circuit</li> <li>Check feedback circuit (IC5801, Q5802, D5806, PC5720, D5725)</li> </ul>                                                                                                                                                                                                                                                                               | <p>Touch-up the solder crack area/ Change the defective parts.</p> <ul style="list-style-type: none"> <li>Q5860,Q5861,Q5862,TH5860 (Temperature Detect)</li> <li>QR5801 &amp; QR5802 (<math>\pm 30V</math> Detect)</li> <li>Touch-up the necessary areas</li> <li>IC5801, Q5802, D5806, PC5720, D5725</li> </ul> | <p>SMPS P.C.B.</p> <p>Refer to Figure 2</p>                                              |
| First Power ON Display immediate show "F61".                             | <p>Check Speaker output by using multi-meter,</p> <ul style="list-style-type: none"> <li>If there is a DC Voltage around <math>\pm 30V</math></li> <li>Check Output IC (Pin 10 &amp; 14) which have DC Voltage at Speaker output short to <math>\pm V_{dd}/V_{ss}</math></li> <li>If shorted that means D-Amp damage already.</li> </ul>                                                                                                                                                                                                                                                                                                  | <p>Change the defective parts.</p> <p>D-AMP IC:<br/>IC5000<br/>P/N = C1BA00000492</p> <p>For Configuration<br/>Refer to Figure 5</p>                                                                                                                                                                             | <p>D-AMP P.C.B.</p> <p>Refer to Figure 3</p>                                             |
| Power ON for a while then only trigger "F61".<br>(Symptom always happen) | <p>Check the soldering of the SMPS P.C.B.</p> <ul style="list-style-type: none"> <li>Is there any solder crack at area (Q5860,Q5861, Q5862,TH5860)</li> <li>Check all the supply line <math>+ 30V</math></li> <li>+18V at ZJ2701 (Pin 8 &amp; 9)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                               | <p>Touch-up the solder crack area/ Change the defective parts.</p> <ul style="list-style-type: none"> <li>Q5860,Q5861,Q5862,TH5860 (Temperature Detect)</li> <li>QR5801 &amp; QR5802 (<math>\pm 30V</math> Detect)</li> </ul> <p>Feedback Circuit: IC5801, Q5802<br/>PC5720, D5725, D5806</p>                    | <p>Main P.C.B.</p> <p>Refer to Figure 4</p> <p>D-Amp P.C.B.</p> <p>Refer to Figure 3</p> |
| Power ON for a while and then trigger "F76"                              | <p>Check all supply voltages as follows:</p> <p>Step 1: Check for supply voltages from SMPS P.C.B to Main P.C.B at pin 2,5,8,9 of CN5802. If there are supply voltages, proceed to Step 2. If no voltages detected, check wire connection and circuitry connection from SMPS P.C.B.</p> <p>Step 2: Check if there is supply voltages for <math>-V_p</math>, FL1 &amp; FL2 CN2807</p> <ul style="list-style-type: none"> <li>If there is supply voltages of +2.7V at CN2801, Pin 19 &amp; 17</li> <li>+5V at CN2801, Pin 26</li> <li>+5V at CN2807, Pin 5</li> <li>If there is supply voltages of <math>\pm 9V</math> at CN6001</li> </ul> | <p>Check and change the possible defective parts.</p> <ul style="list-style-type: none"> <li>FP2901 (Fuse Protector), T2900, D2901, D2906, D2908, D2909</li> <li>IC4000 (Switching Regulator IC) &amp; related regulator circuit components</li> </ul>                                                           | <p>Main P.C.B.</p> <p>Refer to Figure 4</p>                                              |

### 7.1.3. Part Location

#### 7.1.3.1. SMPS P.C.B.

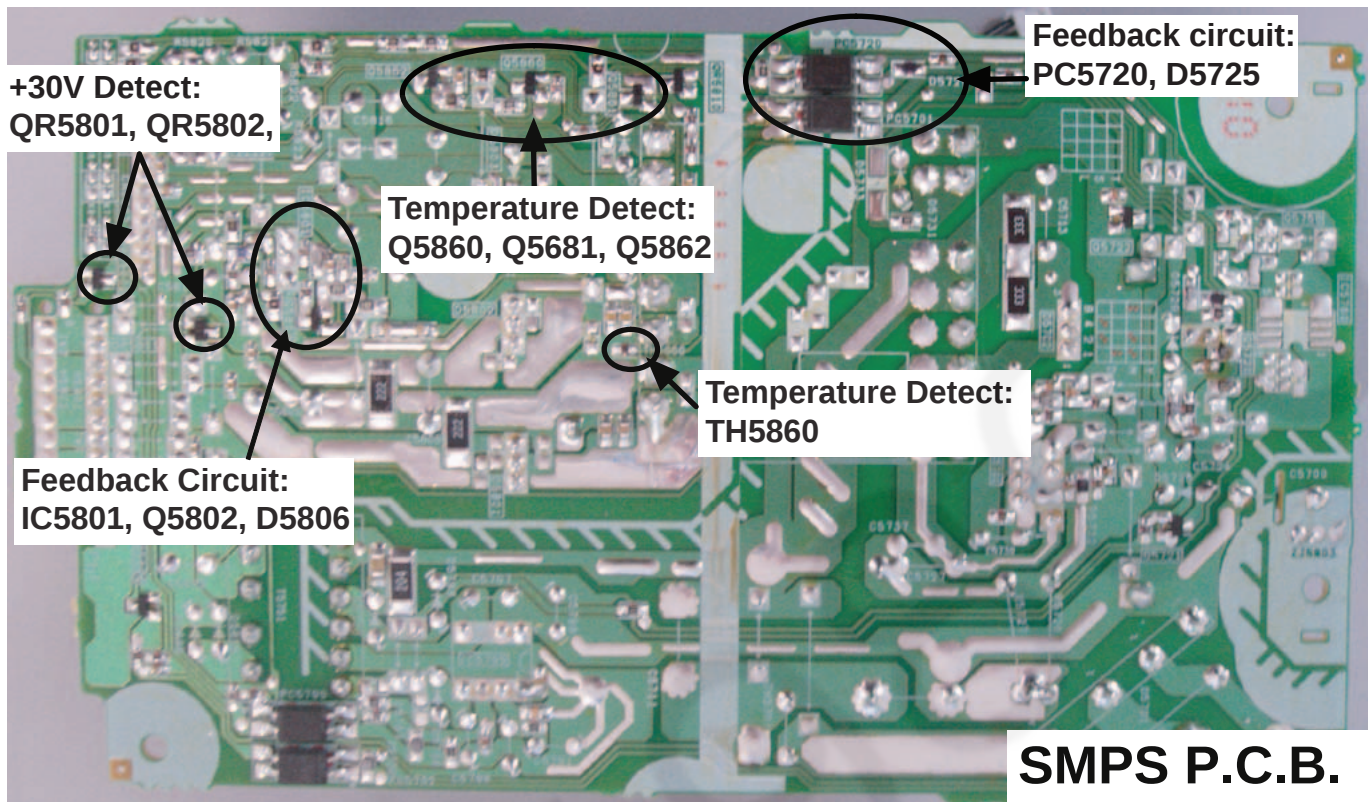


Figure 2 SMPS P.C.B.

### 7.1.3.2. D-Amp P.C.B.

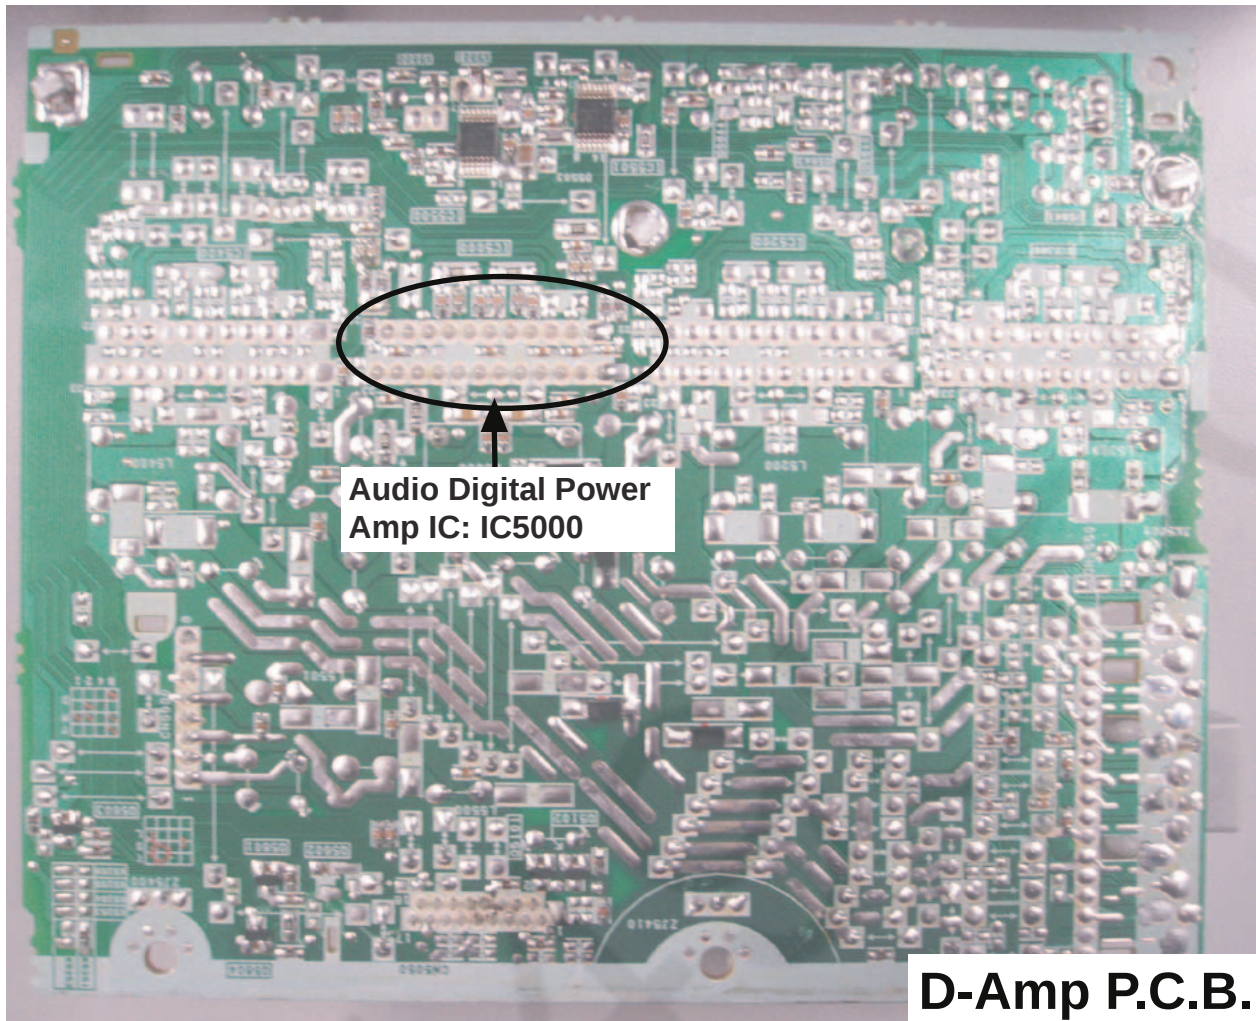


Figure 3 D-Amp P.C.B.

### 7.1.3.3. Main P.C.B.

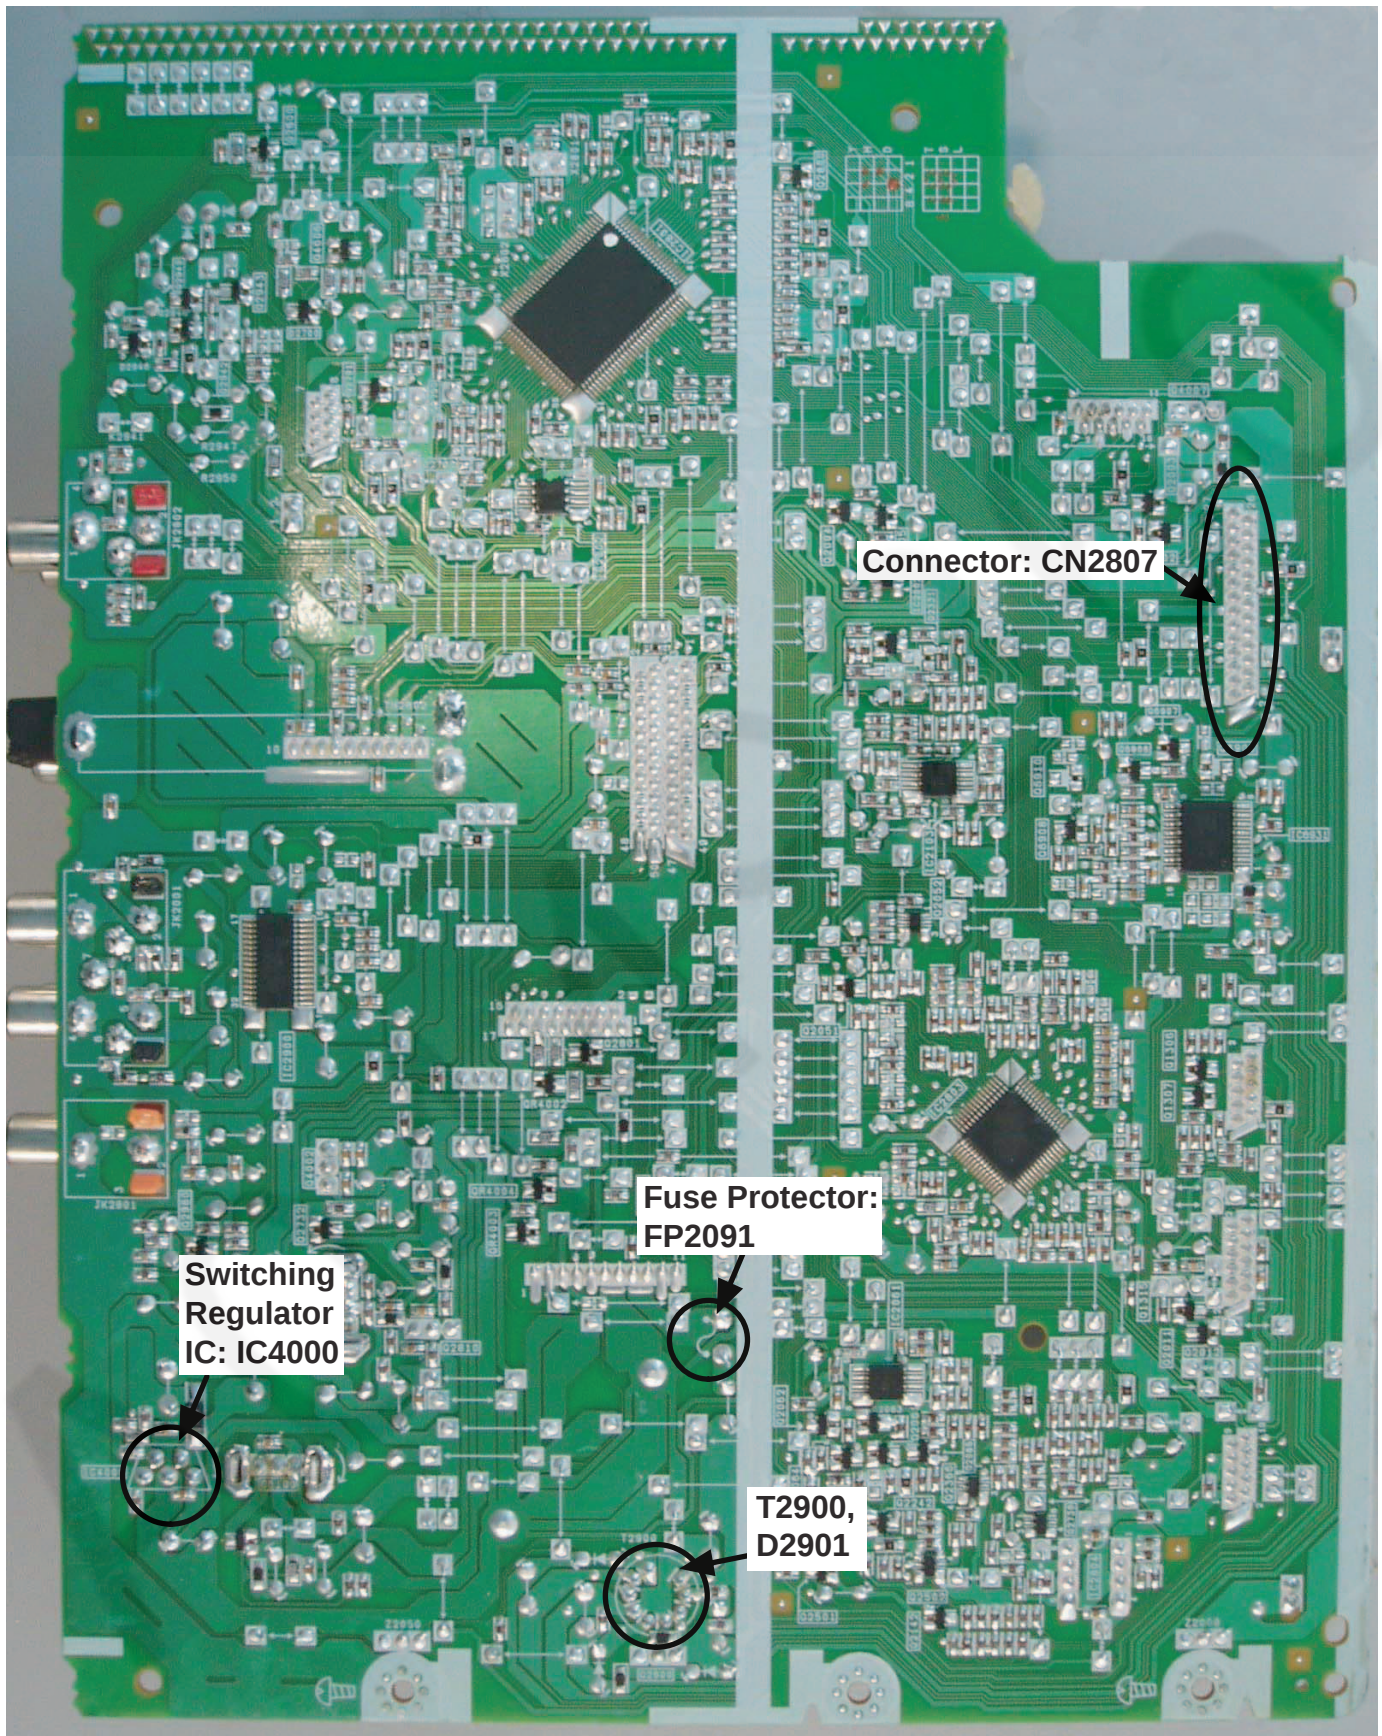


Figure 4 Main P.C.B.

#### 7.1.3.4. D-Amp IC Configuration

|        |          |             |
|--------|----------|-------------|
|        |          | VK480EE     |
| IC5000 | Pin (10) | Front Right |
|        | Pin (14) | Front Left  |

Figure 5

## 7.2. Basic Troubleshooting Guide for Traverse Unit (DVD Module P.C.B.)

| Problems                                                                                    | Checking Points                                                                                                                                                                               | Checking components                                                                                          |
|---------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| 1) Distorted picture or abnormal sound is heard during the initialization                   | a) Check SDRAM address, data bus, CLK and other control signals waveform                                                                                                                      | IC8051                                                                                                       |
|                                                                                             | b) Check video signals (Y,C)                                                                                                                                                                  | LB8301, R8321, R8323, LB8302, R8325, R8327                                                                   |
|                                                                                             | c) Check audio DAC circuitry<br>* Compare the above with OK condition DVD Module P.C.B                                                                                                        | IC8420 (Pin 3,10 & 11)<br>LB8421, LB8422<br>*Check for solder short and/or component missing/damaged         |
| 2) No TOC/Long TOC                                                                          | a) Check motor driver circuitry (+5V)                                                                                                                                                         | IC8251 Pin 8, 21                                                                                             |
|                                                                                             | b) Check laser drive circuitry (Voltages & current)                                                                                                                                           | Q8551, Q8552 (For DVD), Q8561, Q8562 (For CD)                                                                |
|                                                                                             | c) Check LSI IC connection to motor drive circuitry<br>* Compare the above with OK condition DVD Module P.C.B.                                                                                | IC8001 Pin 66, 67<br>IC8251 Pin 15, 16, 17 & 18<br>* Check for solder short and/or component missing/damaged |
| 3) Disc not spinning<br>4) Traverse not moving<br>5) Traverse and spindle abnormal movement | a) Check connection from DVD Module to Traverse unit                                                                                                                                          | FP8251                                                                                                       |
|                                                                                             | b) Check motor driver circuitry on the voltages and control signals<br>* Compare the above with OK condition DVD Module P.C.B.                                                                | IC8251<br><br>* Check for solder short and/or component damaged                                              |
| 6) Cannot read the disc but spindle motor is spinning<br>- Cannot read CD/DVD               | a) Check laser drive circuitry (voltages and current)<br>- Check CD Laser Drive<br>- Check DVD Laser Drive<br>* Check voltages and LD current and compare with OK condition DVD Module P.C.B. | Q8551, Q8552, LB8551 (For DVD Laser Drive current)<br>Q8561, Q8562, LB8561 (For CD Laser Drive current)      |
| 7) Block Noise during play                                                                  | a) Check SDRAM IC address and data bus signal                                                                                                                                                 | IC8051                                                                                                       |
| 8) Jitter out of specification                                                              | a) Check LD current<br>b) Check OPU (Change to other unit and confirmed operating condition)                                                                                                  | OPU Unit (Traverse unit), FPC connection (FP8531 & FP8251)                                                   |

## 8 Service Fixture & Tools

### 8.1. Service Tools and Equipment

Prepare service tools before process service position.

| Service Tools                                |                      | Remarks |
|----------------------------------------------|----------------------|---------|
| Main P.C.B. (CN2808) - D-Amp P.C.B. (CN5050) | REEX0930 (17P FFC)   | [M]     |
| Main P.C.B. (ZJ2701) - SMPS P.C.B. (CN5802)  | REXX0680 (11P Cable) | [M]     |
| SMPS P.C.B. (H5801) - D-Amp P.C.B. (CN5500)  | REXX0683 (8P Cable)  | [M]     |

## 9 Disassembly and Assembly Instructions

### “ATTENTION SERVICER”

Be careful when disassembling and servicing.

Some chassis components may have sharp edges.

### Special Note:

1. This section describes the disassembly procedures for all the major printed circuit boards and main components.
2. Before the disassembly process was carried out, do take special note that all safety precautions are to be carried out.  
(Ensure that no AC power supply is connected during disassembling.)
3. For assembly after operation checks or replacement, reverse the respective procedures.  
Special reassembly procedures are described only when required.
4. Do take note of the locators on each printed circuit board during reassembling procedures.
5. The Switch Regulator IC may have high temperature after prolonged use.
6. Use caution when removing the top cabinet and avoid touching heat sinks located in the unit.

**CAUTION: HOT!!  
PLEASE DO NOT  
TOUCH THE HEAT SINK**

### 7. Select items from the following index when checks or replacement are required.

- Disassembly of Top Cabinet
- Disassembly of DVD Mechanism Unit (CR14D)
- Disassembly of DVD Module P.C.B.
- Disassembly of Rear Panel
- Disassembly of Front Panel Assembly
- Disassembly of USB P.C.B.
- Disassembly of Mic P.C.B.
- Disassembly of Panel P.C.B., Volume P.C.B., Remote Sensor P.C.B., Side Bar (L/R) LED P.C.B.
- Disassembly of Music Port P.C.B.
- Disassembly of CD Lid
- Disassembly of Deck Mechanism Unit
- Disassembly of Deck P.C.B.
- Disassembly of Deck Mechanism P.C.B.
- Disassembly of Deck Mechanism
- Disassembly of Cassette Lid
- Rectification for Tape Jam Problem
- Disassembly of D-Amp P.C.B.
- Replacement of Audio Digital Power Amp IC (IC5000)
- Disassembly of Main P.C.B.
- Disassembly of SMPS P.C.B.
- Replacement for Switch Regulator IC (IC5701)
- Replacement for Switch Regulator Diode (D5702)
- Replacement for Regulator Diode (D5801)
- Replacement for Regulator Diode (D5802)
- Replacement for Regulator Diode (D5803)
- Disassembly of AC Inlet P.C.B.
- Disassembling and Assembling of Traverse Unit.

**Below shown is part no. of different screws types used:**

**CAUTION NOTE:**

Please use original screw and at correct locations.


Below shown is part no. of different screw types used:

- |                        |                       |
|------------------------|-----------------------|
| <b>a</b> :RHD30007-K2J | <b>i</b> :XTB3+10JFJ  |
| <b>b</b> :RHD30119-S   | <b>j</b> :XTW3+8TFJ   |
| <b>c</b> :XTW3+12TFJ   | <b>k</b> :XYC2+JF17   |
| <b>d</b> :RHD26043-1   | <b>l</b> :XTW2+5LFJ   |
| <b>e</b> :RHD30111-31  | <b>n</b> :XTW26+10SFJ |
| <b>f</b> :RHD26046-L   | <b>o</b> :RHD26022-1  |
| <b>g</b> :RHD30008     |                       |
| <b>h</b> :XTV3+10GFJ-M |                       |


## 9.1. Disassembly flow chart

The following chart is the procedure for disassembling the casing and inside parts for internal inspection when carrying out the servicing.

To assemble the unit, reverse the steps shown in the chart as below.

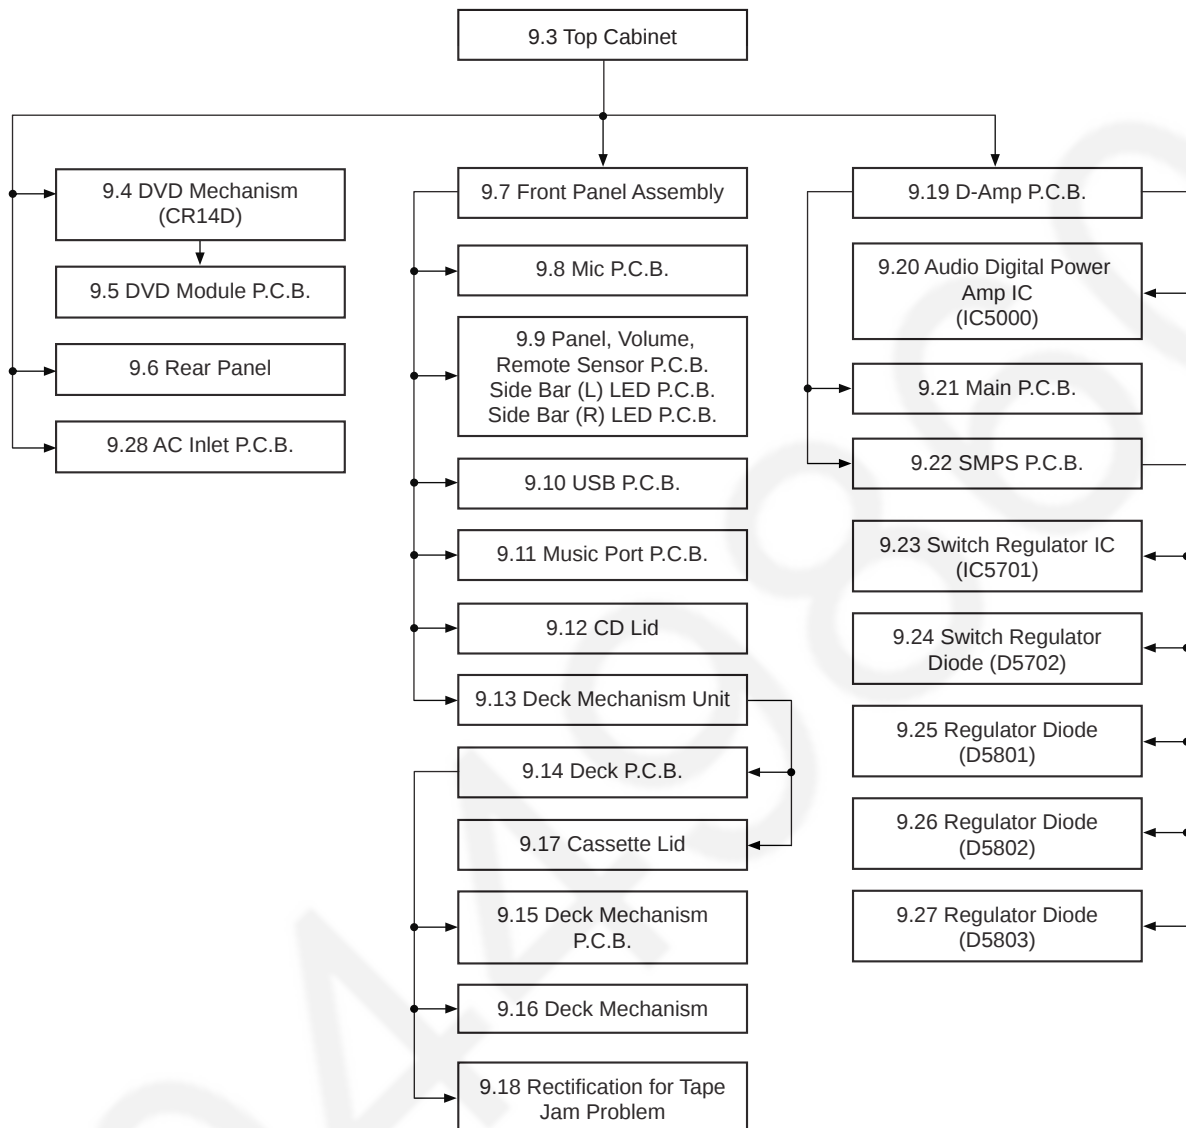


## 9.2. Main Components and P.C.B. Location

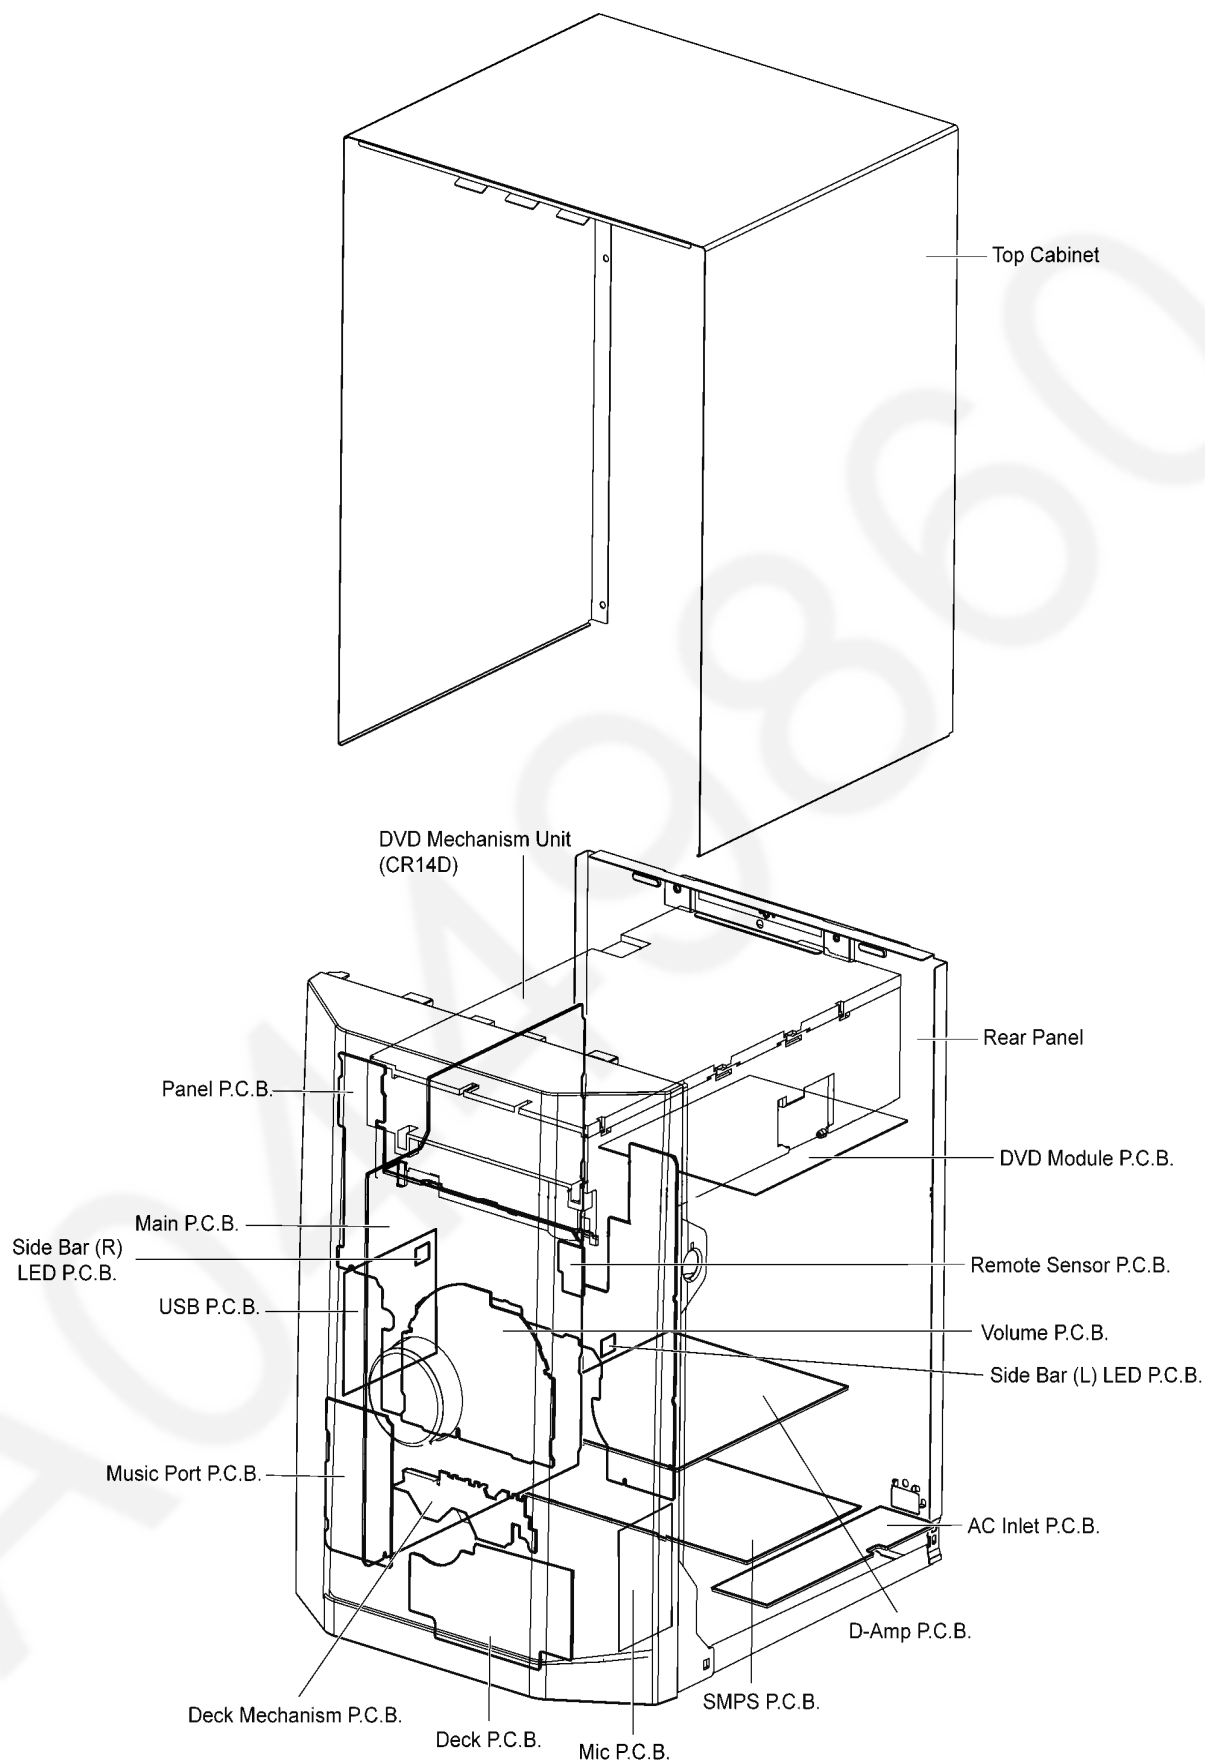

### 9.3. Disassembly of Top Cabinet


(Left View)

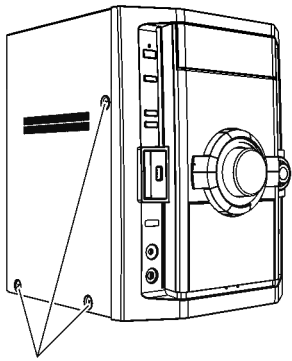

(Step 1)

⚙️ **a** x 3

(Right View)

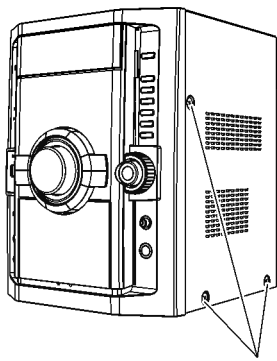


(Step 1)

⚙️ **a** x 3

**Step 1** Remove 3 screws on each side of the main unit.

(Step 2)


⚙️ **b** x 5

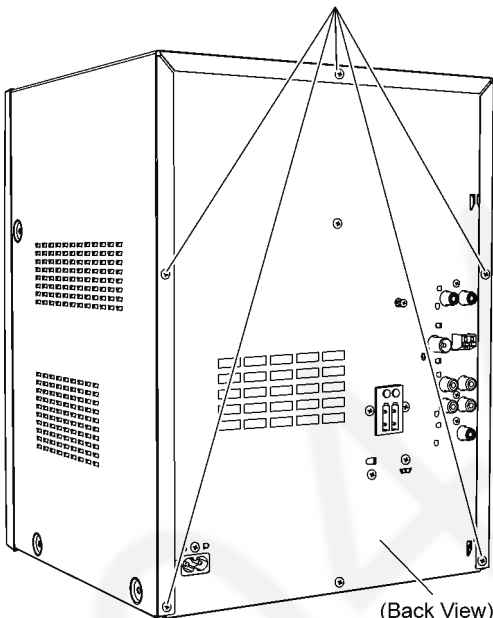

(Back View)

**Step 2** Remove 5 screws.

Top Cabinet

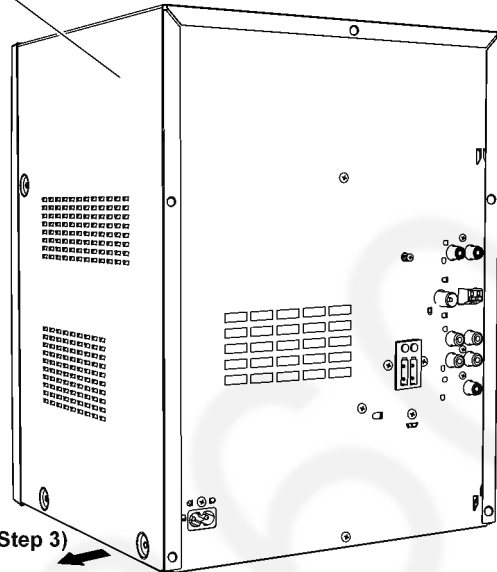


(Step 3)

(Step 3)


**Step 3** Lift the sides of top cabinet outwards as arrow shown.

(Step 4)


Catches

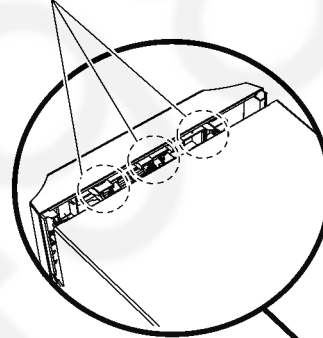

Top Cabinet

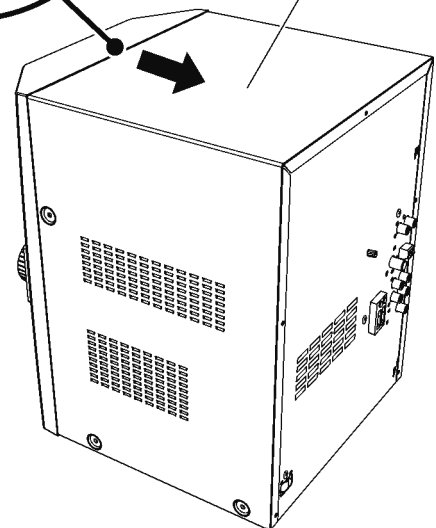


**Step 4** Push the top cabinet backwards as arrow shown to release the catches.

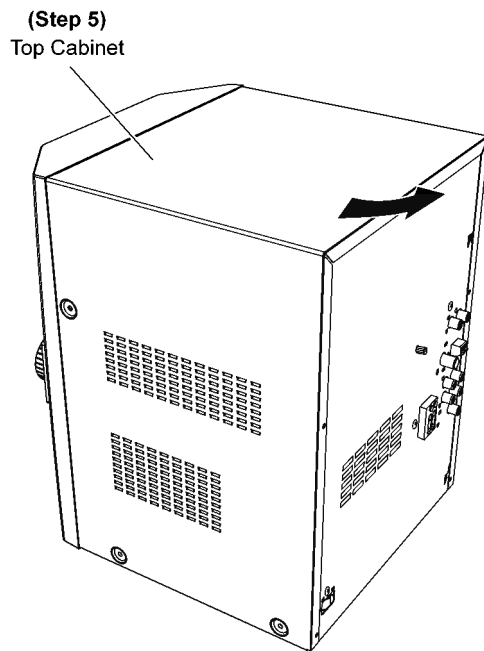


**Step 5** Remove the top cabinet.

## 9.4. Disassembly of DVD Mechanism Unit (CR14D)

- Follow the (Step 1) to (Step 5) of Item 9.3

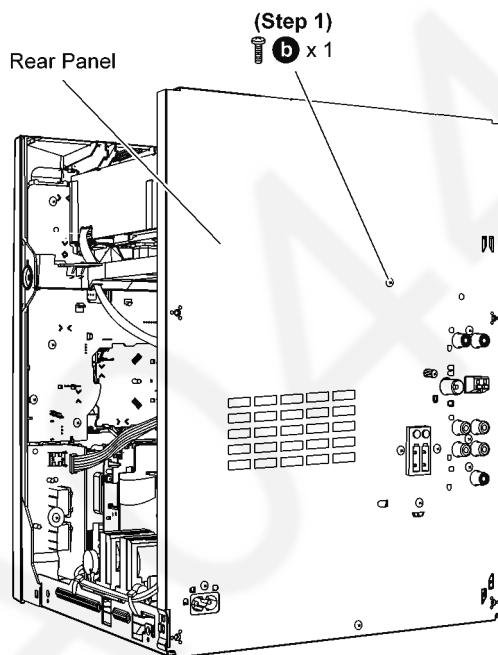


**Step 1** Remove 1 screw at rear panel.

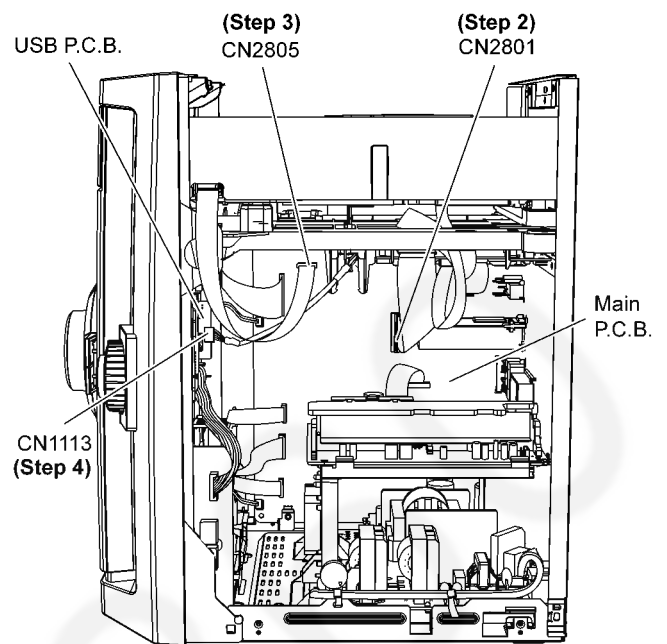

**Step 2** Detach 50P FFC cable at the connector (CN2801) on Main P.C.B.


**Step 3** Detach 11P FFC cable at the connector (CN2805) on Main P.C.B.

**Step 4** Detach 5P cable at the connector (CN1113) on USB P.C.B.

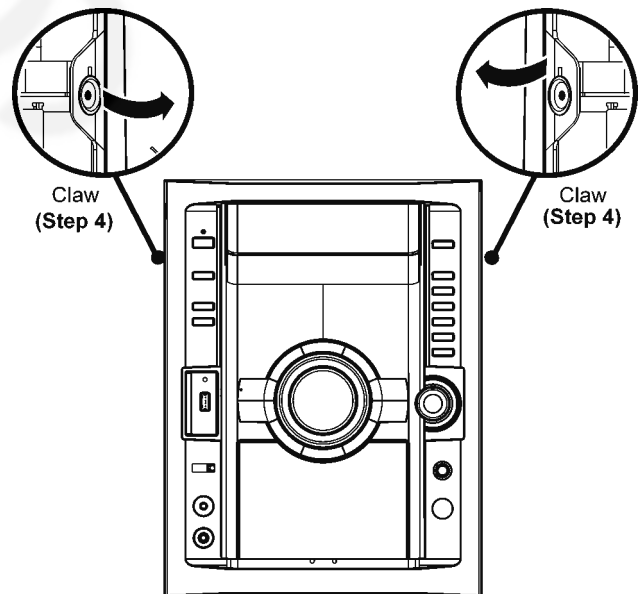


**Step 5** Release the claws outwards on both sides.

**Caution:** During assembling, ensure the claws are fully caught.

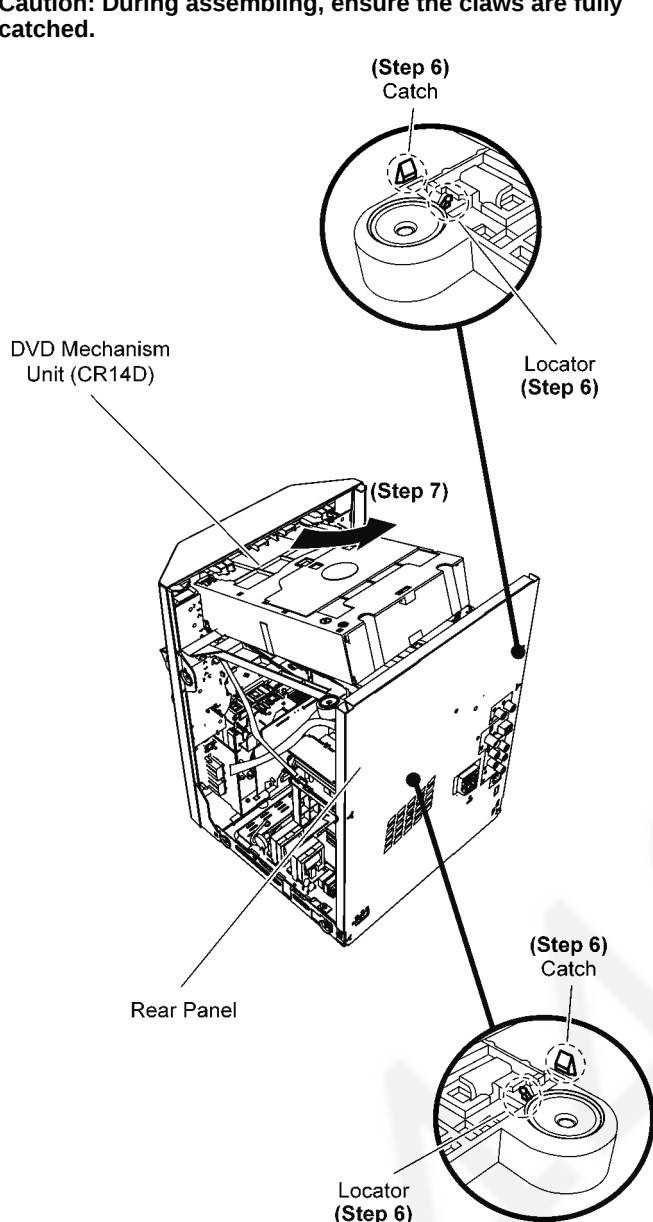


**Step 6** Release the DVD Mechanism Unit (CR14D) from the catches and locators.

**Step 7** Lift up DVD Mechanism Unit (CR14D) in the direction of arrow.

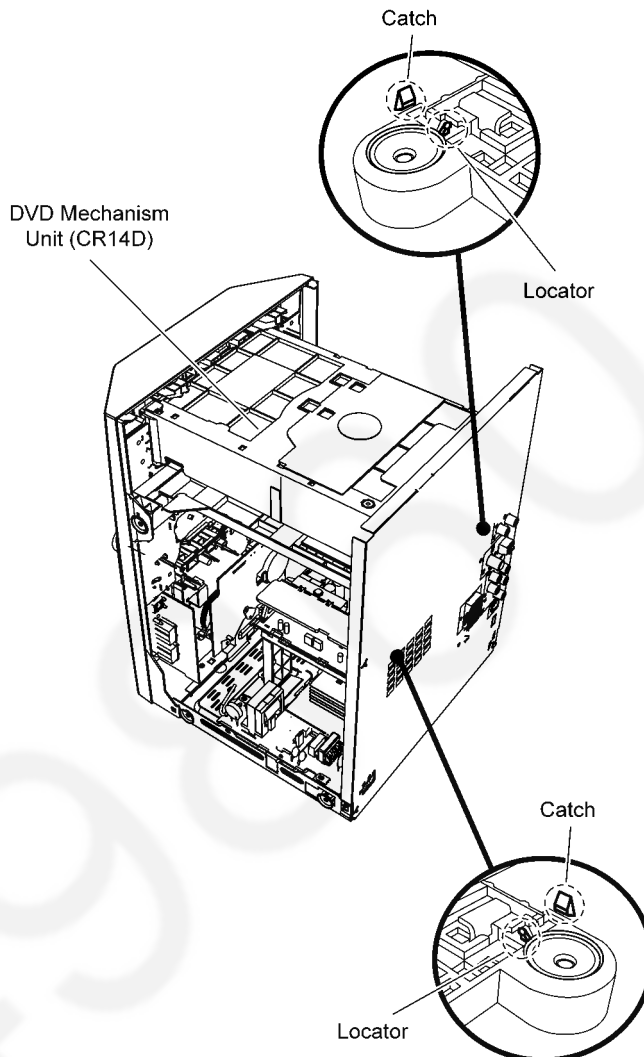


**Caution:** During assembling, ensure that the DVD Mechanism Unit (CR14D) is seated properly at the locator.

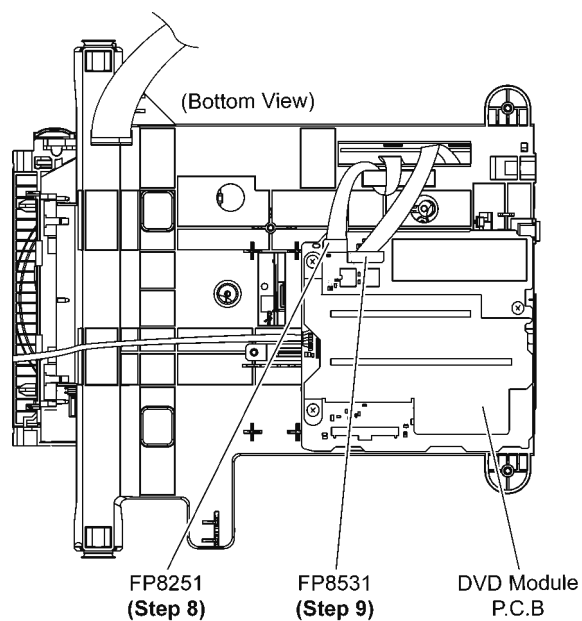


**Step 8** Detach 7P FFC at the connector (FP8251).

**Step 9** Detach 26P FFC at the connector (FP8531).

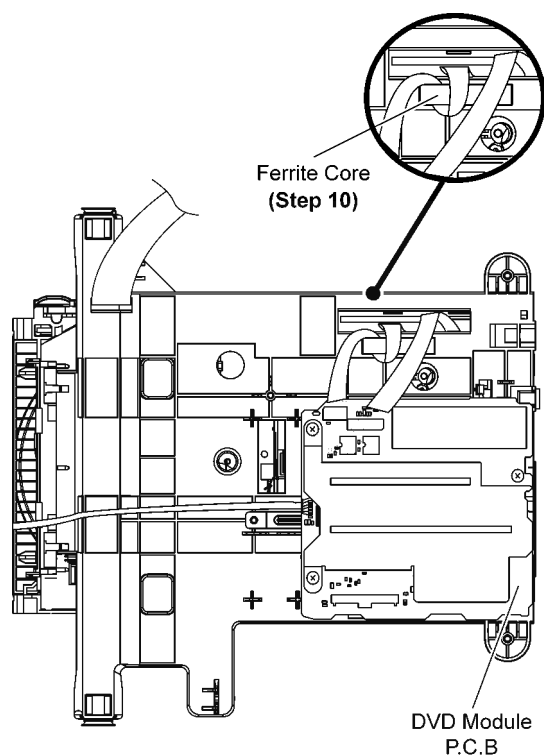

**Step 10** Remove 7P FFC from the Ferrite Core.

**Caution:** Ensure that 7P FFC is properly slot through the Ferrite Core.

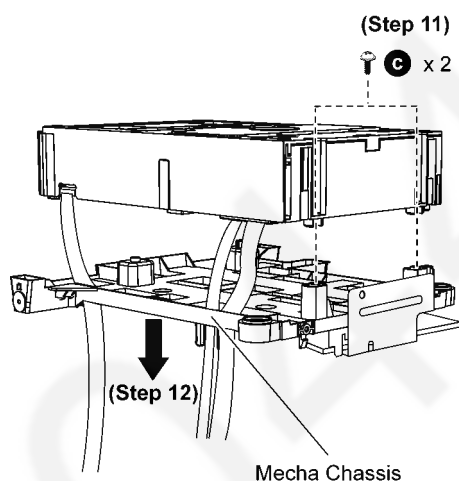


**Step 11** Remove 2 screws.

**Step 12** Remove DVD Mechanism Unit (CR14D).

## 9.5. Disassembly of DVD Module P.C.B.

- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 9) of Item 9.4

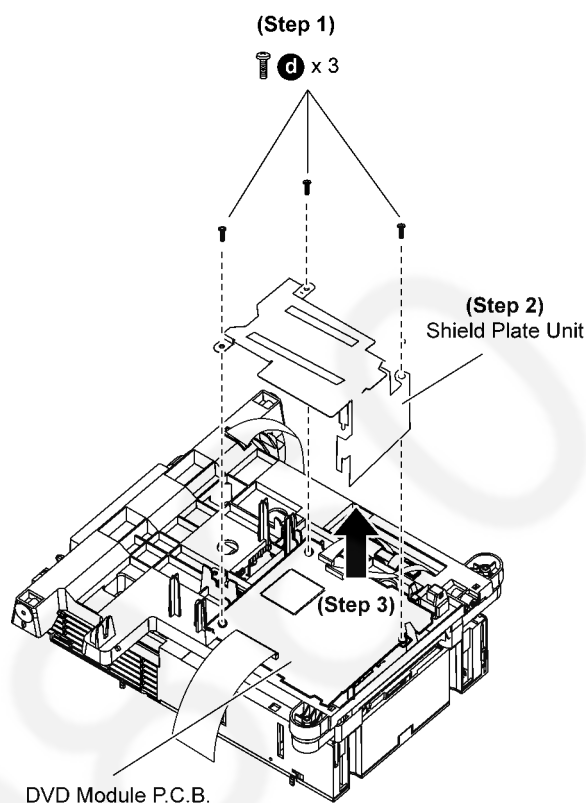


**Step 1** Remove 3 screws.

**Step 2** Remove the shield plate unit.

**Step 3** Remove DVD Module P.C.B..


## 9.6. Disassembly of Rear Panel

- Follow the (Step 1) to (Step 5) of Item 9.3

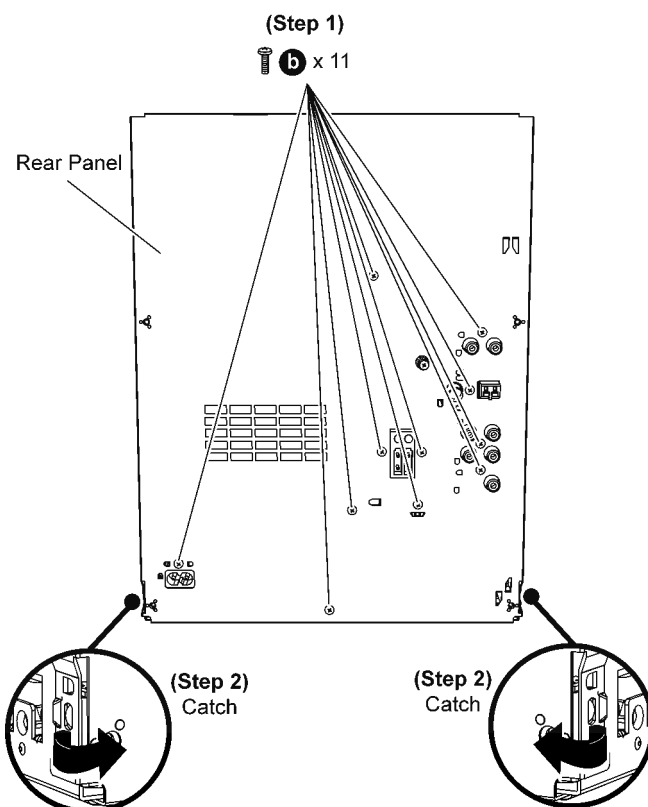

**Step 1** Remove 11 screws at rear panel.

**Step 2** Release 2 catches from the each side of the rear panel.

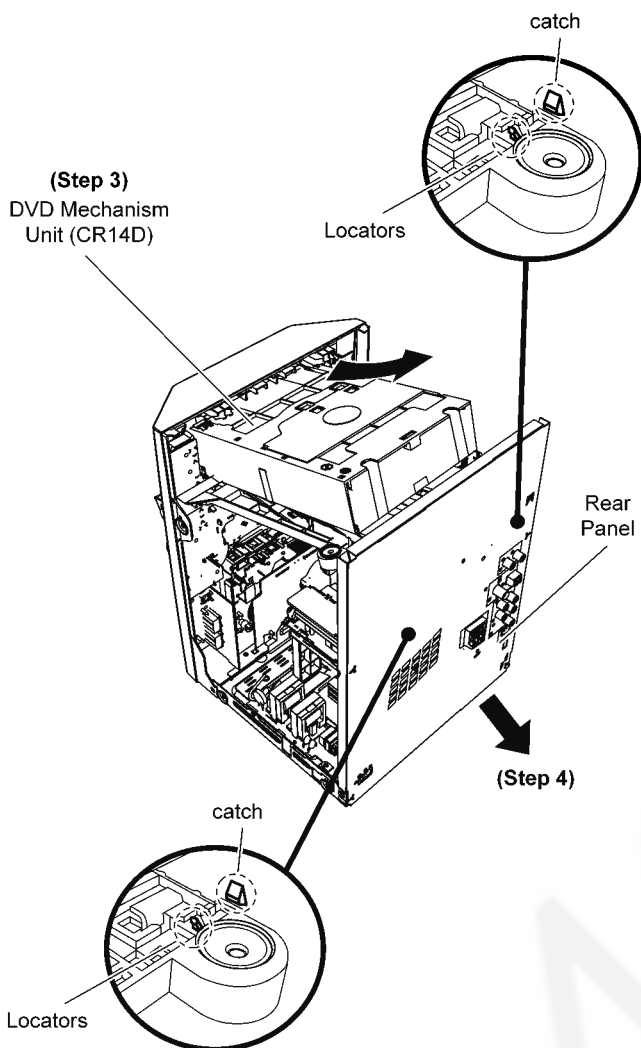


**Step 3** Slightly lift up the DVD Mechanism Unit (CR14D) to release from the two locators.

**Step 4** Remove rear panel in the direction of arrow.

## 9.7. Disassembly of Front Panel Assembly


- Follow the (Step 1) to (Step 5) of Item 9.3

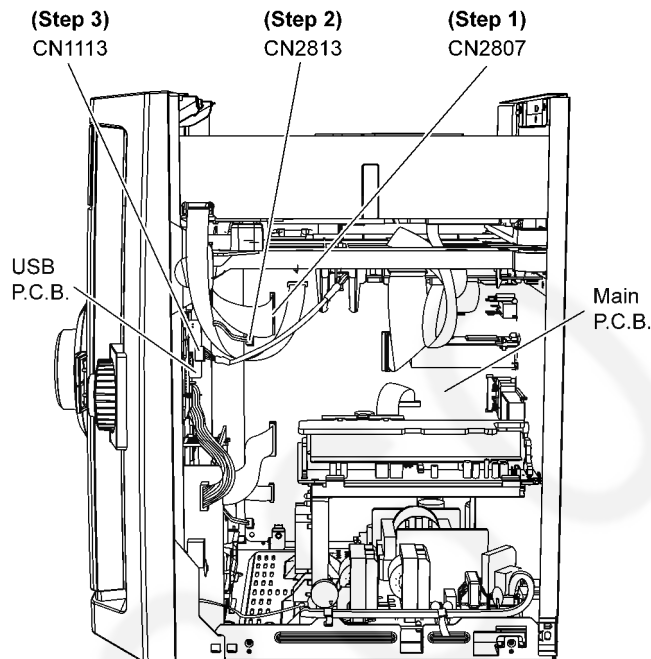

**Step 1** Detach 27P FFC at the connector (CN2807) on Main P.C.B..

**Step 2** Detach 2P cable at the connector (CN2813) on Main P.C.B..

**Step 3** Detach 5P cable at the connector (CN1113) on USB P.C.B..

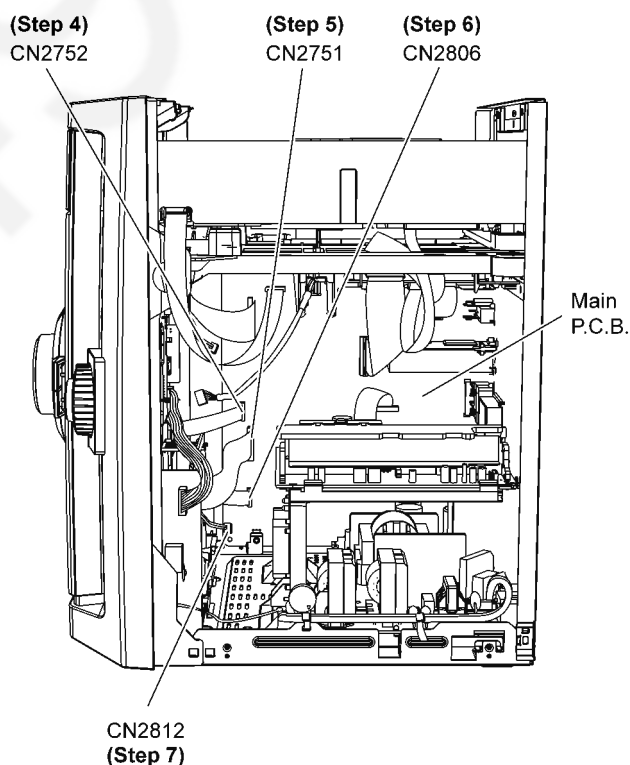


**Step 4** Detach 10P FFC at the connector (CN2752) on Main P.C.B..

**Step 5** Detach 12P FFC at the connector (CN2751) on Main P.C.B..

**Step 6** Detach 10P FFC at the connector (CN2806) on Main P.C.B..


**Step 7** Detach 2P cable at the connector (CN2812) on Main P.C.B..

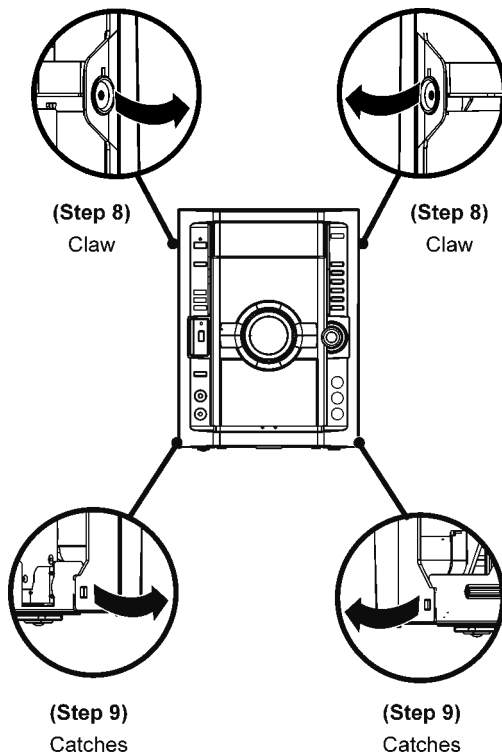

**Step 8** Release the claws on both sides.


**Step 9** Release catches at both side.

**Caution:** During assembling, ensure that both claws and catches are fully caught.

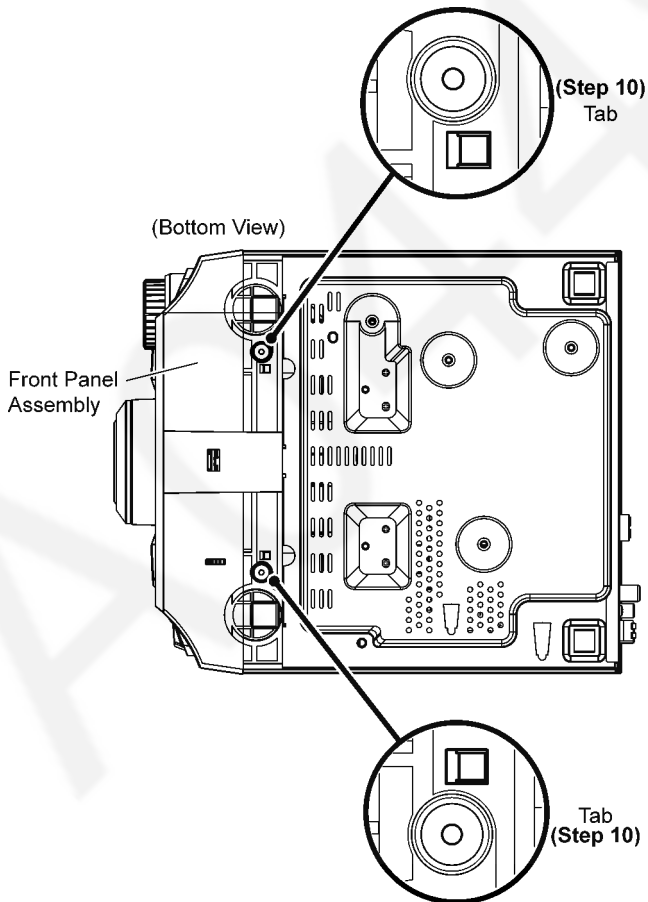

**Step 10** Release the tabs at the bottom.

**Caution:** Do not exert strong force when releasing the tabs.

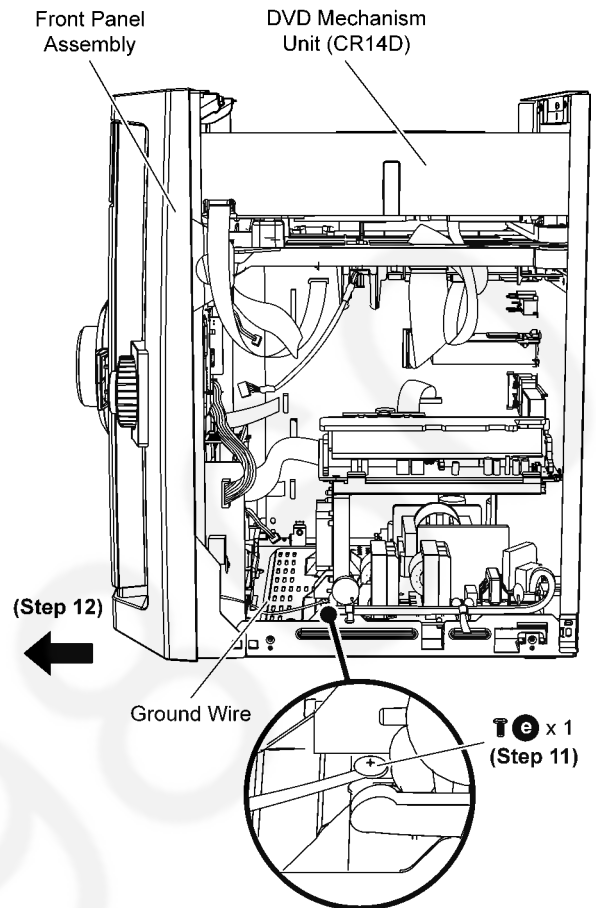


**Step 11** Remove 1 screw to remove ground wire.


**Step 12** Remove front panel assembly in the direction of arrow.

## 9.8. Disassembly of Mic P.C.B.

- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7

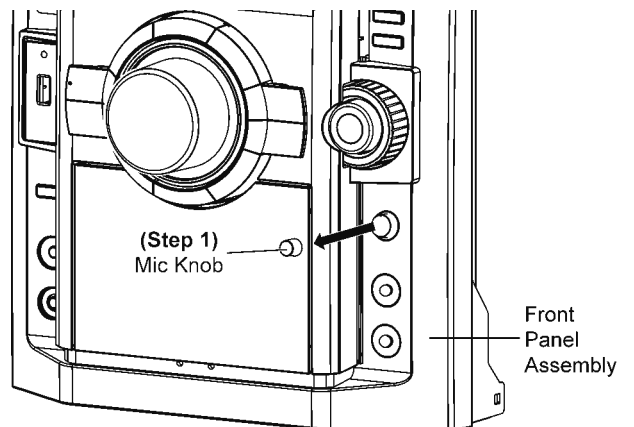

**Step 1** Remove Mic knob.

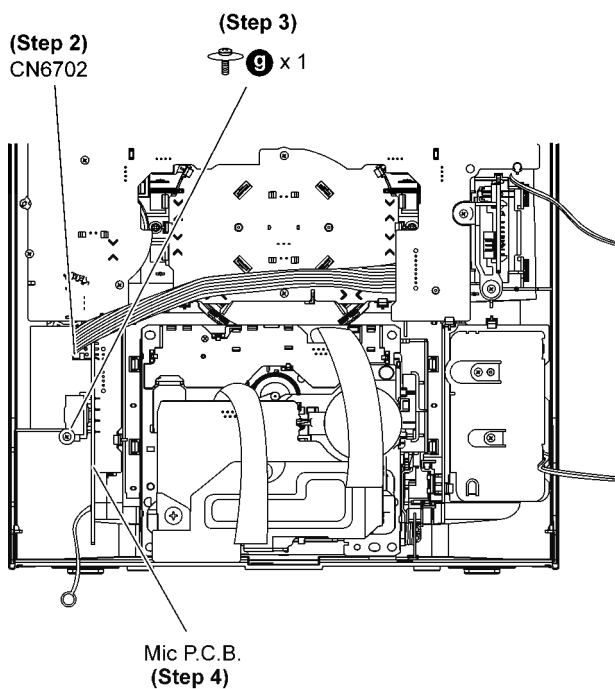


**Step 2** Detach 7P cable at the connector (CN6702) on Mic P.C.B..

**Step 3** Remove 1 screw on Mic P.C.B..


**Step 4** Remove the Mic P.C.B..

## 9.9. Disassembly of Panel P.C.B., Volume P.C.B. & Remote Sensor P.C.B. , Side Bar (L) LED P.C.B. and Side Bar (R) LED P.C.B.


- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7
- Follow the (Step 2) of Item 9.8

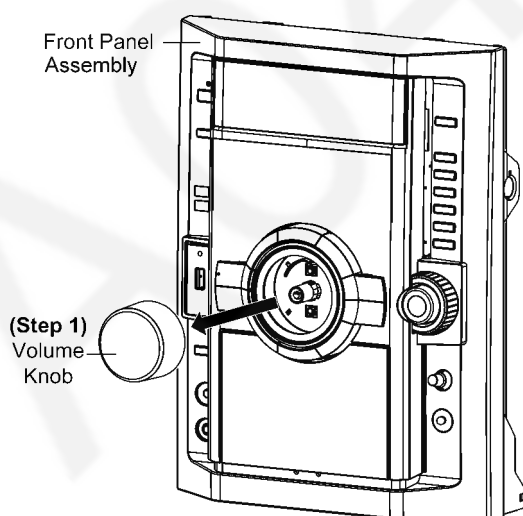


**Step 1** Remove volume knob.

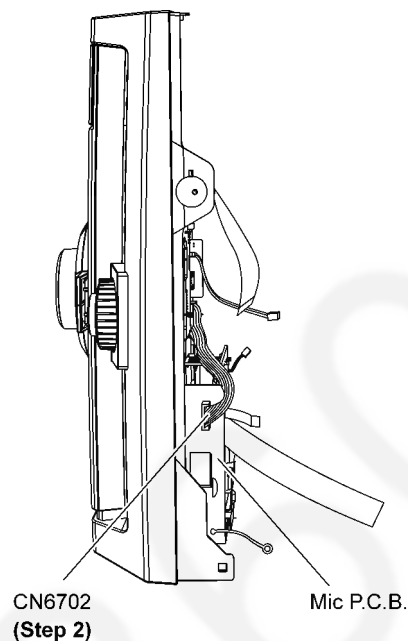


**Step 2** Detach 7P cable at the connector (CN6702) on Mic P.C.B..

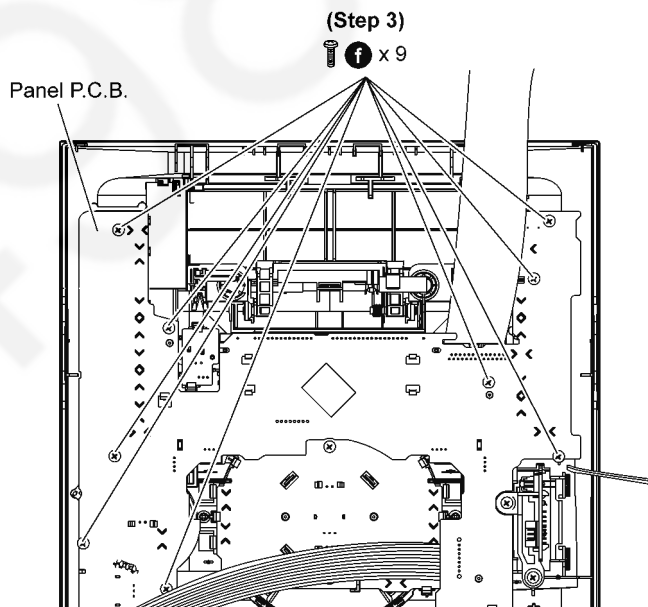


**Step 3** Remove 9 screws at Panel P.C.B..

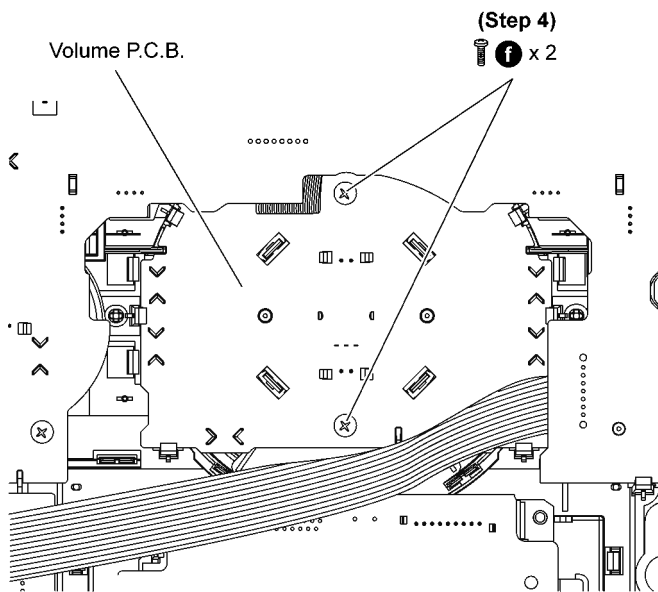


**Step 4** Remove 2 screws on Volume P.C.B..

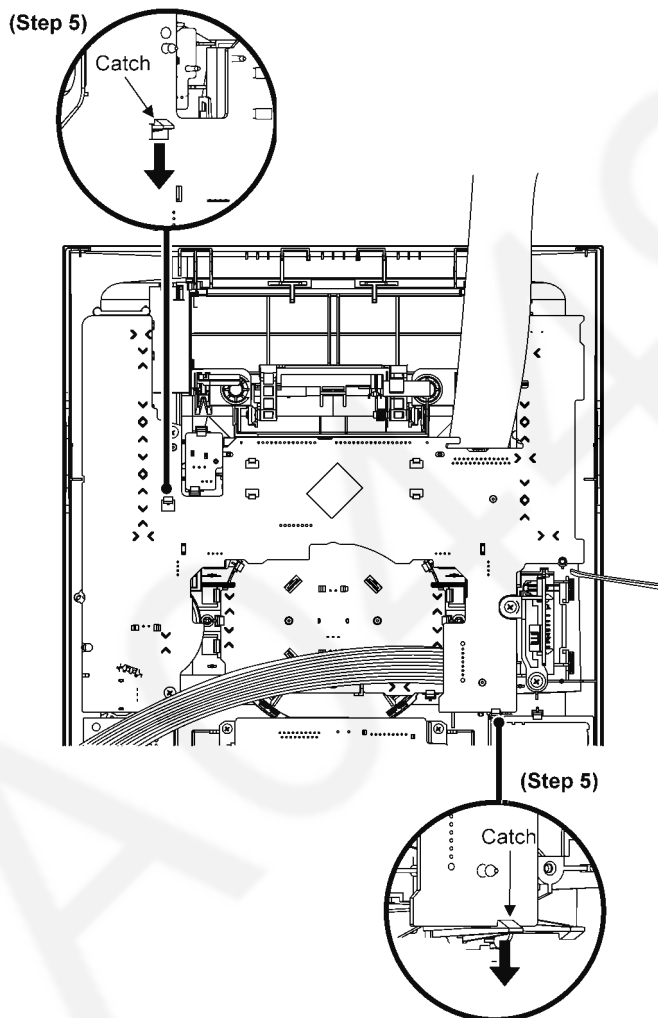


**Step 5** Release 2 catches at Panel P.C.B..

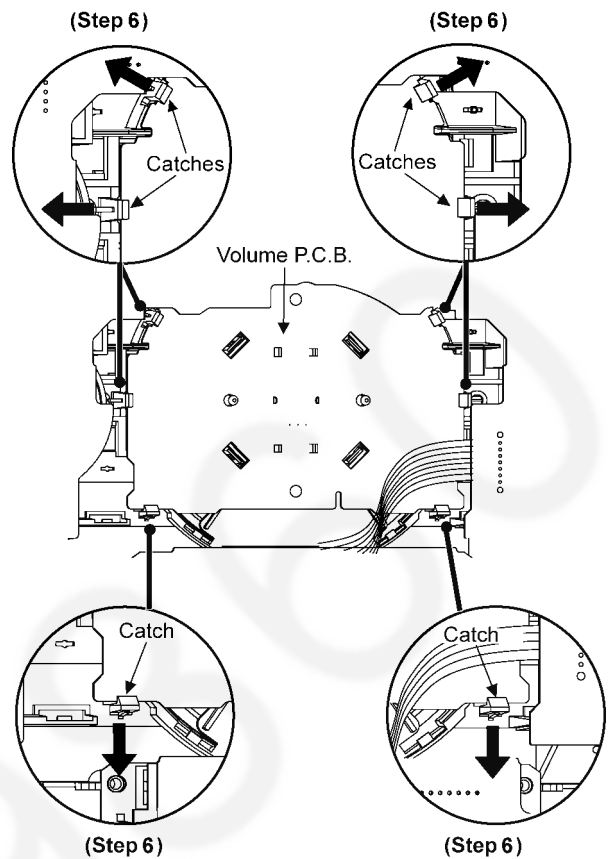

**Step 6** Release 6 catches at Volume P.C.B..

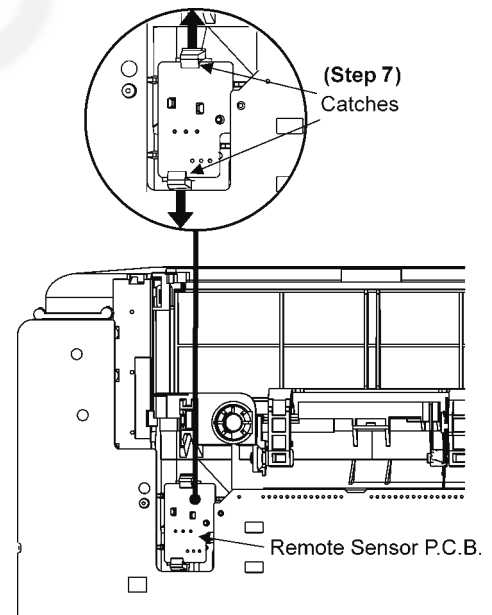


**Step 7** Release 2 catches at Remote Sensor P.C.B..

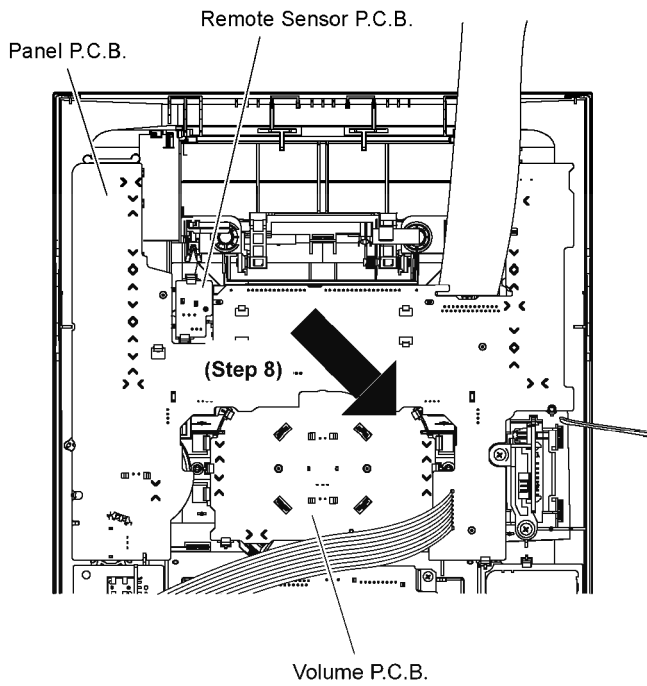

**Step 8** Lift up the Panel P.C.B., Volume P.C.B. & Remote Sensor P.C.B. altogether as arrow shown.


• **Disassembly of Side Bar (L) Led P.C.B. and Side Bar (R) P.C.B.**

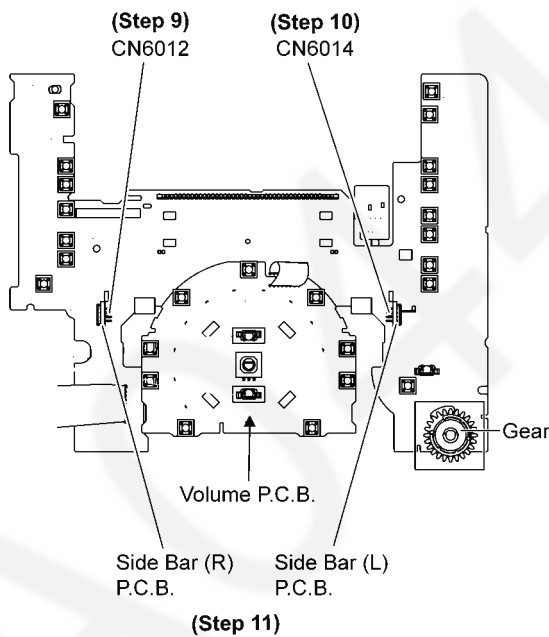



**Step 9** Detach Side Bar (L) P.C.B. at the connector (CN6014) on Panel P.C.B..

**Step 10** Detach Side Bar (R) P.C.B. at the connector (CN6012) on Panel P.C.B..

**Step 11** Remove the Side Bar (L) P.C.B. and Side Bar (R) P.C.B..

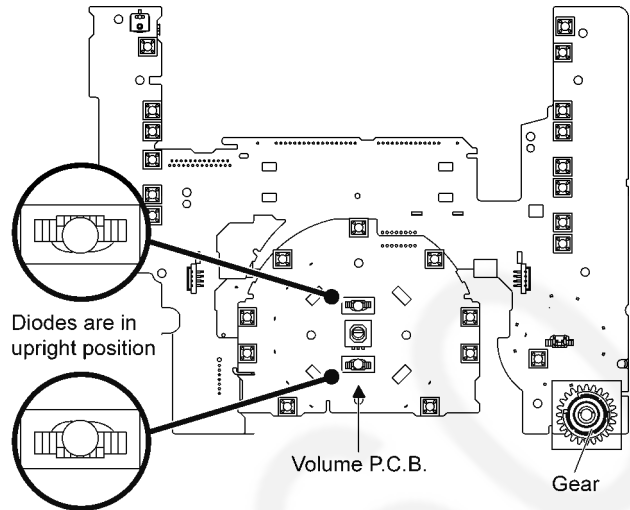

**Caution:** During assembling, ensure that the diodes shown on Volume P.C.B. are in upright position.

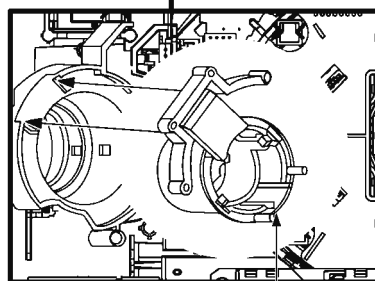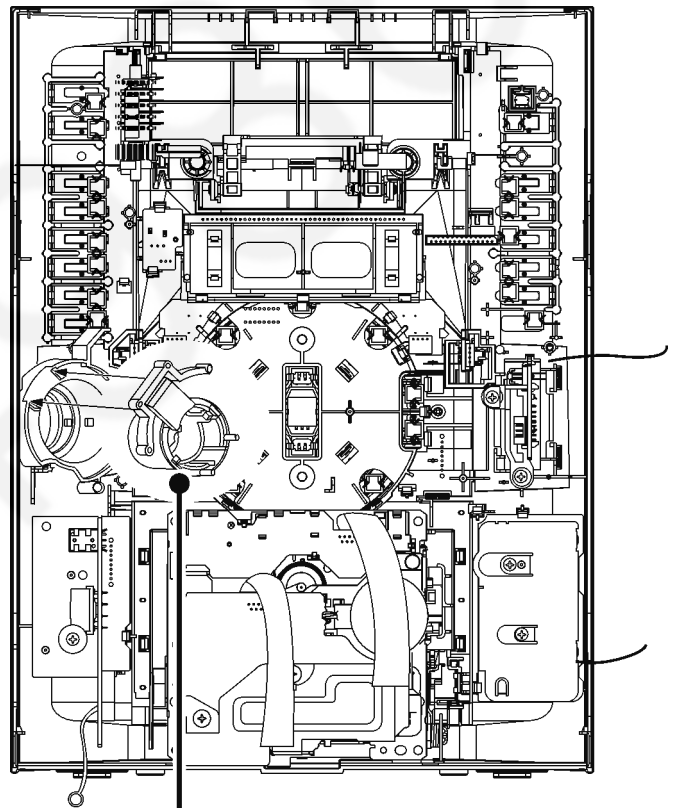


Dynamic Bass Button

**Caution:** During assembling, ensure that Dynamic Bass Button is seated properly.

## 9.10. Disassembly of USB P.C.B.

- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7


• Disassembly of USB Jack holder.

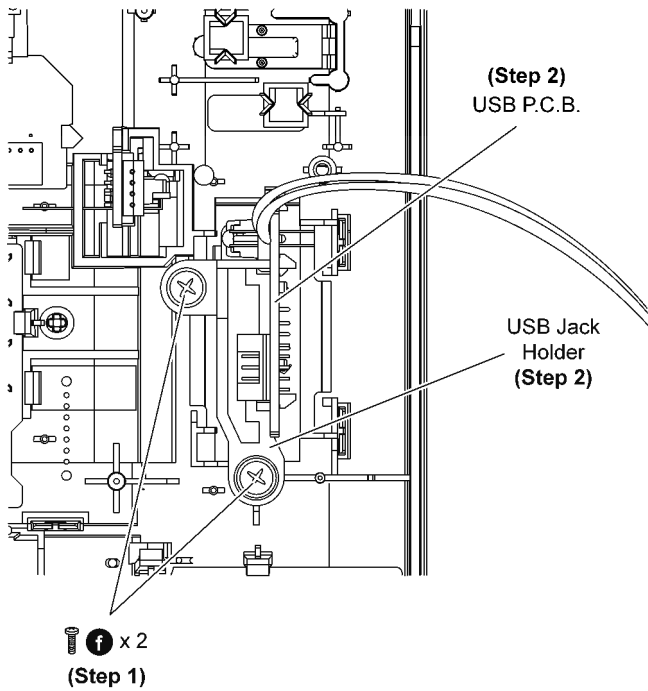

**Step 1** Remove 2 screws at USB Jack holder.

**Step 2** Remove the USB Jack Holder together with USB P.C.B..

• Disassembly of USB P.C.B..

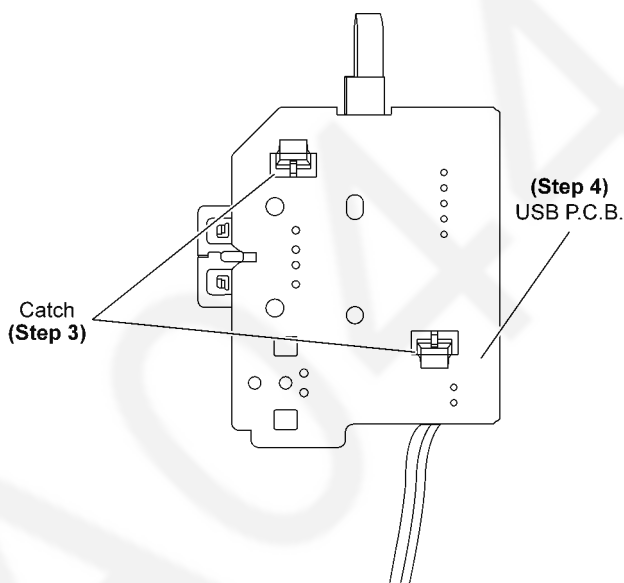


**Step 3** Release the catches at USB P.C.B..

**Step 4** Remove the USB P.C.B..

## 9.11. Disassembly of Music Port P.C.B.

- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7

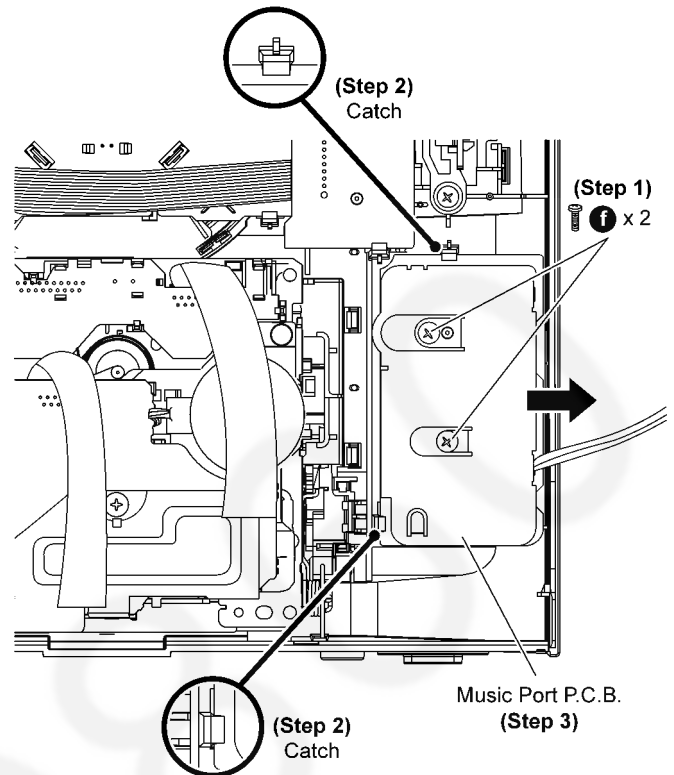


**Step 1** Remove 2 screws at Music Port P.C.B..

**Step 2** Release 2 catches.

**Step 3** Lift up to remove Music Port P.C.B..


## 9.12. Disassembly of CD Lid

- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7

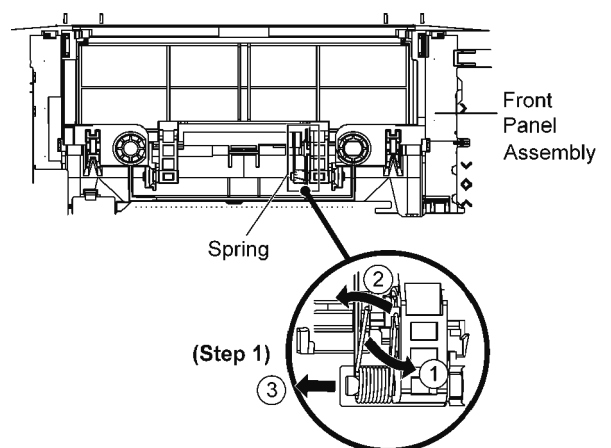

**Step 1** Remove the spring as arrow shown in order of sequences (1) to (3).


**Caution:** During assembling, please ensure that the spring is assembly at right position.

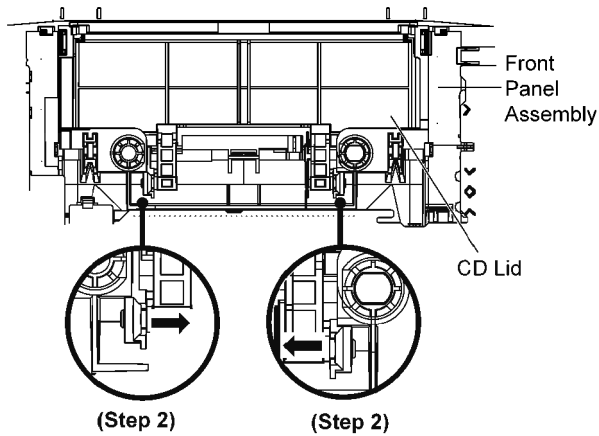



**Step 2** Remove CD Lid as arrow shown.

### 9.13. Disassembly of Deck Mechanism Unit


- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7

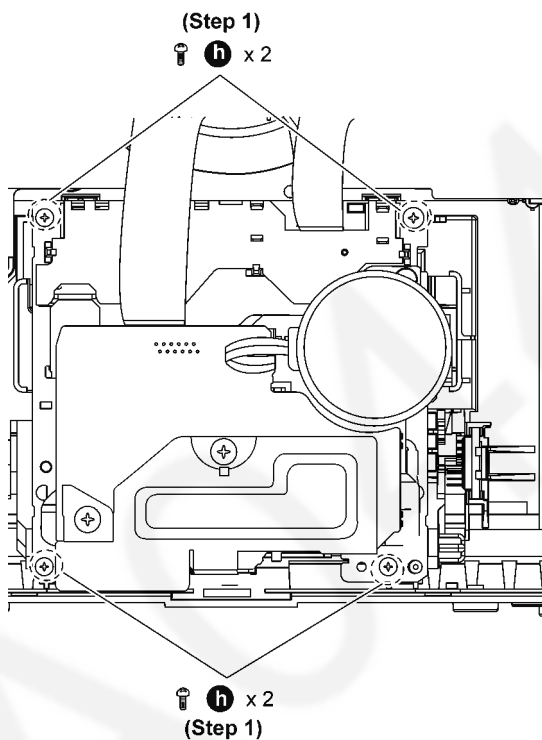

**Step 1** Remove 4 screws at Deck Mechanism Unit.

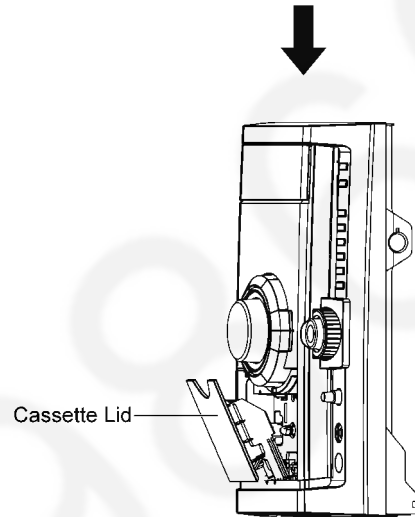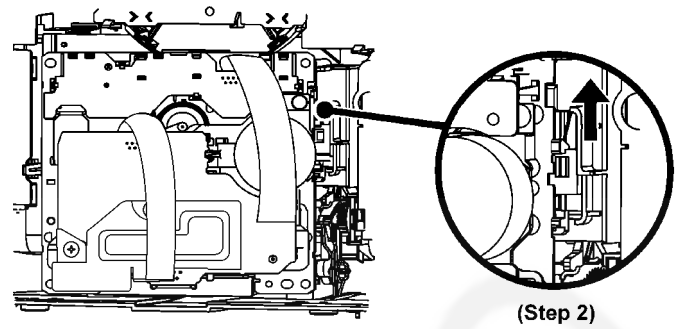


**Step 2** Push the lever upward as arrow shown to open the cassette lid.

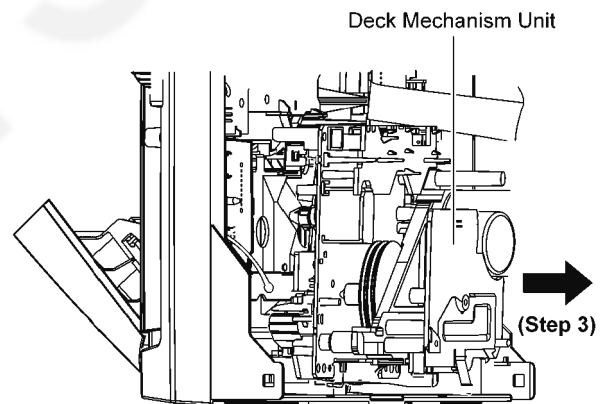


**Step 3** Remove Deck Mechanism Unit in the direction of arrow.

## 9.14. Disassembly of Deck P.C.B.


- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7
- Follow the (Step 1) to (Step 3) of Item 9.13

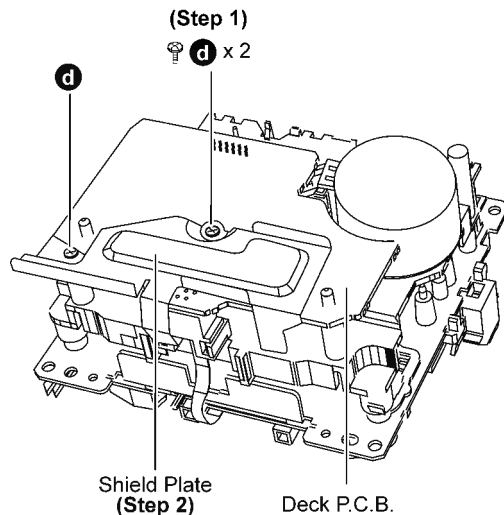

- Step 1** Remove 2 screws.  
**Step 2** Remove shield plate.

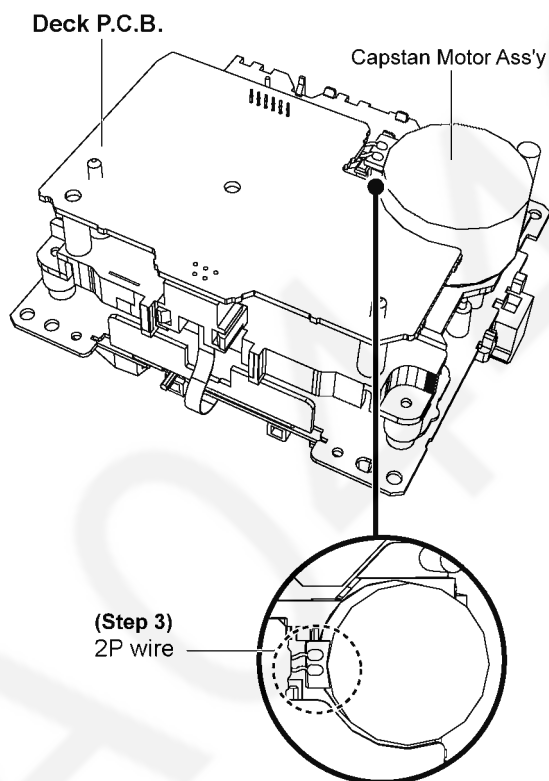

- Step 3** Desolder 2P wire at the Capstan Motor Ass'y.

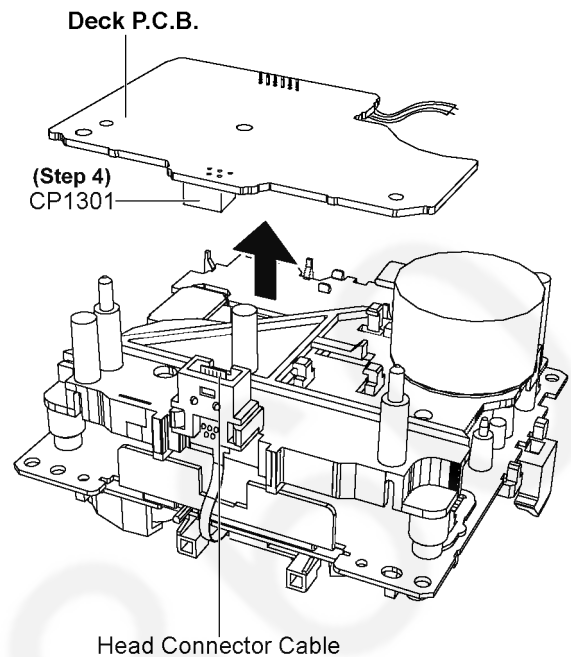


- Step 4** Lift up & remove Deck P.C.B..


**Caution:** During assembling, ensure connector (CP1301) at Deck P.C.B. is seated properly & connected to the head connector cable.

## 9.15. Disassembly of Deck Mechanism P.C.B.


- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7
- Follow the (Step 1) to (Step 3) of Item 9.13

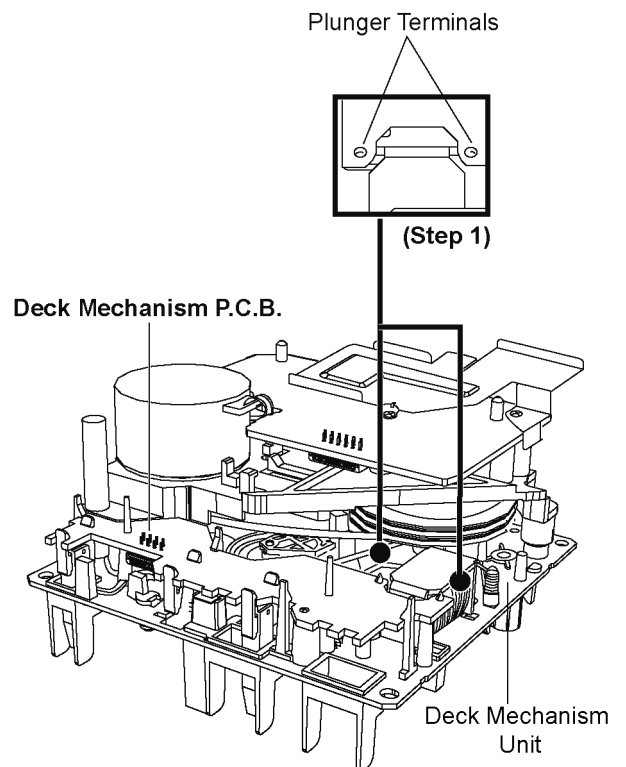


**Step 1** Desolder the plunger terminals.

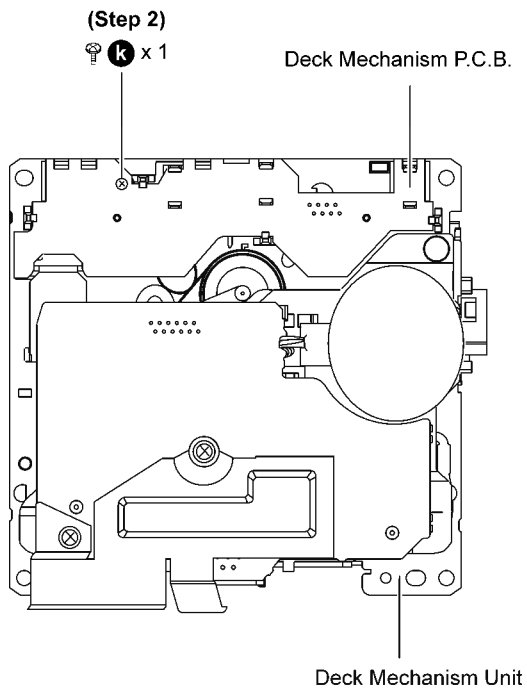


**Step 2** Remove 1 screw.

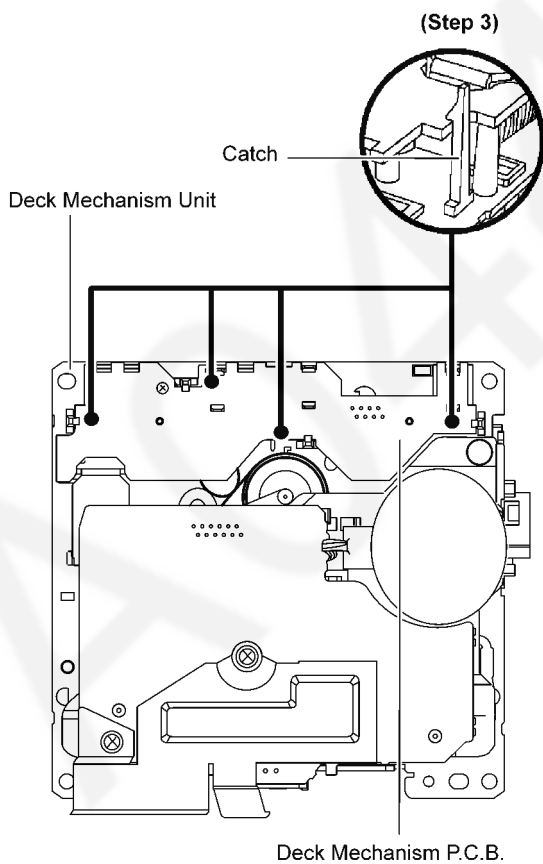

**Step 3** Release 4 catches.

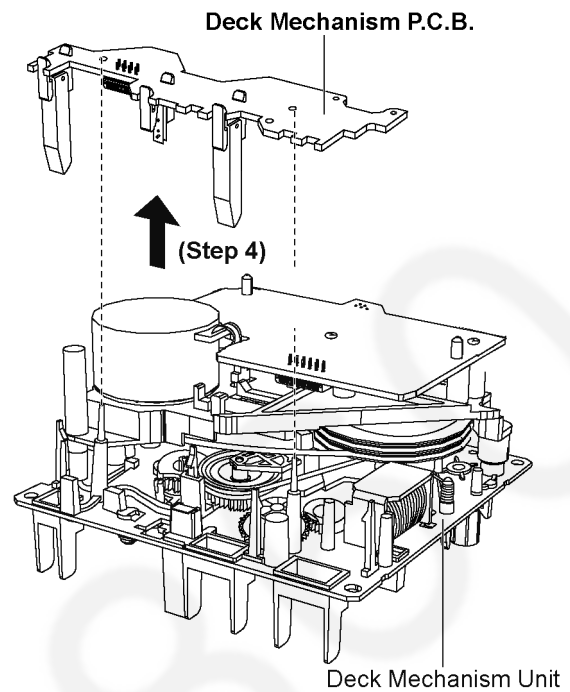

**Step 4** Remove Deck Mechanism P.C.B..

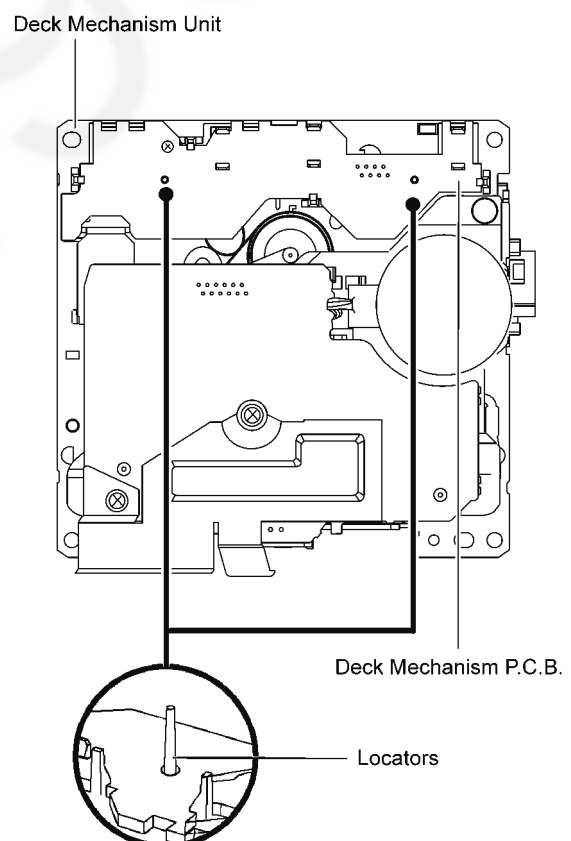


**Caution:** During assembling, ensure that the Deck Mechanism P.C.B. is seated properly with the guide of the locators.

## 9.16. Disassembly of Deck Mechanism


- Follow the (Step 1) to (Step 5) of Item 9.3

- Follow the (Step 1) to (Step 12) of Item 9.7
- Follow the (Step 1) to (Step 3) of Item 9.13
- Follow the (Step 1) to (Step 4) of Item 9.15

### 9.16.1. Replacement of Pinch Roller Ass'y and Head Block Sub Ass'y

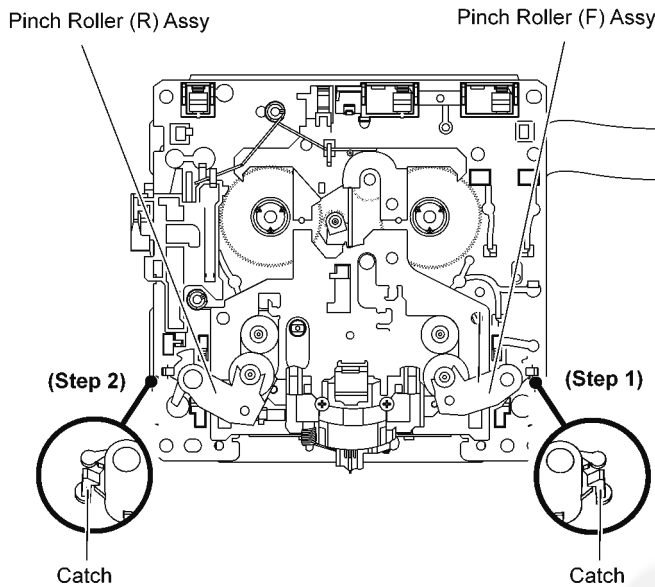


- Step 1** Release catch to remove the Pinch Roller (F) Assy.
- Step 2** Release catch to remove the Pinch Roller (R) Assy.


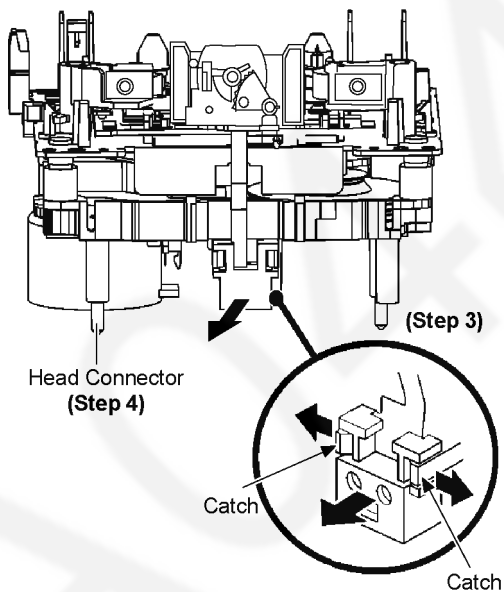


- Step 3** Release the catches at the side of head connector.
- Step 4** Detach the head connector as arrow shown.

**Caution:** Avoid exerting strong force as it may damage the FFC.

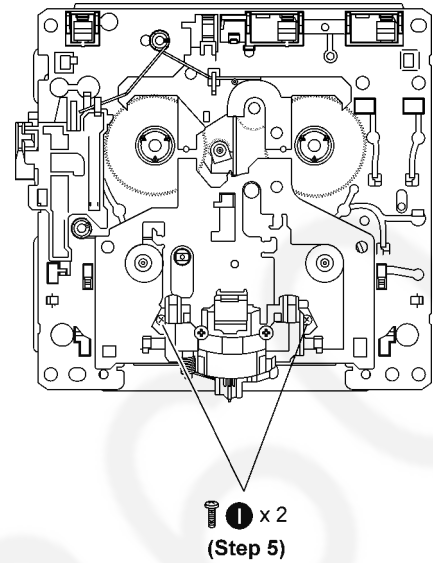

- Step 5** Remove 2 screws.

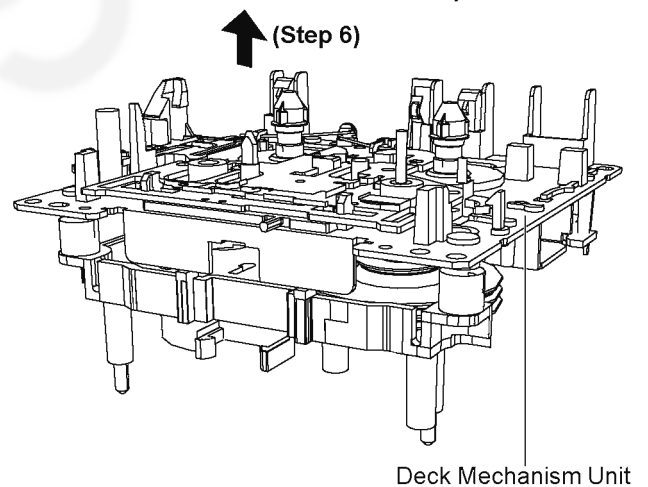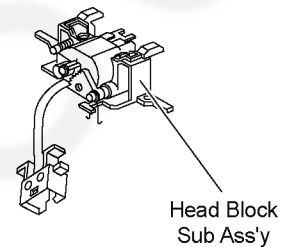


- Step 6** Remove Head Block Sub Ass'y as arrow shown.


### 9.16.2. Replacement of Capstan Motor Ass'y and Capstan Belt 'A'

- Follow the (Step 3) to (Step 4) of item 9.16.1.


#### - Disassembly of Capstan Motor Ass'y and Capstan Belt 'A'

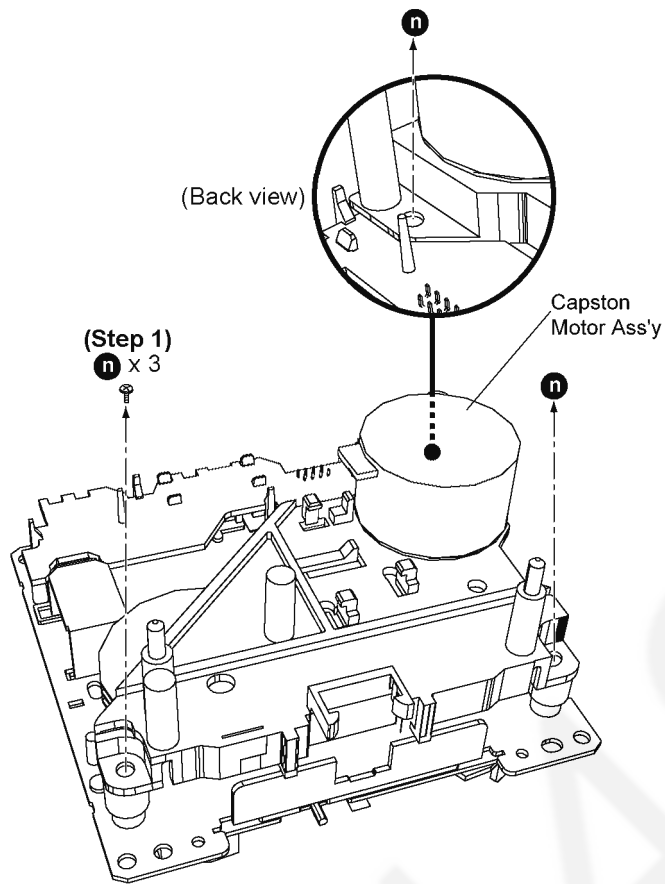

**Step 1** Remove 3 screws.

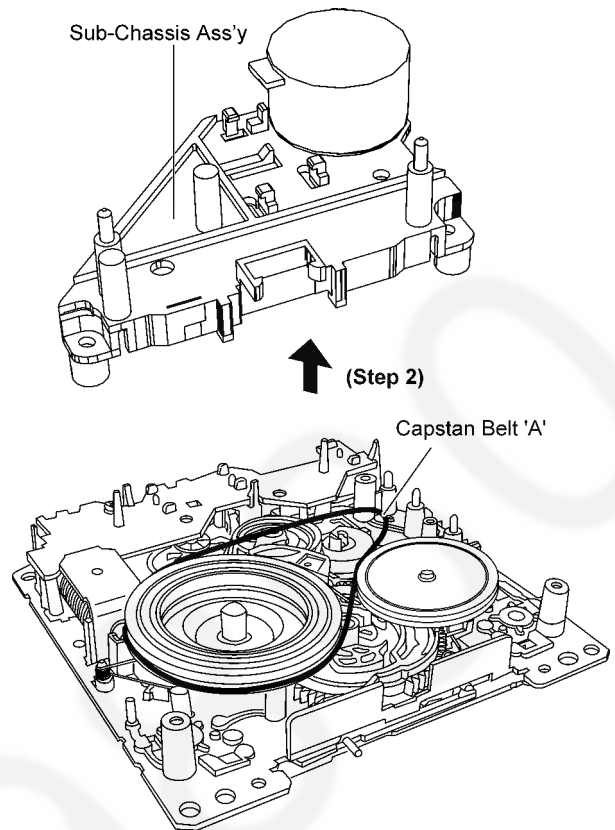


**Step 2** Lift up to remove the Sub-Chassis Ass'y.

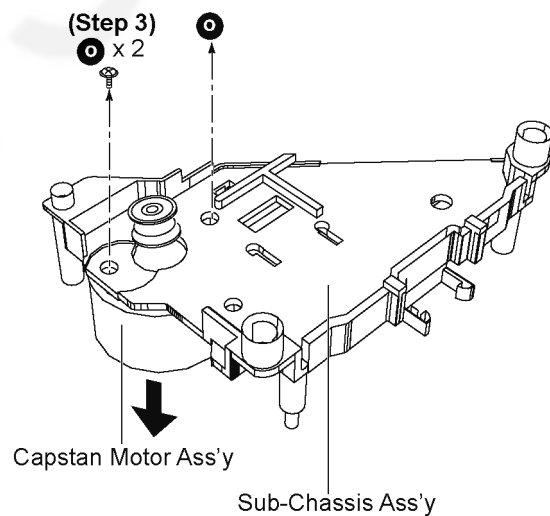


**Step 3** Remove 2 screws to remove Capstan Motor Ass'y.

**Caution:** Support Capstan Motor Ass'y by hand to prevent it from falling during removal and assembly of Capstan Motor Ass'y.

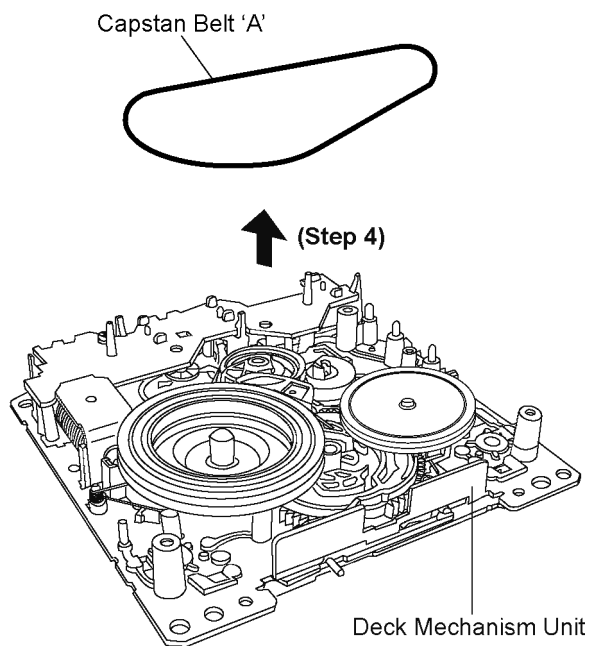


**Step 4** Remove Capstan Belt 'A'.

**- Assembly of Capstan Motor Ass'y and Capstan Belt 'A'**

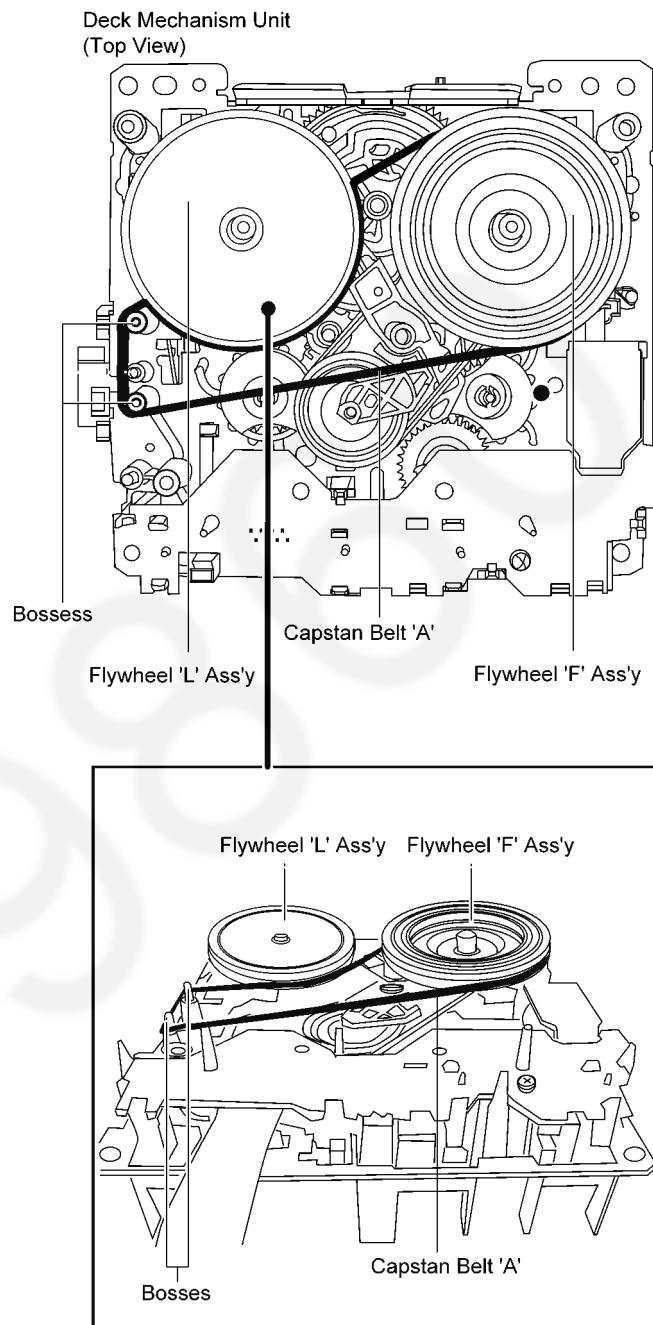

**Step 1** Coil Capstan Belt 'A' to Flywheel 'F' Ass'y, Flywheel 'L' and the 2 bosses temporarily as diagram shown.


**Caution:** Keep Capstan Belt 'A' away from grease during assembly of Capstan Belt 'A'.

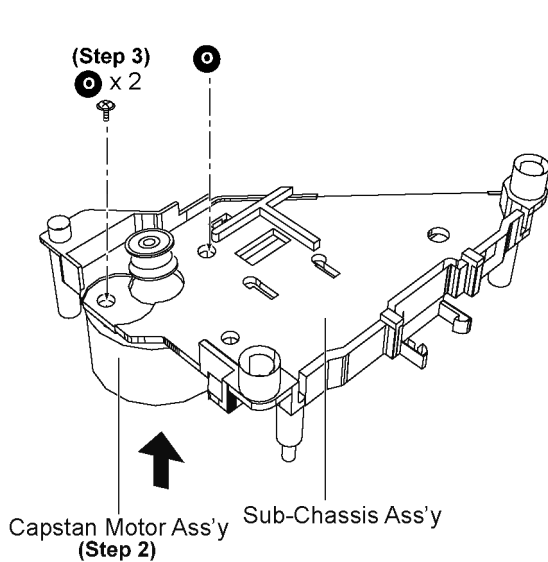

**Step 2** Fit the Capstan Motor Ass'y to the Sub-Chassis Ass'y.


**Caution:** Ensure it seats properly.

**Step 3** Fix the Capstan Motor Ass'y to the Sub-Chassis Ass'y by 2 screws.

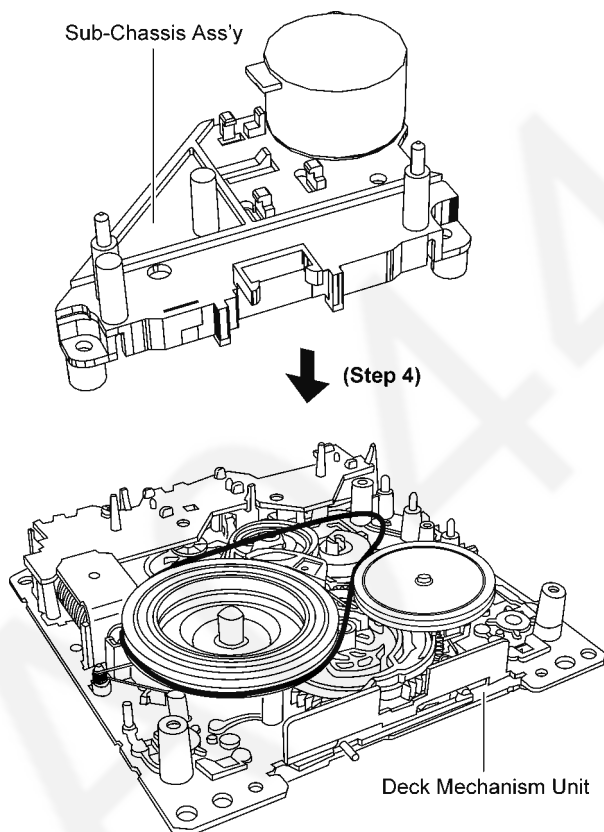


**Step 4** Install the Sub-Chassis Ass'y to the Deck Mechanism Unit.

**Caution:** Ensure the Sub-Chassis Ass'y seats properly on the bosses.

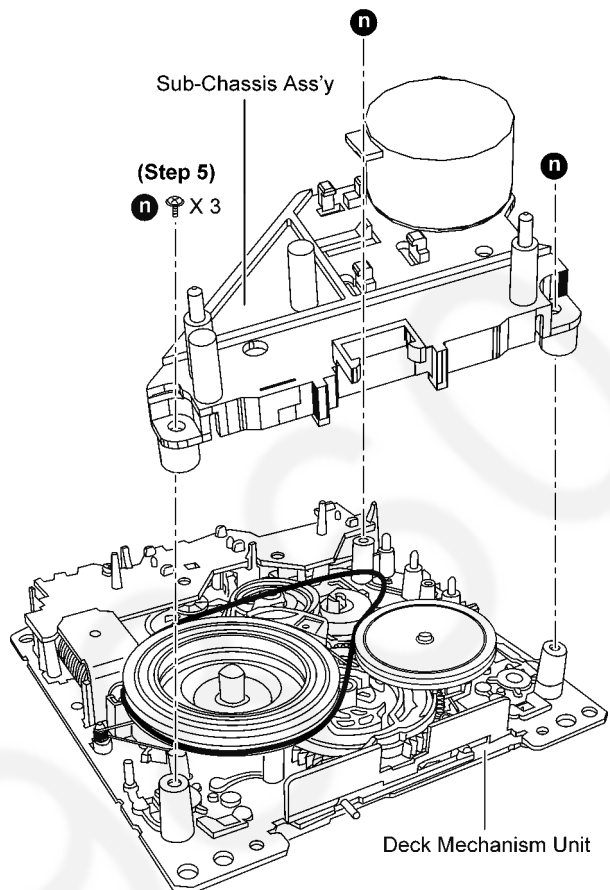

**Step 5** Fix 3 screws.

(Side view)

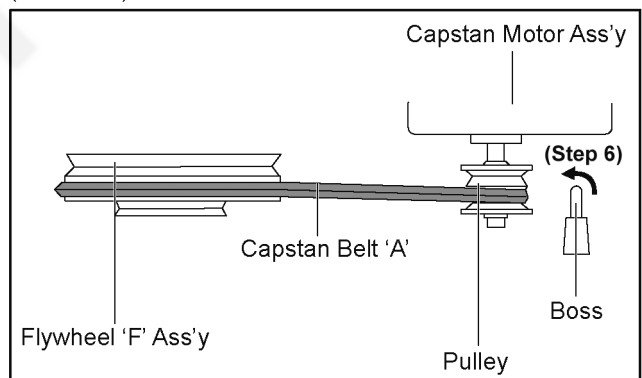


**Step 6** Release Capstan Belt 'A' to the pulley of Capstan Motor Ass'y as diagram shown.


### 9.16.3. Replacement of Winding Belt

- Follow the (Step 3) to (Step 4) of item 9.16.1.
- Follow the (Step 1) to (Step 4) of item 9.16.2.

#### - Disassembly of Winding Belt

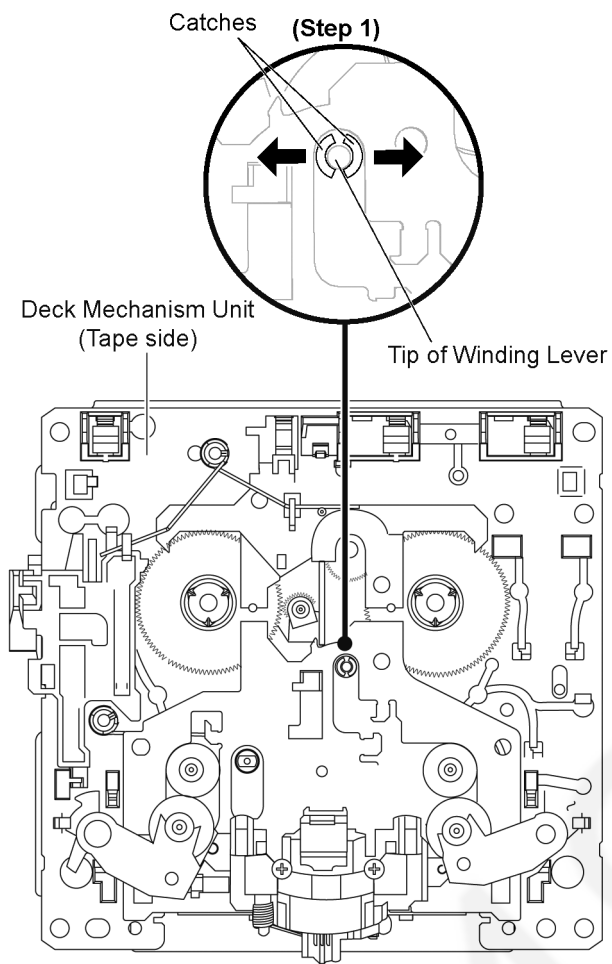

**Step 1** Release 2 catches and press the tip of the Winding Lever downwards.

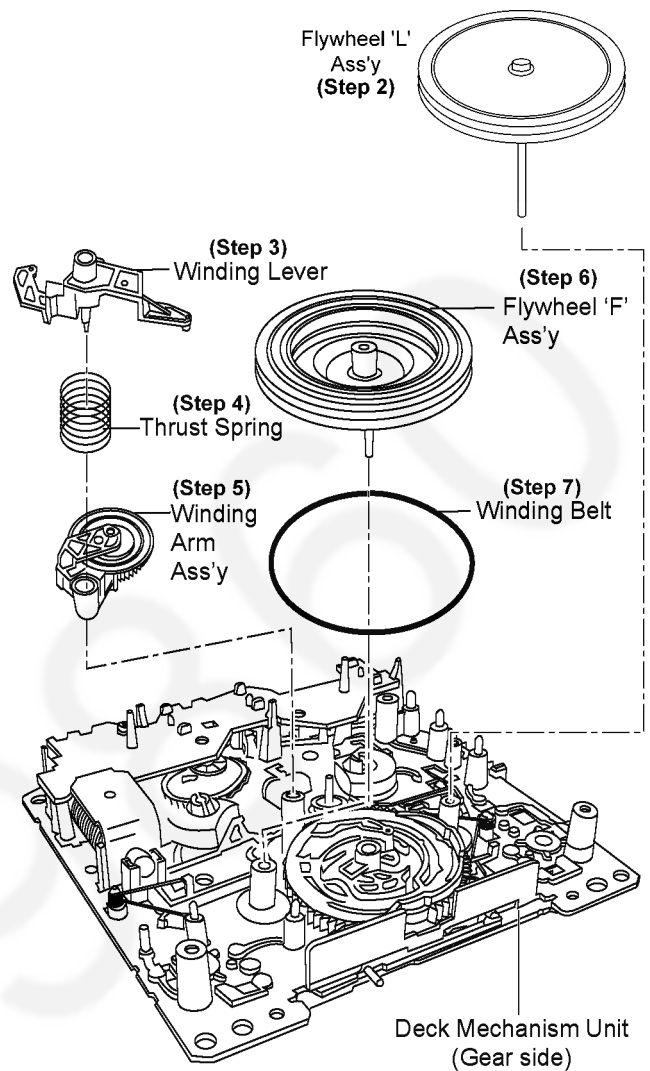

**Step 2** Remove Flywheel 'L' Ass'y.

**Step 3** Remove the Winding Lever.

**Step 4** Remove the Thrust Spring.

**Step 5** Remove the Winding Arm Ass'y.


**Step 6** Remove the Flywheel 'F' Ass'y.

**Step 7** Remove the Winding Belt.


**Caution:** Keep Thrust Spring in a safe place for assembling purpose.

**- Assembly of Winding Belt**


**Step 3** Install Flywheel 'F' Ass'y.

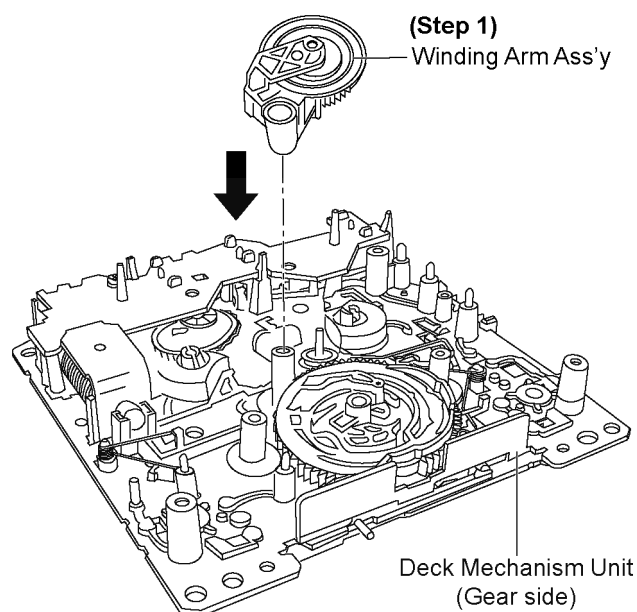


**Step 1** Install the Winding Arm Ass'y.

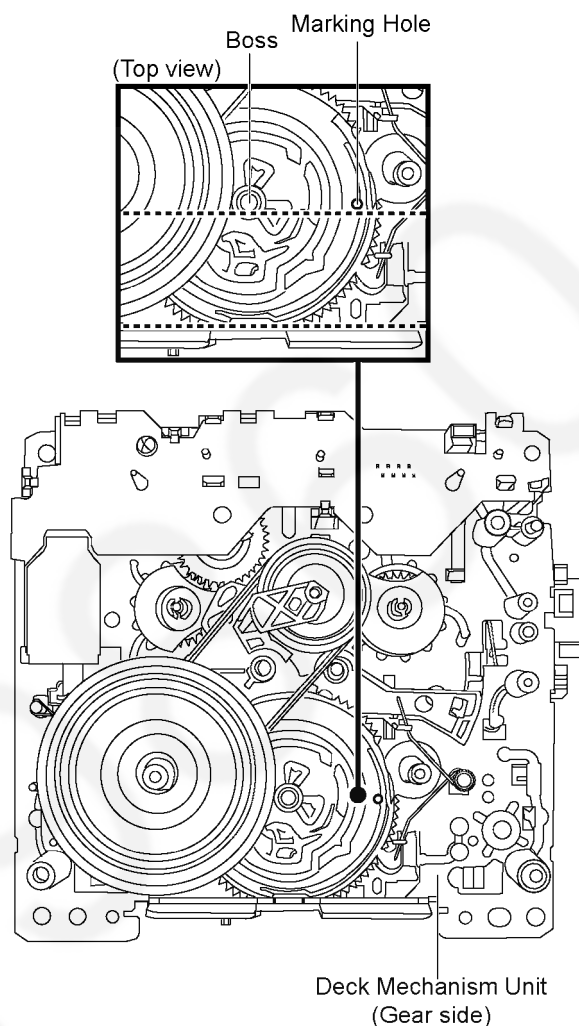

**Caution:** Ensure that the boss and the marking hole of the Main Gear are positioned such that they form a horizontal line parallel to the Deck Mechanism Unit.

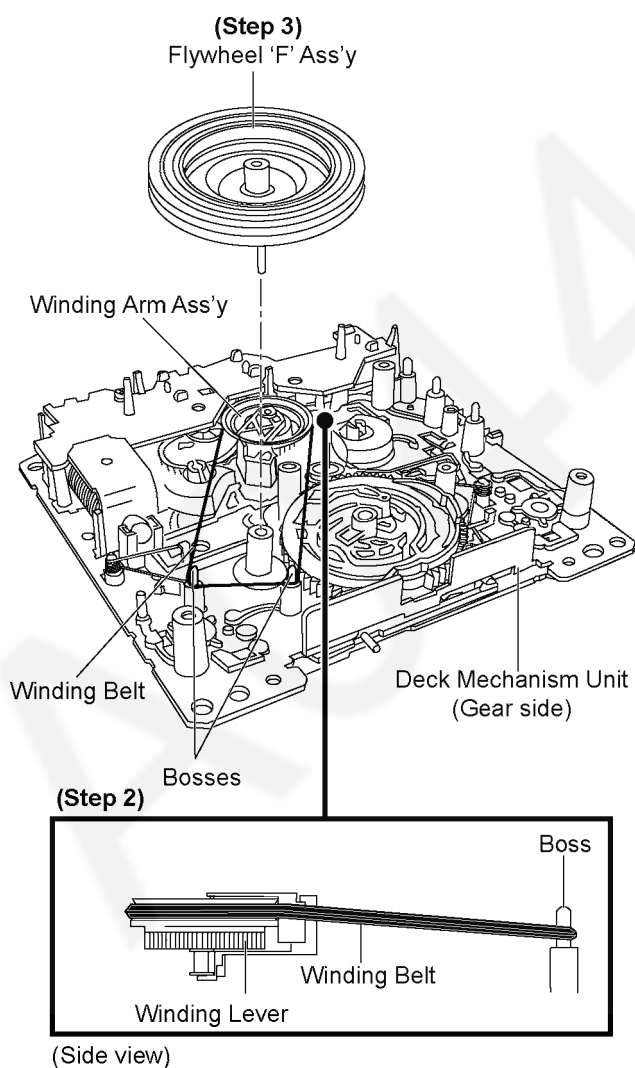


**Step 2** Coil the Winding Belt to the Winding Arm Ass'y and the 2 bosses temporarily as diagram shown.

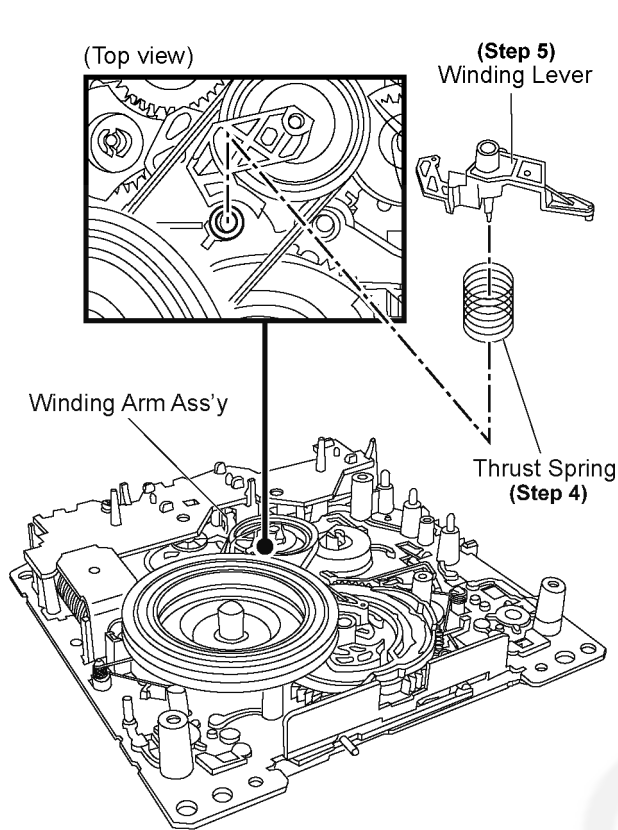


**Step 4** Install the Thrust Spring.



**Step 5** Install the Winding Lever.

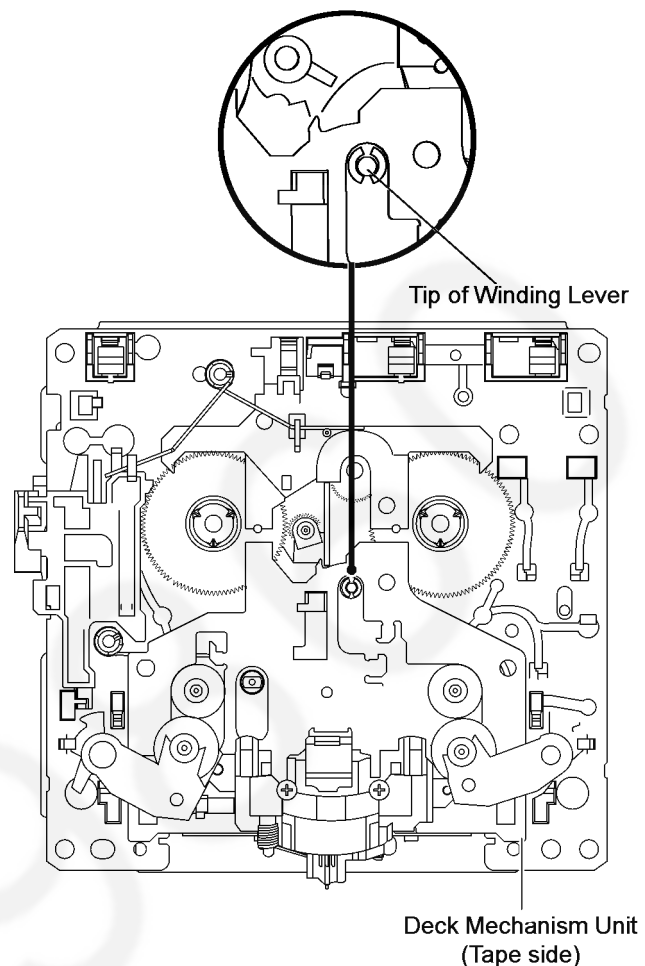

**Caution 2:** Ensure that the Winding Lever is firmly inserted and properly caught on the tape side as diagram shown.

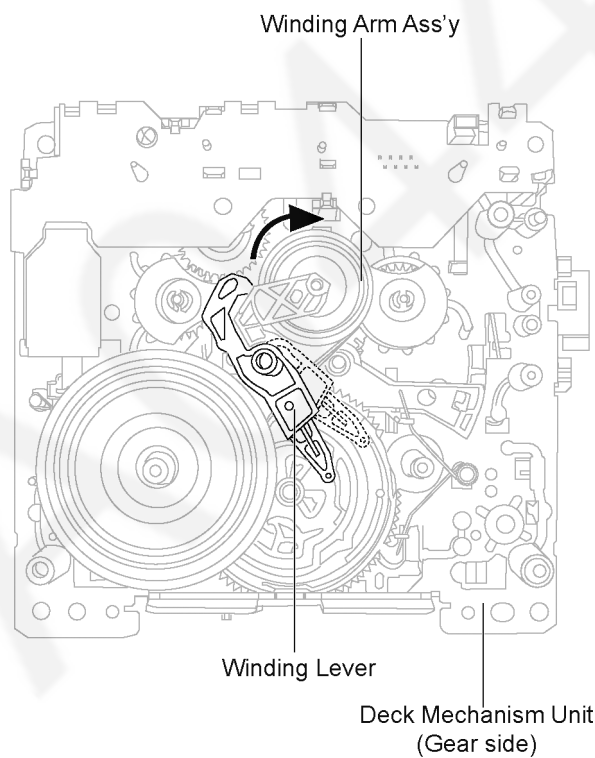


**Caution 1:** Ensure that the Winding Arm Ass'y is pulled towards to the right as arrow shown to enable full insertion of the Winding Lever. The Winding Lever must be seated on the Main Gear as diagram shown.

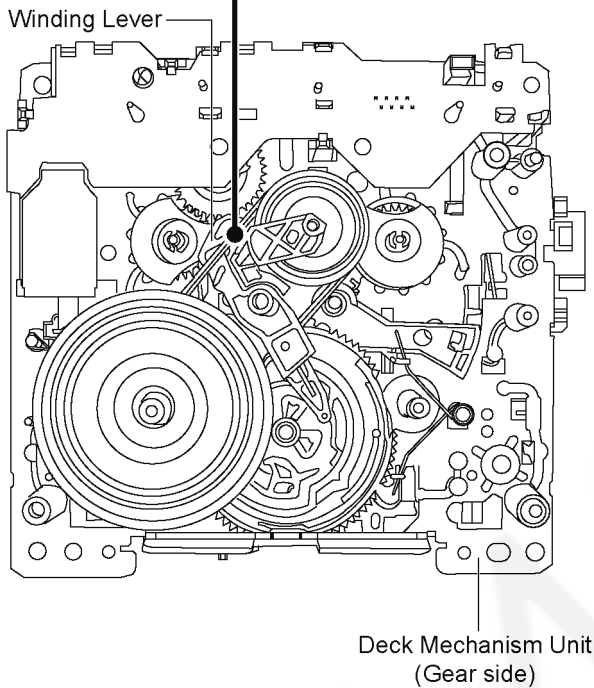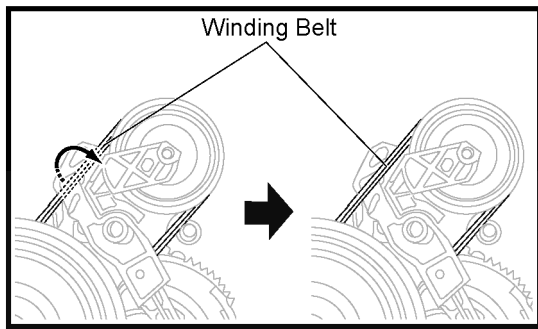


**Caution 3:** Ensure that the Winding Belt is above the Winding Lever as diagram shown.

(Side view)

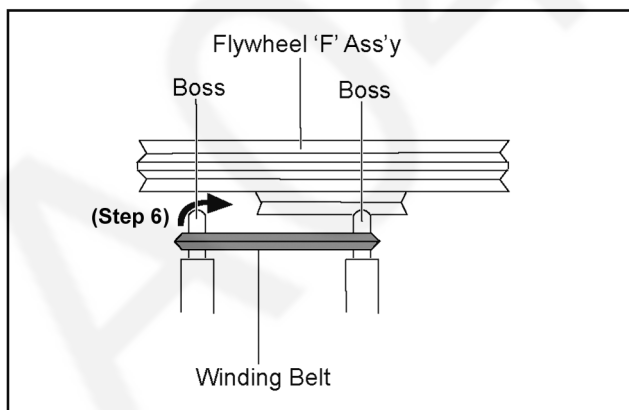


**Step 6** Release the Winding Belt on Flywheel 'F' Ass'y as diagram shown.

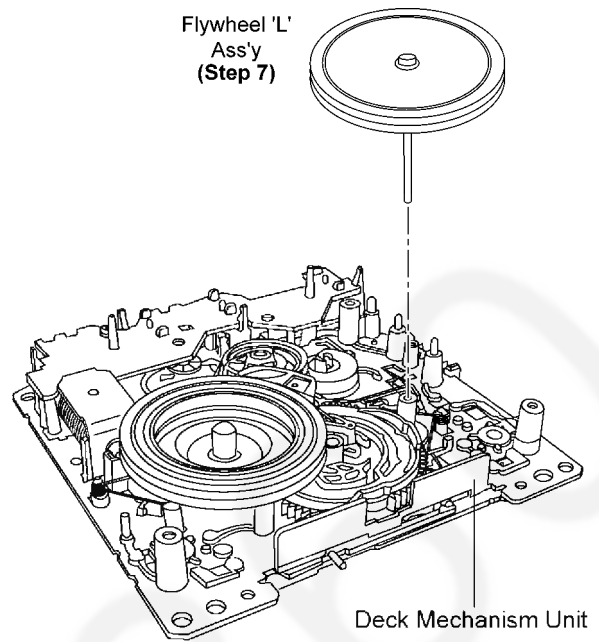


**Step 7** Install Flywheel 'L' Ass'y.

#### 9.16.4. Disassembly of Main Gear

- Follow the (Step 3) to (Step 4) of item 9.16.1.
- Follow the (Step 1) to (Step 4) of item 9.16.2.
- Follow the (Step 1) to (Step 6) of item 9.16.3.

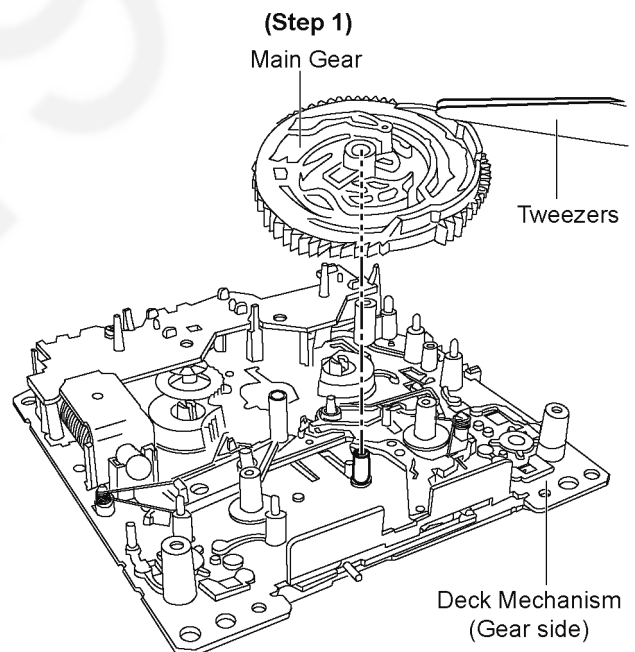


**Step 1 :** Remove Main Gear using tweezers.

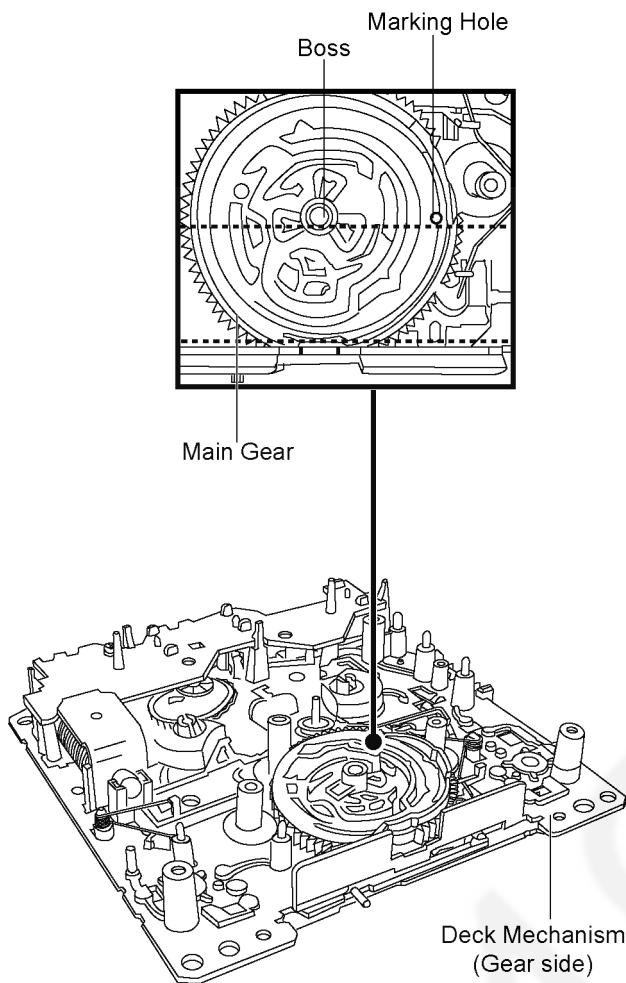

**Caution :** Ensure that the boss and the marking hole of the Main Gear are positioned such that they form a horizontal line parallel to the Deck Mechanism during assembly of the Main Gear.

## 9.17. Disassembly of Cassette Lid

- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 12) of Item 9.7
- Follow the (Step 1) to (Step 3) of Item 9.13

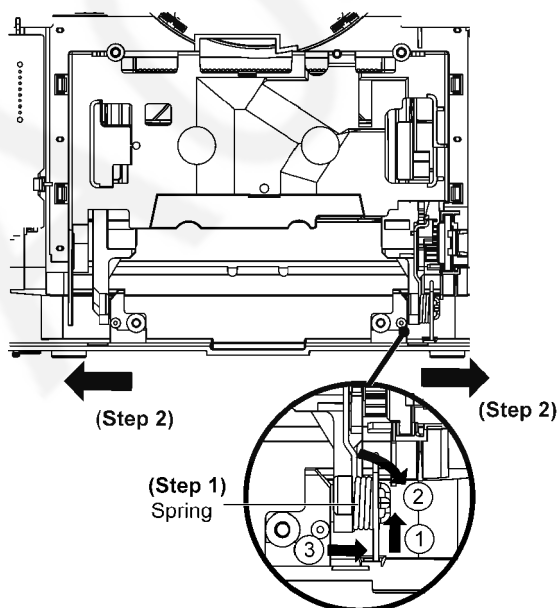


**Step 1** Remove the spring.



**Step 2** Push the cassette lid in the direction of arrows.

## 9.18. Rectification for Tape Jam Problem

- Follow the (Step 1) to (Step 5) of Item 9.3

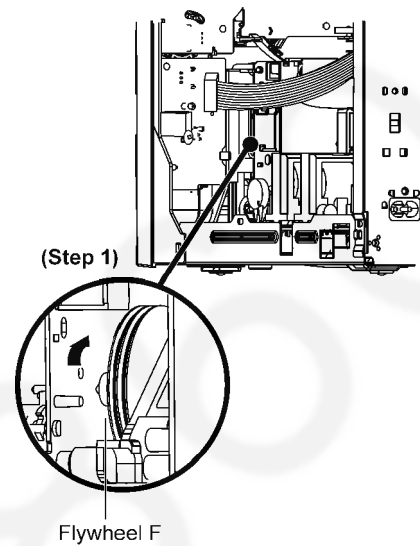

**Step 1** Rotate the flywheel F in the direction of the arrow.

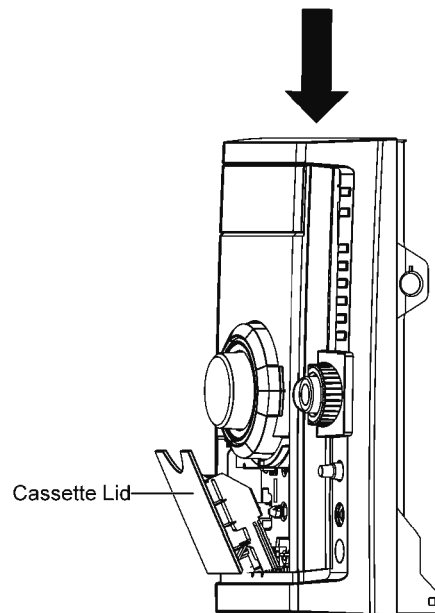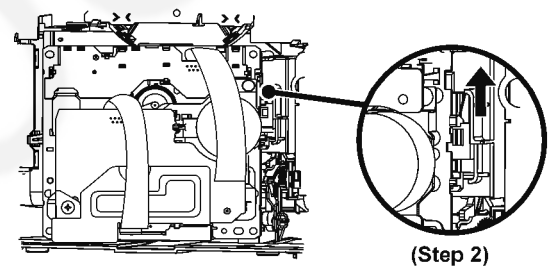


**Step 2** Push the lever upward and open the cassette lid.

**Note:** Follow Disassembly of Cassette Lid to remove the cassette tape.


## 9.19. Disassembly of D-Amp P.C.B.

- Follow the (Step 1) to (Step 5) of Item 9.3

- Follow the (Step 1) to (Step 6) of Item 9.4

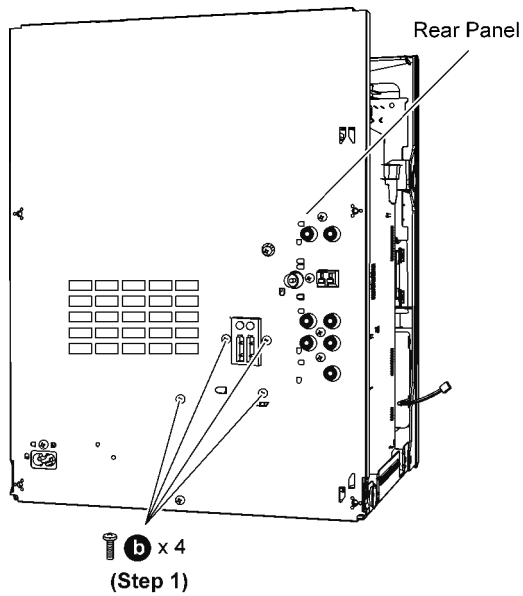


**Step 1** Remove 4 screws at the rear panel.

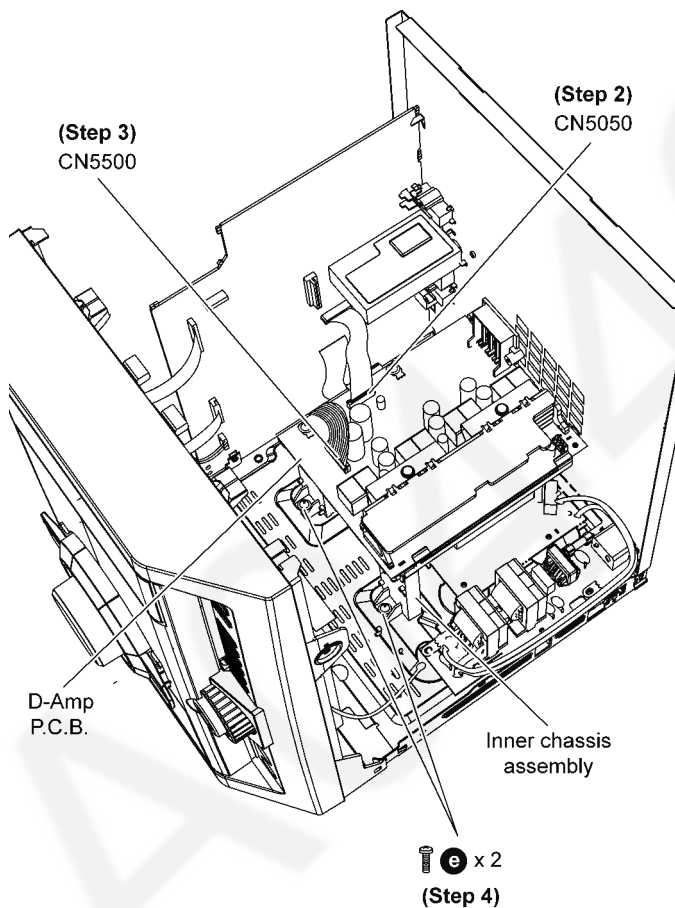


**Step 2** Detach 17P FFC at the connector (CN5050) on D-Amp P.C.B..

**Step 3** Detach 8P cable at the connector (CN5500) on D-Amp P.C.B..


**Step 4** Remove 2 screws at D-Amp P.C.B. Inner chassis assembly.

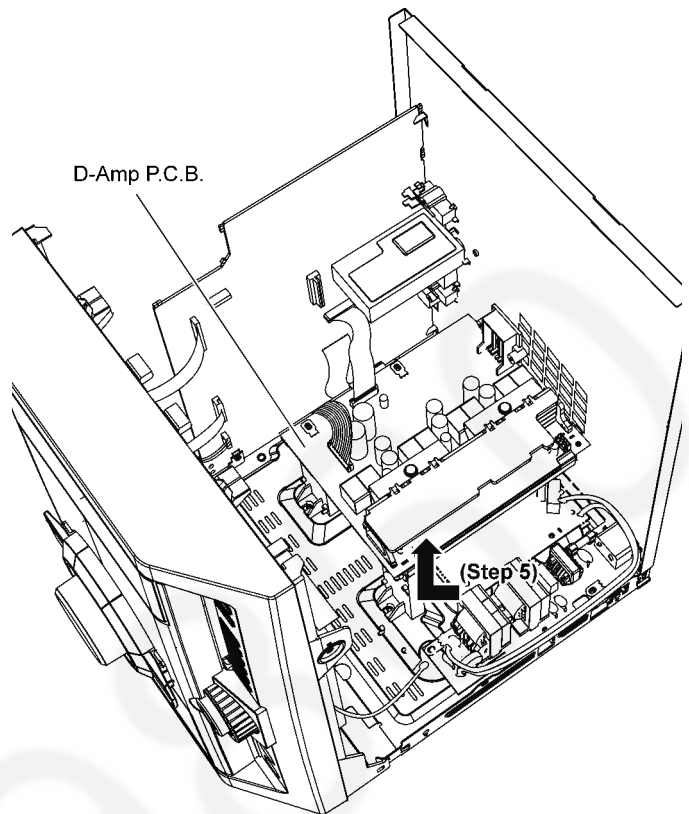


**Step 5** Lift up the D-Amp P.C.B. together with the inner chassis assembly as arrow shown.

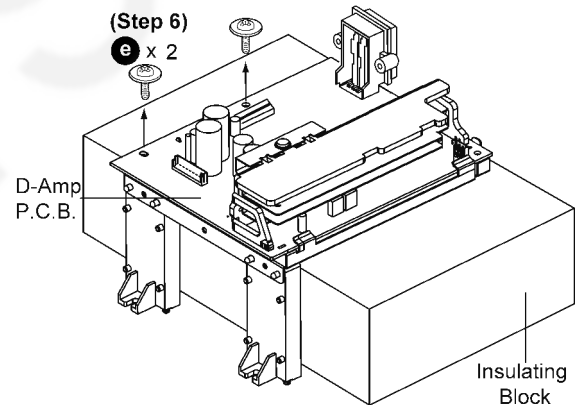

**Step 6** Remove 2 screws on D-Amp P.C.B..

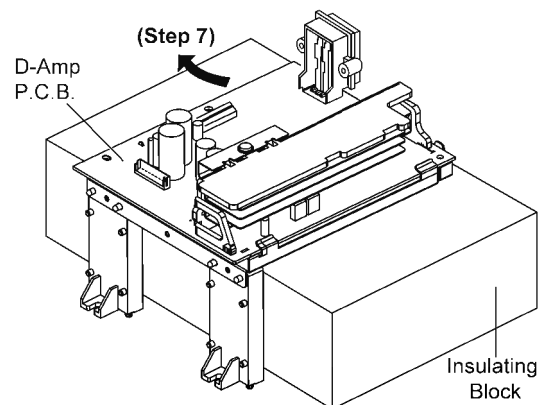


**Step 7** Lift up D-Amp P.C.B. as arrow shown.

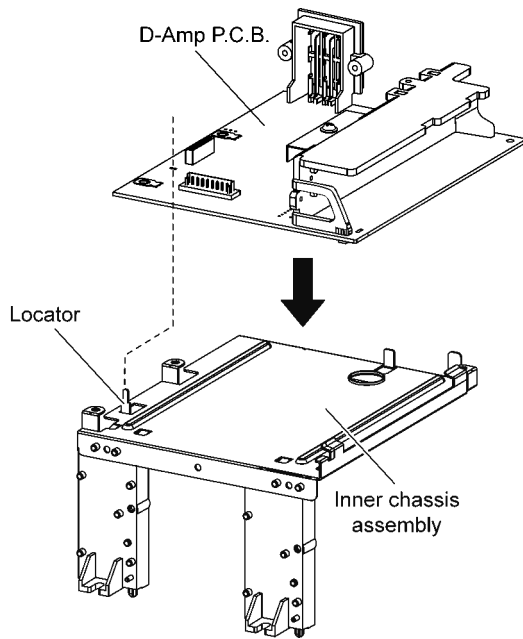

**Caution:** During assembling, ensure the D-Amp P.C.B. is seated properly on the locator of the Inner chassis assembly.

## 9.20. Replacement of Audio Digital Power Amp IC (IC5000)


- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 7) of Item 9.4
- Follow the (Step 1) to (Step 7) of Item 9.19

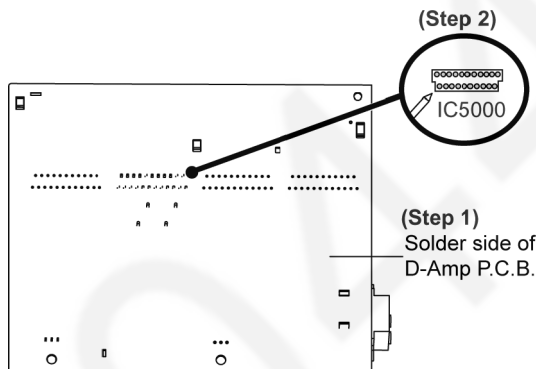

**Step 1** Flip over D-Amp P.C.B..

**Step 2** Desolder pins of the Audio Digital Power Amp IC (IC5000) on the solder side of D-Amp P.C.B..

**CAUTION: HOT!!  
PLEASE DO NOT  
TOUCH THE HEAT SINK**

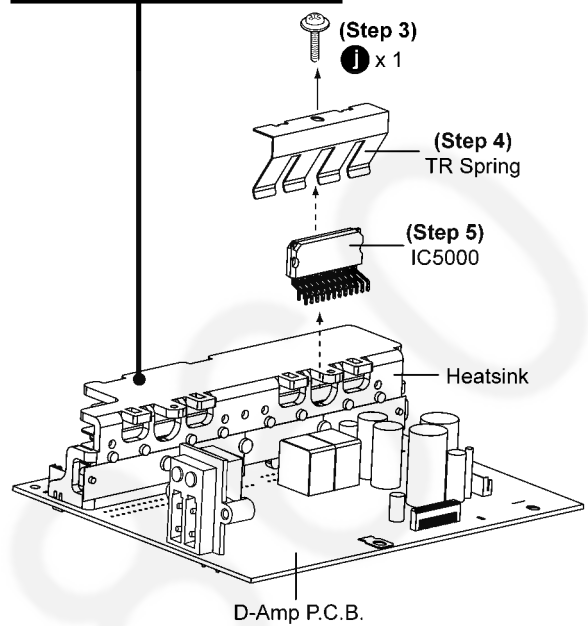


**Step 3** Remove 1 screw.

**Step 4** Remove TR Spring in the direction of arrow shown.

**Step 5** Remove Audio Digital Power Amp IC (IC5000).

**Caution:** During replacement of the part, avoid touching the heatsink, it may lead to injuries.

### 9.20.1. Assembly of Audio Digital Power Amp IC (IC5000)

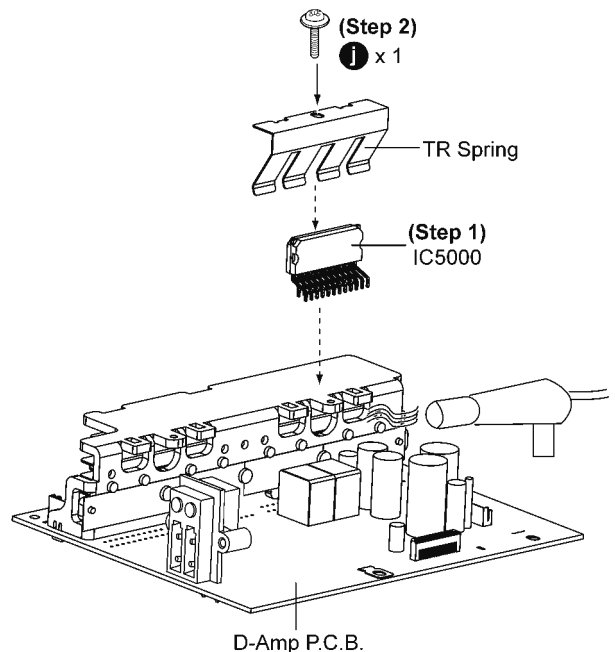

**Step 1** Mount the Audio Digital Power Amp IC (IC5000) on to D-Amp P.C.B..

**Step 2** Screw back TR Spring to hold the Audio Digital Power Amp IC (IC5000) onto the Heatsink Power Unit.


**Step 3** Solder the pins of Audio Digital Power Amp IC.

**Step 4** Use a blower to remove the minute particles after the screwing of TR Spring.


**Caution:** Ensure pins of the Audio Digital Power Amp IC (IC5000) are properly seated and soldered on D-Amp P.C.B..

## 9.21. Disassembly of Main P.C.B.


- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 7) of Item 9.4
- Follow the (Step 1) to (Step 7) of Item 9.7
- Follow the (Step 1) to (Step 5) of Item 9.19

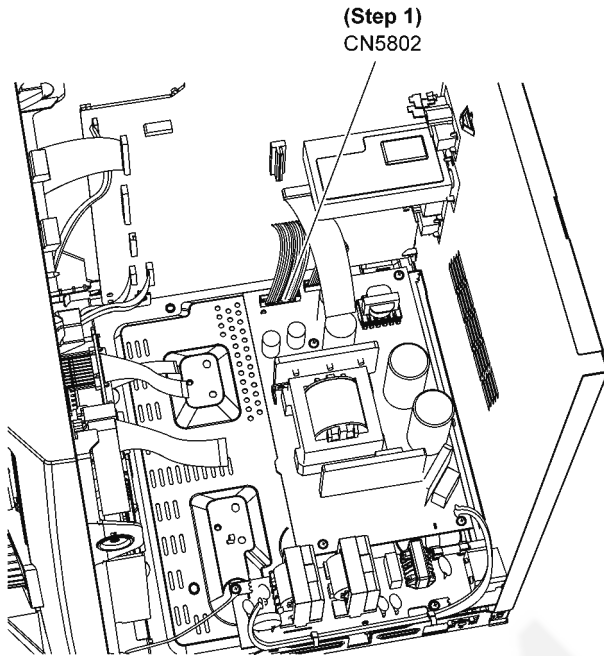


**Step 1** Detach 11P cable at connector (CN5802) on SMPS P.C.B..

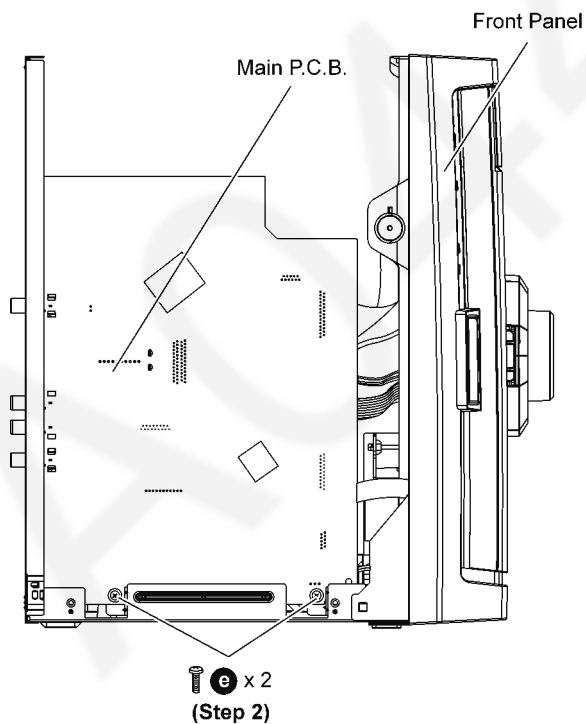

**Step 2** Remove 2 screws on Main P.C.B..

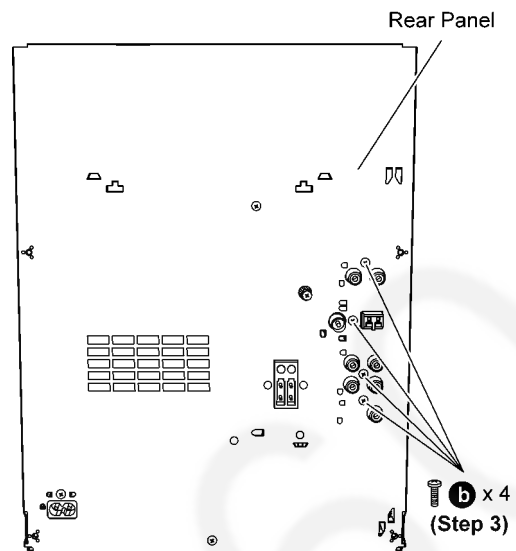


**Step 3** Remove 4 screws at rear panel.

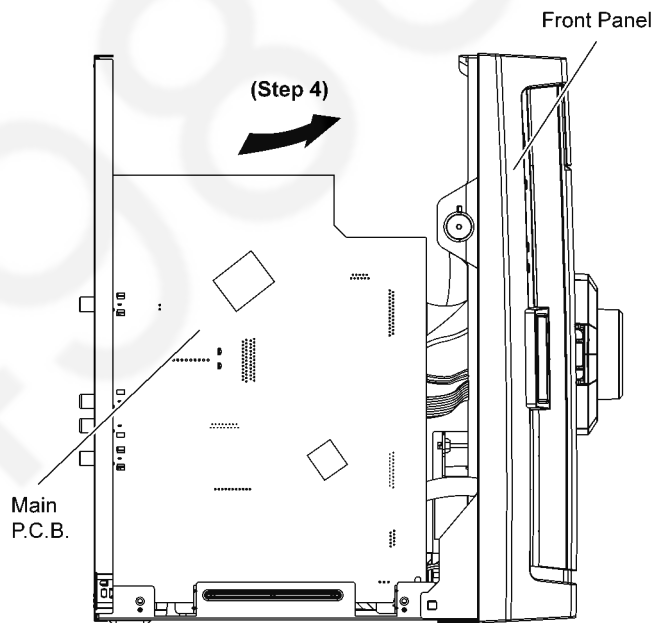


**Step 4** Remove Main P.C.B. according to the arrow shown.

## 9.22. Disassembly of SMPS P.C.B.

- Follow the (Step 1) to (Step 5) of Item 9.3
- Follow the (Step 1) to (Step 7) of Item 9.4
- Follow the (Step 1) to (Step 5) of Item 9.19

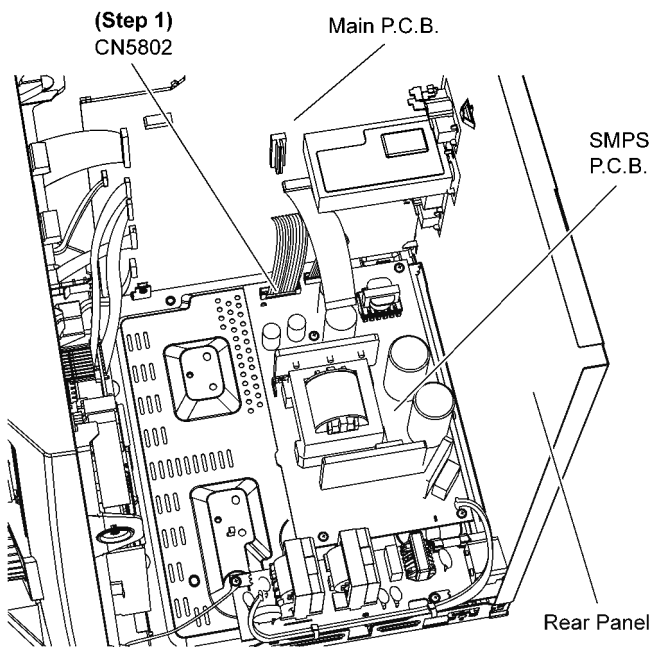


**Step 1** Detach 11P cable at the connector (CN5802) on SMPS P.C.B..

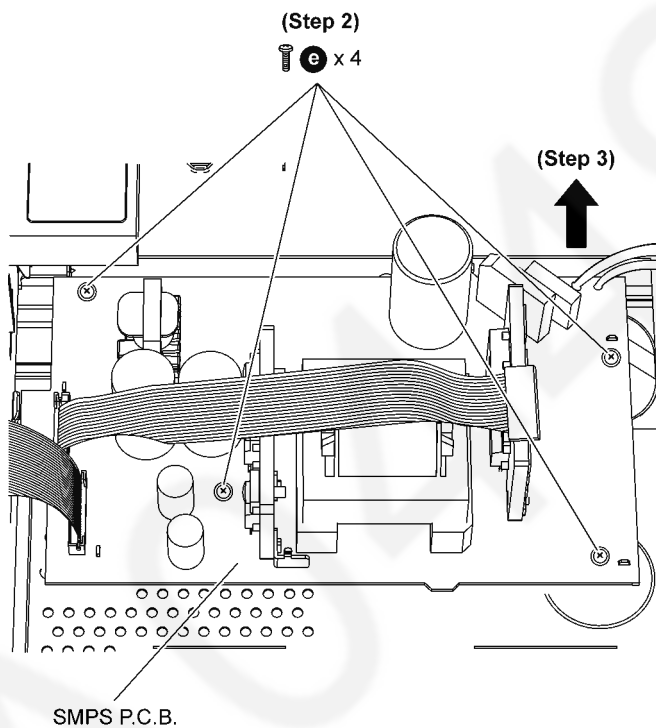


**Step 2** Remove 4 screws on SMPS P.C.B..

**Step 3** Lift up the SMPS P.C.B. as arrow shown.

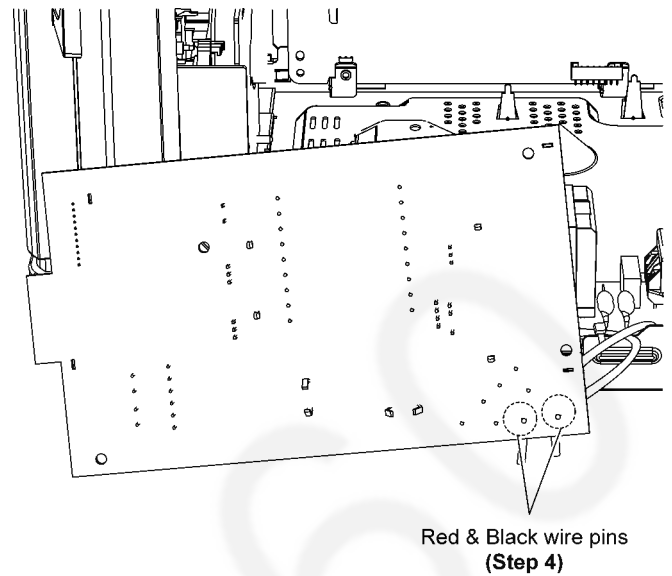

**Step 4** Flip the SMPS P.C.B. and desolder 2 wires pins (red and black).

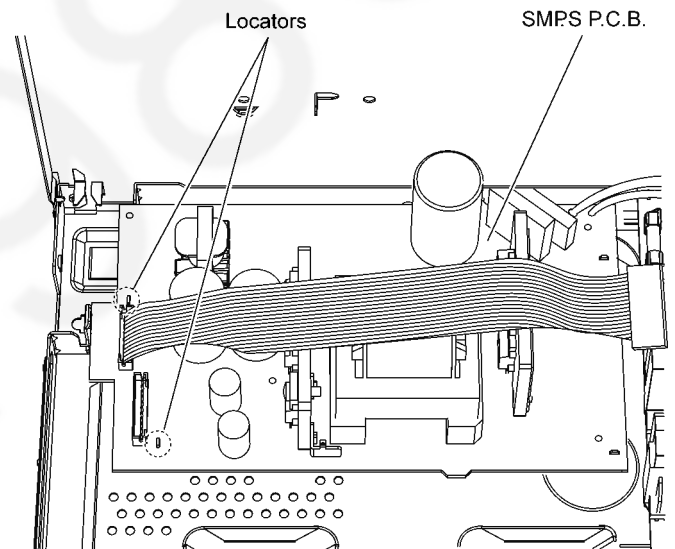

**Caution:** During assembling, ensure that SMPS P.C.B. is seated properly at the locators.


## 9.23. Replacement of Switching Regulator IC (IC5701)

- Follow (Step 1) to (Step 5) of Item 9.3
- Follow (Step 1) to (Step 7) of Item 9.4
- Follow (Step 1) to (Step 5) of Item 9.19
- Follow (Step 1) to (Step 4) of Item 9.22

### 9.23.1. Disassembly of Switching Regulator IC (IC5701)

Solder Side of  
SMPS P.C.B.


(Step 1)

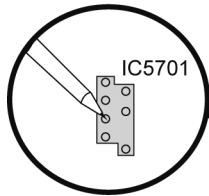

**Step 1** Desolder pins of the switching regulator IC (IC5701) on the solder side of SMPS P.C.B.

(Step 3)  
IC5701

(Step 2)  
① x 1

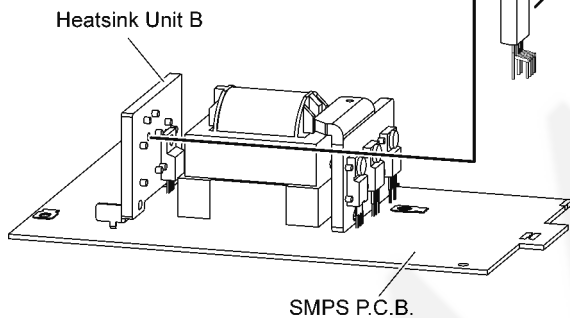


**Step 2** Remove 1 screw from the Switch Regulator IC (IC5701).

**Step 3** Remove the Switch Regulator IC (IC5701).

**Caution:** During replacement of the part, avoid touching the heatsink, it may lead to injuries.

### 9.23.2. Assembly of Switching Regulator IC (IC5701)

(Step 2)  
IC5701

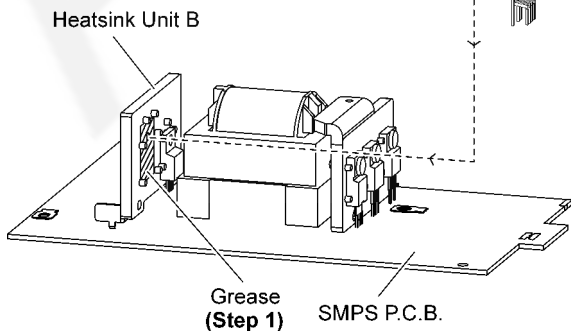

Heatsink Unit B

Grease  
(Step 1)


SMPS P.C.B.

**Step 1** Apply grease to the Heatsink Unit B.

**Step 2** Mount the Switching Regulator IC (IC5701) on to SMPS P.C.B..

**Caution:** Ensure pins of the switching regulator IC (IC5701) are properly seated on SMPS P.C.B.


Solder Side of  
SMPS P.C.B.

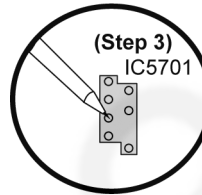

(Step 3)  
IC5701

**Step 3** Solder pins of the Switching Regulator IC (IC5701) on the solder side of SMPS P.C.B..

Heatsink Unit B

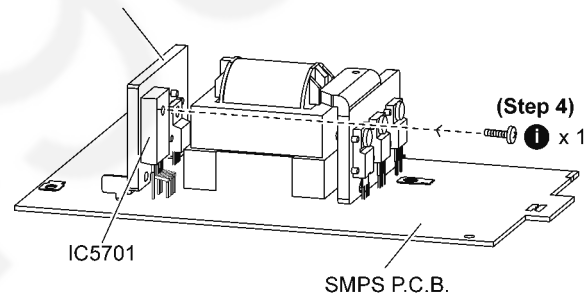

(Step 4)  
① x 1


**Step 4** Screw the Switching Regulator IC (IC5701) to the Heatsink Unit B.

**Caution:** Ensure the switching regulator IC (IC5701) is tightly screwed to the Heatsink Unit B.

## 9.24. Replacement of Rectifier Diode (D5702)


- Follow (Step 1) to (Step 5) of Item 9.3
- Follow (Step 1) to (Step 7) of Item 9.4
- Follow (Step 1) to (Step 5) of Item 9.19
- Follow (Step 1) to (Step 4) of Item 9.22

### 9.24.1. Disassembly of Rectifier Diode (D5702)

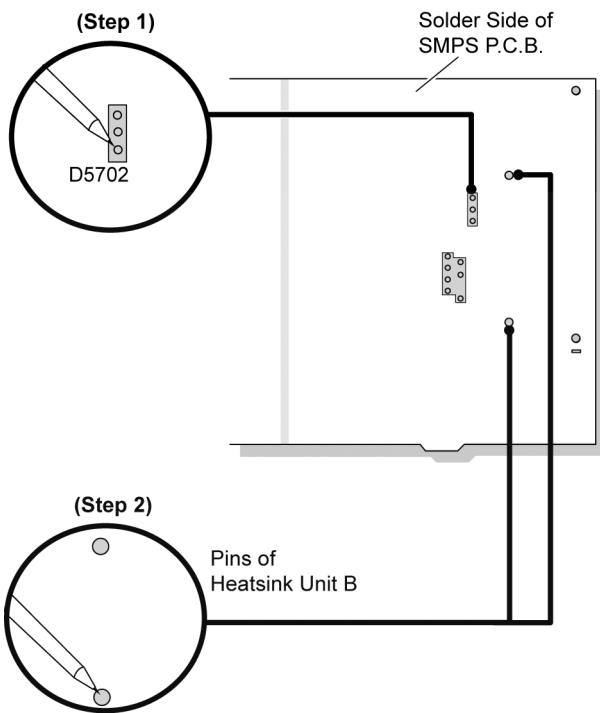

**Step 1** Desolder pins of the Rectifier Diode (D5702) on the solder side of SMPS P.C.B..

**Step 2** Desolder pins of the Heatsink Unit B.

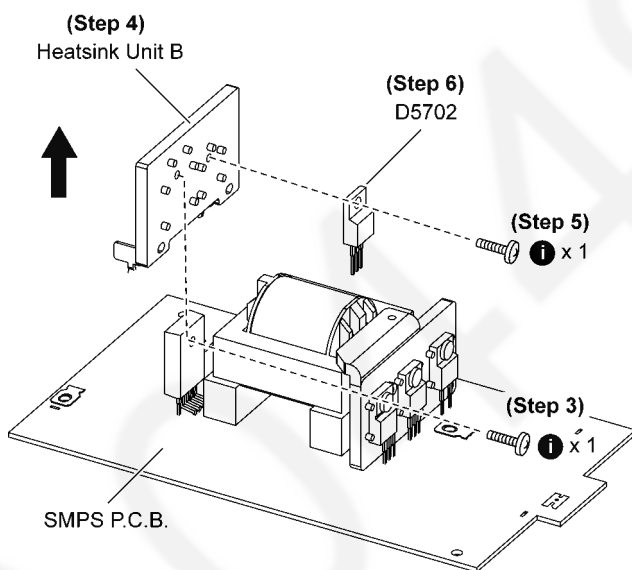

**Step 3** Remove 1 screw from the Switching Regulator IC (IC5701).


**Step 4** Remove the Heatsink Unit B in the direction of arrow shown.

**Step 5** Remove 1 screw.

**Step 6** Remove the Rectifier Diode (D5702) from the Heatsink Unit B.

**Caution:** During replacement of the part, avoid touching the heatsink, it may lead to injuries.

## 9.24.2. Assembly of Rectifier Diode (D5702)

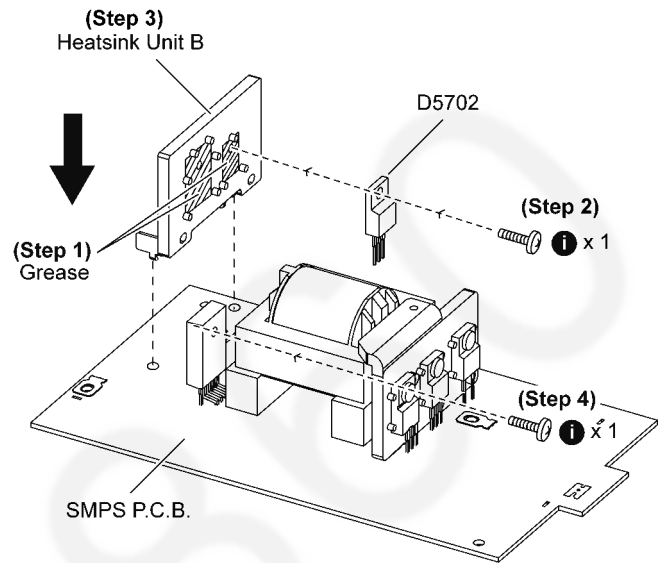

**Step 1** Apply grease to the Heatsink Unit B.

**Step 2** Screw the Rectifier Diode (D5702) to the Heatsink Unit B..


**Caution:** Ensure the Rectifier Diode (D5702) is well tightened to the Heatsink Unit B.

**Step 3** Mount the Heatsink Unit B & Rectifier Diode (D5702) on to SMPS P.C.B..

**Caution:** Ensure pins of the Rectifier Diode (D5702) is properly seated on SMPS P.C.B..

**Step 4** Screw the Switch Regulator IC (IC5701) to the Heatsink Unit B.

**Caution:** Ensure the Heatsink Unit B is properly seated on SMPS P.C.B..

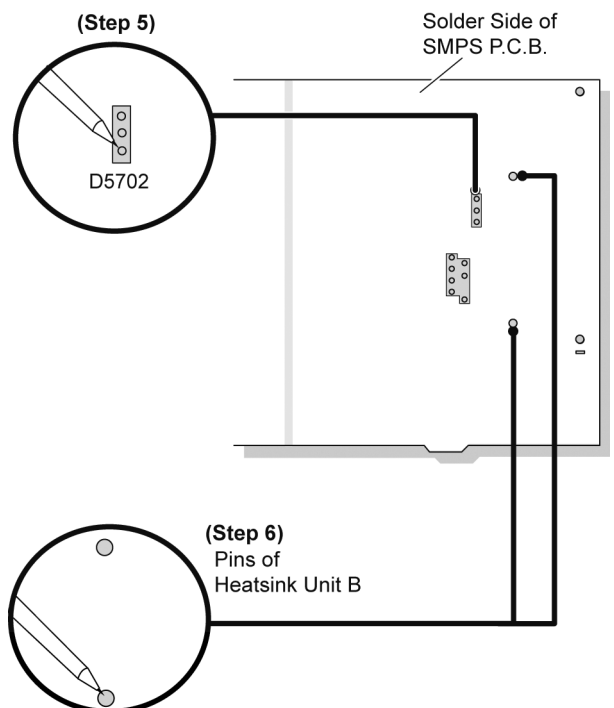


**Step 5** Solder pins of the Rectifier Diode (D5702) on the solder side of SMPS P.C.B..

**Step 6** Solder pins of the Heatsink Unit B on the solder side of SMPS P.C.B..


## 9.25. Replacement of Regulator Diode (D5801)

- Follow (Step 1) to (Step 5) of Item 9.3
- Follow (Step 1) to (Step 7) of Item 9.4
- Follow (Step 1) to (Step 5) of Item 9.19
- Follow (Step 1) to (Step 4) of Item 9.22

### 9.25.1. Disassembly of Regulator Diode (D5801)

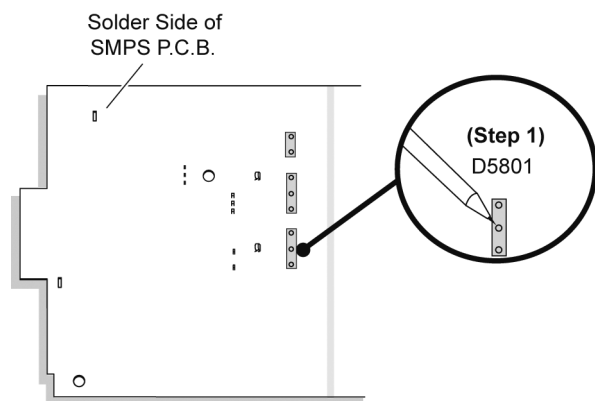

**Step 1** Desolder pins of the Regulator Diode (D5801) on the solder side of SMPS P.C.B.

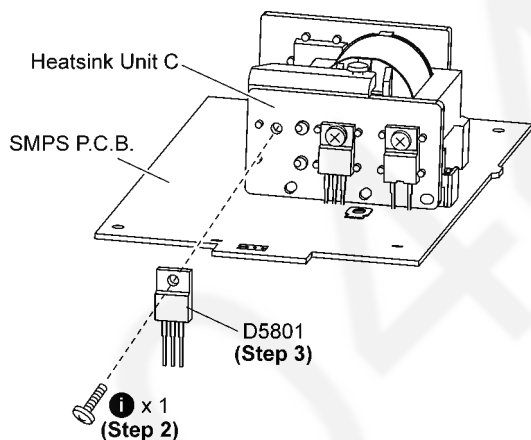


**Step 2** Remove 1 screw.

**Step 3** Remove the Regulator Diode (D5801).

**Caution:** During replacement of the part, avoid touching the heatsink, it may lead to injuries.


### 9.25.2. Assembly of Regulator Diode (D5801)

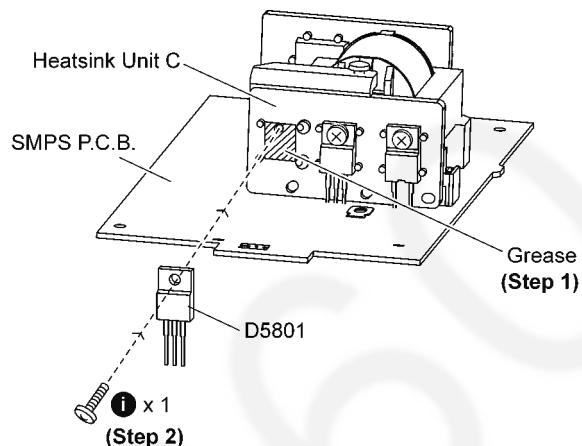

**Step 1** Apply grease to the Heatsink Unit C.

**Step 2** Mount & screw the Regulator Diode (D5801) to the Heatsink Unit C on the SMPS P.C.B..

**Caution:** Ensure the Regulator Diode (D5801) is well tightened to the Heatsink Unit C.

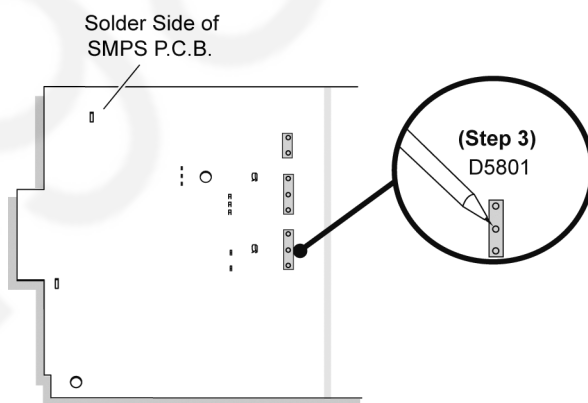


**Step 3** Solder pins of the Regulator Diode (D5801) on the solder side of SMPS P.C.B..

**Caution:** Ensure pins of the Regulator Diode (D5801) is properly seated and soldered on SMPS P.C.B.


## 9.26. Replacement of Regulator Diode (D5802)

- Follow (Step 1) to (Step 5) of Item 9.3
- Follow (Step 1) to (Step 7) of Item 9.4
- Follow (Step 1) to (Step 5) of Item 9.19
- Follow (Step 1) to (Step 4) of Item 9.22

### 9.26.1. Disassembly of Regulator Diode (D5802)

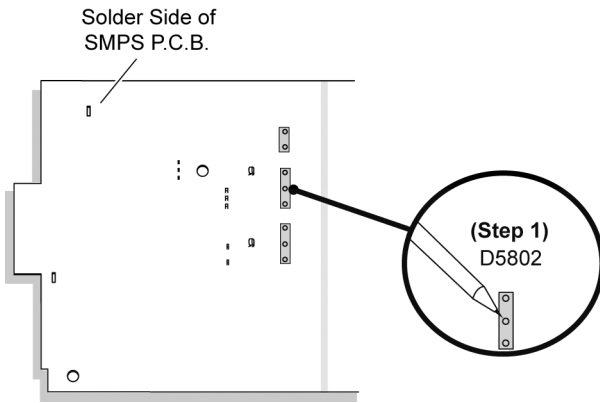

**Step 1** Desolder pins of the Regulator Diode (D5802) on the solder side of SMPS P.C.B..

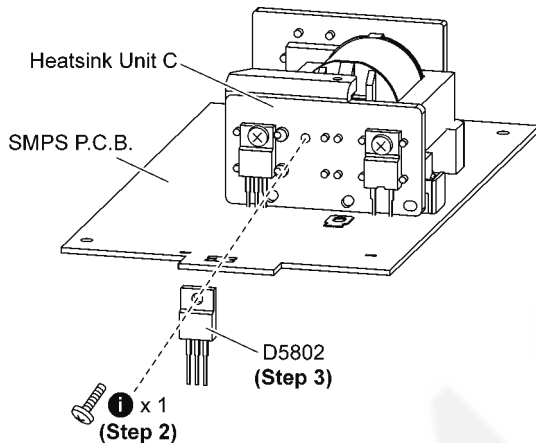


**Step 2** Remove 1 screw.

**Step 3** Remove the Regulator Diode (D5802) from the Heatsink Unit C.

**Caution:** During replacement of the part, avoid touching the heatsink, it may lead to injuries.


### 9.26.2. Assembly of Regulator Diode (D5802)

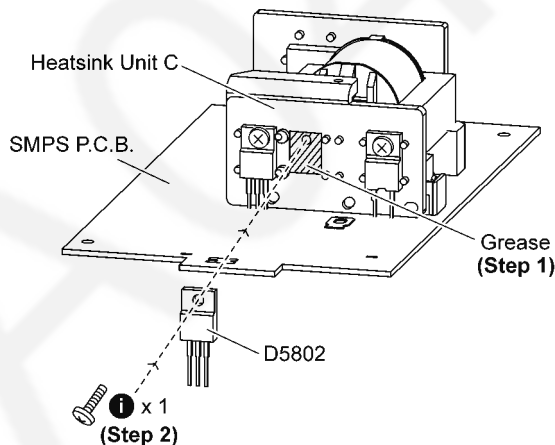

**Step 1** Apply grease to the Heatsink Unit C.

**Step 2** Mount & screw the Regulator Diode (D5802) to the Heatsink Unit C on SMPS P.C.B..

**Caution:** Ensure the Regulator Diode (D5802) is well tightened to the heatsink unit C.

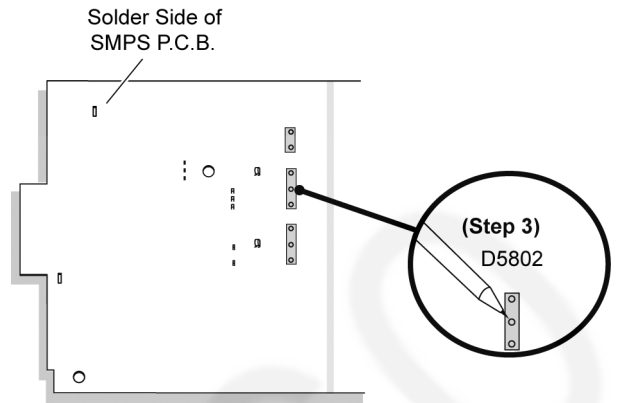


**Step 3** Solder pins of the Regulator Diode (D5802) on the solder side of SMPS P.C.B..

**Caution:** Ensure pins of the Regulator Diode (D5802) is properly seated and soldered on SMPS P.C.B.


## 9.27. Replacement of Regulator Diode (D5803)

- Follow (Step 1) to (Step 5) of Item 9.3
- Follow (Step 1) to (Step 7) of Item 9.4
- Follow (Step 1) to (Step 5) of Item 9.19
- Follow (Step 1) to (Step 4) of Item 9.22

### 9.27.1. Disassembly of Regulator Diode (D5803)

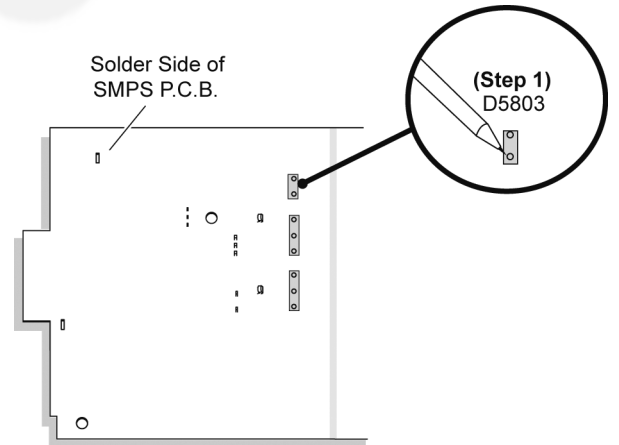

**Step 1** Desolder pins of the Regulator Diode (D5803) on the solder side of SMPS P.C.B..

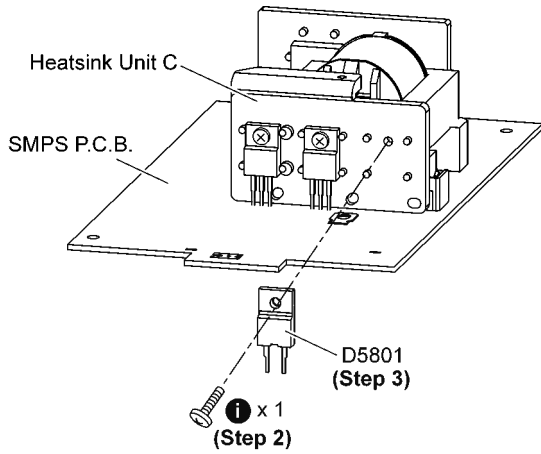


**Step 2** Remove 1 screw.

**Step 3** Remove the Regulator Diode (D5803) from the Heatsink Unit C.

**Caution:** During replacement of the part, avoid touching the heatsink, it may lead to injuries.


### 9.27.2. Assembly of Regulator Diode (D5803)

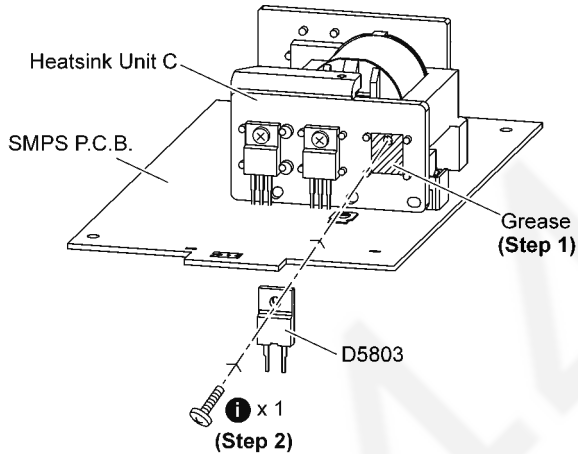

**Step 1** Apply grease to the Heatsink Unit C.

**Step 2** Mount & screw the regulator diode (D5803) to the Heatsink Unit C on SMPS P.C.B..

**Caution:** Ensure the Regulator Diode (D5803) is well tightened to the Heatsink Unit C.

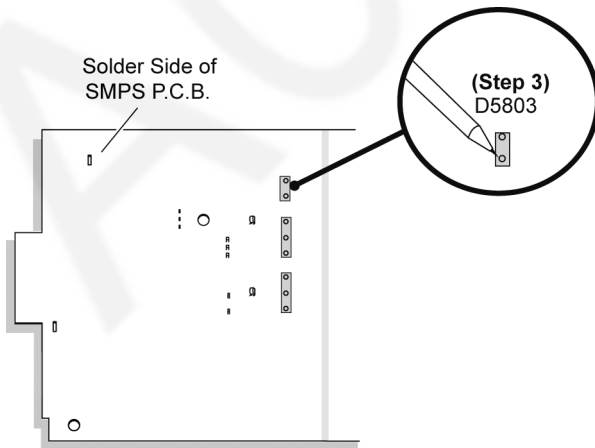


**Step 3** Solder pins of the Regulator Diode (D5803) on the solder side of SMPS P.C.B..

**Caution:** Ensure pins of the regulator diode (D5803) are properly seated and soldered on SMPS P.C.B..

### 9.28. Disassembly of AC Inlet P.C.B.


- Follow the (Step 1) to (Step 5) of Item 9.3

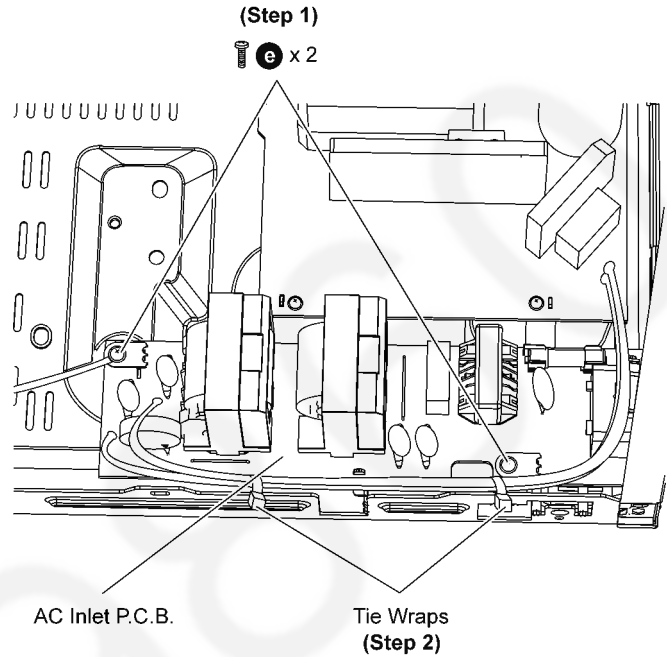


**Step 1** Remove 2 screws at AC Inlet P.C.B..

**Step 2** Cut 2 tie wraps.

**Caution:** During assembling, ensure that new tie wraps are replaced and tie properly to the wires.

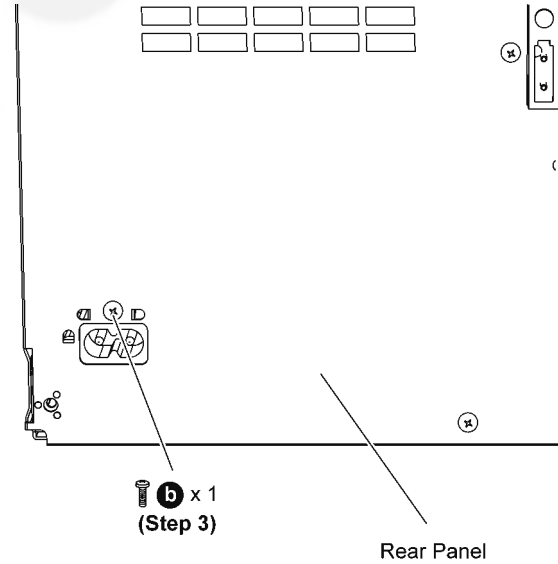


**Step 3** Remove 1 screw at the rear panel.

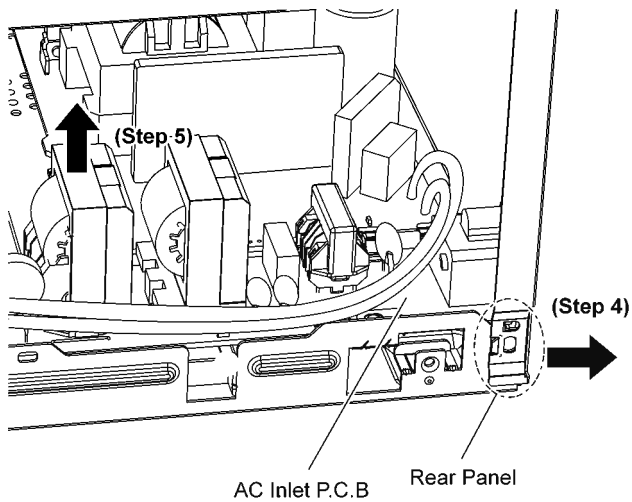


**Step 4** Detach the rear panel slightly backward as arrow shown.

**Step 5** Lift up the AC Inlet P.C.B..

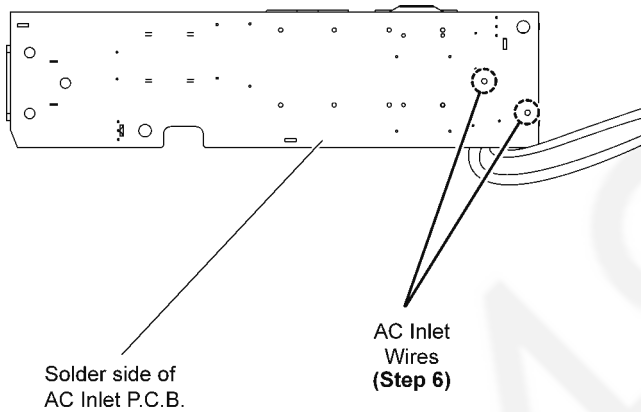

**Step 6** Flip over the AC Inlet P.C.B. and desolder AC Inlet wires (red and black).

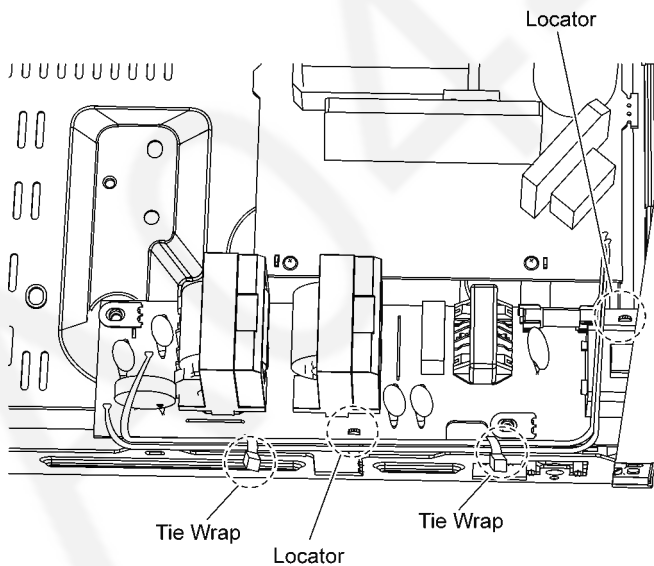



**Caution:** During assembling, ensure the P.C.B. is seated properly at the locators.

**Caution:** Remember to use tie wraps to tie red & black wires between AC Inlet P.C.B. to the chassis.


# 10 Disassembling and Assembling of Traverse Unit

Note: Refer to Section 6.3.1. Self-Diagnosis Mode Table 1 to set to Service Mode 2.

## 10.1. Disassembly Procedures

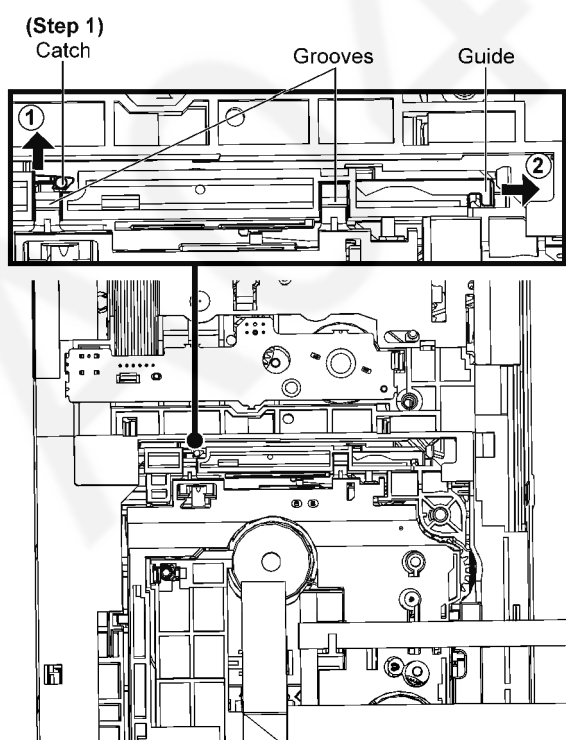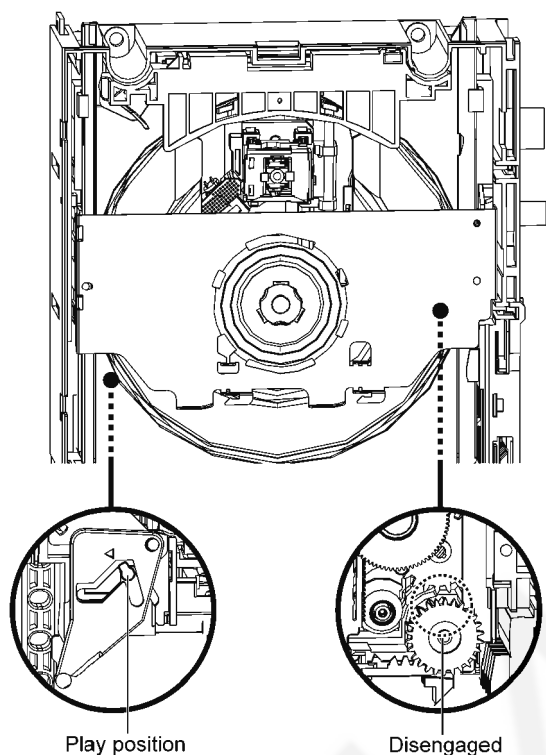


Step 1 Release the catch and push the guide as arrows shown to open both grooves.

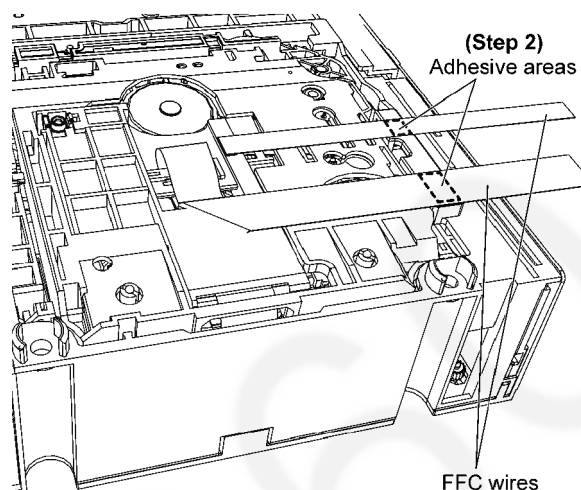


Step 2 Detach the FFC wires from the adhesive areas.

Caution:

Do not pull the FFC wire to remove the traverse unit assembly, as it may cause damage to the slot.

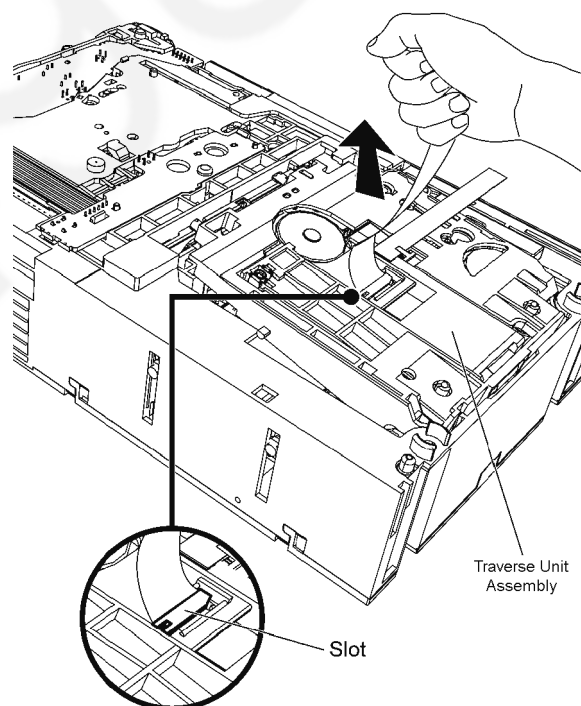


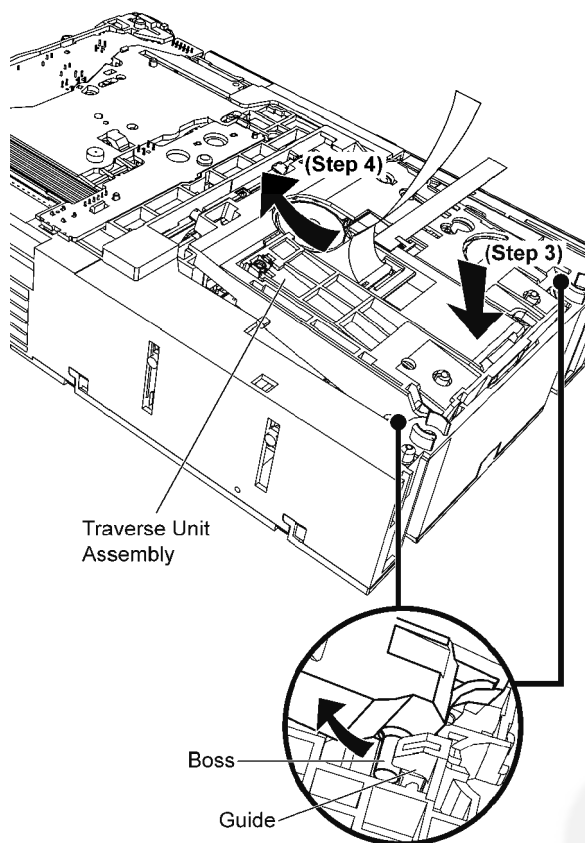

**Step 3** Press down the traverse unit assembly.

**Step 4** Remove the traverse unit assembly as arrow shown.


## 10.2. Assembly Procedures

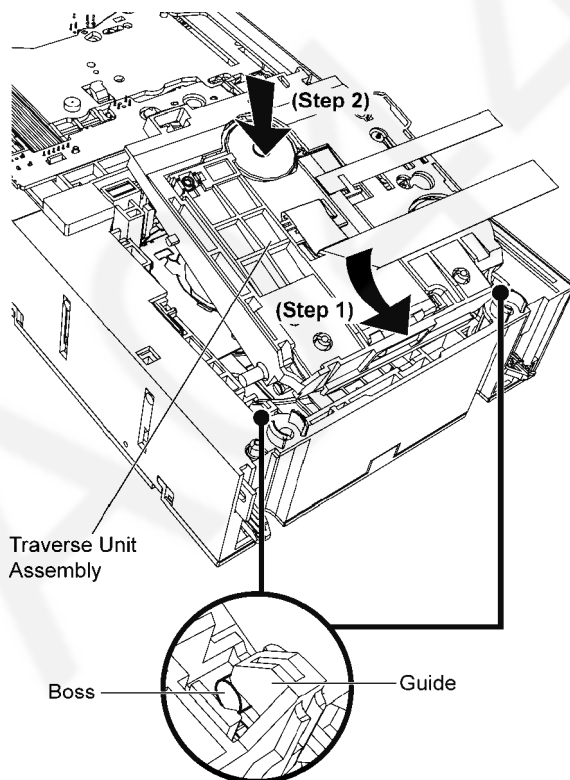


**Step 1** Slot the traverse unit assembly into the guides as arrow shown.

**Note:** Ensure the bosses fix exactly onto the guides.

**Step 2** Place down the traverse unit assy.

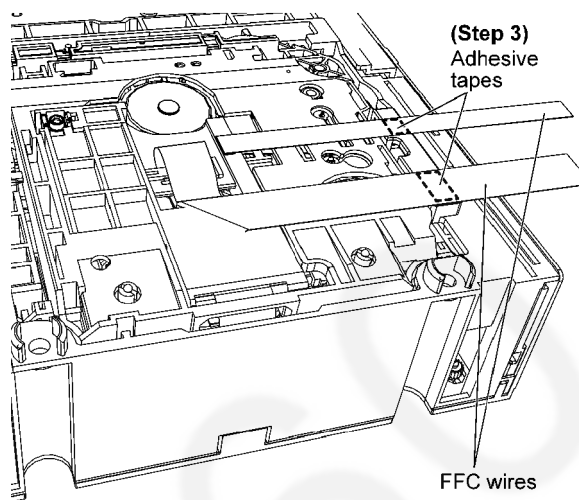

**Step 3** Fix the FFC wires by using the adhesive tapes.

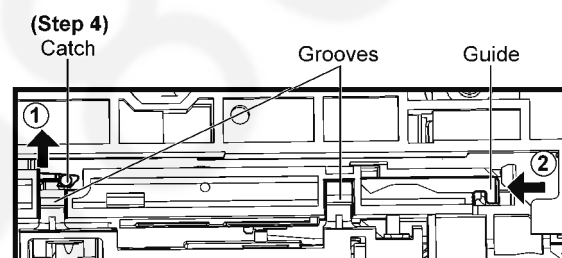


**Step 4** Release the catch and push the guide as arrows shown to close both grooves.

# 11 Service Positions

Note: For description of the disassembly procedures, see the Section 9.

## 11.1. Checking and Repairing of Main P.C.B.


Step 1 Remove the top cabinet .

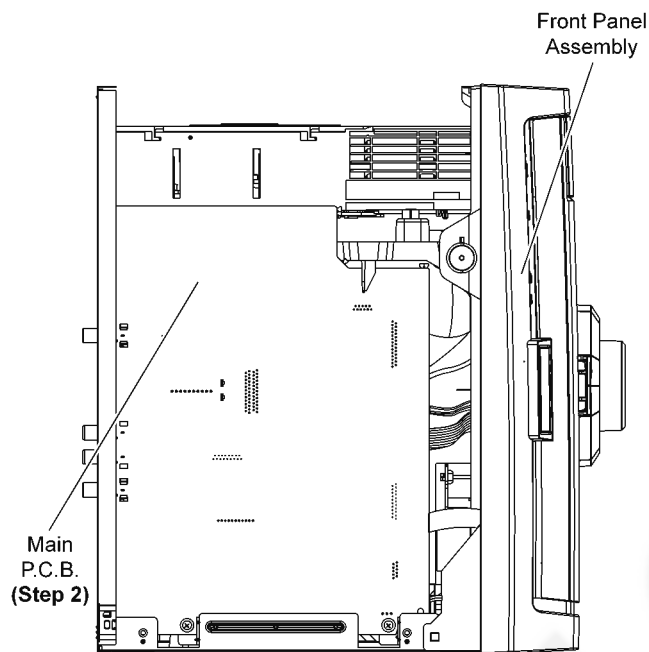

Step 2 Main P.C.B. can be checked at its original position.

## 11.2. Checking and Repairing Panel P.C.B., Deck P.C.B., Volume P.C.B., Music Port P.C.B. and Mic P.C.B.

Step 1 Remove the top cabinet.

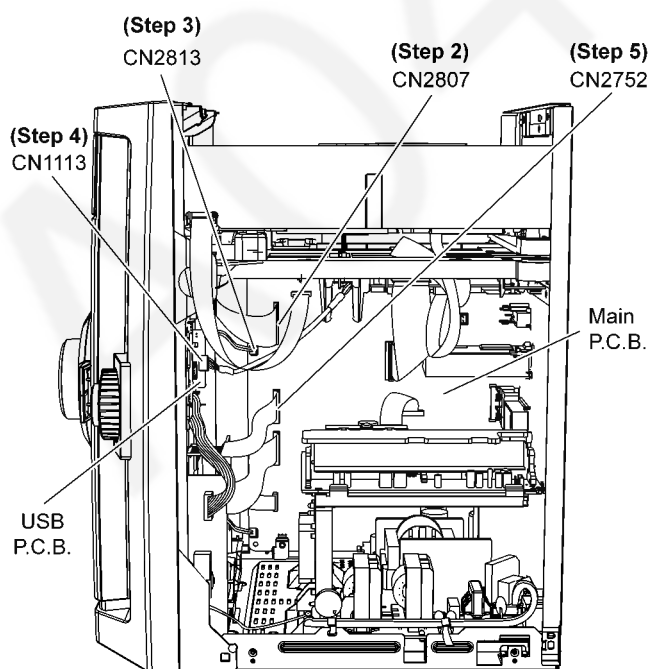


Step 2 Detach 27P FFC at the connector (CN2807) on Main

P.C.B..

Step 3 Detach 2P cable at the connector (CN2813) on Main P.C.B..

Step 4 Detach 5P cable at the connector (CN1113) on USB P.C.B..

Step 5 Detach 10P FFC at the connector (CN2752) on Main P.C.B..

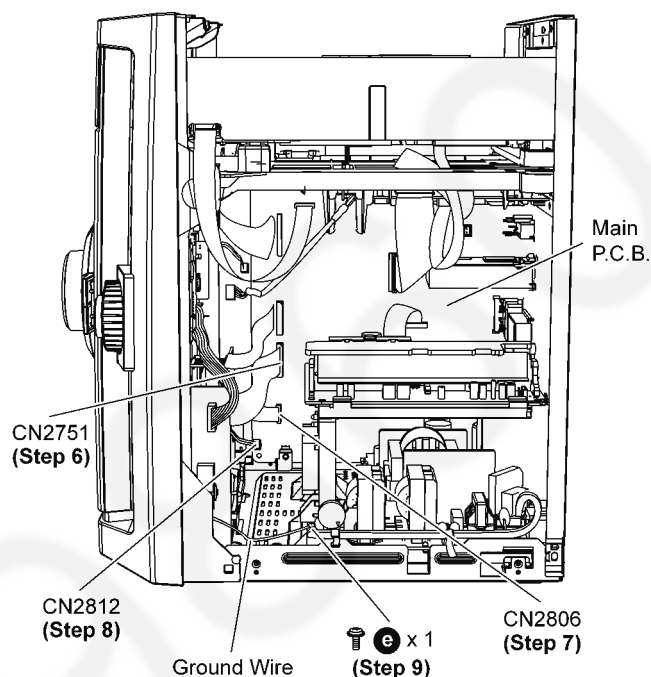


Step 6 Detach 12P FFC at the connector (CN2751) on Main P.C.B..

Step 7 Detach 10P FFC at the connector (CN2806) on Main P.C.B..


Step 8 Detach 2P cable at connector (CN2812) on Main P.C.B..

Step 9 Remove 1 screw to remove ground wire.

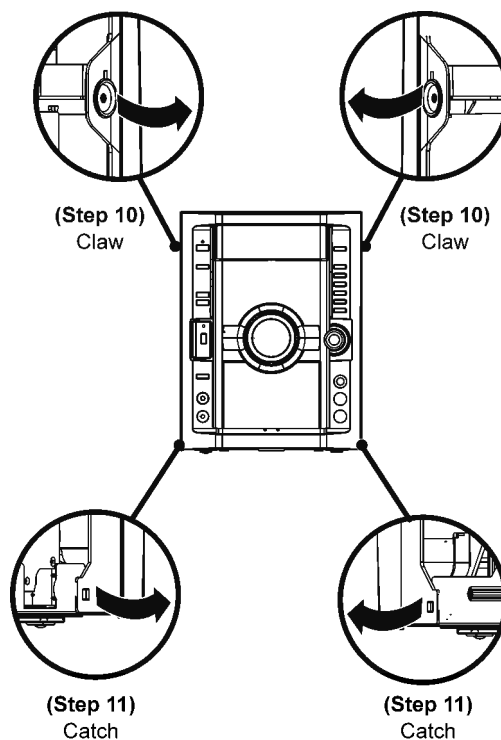


Step 10 Release the claws outwards on both sides.


Step 11 Release the catches at both sides.

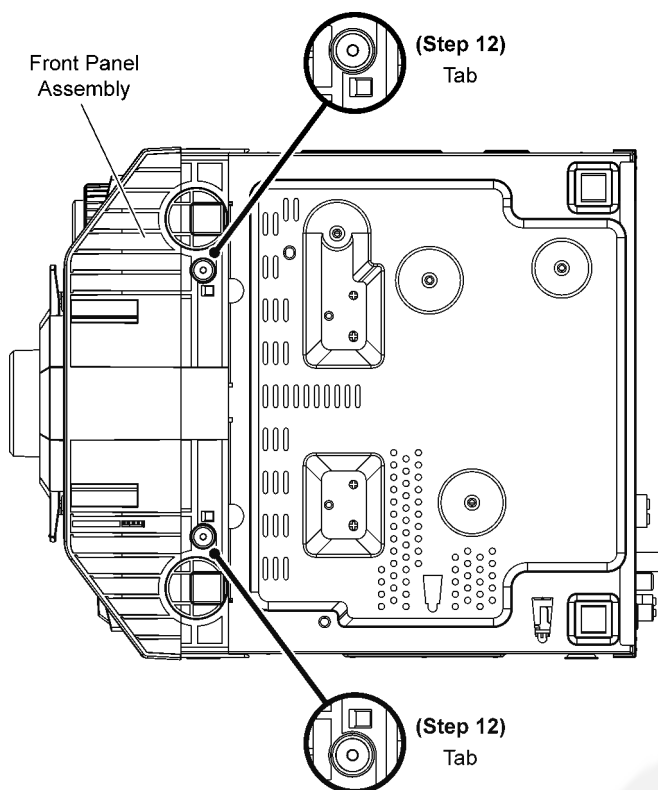

**Step 12** Release the tabs at the bottom of front panel.

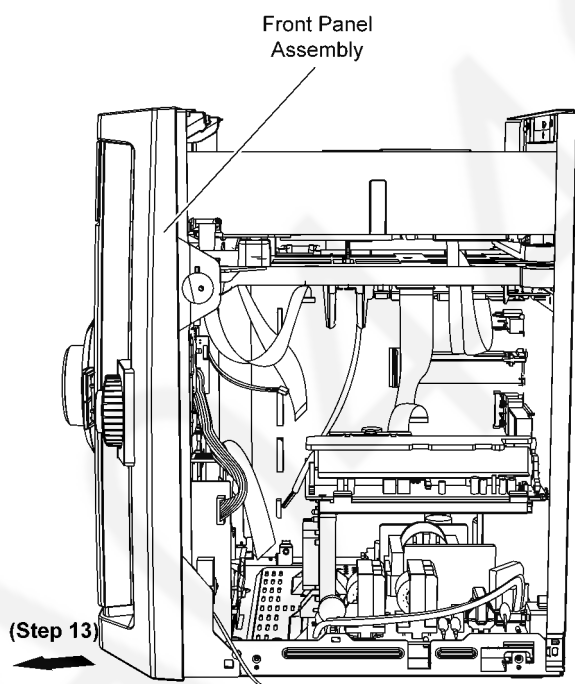

**Step 13** Remove front panel unit in the direction of arrow.

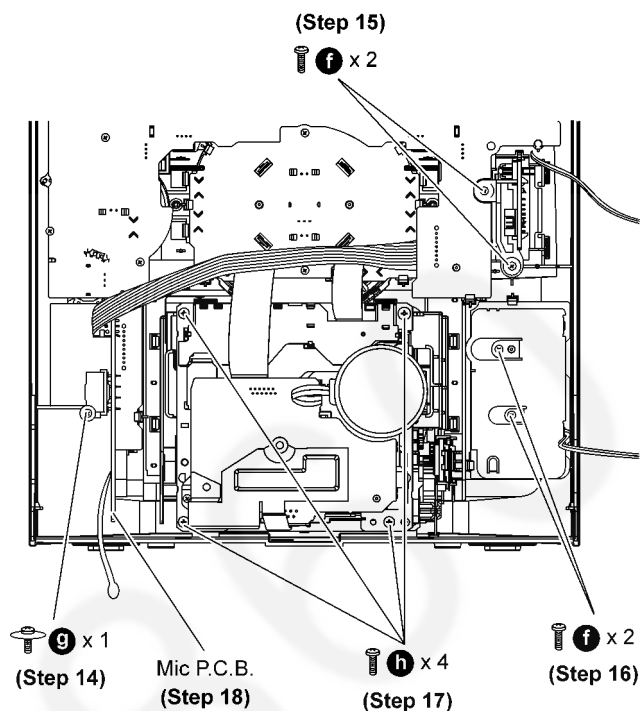


**Step 14** Remove 1 screw at Mic P.C.B..

**Step 15** Remove 2 screws on USB bracket.

**Step 16** Remove 2 screws on Music Port P.C.B..

**Step 17** Remove 4 screws at Deck Mechanism unit.

**Step 18** Remove Mic P.C.B..

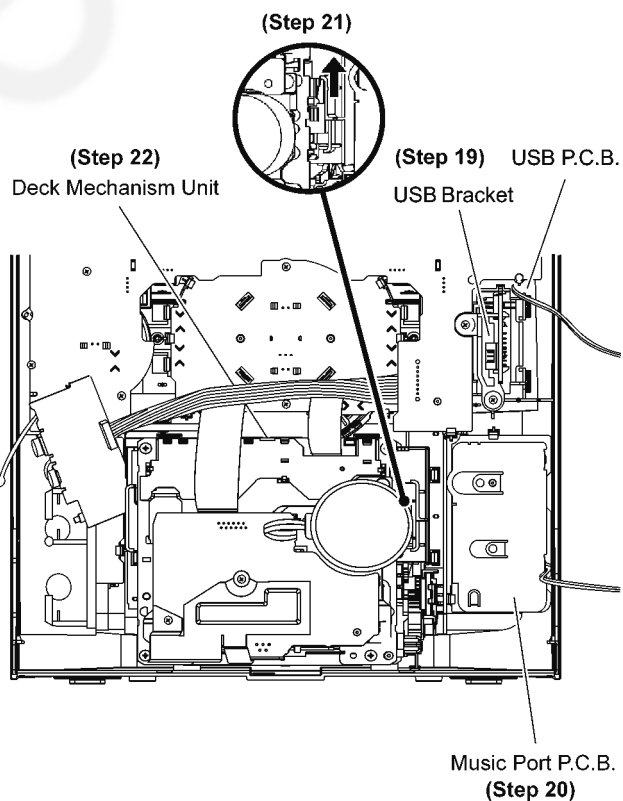


**Step 19** Remove USB P.C.B. with USB bracket.

**Step 20** Remove Music Port P.C.B..


**Step 21** Push the lever upward as arrow shown to open the cassette lid assembly.

**Step 22** Remove Deck Mechanism unit.

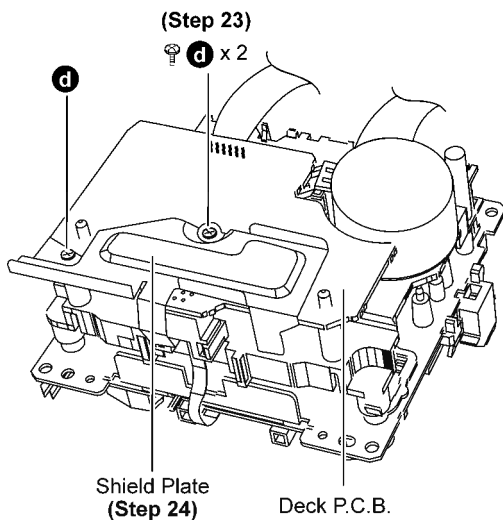


**Step 23** Remove 2 screws.

**Step 24** Remove shield plate.

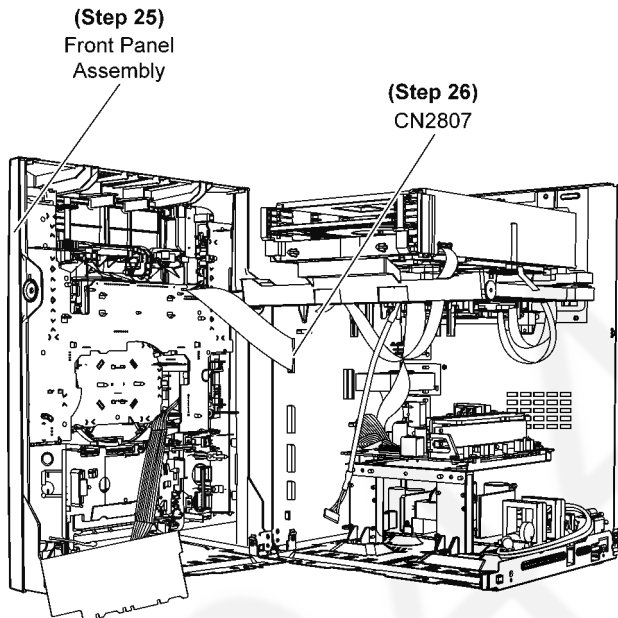

**Step 25** Position front panel assembly according to the diagram show.

**Step 26** Connect 27P FFC at connector (CN2807) on Main P.C.B..

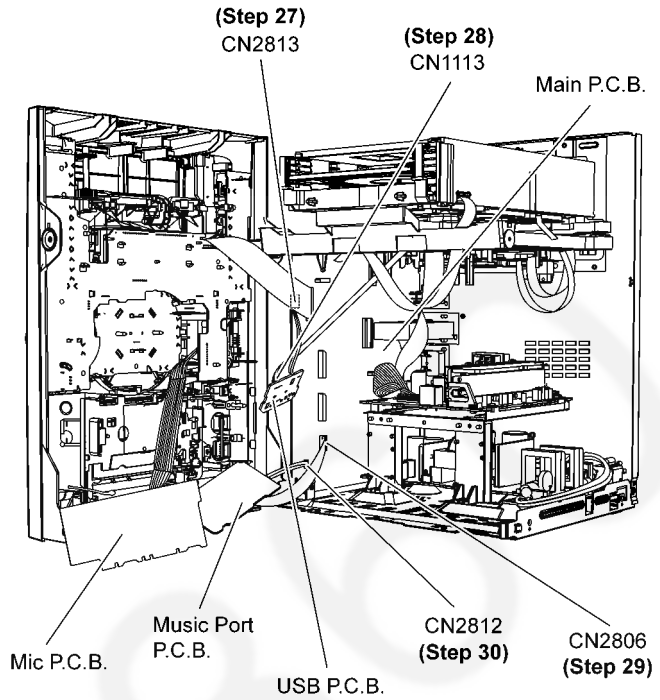


**Step 27** Connect 2P cable at connector (CN2813) on Main P.C.B..

**Step 28** Connect 5P cable at connector (CN1113) on USB P.C.B..

**Step 29** Connect 10P FFC at connector (CN2806) on Main P.C.B..

**Step 30** Connect 2P cable at connector (CN2812) on Main P.C.B..

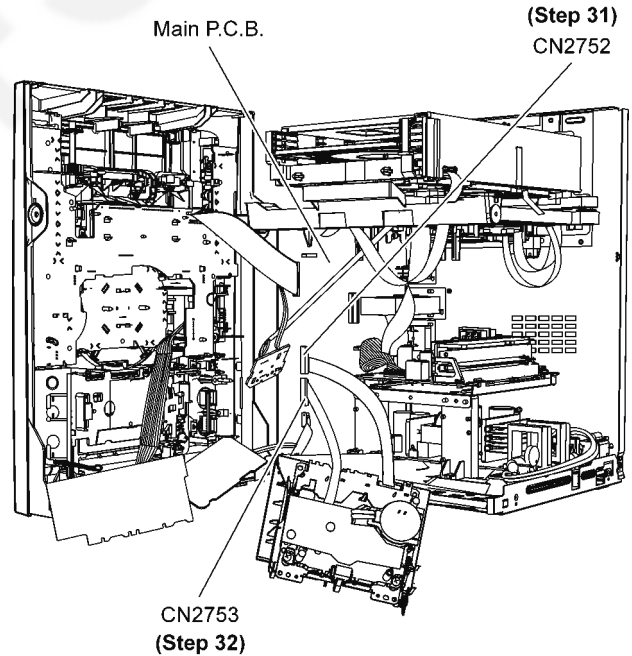

**Step 31** Connect 10P FFC at the connector (CN2752) on Main P.C.B..


**Step 32** Connect 12P FFC at the connector (CN2753) on Main P.C.B..

**Step 33** Check and repair panel P.C.B., Deck P.C.B., Volume P.C.B., Music Port P.C.B. and Mic P.C.B..

## 11.3. Checking and Repairing of D-Amp P.C.B.

**Step 1** Remove the top cabinet.


**Step 2** Remove the DVD Mechanism Unit (CR14D).

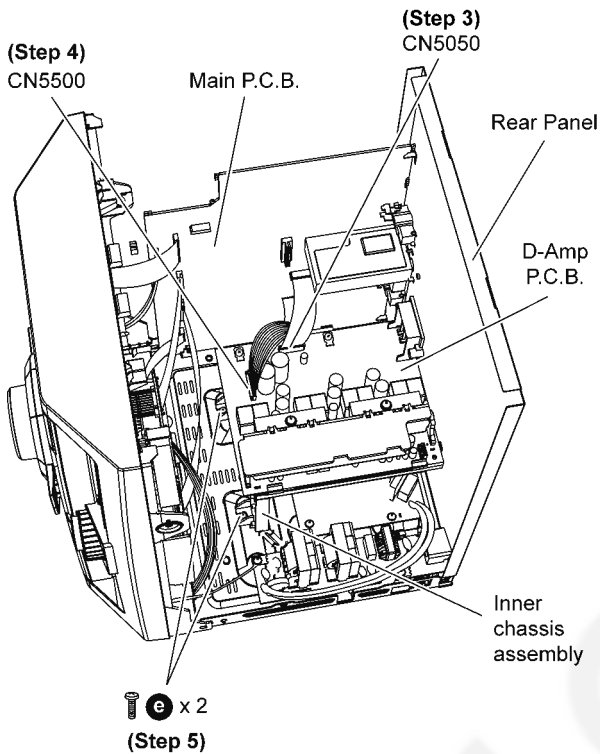


**Step 3** Detach 17P FFC at connector (CN5050) on D-Amp P.C.B..

**Step 4** Detach 8P cable at connector (CN5500) on D-Amp P.C.B..


**Step 5** Remove 2 screws at Inner chassis assembly.

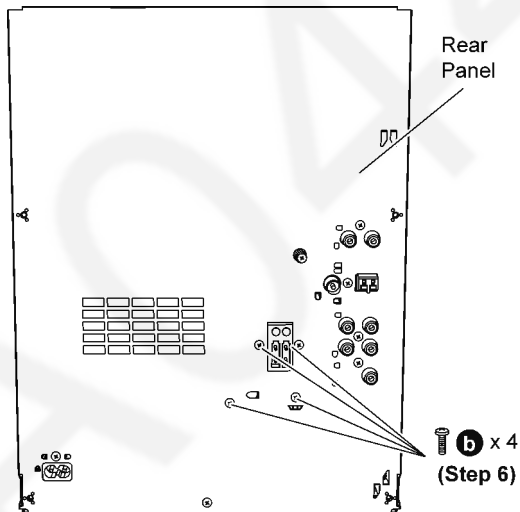

**Step 6** Remove 4 screws at the rear panel.

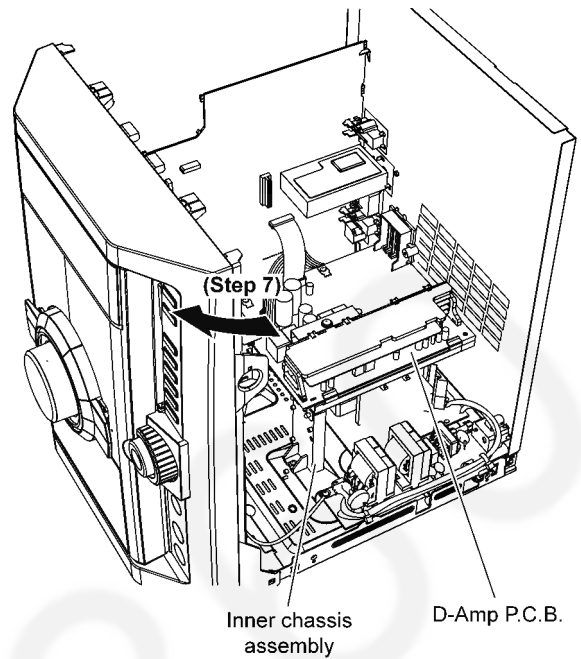


**Step 7** Lift up the D-Amp P.C.B. together with the Inner chassis assembly as arrow shown.

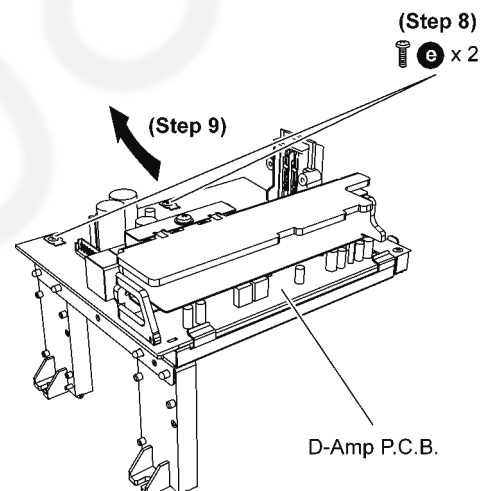

**Step 8** Remove 2 screws from D-Amp P.C.B..

**Step 9** Lift up D-Amp P.C.B. as arrow shown.

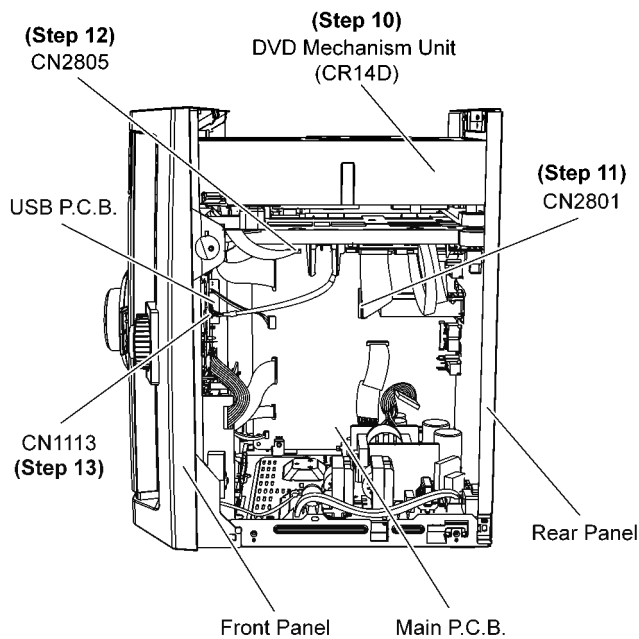


**Step 10** Position DVD Mechanism unit (CR14D) according to the diagram shown.

**Step 11** Connect 50P FFC cable at the connector (CN2801) on Main P.C.B..

**Step 12** Connect 11P FFC cable at the connector (CN2805) on Main P.C.B..

**Step 13** Connect 5P cable at the connector (CN1113) on USB P.C.B..

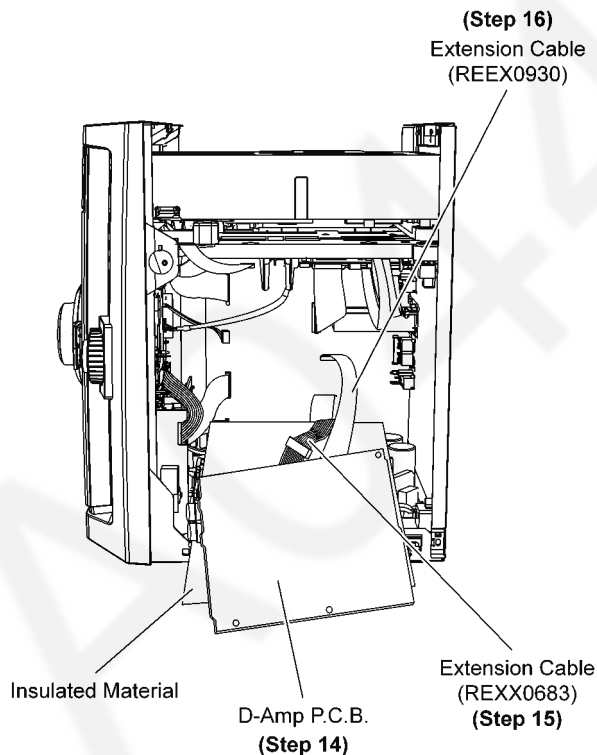

**Step 14** Position D-Amp P.C.B. according to diagram shown.


**Step 15** Attach original cable with extension cable (REXX0683) (8P cable from H5801 to CN5500).

**Step 16** Connect extension cable (REEX0930) (17P cable from CN2808 to CN5050).

**Step 17** Check and repair D-Amp P.C.B. according to the diagram shown.

## 11.4. Checking and Repairing of AC Inlet P.C.B. & SMPS P.C.B.

• Follow (Step 1) to (Step 9) of item 11.3

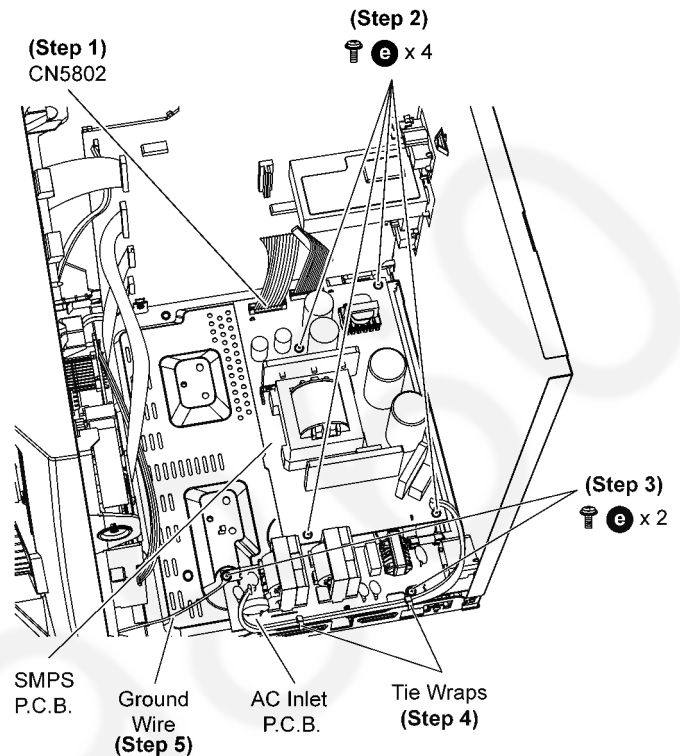


**Step 1** Detach wire connector at connector (CN5802) on SMPS P.C.B..

**Step 2** Remove 4 screws on SMPS P.C.B..


**Step 3** Remove 2 screws on AC Inlet P.C.B..

**Step 4** Cut 2 tie wraps onto wires.


**Step 5** Remove ground wire.

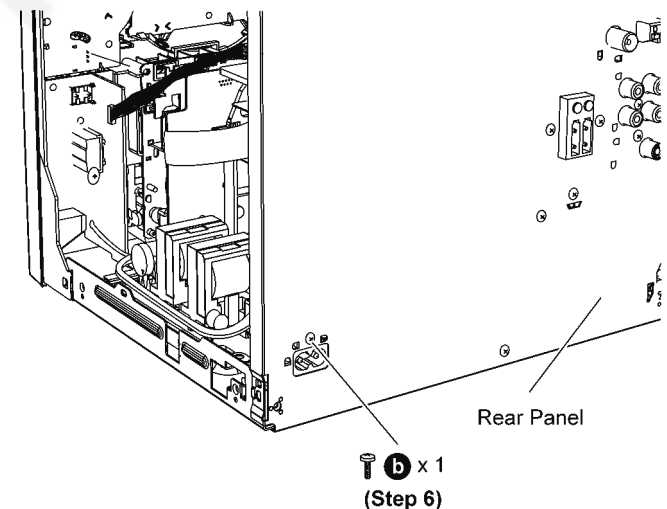


**Step 6** Remove 1 screw at the rear panel.

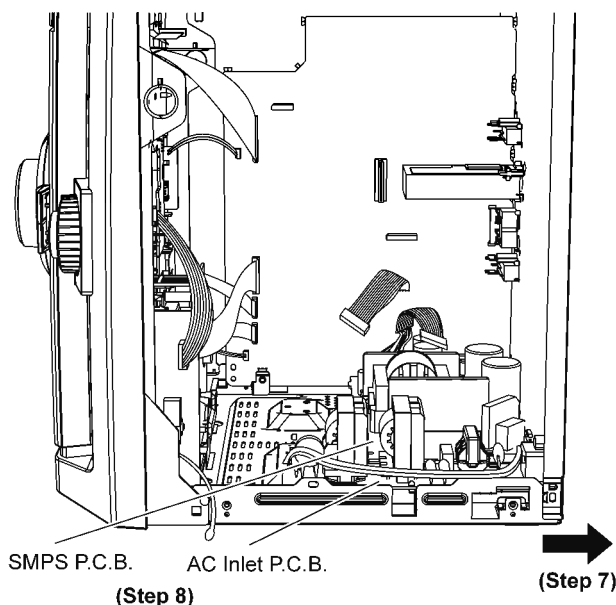

**Step 7** Move the rear panel slightly backward as arrow shown.  
**Step 8** Lift up the AC Inlet P.C.B. together with the SMPS P.C.B..

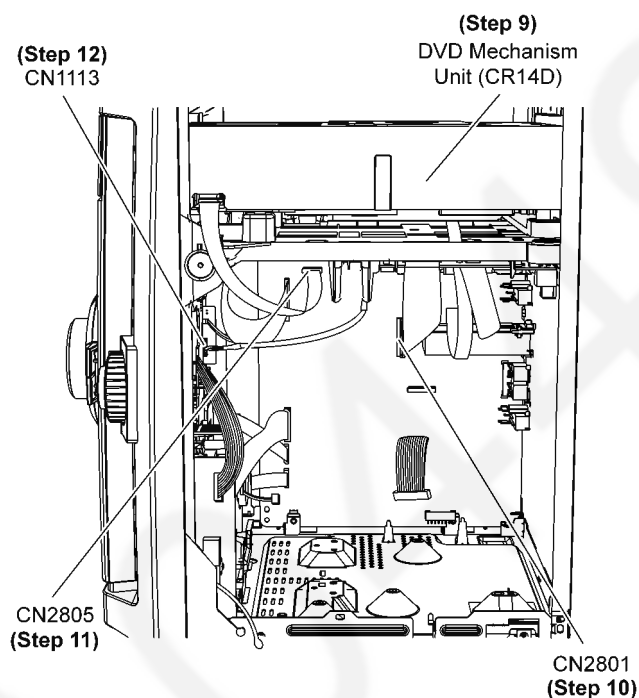

**Step 9** Position DVD Mechanism unit (CR14D) according to the diagram shown.  
**Step 10** Connect 50P FFC cable at the connector (CN2801) on Main P.C.B..  
**Step 11** Connect 11P FFC cable at the connector (CN2805) on Main P.C.B..  
**Step 12** Connect 5P cable at the connector (CN1113) on USB P.C.B..

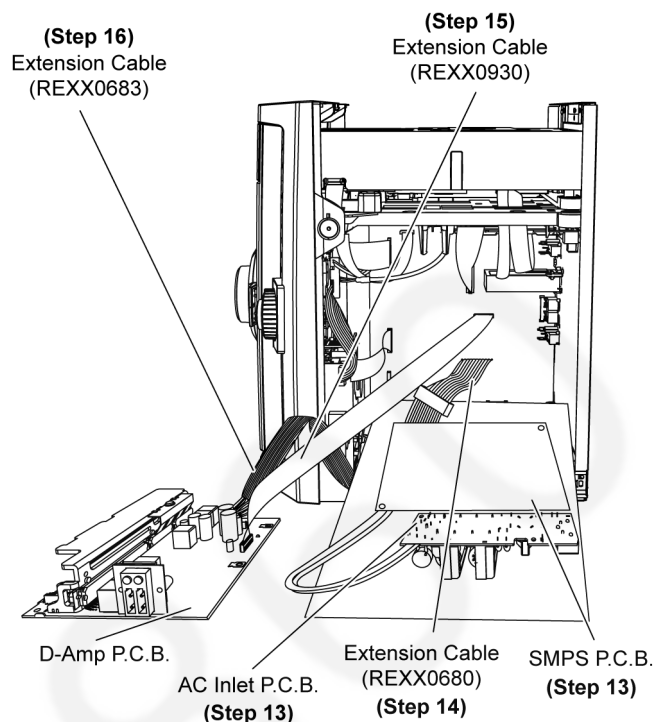

**Step 13** Position SMPS and AC Inlet P.C.B. according to the diagram shown.  
**Step 14** Attach original cable with extension cable (REXX0680) (11P cable from ZJ2701 to CN5050).  
**Step 15** Connect extension cable (REXX0930) (17P cable from CN2808 to CN5050).  
**Step 16** Attach original cable with extension cable (REXX0683) (8P cable from H5801 to CN5500).  
**Step 17** Service and repair AC Inlet P.C.B. and SMPS P.C.B. respectively.

## 12 Measurements and Adjustments

### 12.1. Cassette Deck

1. Input point: Not Applicable.
2. Input signal: Test Tape (QZZCWAT).
3. Measuring point: Pin 3 (signal) & Pin 2 (ground at Deck P.C.B.).
4. Mode: Tape.
5. Preparation Items:
  - a. Test tape (as described in item 2).
  - b. Headphone Jack output jig (Figure 2).
  - c. Frequency indicator.
  - d. Electrical voltmeter.
  - e. Digital frequency counter.
  - f. Oscilloscope.

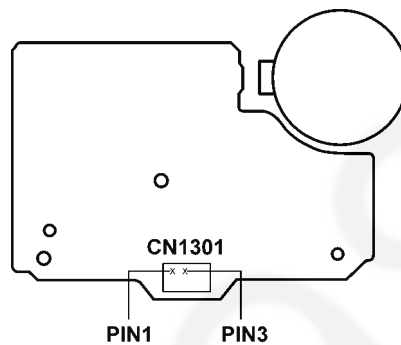


Figure 1

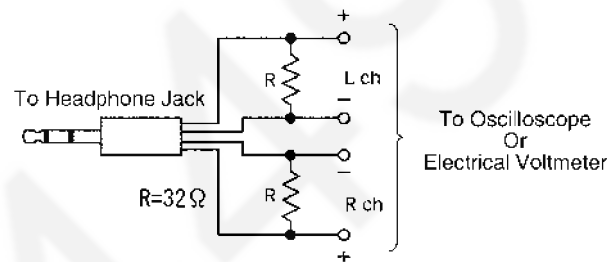


Figure 2

### 12.2. Tape Speed Adjustment

1. Connect the frequency indicator to the R-ch of the headphone output jig (Figure 3).
2. Insert the test tape (QZZCWAT).
3. Playback the middle portion of the test tape (QZZCWAT).
4. Adjust the motor screw so that the following output level is produced. (Figure 4)  
(Adjustment Range:  $3,000 \pm 90\text{Hz}$ ).




Figure 3




Figure 4

### 12.3. Bias Voltage Check

1. Connect the electrical voltmeter to Pin 3 (signal) & Pin 1 (ground) (Figure 5).
2. Set to "TAPE" mode.
3. Insert a normal blank cassette tape (QZZCRA).
4. While pressing and holding down [● REC] button, press [TAPE(TAPE ►)] button to pause the recording mode. (Repeat pressing the buttons till the recording pause mode is activated.)
5. Check that the output level is within the standard range.  
Standard Range:  $14 \pm 4\text{mV}$

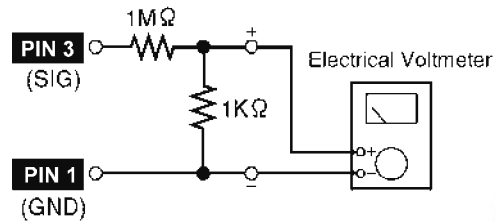


Figure 5

### 12.4. Bias Frequency Check

1. Connect the digital frequency counter to Pin 3 (signal) & Pin 1 (ground) (Figure 6).
2. Set to "TAPE" mode.
3. Insert a normal blank cassette tape (QZZCRA) and press [● REC] on main unit.
4. Check that the output frequency is within the standard range (standard value:  $100 \pm 8\text{kHz}$ ).

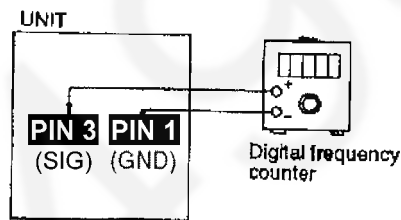


Figure 6

# 13 Voltage & Waveform Chart

## Note:

- Indication Voltage Values are in standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard.
- Therefore, there may exist some errors in voltage values, depending on the internal impedance of the DC circuit tester.
- Circuit voltage and waveform described herein shall be regarded as reference information when probing defect point because it may differ from actual measuring value due to difference of Measuring instrument and its measuring condition and product itself.

## 13.1. DVD Module P.C.B. (1/3)

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  | 18  | 19  | 20  |
| CD PLAY | 0.1    | 0.1 | 0.1 | 3.4 | 0.1 | 3.4 | 0.1 | 0.1 | 1.7 | 0.1 | 0.2 | 0.7 | 0.7 | 0.6 | 0.1 | 3.4 | 0.4 | 0.8 | 0.1 | 1.3 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 21     | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30  | 31  | 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  | 40  |
| CD PLAY | 1.5    | 1.3 | 2.0 | 1.7 | 2.5 | 2.6 | 2.6 | 1.8 | 0.9 | 1.1 | 3.4 | 0.1 | 3.4 | 2.4 | 1.3 | 1.3 | 1.8 | 2.6 | 2.6 | 1.4 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 41     | 42  | 43  | 44  | 45  | 46  | 47  | 48  | 49  | 50  | 51  | 52  | 53  | 54  | 55  | 56  | 57  | 58  | 59  | 60  |
| CD PLAY | 1.9    | 2.7 | 0.1 | 1.3 | 0.1 | 3.3 | 3.3 | 3.4 | 3.4 | 1.7 | 0.1 | 3.4 | 1.9 | 2.8 | 3.0 | 3.4 | 3.4 | 3.4 | 0.6 | 3.4 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 61     | 62  | 63  | 64  | 65  | 66  | 67  | 68  | 69  | 70  | 71  | 72  | 73  | 74  | 75  | 76  | 77  | 78  | 79  | 80  |
| CD PLAY | 1.6    | 0.1 | 0.1 | 0.9 | 3.4 | 2.0 | 1.7 | 0.1 | 3.4 | 3.1 | 0.1 | 3.4 | 3.4 | 0.1 | 0.3 | 0.1 | 3.4 | 3.4 | 3.4 | 3.4 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 81     | 82  | 83  | 84  | 85  | 86  | 87  | 88  | 89  | 90  | 91  | 92  | 93  | 94  | 95  | 96  | 97  | 98  | 99  | 100 |
| CD PLAY | 0.1    | 0.1 | 1.3 | 3.4 | 0.9 | 2.4 | 0.1 | 1.9 | 0.1 | 0.5 | 1.8 | 3.4 | 1.4 | 1.4 | 1.9 | 1.9 | 1.7 | 1.7 | 1.7 | 1.7 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 101    | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 | 111 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 |
| CD PLAY | 0      | 0   | 0.3 | 0.1 | 0.3 | 2.1 | 3.3 | 0.1 | 2.3 | 1.7 | 2.5 | 2.5 | 2.5 | 2.5 | 2.5 | 2.5 | 2.4 | 2.4 | 2.4 | 2.4 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 121    | 122 | 123 | 124 | 125 | 126 | 127 | 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 136 | 137 | 138 | 139 | 140 |
| CD PLAY | 1.9    | 2.0 | 1.7 | 1.7 | 0.1 | 1.7 | 1.8 | 3.4 | 0.9 | 0.9 | 0.4 | 3.4 | 2.4 | 1.0 | 1.0 | 2.4 | 0   | 0.4 | 0.9 | 0   |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 141    | 142 | 143 | 144 | 145 | 146 | 147 | 148 | 149 | 150 | 151 | 152 | 153 | 154 | 155 | 156 | 157 | 158 | 159 | 160 |
| CD PLAY | 3.4    | 3.4 | 0   | 0.1 | 0.1 | 0.1 | 3.4 | 1.6 | 1.7 | 1.7 | 0.9 | 1.7 | 0.1 | 3.4 | 1.5 | 1.6 | 1.5 | 1.3 | 2.9 | 3.1 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 161    | 162 | 163 | 164 | 165 | 166 | 167 | 168 | 169 | 170 | 171 | 172 | 173 | 174 | 175 | 176 | 177 | 178 | 179 | 180 |
| CD PLAY | 2.9    | 2.8 | 3.1 | 2.8 | 0.1 | 3.4 | 2.8 | 3.1 | 3.1 | 2.9 | 2.9 | 3.2 | 0.1 | 3.4 | 2.8 | 3.1 | 3.1 | 2.8 | 2.7 | 2.7 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 181    | 182 | 183 | 184 | 185 | 186 | 187 | 188 | 189 | 190 | 191 | 192 | 193 | 194 | 195 | 196 | 197 | 198 | 199 | 200 |
| CD PLAY | 3.3    | 0.1 | 1.5 | 3.4 | 1.6 | 0.1 | 1.3 | 3.3 | 3.3 | 3.2 | 3.6 | 0.1 | 1.9 | 0.1 | 0.1 | 3.4 | 1.6 | 0.1 | 0.1 | 1.6 |

| REF NO. | IC8001 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |  |  |  |  |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|--|--|--|
| MODE    | 201    | 202 | 203 | 204 | 205 | 206 | 207 | 208 | 209 | 210 | 211 | 212 | 213 | 214 | 215 | 216 |  |  |  |  |
| CD PLAY | 0.1    | 1.7 | 0.3 | 0.1 | 3.4 | 1.7 | 0.3 | 1.5 | 1.9 | 0.1 | 1.3 | 2.5 | 2.9 | 2.8 | 3.4 | 0   |  |  |  |  |

| REF NO. | IC8051 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  | 18  | 19  | 20  |
| CD PLAY | 3.4    | 3.2 | 3.4 | 3.2 | 3.2 | 3.2 | 3.1 | 3.4 | 3.2 | 3.2 | 0.1 | 3.2 | 0.1 | 3.0 | 3.4 | 3.3 | 3.3 | 3.3 | 3.3 | 1.9 |

SA-VK480EE DVD MODULE P.C.B.

### 13.2. DVD Module P.C.B. (2/3)

|         |        |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| REF NO. | IC8051 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 21     | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30  | 31  | 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  | 40  |
| CD PLAY | 1.6    | 0.1 | 0.2 | 0.5 | 0.6 | 1.5 | 3.4 | 0.1 | 0   | 1.9 | 1.7 | 1.6 | 0.1 | 0.1 | 0.1 | 0.1 | 3.4 | 1.6 | 2.9 | 0   |
| REF NO. | IC8051 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 41     | 42  | 43  | 44  | 45  | 46  | 47  | 48  | 49  | 50  | 51  | 52  | 53  | 54  |     |     |     |     |     |     |
| CD PLAY | 0.1    | 3.2 | 3.4 | 3.2 | 3.2 | 0.1 | 3.2 | 3.2 | 3.4 | 3.2 | 3.1 | 0.1 | 3.1 | 0.1 |     |     |     |     |     |     |
| REF NO. | IC8111 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   |     |     |     |     |     |     |     |     |     |     |     |     |     |
| CD PLAY | 5.1    | 1.9 | 5.1 | 0.1 | 1.0 | 3.4 | 1.3 |     |     |     |     |     |     |     |     |     |     |     |     |     |
| REF NO. | IC8251 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  | 18  | 19  | 20  |
| CD PLAY | 1.7    | 1.7 | 1.7 | 2.3 | 2.3 | 2.2 | 0.1 | 5.1 | 3.4 | 0.1 | 2.4 | 2.8 | 2.5 | 2.7 | 4.2 | 4.3 | 5.4 | 3.1 | 0.1 | 3.4 |
| REF NO. | IC8251 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 21     | 22  | 23  | 24  | 25  | 26  | 27  | 28  |     |     |     |     |     |     |     |     |     |     |     |     |
| CD PLAY | 8.9    | 8.8 | 1.8 | 1.7 | 1.7 | 1.7 | 3.4 | 3.4 |     |     |     |     |     |     |     |     |     |     |     |     |
| REF NO. | IC8420 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  |     |     |     |     |
| CD PLAY | 1.7    | 1.7 | 0.9 | 1.7 | 3.1 | 3.4 | 3.4 | 3.4 | 0.9 | 0.1 | 0.1 | 5.2 | 5.2 | 5.2 | 0   | 0   |     |     |     |     |
| REF NO. | IC8422 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  |     |     |     |     |
| CD PLAY | 2.6    | 2.6 | 0   | 2.6 | 0   | 5.2 | 5.2 | 0   | 1.4 | 1.7 | 1.6 | 1.7 | 3.4 | 0   | 5.2 | 0   |     |     |     |     |
| REF NO. | IC8601 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| CD PLAY | 3.1    | 1.3 | 0.1 | 0.1 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| REF NO. | IC8606 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| CD PLAY | 3.1    | 3.4 | 0.1 | 0.1 | 0   |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| REF NO. | IC8611 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   |     |     |     |     |     |     |     |     |     |     |     |     |
| CD PLAY | 0.1    | 0.1 | 0.1 | 0.1 | 3.3 | 3.3 | 0.1 | 3.4 |     |     |     |     |     |     |     |     |     |     |     |     |
| REF NO. | IC8651 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  | 14  | 15  | 16  | 17  | 18  | 19  | 20  |
| CD PLAY | 1.3    | 2.0 | 1.8 | 2.5 | 2.6 | 2.6 | 1.8 | 0.9 | 1.1 | 0.1 | 3.4 | 3.1 | 3.4 | 3.4 | 1.5 | 3.4 | 1.3 | 1.3 | 1.9 | 2.6 |
| REF NO. | IC8651 |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| MODE    | 21     | 22  | 23  | 24  | 25  | 26  | 27  | 28  | 29  | 30  | 31  | 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  | 40  |
| CD PLAY | 2.6    | 1.4 | 1.9 | 2.7 | 2.6 | 2.9 | 0.1 | 2.8 | 2.5 | 1.3 | 2.0 | 1.7 | 2.5 | 2.6 | 2.6 | 1.8 | 3.4 | 0.9 | 1.6 | 1.8 |

SA-VK480EE DVD MODULE P.C.B.

### 13.3. DVD Module P.C.B. (3/3)

|         |        |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
|---------|--------|-----|-----|-----|-------|-----|-----|-----|--------|-----|-----|-----|--------|-----|-----|-----|--------|-----|-----|-----|
| REF NO. | IC8651 |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| MODE    | 41     | 42  | 43  | 44  | 45    | 46  | 47  | 48  |        |     |     |     |        |     |     |     |        |     |     |     |
| CD PLAY | 2.6    | 2.5 | 1.3 | 1.9 | 2.7   | 0.1 | 3.4 | 1.5 |        |     |     |     |        |     |     |     |        |     |     |     |
| REF NO. | IC8691 |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5     |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| CD PLAY | 3.0    | 3.0 | 0.1 | 4.6 | 0.1   |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| REF NO. | IC8695 |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5     |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| CD PLAY | 0.1    | 2.8 | 2.8 | 5.2 | 4.3   |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| REF NO. | IC9001 |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5     | 6   | 7   | 8   | 9      | 10  | 11  | 12  | 13     | 14  | 15  | 16  | 17     | 18  | 19  | 20  |
| CD PLAY | 0      | 2.5 | 2.7 | 1.9 | 1.3   | 2.5 | 2.5 | 1.5 | 1.3    | 0.1 | 2.8 | 1.3 | 1.8    | 2.6 | 2.6 | 1.4 | 1.8    | 2.7 | 2.6 | 3.4 |
| REF NO. | IC9002 |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5     | 6   | 7   | 8   | 9      | 10  | 11  | 12  | 13     | 14  | 15  | 16  | 17     | 18  | 19  | 20  |
| CD PLAY | 0.1    | 0.9 | 1.8 | 2.6 | 2.6   | 2.5 | 1.7 | 2.0 | 1.3    | 0.1 | 2.9 | 1.3 | 2.0    | 1.8 | 2.5 | 2.6 | 2.5    | 1.8 | 0.9 | 3.2 |
| REF NO. | IC9003 |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5     | 6   |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| CD PLAY | 1.6    | 0.1 | 1.7 | 1.7 | 3.4   | 1.7 |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| REF NO. | IC9005 |     |     |     |       |     |     |     |        |     |     |     |        |     |     |     |        |     |     |     |
| MODE    | 1      | 2   | 3   | 4   | 5     | 6   | 7   | 8   |        |     |     |     |        |     |     |     |        |     |     |     |
| CD PLAY | 0.1    | 5.2 | 5.2 | 0.1 | 3.4   | 2.4 | 1.7 | 1.7 |        |     |     |     |        |     |     |     |        |     |     |     |
| REF NO. | Q8321  |     |     |     | Q8325 |     |     |     | Q8331  |     |     |     | Q8335  |     |     |     | Q8341  |     |     |     |
| MODE    | E      | C   | B   |     | E     | C   | B   |     | E      | C   | B   |     | E      | C   | B   |     | E      | C   | B   |     |
| CD PLAY | 1.0    | 0   | 0.4 |     | 1.5   | 0   | 0.9 |     | 1.1    | 0   | 0.4 |     | 1.5    | 0   | 0.9 |     | 1.5    | 0   | 0.9 |     |
| REF NO. | Q8551  |     |     |     | Q8552 |     |     |     | Q8561  |     |     |     | Q8562  |     |     |     | Q8563  |     |     |     |
| MODE    | E      | C   | B   |     | E     | C   | B   |     | E      | C   | B   |     | E      | C   | B   |     | E      | C   | B   |     |
| CD PLAY | 0.1    | 5.1 | 0.1 |     | 5.1   | 0.1 | 5.1 |     | 1.6    | 3.7 | 2.2 |     | 4.3    | 1.9 | 3.7 |     | 0.1    | 0.3 | 0.1 |     |
| REF NO. | Q8564  |     |     |     | Q8565 |     |     |     | QR8420 |     |     |     | QR8421 |     |     |     | QR9030 |     |     |     |
| MODE    | E      | C   | B   |     | E     | C   | B   |     | E      | C   | B   |     | E      | C   | B   |     | E      | C   | B   |     |
| CD PLAY | 0.1    | 0.1 | 3.3 |     | 0.1   | 0.1 | 0.7 |     | 0      | 4.4 | 0.1 |     | 0      | 3.3 | 0.1 |     | 3.4    | 0.1 | 3.4 |     |

SA-VK480EE DVD MODULE P.C.B.

### 13.4. Main P.C.B. (1/3)

| REF NO. | IC2002 |   |     |   |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|---|-----|---|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2 | 3   | 4 | 5   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 5.2    | 0 | 5.0 | 0 | 3.4 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 5.2    | 0 | 5.0 | 0 | 3.4 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC2103 |     |     |   |     |     |     |     |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-----|-----|---|-----|-----|-----|-----|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2   | 3   | 4 | 5   | 6   | 7   | 8   |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 4.6    | 4.6 | 4.6 | 0 | 4.6 | 4.6 | 4.6 | 9.1 |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 4.6    | 4.6 | 4.6 | 0 | 4.6 | 4.6 | 4.6 | 9.1 |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC2801 |   |   |     |     |     |   |   |   |     |     |     |     |    |    |     |     |     |    |     |
|---------|--------|---|---|-----|-----|-----|---|---|---|-----|-----|-----|-----|----|----|-----|-----|-----|----|-----|
| MODE    | 1      | 2 | 3 | 4   | 5   | 6   | 7 | 8 | 9 | 10  | 11  | 12  | 13  | 14 | 15 | 16  | 17  | 18  | 19 | 20  |
| CD PLAY | 0.3    | 0 | 0 | 0   | 5.0 | 0   | 0 | 0 | 0 | 0.8 | 0.7 | 5.1 | 2.6 | 0  | 0  | 5.1 | 5.1 | 5.1 | 0  | 3.4 |
| STANDBY | 0.3    | 0 | 0 | 5.1 | 5.0 | 5.2 | 0 | 0 | 0 | 1.0 | 0.7 | 5.1 | 2.6 | 0  | 0  | 5.1 | 5.1 | 5.1 | 0  | 3.4 |

| REF NO. | IC2801 |     |    |    |    |    |     |    |     |     |    |    |     |     |     |     |     |    |    |     |
|---------|--------|-----|----|----|----|----|-----|----|-----|-----|----|----|-----|-----|-----|-----|-----|----|----|-----|
| MODE    | 21     | 22  | 23 | 24 | 25 | 26 | 27  | 28 | 29  | 30  | 31 | 32 | 33  | 34  | 35  | 36  | 37  | 38 | 39 | 40  |
| CD PLAY | 4.9    | 4.9 | 0  | 0  | 0  | 0  | 5.1 | 0  | 5.0 | 5.0 | 0  | 0  | 5.1 | 1.8 | 2.4 | 4.4 | 4.6 | 0  | 0  | 0   |
| STANDBY | 5.0    | 5.0 | 0  | 0  | 0  | 0  | 5.1 | 0  | 5.0 | 5.0 | 0  | 0  | 5.1 | 2.0 | 2.4 | 4.3 | 4.6 | 0  | 0  | 4.9 |

| REF NO. | IC2801 |    |    |    |    |     |     |     |    |    |     |    |     |     |    |    |    |    |    |    |
|---------|--------|----|----|----|----|-----|-----|-----|----|----|-----|----|-----|-----|----|----|----|----|----|----|
| MODE    | 41     | 42 | 43 | 44 | 45 | 46  | 47  | 48  | 49 | 50 | 51  | 52 | 53  | 54  | 55 | 56 | 57 | 58 | 59 | 60 |
| CD PLAY | 0      | 0  | 0  | 0  | 0  | 5.0 | 5.1 | 5.1 | 0  | 0  | 5.1 | 0  | 5.1 | 5.1 | 0  | 0  | 0  | 0  | 0  | 0  |
| STANDBY | 0      | 0  | 0  | 0  | 0  | 5.0 | 5.0 | 5.1 | 0  | 0  | 5.1 | 0  | 5.1 | 5.1 | 0  | 0  | 0  | 0  | 0  | 0  |

| REF NO. | IC2801 |     |     |    |     |    |     |    |    |    |    |     |     |     |    |    |    |     |    |    |
|---------|--------|-----|-----|----|-----|----|-----|----|----|----|----|-----|-----|-----|----|----|----|-----|----|----|
| MODE    | 61     | 62  | 63  | 64 | 65  | 66 | 67  | 68 | 69 | 70 | 71 | 72  | 73  | 74  | 75 | 76 | 77 | 78  | 79 | 80 |
| CD PLAY | 0.1    | 5.1 | 5.1 | 0  | 5.1 | 0  | 5.1 | 0  | 0  | 0  | 0  | 3.2 | 0.5 | 4.4 | 0  | 0  | 0  | 0.2 | 0  | 0  |
| STANDBY | 0.1    | 5.1 | 5.1 | 0  | 5.1 | 0  | 5.1 | 0  | 0  | 0  | 0  | 3.2 | 0.6 | 4.4 | 0  | 0  | 0  | 0.2 | 0  | 0  |

| REF NO. | IC2801 |    |     |     |     |     |     |     |     |     |     |     |     |     |     |    |     |     |     |     |
|---------|--------|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|-----|-----|-----|-----|
| MODE    | 81     | 82 | 83  | 84  | 85  | 86  | 87  | 88  | 89  | 90  | 91  | 92  | 93  | 94  | 95  | 96 | 97  | 98  | 99  | 100 |
| CD PLAY | 0.2    | 0  | 5.1 | 0.1 | 5.0 | 0.1 | 5.1 | 3.7 | 2.6 | 5.1 | 3.5 | 5.1 | 5.1 | 3.1 | 5.1 | 0  | 5.1 | 5.1 | 5.1 | 0   |
| STANDBY | 0.2    | 0  | 5.1 | 0.2 | 5.0 | 0.2 | 5.1 | 3.7 | 2.6 | 5.1 | 3.5 | 5.1 | 5.1 | 3.1 | 5.1 | 0  | 5.1 | 5.1 | 5.1 | 0   |

| REF NO. | IC2802 |     |   |   |     |     |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-----|---|---|-----|-----|---|---|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2   | 3 | 4 | 5   | 6   | 7 | 8 |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 0      | 5.1 | 0 | 0 | 1.8 | 1.8 | 0 | 0 |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 0      | 5.1 | 0 | 0 | 1.8 | 1.8 | 0 | 0 |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC2803 |     |     |     |     |     |     |     |     |     |    |    |    |     |     |     |     |     |     |     |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|----|-----|-----|-----|-----|-----|-----|-----|
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11 | 12 | 13 | 14  | 15  | 16  | 17  | 18  | 19  | 20  |
| CD PLAY | 4.5    | 4.5 | 4.6 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 | 0  | 0  | 0  | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 |
| STANDBY | 4.5    | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 0  | 0  | 0  | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 |

| REF NO. | IC2803 |     |     |     |     |     |     |    |    |     |     |     |     |     |     |     |     |     |     |    |
|---------|--------|-----|-----|-----|-----|-----|-----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|
| MODE    | 21     | 22  | 23  | 24  | 25  | 26  | 27  | 28 | 29 | 30  | 31  | 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  | 40 |
| CD PLAY | 4.6    | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 0  | 0  | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 9.1 | 5.1 | 0  |
| STANDBY | 4.6    | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 0  | 0  | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 4.6 | 9.2 | 5.1 | 0  |

SA-VK480EE MAIN P.C.B.

### 13.5. Main P.C.B. (2/3)

| REF NO. | IC2803 |      |     |       |      |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
|---------|--------|------|-----|-------|------|-----|-------|------|-----|-------|------|-----|-------|------|-----|-----|-----|-----|----|-----|
| MODE    | 41     | 42   | 43  | 44    | 45   | 46  | 47    | 48   | 49  | 50    | 51   | 52  | 53    | 54   | 55  | 56  |     |     |    |     |
| CD PLAY | 0      | 4.6  | 4.6 | 4.6   | 4.6  | 4.6 | 4.6   | 4.5  | 4.6 | 4.5   | 4.5  | 4.6 | 4.6   | 4.6  | 4.6 | 4.6 |     |     |    |     |
| STANDBY | 0      | 4.6  | 4.6 | 4.6   | 4.6  | 4.6 | 4.6   | 4.6  | 4.6 | 4.5   | 4.5  | 4.6 | 4.6   | 4.6  | 4.6 | 4.6 |     |     |    |     |
| REF NO. | IC2804 |      |     |       |      |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
| MODE    | 1      | 2    | 3   | 4     | 5    | 6   | 7     | 8    |     |       |      |     |       |      |     |     |     |     |    |     |
| CD PLAY | 0      | 0    | 0   | -9.1  | 0    | 0   | 0     | 9.1  |     |       |      |     |       |      |     |     |     |     |    |     |
| STANDBY | 0      | 0    | 0   | -9.1  | 0    | 0   | 0     | 9.2  |     |       |      |     |       |      |     |     |     |     |    |     |
| REF NO. | IC2900 |      |     |       |      |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
| MODE    | 1      | 2    | 3   | 4     | 5    | 6   | 7     | 8    | 9   | 10    | 11   | 12  | 13    | 14   | 15  | 16  | 17  | 18  | 19 | 20  |
| CD PLAY | 5.1    | 0    | 0   | 2.2   | 4.9  | 1.6 | 0     | 1.6  | 2.2 | 0     | 1.7  | 0   | 2.2   | 4.9  | 2.2 | 5.1 | 2.3 | 2.3 | 0  | 2.3 |
| STANDBY | 5.1    | 0    | 0   | 2.2   | 4.9  | 1.5 | 0     | 1.5  | 2.2 | 0     | 1.5  | 0   | 2.2   | 4.9  | 2.2 | 5.1 | 2.3 | 2.3 | 0  | 2.3 |
| REF NO. | IC2900 |      |     |       |      |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
| MODE    | 21     | 22   | 23  | 24    | 25   | 26  | 27    | 28   | 29  | 30    | 31   | 32  |       |      |     |     |     |     |    |     |
| CD PLAY | 2.3    | 0    | 0   | 1.6   | 0    | 1.5 | 0     | 0    | 1.6 | 1.6   | 0    | 2.3 |       |      |     |     |     |     |    |     |
| STANDBY | 2.3    | 0    | 0   | 1.3   | 0    | 1.3 | 0     | 0    | 1.4 | 1.4   | 0    | 2.3 |       |      |     |     |     |     |    |     |
| REF NO. | IC4000 |      |     |       |      |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
| MODE    | 1      | 2    | 3   | 4     | 5    |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
| CD PLAY | 11.8   | 5.2  | 0   | 1.0   | 2.5  |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
| STANDBY | 12.6   | 5.2  | 0   | 1.0   | 2.5  |     |       |      |     |       |      |     |       |      |     |     |     |     |    |     |
| REF NO. | Q1306  |      |     | Q1307 |      |     | Q1315 |      |     | Q2002 |      |     | Q2003 |      |     |     |     |     |    |     |
| MODE    | E      | C    | B   | E     | C    | B   | E     | C    | B   | E     | C    | B   | E     | C    | B   |     |     |     |    |     |
| CD PLAY | 0      | 0    | 0.6 | 0     | 5.1  | 0   | 9.1   | 0    | 9.1 | 9.1   | -1.4 | 9.1 | 0     | 9.1  | 0   |     |     |     |    |     |
| STANDBY | 0      | 0    | 0.6 | 0     | 5.1  | 0   | 9.2   | 0    | 9.1 | 9.2   | -1.2 | 9.2 | 0     | 9.2  | 0   |     |     |     |    |     |
| REF NO. | Q2004  |      |     | Q2005 |      |     | Q2011 |      |     | Q2012 |      |     | Q2051 |      |     |     |     |     |    |     |
| MODE    | E      | C    | B   | E     | C    | B   | E     | C    | B   | E     | C    | B   | E     | C    | B   |     |     |     |    |     |
| CD PLAY | 0      | 1.6  | 0   | 3.4   | 1.7  | 5.1 | 0     | 9.1  | 0   | 0     | 9.1  | 0   | 5.2   | -6.1 | 4.6 |     |     |     |    |     |
| STANDBY | 0      | 1.7  | 0   | 3.4   | 1.7  | 5.1 | 0     | 9.2  | 0   | 0     | 9.2  | 0   | 2.5   | 2.4  | 0.9 |     |     |     |    |     |
| REF NO. | Q2052  |      |     |       |      |     | Q2142 |      |     | Q2242 |      |     |       |      |     |     |     |     |    |     |
| MODE    | 1      | 2    | 3   | 4     | 5    | 6   | E     | C    | B   | E     | C    | B   |       |      |     |     |     |     |    |     |
| CD PLAY | 0      | -6.1 | 0   | 0     | -6.1 | 0   | 0     | 0    | 0   | 0     | 0    | 0   |       |      |     |     |     |     |    |     |
| STANDBY | 0      | 0.8  | 0   | 0     | 0.8  | 0   | 0     | 0    | 0   | 0     | 0    | 0   |       |      |     |     |     |     |    |     |
| REF NO. | Q2366  |      |     |       |      |     | Q2501 |      |     | Q2502 |      |     |       |      |     |     |     |     |    |     |
| MODE    | 1      | 2    | 3   | 4     | 5    | 6   | E     | C    | B   | 1     | 2    | 3   | 4     | 5    | 6   |     |     |     |    |     |
| CD PLAY | 0      | -6.1 | 0   | 0     | -6.1 | 0   | 0     | -6.1 | 0   | 0     | -6.1 | 0   | 0     | -6.1 | 0   |     |     |     |    |     |
| STANDBY | 0      | 0.8  | 0   | 0     | 0.7  | 0   | 1.9   | 1.8  | 0   | 0     | 0.7  | 0   | 0     | 0.7  | 0   |     |     |     |    |     |
| REF NO. | Q2600  |      |     | Q2701 |      |     | Q2702 |      |     | Q2730 |      |     |       |      |     |     |     |     |    |     |
| MODE    | E      | C    | B   | E     | C    | B   | E     | C    | B   | 1     | 2    | 3   | 4     | 5    | 6   |     |     |     |    |     |
| CD PLAY | 0      | 5.1  | 0   | 0     | 0    | 5.0 | 5.2   | 5.1  | 4.4 | 0     | -6.1 | 0   | 0     | -6.1 | 0   |     |     |     |    |     |
| STANDBY | 0      | 5.1  | 0   | 0     | 0    | 5.0 | 5.2   | 5.1  | 4.4 | 0     | 0.7  | 0   | 0     | 0.7  | 0   |     |     |     |    |     |

SA-VK480EE MAIN P.C.B.

### 13.6. Main P.C.B. (3/3)

| REF NO. | Q2732 |      |      |  | Q2800 |     |     |  | Q2801 |   |     |  | Q2810 |     |     |  | Q2900 |      |   |  |
|---------|-------|------|------|--|-------|-----|-----|--|-------|---|-----|--|-------|-----|-----|--|-------|------|---|--|
| MODE    | E     | C    | B    |  | E     | C   | B   |  | E     | C | B   |  | E     | C   | B   |  | E     | C    | B |  |
| CD PLAY | 0     | -9.7 | -0.6 |  | 3.7   | 3.7 | 5.0 |  | 0     | 0 | 0.8 |  | 5.0   | 9.1 | 5.6 |  | 0     | 11.6 | 0 |  |
| STANDBY | 0     | -9.7 | -0.6 |  | 3.7   | 3.7 | 5.0 |  | 0     | 0 | 0.8 |  | 5.0   | 9.2 | 5.6 |  | 0     | 12.4 | 0 |  |

| REF NO. | Q2912 |     |     |  | Q2980 |     |     |  | Q4002 |       |      |  | Q4003 |      |     |  | Q4006 |     |     |  |
|---------|-------|-----|-----|--|-------|-----|-----|--|-------|-------|------|--|-------|------|-----|--|-------|-----|-----|--|
| MODE    | E     | C   | B   |  | E     | C   | B   |  | E     | C     | B    |  | E     | C    | B   |  | E     | C   | B   |  |
| CD PLAY | 0     | 0   | 4.4 |  | 1.9   | 5.2 | 2.6 |  | -9.1  | -11.6 | -9.7 |  | 9.1   | 11.7 | 9.8 |  | 5.3   | 1.5 | 5.0 |  |
| STANDBY | 0     | 5.2 | 0   |  | 1.9   | 5.2 | 2.6 |  | -9.1  | -11.6 | -9.7 |  | 9.1   | 12.6 | 9.8 |  | 5.3   | 1.6 | 5.0 |  |

| REF NO. | Q4007 |     |     |  | Q5100 |      |     |  | Q5102 |     |   |  | QR4002 |     |     |  | QR4003 |     |   |  |
|---------|-------|-----|-----|--|-------|------|-----|--|-------|-----|---|--|--------|-----|-----|--|--------|-----|---|--|
| MODE    | E     | C   | B   |  | E     | C    | B   |  | E     | C   | B |  | E      | C   | B   |  | E      | C   | B |  |
| CD PLAY | 7.5   | 9.1 | 8.2 |  | 9.1   | 11.7 | 9.8 |  | 0     | 5.1 | 0 |  | 5.2    | 5.6 | 5.1 |  | 0.3    | 5.1 | 0 |  |
| STANDBY | 7.5   | 9.2 | 8.2 |  | 9.2   | 12.6 | 9.8 |  | 0     | 5.2 | 0 |  | 5.2    | 5.4 | 5.1 |  | 0.4    | 5.1 | 0 |  |

| REF NO. | QR4004 |     |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-----|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | E      | C   | B   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 0      | 5.1 | 0.3 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 0      | 5.1 | 0.4 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

SA-VK480EE MAIN P.C.B.

### 13.7. Panel P.C.B.

| REF NO. | IC6601 |     |     |     |     |     |     |     |     |    |    |    |     |       |       |       |       |       |       |       |
|---------|--------|-----|-----|-----|-----|-----|-----|-----|-----|----|----|----|-----|-------|-------|-------|-------|-------|-------|-------|
| MODE    | 1      | 2   | 3   | 4   | 5   | 6   | 7   |     | 9   | 10 | 11 | 12 | 13  | 14    | 15    | 16    | 17    | 18    | 19    | 20    |
| CD PLAY | 0      | 4.9 | 4.9 | 4.9 | 2.8 | 1.9 | 0.6 | 4.0 | 3.2 | 0  | 0  | 0  | 5.0 | -15.5 | -15.4 | -19.5 | -23.5 | -21.5 | -23.5 | -17.5 |
| STANDBY | 0      | 4.9 | 4.9 | 4.9 | 2.8 | 1.6 | 0.6 | 4.4 | 3.2 | 0  | 0  | 0  | 5.0 | -15.5 | -15.5 | -11.5 | -21.6 | -23.6 | -21.6 | -15.6 |

| REF NO. | IC6601 |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |       |
|---------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| MODE    | 21     | 22    | 23    | 24    | 25    | 26    | 27    | 28    | 29    | 30    | 31    | 32    | 33    | 34    | 35    | 36    | 37    | 38    | 39    | 40    |
| CD PLAY | -13.5  | -21.5 | -21.5 | -19.6 | -15.4 | -11.5 | -15.5 | -23.6 | -17.5 | -24.1 | -21.9 | -21.8 | -21.9 | -21.9 | -21.8 | -21.8 | -21.8 | -21.8 | -21.8 | -21.8 |
| STANDBY | -13.5  | -21.6 | -21.6 | -19.6 | -15.5 | -11.5 | -15.5 | -23.6 | -21.6 | -24.2 | -21.9 | -21.9 | -21.9 | -21.9 | -21.9 | -21.9 | -21.9 | -21.9 | -21.9 | -21.9 |

| REF NO. | IC6601 |       |      |    |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-------|------|----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 41     | 42    | 43   | 44 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | -21.8  | -21.8 | -5.0 | 0  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | -21.9  | -21.9 | -5.0 | 0  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | Q6641 |     |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|-------|-----|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | E     | C   | B   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 0     | 0.1 | 2.9 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 0     | 0.1 | 2.9 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

SA-VK480EE PANEL P.C.B.

### 13.8. Deck P.C.B.

| REF NO. | IC1000 |   |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|---|---|---|---|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2 | 3 | 4 | 5 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 6.2    | 0 | 0 | 0 | 0 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 6.2    | 0 | 0 | 0 | 0 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC1001 |     |     |     |   |     |   |     |     |     |    |     |    |    |     |    |     |     |     |     |
|---------|--------|-----|-----|-----|---|-----|---|-----|-----|-----|----|-----|----|----|-----|----|-----|-----|-----|-----|
| MODE    | 1      | 2   | 3   | 4   | 5 | 6   | 7 | 8   | 9   | 10  | 11 | 12  | 13 | 14 | 15  | 16 | 17  | 18  | 19  | 20  |
| CD PLAY | 0.1    | 0.7 | 5.2 | 4.4 | 0 | 5.1 | 0 | 0.1 | 0.1 | 6.1 | 0  | 9.1 | 0  | 0  | 0.1 | 0  | 3.8 | 0.3 | 4.4 | 5.2 |
| STANDBY | 0.1    | 0.7 | 5.2 | 4.4 | 0 | 5.1 | 0 | 0.1 | 0.1 | 6.2 | 0  | 9.2 | 0  | 0  | 0.1 | 0  | 3.8 | 0.3 | 4.4 | 5.2 |

| REF NO. | IC1001 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 21     | 22  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 0.7    | 0.1 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 0.7    | 0.1 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | Q1303 |     |     |  | Q1304 |     |     |  | Q1309 |     |     |  | Q1310 |     |     |  | Q1312 |     |   |  |
|---------|-------|-----|-----|--|-------|-----|-----|--|-------|-----|-----|--|-------|-----|-----|--|-------|-----|---|--|
| MODE    | E     | C   | B   |  | E     | C   | B   |  | E     | C   | B   |  | E     | C   | B   |  | E     | C   | B |  |
| CD PLAY | 0     | 6.3 | 0.1 |  | 6.3   | 0.1 | 6.2 |  | 0     | 9.1 | 0.1 |  | 0     | 9.1 | 0.1 |  | 0     | 0.1 | 0 |  |
| STANDBY | 0     | 6.3 | 0.1 |  | 6.3   | 0.1 | 6.2 |  | 0     | 9.2 | 0.1 |  | 0     | 9.2 | 0.1 |  | 0     | 0   | 0 |  |

| REF NO. | Q1314 |      |     |  | Q1316 |     |      |  | Q1317 |   |     |  |  |  |  |  |  |  |  |  |
|---------|-------|------|-----|--|-------|-----|------|--|-------|---|-----|--|--|--|--|--|--|--|--|--|
| MODE    | E     | C    | B   |  | E     | C   | B    |  | E     | C | B   |  |  |  |  |  |  |  |  |  |
| CD PLAY | 9.1   | -1.2 | 9.1 |  | 0     | 7.5 | -1.3 |  | 0     | 0 | 0.1 |  |  |  |  |  |  |  |  |  |
| STANDBY | 9.2   | -1.2 | 9.2 |  | 0     | 7.6 | -1.3 |  | 0     | 0 | 0.1 |  |  |  |  |  |  |  |  |  |

SA-VK480EE DECK P.C.B.

### 13.9. Deck Mechanism P.C.B.

| REF NO. | IC971 |     |     |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|-------|-----|-----|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1     | 2   | 3   | 4   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 5.1   | 4.0 | 2.8 | 5.1 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 5.1   | 4.0 | 2.8 | 5.1 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

SA-VK480EE DECK MECHANISM P.C.B.

### 13.10. D-Amp P.C.B.

| REF NO. | IC5000 |   |   |      |   |       |       |      |     |     |       |       |       |      |     |      |       |       |    |      |
|---------|--------|---|---|------|---|-------|-------|------|-----|-----|-------|-------|-------|------|-----|------|-------|-------|----|------|
| MODE    | 1      | 2 | 3 | 4    | 5 | 6     | 7     | 8    | 9   | 10  | 11    | 12    | 13    | 14   | 15  | 16   | 17    | 18    | 19 | 20   |
| CD PLAY | 2.5    | 0 | 0 | 29.0 | 0 | -29.0 | -20.6 | 29.3 | 8.9 | 0   | -29.3 | -19.2 | -29.3 | -0.1 | 8.9 | 29.3 | -29.0 | -29.0 | 0  | 29.0 |
| STANDBY | 2.5    | 0 | 0 | 29.0 | 0 | -29.0 | -20.6 | 29.3 | 8.9 | 0.1 | -29.3 | -19.2 | -29.3 | -0.1 | 8.9 | 29.3 | -29.0 | -29.0 | 0  | 29.0 |

| REF NO. | IC5000 |    |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|----|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 21     | 22 | 23  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 0      | 0  | 2.5 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 0      | 0  | 2.5 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC5500 |     |     |   |     |     |   |     |     |     |     |     |     |     |  |  |  |  |  |  |
|---------|--------|-----|-----|---|-----|-----|---|-----|-----|-----|-----|-----|-----|-----|--|--|--|--|--|--|
| MODE    | 1      | 2   | 3   | 4 | 5   | 6   | 7 | 8   | 9   | 10  | 11  | 12  | 13  | 14  |  |  |  |  |  |  |
| CD PLAY | 0      | 5.2 | 4.9 | 0 | 2.7 | 2.2 | 0 | 2.5 | 2.6 | 2.6 | 2.5 | 2.5 | 2.6 | 5.2 |  |  |  |  |  |  |
| STANDBY | 0      | 5.2 | 4.9 | 0 | 2.7 | 2.2 | 0 | 2.5 | 2.6 | 2.6 | 2.5 | 2.5 | 2.6 | 5.2 |  |  |  |  |  |  |

| REF NO. | Q5101 |     |   |  | Q5102 |     |   |  | Q5601 |   |     |  | Q5603 |     |     |  | Q5604 |   |     |  |
|---------|-------|-----|---|--|-------|-----|---|--|-------|---|-----|--|-------|-----|-----|--|-------|---|-----|--|
| MODE    | E     | C   | B |  | E     | C   | B |  | E     | C | B   |  | E     | C   | B   |  | E     | C | B   |  |
| CD PLAY | 0     | 5.2 | 0 |  | 0     | 5.1 | 0 |  | 0     | 0 | 0.7 |  | 5.2   | 5.2 | 4.5 |  | 0     | 0 | 0.7 |  |
| STANDBY | 0     | 5.2 | 0 |  | 0     | 5.2 | 0 |  | 0     | 0 | 0.7 |  | 5.2   | 5.2 | 4.5 |  | 0     | 0 | 0.7 |  |

SA-VK480EE D-AMP P.C.B.

### 13.11. SMPS P.C.B.

| REF NO. | IC5701 |   |   |      |     |     |     |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|---|---|------|-----|-----|-----|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2 | 3 | 4    | 5   | 6   | 7   |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 162.0  | 0 | 0 | 19.3 | 0.1 | 1.4 | 0.5 |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 162.0  | 0 | 0 | 19.3 | 0.1 | 1.4 | 0.5 |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC5799 |     |     |      |       |   |   |   |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-----|-----|------|-------|---|---|---|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2   | 3   | 4    | 5     | 6 | 7 | 8 |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 6.0    | 1.6 | 1.8 | 20.3 | 162.2 | 0 | 0 | 0 |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 6.0    | 1.6 | 2.0 | 20.3 | 163.0 | 0 | 0 | 0 |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC5801 |       |       |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-------|-------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2     | 3     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | -2.2   | -29.5 | -26.8 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | -2.2   | -29.5 | -26.8 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | IC5899 |   |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|---|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | 1      | 2 | 3   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 4.2    | 0 | 2.5 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 4.2    | 0 | 2.5 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

| REF NO. | Q5720 |     |     |  | Q5721 |      |      |  | Q5722 |      |     |  | Q5802 |      |       |  | Q5803 |     |   |  |
|---------|-------|-----|-----|--|-------|------|------|--|-------|------|-----|--|-------|------|-------|--|-------|-----|---|--|
| MODE    | E     | C   | B   |  | E     | C    | B    |  | E     | C    | B   |  | E     | C    | B     |  | E     | C   | B |  |
| CD PLAY | 5.9   | 6.5 | 5.6 |  | 19.9  | 19.9 | 19.2 |  | 0     | 17.0 | 0.1 |  | -21.9 | -2.2 | -22.0 |  | 0     | 5.8 | 0 |  |
| STANDBY | 5.9   | 6.6 | 5.6 |  | 19.9  | 19.9 | 19.2 |  | 0     | 16.8 | 0.1 |  | -21.8 | -2.2 | -22.0 |  | 0     | 5.8 | 0 |  |

| REF NO. | Q5860 |   |     |  | Q5861 |   |     |  | Q5862 |     |   |  | Q5898 |     |     |  | QR5801 |     |   |  |
|---------|-------|---|-----|--|-------|---|-----|--|-------|-----|---|--|-------|-----|-----|--|--------|-----|---|--|
| MODE    | E     | C | B   |  | E     | C | B   |  | E     | C   | B |  | E     | C   | B   |  | E      | C   | B |  |
| CD PLAY | 1.3   | 0 | 0.7 |  | 0     | 0 | 0.7 |  | 0     | 5.2 | 0 |  | 0     | 3.2 | 0.5 |  | 0      | 5.0 | 0 |  |
| STANDBY | 1.3   | 0 | 0.7 |  | 0     | 0 | 0.7 |  | 0     | 5.2 | 0 |  | 0     | 3.2 | 0.5 |  | 0      | 5.0 | 0 |  |

| REF NO. | QR5802 |     |   |  | QR5810 |     |   |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|--------|-----|---|--|--------|-----|---|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | E      | C   | B |  | E      | C   | B |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 0      | 4.5 | 0 |  | 0      | 0.1 | 5 |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 1.5    | 1.5 | 0 |  | 0      | 0   | 5 |  |  |  |  |  |  |  |  |  |  |  |  |  |

SA-VK480EE SMPS P.C.B.

### 13.12. Volume P.C.B.

| REF NO. | Q6511 |   |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|-------|---|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| MODE    | E     | C | B   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| CD PLAY | 0     | 0 | 5.1 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| STANDBY | 0     | 0 | 5.1 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

SA-VK480EE VOLUME P.C.B.





### 13.13. Mic P.C.B.

| REF NO.<br>MODE | IC6000 |     |     |     |     |     |     |   |     |     |     |    |     |     |  |  |  |  |  |  |
|-----------------|--------|-----|-----|-----|-----|-----|-----|---|-----|-----|-----|----|-----|-----|--|--|--|--|--|--|
|                 | 1      | 2   | 3   | 4   | 5   | 6   | 7   | 8 | 9   | 10  | 11  | 12 | 13  | 14  |  |  |  |  |  |  |
| CD PLAY         | 4.6    | 4.6 | 4.6 | 4.6 | 4.5 | 4.6 | 4.6 | 0 | 9.1 | 4.5 | 0.1 | 0  | 9.1 | 4.5 |  |  |  |  |  |  |
| STANDBY         | 4.6    | 4.6 | 4.6 | 4.6 | 4.5 | 4.6 | 4.6 | 0 | 9.1 | 4.5 | 0.1 | 0  | 9.1 | 4.5 |  |  |  |  |  |  |








SA-VK480EE MIC P C B

SA-VK480EE MIC P.C.B.









### 13.14. Waveform Table (1/3)
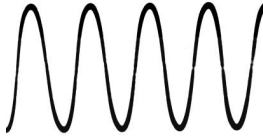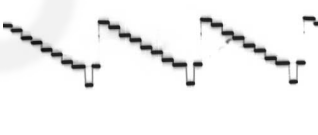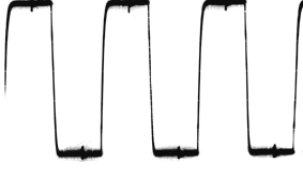
|                                                                                                                                                 |                                                                                                                                                   |                                                                                                                                                    |                                                                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>WF No. IC2103-1 (PLAY)</p>  <p>0.44Vp-p(200usec/div)</p>     | <p>WF No. IC2103-7 (PLAY)</p>  <p>1.9Vp-p(500usec/div)</p>       | <p>WF No. IC2801-13 (PLAY)</p>  <p>5Vp-p(50nsec/div)</p>         | <p>WF No. IC2801-15 (PLAY)</p>  <p>3.2Vp-p(20nsec/div)</p>      |
| <p>WF No. IC2803-3,4 (PLAY)</p>  <p>0.4Vp-p(100usec/div)</p>    | <p>WF No. IC2803-5 (PLAY)</p>  <p>0.26Vp-p(200usec/div)</p>      | <p>WF No. IC2803-6 (PLAY)</p>  <p>1.5Vp-p(500usec/div)</p>       | <p>WF No. IC2803-9,10 (PLAY)</p>  <p>2Vp-p(500usec/div)</p>     |
| <p>WF No. IC2803-16,18 (PLAY)</p>  <p>1.9Vp-p(500usec/div)</p> | <p>WF No. IC2803-35,36 (PLAY)</p>  <p>0.76Vp-p(500usec/div)</p> | <p>WF No. IC2803-43,44 (PLAY)</p>  <p>0.08Vp-p(500usec/div)</p> | <p>WF No. IC2803-52,54 (PLAY)</p>  <p>0.2Vp-p(500usec/div)</p> |
| <p>WF No. IC2900-4 (PLAY)</p>  <p>1Vp-p(20usec/div)</p>       | <p>WF No. IC2900-8,11 (PLAY)</p>  <p>1.1Vp-p(20usec/div)</p>   | <p>WF No. IC2900-15 (PLAY)</p>  <p>0.76Vp-p(20usec/div)</p>    | <p>WF No. IC2900-18 (PLAY)</p>  <p>1.5Vp-p(20usec/div)</p>    |
| <p>WF No. IC2900-21 (PLAY)</p>  <p>1.5Vp-p(20usec/div)</p>    | <p>WF No. IC2900-24 (PLAY)</p>  <p>2Vp-p(20usec/div)</p>       | <p>WF No. IC2900-30 (PLAY)</p>  <p>2.4Vp-p(20usec/div)</p>     | <p>WF No. IC5000-1 (PLAY)</p>  <p>5.6Vp-p(1usec/div)</p>      |








































### 13.15. Waveform Table (2/3)
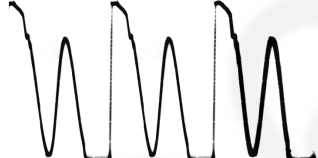
|                                                                                                                                              |                                                                                                                                              |                                                                                                                                                |                                                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>WF No. IC5000-2 (PLAY)</p>  <p>0.84Vp-p(200usec/div)</p> | <p>WF No. IC5000-10,14 (PLAY)</p>  <p>80Vp-p(1usec/div)</p> | <p>WF No. IC5000-22 (PLAY)</p>  <p>0.84Vp-p(200usec/div)</p> | <p>WF No. IC5500-4 (PLAY)</p>  <p>6.8Vp-p(5msec/div)</p>       |
| <p>WF No. IC5500-6 (PLAY)</p>  <p>5.2Vp-p(500nsec/div)</p>  | <p>WF No. IC5500-8 (PLAY)</p>  <p>5.6Vp-p(500nsec/div)</p>  | <p>WF No. IC5701-1 (PLAY)</p>  <p>400Vp-p(2usec/div)</p>     | <p>WF No. IC5701-4,6 (PLAY)</p>  <p>2Vp-p(5usec/div)</p>       |
| <p>WF No. IC5799-2 (PLAY)</p>  <p>2Vp-p(5usec/div)</p>     | <p>WF No. IC5799-3 (PLAY)</p>  <p>9.6Vp-p(5usec/div)</p>   | <p>WF No. IC5799-5 (PLAY)</p>  <p>240Vp-p(50usec/div)</p>   | <p>WF No. IC5899-1,2,3 (PLAY)</p>  <p>1.65Vp-p(5msec/div)</p> |
| <p>WF No. IC6601-5 (PLAY)</p>  <p>1.5Vp-p(1usec/div)</p>  | <p>WF No. IC6601-8 (PLAY)</p>  <p>5.6Vp-p(2usec/div)</p>  | <p>WF No. IC8001-9 (PLAY)</p>  <p>6.4Vp-p(5usec/div)</p>   | <p>WF No. IC8001-10 (PLAY)</p>  <p>6.4Vp-p(5usec/div)</p>    |
| <p>WF No. IC8001-11 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>   | <p>WF No. IC8001-12 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>   | <p>WF No. IC8001-13 (PLAY)</p>  <p>6.4Vp-p(5usec/div)</p>  | <p>WF No. IC8001-14 (PLAY)</p>  <p>6.4Vp-p(5usec/div)</p>    |

### 13.16. Waveform Table (3/3)
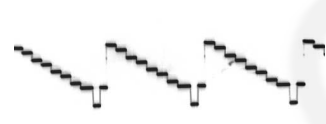
|                                                                                                                                               |                                                                                                                                               |                                                                                                                                                 |                                                                                                                                                    |
|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>WF No. IC8001-17 (PLAY)</p>  <p>6Vp-p(5usec/div)</p>       | <p>WF No. IC8001-18 (PLAY)</p>  <p>6.4Vp-p(5usec/div)</p>    | <p>WF No. IC8001-59 (PLAY)</p>  <p>2.4Vp-p(2usec/div)</p>     | <p>WF No. IC8001-62,63,64 (PLAY)</p>  <p>5.6Vp-p(2usec/div)</p> |
| <p>WF No. IC8001-129 (PLAY)</p>  <p>0.72Vp-p(20usec/div)</p>  | <p>WF No. IC8001-130 (PLAY)</p>  <p>0.72Vp-p(20usec/div)</p> | <p>WF No. IC8001-131 (PLAY)</p>  <p>0.42Vp-p(20usec/div)</p>  | <p>WF No. IC8001-138 (PLAY)</p>  <p>1.05Vp-p(20usec/div)</p>    |
| <p>WF No. IC8001-139 (PLAY)</p>  <p>0.9Vp-p(20usec/div)</p>  | <p>WF No. IC8001-151 (PLAY)</p>  <p>6Vp-p(2usec/div)</p>    | <p>WF No. IC8001-152 (PLAY)</p>  <p>6.4Vp-p(500nsec/div)</p> | <p>WF No. IC8422-1 (PLAY)</p>  <p>1.5Vp-p(500usec/div)</p>     |
| <p>WF No. IC8422-2 (PLAY)</p>  <p>0.15Vp-p(500usec/div)</p> | <p>WF No. IC8422-9 (PLAY)</p>  <p>7.6Vp-p(2usec/div)</p>   |                                                                                                                                                 |                                                                                                                                                    |


# 14 Illustration of ICs, Transistor and Diode
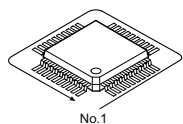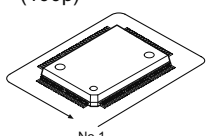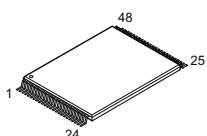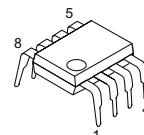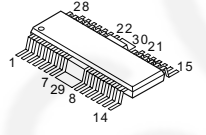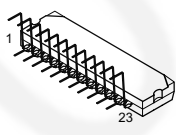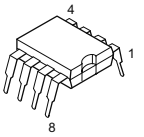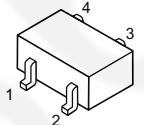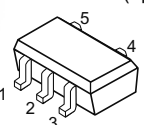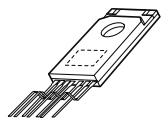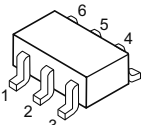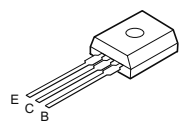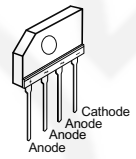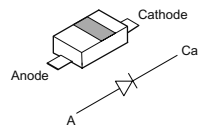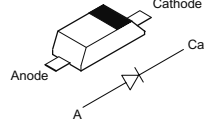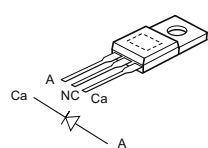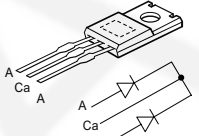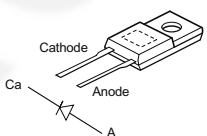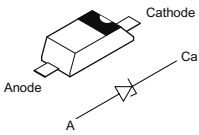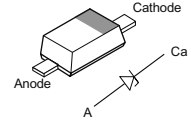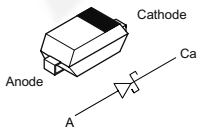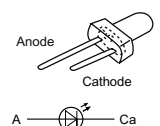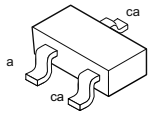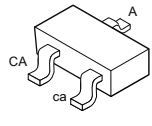
|                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                            |                                                                                                                                                                                                                            |                                                                                                               |                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>AN7326K (22p)<br/>C0ABBB000230 (8p)<br/>C0DBZYY00266 (8p)<br/>C0FBAK000026 (16p)<br/>C0FBBK000071 (16p)<br/>C0JBAB0000902 (14p)<br/>C0JBAZ001251 (20p)</p> |                                                                                                                                                                                                                                                                                                                                                                                                                     | <p>C1AB00003130 (14p)<br/>C3ABPG000160 (26p)<br/>C9ZB00000461 (32p)<br/>RFK BX0681D-C</p>                                                                  |                                                                                                                                                                                                                            |  <p>RFKWEVK480GC (8p)</p>   |  <p>C0HBB0000057 (44p)<br/>C1BB00001121 (58p)<br/>MN2DS0018MP (216p)</p> |
|  <p>C0JBAB0000908 (6p)</p>                                                                                                                                     |  <p>RFKWMVK480GC (100p)</p>                                                                                                                                                                                                                                                                                                        |  <p>RFKWMH41B323</p>                                                      |  <p>C0AABB000125 (8P)</p>                                                                                                                 |  <p>C0GBG0000048 (28P)</p> |  <p>C1BA00000492 (23P)</p>                                               |
|  <p>C0DBFZG00001 (7p)</p>                                                                                                                                      |  <p>C0DABFC00002 (3p)<br/>C0DAEMZ00001 (3p)</p>                                                                                                                                                                                                                                                                                    |  <p>MIP4110MSSCF (8P)</p>                                                 |  <p>C0DAAYH00001 (5p)</p>                                                                                                                |  <p>C0EBA0000039 (4p)</p>  |  <p>C0CBCBC00140 (5p)<br/>C0JBAA0000502 (5p)<br/>C0EBE0000456 (5p)</p>   |
|  <p>C5HACYY00003 (7p)</p>                                                                                                                                     |  <p>C1AA00000612</p>                                                                                                                                                                                                                                                                                                              |  <p>CNB13030R2AU</p>                                                     |  <p>B1AAKD000012<br/>2SC3940ARA<br/>2SD09650RA</p>                                                                                      |  <p>B1BABK000001</p>      |  <p>B1HBECA00004</p>                                                    |
|  <p>B1BACG000023<br/>B1BCCG000002</p>                                                                                                                        |  <p>B1ABCF000176<br/>B1ABGC000005<br/>B1ABCF000011<br/>B1ADCE000012<br/>B1ADGB000008<br/>B1GBCFLL0037</p> <p>B1GBCFGH0001<br/>B1GBCFJJ0051<br/>B1GBCFJN0033<br/>B1GDCFGA0018<br/>B1GDCFGH0002<br/>B1GDCFJJ0002<br/>B1GDCFJJ0047</p> <p>UNR221400L<br/>UNR521100L<br/>2SA207700L<br/>2SB1218ARL<br/>2SD0601AHL<br/>2SD1819A0L</p> |                                                                                                                                                            |                                                                                                                                                                                                                            |  <p>B1CFHA000002</p>     |  <p>B1ACCF000094</p>                                                   |
|  <p>B1AAGC000006</p>                                                                                                                                         |  <p>B0FBAR000041</p>                                                                                                                                                                                                                                                                                                             |  <p>B0EAKM000117<br/>B0EAMM000057<br/>B0HAMP000094<br/>B0JAME000114</p> |  <p>MA2C16500E<br/>MA2J1110GL<br/>MA2J7280GL</p>                                                                                       |  <p>B0ACCK000005</p>     |  <p>B0ZAZ0000052</p>                                                   |
|  <p>B0HBSM000043</p>                                                                                                                                         |  <p>B0HFRJ000012</p>                                                                                                                                                                                                                                                                                                             |  <p>B0BC5R1A0266<br/>B0BC6R100010</p>                                   |  <p>MAZ8051GML<br/>MAZ8075GML<br/>MAZ8180GML<br/>B0BC019A0007<br/>B0BC010A0265<br/>B0BC024A0267<br/>B0BC6R8A0263<br/>B0BC035A0007</p> |                                                                                                               |                                                                                                                                                             |
|  <p>B0JCPD000025<br/>B0HCSP000001</p>                                                                                                                        |  <p>B3AAA0000803<br/>B3AAA0001031<br/>B3AEA0000127</p>                                                                                                                                                                                                                                                                           |  <p>B0ADCC000002</p>                                                    |  <p>B0ADCJ000020</p>                                                                                                                   |                                                                                                               |                                                                                                                                                             |

A0449860

# 15 Block Diagram


## 15.1. DVD (Audio)

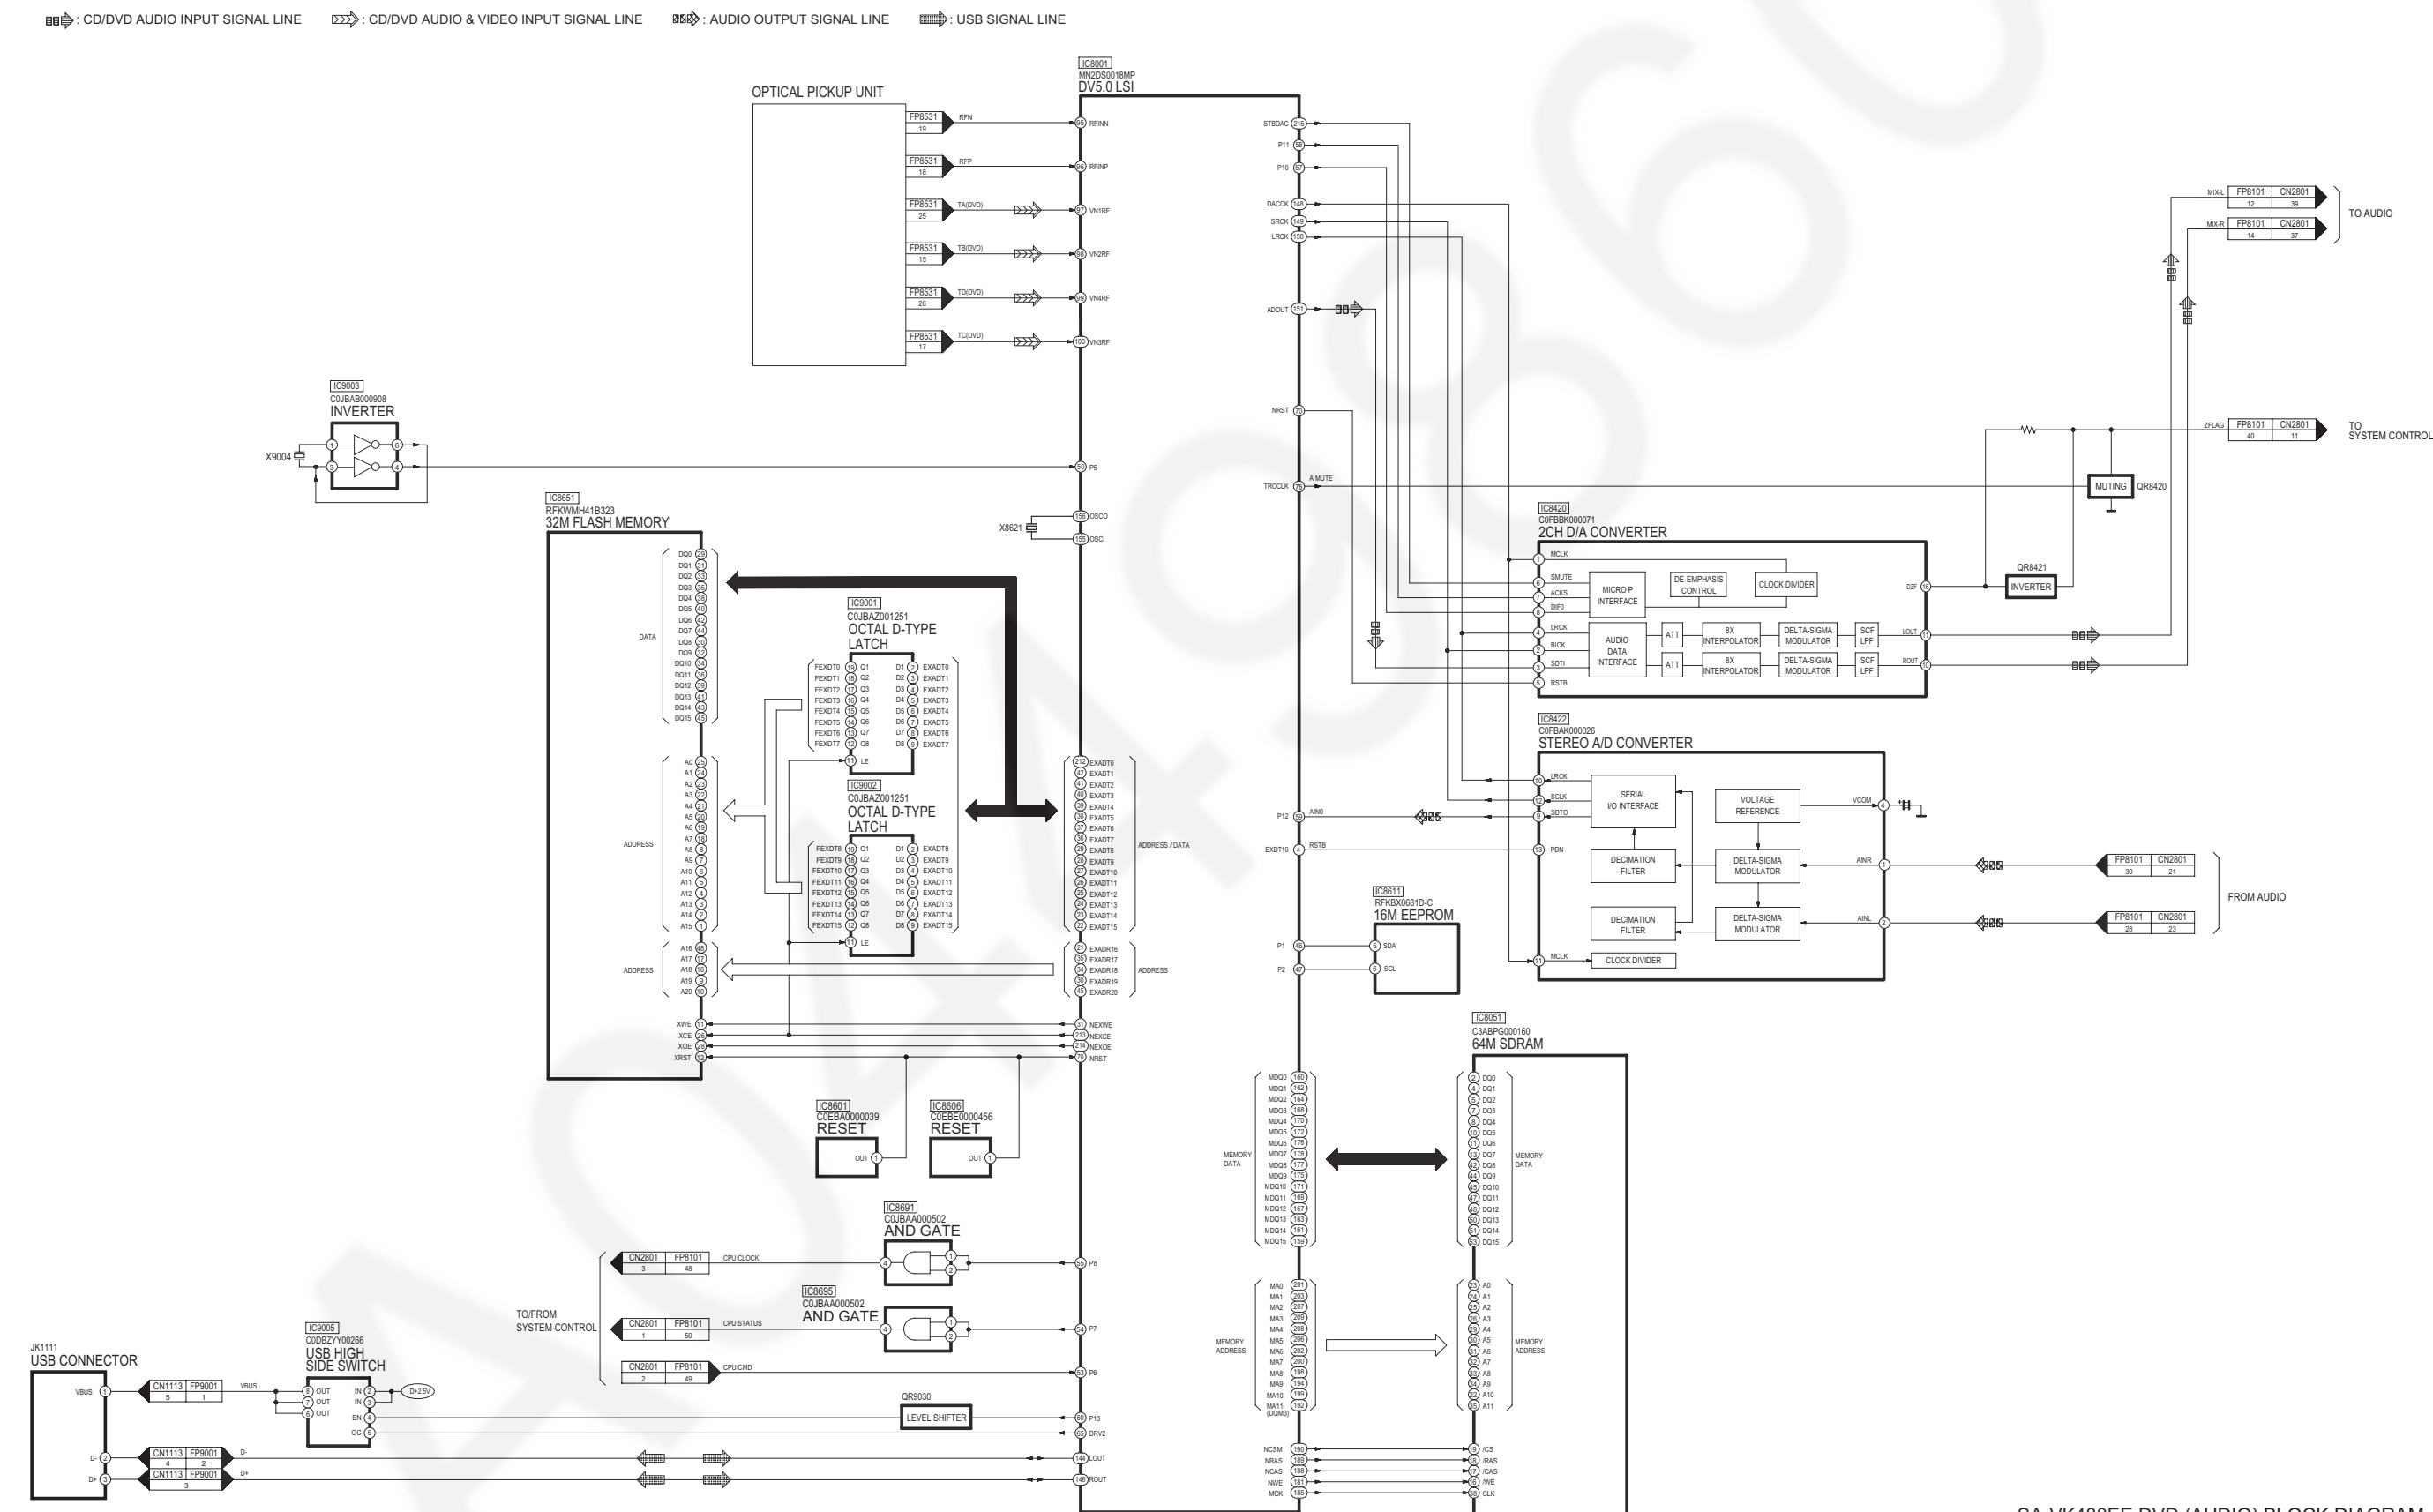

SA-VK480EE DVD (AUDIO) BLOCK DIAGRAM


## 15.2. DVD (Servo)

⏮⏭⏪⏩: CD/DVD AUDIO & VIDEO INPUT SIGNAL LINE

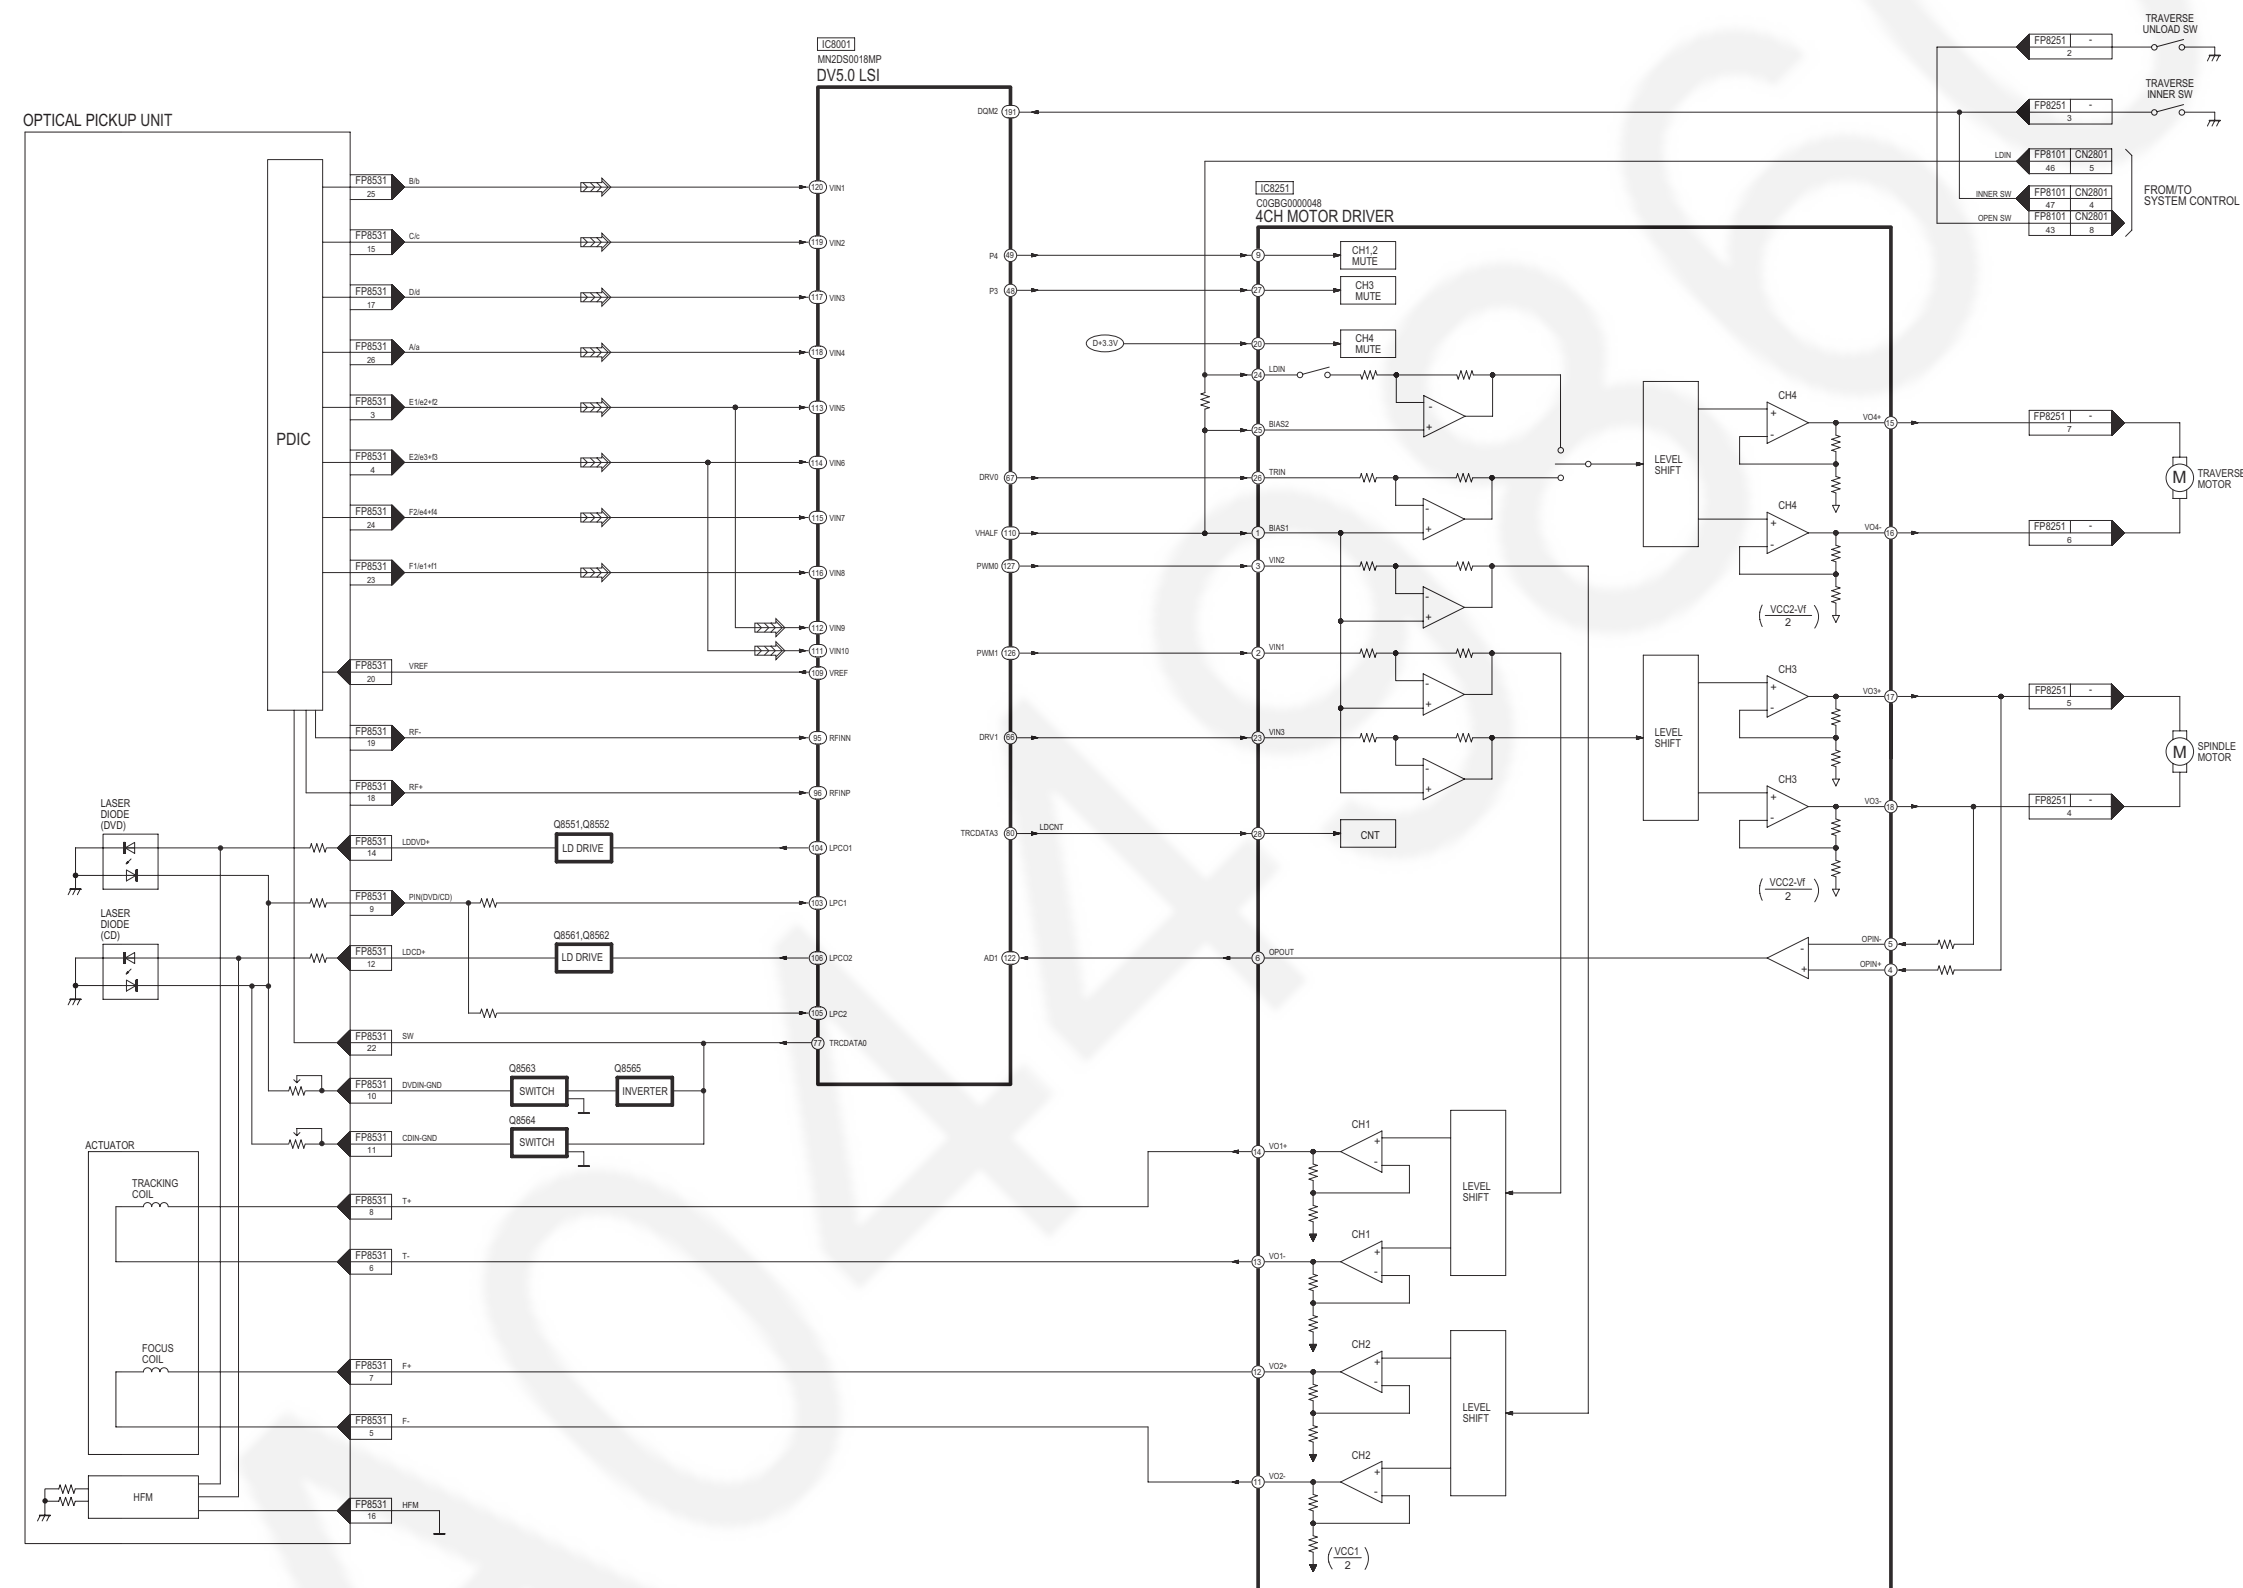

SA-VK480EE DVD (SERVO) BLOCK DIAGRAM


15.3. System Control

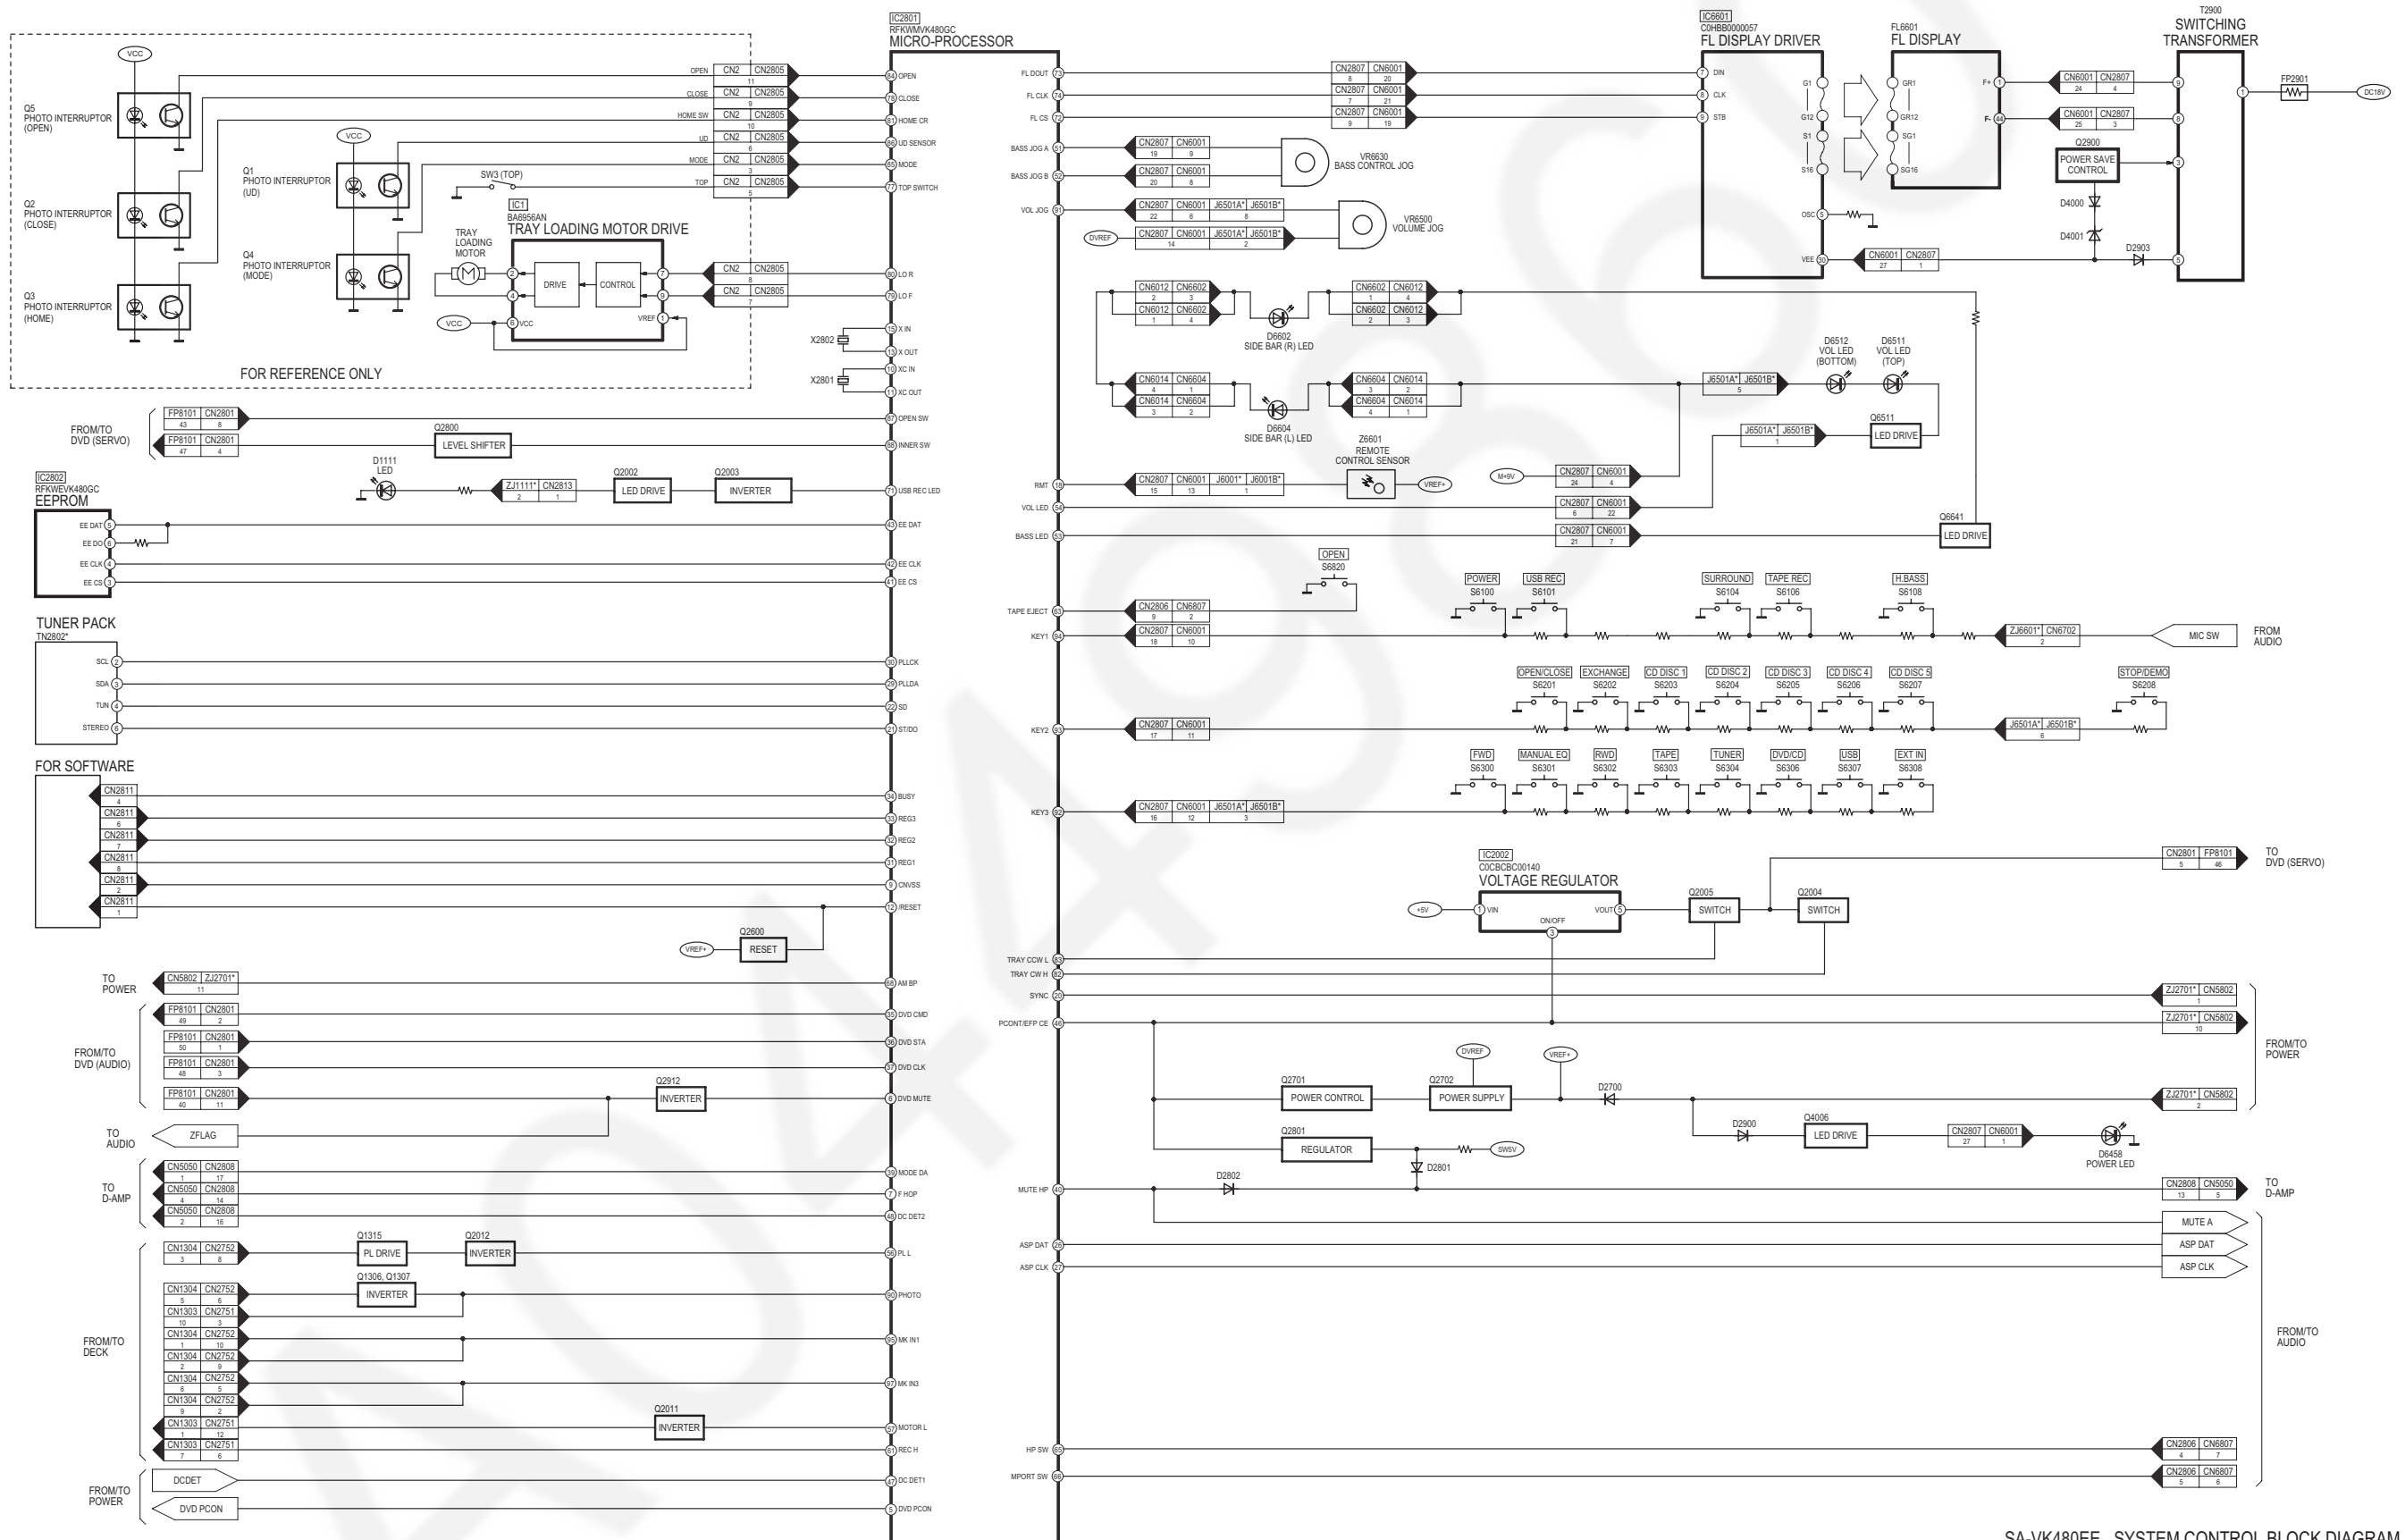

SA-VK480EE SYSTEM CONTROL BLOCK DIAGRAM

# 15.4. Audio


CD/DVD/TAPE AUDIO INPUT SIGNAL LINE    AUX/MIC/MUSIC PORT AUDIO INPUT SIGNAL LINE    AUDIO OUTPUT SIGNAL LINE    AM/FM SIGNAL LINE

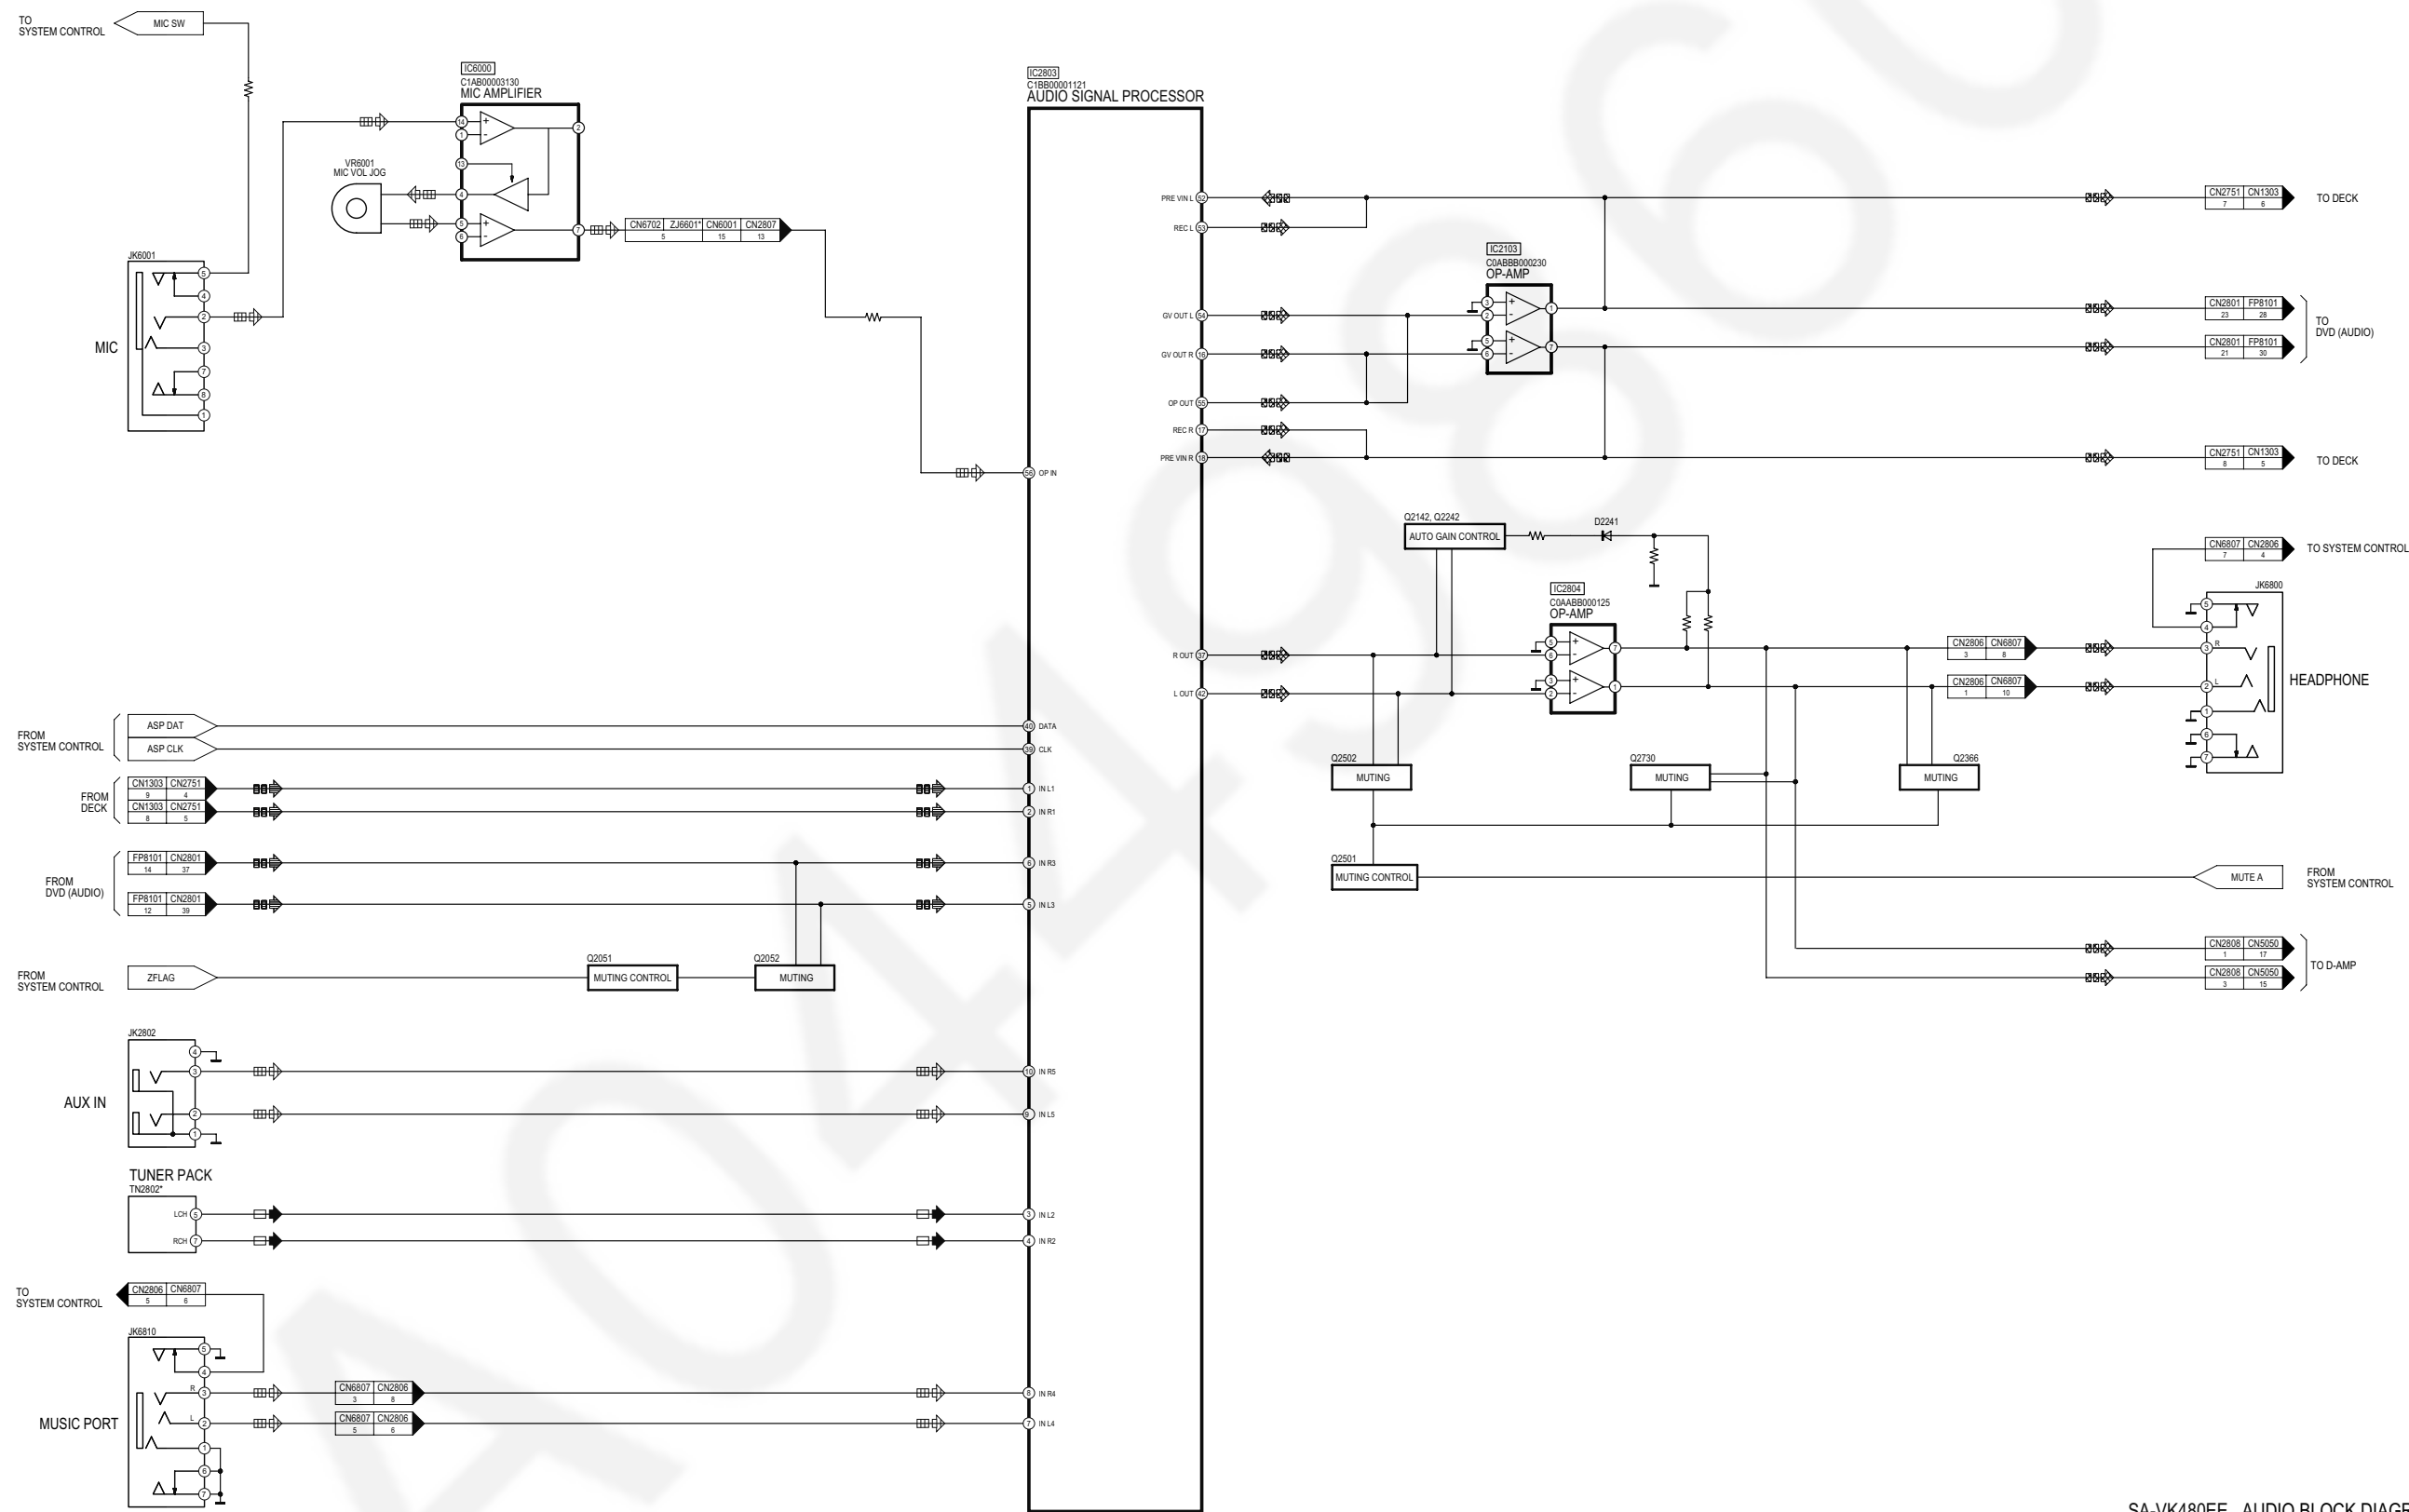

SA-VK480EE AUDIO BLOCK DIAGRAM

15.5. Video


➡ : CD/DVD VIDEO INPUT SIGNAL LINE    🔊 : AUDIO OUTPUT SIGNAL LINE    📺 : VIDEO OUTPUT SIGNAL LINE

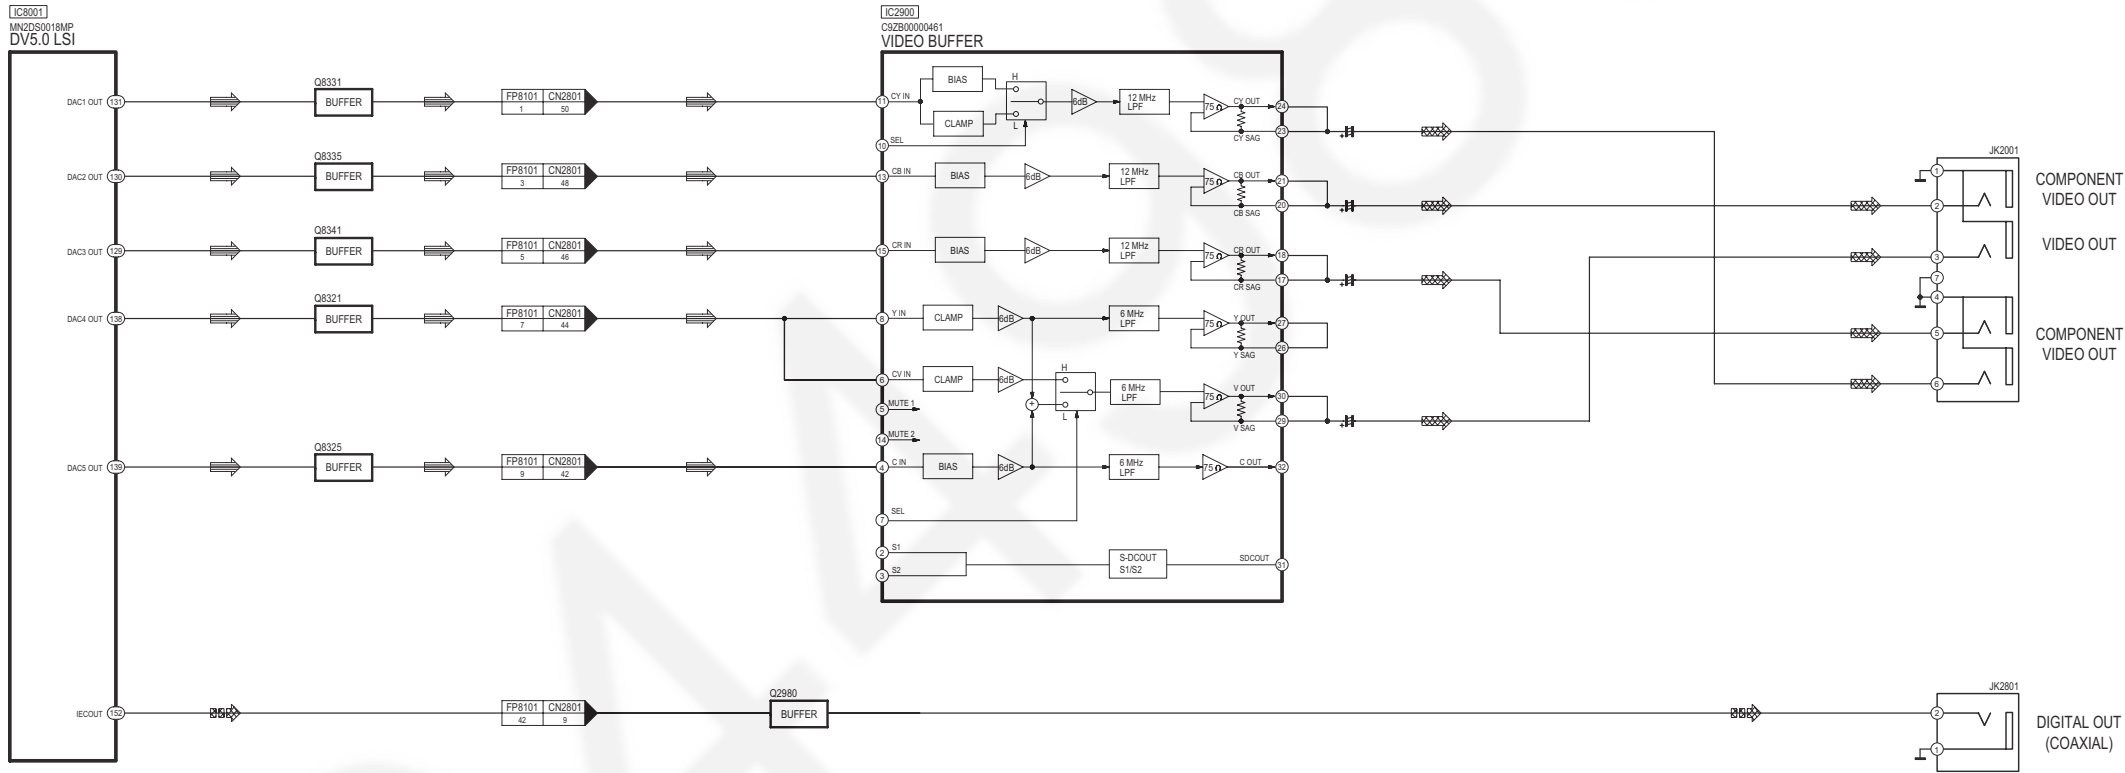

SA-VK480EE VIDEO BLOCK DIAGRAM

# 15.6. Deck


TAPE AUDIO INPUT SIGNAL LINE  
AUDIO OUTPUT SIGNAL LINE

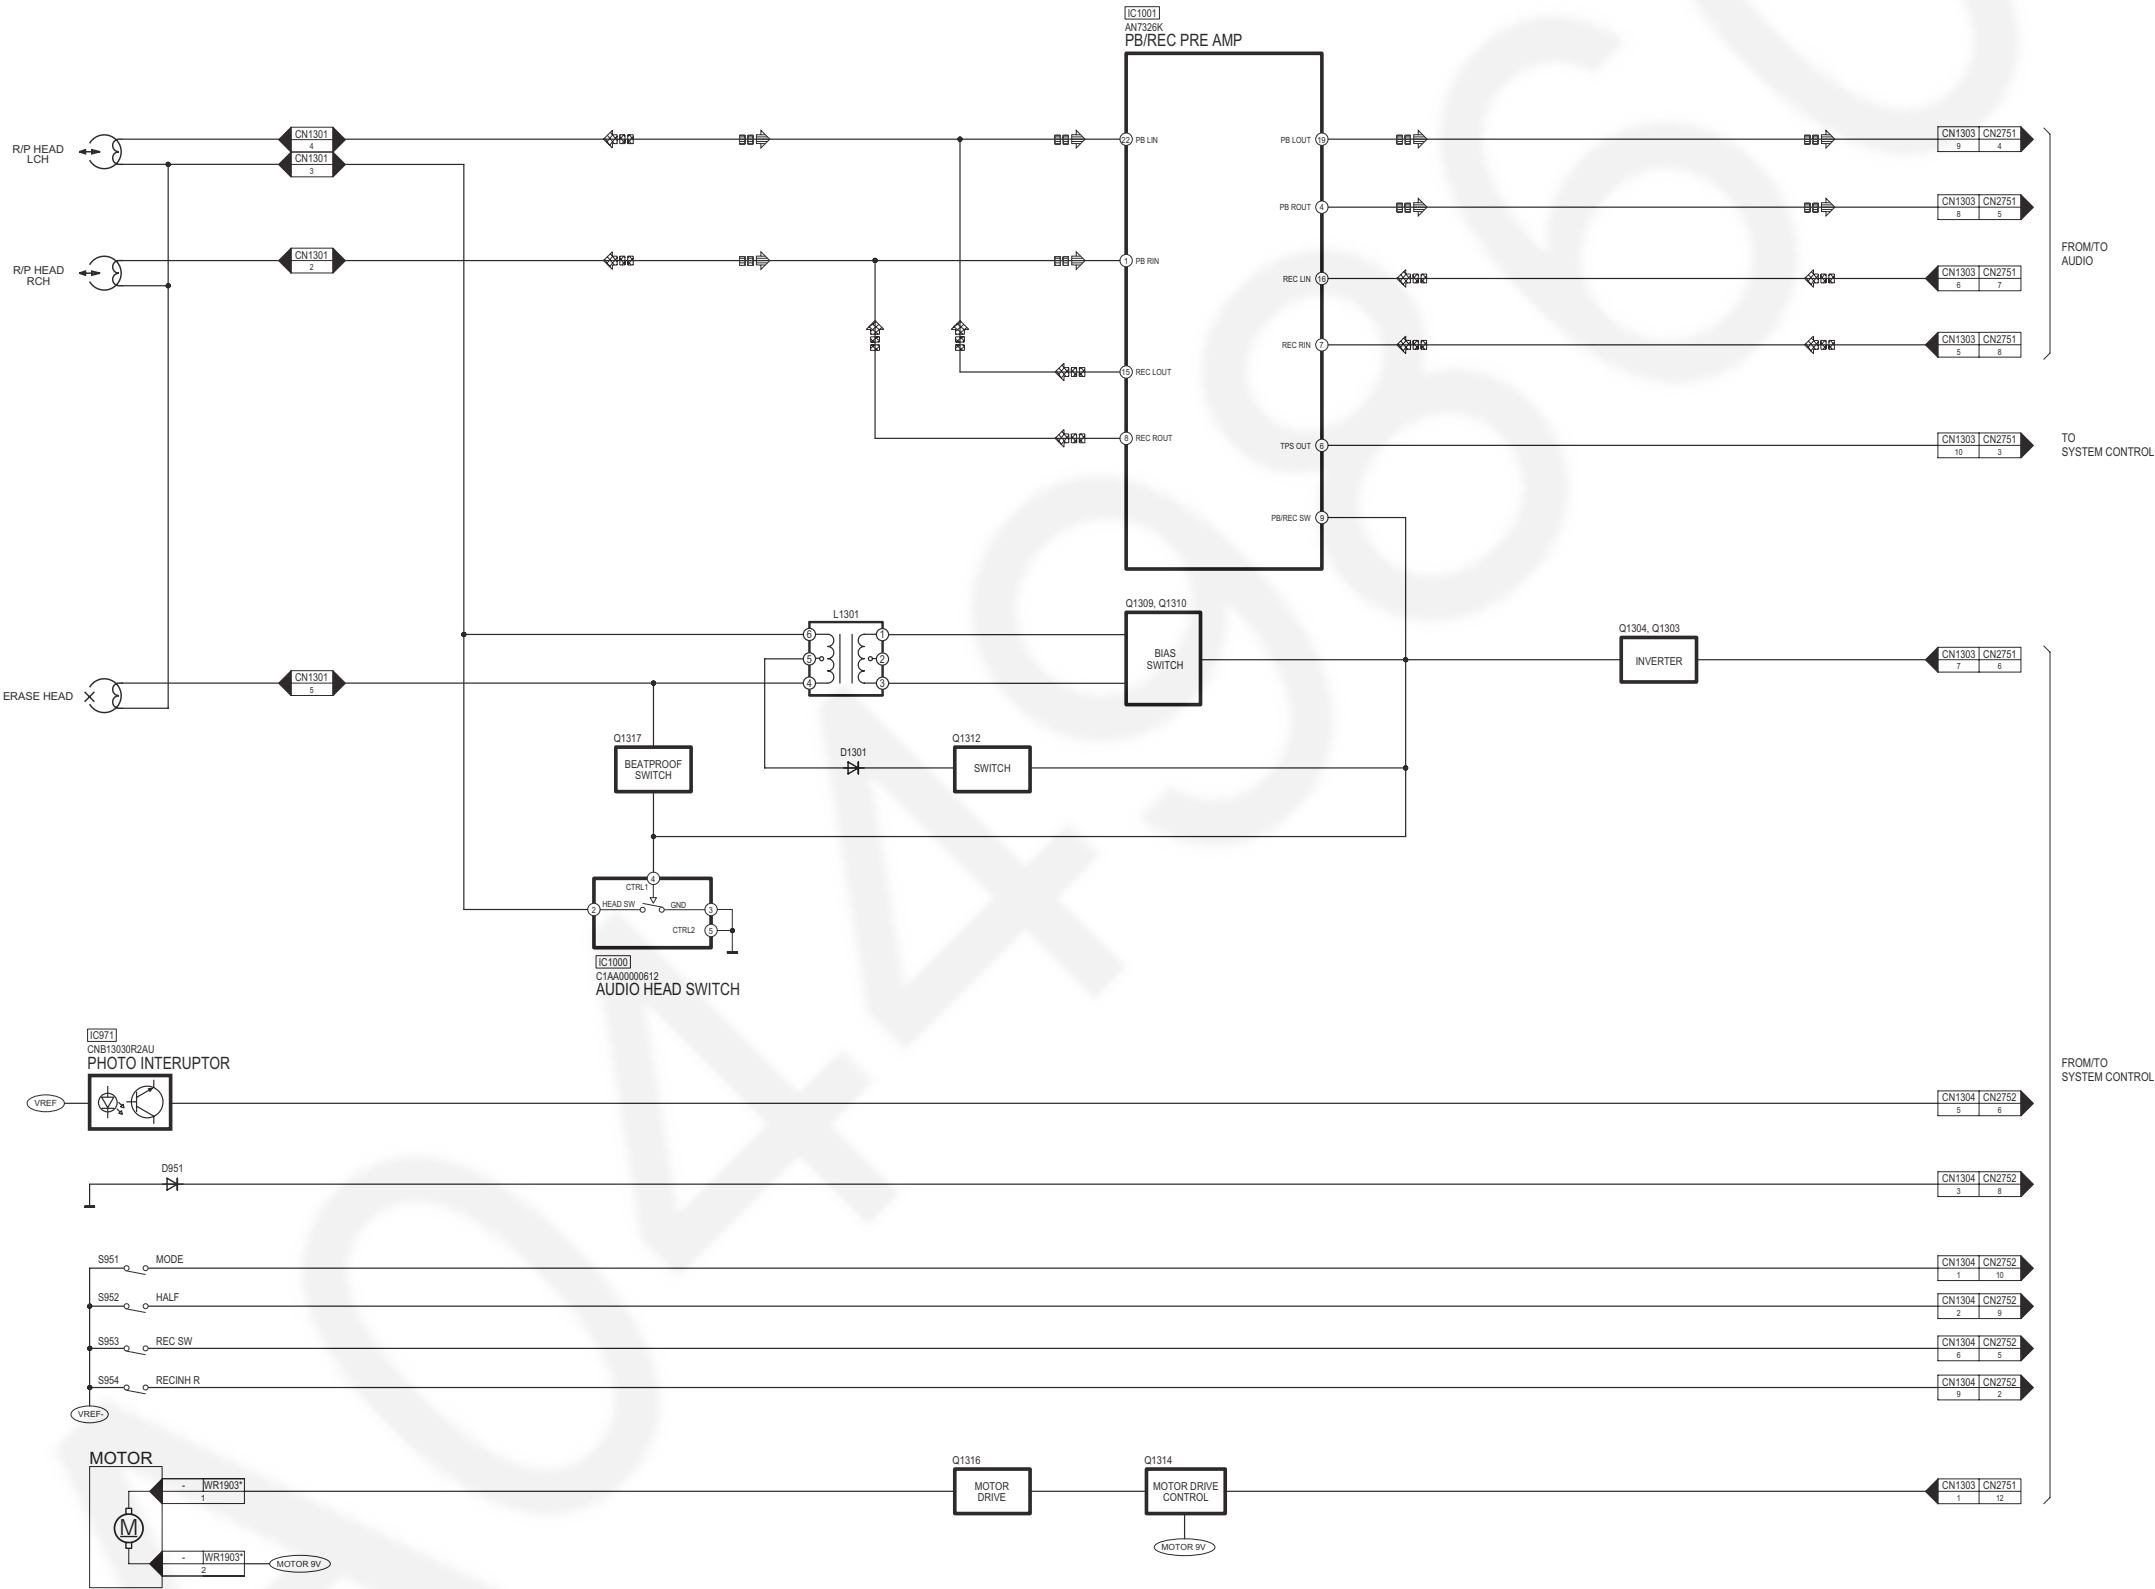

SA-VK480EE DECK BLOCK DIAGRAM


# 15.7. D-Amp

🔊 : AUDIO OUTPUT SIGNAL LINE

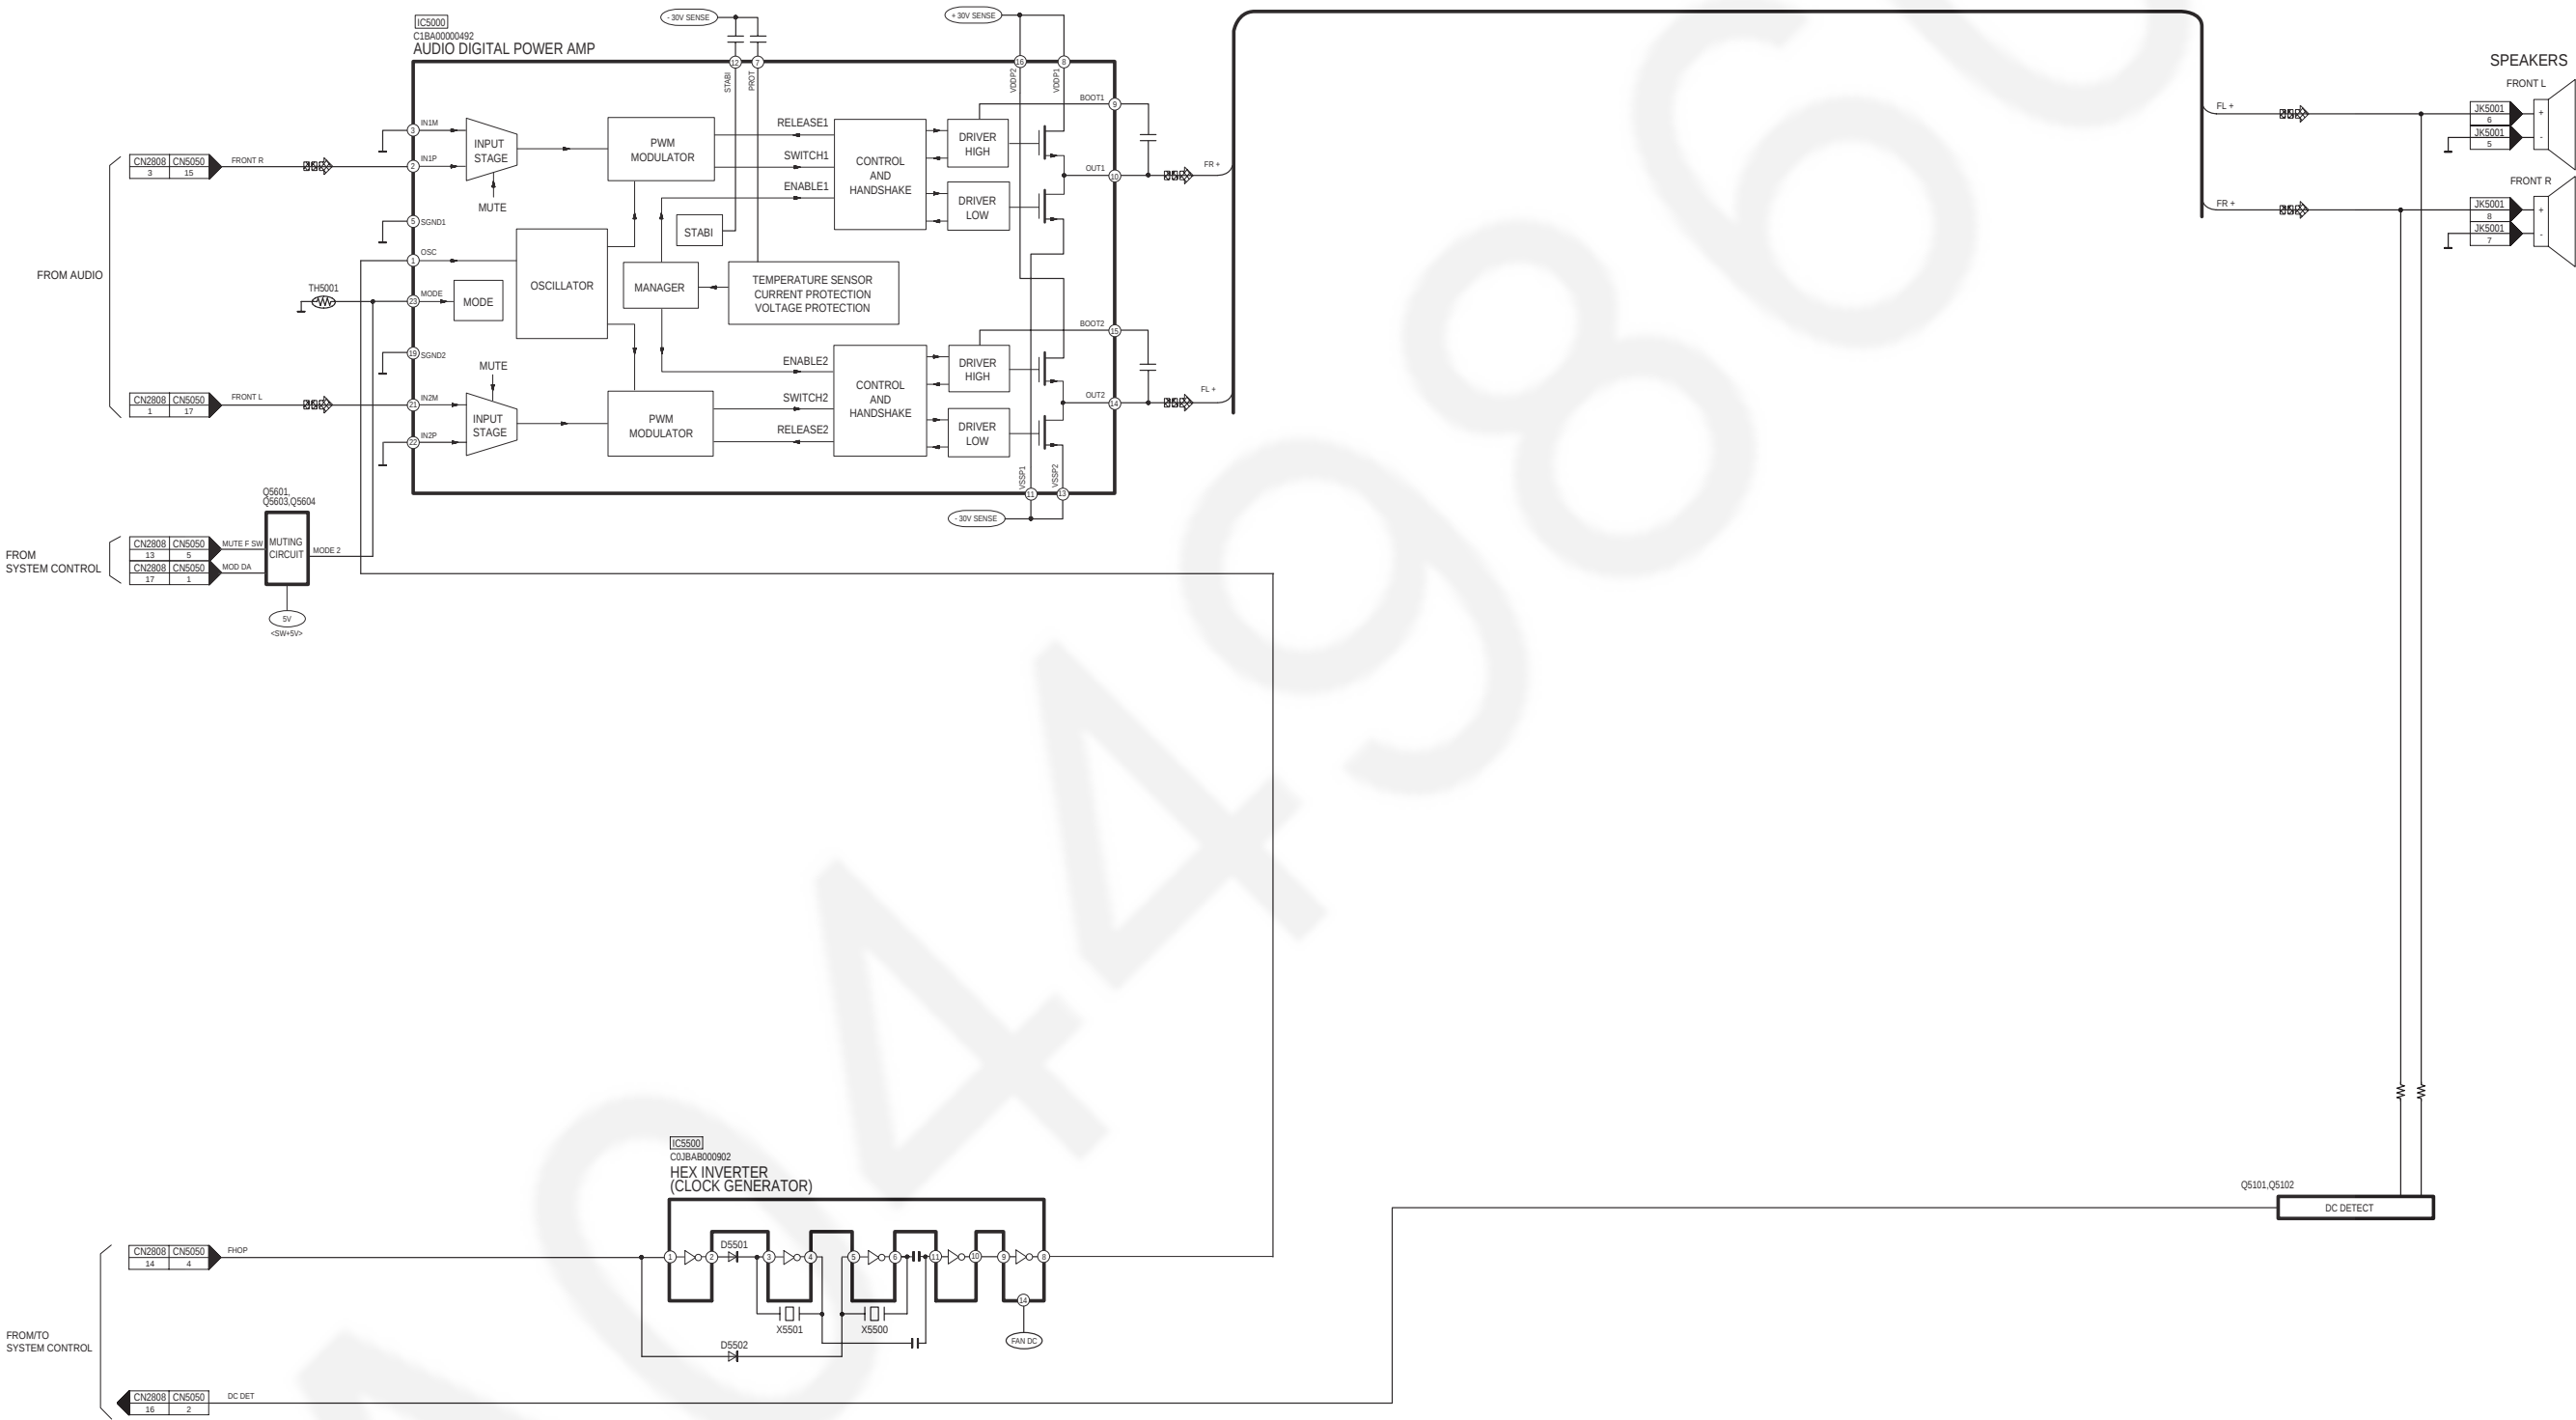


SA-VK480EE D-AMP BLOCK DIAGRAM

15.8. Power

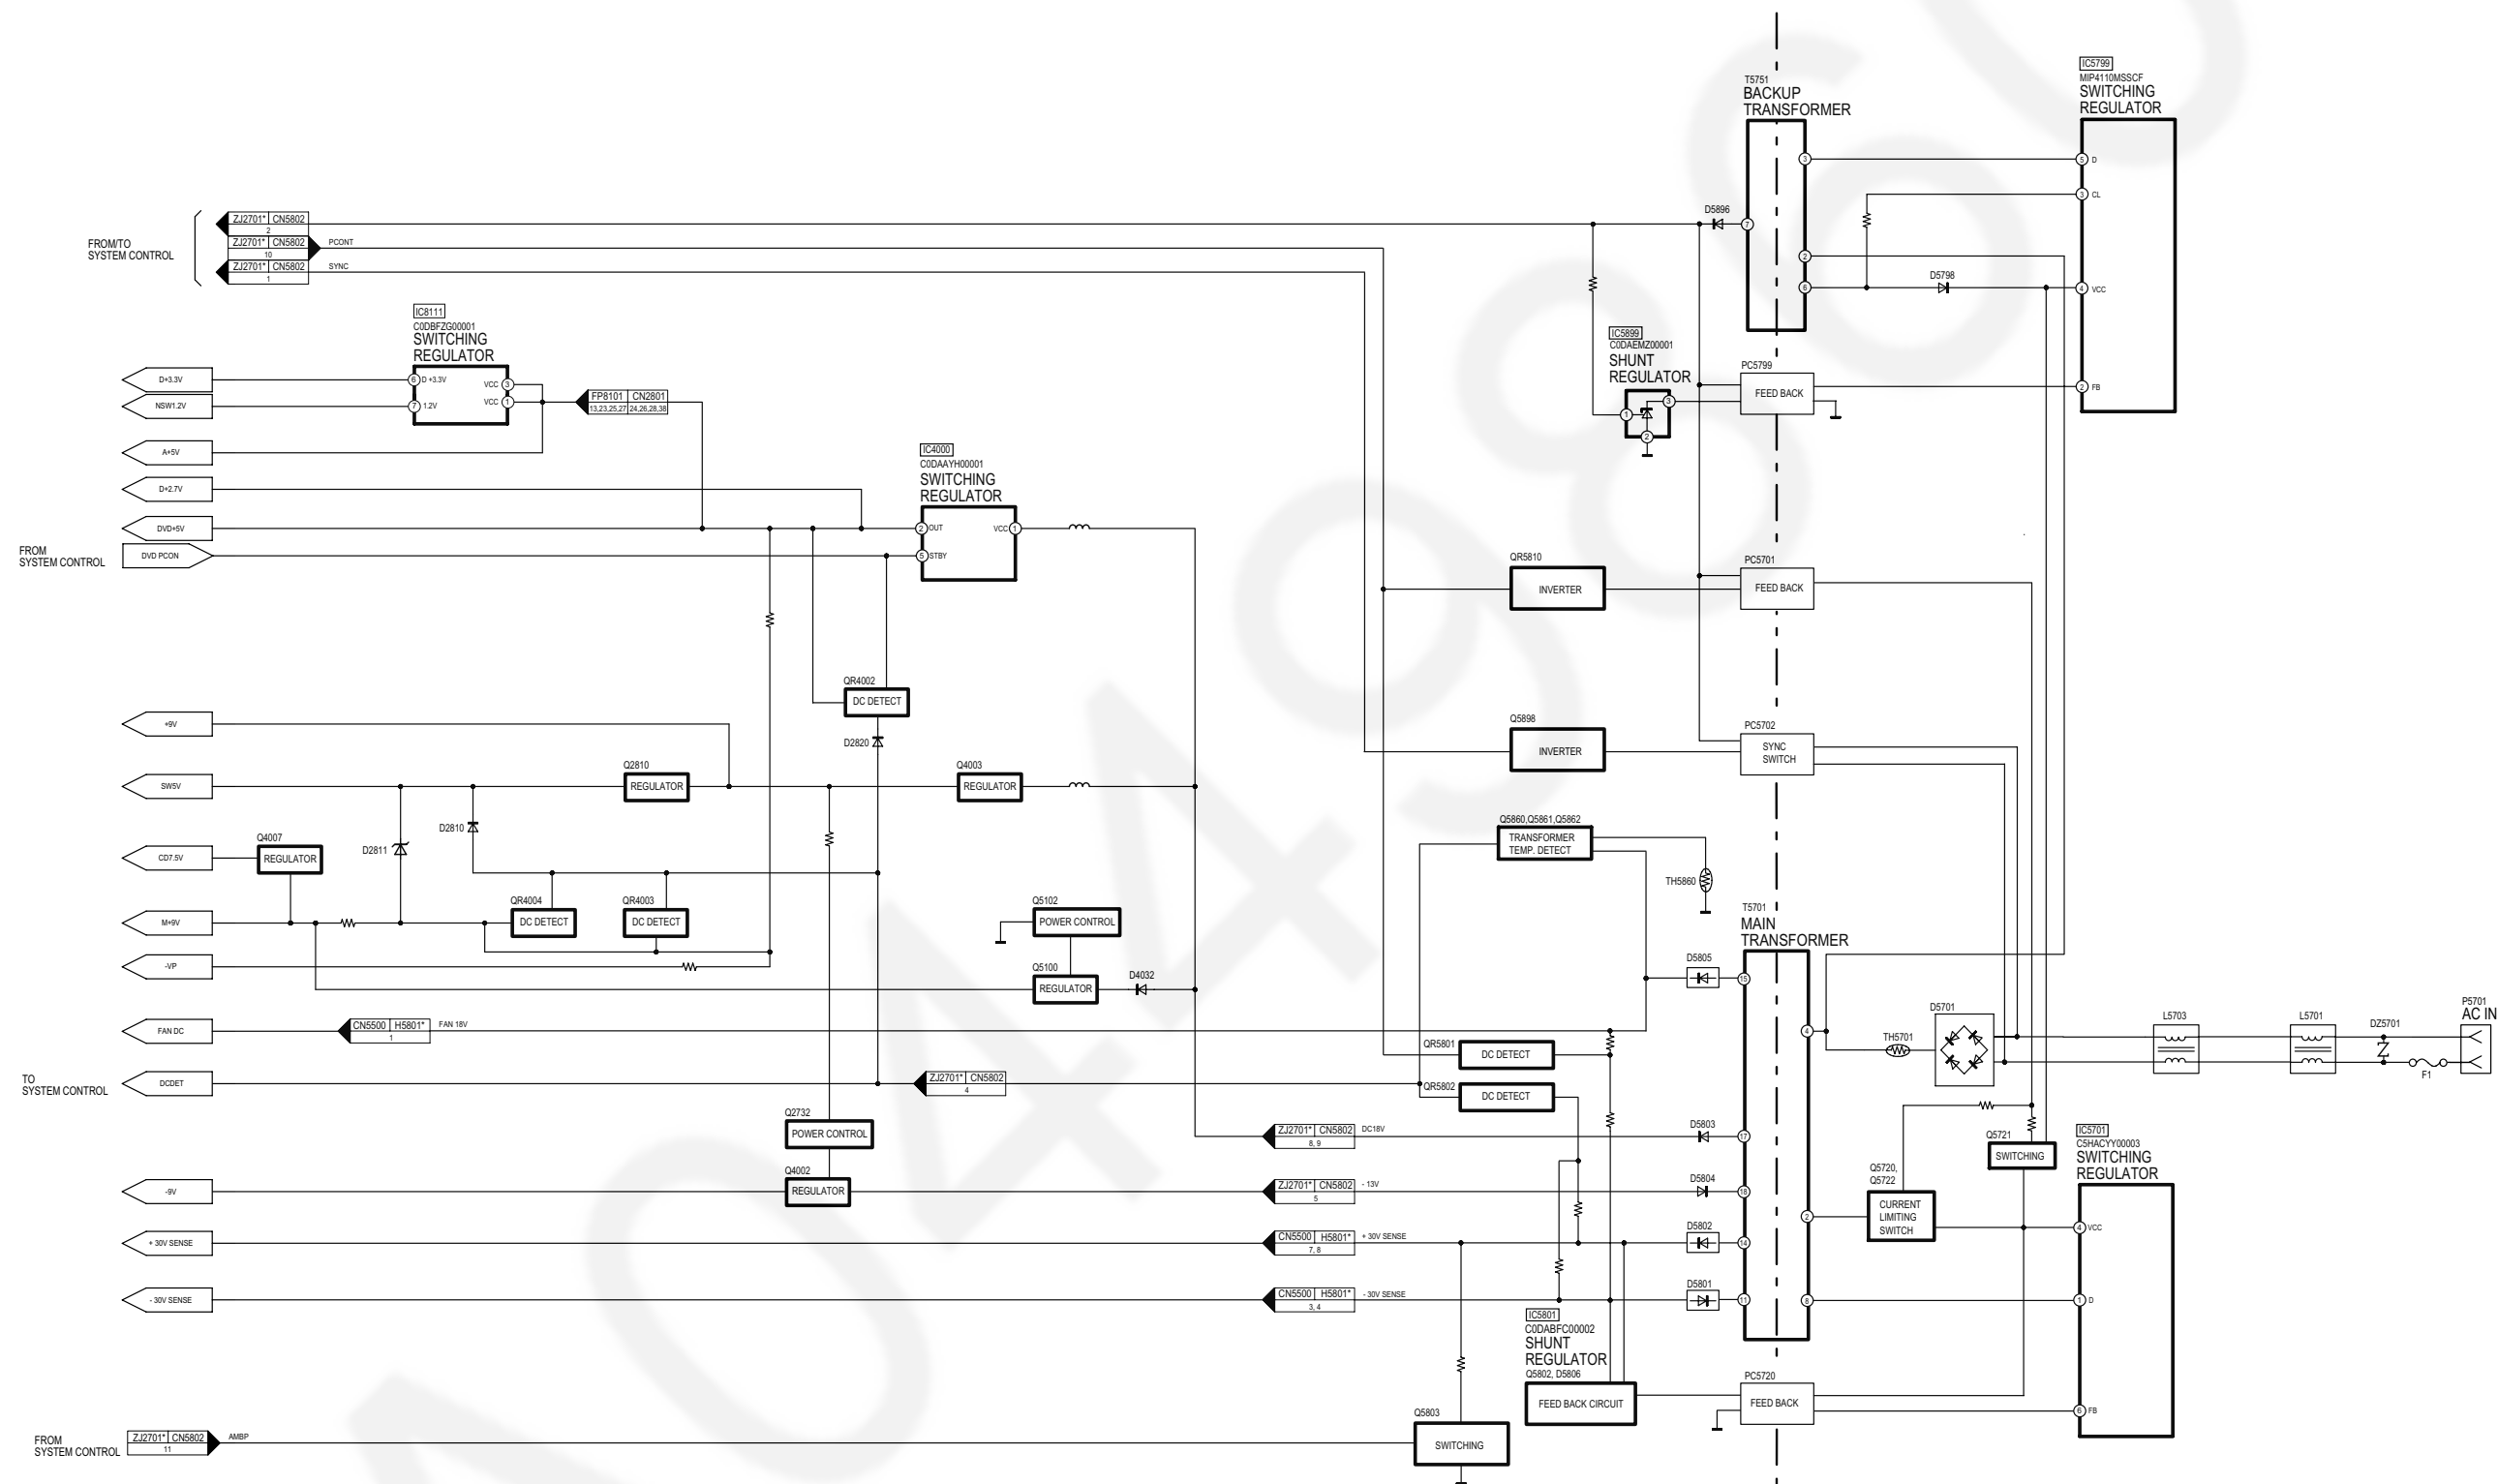

SA-VK480EE POWER BLOCK DIAGRAM

# 16 Wiring Connection Diagram

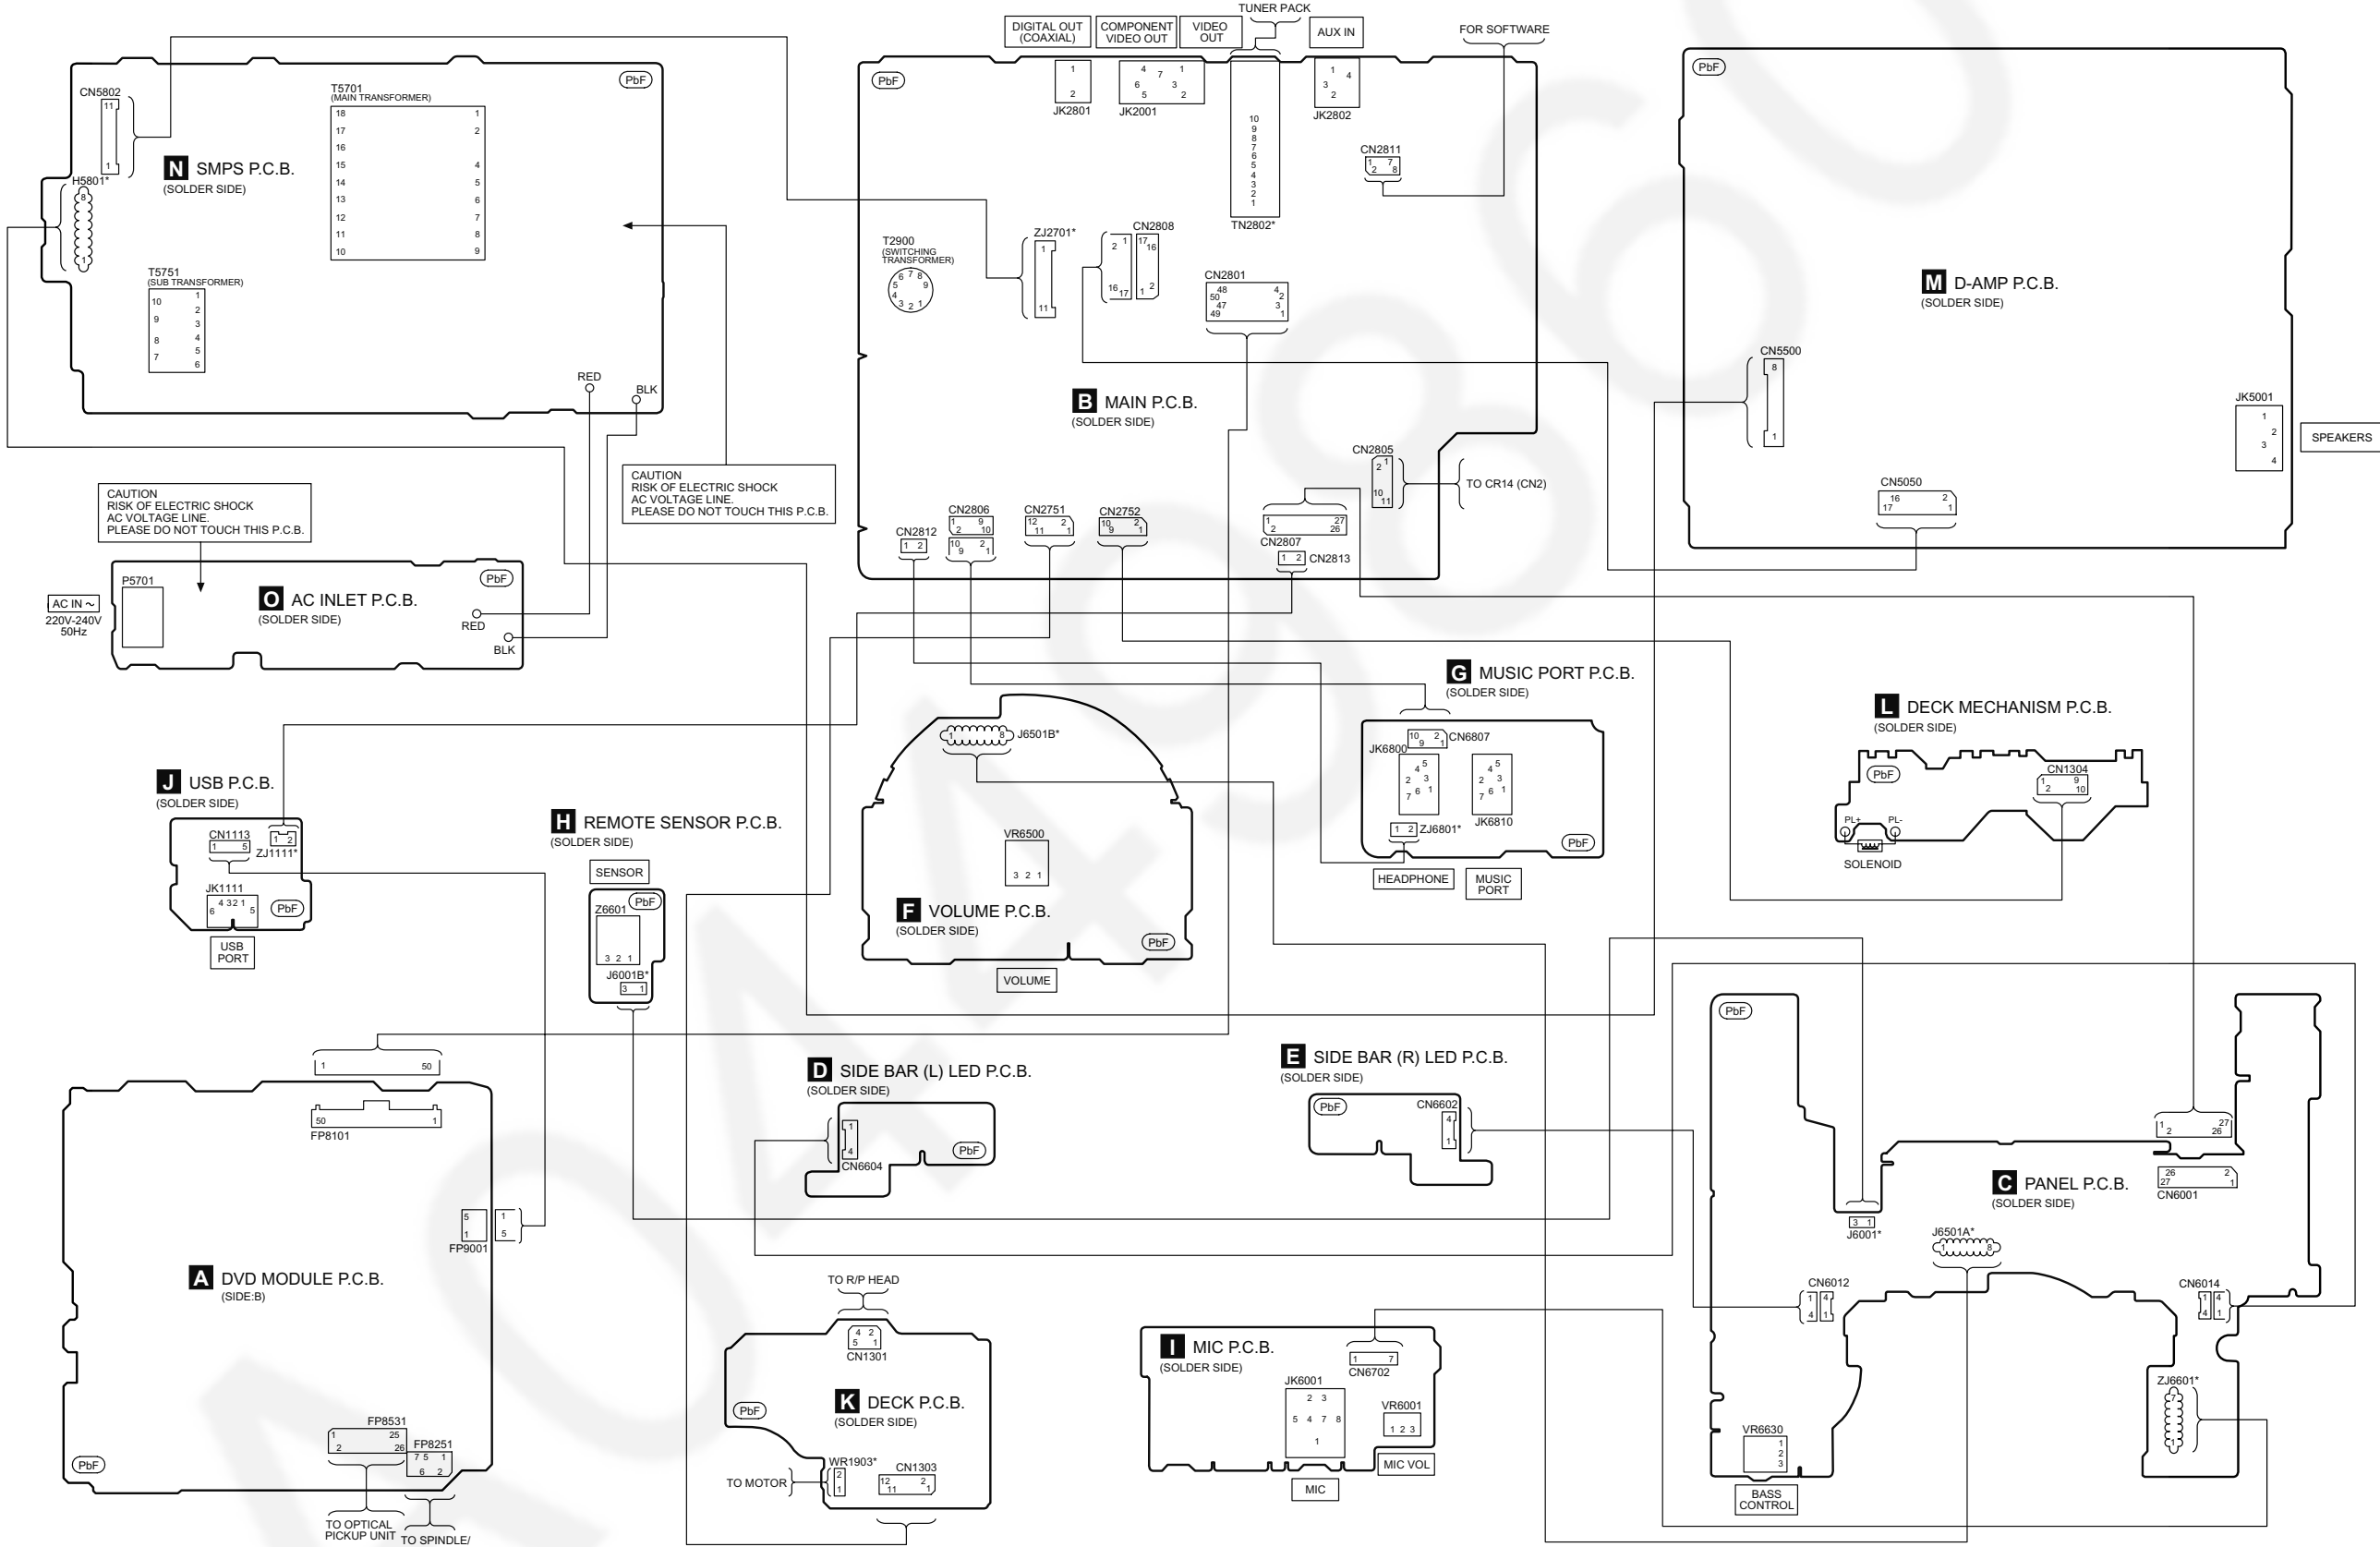

NOTE: " \* " REF IS FOR INDICATION ONLY.

SA-VK480EE WIRING CONNECTION

A0449860

# 17 Schematic Diagram Notes

- This schematic diagram may be modified at any time with the development of new technology.

## Notes:

|                |                                |
|----------------|--------------------------------|
| <b>S951:</b>   | Mode Switch.                   |
| <b>S952:</b>   | Half Switch.                   |
| <b>S953:</b>   | REC Switch.                    |
| <b>S954:</b>   | RECINH_R Switch.               |
| <b>S6100:</b>  | Power (⏻/⏻) Switch.            |
| <b>S6101:</b>  | USB REC.                       |
| <b>S6104:</b>  | Surround Switch.               |
| <b>S6106:</b>  | Tape REC (TAPE ●REC) Switch.   |
| <b>S6108:</b>  | H.Bass Switch.                 |
| <b>S6201:</b>  | Open/Close (▲) Switch.         |
| <b>S6202:</b>  | Exchange (▲) Switch.           |
| <b>S6203:</b>  | Disc 1 ( 1 ►) Switch.          |
| <b>S6204:</b>  | Disc 2 ( 2 ►) Switch.          |
| <b>S6205:</b>  | Disc 3 ( 3 ►) Switch.          |
| <b>S6206:</b>  | Disc 4 ( 4 ►) Switch.          |
| <b>S6207:</b>  | Disc 5 ( 5 ►) Switch.          |
| <b>S6208:</b>  | Stop/Demo (■STOP/DEMO) Switch. |
| <b>S6300:</b>  | △/Forward (△/FF/►►) Switch.    |
| <b>S6301:</b>  | Manual EQ Switch.              |
| <b>S6302:</b>  | ▽/Rewind (▽/REW/◄◄) Switch.    |
| <b>S6303:</b>  | USB (USB ►) Switch.            |
| <b>S6304:</b>  | Tape (◄ ►) Switch.             |
| <b>S6306:</b>  | DVD/CD Switch.                 |
| <b>S6307:</b>  | FM/AM Switch.                  |
| <b>S6308:</b>  | EXT-IN Switch.                 |
| <b>S6820:</b>  | Open (▲) Switch.               |
| <b>VR6001:</b> | MIC VOL Jog.                   |
| <b>VR6500:</b> | Volume Jog.                    |
| <b>VR6630:</b> | Bass Control Jog.              |

- Important safety notice:

Components identified by  mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high quality sound (capacitors), low-noise (resistors), etc are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- In case of AC rated voltage Capacitor, the part no. and values will be indicated in the Schematic Diagram.

AC rated voltage capacitor:

C5700, C5701, C5703, C5704, C5705, C5706, C5707,

- Resistor

Unit of resistance is OHM [ $\Omega$ ] (K=1,000, M=1,000,000).

- Capacitor

Unit of capacitance is  $\mu$ F, unless otherwise noted. F=Farad, pF=Pico-Farad

- Coil

Unit of inductance is H, unless otherwise noted.

• \*

For indication only.

- Test Pad

: Test Pad Position.

- Voltage and signal line

|                                                                                   |                                                |
|-----------------------------------------------------------------------------------|------------------------------------------------|
|  | : +B signal line                               |
|  | : -B signal line                               |
|  | : USB signal line                              |
|  | : CD/DVD/Tape Audio Input signal line          |
|  | : CD/DVD Video Input signal line               |
|  | : CD/DVD Audio & Video Input signal line       |
|  | : AM/FM signal line                            |
|  | : AUX /Mic /Music Port/Audio Input signal line |
|  | : Audio Output Signal Line                     |
|  | : Video Output Signal Line                     |

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE F1 T5AH 250V FUSE



RISK OF FIRE-REPLACE FUSE AS MARKED.

## FUSE CAUTION




These symbols located near the fuse indicates that the fuse used is a fast operating type. For continued protection against fire hazard, replace with the same type fuse. For rating, refer to the marking adjacent to the symbol.

A0449860

# 18 Schematic Diagram


## 18.1. DVD Module Circuit

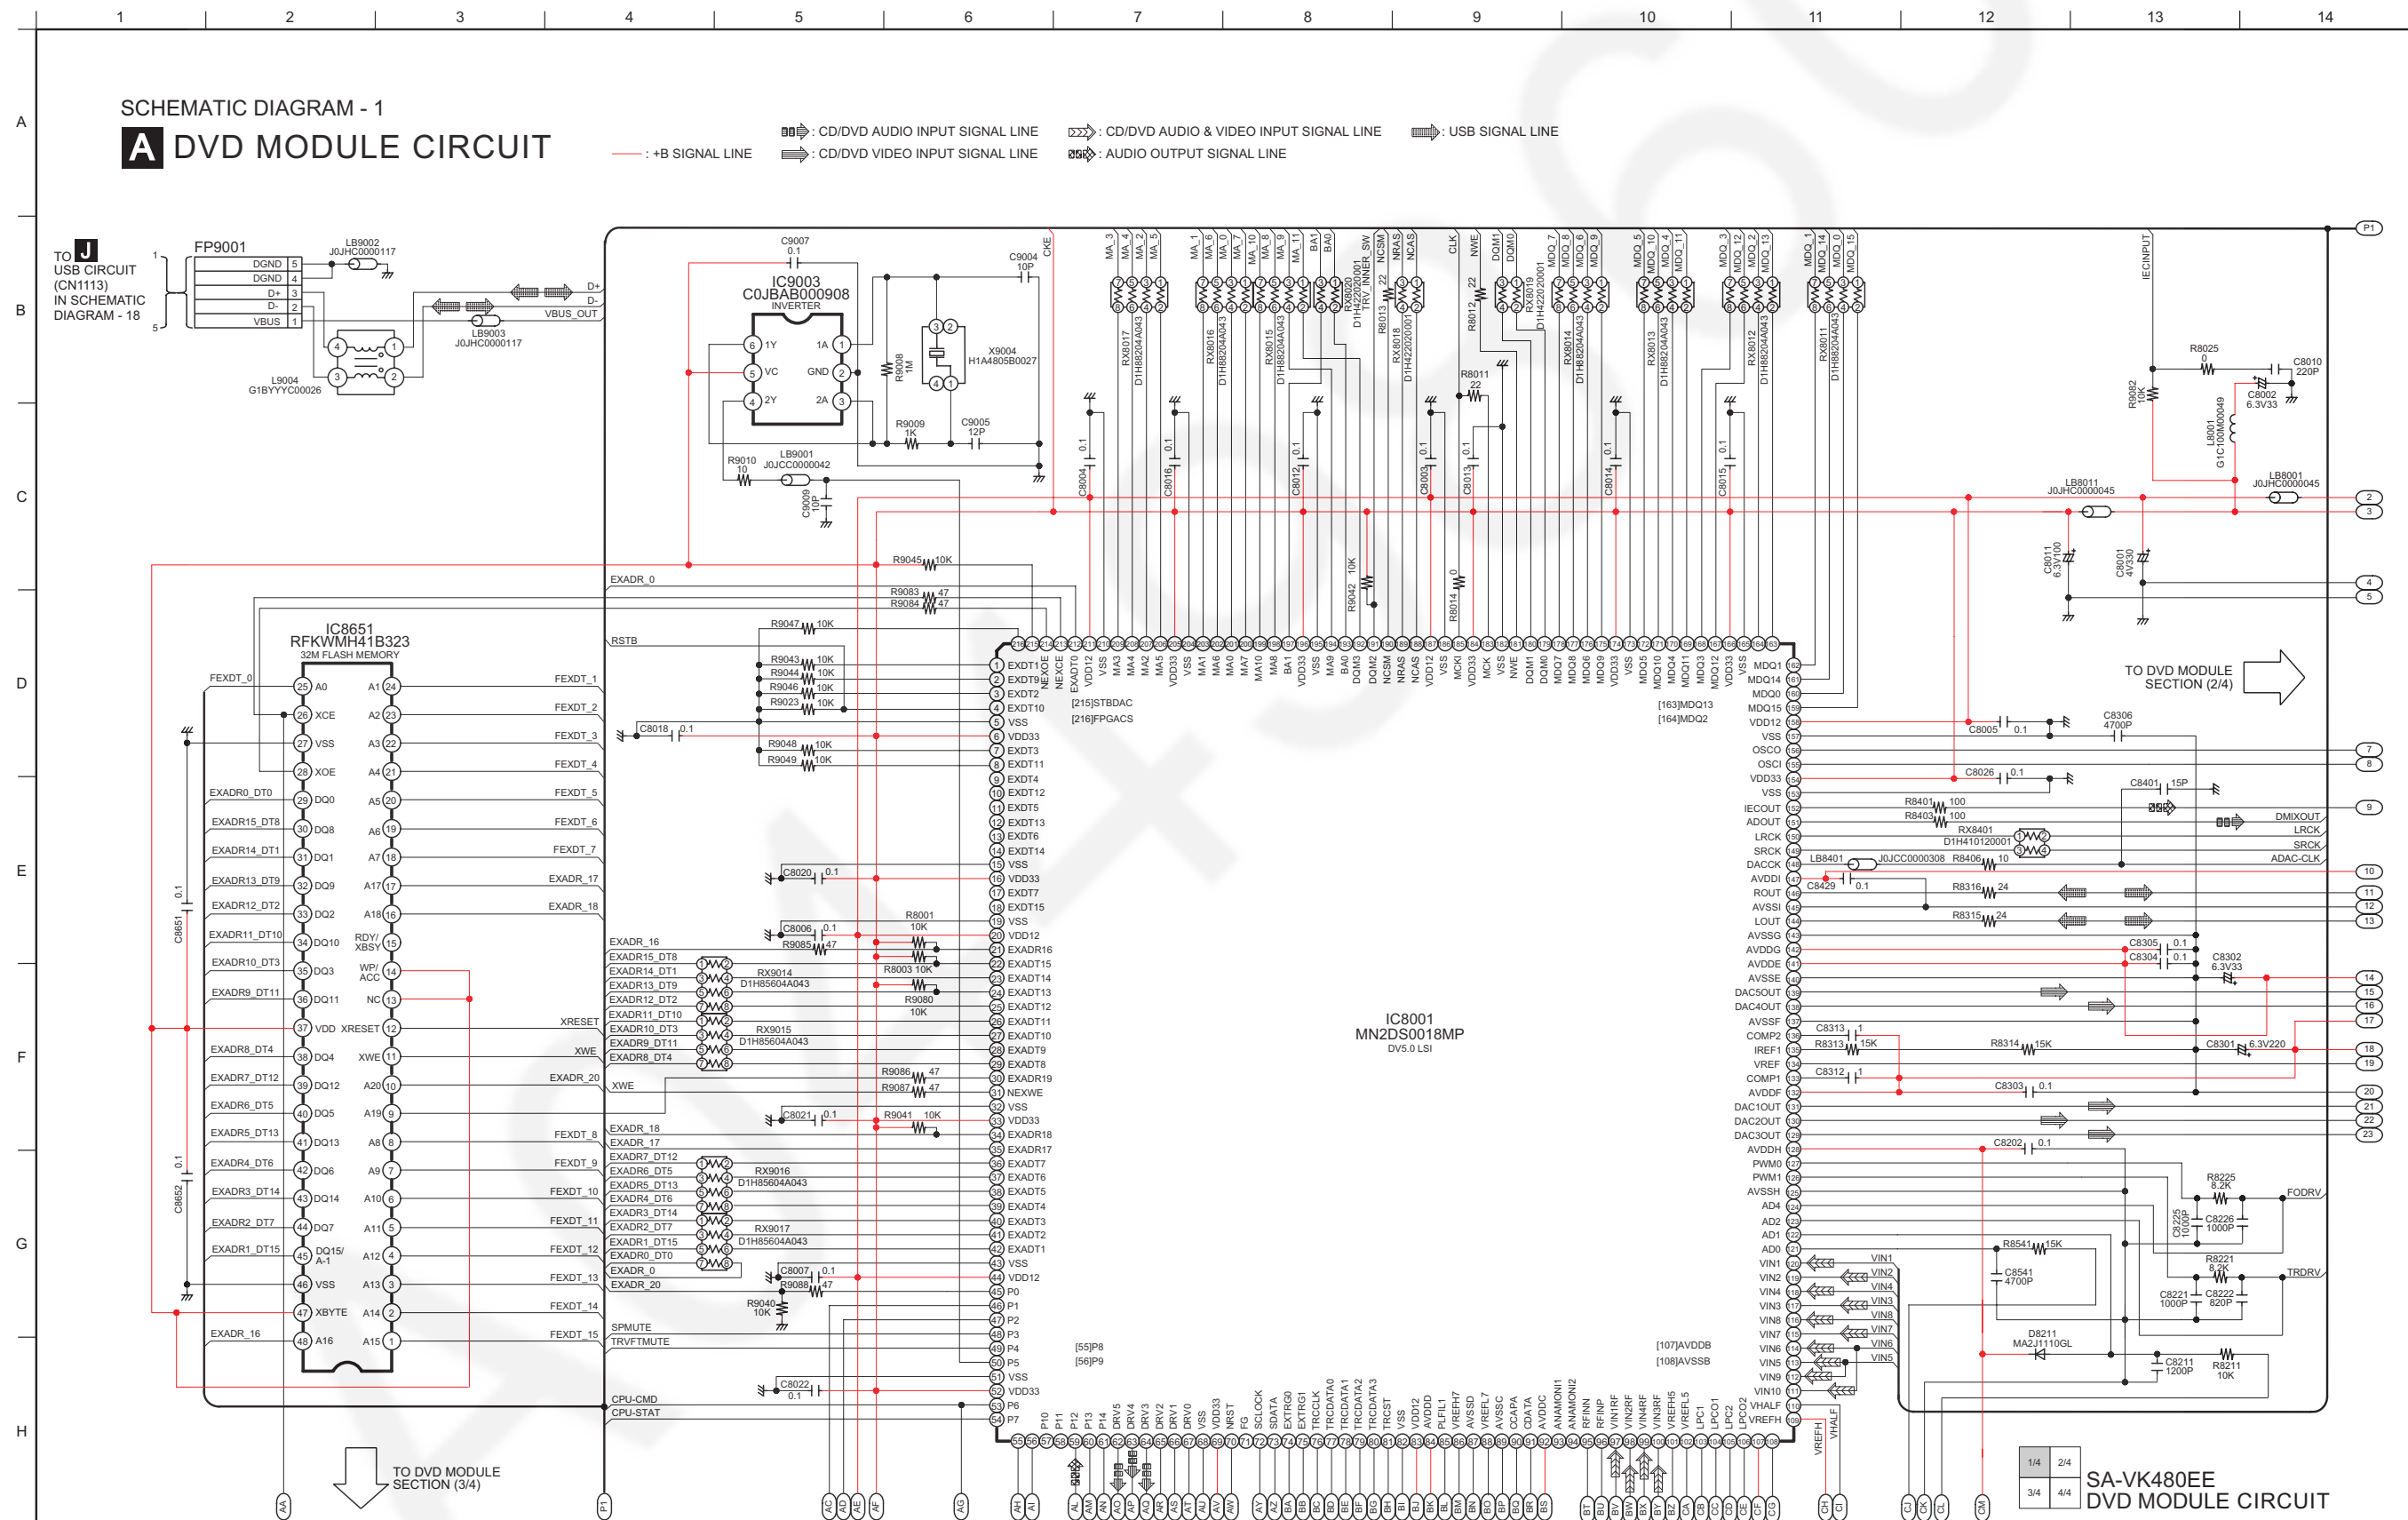

# SCHEMATIC DIAGRAM - 2

## A DVD MODULE CIRCUIT

: +B SIGNAL LINE  
 : CD/DVD VIDEO INPUT SIGNAL LINE  
 : CD/DVD AUDIO INPUT SIGNAL LINE  
 : CD/DVD AUDIO & VIDEO INPUT SIGNAL LINE  
 : AUDIO OUTPUT SIGNAL LINE  
 : USB SIGNAL LINE

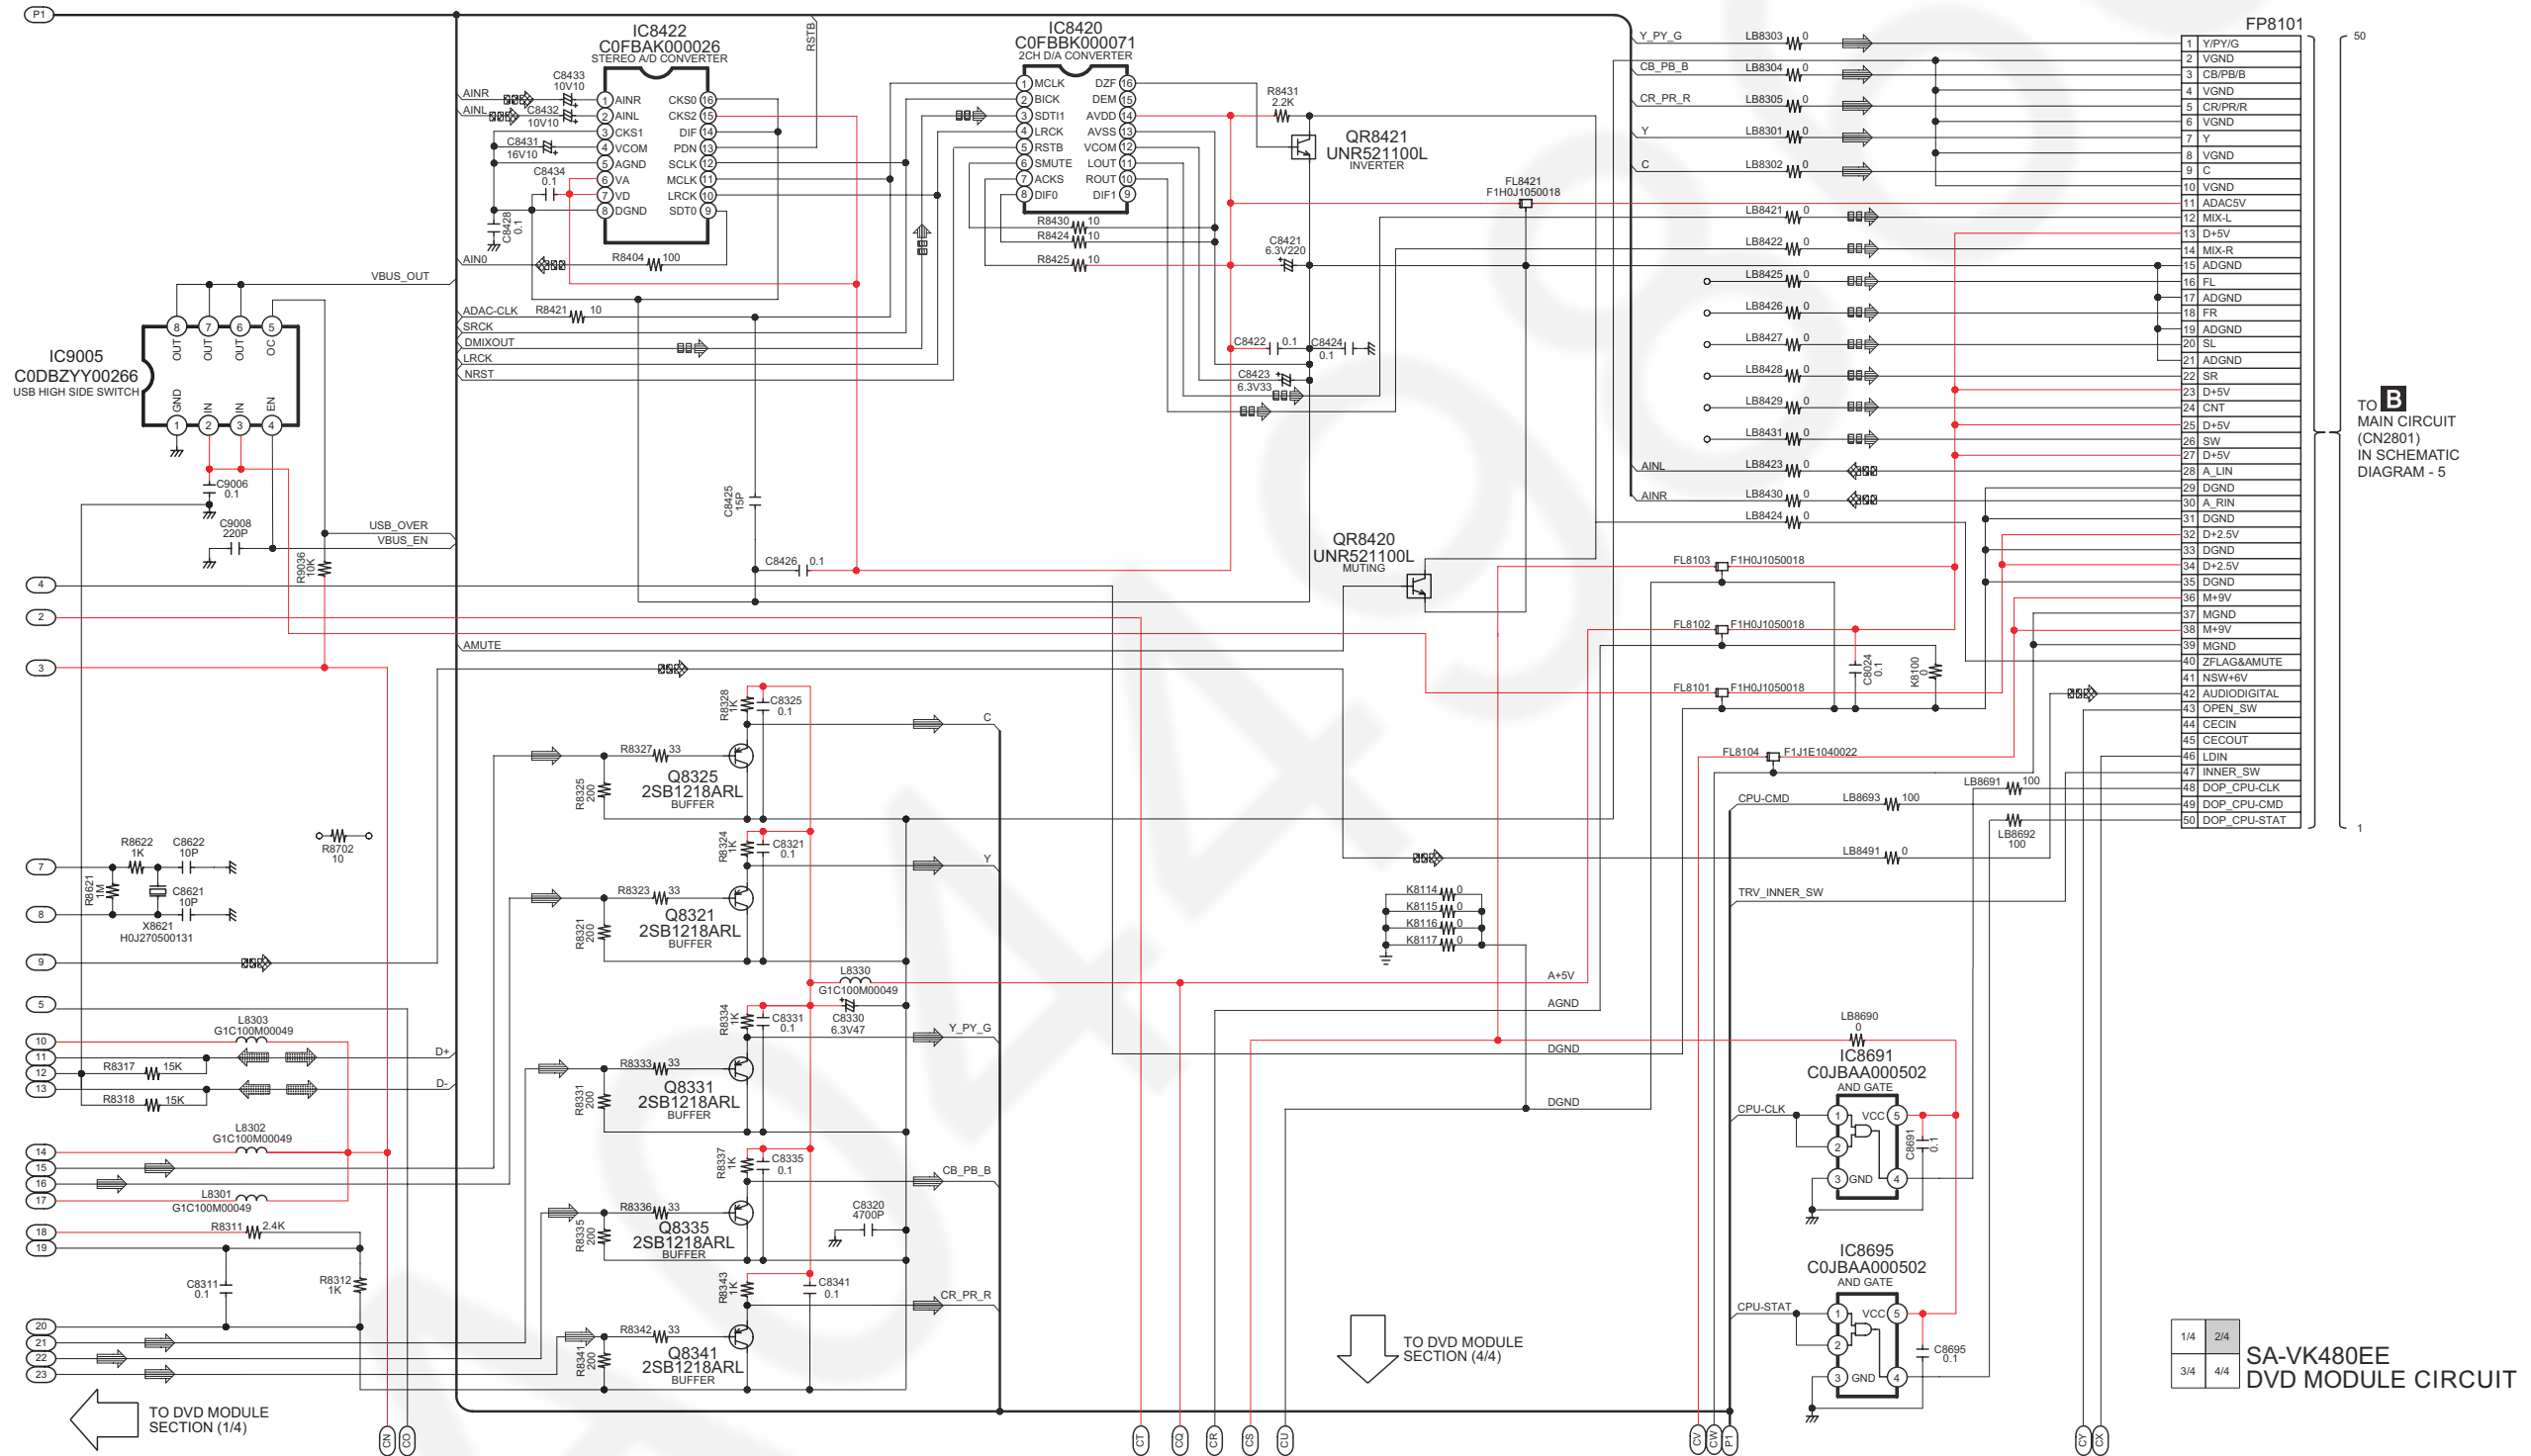

1/4 2/4  
3/4 4/4  
**SA-VK480EE**  
**DVD MODULE CIRCUIT**


## A DVD MODULE CIRCUIT




## A DVD MODULE CIRCUIT




## 18.2. Main Circuit

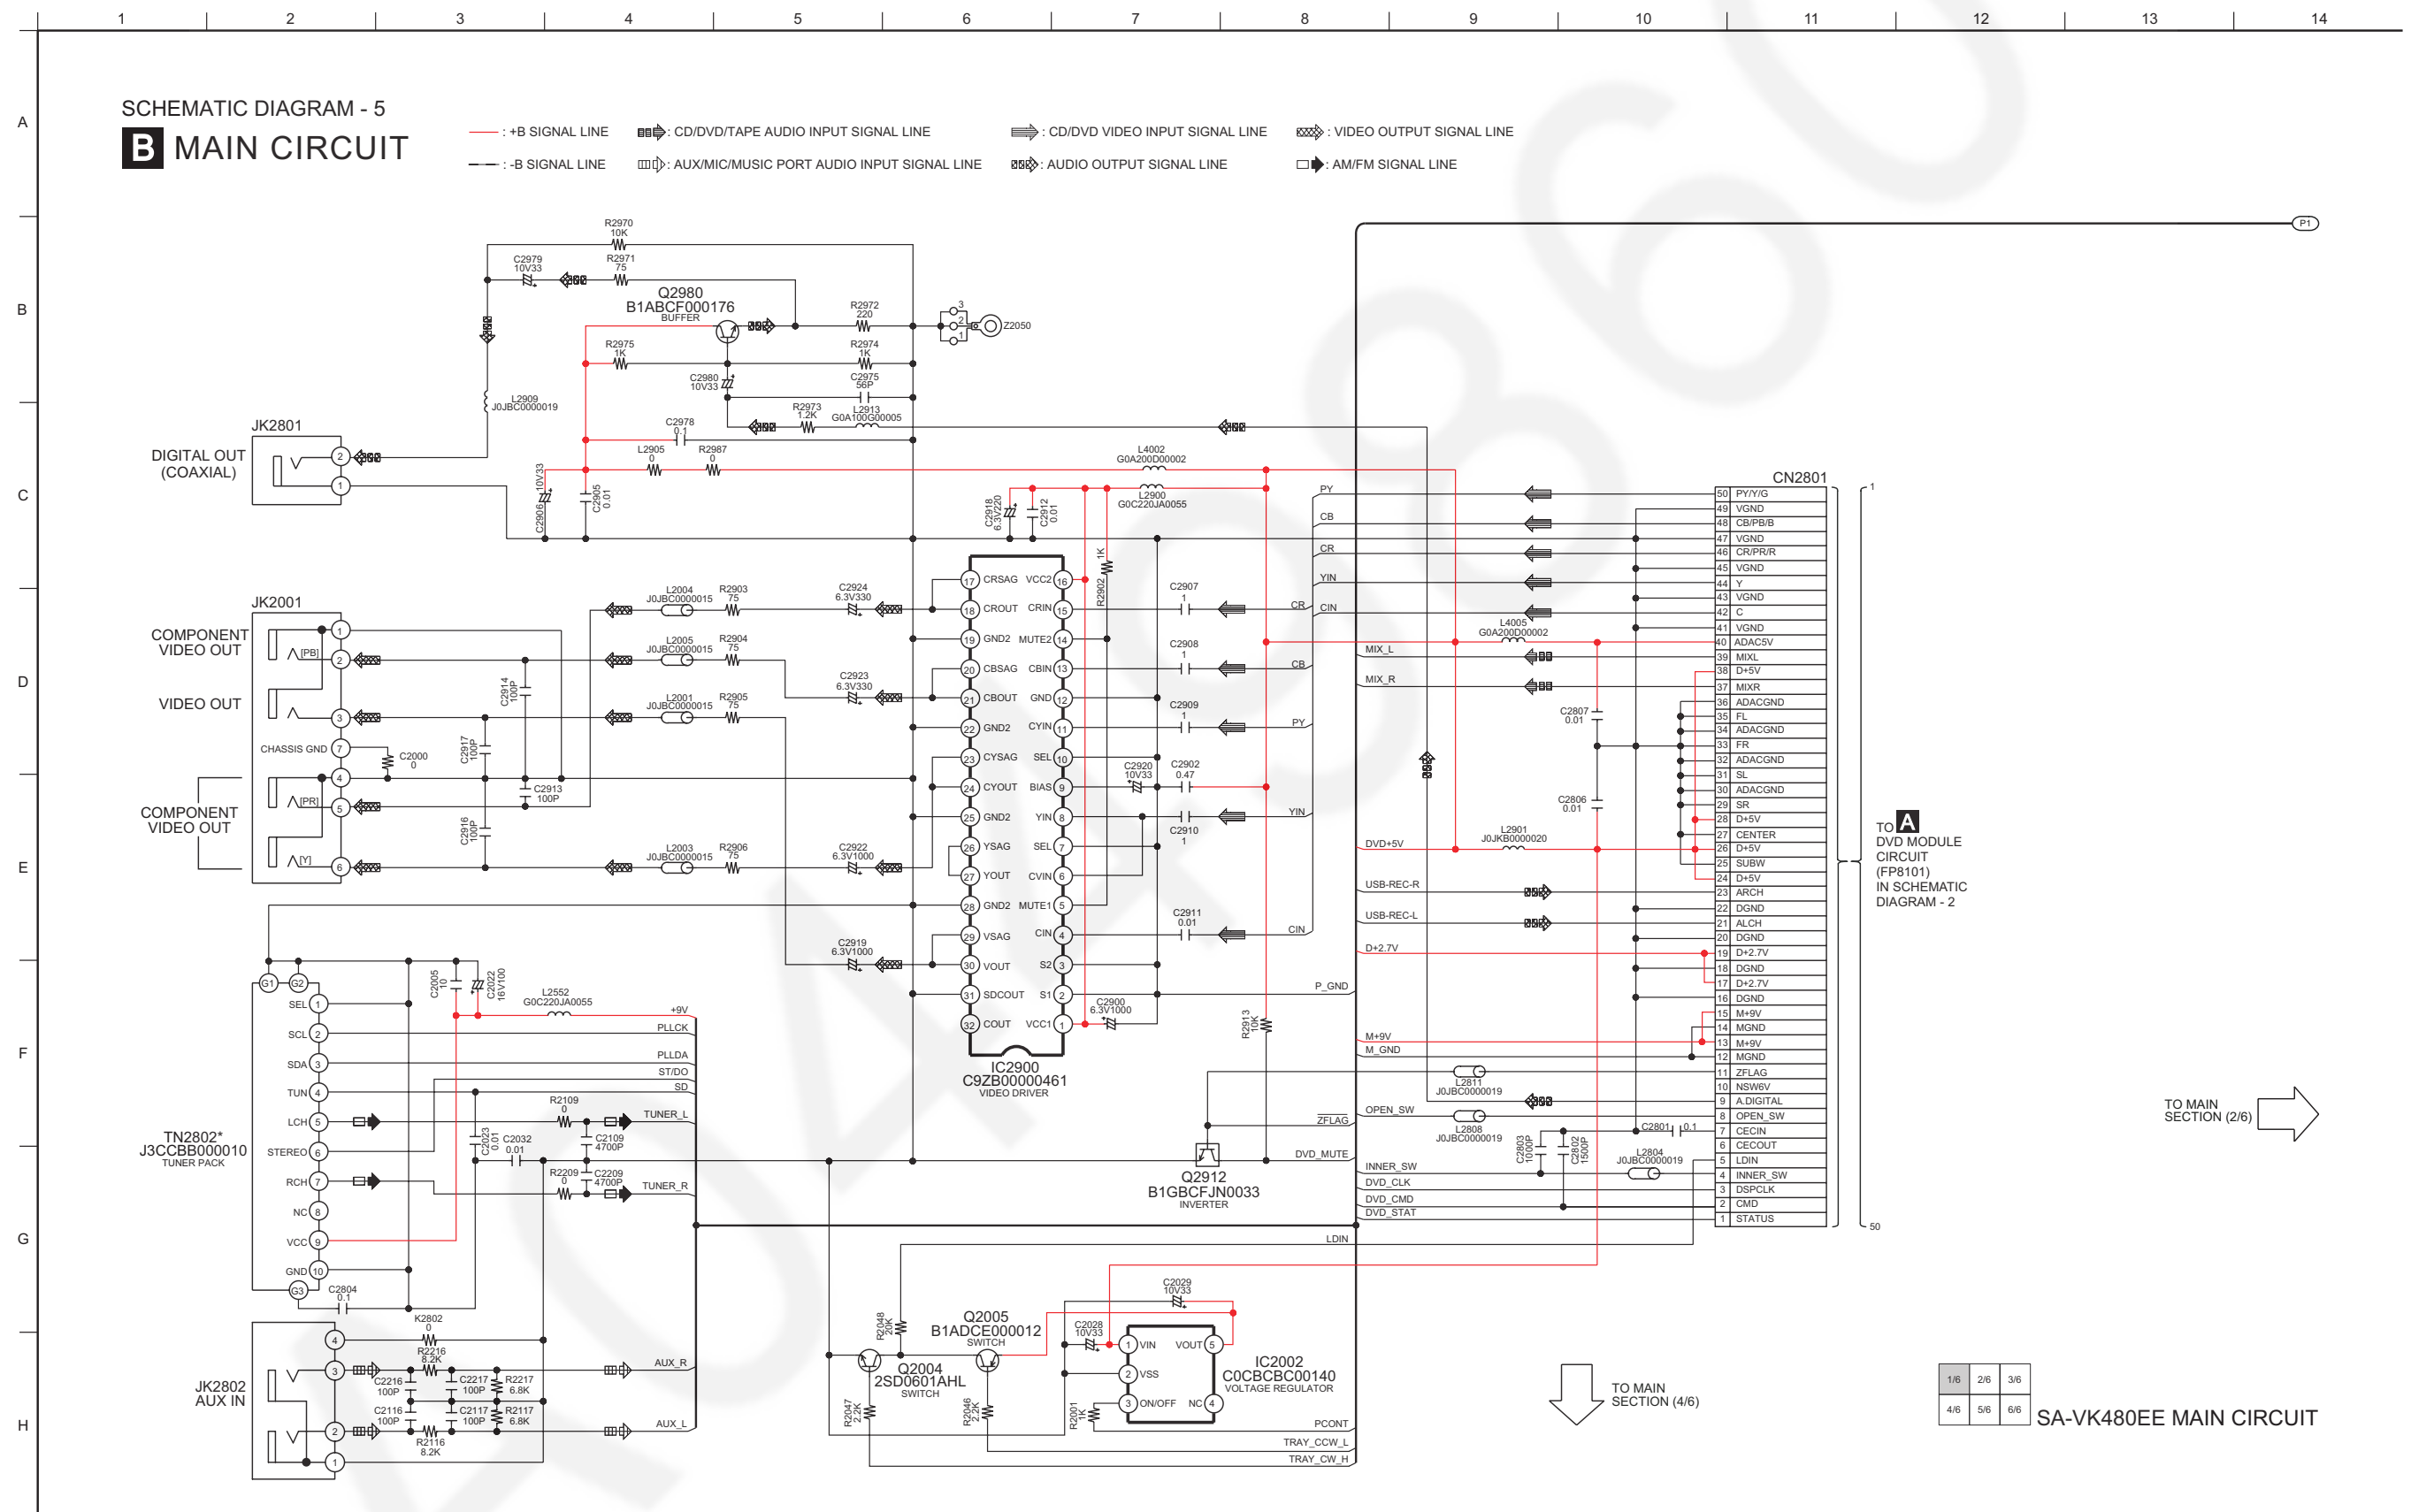

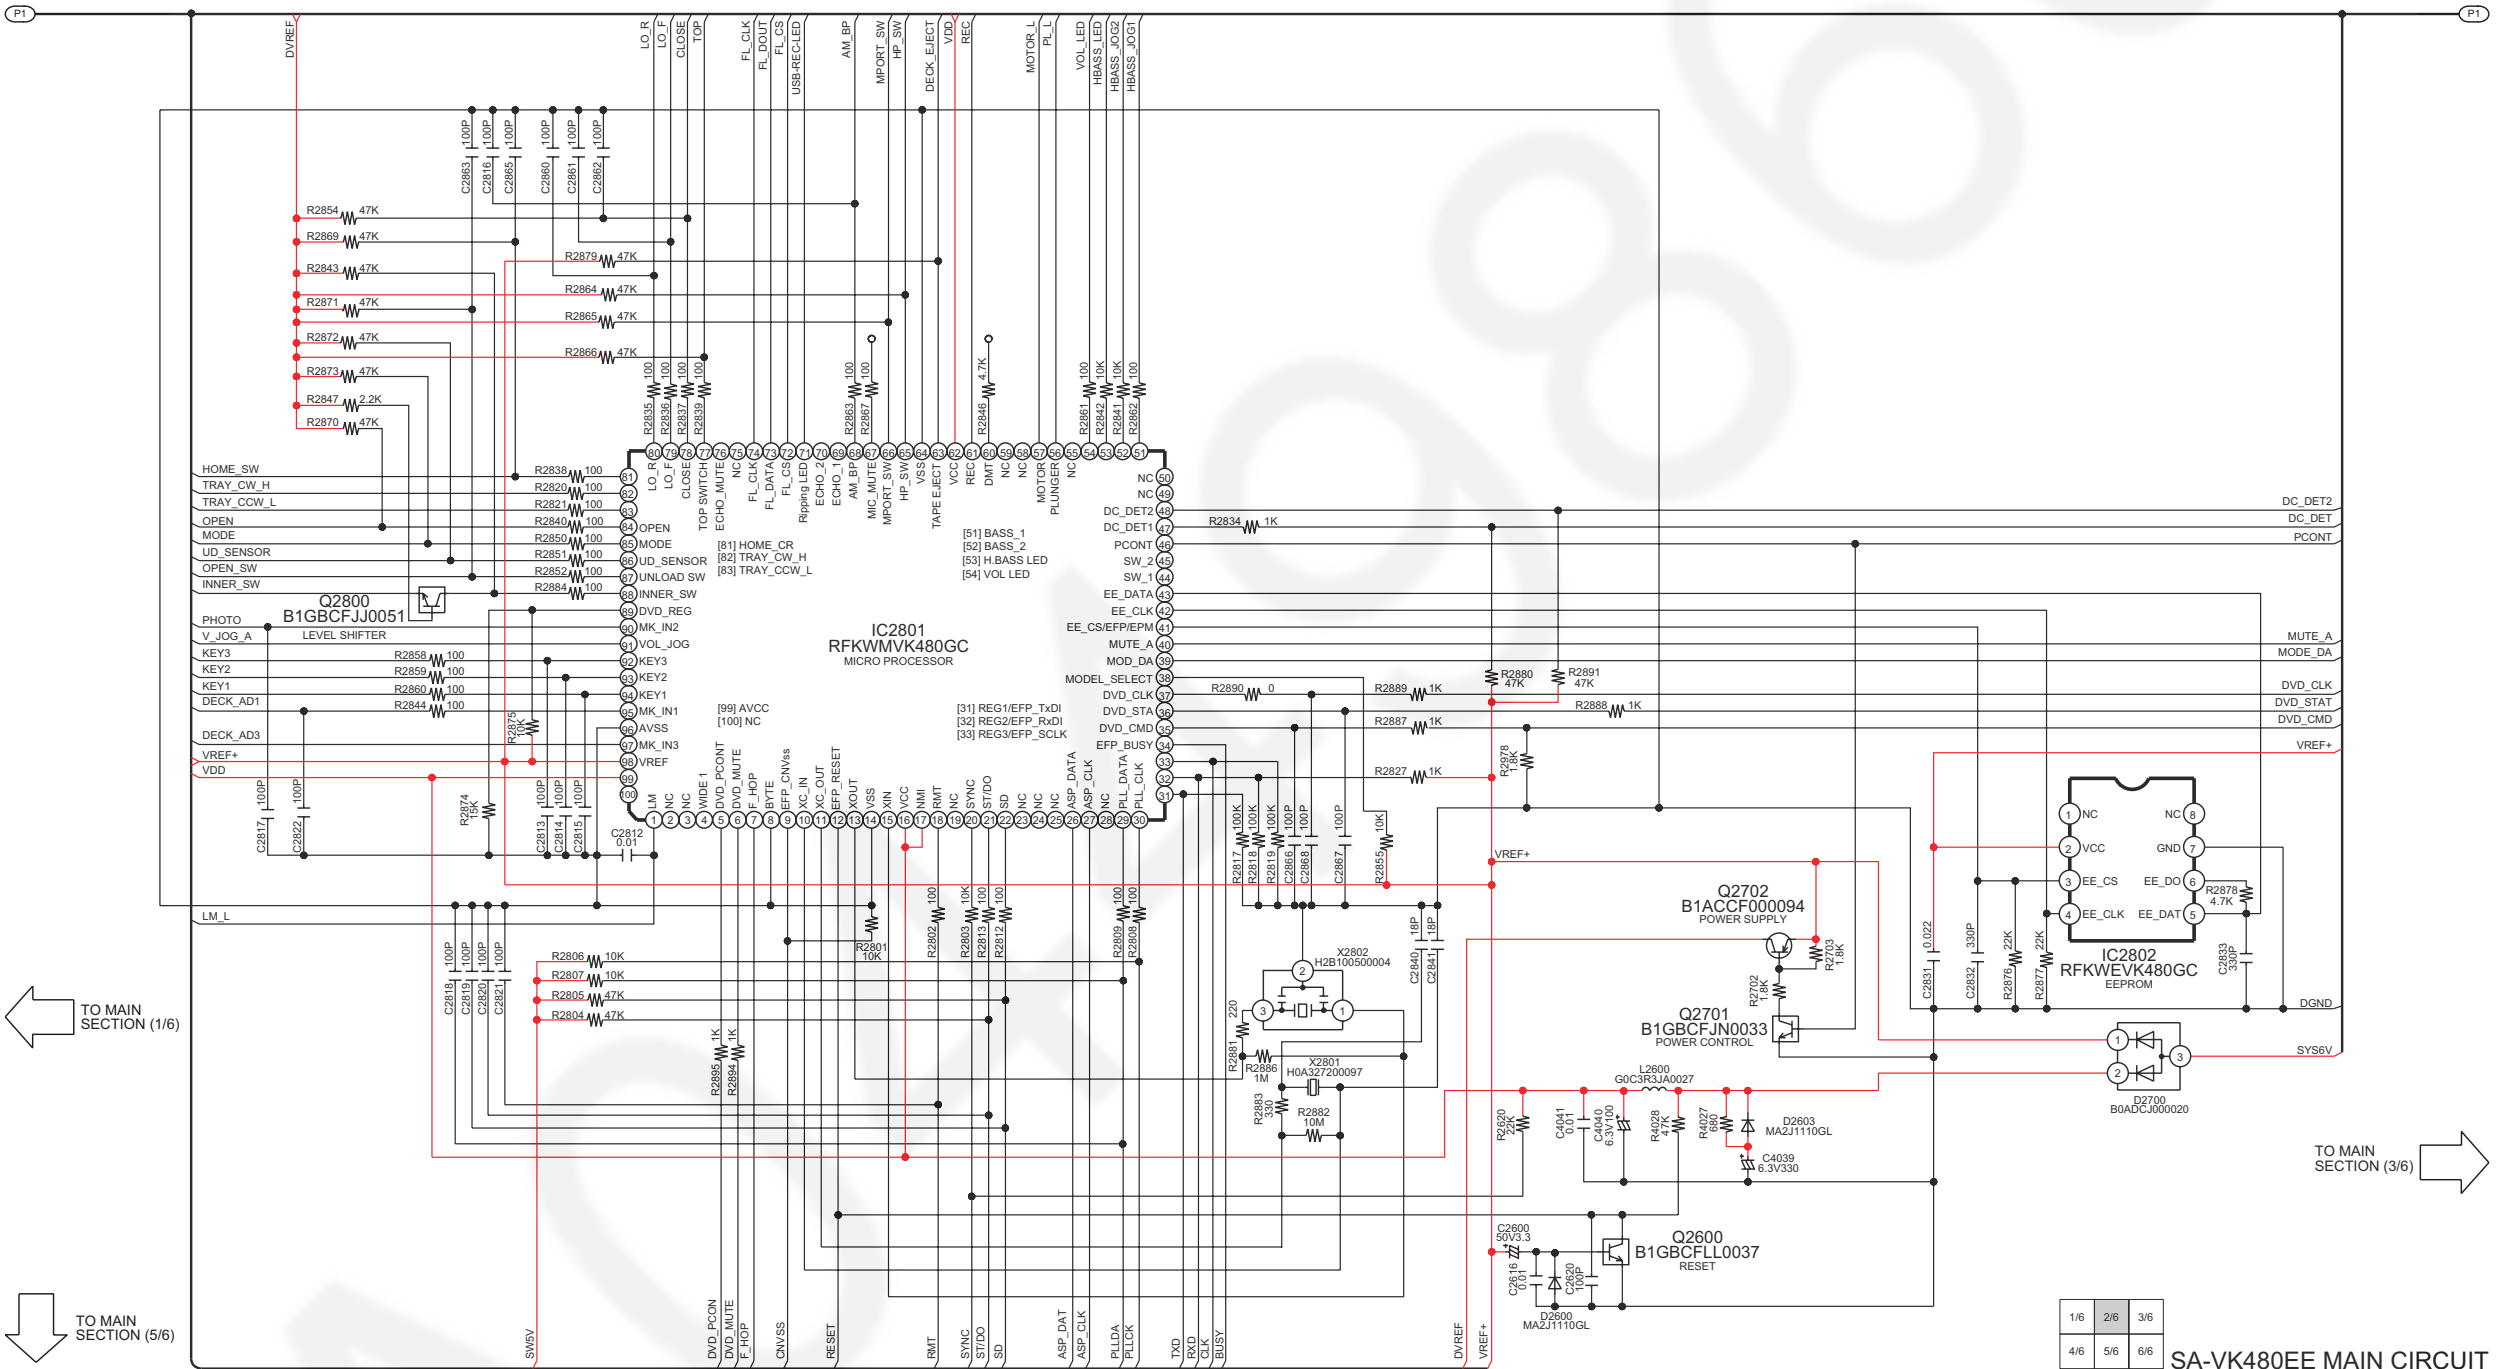

SCHEMATIC DIAGRAM - 7  
**B** MAIN CIRCUIT


— : +B SIGNAL LINE    : CD/DVD/TAPE AUDIO INPUT SIGNAL LINE    : CD/DVD VIDEO INPUT SIGNAL LINE    : VIDEO OUTPUT SIGNAL LINE  
- - - : -B SIGNAL LINE    : AUX/MIC/MUSIC PORT AUDIO INPUT SIGNAL LINE    : AUDIO OUTPUT SIGNAL LINE    : AM/FM SIGNAL LINE

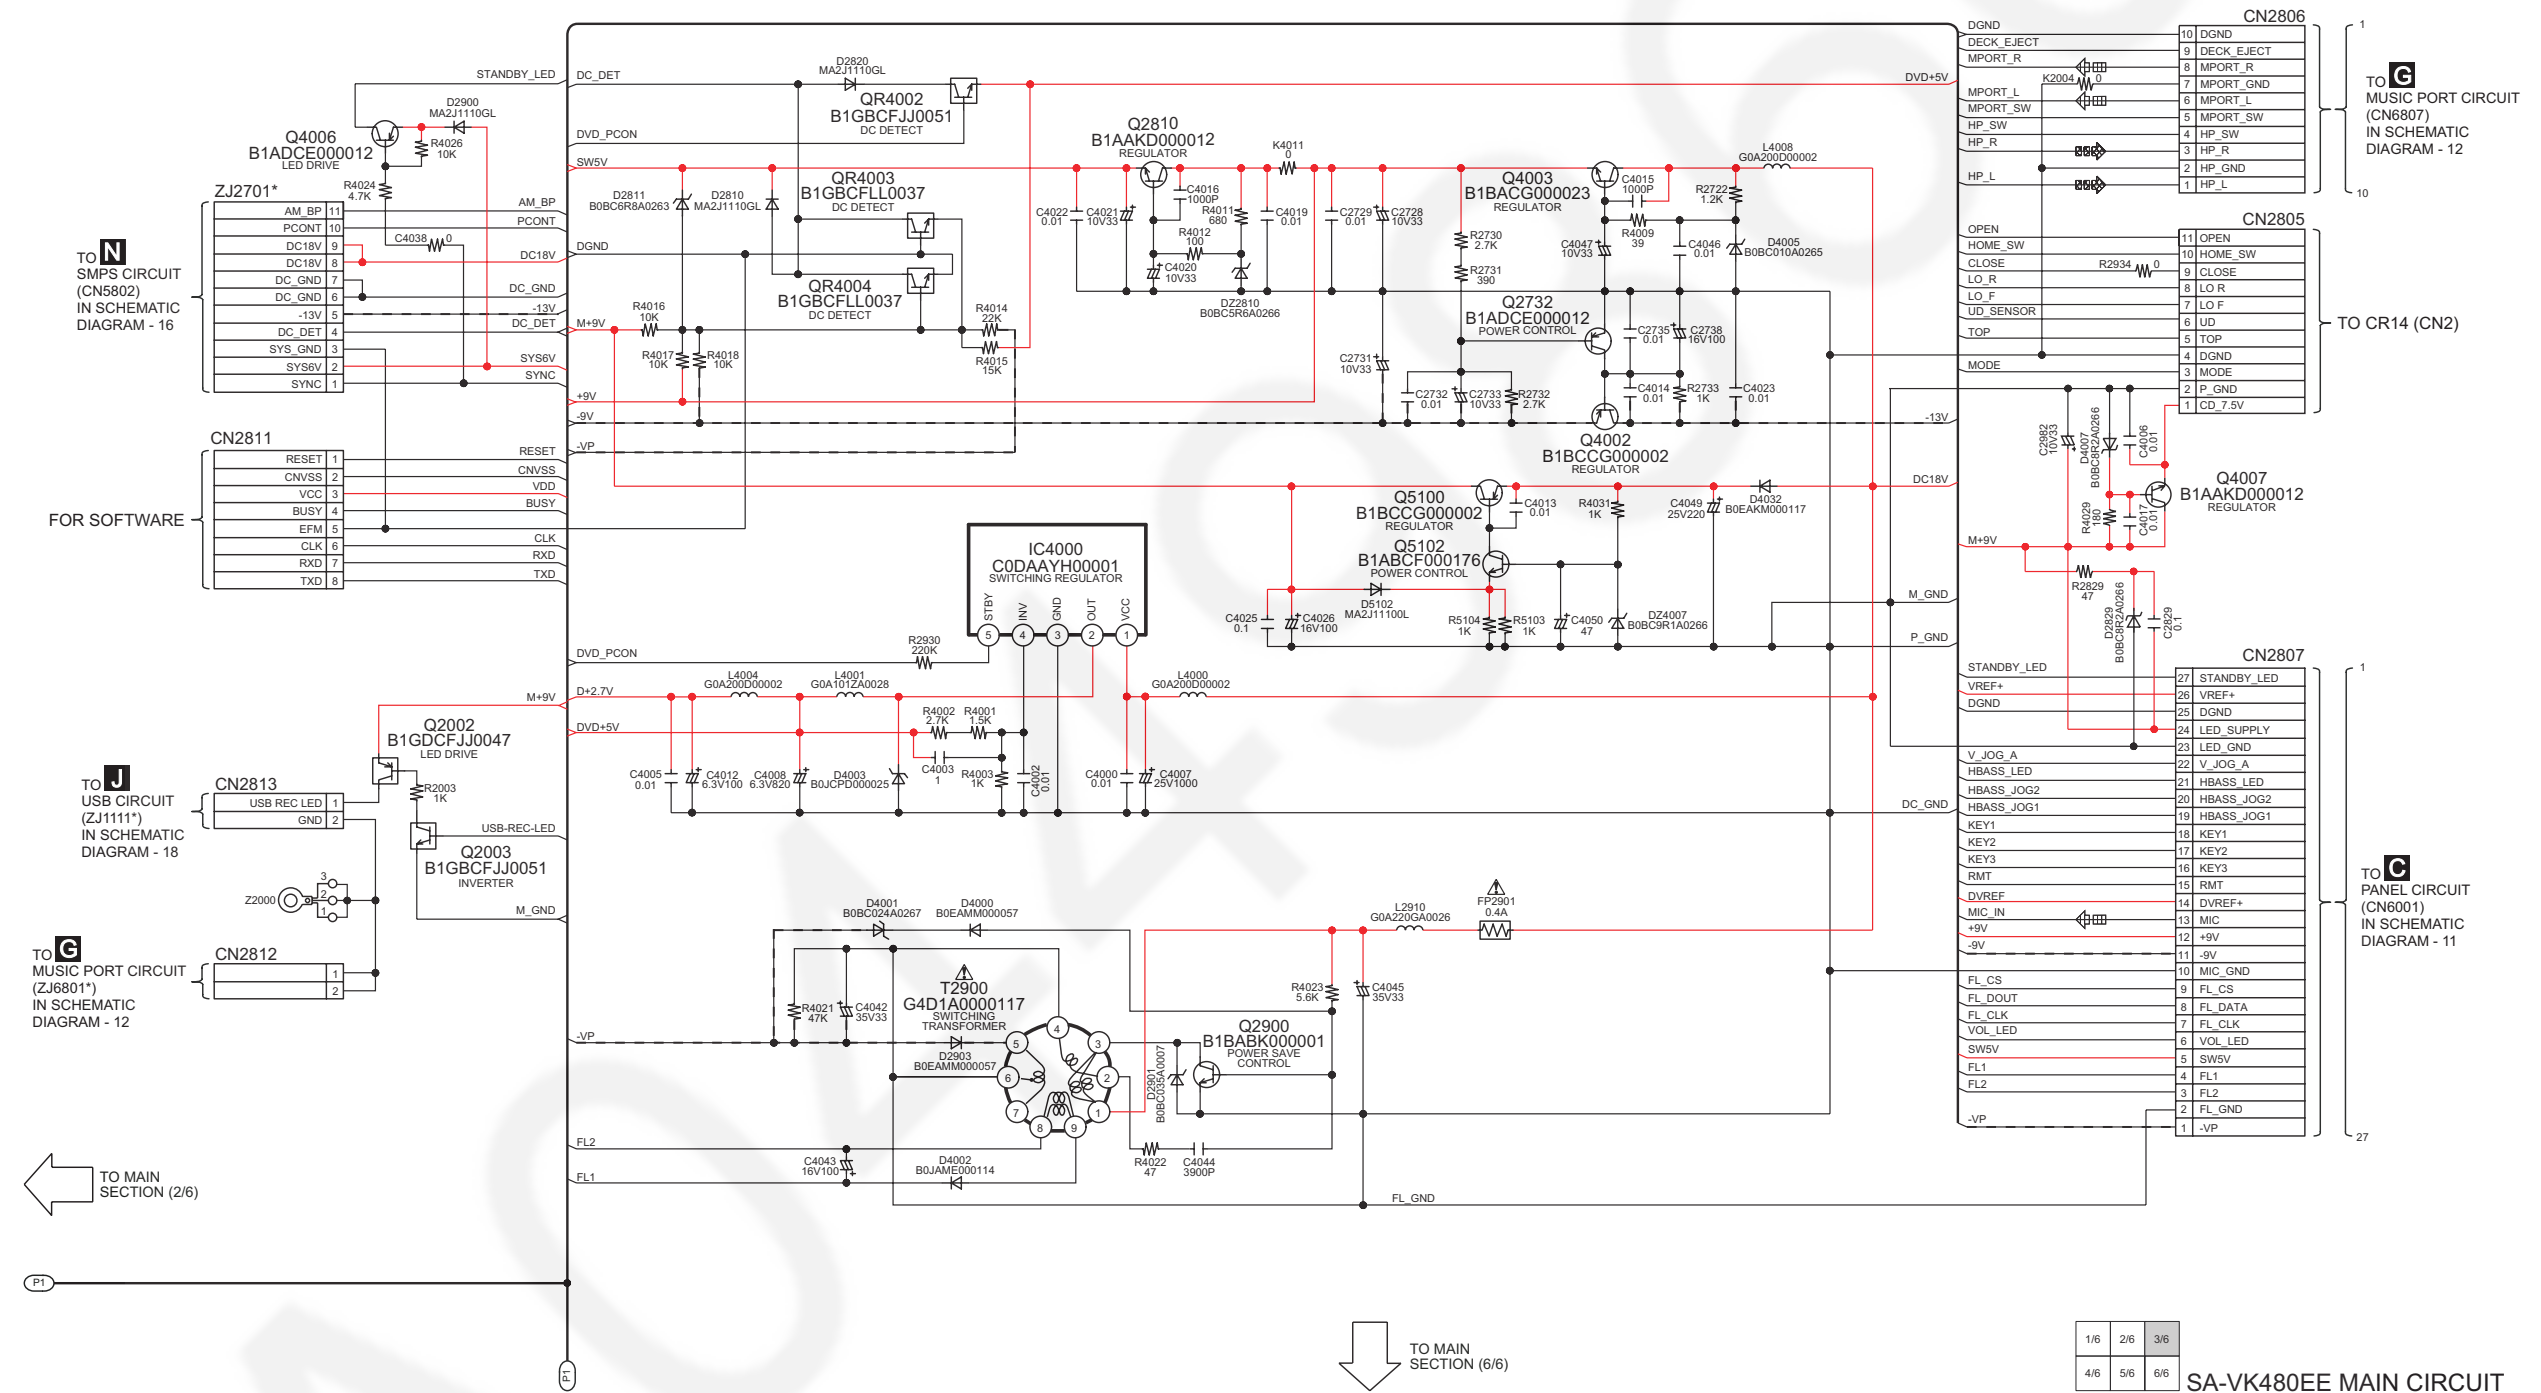


## B MAIN CIRCUIT




## B MAIN CIRCUIT



## B MAIN CIRCUIT




### 18.3. Panel, Side Bar (L) Led & Side Bar (R) Led Circuit

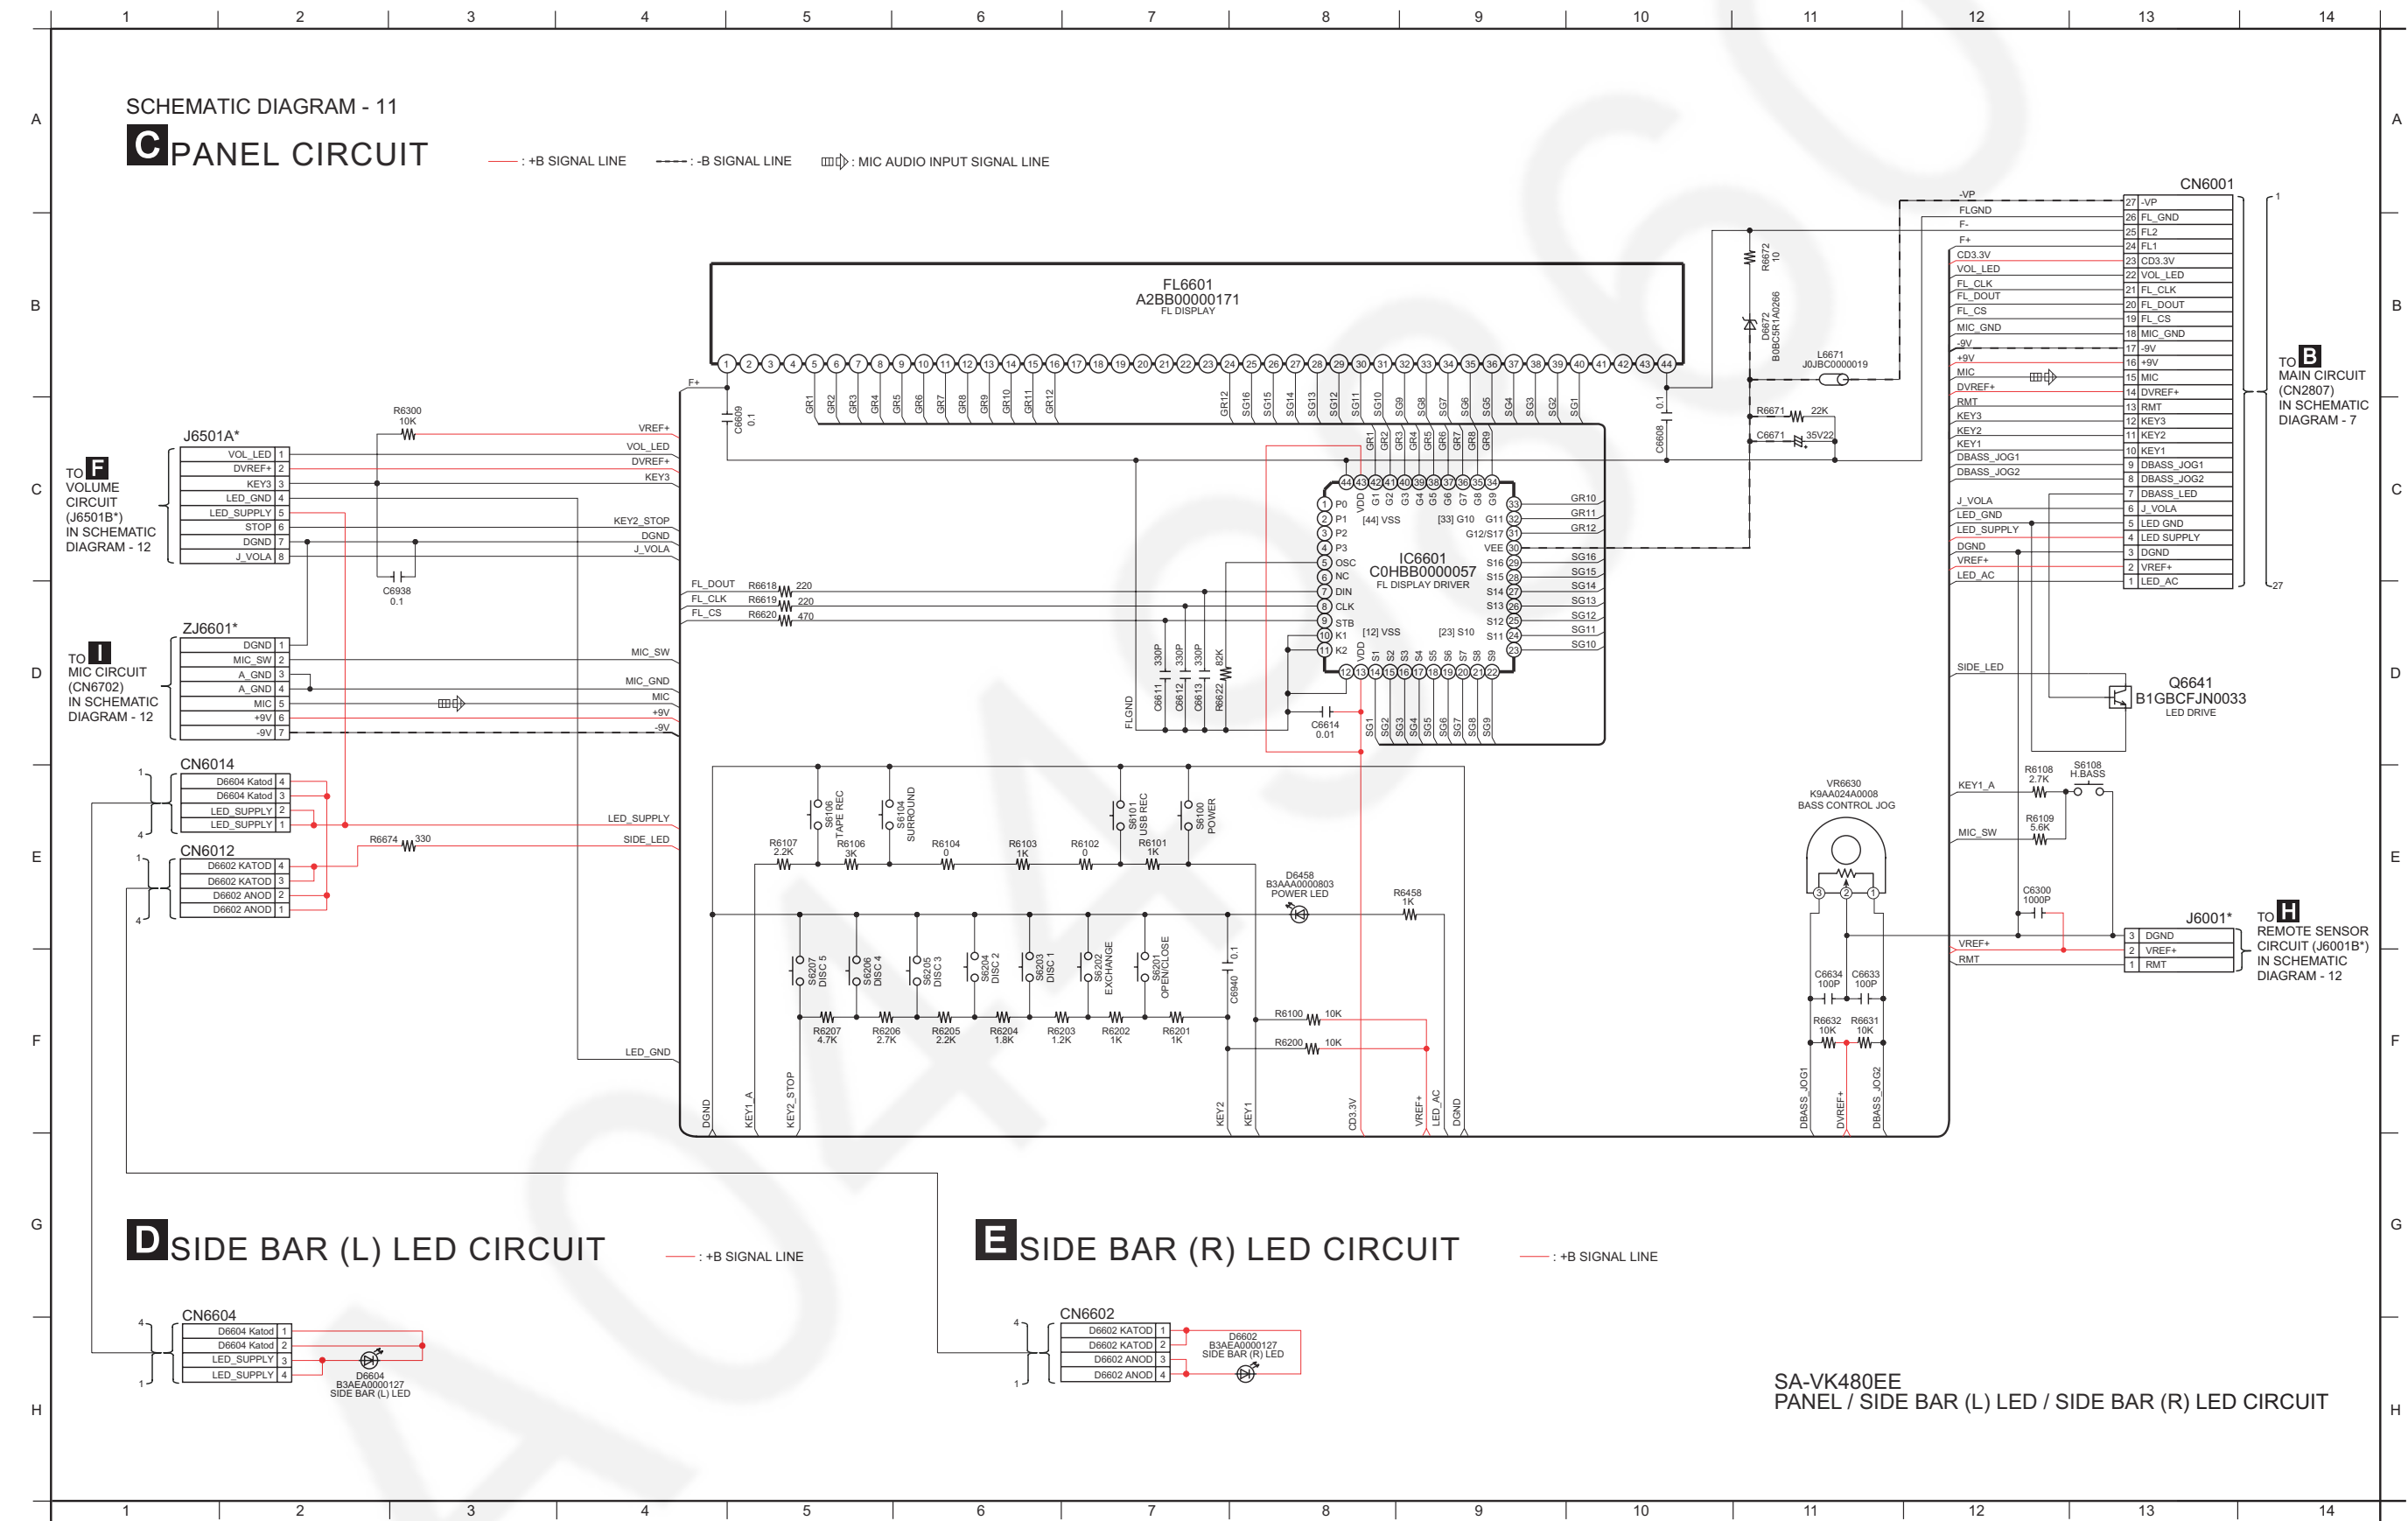

## 18.4. Volume, Music Port, Remote Sensor & Mic Circuit

SCHEMATIC DIAGRAM - 12


## F VOLUME CIRCUIT

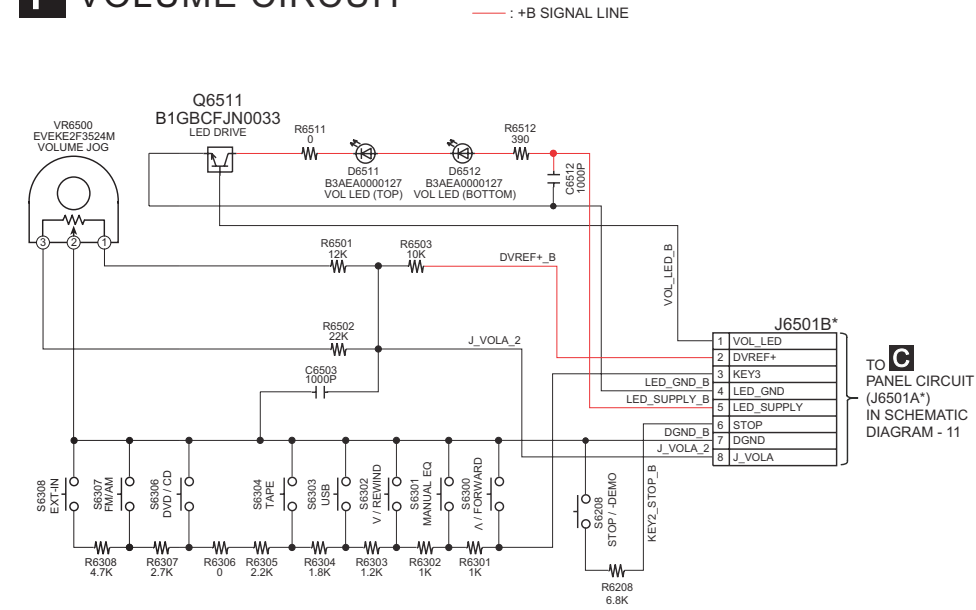

**G** MUSIC PORT CIRCUIT


 : MUSIC PORT AUDIO INPUT SIGNAL LINE

 : AUDIO OUTPUT SIGNAL LINE

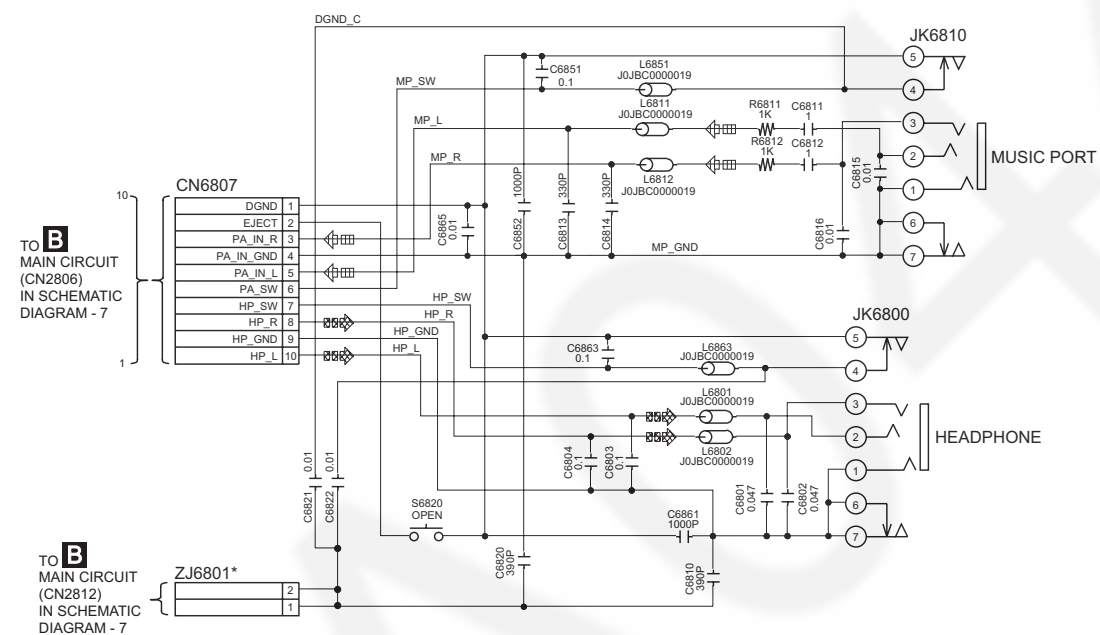


## I MIC CIRCUIT

— : +B SIGNAL LINE      - - - : -B SIGNAL LINE       : MIC AUDIO INPUT SIGNAL LINE

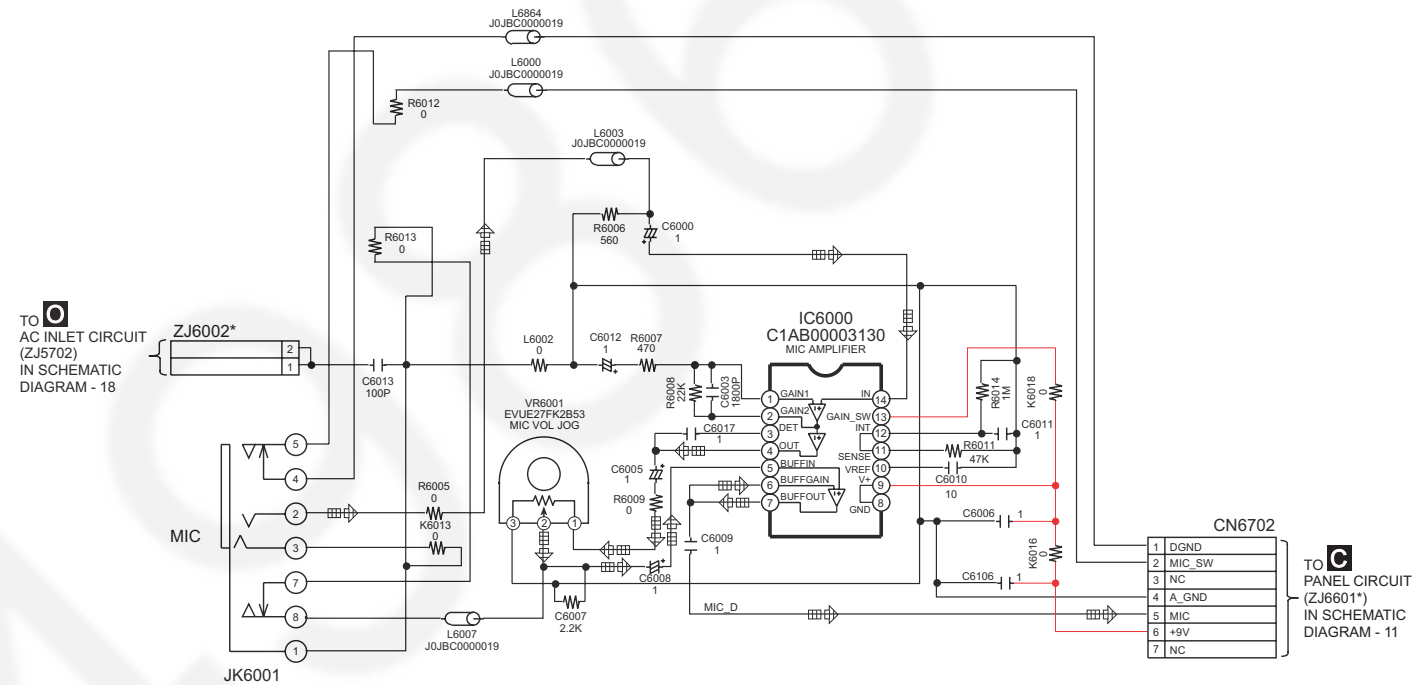


## H REMOTE SENSOR CIRCUIT

— : +B SIGNAL LINE

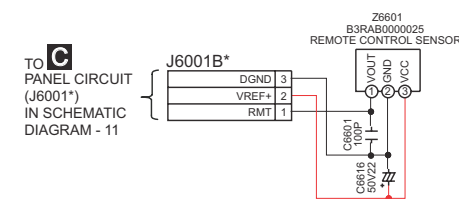


SA-VK480EE VOLUME / MUSIC PORT / REMOTE SENSOR / MIC CIRCUIT

# 18.5. Deck Circuit

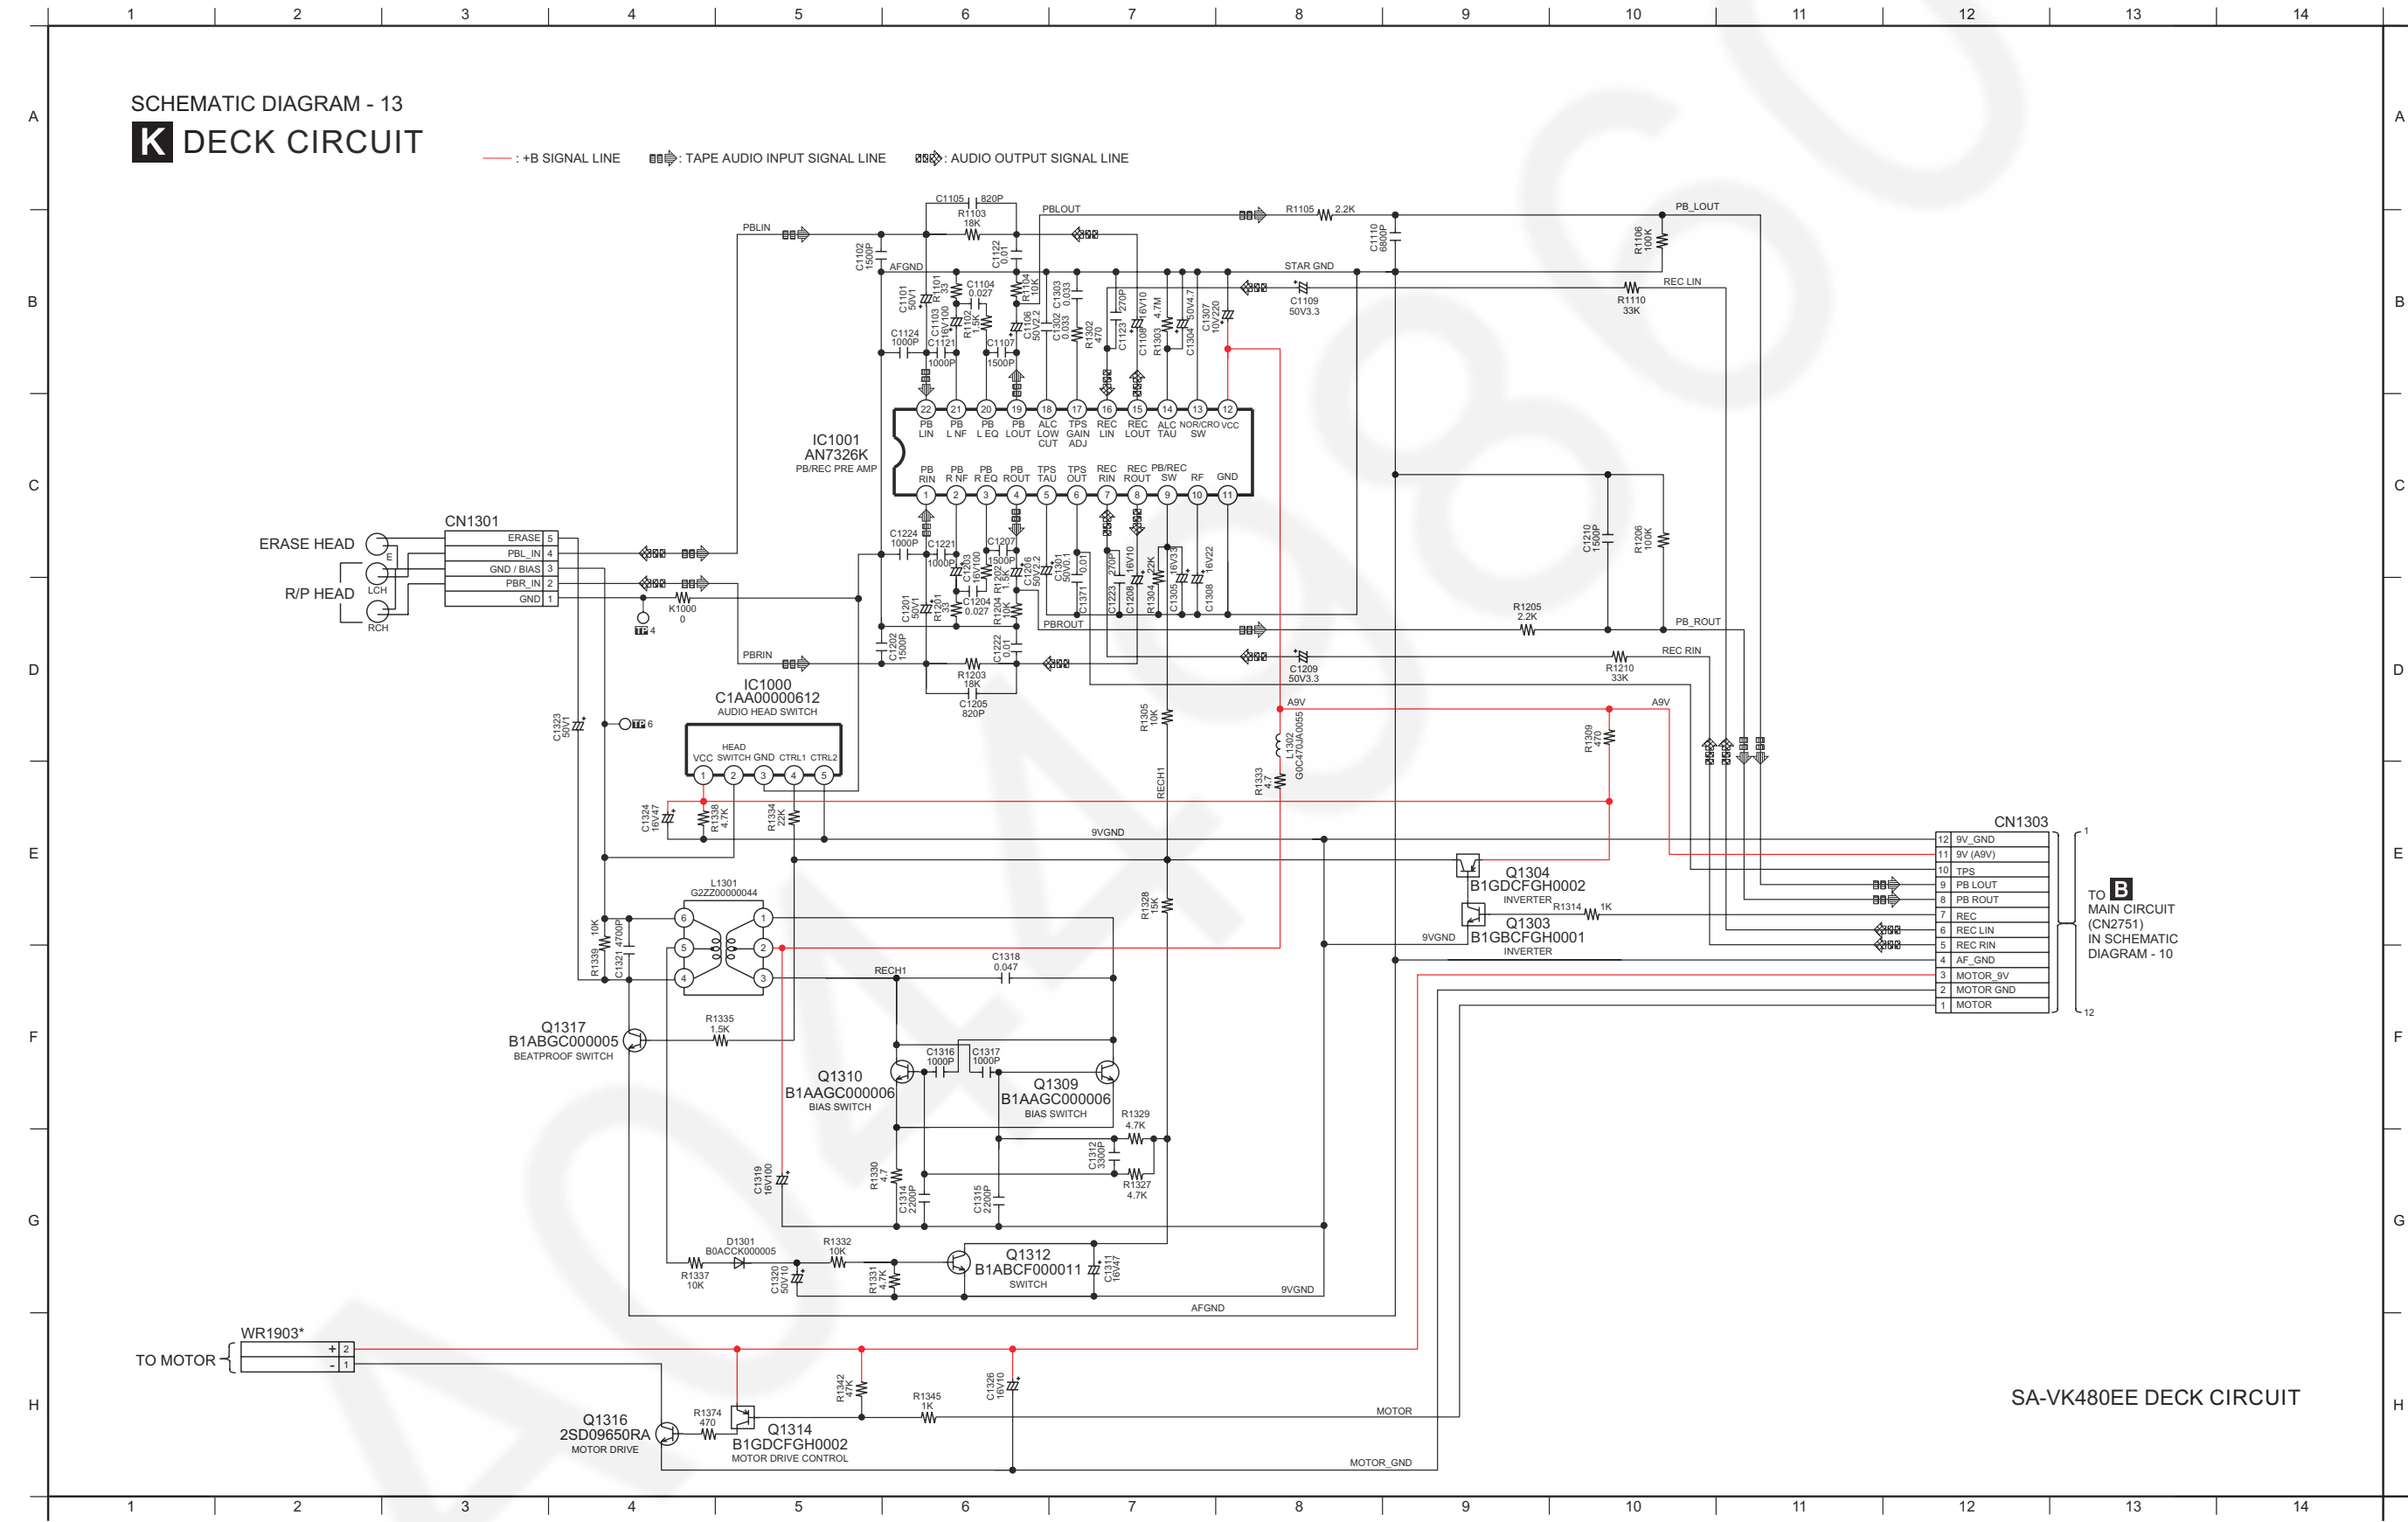


## 18.6. D-Amp Circuit

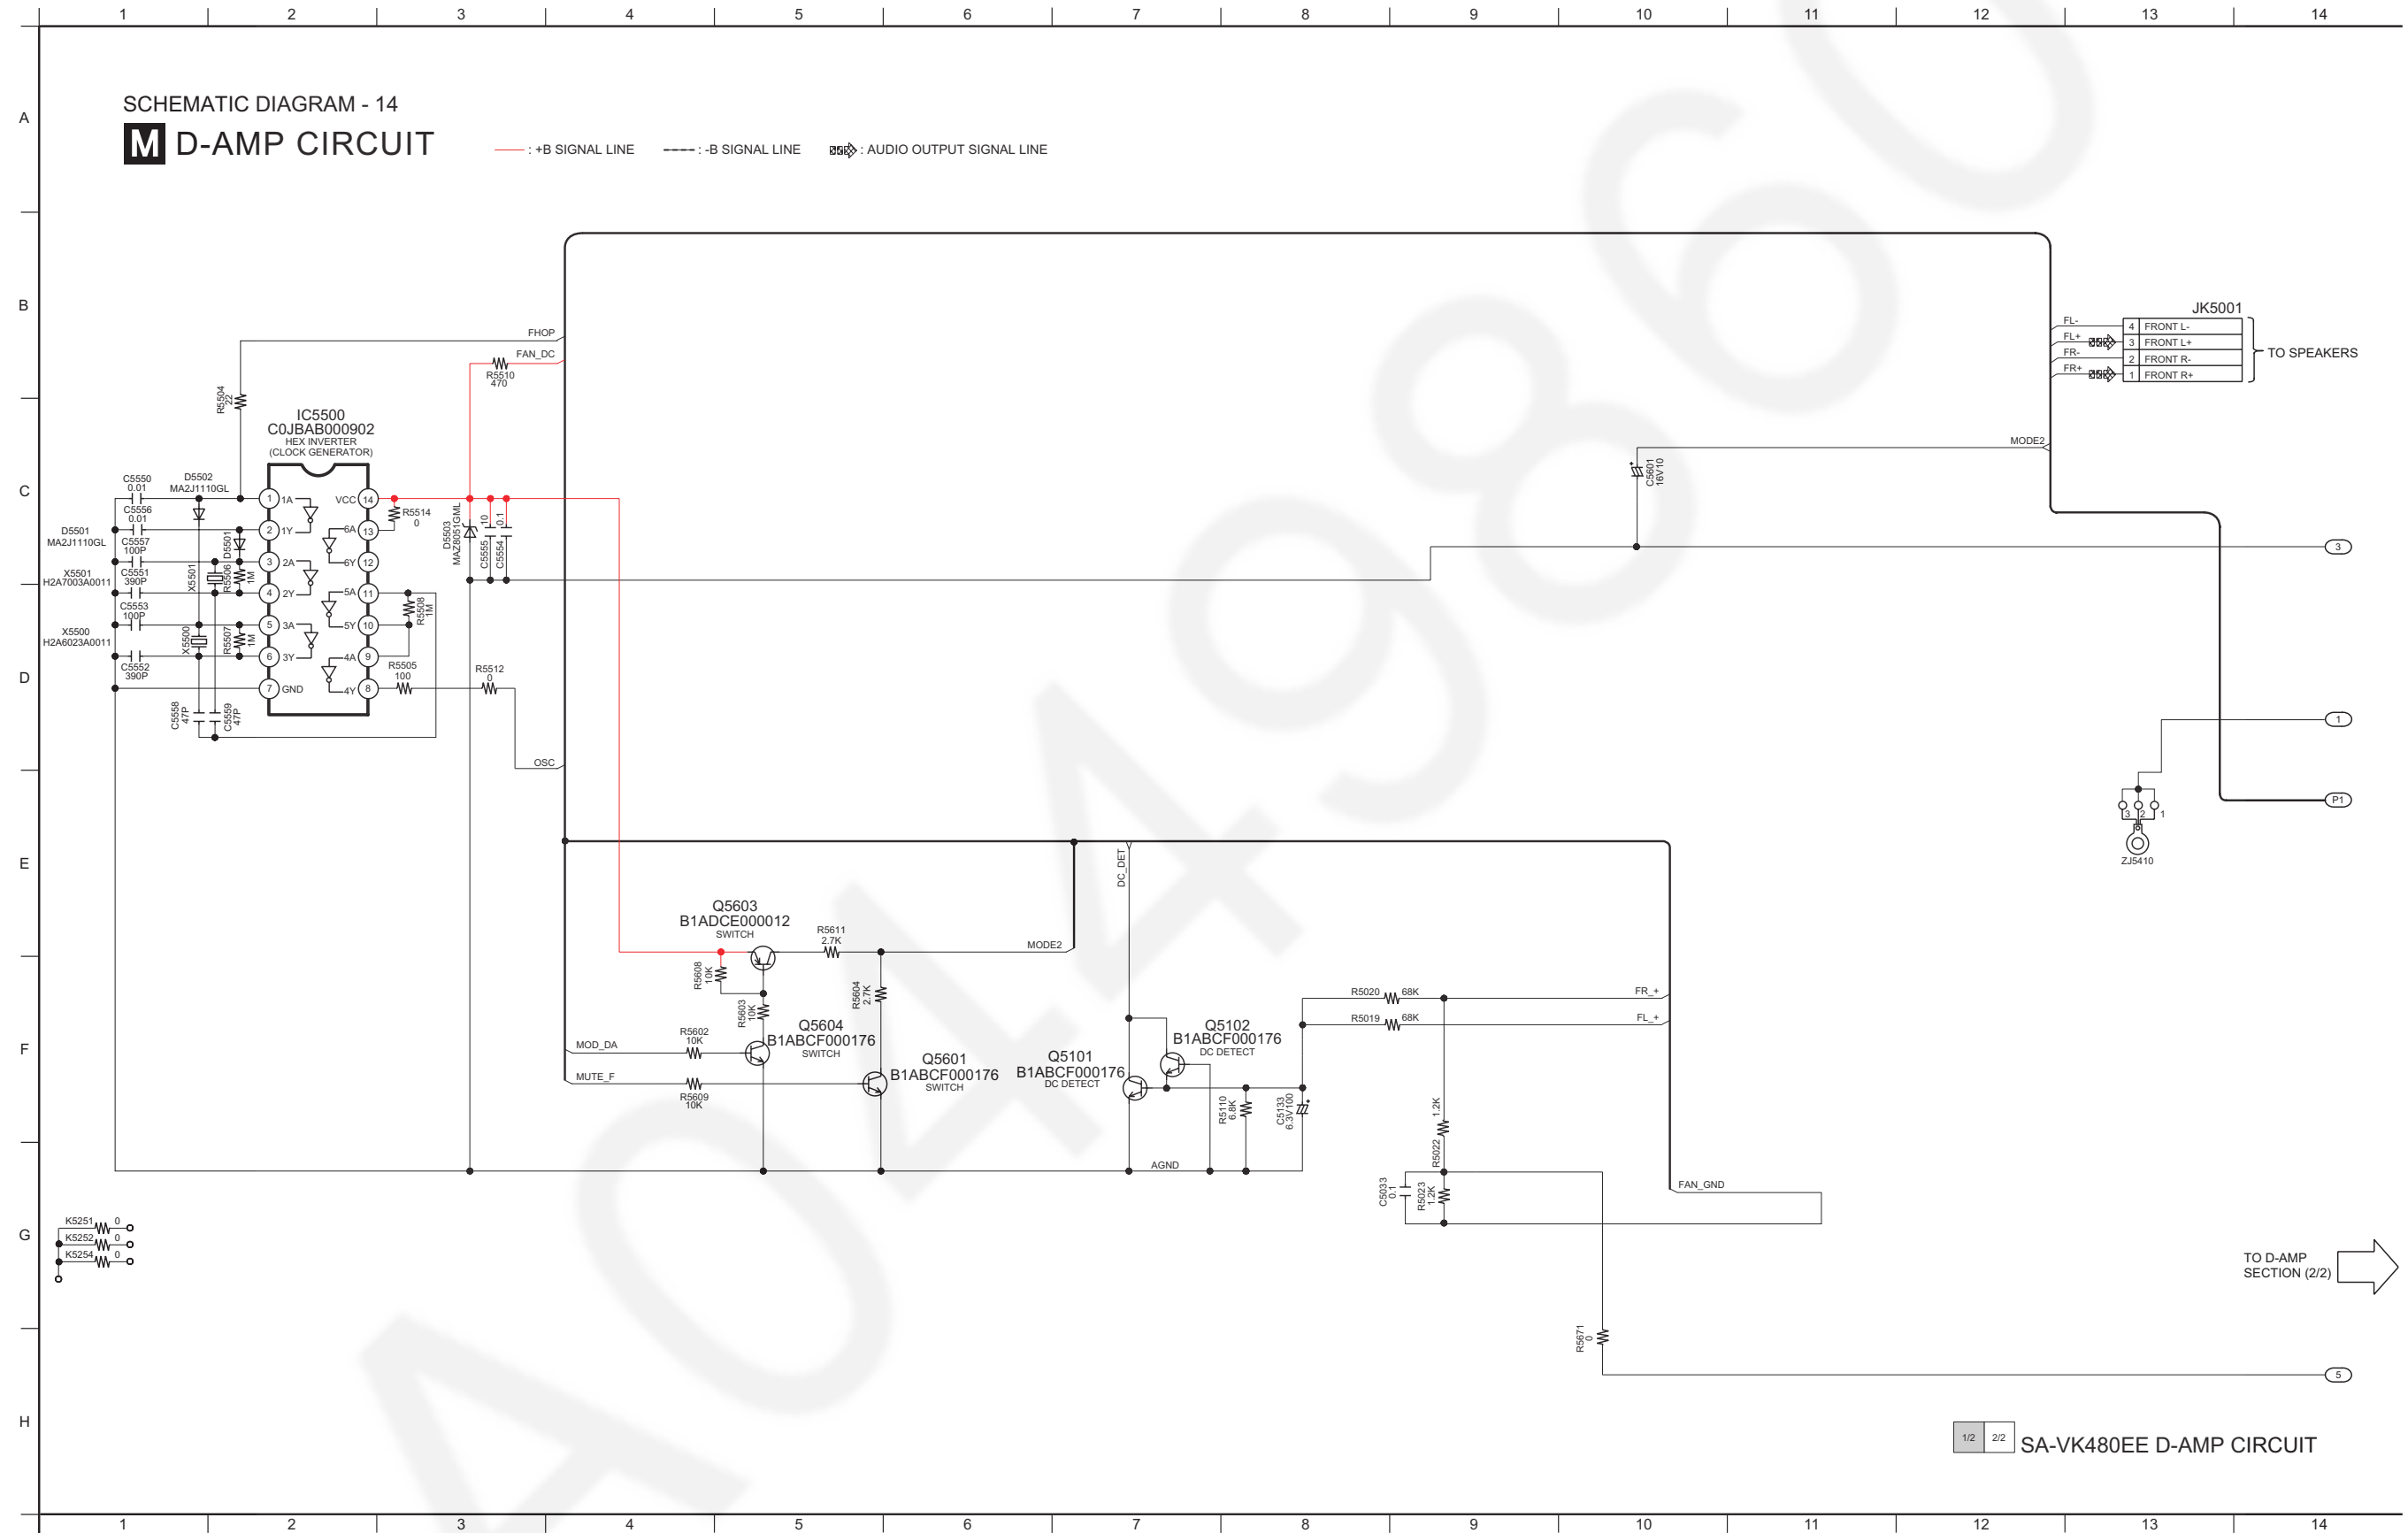


## M D-AMP CIRCUIT

— : +B SIGNAL LINE      - - - : -B SIGNAL LINE       : AUDIO OUTPUT SIGNAL LINE

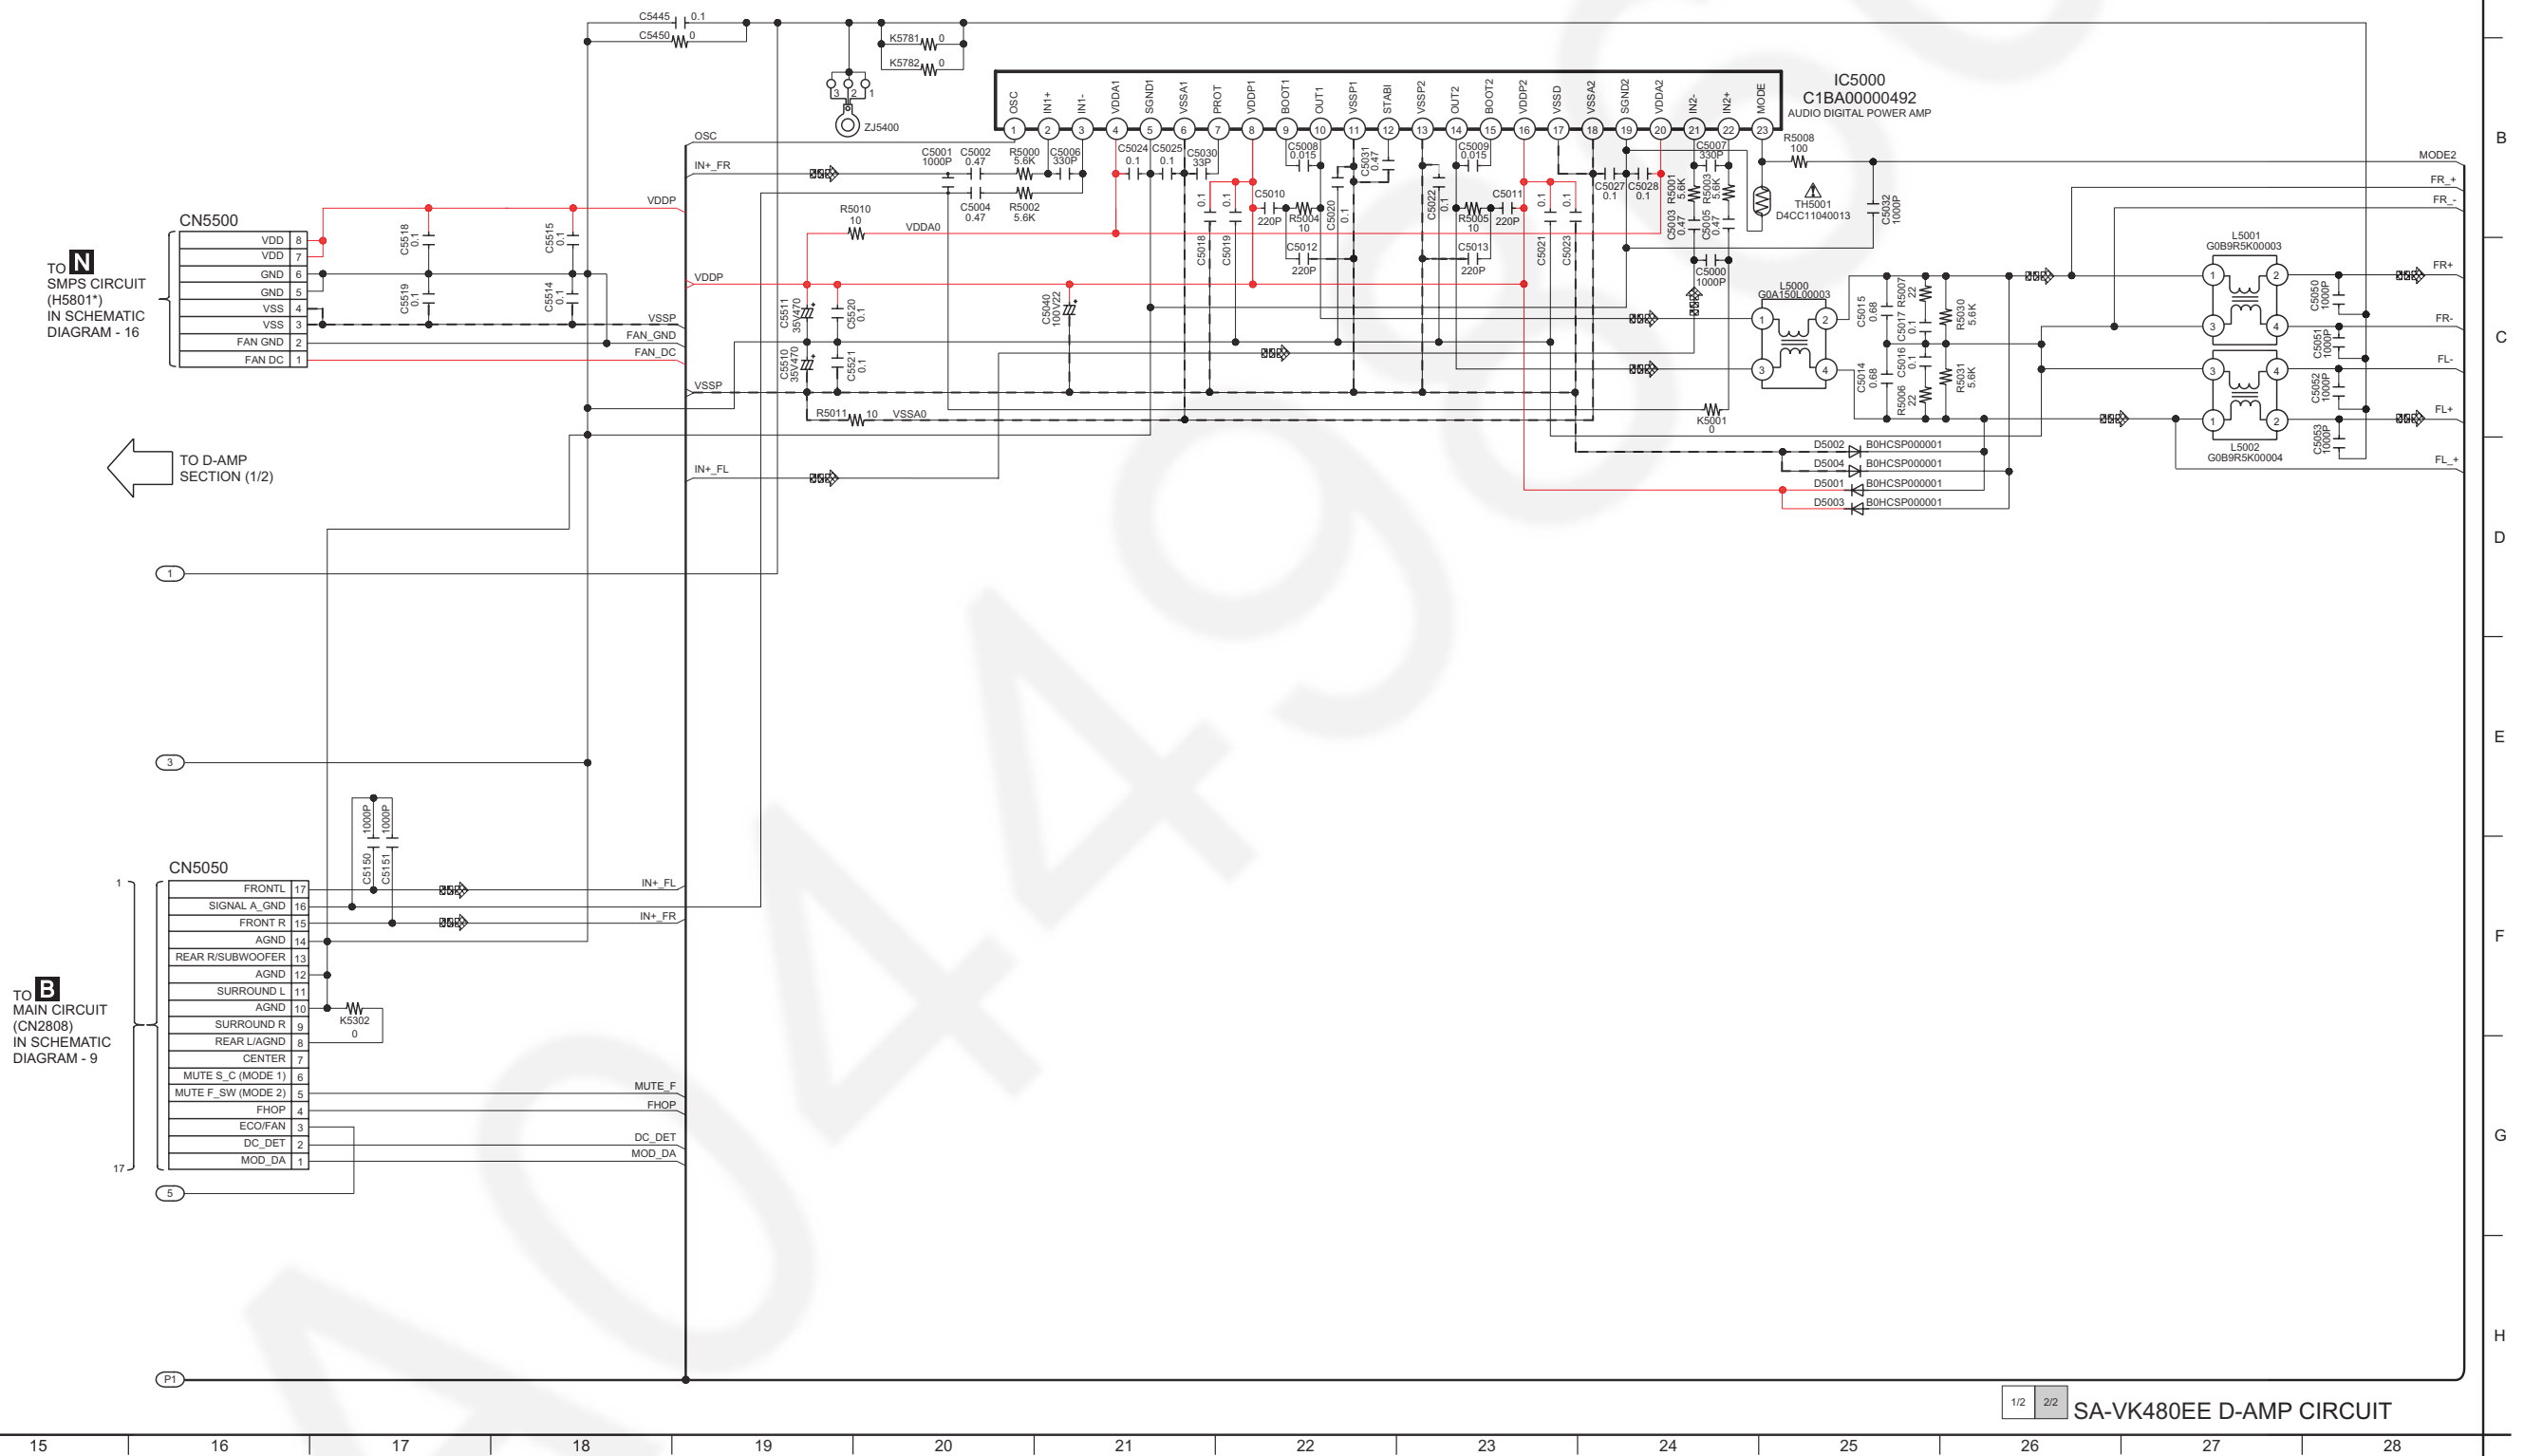

## 18.7. SMPS Circuit

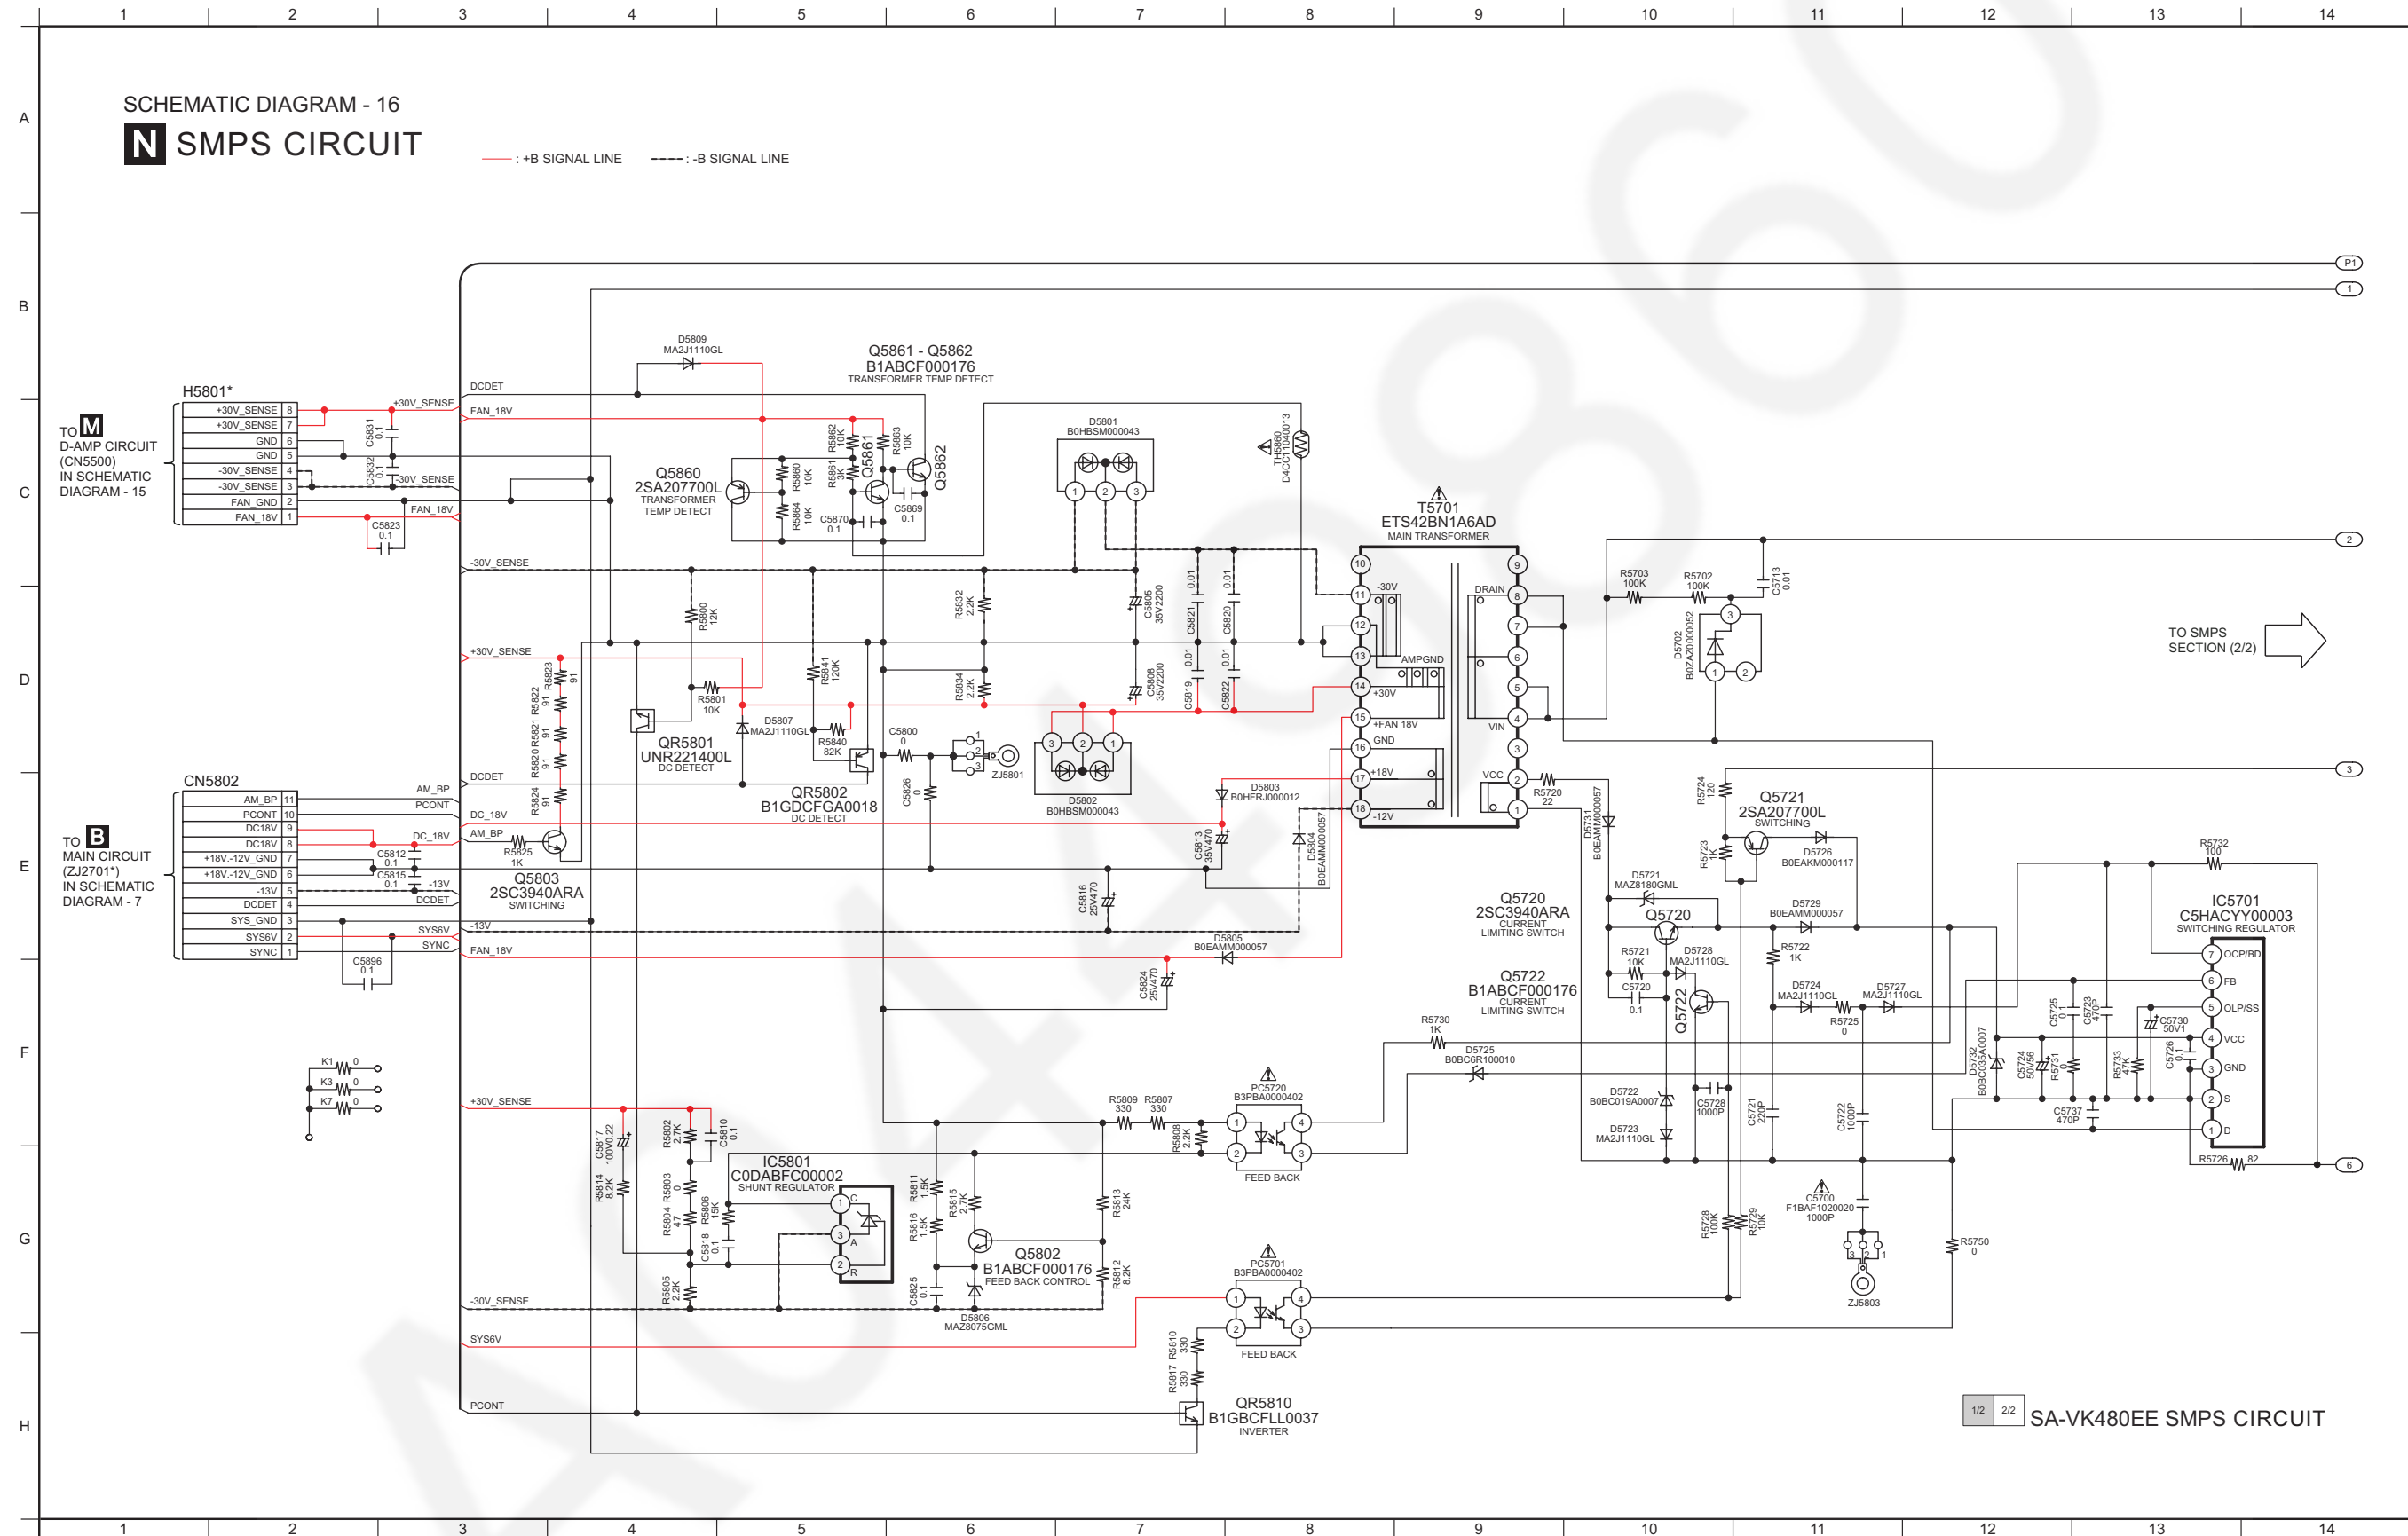


## N SMPS CIRCUIT

1/2 2/2 SA-VK480EE SMPS CIRCUIT




18.8. USB, Deck Mechanism & AC Inlet Circuit

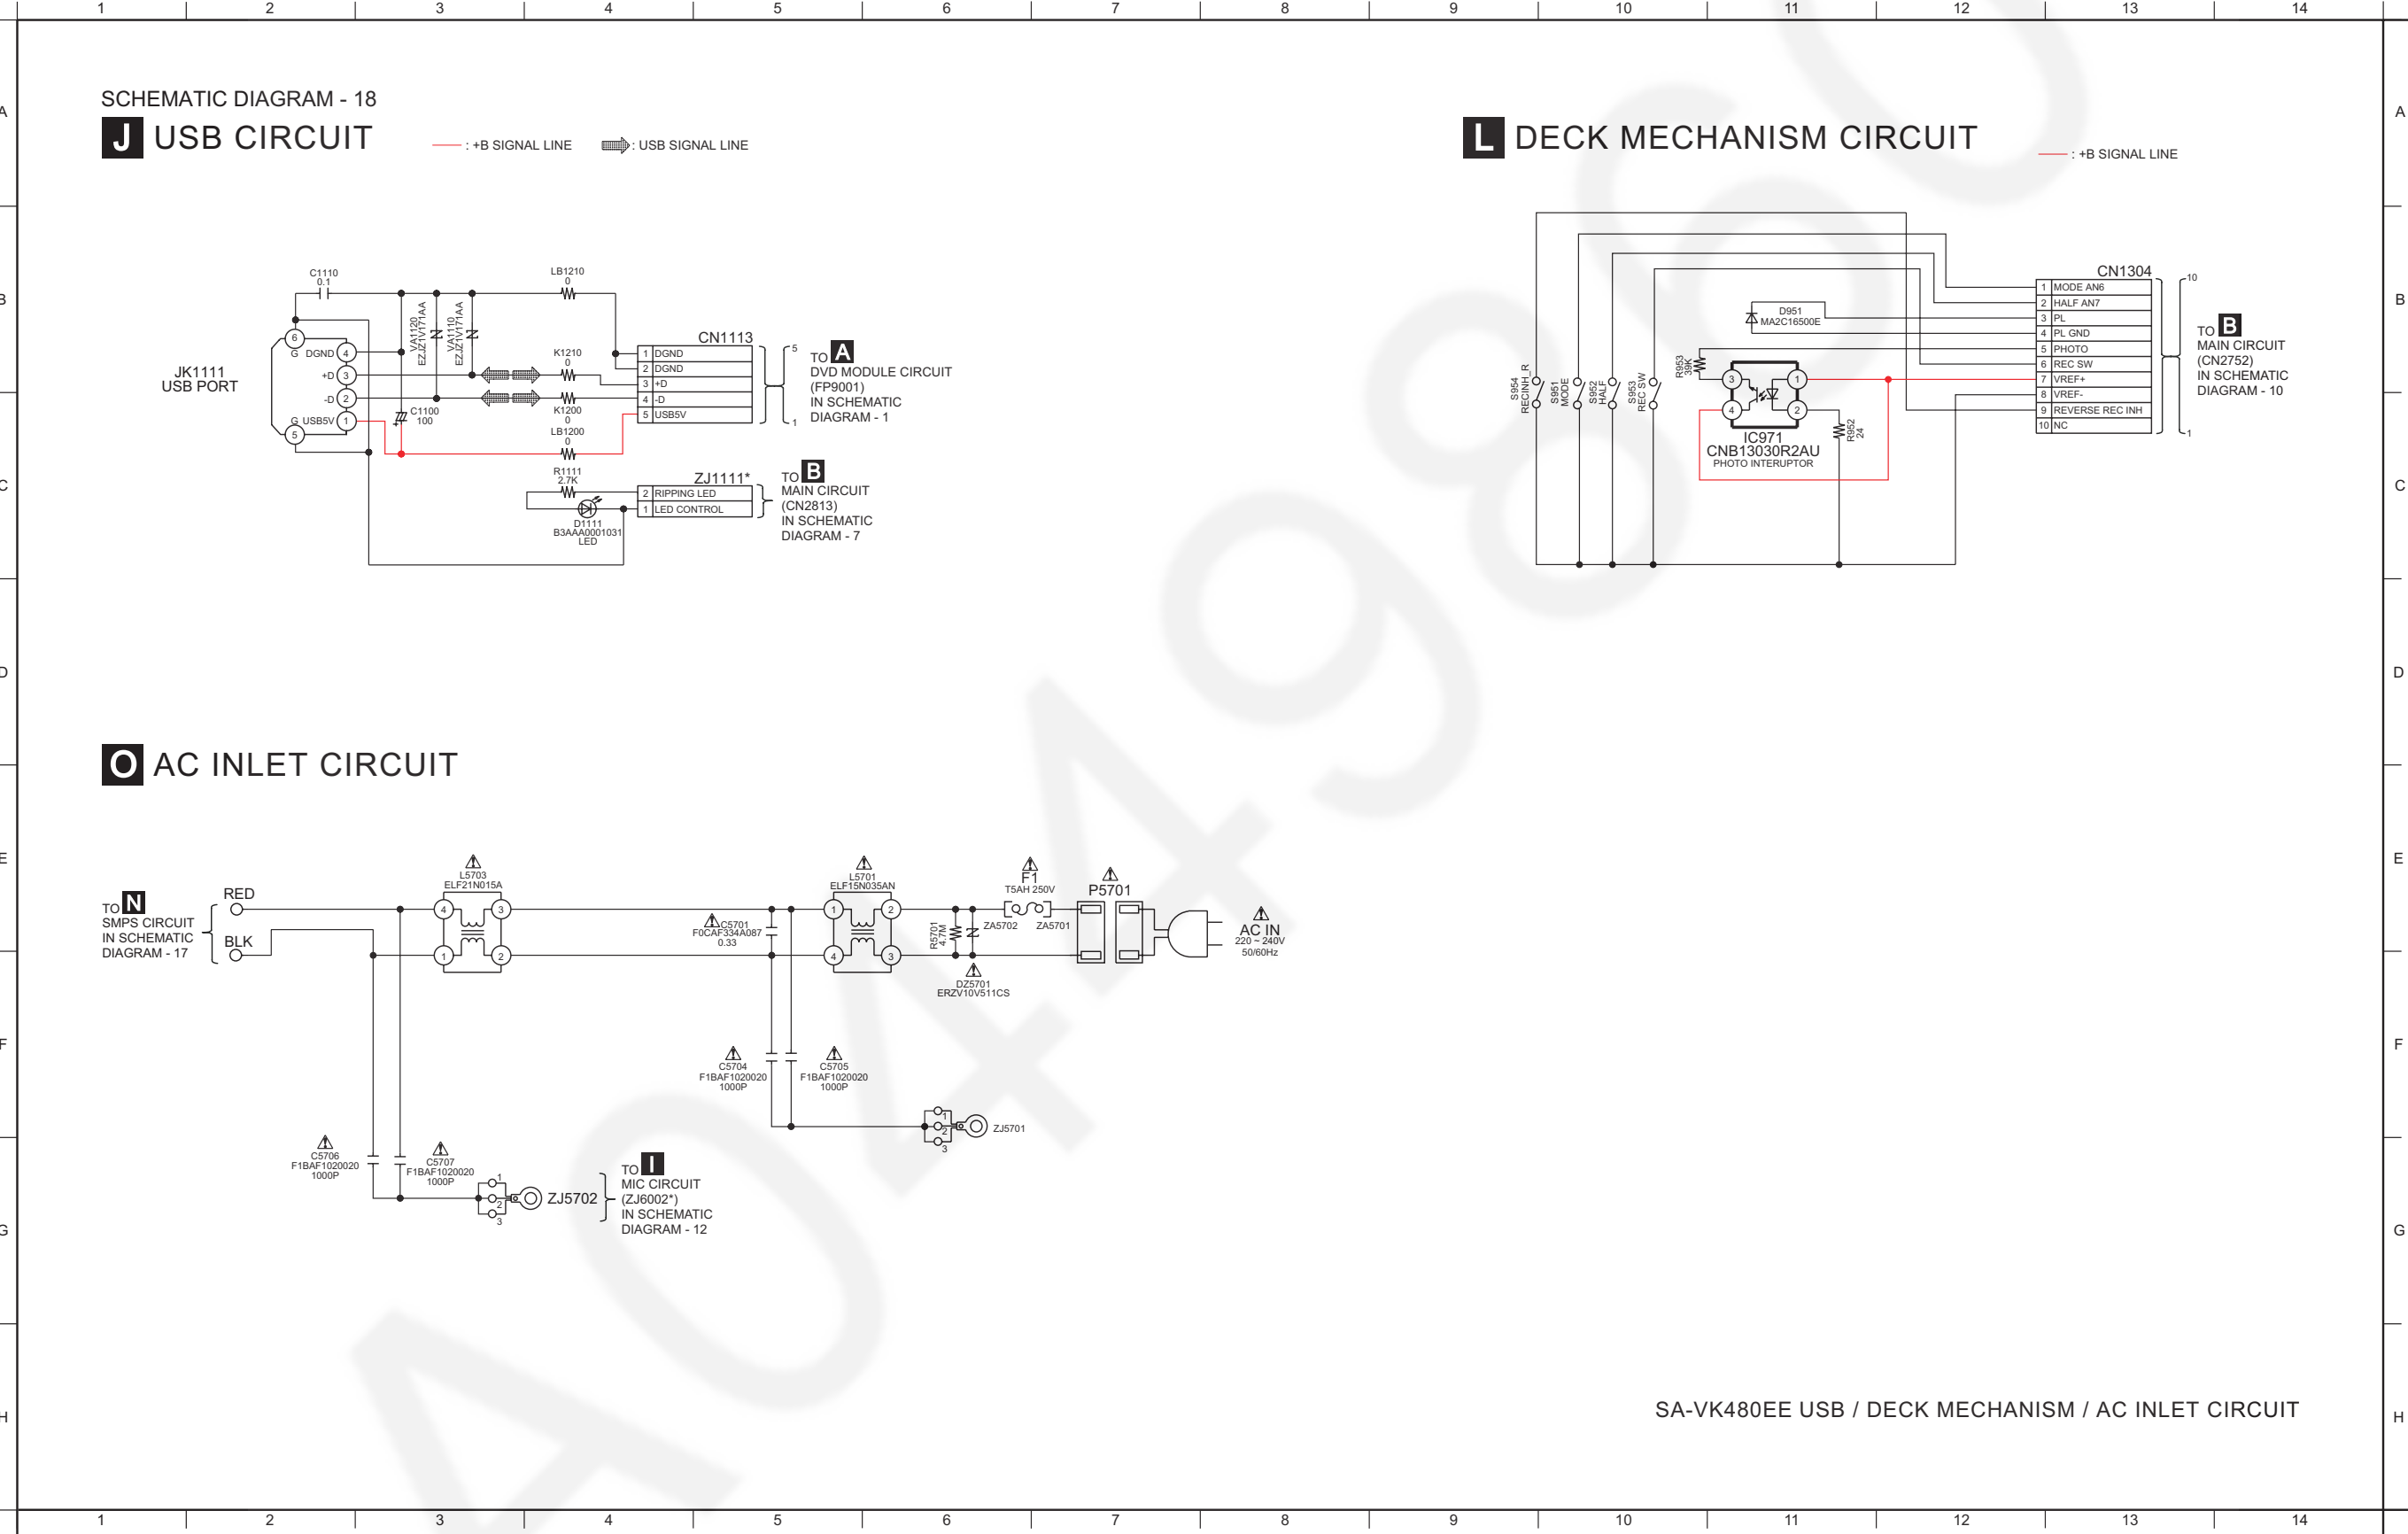


# 19 Printed Circuit Board

## 19.1. DVD Module P.C.B.

**A** DVD MODULE P.C.B. (RFKBX0681D-C)

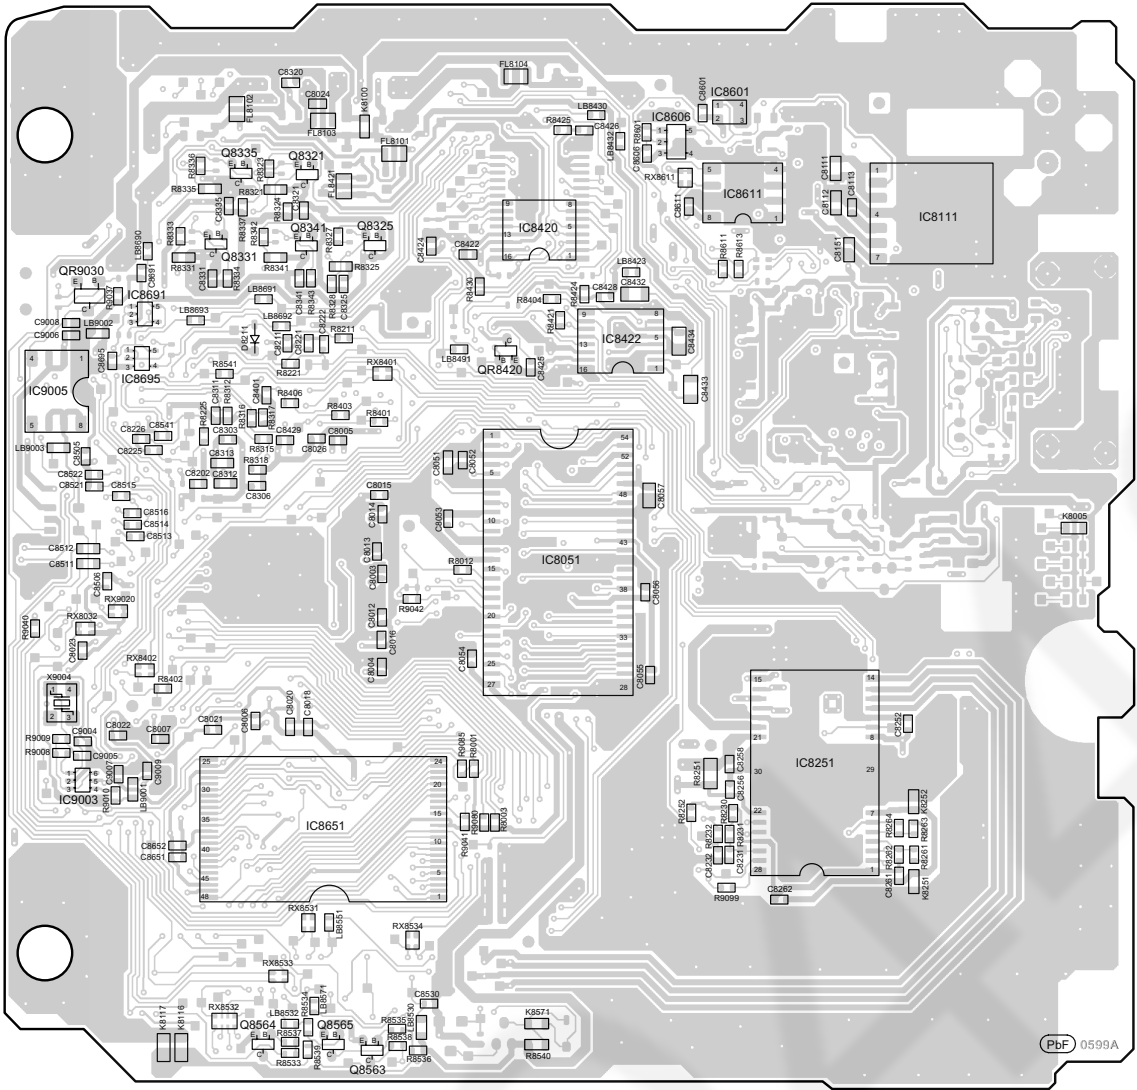


(SIDE A)

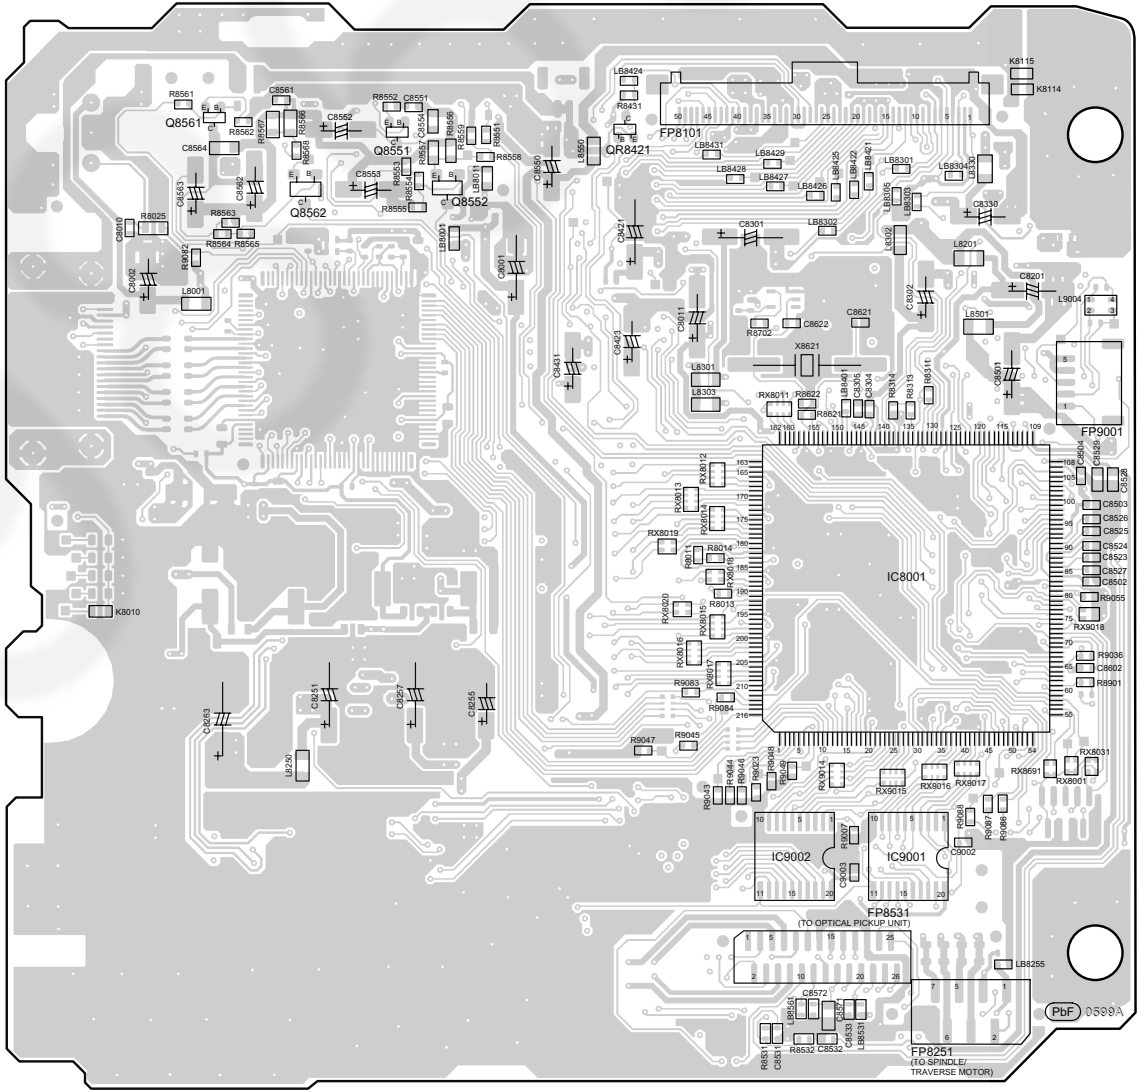

(SIDE B)

19.2. Main P.C.B.


**B** MAIN P.C.B. (REPX0736C)

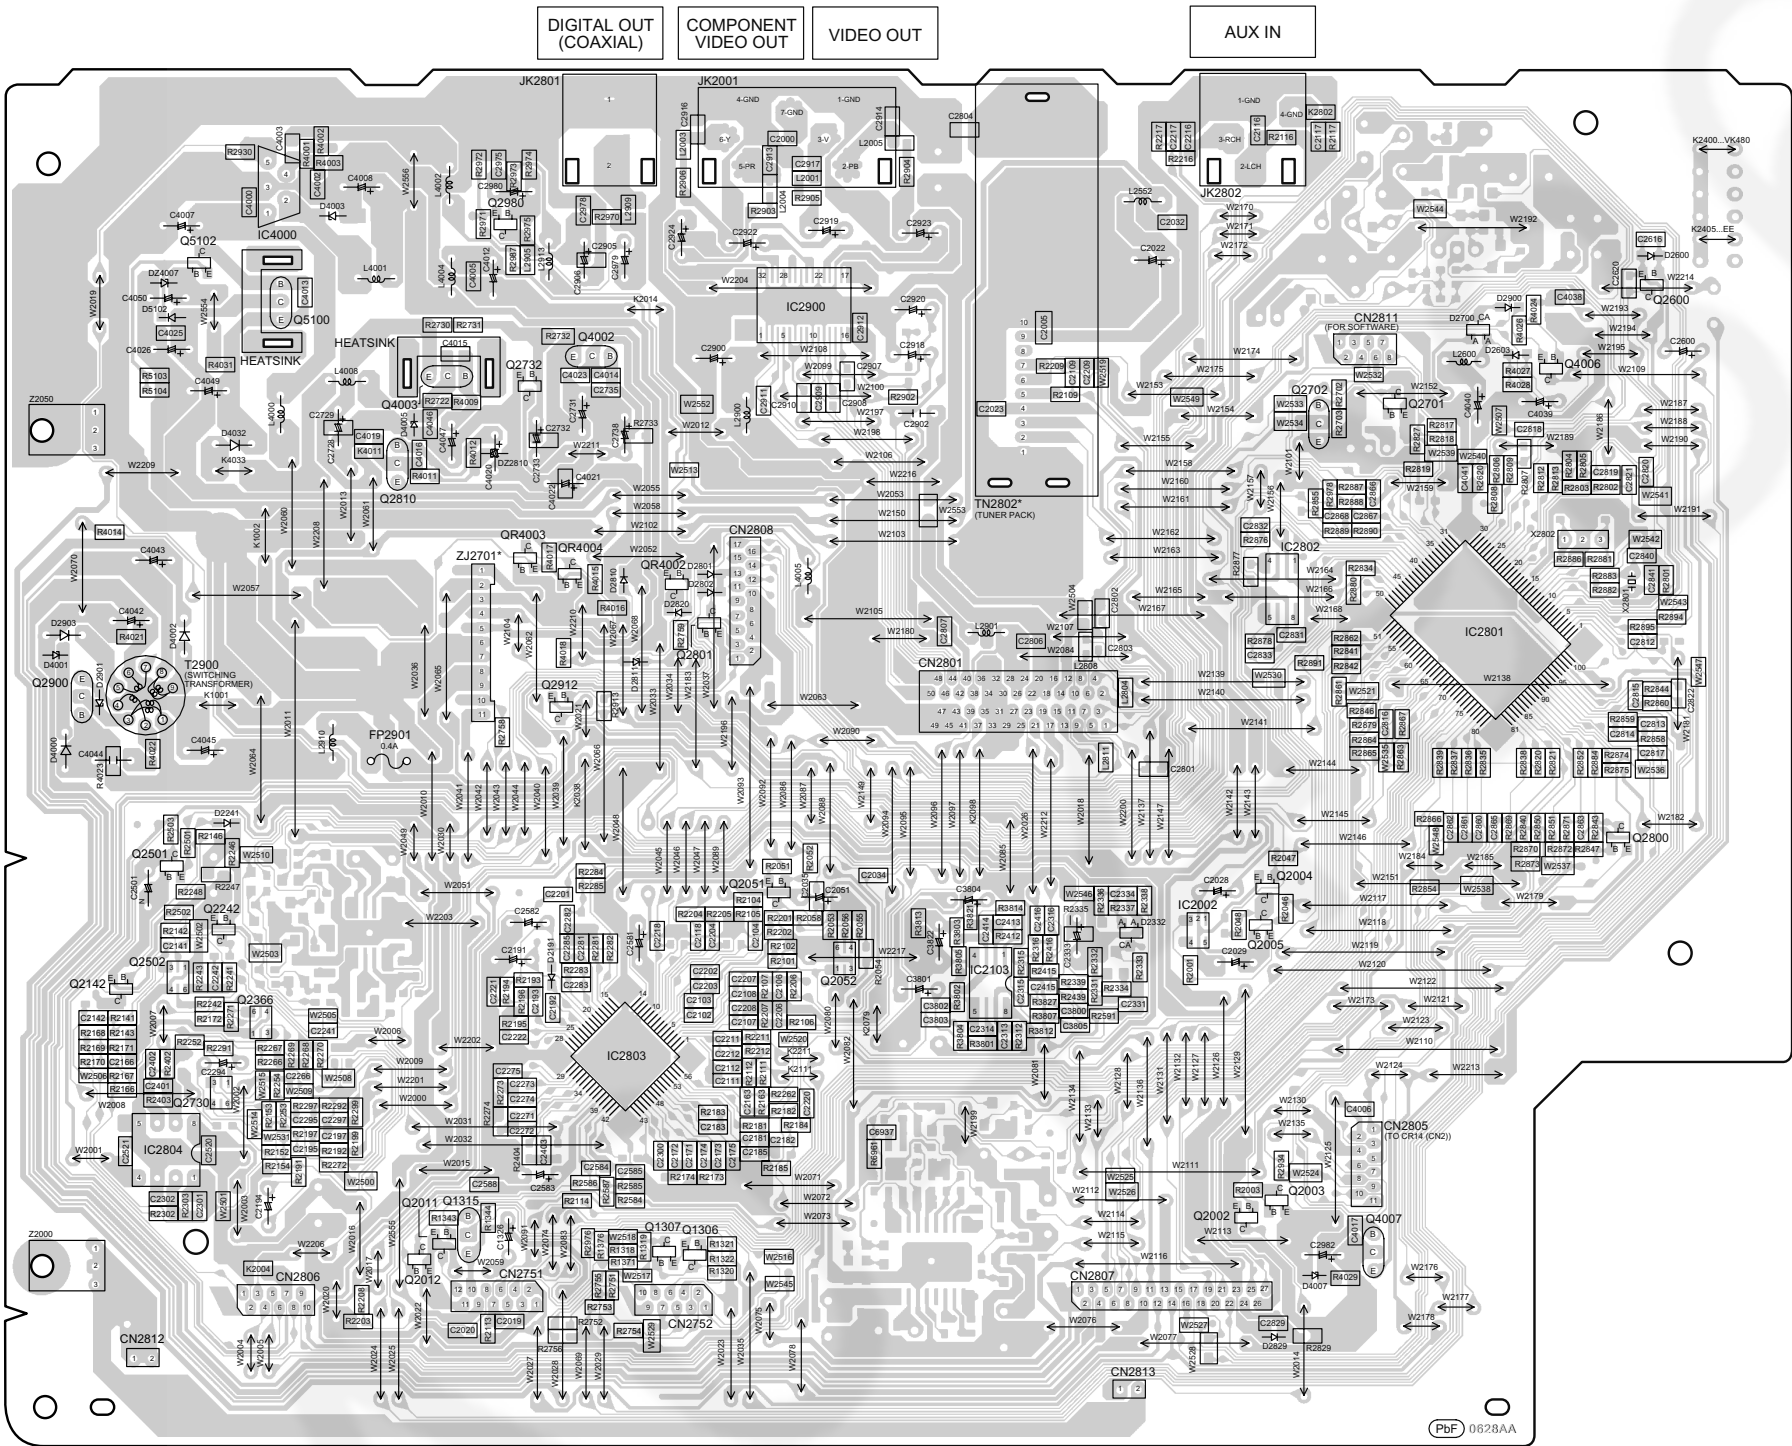

NOTE: " \* " REF IS FOR INDICATION ONLY.

SA-VK480EE  
MAIN P.C.B.

19.3. Panel, Side Bar (L) Led & Side Bar (R) Led P.C.B.

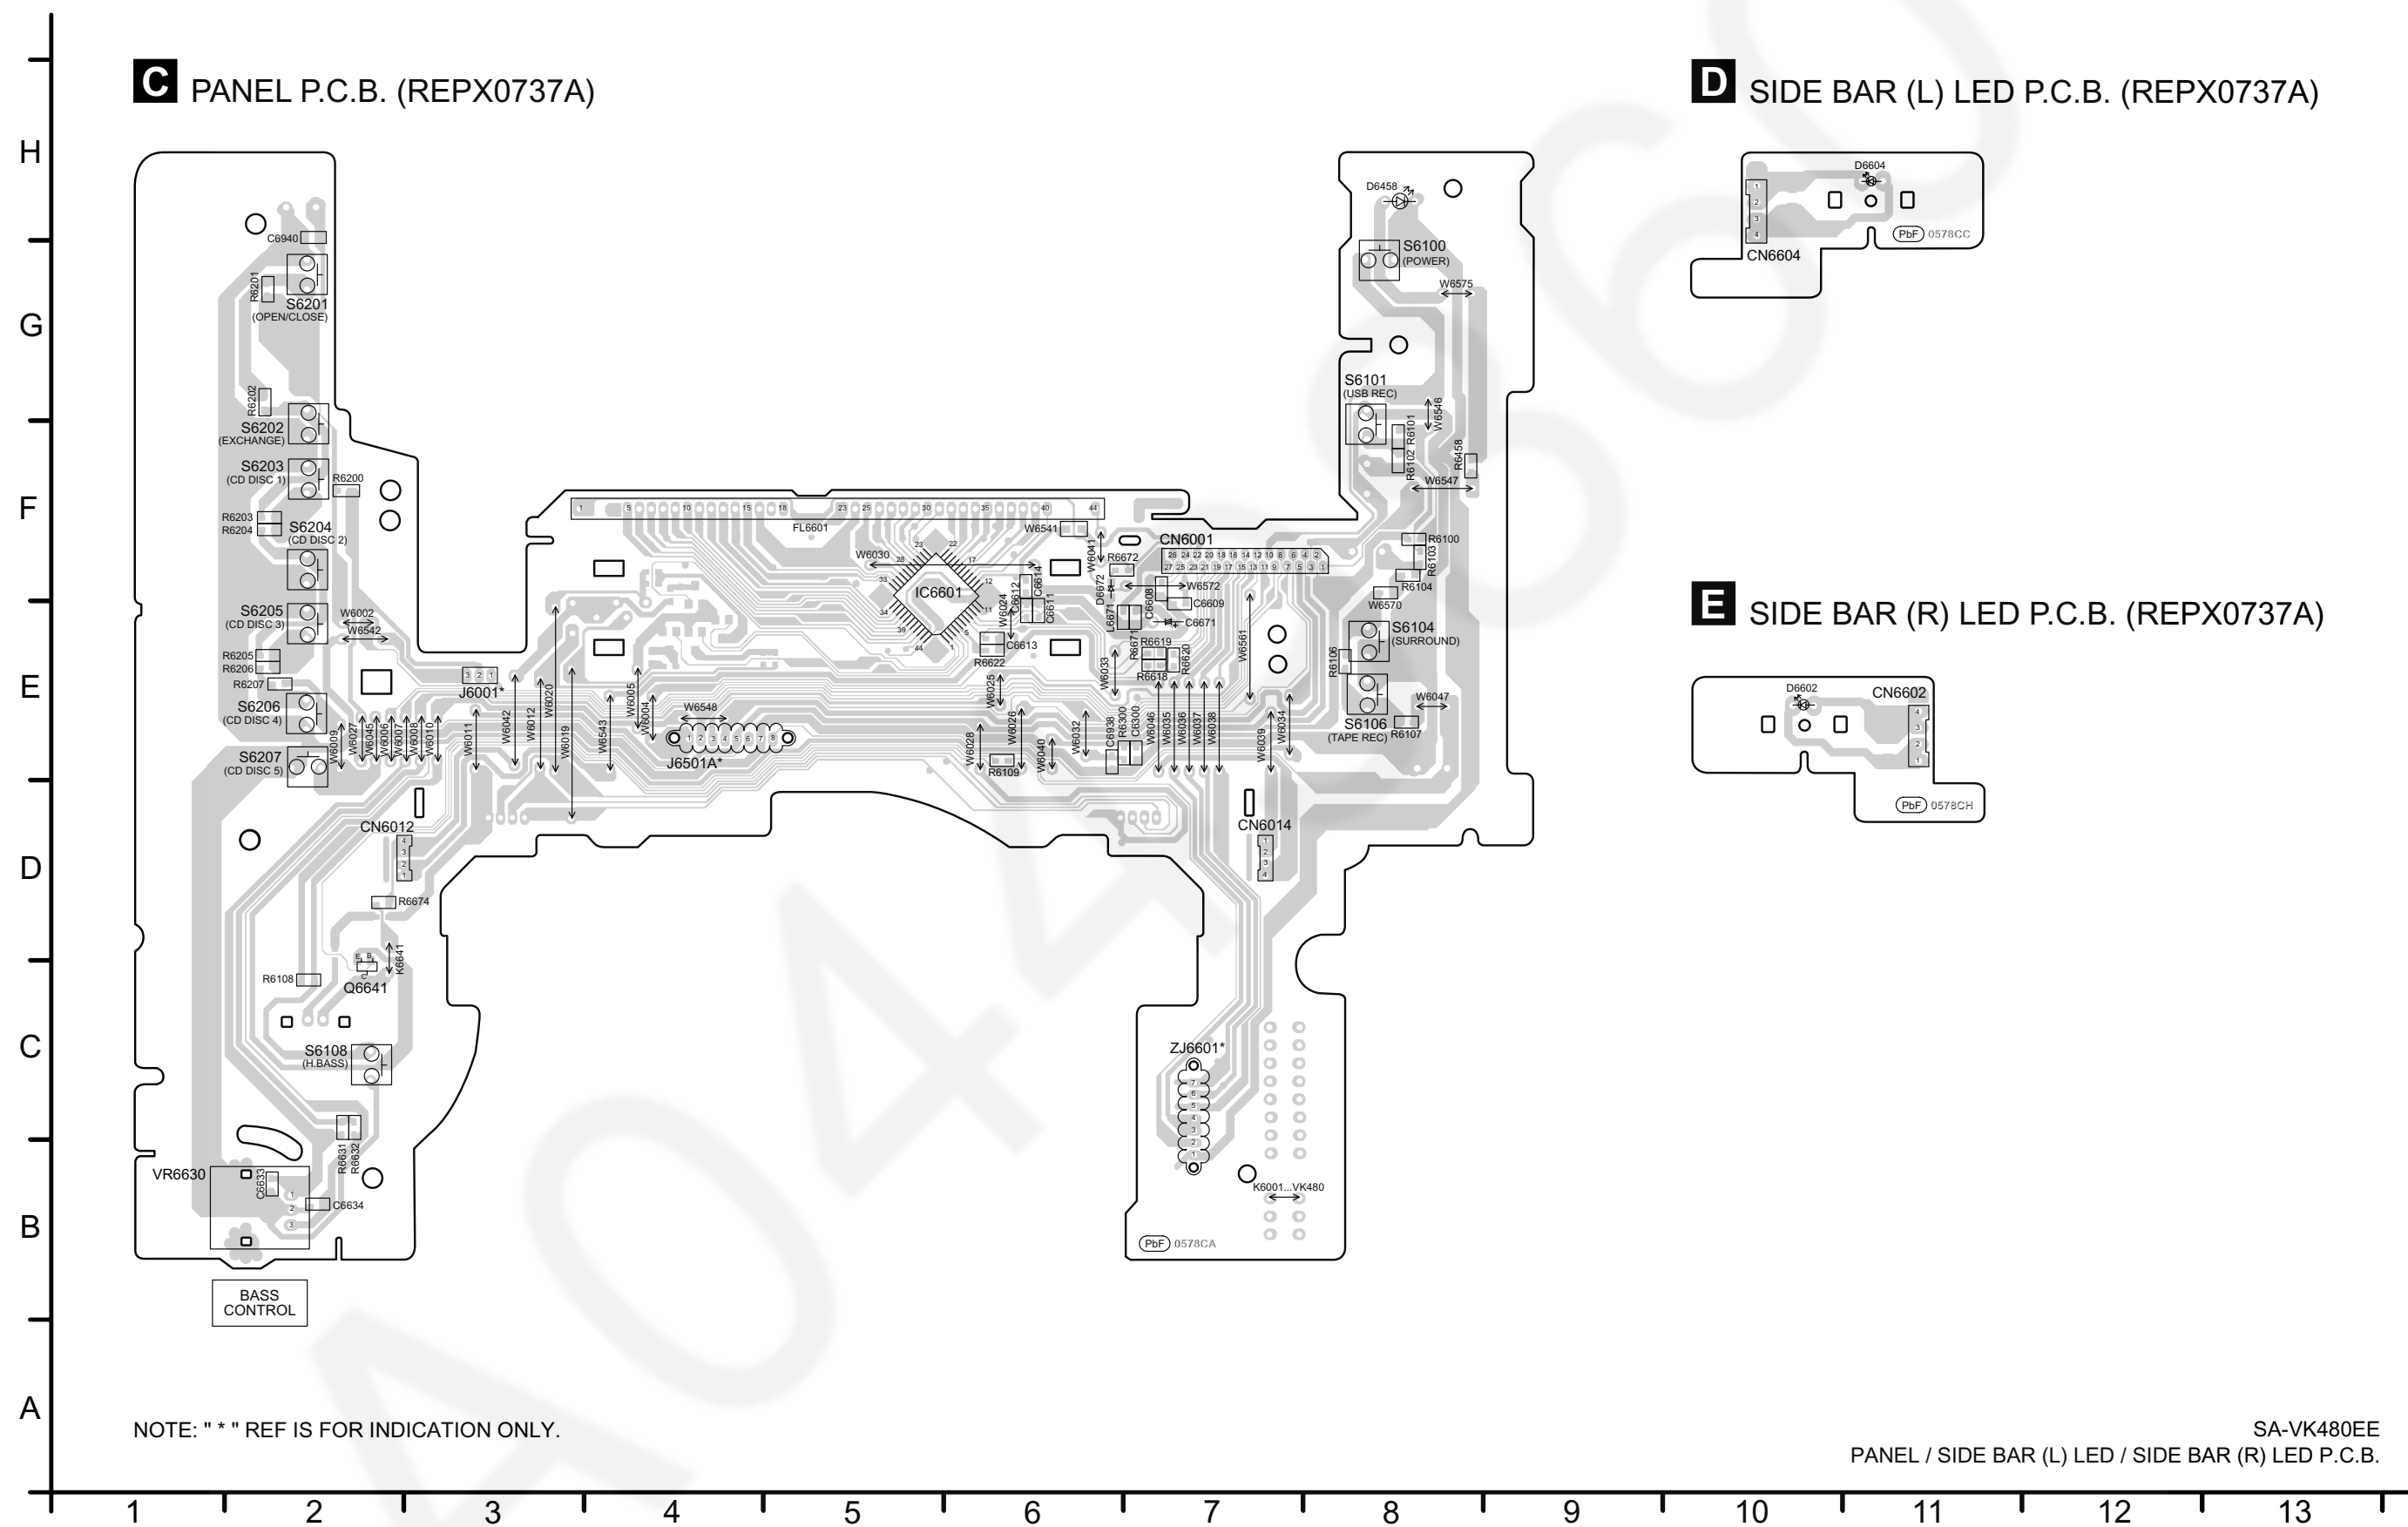

A vertical number line with tick marks labeled A, B, C, D, E, F, G, and H from bottom to top.

A horizontal number line with three major tick marks labeled 1, 2, and 3. There are also two minor tick marks between each major tick mark, dividing each unit into three equal parts.

A horizontal number line with major tick marks labeled 10, 11, 12, and 13. Between each major tick mark, there are three smaller tick marks, dividing each unit into four equal intervals of 0.25 units each.


A vertical scale with labels A, B, C, D, E, F, G, H from bottom to top.

AC IN ~  
220V-240V  
50Hz

CAUTION  
RISK OF ELECTRIC SHOCK  
AC VOLTAGE LINE  
PLEASE DO NOT TOUCH THIS P.C.B

### 19.6. D-Amp P.C.B.


**M** D-AMP P.C.B. (REPX0731C)

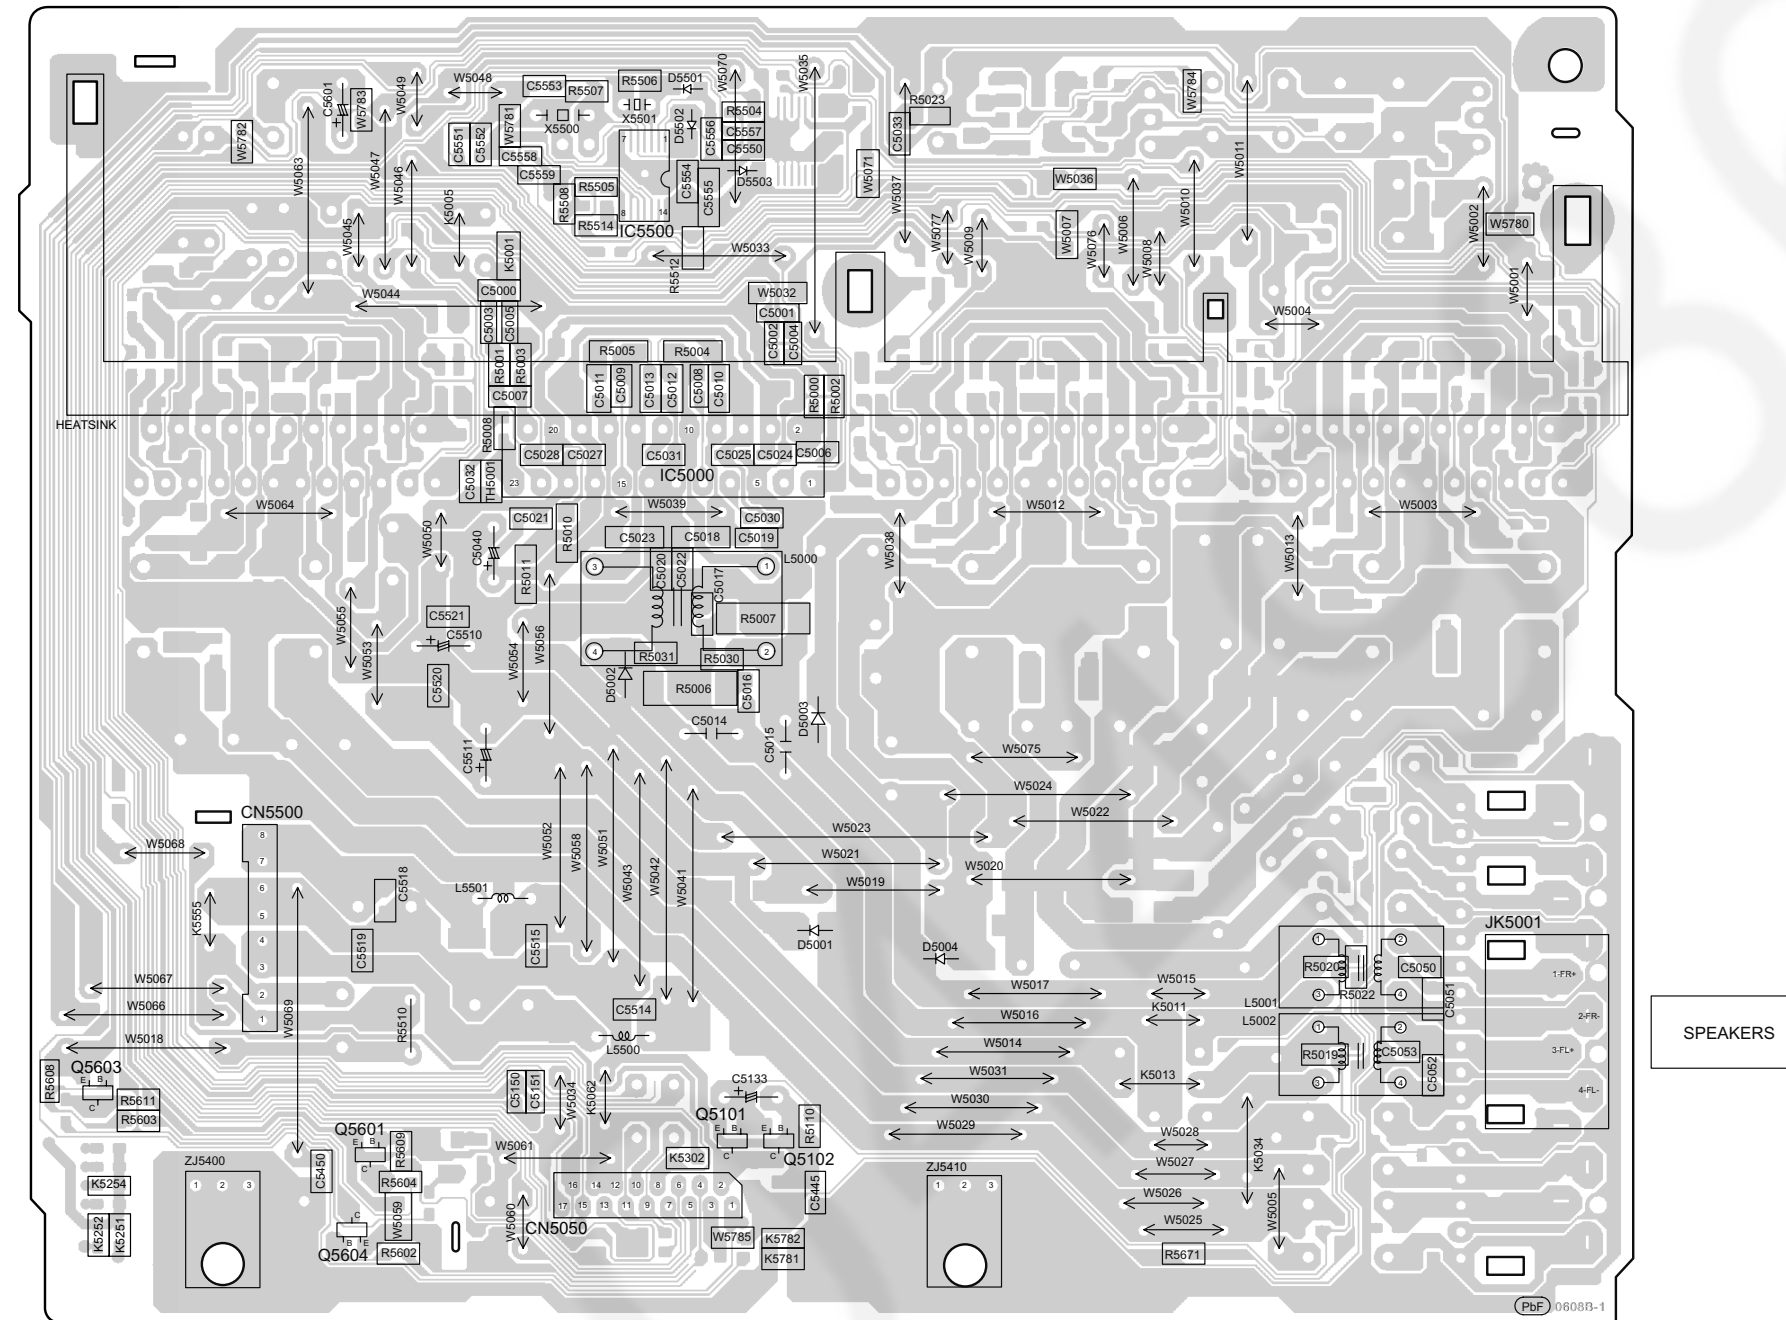

SA-VK480EE  
D-AMP P.C.B.

19.7. SMPS P.C.B.

**N** SMPS P.C.B. (REPX0751A)

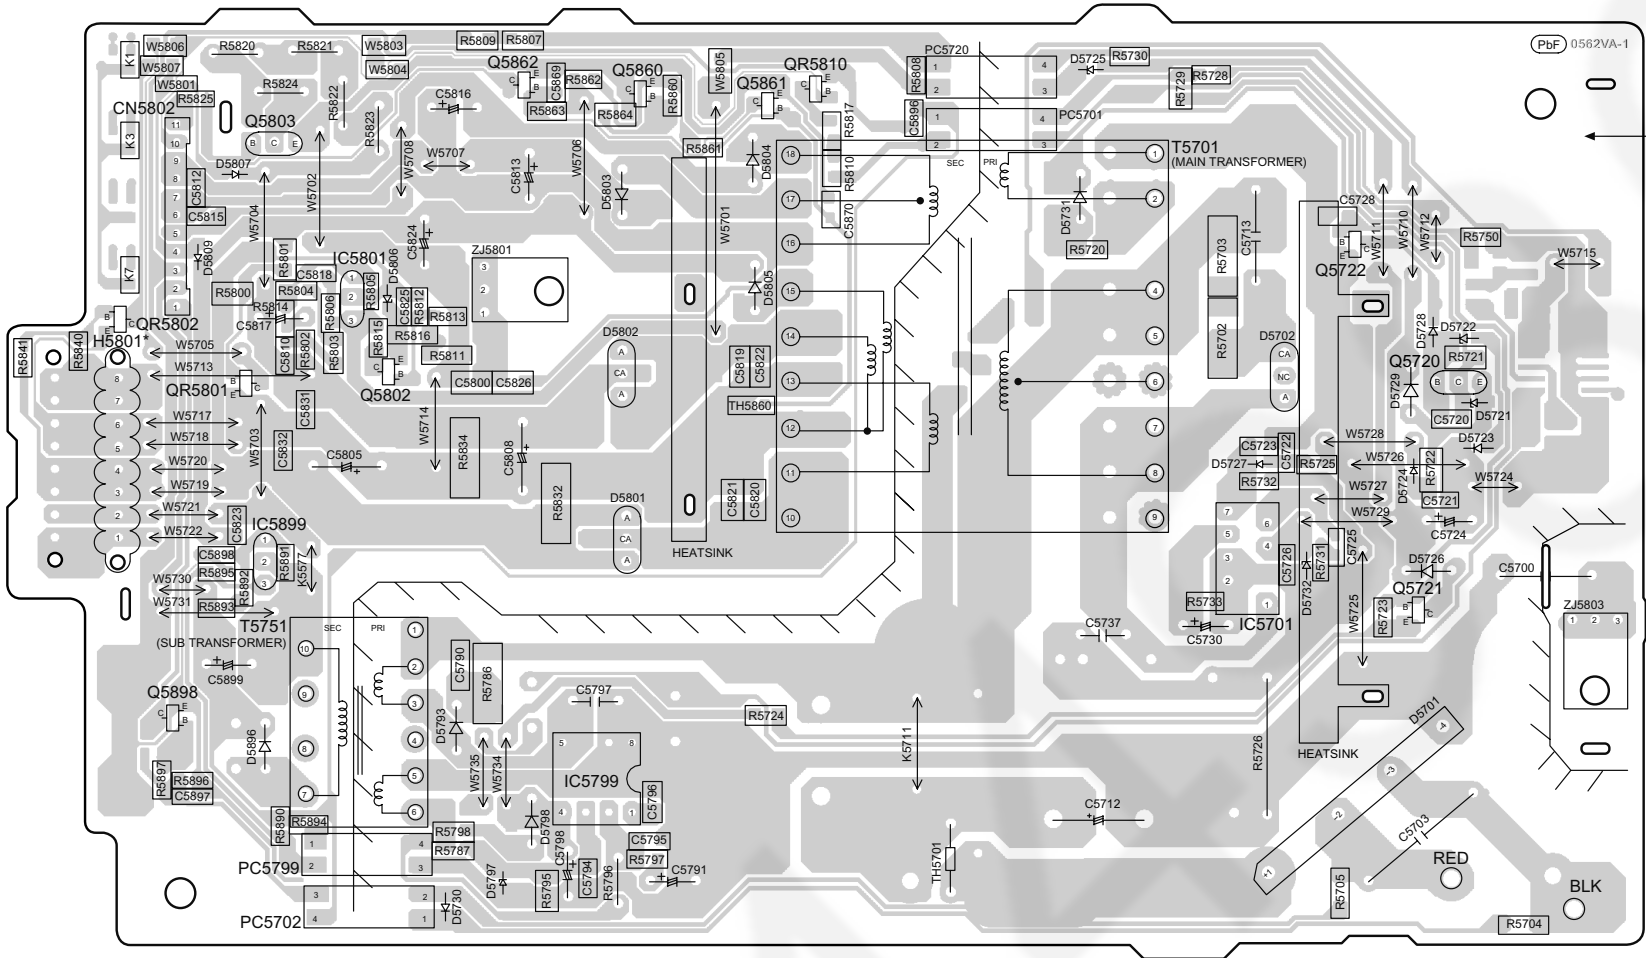

NOTE: " \* " REF IS FOR INDICATION ONLY.

SA-VK480EE  
SMPS P.C.B.

A0449860

## 20 Terminal Function of ICs

### 20.1. IC2801 (RFKWMVK480GC): IC Microprocessor

| Pin No. | Terminal Name  | I/O | Function                                                 |
|---------|----------------|-----|----------------------------------------------------------|
| 1       | LM             | I   | Level Meter Left                                         |
| 2       | NC             | -   | No Connection                                            |
| 3       | NC             | -   | No Connection                                            |
| 4       | Wide1          | -   | No Connection                                            |
| 5       | DVD_PCONT      | O   | Power Control pin for DVD Module                         |
| 6       | DVD_Mute       | I   | Signal from DVD module control mute circuit              |
| 7       | F_HOP          | O   | F_Hop for Digital Amplifier                              |
| 8       | BYTE           | -   | External Data Bus Width Select Input (Connect to Ground) |
| 9       | EFP_CNVss      | -   | Flash Mode Terminal                                      |
| 10      | Xc_in          | -   | 32.768 kHz Sub Clock                                     |
| 11      | Xc_out         | -   | 32.768 kHz Sub Clock                                     |
| 12      | EFP_RESET      | -   | Reset Input (ACTIVE L)                                   |
| 13      | Xout           | -   | 10 Mhz Main Clock                                        |
| 14      | Vss            | -   | Ground (0V)                                              |
| 15      | Xin            | -   | 10 Mhz Main Clock                                        |
| 16      | Vcc            | -   | Power Supply (+5V)                                       |
| 17      | NMI            | -   | Connect to Vcc (+5V)                                     |
| 18      | RMT            | I   | Remote Control Input                                     |
| 19      | NC             | -   | No Connection                                            |
| 20      | SYNC           | I   | AC Failure Detect Input                                  |
| 21      | ST/DO          | I   | Tuner IF Data / Stereo Input                             |
| 22      | SD             | I   | Tuner Signal Detect Input                                |
| 23      | NC             | -   | No Connection                                            |
| 24      | NC             | -   | No Connection                                            |
| 25      | NC             | -   | No Connection                                            |
| 26      | ASP_DATA       | O   | ASP DATA                                                 |
| 27      | ASP_CLK        | O   | ASP CLOCK                                                |
| 28      | NC             | -   | No Connection                                            |
| 29      | PLL_DATA       | O   | PLL DATA                                                 |
| 30      | PLL_CLK        | O   | PLL CLOCK                                                |
| 31      | REG1/ EFP_TxDI | I   | TUNER Region Setting 1/Flash TX for on board writer      |
| 32      | REG2/ EFP_RxDI | I   | TUNER Region Setting 2/Flash RX for on board writer      |
| 33      | REG3/ EFP_SCLK | I   | TUNER Region Setting 3/CLK for on board writer           |
| 34      | EFP_BUSY       | I   | EFP BUSY                                                 |
| 35      | DVD_CMD        | O   | CMD Signal for DVD Module                                |
| 36      | DVD_STA        | I   | STATUS Signal from DVD module                            |
| 37      | DVD_CLK        | I   | CLOCK Signal from DVD module                             |
| 38      | MODEL_SELECT   | I   | No Connection                                            |
| 39      | MOD_DA         | O   | Digital Amplifier Muting                                 |
| 40      | MUTE_A         | O   | Audio Mute                                               |
| 41      | EE_CS/EFP/ EPM | O   | EEPROM Chip Select                                       |
| 42      | EE_CLK         | O/I | EEPROM CLOCK                                             |
| 43      | EE_DATA        | O/I | EEPROM DATA                                              |
| 44      | SW_1           | -   | No Connection                                            |
| 45      | SW_2           | -   | No Connection                                            |
| 46      | PCONT          | O   | Main Transformer Control Output                          |
| 47      | DC_DET1        | I   | DC Detect Input                                          |
| 48      | DC_DET2        | I   | DC Detect Input                                          |
| 49      | NC             | -   | No Connection                                            |
| 50      | NC             | -   | No Connection                                            |

| Pin No. | Terminal Name | I/O | Function                                      |
|---------|---------------|-----|-----------------------------------------------|
| 51      | BASS_1        | I   | Bass Control 1                                |
| 52      | BASS_2        | I   | Bass Control 2                                |
| 53      | H.BASS LED    | O   | dimmer control                                |
| 54      | VOL LED       | O   | dimmer control                                |
| 55      | NC            | -   | No Connection                                 |
| 56      | PLUNGER       | O   | Deck plunger control                          |
| 57      | MOTOR         | O   | Deck motor control                            |
| 58      | NC            | -   | No Connection                                 |
| 59      | NC            | -   | No Connection                                 |
| 60      | DMT           | -   | No Connection                                 |
| 61      | REC           | O   | Deck Recording control                        |
| 62      | Vcc           | -   | Power Supply (+5V)                            |
| 63      | TAPE EJECT    | I   | Deck Eject                                    |
| 64      | Vss           | -   | Ground (0V)                                   |
| 65      | HP_SW         | I   | Head Phone Detection                          |
| 66      | MPORT_SW      | I   | Music Port Detection                          |
| 67      | MIC mute      | O   | Mute when Mic is in                           |
| 68      | AM_BP         | O   | AM Beaf Proof                                 |
| 69      | ECHO_1        | -   | No Connection                                 |
| 70      | ECHO_2        | -   | No Connection                                 |
| 71      | Ripping LED   | O   | LED for USB ripping                           |
| 72      | FL_CS         | O   | FL Driver Chip Select                         |
| 73      | FL_DATA       | O   | Serial Data to FL Driver                      |
| 74      | FL_CLK        | O   | Serial Clock to FL Driver                     |
| 75      | NC            | O   | No Connection                                 |
| 76      | ECHO_MUTE     | -   | No Connection                                 |
| 77      | TOP SWITCH    | I   | TOP SENSOR (CR14)                             |
| 78      | CLOSE         | I   | CLOSE SWITCH (CR14)                           |
| 79      | LO_F          | O   | Mecha loading mechanism                       |
| 80      | LO_R          | O   | Mecha loading reverse                         |
| 81      | HOME_CR       | I   | Home Sensor (CR14)                            |
| 82      | TRAY_CW_H     | O   | Tray close signal                             |
| 83      | TRAY_CCW_L    | O   | Tray open signal                              |
| 84      | OPEN          | I   | Open Switch (CR14)                            |
| 85      | MODE          | I   | MODE Sensor (CR14)                            |
| 86      | UD_SENSOR     | I   | CR14 control Position detect                  |
| 87      | UNLOAD SW     | I   | Unload Switch (CR14)                          |
| 88      | INNER_SW      | I   | Inner Switch (CR14)                           |
| 89      | DVD_REG       | I   | DVD Region Setting                            |
| 90      | MK_IN2        | I   | Mecha condition input 2 (Photo/TPS)           |
| 91      | VOL_JOG       | I   | Volume control                                |
| 92      | KEY3          | I   | Keyline 3 input                               |
| 93      | KEY2          | I   | Keyline 2 Input                               |
| 94      | KEY1          | I   | Keyline 1 input                               |
| 95      | MK_IN 1       | I   | Mecha condition input 1 (MODE, HALF)          |
| 96      | AVss          | -   | Analog Power Supply Input (Connect to Ground) |
| 97      | MK_IN3        | I   | Mecha condition input 3 (RECINH_F, RECINH_R)  |
| 98      | Vref          | -   | Reference for A-D (+5V)                       |
| 99      | AVcc          | -   | Analog Power Supply Input                     |
| 100     | NC            | -   | No Connection                                 |

### 20.2. IC6601(C0HBB0000057): IC FL Driver


| Pin No. | Terminal Name | I/O | Function         |
|---------|---------------|-----|------------------|
| 1       | P0            | O   | No Connection    |
| 2       | P1            | -   | No Connection    |
| 3       | P2            | -   | No Connection    |
| 4       | P3            | -   | No Connection    |
| 5       | OSC           | I   | Oscillator Input |
| 6       | NC            | -   | No Connection    |


| Pin No. | Terminal Name | I/O | Function                         |
|---------|---------------|-----|----------------------------------|
| 7       | DIN           | I   | Data Input                       |
| 8       | CLK           | I   | Clock Input                      |
| 9       | STB           | I   | Serial Interface Strobe          |
| 10      | K1            | -   | Key Data Input 1 (No Connection) |
| 11      | K2            | -   | Key Data Input 2 (No Connection) |
| 12      | VSS           | -   | GND                              |
| 13      | VDD           | -   | Power Supply (+5V)               |
| 14      | S1            | O   | Segment Output 18                |
| 15      | S2            | O   | Segment Output 17                |
| 16      | S3            | O   | Segment Output 16                |
| 17      | S4            | O   | Segment Output 15                |
| 18      | S5            | O   | Segment Output 14                |
| 19      | S6            | O   | Segment Output 13                |
| 20      | S7            | O   | Segment Output 12                |
| 21      | S8            | O   | Segment Output 11                |
| 22      | S9            | O   | Segment Output 10                |
| 23      | S10           | O   | Segment Output 9                 |
| 24      | S11           | O   | Segment Output 8                 |
| 25      | S12           | O   | Segment Output 7                 |
| 26      | S13           | O   | Segment Output 6                 |
| 27      | S14           | O   | Segment Output 5                 |
| 28      | S15           | O   | Segment Output 4                 |
| 29      | S16           | O   | Segment Output 3                 |
| 30      | VEE           | -   | Voltage Supply                   |
| 31      | G12           | O   | Segment Output 2                 |
| 32      | G11           | O   | Segment Output 1                 |
| 33      | G10           | O   | Grid Segment Output 1            |
| 34      | G9            | O   | Grid Segment Output 2            |
| 35      | G8            | O   | Grid Segment Output 3            |
| 36      | G7            | O   | Grid Segment Output 4            |
| 37      | G6            | O   | Grid Segment Output 5            |
| 38      | G5            | O   | Grid Segment Output 6            |
| 39      | G4            | O   | Grid Segment Output 7            |
| 40      | G3            | O   | Grid Segment Output 8            |
| 41      | G2            | O   | Grid Segment Output 9            |
| 42      | G1            | O   | Grid Segment Output 10           |
| 43      | VDD           | -   | Voltage Supply (+5V)             |
| 44      | VSS           | -   | GND                              |

# 21 Exploded View and Replacement Parts List

## 21.1. Exploded View and Mechanical Replacement Part List

### 21.1.1. Cabinet Parts Location


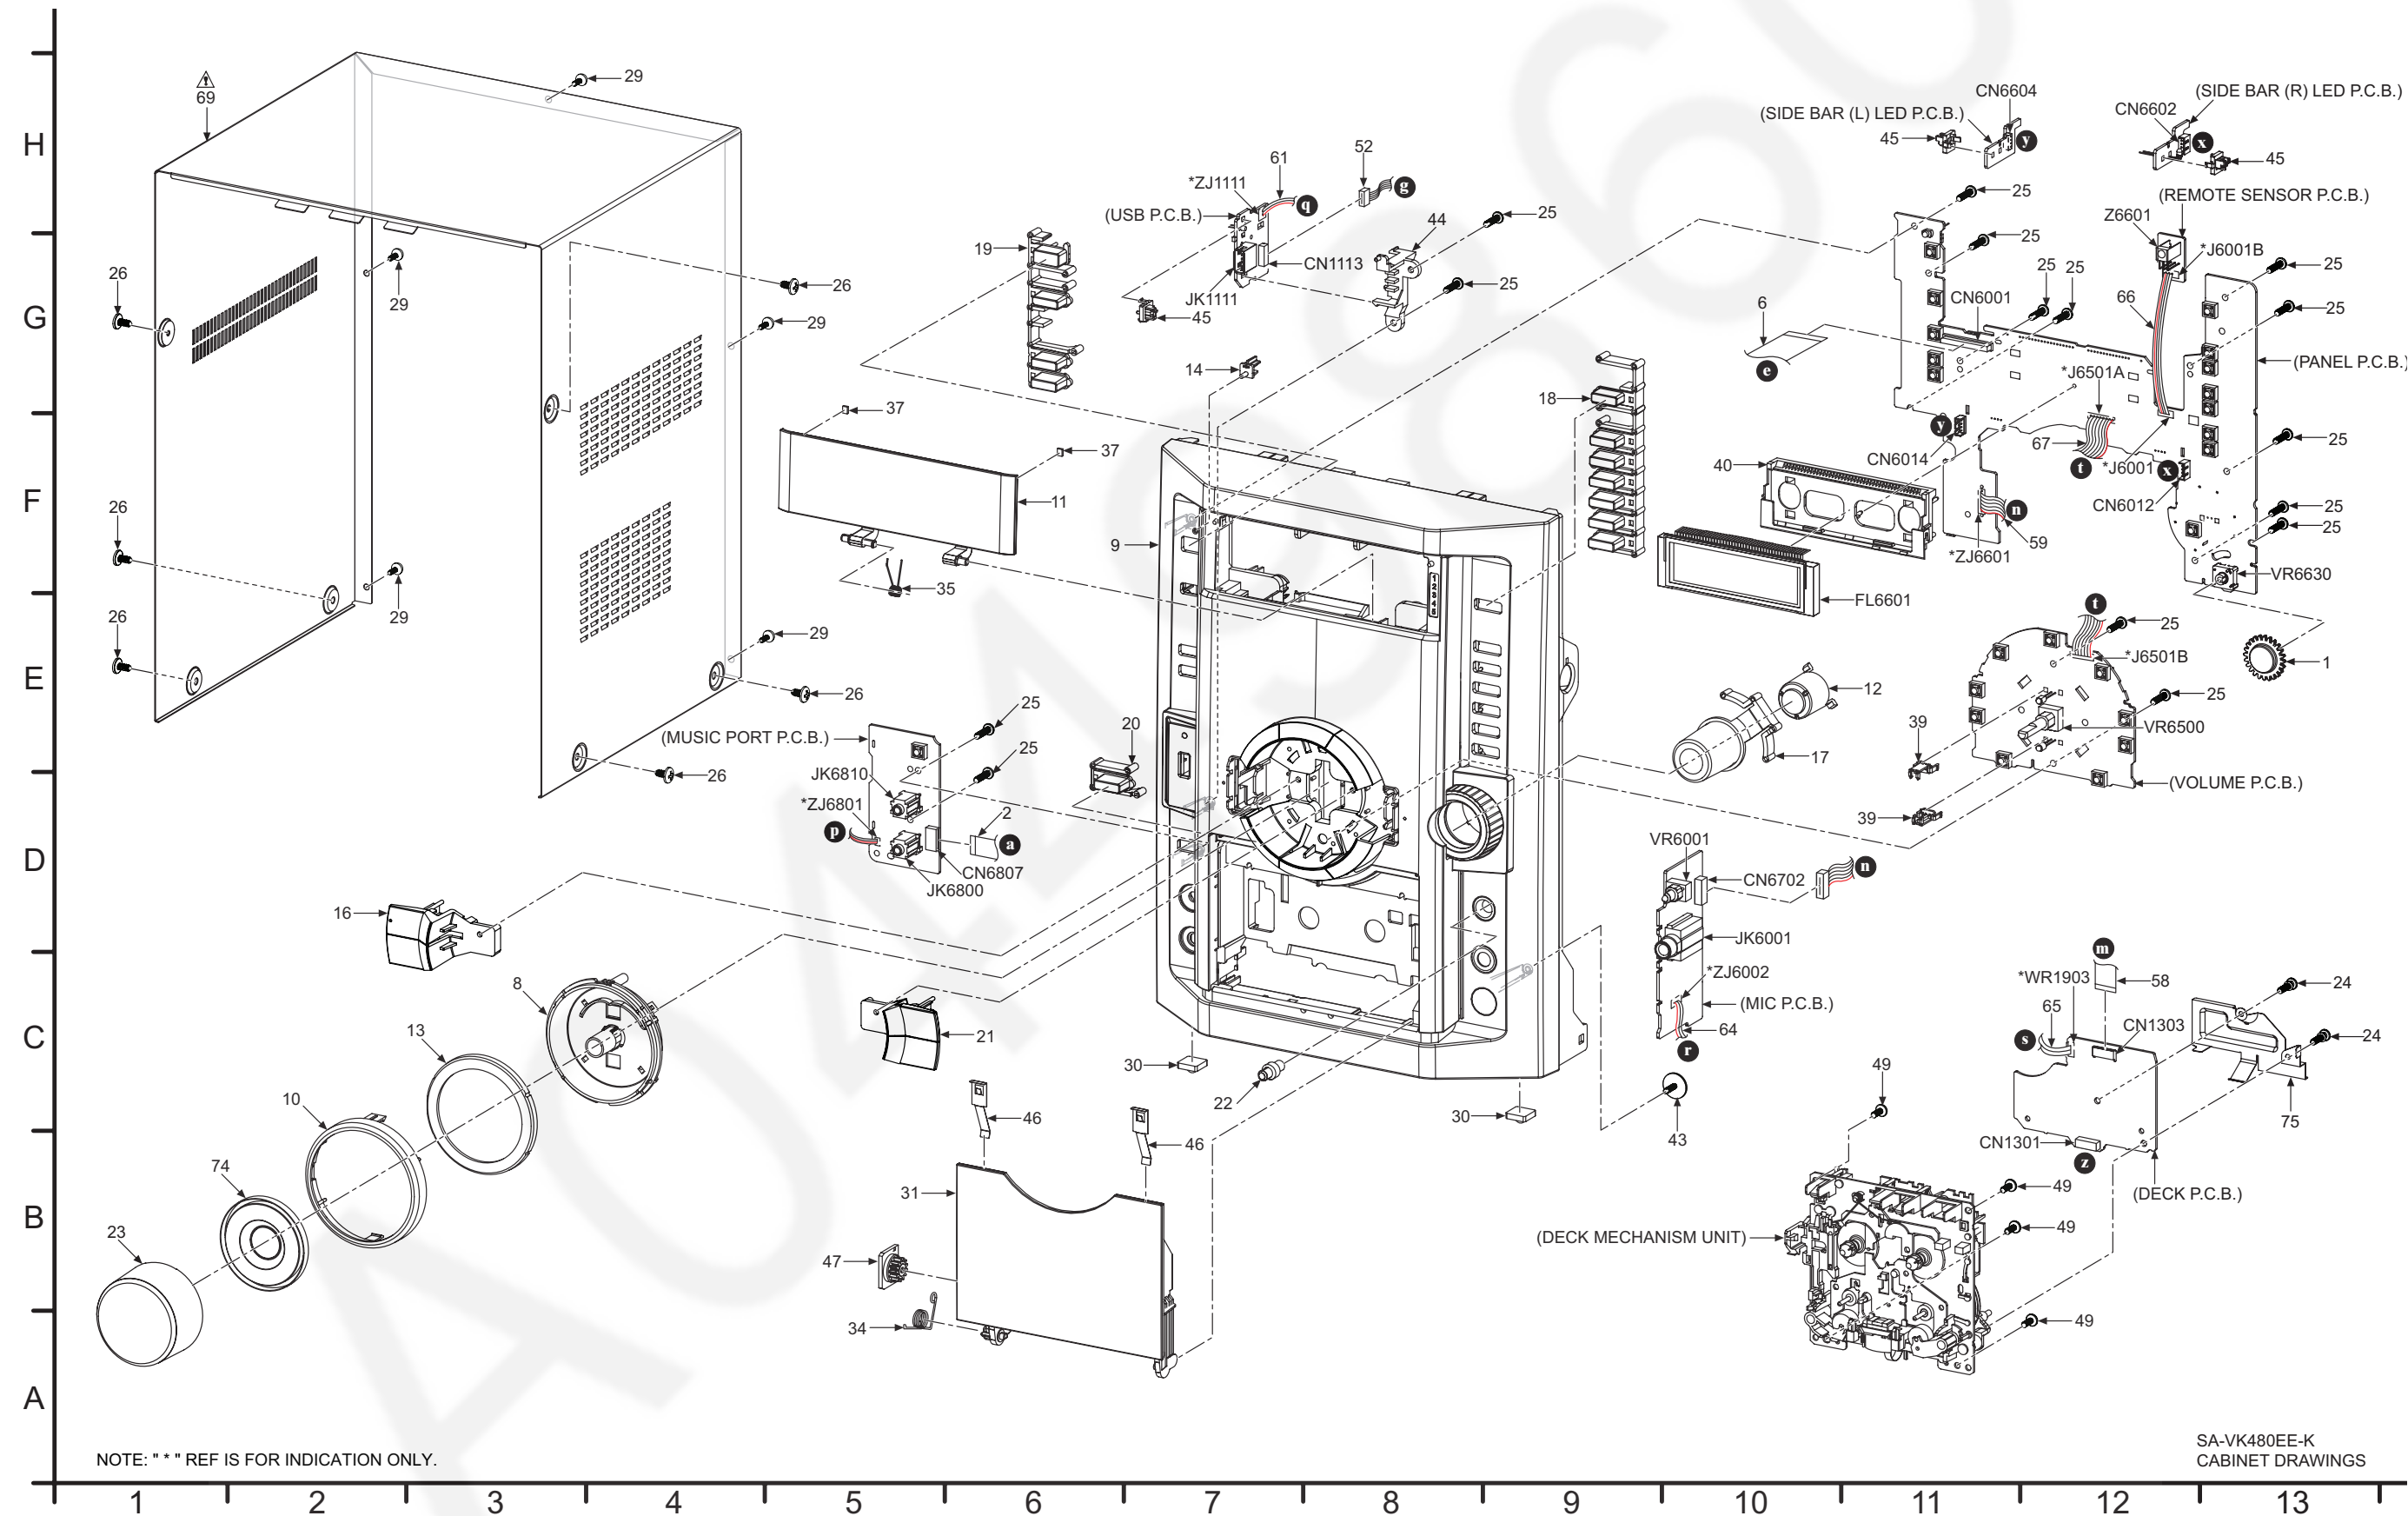


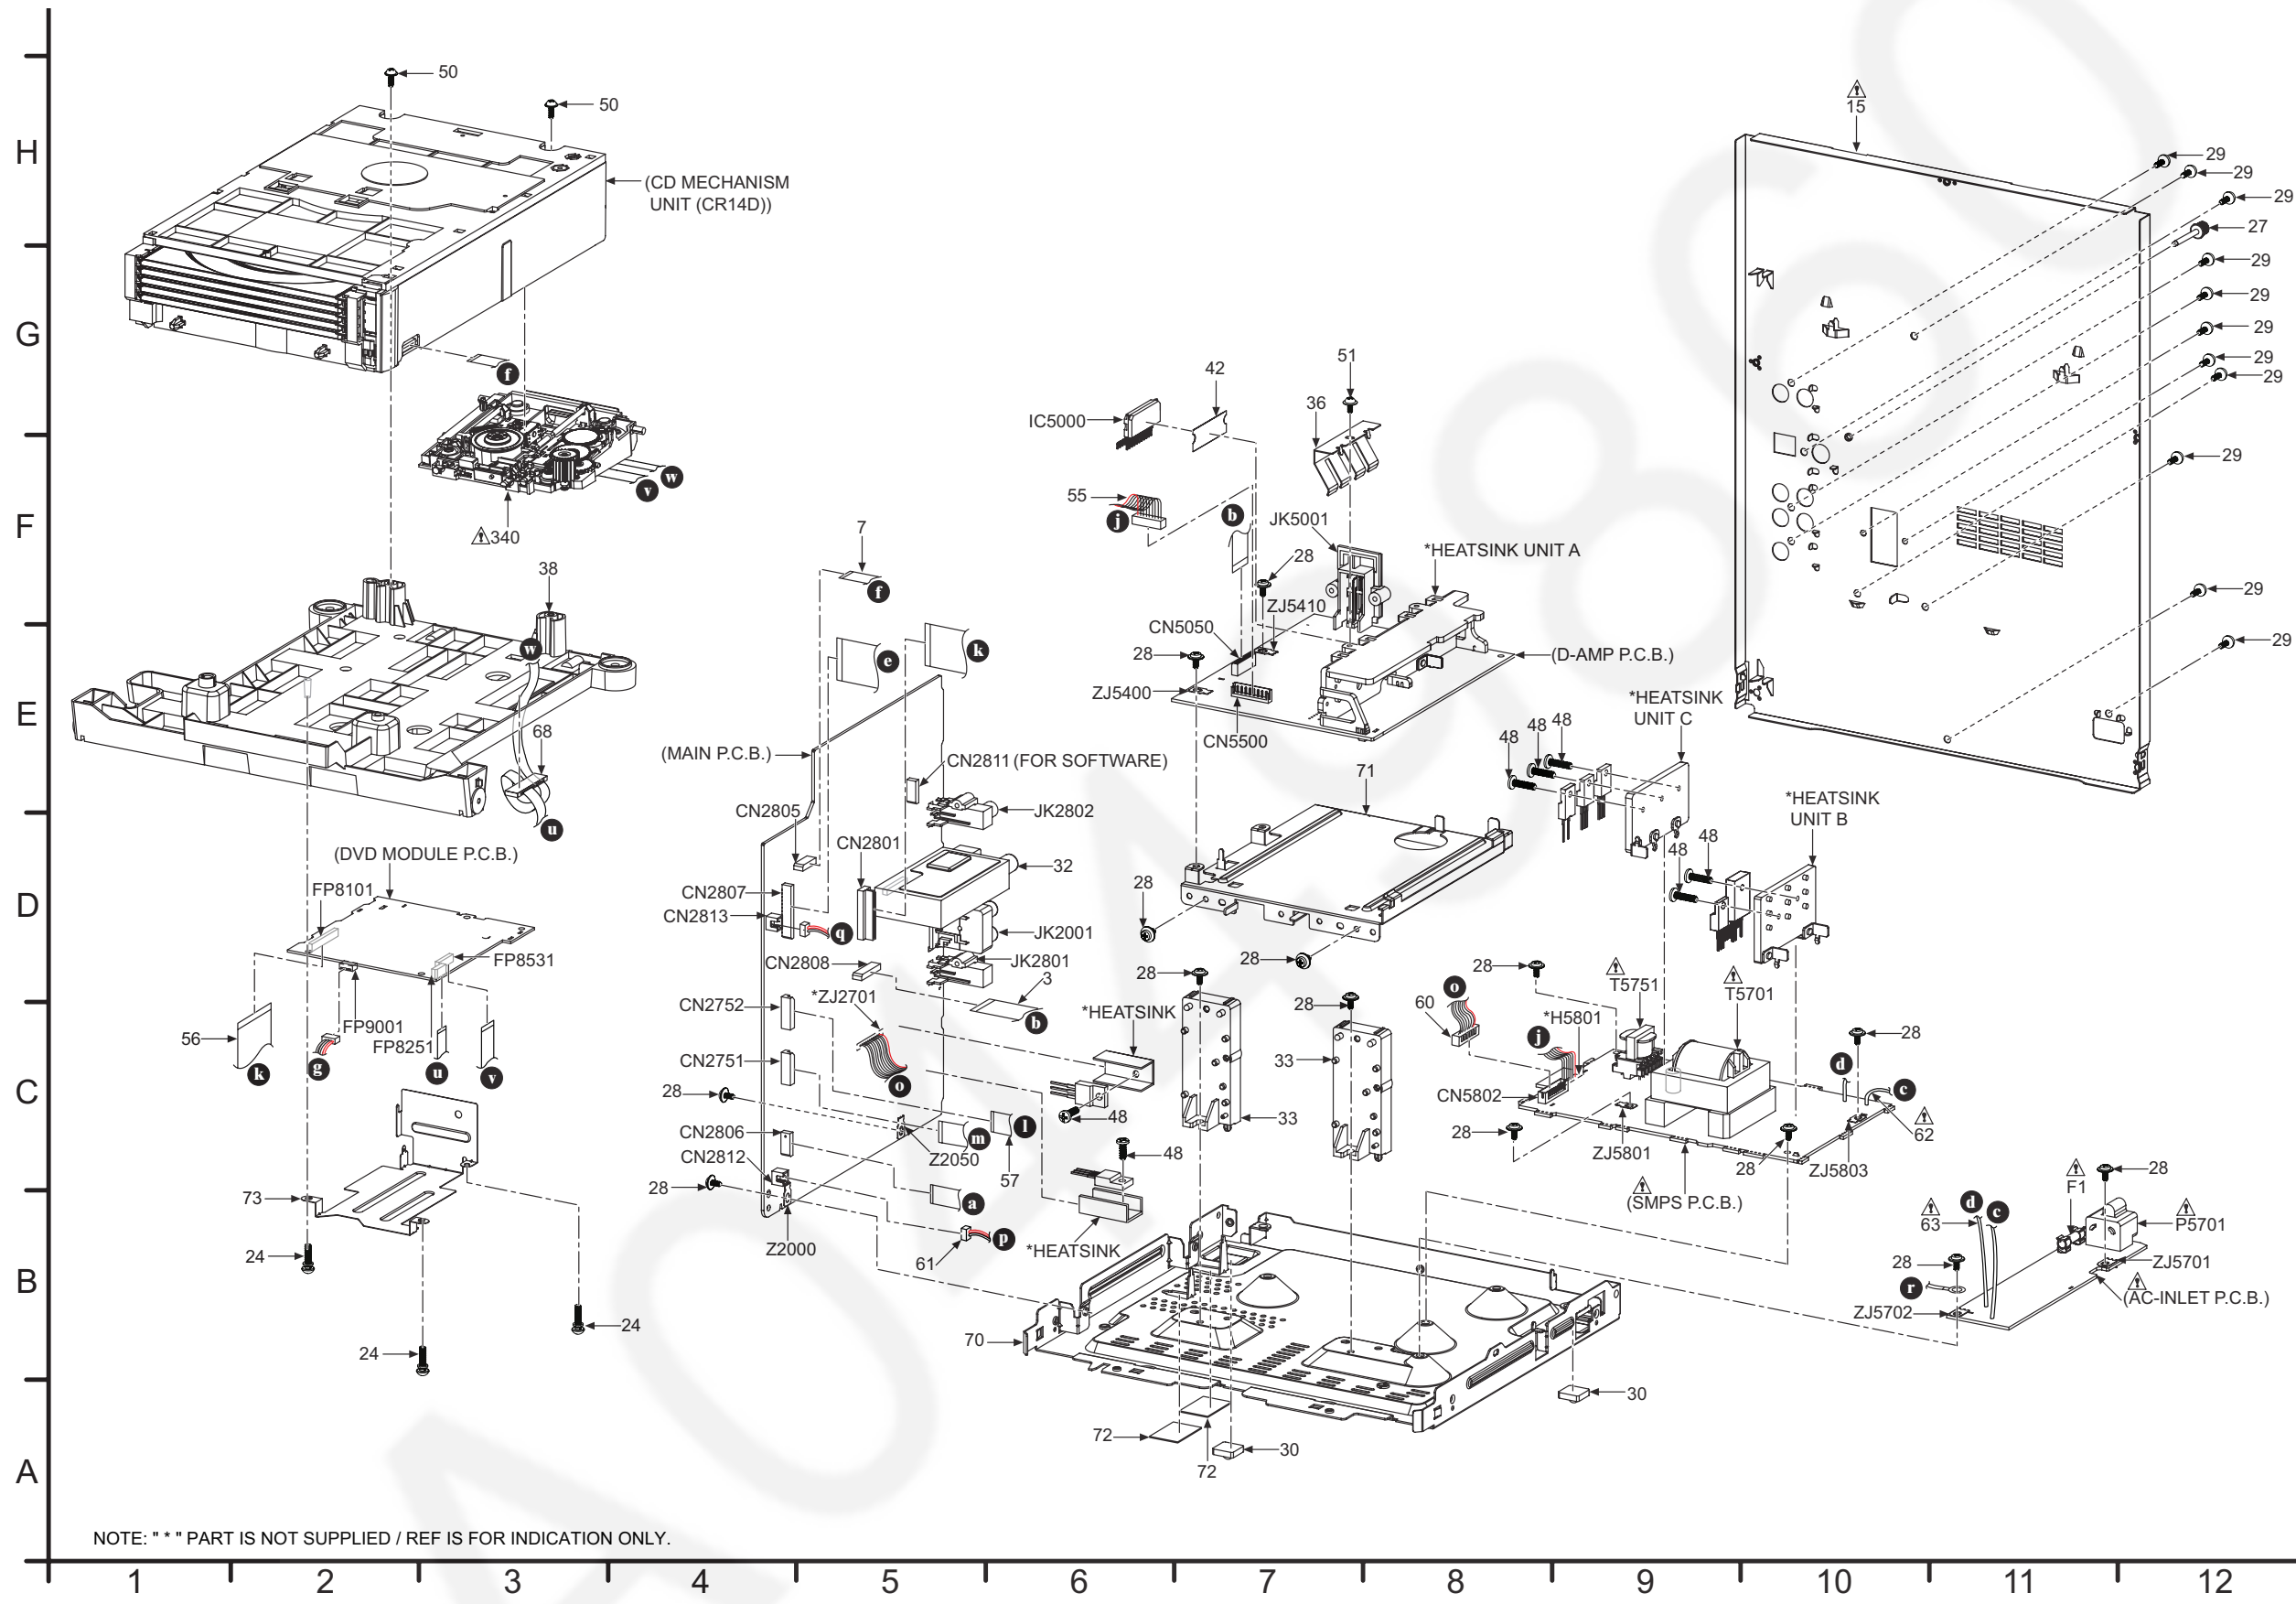


NOTE: " \* " PART IS NOT SUPPLIED / REF IS FOR INDICATION ONLY.

SA-VK480EE-K  
CABINET DRAWINGS

A vertical scale with labels A, B, C, D, E, F, G, H from bottom to top, with horizontal tick marks.

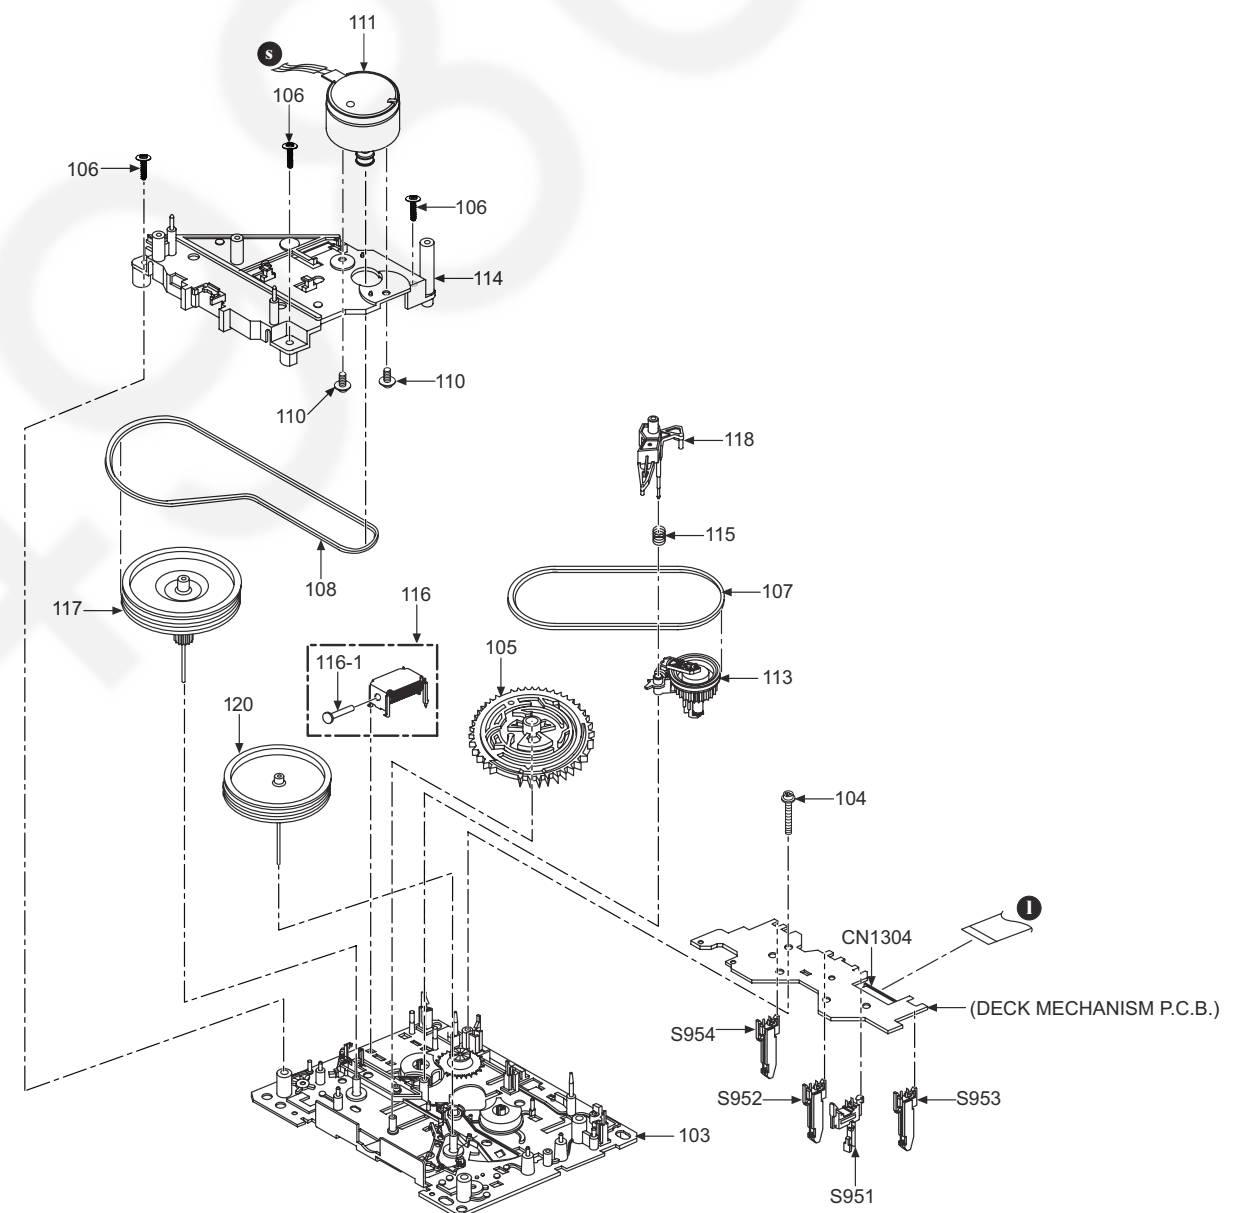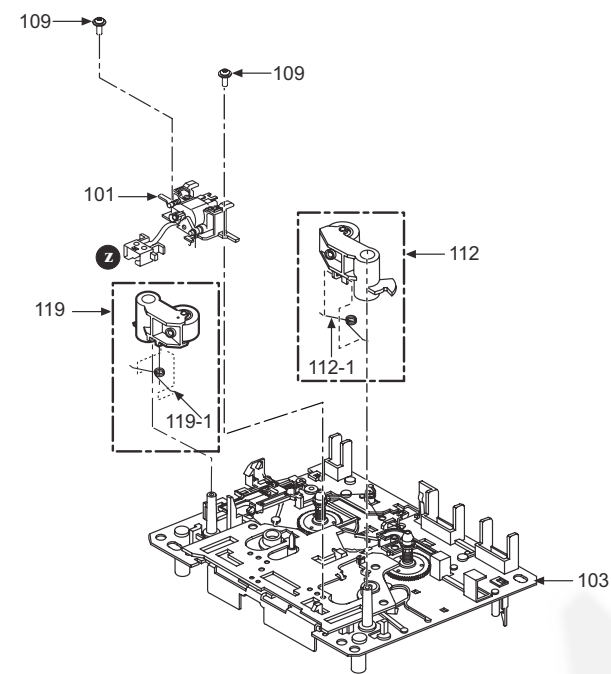

21.1.3. Packaging

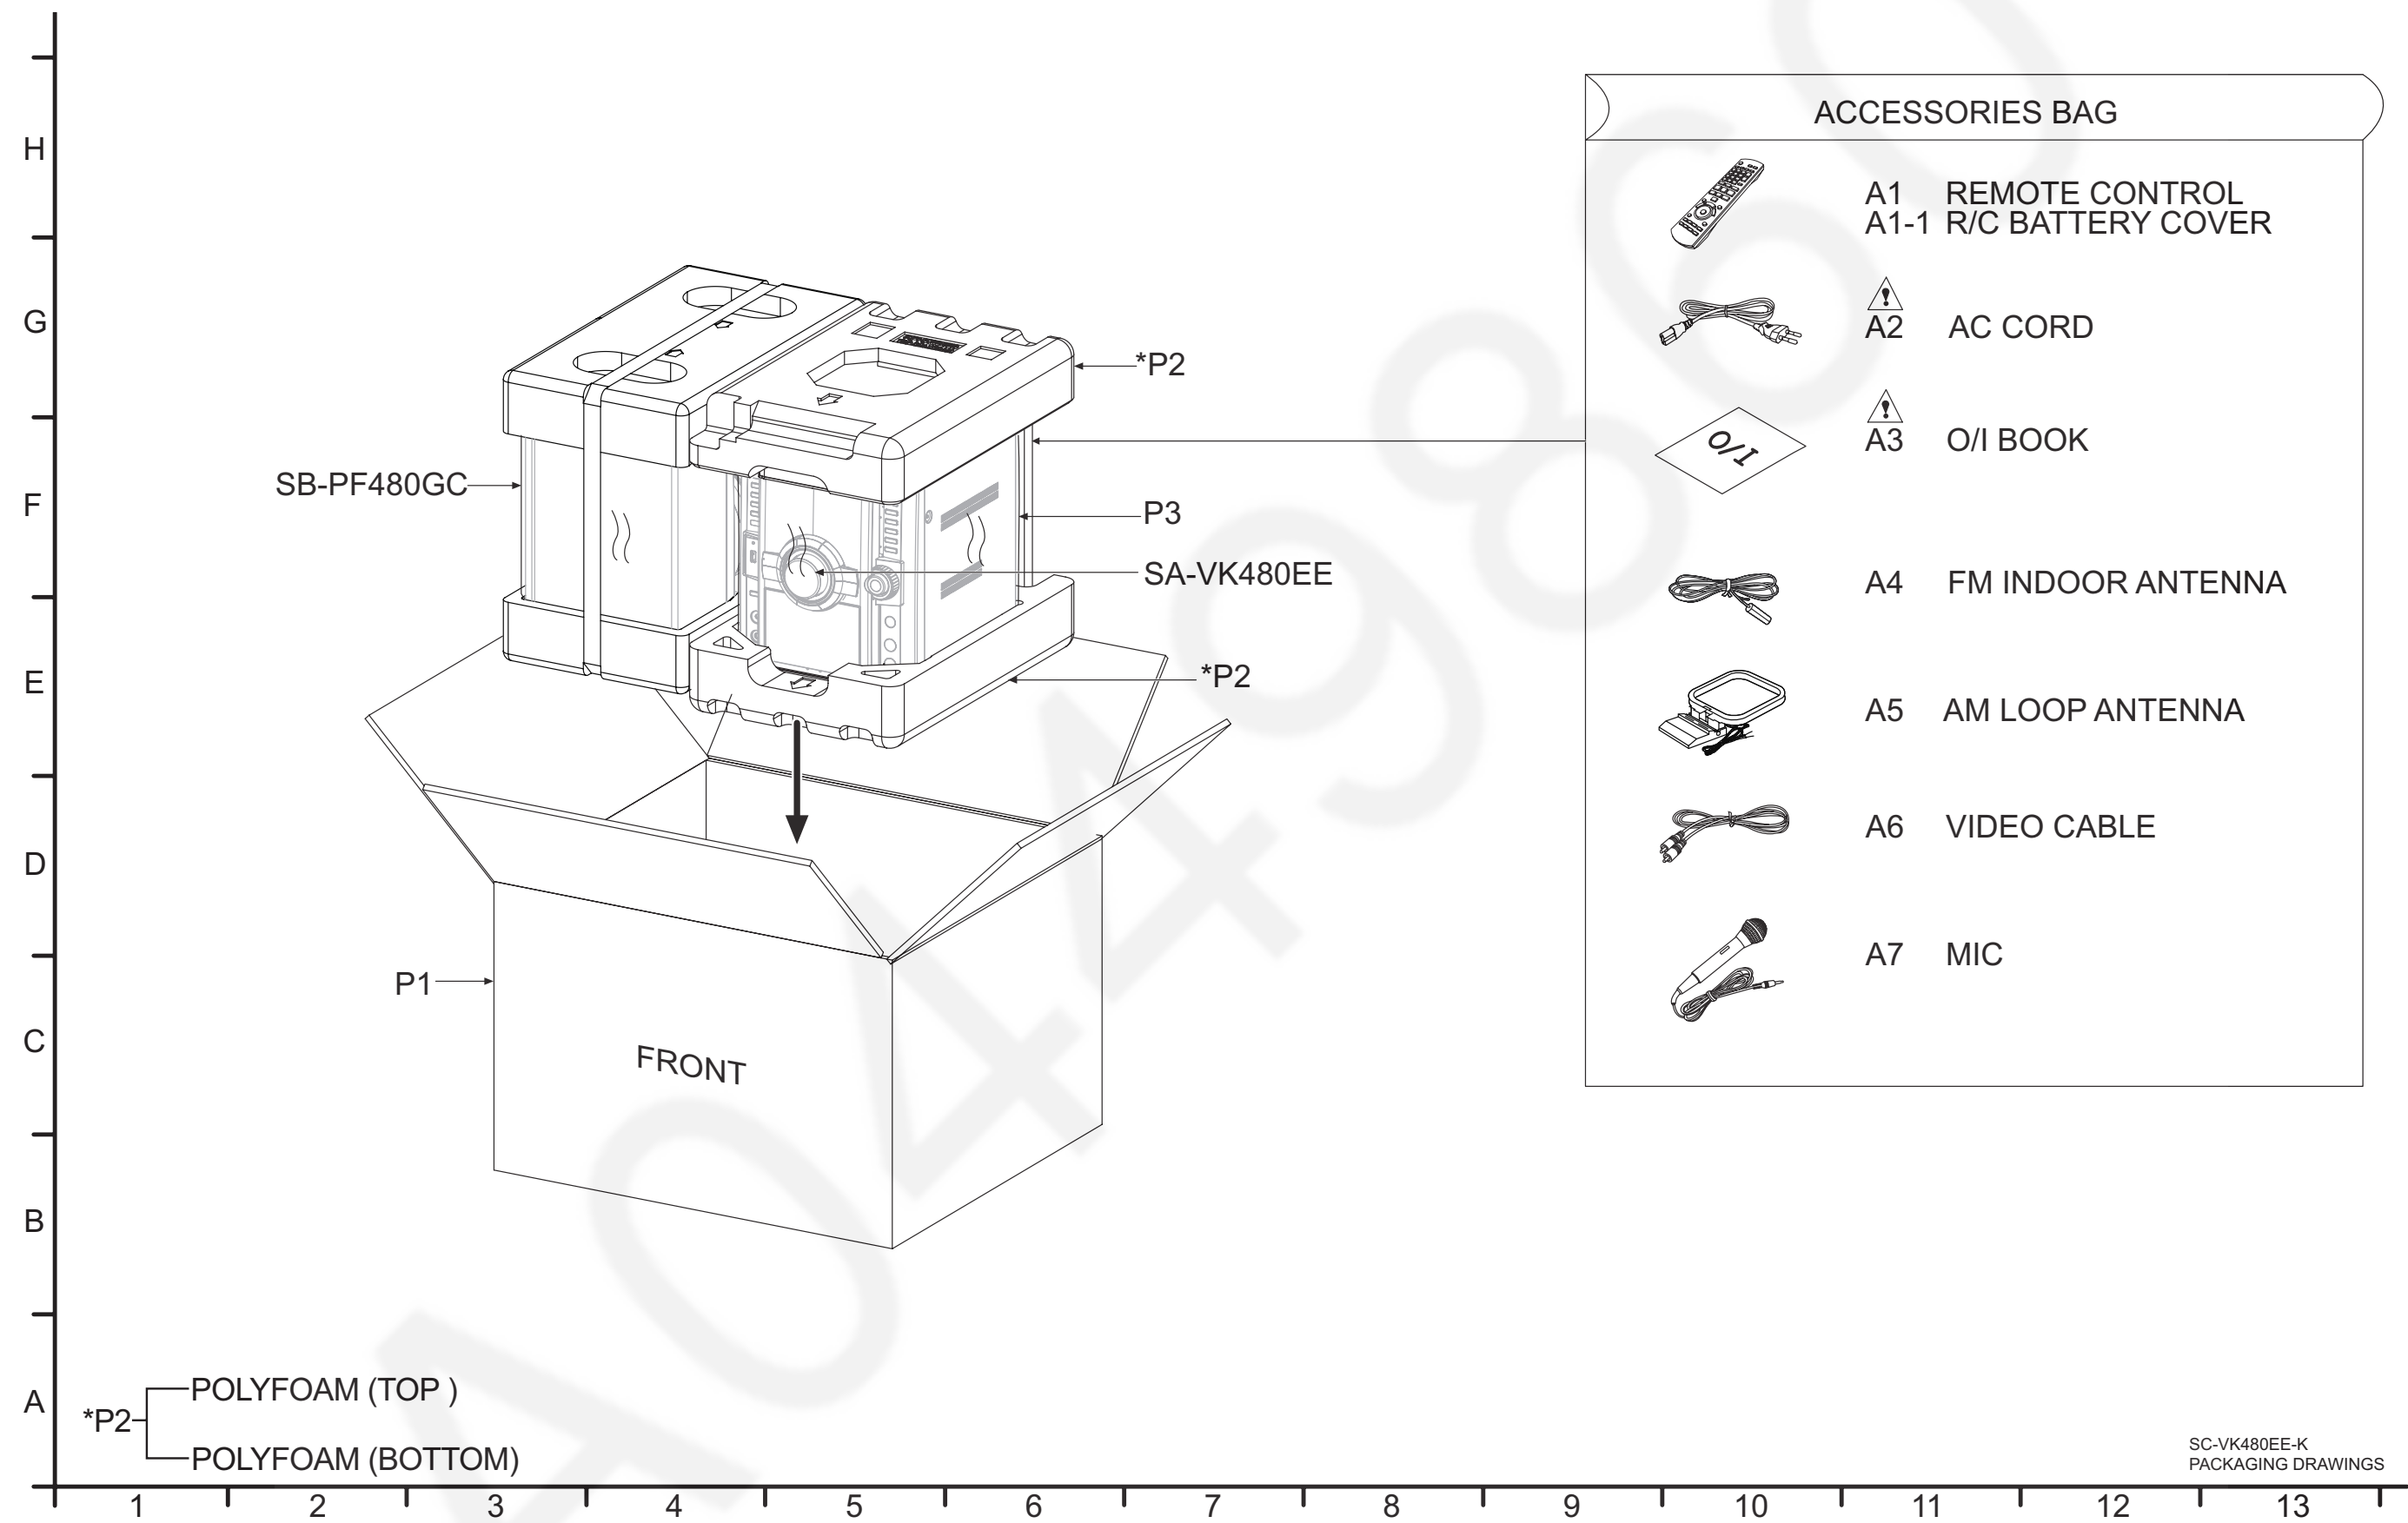

## 21.1.4. Mechanical Replacement Part List

### Important Safety Notice

Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

#### RTL (Retention Time Limited)

**Note:** The marking (RTL) indicates that the Retention Time is Limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

**Note:**

- When replacing any of these components, be sure to use only manufacturer's specified parts shown in the replacement part list.
- The parenthesized indications on the Remarks column specify the destination & product color (Refer to the cover page for the information).
- Parts without these indications shall be used for all areas.
- This product uses a laser diode. Refer to "Precaution of Laser Diode".
- All parts mentioned are supplied by PAVCSG unless indicated likewise.
- Parts mentioned [SPG] in the Remarks column are supplied by PAVC-CSG.
- Reference for O/I book languages are as follows:

|     |                 |     |         |     |            |     |                     |
|-----|-----------------|-----|---------|-----|------------|-----|---------------------|
| Ar: | Arabic          | Du: | Dutch   | It: | Italian    | Sp: | Spanish             |
| Cf: | Canadian French | En: | English | Ko: | Korean     | S:  | Swedish             |
| Cz: | Czech           | Fr: | French  | Po: | Polish     | Co: | Traditional Chinese |
| Da: | Danish          | Ge: | German  | Ru: | Russian    | Cn: | Simplified Chinese  |
| Pe: | Persian         | Ur: | Ukraine | Pr: | Portuguese |     |                     |

| Safety                                                                              | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|-------------------------------------------------------------------------------------|----------|--------------|-------------------------|-----|---------|
|                                                                                     |          |              | CABINET AND CHASSIS     |     |         |
|                                                                                     | 1        | RDGX0040     | VOLUME GEAR             | 1   |         |
|                                                                                     | 2        | REEX0740     | 10P FFC (MUSIC-MAIN)    | 1   |         |
|                                                                                     | 3        | REEX0881     | 17P FFC (MAIN-DAMP)     | 1   |         |
|                                                                                     | 6        | REEX0883     | 27P FFC (MAIN-PANEL)    | 1   |         |
|                                                                                     | 7        | REEX0904-J   | 11P FFC (OPU-MAIN)      | 1   |         |
|                                                                                     | 8        | RGCX0010-W   | VOLUME LIGHT REFLECTOR  | 1   |         |
|                                                                                     | 9        | RFKGAVK480GA | FRONT PANEL ASS'Y       | 1   |         |
|                                                                                     | 10       | RGKX0482-1S  | VOLUME ORNAMENT         | 1   |         |
|                                                                                     | 11       | RGKX0483B-K1 | CD LID                  | 1   |         |
|                                                                                     | 12       | RGKX0488A-B  | DYNAMIC BASS ORNAMENT   | 1   |         |
|                                                                                     | 13       | RGLX0164-B   | VOLUME LIGHT PIECE      | 1   |         |
|                                                                                     | 14       | RGLX0167-Q   | POWER LIGHT PIECE       | 1   |         |
|  | 15       | RGRX0070L-D1 | REAR PANEL              | 1   |         |
|                                                                                     | 16       | RGUX0764C-1S | MAIN FUNCTION BUTTON L  | 1   |         |
|                                                                                     | 17       | RGUX0765-3S1 | DYNAMIC BASS BUTTON     | 1   |         |
|                                                                                     | 18       | RGUX0766A-K  | 5CD CHANGE BUTTON       | 1   |         |
|                                                                                     | 19       | RGUX0767B-K  | POWER CONTROL BUTTON    | 1   |         |
|                                                                                     | 20       | RGUX0768-K   | CASSETTE EJECT BUTTON   | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | 21       | RGUX0777B-1S | MAIN FUNCTION BUTTON R  | 1   |         |
|        | 22       | RGWX0056-1K1 | MIC VOLUME KNOB         | 1   |         |
|        | 23       | RGWX0072A-3S | VOLUME KNOB             | 1   |         |
|        | 24       | RHD26043-1   | SCREW                   | 5   |         |
|        | 25       | RHD26046-L   | SCREW                   | 15  |         |
|        | 26       | RHD30007-K2J | SCREW                   | 6   |         |
|        | 27       | RHD30070     | SCREW                   | 1   |         |
|        | 28       | RHD30111-31  | SCREW                   | 14  |         |
|        | 29       | RHD30119-S   | SCREW                   | 16  |         |
|        | 30       | RKA0072-KJ   | LEG CUSHION             | 4   |         |
|        | 31       | RKFX0143A-K1 | CASSETTE LID            | 1   |         |
|        | 32       | J3CCBB000010 | TUNER PACK              | 1   |         |
|        | 33       | RMAX0333-2   | CHASSIS SUPPORT         | 2   |         |
|        | 34       | RMBV0042-2   | CASSETTE LID SPRING     | 1   |         |
|        | 35       | RMBX0086-1   | CD LID OPEN SPRING      | 1   |         |
|        | 36       | RMC0465      | TR SPRING               | 1   |         |
|        | 37       | RMGX0033     | CUSHION RUBBER          | 2   |         |
|        | 38       | RMKX0151C    | CD CHASSIS              | 1   |         |
|        | 39       | RMNV0059     | LED HOLDER              | 2   |         |
|        | 40       | RMNV0079-1   | FL HOLDER               | 1   |         |
|        | 42       | RMZX0041     | IC INSULATOR            | 1   |         |
|        | 43       | RHD30008     | SCREW                   | 1   |         |
|        | 44       | RMNX0287A    | USB JACK HOLDER         | 1   |         |
|        | 45       | RMNX0190     | LED HOLDER              | 3   |         |
|        | 46       | RUS757ZAA    | CASSETTE HALF SPRING    | 2   |         |
|        | 47       | RXGX0002     | DAMPER GEAR             | 1   |         |
|        | 48       | XTB3+10JFJ   | SCREW                   | 7   |         |
|        | 49       | XTV3+10GFJ-M | SCREW                   | 4   |         |
|        | 50       | XTW3+12TFJ   | SCREW                   | 2   |         |
|        | 51       | XTW3+8TFJ    | SCREW                   | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description    | Qty | Remarks |
|--------|----------|--------------|----------------------------|-----|---------|
|        | 52       | REXX0690-1   | 5P WIRE (USB-DVD MODULE)   | 1   |         |
|        | 55       | REXX0683-1   | 8P WIRE (SMPS-DAMP)        | 1   |         |
|        | 56       | REEX0905     | 50P FFC (MAIN-DVD MODULE)  | 1   |         |
|        | 57       | REEX0987     | 8P FFC (MAIN-DECK)         | 1   |         |
|        | 58       | REEX0988     | 12P WIRE (MAIN-DECK)       | 1   |         |
|        | 59       | REXX0679-1   | 7P WIRE (PANEL-MIC)        | 1   |         |
|        | 60       | REXX0680     | 11P WIRE (MAIN-SMPS)       | 1   |         |
|        | 61       | REXX0681     | 2P WIRE (PANEL-MUSIC PORT) | 2   |         |
| △      | 62       | REXX0684-1   | BLACK WIRE (AC INLET-SMPS) | 1   |         |
| △      | 63       | REXX0685-1   | RED WIRE (AC INLET-SMPS)   | 1   |         |
|        | 64       | REXX1028     | 2P WIRE (MIC-AC INLET)     | 1   |         |
|        | 65       | RWJ0102050KR | 2P WIRE (MOTOR)            | 1   |         |
|        | 66       | RWJ1103055SS | 3P WIRE (PANEL-REMOTE)     | 1   |         |
|        | 67       | RWJ1108055SS | 8P WIRE (PANEL-VOLUME)     | 1   |         |
|        | 68       | JOKD00000126 | FERRITE CORE               | 1   |         |
| △      | 69       | RKMX0144A-K  | TOP CABINET                | 1   |         |
|        | 70       | RMKX0148-4   | BOTTOM CHASSIS             | 1   |         |
|        | 71       | RMKX0149-2   | INNER CHASSIS              | 1   |         |
|        | 72       | RMVX0126     | HOLE COVER                 | 2   |         |
|        | 73       | RSCX0216     | BACK END SHIELD PLATE      | 1   |         |
|        | 74       | RMQX0319-W   | VOLUME DIFFUSER            | 1   |         |
|        | 75       | RSCX0194     | CASSETTE SHIELD PLATE      | 1   |         |
|        |          |              | CASSETTE DECK              |     |         |
|        | 101      | RED0064-2    | R/P HEAD BLOCK SUB ASSY    | 1   |         |
|        | 103      | RFKJSTR280PP | MAIN CHASSIS ASS'Y         | 1   |         |
|        | 104      | XYC2+JF17FJ  | PCB EARTH SCREW            | 1   |         |
|        | 105      | RDK0026-4    | MAIN GEAR                  | 1   |         |
|        | 106      | XTW26+10SFJ  | SUB-CHASSIS SCREW          | 3   |         |
|        | 107      | RDV0033-4    | WINDING BELT               | 1   |         |
|        | 108      | RDV0034-2    | CAPSTAN BELT A             | 1   |         |
|        | 109      | XTW2+5LFJ    | HEAD BLOCK UNIT SCREW      | 2   |         |
|        | 110      | RHD26022-1   | MOTOR SCREW                | 2   |         |
|        | 111      | REM0120      | CAPSTAN MOTOR ASS'Y        | 1   |         |
|        | 112      | RXL0124      | PINCH ROLLER F ASSY        | 1   |         |
|        | 112-1    | RMB0401      | PINCH ARM SPRING 'F'       | 1   |         |
|        | 113      | RXL0126      | WINDING ARM ASSY           | 1   |         |
|        | 114      | RMK0283A-2   | SUB-CHASSIS                | 1   |         |
|        | 115      | RMB0408      | THRUST SPRING              | 1   |         |
|        | 116      | RXQ0470-2    | PLUNGER ASSY               | 1   |         |
|        | 116-1    | RMS0398-1    | MOVING CORE                | 1   |         |
|        | 117      | RXF0061-1    | FLYWHEEL F ASSY            | 1   |         |
|        | 118      | RML0372-2    | WINDING LEVER              | 1   |         |
|        | 119      | RXL0125      | PUNCH ROLLER R ASS'Y       | 1   |         |
|        | 119-1    | RMB0402      | PUNCH ARM SPRING R         | 1   |         |
|        | 120      | RXF0062-1    | FLYWHEEL R ASS'Y           | 1   |         |
|        |          |              | TRAVERSE DECK              |     |         |
| △      | 340      | RD-DDTX004-V | TRAVERSE ASS'Y             | 1   | (RTL)   |
|        |          |              | PACKING MATERIALS          |     |         |
|        | P1       | RPGX2202     | PACKING CASE               | 1   |         |
|        | P2       | RPNX0640     | POLYFOAM                   | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | P3       | RPFX0198     | MIRAMAT SHEET           | 1   |         |
|        |          |              | ACCESSORIES             |     |         |
|        | A1       | N2QAYB000423 | REMOTE CONTROL          | 1   |         |
|        | A1-1     | RKK-PT470EBK | R/C BATTERY COVER       | 1   |         |
| △      | A2       | K2CQ2CA00007 | AC CORD                 | 1   |         |
| △      | A3       | RQTX0280-R   | O/I BOOK (Ru/Ur)        | 1   |         |
|        | A4       | RSAX0002     | FM INDOOR ANTENNA       | 1   |         |
|        | A5       | N1DYYY00003  | AM LOOP ANTENNA         | 1   |         |
|        | A6       | K2KA2CA00011 | VIDEO CABLE             | 1   |         |
|        | A7       | RP-VK21E-K   | MIC                     | 1   |         |

## 21.2. Electrical Replacement Part List

### Important Safety Notice

Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

#### RTL (Retention Time Limited)

**Note:** The marking (RTL) indicates that the Retention Time is Limited for this item.

After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

**Note:**

- When replacing any of these components, be sure to use only manufacturer's specified parts shown in the replacement part list.
- The parenthesized indications on the Remarks column specify the destination & product color (Refer to the cover page for the information).
- Parts without these indications shall be used for all areas.
- This product uses a laser diode. Refer to "Precaution of Laser Diode".
- Capacitor value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF), F=Farads.
- Resistance values are in ohms, unless specified otherwise, 1K=1000 (OHM).
- All parts mentioned are supplied by PAVCSG unless indicated likewise.
- Parts mentioned [SPG] in the Remarks column are supplied by PAVC-CSG.

| Safety   | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|----------|----------|--------------|-------------------------|-----|---------|
|          |          |              | PRINTED CIRCUIT BOARDS  |     |         |
|          | PCB1     | RFKEX0681D-C | DVD MODULE P.C.B        | 1   | (RTL)   |
|          | PCB2     | REPX0722B    | DECK P.C.B              | 1   | (RTL)   |
|          | PCB3     | REPX0731C    | D-AMP P.C.B             | 1   | (RTL)   |
|          | PCB4     | REPX0736C    | MAIN P.C.B              | 1   | (RTL)   |
|          | PCB5     | REPX0737A    | PANEL P.C.B             | 1   | (RTL)   |
|          | PCB6     | REPX0737A    | SIDE BAR (L) LED P.C.B  | 1   | (RTL)   |
|          | PCB7     | REPX0737A    | SIDE BAR (R) LED P.C.B  | 1   | (RTL)   |
|          | PCB8     | REPX0737A    | VOLUME P.C.B            | 1   | (RTL)   |
|          | PCB9     | REPX0737A    | REMOTE SENSOR P.C.B     | 1   | (RTL)   |
|          | PCB10    | REPX0737A    | MUSIC PORT P.C.B        | 1   | (RTL)   |
|          | PCB11    | REPX0736C    | USB P.C.B               | 1   | (RTL)   |
| $\Delta$ | PCB12    | REPX0751A    | SMPS P.C.B              | 1   | (RTL)   |
| $\Delta$ | PCB13    | REPX0751A    | AC INLET P.C.B          | 1   | (RTL)   |
|          | PCB14    | REPX0740C    | DECK MECHANISM P.C.B    | 1   | (RTL)   |
|          |          |              | INTEGRATED CIRCUITS     |     |         |
|          | IC971    | CNB13030R2AU | IC                      | 1   |         |
|          | IC1000   | C1AA00000612 | IC                      | 1   |         |
|          | IC1001   | AN7326K      | IC                      | 1   |         |
|          | IC2002   | C0CBCBC00140 | IC                      | 1   |         |
|          | IC2103   | C0ABBB000230 | IC                      | 1   |         |
|          | IC2801   | RFKWMVK480GC | IC                      | 1   |         |
|          | IC2802   | RFKWEVK480GC | IC                      | 1   |         |
|          | IC2803   | C1BB00001121 | IC                      | 1   |         |
|          | IC2804   | C0AABB000125 | IC                      | 1   |         |
|          | IC2900   | C9ZB00000461 | IC                      | 1   |         |
|          | IC4000   | C0DAAYH00001 | IC                      | 1   |         |
|          | IC5000   | C1BA00000492 | IC                      | 1   |         |
|          | IC5500   | C0JBAB000902 | IC                      | 1   |         |
|          | IC5701   | C5HACY000003 | IC                      | 1   |         |

| Safety | Ref. No. | Part No.      | Part Name & Description | Qty | Remarks |
|--------|----------|---------------|-------------------------|-----|---------|
|        | IC5799   | MIP4110MSSCF  | IC                      | 1   |         |
|        | IC5801   | C0DABFC00002  | IC                      | 1   |         |
|        | IC5899   | C0DAEMZ00001  | IC                      | 1   |         |
|        | IC6000   | C1AB000003130 | IC                      | 1   |         |
|        | IC6601   | C0HBB0000057  | IC                      | 1   |         |
|        | IC8001   | MN2DS0018MP   | IC                      | 1   |         |
|        | IC8051   | C3ABPG000160  | IC                      | 1   |         |
|        | IC8111   | C0DBFZG00001  | IC                      | 1   |         |
|        | IC8251   | C0GBG0000048  | IC                      | 1   |         |
|        | IC8420   | C0FBBK000071  | IC                      | 1   |         |
|        | IC8422   | C0FBAK000026  | IC                      | 1   |         |
|        | IC8601   | C0EBA0000039  | IC                      | 1   |         |
|        | IC8606   | C0EBE0000456  | IC                      | 1   |         |
|        | IC8611   | RFKEX0681D-C  | IC                      | 1   | (RTL)   |
|        | IC8651   | RFKWMH41B323  | IC                      | 1   | [SPG]   |
|        | IC8691   | C0JBAA000502  | IC                      | 1   |         |
|        | IC8695   | C0JBAA000502  | IC                      | 1   |         |
|        | IC9001   | C0JBAZ001251  | IC                      | 1   |         |
|        | IC9002   | C0JBAZ001251  | IC                      | 1   |         |
|        | IC9003   | C0JBAB000908  | IC                      | 1   |         |
|        | IC9005   | C0DBZYY00266  | IC                      | 1   |         |
|        |          |               | TRANSISTORS             |     |         |
|        | Q1303    | B1GBCFGH0001  | TRANSISTOR              | 1   |         |
|        | Q1304    | B1GDCFGH0002  | TRANSISTOR              | 1   |         |
|        | Q1306    | B1ABCF000176  | TRANSISTOR              | 1   |         |
|        | Q1307    | B1ABCF000176  | TRANSISTOR              | 1   |         |
|        | Q1309    | B1AAGC000006  | TRANSISTOR              | 1   |         |
|        | Q1310    | B1AAGC000006  | TRANSISTOR              | 1   |         |
|        | Q1312    | B1ABCF000011  | TRANSISTOR              | 1   |         |
|        | Q1314    | B1GDCFGH0002  | TRANSISTOR              | 1   |         |
|        | Q1315    | B1ACCF000094  | TRANSISTOR              | 1   |         |
|        | Q1316    | 2SD09650RA    | TRANSISTOR              | 1   |         |
|        | Q1317    | B1ABGC000005  | TRANSISTOR              | 1   |         |
|        | Q2002    | B1GDCFJJ0047  | TRANSISTOR              | 1   |         |
|        | Q2003    | B1GBCFJJ0051  | TRANSISTOR              | 1   |         |
|        | Q2004    | 2SD0601AHL    | TRANSISTOR              | 1   |         |
|        | Q2005    | B1ADCE000012  | TRANSISTOR              | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | Q2011    | B1GBCFJJ0051 | TRANSISTOR              | 1   |         |
|        | Q2012    | B1GBCFJJ0051 | TRANSISTOR              | 1   |         |
|        | Q2051    | B1GDCFJJ0047 | TRANSISTOR              | 1   |         |
|        | Q2052    | B1HBECA00004 | TRANSISTOR              | 1   |         |
|        | Q2142    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q2242    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q2366    | B1HBECA00004 | TRANSISTOR              | 1   |         |
|        | Q2501    | B1GDCFJJ0047 | TRANSISTOR              | 1   |         |
|        | Q2502    | B1HBECA00004 | TRANSISTOR              | 1   |         |
|        | Q2600    | B1GBCFLL0037 | TRANSISTOR              | 1   |         |
|        | Q2701    | B1GBCFJN0033 | TRANSISTOR              | 1   |         |
|        | Q2702    | B1ACCF000094 | TRANSISTOR              | 1   |         |
|        | Q2730    | B1HBECA00004 | TRANSISTOR              | 1   |         |
|        | Q2732    | B1ADCE000012 | TRANSISTOR              | 1   |         |
|        | Q2800    | B1GBCFJJ0051 | TRANSISTOR              | 1   |         |
|        | Q2801    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q2810    | B1AAKD000012 | TRANSISTOR              | 1   |         |
|        | Q2900    | B1BABK000001 | TRANSISTOR              | 1   |         |
|        | Q2912    | B1GBCFJN0033 | TRANSISTOR              | 1   |         |
|        | Q2980    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q4002    | B1BCCG000002 | TRANSISTOR              | 1   |         |
|        | Q4003    | B1BACG000023 | TRANSISTOR              | 1   |         |
|        | Q4006    | B1ADCE000012 | TRANSISTOR              | 1   |         |
|        | Q4007    | B1AAKD000012 | TRANSISTOR              | 1   |         |
|        | Q5100    | B1BCCG000002 | TRANSISTOR              | 1   |         |
|        | Q5101    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5102    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5601    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5603    | B1ADCE000012 | TRANSISTOR              | 1   |         |
|        | Q5604    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5720    | 2SC3940ARA   | TRANSISTOR              | 1   |         |
|        | Q5721    | 2SA207700L   | TRANSISTOR              | 1   |         |
|        | Q5722    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5802    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5803    | 2SC3940ARA   | TRANSISTOR              | 1   |         |
|        | Q5860    | 2SA207700L   | TRANSISTOR              | 1   |         |
|        | Q5861    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5862    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q5898    | B1ABCF000176 | TRANSISTOR              | 1   |         |
|        | Q6511    | B1GBCFJN0033 | TRANSISTOR              | 1   |         |
|        | Q6641    | B1GBCFJN0033 | TRANSISTOR              | 1   |         |
|        | Q8321    | 2SB1218ARL   | TRANSISTOR              | 1   |         |
|        | Q8325    | 2SB1218ARL   | TRANSISTOR              | 1   |         |
|        | Q8331    | 2SB1218ARL   | TRANSISTOR              | 1   |         |
|        | Q8335    | 2SB1218ARL   | TRANSISTOR              | 1   |         |
|        | Q8341    | 2SB1218ARL   | TRANSISTOR              | 1   |         |
|        | Q8551    | 2SD1819A0L   | TRANSISTOR              | 1   |         |
|        | Q8552    | B1ADGB000008 | TRANSISTOR              | 1   |         |
|        | Q8561    | 2SD1819A0L   | TRANSISTOR              | 1   |         |
|        | Q8562    | B1ADGB000008 | TRANSISTOR              | 1   |         |
|        | Q8563    | B1CFHA000002 | TRANSISTOR              | 1   |         |
|        | Q8564    | B1CFHA000002 | TRANSISTOR              | 1   |         |
|        | Q8565    | 2SD1819A0L   | TRANSISTOR              | 1   |         |
|        | QR4002   | B1GBCFJJ0051 | TRANSISTOR              | 1   |         |
|        | QR4003   | B1GBCFLL0037 | TRANSISTOR              | 1   |         |
|        | QR4004   | B1GBCFLL0037 | TRANSISTOR              | 1   |         |
|        | QR5801   | UNR221400L   | TRANSISTOR              | 1   |         |
|        | QR5802   | B1GDCFGA0018 | TRANSISTOR              | 1   |         |
|        | QR5810   | B1GBCFLL0037 | TRANSISTOR              | 1   |         |
|        | QR8420   | UNR521100L   | TRANSISTOR              | 1   |         |
|        | QR8421   | UNR521100L   | TRANSISTOR              | 1   |         |
|        | QR9030   | B1GDCFJJ0002 | TRANSISTOR              | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | DIODES                  |     |         |
|        | D951     | MA2C16500E   | DIODE                   | 1   |         |
|        | D1111    | B3AAA0001031 | DIODE                   | 1   |         |
|        | D1301    | B0ACCK000005 | DIODE                   | 1   |         |
|        | D2191    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2241    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2332    | B0ADCC000002 | DIODE                   | 1   |         |
|        | D2600    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2603    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2700    | B0ADCJ000020 | DIODE                   | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | D2801    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2802    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2810    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2811    | B0BC6R8A0263 | DIODE                   | 1   |         |
|        | D2820    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2829    | B0BC8R2A0266 | DIODE                   | 1   |         |
|        | D2900    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D2901    | B0BC035A0007 | DIODE                   | 1   |         |
|        | D2903    | B0EAMM000057 | DIODE                   | 1   |         |
|        | D4000    | B0EAMM000057 | DIODE                   | 1   |         |
|        | D4001    | B0BC024A0267 | DIODE                   | 1   |         |
|        | D4002    | B0JAME000114 | DIODE                   | 1   |         |
|        | D4003    | B0JCPD000025 | DIODE                   | 1   |         |
|        | D4005    | B0BC010A0265 | DIODE                   | 1   |         |
|        | D4007    | B0BC8R2A0266 | DIODE                   | 1   |         |
|        | D4032    | B0EAKM000117 | DIODE                   | 1   |         |
|        | D5001    | B0HCSP000001 | DIODE                   | 1   |         |
|        | D5002    | B0HCSP000001 | DIODE                   | 1   |         |
|        | D5003    | B0HCSP000001 | DIODE                   | 1   |         |
|        | D5004    | B0HCSP000001 | DIODE                   | 1   |         |
|        | D5102    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5501    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5502    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5503    | MAZ8051GML   | DIODE                   | 1   |         |
|        | D5701    | B0FBAR000041 | DIODE                   | 1   |         |
|        | D5702    | B0ZAZ0000052 | DIODE                   | 1   |         |
|        | D5721    | MAZ8180GML   | DIODE                   | 1   |         |
|        | D5722    | B0BC019A0007 | DIODE                   | 1   |         |
|        | D5723    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5724    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5725    | B0BC6R100010 | DIODE                   | 1   |         |
|        | D5726    | B0EAKM000117 | DIODE                   | 1   |         |
|        | D5727    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5728    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5729    | B0EAMM000057 | DIODE                   | 1   |         |
|        | D5730    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5731    | B0EAMM000057 | DIODE                   | 1   |         |
|        | D5732    | B0BC035A0007 | DIODE                   | 1   |         |
|        | D5793    | B0HAMP000094 | DIODE                   | 1   |         |
|        | D5797    | MA2J7280GL   | DIODE                   | 1   |         |
|        | D5798    | B0HAMP000094 | DIODE                   | 1   |         |
|        | D5801    | B0HBSM000043 | DIODE                   | 1   |         |
|        | D5802    | B0HBSM000043 | DIODE                   | 1   |         |
|        | D5803    | B0HFRJ000012 | DIODE                   | 1   |         |
|        | D5804    | B0EAMM000057 | DIODE                   | 1   |         |
|        | D5805    | B0EAMM000057 | DIODE                   | 1   |         |
|        | D5806    | MAZ8075GML   | DIODE                   | 1   |         |
|        | D5807    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5809    | MA2J1110GL   | DIODE                   | 1   |         |
|        | D5896    | B0EAMM000057 | DIODE                   | 1   |         |
|        | D6458    | B3AAA0000803 | DIODE                   | 1   |         |
|        | D6511    | B3AEA0000127 | DIODE                   | 1   |         |
|        | D6512    | B3AEA0000127 | DIODE                   | 1   |         |
|        | D6602    | B3AEA0000127 | DIODE                   | 1   |         |
|        | D6604    | B3AEA0000127 | DIODE                   | 1   |         |
|        | D6672    | B0BC5R1A0266 | DIODE                   | 1   |         |
|        | D8211    | MA2J1110GL   | DIODE                   | 1   |         |
|        | DZ2810   | B0BC5R6A0266 | DIODE                   | 1   |         |
|        | DZ4007   | B0BC9R1A0266 | DIODE                   | 1   |         |
| ⚠      | DZ5701   | ERZV10V511CS | ZENER                   | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | VARISTORS               |     |         |
|        | VA1110   | EZJZ1V171AA  | VARISTOR                | 1   |         |
|        | VA1120   | EZJZ1V171AA  | VARISTOR                | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | VARIABLE RESIS-<br>TORS |     |         |
|        | VR6001   | EVUE27FK2B53 | MIC VOL JOG             | 1   |         |
|        | VR6500   | EVEKE2F3524B | VOLUME JOG              | 1   |         |
|        | VR6630   | K9AA024A0008 | BASS CONTROL JOG        | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | SWITCHES                |     |         |
|        | S951     | K0J1BB000017 | SW MODE                 | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | S952     | K0J1BB000021 | SW HALF                 | 1   |         |
|        | S953     | K0J1BB000021 | SW REC                  | 1   |         |
|        | S954     | K0J1BB000021 | SW RECINH-R             | 1   |         |
|        | S6100    | EVQ21405RJ   | SW POWER                | 1   |         |
|        | S6101    | EVQ21405RJ   | SW USB REC              | 1   |         |
|        | S6104    | EVQ21405RJ   | SW SURROUND             | 1   |         |
|        | S6106    | EVQ21405RJ   | SW TAPE REC             | 1   |         |
|        | S6108    | EVQ21405RJ   | SW H.BASS               | 1   |         |
|        | S6201    | EVQ21405RJ   | SW OPEN/CLOSE           | 1   |         |
|        | S6202    | EVQ21405RJ   | SW EXCHANGE             | 1   |         |
|        | S6203    | EVQ21405RJ   | SW DISC 1               | 1   |         |
|        | S6204    | EVQ21405RJ   | SW DISC 2               | 1   |         |
|        | S6205    | EVQ21405RJ   | SW DISC 3               | 1   |         |
|        | S6206    | EVQ21405RJ   | SW DISC 4               | 1   |         |
|        | S6207    | EVQ21405RJ   | SW DISC 5               | 1   |         |
|        | S6208    | EVQ21405RJ   | SW STOP/DEMO            | 1   |         |
|        | S6300    | EVQ21405RJ   | SW FORWARD              | 1   |         |
|        | S6301    | EVQ21405RJ   | SW MANUAL EQ            | 1   |         |
|        | S6302    | EVQ21405RJ   | SW REWIND               | 1   |         |
|        | S6303    | EVQ21405RJ   | SW USB                  | 1   |         |
|        | S6304    | EVQ21405RJ   | SW TAPE                 | 1   |         |
|        | S6306    | EVQ21405RJ   | SW DVD/CD               | 1   |         |
|        | S6307    | EVQ21405RJ   | SW FM/AM                | 1   |         |
|        | S6308    | EVQ21405RJ   | SW EXT-IN               | 1   |         |
|        | S6820    | EVQ21405RJ   | SW OPEN                 | 1   |         |
|        |          |              | CONNECTORS              |     |         |
|        | CN1113   | K1KA05BA0061 | 5P CONNECTOR            | 1   |         |
|        | CN1301   | K1MY05AA0043 | 5P CONNECTOR            | 1   |         |
|        | CN1303   | K1MN12B00014 | 12P CONNECTOR           | 1   |         |
|        | CN1304   | K1MN10B00104 | 10P CONNECTOR           | 1   |         |
|        | CN2751   | K1MN12AA0003 | 12P CONNECTOR           | 1   |         |
|        | CN2752   | K1MN10AA0003 | 10P CONNECTOR           | 1   |         |
|        | CN2801   | K1MY50AA0029 | 50P CONNECTOR           | 1   |         |
|        | CN2805   | K1MN11AA0003 | 11P CONNECTOR           | 1   |         |
|        | CN2806   | K1MN10AA0003 | 10P CONNECTOR           | 1   |         |
|        | CN2807   | K1MY27AA0124 | 27P CONNECTOR           | 1   |         |
|        | CN2808   | K1MN17AA0004 | 17P CONNECTOR           | 1   |         |
|        | CN2811   | K1MN08AA0064 | 8P CONNECTOR            | 1   |         |
|        | CN2812   | K1KA02AA0186 | 2P CONNECTOR            | 1   |         |
|        | CN2813   | K1KA02AA0186 | 2P CONNECTOR            | 1   |         |
|        | CN5050   | K1MN17AA0004 | 17P CONNECTOR           | 1   |         |
|        | CN5500   | K1KA08AA0180 | 8P CONNECTOR            | 1   |         |
|        | CN5802   | K1KA11AA0194 | 11P CONNECTOR           | 1   |         |
|        | CN6001   | K1MY27AA0124 | 27P CONNECTOR           | 1   |         |
|        | CN6012   | K1KA04AA0031 | 4P CONNECTOR            | 1   |         |
|        | CN6014   | K1KA04AA0031 | 4P CONNECTOR            | 1   |         |
|        | CN6602   | K1KB04A00046 | 4P CONNECTOR            | 1   |         |
|        | CN6604   | K1KB04A00046 | 4P CONNECTOR            | 1   |         |
|        | CN6702   | K1KA07BA0061 | 7P CONNECTOR            | 1   |         |
|        | CN6807   | K1MN10AA0003 | 10P CONNECTOR           | 1   |         |
|        | FP8101   | K1MN50AA0082 | 50P CONNECTOR           | 1   |         |
|        | FP8251   | K1MN07AA0076 | 7P CONNECTOR            | 1   |         |
|        | FP8531   | K1MY26AA0021 | 26P CONNECTOR           | 1   |         |
|        | FP9001   | K1KA05BA0014 | 5P CONNECTOR            | 1   |         |
|        |          |              | COILS AND INDUCTORS     |     |         |
|        | L1301    | G2ZZ00000044 | BIAS OSC COIL           | 1   |         |
|        | L1302    | G0C470JA0055 | INDUCTOR                | 1   |         |
|        | L2001    | J0JBC0000015 | INDUCTOR                | 1   |         |
|        | L2003    | J0JBC0000015 | INDUCTOR                | 1   |         |
|        | L2004    | J0JBC0000015 | INDUCTOR                | 1   |         |
|        | L2005    | J0JBC0000015 | INDUCTOR                | 1   |         |
|        | L2552    | G0C220JA0055 | INDUCTOR                | 1   |         |
|        | L2600    | G0C3R3JA0027 | INDUCTOR                | 1   |         |
|        | L2804    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L2808    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L2811    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L2900    | G0C220JA0055 | INDUCTOR                | 1   |         |
|        | L2901    | J0JKB0000020 | INDUCTOR                | 1   |         |
|        | L2909    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L2910    | G0A220GA0026 | CHOKO COIL              | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | L2913    | G0A100G00005 | CHOKO COIL              | 1   |         |
|        | L4000    | G0A200D00002 | CHOKO COIL              | 1   |         |
|        | L4001    | G0A101ZA0028 | CHOKO COIL              | 1   |         |
|        | L4002    | G0A200D00002 | CHOKO COIL              | 1   |         |
|        | L4004    | G0A200D00002 | CHOKO COIL              | 1   |         |
|        | L4005    | G0A200D00002 | CHOKO COIL              | 1   |         |
|        | L4008    | G0A200D00002 | CHOKO COIL              | 1   |         |
|        | L5000    | G0A150L00003 | CHOKO COIL              | 1   |         |
|        | L5001    | G0B9R5K00003 | LINE FILTER             | 1   |         |
|        | L5002    | G0B9R5K00004 | LINE FILTER             | 1   |         |
| ⚠      | L5701    | ELF15N035AN  | LINE FILTER             | 1   |         |
| ⚠      | L5703    | ELF21N015A   | LINE FILTER             | 1   |         |
|        | L6000    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6003    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6007    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6671    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6801    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6802    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6811    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6812    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6851    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6863    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L6864    | J0JBC0000019 | INDUCTOR                | 1   |         |
|        | L8001    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L8201    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L8301    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L8302    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L8303    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L8330    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L8501    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L8550    | G1C100M00049 | INDUCTOR                | 1   |         |
|        | L9004    | G1BYYYC00026 | COMMON MODE EMI FILTER  | 1   |         |
|        | LB8001   | J0JHC0000045 | INDUCTOR                | 1   |         |
|        | LB8011   | J0JHC0000045 | INDUCTOR                | 1   |         |
|        | LB8401   | J0JCC0000308 | INDUCTOR                | 1   |         |
|        | LB8530   | J0JHC0000045 | INDUCTOR                | 1   |         |
|        | LB8532   | J0JDC0000045 | INDUCTOR                | 1   |         |
|        | LB8551   | J0JDC0000045 | INDUCTOR                | 1   |         |
|        | LB8561   | J0JDC0000045 | INDUCTOR                | 1   |         |
|        | LB8571   | J0JDC0000045 | INDUCTOR                | 1   |         |
|        | LB9001   | J0JCC0000042 | INDUCTOR                | 1   |         |
|        | LB9002   | J0JHC0000117 | INDUCTOR                | 1   |         |
|        | LB9003   | J0JHC0000117 | INDUCTOR                | 1   |         |
|        |          |              | TRANSFORMERS            |     |         |
| ⚠      | T2900    | G4D1A0000117 | SWITCHING TRANSFORMER   | 1   |         |
| ⚠      | T5701    | ETS42BN1A6AD | MAIN TRANSFORMER        | 1   |         |
| ⚠      | T5751    | ETS19AB256AG | BACKUP TRANSFORMER      | 1   |         |
|        |          |              | COMPONENT COMBINATION   |     |         |
|        | Z2000    | K9ZZ00001279 | EARTH PLATE             | 1   |         |
|        | Z2050    | K9ZZ00001279 | EARTH PLATE             | 1   |         |
|        | Z6601    | B3RAB0000081 | REMOTE CONTROL SENSOR   | 1   |         |
|        | ZJ5400   | K4CZ01000027 | TERMINAL                | 1   |         |
|        | ZJ5410   | K4CZ01000027 | TERMINAL                | 1   |         |
|        | ZJ5701   | K4CZ01000027 | TERMINAL                | 1   |         |
|        | ZJ5702   | K4CZ01000027 | TERMINAL                | 1   |         |
|        | ZJ5801   | K4CZ01000027 | TERMINAL                | 1   |         |
|        | ZJ5803   | K4CZ01000027 | TERMINAL                | 1   |         |
|        |          |              | PHOTO COUPLERS          |     |         |
| ⚠      | PC5701   | B3PBA0000402 | PHOTO COUPLER           | 1   |         |
| ⚠      | PC5702   | B3PBA0000402 | PHOTO COUPLER           | 1   |         |
| ⚠      | PC5720   | B3PBA0000402 | PHOTO COUPLER           | 1   |         |
| ⚠      | PC5799   | B3PBA0000402 | PHOTO COUPLER           | 1   |         |
|        |          |              | OSCILLATOR              |     |         |
|        | X2801    | H0A327200097 | CRYSTAL OSCILLATOR      | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | X2802    | H2B100500004 | CRYSTAL OSCILLATOR      | 1   |         |
|        | X5500    | H2A6023A0011 | CRYSTAL OSCILLATOR      | 1   |         |
|        | X5501    | H2A7003A0011 | CRYSTAL OSCILLATOR      | 1   |         |
|        | X8621    | H0J270500131 | CRYSTAL OSCILLATOR      | 1   |         |
|        | X9004    | H1A4805B0027 | CRYSTAL OSCILLATOR      | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | FL DISPLAY              |     |         |
|        | FL6601   | A2BB00000171 | LCD DISPLAY             | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | FUSE                    |     |         |
| ⚠      | F1       | K5D502BNA005 | FUSE                    | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | FUSE HOLDERS            |     |         |
|        | ZA5701   | K3GE1ZZ00001 | FUSE HOLDER             | 1   |         |
|        | ZA5702   | K3GE1ZZ00001 | FUSE HOLDER             | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | FUSE PROTECTOR          |     |         |
| ⚠      | FP2901   | K5G401A00008 | FUSE PROTECTOR          | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | THERMISTORS             |     |         |
| ⚠      | TH5001   | D4CC11040013 | THERMISTOR              | 1   |         |
| ⚠      | TH5701   | D4CAC8R00002 | THERMISTOR              | 1   |         |
| ⚠      | TH5860   | D4CC11040013 | THERMISTOR              | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | JACKS                   |     |         |
|        | JK1111   | K1FY104B0011 | JK USB                  | 1   |         |
|        | JK2001   | K2HA4YYB0002 | JK VIDEO OUT            | 1   |         |
|        | JK2801   | K2HA1YYB0004 | JK DIGITAL OUT          | 1   |         |
|        | JK2802   | K2HA204B0153 | JK AUX IN               | 1   |         |
|        | JK5001   | K4AL04B00001 | JK SPEAKER              | 1   |         |
|        | JK6001   | K2HB102J0038 | JK MIC                  | 1   |         |
|        | JK6800   | K2HC103A0031 | JK HEADPHONE            | 1   |         |
|        | JK6810   | K2HC1YYA0002 | JK MUSIC PORT           | 1   |         |
| ⚠      | P5701    | K2AA2B000017 | AC INLET                | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | CHIP JUMPERS            |     |         |
|        | K1       | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K3       | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K7       | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K1000    | ERJ8GEY0R00V | 0 1/4W                  | 1   |         |
|        | K1200    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K1210    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K2004    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K2802    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K4011    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K5001    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | K5251    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K5252    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K5254    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K5302    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K5781    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K5782    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K6013    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K6016    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K6018    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8005    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8010    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8100    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8114    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8115    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8116    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8117    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8251    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8252    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | K8571    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | L2905    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | L6002    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | L8250    | D0GBR00JA008 | 0 1/16W                 | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | LB1200   | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | LB1210   | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | LB8255   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8301   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8302   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8303   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8304   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8305   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8421   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8422   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8423   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8424   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8425   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8426   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8427   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8428   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8429   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8430   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8431   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8432   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8491   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8531   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | LB8690   | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | W30      | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W31      | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W32      | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W34      | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2500    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2501    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2502    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2503    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2504    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2505    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2506    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2507    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2508    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2509    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2510    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2513    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2514    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2515    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2516    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2517    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2518    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2519    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2520    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2521    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2524    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2525    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2526    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2527    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2528    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2529    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2530    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2531    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2532    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2533    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2534    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2535    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2536    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2537    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2538    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2539    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2540    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2541    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2542    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2543    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2544    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2545    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2546    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2547    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2548    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W2549    | D0GDR00JA017 | 0 1/10W                 | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | W2552    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W2553    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5007    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5032    | ERJ8GEYR00V  | 0 1/4W                  | 1   |         |
|        | W5036    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5059    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5071    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5780    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5781    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5782    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5783    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5784    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5785    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5801    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5803    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5804    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | W5805    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5806    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W5807    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W6541    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | W6570    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        |          |              | RESISTORS               |     |         |
|        | LB8691   | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | LB8692   | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | LB8693   | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | R952     | D0AE821JA048 | 820 1/4W                | 1   |         |
|        | R953     | D0AE393JA048 | 39K 1/4W                | 1   |         |
|        | R1101    | D0GB330JA008 | 33 1/16W                | 1   |         |
|        | R1102    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R1103    | D0GB183JA008 | 18K 1/16W               | 1   |         |
|        | R1104    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R1105    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R1106    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R1110    | D0GB333JA008 | 33K 1/16W               | 1   |         |
|        | R1111    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R1201    | D0GB330JA008 | 33 1/16W                | 1   |         |
|        | R1202    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R1203    | D0GB183JA008 | 18K 1/16W               | 1   |         |
|        | R1204    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R1205    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R1206    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R1210    | D0GB333JA008 | 33K 1/16W               | 1   |         |
|        | R1302    | D0GB471JA008 | 470 1/16W               | 1   |         |
|        | R1303    | D0GB475JA008 | 4.7M 1/16W              | 1   |         |
|        | R1304    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R1305    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R1309    | D0AF471JA039 | 470 1/2W                | 1   |         |
|        | R1314    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R1318    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R1319    | D0GB123JA008 | 12K 1/16W               | 1   |         |
|        | R1320    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R1321    | D0GB470JA008 | 47 1/16W                | 1   |         |
|        | R1322    | D0GB823JA008 | 82K 1/16W               | 1   |         |
|        | R1327    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R1328    | D0GB153JA008 | 15K 1/16W               | 1   |         |
|        | R1329    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R1330    | ERD2FCVJ4R7T | 4.7 1/4W                | 1   |         |
|        | R1331    | D0GB752JA008 | 7.5K 1/16W              | 1   |         |
|        | R1332    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R1333    | ERD2FCVJ4R7T | 4.7 1/4W                | 1   |         |
|        | R1334    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R1335    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R1337    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R1338    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R1339    | D0GD103JA017 | 10K 1/10W               | 1   |         |
|        | R1342    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R1343    | D0GB332JA008 | 3.3K 1/16W              | 1   |         |
|        | R1344    | D0GB273JA008 | 27K 1/16W               | 1   |         |
|        | R1345    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R1371    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R1374    | D0GB471JA008 | 470 1/16W               | 1   |         |
|        | R1376    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R2001    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2003    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2046    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R2047    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R2048    | ERJ3GEYJ203V | 20K 1/10W               | 1   |         |
|        | R2051    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2052    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2053    | D0GB563JA008 | 56K 1/16W               | 1   |         |
|        | R2054    | D0GB273JA008 | 27K 1/16W               | 1   |         |
|        | R2055    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2056    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2058    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2101    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2102    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2104    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R2105    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2106    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2107    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2109    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2111    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R2112    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2113    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2114    | D0GB273JA008 | 27K 1/16W               | 1   |         |
|        | R2116    | D0GB822JA008 | 8.2K 1/16W              | 1   |         |
|        | R2117    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R2141    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R2142    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2143    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2146    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R2152    | D0GB681JA008 | 680 1/16W               | 1   |         |
|        | R2153    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2154    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2163    | D0GB123JA008 | 12K 1/16W               | 1   |         |
|        | R2166    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2167    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2168    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2169    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2170    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2171    | D0GB332JA008 | 3.3K 1/16W              | 1   |         |
|        | R2172    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2173    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R2174    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R2181    | D0GB151JA008 | 150 1/16W               | 1   |         |
|        | R2182    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2183    | D0GB332JA008 | 3.3K 1/16W              | 1   |         |
|        | R2184    | D0GB331JA008 | 330 1/16W               | 1   |         |
|        | R2185    | D0GB561JA008 | 560 1/16W               | 1   |         |
|        | R2191    | D0GB681JA008 | 680 1/16W               | 1   |         |
|        | R2192    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2193    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R2194    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2195    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2196    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2197    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R2199    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R2201    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2202    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2203    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2204    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R2205    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2206    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2207    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2208    | D0GB273JA008 | 27K 1/16W               | 1   |         |
|        | R2209    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2211    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R2212    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R2216    | D0GB822JA008 | 8.2K 1/16W              | 1   |         |
|        | R2217    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R2241    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R2242    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2243    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2246    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R2247    | D0GB104JA008 | 100K 1/16W              | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R2248    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R2252    | D0GB681JA008 | 680 1/16W               | 1   |         |
|        | R2253    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2254    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2262    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R2266    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2267    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2268    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2269    | D0GB180JA008 | 18 1/16W                | 1   |         |
|        | R2270    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2271    | D0GB332JA008 | 3.3K 1/16W              | 1   |         |
|        | R2272    | D0GB152JA008 | 1.5K 1/16W              | 1   |         |
|        | R2273    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R2274    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R2281    | D0GB151JA008 | 150 1/16W               | 1   |         |
|        | R2282    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2283    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2284    | D0GB331JA008 | 330 1/16W               | 1   |         |
|        | R2285    | D0GB561JA008 | 560 1/16W               | 1   |         |
|        | R2291    | D0GB681JA008 | 680 1/16W               | 1   |         |
|        | R2292    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2297    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R2299    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R2302    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2303    | D0GB563JA008 | 56K 1/16W               | 1   |         |
|        | R2312    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R2315    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2316    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2331    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2332    | D0GB333JA008 | 33K 1/16W               | 1   |         |
|        | R2333    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2334    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2335    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2336    | D0GB333JA008 | 33K 1/16W               | 1   |         |
|        | R2337    | D0GB474JA008 | 470K 1/16W              | 1   |         |
|        | R2338    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2339    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2402    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2403    | D0GB563JA008 | 56K 1/16W               | 1   |         |
|        | R2404    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2412    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R2415    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2416    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2439    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2501    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2502    | D0GB563JA008 | 56K 1/16W               | 1   |         |
|        | R2503    | D0GB273JA008 | 27K 1/16W               | 1   |         |
|        | R2584    | D0GB334JA008 | 330K 1/16W              | 1   |         |
|        | R2585    | D0GB334JA008 | 330K 1/16W              | 1   |         |
|        | R2586    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R2587    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R2591    | D0GB334JA008 | 330K 1/16W              | 1   |         |
|        | R2620    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R2702    | D0GB182JA008 | 1.8K 1/16W              | 1   |         |
|        | R2703    | D0GB182JA008 | 1.8K 1/16W              | 1   |         |
|        | R2722    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R2730    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R2731    | D0GB391JA008 | 390 1/16W               | 1   |         |
|        | R2732    | D0GD272JA017 | 2.7K 1/10W              | 1   |         |
|        | R2733    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2751    | D0GB123JA008 | 12K 1/16W               | 1   |         |
|        | R2752    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R2753    | D0GB123JA008 | 12K 1/16W               | 1   |         |
|        | R2754    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R2755    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2756    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2758    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R2759    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R2801    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2802    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2803    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2804    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2805    | D0GB473JA008 | 47K 1/16W               | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R2806    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2807    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2808    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2809    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2812    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2813    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2817    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2818    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2819    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R2820    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2821    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2827    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2829    | D0GB470JA008 | 47 1/16W                | 1   |         |
|        | R2834    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2835    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2836    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2837    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2838    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2839    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2840    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2841    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2842    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2843    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2844    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2846    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R2847    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R2850    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2851    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2852    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2854    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2855    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2858    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2859    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2860    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2861    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2862    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2863    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2864    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2865    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2866    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2867    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2869    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2870    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2871    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2872    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2873    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2874    | D0GB153JA008 | 15K 1/16W               | 1   |         |
|        | R2875    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2876    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R2877    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R2878    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R2879    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2880    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2881    | D0GB221JA008 | 220 1/16W               | 1   |         |
|        | R2882    | D0GB106JA008 | 10M 1/16W               | 1   |         |
|        | R2883    | D0GB331JA008 | 330 1/16W               | 1   |         |
|        | R2884    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R2886    | D0GB105JA008 | 1M 1/16W                | 1   |         |
|        | R2887    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2888    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2889    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2890    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2891    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R2894    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2895    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2902    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2903    | D0GB750JA008 | 75 1/16W                | 1   |         |
|        | R2904    | D0GB750JA008 | 75 1/16W                | 1   |         |
|        | R2905    | D0GB750JA008 | 75 1/16W                | 1   |         |
|        | R2906    | D0GB750JA008 | 75 1/16W                | 1   |         |
|        | R2913    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2930    | D0GB224JA008 | 220K 1/16W              | 1   |         |
|        | R2934    | D0GBR00JA008 | 0 1/16W                 | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R2970    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R2971    | D0GB750JA008 | 75 1/16W                | 1   |         |
|        | R2972    | D0GB221JA008 | 220 1/16W               | 1   |         |
|        | R2973    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R2974    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2975    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R2976    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R2978    | D0GB182JA008 | 1.8K 1/16W              | 1   |         |
|        | R2987    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R3801    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R3802    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R3803    | D0GB332JA008 | 3.3K 1/16W              | 1   |         |
|        | R3804    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R3805    | D0GB332JA008 | 3.3K 1/16W              | 1   |         |
|        | R3807    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R3812    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R3813    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R3814    | D0GB392JA008 | 3.9K 1/16W              | 1   |         |
|        | R3821    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R3827    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R4001    | ERJ3GEYF152V | 1.5K 1/10W              | 1   |         |
|        | R4002    | ERJ3GEYF272V | 2.7K 1/10W              | 1   |         |
|        | R4003    | ERJ3GEYF102V | 1K 1/10W                | 1   |         |
|        | R4009    | D0GB390JA008 | 39 1/16W                | 1   |         |
|        | R4011    | D0GB681JA008 | 680 1/16W               | 1   |         |
|        | R4012    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R4014    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R4015    | D0GB153JA008 | 15K 1/16W               | 1   |         |
|        | R4016    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R4017    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R4018    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R4021    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R4022    | D0GB470JA008 | 47 1/16W                | 1   |         |
|        | R4023    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R4024    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R4026    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R4027    | D0GB681JA008 | 680 1/16W               | 1   |         |
|        | R4028    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R4029    | D0GB181JA008 | 180 1/16W               | 1   |         |
|        | R4031    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R5000    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R5001    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R5002    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R5003    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R5004    | D0GF100JA014 | 10 1/8W                 | 1   |         |
|        | R5005    | D0GF100JA014 | 10 1/8W                 | 1   |         |
|        | R5006    | D0GZ220JA012 | 22 1W                   | 1   |         |
|        | R5007    | D0GZ220JA012 | 22 1W                   | 1   |         |
|        | R5008    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R5010    | D0GF100JA014 | 10 1/8W                 | 1   |         |
|        | R5011    | D0GF100JA014 | 10 1/8W                 | 1   |         |
|        | R5019    | D0GB683JA008 | 68K 1/16W               | 1   |         |
|        | R5020    | D0GB683JA008 | 68K 1/16W               | 1   |         |
|        | R5022    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R5023    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R5030    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R5031    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R5103    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R5104    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R5110    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R5504    | D0GB220JA008 | 22 1/16W                | 1   |         |
|        | R5505    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R5506    | D0GB105JA008 | 1M 1/16W                | 1   |         |
|        | R5507    | D0GB105JA008 | 1M 1/16W                | 1   |         |
|        | R5508    | D0GB105JA008 | 1M 1/16W                | 1   |         |
|        | R5510    | ERG2SJ471E   | 470 2W                  | 1   |         |
|        | R5512    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R5514    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R5602    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R5603    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R5604    | ERJ3RBD272V  | 2.7K 1/16W              | 1   |         |
|        | R5608    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R5609    | D0GB103JA008 | 10K 1/16W               | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R5611    | ERJ3RBD272V  | 2.7K 1/16W              | 1   |         |
|        | R5671    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R5701    | ERDS1TJ475B  | 4.7M 1W                 | 1   |         |
|        | R5702    | ERJ1TYJ104U  | 100K 1W                 | 1   |         |
|        | R5703    | ERJ1TYJ104U  | 100K 1W                 | 1   |         |
|        | R5704    | D0GF394JA017 | 390K 1/10W              | 1   |         |
|        | R5705    | D0GF394JA017 | 390K 1/10W              | 1   |         |
|        | R5720    | D0GD220JA017 | 22 1/10W                | 1   |         |
|        | R5721    | D0GD103JA017 | 10K 1/10W               | 1   |         |
|        | R5722    | D0GD102JA017 | 1K 1/10W                | 1   |         |
|        | R5723    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R5724    | D0GD121JA017 | 120 1/10W               | 1   |         |
|        | R5725    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R5726    | ERX2LJ82MP   | 82m 2W                  | 1   |         |
|        | R5728    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R5729    | D0GD103JA017 | 10K 1/10W               | 1   |         |
|        | R5730    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R5731    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R5732    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R5733    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R5750    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R5786    | ERJ1TYJ204U  | 200K 1W                 | 1   |         |
|        | R5787    | D0GB753JA008 | 75K 1/16W               | 1   |         |
|        | R5795    | ERJ6GEYJ433V | 43K 1/8W                | 1   |         |
|        | R5796    | D0AF222JA039 | 2.2K 1/2W               | 1   |         |
|        | R5797    | D0GD472JA017 | 4.7K 1/10W              | 1   |         |
|        | R5798    | D0GD100JA017 | 10 1/10W                | 1   |         |
|        | R5800    | ERJ6GEYJ123V | 12K 1/8W                | 1   |         |
|        | R5801    | D0GD103JA017 | 10K 1/10W               | 1   |         |
|        | R5802    | ERJ3RBD272V  | 2.7K 1/16W              | 1   |         |
|        | R5803    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | R5804    | D1BD4702A077 | 47 1/10W                | 1   |         |
|        | R5805    | ERJ3RBD222V  | 2.2K 1/16W              | 1   |         |
|        | R5806    | D0GB153JA008 | 15K 1/16W               | 1   |         |
|        | R5807    | ERJ6GEYJ331V | 330 1/8W                | 1   |         |
|        | R5808    | D0GD222JA017 | 2.2K 1/10W              | 1   |         |
|        | R5809    | ERJ6GEYJ331V | 330 1/8W                | 1   |         |
|        | R5810    | D0GB331JA008 | 330 1/16W               | 1   |         |
|        | R5811    | ERJ8GEYJ152V | 1.5K 1/4W               | 1   |         |
|        | R5812    | D0HB822ZA002 | 8.2K 1/16W              | 1   |         |
|        | R5813    | ERJ3RBD243V  | 24K 1/16W               | 1   |         |
|        | R5814    | D0GB822JA008 | 8.2K 1/16W              | 1   |         |
|        | R5815    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R5816    | ERJ8GEYJ152V | 1.5K 1/4W               | 1   |         |
|        | R5817    | D0GB331JA008 | 330 1/16W               | 1   |         |
|        | R5820    | ERG2SJ910E   | 91 2W                   | 1   |         |
|        | R5821    | ERG2SJ910E   | 91 2W                   | 1   |         |
|        | R5822    | ERG2SJ910E   | 91 2W                   | 1   |         |
|        | R5823    | ERG2SJ910E   | 91 2W                   | 1   |         |
|        | R5824    | ERG2SJ910E   | 91 2W                   | 1   |         |
|        | R5825    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R5832    | D0GZ222JA012 | 2.2K 1W                 | 1   |         |
|        | R5834    | D0GZ222JA012 | 2.2K 1W                 | 1   |         |
|        | R5840    | D0GB823JA008 | 82K 1/16W               | 1   |         |
|        | R5841    | D0GB124JA008 | 120K 1/16W              | 1   |         |
|        | R5860    | ERJ3GEYF103V | 10K 1/10W               | 1   |         |
|        | R5861    | ERJ3GEYF302V | 3K 1/10W                | 1   |         |
|        | R5862    | D0GD103JA017 | 10K 1/10W               | 1   |         |
|        | R5863    | D0GD103JA017 | 10K 1/10W               | 1   |         |
|        | R5864    | ERJ6GEYF103V | 10K 1/8W                | 1   |         |
|        | R5890    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R5891    | ERJ3RBD333V  | 33K 1/16W               | 1   |         |
|        | R5892    | ERJ3RBD472V  | 4.7K 1/16W              | 1   |         |
|        | R5893    | ERJ3RBD393V  | 39K 1/16W               | 1   |         |
|        | R5894    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R5895    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R5896    | D0GB104JA008 | 100K 1/16W              | 1   |         |
|        | R5897    | D0GB101JA008 | 100 1/16W               | 1   |         |
|        | R6005    | D0GB681JA008 | 680 1/16W               | 1   |         |
|        | R6006    | D0GB561JA008 | 560 1/16W               | 1   |         |
|        | R6007    | D0GB471JA008 | 470 1/16W               | 1   |         |
|        | R6008    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R6009    | D0GB101JA008 | 100 1/16W               | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R6011    | D0GB473JA008 | 47K 1/16W               | 1   |         |
|        | R6012    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6013    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6014    | D0GB105JA008 | 1M 1/16W                | 1   |         |
|        | R6100    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R6101    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R6102    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6103    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R6104    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6106    | D0GB302JA008 | 3.0K 1/16W              | 1   |         |
|        | R6107    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R6108    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R6109    | D0GB562JA008 | 5.6K 1/16W              | 1   |         |
|        | R6200    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R6201    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R6202    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R6203    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R6204    | D0GB182JA008 | 1.8K 1/16W              | 1   |         |
|        | R6205    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R6206    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R6207    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R6208    | D0GB682JA008 | 6.8K 1/16W              | 1   |         |
|        | R6300    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R6301    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R6302    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R6303    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | R6304    | D0GB182JA008 | 1.8K 1/16W              | 1   |         |
|        | R6305    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | R6306    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6307    | D0GB272JA008 | 2.7K 1/16W              | 1   |         |
|        | R6308    | D0GB472JA008 | 4.7K 1/16W              | 1   |         |
|        | R6458    | D0GB102JA008 | 1K 1/16W                | 1   |         |
|        | R6501    | D0GB123JA008 | 12K 1/16W               | 1   |         |
|        | R6502    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R6503    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R6511    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6512    | D0GB561JA008 | 560 1/16W               | 1   |         |
|        | R6618    | D0GB221JA008 | 220 1/16W               | 1   |         |
|        | R6619    | D0GB221JA008 | 220 1/16W               | 1   |         |
|        | R6620    | D0GB471JA008 | 470 1/16W               | 1   |         |
|        | R6622    | D0GB823JA008 | 82K 1/16W               | 1   |         |
|        | R6631    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R6632    | D0GB103JA008 | 10K 1/16W               | 1   |         |
|        | R6671    | D0GB223JA008 | 22K 1/16W               | 1   |         |
|        | R6672    | D0GB100JA008 | 10 1/16W                | 1   |         |
|        | R6674    | D0GB331JA008 | 330 1/16W               | 1   |         |
|        | R6811    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6812    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R6961    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | R8001    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R8003    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R8011    | D0GA220JA023 | 22 1/16W                | 1   |         |
|        | R8012    | D0GA220JA023 | 22 1/16W                | 1   |         |
|        | R8013    | D0GA220JA023 | 22 1/16W                | 1   |         |
|        | R8014    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | R8025    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R8211    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R8221    | D0GA822JA023 | 8.2K 1/16W              | 1   |         |
|        | R8225    | D0GA822JA023 | 8.2K 1/16W              | 1   |         |
|        | R8230    | D0GA222JA023 | 2.2K 1/16W              | 1   |         |
|        | R8231    | D0GA752JA023 | 7.5K 1/16W              | 1   |         |
|        | R8232    | D0GA752JA023 | 7.5K 1/16W              | 1   |         |
|        | R8251    | D0GD6R8JA017 | 6.8 1/10W               | 1   |         |
|        | R8252    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R8261    | D0GA823JA023 | 82K 1/16W               | 1   |         |
|        | R8262    | D0GA153JA023 | 15K 1/16W               | 1   |         |
|        | R8263    | D0GA823JA023 | 82K 1/16W               | 1   |         |
|        | R8264    | D0GA153JA023 | 15K 1/16W               | 1   |         |
|        | R8311    | ERJ2RHD242X  | 2.4K 1/32W              | 1   |         |
|        | R8312    | ERJ2RHD102X  | 1K 1/32W                | 1   |         |
|        | R8313    | ERJ2RHD153X  | 15K 1/32W               | 1   |         |
|        | R8314    | ERJ2RHD153X  | 15K 1/32W               | 1   |         |
|        | R8315    | ERJ2RKD240X  | 24 1/32W                | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R8316    | ERJ2RKD240X  | 24 1/32W                | 1   |         |
|        | R8317    | D0GA153JA023 | 15K 1/16W               | 1   |         |
|        | R8318    | D0GA153JA023 | 15K 1/16W               | 1   |         |
|        | R8321    | ERJ3RBD201V  | 200 1/16W               | 1   |         |
|        | R8323    | D0GA330JA023 | 33 1/16W                | 1   |         |
|        | R8324    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8325    | ERJ3RBD201V  | 200 1/16W               | 1   |         |
|        | R8327    | D0GA330JA023 | 33 1/16W                | 1   |         |
|        | R8328    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8331    | ERJ3RBD201V  | 200 1/16W               | 1   |         |
|        | R8333    | D0GA330JA023 | 33 1/16W                | 1   |         |
|        | R8334    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8335    | ERJ3RBD201V  | 200 1/16W               | 1   |         |
|        | R8336    | D0GA330JA023 | 33 1/16W                | 1   |         |
|        | R8337    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8341    | ERJ3RBD201V  | 200 1/16W               | 1   |         |
|        | R8342    | D0GA330JA023 | 33 1/16W                | 1   |         |
|        | R8343    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8401    | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | R8402    | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | R8403    | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | R8404    | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | R8406    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R8421    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R8424    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R8425    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R8430    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R8431    | D0GA222JA023 | 2.2K 1/16W              | 1   |         |
|        | R8531    | D0GA152JA023 | 1.5K 1/16W              | 1   |         |
|        | R8532    | D0GA222JA023 | 2.2K 1/16W              | 1   |         |
|        | R8533    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | R8534    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R8535    | D0GA104JA023 | 100K 1/16W              | 1   |         |
|        | R8536    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R8537    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | R8538    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | R8539    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | R8540    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | R8541    | D0GA153JA023 | 15K 1/16W               | 1   |         |
|        | R8551    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | R8552    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8553    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8554    | ERJ2GEJ680X  | 68 1/16W                | 1   |         |
|        | R8555    | D0GA2R2JA023 | 2.2 1/16W               | 1   |         |
|        | R8556    | D0GB560JA008 | 56 1/16W                | 1   |         |
|        | R8557    | D0GB510JA008 | 51 1/16W                | 1   |         |
|        | R8558    | D0GA473JA023 | 47K 1/16W               | 1   |         |
|        | R8559    | D0GA153JA023 | 15K 1/16W               | 1   |         |
|        | R8561    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | R8562    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8563    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R8564    | D0GA220JA023 | 22 1/16W                | 1   |         |
|        | R8565    | D0GA2R2JA023 | 2.2 1/16W               | 1   |         |
|        | R8566    | D0GB560JA008 | 56 1/16W                | 1   |         |
|        | R8567    | D0GB510JA008 | 51 1/16W                | 1   |         |
|        | R8568    | D0GA473JA023 | 47K 1/16W               | 1   |         |
|        | R8601    | D0GA105JA023 | 1M 1/16W                | 1   |         |
|        | R8611    | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | R8613    | D0GA101JA023 | 100 1/16W               | 1   |         |
|        | R8621    | D0GA105JA023 | 1M 1/16W                | 1   |         |
|        | R8622    | ERJ2RHD102X  | 1K 1/32W                | 1   |         |
|        | R8702    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R8901    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R9007    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9008    | D0GA105JA023 | 1M 1/16W                | 1   |         |
|        | R9009    | D0GA102JA023 | 1K 1/16W                | 1   |         |
|        | R9010    | ERJ2GEJ100X  | 10 1/16W                | 1   |         |
|        | R9023    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9036    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9037    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9040    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9041    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9042    | D0GA103JA023 | 10K 1/16W               | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | R9043    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9044    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9045    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9046    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9047    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9048    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9049    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9055    | D0GA472JA023 | 4.7K 1/16W              | 1   |         |
|        | R9080    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9082    | D0GA103JA023 | 10K 1/16W               | 1   |         |
|        | R9083    | D0GA470JA023 | 47 1/16W                | 1   |         |
|        | R9084    | D0GA470JA023 | 47 1/16W                | 1   |         |
|        | R9085    | D0GA470JA023 | 47 1/16W                | 1   |         |
|        | R9086    | D0GA470JA023 | 47 1/16W                | 1   |         |
|        | R9087    | D0GA470JA023 | 47 1/16W                | 1   |         |
|        | R9088    | D0GA470JA023 | 47 1/16W                | 1   |         |
|        | R9099    | ERJ2GE0R00X  | 0 1/16W                 | 1   |         |
|        | RX8001   | D1H410320002 | RESISTOR NETWORK        | 1   |         |
|        | RX8011   | D1H88204A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8012   | D1H88204A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8013   | D1H88204A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8014   | D1H88204A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8015   | D1H88204A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8016   | D1H88204A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8017   | D1H88204A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8018   | D1H422020001 | RESISTOR NETWORK        | 1   |         |
|        | RX8019   | D1H422020001 | RESISTOR NETWORK        | 1   |         |
|        | RX8020   | D1H422020001 | RESISTOR NETWORK        | 1   |         |
|        | RX8031   | D1H447220001 | RESISTOR NETWORK        | 1   |         |
|        | RX8032   | D1H447220001 | RESISTOR NETWORK        | 1   |         |
|        | RX8401   | D1H410120001 | RESISTOR NETWORK        | 1   |         |
|        | RX8402   | D1H410120001 | RESISTOR NETWORK        | 1   |         |
|        | RX8531   | D1H456020001 | RESISTOR NETWORK        | 1   |         |
|        | RX8532   | D1H85604A043 | RESISTOR NETWORK        | 1   |         |
|        | RX8533   | D1H456020001 | RESISTOR NETWORK        | 1   |         |
|        | RX8534   | D1H456020001 | RESISTOR NETWORK        | 1   |         |
|        | RX8611   | D1H447220001 | RESISTOR NETWORK        | 1   |         |
|        | RX8691   | D1H410320002 | RESISTOR NETWORK        | 1   |         |
|        | RX9014   | D1H85604A043 | RESISTOR NETWORK        | 1   |         |
|        | RX9015   | D1H85604A043 | RESISTOR NETWORK        | 1   |         |
|        | RX9016   | D1H85604A043 | RESISTOR NETWORK        | 1   |         |
|        | RX9017   | D1H85604A043 | RESISTOR NETWORK        | 1   |         |
|        | RX9018   | D1H447220001 | RESISTOR NETWORK        | 1   |         |
|        | RX9020   | D1H447220001 | RESISTOR NETWORK        | 1   |         |
|        |          |              |                         |     |         |
|        |          |              | CAPACITORS              |     |         |
|        | C1100    | F2A0J101A208 | 100uF 6.3V              | 1   |         |
|        | C1101    | F2A1H1R0A145 | 1.0uF 50V               | 1   |         |
|        | C1102    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C1103    | F2A1C101A147 | 100uF 16V               | 1   |         |
|        | C1104    | F1H1E273A002 | 0.027uF 25V             | 1   |         |
|        | C1105    | F1H1H471A219 | 470pF 50V               | 1   |         |
|        | C1106    | F2A1H2R2A145 | 2.2uF 50V               | 1   |         |
|        | C1107    | F1H1H152A219 | 1500pF 50V              | 1   |         |
|        | C1108    | F2A1C100A147 | 10uF 16V                | 1   |         |
|        | C1109    | F2A1H3R3A145 | 3.3uF 50V               | 1   |         |
|        | C1110    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C1110    | F1H1H682A219 | 6800pF 50V              | 1   |         |
|        | C1121    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C1122    | F1H1E103A029 | 0.01uF 25V              | 1   |         |
|        | C1123    | ECJ1VB1H271K | 270pF 50V               | 1   |         |
|        | C1124    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C1201    | F2A1H1R0A145 | 1.0uF 50V               | 1   |         |
|        | C1202    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C1203    | F2A1C101A147 | 100uF 16V               | 1   |         |
|        | C1204    | F1H1E273A002 | 0.027uF 25V             | 1   |         |
|        | C1205    | F1H1H471A219 | 470pF 50V               | 1   |         |
|        | C1206    | F2A1H2R2A145 | 2.2uF 50V               | 1   |         |
|        | C1207    | F1H1H152A219 | 1500pF 50V              | 1   |         |
|        | C1208    | F2A1C100A147 | 10uF 16V                | 1   |         |
|        | C1209    | F2A1H3R3A145 | 3.3uF 50V               | 1   |         |
|        | C1210    | F1H1H682A219 | 6800pF 50V              | 1   |         |
|        | C1221    | F1H1H102A219 | 1000pF 50V              | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | C1222    | F1H1E103A029 | 0.01uF 25V              | 1   |         |
|        | C1223    | ECJ1VB1H271K | 270pF 50V               | 1   |         |
|        | C1224    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C1301    | F2A1HR10A015 | 0.10uF 50V              | 1   |         |
|        | C1302    | F1H1C333A071 | 0.033uF 16V             | 1   |         |
|        | C1303    | F1H1C333A071 | 0.033uF 16V             | 1   |         |
|        | C1304    | F2A1H4R7A234 | 4.7uF 50V               | 1   |         |
|        | C1305    | F2A1C330A234 | 33uF 16V                | 1   |         |
|        | C1307    | ECA1AAK221XQ | 220uF 10V               | 1   |         |
|        | C1308    | F2A1C220A234 | 22uF 16V                | 1   |         |
|        | C1311    | F2A1C470A234 | 47uF 16V                | 1   |         |
|        | C1312    | F1H1H332A013 | 3300pF 50V              | 1   |         |
|        | C1314    | F1H1H222A013 | 2200pF 50V              | 1   |         |
|        | C1315    | F1H1H222A013 | 2200pF 50V              | 1   |         |
|        | C1316    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C1317    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C1318    | ECQV1H473JL3 | 0.047uF 50V             | 1   |         |
|        | C1319    | F2A1C101A147 | 100uF 16V               | 1   |         |
|        | C1320    | F2A1H100A214 | 10uF 50V                | 1   |         |
|        | C1321    | F0A2A472A010 | 4700pF 100V             | 1   |         |
|        | C1323    | ECEA1HKN010B | 1uF 50V                 | 1   |         |
|        | C1324    | F2A1C470A234 | 47uF 16V                | 1   |         |
|        | C1326    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C1326    | F2A1C100A147 | 10uF 16V                | 1   |         |
|        | C1371    | F1H1E103A029 | 0.01uF 25V              | 1   |         |
|        | C2000    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | C2005    | F1J0J106A020 | 10uF 6.3V               | 1   |         |
|        | C2019    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2020    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2022    | F2A1C101A180 | 100uF 16V               | 1   |         |
|        | C2023    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2028    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2029    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2032    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2034    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2035    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2051    | F2A1H3R3A213 | 3.3uF 50V               | 1   |         |
|        | C2102    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2103    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C2104    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2106    | F1H1H682A219 | 6800pF 50V              | 1   |         |
|        | C2107    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2108    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C2109    | F1H1H472A219 | 4700pF 50V              | 1   |         |
|        | C2111    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2112    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2116    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2117    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2118    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2141    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2142    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2163    | F1H1H392A013 | 3900pF 50V              | 1   |         |
|        | C2166    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C2171    | F1H1C683A087 | 0.068uF 16V             | 1   |         |
|        | C2172    | F1H1C683A087 | 0.068uF 16V             | 1   |         |
|        | C2173    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2174    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2175    | F1H1H472A219 | 4700pF 50V              | 1   |         |
|        | C2181    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2182    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2183    | F1H1C224A068 | 0.22uF 16V              | 1   |         |
|        | C2185    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C2191    | F2A1H3R3A213 | 3.3uF 50V               | 1   |         |
|        | C2192    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C2193    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2194    | F2A1H1R0A213 | 1.0uF 50V               | 1   |         |
|        | C2195    | F1H1H153A219 | 0.015uF 50V             | 1   |         |
|        | C2197    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | C2201    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2202    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2203    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C2204    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2206    | F1H1H682A219 | 6800pF 50V              | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | C2207    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2208    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C2209    | F1H1H472A219 | 4700pF 50V              | 1   |         |
|        | C2211    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2212    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2216    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2217    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2218    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2220    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2221    | F1H1A154A001 | 0.15uF 10V              | 1   |         |
|        | C2222    | F1H1A474A025 | 0.47uF 10V              | 1   |         |
|        | C2241    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2242    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2266    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C2271    | F1H1C683A087 | 0.068uF 16V             | 1   |         |
|        | C2272    | F1H1C683A087 | 0.068uF 16V             | 1   |         |
|        | C2273    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2274    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2275    | F1H1H472A219 | 4700pF 50V              | 1   |         |
|        | C2281    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2282    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2283    | F1H1C683A087 | 0.068uF 16V             | 1   |         |
|        | C2285    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C2294    | F2A1H1R0A213 | 1.0uF 50V               | 1   |         |
|        | C2295    | F1H1H153A219 | 0.015uF 50V             | 1   |         |
|        | C2297    | D0GB122JA008 | 1.2K 1/16W              | 1   |         |
|        | C2300    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2301    | F1H1H181A792 | 180pF 50V               | 1   |         |
|        | C2302    | F1H1H470A230 | 47pF 50V                | 1   |         |
|        | C2313    | F1H1H470A230 | 47pF 50V                | 1   |         |
|        | C2314    | F1H1H470A230 | 47pF 50V                | 1   |         |
|        | C2315    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2316    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2331    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2333    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2334    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2401    | F1H1H181A792 | 180pF 50V               | 1   |         |
|        | C2402    | F1H1H470A230 | 47pF 50V                | 1   |         |
|        | C2403    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2413    | F1H1H470A230 | 47pF 50V                | 1   |         |
|        | C2414    | F1H1H470A230 | 47pF 50V                | 1   |         |
|        | C2415    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2416    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2501    | ECEA1EKN4R7B | 4.7uF 25V               | 1   |         |
|        | C2520    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2521    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2581    | F2A0J101A181 | 100uF 6.3V              | 1   |         |
|        | C2582    | F2A0J101A181 | 100uF 6.3V              | 1   |         |
|        | C2583    | F2A1C4710045 | 470uF 16V               | 1   |         |
|        | C2584    | F1H1H221A219 | 220pF 50V               | 1   |         |
|        | C2585    | F1H1H221A219 | 220pF 50V               | 1   |         |
|        | C2588    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2600    | F2A1H3R3A213 | 3.3uF 50V               | 1   |         |
|        | C2616    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2620    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2728    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2729    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2731    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2732    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2733    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2735    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2738    | F2A1C101A180 | 100uF 16V               | 1   |         |
|        | C2801    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C2802    | F1H1H152A219 | 1500pF 50V              | 1   |         |
|        | C2803    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C2804    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C2806    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2807    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2812    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2813    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2814    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2815    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2816    | F1H1H101A720 | 100pF 50V               | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | C2817    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2818    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2819    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2820    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2821    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2822    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2829    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C2831    | F1H1C223A001 | 0.022uF 16V             | 1   |         |
|        | C2832    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C2833    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C2840    | F1H1H180A230 | 18pF 50V                | 1   |         |
|        | C2841    | F1H1H180A230 | 18pF 50V                | 1   |         |
|        | C2860    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2861    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2862    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2863    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2865    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2866    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2867    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2868    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2900    | F2A0J102A016 | 1000uF 6.3V             | 1   |         |
|        | C2902    | ECQV1H474JL3 | 0.47uF 50V              | 1   |         |
|        | C2905    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2906    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2907    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2908    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2909    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2910    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C2911    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2912    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C2913    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2914    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2916    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2917    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C2918    | F2A0J221A181 | 220uF 6.3V              | 1   |         |
|        | C2919    | F2A0J102A016 | 1000uF 6.3V             | 1   |         |
|        | C2920    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2922    | F2A0J102A016 | 1000uF 6.3V             | 1   |         |
|        | C2923    | F2A0J331A183 | 330uF 6.3V              | 1   |         |
|        | C2924    | F2A0J331A183 | 330uF 6.3V              | 1   |         |
|        | C2975    | F1H1H560A230 | 56pF 50V                | 1   |         |
|        | C2978    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C2979    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2980    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C2982    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C3800    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | C3801    | F2A1H3R3A213 | 3.3uF 50V               | 1   |         |
|        | C3802    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C3803    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C3804    | F2A1H3R3A213 | 3.3uF 50V               | 1   |         |
|        | C3805    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | C3822    | F2A0J221A181 | 220uF 6.3V              | 1   |         |
|        | C4000    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4002    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4003    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C4005    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4006    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4007    | F2A1E102A207 | 1000uF 25V              | 1   |         |
|        | C4008    | EEUFC0J821B  | 820uF 6.3V              | 1   |         |
|        | C4012    | F2A0J101A181 | 100uF 6.3V              | 1   |         |
|        | C4013    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4014    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4015    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C4016    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C4017    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4019    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4020    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C4021    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C4022    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4023    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4025    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C4026    | F2A1C101A180 | 100uF 16V               | 1   |         |
|        | C4038    | D0GBR00JA008 | 0 1/16W                 | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | C4039    | F2A0J331A183 | 330uF 6.3V              | 1   |         |
|        | C4040    | F2A0J101A181 | 100uF 6.3V              | 1   |         |
|        | C4041    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4042    | F2A1V330A379 | 33uF 35V                | 1   |         |
|        | C4043    | F2A1C101A155 | 100uF 16V               | 1   |         |
|        | C4044    | F0A2A392A010 | 3900pF 100V             | 1   |         |
|        | C4045    | F2A1V330A379 | 33uF 35V                | 1   |         |
|        | C4046    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C4047    | F2A1A330A159 | 33uF 10V                | 1   |         |
|        | C4049    | F2A1E2210045 | 220uF 25V               | 1   |         |
|        | C4050    | F2A1C470A180 | 47uF 16V                | 1   |         |
|        | C5000    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5001    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5002    | F1H1A474A001 | 0.47uF 10V              | 1   |         |
|        | C5003    | F1H1A474A001 | 0.47uF 10V              | 1   |         |
|        | C5004    | F1H1A474A001 | 0.47uF 10V              | 1   |         |
|        | C5005    | F1H1A474A001 | 0.47uF 10V              | 1   |         |
|        | C5006    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C5007    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C5008    | F1H1H153A219 | 0.015uF 50V             | 1   |         |
|        | C5009    | F1H1H153A219 | 0.015uF 50V             | 1   |         |
|        | C5010    | F1J2A221A030 | 220pF 100V              | 1   |         |
|        | C5011    | F1J2A221A030 | 220pF 100V              | 1   |         |
|        | C5012    | F1J2A221A030 | 220pF 100V              | 1   |         |
|        | C5013    | F1J2A221A030 | 220pF 100V              | 1   |         |
|        | C5014    | ECQV1H684JL3 | 0.68uF 50V              | 1   |         |
|        | C5015    | ECQV1H684JL3 | 0.68uF 50V              | 1   |         |
|        | C5016    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5017    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5018    | F1K2A1040007 | 0.1uF 100V              | 1   |         |
|        | C5019    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5020    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5021    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5022    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5023    | F1K2A1040007 | 0.1uF 100V              | 1   |         |
|        | C5024    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5025    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5027    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5028    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5030    | F1H1H330A230 | 33pF 50V                | 1   |         |
|        | C5031    | ECJ1VB1C474K | 0.47uF 16V              | 1   |         |
|        | C5032    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5033    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5040    | F2A2A2200035 | 22uF 100V               | 1   |         |
|        | C5050    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5051    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5052    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5053    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5133    | F2A0J101A245 | 100uF 6.3V              | 1   |         |
|        | C5150    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5151    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5445    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5450    | D0GBR00JA008 | 0 1/16W                 | 1   |         |
|        | C5510    | F2A1V4710074 | 470uF 35V               | 1   |         |
|        | C5511    | F2A1V4710074 | 470uF 35V               | 1   |         |
|        | C5514    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5515    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5518    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5519    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5520    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5521    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5550    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C5551    | ECJ1VB1H391K | 390pF 50V               | 1   |         |
|        | C5552    | ECJ1VB1H391K | 390pF 50V               | 1   |         |
|        | C5553    | F1H1H101A230 | 100pF 50V               | 1   |         |
|        | C5554    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5555    | F1K1C1060001 | 10uF 16V                | 1   |         |
|        | C5556    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C5557    | F1H1H101A230 | 100pF 50V               | 1   |         |
|        | C5558    | F1H1H470A004 | 47pF 50V                | 1   |         |
|        | C5559    | F1H1H470A004 | 47pF 50V                | 1   |         |
|        | C5601    | F2A1C100A234 | 10uF 16V                | 1   |         |
| △      | C5700    | F1BAF1020020 | 1000pF                  | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
| △      | C5701    | F0CAF334A087 | 0.33uF                  | 1   |         |
| △      | C5703    | F0C2H1040001 | 0.1uF 500V              | 1   |         |
| △      | C5704    | F1BAF1020020 | 1000pF                  | 1   |         |
| △      | C5705    | F1BAF1020020 | 1000pF                  | 1   |         |
| △      | C5706    | F1BAF1020020 | 1000pF                  | 1   |         |
| △      | C5707    | F1BAF1020020 | 1000pF                  | 1   |         |
|        | C5712    | F2B2G1810011 | 180uF 400V              | 1   |         |
|        | C5713    | F0C2J1030005 | 0.01uF 630V             | 1   |         |
|        | C5720    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5721    | ECJ1VB1H221K | 220pF 50V               | 1   |         |
|        | C5722    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5723    | F1H1H471A219 | 470pF 50V               | 1   |         |
|        | C5724    | F2A1H5600009 | 56uF 50V                | 1   |         |
|        | C5725    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5726    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5728    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C5730    | ECEA1HK5010B | 1uF 50V                 | 1   |         |
|        | C5737    | F1A3A471A035 | 470pF 1000V             | 1   |         |
|        | C5790    | F1K2J2220002 | 2200pF 630V             | 1   |         |
|        | C5791    | F2A1H2R2A213 | 2.2uF 50V               | 1   |         |
|        | C5794    | F1H1H220A004 | 22pF 50V                | 1   |         |
|        | C5795    | F1J1H473A022 | 0.047uF 50V             | 1   |         |
|        | C5796    | F1J1H104A717 | 0.1uF 50V               | 1   |         |
|        | C5797    | F1A3A470A023 | 47pF 1000V              | 1   |         |
|        | C5798    | F2A1H5600009 | 56uF 50V                | 1   |         |
|        | C5800    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | C5805    | F2B1V222A007 | 2200uF 35V              | 1   |         |
|        | C5808    | F2B1V222A007 | 2200uF 35V              | 1   |         |
|        | C5810    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5812    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5813    | F2A1V4710035 | 470uF 35V               | 1   |         |
|        | C5815    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5816    | F2A1E471A652 | 470uF 25V               | 1   |         |
|        | C5817    | F2A2AR22A358 | 0.22uF 100V             | 1   |         |
|        | C5818    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5819    | F1J2E1030004 | 0.01uF 250V             | 1   |         |
|        | C5820    | F1J2E1030004 | 0.01uF 250V             | 1   |         |
|        | C5821    | F1J2E1030004 | 0.01uF 250V             | 1   |         |
|        | C5822    | F1J2E1030004 | 0.01uF 250V             | 1   |         |
|        | C5823    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5824    | F2A1E471A652 | 470uF 25V               | 1   |         |
|        | C5825    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5826    | D0GDR00JA017 | 0 1/10W                 | 1   |         |
|        | C5831    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5832    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5869    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5870    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5896    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5897    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5898    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C5899    | F2A1C221A104 | 220uF 16V               | 1   |         |
|        | C6000    | F2A1H1R0A213 | 1.0uF 50V               | 1   |         |
|        | C6003    | F1H1H182A219 | 1800pF 50V              | 1   |         |
|        | C6005    | F2A1H1R0A213 | 1.0uF 50V               | 1   |         |
|        | C6006    | F1H1C105A097 | 1uF 16V                 | 1   |         |
|        | C6007    | D0GB222JA008 | 2.2K 1/16W              | 1   |         |
|        | C6008    | F2A1H1R0A213 | 1.0uF 50V               | 1   |         |
|        | C6009    | F1H1C105A097 | 1uF 16V                 | 1   |         |
|        | C6010    | F1J0J106A020 | 10uF 6.3V               | 1   |         |
|        | C6011    | F1H1C105A097 | 1uF 16V                 | 1   |         |
|        | C6012    | F2A1H1R0A213 | 1.0uF 50V               | 1   |         |
|        | C6013    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C6017    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C6106    | F1H1C105A097 | 1uF 16V                 | 1   |         |
|        | C6300    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C6503    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C6512    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C6601    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C6608    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C6609    | F1H1H104A013 | 0.1uF 50V               | 1   |         |
|        | C6611    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C6612    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C6613    | F1H1H331A013 | 330pF 50V               | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | C6614    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C6616    | F2A1V220A184 | 22uF 35V                | 1   |         |
|        | C6633    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C6634    | F1H1H101A720 | 100pF 50V               | 1   |         |
|        | C6671    | F2A1V220A184 | 22uF 35V                | 1   |         |
|        | C6801    | F1H1C683A087 | 0.068uF 16V             | 1   |         |
|        | C6802    | F1H1C683A087 | 0.068uF 16V             | 1   |         |
|        | C6803    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C6804    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C6810    | ECJ1VB1H391K | 390pF 50V               | 1   |         |
|        | C6811    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C6812    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C6813    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C6814    | F1H1H331A013 | 330pF 50V               | 1   |         |
|        | C6815    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C6816    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C6820    | ECJ1VB1H391K | 390pF 50V               | 1   |         |
|        | C6821    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C6822    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C6851    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C6852    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C6861    | F1H1H102A219 | 1000pF 50V              | 1   |         |
|        | C6863    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C6865    | F1H1H103A219 | 0.01uF 50V              | 1   |         |
|        | C6937    | F1H1C223A001 | 0.022uF 16V             | 1   |         |
|        | C6938    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C6940    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C8001    | EEE0GA331WP  | 330uF 4V                | 1   |         |
|        | C8002    | F2G0J330A031 | 33uF 6.3V               | 1   |         |
|        | C8003    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8004    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8005    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8006    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8007    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8010    | F1G1H221A444 | 220pF 50V               | 1   |         |
|        | C8011    | F2G0J101A031 | 100uF 6.3V              | 1   |         |
|        | C8012    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8013    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8014    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8015    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8016    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8018    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8020    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8021    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8022    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8023    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8024    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8026    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8051    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8052    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8053    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8054    | F1G1H221A444 | 220pF 50V               | 1   |         |
|        | C8055    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8056    | F1G1E2220001 | 2200pF 25V              | 1   |         |
|        | C8057    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8111    | F1J1A106A043 | 10uF 10V                | 1   |         |
|        | C8112    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8113    | F1G1C153A039 | 0.015uF 16V             | 1   |         |
|        | C8151    | F1H0J4750005 | 4.7uF 6.3V              | 1   |         |
|        | C8201    | F2G0J101A031 | 100uF 6.3V              | 1   |         |
|        | C8202    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8211    | F1G1E1220001 | 1200pF 25V              | 1   |         |
|        | C8221    | F1G1E1020001 | 1000pF 25V              | 1   |         |
|        | C8222    | F1G1E8210002 | 820pF 25V               | 1   |         |
|        | C8225    | F1G1E1020001 | 1000pF 25V              | 1   |         |
|        | C8226    | F1G1E1020001 | 1000pF 25V              | 1   |         |
|        | C8231    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8232    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8251    | F2G0J221A031 | 220uF 6.3V              | 1   |         |
|        | C8252    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8255    | F2G1C220A037 | 22uF 16V                | 1   |         |
|        | C8256    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8257    | F2G1C470A076 | 47uF 16V                | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | C8258    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8261    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8262    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8263    | F2G0J1020022 | 1000uF 6.3V             | 1   |         |
|        | C8301    | F2G0J221A031 | 220uF 6.3V              | 1   |         |
|        | C8302    | F2G0J330A031 | 33uF 6.3V               | 1   |         |
|        | C8303    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8304    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8305    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8306    | F1G1E4720002 | 4700pF 25V              | 1   |         |
|        | C8311    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8312    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8313    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8320    | F1G1E4720002 | 4700pF 25V              | 1   |         |
|        | C8321    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8325    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8330    | F2G0J470A031 | 47uF 6.3V               | 1   |         |
|        | C8331    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8335    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8341    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8401    | F1G1H150A565 | 15pF 50V                | 1   |         |
|        | C8421    | F2G0J221A031 | 220uF 6.3V              | 1   |         |
|        | C8422    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8423    | F2G0J330A031 | 33uF 6.3V               | 1   |         |
|        | C8424    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8425    | F1G1H150A565 | 15pF 50V                | 1   |         |
|        | C8426    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8428    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8429    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8431    | F2G1C100A072 | 10uF 16V                | 1   |         |
|        | C8432    | F1J1A106A043 | 10uF 10V                | 1   |         |
|        | C8433    | F1J1A106A043 | 10uF 10V                | 1   |         |
|        | C8434    | F1H1C104A042 | 0.1uF 16V               | 1   |         |
|        | C8501    | F2G0J101A031 | 100uF 6.3V              | 1   |         |
|        | C8502    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8503    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8504    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8505    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8506    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8511    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8512    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8513    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8514    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8515    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8516    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8521    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8522    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C8523    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8524    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8525    | F1G1C562A039 | 5600pF 16V              | 1   |         |
|        | C8526    | F1G1C183A039 | 0.018uF 16V             | 1   |         |
|        | C8527    | F1G1A333A013 | 0.033uF 10V             | 1   |         |
|        | C8528    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8529    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8530    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8531    | F1G1H101A566 | 100pF 50V               | 1   |         |
|        | C8532    | F1G1H221A444 | 220pF 50V               | 1   |         |
|        | C8533    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8541    | F1G1E4720002 | 4700pF 25V              | 1   |         |
|        | C8550    | F2G0J330A031 | 33uF 6.3V               | 1   |         |
|        | C8551    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8552    | F2G1C100A072 | 10uF 16V                | 1   |         |
|        | C8553    | F2G0J470A031 | 47uF 6.3V               | 1   |         |
|        | C8554    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8561    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8562    | F2G1C100A072 | 10uF 16V                | 1   |         |
|        | C8563    | F2G0J470A031 | 47uF 6.3V               | 1   |         |
|        | C8564    | F1H0J1050013 | 1uF 6.3V                | 1   |         |
|        | C8571    | F1J1A106A043 | 10uF 10V                | 1   |         |
|        | C8572    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8601    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8602    | F1G1C153A039 | 0.015uF 16V             | 1   |         |
|        | C8606    | F1G1C104A083 | 0.1uF 16V               | 1   |         |

| Safety | Ref. No. | Part No.     | Part Name & Description | Qty | Remarks |
|--------|----------|--------------|-------------------------|-----|---------|
|        | C8611    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8621    | F1G1H100A565 | 10pF 50V                | 1   |         |
|        | C8622    | F1G1H100A565 | 10pF 50V                | 1   |         |
|        | C8651    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8652    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8691    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C8695    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C9002    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C9003    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C9004    | F1G1H100A565 | 10pF 50V                | 1   |         |
|        | C9005    | F1G1H120A565 | 12pF 50V                | 1   |         |
|        | C9006    | F1G1A1040006 | 0.1uF 10V               | 1   |         |
|        | C9007    | F1G1C104A083 | 0.1uF 16V               | 1   |         |
|        | C9008    | F1G1H221A444 | 220pF 50V               | 1   |         |
|        | C9009    | F1G1H100A565 | 10pF 50V                | 1   |         |
|        | FL8101   | F1H0J1050018 | 1uF 6.3V                | 1   |         |
|        | FL8102   | F1H0J1050018 | 1uF 6.3V                | 1   |         |
|        | FL8103   | F1H0J1050018 | 1uF 6.3V                | 1   |         |
|        | FL8104   | F1J1E1040022 | 0.1uF 25V               | 1   |         |
|        | FL8421   | F1H0J1050018 | 1uF 6.3V                | 1   |         |

MMH0906